



HP 240 G7 Notebook PC
HP 246 G7 Notebook PC

Maintenance and Service Guide

© Copyright 2018 HP Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Pentium, and Core are trademarks of Intel Corporation or its subsidiaries in the U.S. and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: October 2018

Document Part Number: L36698-001

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. Go to <http://www.microsoft.com> for details.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select User Guides.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

Table of contents

1 Product description	1
2 Components	5
Right	5
Left	6
Display	7
Keyboard area	8
TouchPad	8
Lights	9
Button, vent, and speakers	10
Special keys	11
Action keys	12
Bottom	14
Labels	15
3 Illustrated parts catalog	16
Computer major components	16
Cables	18
Display assembly subcomponents	19
Mass storage devices	20
Miscellaneous parts	21
4 Removal and replacement procedures preliminary requirements	22
Tools required	22
Service considerations	22
Plastic parts	22
Cables and connectors	22
Drive handling	23
Workstation guidelines	23
Equipment guidelines	23
Electrostatic discharge damage	24
Packaging and transporting guidelines	25
5 Removal and replacement procedures for Authorized Service Provider parts	26
Component replacement procedures	26
Preparation for disassembly	26

Bottom cover	27
Battery	29
Memory	31
Hard drive	33
Solid-state drive	35
WLAN module	36
System board hook	38
Speakers	39
TouchPad button board	40
Fan	41
Heat sink assembly	42
TouchPad module	45
System board	46
Power connector cable (DC-in)	49
USB/card reader/power button board	50
Display assembly	51
Top cover with keyboard	58

6 Computer Setup (BIOS), TPM, and HP Sure Start 59

Using Computer Setup	59
Starting Computer Setup	59
Navigating and selecting in Computer Setup	59
Restoring factory settings in Computer Setup	59
Updating the BIOS	60
Determining the BIOS version	60
Downloading a BIOS update	60
Changing the boot order using the f9 prompt	61
TPM BIOS settings (select products only)	61
Using HP Sure Start (select products only)	62

7 Using HP PC Hardware Diagnostics 63

Using HP PC Hardware Diagnostics Windows (select products only)	63
Downloading HP PC Hardware Diagnostics Windows	63
Downloading the latest HP PC Hardware Diagnostics Windows version	64
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	64
Installing HP PC Hardware Diagnostics Windows	64
Using HP PC Hardware Diagnostics UEFI	64
Starting HP PC Hardware Diagnostics UEFI	65
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	65
Downloading the latest HP PC Hardware Diagnostics UEFI version	65

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	65
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	66
Downloading Remote HP PC Hardware Diagnostics UEFI	66
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	66
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	66
Customizing Remote HP PC Hardware Diagnostics UEFI settings	66
8 Backing up, restoring, and recovering	68
Backing up information and creating recovery media	68
Using Windows tools	68
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	68
Restoring and recovery	69
Restoring, resetting, and refreshing using Windows tools	69
Recovering using HP Recovery media	69
Changing the computer boot order	69
9 Specifications	70
Computer specifications	70
35.6-cm (14.0-in) display specifications	71
M.2 SATA solid-state drive specifications	71
M.2 PCIe solid-state drive specifications	72
Hard drive specifications	73
10 Power cord set requirements	74
Requirements for all countries	74
Requirements for specific countries and regions	74
11 Statement of memory volatility	76
Nonvolatile memory usage	78
Questions and answers	80
Using HP Sure Start (select models only)	81
12 Recycling	82
Index	83

1 Product description

Category	Description
Product Name	HP 240 G7 Notebook PC HP 246 G7 Notebook PC
Processor	8th-generation Intel® Core™ processors: Intel Core i7-8565U (1.8 GHz, turbo up to 4.6 GHz, 2400/8 MB L3 cache, quad core, 15 W) Intel Core i7-8550U (1.8 GHz, turbo up to 4.0 GHz, 2400/8 MB L3 cache, quad core, 15 W) Intel Core i5-8265U (1.6 GHz, turbo up to 3.9 GHz, 2400/6 MB L3 cache, quad core, 15 W) Intel Core i5-8250U (1.6 GHz, turbo up to 3.4 GHz, 2400/6 MB L3 cache, quad core, 15 W) Intel Core i3-7020U (2.3 GHz, 2133/3 MB L3 cache, dual core, 15 W) Intel Pentium Silver N5000 (1.1 GHz, turbo up to 2.7 GHz, 2400/4 MB L2 cache, quad core, 6 W) Intel Celeron N4000 (1.1 GHz, turbo up to 2.6 GHz, 2400/4 MB L2 cache, dual core, 6 W)
Graphics	Supports HD decode, DX12, HDMI Internal graphics: Intel UHD Graphics 620 (8550U/8250U processors) Intel UHD Graphics 605 (Pentium processor) Intel UHD Graphics 600 (Celeron processor) Intel HD Graphics 620 (7020U processor) External graphics: AMD Radeon 520 with up to 2 GB of dedicated video memory
Panel	35.6-cm (14.0-in), WLED, slim-flat (3.0 mm), 220 nits, eDP High definition (HD)(1366×768), anti glare, SVA
Memory	Two memory module slots Memory is non-customer accessible/non-upgradeable DDR4-2400 dual channel support (DDR4-2666 bridge to DDR4-2400) (8550U/8250U processors) DDR4-2133 dual channel support (DDR4-2666 bridge to DDR4-2400, DDR4 2400 downgrade to DDR4-2133) (7020U processor) Supports up to 16 GB of system RAM in the following configurations: <ul style="list-style-type: none">• 16384 MB (8192 MB×2)• 12288 MB (8192 MB×1 + 4096 MB×1)• 8192 MB (8192 MB×1 or 4096 MB×2)• 4096 MB (4096 MB×1)

Category	Description
Primary storage	Single hard drive configurations, 6.35 cm (2.5-in), 7.0/7.2 mm, SATA hard drives:
	1 TB, 5400 rpm + 16 GB PCIe Optane memory module
	1 TB, 5400 rpm, 7.0 mm
	500 GB, 7200 rpm, 7.0 mm
	500 GB, 5400 rpm, 7.0 mm
	M.2, SATA-3, solid-state drives:
	256 GB, TLC
	128 GB, TLC
Camera	HP TrueVision HD Camera - indicator LED, USB2.0, HD BSI sensor, f2.0, WDR
	720p by 30 frames per second
	Single digital microphone
	HP Webcam - VGA camera, indicator LED, USB 2.0, f2.4
	640×480 by 30 frames per second
	Single digital microphone
Audio	Audio application name: HP Audio Control
	Dual speakers
Ethernet	Ethernet Integrated 10/100/1000 NIC
Wireless networking	Compatible with Miracast-certified devices (Windows 10)
	Integrated wireless options with dual antennas (M.2/PCIe):
	Intel Dual band wireless-AC 3168 802.11ac 1×1 WiFi + Bluetooth 4.2 Combo Adaptor (non-vPro) (7th and 8th generation Intel Core processors)
	Realtek RTL8822BE 802.11ac 2×2 WiFi + Bluetooth 4.2 Combo Adapter (MU-MIMO supported)
	Integrated Wireless options with single antenna (M.2/PCIe):
	Realtek RTL8821CE 802.11ac 1×1 WiFi + Bluetooth 4.2 Combo Adapter (MU-MIMO supported)
Realtek RTL8723DE 802.11bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter	
External media cards	HP Multi-Format Digital Media Card Reader
	Supports SD/SDHC/SDXC
	Push-pull insertion/removal
Internal card expansion	One M.2 slot for solid-state drive
	One M.2 slot for WLAN
Ports	USB 2.0 port (left side)
	(2) USB 3.1 Type A Gen 1 ports (right side)


Category	Description
	Hot plug/unplug and auto detect for correct output to wide-aspect vs. standard aspect video (auto adjust panel resolution to fit embedded panel and external monitor connected)
	RJ-45/Ethernet
	Audio-out (headphone)/audio-in (microphone) combo jack
	AC Smart Pin adapter plug
Keyboard/pointing devices	<p>Keyboard:</p> Full-size, textured, island-style keyboard (jet black)
	<p>TouchPad:</p> Image sensor
	Multitouch gestures enabled
	Support Modern Trackpad Gestures
	Taps enabled as default
Power requirements	<p>Battery:</p> 3-cell Prismatic/Polymer long life battery, 41 WHr
	Supports battery fast charge
	<p>AC adapter, barrel type:</p> 65 W Smart, nPFC, 4.5 mm (models with discrete graphics)
	65 W Smart, nPFC, 4.5 mm, EM
	45 W Smart, nPFC, 4.5 mm (models with UMA graphics)
	<p>Power cord (C5):</p> 1.0 m, conventional
	1.0 m, conventional + Japan plug adapter
Security	Kensington Mini Security Slot
	Trusted Platform Module (TPM) 2.0 (firmware based)
Operating system	FreeDOS 2.0
	Ubuntu Linux
	Ubuntu Linux 64-bit
	<p>Preinstalled</p> Windows 10
	Windows 10 Pro
	<p>For Developed Market (ML)</p> Windows 10 Home Plus ML
	Windows 10 Home ML
	Windows 10 Pro StF MSNA Strategic
	Windows 10 Pro StF MSNA

Category	Description
	Windows 10 Pro StF MSNA Standard
	Windows 10 Pro StF MSNA Plus
	For Emerging Market (EM/SL)
	Windows 10 Home Plus EM/SL
	Windows 10 Home EM/SL
	Windows 10 Pro StF MSNA Strategic
	Windows 10 Pro StF MSNA EM
	Windows 10 Pro StF MSNA Standard
	Windows 10 Pro StF MSNA Plus
	Windows 10 Home StF MSNA Strategic EM
	Windows 10 Home StF MSNA EM
	For China Market
	CPPP Windows 10 Home High End China Language Edition
	CPPP Windows 10 Home China Language Edition
	Windows 10 Pro China
	For India Market
	Windows 10 Home Plus EM/SL IPPP
	Windows 10 Home EM/SL IPPP
	For Indonesia Market
	Windows 10 Home Plus EM/SL Indonesia PPP
	Windows 10 Home EM/SL Indonesia PPP
	For APAC Market
	Windows 10 Home Plus EM/SL APAC PPP
	Windows 10 Home EM/SL APAC PPP
Serviceability	End user replaceable parts:
	AC adapter

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they're located, and how they work.


Right

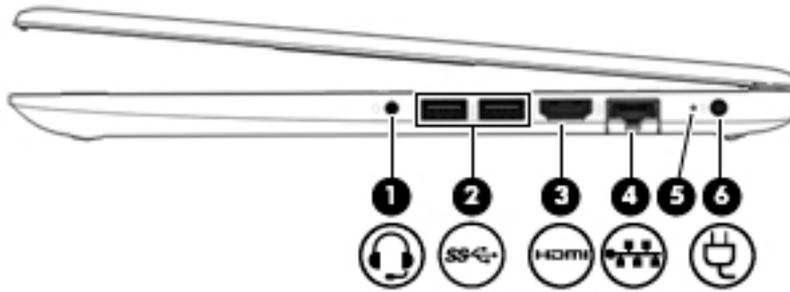

Component	Description
(1)  Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>.</p> To access this guide: <ul style="list-style-type: none"> ▲ Select the Start button, select HP Help and Support, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>
(2)  USB SuperSpeed ports (2)	Connect a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provide high-speed data transfer.
(3)  HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.
(4)  RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none"> • Green (left): The network is connected. • Amber (right): Activity is occurring on the network.
(5) Battery light	When AC power is connected: <ul style="list-style-type: none"> • White: The battery charge is greater than 90 percent. • Amber: The battery charge is from 0 to 90 percent. • Off: The battery is not charging. When AC power is disconnected (battery not charging):


Component	Description
	<ul style="list-style-type: none"> Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. Off: The battery is not charging.
(6)  Power connector	Connects an AC adapter.

Left

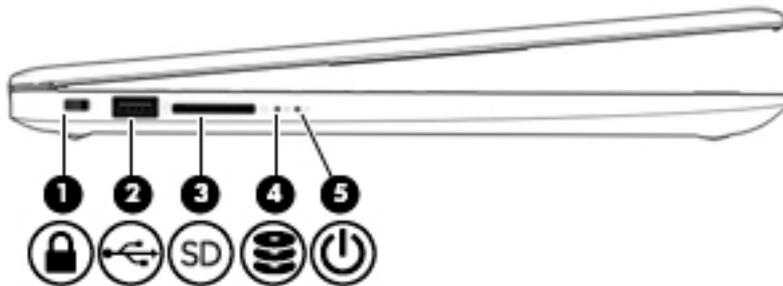

Component	Description
(1)  Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p>NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>
(2)  USB port	Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides data transfer.
(3)  Memory card reader	<p>Reads optional memory cards that store, manage, share, or access information.</p> <p>To insert a card:</p> <ol style="list-style-type: none"> Hold the card label-side up, with the connectors facing the computer. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. <p>To remove a card:</p> <ul style="list-style-type: none"> Press in on the card, and then remove it from the memory card reader.
(4)  Drive light (select products only)	<ul style="list-style-type: none"> Blinking white: The hard drive is being accessed.
(5)  Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.

Display

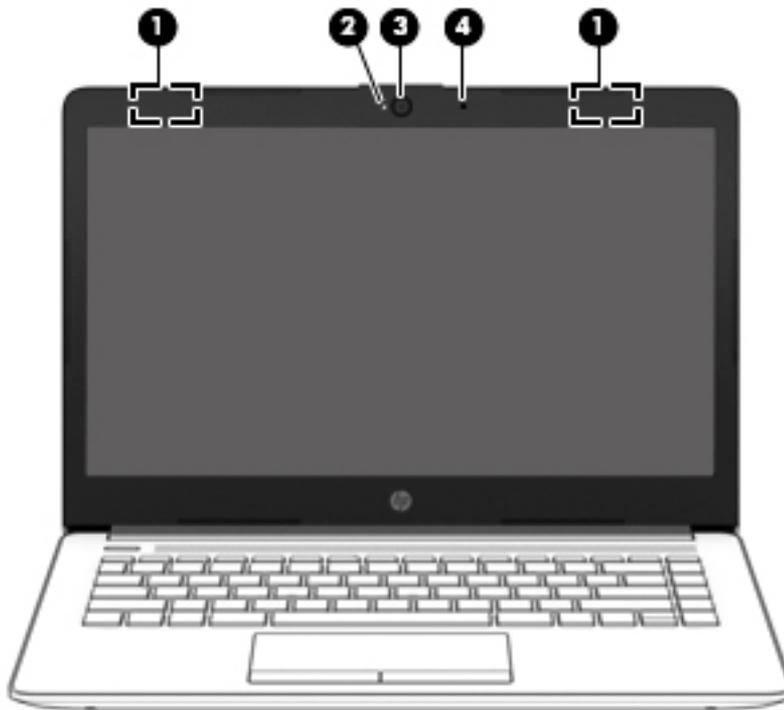

Component	Description
(1) WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) Camera light	On: The camera is in use.
(3) Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4) Internal microphone	Records sound.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.


For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- ▲ Select the **Start** button, select **HP Help and Support**, and then select **HP Documentation**.


Keyboard area

TouchPad

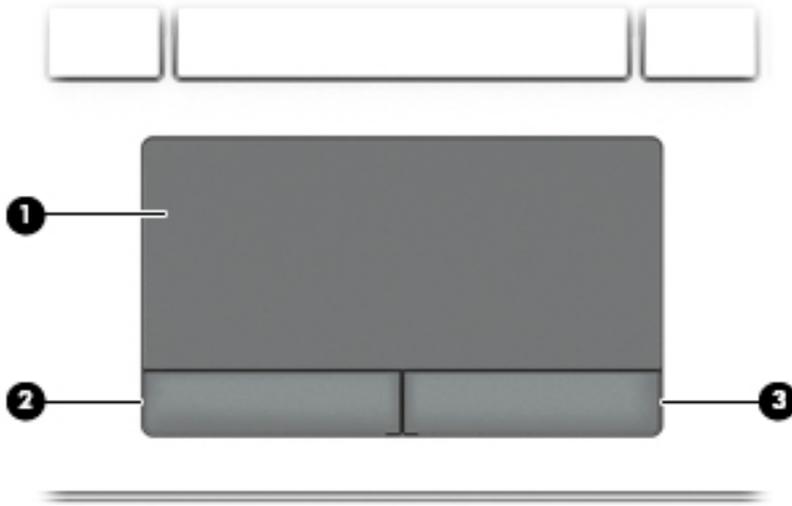


Component	Description
(1) TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2) Left TouchPad button	Functions like the left button on an external mouse.
(3) Right TouchPad button	Functions like the right button on an external mouse.

Lights

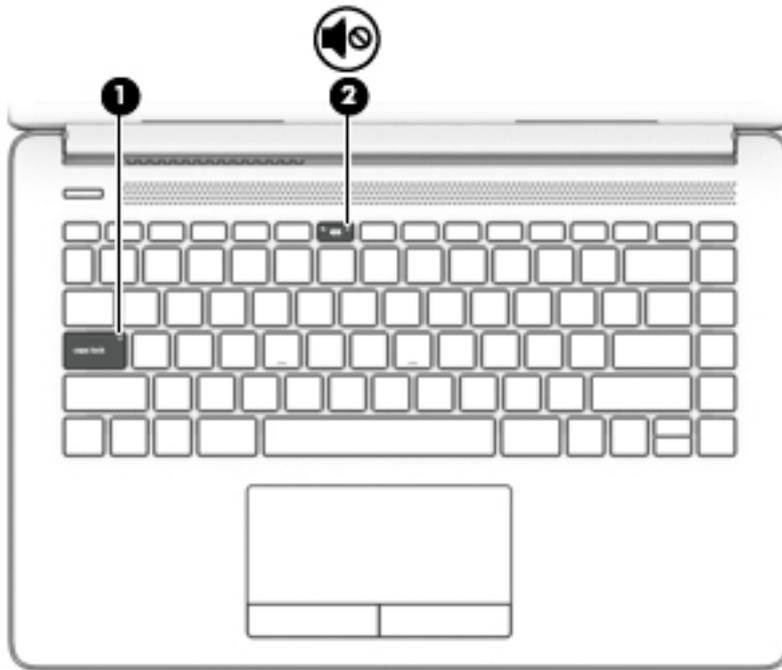


Component	Description
(1) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)  Mute light	<ul style="list-style-type: none">• On: Computer sound is off.• Off: Computer sound is on.

Button, vent, and speakers

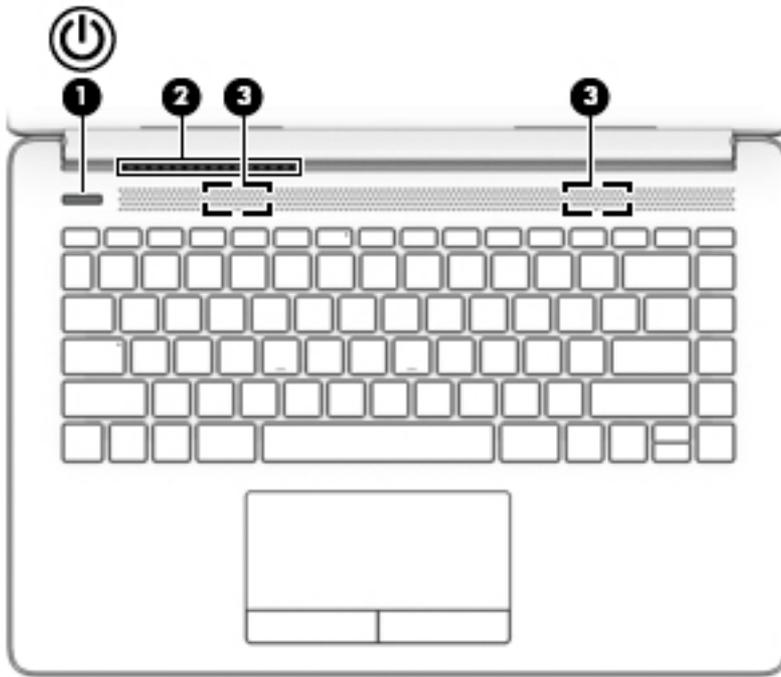

Component	Description
(1)  Power button	<ul style="list-style-type: none"> • When the computer is off, press the button to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options.</p> <p>▲ Right-click the Power meter icon  and then select Power Options.</p>
(2) Vent	<p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(3) Speakers (2)	Produce sound.

Special keys

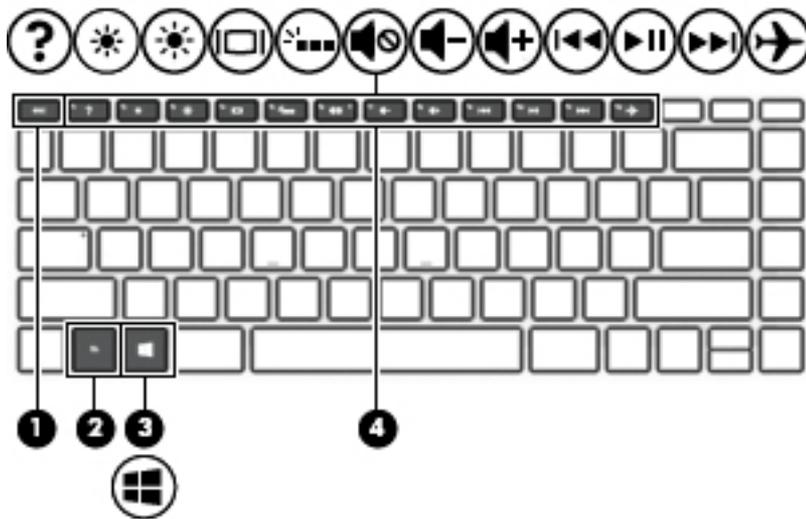


Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions. See Action keys on page 12 .

Action keys

An action key performs the function indicated by the icon on the key. To determine which keys are on your product, see [Special keys on page 11](#).


▲ To use an action key, press and hold the key.

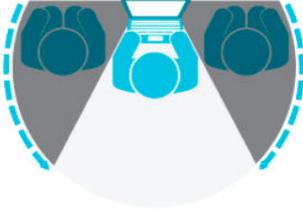Icon	Description
	Helps prevent side-angle viewing from onlookers. If needed, decrease or increase brightness for well-lit or darker environments. Press the key again to turn off the privacy screen. NOTE: To quickly turn on the highest privacy setting, press fn+p .
	
	Decreases the screen brightness incrementally as long as you hold down the key.
	Increases the screen brightness incrementally as long as you hold down the key.
	Turns the keyboard backlight off or on. NOTE: To conserve battery power, turn off this feature.
	Plays the previous track of an audio CD or the previous section of a DVD or a Blu-ray Disc (BD).
	Starts, pauses, or resumes playback of an audio CD, a DVD, or a BD.
	Plays the next track of an audio CD or the next section of a DVD or a BD.
	Stops audio or video playback of a CD, a DVD, or a BD.
	Decreases speaker volume incrementally while you hold down the key.
	Increases speaker volume incrementally while you hold down the key.
	Mutes the microphone.
	Mutes or restores speaker sound.

Icon	Description
	Turns the wireless feature on or off. NOTE: A wireless network must be set up before a wireless connection is possible.
	Turns the TouchPad and TouchPad light on and off.
	Switches the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, repeatedly pressing the key alternates the screen image from computer display to monitor display to simultaneous display on both the computer and the monitor.
	Initiates Sleep, which saves your information in system memory. The display and other system components turn off and power is conserved. To exit Sleep, briefly press the power button. CAUTION: To reduce the risk of information loss, save your work before initiating Sleep.
	Provides quick access to your Skype for Business calendar. NOTE: This feature requires Skype® for Business or Lync® 2013 running on Microsoft Exchange or Office 365® servers.
	Turns the screen sharing function on or off. NOTE: This feature requires Skype for Business or Lync 2013 running on Microsoft Exchange or Office 365 servers.
	<ul style="list-style-type: none"> Answers a call. Starts a call during a 1-on-1 chat. Places a call on hold. NOTE: This feature requires Skype for Business or Lync 2013 running on Microsoft Exchange or Office 365 servers.
	<ul style="list-style-type: none"> Ends a call. Declines incoming calls. Ends screen sharing. NOTE: This feature requires Skype for Business or Lync 2013 running on Microsoft Exchange or Office 365 servers.

 **NOTE:** The action key feature is enabled at the factory. You can disable this feature by pressing and holding the **fn** key and the left **shift** key. The fn lock light will turn on. After you have disabled the action key feature, you can still perform each function by pressing the **fn** key in combination with the appropriate action key.

Bottom

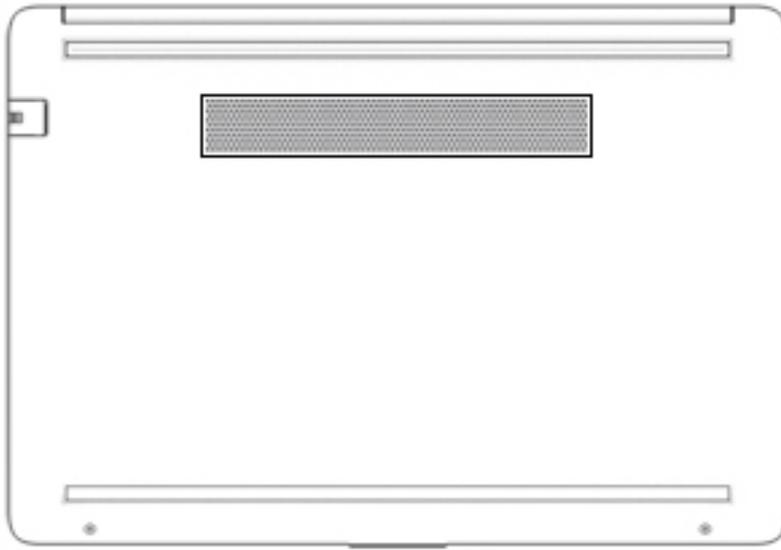


Component	Description
Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer. Labels may be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you may be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

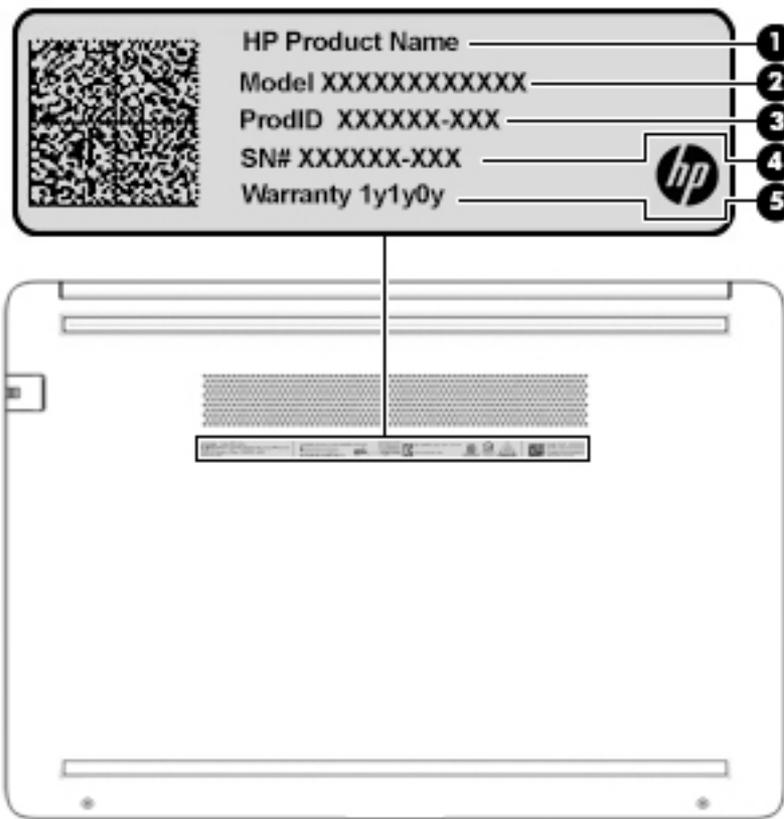

Component

- | | |
|-----|-----------------|
| (1) | HP product name |
| (2) | Model number |
| (3) | Product ID |
| (4) | Serial number |
| (5) | Warranty period |
-


- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Computer major components

NOTE: HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

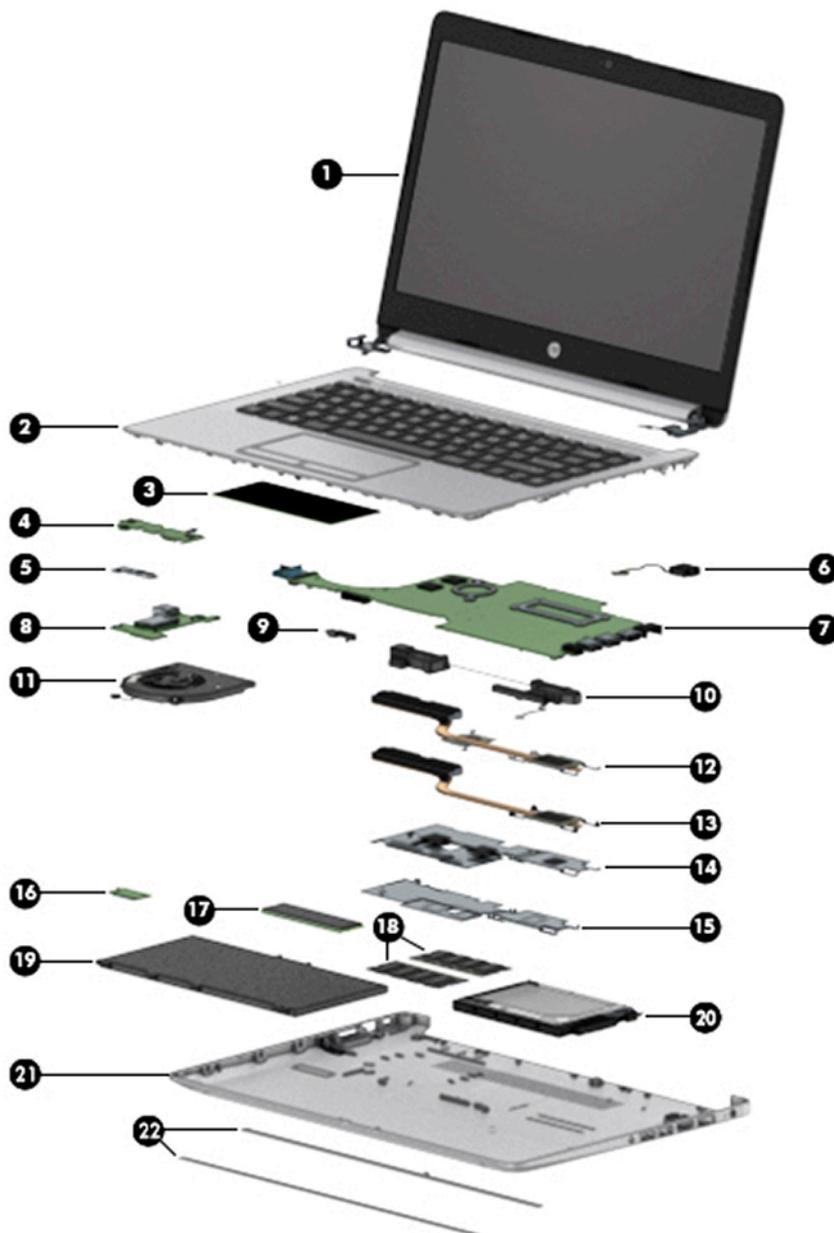

Item	Component	Spare part number
(1)	Display NOTE: Displays are not spared as whole units. Display subcomponent spare parts are available. For spare part information, see Display assembly subcomponents on page 19 .	Not spared
(2)	Top cover/keyboard NOTE: For a detailed list of country codes, see Top cover with keyboard on page 58 .	L44060-xx1
(3)	TouchPad module	L22586-001
(4)	TouchPad button board	L23197-001
(5)	TouchPad button board bracket	L23193-001
(6)	Power connector cable (DC-in)	L23188-001
(7)	System board (includes integrated processor) NOTE: All system board spare part kits include replacement thermal material. All system boards use the following part numbers: xxxxxx-001: Non-Windows operating systems xxxxxx-601: Windows operating system For use in models with 2 GB of discrete graphics memory:	
	• Intel Core i7-8565U processor	L38148-xx1
	• Intel Core i7-8550U processor	L23228-xx1
	• Intel Core i5-8265U processor	L38150-xx1
	• Intel Core i5-8250U processor	L23227-xx1
	• Intel Core i3-7020U processor	L23226-xx1
	For use in models with UMA graphics memory:	
	• Intel Core i5-8265U processor	L38151-xx1
	• Intel Core i5-8250U processor	L23232-xx1
	• Intel Core i3-7020U processor	L23230-xx1
	• Intel Pentium N5000 processor	L23236-xx1
	• Intel Celeron N4000 processor	L23234-xx1
(8)	USB/card reader/power button board	L23196-001
(9)	System board hook	L23206-001
(10)	Speakers (includes cable)	L23221-001
(11)	Fan	L23189-001
	Heat sink	
(12)	Heat sink for use in models with Intel Core processors and discrete graphics	L23192-001
(13)	Heat sink for use in models with Intel Core processors and integrated UMA graphics	L23191-001
(15)	Fan insert (for use in fanless models)	L23198-001


Item	Component	Spare part number
(16)	WLAN module	
	Realtek RTL8822BE 802.11ac 2×2 WiFi + Bluetooth 4.2 Combo Adapter (MU-MIMO supported)	924813-855
	Realtek RTL8723DE 802.11bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter	L21480-005
(17)	Solid-state drive	
	NOTE: For spare part information, see Mass storage devices on page 20 .	
(18)	Memory modules (2400 MHz DDR4)	
	8 GB	862398-855
	4 GB	862397-859
(19)	Battery (3-cell, 41 WHr, 3.6 AHr)	L11119-855
(20)	Hard drive	
	NOTE: For spare part information, see Mass storage devices on page 20 .	
(21)	Bottom cover	L44057-001
(22)	Rubber feet	L44059-001

Cables




Item	Component	Spare part number
(1)	USB/card reader/power button board cable	L23186-001
(2)	Display cable (HD panel)	L23182-001
(3)	TouchPad cable	L23184-001
(4)	TouchPad button board cable	L23185-001
(5)	Hard drive cable	L23187-001

Display assembly subcomponents

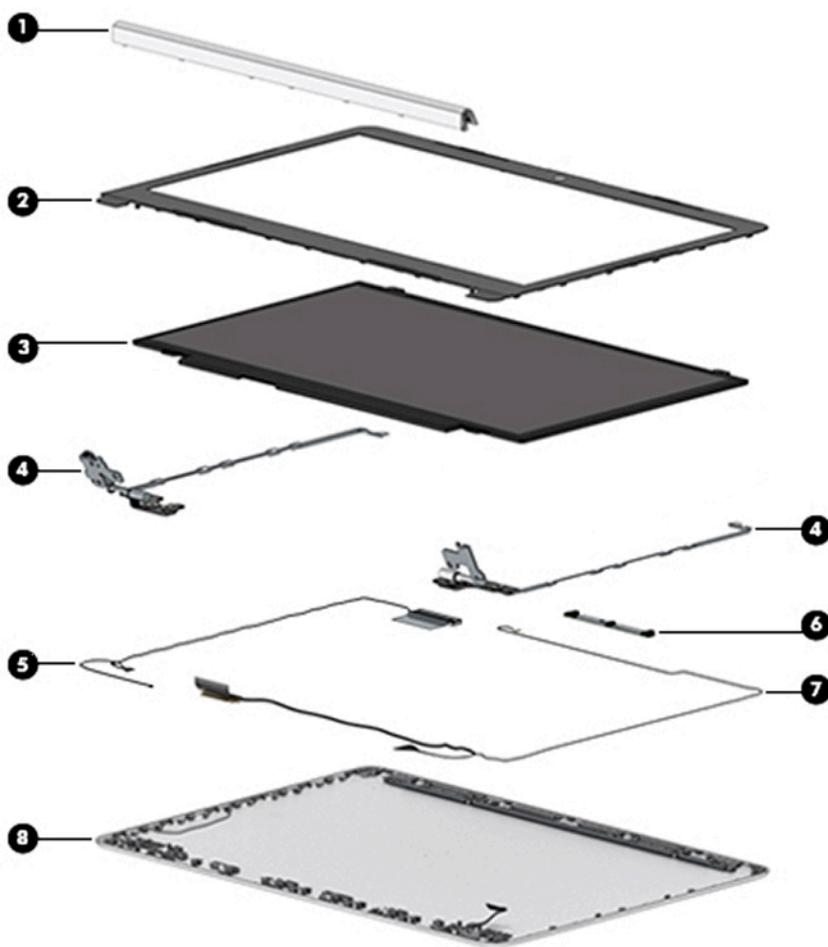

Item	Component	Spare part number
(1)	Hinge cover	L44058-001
(2)	Display bezel	L23181-001
(3)	Display panel	L23210-001
(4)	Hinge Kit (includes left and right hinges)	L23194-001
(5)	WLAN antenna cable (included in Antenna Kit)	
	For use in models with a single antenna	L23158-001
	For use in models with dual antennas	L23159-001
(6)	Camera module	L23237-001
(7)	Display cable	L23182-001
(8)	Back cover	L44056-001

Mass storage devices

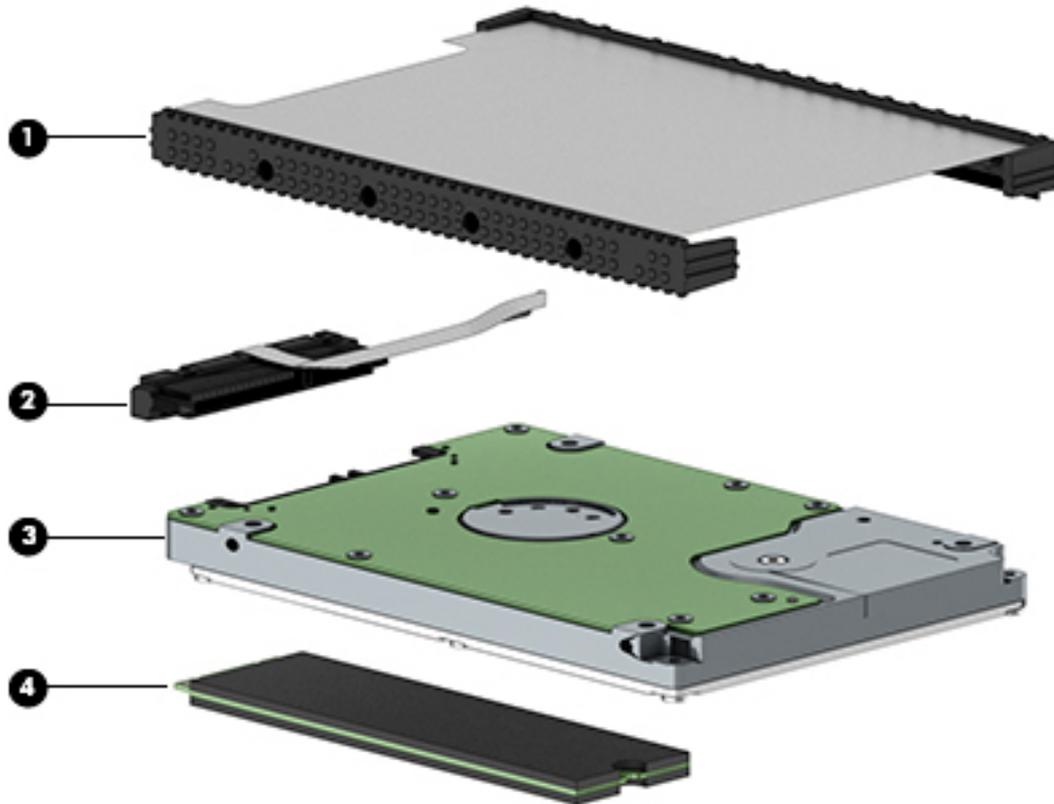

Item	Component	Spare part number
(1)	Hard drive cover	L23219-001
(2)	Hard drive cable	L23187-001
(3)	Hard drive, 7.0 mm	
	1 TB, 5400 rpm	762990-005
	500 GB, 7200 rpm	703267-001
	500 GB, 5400 rpm	778186-005
(4)	Solid-state drive (M.2)	
	256 GB, PCIe, NVMe, value	L44333-001
	256 GB, SATA-3, TLC	L23223-001
	128 GB, SATA-3, TLC	L23222-001
	Optane memory module, 16-GB	L42281-001

Miscellaneous parts

Component	Spare part number
AC adapter	
65 W AC adapter, nPFC, S-3P, 4.5 mm	710412-001
65 W AC adapter, nPFC, SMART, RC, 4.5 mm, EM	913691-850
45 W AC adapter, nPFC, SMART, RC, 4.5 mm, non-slim	741727-001
Power cord, C5, conventional, 1.0 m	
For use in Argentina	L19357-001
For use in Australia	L19358-001
For use in Brazil	L19359-001
For use in Denmark	L19360-001
For use in Europe	L19361-001
For use in India	L19363-001
For use in Israel	L19362-001
For use in Italy	L19364-001
For use in North America	L19367-001
For use in the People's Republic of China	L19368-001
For use in South Africa	L19369-001
For use in South Korea	L19366-001
For use in Switzerland	L19370-001
For use in Thailand	L19371-001
For use in Taiwan	L19372-001
For use in the United Kingdom	L19373-001
HP HDMI-to-VGA Adapter	701943-001
Screw Kit	L23220-001

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Phillips P1 magnetic screwdriver
- Non-conductive, non-marking pry tool

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic

Cables and connectors



CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the tablet when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

 **CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPs from plastic tube	2,000 V	700 V	400 V
Removing DIPs from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPs from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

5 Removal and replacement procedures for Authorized Service Provider parts

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

CAUTION: This computer does not have user-replaceable parts. Only HP authorized service providers should perform the removal and replacement procedures described here. Accessing the internal part could damage the computer or void the warranty.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 15](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as 42 screws that must be removed, replaced, and/or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

See [Removal and replacement procedures preliminary requirements on page 22](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer

Bottom cover


Description	Spare part number
Bottom cover	L44057-001
Rubber feet	L44059-001

Before removing the bottom cover, follow these steps:

- ▲ Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).

Remove the bottom cover:

1. Peel the rubber feet off the bottom of the computer **(1)**.
2. Remove the three black Phillips M2.5×6.0 screws **(2)** from under the rubber feet and the two silver Phillips M2.5×6.0 screws **(3)** from the bottom corners of the bottom cover.

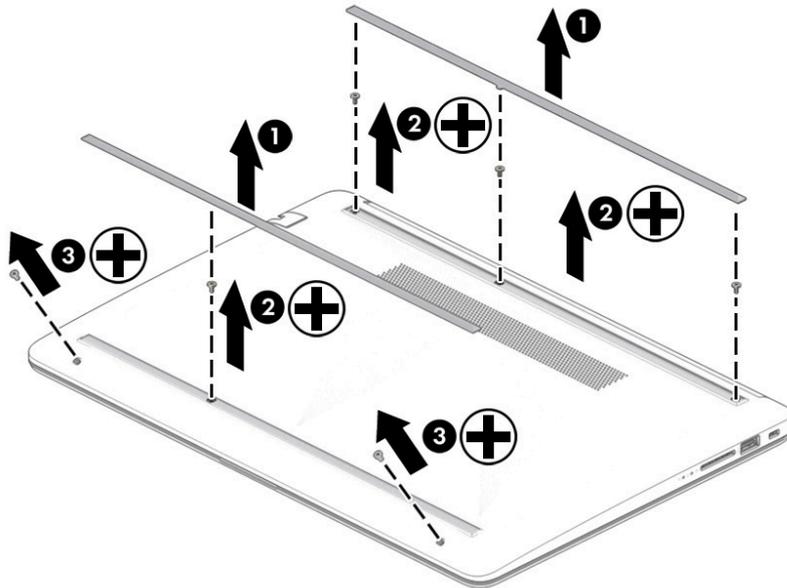

3. Starting near the power connector, use a plastic tool **(1)** to pry the bottom cover up to remove it **(2)**.



Reverse this procedure to install the bottom cover.

Battery


Description	Spare part number
Battery (3-cell, 41 WHr, 3.6 AHR)	L11119-855

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).


Remove the battery:

1. Remove the five Phillips M2.0×3.0 screws **(1)** that secure the battery to the computer.
2. Remove the battery from the computer **(2)**.

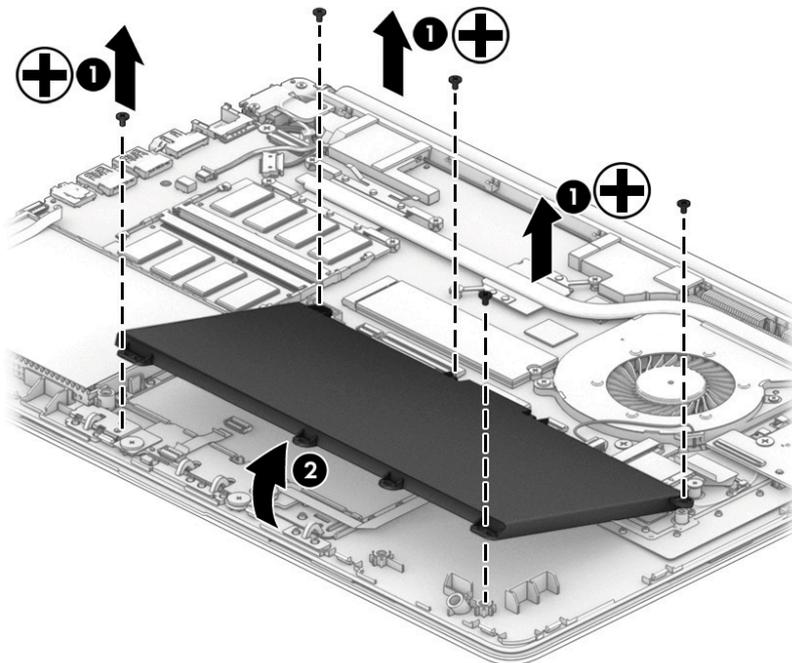

Reverse this procedure to install the battery.

When installing the battery, be sure to install screws in the proper locations. The following image shows the locations around the battery that have holes but do NOT require screws.

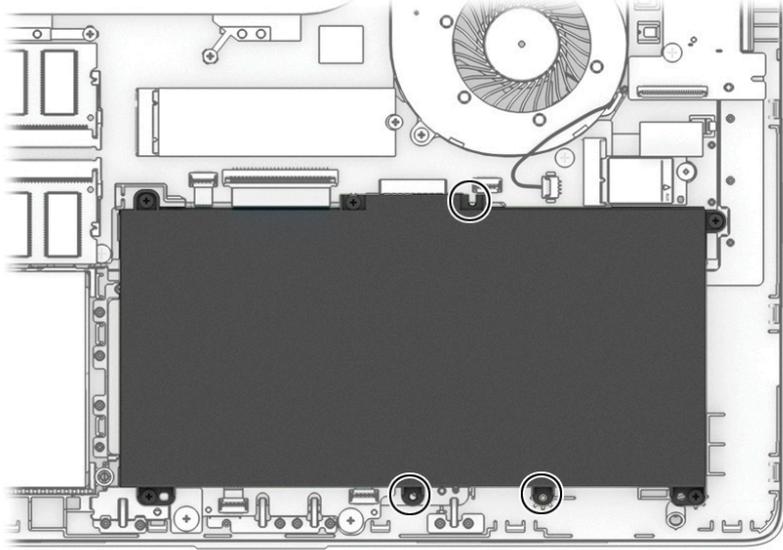

Memory

Description	Spare part number
Memory module, 8 GB	862398-855
Memory module, 4 GB	862397-859

Before removing the memory modules, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the memory modules:

1. Spread the two retention clips outward **(1)** until the memory module tilts up at a 45-degree angle.
2. Grasp the edge of the memory module **(2)**, and then gently pull the module out of the slot. Use the same procedure to remove both memory modules.

⚠ CAUTION: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

To protect a memory module after removal, place it in an electrostatic-safe container.

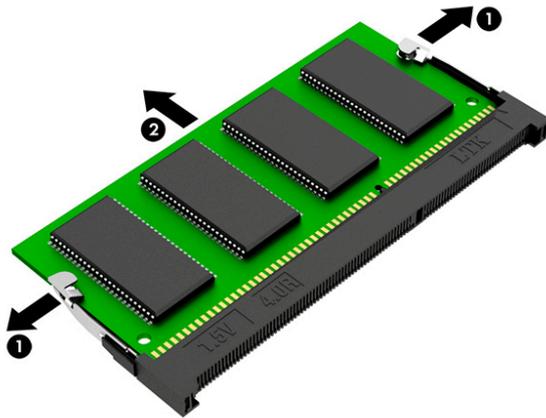


Install the memory modules:

📌 IMPORTANT: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module. Do not bend the memory module.

1. Align the notched edge of the memory module with the tab in the memory module slot **(1)**.
2. Press the module into the slot until seated **(2)**.

3. Gently press down on the module edges until the side retention clips snap into place **(3)**.

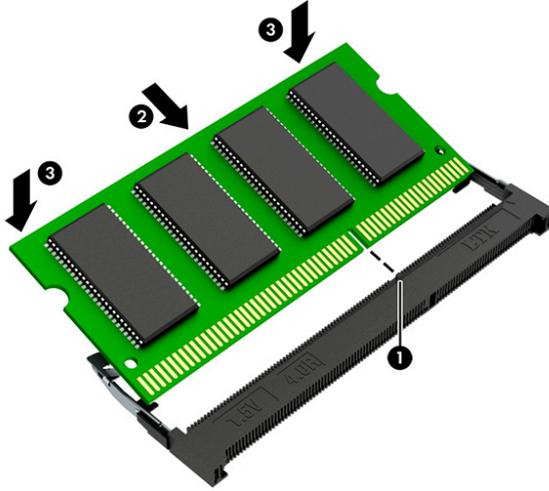

Hard drive


Description	Spare part number
Hard drive, 1 TB, 5400 rpm	762990-005
Hard drive, 500 GB, 7200 rpm	703267-001
Hard drive, 500 GB, 5400 rpm	778186-005
Hard drive cover	L23219-001

Before removing the hard drive, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the hard drive:

1. Disconnect the hard drive cable from the system board ZIF connector (**1**).
2. Lift the hard drive out of the computer (**2**).

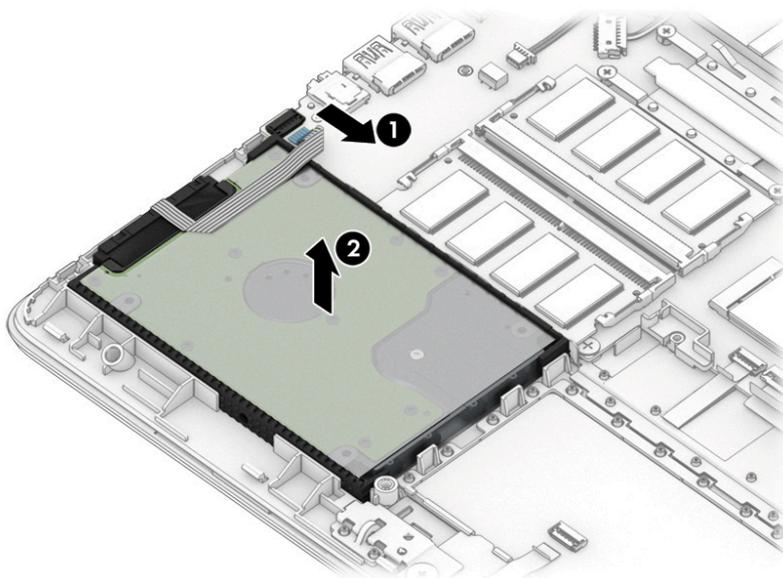

3. If it is necessary to disassemble the hard drive, pull the connector off the rear of the drive **(1)**, and then lift the cover off the drive **(2)**.

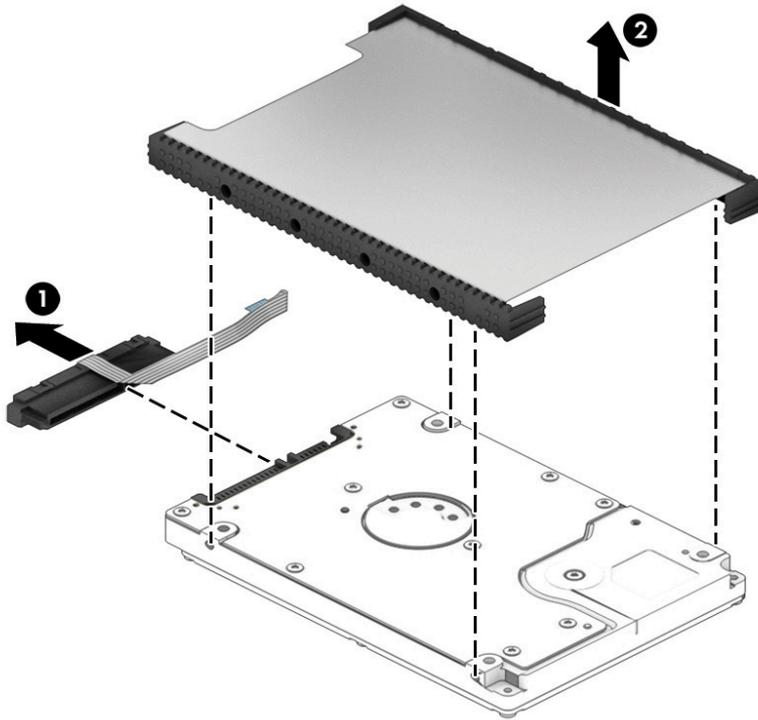

Reverse this procedure to reassemble and install the hard drive.

Solid-state drive


Description	Spare part number
256 GB, PCIe, NVMe, value	L44333-001
256 GB, SATA-3, TLC	L23223-001
128 GB, SATA-3, TLC	L23222-001
Optane memory module, 16 GB	L42281-001

Before removing the solid-state drive, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the solid-state drive:

- ▲ Remove the Phillips M2.0×3.0 screw **(1)**, and then pull the solid-state drive module from the socket **(2)**.

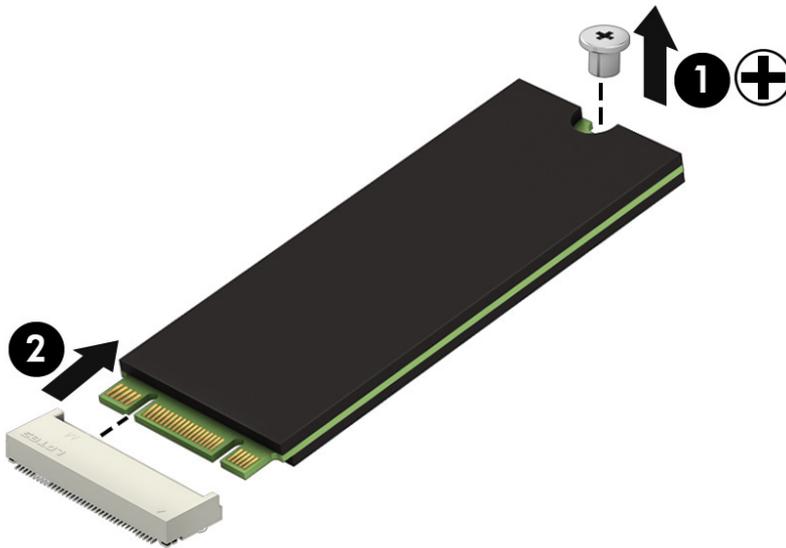

Reverse this procedure to install the solid-state drive.

WLAN module

Description	Spare part number
Realtek RTL8822BE 802.11ac 2×2 WiFi + Bluetooth 4.2 Combo Adapter (MU-MIMO supported)	924813-855
Realtek RTL8723DE 802.11bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter	L21480-005

Before removing the WLAN, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the WLAN module:


1. Disconnect the antenna cable(s) from the module **(1)**.




NOTE: Some models have only one antenna cable.

2. Remove the Phillips M2.0×3.0 screw (2), and then pull the module out of the socket (3).

Models with two antennas

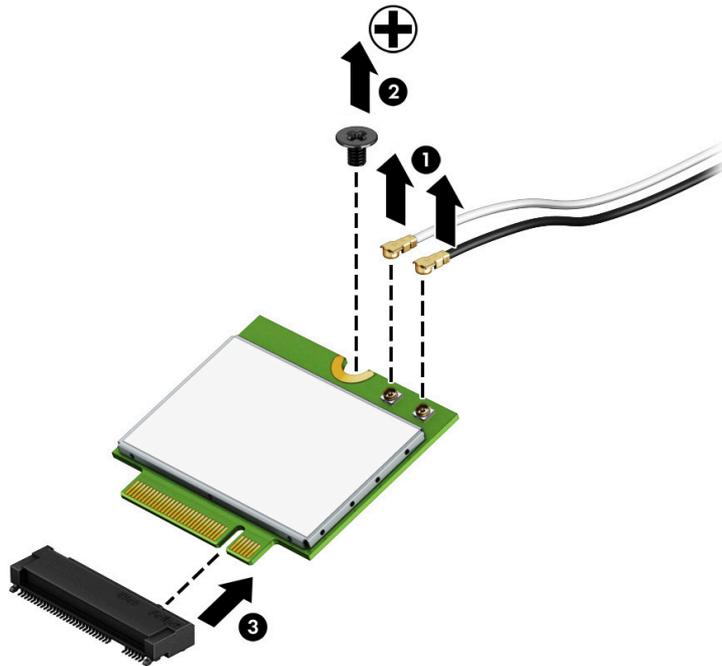

Models with one antenna

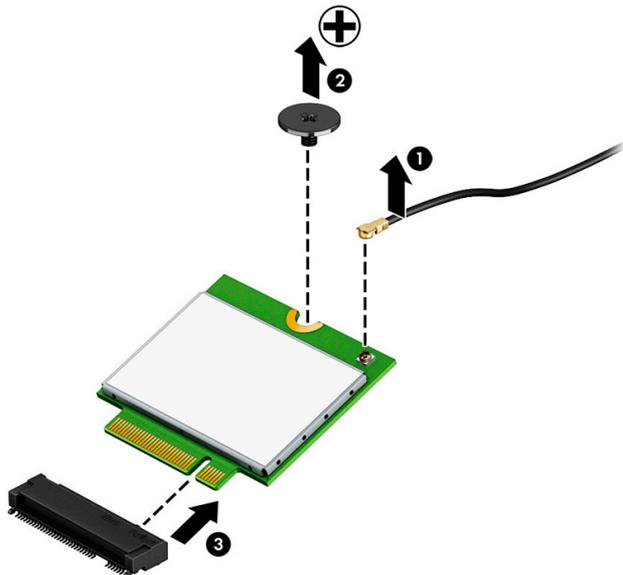

Reverse this procedure to install the WLAN module.

System board hook

Description	Spare part number
System board hook	L23206-001


 **NOTE:** Located under the battery, a black plastic piece fits around the screw boss next to the memory modules. This “hook” is unsecured and can fall out if you tilt the computer. Use the following image to determine where the hook is properly installed.

Before removing the system board hook, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the system board hook:

- ▲ Remove the system board hook from the computer.

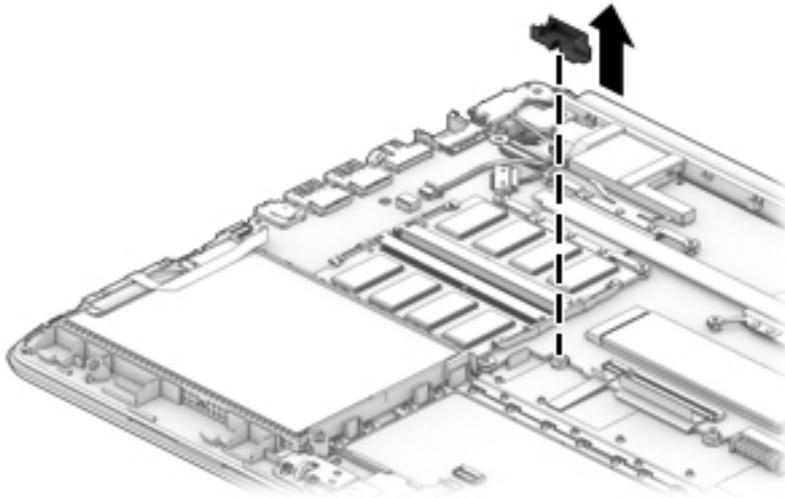

Reverse this procedure to install the system board hook.

Speakers


Description	Spare part number
Speaker Kit	L23221-001

Before removing the speakers, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 27](#)).
5. Remove the battery (see [Battery on page 29](#)).

Remove the speakers:

1. Disconnect the speaker cable from the system board **(1)**.
2. Lift the tape that secures the speaker cable to the system board **(2)**, and then lift the speakers from the computer **(3)**.

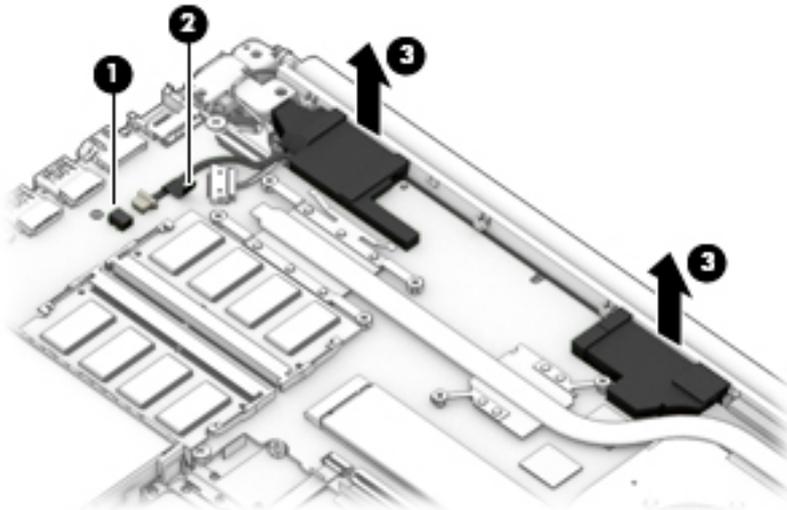

Reverse this procedure to install the speakers.

TouchPad button board

Description	Spare part number
TouchPad button board	L23197-001
TouchPad button board bracket	L23193-001
TouchPad button board cable	L23185-001


Before removing the TouchPad button board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the TouchPad button board:

1. Disconnect the TouchPad ZIF cable from the TouchPad button board **(1)**.
2. Disconnect the system board ZIF cable from the TouchPad button board **(2)**.
3. Remove the two Phillips M2.0×2.0 screws **(3)** that secure the board to the computer.
4. Lift the bracket from on top of the TouchPad button board **(4)**.
5. Lift the board and then slide it outward from under the clips that hold it on place to remove it **(5)**.

 **TIP:** The top edge of the board sits under clips. Be sure to slide the board out from under the clips to prevent damage to the board or clips.

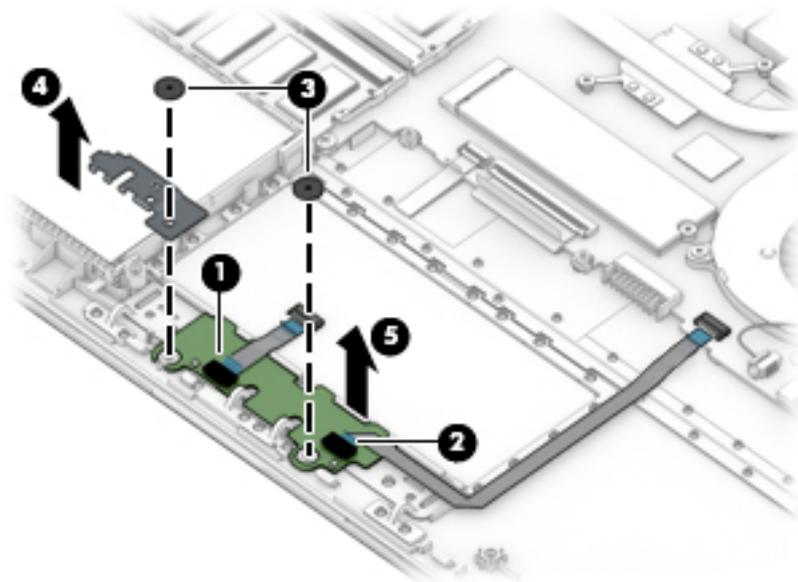

Reverse this procedure to install the TouchPad button board.

Fan


Description	Spare part number
Fan	L23189-001

Before removing the fan, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

Remove the fan:

1. Disconnect the fan cable from the system board **(1)**.
2. Remove the silver Phillips M2.0×5.0 screw **(2)** that secures the fan to the computer.
3. Remove the black Phillips M2.0×3.0 screw **(3)** that secures the fan to the computer.
4. Lift the fan from the computer **(4)**.

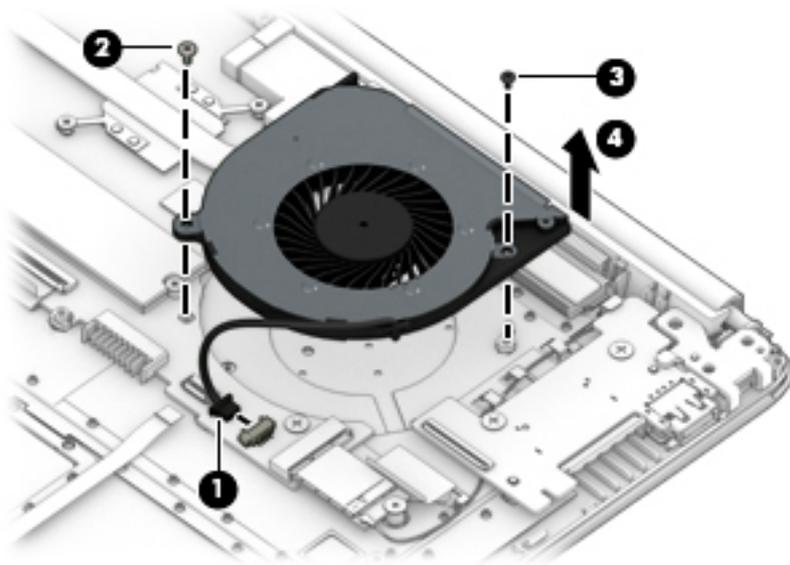

Reverse this procedure to install the fan.

Heat sink assembly


Description	Spare part number
Heat sink for use in models with Intel Core processors and integrated UMA graphics	L23192-001
Heat sink for use in models with Intel Core processors and discrete graphics	L23191-001

Before removing the heat sink, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

To remove the heat sink assembly from products with integrated UMA graphics:

1. In the order indicated on the heat sink assembly, remove the four Phillips M2.0×3.0 screws **(1)** that secure the heat sink to the computer.
2. Lift the heat sink assembly from the computer **(2)**.

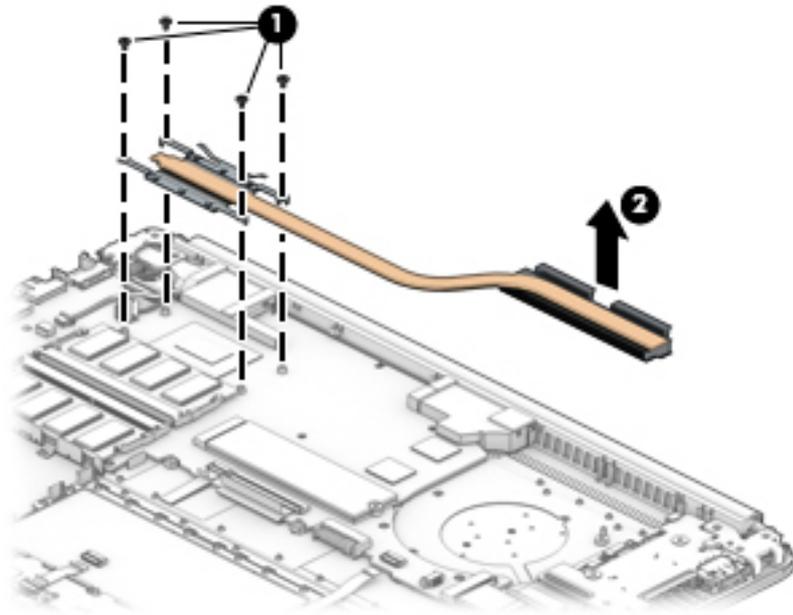


3. Thoroughly clean the thermal material from the surface of the heat sink **(1)** and associated system board component **(2)** each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

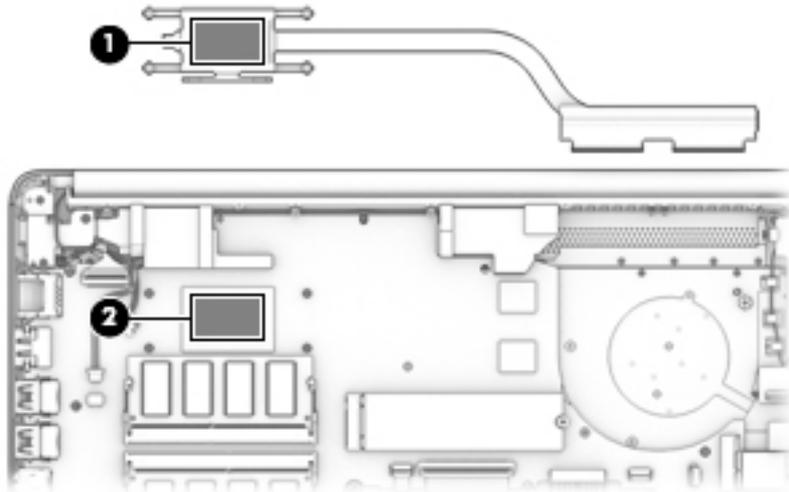


To remove the heat sink assembly from products with discrete graphics:

1. In the order indicated on the heat sink assembly, remove the six Phillips M2.0×3.0 screws **(1)** that secure the heat sink to the computer.
2. Lift the heat sink assembly from the computer **(2)**.

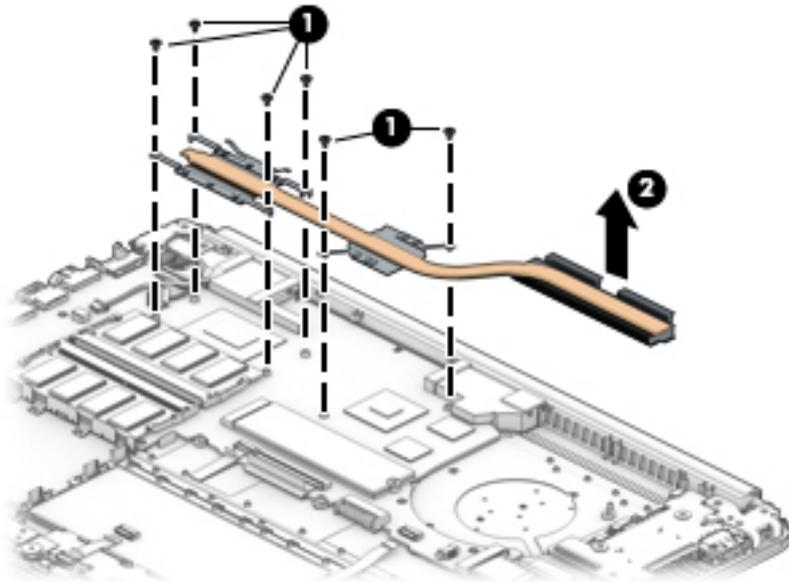

3. Thoroughly clean the thermal material from the surfaces of the heat sink **(1)(3)** and associated system board components **(2)(4)** each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

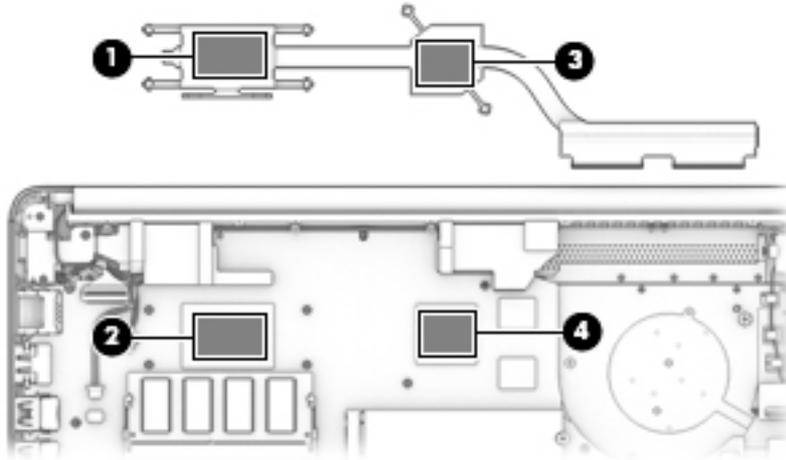

Reverse this procedure to install the heat sink.

TouchPad module

Description	Spare part number
TouchPad module	L22586-001
TouchPad module cable	L23184-001

Before removing the TouchPad module, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).

To remove the TouchPad module:

1. Peel the conductive tape off of the keyboard **(1)**
2. Starting in the corner, use a plastic, non-marking tool to pry up the TouchPad module to disengage the adhesive that secures it to the top cover **(2)**
3. Working around each edge, pry the TouchPad module loose, and then remove it from the computer **(3)**.



NOTE: The TouchPad module may be very tight and difficult to remove.

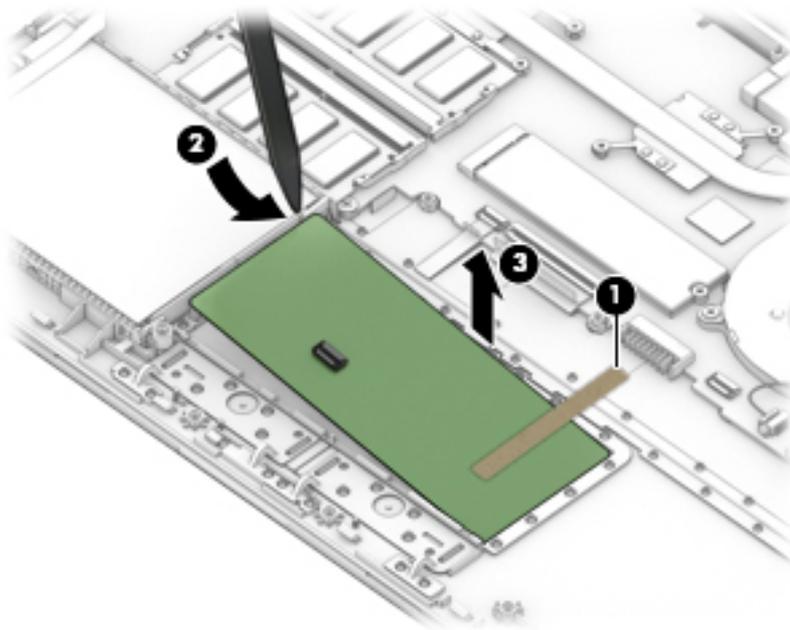

Reverse this procedure to install the TouchPad module.



TIP: it must be pasted on both TouchPad and the keyboard metal.

System board



NOTE: All system board spare part kits include replacement thermal material.

All system boards use the following part numbers:

xxxxxx-001: Non-Windows operating systems

xxxxxx-601: Windows operating system

Description	Spare part number
System board for use in models with discrete graphics memory:	
• Intel Core i7-8565U processor	L38148-xx1
• Intel Core i7-8550U processor	L23228-xx1
• Intel Core i5-8265U processor	L38150-xx1
Intel Core i5-8250U processor with 2 GB of discrete graphics memory	L23227-xx1
Intel Core i3-7020U processor with 2 GB of discrete graphics memory	L23226-xx1
System board for use in models with UMA graphics memory:	
• Intel Core i5-8265U processor	L38151-xx1
• Intel Core i5-8250U processor	L23232-xx1
• Intel Core i3-7020U processor	L23230-xx1
• Intel Pentium N5000 processor	L23236-xx1
• Intel Celeron N4000 processor	L23234-xx1

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the following components:
 - a. Bottom cover (see [Bottom cover on page 27](#))
 - b. Battery (see [Battery on page 29](#))
 - c. Hard drive (see [Hard drive on page 33](#))
 - d. Solid-state drive (see [Solid-state drive on page 35](#))
 - e. WLAN module (see [WLAN module on page 36](#))
 - f. Memory modules (see [Memory on page 31](#))
 - g. Fan (see [Fan on page 41](#))

Remove the system board:




IMPORTANT: Make special note of each screw size and location during removal and replacement

1. Disconnect the following cables from the system board:


(1): Hard drive cable

(2): Display cable


- (3): Power connector cable
- (4): Speaker cable
- (5): Keyboard backlight cable
- (6): Keyboard cable
- (7): TouchPad button board cable
- (8): USB board cable

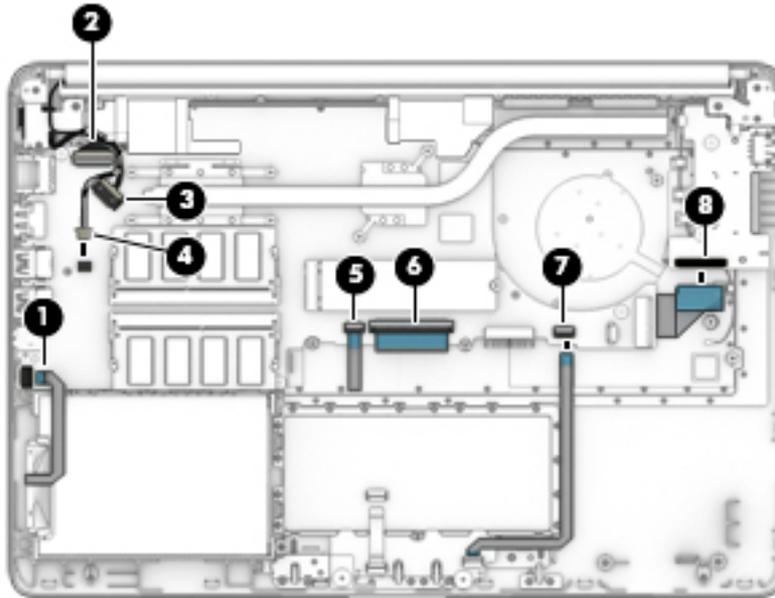

2. Remove the black Phillips M2.0×3.0 screw (1), and the four silver Phillips M2.0×2.0 screws (2) that secure the system board to the computer.

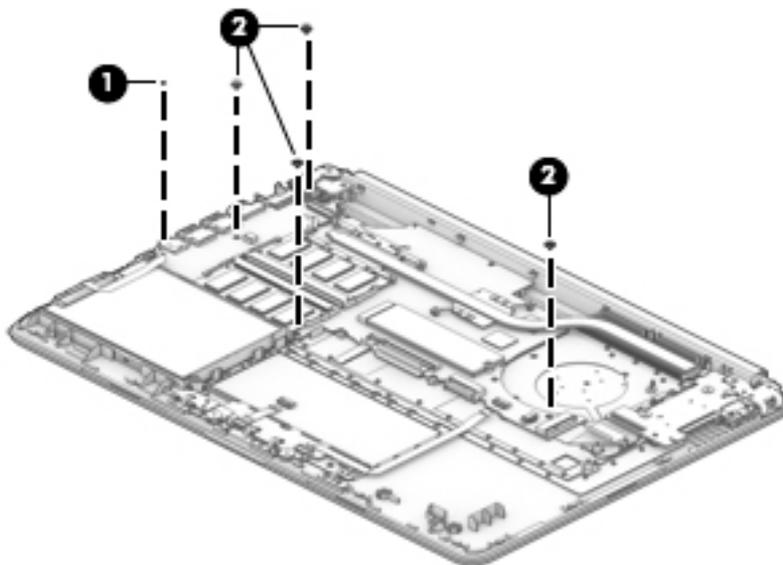


3. Lift the left side of the system board (1), and then remove it from the computer (2).

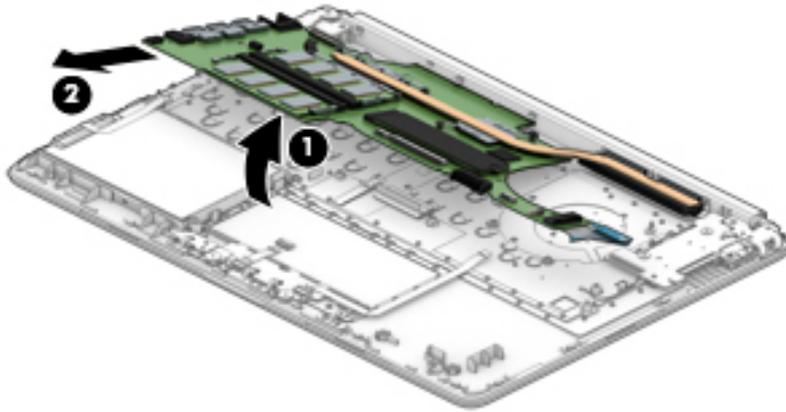

Reverse this procedure to install the system board.

When installing the system board, first insert the bottom (side closest to the display hinge cover) down and into the computer. Make sure to place the system board under the two tabs/clips, and to insert the plastic post into the hole in the system board.

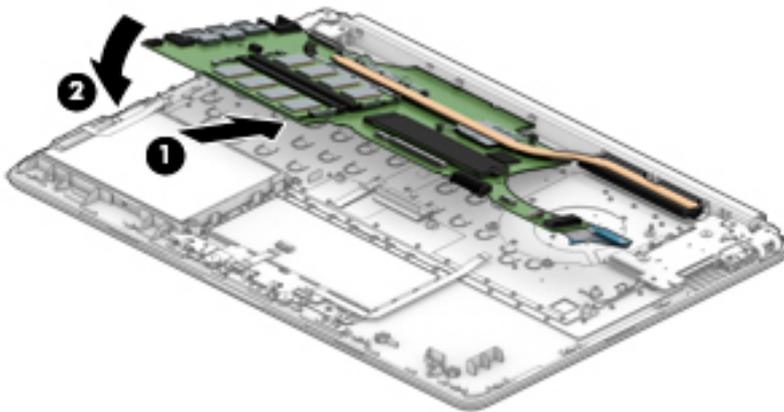

Power connector cable (DC-in)


Description	Spare part number
Power connector cable	L23188-001

Before removing the power connector cable, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the display (see [Display assembly on page 51](#)).

Remove the power connector cable:

1. Disconnect the power connector cable from the system board (**1**).
2. Remove the cable from the clip (**2**).
3. Remove the power connector cable out of the computer (**3**).

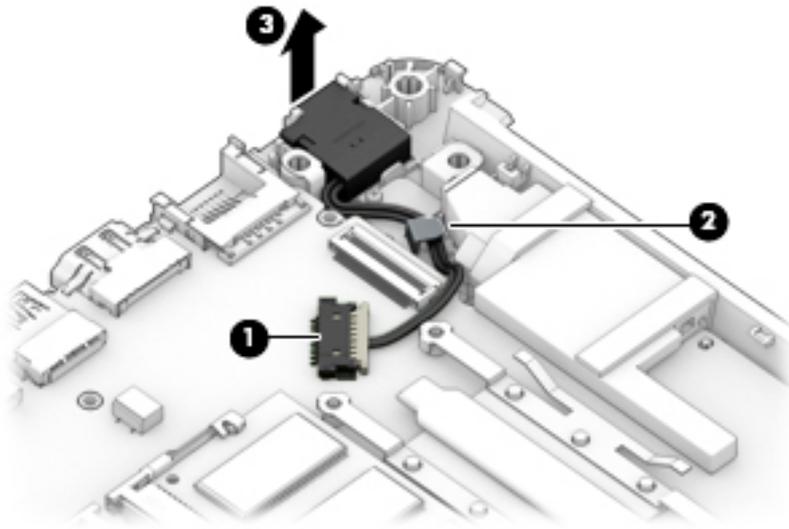

Reverse this procedure to install the power connector cable.

USB/card reader/power button board


Description	Spare part number
USB/card reader/power button board	L23196-001
USB/card reader/power button board cable	L23186-001

Before removing the USB/card reader/power button board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).
4. Remove the display (see [Display assembly on page 51](#)).

Remove the USB/card reader/power button board:

1. Disconnect the cable from the ZIF connector on the USB/card reader/power button board **(1)**.
2. Remove the two Phillips M2.0×3.0 screws **(2)**, and then remove the board from the computer **(3)**.

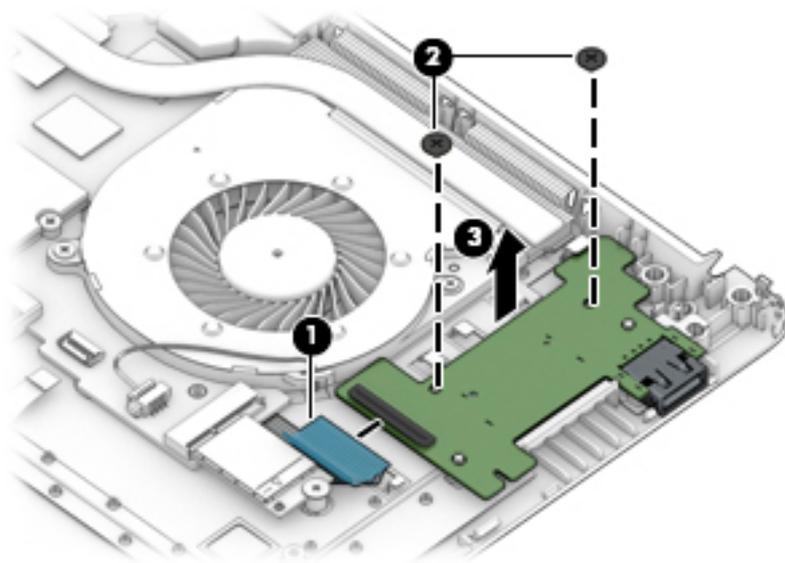

Reverse this procedure to replace the USB/card reader/power button board.

Display assembly


Full hinge-up displays are not spared. Displays are spared only at the subcomponent level.

Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery on page 29](#)).


Remove the display assembly:

1. Disconnect the display cable from the system board **(1)**.
2. Disconnect the antenna cables from the WLAN module **(2)**.
3. Remove the antenna cables from the clips in the speaker **(3)**.
4. Pull the antenna cables under USB/card reader/power button board **(4)**.

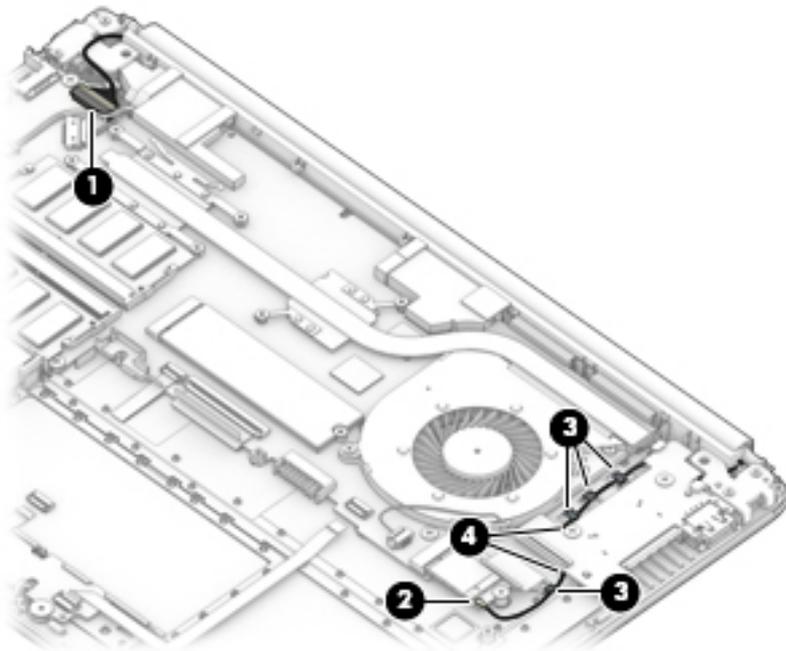

5. Remove the four Phillips M2.5×6.0 screws **(1)** from the display hinges.
6. Rotate the hinges upward **(2)**.


7. Separate the display from the computer (3).

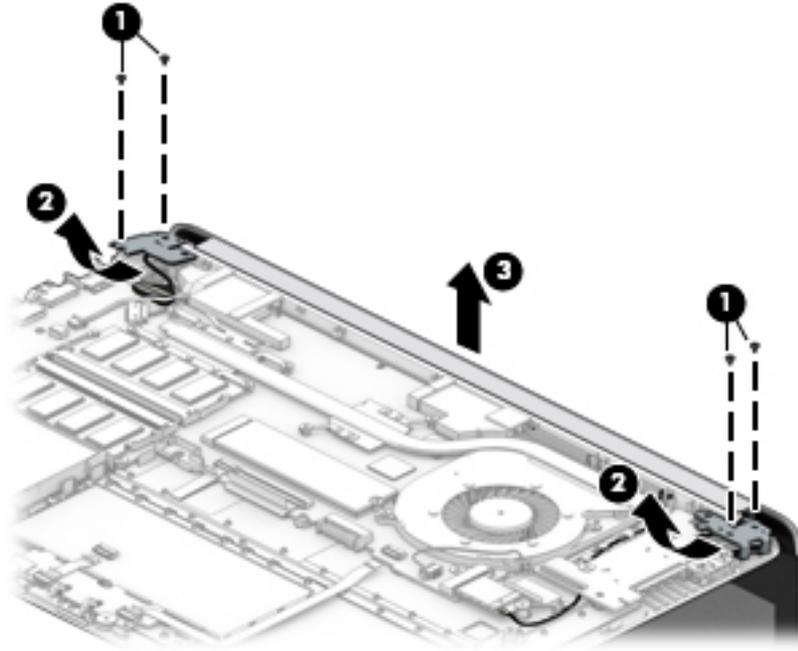

Remove the display assembly subcomponents:

1. If it is necessary to replace the display bezel:
 - a. If you need to remove the display bezel, flex the top (1) of the bezel, the inside edges of the left and right sides (2), and then the bottom (3) of the bezel until it disengages from the display enclosure.
 - b. Remove the bezel (4).


The display bezel is available using spare part number L23181-001.

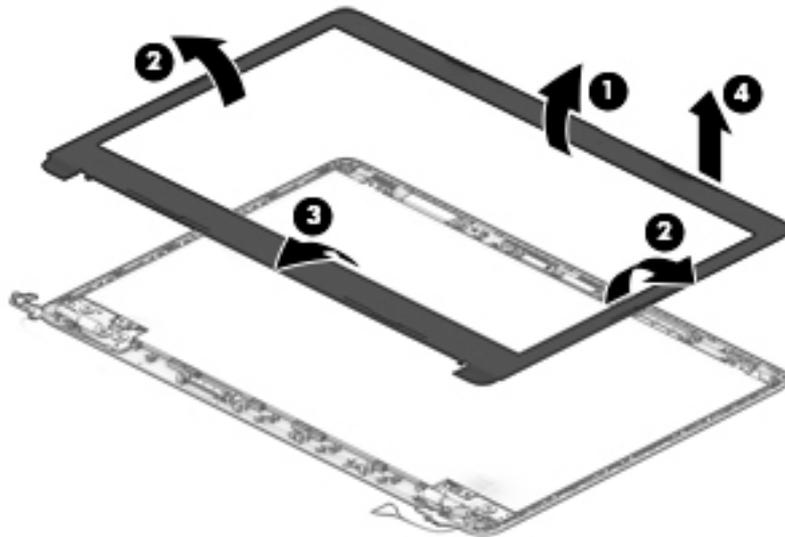

2. If it is necessary to replace the camera/microphone module:


- a. Detach the camera module **(1)** from the display back cover. (The module is attached with double-sided adhesive.)
- b. Disconnect the cable **(2)** from the camera/microphone module.

The camera module is available using spare part number L23237-001.

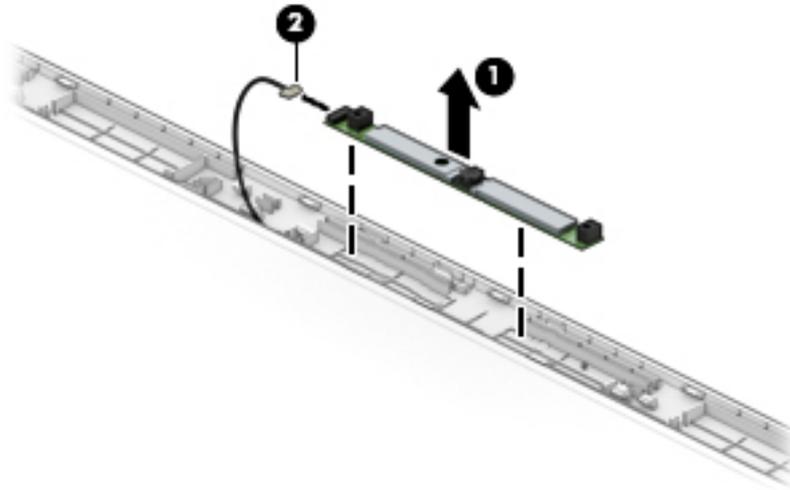


3. If it is necessary to replace the display panel:

- a. Remove the four Phillips M2.0×3.0 screws that secure the panel to the display enclosure.

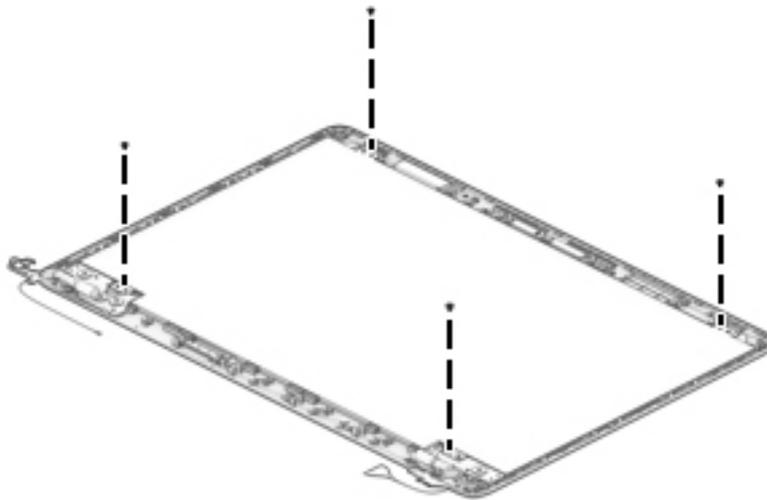

- b. Swing the top edge of the display panel forward and position the panel upside down next to the display enclosure **(1)**.
- c. Release the adhesive support strip **(2)** that secures the display panel cable connector to the display panel.

- d. Disconnect the display panel cable (3) from the display panel.

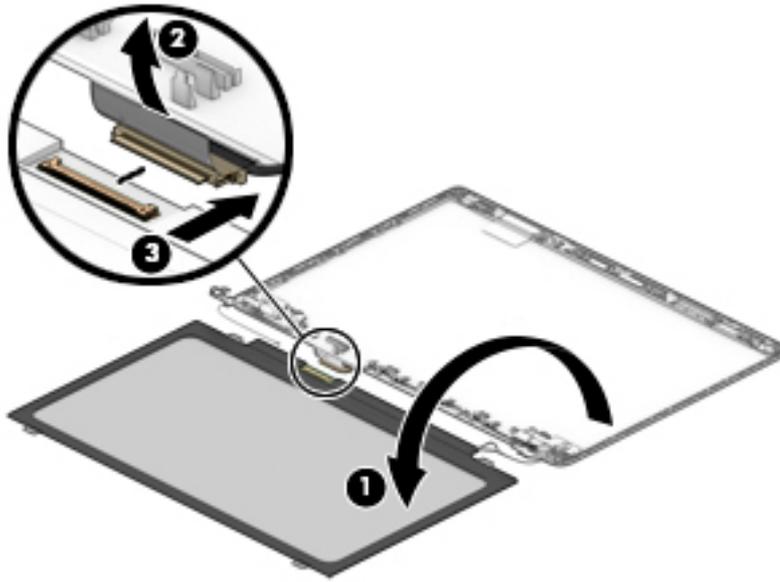

- e. Remove the display panel.
The raw display panel is available using spare part number L23210-001.

4. If it is necessary to replace the hinge cover, use a plastic, non-marking tool to pull up on the side of the hinge cover **(1)**, and then remove it **(2)**.

The hinge cover is available using spare part number L44058-001.




When replacing the hinge cover, make sure the hinges rotate downward as far as they can go. Align the cover **(1)**, and then start from above and rotate the cover downward onto the hinges **(2)**. Make sure the clips snap into place along the bottom of the display cover.

5. If it is necessary to replace the display hinges:
 - a. Remove the six Phillips M2.5×2.5 broad head screws **(1)** from the bottom of the hinges.

- b.** Remove the display hinges (2).

The display hinges are available using spare part number L23194-001.

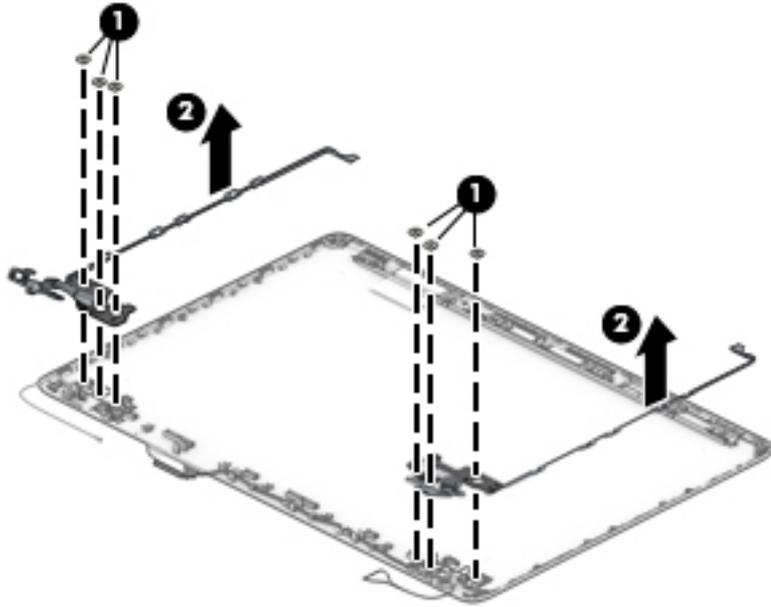


- 6.** If it is necessary to replace the display panel cable:

- a.** Release the cable from the retention clips (1) and routing channel built into the bottom edge and sides of the display enclosure.

- b.** Remove the display panel cable (2).

The display panel cable is available using spare part number L23182-001.

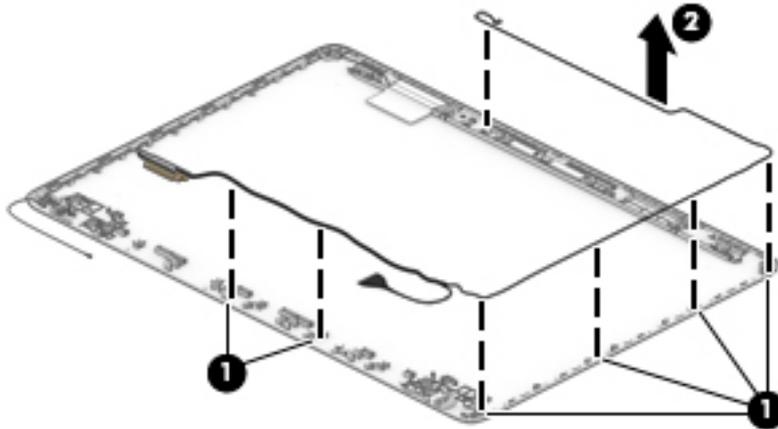


- 7.** If it is necessary to replace the wireless antenna cables and transceivers:


- a.** Release the wireless antenna cables from the retention clips and routing channel built into the side of the display enclosure (1).

- b. Release the antenna from the display enclosure (2).

Antennas are available using spare part number L23158-001 for models with a single antenna and L23159-001 for models with dual antennas.

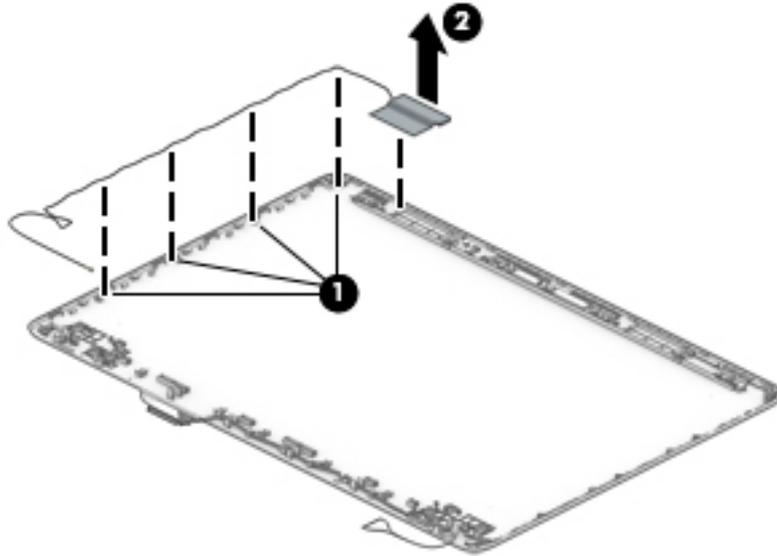

Use the following image to determine proper cable routing in the display of the antenna cable (1) and display cable (2).

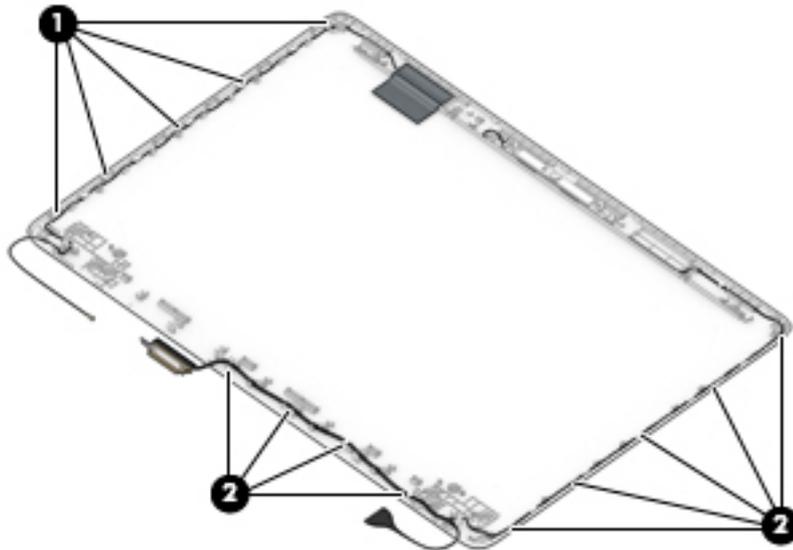

The display rear cover is available using spare part number L44056-001.

Reverse these procedures to reassemble and install the display assembly components.

Top cover with keyboard

The top cover with keyboard remains after removing all other spared parts from the computer.

In this section, the first table provides the main spare part number for the keyboards. The second table provides the country codes.

Description	Spare part number
Keyboard	L44060-xx1

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Israel	-BB1	Slovenia	-BA1
Brazil	-201	Italy	-061	South Korea	-AD1
Bulgaria	-261	Latin America	-161	Spain	-071
Czech Republic and Slovakia	-FL1	The Netherlands	-B31	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	Northern Africa	-FP1	Taiwan	-AB1
France	-051	Portugal	-131	Thailand	-281
Germany	-041	Romania	-271	Turkey	-141
Greece	-151	Russia	-251	United Kingdom	-031
Hungary	-211	Saudi Arabia	-171	United States	-001
India	-D61				

6 Computer Setup (BIOS), TPM, and HP Sure Start

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

Starting Computer Setup

- ▲ Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.
- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

- To save your changes and exit Computer Setup menus, select **Main**, select **Save Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

 **NOTE:** Restoring defaults will not change the hard drive mode.

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Start Computer Setup. See [Starting Computer Setup on page 59](#).
2. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

 **NOTE:** On select products, the selections may display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

BIOS version information (also known as *ROM date* and *System BIOS*) can be accessed by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.

1. Start Computer Setup. See [Starting Computer Setup on page 59](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup menus without saving your changes, select **Main**, select **Ignore Changes and Exit**, and then select **Yes**.

 **NOTE:** If you are using arrow keys to highlight your choice, you must then press **enter**.

To check for later BIOS versions, see [Downloading a BIOS update on page 60](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Type `support` in the taskbar search box, and then select the HP Support Assistant app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:

- a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
- b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps:

1. Access the Boot Device Options menu:
 - Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
2. Select a boot device, press **enter**, and then follow the on-screen instructions.

TPM BIOS settings (select products only)

 **IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).

 **NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Starting Computer Setup on page 59](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

7 Using HP PC Hardware Diagnostics

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system in order to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 63](#).

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support or HP Support Assistant.

1. To access HP PC Hardware Diagnostics Windows from HP Help and Support:
 - a. Select the **Start** button, and then select **HP Help and Support**.
 - b. Right-click **HP PC Hardware Diagnostics Windows**, select **More**, and then select **Run as administrator**.

– or –

To access HP PC Hardware Diagnostics Windows from HP Support Assistant:

- a. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.
 - b. Select **Troubleshooting and fixes**.
 - c. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.
2. When the tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostic test at any time, select **Cancel**.

3. When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. For assistance in correcting the problem, contact support, and then provide the Failure ID code.

Downloading HP PC Hardware Diagnostics Windows

- The HP PC Hardware Diagnostics Windows download instructions are provided in English only.
- You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version

To download HP PC Hardware Diagnostics Windows, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the **HP PC Hardware Diagnostics** section, select **Download**, and then select a location on your computer or a USB flash drive.

The tool is downloaded to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

 **NOTE:** For some products, it may be necessary to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics Windows by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **HP PC Hardware Diagnostics** section, select **Download**, and then select a location on your computer or a USB flash drive.

The tool is downloaded to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, follow these steps:

- ▲ Navigate to the folder on your computer or the USB flash drive where the .exe file was downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

 **NOTE:** For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 65](#).

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

If your PC will not boot into Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. For assistance in correcting the problem, contact support, and provide the Failure ID code.

 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.

 **NOTE:** If you need to stop a diagnostic test, press `esc`.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow these steps:

1. Turn on or restart the computer, and quickly press [esc](#).
2. Press [f2](#).

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 65](#).

- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in the following situations:

- HP PC Hardware Diagnostics UEFI is not included in the preinstall image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the **HP PC Hardware Diagnostics UEFI** section, select **Download UEFI Diagnostics**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)



NOTE: For some products, it may be necessary to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive:

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it may upload results to a preconfigured server. For more information on Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

 **NOTE:** HP Remote PC Hardware Diagnostics UEFI is also available as a Softpaq that can be downloaded to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

To download the latest Remote HP PC Hardware Diagnostics UEFI version, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the **HP PC Hardware Diagnostics UEFI** section, select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

 **NOTE:** For some products, it may be necessary to download the software by using the product name or number.

To download HP Remote PC Hardware Diagnostics UEFI by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform the following customizations:

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a disk drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password settings used for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.

3. Make your customization selections.
4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

8 Backing up, restoring, and recovering

This chapter provides information about the following processes, which are standard procedure for most products:

- **Backing up your personal information**—You can use Windows tools to back up your personal information (see [Using Windows tools on page 68](#)).
- **Creating a restore point**—You can use Windows tools to create a restore point (see [Using Windows tools on page 68](#)).
- **Creating recovery media** (select products only)—You can use the HP Cloud Recovery Download Tool (select products only) to create recovery media (see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 68](#)).
- **Restoring and recovery**—Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state (see [Using Windows tools on page 68](#)).

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

Using Windows tools

 **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.

You can use Windows tools to back up personal information and create system restore points and recovery media.

 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get Help app.

1. Select the **Start** button, and then select the **Get Help** app.
2. Enter the task you want to perform.

 **NOTE:** You must be connected to the Internet to access the Get Help app.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive, as follows:

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, and then follow the on-screen instructions.



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

Restoring and recovery

Restoring, resetting, and refreshing using Windows tools

Windows offers several options for restoring, resetting, and refreshing the computer. For details, see [Using Windows tools on page 68](#).

Recovering using HP Recovery media

HP Recovery media is used to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool. For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 68](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- ▲ Insert the HP Recovery media, and then restart the computer.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order. This is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

To change the boot order:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, quickly hold down the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly hold down the volume down button, and then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

9 Specifications

Computer specifications

	Metric	U.S.
Dimensions		
Length	234.0 mm	9.21 in
Width	335.0 mm	13.19 in
Height	19.9 mm	0.78 in
Weight		
With solid-state drive or eMMC	1509.4 g	3.30 lbs
With hard drive	1545.7 g	3.40 lbs
With solid-state drive and hard drive	1554.0 g	3.43 lbs
Input power		
Operating voltage	19.0 V dc @ 4.74 A – 90 W or 18.5 V dc @ 3.5 A - 65 W or 45 W	
Operating current	4.74 A or 3.5 A	
Temperature		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity		
Operating	10% to 90%	
Nonoperating	5% to 95%	
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.		

35.6-cm (14.0-in) display specifications

	Metric	U.S.
Active diagonal size	35.6-cm	14.0-in
Resolution	FHD: 1920×1080 HD: 1366×768	
Surface treatment	Anti-glare BrightView	
Brightness	220 nits	
Viewing angle	SVA	
Backlight	LED	
Aspect ratio	16:9	
Display panel interface	eDP	

M.2 SATA solid-state drive specifications

	128-GB*	256-GB*
Height	1.35 mm	1.35 mm
Weight	< 10 g	< 10 g
Form factor	M.2 2280-D2-B-M	M.2 2280-D2-B-M
Transfer rate	up to 540 MB/sec	up to 540 MB/sec
Interface type	SATA-3	SATA-3
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms
Access times, logical	0.1 ms	0.1 ms
Total logical sectors	234,441,648	468,883,296
Operating temperature	0°C to 70°C (32°F to 158°F)	
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.		
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.		

M.2 PCIe solid-state drive specifications

	256-GB*
Dimensions	
Height	1.0 mm
Length	50.8 mm
Width	28.9 mm
Weight	< 10 g
Interface type	
	ATA-7
Transfer rate	
Sequential Read	Up to 2150 MB/s
Random Read	Up to 300,000 IOPs
Sequential Write	Up to 1260 MB/s
Random Write	Up to 100,000 IOPs
Ready time, Maximum (to not busy)	
	1.0 s
Access times	
Logical	0.1 ms
Total logical sectors	
	500,118,192
Operating temperature	
Operating	0° to 70°C (32°F to 158°F)
Non-operating	-40° to 80°C (-40°F to 176°F)
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.	
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.	

Hard drive specifications

	1-TB*	500-GB*
Dimensions		
Height	7.0 mm or 9.5 mm	7.0 mm
Length	100.4 mm	100.6 mm
Width	69.9 mm	70.1 mm
Weight	107.0 g	92.0 g
Interface type	SATA	SATA
Transfer rate		
Synchronous (maximum)	300 MB/sec	300 MB/sec
Security	ATA security	ATA security
Seek times (typical read, including setting)		
Single track	2.0 ms	3.0 ms
Average (read/write)	12 ms	13 ms
Maximum	22 ms	24 ms
Logical blocks	1,953,525,168	1,048,576,000
Disk rotational speed	5400 rpm	5400 rpm
Operating temperature		
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.		
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.		

10 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5
South Korea	EK	4

Country/region	Accredited agency	Applicable note number
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

11 Statement of memory volatility

The purpose of this chapter is to provide general information regarding nonvolatile memory in HP Business computers. This chapter also provides general instructions for restoring nonvolatile memory that can contain personal data after the system has been powered off and the hard drive has been removed.

HP Business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, assuming that no subsequent modifications have been made to the system and assuming that no applications, features, or functionality have been added to or installed on the system.

Following system shutdown and removal of all power sources from an HP Business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and will also remain in nonvolatile memory. Use the steps below to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.

 **NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.

Current BIOS steps

1. Follow steps (a) through (l) below to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults.

The computer will reboot.

- c. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults.

The computer will reboot.

- e. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.

Nonvolatile memory usage

Nonvolatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write-protected?
HP Sure Start flash (select models only)	8 MBytes	No	Yes	Provides protected backup of critical System BIOS code, EC firmware, and critical computer configuration data for select platforms that support HP Sure Start. For more information, see Using HP Sure Start (select models only) on page 81 .	Data cannot be written to this device via the host processor. The content is managed solely by the HP Sure Start Embedded Controller.	This memory is protected by the HP Sure Start Embedded Controller.
Real Time Clock (RTC) battery backed-up CMOS configuration memory	256 Bytes	No	Yes	Stores system date and time and noncritical data.	RTC battery backed-up CMOS is programmed using the Computer Setup (BIOS), or changing the Microsoft Windows date & time.	This memory is not write-protected.
Controller (NIC) EEPROM	64 KBytes (not customer accessible)	No	Yes	Stores NIC configuration and NIC firmware.	NIC EEPROM is programmed using a utility from the NIC vendor that can be run from DOS.	A utility is required to write data to this memory and is available from the NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC non-functional.
DIMM Serial Presence Detect (SPD) configuration data	256 Bytes per memory module, 128 Bytes programmable (not customer accessible)	No	Yes	Stores memory module information.	DIMM SPD is programmed by the memory vendor.	Data cannot be written to this memory when the module is installed in a computer. The specific write-protection method varies by memory vendor.
System BIOS	9 MBytes	Yes	Yes	Stores system BIOS code and computer configuration data.	System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are input using the Computer Setup (BIOS) or a custom utility.	NOTE: Writing data to this ROM in an inappropriate manner can render the computer non-functional. A utility is required for writing data to this memory and is available on the HP website; go to http://www.hp.com/support . Select Find your

Nonvolatile Memory Type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data input into this memory?	How is this memory write-protected?
Intel Management Engine Firmware (present only in select Elite or Z models. For more information, go to http://www.hp.com/support . Select Find your product , and then follow the on-screen instructions.)	1.5 MBytes or 7 MBytes	Yes	Yes	Stores Management Engine Code, Settings, Provisioning Data and iAMT third-party data store.	Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third party data store contents can be populated by a remote management console or local applications that have been registered by an administrator to have access to the space.	product , and then follow the on-screen instructions. The Intel chipset is configured to enforce hardware protection to block all direct read/write access to this area. An Intel utility is required for updating the firmware. Only firmware updates digitally signed by Intel can be applied using this utility.
Bluetooth flash (select products only)	2 Mbit	No	Yes	Stores Bluetooth configuration and firmware.	Bluetooth flash is programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor.	A utility is required for writing data to this memory and is made available through newer versions of the driver whenever the flash requires an upgrade.
802.11 WLAN EEPROM	4 Kbit to 8 Kbit	No	Yes	Stores configuration and calibration data.	802.11 WLAN EEPROM is programmed at the factory. Tools for writing data to this memory are not made public.	A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Webcam (select products only)	64 Kbit	No	Yes	Stores webcam configuration and firmware.	Webcam memory is programmed using a utility from the device manufacturer that can be run from Windows.	A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Fingerprint reader (select products only)	512 KByte flash	Yes	Yes	Stores fingerprint templates.	Fingerprint reader memory is programmed by user enrollment in HP ProtectTools Security Manager.	Only a digitally signed application can make the call to write to the flash.

Questions and answers

1. How can the BIOS settings be restored (returned to factory settings)?



IMPORTANT: Restore defaults does not securely erase any data on your hard drive. See question and answer 6 for steps to securely erase data.

Restore defaults does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Apply Factory Defaults and Exit**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It is a replacement for the older BIOS architecture, but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure run-time environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (Touchscreen, TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer’s hardware before loading and executing the OS; the run-time environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where does the UEFI BIOS reside?

The UEFI BIOS resides on a flash memory chip. A utility is required to write to the chip.

4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed/timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. This EEPROM cannot be written to when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

6. How can the BIOS security be reset to factory defaults and data erased?

 **IMPORTANT:** Resetting will result in the loss of information.

These steps will not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, simply disabling Secure Boot will not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure you used to create the Custom Secure Boot Keys, but make the selection to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select models only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

12 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

- AC adapter, spare part numbers 21
- action keys 12
 - identifying 12
 - keyboard backlight 12
 - mute 12
 - next 12
 - pause 12
 - play 12
 - privacy screen 12
 - screen brightness 12
 - speaker volume 12
 - stop 12
 - switch screen image 13
 - using 12
 - wireless 13

antenna

- removal 56

audio

- adjusting volume 12
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 5

B

back cover

- spare part number 19

backup, creating 68

backups 68

battery

- removal 29
- spare part number 18, 29

battery light 5

BIOS

- determining version 60
- downloading an update 60
- updating 60

Bluetooth label 15

boot order

- changing using the f9 prompt 61

boot order, changing 69

bottom cover

- removal 27
- spare part number 18, 27

buttons

- left TouchPad 8
- power 10
- right TouchPad 8

C

camera 7

- identifying 7
- product description 2

camera light, identifying 7

camera module

- removal 52
- spare part number 19

caps lock light, identifying 9

chipset, product description 1

components

- bottom 14
- display 7
- keyboard area 8
- left side 6
- right side 5

computer major components 16

Computer Setup

- navigating and selecting 59
- restoring factory settings 59
- starting 59

computer setup 59

computer specifications 70

connector, power 6

D

Display assembly

- spare part numbers 17

display assembly

- removal 51
- subcomponents 19

display assembly components

- removal 51
- spare part numbers 51

display bezel

- removal 52
- spare part numbers 19, 52

display cable, spare part number 19

display components 7

display panel

- product description 1
- removal 53

display panel cable

- removal 56
- spare part numbers 56

display specifications 71

drive light, identifying 6

E

electrostatic discharge 24

equipment guidelines 23

esc key, identifying 11

ethernet

- product description 2

F

fan

- removal 41
- spare part number 17, 41

fan insert

- spare part number 17

fn key, identifying 11

G

grounding guidelines 24

guidelines

- equipment 23
- grounding 24
- packaging 25
- transporting 25
- workstation 23

H

hard drive

- product description 2
- removal 33
- spare part number 18, 20
- spare part numbers 33
- specifications 73

hard drive cable

- spare part number 20

hard drive cover

- spare part number 20

HDMI port, identifying 5

- heat sink
 - spare part numbers 17
- heat sink assembly
 - removal 42
 - spare part numbers 42
- hinge
 - removal 55
 - spare part number 56
- hinge cover
 - spare part number 19
- Hinge Kit
 - spare part number 19
- hot keys
 - microphone mute 12
- HP PC Hardware Diagnostics UEFI
 - downloading 65
 - starting 65
 - using 64
- HP PC Hardware Diagnostics Windows
 - downloading 63
 - installing 64
 - using 63
- HP Recovery media
 - recovery 69
- HP Sure Start 81

I
internal microphones, identifying 7

J
jacks

- audio-out (headphone)/audio-in (microphone) combo 5
- network 5
- RJ-45 (network) 5

K
keyboard

- product description 3
- removal 58
- spare part number 58
- spare part numbers 17

keyboard backlight
action key 12

keys

- action 12
- esc 11
- fn 11
- Windows 11

L
labels

- Bluetooth 15
- regulatory 15
- serial number 15
- service 15
- wireless certification 15
- WLAN 15

left side components 6

lights

- AC adapter and battery 5
- battery 5
- camera 7
- caps lock 9
- drive 6
- power 6
- RJ-45 (network) 5

M
M.2 solid-state drive
specifications 72

memory

- nonvolatile 76
- product description 1
- removal 31
- spare part number 18
- spare part numbers 31
- volatile 76

memory card reader, identifying 6

microphone mute key, identifying
12

model name 1
mute volume action key 12

N
network jack, identifying 5
next track action key 12
nonvolatile memory 76

O
operating system, product
description 3

Optane memory module
spare part number 20

P
packaging guidelines 25
panel

spare part numbers 19
pause action key 12
play action key 12

pointing device, product
description 3

ports

- HDMI 5
- product description 2
- USB 6
- USB SuperSpeed 5

power button, identifying 10

power connector
identifying 6

power connector cable
removal 49
spare part numbers 49

power cord
set requirements 74

power lights 6
power requirements, product
description 3

privacy screen action key,
identifying 12

processor 1

product description

- camera 2
- chipset 1
- display panel 1
- ethernet 2
- external media cards 2
- hard drive 2
- keyboard 3
- memory 1
- operating system 3
- pointing device 3
- ports 2
- power requirements 3
- processor 1
- product name 1
- security 3
- serviceability 4
- wireless networking 2

product name 1
product name and number,
computer 15

R
recovery 68
discs 69
HP Recovery partition 69
media 69
USB flash drive 69

- recovery media
 - creating using HP Cloud Recovery Download Tool 68
 - creating using Windows tools 68
- regulatory information
 - regulatory label 15
 - wireless certification labels 15
- Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 66
 - using 66
- removal/replacement
 - procedures 26
- removing personal data from volatile system memory 76
- restoring 68
- right side components 5
- RJ-45 (network) jack, identifying 5
- RJ-45 (network) lights, identifying 5

S

- screen brightness action keys 12
- Screw Kit, spare part numbers 21
- security cable slot, identifying 6
- security, product description 3
- serial number, computer 15
- service labels, locating 15
- serviceability, product description 4
- setup utility
 - navigating and selecting 59
 - restoring factory settings 59
- slots
 - security cable 6
- solid-state drive
 - removal 35
 - spare part number 18, 20
 - spare part numbers 35
 - specifications 71
- speaker volume action keys 12
- speakers
 - removal 39
 - spare part number 17
 - spare part numbers 39
- speakers, identifying 10
- special keys, using 11
- specifications
 - computer 70
 - display 71
 - hard drive 73

- M.2 solid-state drive 72
- solid-state drive 71
- stop action key 12
- Sure Start
 - using 62
- switch screen image action key 13
- system board
 - removal 46
 - spare part number 17
 - spare part numbers 46
- system board hook
 - removal 38
 - spare part number 17, 38
- system memory, removing personal data from volatile 76
- system restore point, creating 68

T

- top cover
 - removal 58
 - spare part number 58
- top cover/keyboard
 - spare part numbers 17
- TouchPad button board
 - removal 40
 - spare part number 17
 - spare part numbers 40
- TouchPad buttons
 - identifying 8
- TouchPad module
 - removal 45
 - spare part number 17, 45
- TouchPad zone
 - identifying 8
- TPM settings 61
- transporting guidelines 25
- traveling with the computer 15

U

- USB board
 - removal 50
 - spare part number 50
- USB port, identifying 6
- USB SuperSpeed port, identifying 5
- USB/card reader/power button board
 - spare part number 17

V

- vents, identifying 10, 14

- volume
 - adjusting 12
 - mute 12

W

- Windows
 - backup 68
 - recovery media 68
 - system restore point 68
- Windows key, identifying 11
- Windows tools, using 68
- wireless action key 13
- wireless antenna
 - removal 56
- wireless certification label 15
- wireless networking
 - product description 2
- WLAN
 - removal 36
 - spare part numbers 36
- WLAN antenna
 - removal 56
- WLAN antennas, identifying 7
- WLAN cable
 - spare part number 19
- WLAN device 15
- WLAN label 15
- WLAN module
 - spare part number 18
- workstation guidelines 23