



Maintenance and Service Guide

HP ENVY x360 Convertible PC

IMPORTANT! This document is intended for HP authorized service providers only.

© Copyright 2019 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel and Core are trademarks of Intel Corporation in the U.S. and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2019

Document Part Number: L52097-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. Go to <http://www.microsoft.com> for details.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **User Guides**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

Table of contents

1 Product description	1
2 External component identification	4
Right side	4
Left side	5
Display	7
Keyboard area	8
TouchPad	8
Lights	9
Speakers and fingerprint reader	10
Special keys	11
Bottom	12
Labels	13
3 Illustrated parts catalog	14
Computer components	15
Miscellaneous parts	20
4 Removal and replacement procedures preliminary requirements	22
Tools required	22
Service considerations	22
Plastic parts	22
Cables and connectors	23
Drive handling	23
Electrostatic discharge damage	24
Packaging and transporting guidelines	25
Workstation guidelines	25
Equipment guidelines	26
5 Removal and replacement procedures	27
Component replacement procedures	27
Bottom cover	28
Battery	30
Solid-state drive	31
Memory module	33
TouchPad cable	35

TouchPad	36
Switch board cable	38
Switch board	39
Fingerprint reader module	40
Fingerprint reader module cable	41
Card reader board cable	43
Card reader board	39
Fans	45
Power button board cable	47
Power button board	48
Power connector cable	49
Display assembly	36
System board	54
Heat sink	57
WLAN module	60
Speakers	62

6 Using Setup Utility (BIOS) 64

Starting Setup Utility (BIOS)	64
Updating Setup Utility (BIOS)	64
Determining the BIOS version	64
Downloading a BIOS update	65

7 Backing up, restoring, and recovering 66

Backing up information and creating recovery media	66
Using Windows tools	66
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	66
Restoring and recovery	67
Restoring, resetting, and refreshing using Windows tools	67
Recovering using HP Recovery media	67
Changing the computer boot order	67

8 Using HP PC Hardware Diagnostics 68

Using HP PC Hardware Diagnostics Windows (select products only)	68
Downloading HP PC Hardware Diagnostics Windows	68
Downloading the latest HP PC Hardware Diagnostics Windows version	69
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	69
Installing HP PC Hardware Diagnostics Windows	69
Using HP PC Hardware Diagnostics UEFI	69

Starting HP PC Hardware Diagnostics UEFI	70
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	70
Downloading the latest HP PC Hardware Diagnostics UEFI version	70
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	70
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	71
Downloading Remote HP PC Hardware Diagnostics UEFI	71
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	71
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number ...	71
Customizing Remote HP PC Hardware Diagnostics UEFI settings	71
9 Specifications	73
Computer specifications	73
10 Power cord set requirements	75
Requirements for all countries	75
Requirements for specific countries and regions	76
11 Recycling	78
Index	79

1 Product description

Table 1-1 Product components and descriptions

Category	Description
Product Name	HP ENVY x360 Convertible PC (model number 15-cn0xxx, 15-cn1xxx, 15t-cn000, 15t-cn100)
Processors	Intel® Core™ i7-8565U 1.80-GHz quad core processor (2400-MHz front side bus (FSB), 8.0-MB L3 cache, 15.0 W) Intel Core i7-8550U 1.80-GHz quad core processor (2400-MHz FSB, 8.0-MB L3 cache, 15.0 W) Intel Core i5-8265U 1.60-GHz quad core processor (2400-MHz FSB, 6.0-MB L3 cache, 15.0 W) Intel Core i5-8250U 1.60-GHz quad core processor (2400-MHz FSB, 6.0-MB L3 cache, 15.0 W)
Chipset	Intel integrated soldered-on-circuit (SoC)
Graphics	Discrete graphics: NVIDIA® GeForce MX250 N17S—G2 graphic controller Internal graphics: Intel UHD 620 graphics subsystem
Panel	<ul style="list-style-type: none">• 15.6-in, ultrahigh-definition (UHD), BrightView (3840×2160), organic light-emitting diode (OLED), AMOLED UWVA, DCI-P3, 100, 400 nits, 96% NTSC, eDP+PSR, ultraslim, LCD with narrow bezel (only available on computer models equipped with a graphics subsystem with discrete memory)• 15.6-in, FHD, AntiGlare (1920×1080), WLED, UWVA, 72, 1000/450/150 nits, 72% NTSC (high brightness/sharing/privacy), eDP 1.4+PSR2, flat, LCD with narrow bezel and privacy filter• 15.6-in, FHD, AntiGlare (1920×1080), WLED, UWVA, 72, 300 nits, 72% NTSC, eDP, ultraslim, LCD with narrow bezel• 15.6-in, full high-definition (FHD), AntiGlare (1920×1080), white light-emitting diode (WLED), UWVA, 45, 250 nits, 45% NTSC, eDP 1.2, slim, liquid crystal display (LCD) with narrow bezel
Memory	Support for DDR4-2400, 1.2 V system memory Support for up to 16-GB of system memory in the following configurations: <ul style="list-style-type: none">• 16384-MB (8-GB × 2 pieces)• 8192-MB (8-GB × 1 piece)• 8192-MB (4-GB × 2 pieces)
Storage	Support for a 1-TB, 7200-rpm, SATA 7.0-mm hard drive Support for the following solid-state drives: <ul style="list-style-type: none">• 1-TB, 2280, peripheral component interconnect express (PCIe)-3×4, non-volatile memory express (NVMe), SuperSpeed (SS) solid-state drive with triple-level cell (TLC)• 512-GB, 2230, PCIe-3×2, NVMe solid-state drive with TLC• 512-GB, 2280, PCIe, NVMe solid-state drive• 360-GB, 2280 PCIe-3×4, NVMe solid-state drive with TLC• 256-GB, 2230, PCIe-3×2, NVMe solid-state drive with TLC• 256-GB, 2280, PCIe, NVMe solid-state drive Supports the following hard drive and solid-state drive combinations: <ul style="list-style-type: none">• 1-TB, 7200-rpm, SATA 7.0-mm hard drive + 256-GB, M2, PCIe, NVMe solid-state drive with TLC• 1-TB, 7200-rpm, SATA 7.0-mm hard drive + 256-GB, PCIe solid-state drive

Table 1-1 Product components and descriptions (continued)

Category	Description
Storage <i>(continued)</i>	<ul style="list-style-type: none"> 1-TB, 7200-rpm, SATA 7.0-mm hard drive + 128-GB, M2, SATA-3 solid-state drive with TLC 1-TB, 7200-rpm, SATA 7.0-mm hard drive + 16-GB, M2, PCIe-3×2, 3D Xpoint Optane solid-state drive
Audio and video	<p>Audio:</p> <p>Integrated dual Bang & Olufsen speakers</p> <p>Support for HP Audio Boost 2.0</p> <p>Camera: Integrated HP HD 720p fixed infrared camera</p> <p>Microphones: Dual-array microphone</p>
External media card	HP MultiFormat digital media card reader
Internal card expansion	<p>One M.2 slot for solid-state drive</p> <p>One M.2 slot for WLAN module</p>
Keyboard/pointing device	<p>Island-style, backlit keyboard with three-coat nightfall black paint and natural silver finish with numeric keypad</p> <p>Clickpad with Image Sensor</p>
Optical drive	HP external DVD±RW DL SuperMulti Drive
Ports	<ul style="list-style-type: none"> AC Smart Pin adapter plug Audio-out (headphone)/audio-in (microphone) combo jack High-definition multimedia interface (HDMI) v2.0+HDCP v2.2 port USB 3.1 Type-A Gen. (2) USB 3.1 Type-C Gen.
Power requirements	<p>Support for a 4-cell, 55.67-Wh, 3.6-Ah, Li-Ion battery</p> <p>Support for a 65-watt AC adapter (non-PFC, slim, black barrel, 4.5-mm, straight) and a 65-watt, HP Smart AC adapter (non-PFC, EM, barrel, 4.5-mm)</p> <p>Support for a 1.00-m, Prime, Sticker power cord with a C5 connector in seven countries and regions</p>
Sensors	<ul style="list-style-type: none"> Accelerometer Accelerometer+Magnetometer/Gyroscope/E-compass Sensor hub
Security	<p>Fingerprint reader</p> <p>Trusted Platform Module (TPM) 2.0 firmware</p>
Wireless	<p>Wireless local area network (WLAN) options:</p> <p>WLAN module integrated onto the system board</p> <p>Dual PCIe WLAN antennas built into display assembly</p> <p>Support for the following WLAN modules:</p> <p>Intel WiFi 6 AX201 ax 2×2+Bluetooth 5.0 MU-MIMOM.21216 non-vPro 160-MHz MIPI+BRI WW WLAN module with two antennas</p> <p>Intel 9560 ac 2×2 MU-MIMO+Bluetooth 5.0 M.2 non-vPro MIPI+BRI WW WLAN module with two antennas</p>
Operating system	<ul style="list-style-type: none"> Windows 10 Home 64-bit Windows 10 Home 64-bit Advanced

Table 1-1 Product components and descriptions (continued)

Category	Description
	<ul style="list-style-type: none"><li data-bbox="501 264 1002 285">• Windows 10 Home 64-bit Advanced Single Language<li data-bbox="501 310 1038 331">• Windows 10 Home 64-bit High-End Chinese Market CPPP<li data-bbox="501 357 810 378">• Windows 10 Home 64-bit Plus<li data-bbox="501 403 956 424">• Windows 10 Home 64-bit Plus Single Language<li data-bbox="501 449 1114 470">• Windows 10 Home 64-bit Plus Single Language Africa Market PPP<li data-bbox="501 495 916 516">• Windows 10 Home 64-bit Single Language<li data-bbox="501 541 826 562">• Windows 10 Professional 64-bit

2 External component identification

Right side

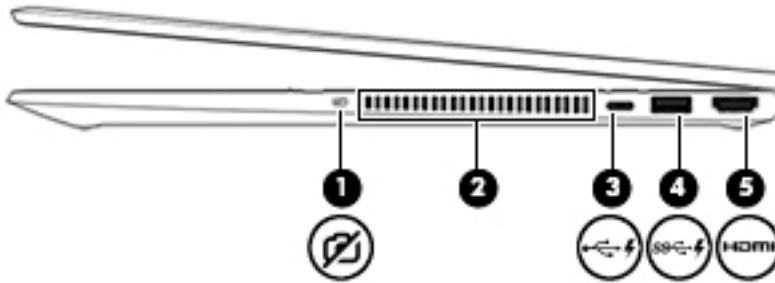

 
 



Table 2-1 Right-side components and descriptions

Component	Description
(1)  Camera privacy switch	Turns the camera off and on.
(2) Vent (select products only)	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)  USB Type-C port with HP Sleep and Charge	Connects a USB device that has a Type-C connector, provides data transfer, and even when the computer is off, charges most products such as a cell phone, camera, activity tracker, or smartwatch. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output. NOTE: Cables and/or adapters (purchased separately) may be required.
(4)  USB SuperSpeed port with HP Sleep and Charge	Connects a USB device, provides high-speed data transfer, and even when the computer is off, charges most products such as a cell phone, camera, activity tracker, or smartwatch.
(5)  HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.

Left side

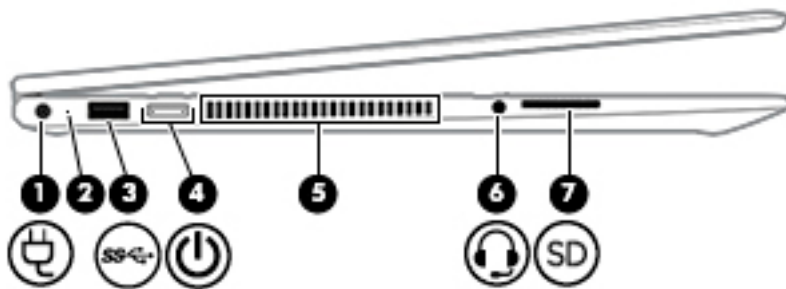


Table 2-2 Left-side components and descriptions







Component	Description
(1) 	<p>Power connector</p> <p>Connects an AC adapter.</p>
(2) 	<p>AC adapter and battery light</p> <ul style="list-style-type: none"> White: The AC adapter is connected and the battery is fully charged. Blinking white: The AC adapter is disconnected and the battery has reached a low battery level. Amber: The AC adapter is connected and the battery is charging. Off: The battery is not charging.
(3) 	<p>USB SuperSpeed port</p> <p>Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.</p>
(4) 	<p>Power button and power light</p> <p>Power button:</p> <ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options:</p> <ul style="list-style-type: none"> ▲ Right-click the Power icon, and then select Power Options. <p>Power light:</p> <ul style="list-style-type: none"> Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.

Table 2-2 Left-side components and descriptions (continued)

Component	Description
(5) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(6)  Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none">▲ Select the Start button, select HP Help and Support, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.
(7)  Memory card reader	Reads optional memory cards that enable you to store, manage, share, or access information. To insert a card: <ol style="list-style-type: none">1. Hold the card label-side up, with connectors facing the computer.2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. To remove a card: <ul style="list-style-type: none">▲ Press in on the card, and then remove it from the memory card reader.

Display

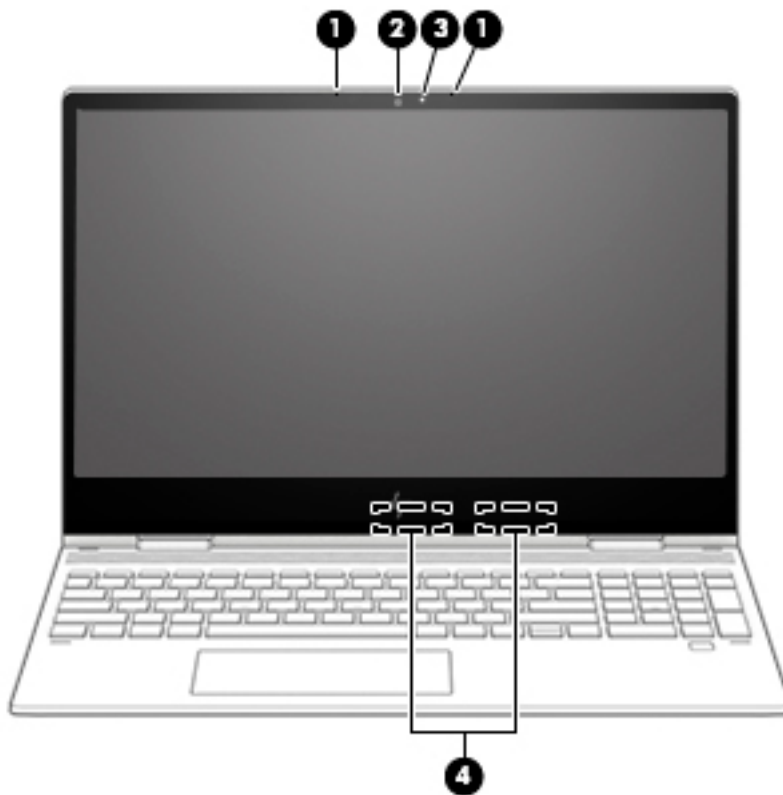


Table 2-3 Display components and descriptions

Component	Description
(1) Internal microphones (2)	Record sound.
(2) Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(3) Camera light	On: The camera is in use.
(4) WLAN antennas*	Send and receive wireless signals to communicate with WLANs.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

- ▲ Select the **Start** button, select **HP Help and Support**, and then select **HP Documentation**.

Keyboard area

TouchPad

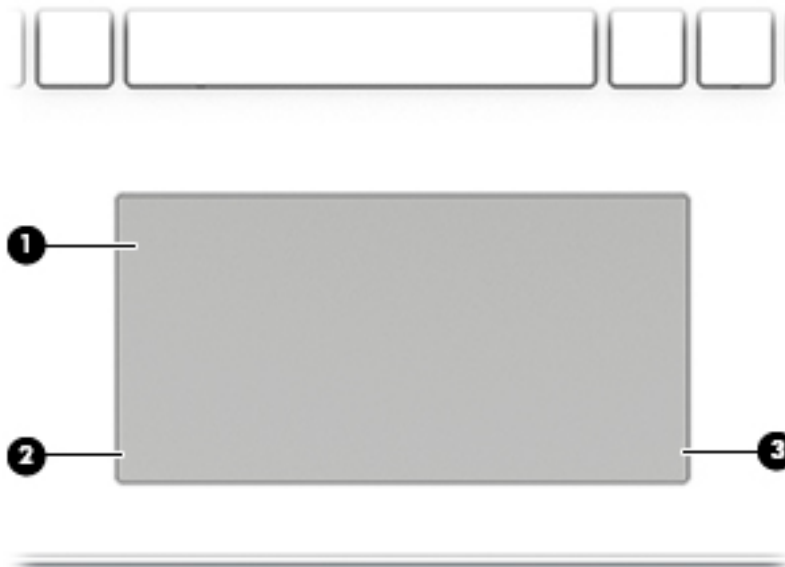


Table 2-4 TouchPad components and descriptions

Component	Description
(1) TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2) Left TouchPad button	Functions like the left button on an external mouse.
(3) Right TouchPad button	Functions like the right button on an external mouse.

Lights

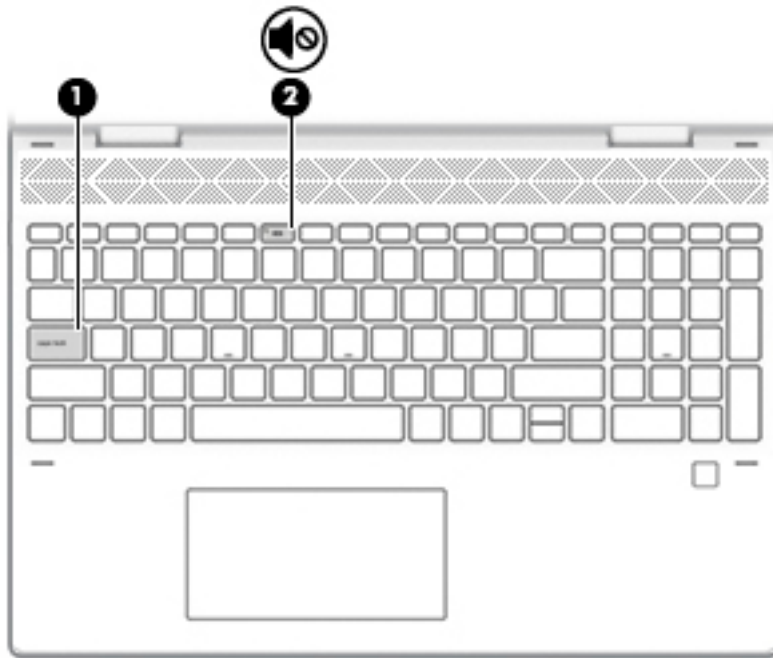



Table 2-5 Light components and descriptions

Component	Description
(1) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)  Mute light	On: Computer sound is off. Off: Computer sound is on.

Speakers and fingerprint reader

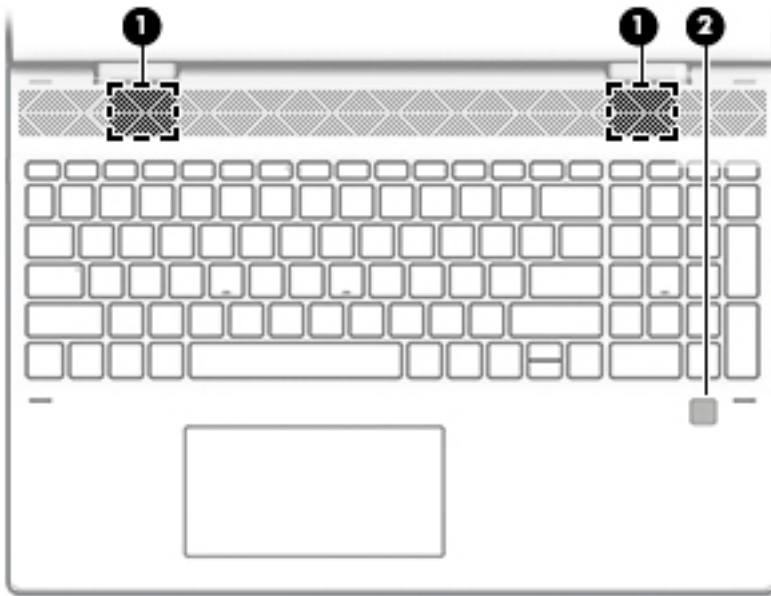


Table 2-6 Speaker and fingerprint reader components and descriptions

Component		Description
(1)	Speakers (2)	Produce sound.
(2)	Fingerprint reader	Allows a fingerprint logon to Windows, instead of a password logon. <ul style="list-style-type: none">▲ To use the fingerprint reader, place your finger on the fingerprint reader until it reads your fingerprint.

Special keys

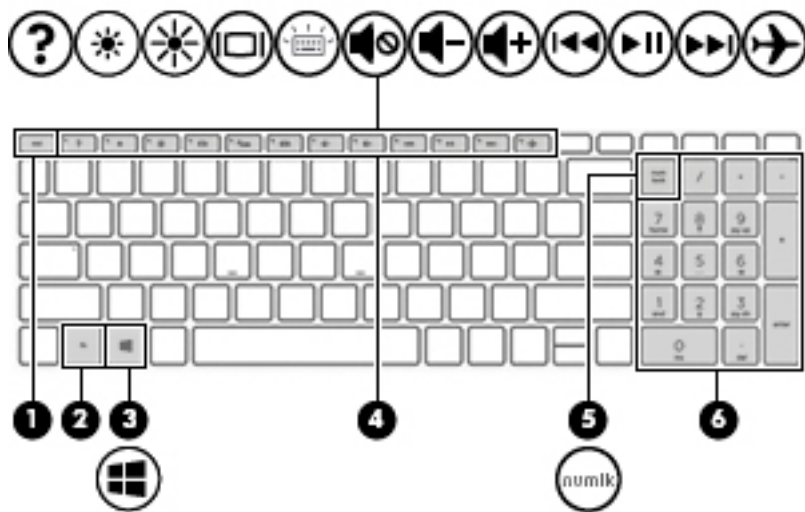



Table 2-7 Special key components and descriptions

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with another key. Such key combinations are called <i>hot keys</i> .
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions.
(5) <code>num lock</code> key	Alternates between the navigational and numeric functions on the integrated numeric keypad.
(6) Integrated numeric keyboard	A separate keypad to the right of the alphabet keyboard. When <code>num lock</code> is pressed, the keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.

Bottom

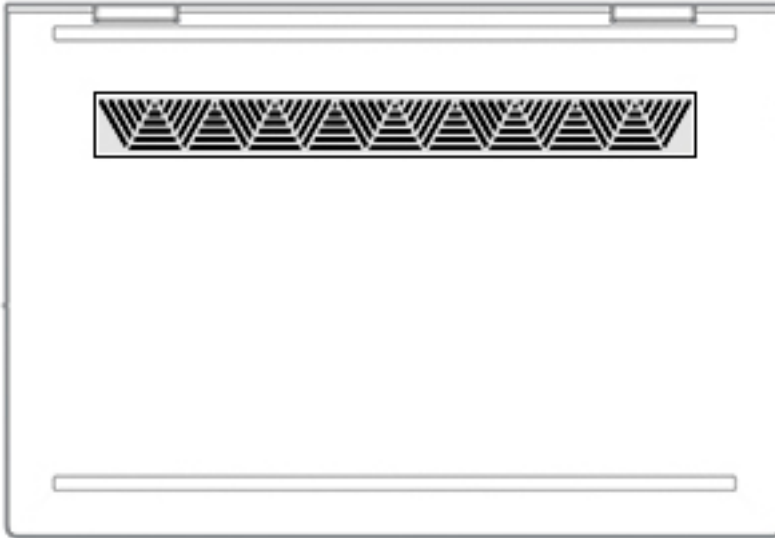


Table 2-8 Bottom component and description

Component	Description
Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that may be needed when troubleshooting system problems or traveling internationally with the computer. Labels may be in paper form or imprinted on the product.

- Service label—Provides important information to identify the computer. When contacting support, the serial number, the product number, or the model number may be requested. Locate this information before contacting support.

The service label will resemble the example shown below:

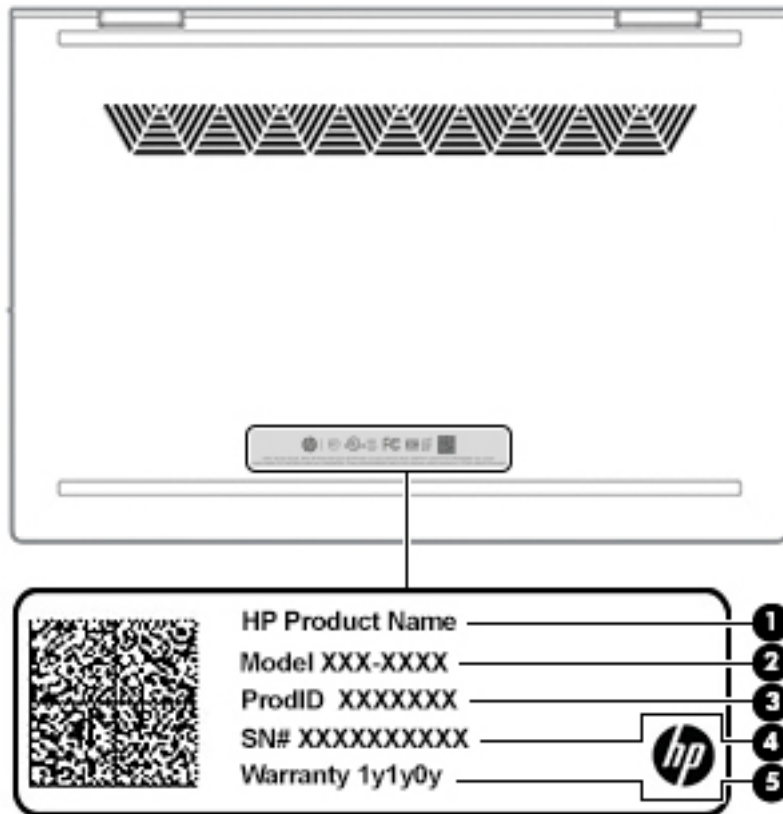



Table 2-9 Service label components and descriptions

Item	Component
(1)	Product name
(2)	Model number
(3)	Product identification
(4)	Serial number
(5)	Warranty period

3 Illustrated parts catalog

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Computer components

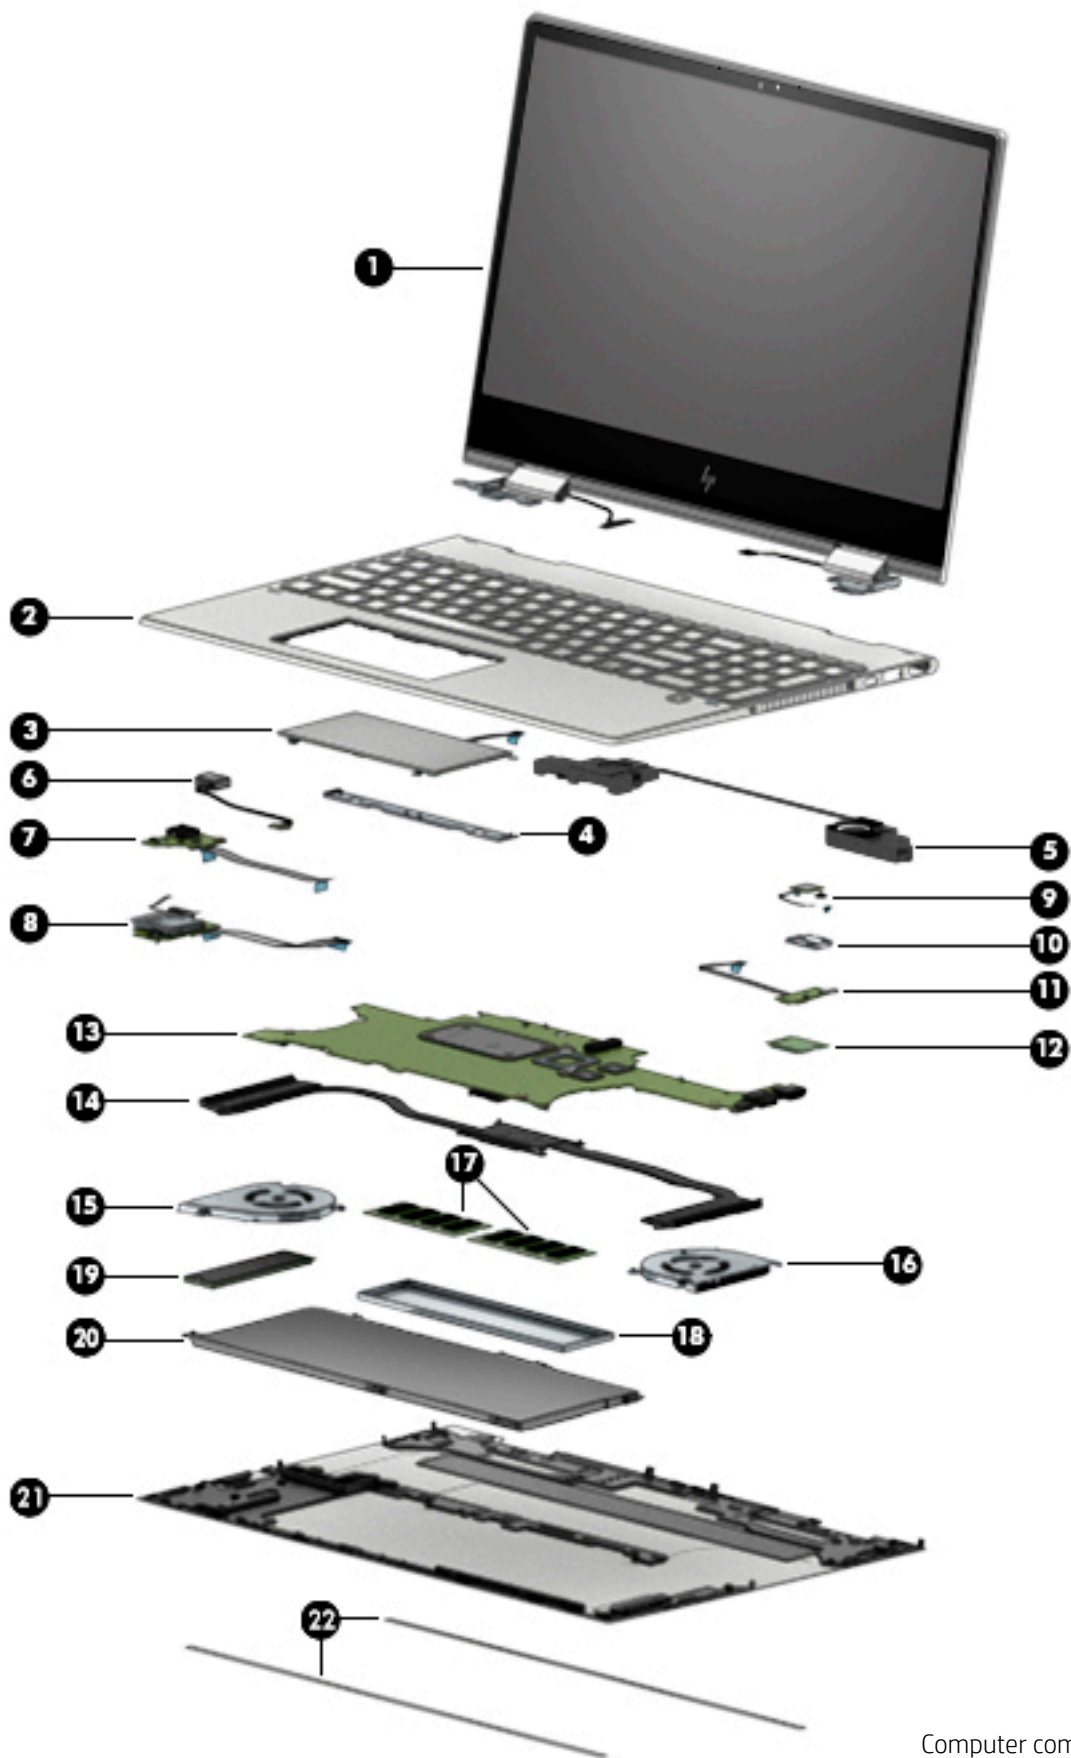


Table 3-1 Computer components information and spare part numbers

Item	Component	Spare part number
(1)	15.6-in. display assembly:	
	15.6-in., FHD, AntiGlare, 220 nits, TouchScreen display assembly in natural silver finish	L53545-001
	15.6-in., FHD, AntiGlare, 300 nits, TouchScreen display assembly in natural silver finish	L53546-001
	15.6-in., FHD, AntiGlare, TouchScreen display assembly with privacy in natural silver finish	L53547-001
	15.6-in., UHD, Brightview, TouchScreen display assembly in natural silver finish	L53548-001
	15.6-in., FHD, AntiGlare, 220 nits, TouchScreen display assembly in night fall black finish	L53549-001
	15.6-in., FHD, AntiGlare, 300 nits, TouchScreen display assembly in night fall black finish	L53550-001
	15.6-in., FHD, AntiGlare, TouchScreen display assembly with privacy in night fall black finish	L53551-001
	15.6-in., UHD, Brightview, TouchScreen display assembly in night fall black finish	L53552-001
(2)	Keyboard/top cover (includes keyboard cable):	
	In natural silver finish with privacy filter (for use only on computer models equipped with a graphics subsystem with discrete memory):	
	For use in Belgium	L53814-A41
	For use in Canada	L53814-DB1
	For use in the Czech Republic and Slovakia	L53814-FL1
	For use in Denmark, Finland, and Norway	L53814-DH1
	For use in France	L53814-051
	For use in Germany	L53814-041
	For use in Hungary	L53814-211
	For use in Italy	L53814-061
	For use in Latin America	L53814-161
	For use in the Netherlands	L53814-B31
	For use in Portugal	L53814-131
	For use in Russia	L53814-251
	For use in Saudi Arabia	L53814-171
	For use in South Korea	L53814-AD1
	For use in Spain	L53814-071
	For use in Switzerland	L53814-BG1
	For use in Taiwan	L53814-AB1
	For use in Turkey	L53814-141
	For use in the United Kingdom	L53814-031
	For use in the United States	L53814-001
	In natural silver finish without privacy filter (for use only on computer models equipped with a graphics subsystem with discrete memory):	

Table 3-1 Computer components information and spare part numbers (continued)

Item	Component	Spare part number
	For use in Belgium	L53815-A41
	For use in Canada	L53815-DB1
	For use in the Czech Republic and Slovenia	L53815-FL1
	For use in Denmark, Finland, and Norway	L53815-DH1
	For use in France	L53815-051
	For use in Germany	L53815-041
	For use in Hungary	L53815-211
	For use in Italy	L53815-061
	For use in the Latin America	L53815-161
	For use in the Netherlands	L53815-B31
	For use in Portugal	L53815-131
	For use in Russia	L53815-251
	For use in Saudi Arabia	L53815-171
	For use in South Korea	L53815-AD1
	For use in Spain	L53815-071
	For use in Switzerland	L53815-BG1
	For use in Taiwan	L53815-AB1
	For use in Turkey	L53815-141
	For use in the United Kingdom	L53815-031
	For use in the United States	L53815-001
	In natural silver finish with privacy filter (for use only on computer models equipped with a graphics subsystem with UMA memory):	
	For use in Belgium	L56974-A41
	For use in Canada	L56974-DB1
	For use in the Czech Republic and Slovakia	L56974-FL1
	For use in Denmark, Finland, and Norway	L56974-DH1
	For use in France	L56974-051
	For use in Germany	L56974-041
	For use in Hungary	L56974-211
	For use in Italy	L56974-061
	For use in Latin America	L56974-161
	For use in the Netherlands	L56974-B31
	For use in Portugal	L56974-131
	For use in Russia	L56974-251

Table 3-1 Computer components information and spare part numbers (continued)

Item	Component	Spare part number
	For use in Saudi Arabia	L56974-171
	For use in South Korea	L56974-AD1
	For use in Spain	L56974-071
	For use in Switzerland	L56974-BG1
	For use in Taiwan	L56974-AB1
	For use in Turkey	L56974-141
	For use in the United Kingdom	L56974-031
	For use in the United States	L56974-001
	In natural silver finish without privacy filter (for use only on computer models equipped with a graphics subsystem with UMA memory):	
	For use in Belgium	L56975-A41
	For use in Canada	L56975-DB1
	For use in the Czech Republic and Slovenia	L56975-FL1
	For use in Denmark, Finland, and Norway	L56975-DH1
	For use in France	L56975-051
	For use in Germany	L56975-041
	For use in Hungary	L56975-211
	For use in Italy	L56975-061
	For use in the Latin America	L56975-161
	For use in the Netherlands	L56975-B31
	For use in Portugal	L56975-131
	For use in Russia	L56975-251
	For use in Saudi Arabia	L56975-171
	For use in South Korea	L56975-AD1
	For use in Spain	L56975-071
	For use in Switzerland	L56975-BG1
	For use in Taiwan	L56975-AB1
	For use in Turkey	L56975-141
	For use in the United Kingdom	L56975-031
	For use in the United States	L56975-001
(3)	TouchPad (includes TouchPad bracket and rubber padding; does not include cable):	L53699-001
	TouchPad cable (not illustrated)	L53534-001
(4)	TouchPad bracket (included in the TouchPad spare part kit)	
(5)	Speakers (include left and right speakers, cables, and rubber isolators)	L53561-001

Table 3-1 Computer components information and spare part numbers (continued)

Item	Component	Spare part number
(6)	Power connector cable	L53538-001
(7)	Power button board (does not include cable)	L53869-001
	Power button board actuator (not illustrated)	L53557-001
	Power button board cable (not illustrated)	L53533-001
	In natural silver finish	L53556-001
	In night fall black finish	L53557-001
(8)	Card reader board (does not include cable)	L53553-001
	Card reader board cable (not illustrated)	L53535-001
(9)	Fingerprint reader module (includes bracket, does not include cable):	
	In natural silver finish	L52651-001
	In natural silver finish with wood grain	L52652-001
	In night fall black finish with wood grain	L53480-001
	Fingerprint reader module cable (not illustrated)	L53536-001
(10)	Fingerprint reader module bracket (included in the fingerprint reader module spare part kit)	
(11)	Switch board (does not include cable)	L53870-001
	Switch board cable (not illustrated)	L53537-001
(12)	Realtek RTL8822BE ac 2×2 MU-MIMO+Bluetooth 4.2 M.2 PCIe WW WLAN module with 2 antennas	L51005-005
(13)	System board (includes processor and replacement thermal material):	
	i7-8565U Win quad core processor, UMA	L53568-601
	i5-8265U Win quad core processor, UMA	L53569-601
	i7-8565U Win quad core processor, DSC, 4-GB MX250	L53570-601
	i5-8265U Win quad core processor, DSC, 4-GB MX250	L53571-601
	i5-8265U Win quad core processor, DSC, 4-GB MX250	L63885-601
	i7-xxxxU Win quad core processor, UMA, 4-GB MX250	L63886-601
	i5-xxxxU Win quad core processor, DSC, 4-GB MX250	L63887-601
	i7-xxxxU Win quad core processor, DSC, 4-GB MX250	L63888-601
(14)	Heat sink (includes replacement thermal material):	
	For use only on computer models equipped with a graphics subsystem with discrete memory	L53539-001
	For use only on computer models equipped with a graphics subsystem with UMA memory	L53542-001
(15a)	Fan Kit:	
	For use only on computer models equipped with a graphics subsystem with discrete memory (includes processor fan and VGA fan)	L53541-001
	For use only on computer models equipped with a graphics subsystem with UMA memory (includes processor fan and VGA fan dummy)	L53542-001

Table 3-1 Computer components information and spare part numbers (continued)

Item	Component	Spare part number
(15b)	VGA fan dummy (included in Fan Kit for use only on computer models equipped with a graphics subsystem with UMA memory, spare part number L53542-001)	
(16)	Memory modules:	
	(8-GB, DDR4, 2666 MHz, 1.2 V)	937236-855
	(4-GB, DDR4, 2666 MHz, 1.2 V)	L10598-855
(17)	Memory module shield	L51104-001
(18)	Solid-state drive:	
	1-TB, PCIe, NVMe solid-state drive with TLC	L53562-001
	512-GB, PCIe, NVMe solid-state drive with TLC	L53563-001
	256-GB, PCIe, NVMe solid-state drive with TLC	L53564-001
	256-GB, PCIe, NVMe solid-state drive	L53565-001
	512-GB, PCIe, NVMe solid-state drive	L53566-001
	512-GB, PCIe, NVMe +32-GB solid-state drive with X point	L53567-001
	Solid-state drive shield (not illustrated)	L53543-001
(19)	Battery (4-cell, 55 WHr, 3.6-Ah, Li-Ion)	L43267-005
(20)	Bottom cover (includes front and rear rubber foot strips):	
	For use only on computer models in natural silver finish equipped with a graphics subsystem with UMA memory	L53530-001
	For use only on computer models in night fall black finish equipped with a graphics subsystem with UMA memory	L53529-001
	For use only on computer models in night fall black finish equipped with a graphics subsystem with discrete memory	L53531-001
	For use only on computer models in natural silver finish equipped with a graphics subsystem with discrete memory	L53532-001
	Rubber Kit (not illustrated, includes front and rear rubber foot strips):	
	In natural silver finish	L53558-001
	In night fall black finish	L53559-001

Miscellaneous parts

Table 3-2 Miscellaneous components information and spare part numbers

Component	Spare part number
65-W AC adapter (non-PFC, slim, 4.5-mm, 1.8-m)	L24008-001
Duck head adapter for use in Japan	L33157-001
Adapter:	
HP USB-to-Gigabit RJ45 adapter	829941-001

Table 3-2 Miscellaneous components information and spare part numbers (continued)

Component	Spare part number
HP USB-C-to-HDMI 2.0 adapter	935325-001
HP USB-C-to-MultiPort hub	919666-001
HP USB-C-to-RJ45 adapter	855560-001
HP USB-C-to-USB-A dongle	833960-001
HP USB-C-to-USB-A hub	916838-001
HP USB-C-to-VGA adapter	831751-001
Impreza USB-C-to-A adapter	L12232-001
HP external DVD±RW DL SuperMulti Drive	747080-001
Pen:	
Impreza	929863-002
Sunwoda	920241-001
Pen tip:	
Impreza	L04536-001
Sunwoda	L04536-002
Power cord (C5 connector, 1.00-m, Prime, Sticker):	
For use in Australia	L22327-001
For use in Denmark	L22322-001
For use in Europe	L22321-001
For use in Japan	L22330-001
For use in North America	L22319-001
For use in Switzerland	L22324-001
For use in the United Kingdom	L22320-001
Screw Kit	L53871-001

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers
- Torx T5 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic.

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the tablet when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

Table 4-1 Typical electrostatic voltage levels

Event	Typical electrostatic voltage levels		
	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials


The following table lists the shielding protection provided by antistatic bags and floor mats.

Table 4-2 Shielding protection provided by antistatic bags and floor mats

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


5 Removal and replacement procedures


This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

CAUTION: This computer does not have user-replaceable parts. Only HP authorized service providers should perform the removal and replacement procedures described here. Accessing the internal part could damage the computer or void the warranty.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 13](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as 51 screws that must be removed, replaced, and/or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Bottom cover



NOTE: The bottom cover spare part kit includes magnets and shielding.

Table 5-1 Bottom cover description and spare part number information

Description	Spare part number
For use only on computer models in natural silver finish equipped with a graphics subsystem with UMA memory	L53530-001
For use only on computer models in night fall black finish equipped with a graphics subsystem with UMA memory	L53529-001
For use only on computer models in night fall black finish equipped with a graphics subsystem with discrete memory	L53531-001
For use only on computer models in natural silver finish equipped with a graphics subsystem with discrete memory	L53532-001


Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.


Remove the bottom cover:

1. Turn the computer upside down with the front toward you.
2. Remove the two rubber foot strips **(1)**.
The rubber foot strips are available in the Rubber Foot Kits, spare part numbers L53558-001 (in natural silver finish) and L53559-001 (in night fall black finish).
3. Remove the seven Phillips M2.5×6.6 screws **(2)** that secure the bottom cover to the computer.

4. Remove the Torx5 M2.0×4.3 screw (3) that secures the bottom cover to the computer.

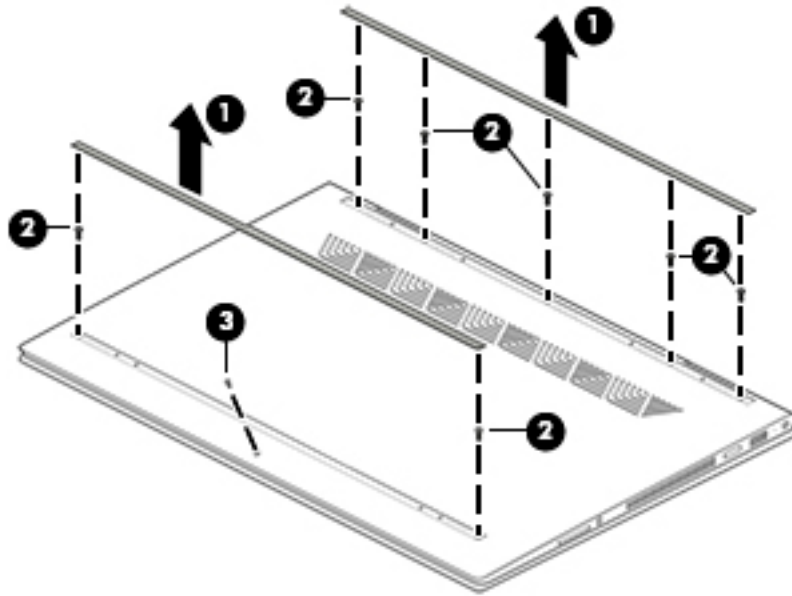

5. Use a case utility tool (1) or similar thin plastic tool to separate the rear edge of the bottom cover from the keyboard/top cover.
6. Remove the bottom cover (2).

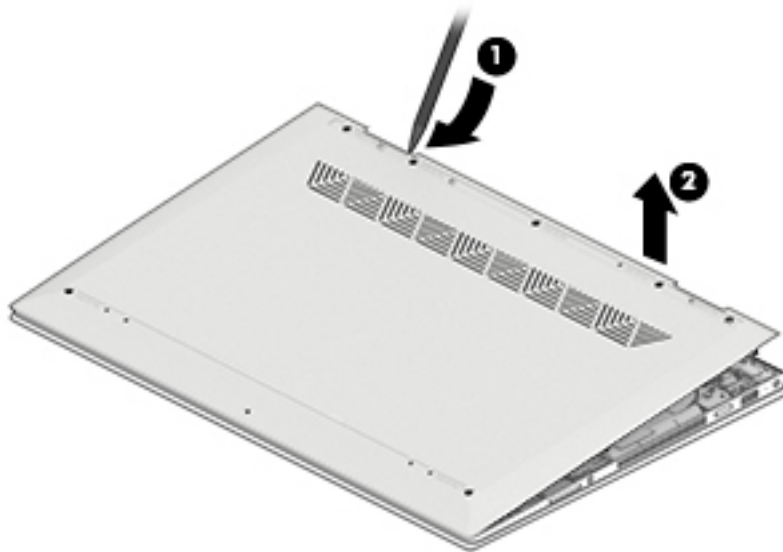

Reverse this procedure to install the bottom cover.

Battery

Table 5-2 Battery description and spare part number information


Description	Spare part number
4-cell, 55-Wh, 3.6-Ah, Li-Ion battery	L43267-005

Before removing the battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).

Remove the battery:

1. Remove the six Phillips M2.0×2.9 screws (1) that secure the battery to the keyboard/top cover.
2. Lift the rear edge of the battery (2) and remove it.

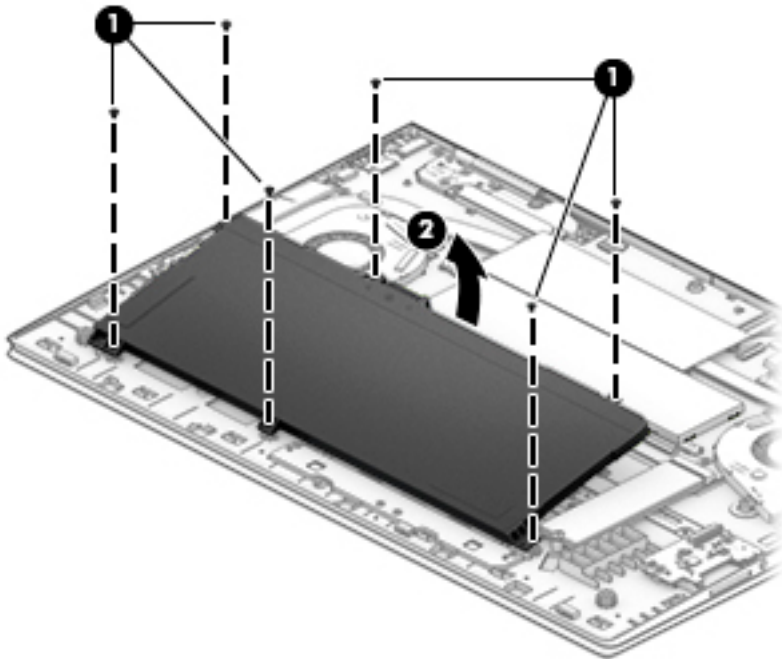

Reverse this procedure to install the battery.

Solid-state drive

Table 5-3 Solid-state drive description and spare part number information

Description	Spare part number
1-TB, PCIe, NVMe solid-state drive with TLC	L53562-001
512-GB, PCIe, NVMe, solid-state drive with TLC	L53563-001
512-GB, PCIe, NVMe, solid-state drive	L53566-001
512-GB, PCIe, NVMe +32-GB solid-state drive with X point	L53567-001
256-GB, PCIe, NVMe, solid-state drive with TLC	L53564-001
256-GB, PCIe, NVMe, value solid-state drive	L53565-001
128-GB, M.2, SATA-3 solid-state drive with TLC	L53872-001
Solid-state drive shield	L53567-001


Before removing the solid-state drive, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the solid-state drive:

1. Remove the Phillips M2.0×3.8 screw **(1)** that secures the solid-state drive to the system board.

2. Remove the solid-state drive (2) by pulling it away from the connector.

 **NOTE:** Solid-state drives are designed with notches to prevent incorrect insertion.

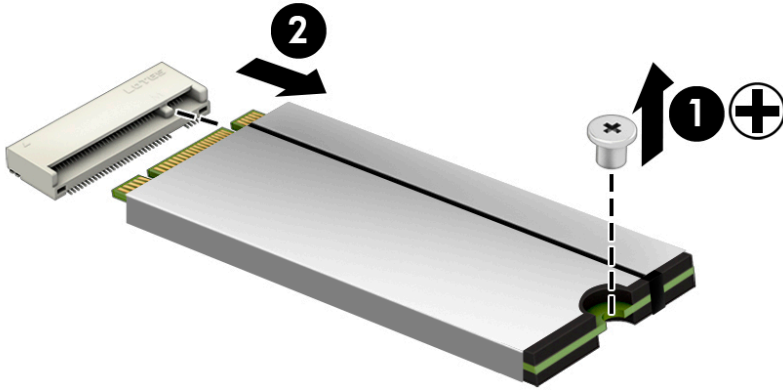

Reverse this procedure to install the solid-state drive.

Memory module

Table 5-4 Memory module description and spare part number information

Description	Spare part number
8-GB memory module (DDR4, 2666 MHz, 1.2 V)	937236-855
4-GB memory module (DDR4, 2666 MHz, 1.2 V)	L10598-855

Update BIOS before adding memory modules

Before adding new memory, make sure you update the computer to the latest BIOS.

⚠ CAUTION: Failure to update the computer to the latest BIOS prior to installing new memory may result in various system problems.

To update BIOS:

1. Navigate to www.hp.com.
2. Click **Support & Drivers**, and then click **Drivers & Software**.
3. In the **Enter a product name/number box**, type the computer model information, and then click **Search**.
4. Click the link for the computer model.
5. Select the operating system, and then click **Next**.
6. Under **Step 2: Select a Download**, click the **BIOS** link.
7. Click the link for the most recent BIOS.
8. Click the **Download** button, and then follow the on-screen instructions.

Before removing the memory module, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the memory module shield:

1. Detach the edges of the memory module shield from the retention clips **(1)** built into the system board, and then remove the memory module shield **(2)**.


The memory module shield is available using spare part number L51104-001.

⚠ WARNING! The memory module shield is constructed of metal and has sharp edges. Exercise care when handling the memory module shield to prevent injuries.

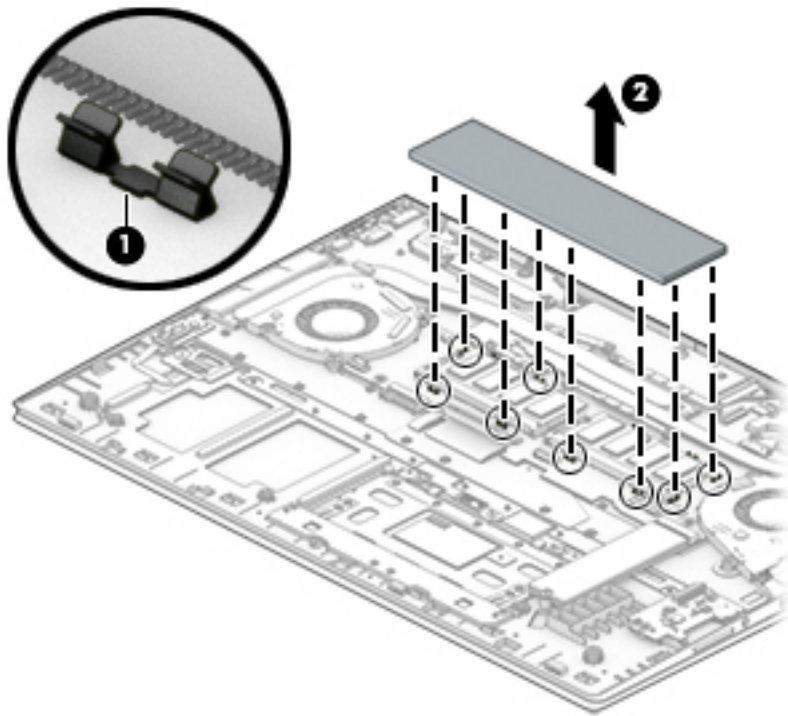

2. Spread the retaining tabs (1) on each side of the memory module slot to release the memory module. (The edge of the module opposite the slot rises away from the computer.)
3. Remove the memory module (2) by pulling the module away from the slot at an angle.

 **NOTE:** Memory modules are designed with a notch to prevent incorrect insertion.

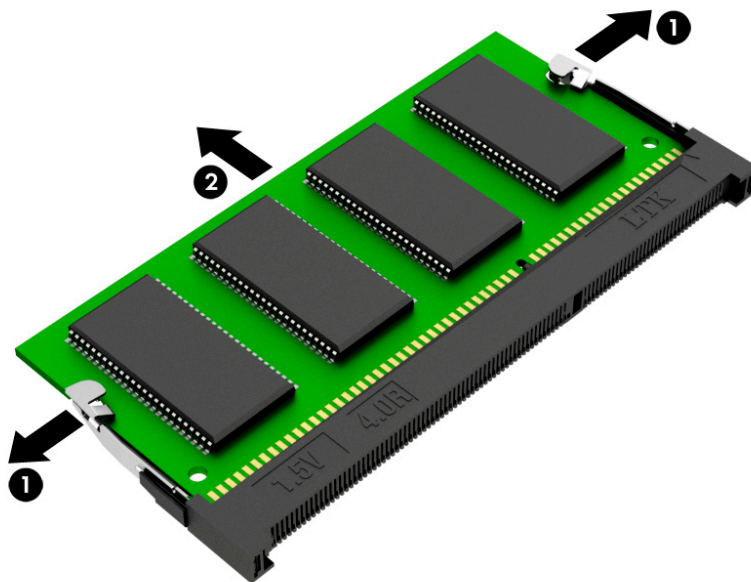

4. Remove the bottom cover (see [Bottom cover on page 28](#)).

Reverse this procedure to install the memory module shield and memory module.

TouchPad cable


 **NOTE:** The TouchPad cable is available using spare part number L53534-001.

Before removing the TouchPad cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the TouchPad cable:

1. Release the zero insertion force (ZIF) connector (1) to which TouchPad cable is connected, and then disconnect the TouchPad cable from the system board.
2. Release the ZIF connector (2) to which TouchPad cable is connected, and then disconnect the TouchPad cable from the TouchPad.
3. Remove the TouchPad cable (3).

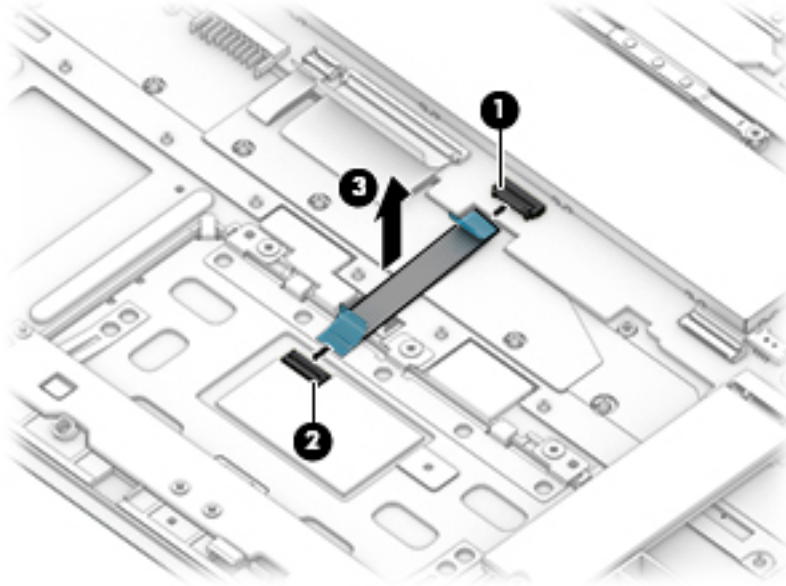

Reverse this procedure to install the TouchPad cable.

TouchPad

 **NOTE:** The TouchPad spare part kit does not include the TouchPad cable. The TouchPad cable is available using spare part number L53534-001.


 **NOTE:** The TouchPad spare part includes rubber padding.

Table 5-5 TouchPad description and spare part number information

Description	Spare part number
TouchPad (includes TouchPad bracket)	L53699-001


Before removing the TouchPad, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the TouchPad:

1. Release the ZIF connector **(1)** to which the TouchPad cable is connected, and then disconnect the TouchPad cable from the system board.
2. Remove the four Phillips M2.0×2.9 screws **(2)** that secure the TouchPad and bracket to the keyboard/top cover.
3. Remove the TouchPad bracket **(3)**.
4. Remove the three Phillips M2.0×2.3 broad head screws **(4)** that secure the TouchPad to the keyboard/top cover.

5. Remove the TouchPad (5).

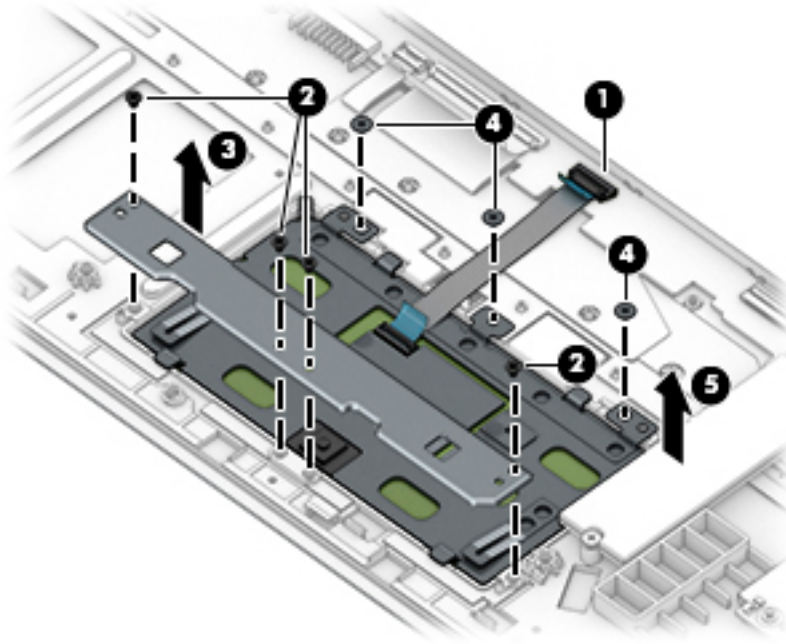

Reverse this procedure to install the TouchPad and cable.

Switch board cable


 **NOTE:** The switch board cable is available using spare part number L53537-001.

Before removing the switch board cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).


Remove the switch board cable:

1. Release the ZIF connector **(1)** to which switch board cable is connected, and then disconnect the switch board cable from the system board.
2. Release the ZIF connector **(2)** to which switch board cable is connected, and then disconnect the switch board cable from the switch board.
3. Remove the switch board cable **(3)**.

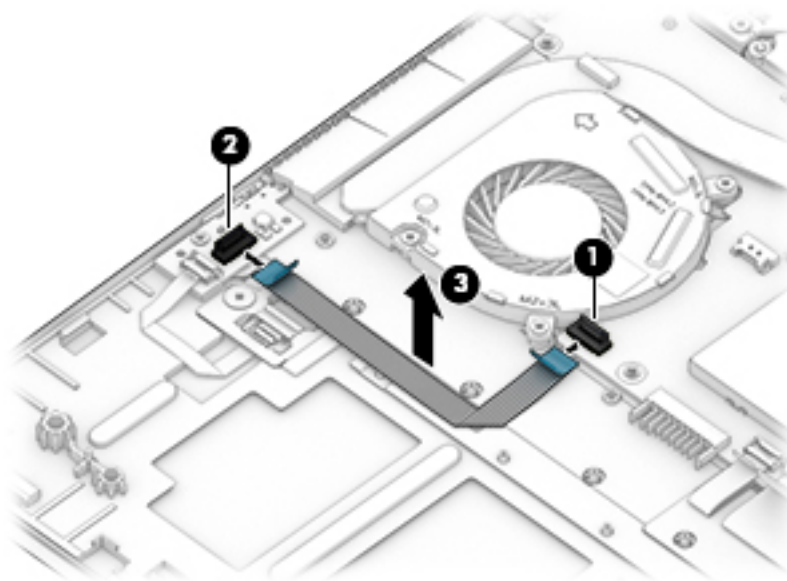

Reverse this procedure to install the switch board cable.

Switch board

 **NOTE:** The switch board spare part kit does not include the switch board cable. The switch board cable is available using spare part number L53537-001.

 **NOTE:** The switch board spare part includes rubber padding.

Table 5-6 Switch board description and spare part number information


Description	Spare part number
Switch board	L53870-001

Before removing the switch board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the switch board:

1. Release the ZIF connector (1) to which the switch board cable is connected, and then disconnect the switch board cable from the system board.
2. Release the ZIF connector (2) to which the fingerprint reader module cable is connected, and then disconnect the fingerprint reader module cable from the switch board.
3. Remove the Phillips M2.0×2.9 screw (3) that secures the switch board to the keyboard/top cover.
4. Remove the switch board (4).

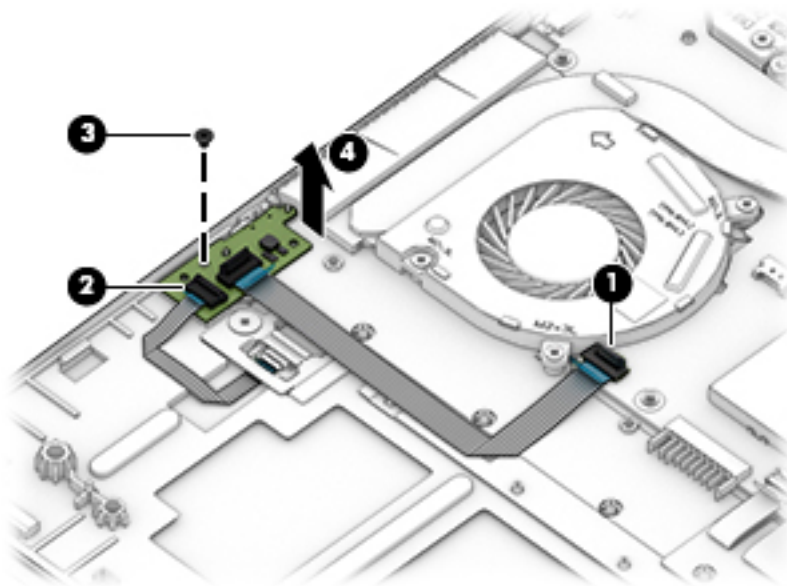

Reverse this procedure to install the switch board and cable.

Fingerprint reader module



NOTE: The fingerprint reader module spare part kit includes the bracket but does not include the fingerprint reader module cable. The fingerprint reader module cable is available using spare part number L53536-001.

Table 5-7 Fingerprint reader module description and spare part number information

Description	Spare part number
In natural silver finish	L52651-001
In natural silver finish with wood grain	L52652-001
In night fall black finish with wood grain	L53480-001


Before removing the fingerprint reader module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the fingerprint reader module:


1. Release the ZIF connector **(1)** to which the fingerprint reader module cable is connected, and then disconnect the fingerprint reader module cable from the switch board.
2. Remove the Phillips M2.0×2.3 broad head screw **(2)** that secures the fingerprint reader module and bracket to the keyboard/top cover.
3. Remove the fingerprint reader module bracket **(3)**.

4. Remove the fingerprint reader module (4) and cable.

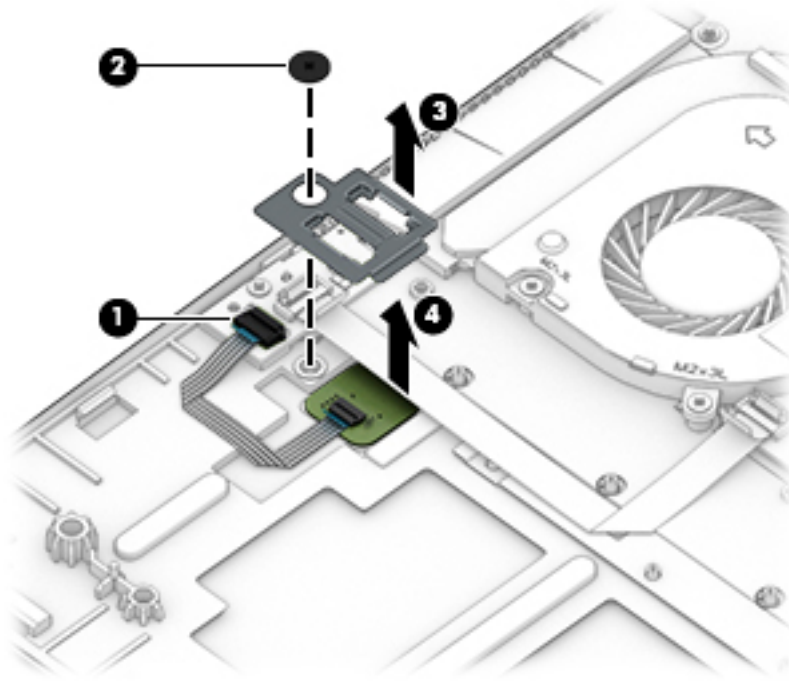

Reverse this procedure to install the fingerprint reader module.

Fingerprint reader module cable

 **NOTE:** The fingerprint reader module cable is available using spare part number L53536-001.


Before removing the fingerprint reader module cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the fingerprint reader module cable:

1. Release the zero insertion force connector (1) to which fingerprint reader module cable is connected, and then disconnect the fingerprint reader module cable from the fingerprint reader module.

2. Remove the fingerprint reader module cable (2).

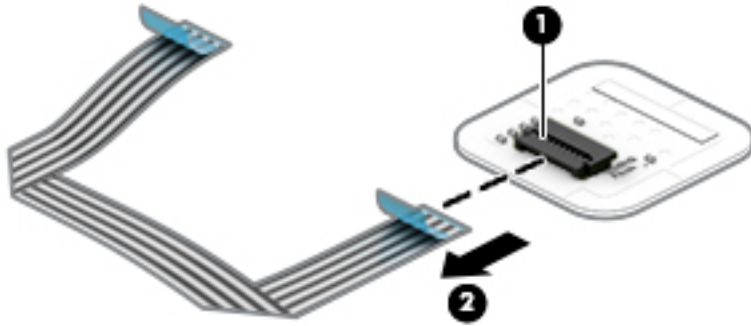

Reverse this procedure to install the fingerprint reader module cable.

Card reader board cable


 **NOTE:** The card reader board cable is available using spare part number L53535-001.

Before removing the card reader board cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the card reader board cable:

1. Release the ZIF connector (1) to which card reader board cable is connected, and then disconnect the card reader board cable from the system board.
2. Release the ZIF connector (2) to which card reader board cable is connected, and then disconnect the card reader board cable from the switch board.
3. Remove the card reader board cable (3).

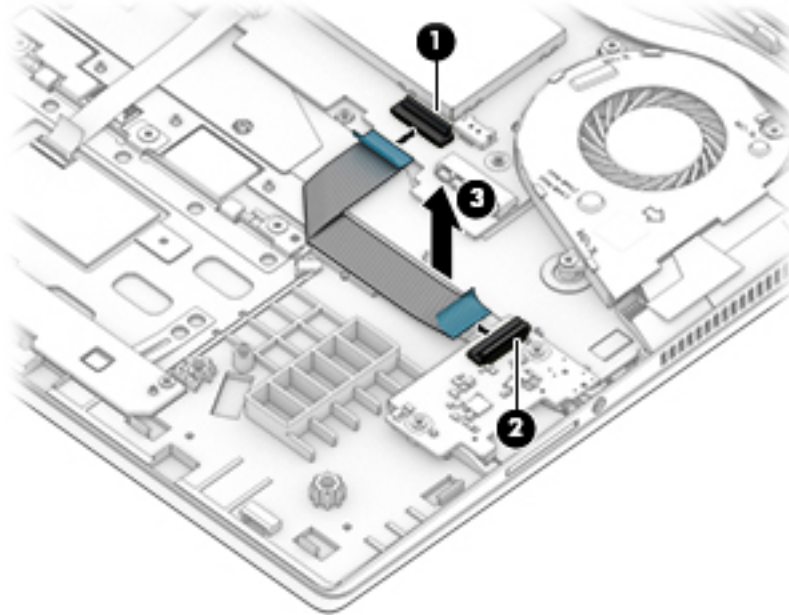

Reverse this procedure to install the card reader board cable.

Card reader board


 **NOTE:** The card reader board spare part kit does not include the card reader board cable. The switch board cable is available using spare part number L53535-001.

Table 5-8 Card reader board description and spare part number information


Description	Spare part number
Card reader board	L53553-001

Before removing the card reader board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the card reader board:

1. Release the ZIF connector (1) to which the card reader board cable is connected, and then disconnect the card reader board cable from the system board.
2. Remove the two Phillips M2.0×2.9 screws (2) that secure the card reader board to the keyboard/top cover.
3. Remove the card reader board (3).

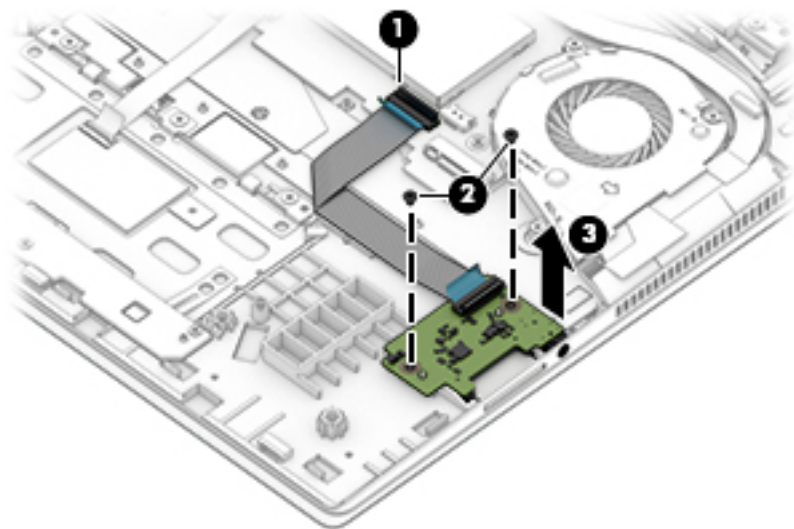

Reverse this procedure to install the card reader board and cable.

Fans

Table 5-9 Processor fan and video subsystem fan description and spare part number information


Description	Spare part number
Fan, CPU/VGA (includes cables)	L53541-001
Fan	L53541-001

Before removing the fan, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).
6. Remove the system board (see [System board on page 54](#)).


Remove the processor fan:

1. Disconnect the processor fan cable (1) from the system board.
2. Remove the three Phillips M2.0×3.2 screws (2) that secure the processor fan to the system board.
3. Release the processor fan (3) by lifting the right side until it clears the system board, and then rotating it (4) clockwise until it clears the heat sink.
4. Remove the fan (5).

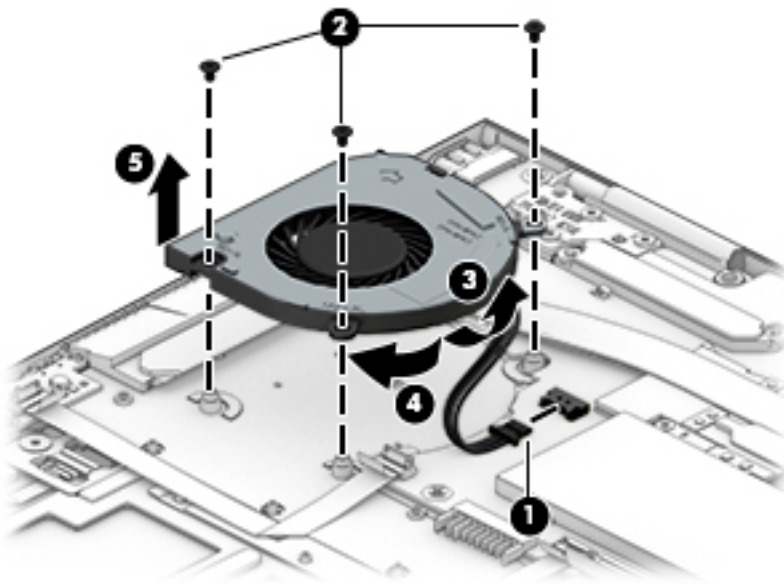


Remove the video subsystem fan:

1. Disconnect the video subsystem fan cable (1) from the system board.
2. Remove the three Phillips M2.0×3.2 screws (2) that secure the video subsystem fan to the system board.
3. Remove the video subsystem (3).

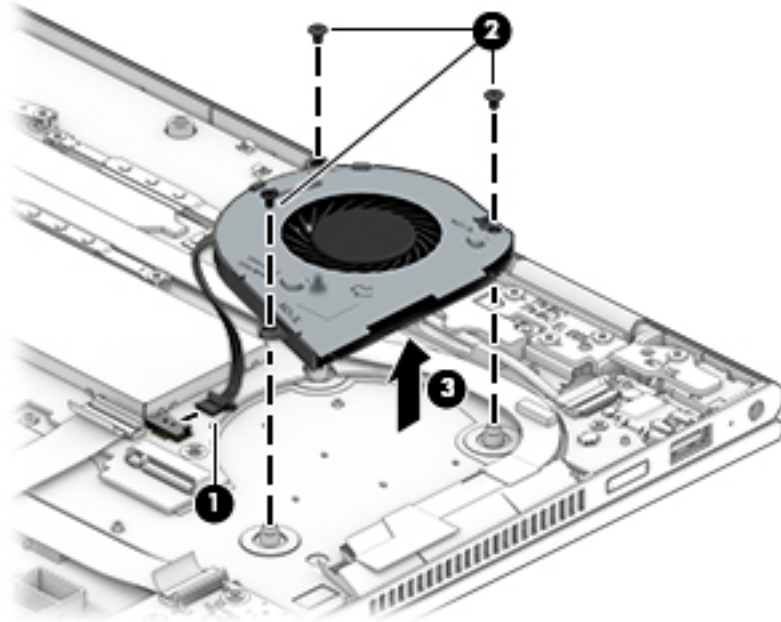

Reverse this procedure to install the video subsystem and processor fans.

Power button board cable


 **NOTE:** The power button board cable is available using spare part number L53533-001.

Before removing the power button board cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the power button board cable:

1. Release the ZIF connector **(1)** to which power button board cable is connected, and then disconnect the power button board cable from the system board.
2. Release the ZIF connector **(2)** to which power button board cable is connected, and then disconnect the power button board cable from the power button board.
3. Remove the power button board cable **(3)**.

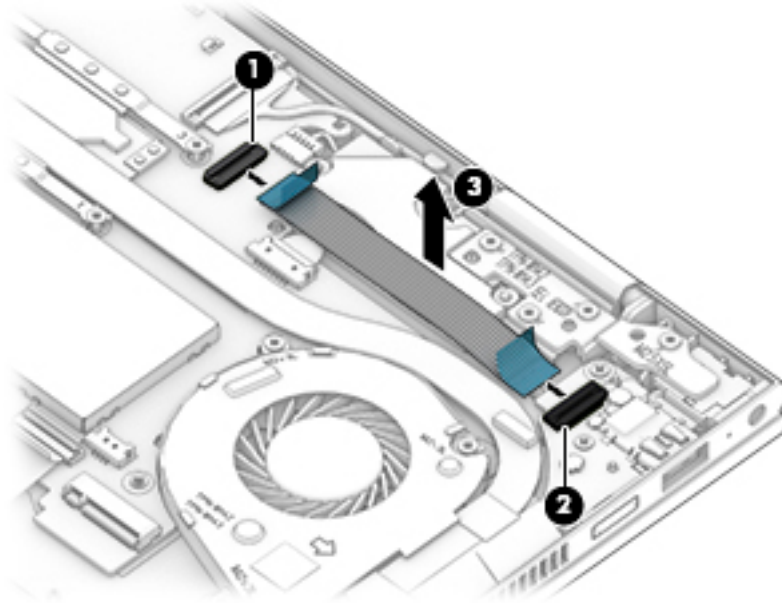

Reverse this procedure to install the power button board cable.

Power button board


 **NOTE:** The power button board spare part kit does not include the power button board cable. The power button board cable is available using spare part number L53533-001.

Table 5-10 Power button board description and spare part number information


Description	Spare part number
Power button board	L53869-001

Before removing the power button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the power button board:

1. Release the ZIF connector (1) to which the power button board cable is connected, and then disconnect the power button board cable from the system board.
2. Remove the two Phillips M2.0×2.9 screws (2) that secure the power button board to the keyboard/top cover.
3. Remove the power button board (3).

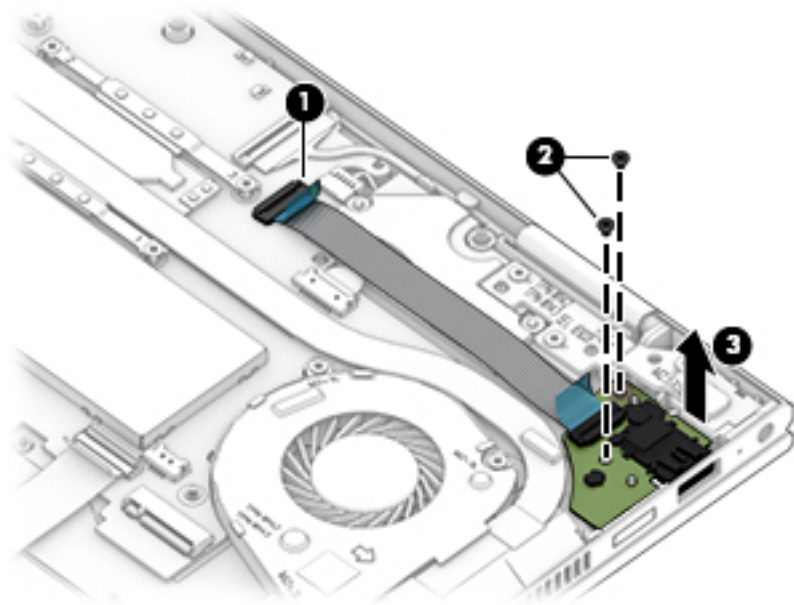

Reverse this procedure to install the power button board and cable.

Power connector cable

Table 5-11 Power connector cable description and spare part number information


Description	Spare part number
Power connector cable	L53538-001

Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).
6. Remove the power button board (see [Power button board on page 48](#)).


Remove the power connector cable:

1. Remove the four Phillips M2.5×6.6 screws (1) that secure the display left hinge to the keyboard/top cover.
2. Swing the display left hinge (2) up and back as far as it will go.

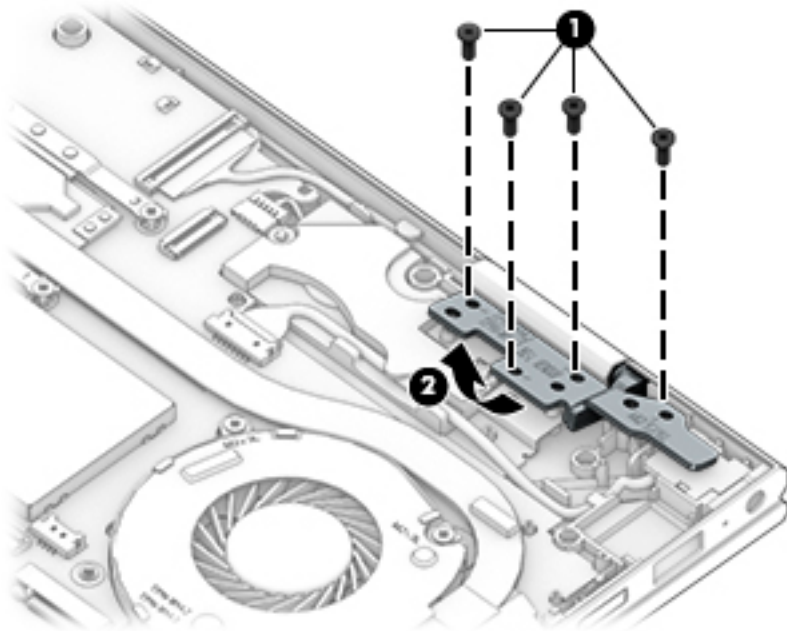

3. Disconnect the power connector cable (1) from the system board.
4. Release the power connector cable from the retention clips (2) and routing channel built into the keyboard/top cover.

5. Remove the power connector cable (3).

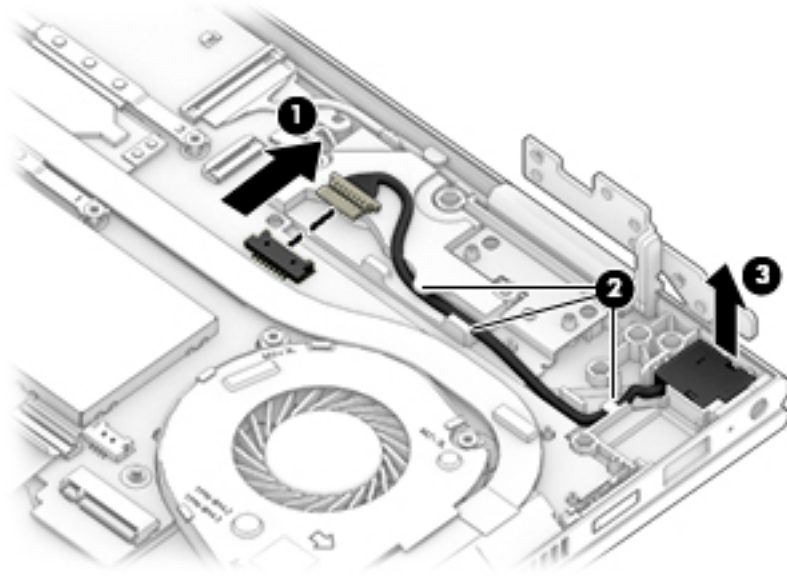

Reverse this procedure to install the power connector cable.

Display assembly

Table 5-12 Display assembly description and spare part number information

Description	Spare part number
15.6-in., FHD, AntiGlare, 220 nits, TouchScreen display assembly in natural silver finish	L53545-001
15.6-in., FHD, AntiGlare, 300 nits, TouchScreen display assembly in natural silver finish	L53546-001
15.6-in., FHD, AntiGlare, TouchScreen display assembly with privacy in natural silver finish	L53547-001
15.6-in., UHD, Brightview, TouchScreen display assembly in natural silver finish	L53548-001
15.6-in., FHD, AntiGlare, 220 nits, TouchScreen display assembly in night fall black finish	L53549-001
15.6-in., FHD, AntiGlare, 300 nits, TouchScreen display assembly in night fall black finish	L53550-001
15.6-in., FHD, AntiGlare, TouchScreen display assembly with privacy in night fall black finish	L53551-001
15.6-in., UHD, Brightview, TouchScreen display assembly in night fall black finish	L53552-001

Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)).
5. Remove the battery (see [Battery on page 30](#)).

Remove the display assembly:


1. Disconnect the WLAN antenna cables **(1)** from the WLAN module.




NOTE: The #1/white WLAN antenna cable connects to the WLAN module "#1/Main" terminal. The #2/black WLAN antenna cable connects to the WLAN module "#2/Aux" terminal.

2. Release the ZIF connector **(2)** to which the webcam/microphone module cable is connected, and then disconnect the webcam/microphone module cable from the system board.
3. Release the ZIF connector **(3)** to which the display panel cable is connected, and then disconnect the display panel cable from the system board.

4. Release the webcam/microphone module cable and display panel cable from the retention clips (4) and routing channel built into the keyboard/top cover.

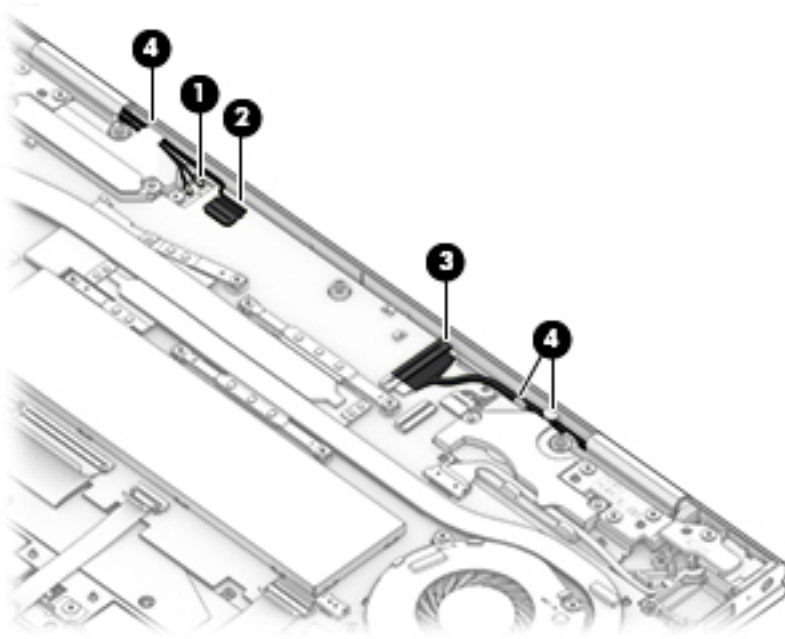


5. Remove the seven Phillips M2.5×6.6 screws that secure the display assembly to the keyboard/top cover.

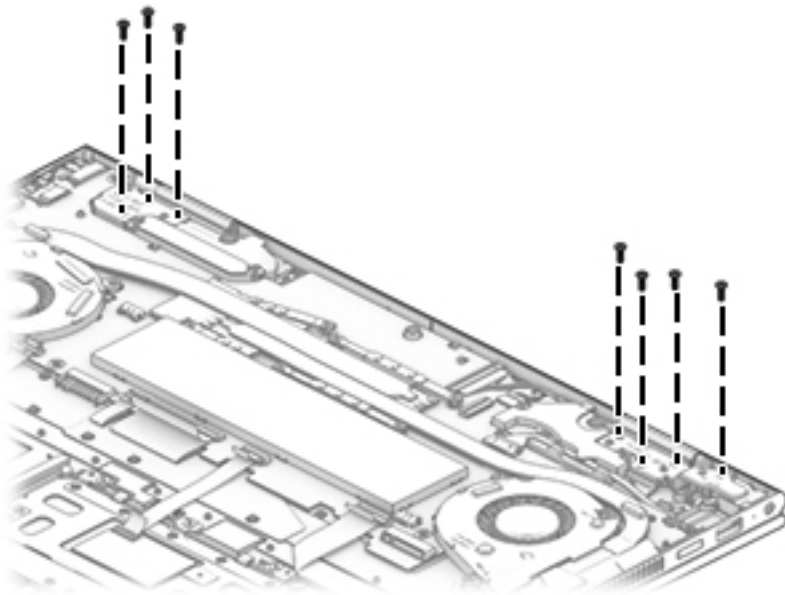

6. Swing the keyboard/top cover (1) up and away from the display assembly.

7. Lift the display assembly (2) up and away from the keyboard/top cover and remove the display assembly.

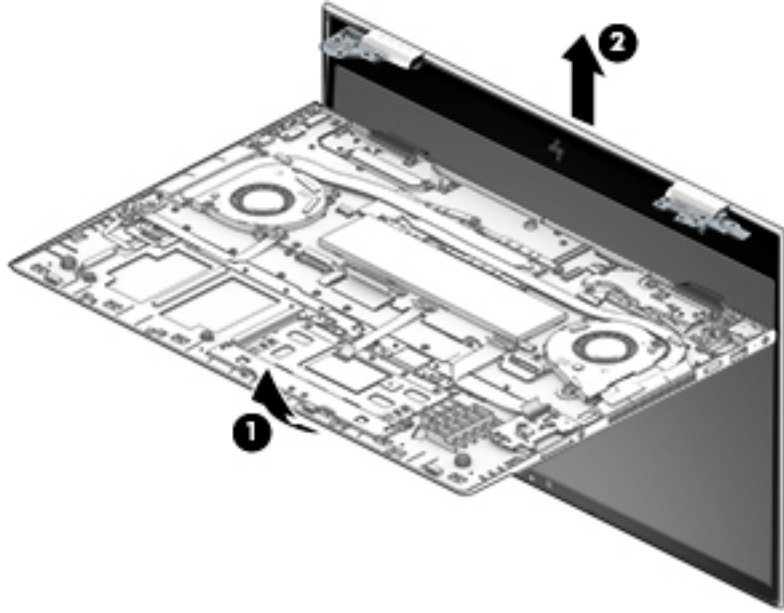

Reverse this procedure to install the display assembly.

System board


 **NOTE:** The system board spare part kit includes a processor and replacement thermal material.

Table 5-13 System board description and spare part number information

Description	Spare part number
i7-8565U Win quad core processor, UMA	L53568-601
i5-8265U Win quad core processor, UMA	L53569-601
i7-8565U Win quad core processor, DSC, 4-GB MX250	L53570-601
i5-8265U Win quad core processor, DSC, 4-GB MX250	L53571-601
i5-8265U Win quad core processor, DSC, 4-GB MX250	L63885-601
i7-xxxxU Win quad core processor, UMA, 4-GB MX250	L63886-601
i5-xxxxU Win quad core processor, DSC, 4-GB MX250	L63887-601
i7-xxxxU Win quad core processor, DSC, 4-GB MX250	L63888-601

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Battery (see [Battery on page 30](#))
 - b. Solid-state drive (see [Solid-state drive on page 31](#))
 - c. Fans (see [Fans on page 45](#))

When replacing the system board, be sure to remove the memory module shield and memory module (see [Memory module on page 33](#)) from the defective system board and install them on the replacement system board.


Remove the system board:

1. Disconnect the following cables from the system board:
 - (1) WLAN antenna cables


 **NOTE:** The #1/white WLAN antenna cable connects to the WLAN module "#1/Main" terminal. The #2/black WLAN antenna cable connects to the WLAN module "#2/Aux" terminal.

- (2) Webcam/microphone module ZIF connector cable
- (3) Display panel ZIF connector cable
- (4) Power button board ZIF connector cable
- (5) Speaker cable
- (6) Power connector cable


- (7) Switch board ZIF connector cable
- (8) Keyboard backlight ZIF connector cable
- (9) Keyboard ZIF connector cable
- (10) TouchPad ZIF connector cable
- (11) Card reader board ZIF connector cable

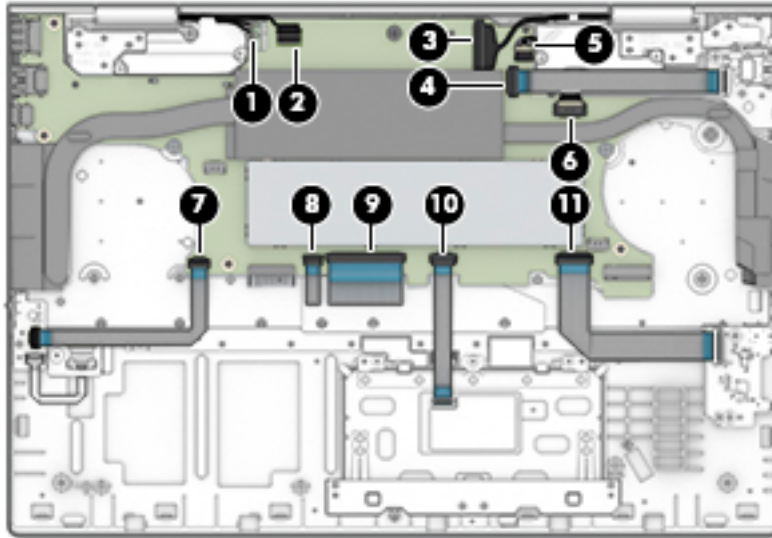

2. Remove the five Phillips M2.0×2.9 screws (1) that secure the system board to the keyboard/top cover.
3. Remove the Phillips M2.0×2.3 broad head screw (2) that secures the WLAN module to the keyboard/top cover.

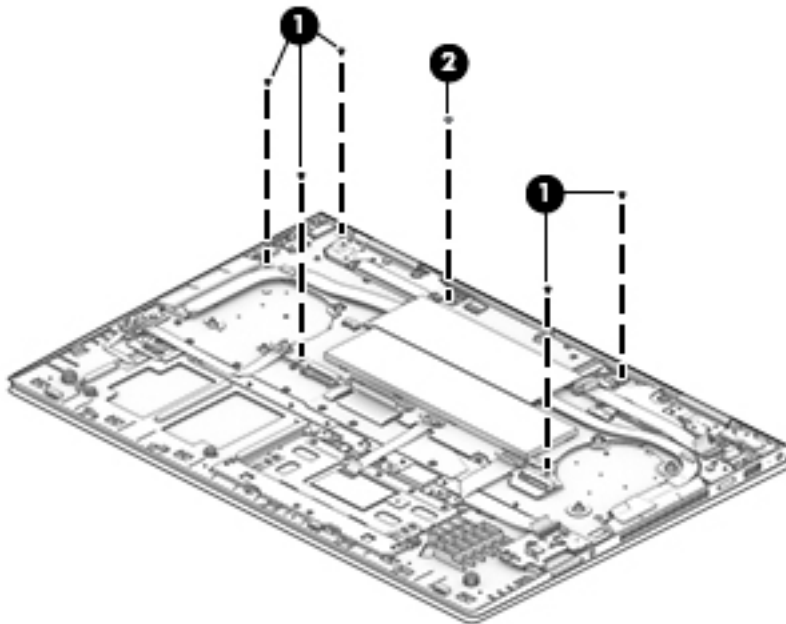

4. Remove the system board.

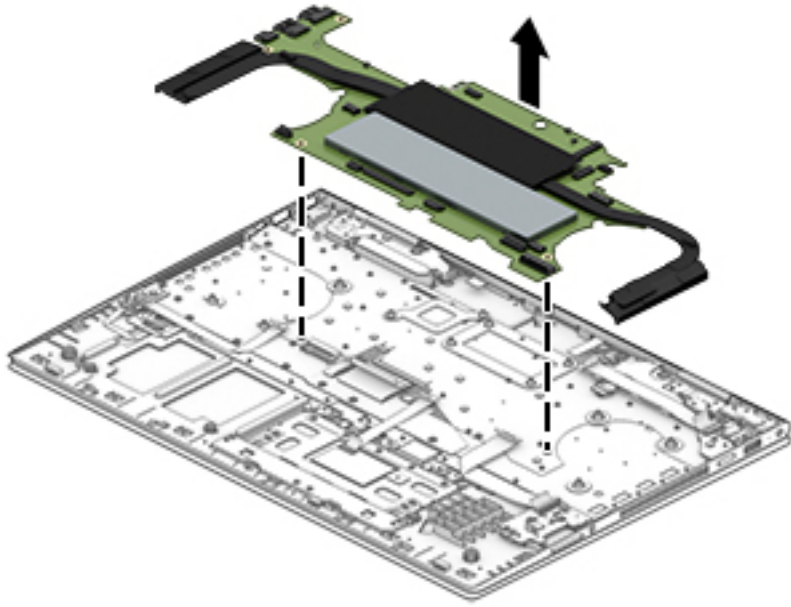

5. Remove the system board.

Reverse this procedure to install the system board.

Heat sink

Table 5-14 Heat sink description and spare part number information

Description	Spare part number
Heat sink (UMA)	L53539-001
Fan, CPU/VGA	L53541-001
Fan	L53542-001

Before removing the heat sink, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Battery (see [Battery on page 30](#))
 - b. Solid-state drive (see [Solid-state drive on page 31](#))
 - c. Fans (see [Fans on page 45](#))
 - d. System board (see [System board on page 54](#))

Remove the heat sink:


1. Remove the foil shield **(1)** to gain access to the heat sink screws.




NOTE: Steps 2 and 3 apply only to computer models equipped with a graphics subsystem with discrete memory. See steps 4 and 5 for heat sink removal information for computer models equipped with a graphics subsystem with UMA memory.


2. Remove the six Phillips M2.0×3.2 screws **(2)** that secure the heat sink to the system board.


3. Remove the heat sink (3).

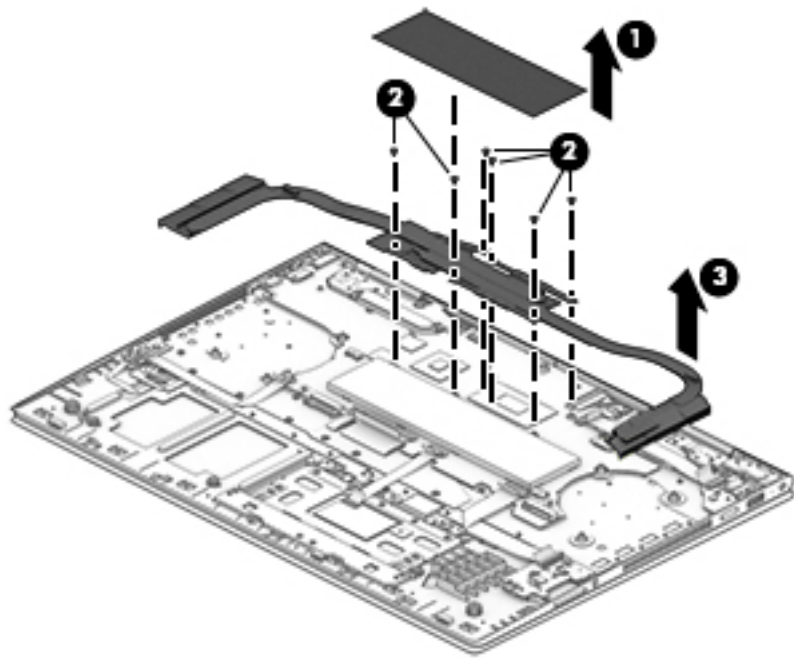


 **NOTE:** Steps 4 and 5 apply only to computer models equipped with a graphics subsystem with UMA memory. See steps 2 and 3 for heat sink removal information for computer models equipped with a graphics subsystem with discrete memory.

4. Remove the four Phillips M2.0×3.2 screws (2) that secure the heat sink to the system board.
5. Remove the heat sink (3).

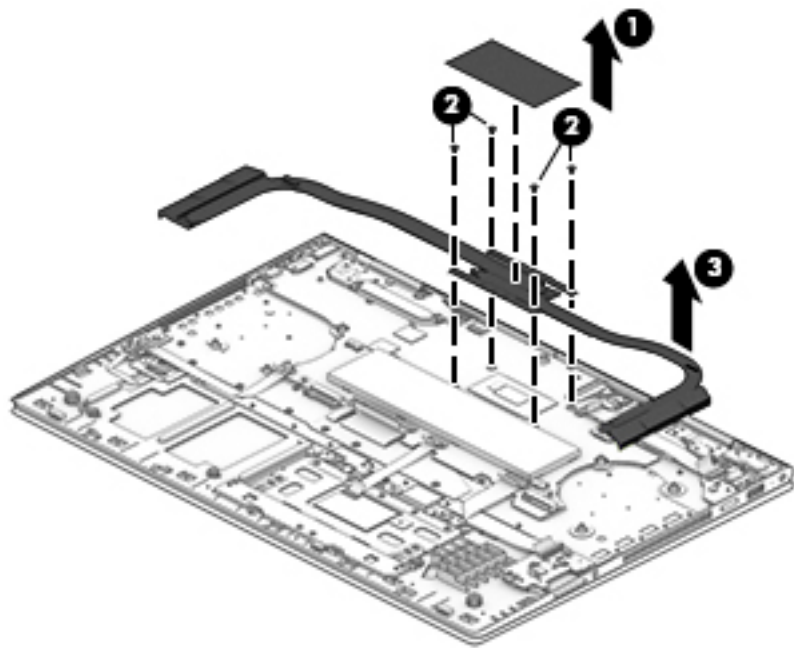


 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

Computer models equipped with a graphics subsystem with discrete memory: Thermal paste is used on the processor (1) and the heat sink section (2) that services it. Thermal paste is also used on the graphics subsystem component (3) and the heat sink section (4) that services it.

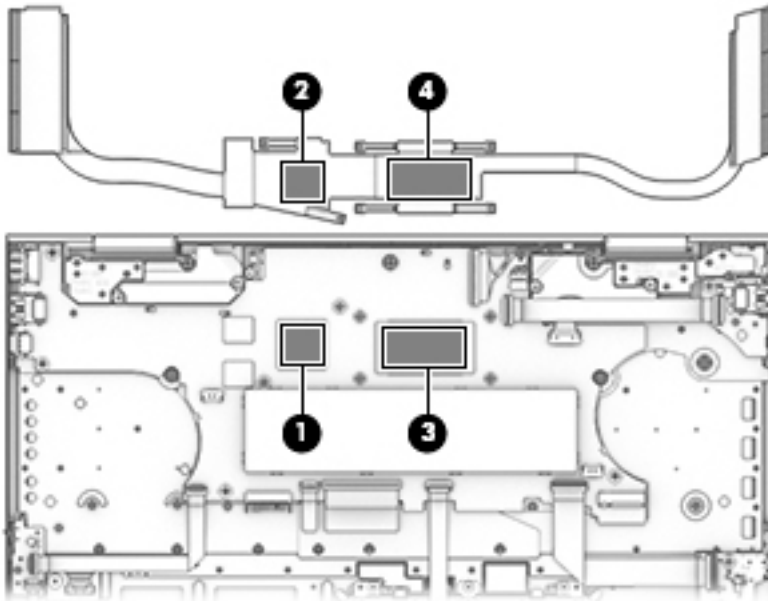

Computer models equipped with a graphics subsystem with UMA memory: Thermal paste is used on the processor (1) and the heat sink section (2) that services it.

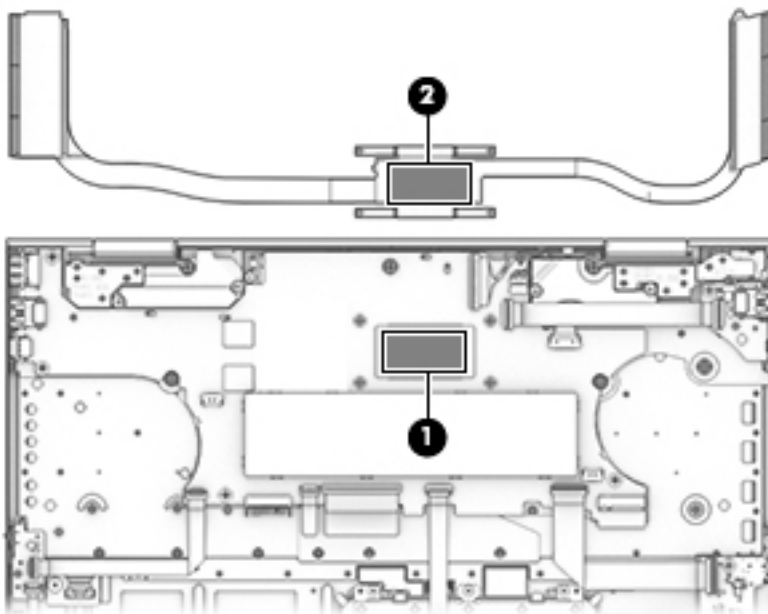

Reverse this procedure to install the heat sink.

WLAN module

Table 5-15 WLAN module description and spare part number information

Description	Spare part number
Realtek RTL8822BE ac 2×2 MU-MIMO+Bluetooth 4.2 M.2 PCIe WW WLAN module	L51005-005

⚠ CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Battery (see [Battery on page 30](#))
 - b. Solid-state drive (see [Solid-state drive on page 31](#))
 - c. Fans (see [Fans on page 45](#))
 - d. System board (see [System board on page 54](#))

Remove the WLAN module:

1. Turn the system board upside down with the front edge toward you.

2. Remove the WLAN module (1) by pulling the module away from the slot at an angle.

 **NOTE:** WLAN modules are designed with a notch (2) to prevent incorrect insertion.

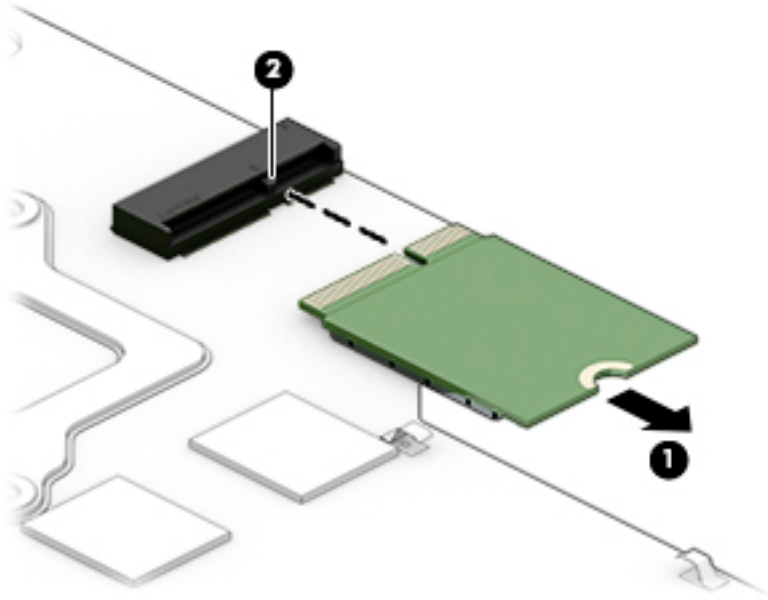

Reverse this procedure to install the WLAN module.

Speakers

Table 5-16 Speakers description and spare part number information

Description	Spare part number
Speakers (include left and right speakers, cables, and rubber isolators)	L53561-001


Before removing the speakers, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the bottom cover (see [Bottom cover on page 28](#)), and then remove the following components:
 - a. Battery (see [Battery on page 30](#))
 - b. Solid-state drive (see [Solid-state drive on page 31](#))
 - c. Fans (see [Fans on page 45](#))
 - d. System board (see [System board on page 54](#))

Remove the speakers:

1. Release the power connector cable from the retention clips **(1)** and routing channel built into the left speaker.
2. Release the speaker cable from the retention clips **(2)** and routing channel built into the keyboard/top cover.

3. Remove the speakers (3).


 **NOTE:** When removing the speakers, make note of the location and condition of the four rubber isolators (4). These isolators are critical to the performance of the speakers. The absence of these isolators or damage to them can degrade the speaker performance.

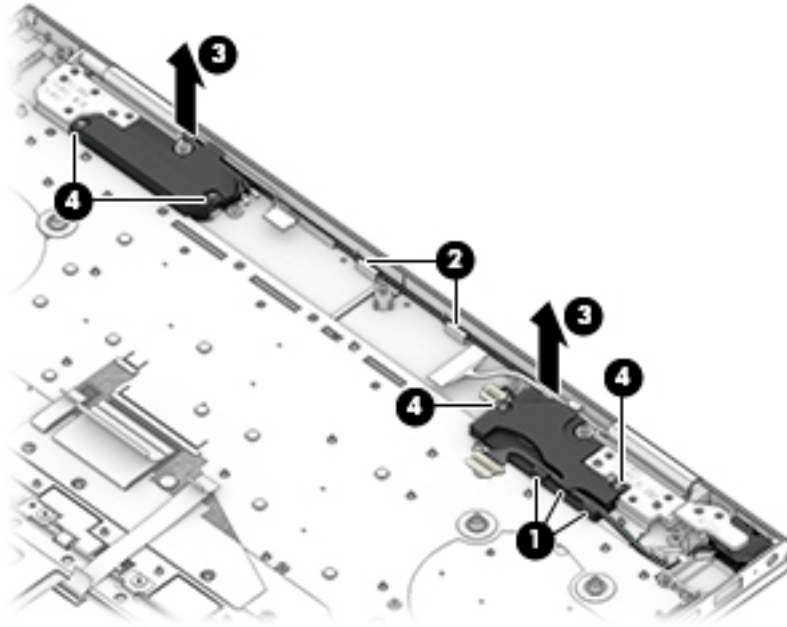

Reverse this procedure to install the speakers.

6 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

 **CAUTION:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

▲ Turn on or restart the computer and quickly press **f10**.

– or –

Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called SoftPaqs.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version


To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on the computer.

To reveal the BIOS version information (also known as ROM date and System BIOS), use one of these options.


- HP Support Assistant
- 1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.
 - or –
 - Select the question mark icon in the taskbar.
- 2. Select **My notebook**, and then select **Specifications**.
 - Setup Utility (BIOS)
 - 1. Start Setup Utility (BIOS).
 - 2. Select **Main**, and then make note of the BIOS version.
 - 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **CTRL+Alt+S**.

To check for later BIOS versions, see [Downloading a BIOS update on page 65](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If the computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on the computer. If the update is more recent than the BIOS version, make a note of the date, name, or other identifier. This information may be needed to locate the update later, after it has been downloaded to the computer.
 - b. Follow the on-screen instructions to download the BIOS selection. Make a note of the path to the computer location where the BIOS update is downloaded. This path will need to be accessed when installing the update.

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps:


1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select the storage designation. The storage designation is typically Local Disk (C:).
3. Using the storage path recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, filename.exe).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, the downloaded BIOS file can be deleted from the computer.

7 Backing up, restoring, and recovering

This chapter provides information about the following processes, which are standard procedure for most products:


- **Backing up your personal information**—You can use Windows tools to back up your personal information (see [Using Windows tools on page 66](#)).
- **Creating a restore point**—You can use Windows tools to create a restore point (see [Using Windows tools on page 66](#)).
- **Creating recovery media** (select products only)—You can use the HP Cloud Recovery Download Tool (select products only) to create recovery media (see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 66](#)).
- **Restoring and recovery**—Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state (see [Using Windows tools on page 66](#)).

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

Using Windows tools


 **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.

You can use Windows tools to back up personal information and create system restore points and recovery media.

 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get Help app.


1. Select the **Start** button, and then select the **Get Help** app.
2. Enter the task you want to perform.

 **NOTE:** You must be connected to the Internet to access the Get Help app.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive, as follows:

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, and then follow the on-screen instructions.

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.


Restoring and recovery

Restoring, resetting, and refreshing using Windows tools

Windows offers several options for restoring, resetting, and refreshing the computer. For details, see [Using Windows tools on page 66](#).

Recovering using HP Recovery media

HP Recovery media is used to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool. For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 66](#).

 **NOTE:** If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.


To recover your system:

- ▲ Insert the HP Recovery media, and then restart the computer.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order. This is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

To change the boot order:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, quickly hold down the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly hold down the volume down button, and then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

8 Using HP PC Hardware Diagnostics

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system in order to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 68](#).

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support or HP Support Assistant.

1. To access HP PC Hardware Diagnostics Windows from HP Help and Support:
 - a. Select the **Start** button, and then select **HP Help and Support**.
 - b. Right-click **HP PC Hardware Diagnostics Windows**, select **More**, and then select **Run as administrator**.

– or –

To access HP PC Hardware Diagnostics Windows from HP Support Assistant:

- a. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
- or –
- a. Select the question mark icon in the taskbar.
 - b. Select **Troubleshooting and fixes**.
 - c. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.
2. When the tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test at any time, select **Cancel**.

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. The screen displays one of the following options:

- A Failure ID link is displayed. Select the link and follow the on-screen instructions.
- A Quick Response (QR) code is displayed. With a mobile device, scan the code and then follow the on-screen instructions.
- Instructions for calling support are displayed. Follow those instructions.

Downloading HP PC Hardware Diagnostics Windows

- The HP PC Hardware Diagnostics Windows download instructions are provided in English only.
- You must use a Windows computer to download this tool because only .exe files are provided.


Downloading the latest HP PC Hardware Diagnostics Windows version

To download HP PC Hardware Diagnostics Windows, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select a location on your computer or a USB flash drive.

The tool is downloaded to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

 **NOTE:** For some products, it may be necessary to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics Windows by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.


The tool is downloaded to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, follow these steps:

- ▲ Navigate to the folder on your computer or the USB flash drive where the .exe file was downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

 **NOTE:** For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 70](#).

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.


If your PC will not boot into Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. For assistance in solving the problem:

- ▲ Select **Get Support**, and then use a mobile device to scan the QR code that displays on the next screen. The HP Customer Support - Service Center page displays, with your Failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the Failure ID code.

 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.

 **NOTE:** If you need to stop a diagnostic test, press *esc*.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow these steps:

1. Turn on or restart the computer, and quickly press *esc*.
2. Press *f2*.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive

 **NOTE:** To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 70](#).


- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in the following situations:

- HP PC Hardware Diagnostics UEFI is not included in the preinstall image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.


 **NOTE:** The HP PC Hardware Diagnostics UEFI download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

 **NOTE:** For some products, it may be necessary to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive:

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it may upload results to a preconfigured server. For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI



NOTE: HP Remote PC Hardware Diagnostics UEFI is also available as a Softpaq that can be downloaded to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

To download the latest Remote HP PC Hardware Diagnostics UEFI version, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number



NOTE: For some products, it may be necessary to download the software by using the product name or number.

To download HP Remote PC Hardware Diagnostics UEFI by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform the following customizations:

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a disk drive or USB flash drive) to run remote diagnostics.

- Set a location for storing the test results. You can also set the user name and password settings used for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Specifications

Computer specifications

Table 9-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	35.9 cm	14.1 in
Depth	24.6 cm	9.7 in
Height (front to back)	1.7 cm	0.7 in
Weight		
	2.1 kg	4.5 lbs.
Input power		
Operating voltage and current	5 V dc @ 2 A / 12 V dc @ 3 A / 15 V dc @ 3 A – 45 W USB-C 5 V dc @ 3 A / 9 V dc @ 3 A / 12 V dc @ 3.75 A / 15 V dc @ 3 A – 45 W USB-C 5 V dc @ 3 A / 9 V dc @ 3 A / 10 V dc @ 3.75 A / 12 V dc @ 3.75 A / 15 V dc @ 3 A / 20 V dc @ 2.25 A – 45 W USB-C 5 V dc @ 3 A / 9 V dc @ 3 A / 12 V dc @ 5 A / 15 V dc @ 4.33 A / 20 V dc @ 3.25 A – 65 W USB-C 5 V dc @ 3 A / 9 V dc @ 3 A / 10 V dc @ 5 A / 12 V dc @ 5 A / 15 V dc @ 4.33 A / 20 V dc @ 3.25 A – 65 W USB-C 5 V dc @ 3 A / 9 V dc @ 3 A / 10 V dc @ 5 A / 12 V dc @ 5 A / 15 V dc @ 5 A / 20 V dc @ 4.5 A – 90 W USB-C 19.5 V dc @ 2.31 A – 45 W 19.5 V dc @ 3.33 A – 65 W 19.5 V dc @ 4.62 A – 90 W 19.5 V dc @ 6.15 A – 120 W 19.5 V dc @ 6.9 A – 135 W 19.5 V dc @ 7.70 A – 150 W 19.5 V dc @ 10.3 A – 200 W 19.5 V dc @ 11.8 A – 230 W 19.5 V dc @ 16.92 A – 330 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	

Table 9-1 Computer specifications (continued)

	Metric	U.S.
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

10 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 V ac, or from 220 to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Table 10-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

Table 10-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
		2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
		3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm ² or 1.25 mm ² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
		4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm ² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
		5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label.
		6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm ² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
		7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² or 1.00 mm ² conductor size, with plug BS 1363/A with BSI or ASTA marks.

11 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

AC adapter and battery light 5
AC adapter, spare part number 20
action keys 11
adapter, spare part numbers 20
antenna, locations 7
audio, product description 2
audio-in jack 6
audio-out jack 6

B

backup, creating 66
backups 66
battery
 removal 30
 spare part number 20, 30
boot order, changing 67
bottom components 12
bottom cover
 removal 28
 spare part numbers 20, 28
buttons
 left TouchPad 8
 power 5
 right TouchPad 8

C

camera 7
camera light 7
camera privacy switch 4
caps lock light 9
card reader board
 removal 44
 spare part number 19, 44
card reader board cable
 removal 43
 spare part number 19, 43
chipset, product description 1
components
 bottom 12
 display 7
 keyboard area 8
 left side 5
 right side 4
computer components 15

computer specifications 73

D

display assembly
 removal 51
 spare part number 51
 spare part numbers 16
display components 7
display panel, product description 1
duck head adapter, spare part number 20

E

electrostatic discharge 24
equipment guidelines 26
esc key 11
external media card, product description 2

F

fan
 removal 45
 spare part numbers 19, 45
feet
 removal 28
 spare part numbers 28
fingerprint reader 10
fingerprint reader module
 removal 40
 spare part number 40
 spare part numbers 19
fingerprint reader module bracket,
 removal 40
fingerprint reader module cable
 removal 41
 spare part number 19, 40, 41
fn key 11

G

graphics, product description 1
grounding guidelines 24
guidelines
 equipment 26
 grounding 24
 packaging 25

transporting 25
workstation 25

H

HDMI port 4
headphone jack 6
heat sink
 removal 57
 spare part numbers 19, 57
HP PC Hardware Diagnostics UEFI
 downloading 70
 starting 70
 using 69
HP PC Hardware Diagnostics Windows
 downloading 68
 installing 69
 using 68
HP Recovery Manager
 correcting boot problems 67
HP Recovery media
 recovery 67

I

integrated numeric keyboard 11
internal card expansion, product description 2
internal microphones 7

J

jacks
 audio-in 6
 audio-out 6
 headphone 6
 microphone 6

K

keyboard, product description 2
keyboard/top cover, spare part numbers 16
keys
 action 11
 esc 11
 fn 11
 integrated numeric keyboard 11
 num lock 11

- numeric keyboard 11
 - Windows 11
- L**
- labels
 - serial number 13
 - service 13
 - left side components 5
 - lights
 - AC adapter and battery 5
 - camera 7
 - caps lock 9
 - mute 9
 - power 5
- M**
- memory card reader 6
 - memory module
 - removal 33
 - spare part numbers 20, 33
 - memory module shield
 - removal 33
 - spare part number 20, 33
 - memory, product description 1
 - microphone jack 6
 - microphone, product description 2
 - model name 1
 - mute light 9
- N**
- num lock key 11
 - numeric keyboard 11
- O**
- operating system, product description 2
 - optical drive
 - product description 2
 - optical drive, spare part number 21
- P**
- packaging guidelines 25
 - pen tip, spare part numbers 21
 - pen, spare part numbers 21
 - pointing device, product description 2
 - ports
 - HDMI 4
 - product description 2
 - USB SuperSpeed 4, 5
 - USB Type-C with HP Sleep and Charge 4
 - power button 5
 - power button board
 - removal 48
 - spare part number 19, 48
 - power button board actuator
 - spare part number 19
 - power button board cable
 - removal 47
 - spare part number 19, 47, 48
 - power connector 5
 - power connector cable
 - removal 49
 - spare part number 19, 49
 - power cord
 - requirements for all countries 75
 - requirements for specific countries and regions 76
 - set requirements 75
 - spare part numbers 21
 - power light 5
 - power requirements, product description 2
 - processor fan
 - removal 45
 - spare part number 45
 - processor, product description 1
 - product description
 - audio 2
 - chipset 1
 - display panel 1
 - external media card 2
 - graphics 1
 - internal card expansion 2
 - keyboard 2
 - memory 1
 - microphone 2
 - operating system 2
 - optical drive 2
 - pointing device 2
 - ports 2
 - power requirements 2
 - processors 1
 - product name 1
 - security 2
 - sensors 2
 - solid-state drive 1, 2
 - storage 1, 2
 - video 2
 - wireless 2
 - product name 1
 - product name and number, computer 13
- R**
- recovery 66
 - discs 67
 - HP Recovery partition 67
 - media 67
 - USB flash drive 67
 - recovery media
 - creating using HP Cloud Recovery Download Tool 66
 - creating using Windows tools 66
 - Remote HP PC Hardware Diagnostics UEFI settings
 - customizing 71
 - using 71
 - restoring 66
 - right side components 4
 - Rubber Foot Kit, spare part numbers 28
 - Rubber Kit, spare part numbers 20
- S**
- Screw Kit, spare part number 21
 - security, product description 2
 - sensors, product description 2
 - serial number, computer 13
 - service labels, locating 13
 - solid-state drive
 - product description 1, 2
 - removal 31
 - spare part numbers 20, 31
 - solid-state drive shield
 - spare part number 20
 - speakers
 - location 10
 - removal 62
 - spare part number 18, 62
 - special keys, using 11
 - specifications
 - computer 73
 - switch board
 - removal 39
 - spare part number 19, 39

- switch board cable
 - removal 38
 - spare part number 19, 38, 39, 44
- system board
 - removal 54
 - spare part numbers 19, 54
- system restore point, creating 66

T

- TouchPad
 - removal 36
 - spare part number 18, 36
- TouchPad buttons 8
- TouchPad cable
 - removal 35
 - spare part number 18, 35, 36
- TouchPad zone 8
- transporting guidelines 25

U

- USB SuperSpeed port 4, 5
- USB Type-C port with HP Sleep and Charge 4
- USB-C-to-A adapter, spare part number 21
- USB-C-to-HDMI 2.0 adapter, spare part number 21
- USB-C-to-MultiPort hub, spare part number 21
- USB-C-to-RJ45 adapter, spare part number 21
- USB-C-to-USB-A dongle, spare part number 21
- USB-C-to-USB-A hub, spare part number 21
- USB-C-to-VGA adapter, spare part number 21
- USB-to-Gigabit RJ45 adapter, spare part number 20

V

- vents 4, 6, 12
- video subsystem fan
 - removal 45
 - spare part number 45
- video, product description 2

W

- Windows
 - backup 66

- recovery media 66
- system restore point 66
- Windows key 11
- Windows tools, using 66
- wireless antenna, locations 7
- wireless, product description 2
- WLAN antenna, locations 7
- WLAN module
 - removal 60
 - spare part number 19, 60
- workstation guidelines 25