

# Interactive Part Locator

## HP Chromebook 14b-ca0000 x360 Laptop PC series

Welcome to the interactive part locator for the  
HP Chromebook 14b-ca0000 x360 Laptop PC series

### Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Part List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

**That's it! On every page there is a link that brings you back to either the External Views or the Part List, enabling you to navigate to whatever view or part you wish to review.**

# External Views

[Back to Welcome page](#)



Front




Left



Right



Rear

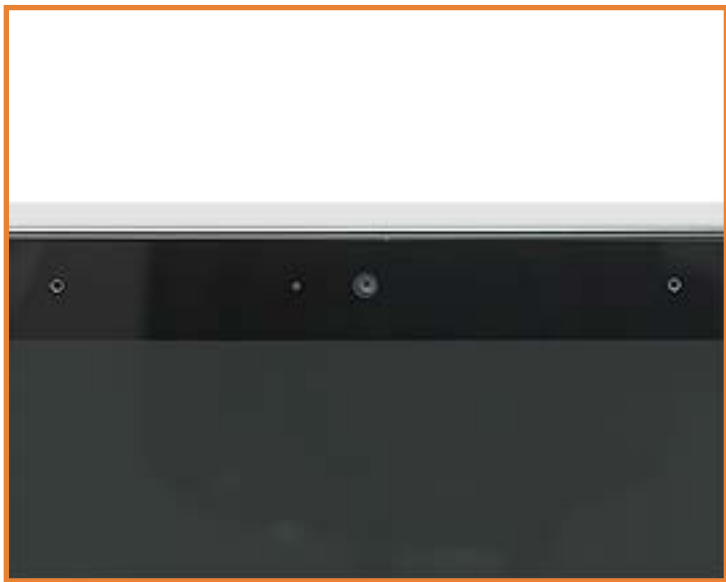

Display



Top



Bottom



Internal

[Go to Part List](#)

# Part List

Back to Welcome page

Base Enclosure

Battery

TouchPad Board

WLAN Module

USB Board

Speaker Assembly

Motherboard

Top Cover

Display Panel Assembly

LCD Panel

Webcam Board

LCD Panel Hinges

WLAN Antenna

Sensor Board

Touch Control Board

Go to External Views

# Front View


[Back to External Views](#)



[Go to Part List](#)

# Left View


[Back to External Views](#)

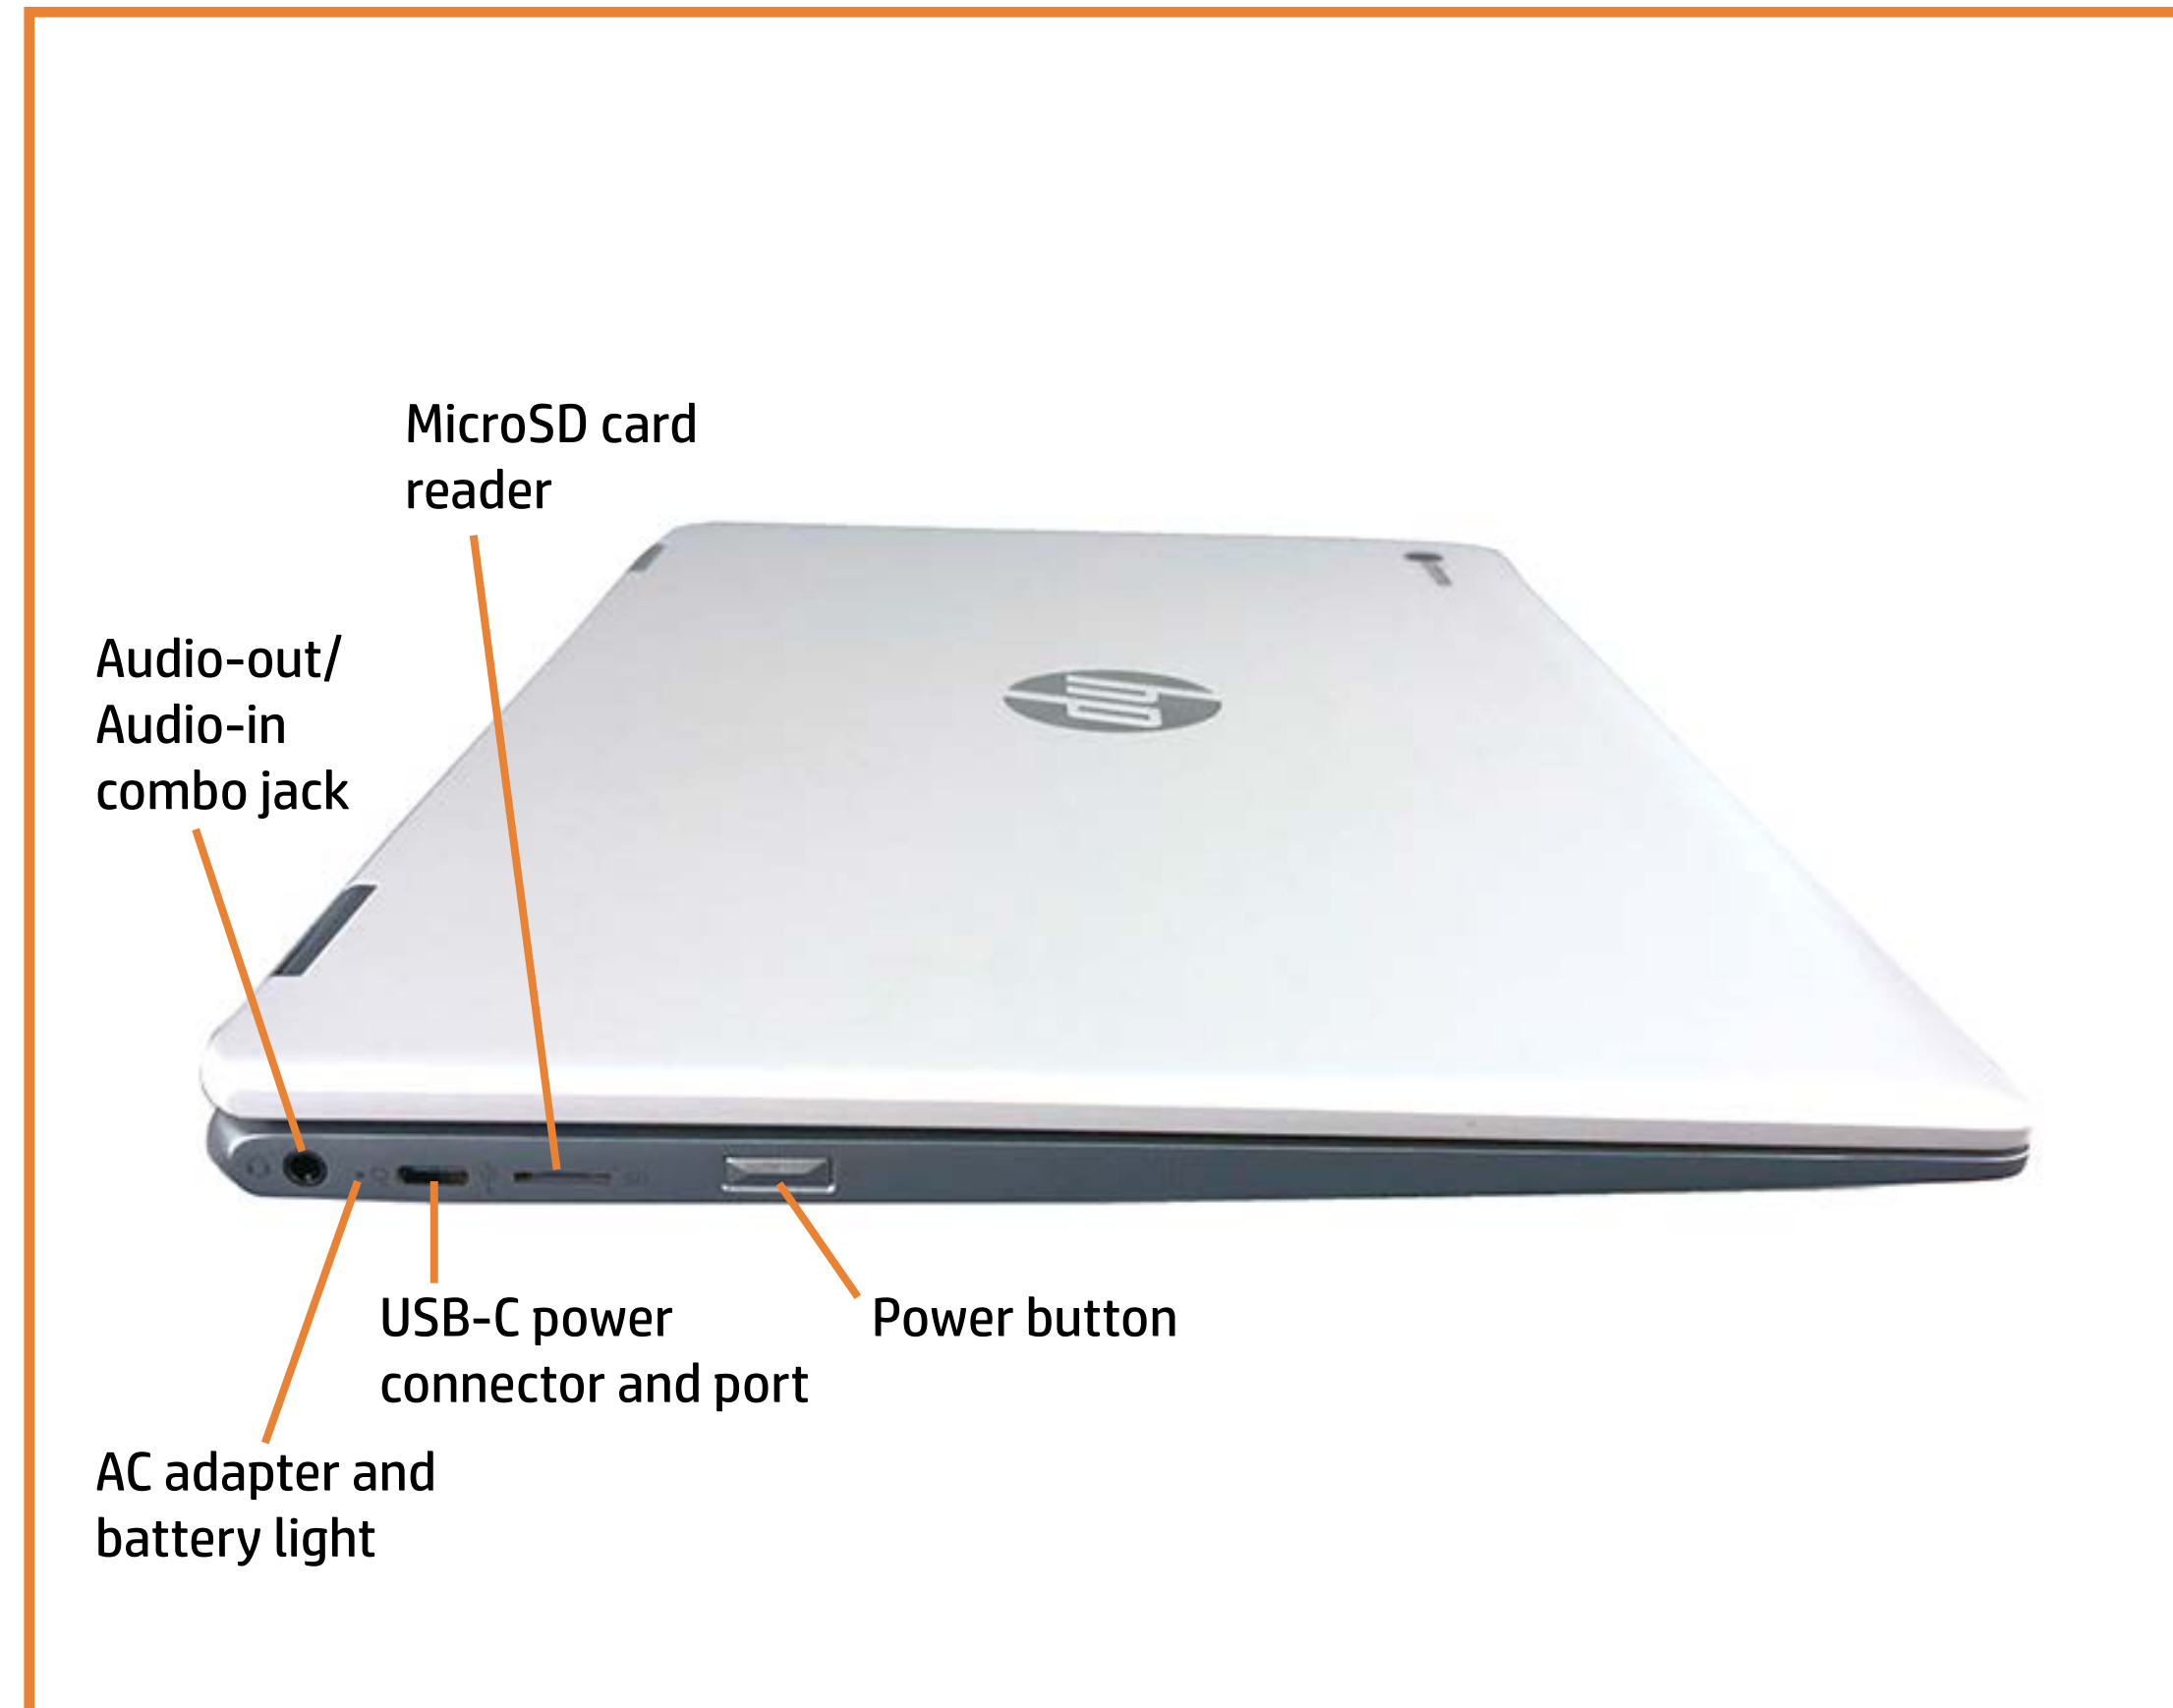

[Go to Part List](#)

## Right View

[Back to External Views](#)

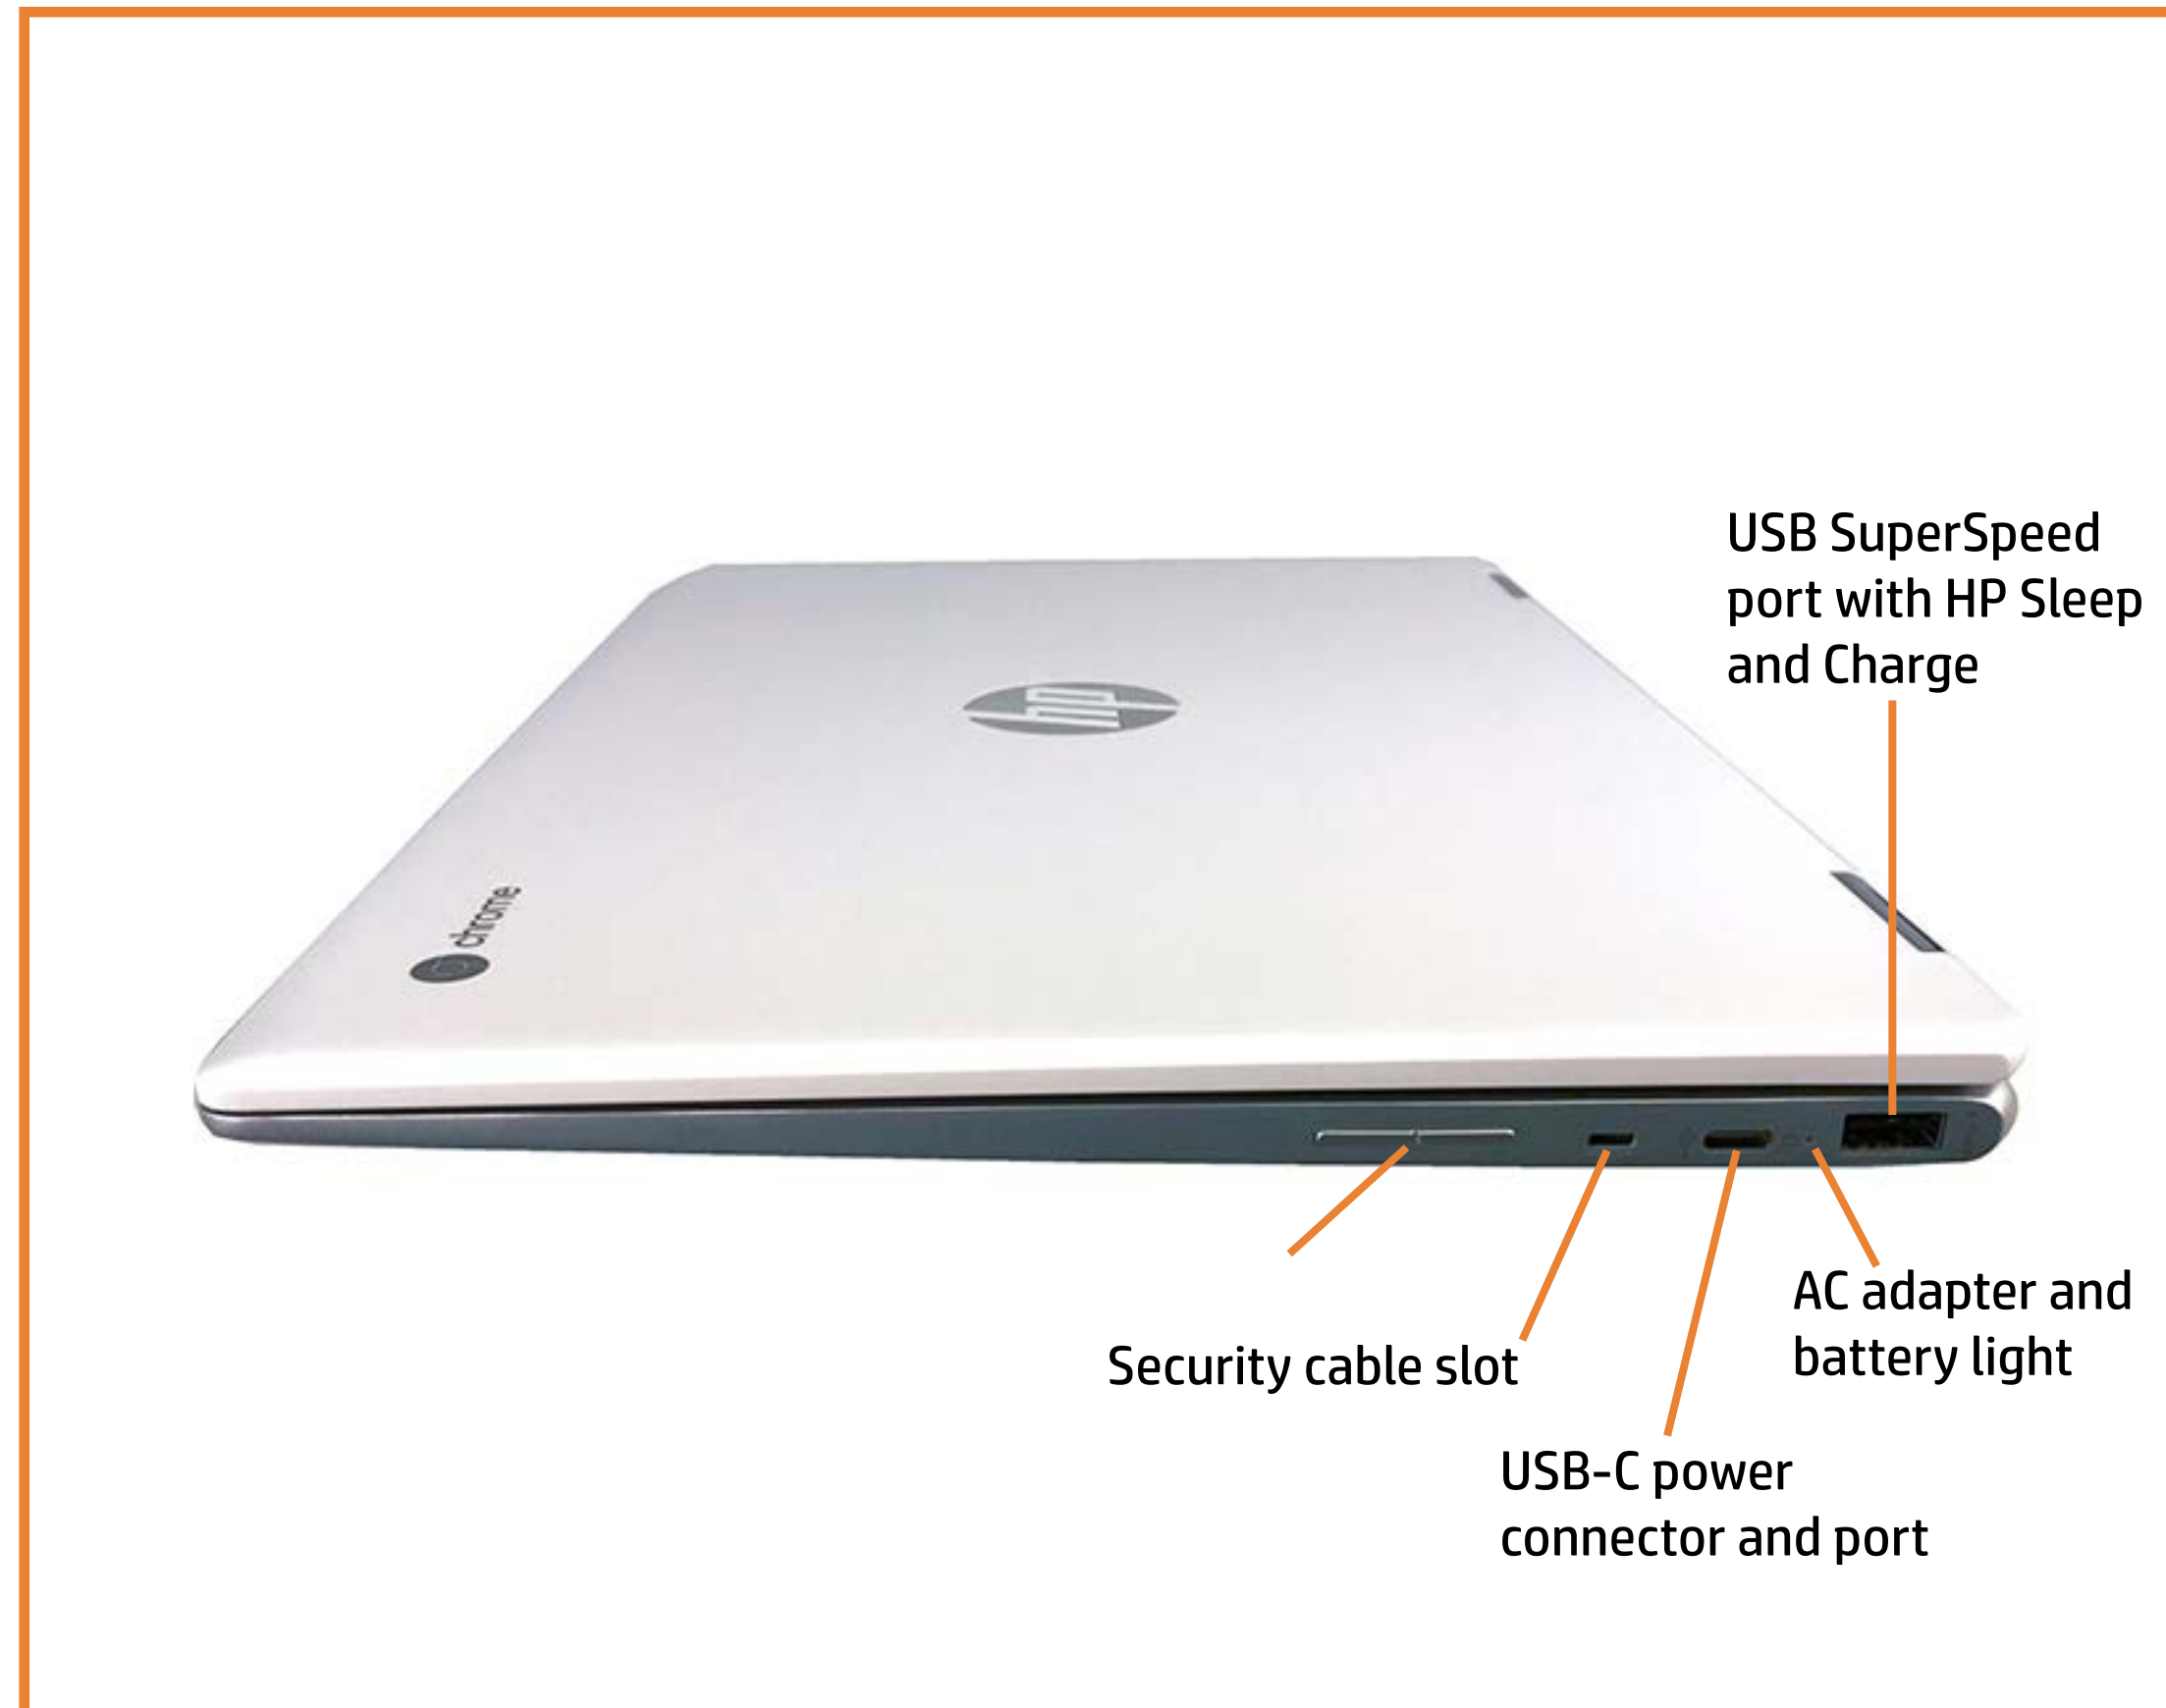

[Go to Part List](#)

# Rear View


[Back to External Views](#)



[Go to Part List](#)

# Display View

[Back to External Views](#)

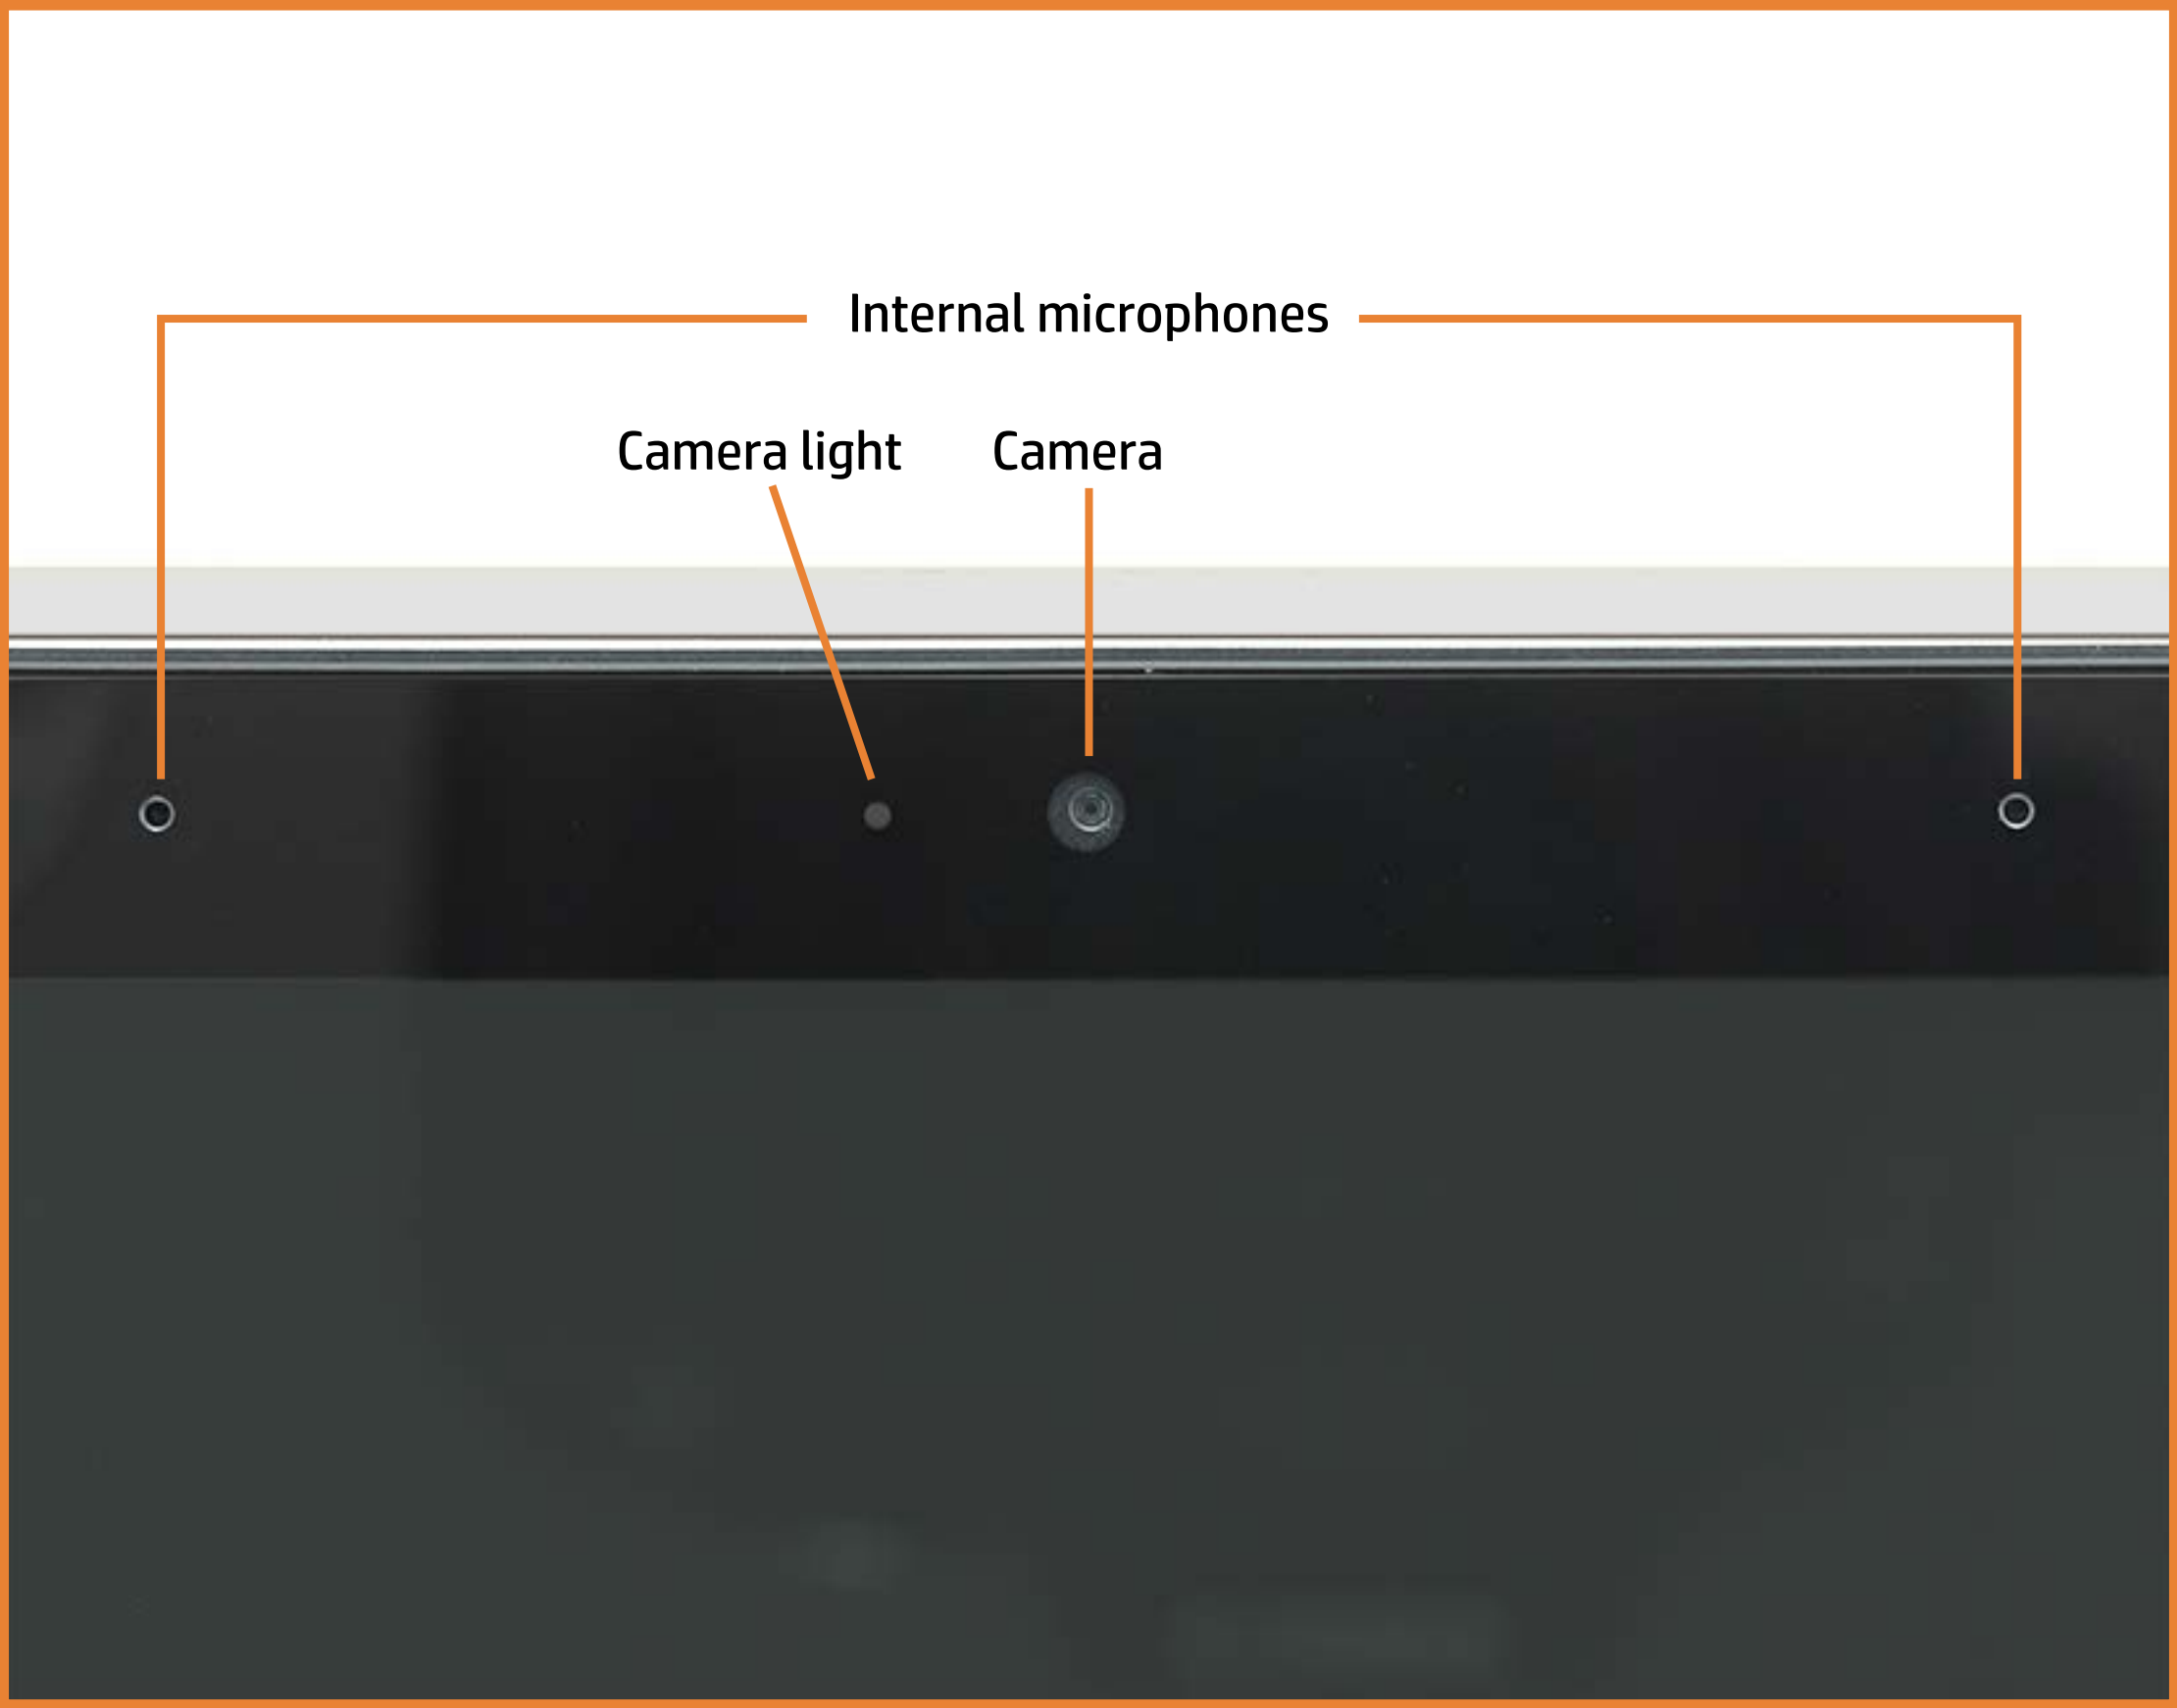

[Go to Part List](#)



# Top View

[Back to External Views](#)



## Function keys

1. Search
2. Escape
3. Back
4. Forward
5. Reload
6. Full screen
7. Display apps
8. Brightness down
9. Brightness up
10. Mute
11. Volume down
12. Volume up
13. Lock screen

[Go to Part List](#)

# Bottom View


[Back to External Views](#)



[Go to Part List](#)

# Internal View

[Back to External Views](#)

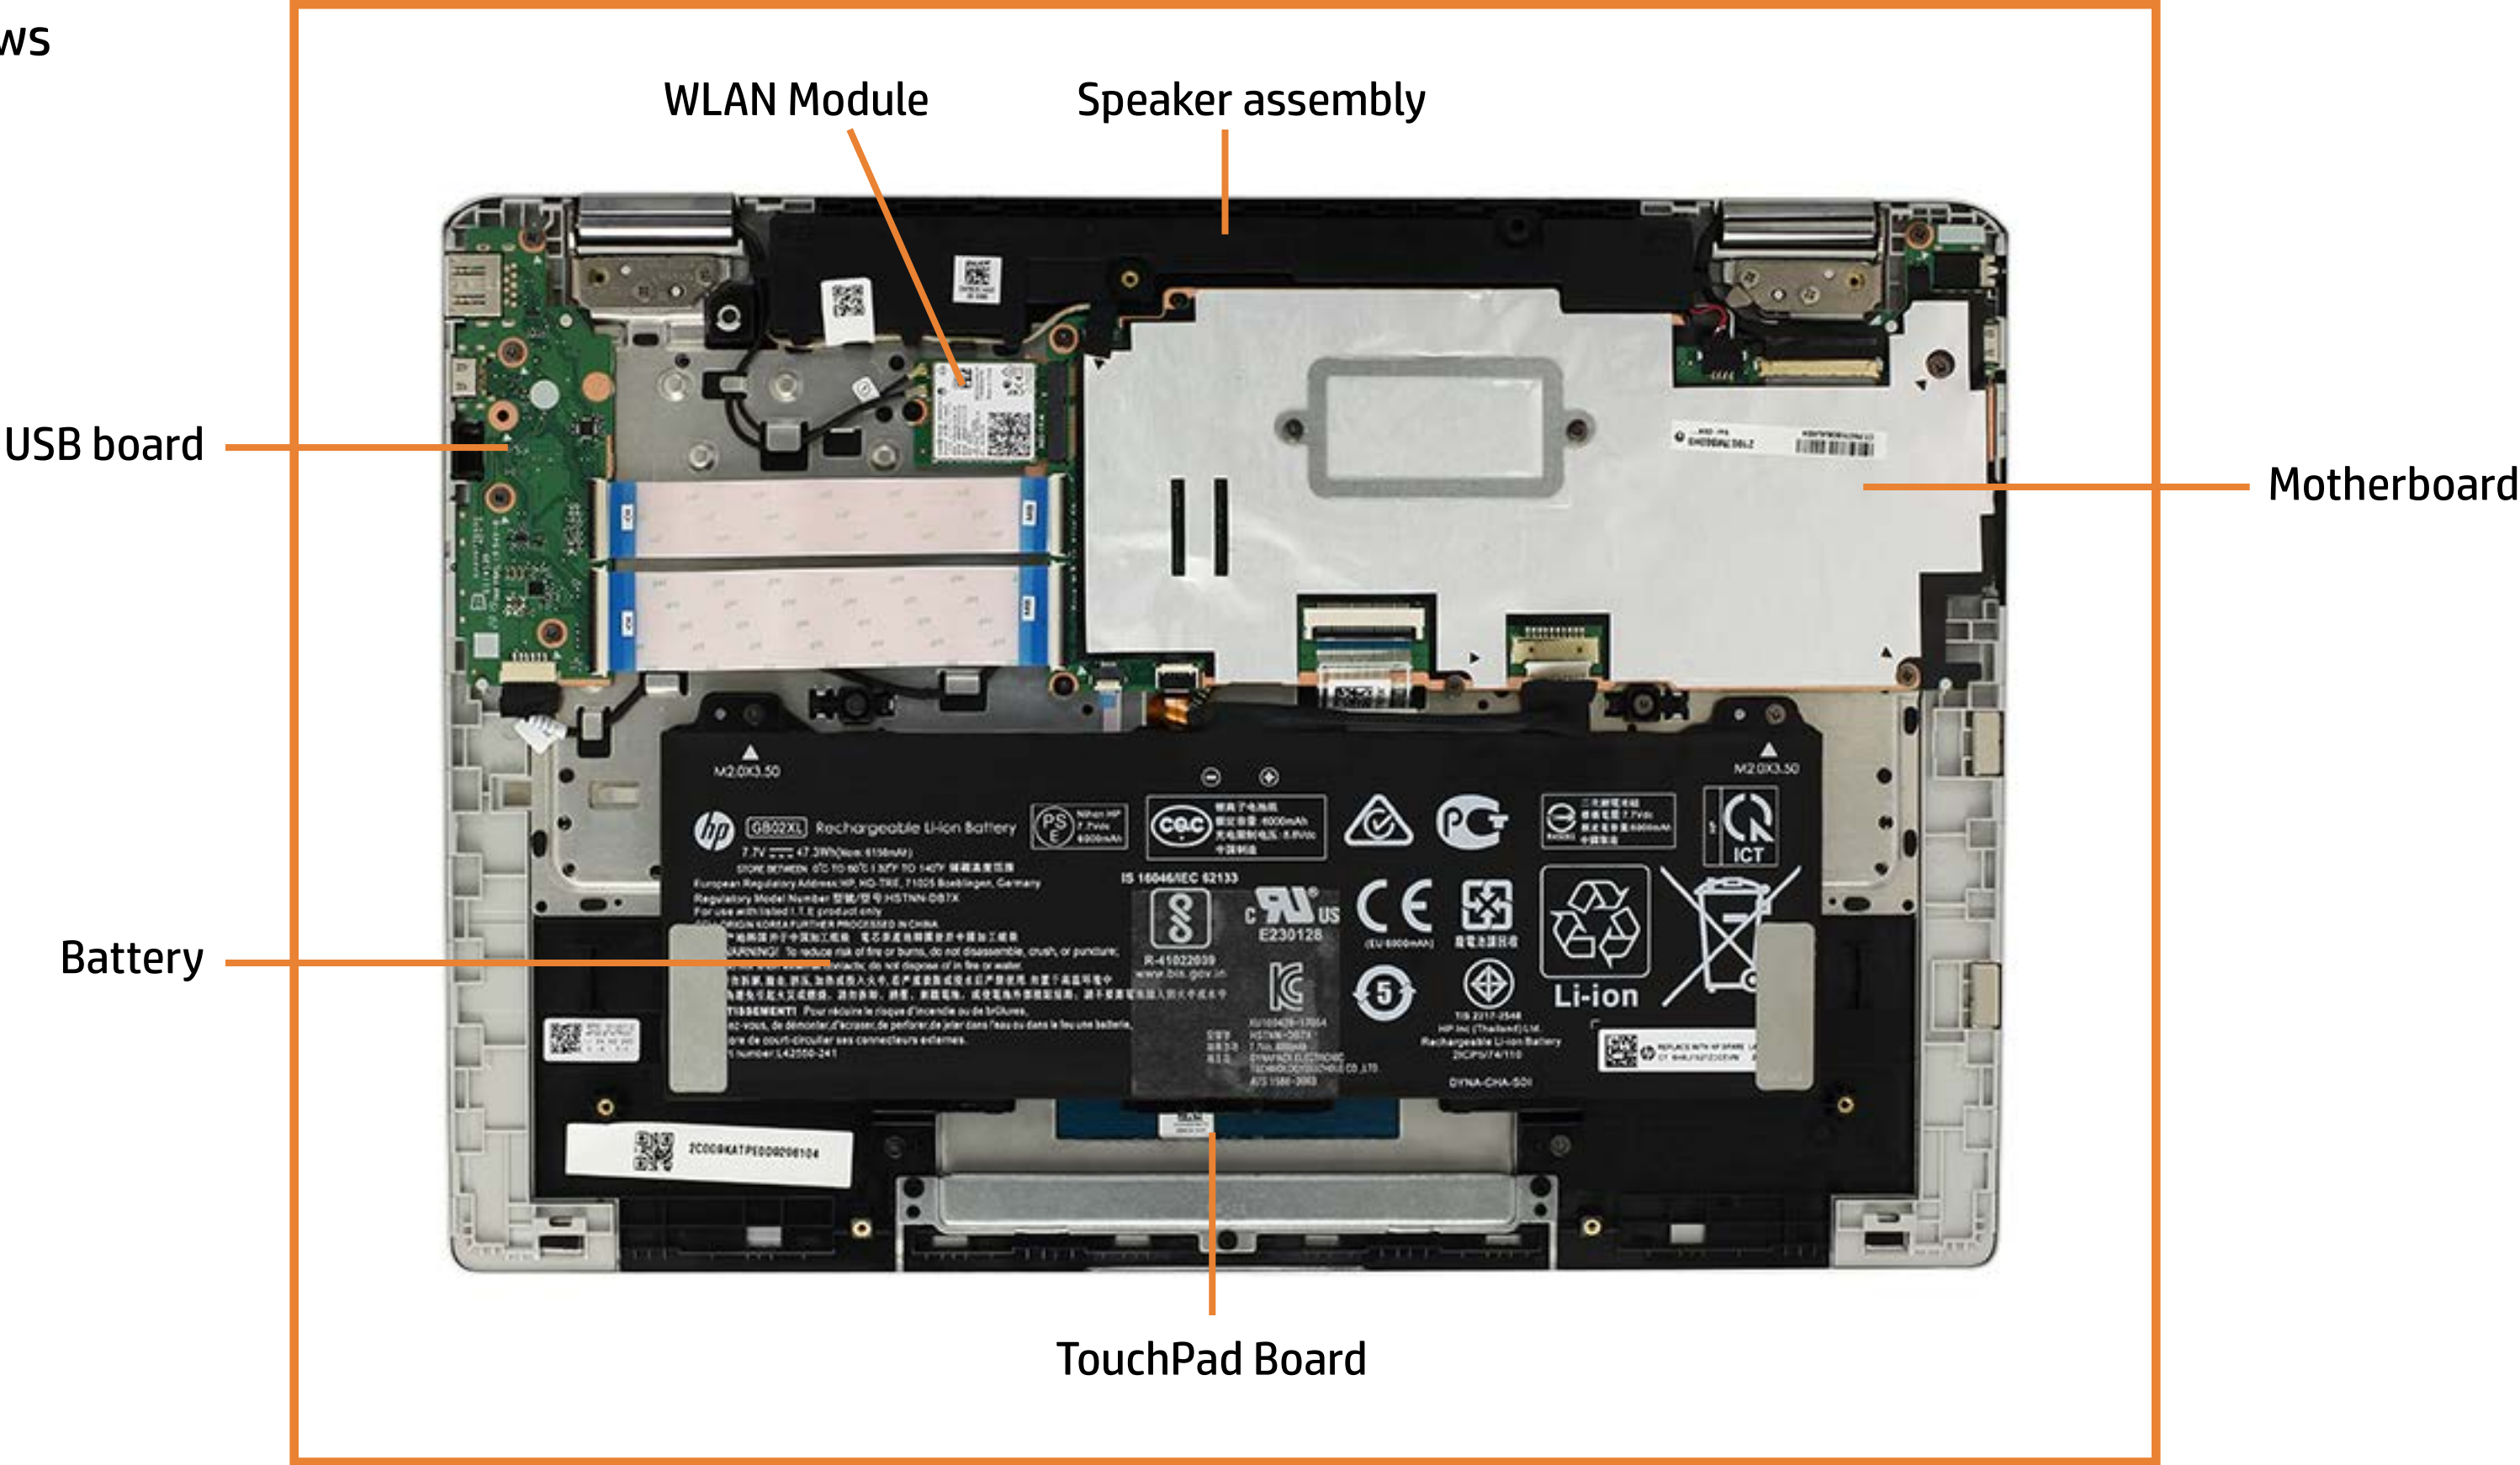


[Go to Part List](#)



# Base Enclosure

[Back to Part List](#)

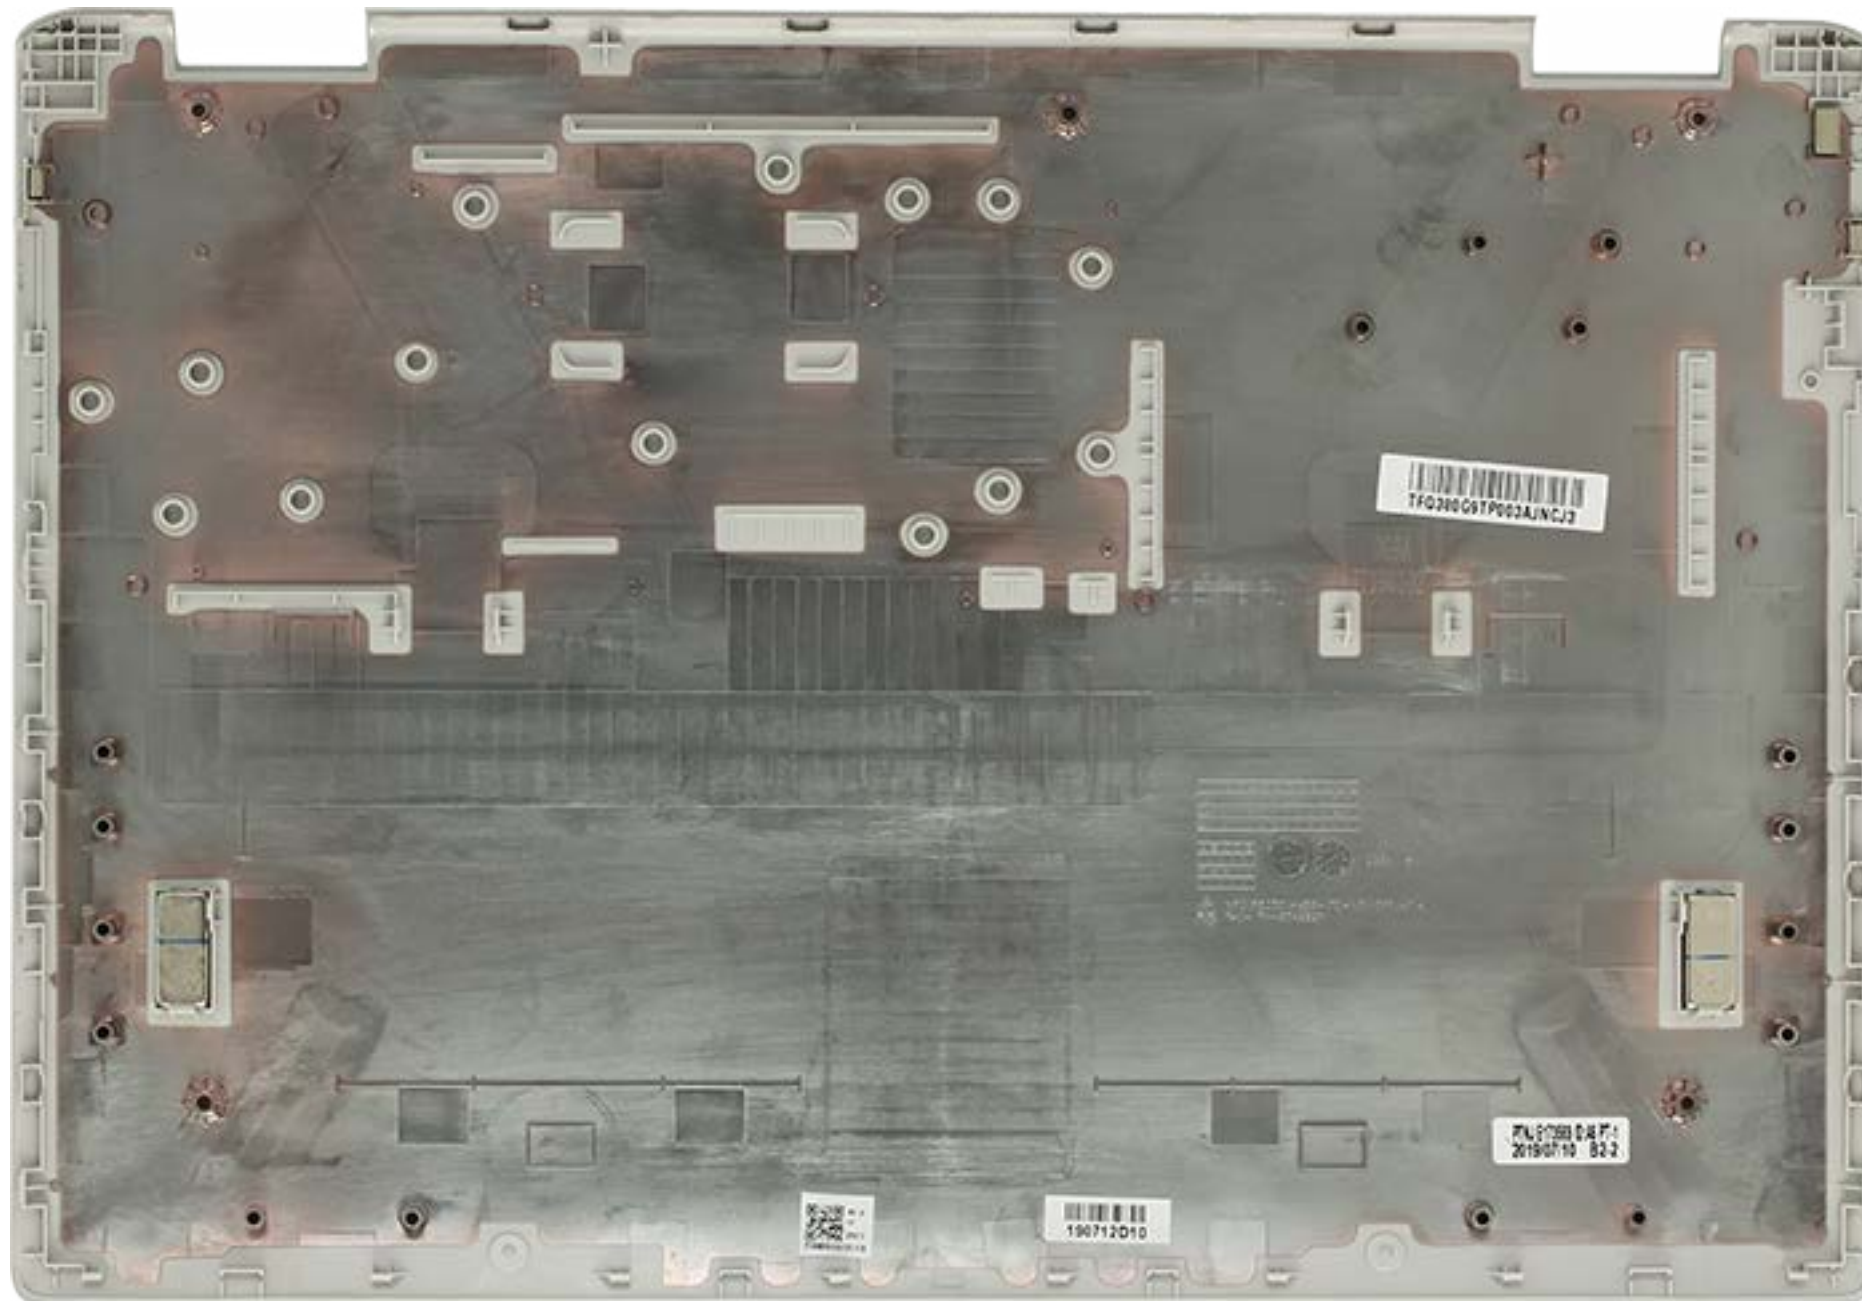


[Go to External Views](#)



# Battery

[Back to Part List](#)

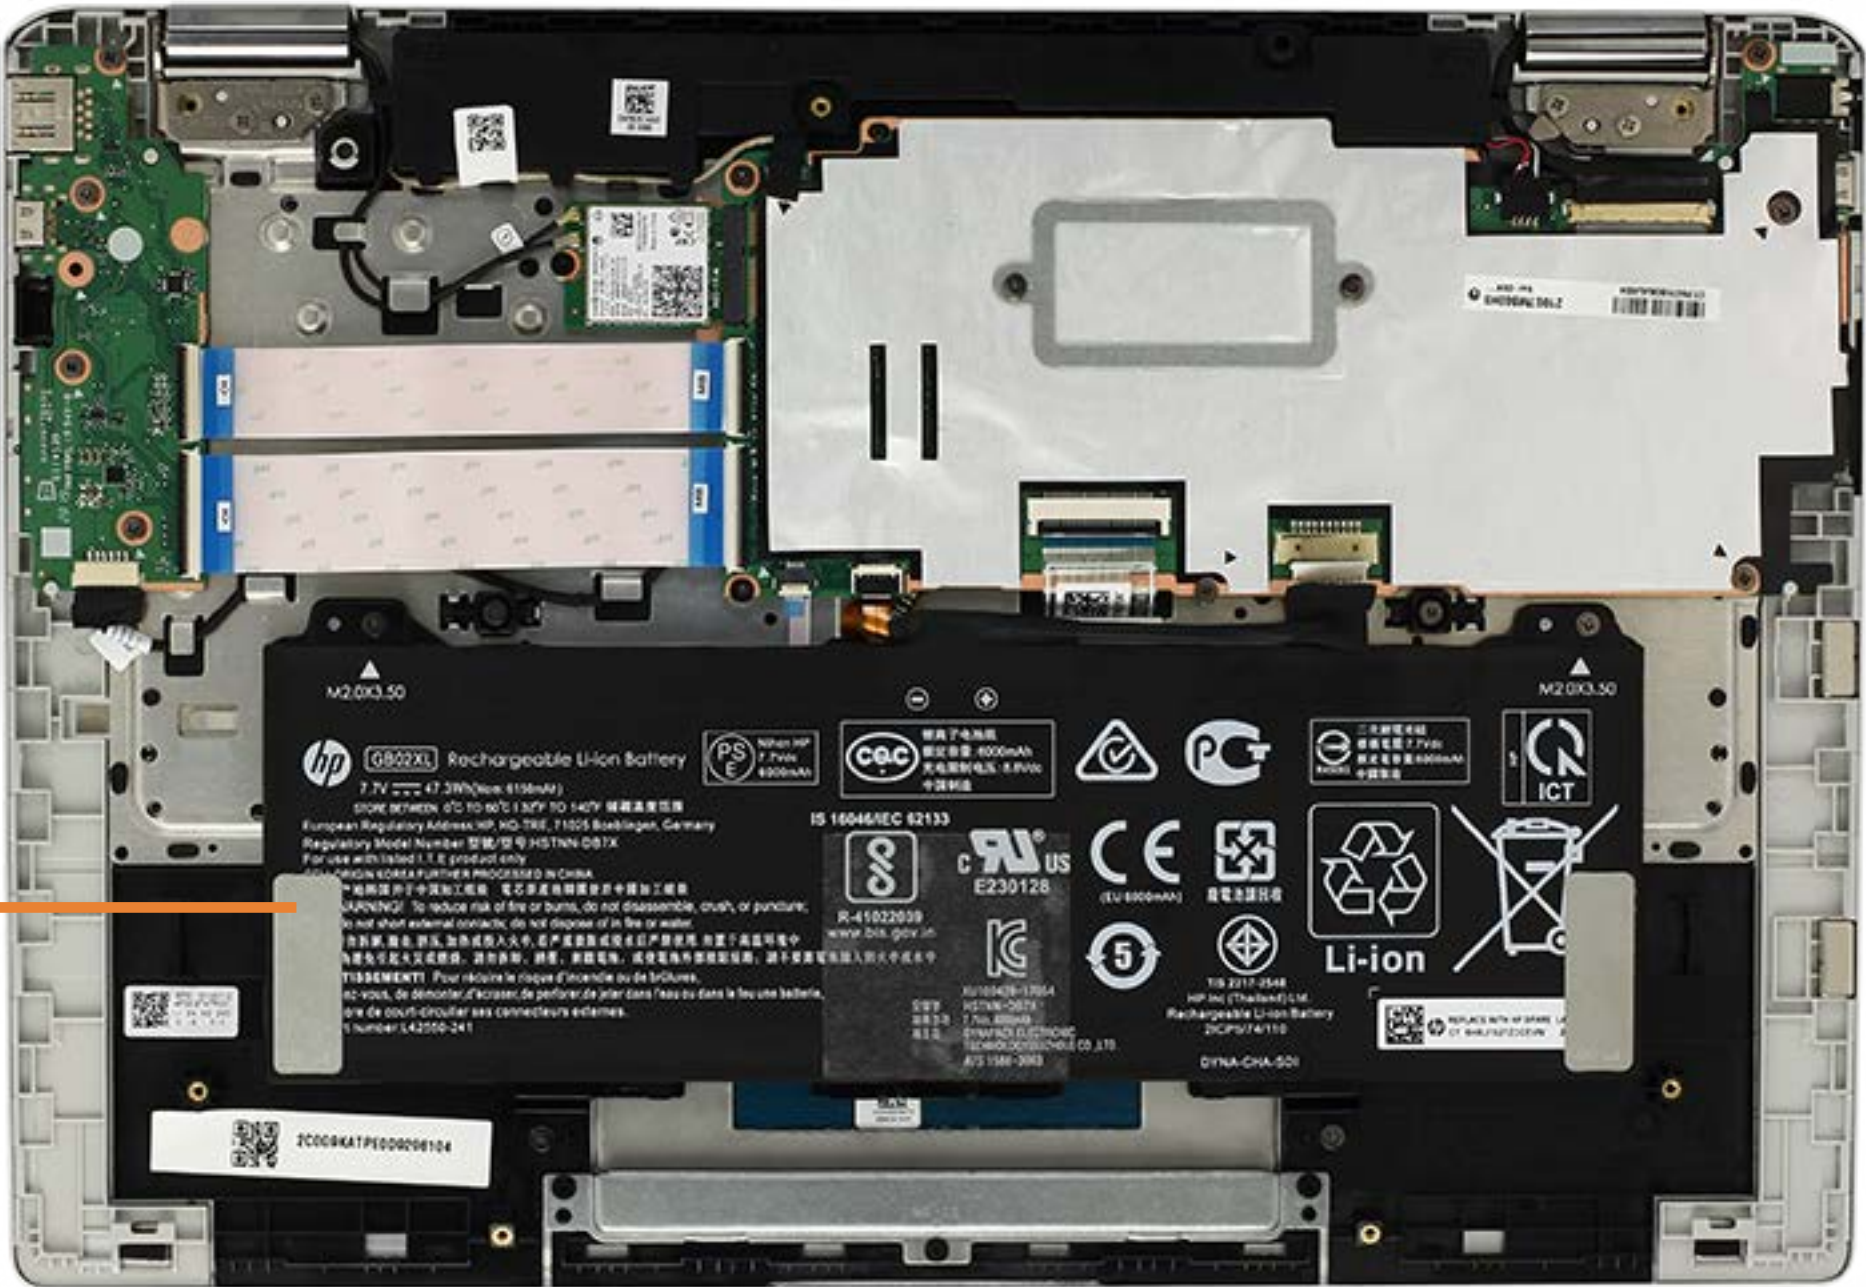


[Go to External Views](#)



# TouchPad Board

[Back to Part List](#)

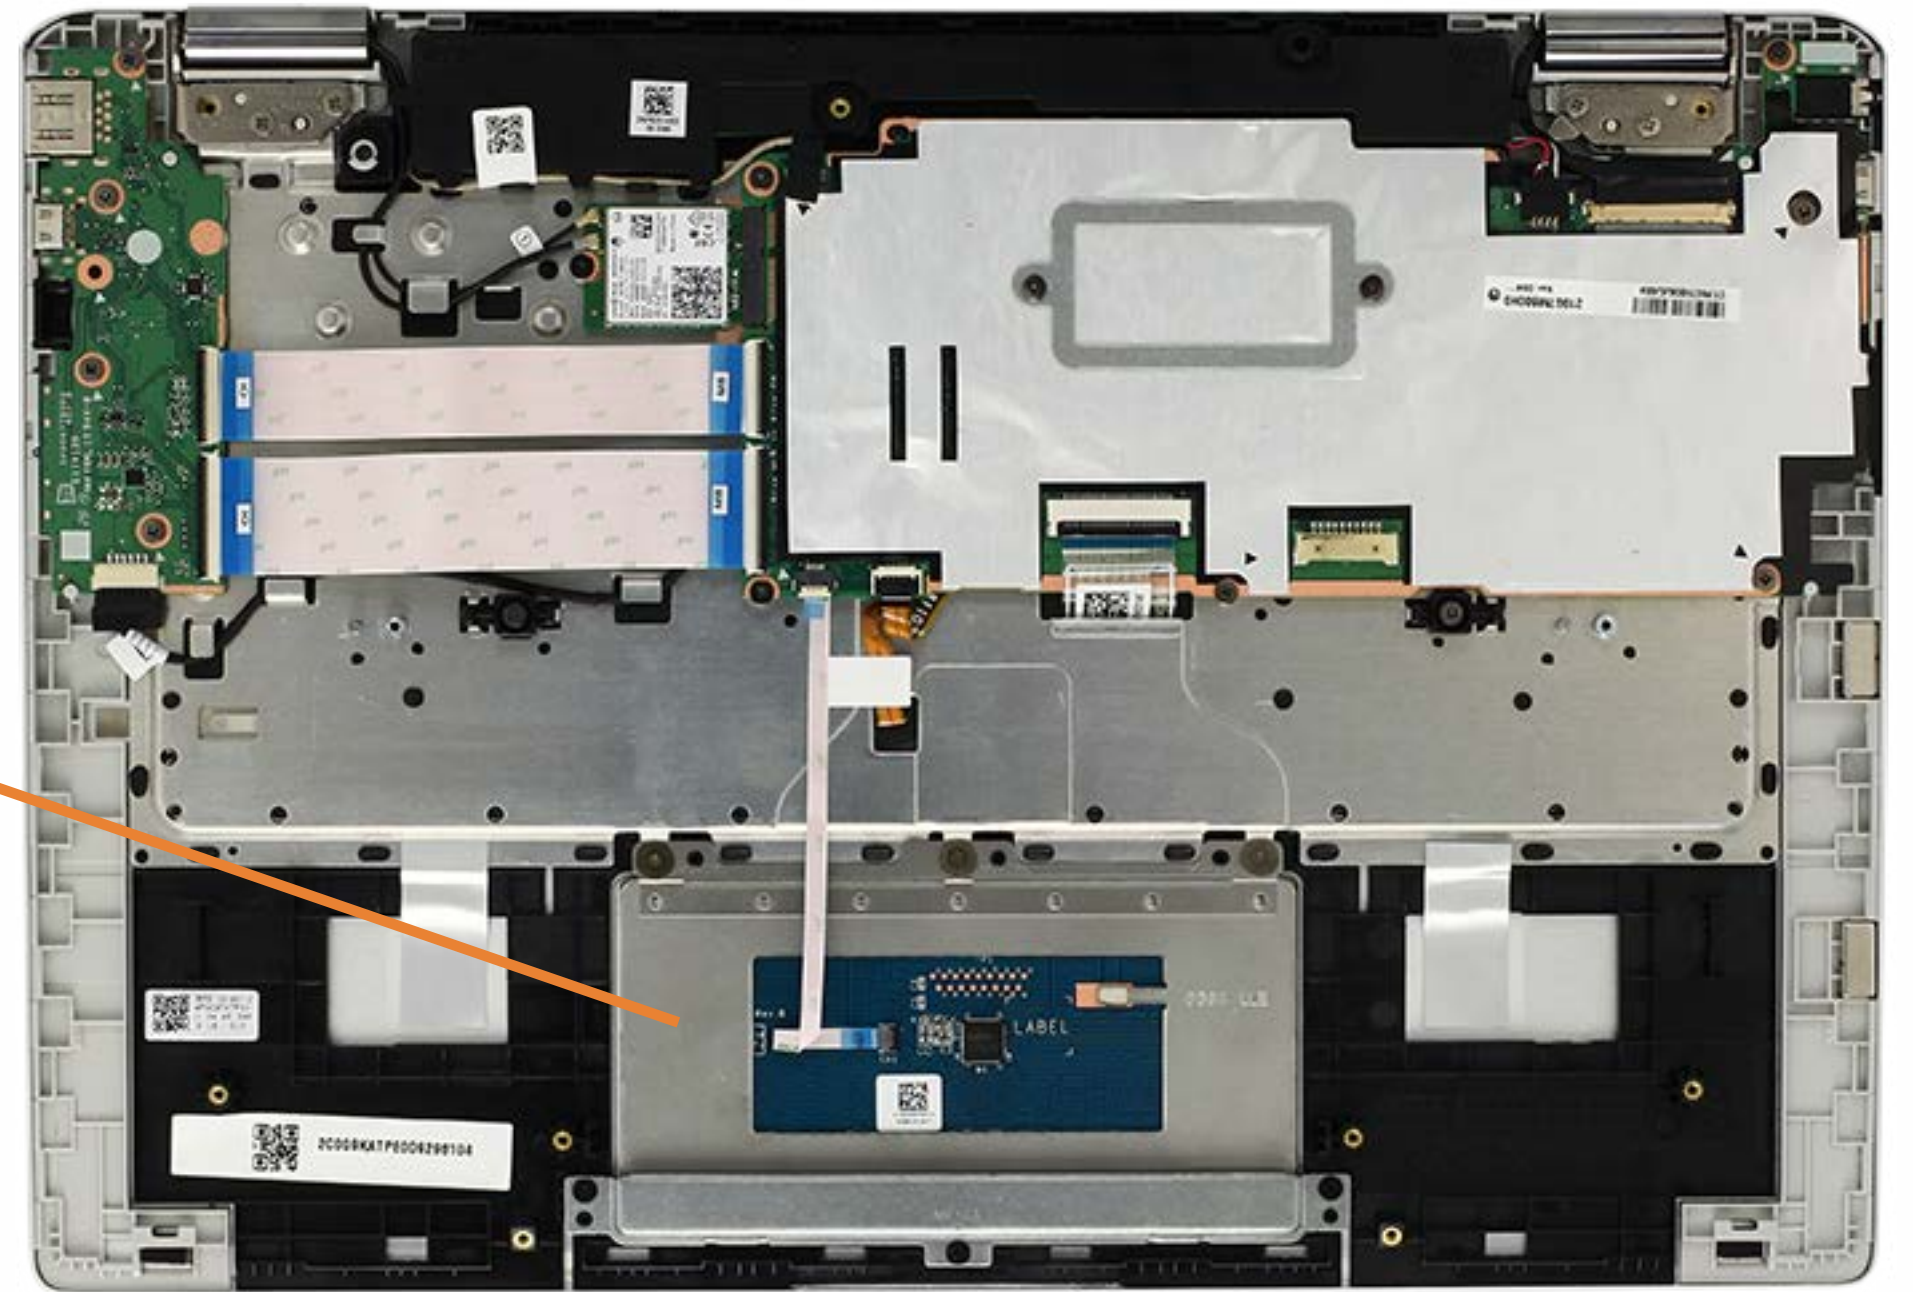


[Go to External Views](#)



# WLAN Module

[Back to Part List](#)


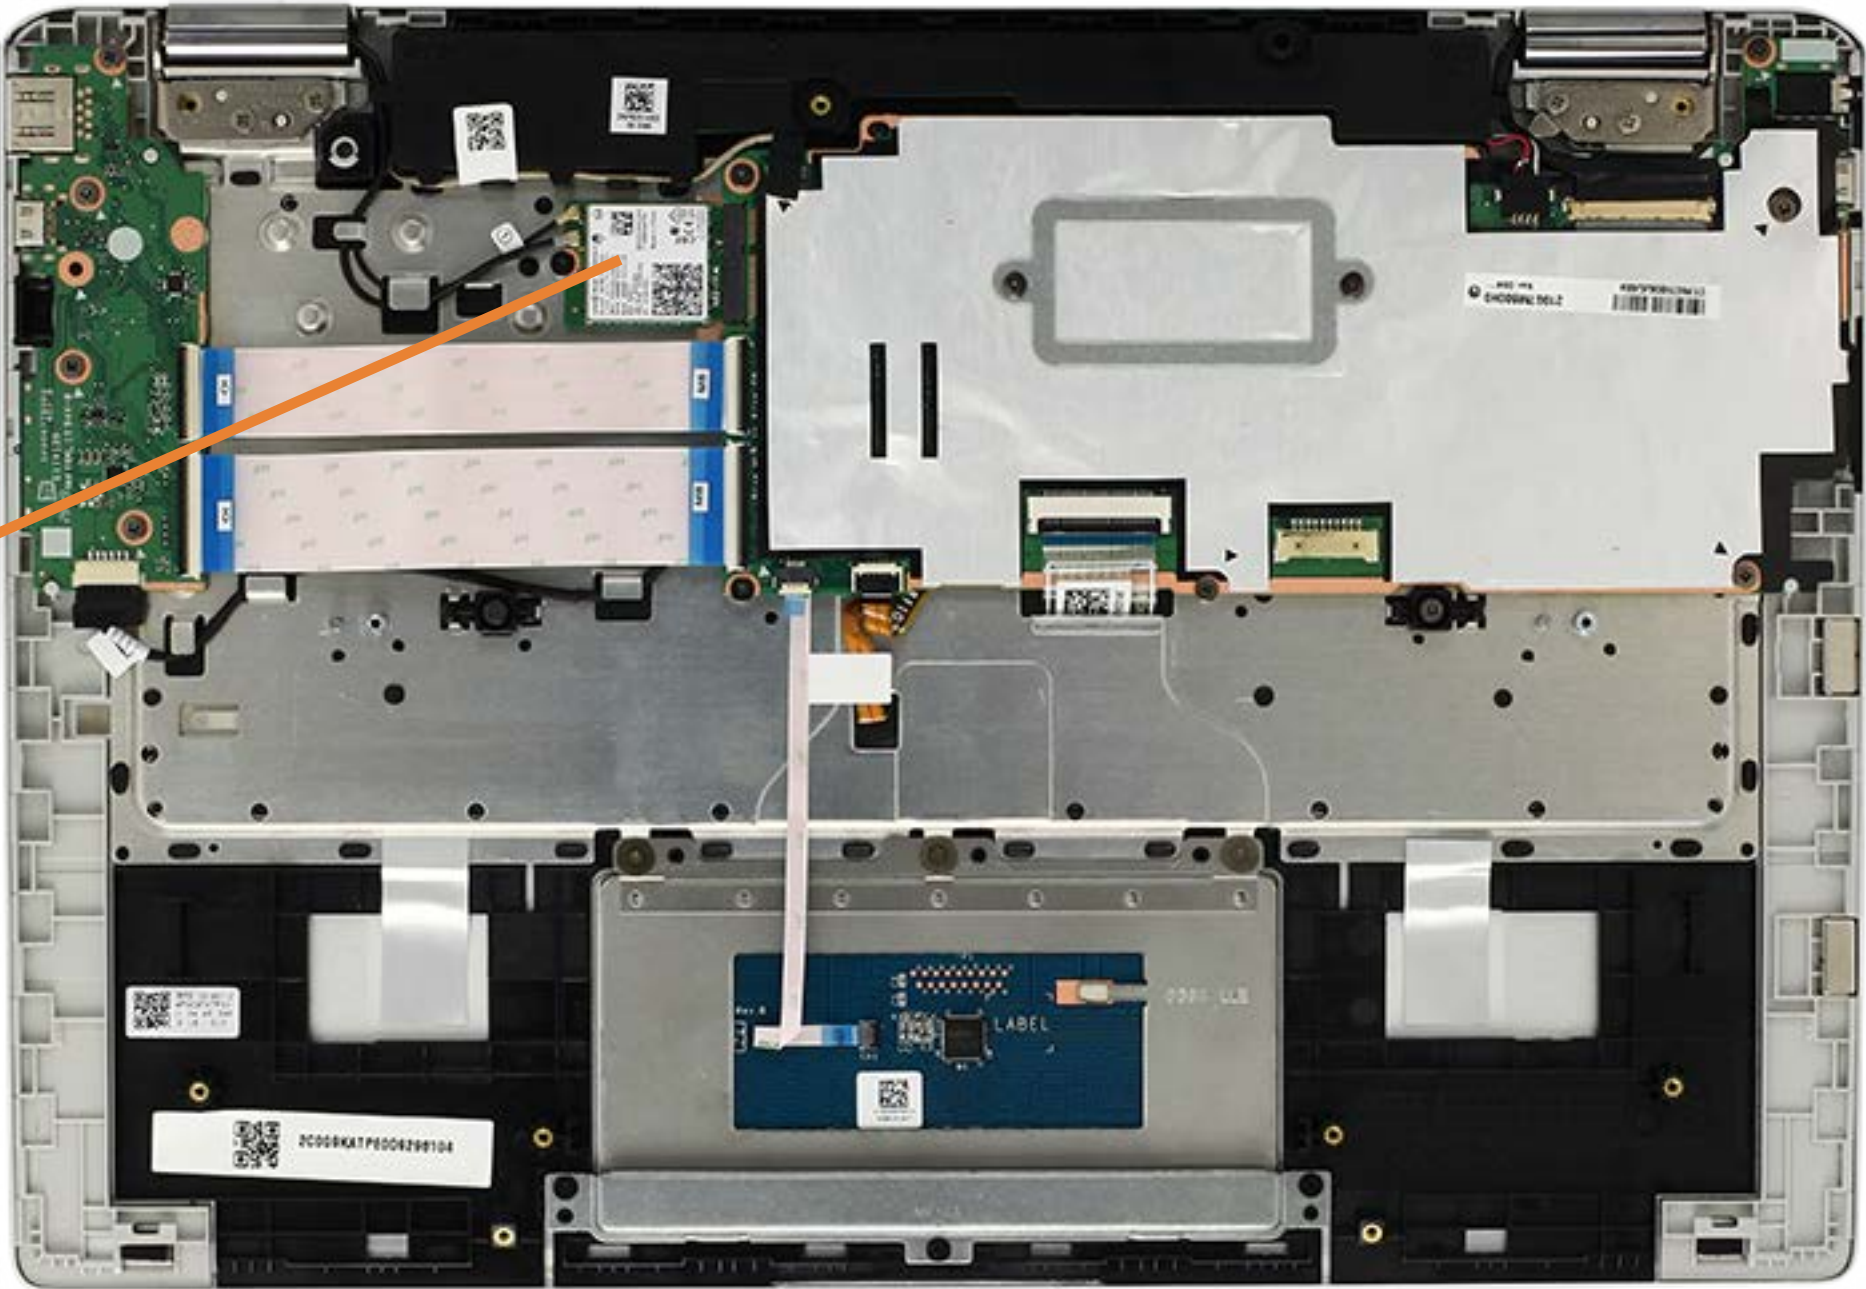


[Go to External Views](#)



# USB Board

[Back to Part List](#)

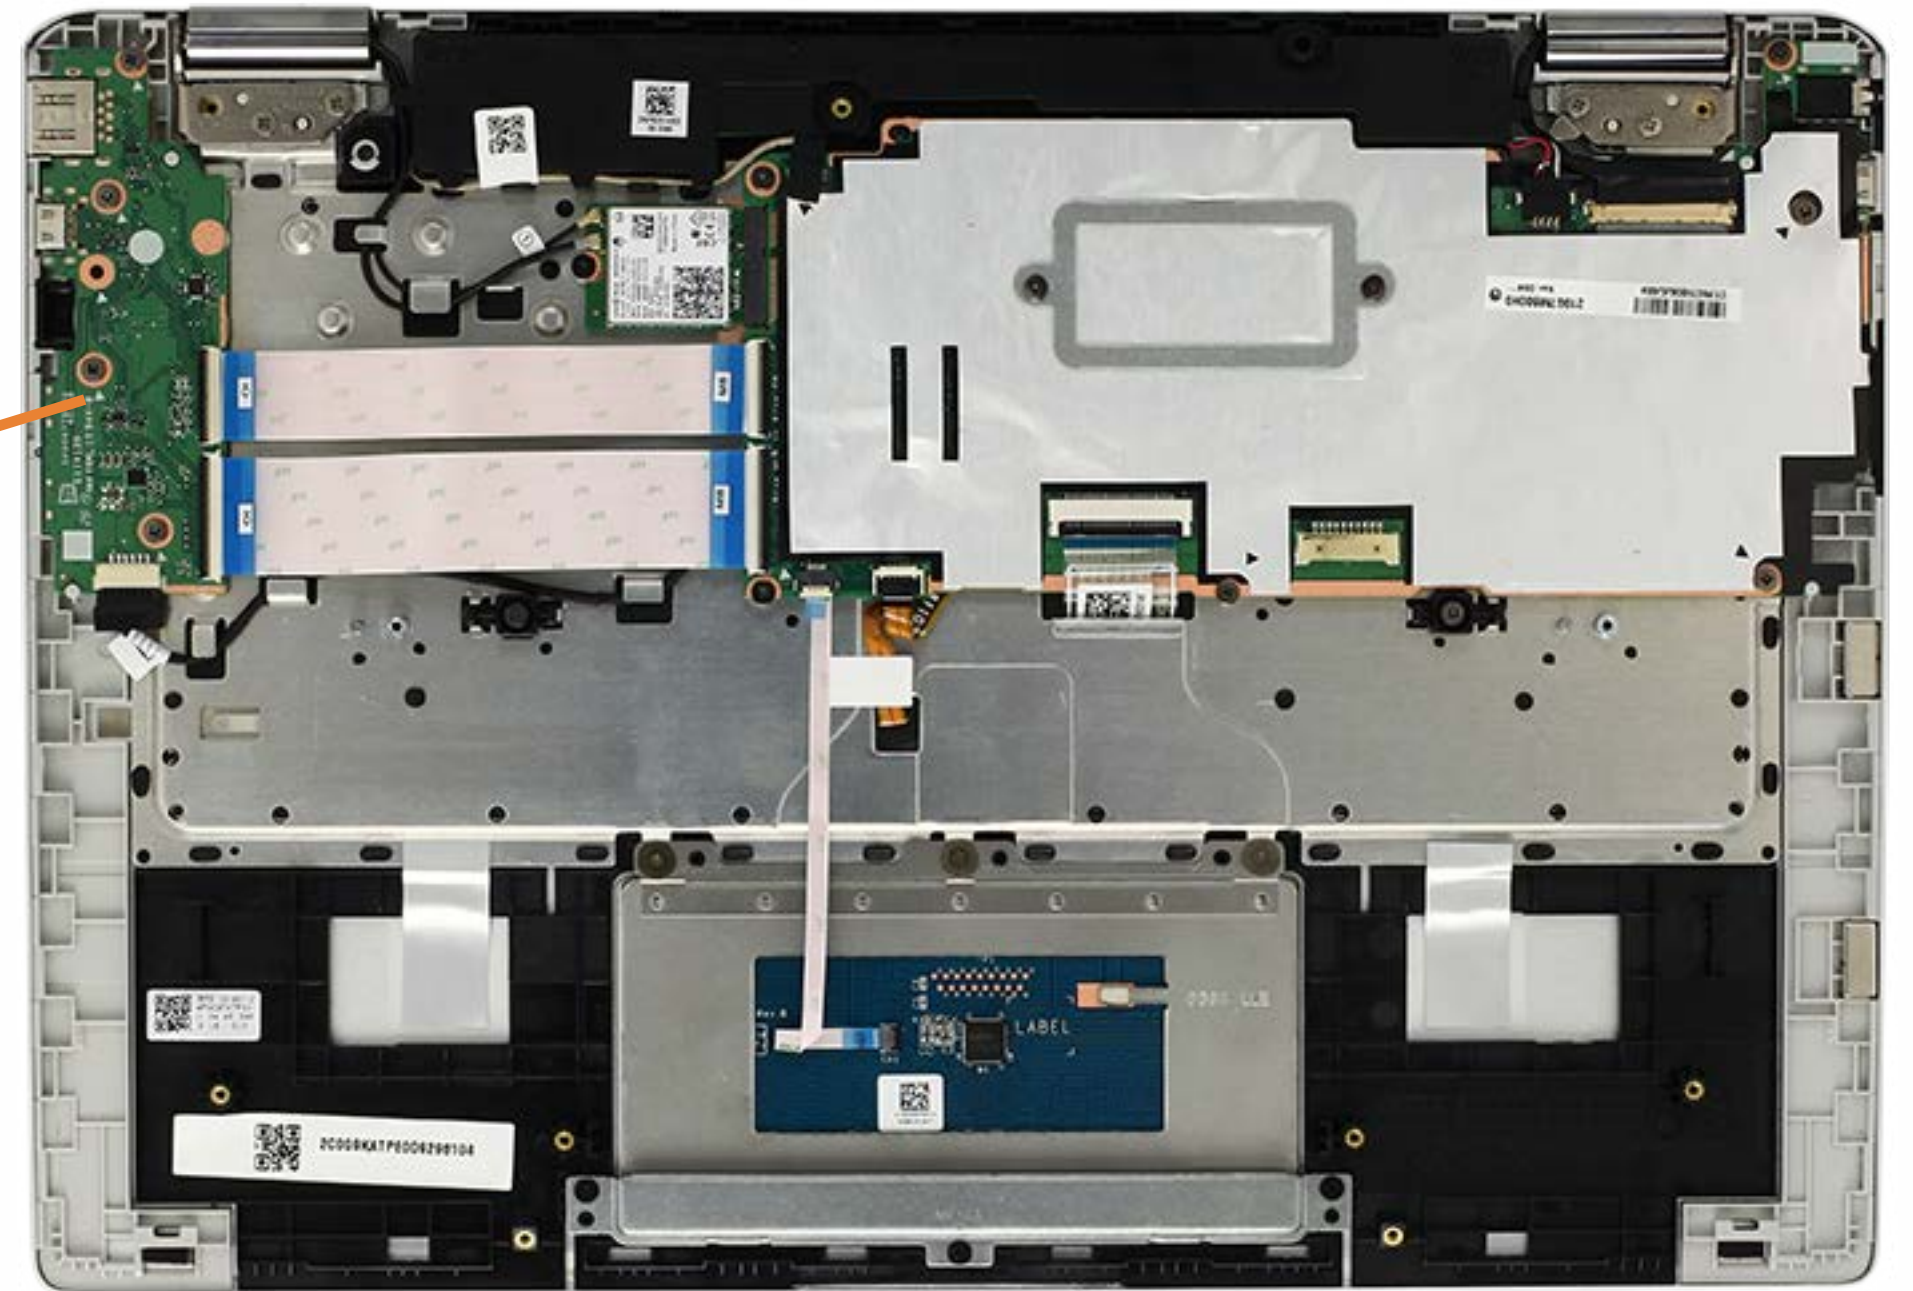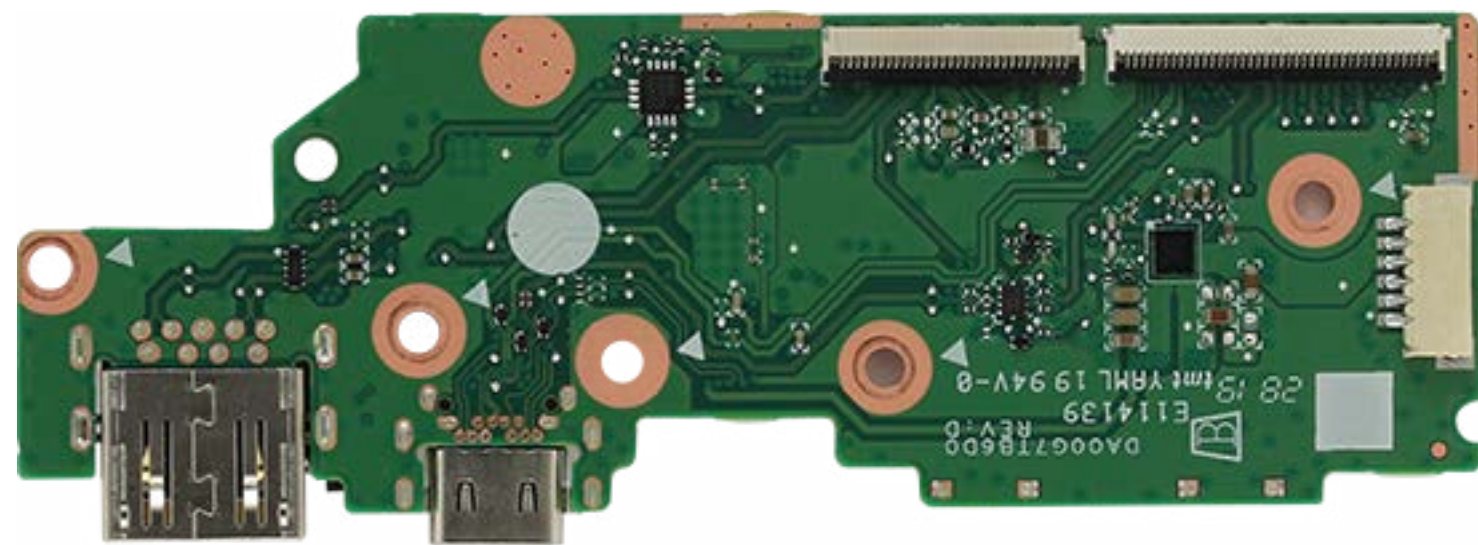


[Go to External Views](#)



# Speaker Assembly

[Back to Part List](#)

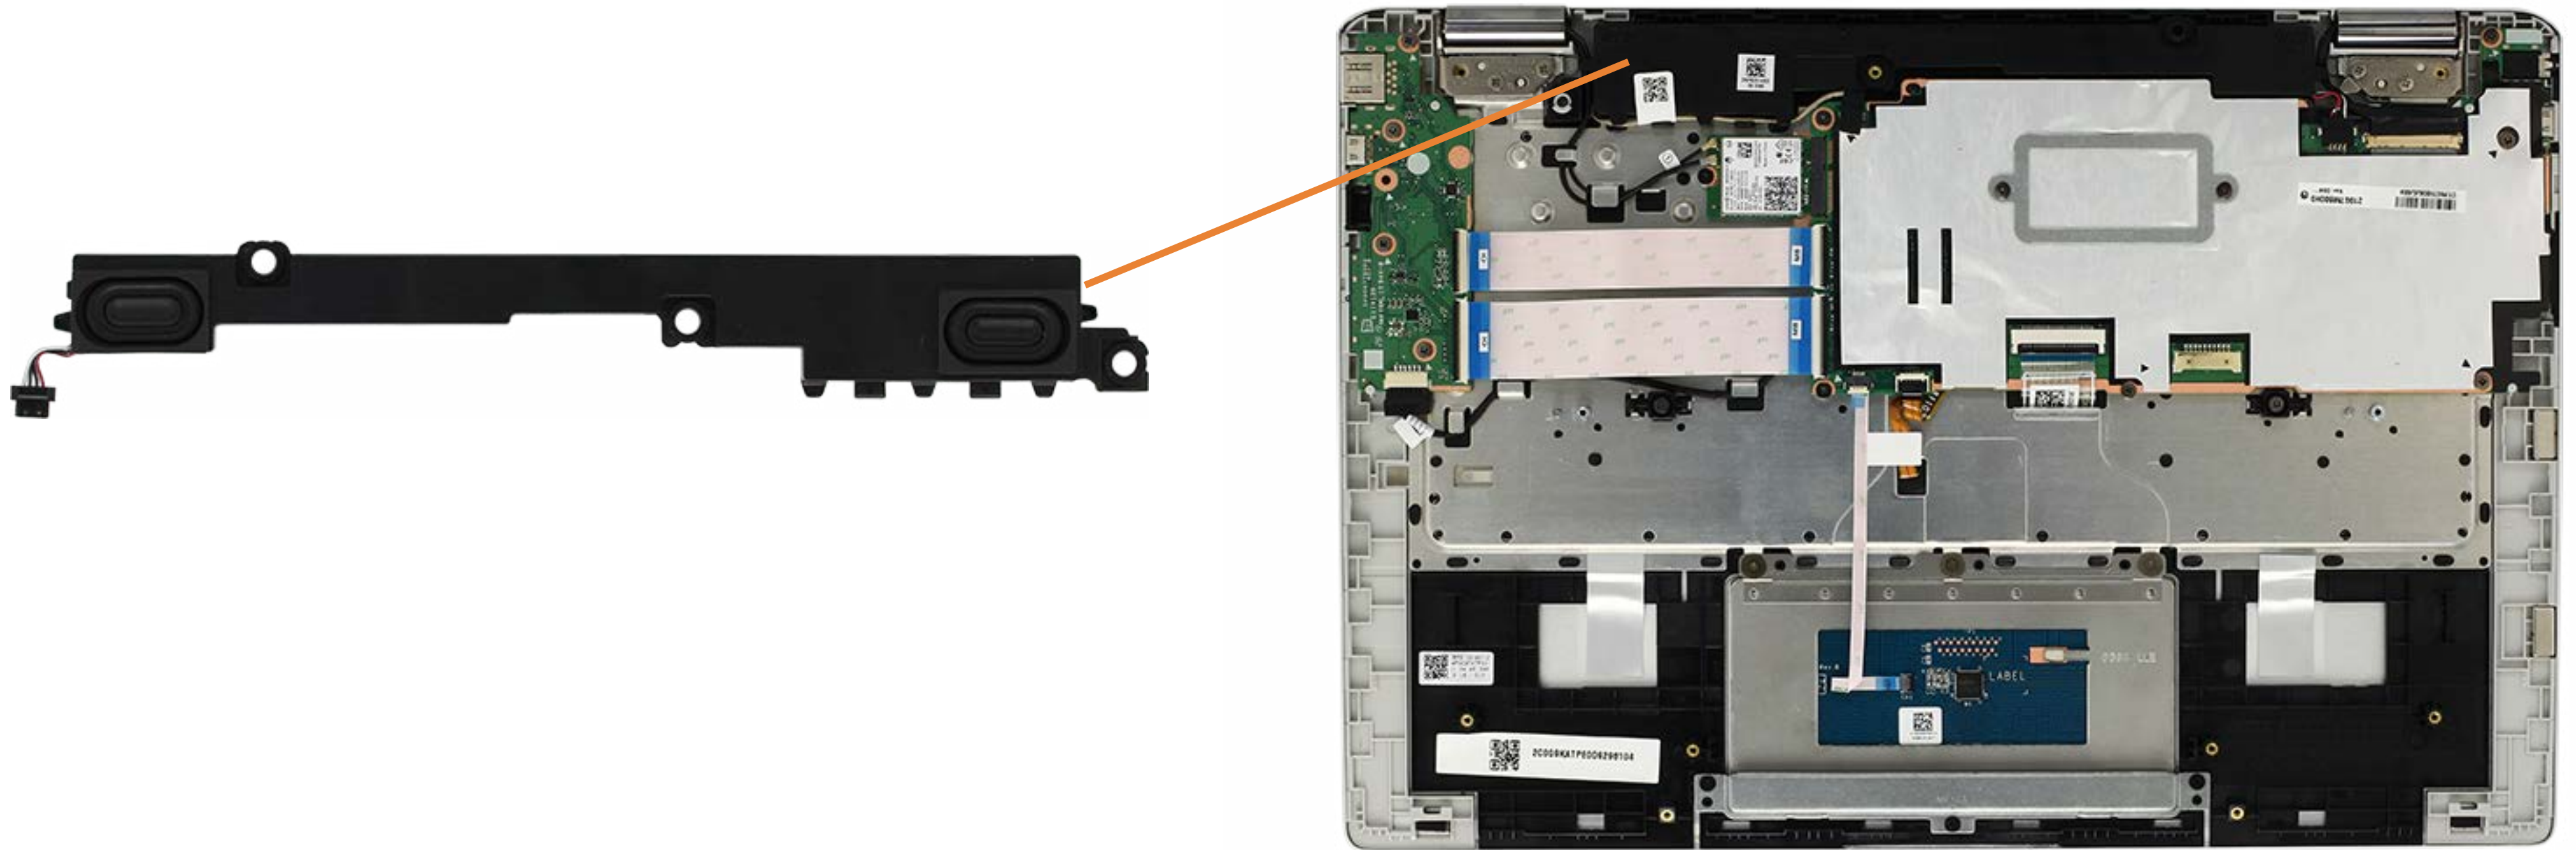


[Go to External Views](#)


# Motherboard

[Back to Part List](#)

Top

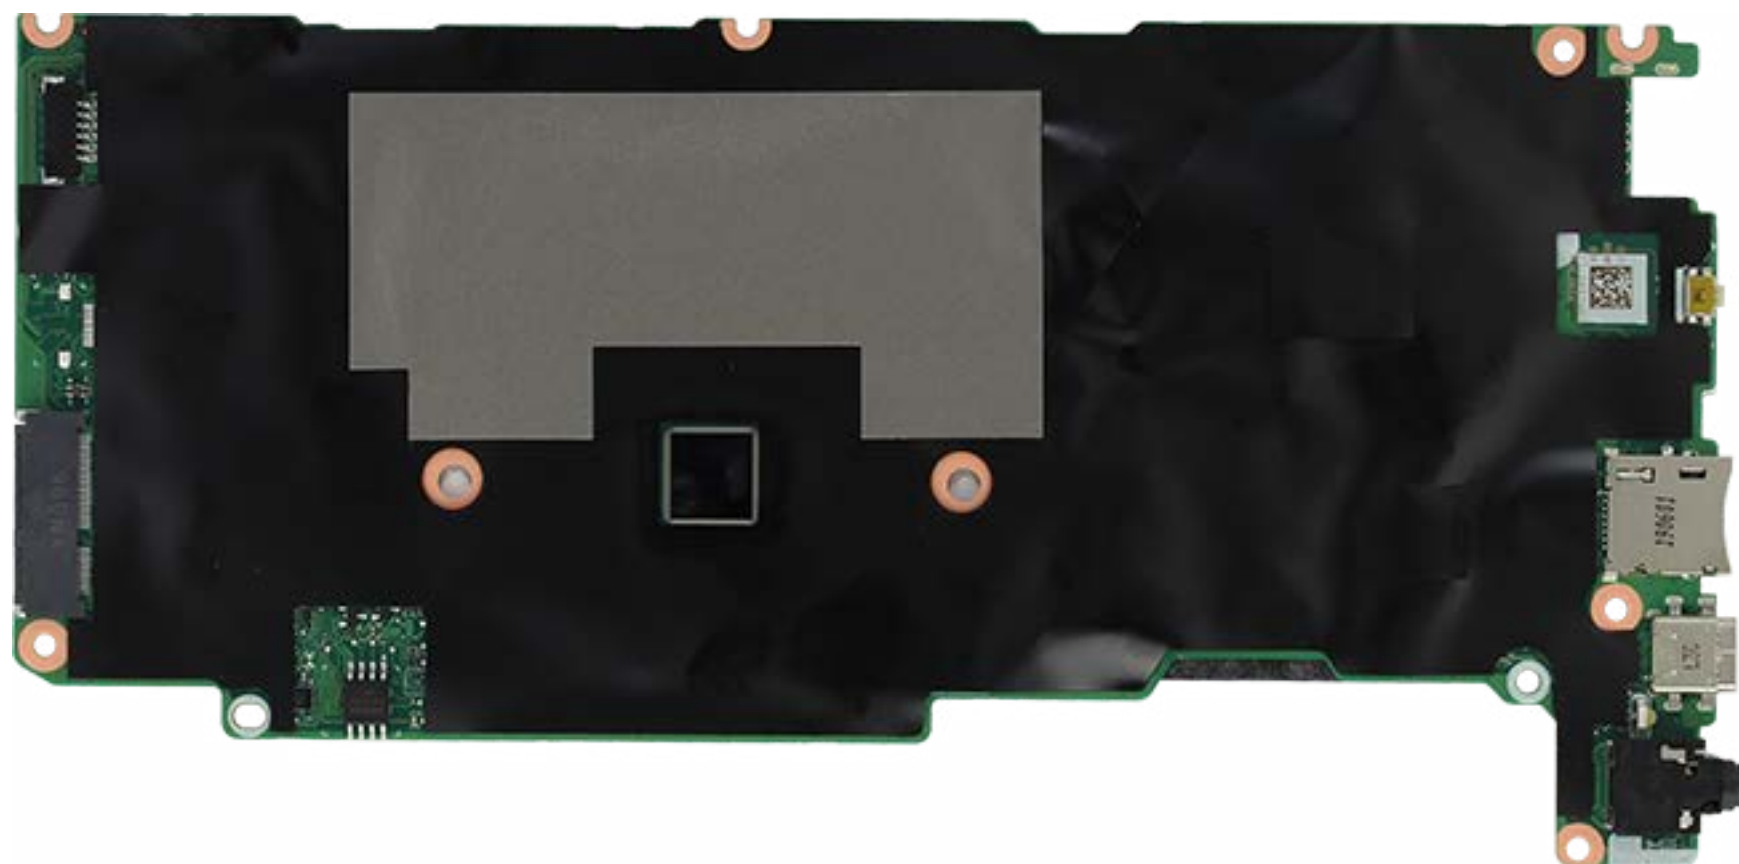

Bottom

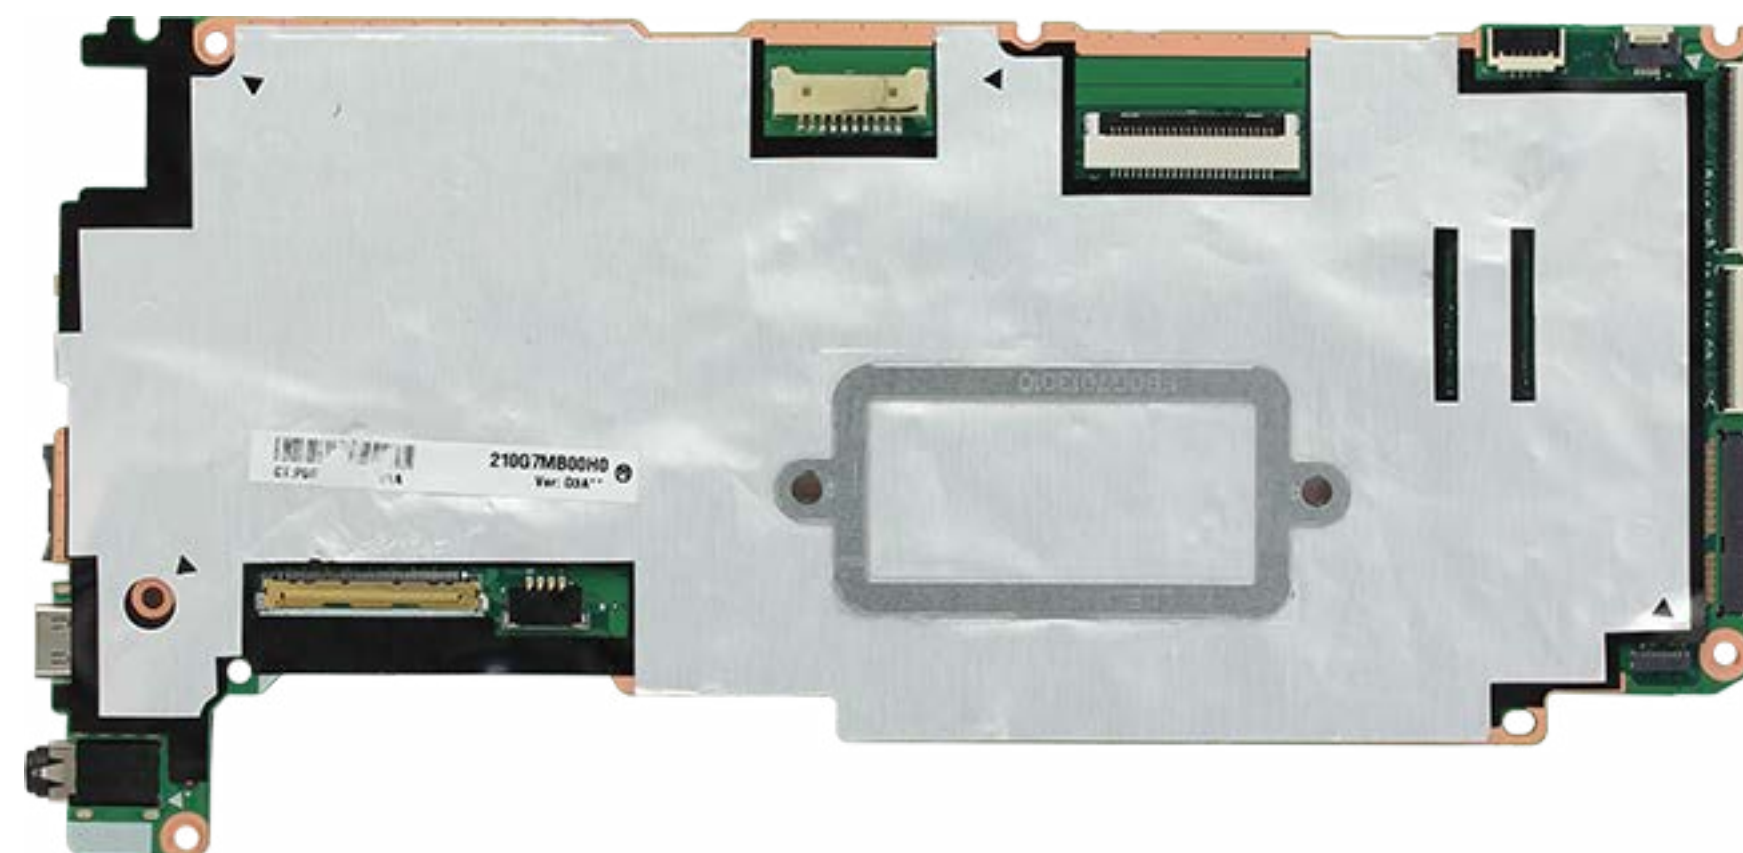

[Go to External Views](#)



# Top Cover

[Back to Part List](#)

Top

Bottom



[Go to External Views](#)

# Display Panel Assembly

[Back to Part List](#)




[Go to External Views](#)



# LCD Panel


[Back to Part List](#)

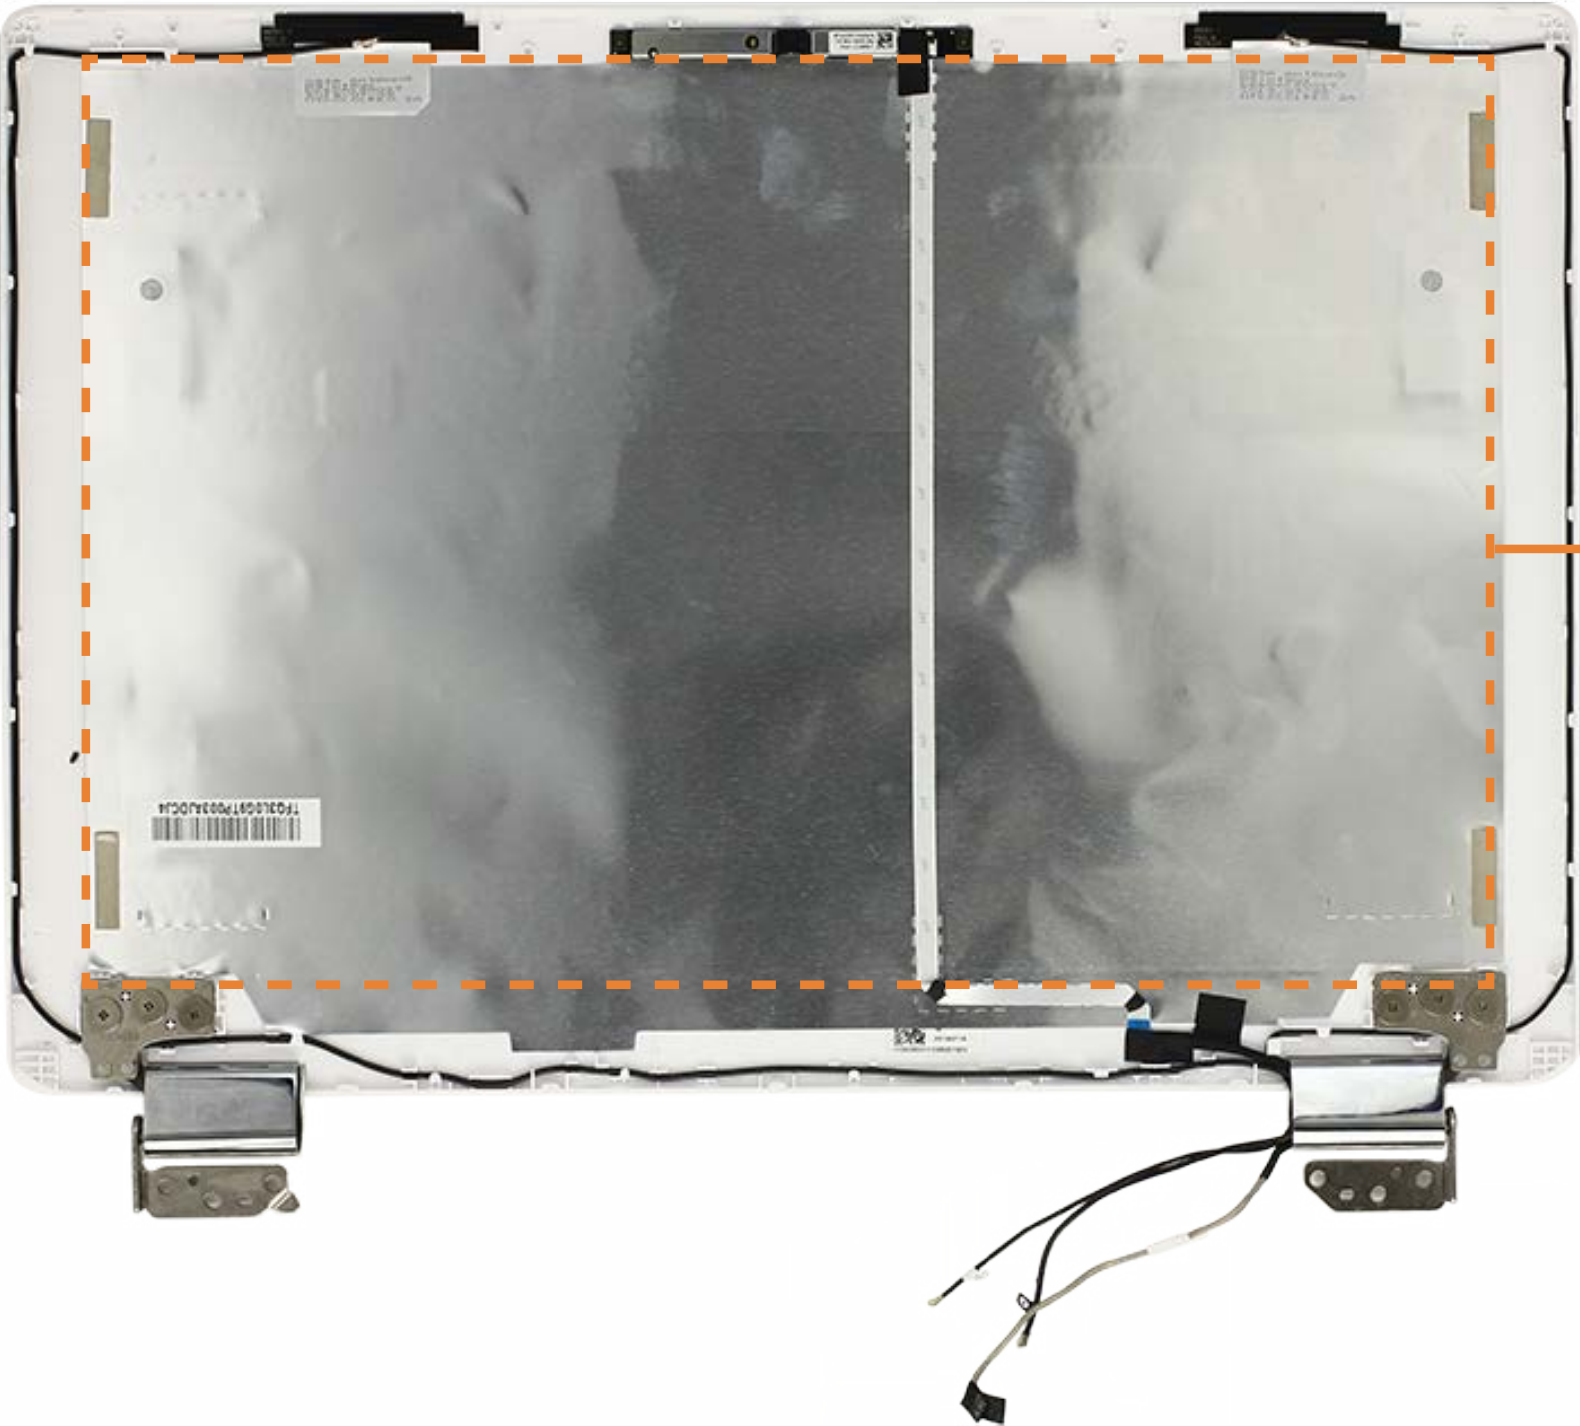

[Go to External Views](#)

# Webcam Board

[Back to Part List](#)

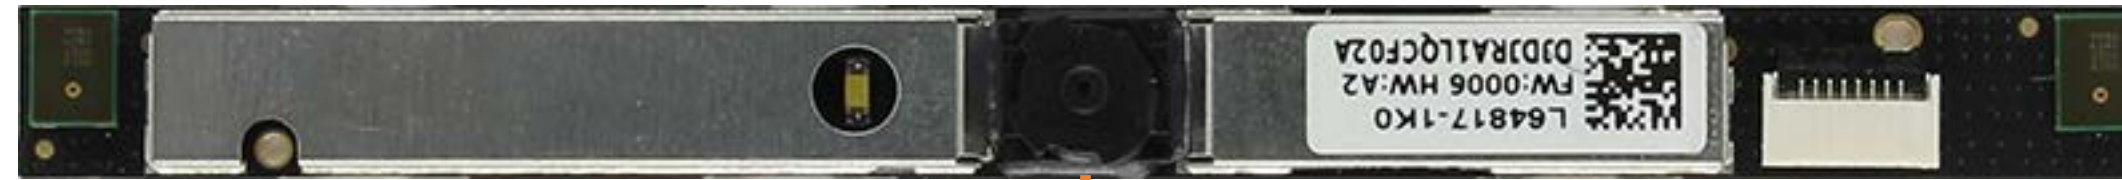

[Go to External Views](#)



# LCD Panel Hinges

[Back to Part List](#)



[Go to External Views](#)

# WLAN Antenna

[Back to Part List](#)



[Go to External Views](#)



# Sensor Board

[Back to Part List](#)



[Go to External Views](#)

# Touch Control Board

[Back to Part List](#)



[Go to External Views](#)