

Interactive Part Locator

HP 280 G5 MT PC

Welcome to the interactive part locator for the
HP 280 G5 MT PC

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left


Right

Rear

Internal

Parts List

Front View

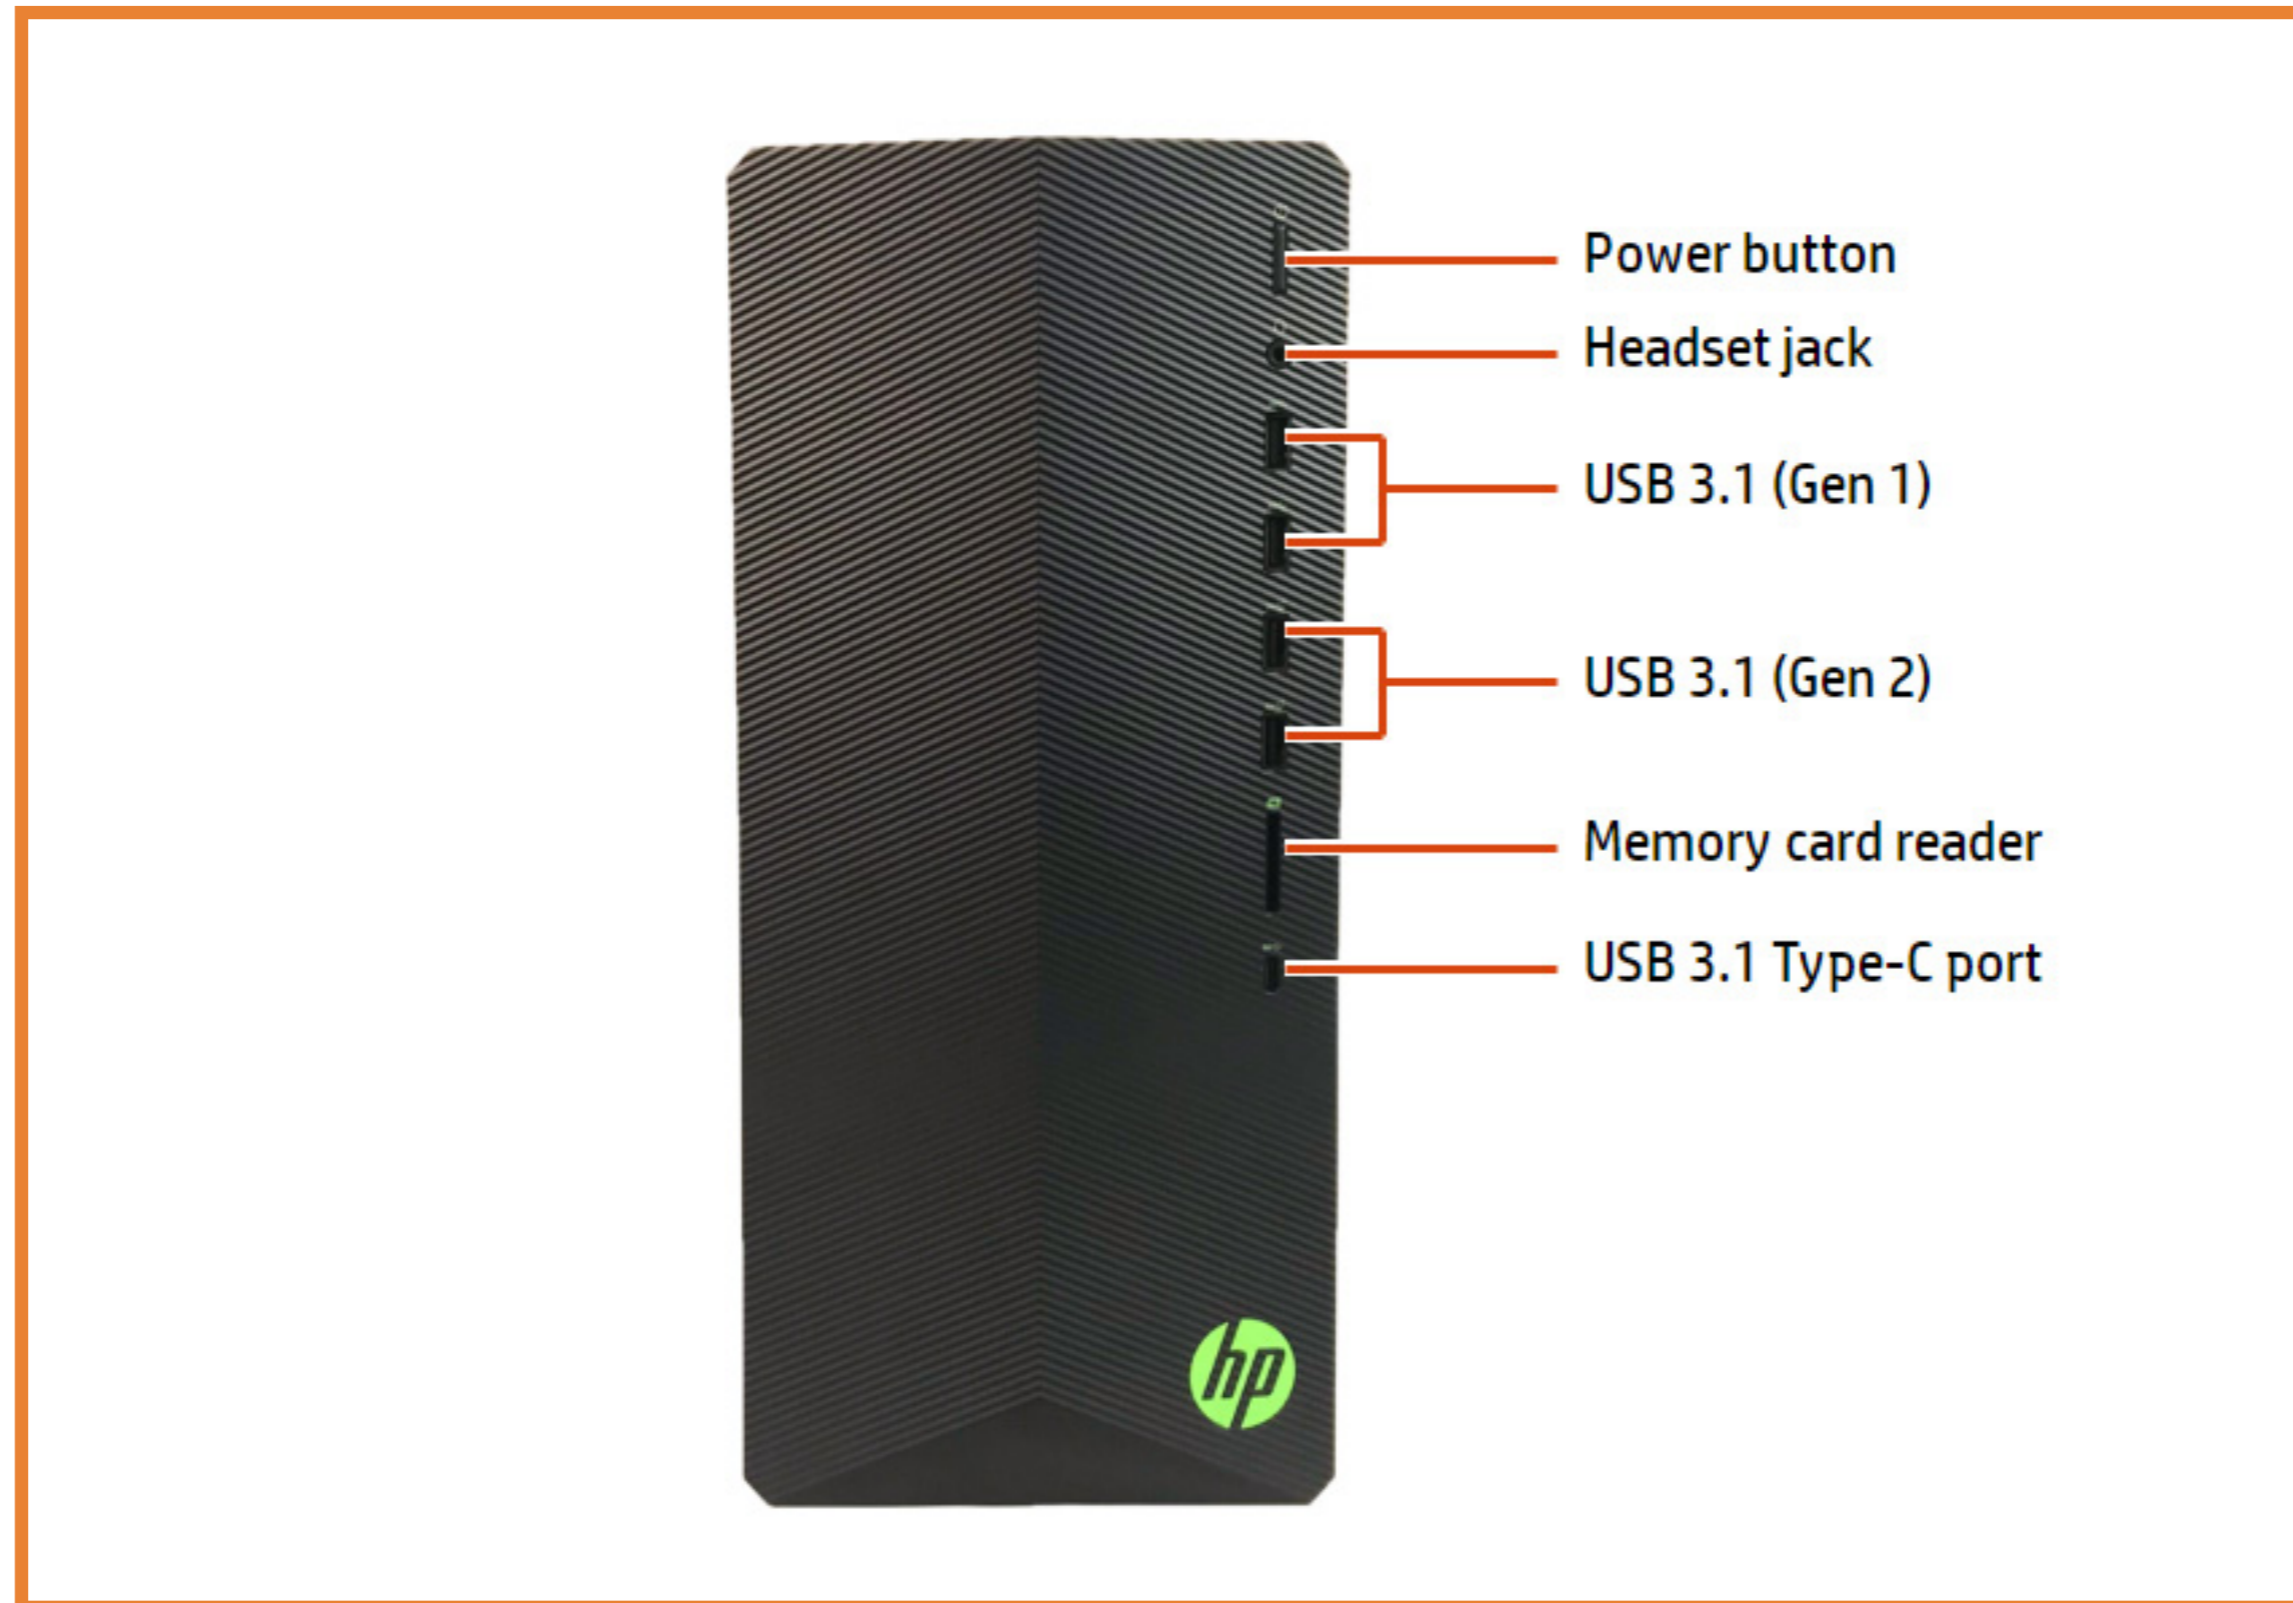


Left View



Right View



Rear View

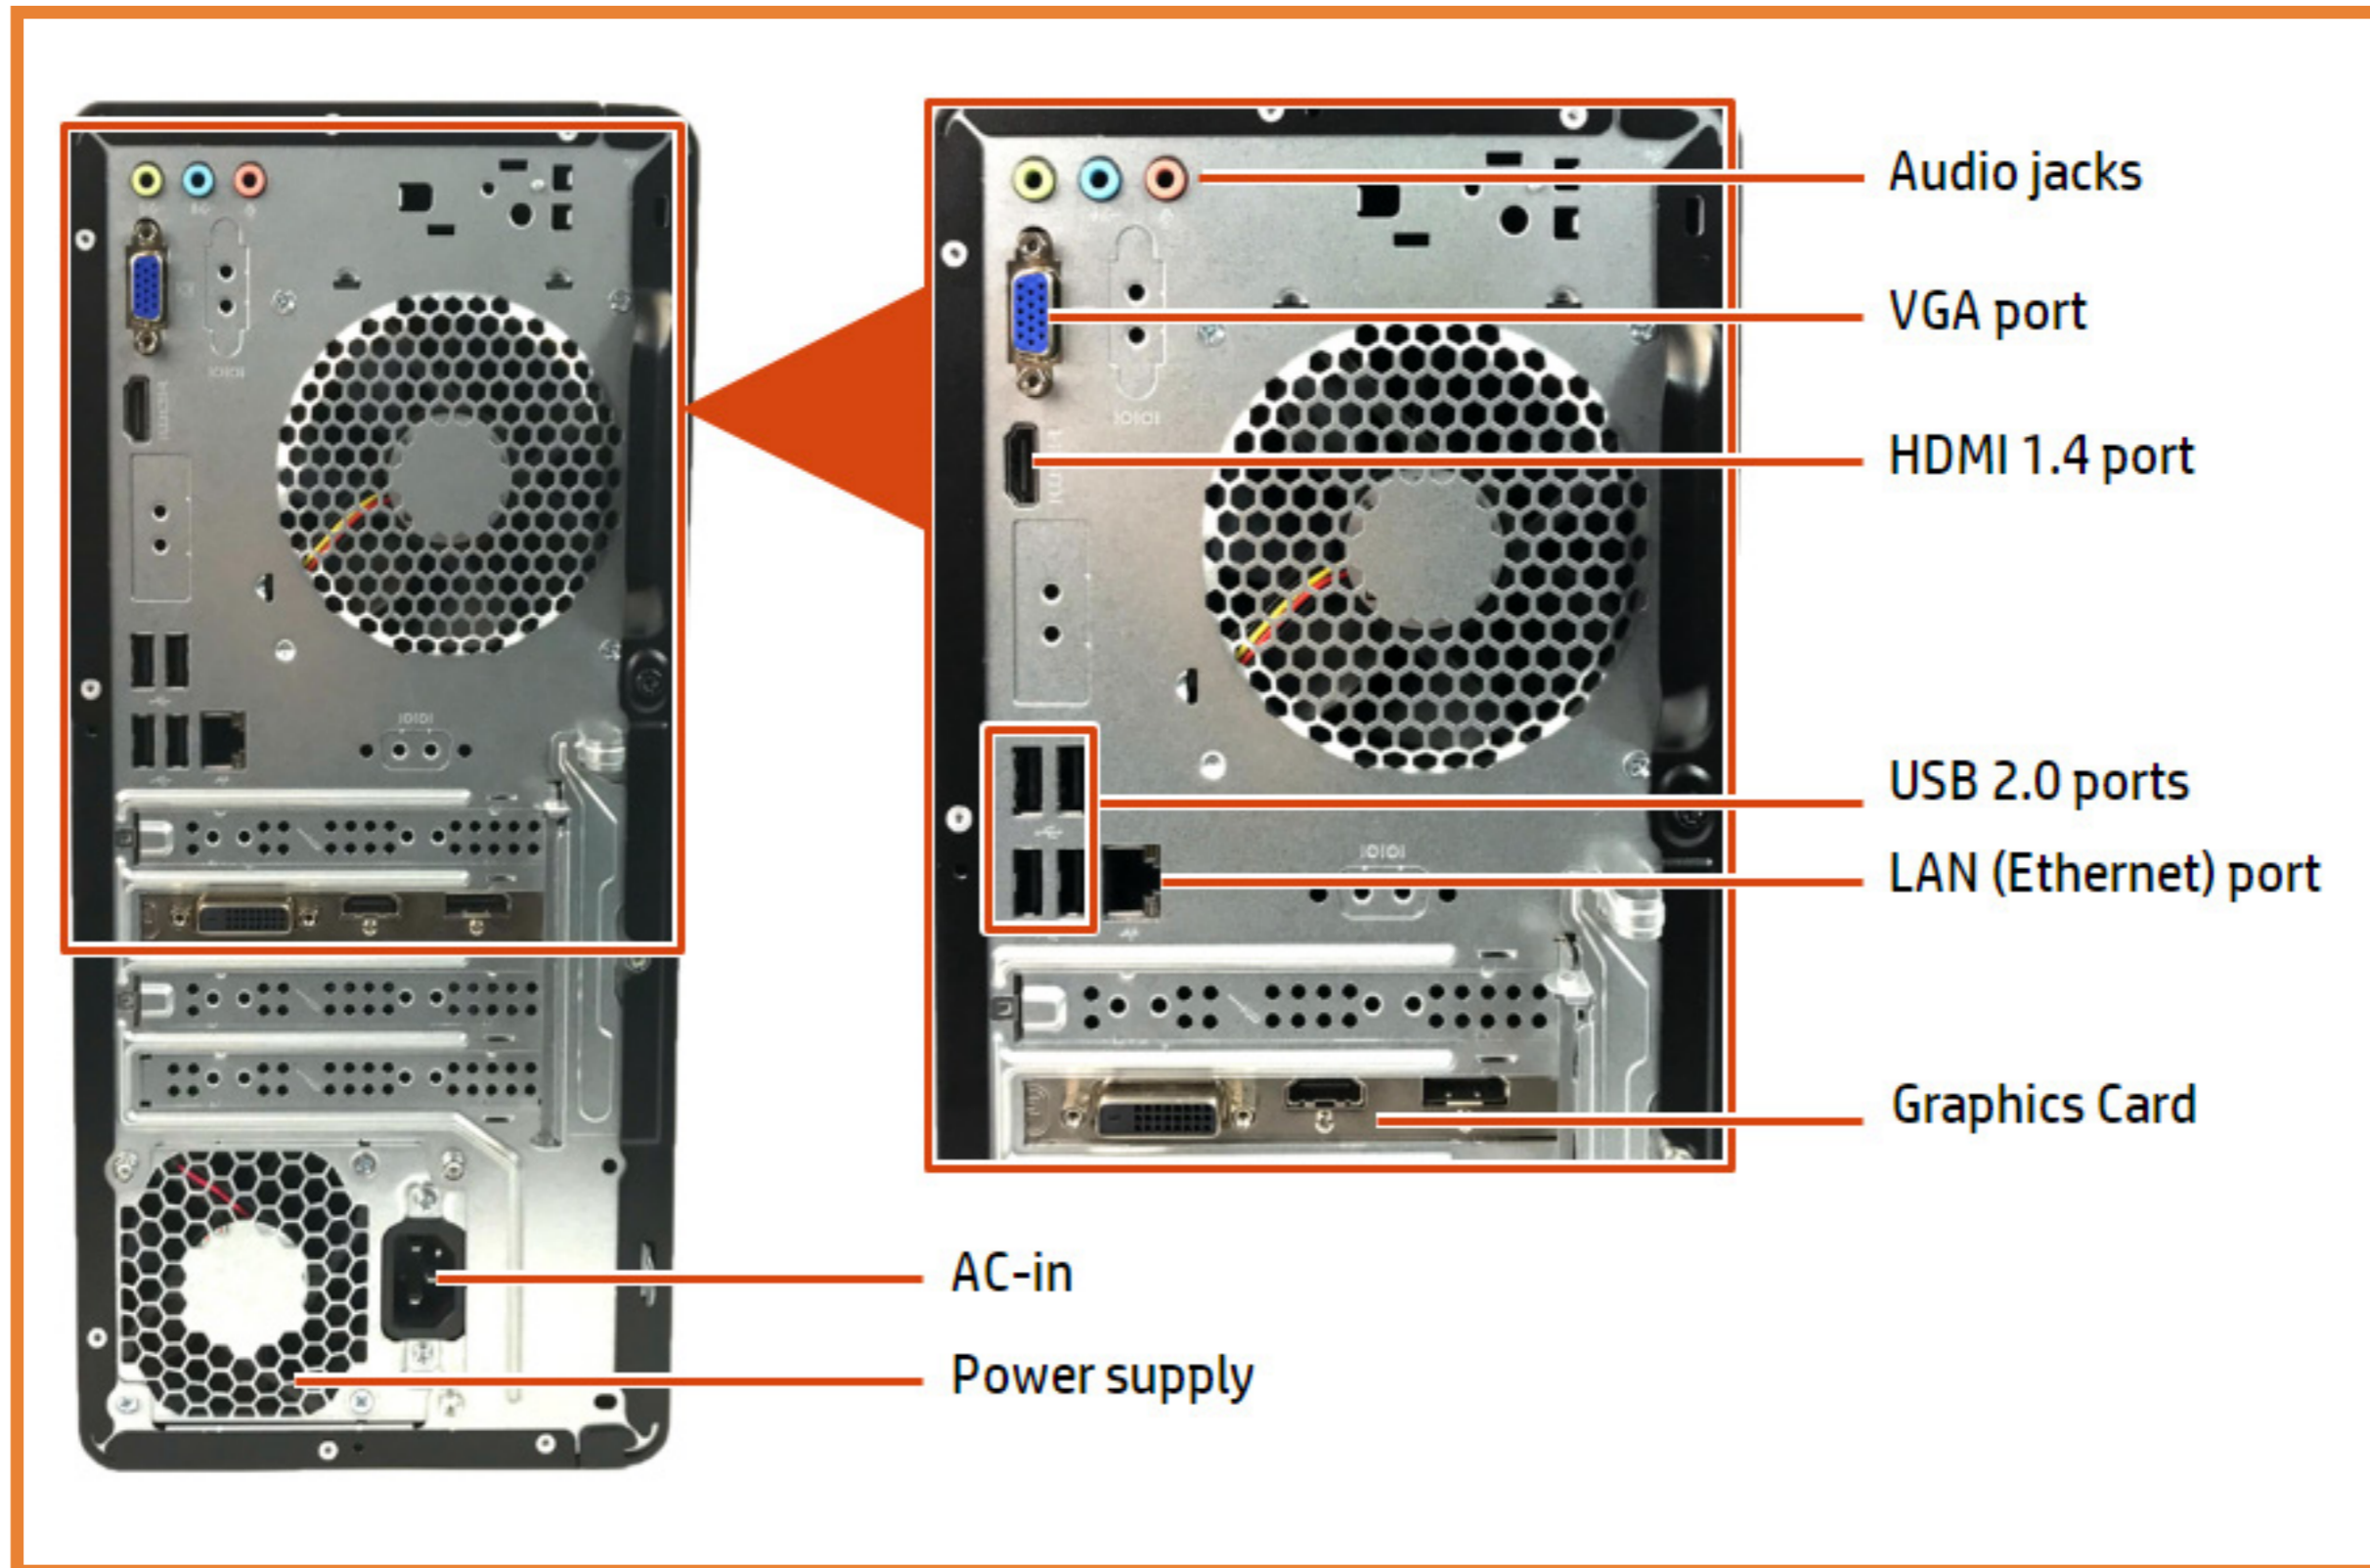

Internal View 1




Expansion Card


Drive Cage

Drive Cage Bracket

Internal View 2

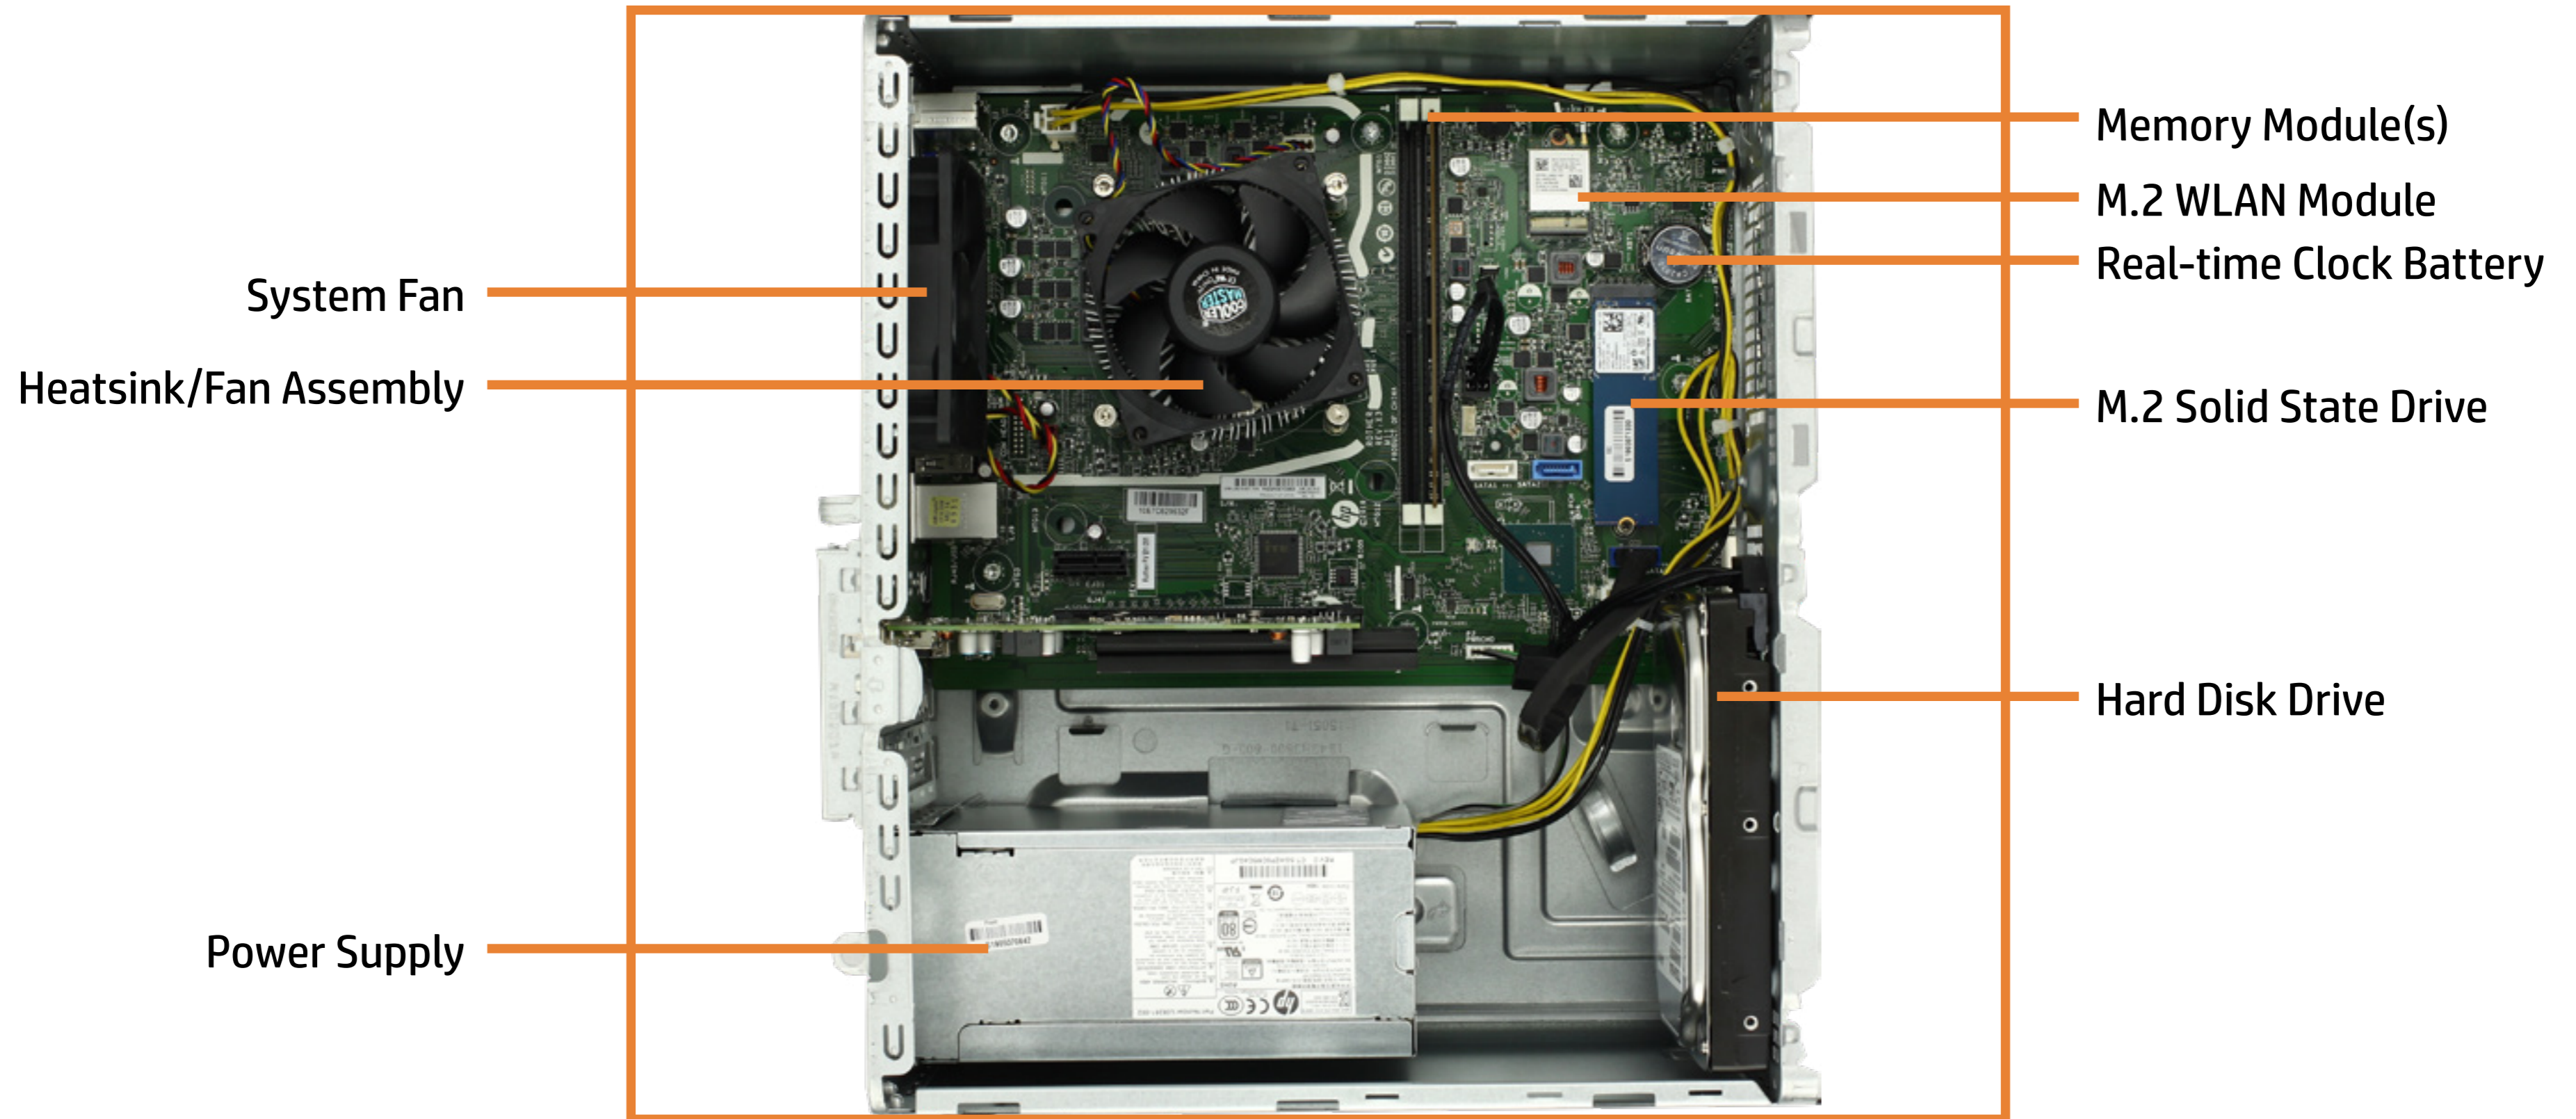

Internal View 3

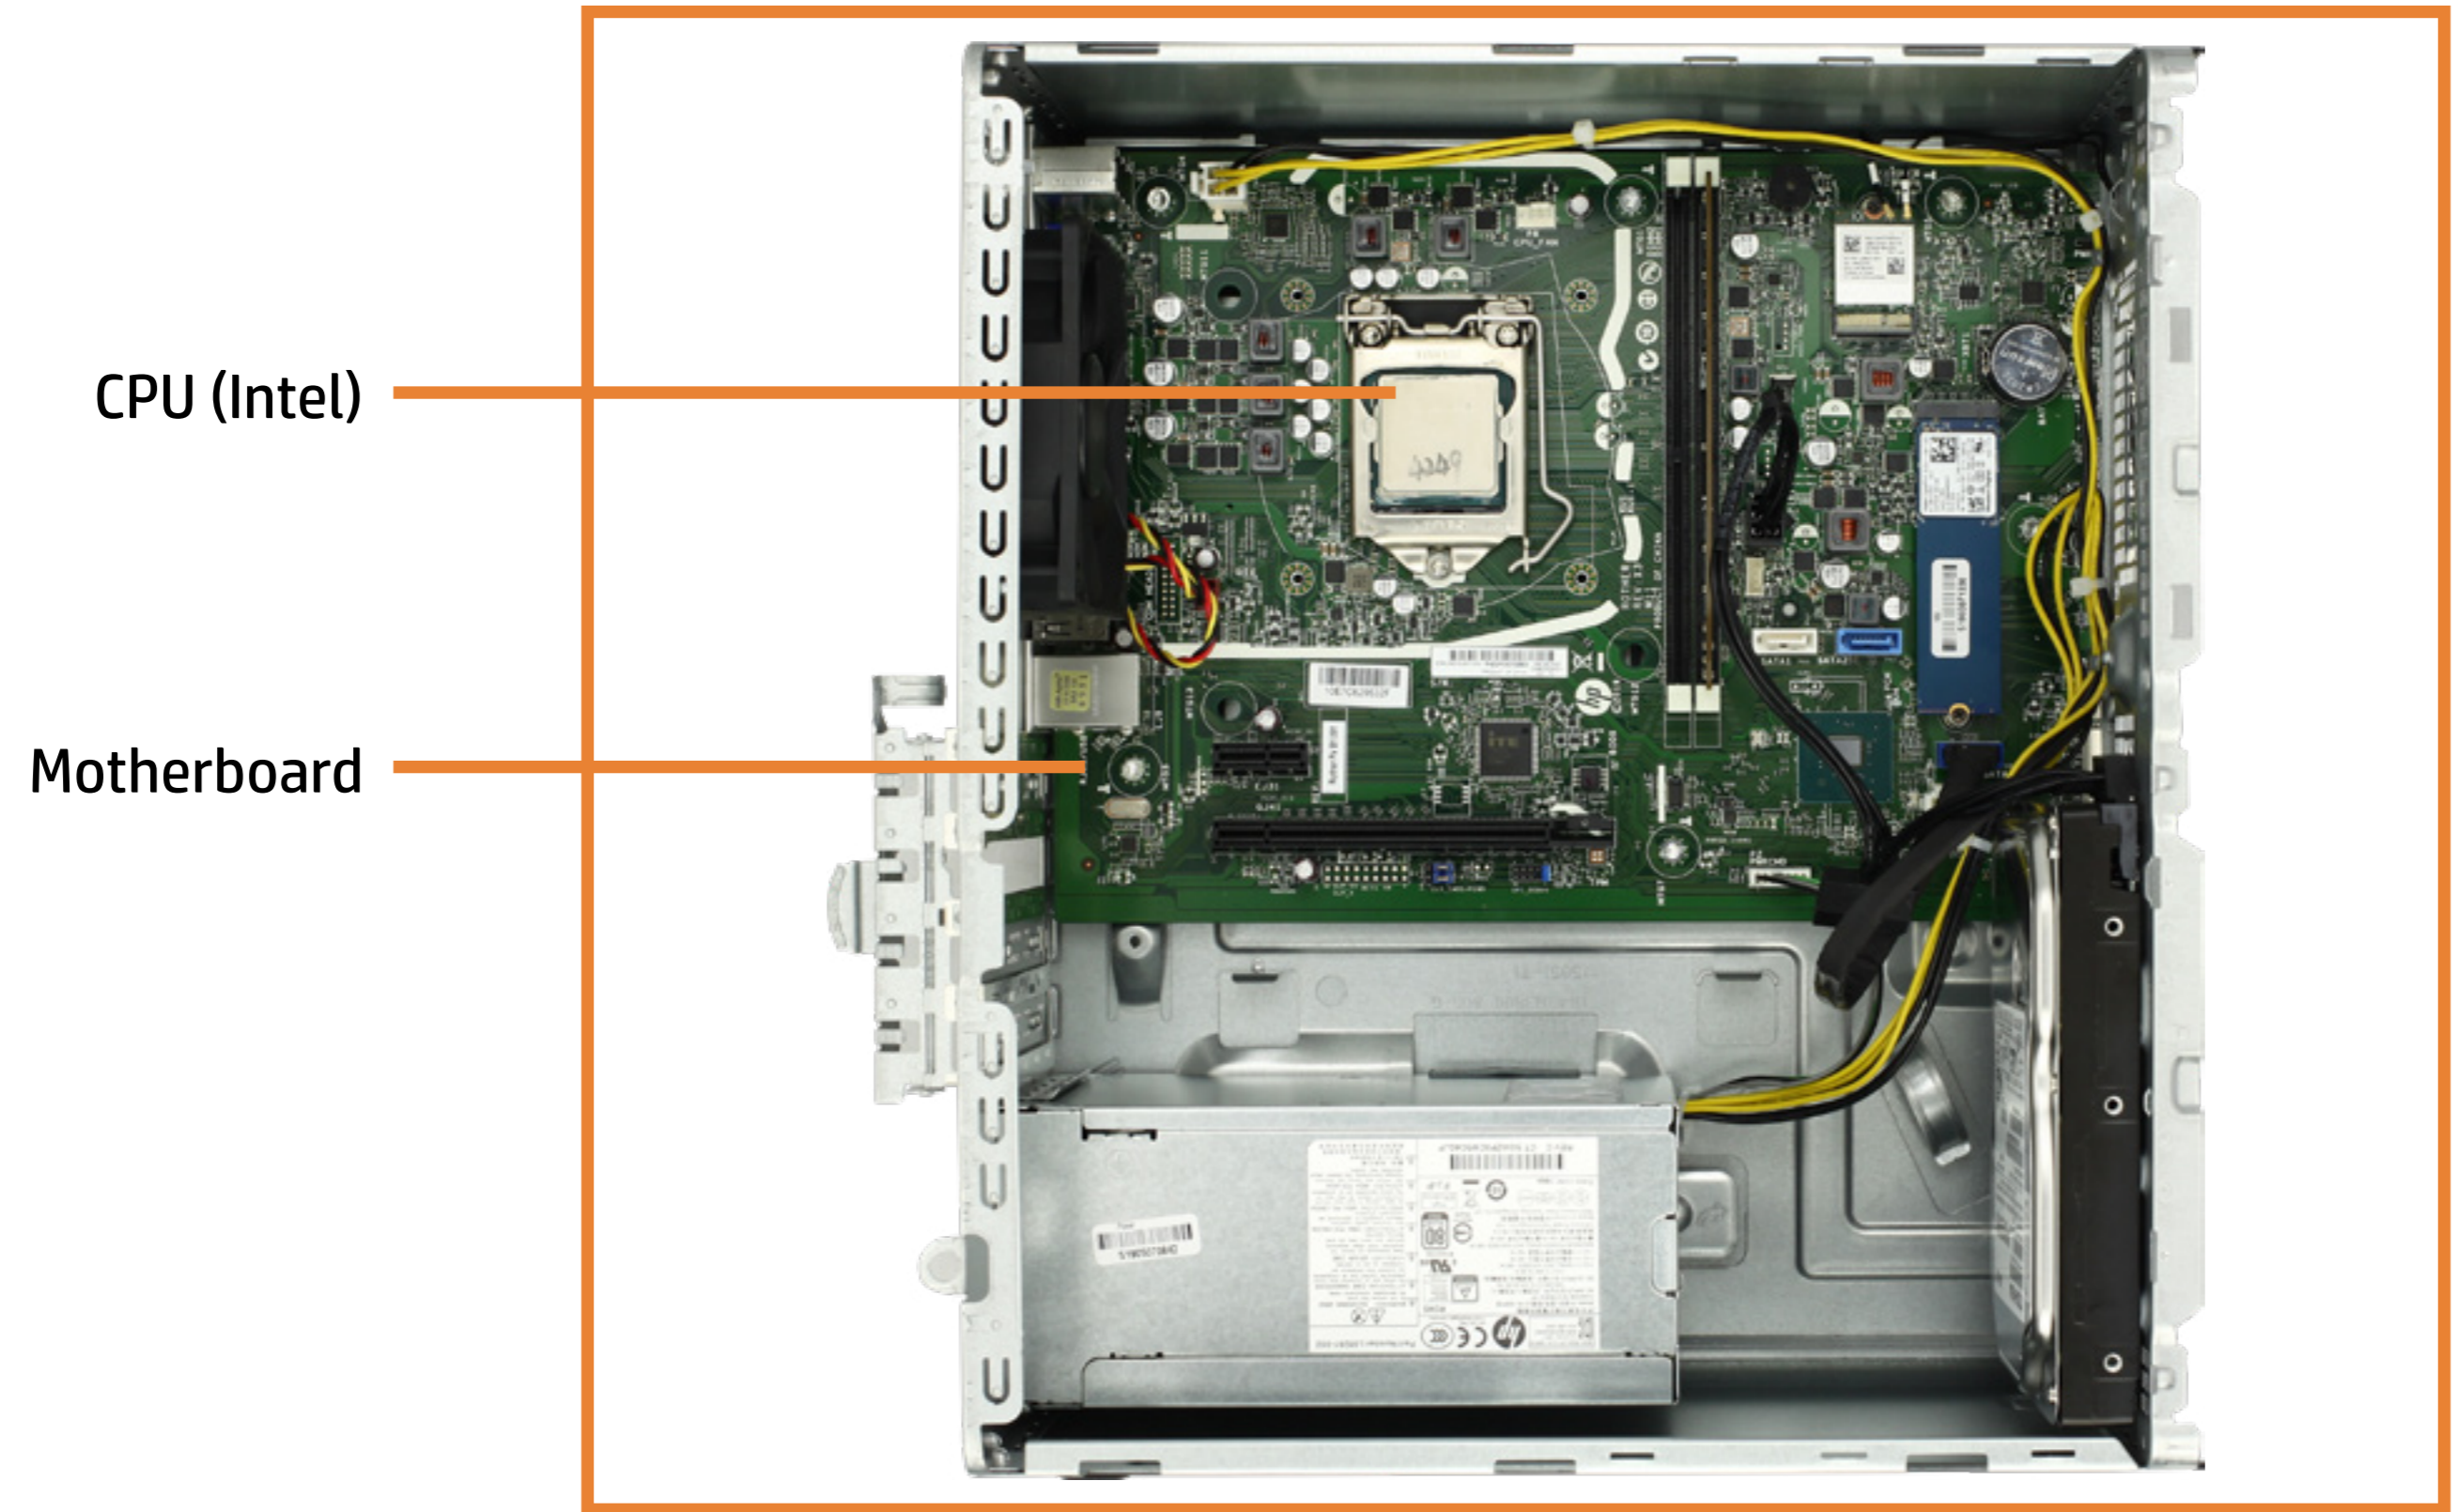

Access Panel


Access Panel




Front Bezel




Expansion Card

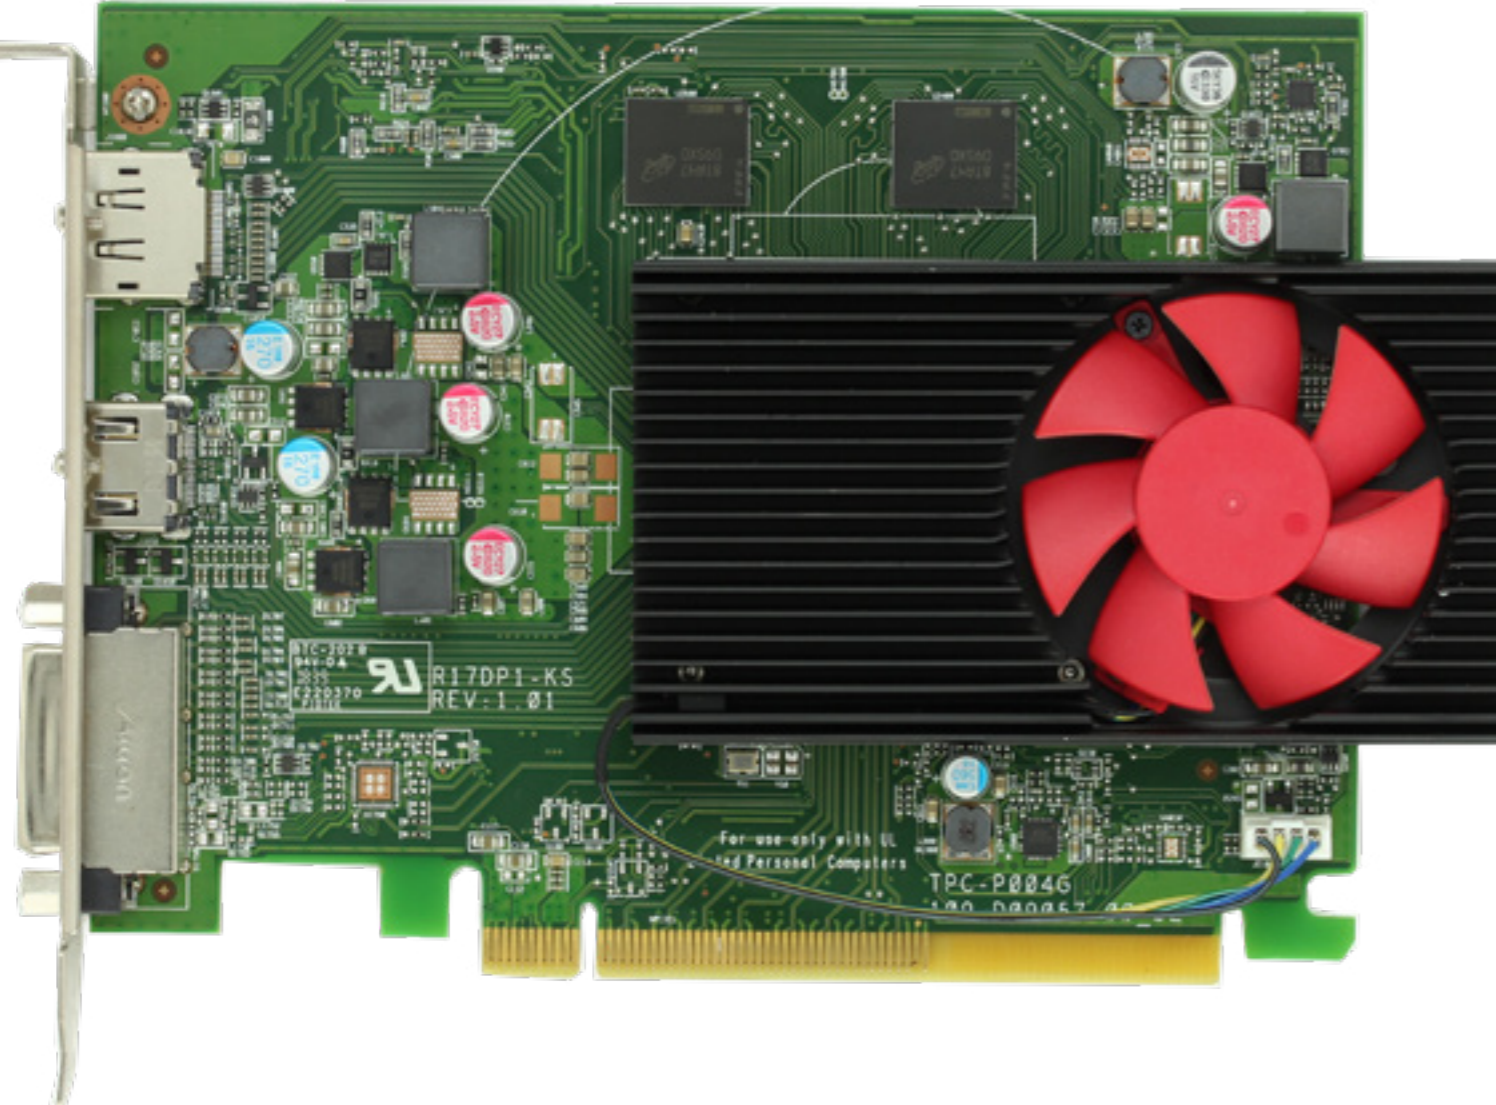


Drive Cage Bracket

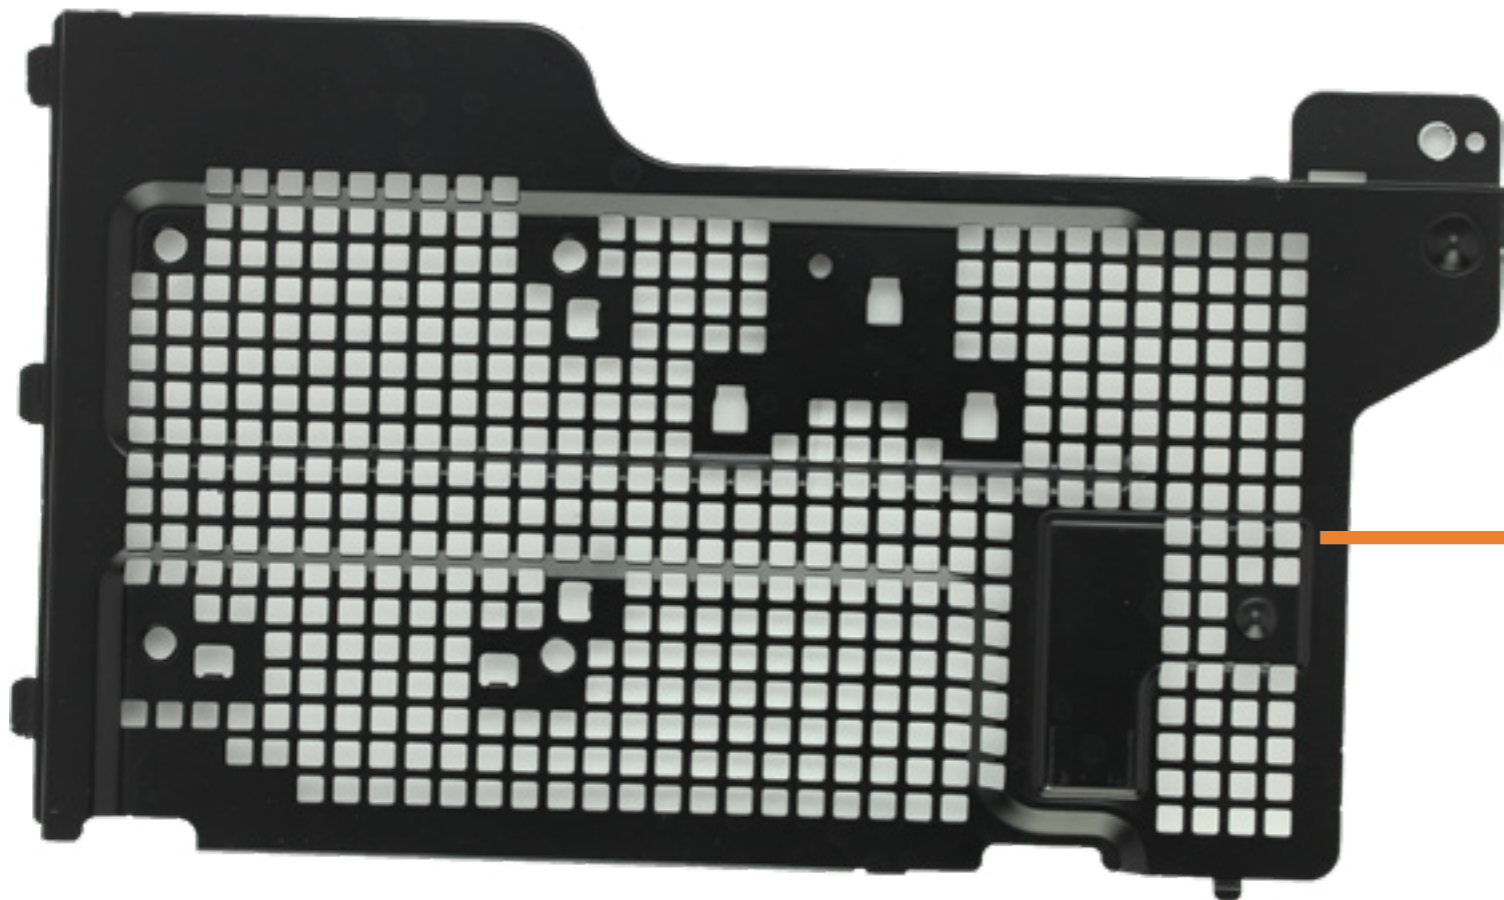

Drive Cage

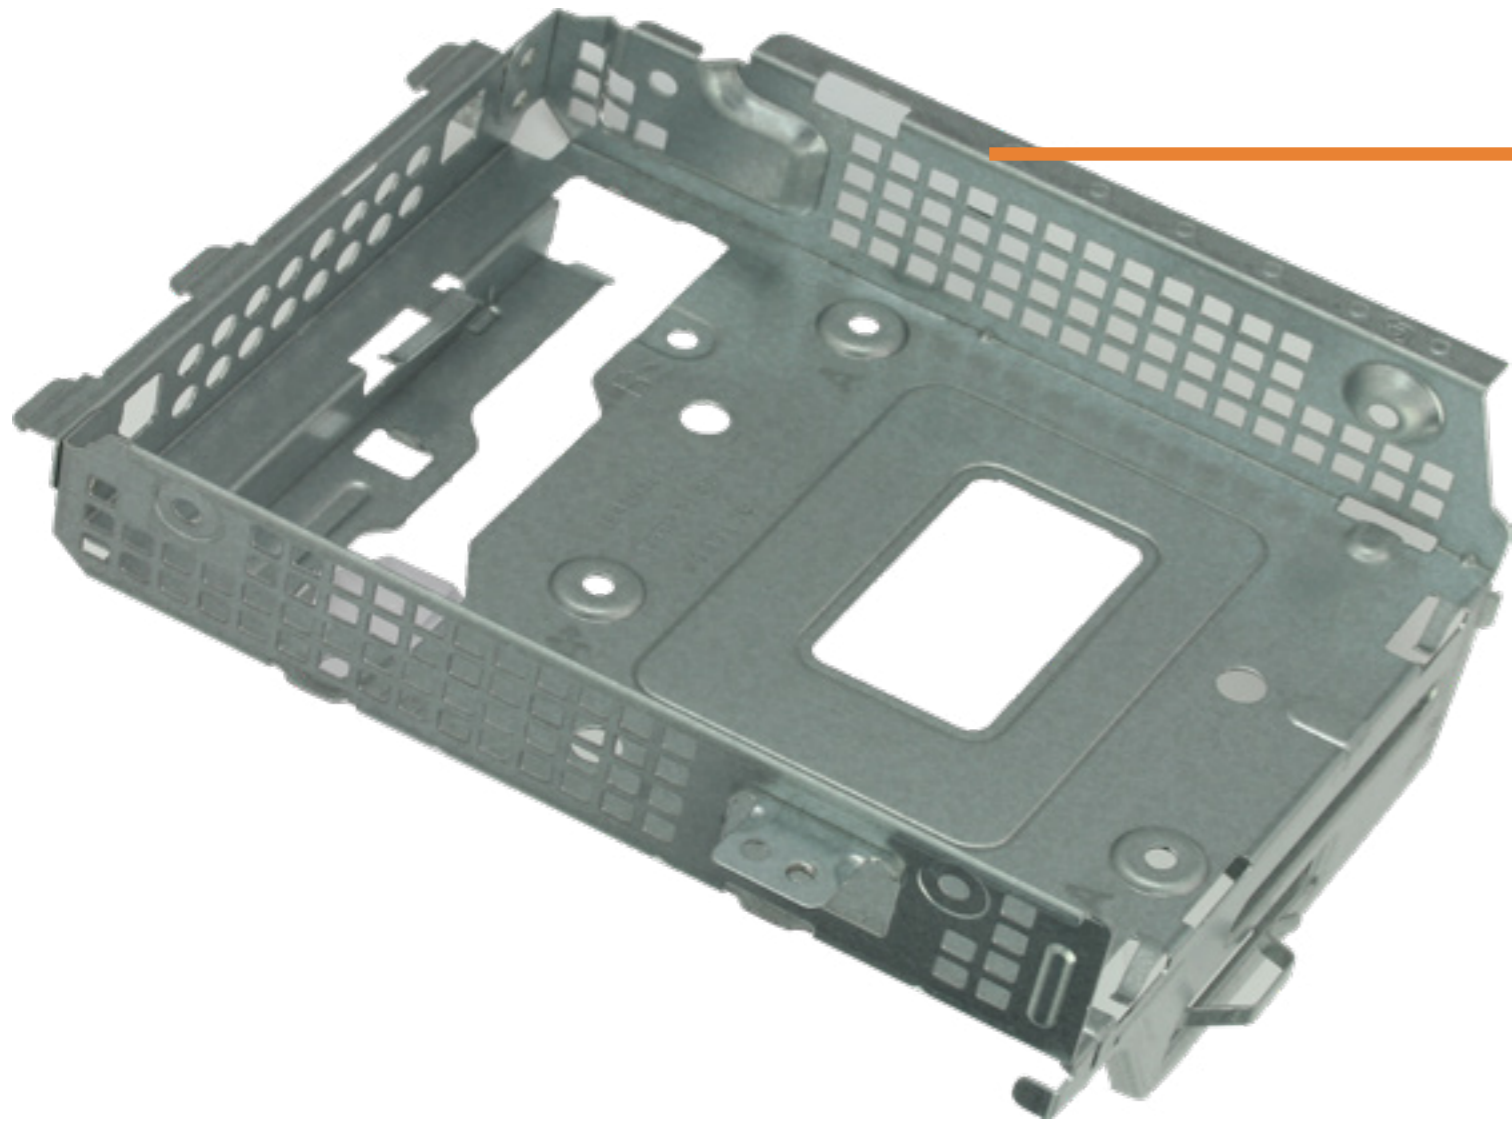

Memory Module(s)

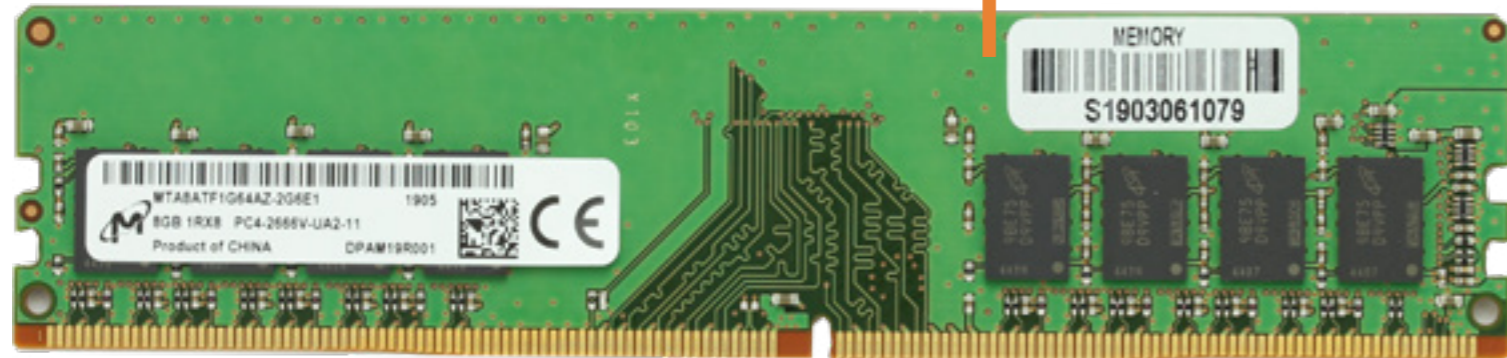

M.2 Solid State Drive



M.2 WLAN Module



Hard Disk Drive



Power Supply




Real-time Clock Battery



Heatsink/Fan Assembly




System Fan

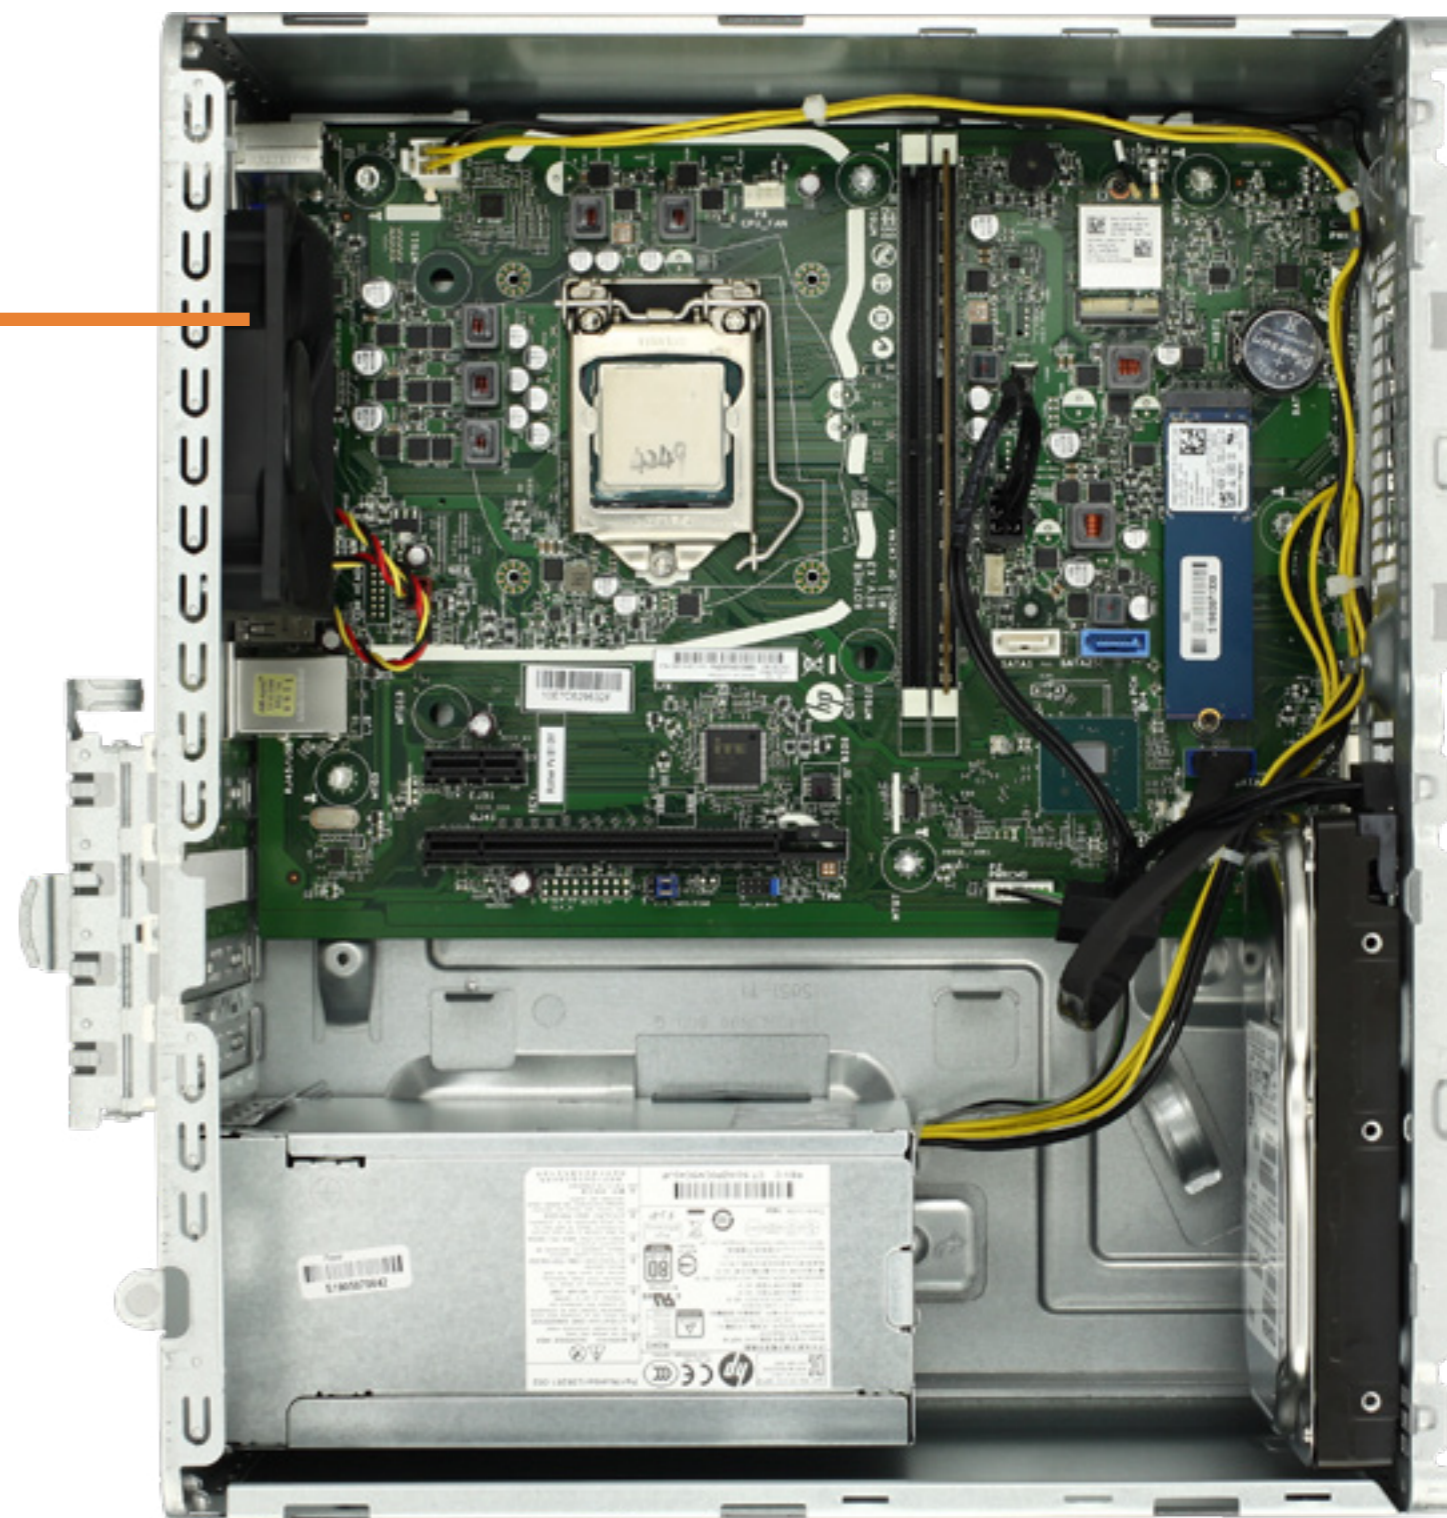


CPU (Intel)



Motherboard

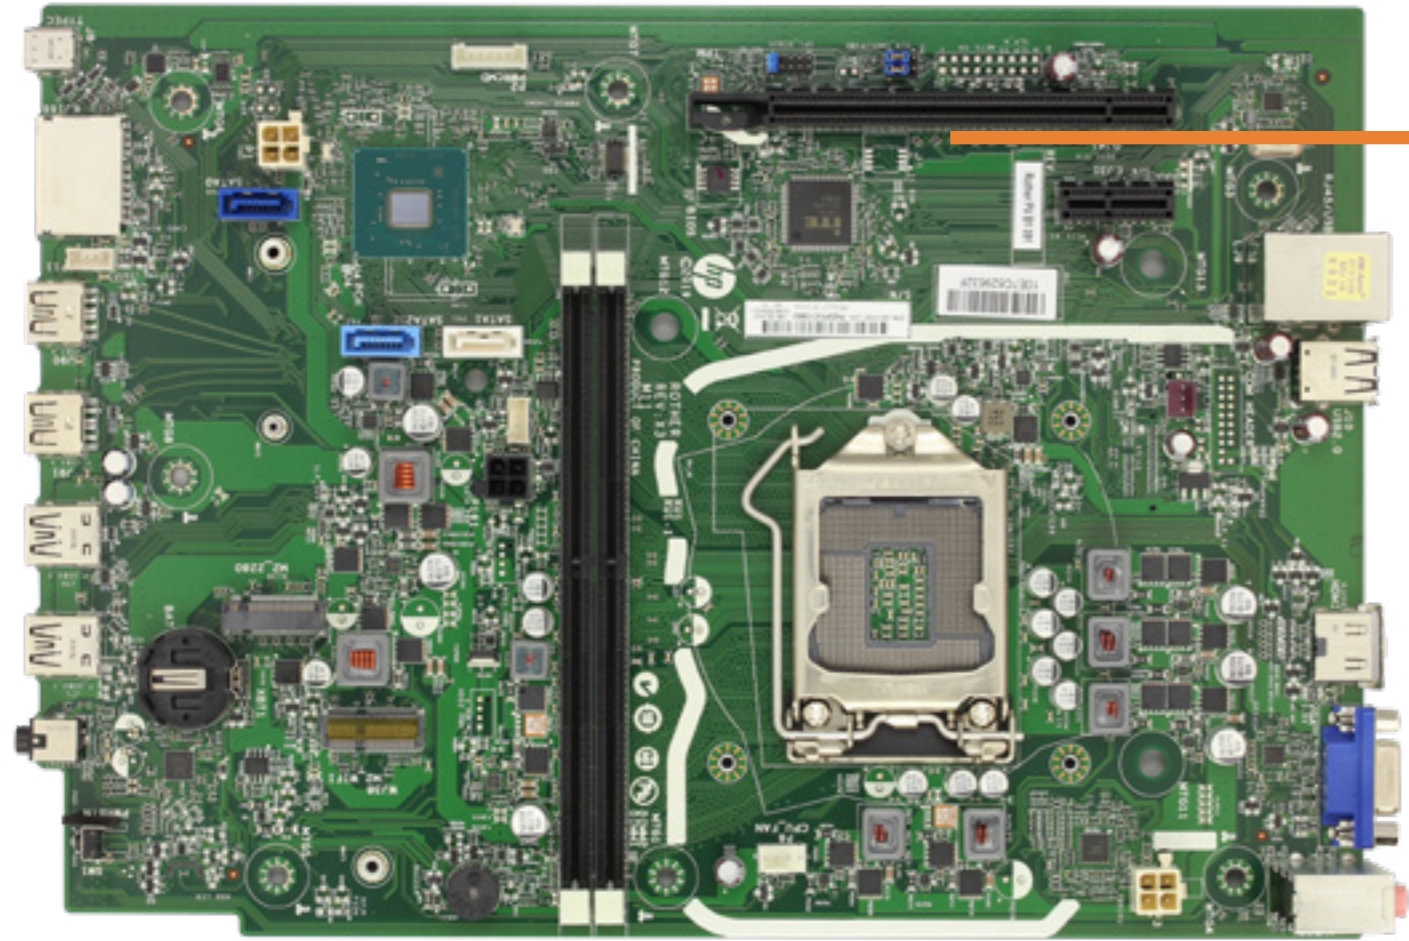

Lighting Module

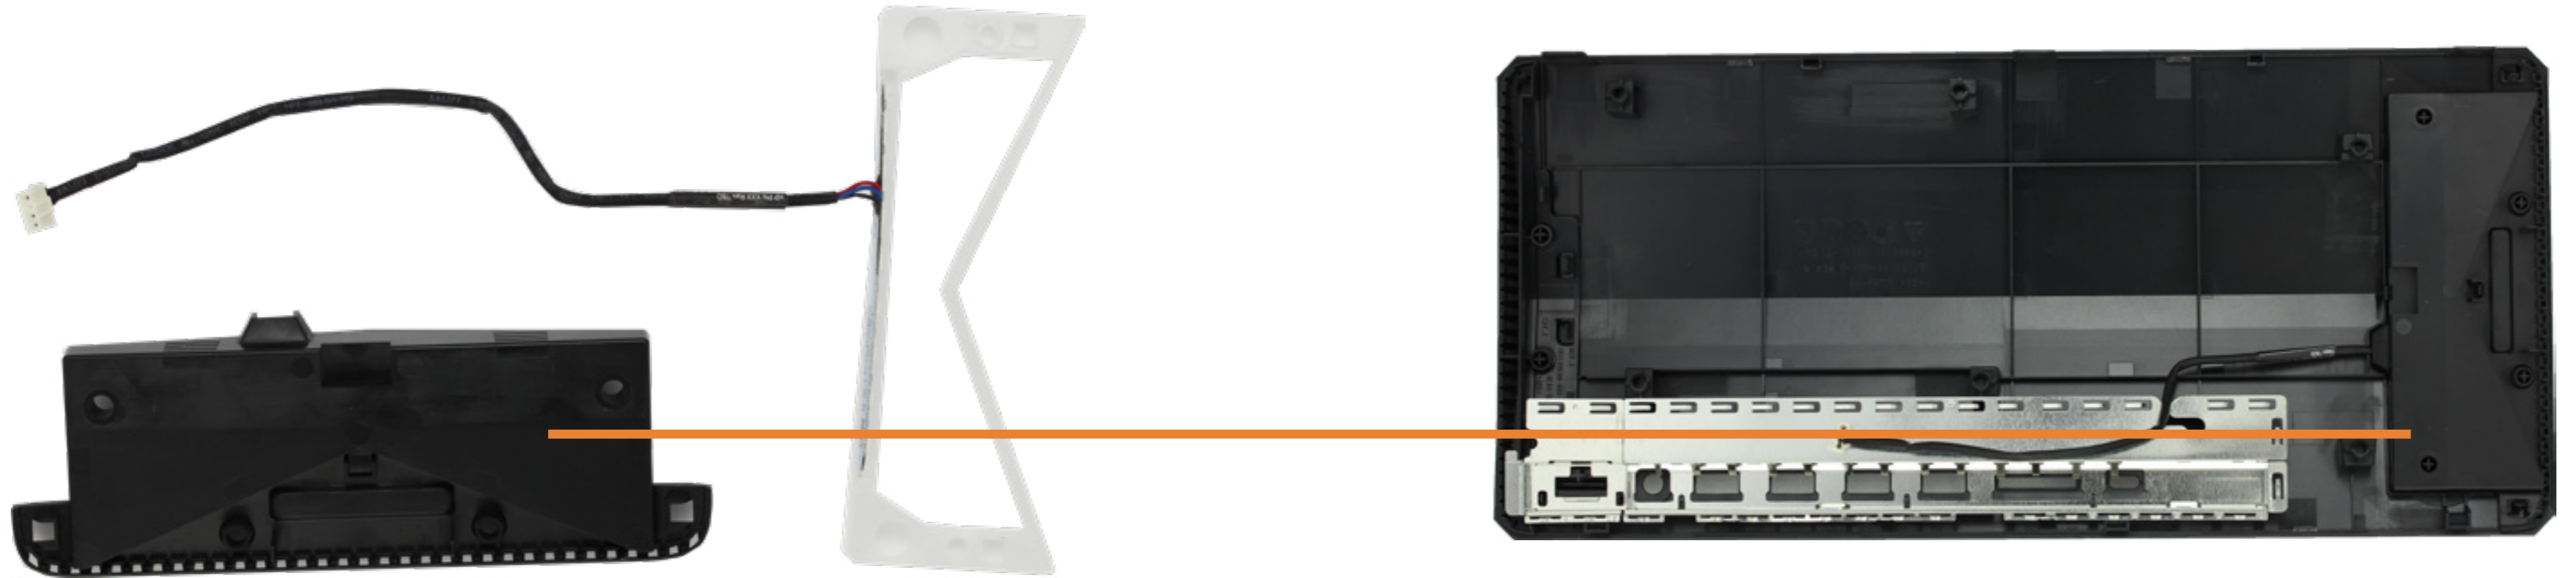

WLAN Antennas

