

Interactive System Board Viewer

HP ProOne 600 21.5-in G4 AiO Touch and Non-Touch

Welcome to the interactive System Board for the
HP ProOne 600 21.5-in G4 AiO Touch and Non-Touch

Here's how to use it...

[Zoomable View](#) (Click the link to navigate to the viewer)



On the Zoomable View page, you will find the viewer's zoom navigation links above the viewer on the left-hand side. You can choose from four levels of magnification: 1x, 2x, 3x, and 4x.

1x: The default magnification is 1x and at this magnification you can view the location of a feature by selecting it from the numbered list on the left.



2x, 3x, 4x: When you choose a greater magnification level, you use the navigation arrows and numbered features list to focus on the feature that you wish to review.

That's it!


1x view

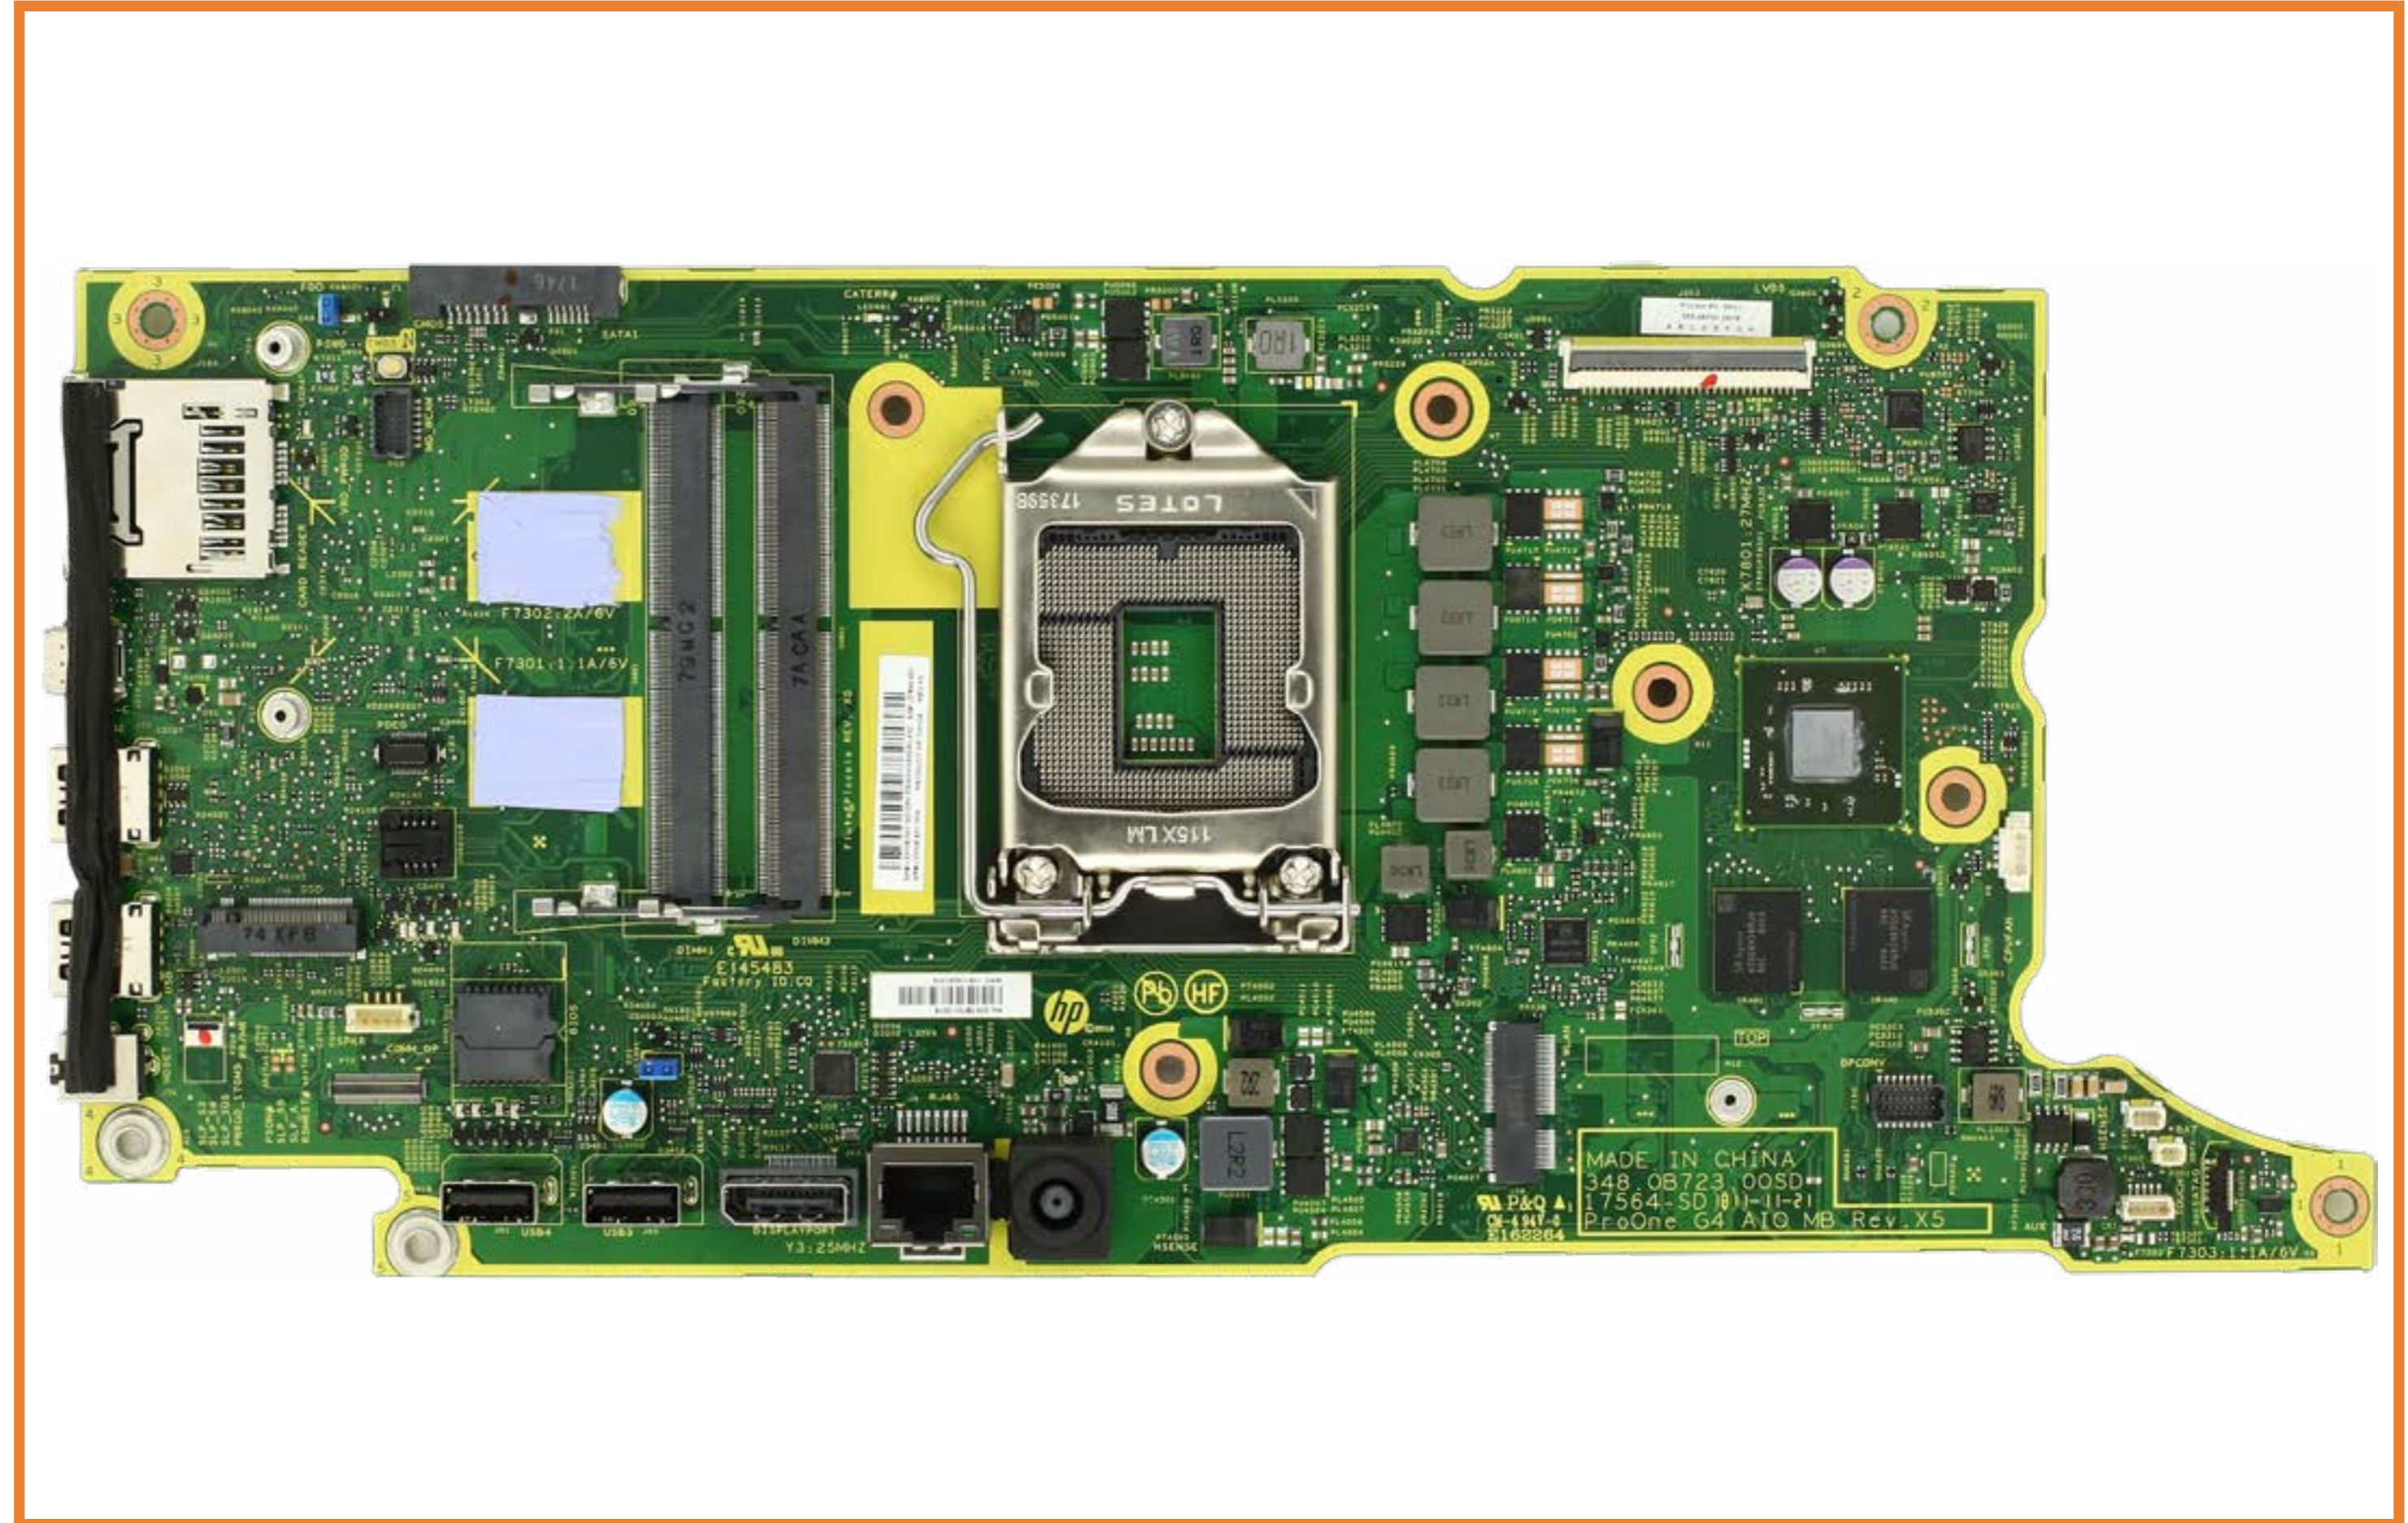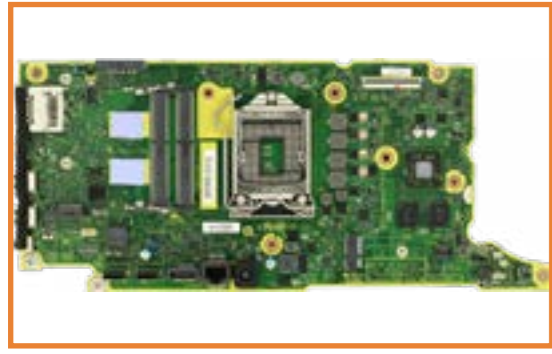



2 X View

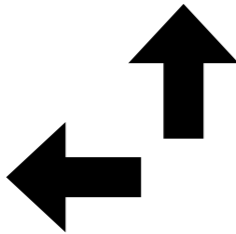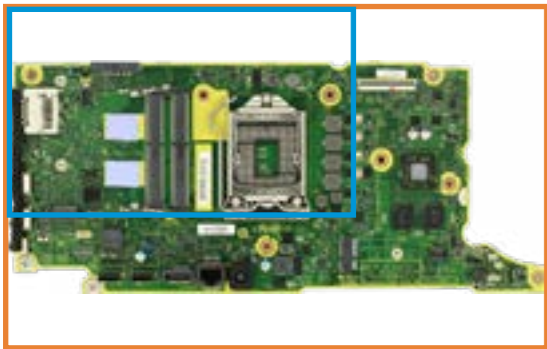


- 1. CMOS Reset
- 2. Optical Drive
- 3. Memory Modules
- 4. Processor
- 5. Display Connector
- 6. Fan Connector
- 7. Hood Sensor
- 8. Battery
- 9. Hard Drive
- 10. Touch Panel
- 11. Display Panel
- 12. WLAN Module
- 13. Power Connector
- 14. RJ-45 (network) jack
- 15. Display Port
- 16. USB 3.1 Type-A
- 17. Speaker
- 18. Option Board
- 19. Power Button
- 20. Headphone/Microphone Jack
- 21. USB 3.1 Type-A
- 22. M.2 SSD drive
- 23. USB 3.1 Type-A (charging)
- 24. USB 3.1 Type-C
- 25. SD Card Reader
- 26. Webcam

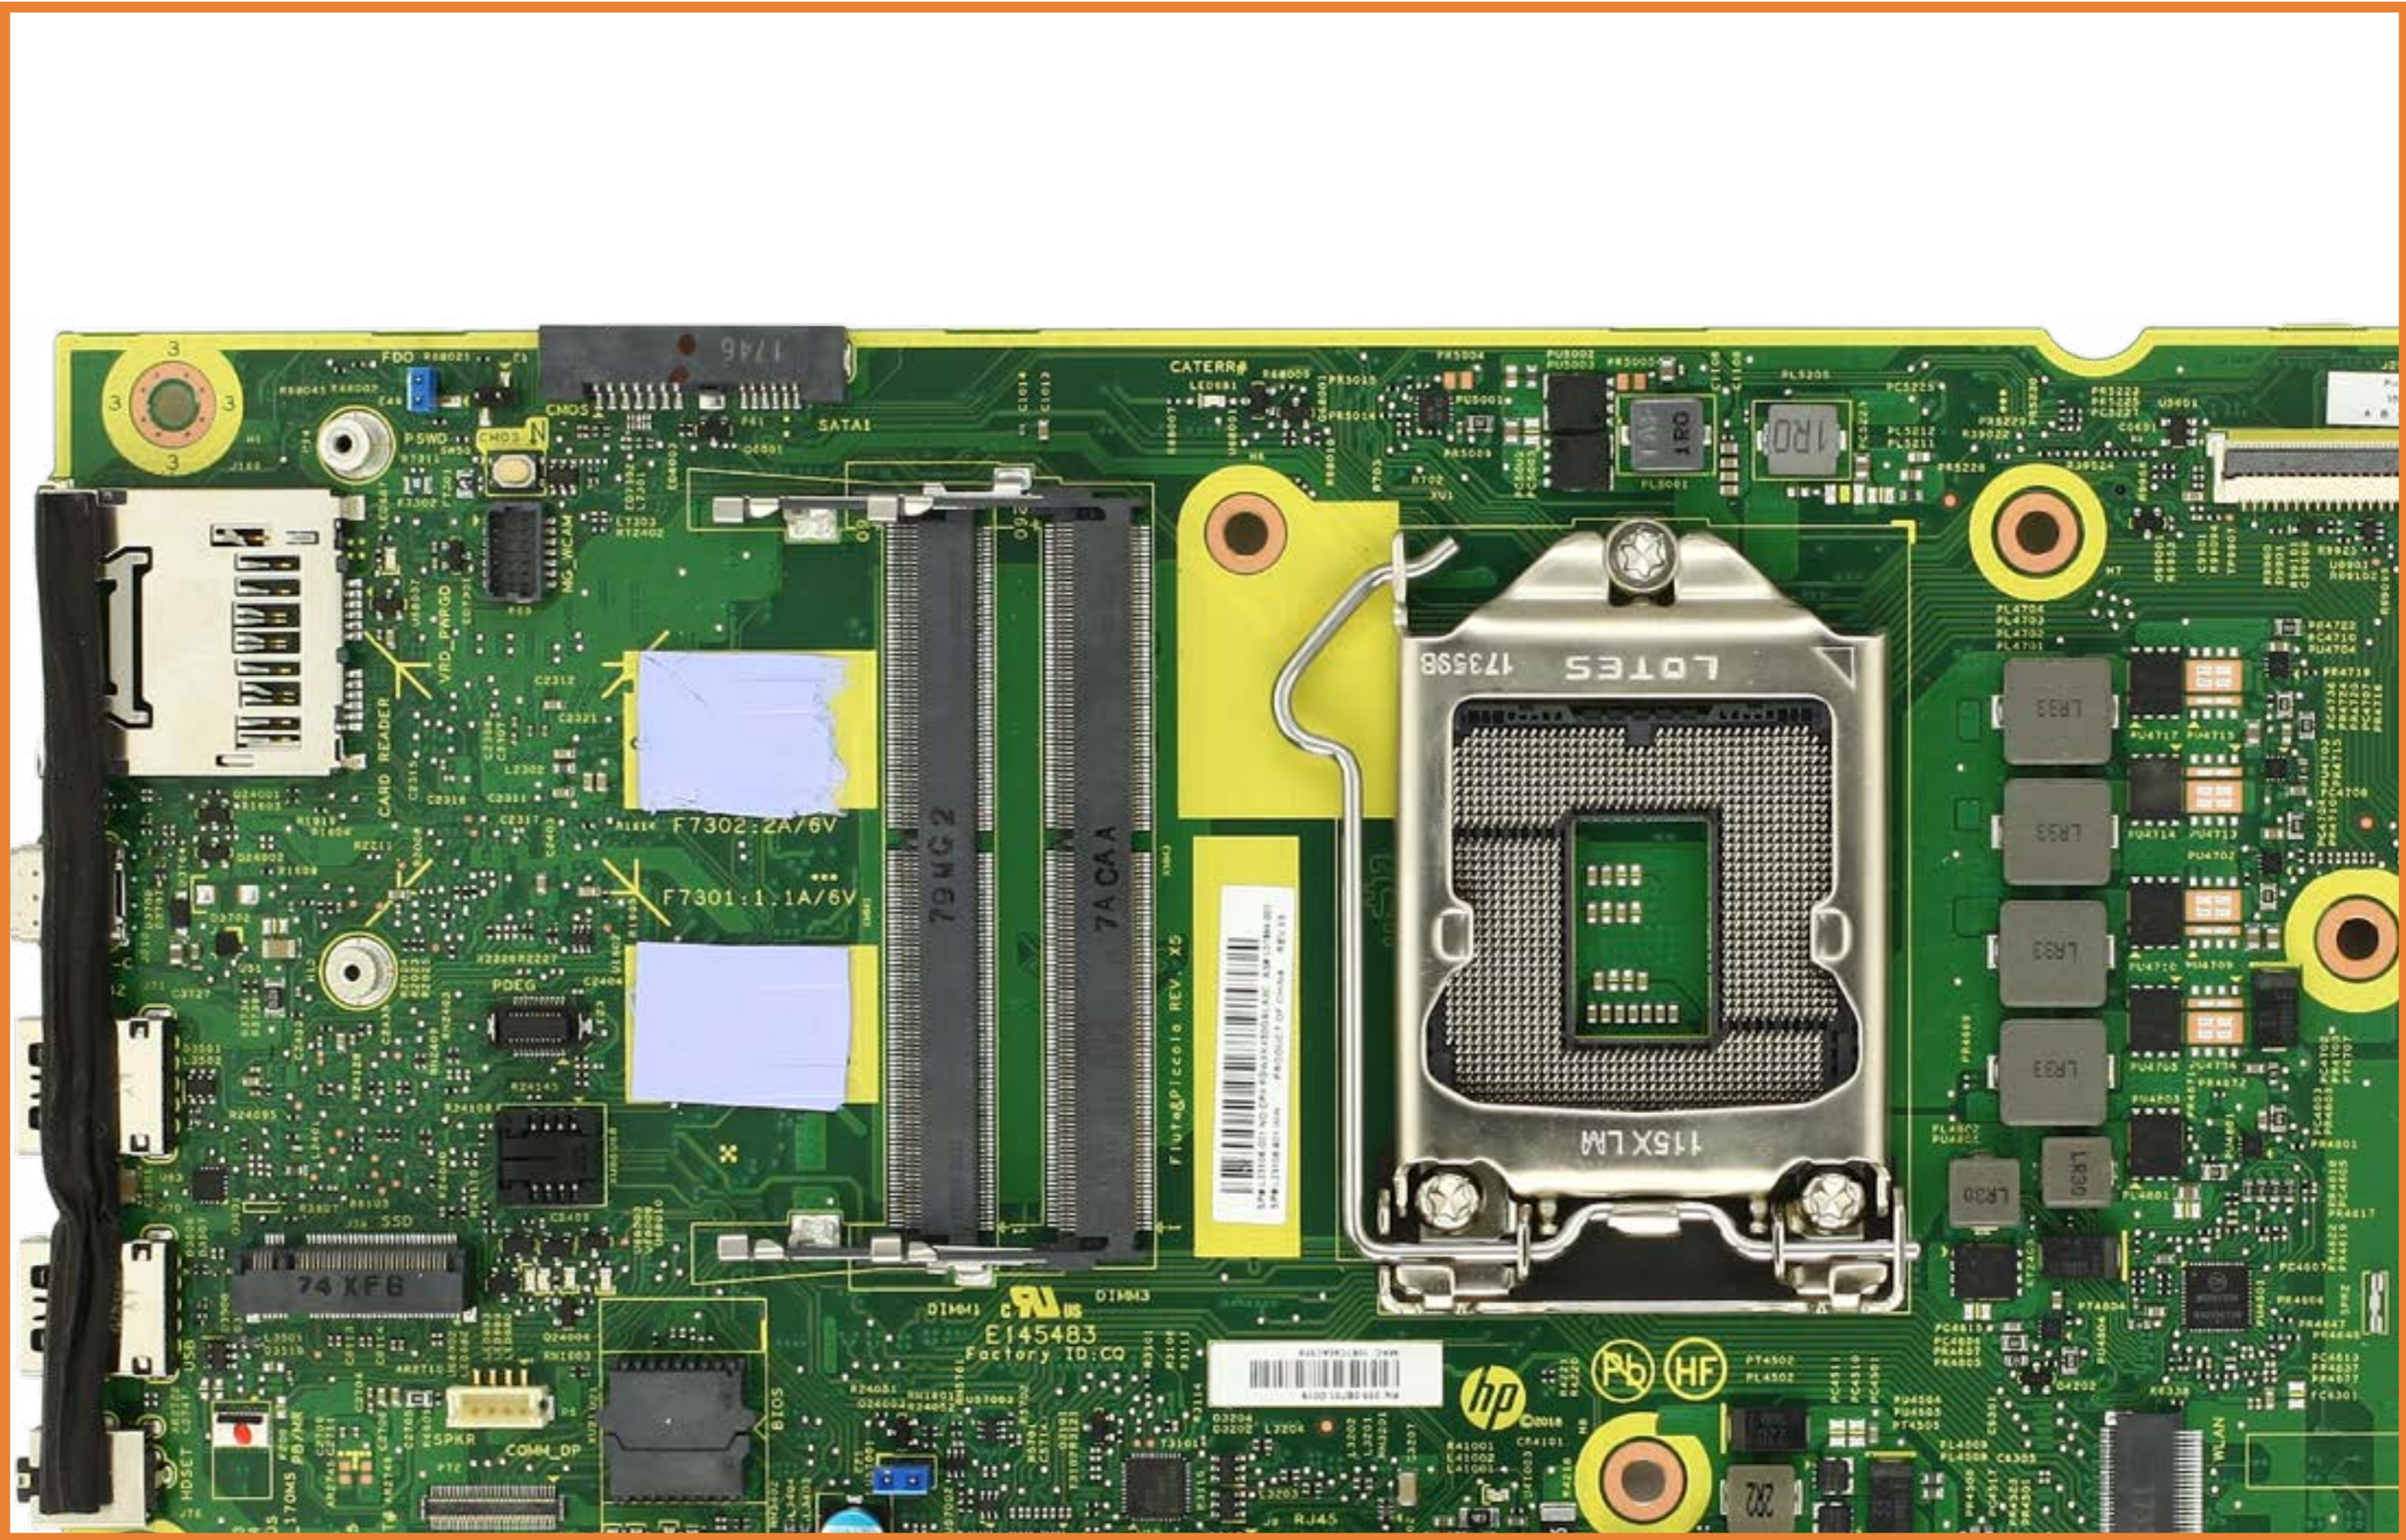



2 X View

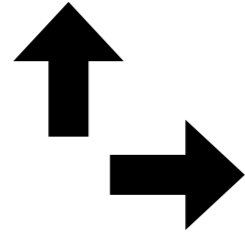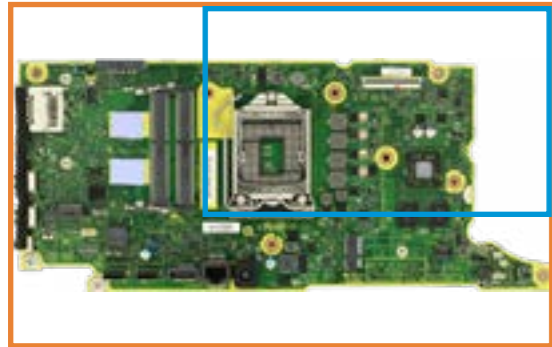


- 1. CMOS Reset
- 2. Optical Drive
- 3. Memory Modules
- 4. Processor
- 5. Display Connector
- 6. Fan Connector
- 7. Hood Sensor
- 8. Battery
- 9. Hard Drive
- 10. Touch Panel
- 11. Display Panel
- 12. WLAN Module
- 13. Power Connector
- 14. RJ-45 (network) jack
- 15. Display Port
- 16. USB 3.1 Type-A
- 17. Speaker
- 18. Option Board
- 19. Power Button
- 20. Headphone/Microphone Jack
- 21. USB 3.1 Type-A
- 22. M.2 SSD drive
- 23. USB 3.1 Type-A (charging)
- 24. USB 3.1 Type-C
- 25. SD Card Reader
- 26. Webcam

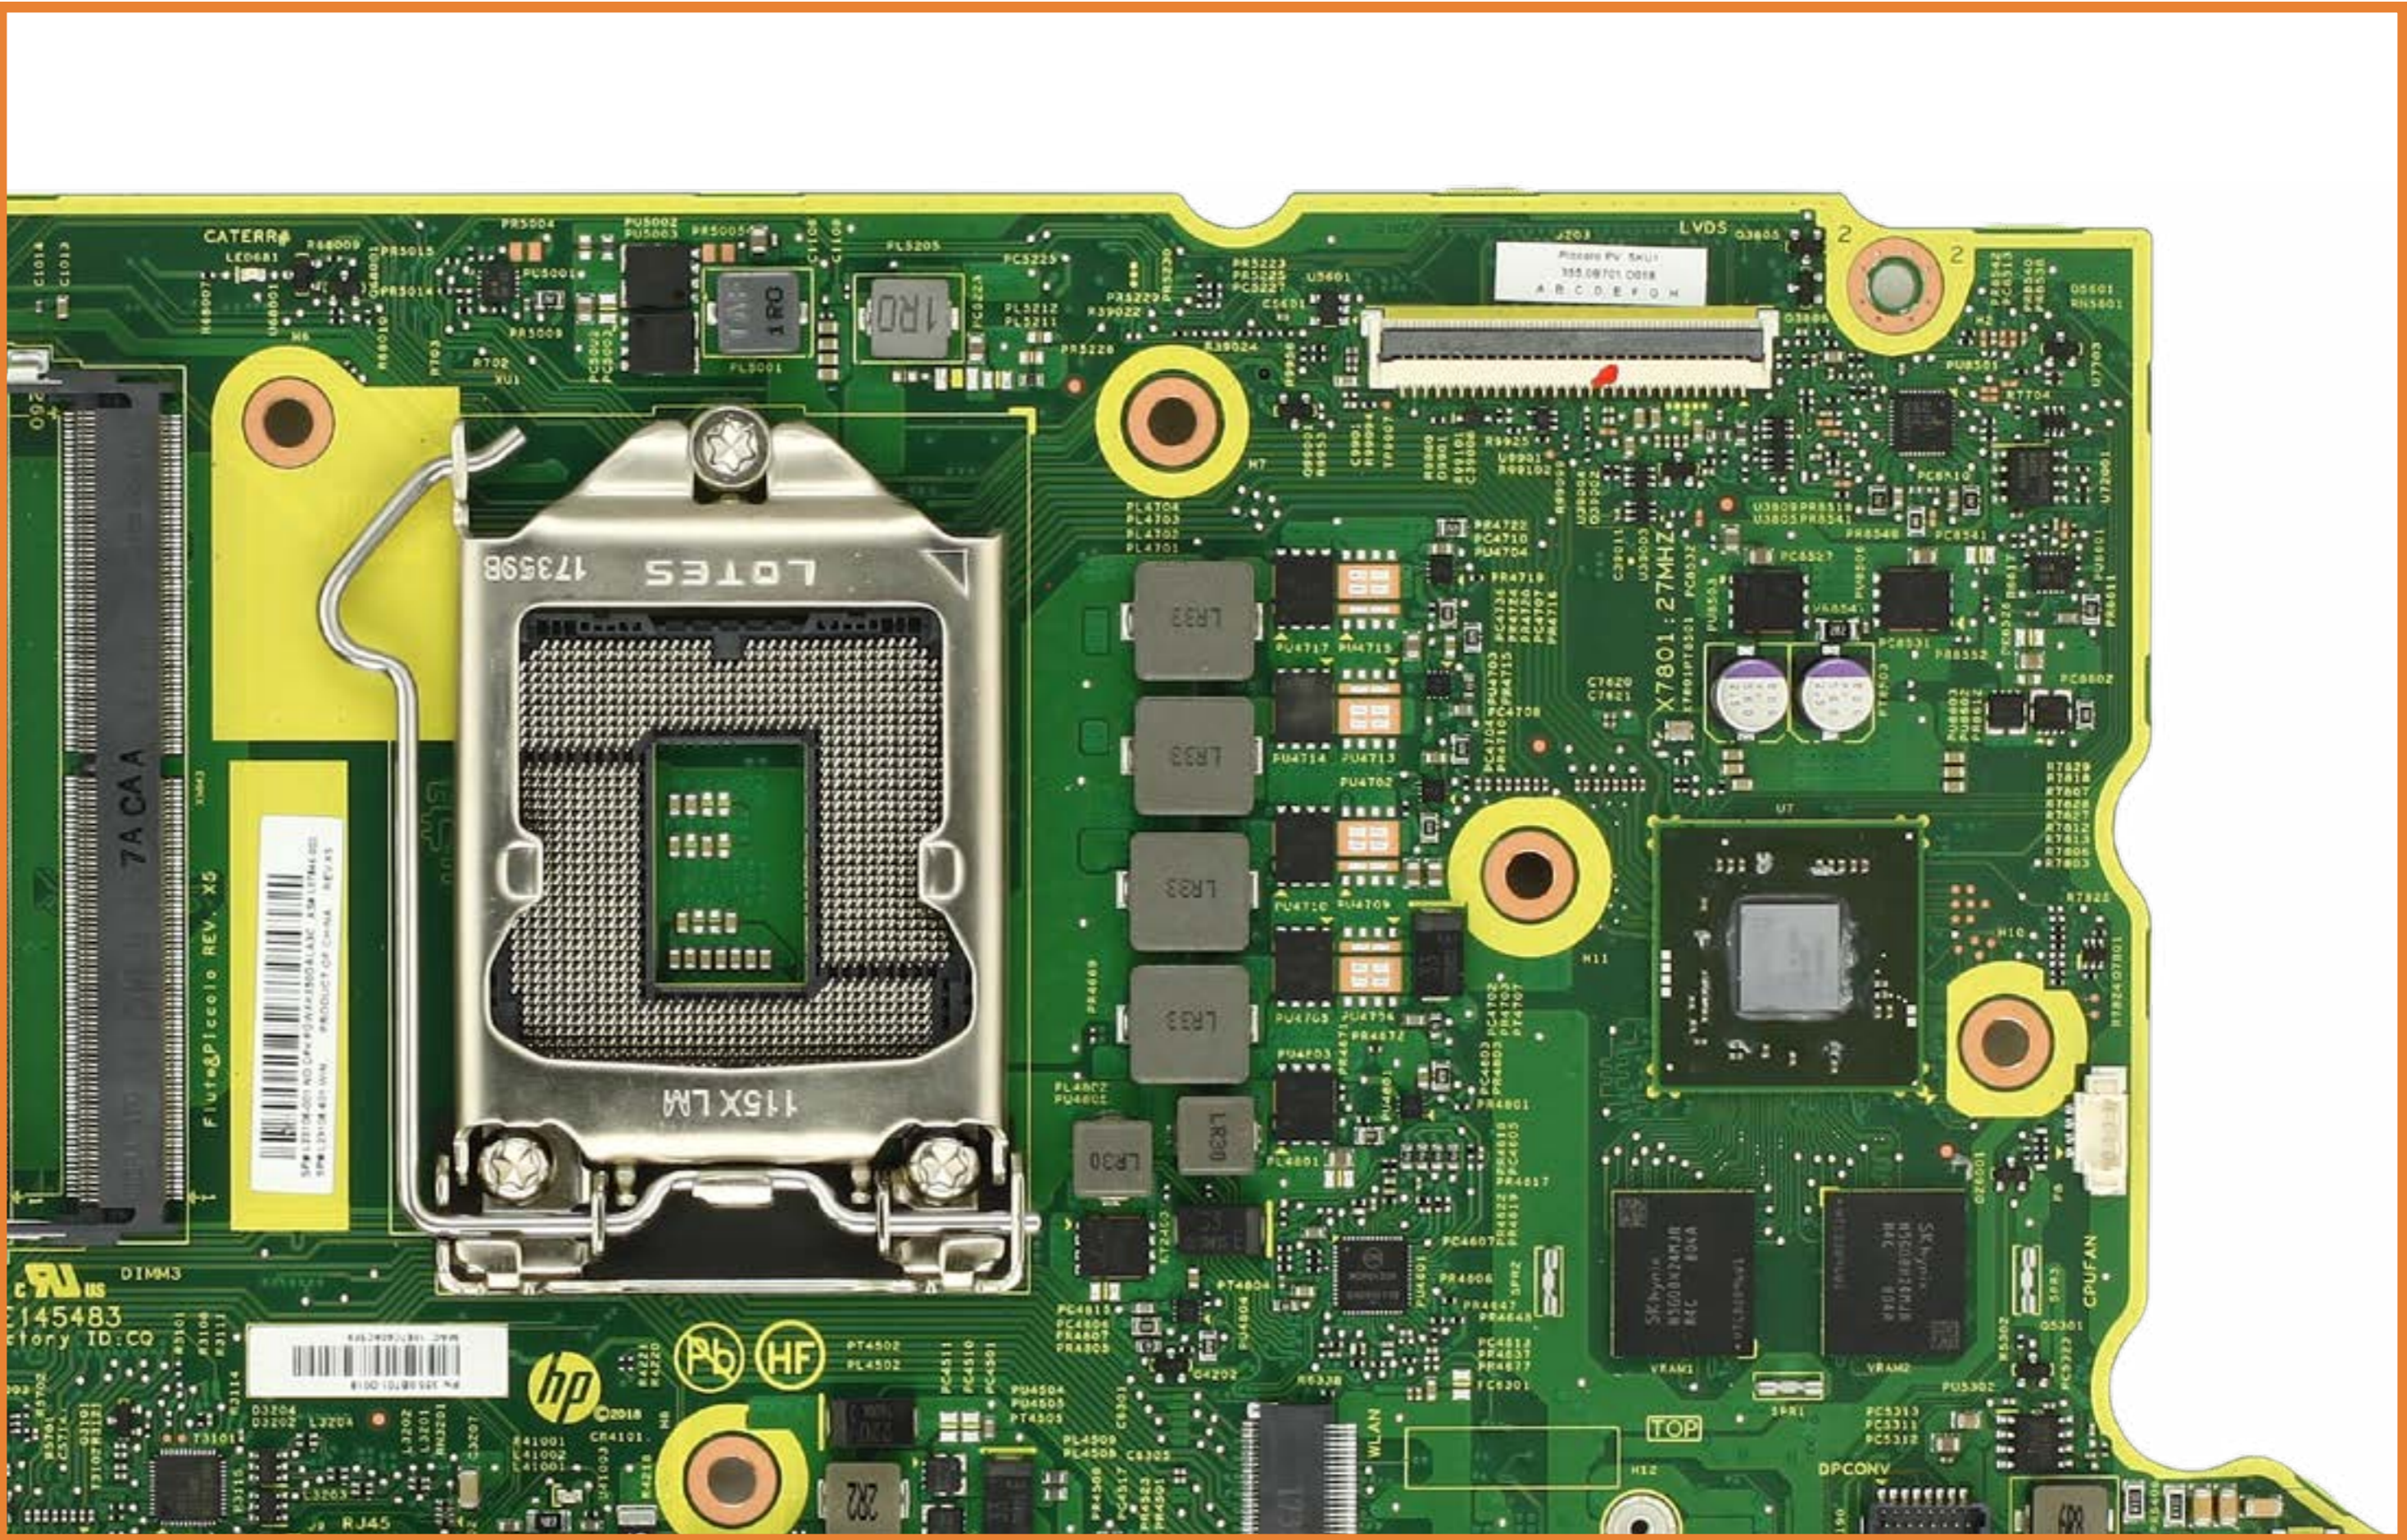




2 X View

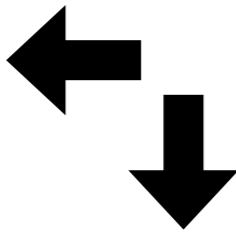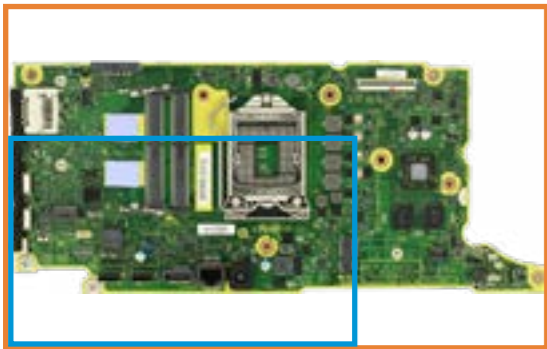

- 1. CMOS Reset
- 2. Optical Drive
- 3. Memory Modules
- 4. Processor
- 5. Display Connector
- 6. Fan Connector
- 7. Hood Sensor
- 8. Battery
- 9. Hard Drive
- 10. Touch Panel
- 11. Display Panel
- 12. WLAN Module
- 13. Power Connector
- 14. RJ-45 (network) jack
- 15. Display Port
- 16. USB 3.1 Type-A
- 17. Speaker
- 18. Option Board
- 19. Power Button
- 20. Headphone/Microphone Jack
- 21. USB 3.1 Type-A
- 22. M.2 SSD drive
- 23. USB 3.1 Type-A (charging)
- 24. USB 3.1 Type-C
- 25. SD Card Reader
- 26. Webcam


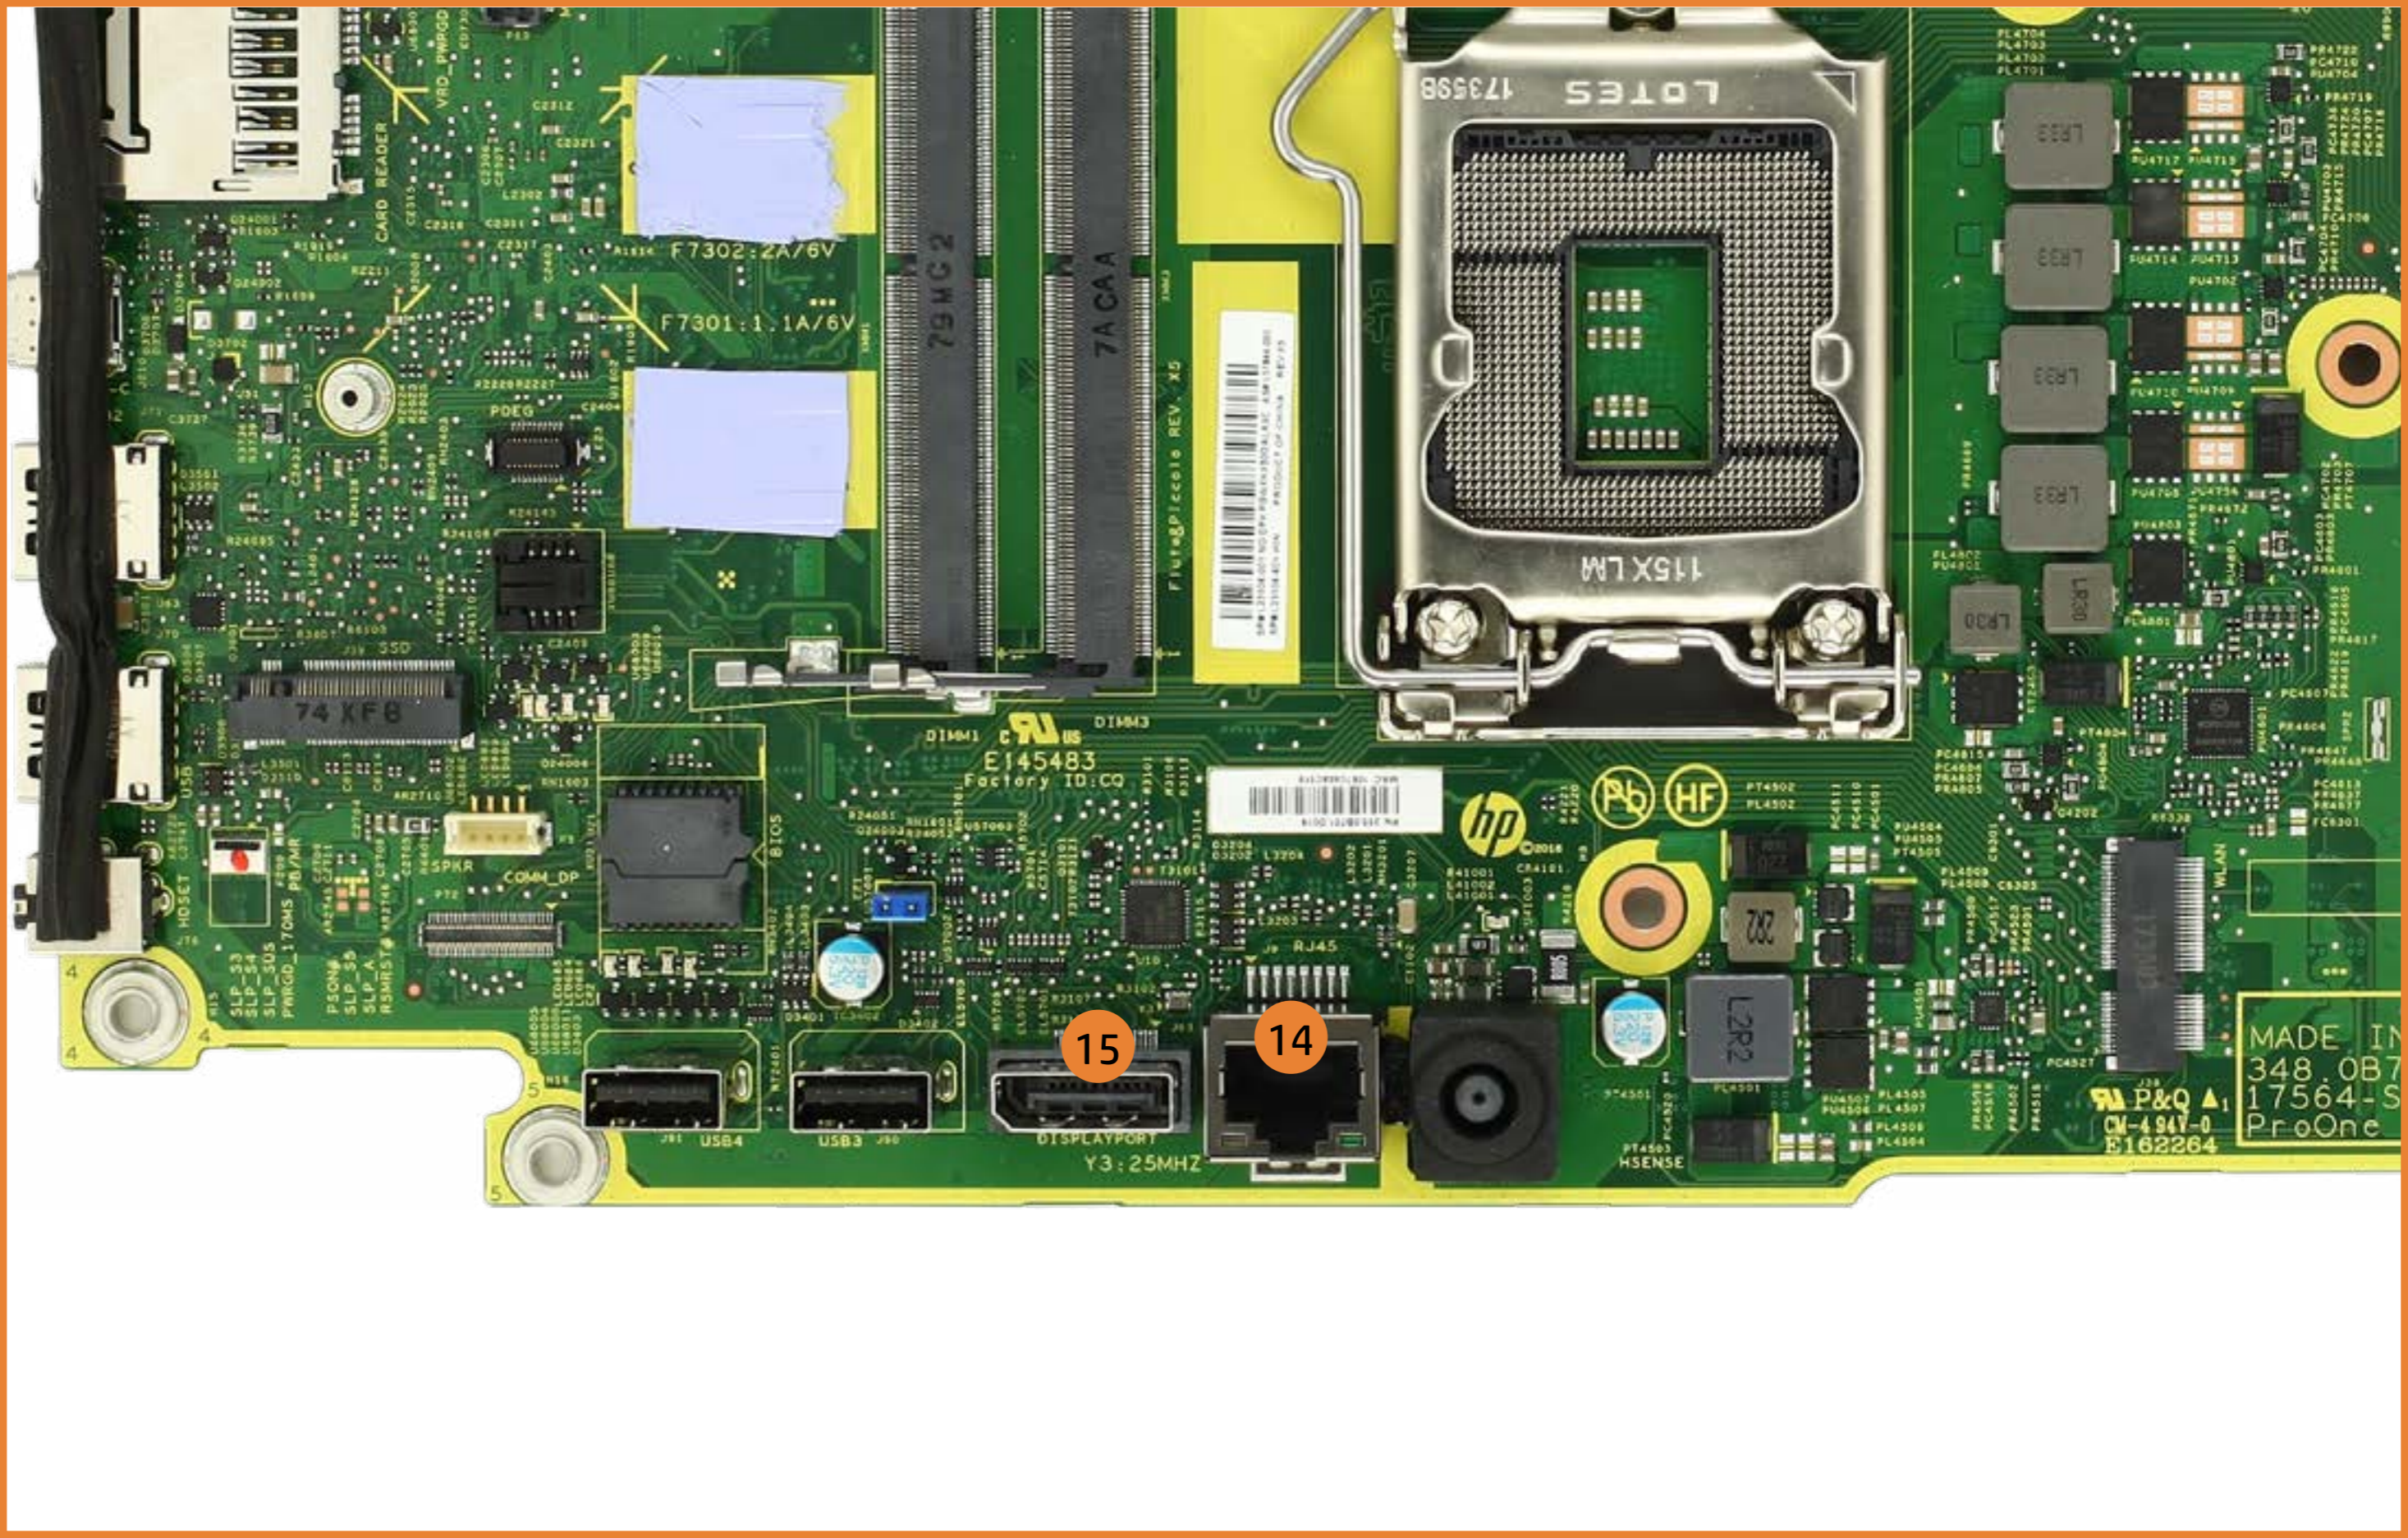


2 X View

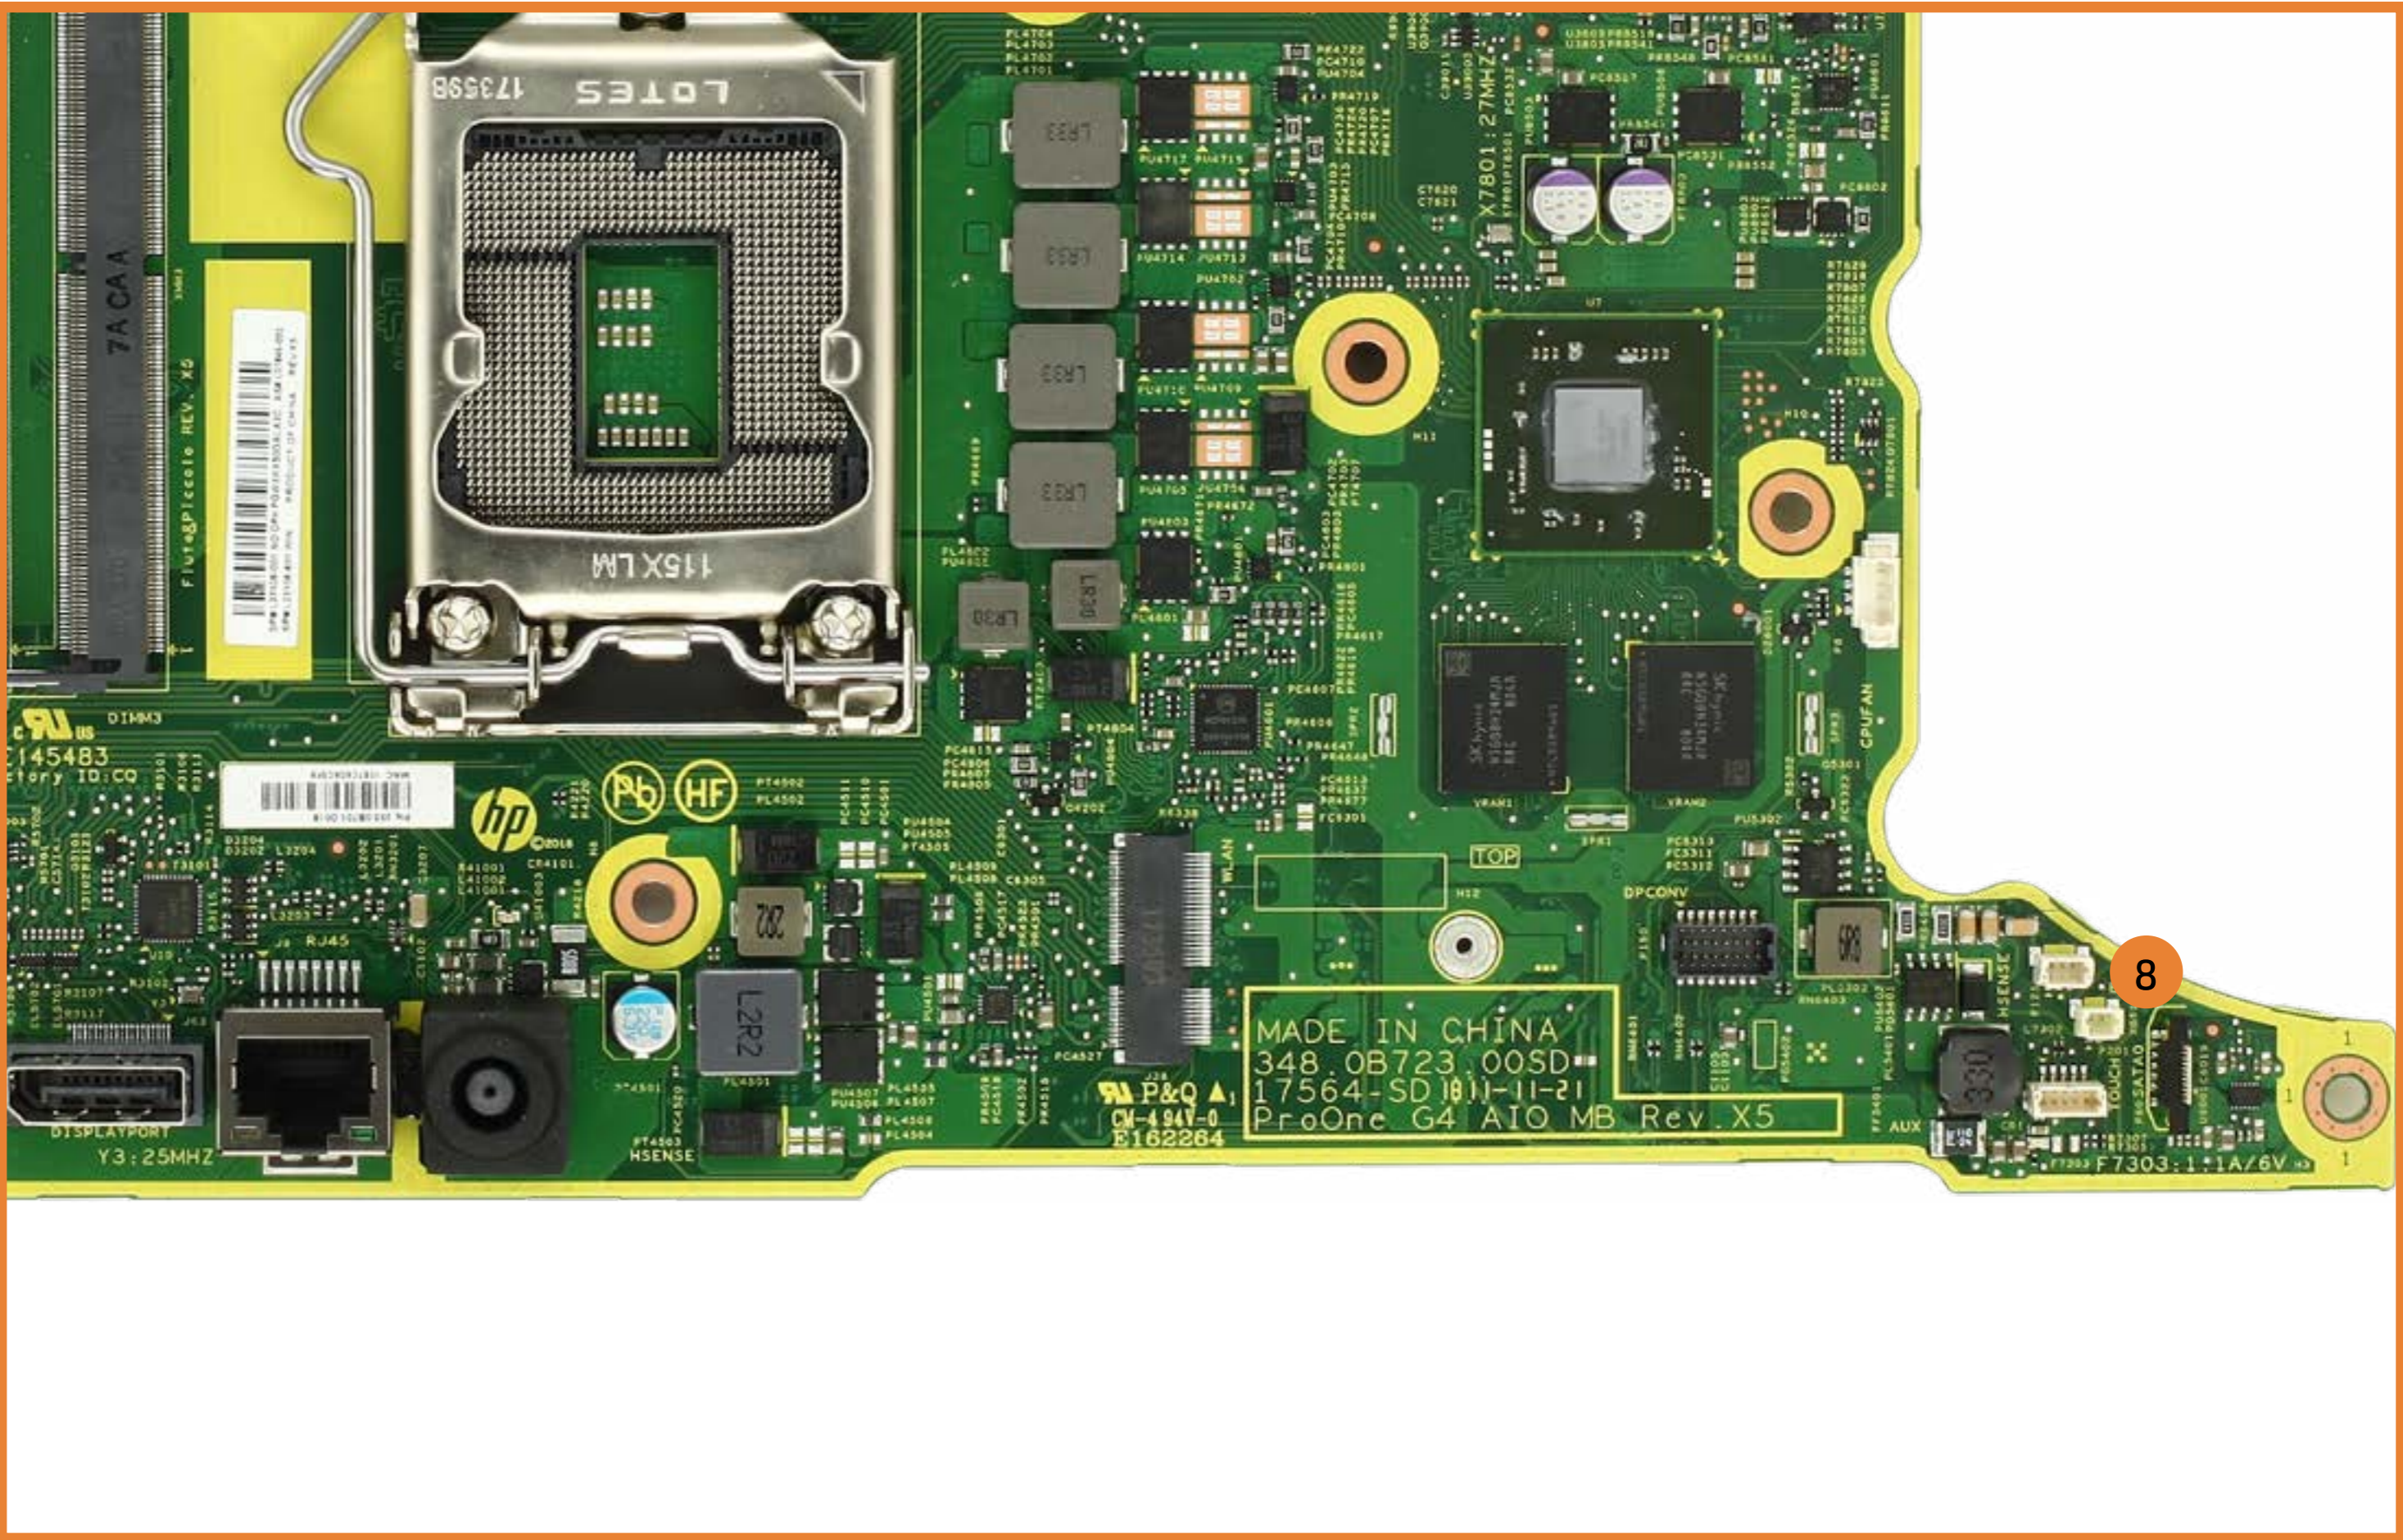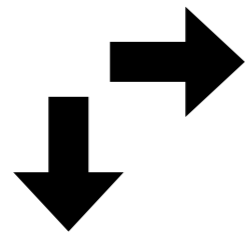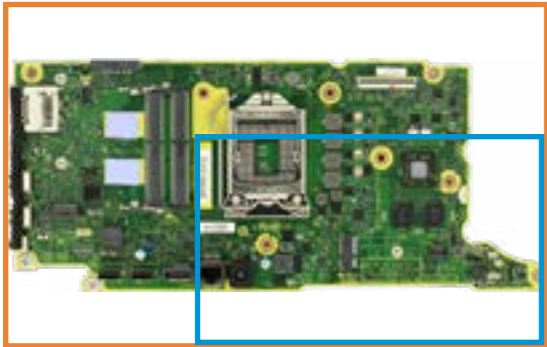


1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam



3 X View

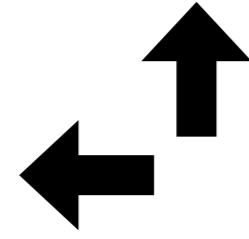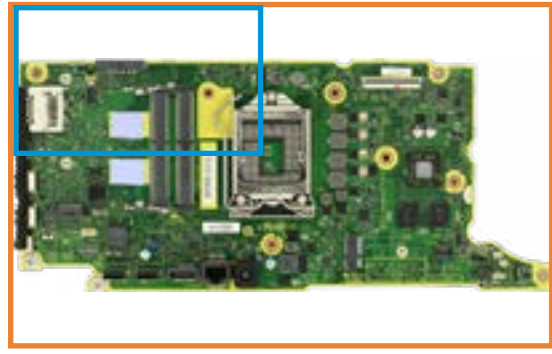


1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam

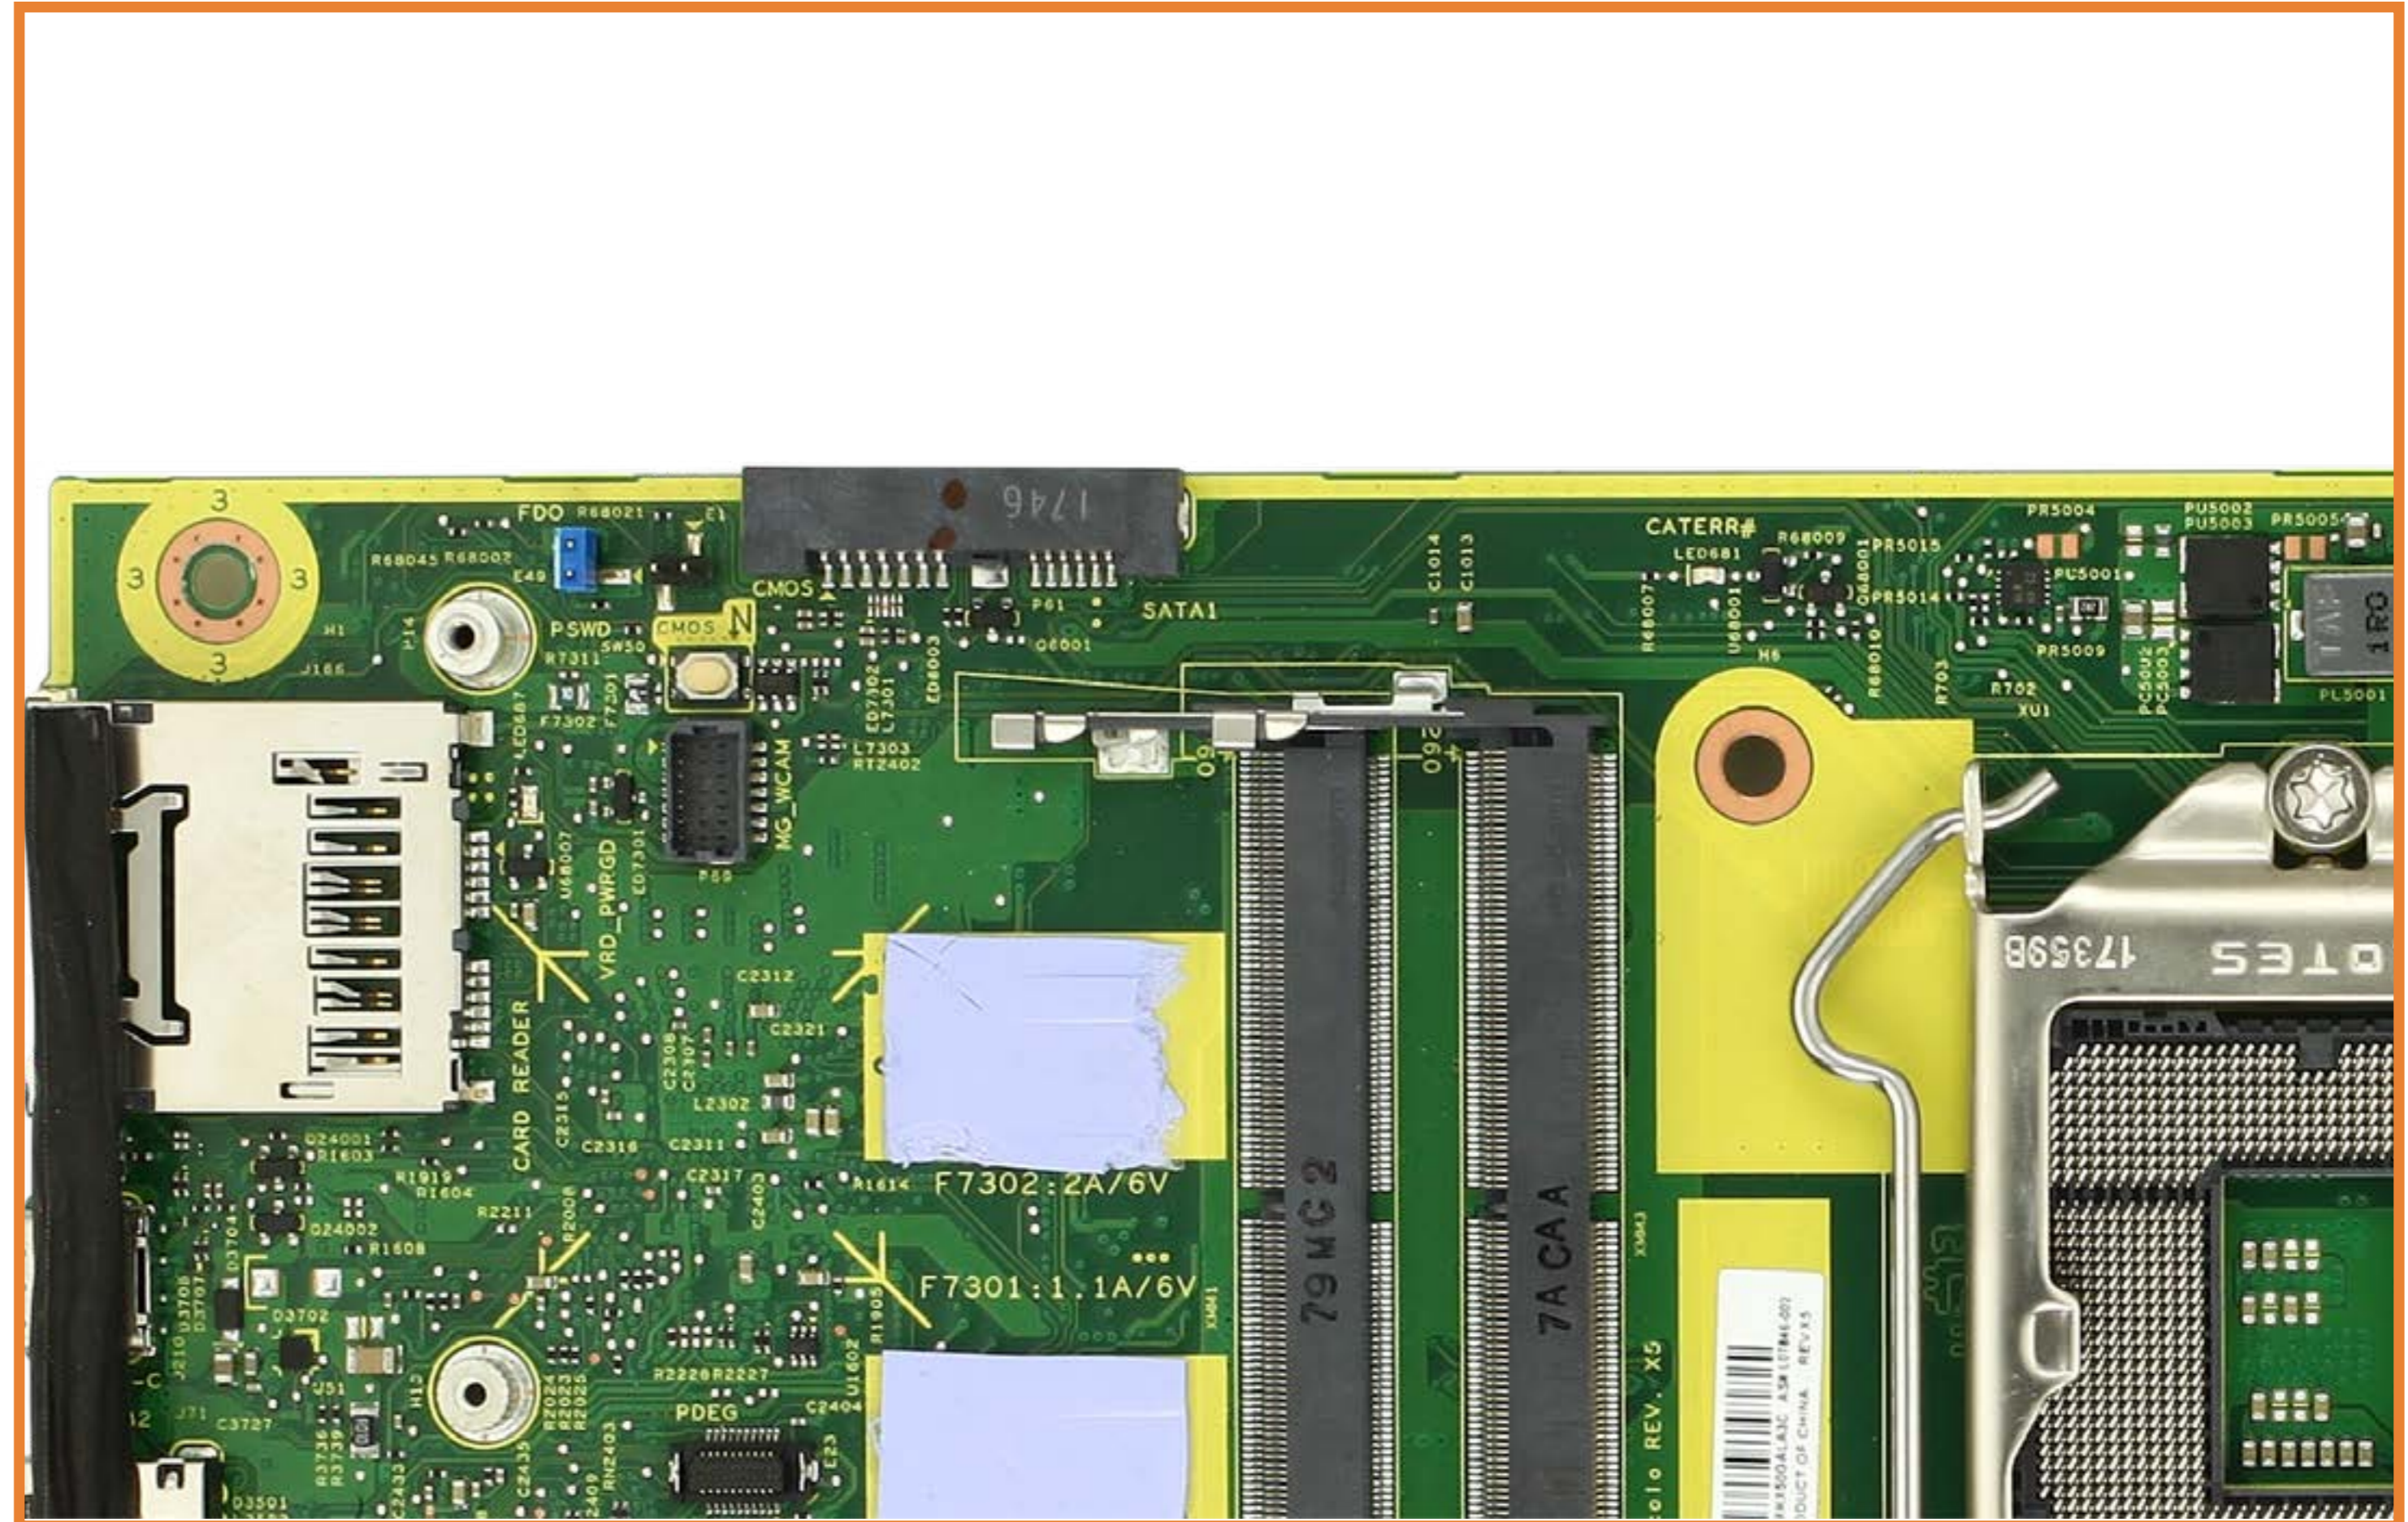



3 X View

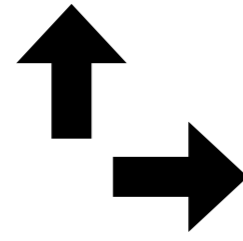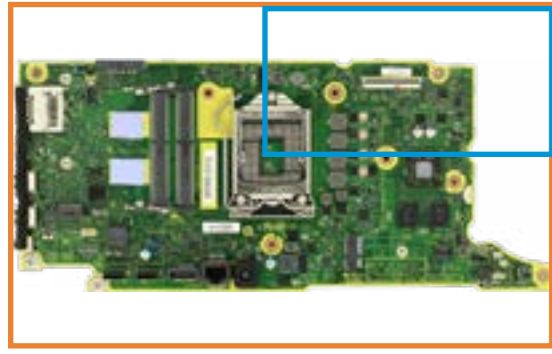

1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam

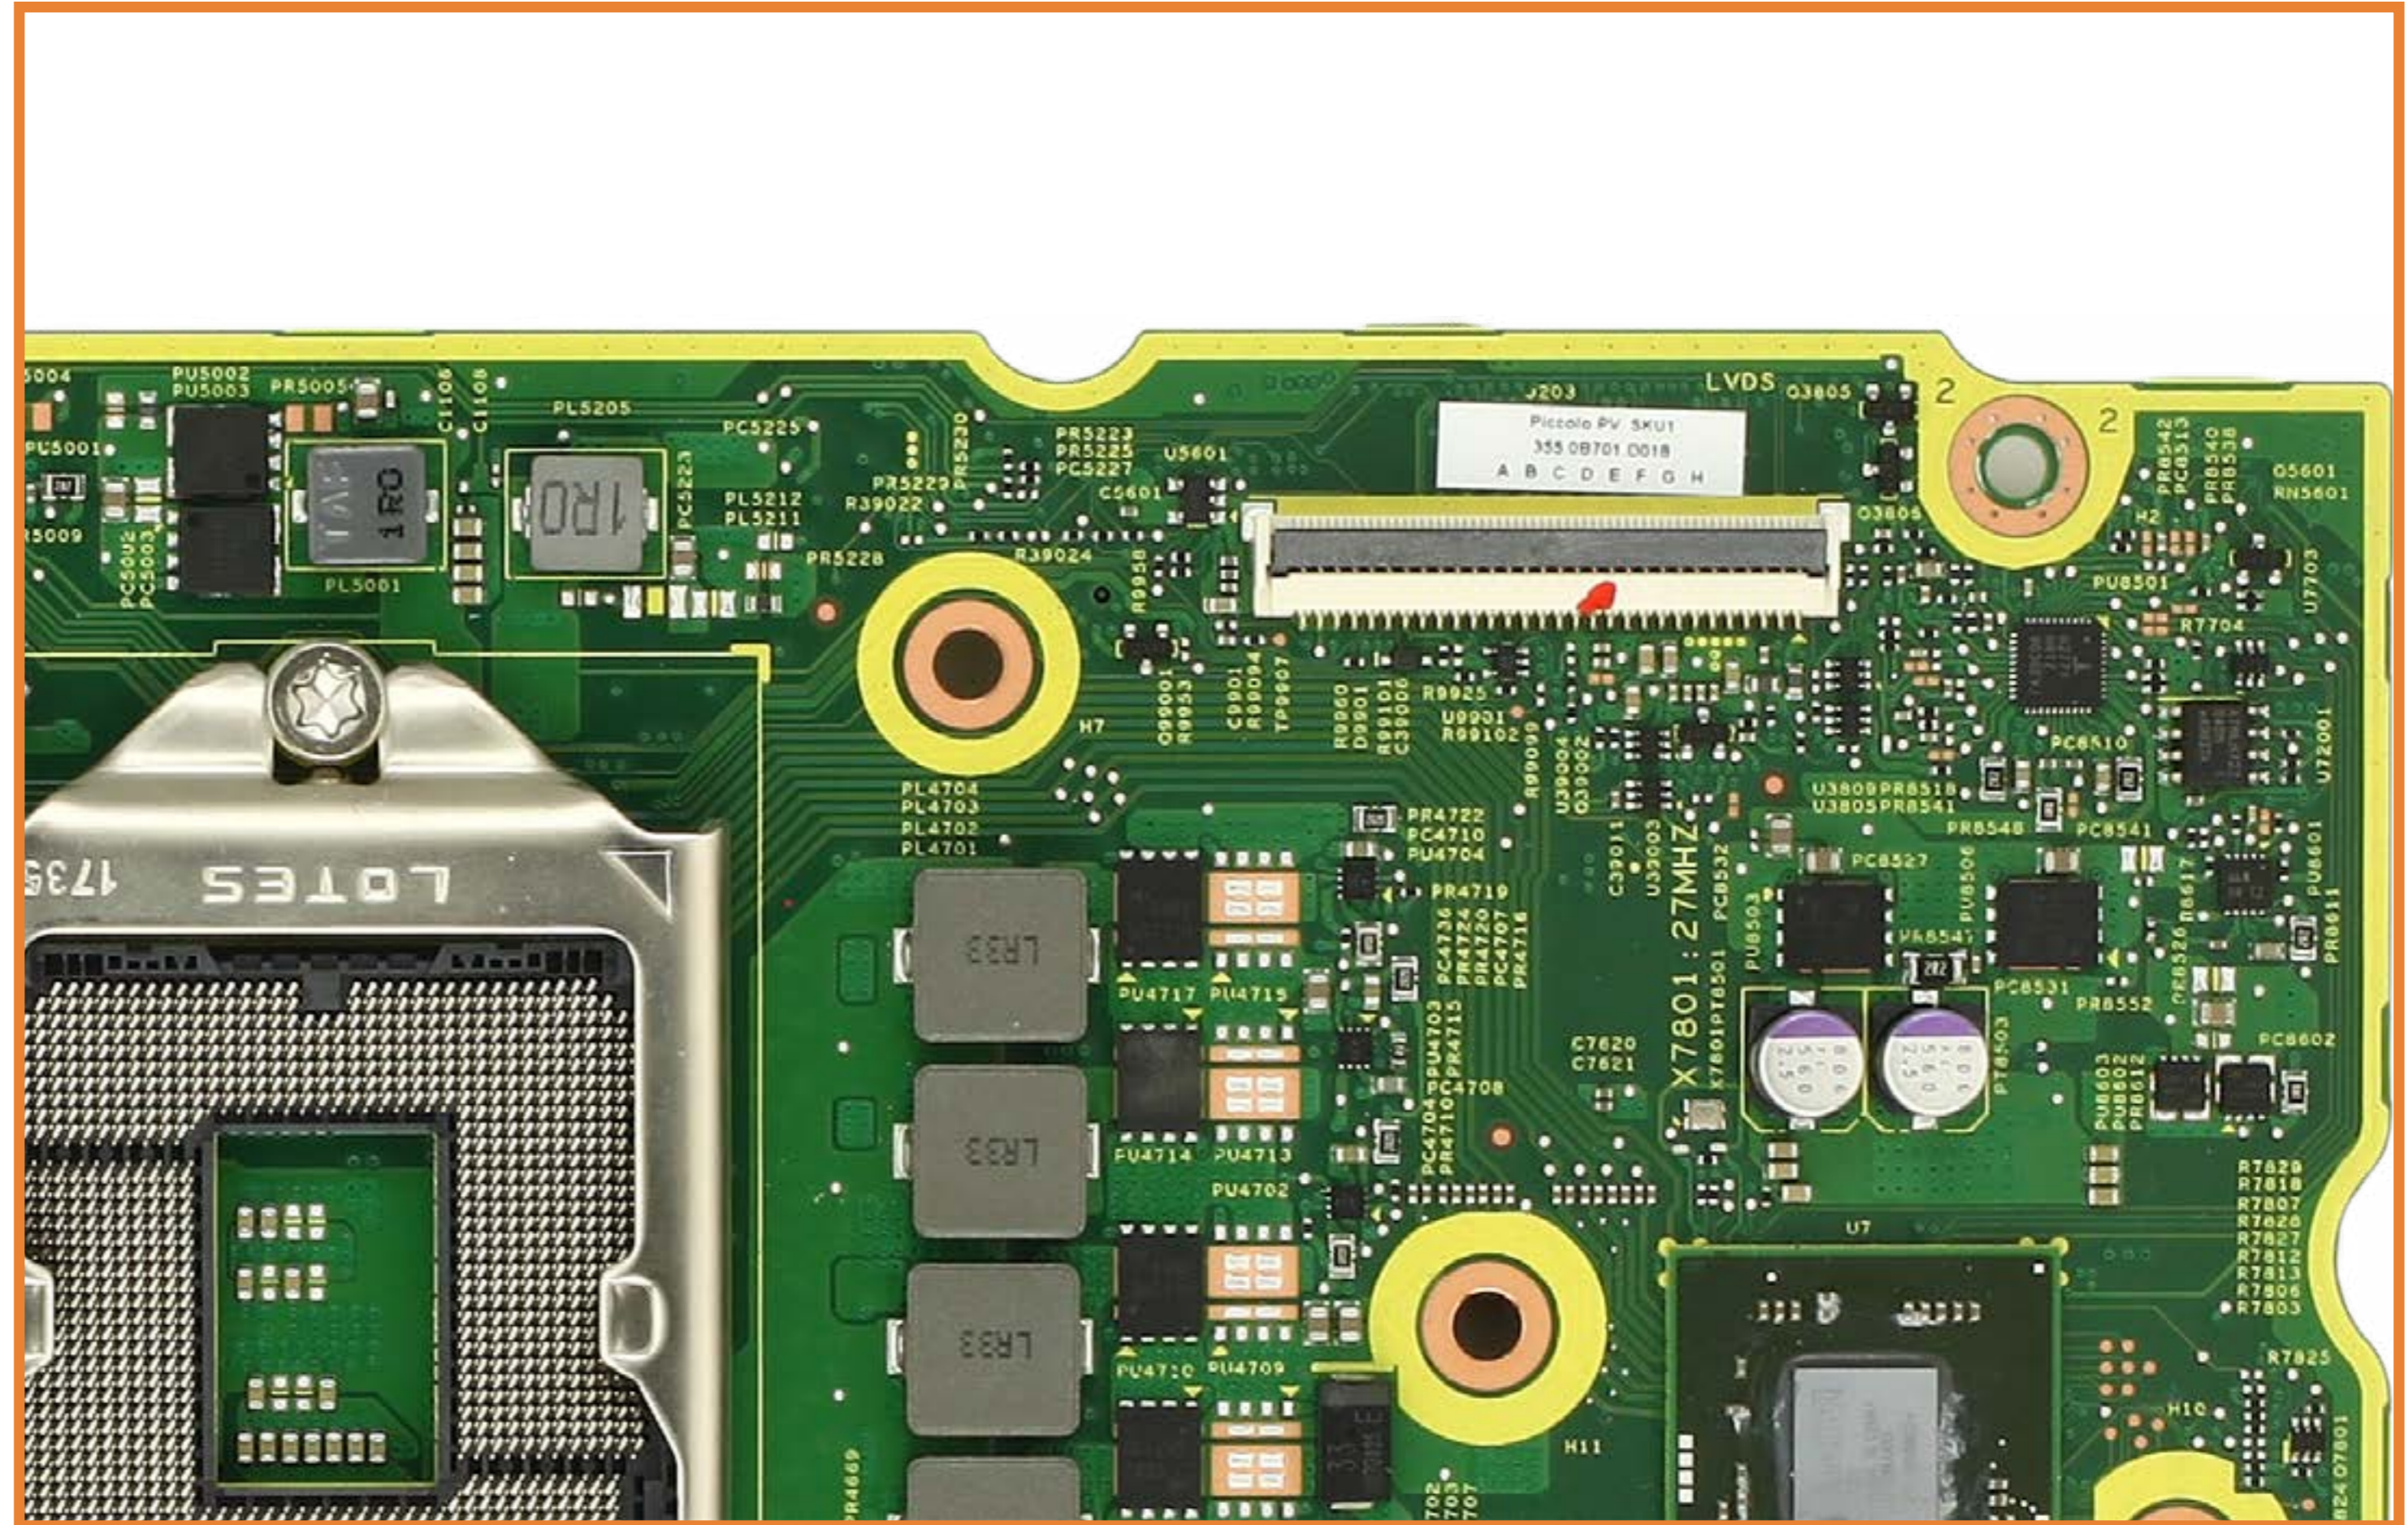




3 X View

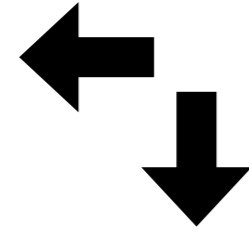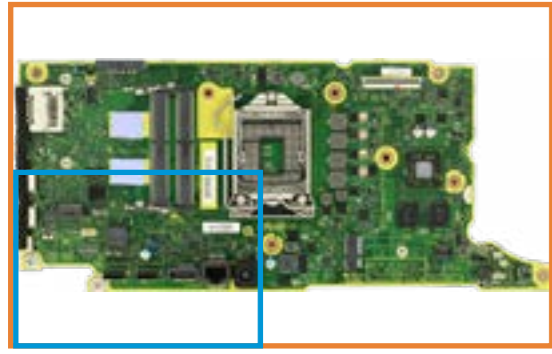

1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam





3 X View

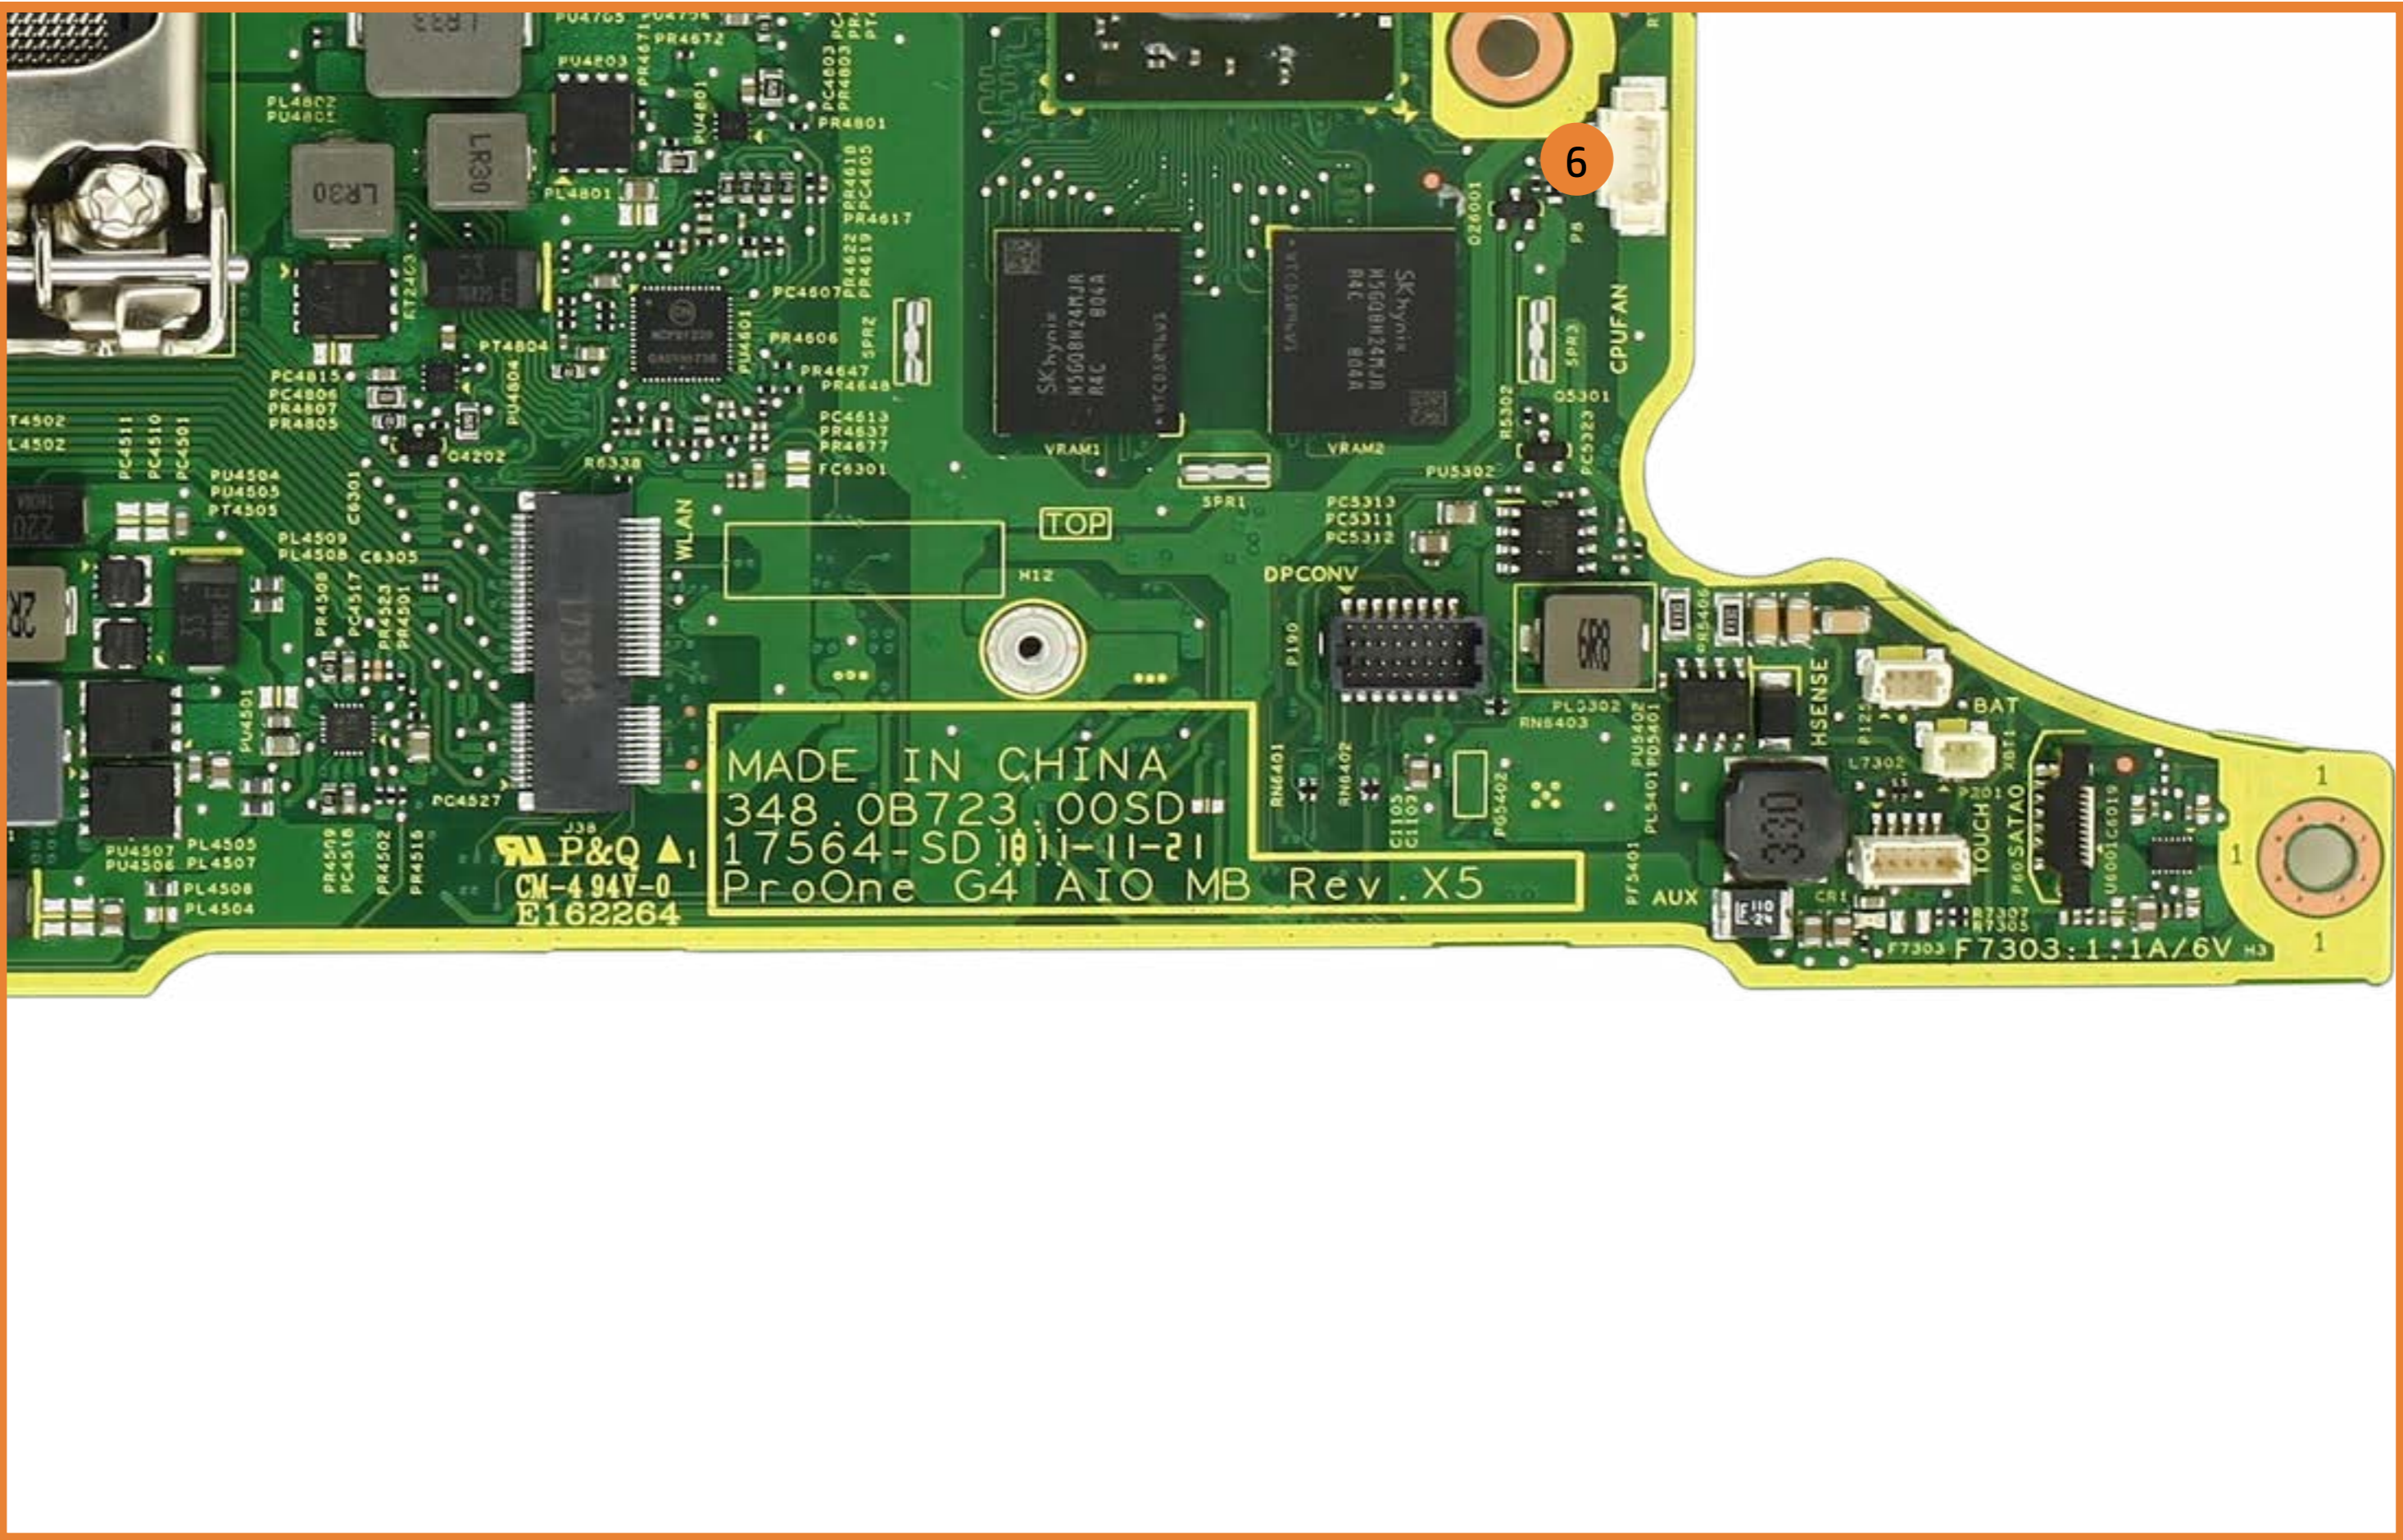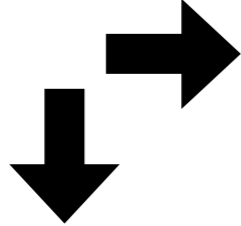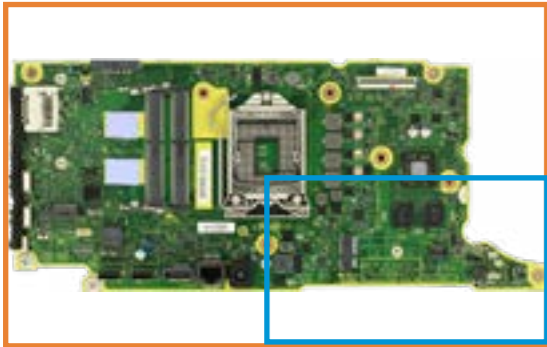


- 1. CMOS Reset
- 2. Optical Drive
- 3. Memory Modules
- 4. Processor
- 5. Display Connector
- 6. Fan Connector
- 7. Hood Sensor
- 8. Battery
- 9. Hard Drive
- 10. Touch Panel
- 11. Display Panel
- 12. WLAN Module
- 13. Power Connector
- 14. RJ-45 (network) jack
- 15. Display Port
- 16. USB 3.1 Type-A
- 17. Speaker
- 18. Option Board
- 19. Power Button
- 20. Headphone/Microphone Jack
- 21. USB 3.1 Type-A
- 22. M.2 SSD drive
- 23. USB 3.1 Type-A (charging)
- 24. USB 3.1 Type-C
- 25. SD Card Reader
- 26. Webcam


4 X View

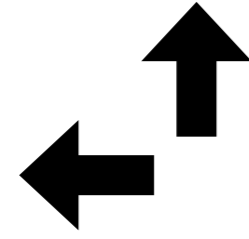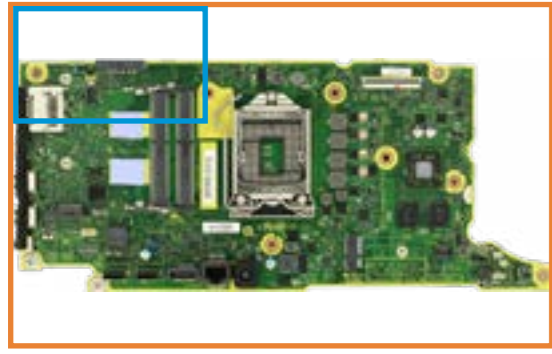


1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam


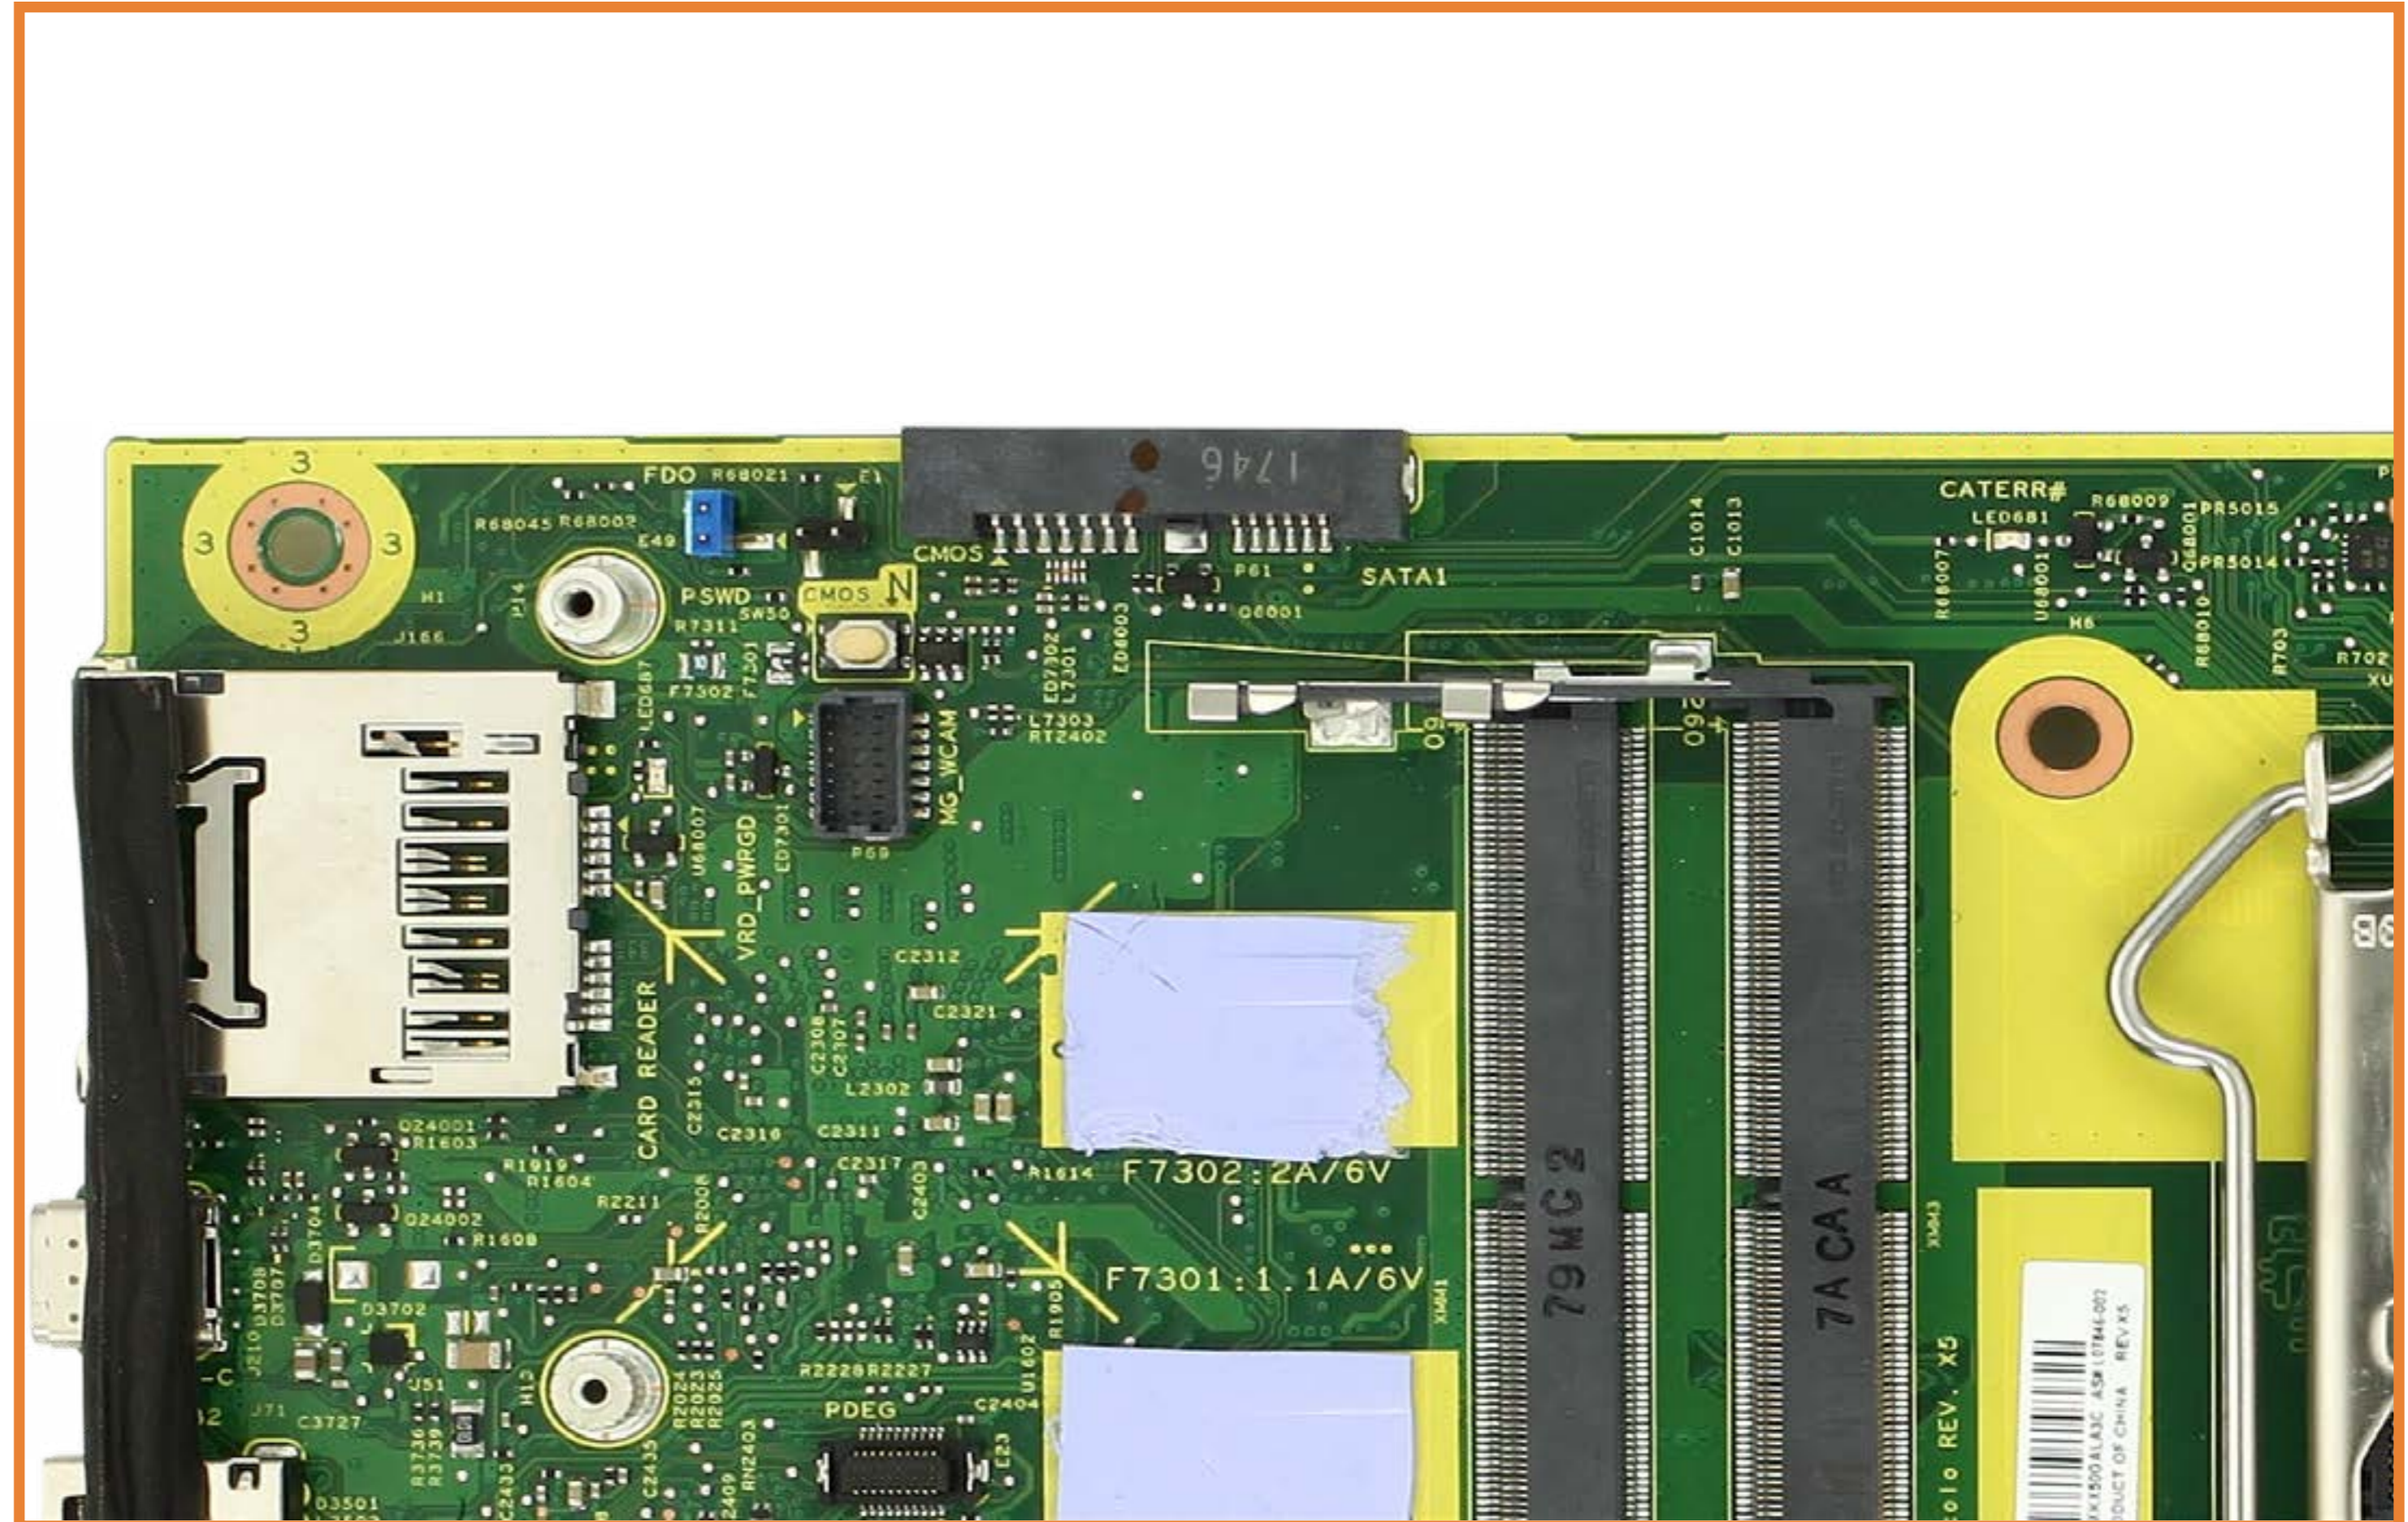


4 X View

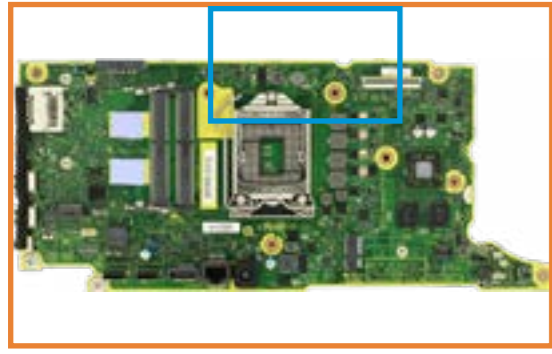


1. CMOS Reset
2. Optical Drive
3. **Memory Modules**
4. **Processor**
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam

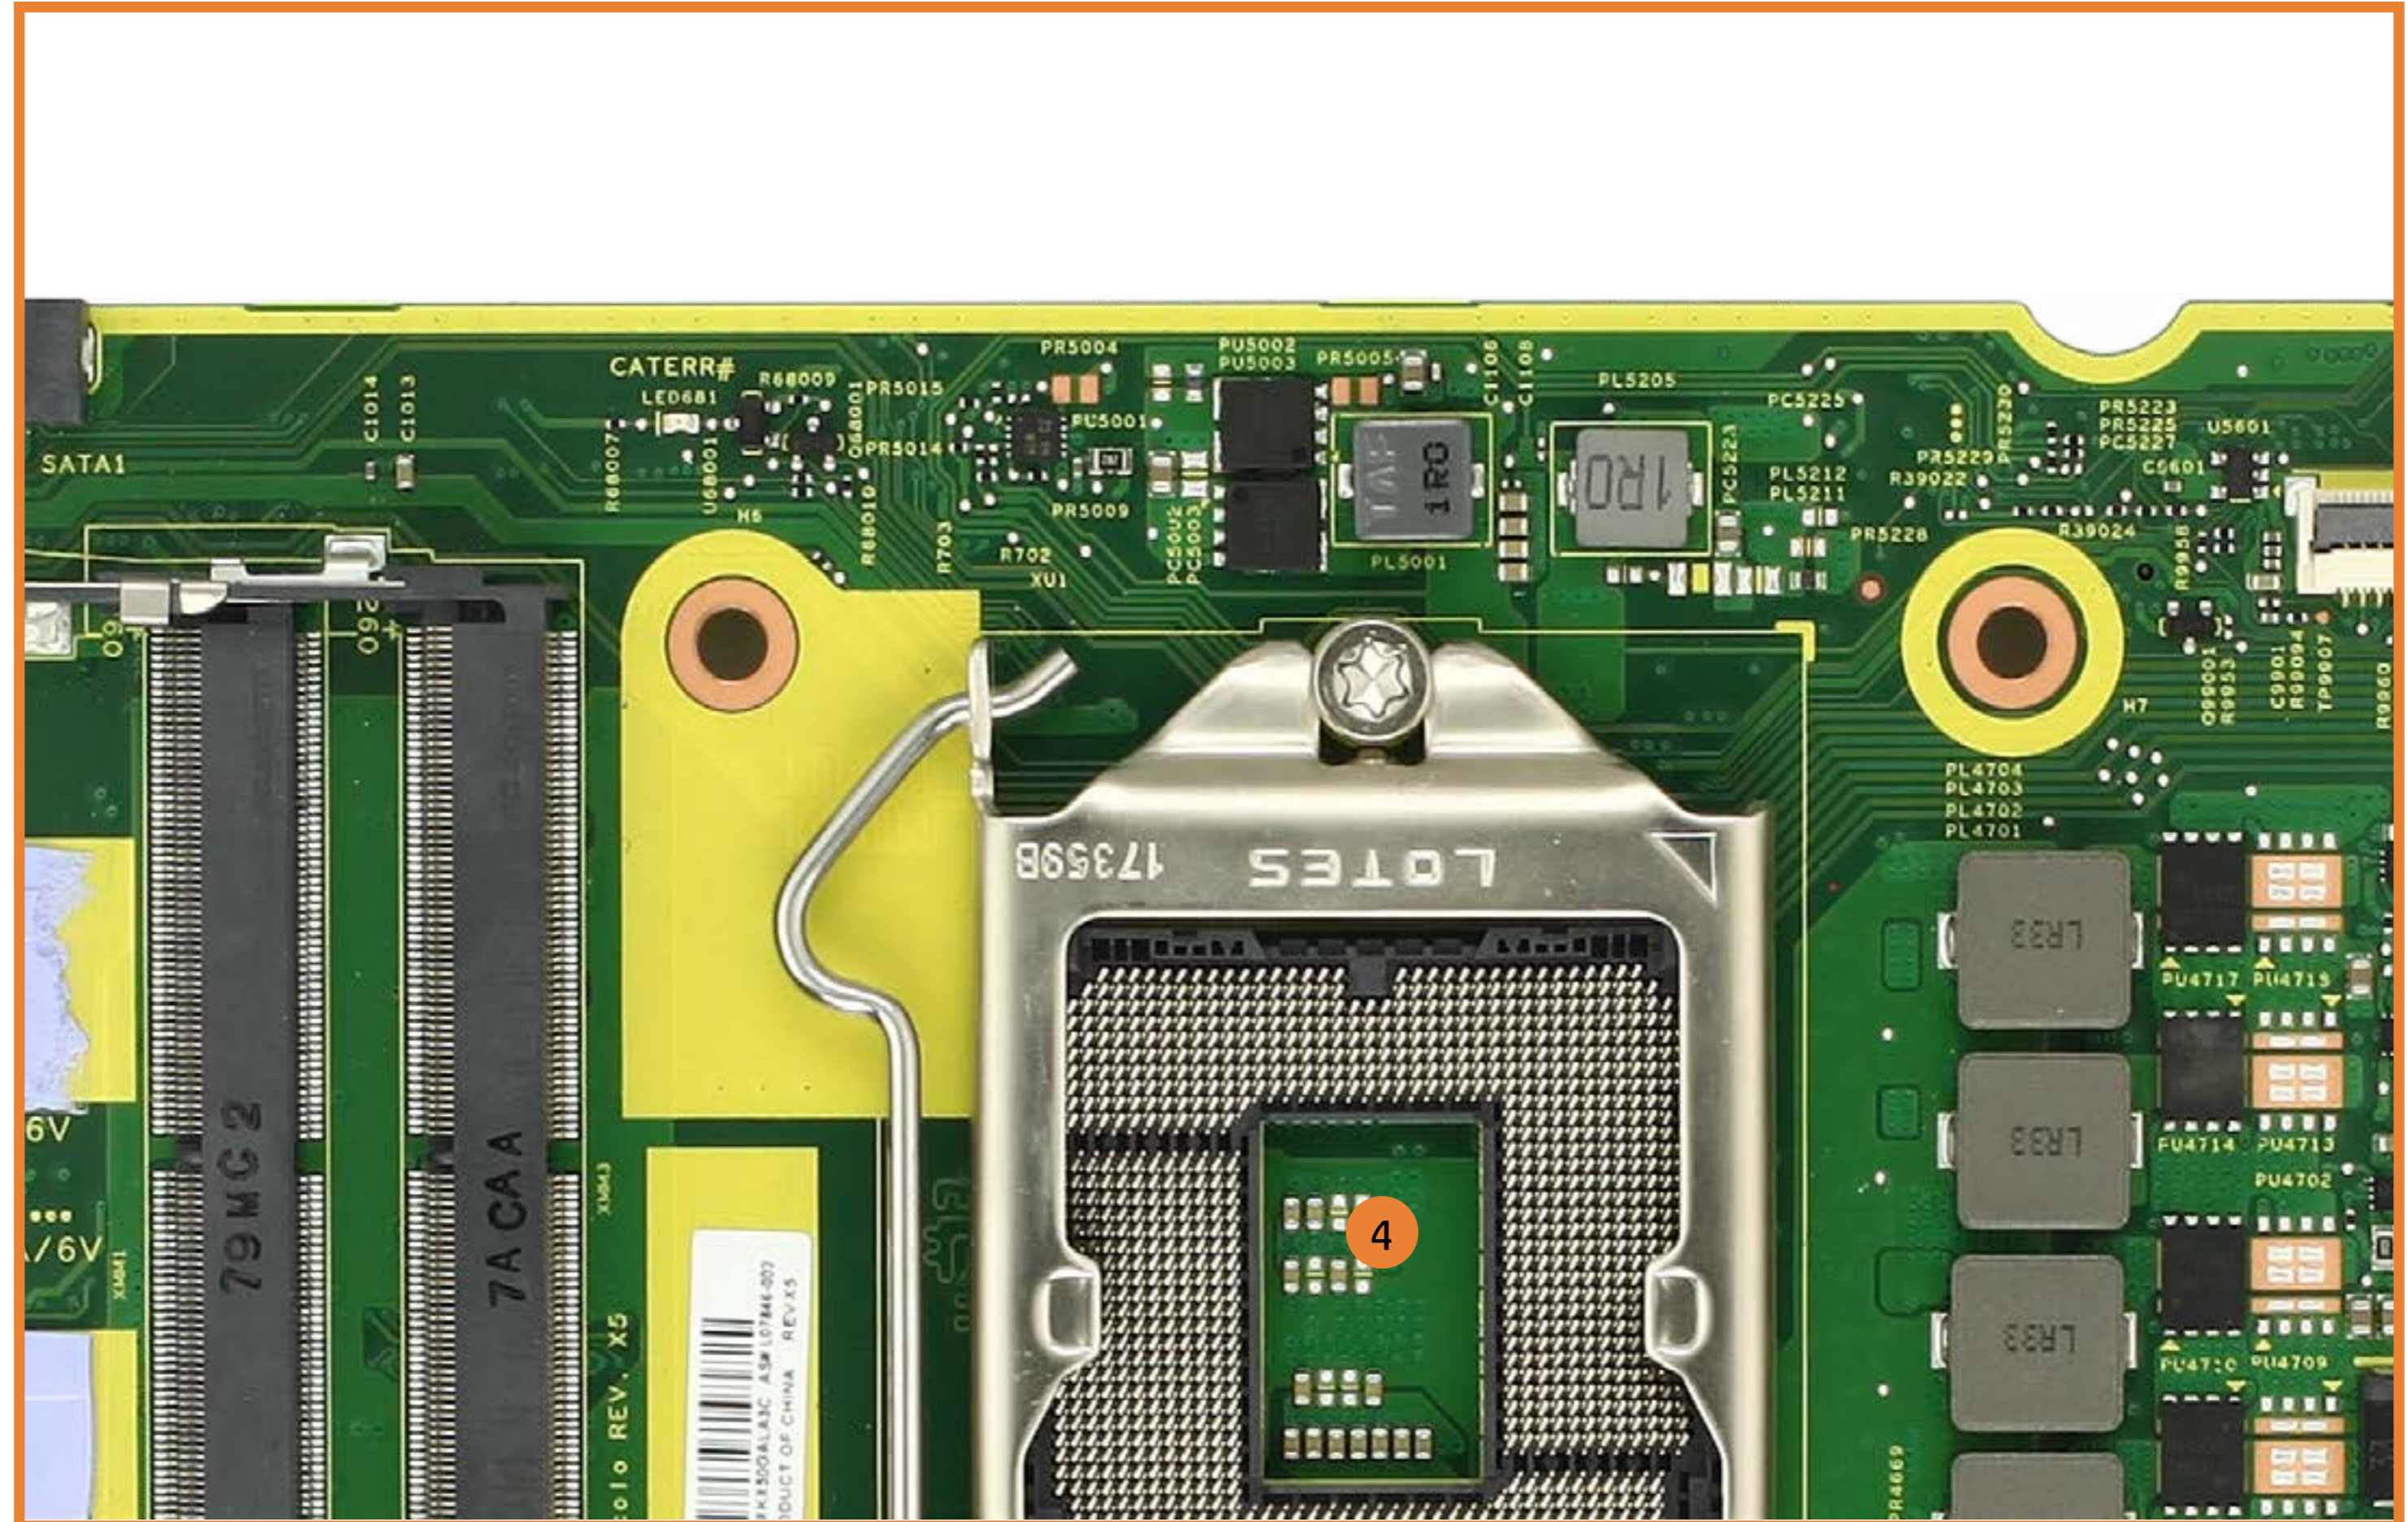


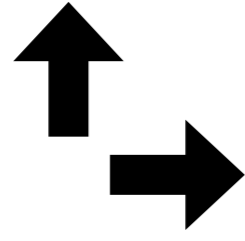
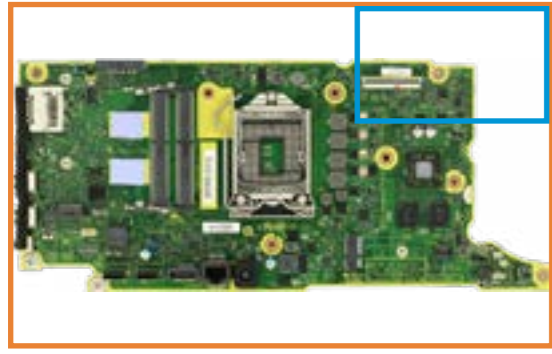


4 X View

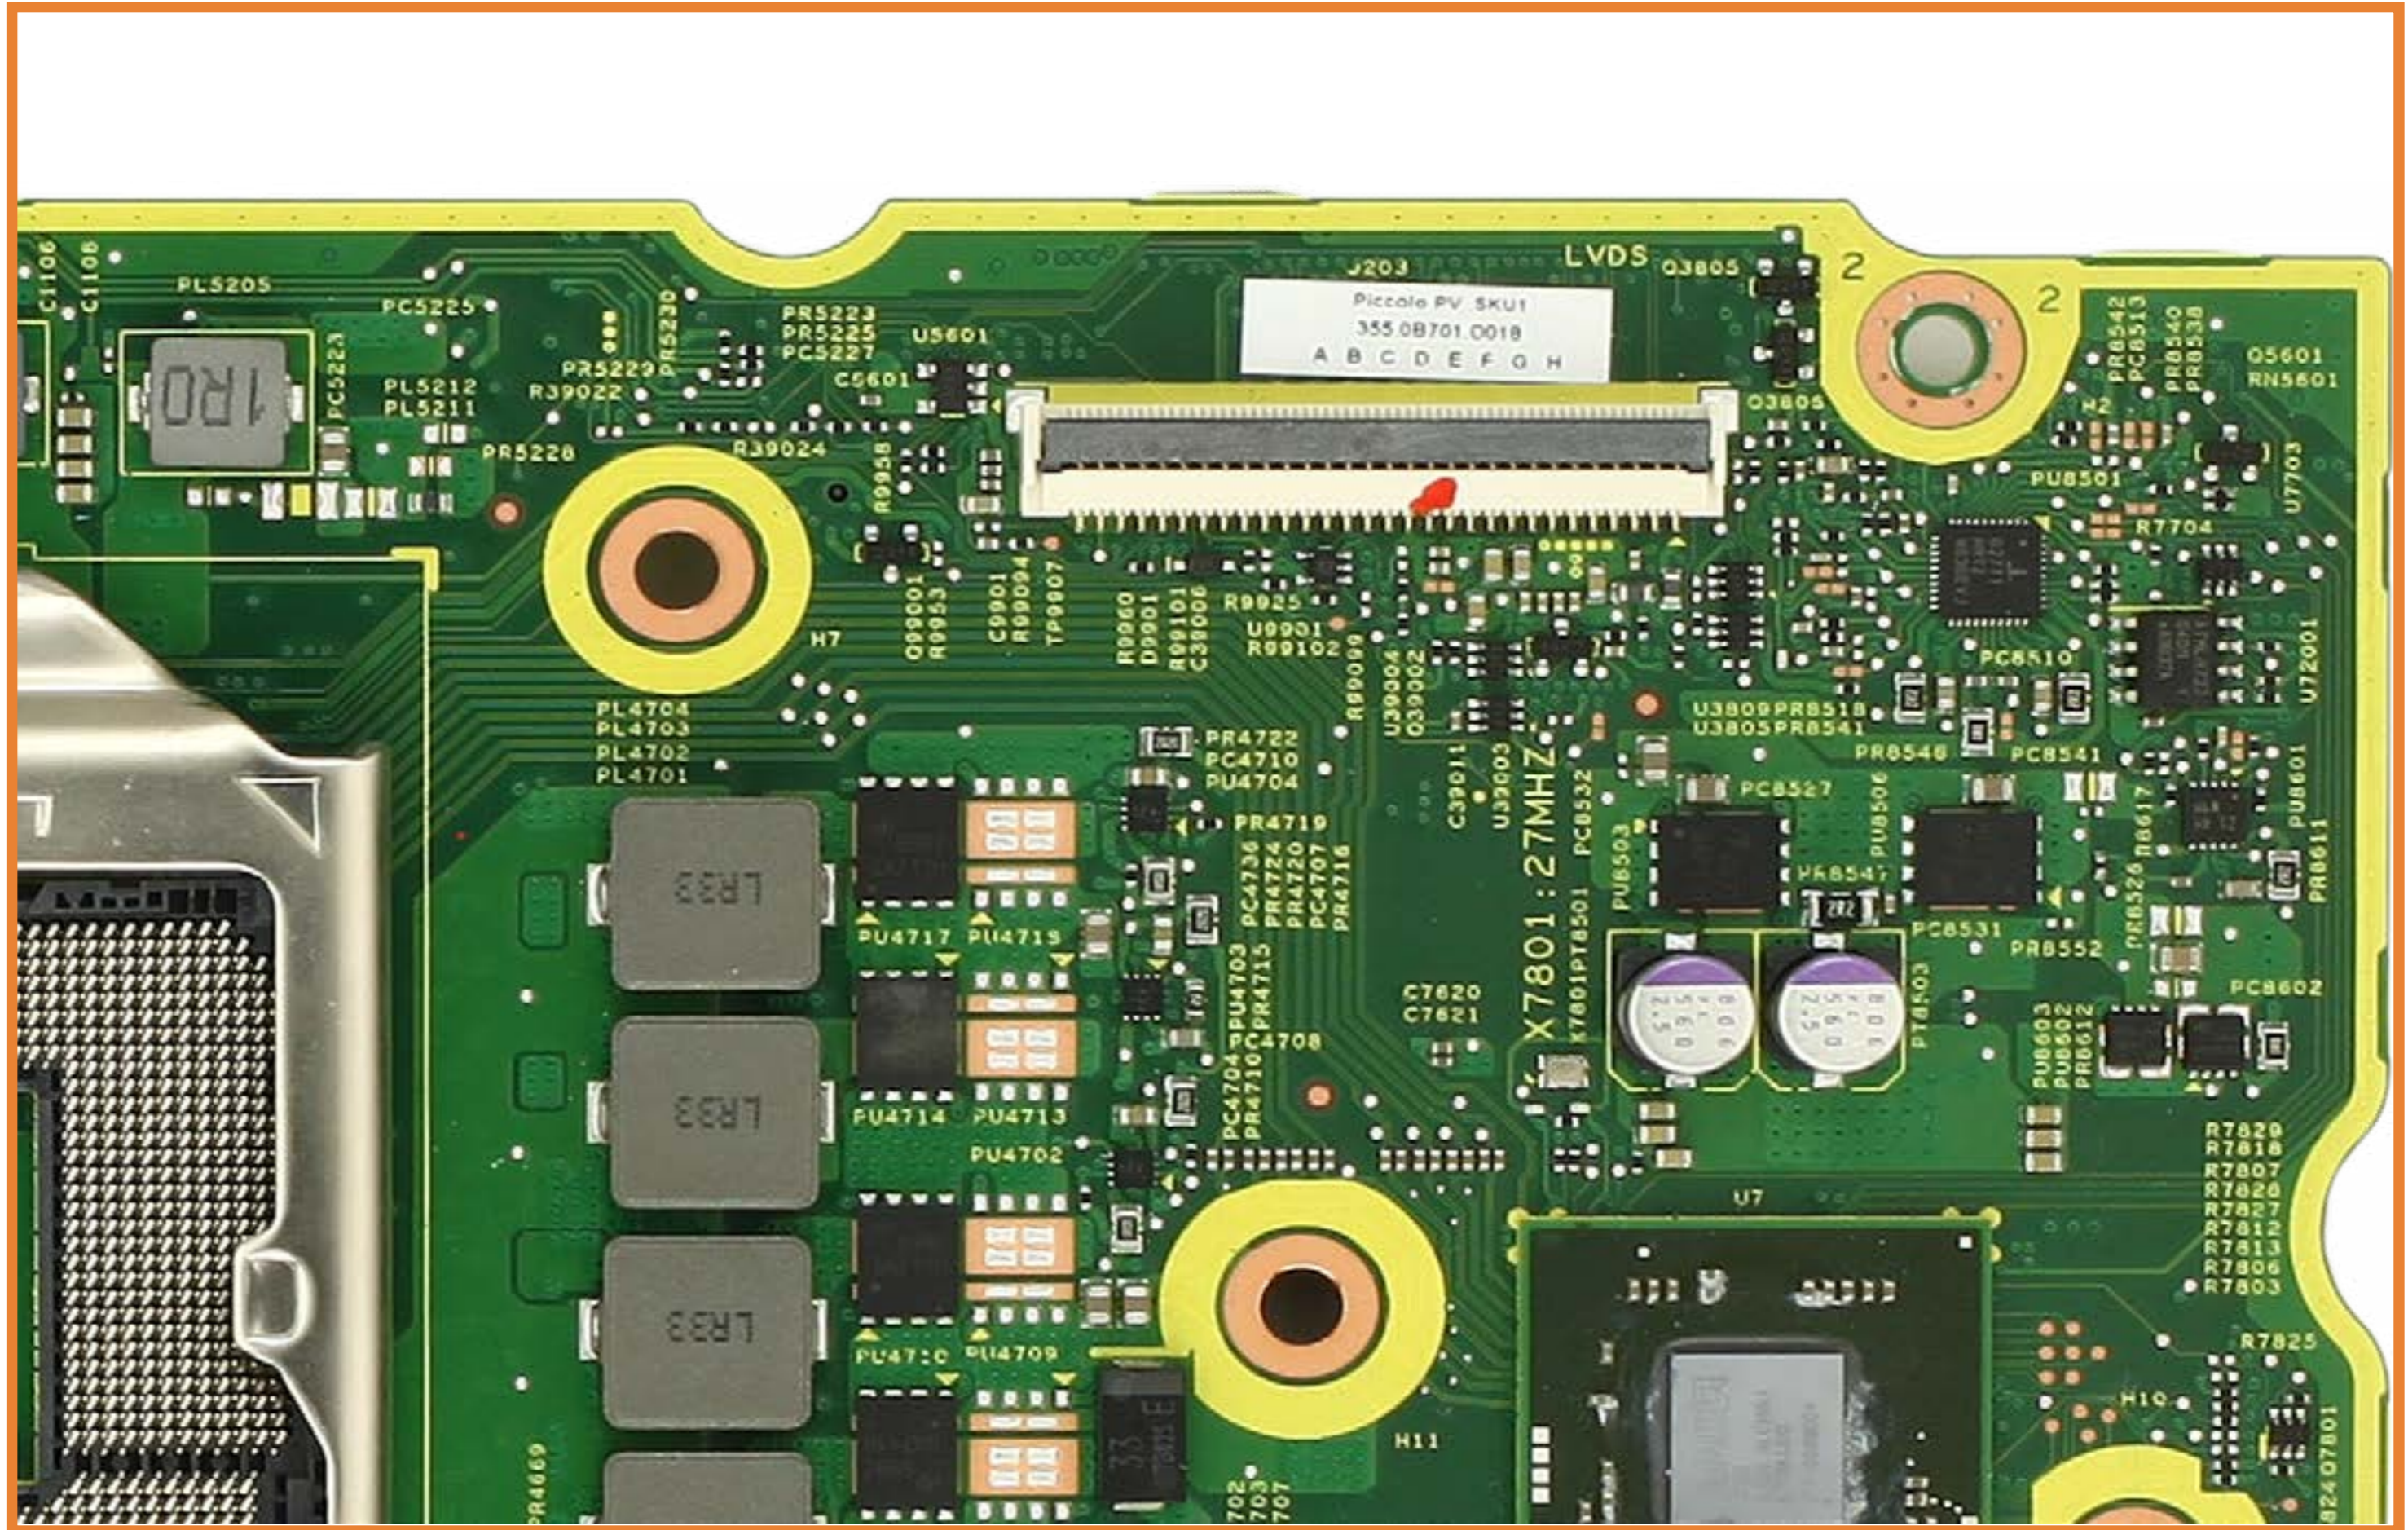


- 1. CMOS Reset
- 2. Optical Drive
- 3. Memory Modules
- 4. Processor
- 5. Display Connector
- 6. Fan Connector
- 7. Hood Sensor
- 8. Battery
- 9. Hard Drive
- 10. Touch Panel
- 11. Display Panel
- 12. WLAN Module
- 13. Power Connector
- 14. RJ-45 (network) jack
- 15. Display Port
- 16. USB 3.1 Type-A
- 17. Speaker
- 18. Option Board
- 19. Power Button
- 20. Headphone/Microphone Jack
- 21. USB 3.1 Type-A
- 22. M.2 SSD drive
- 23. USB 3.1 Type-A (charging)
- 24. USB 3.1 Type-C
- 25. SD Card Reader
- 26. Webcam

 4 X View

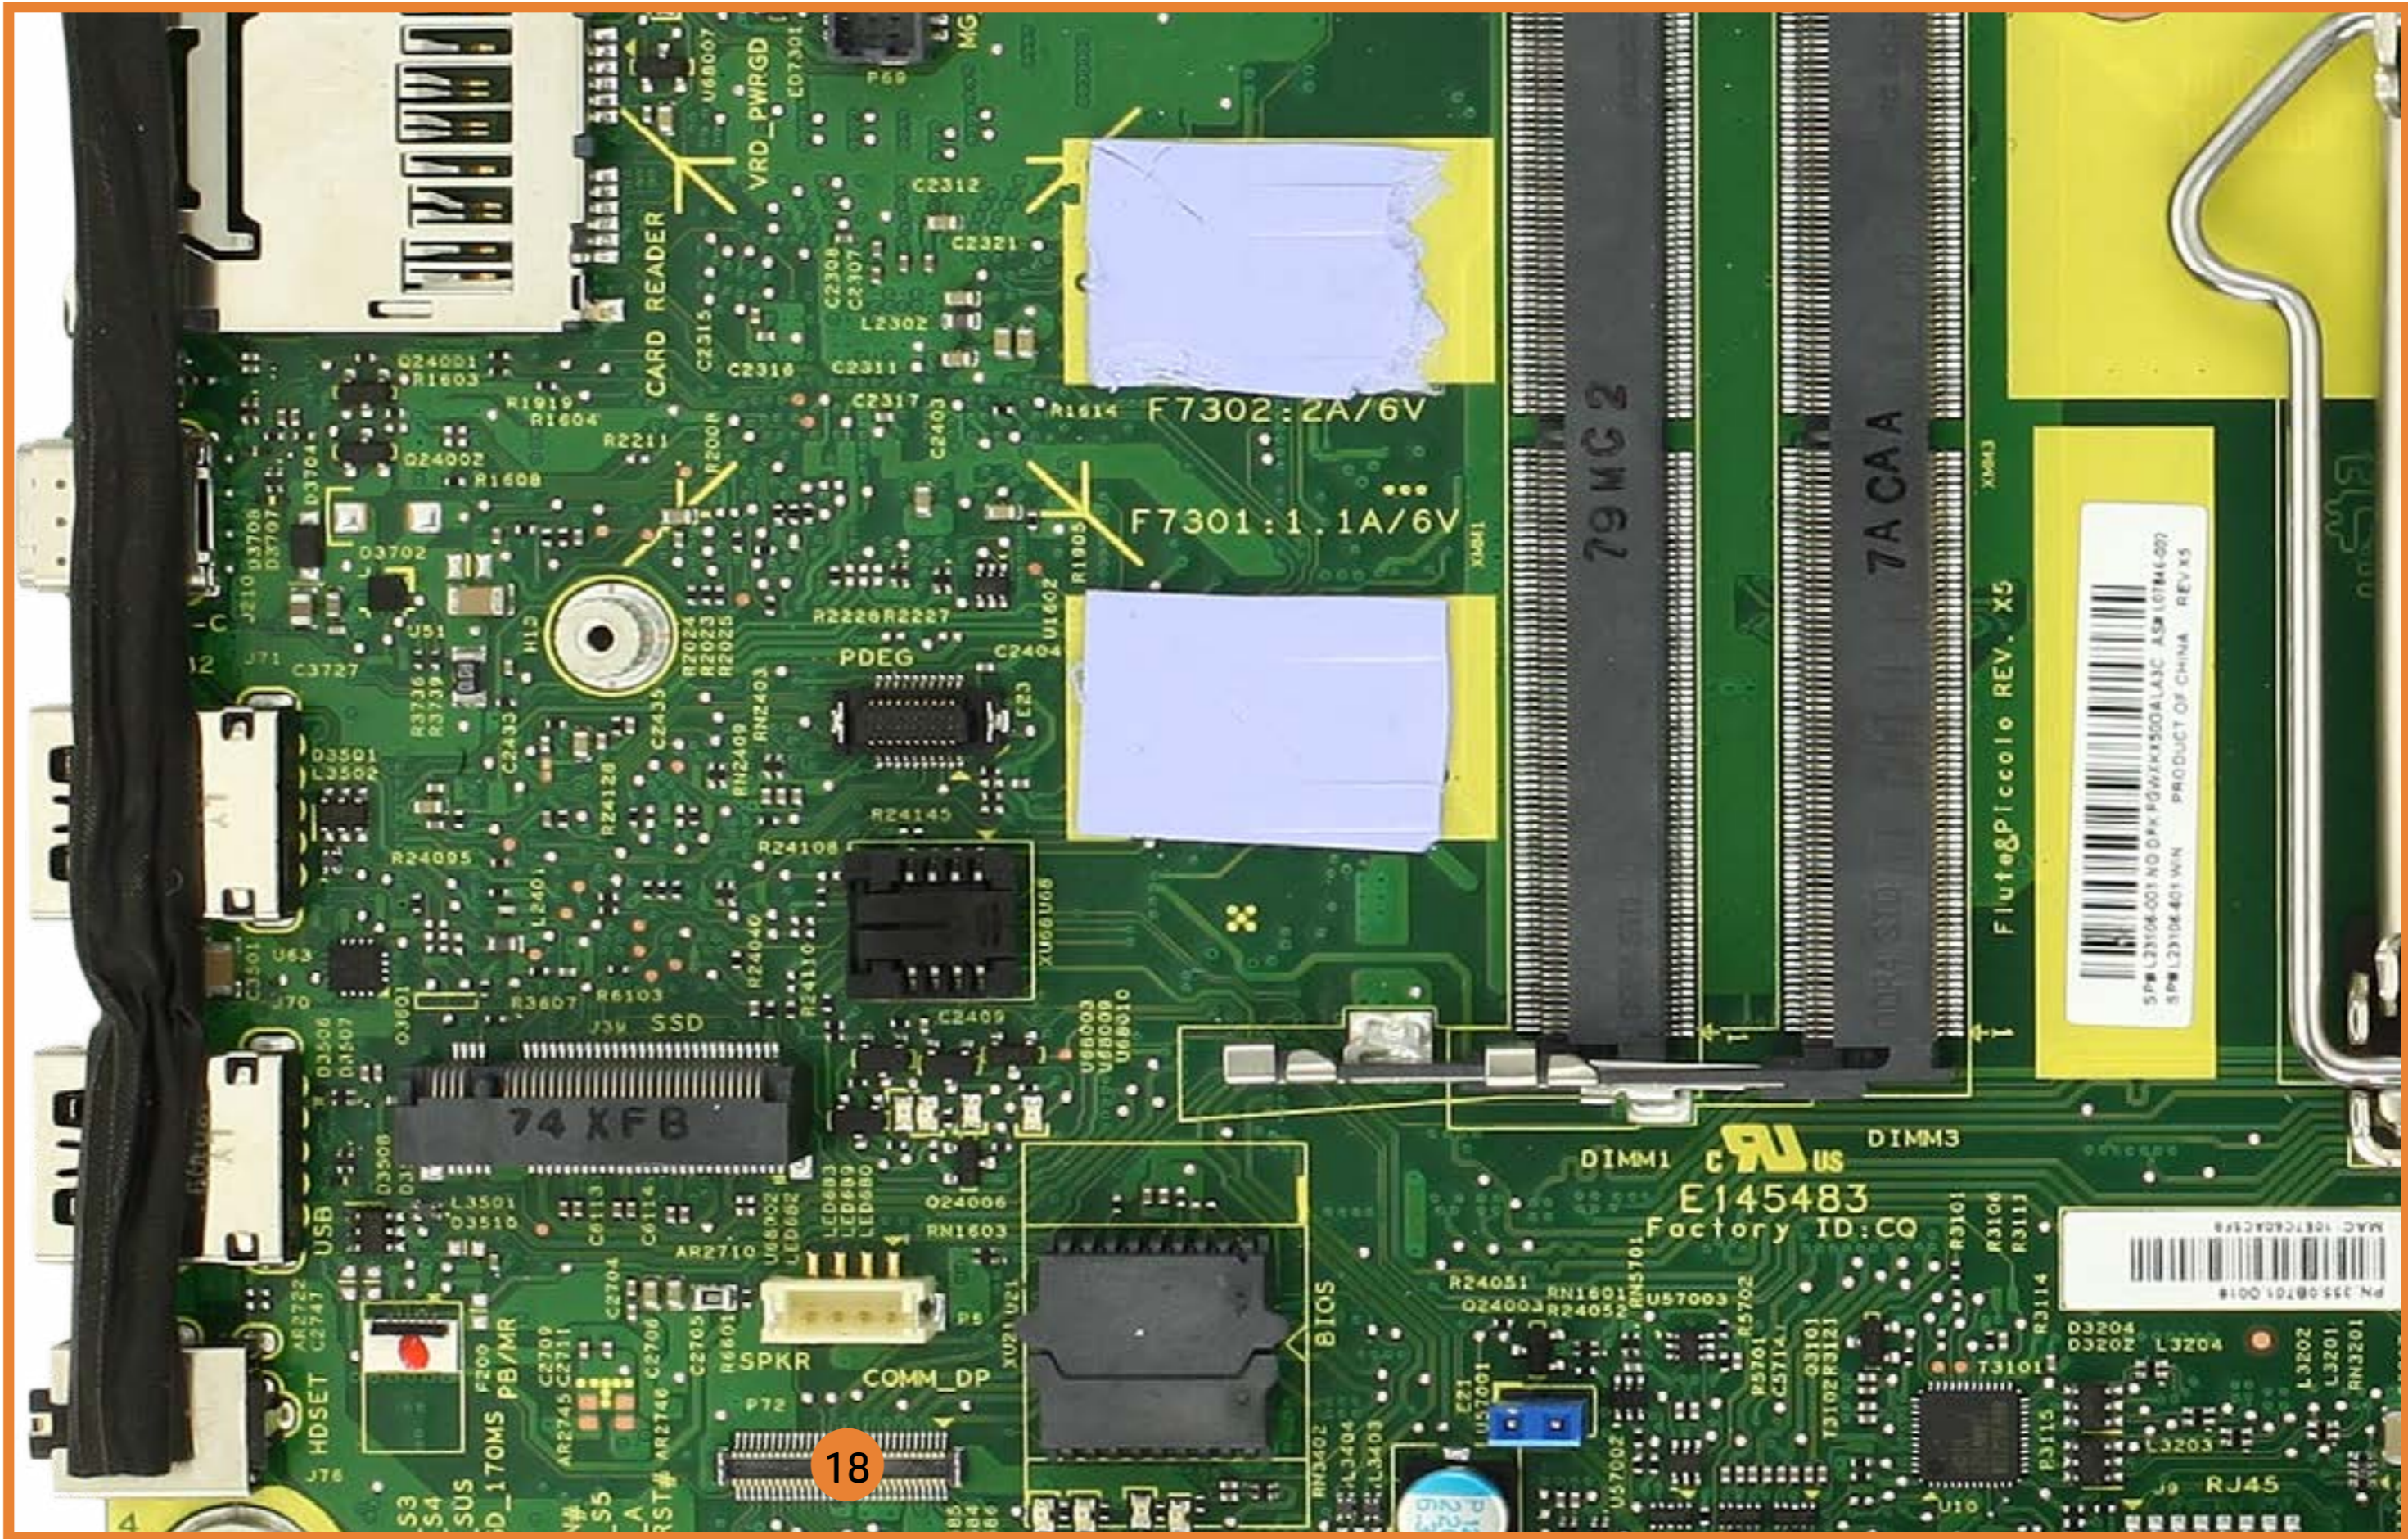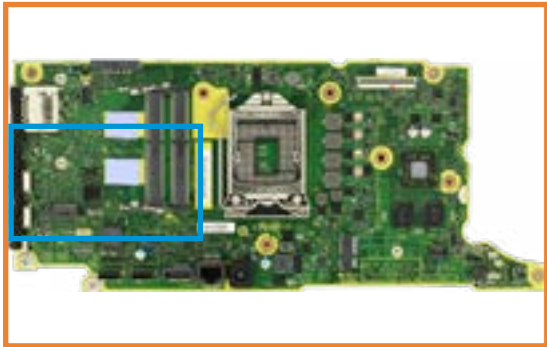


1. CMOS Reset
2. Optical Drive
3. **Memory Modules**
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam




4 X View

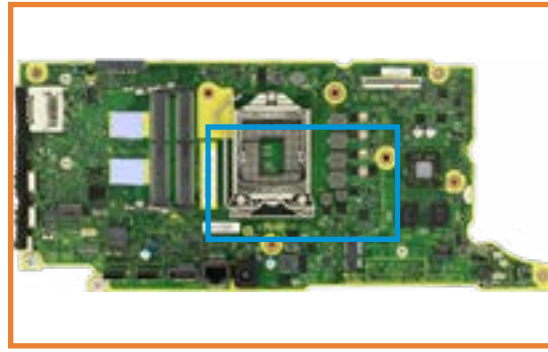

1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam



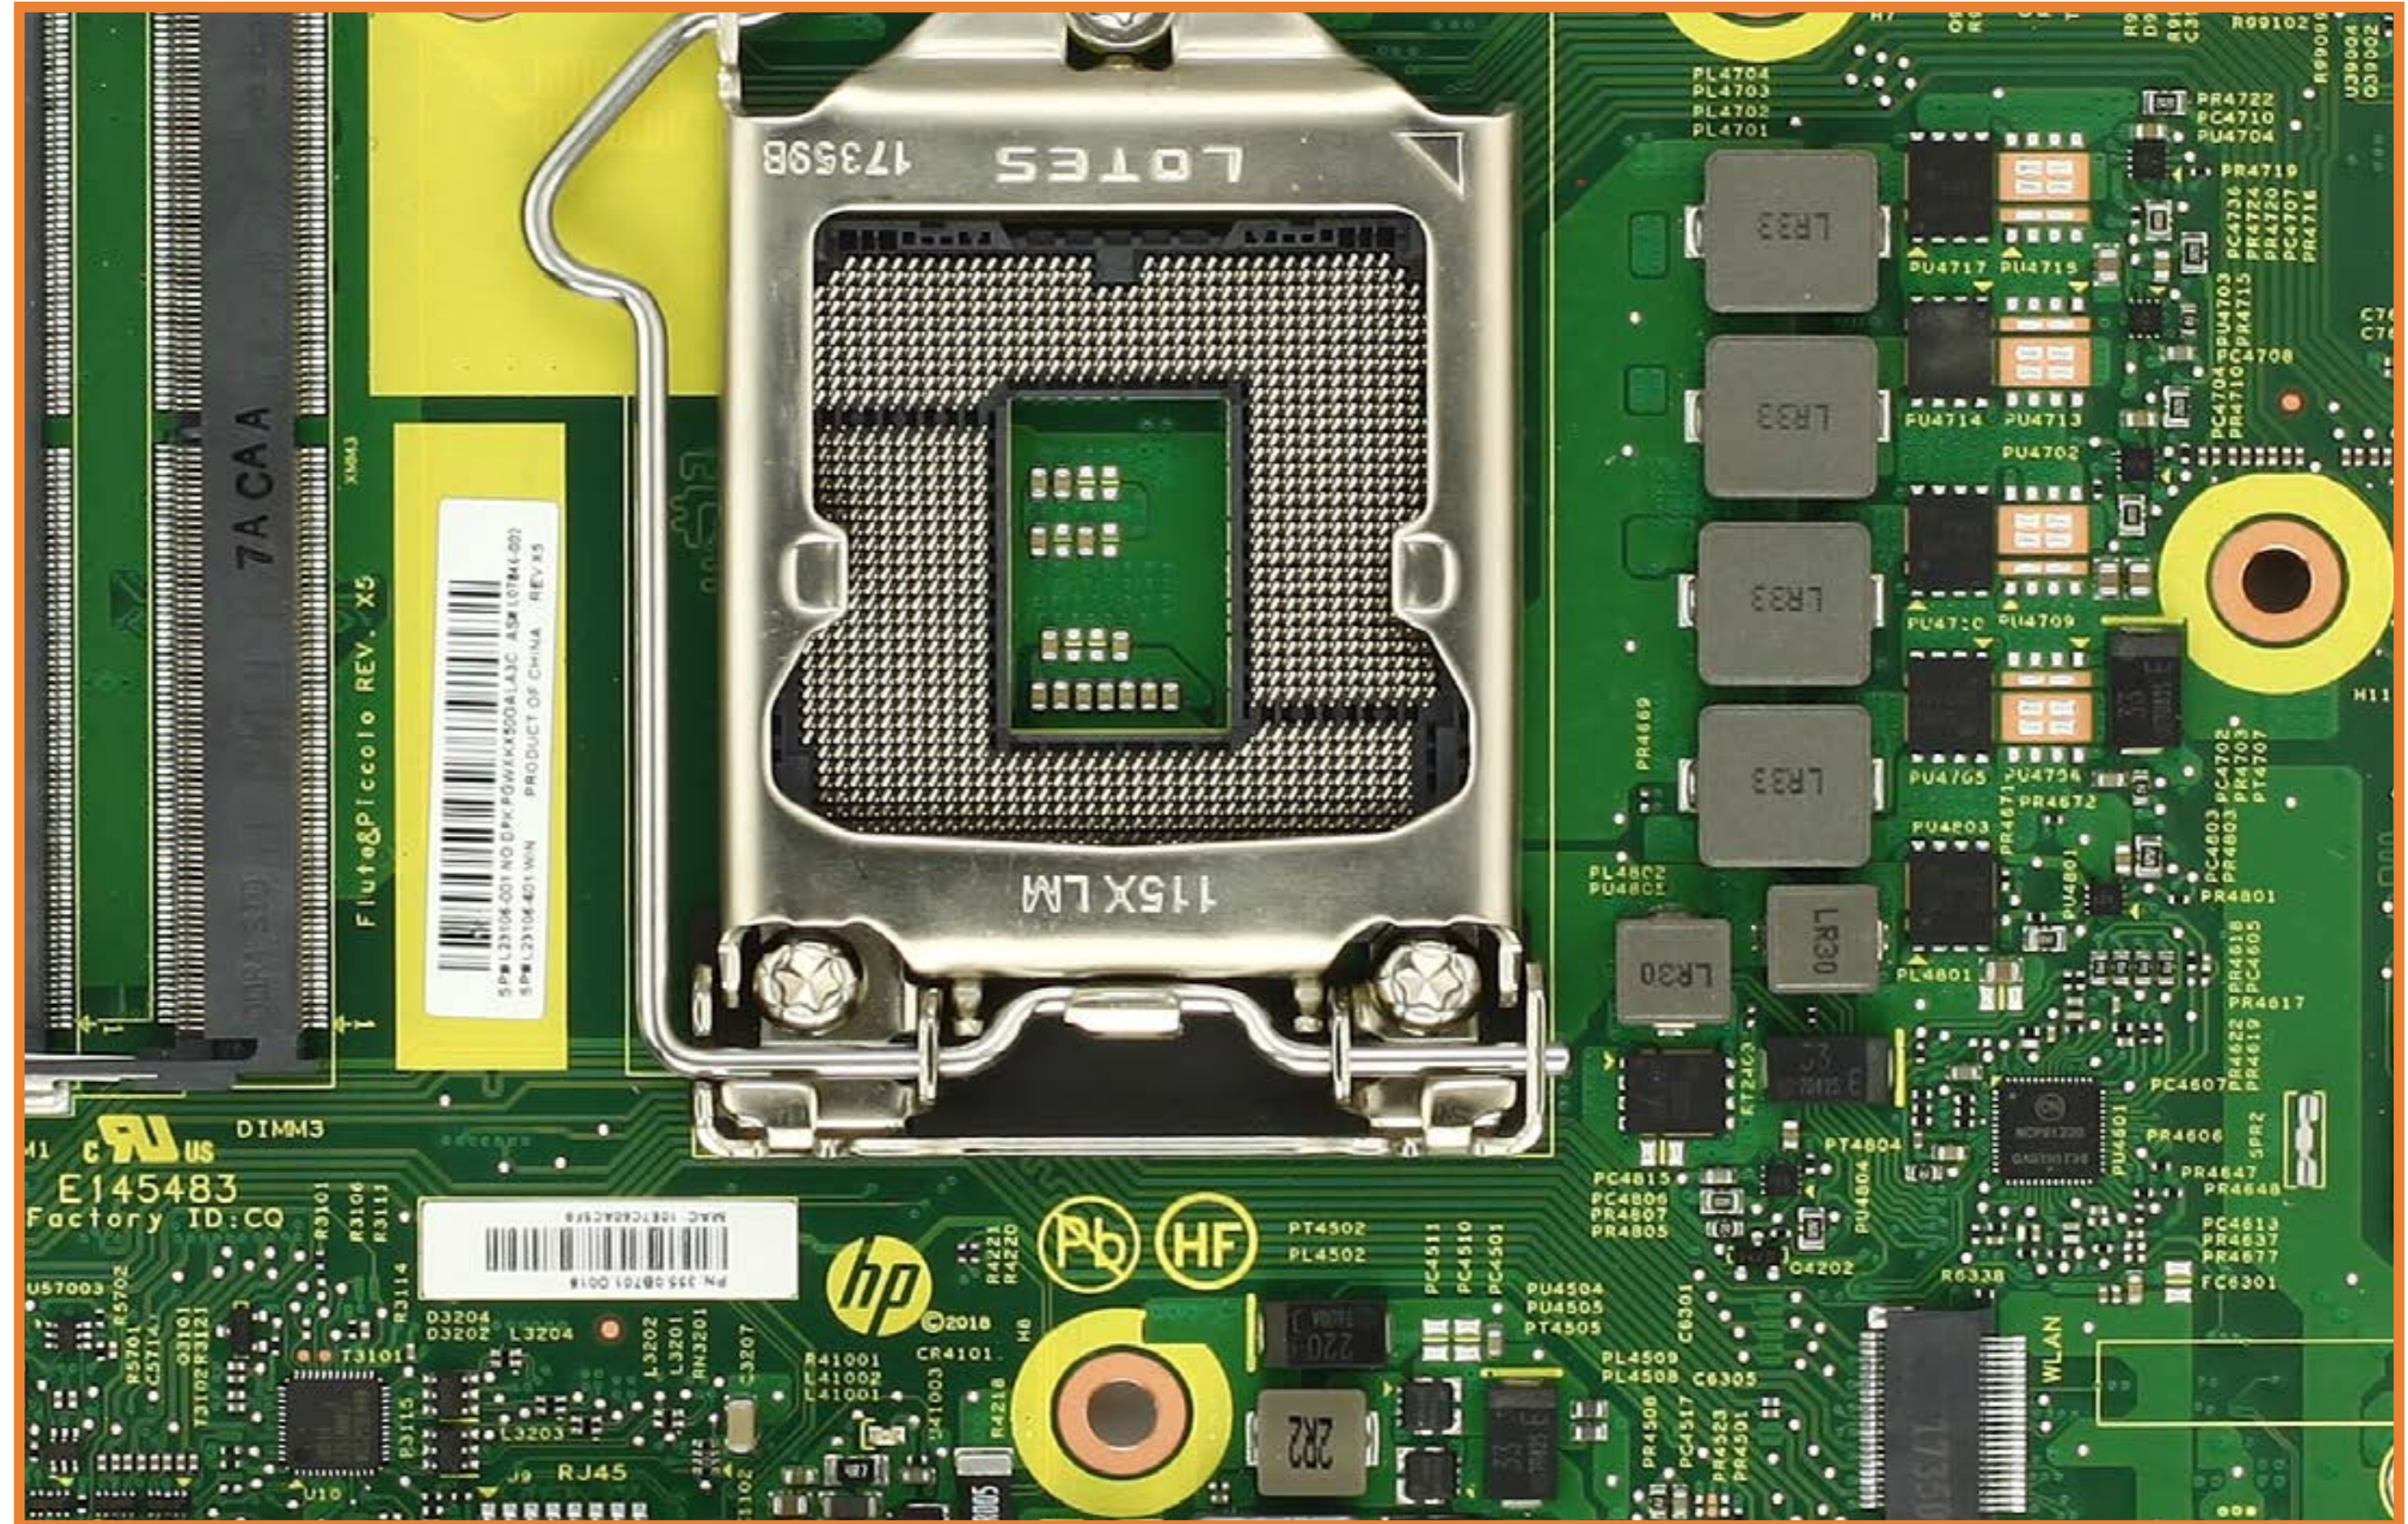


4 X View

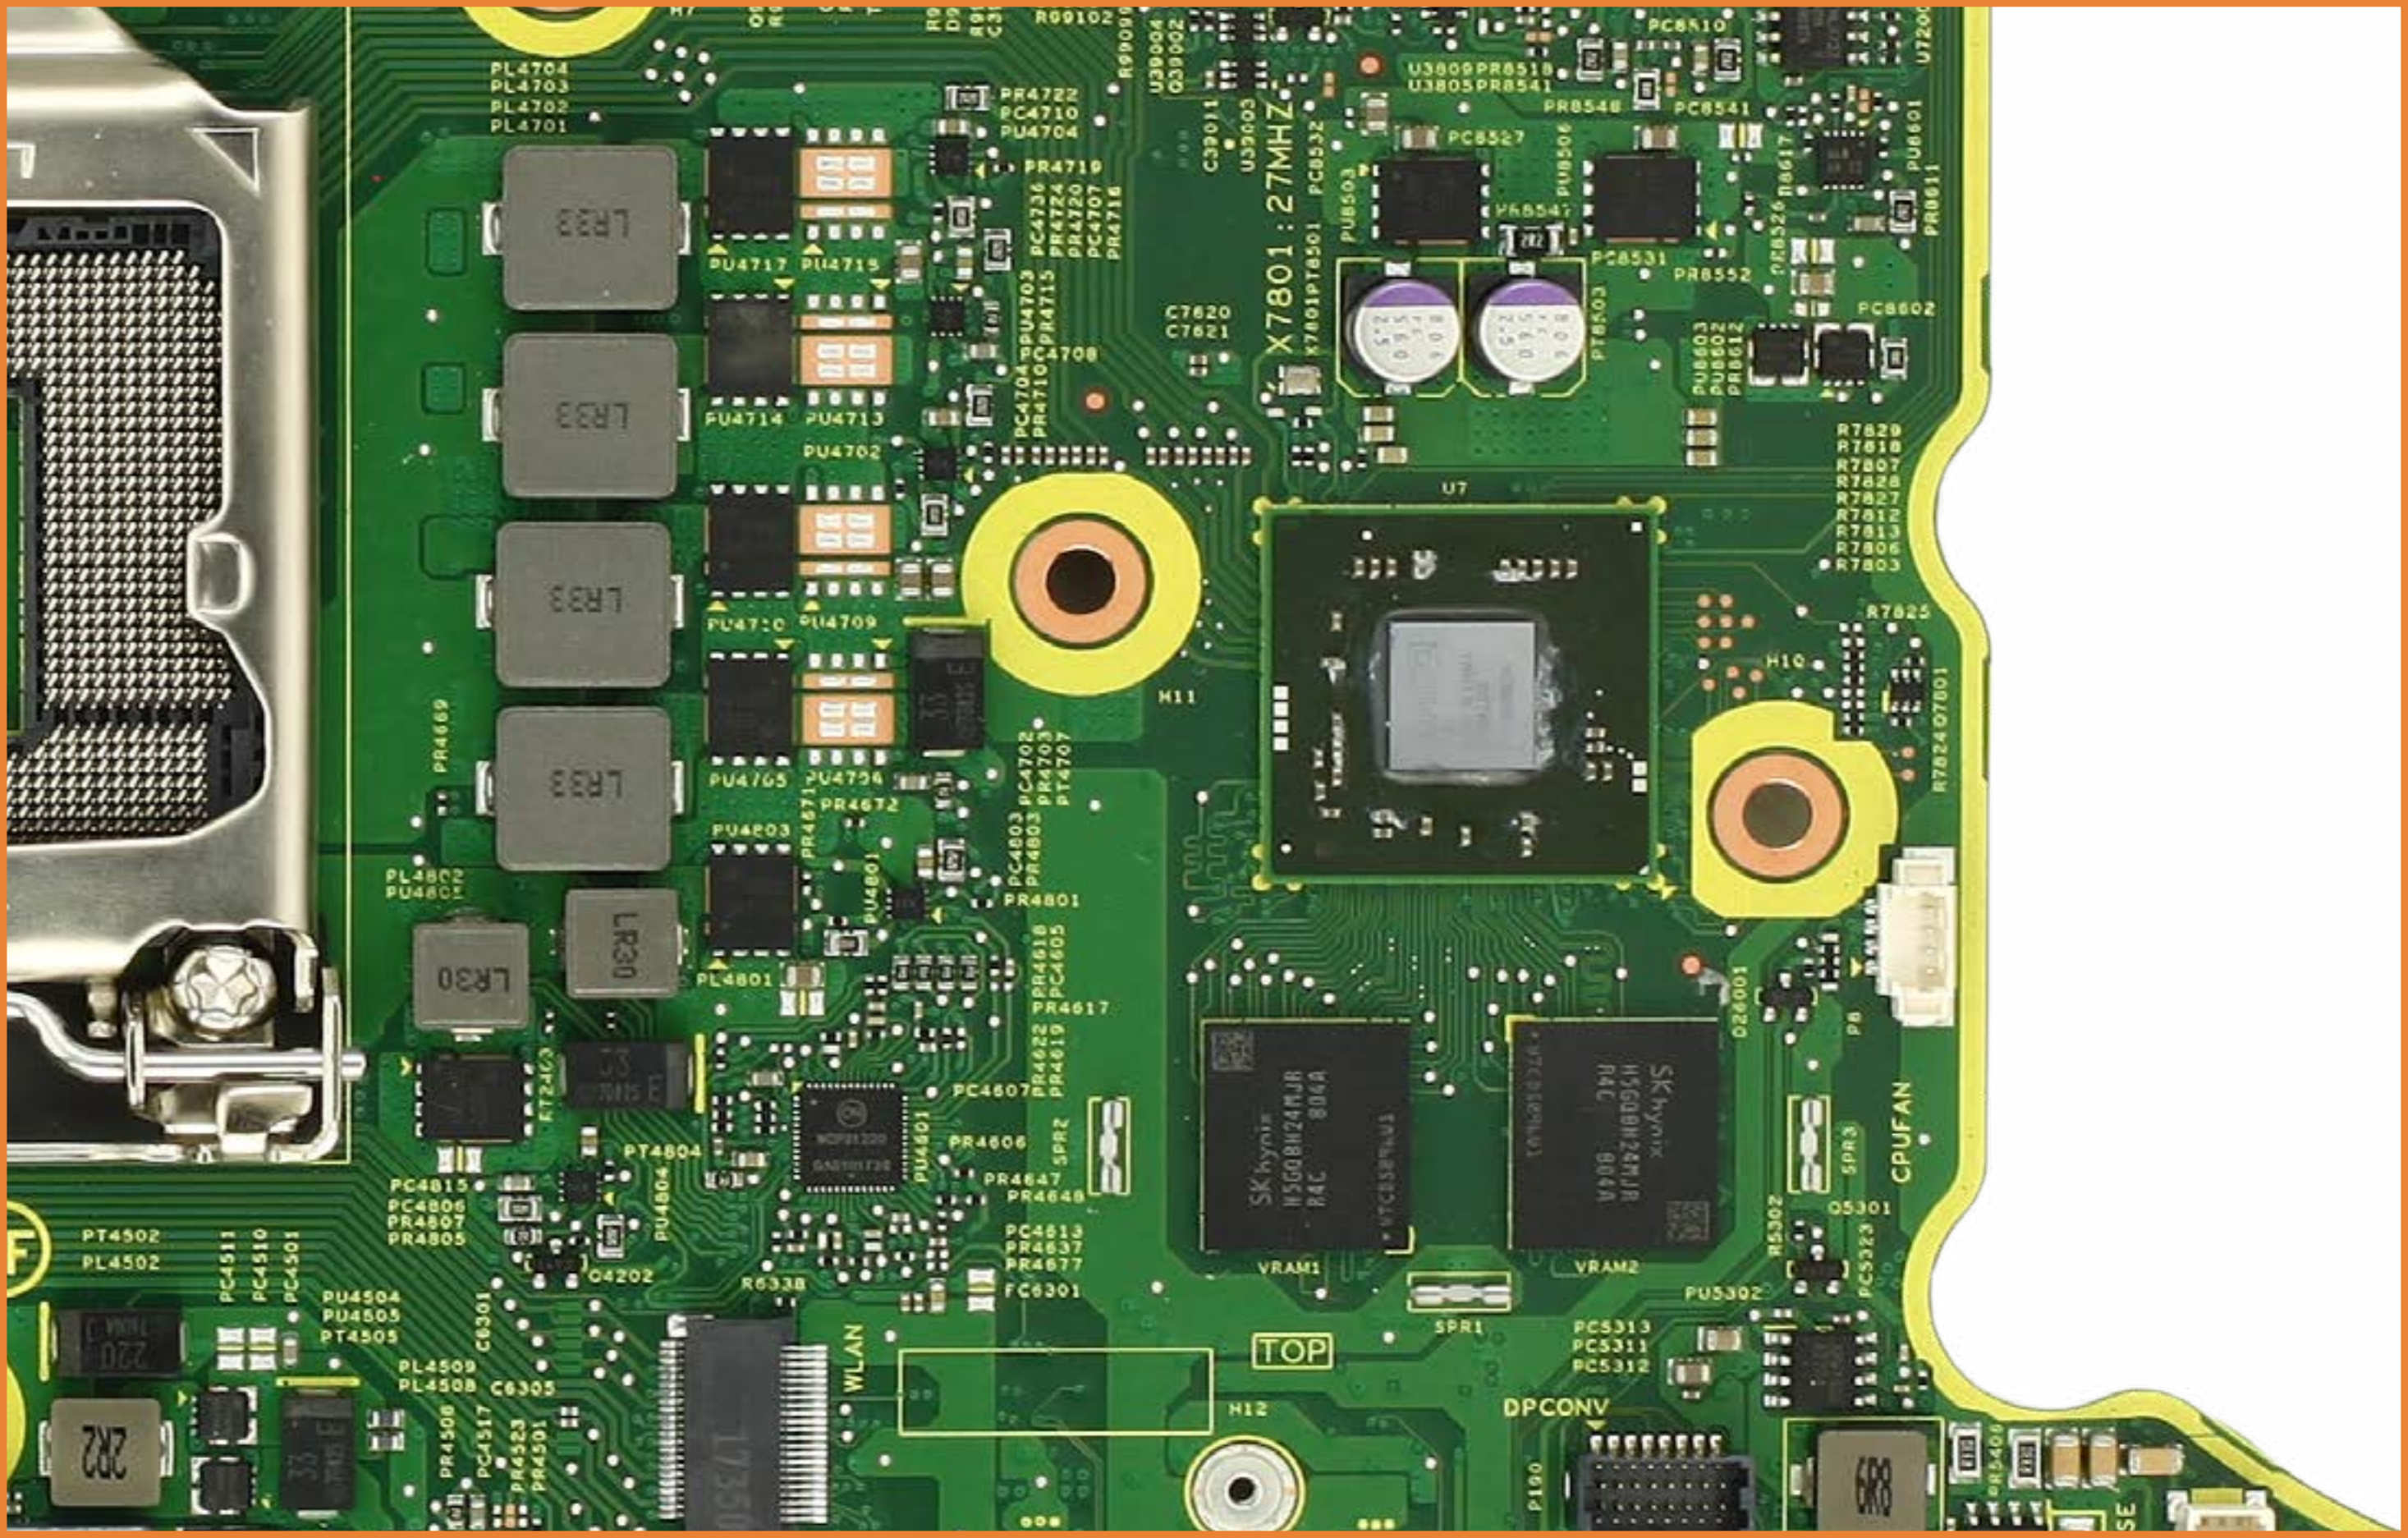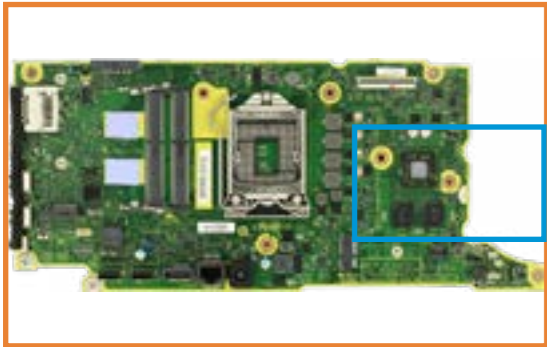 




1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam

4 X View

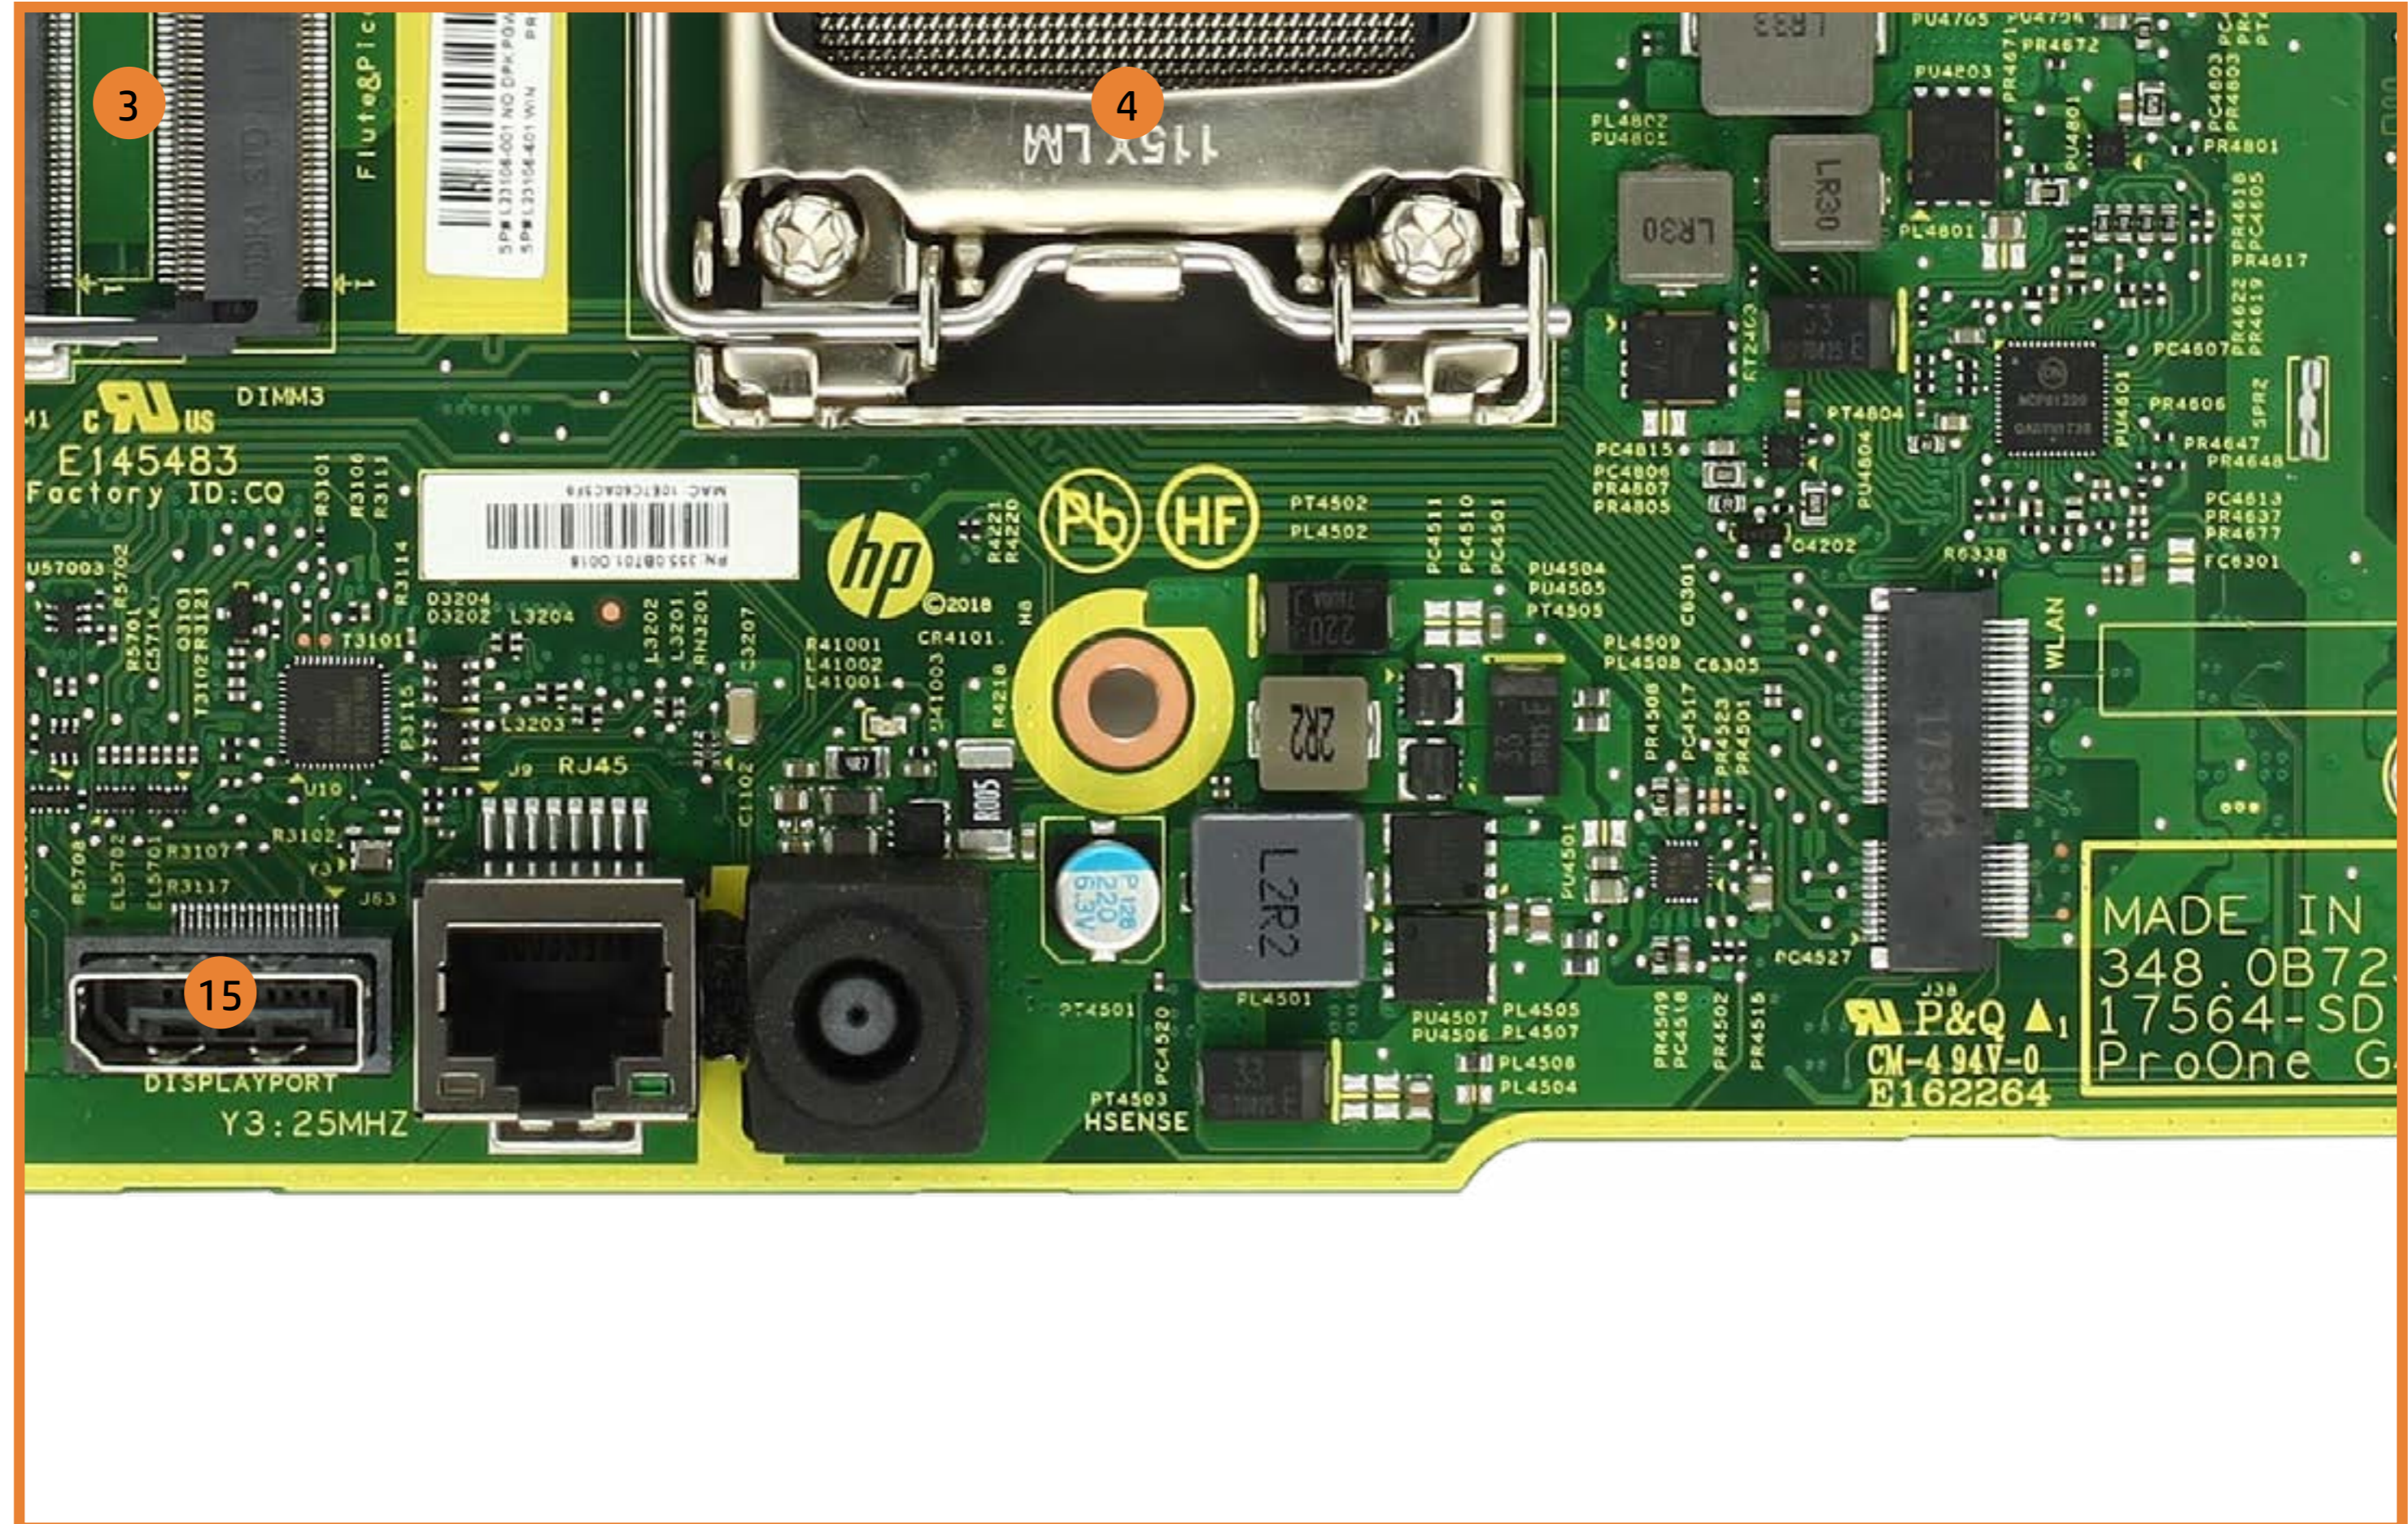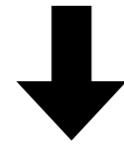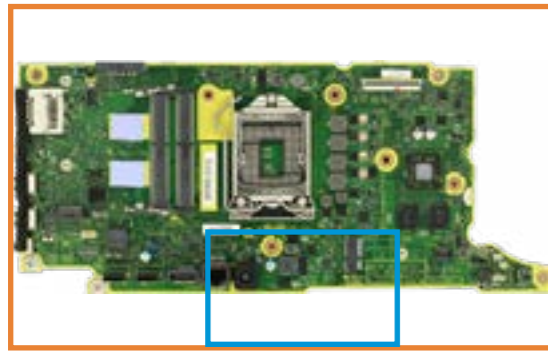

1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam

4 X View

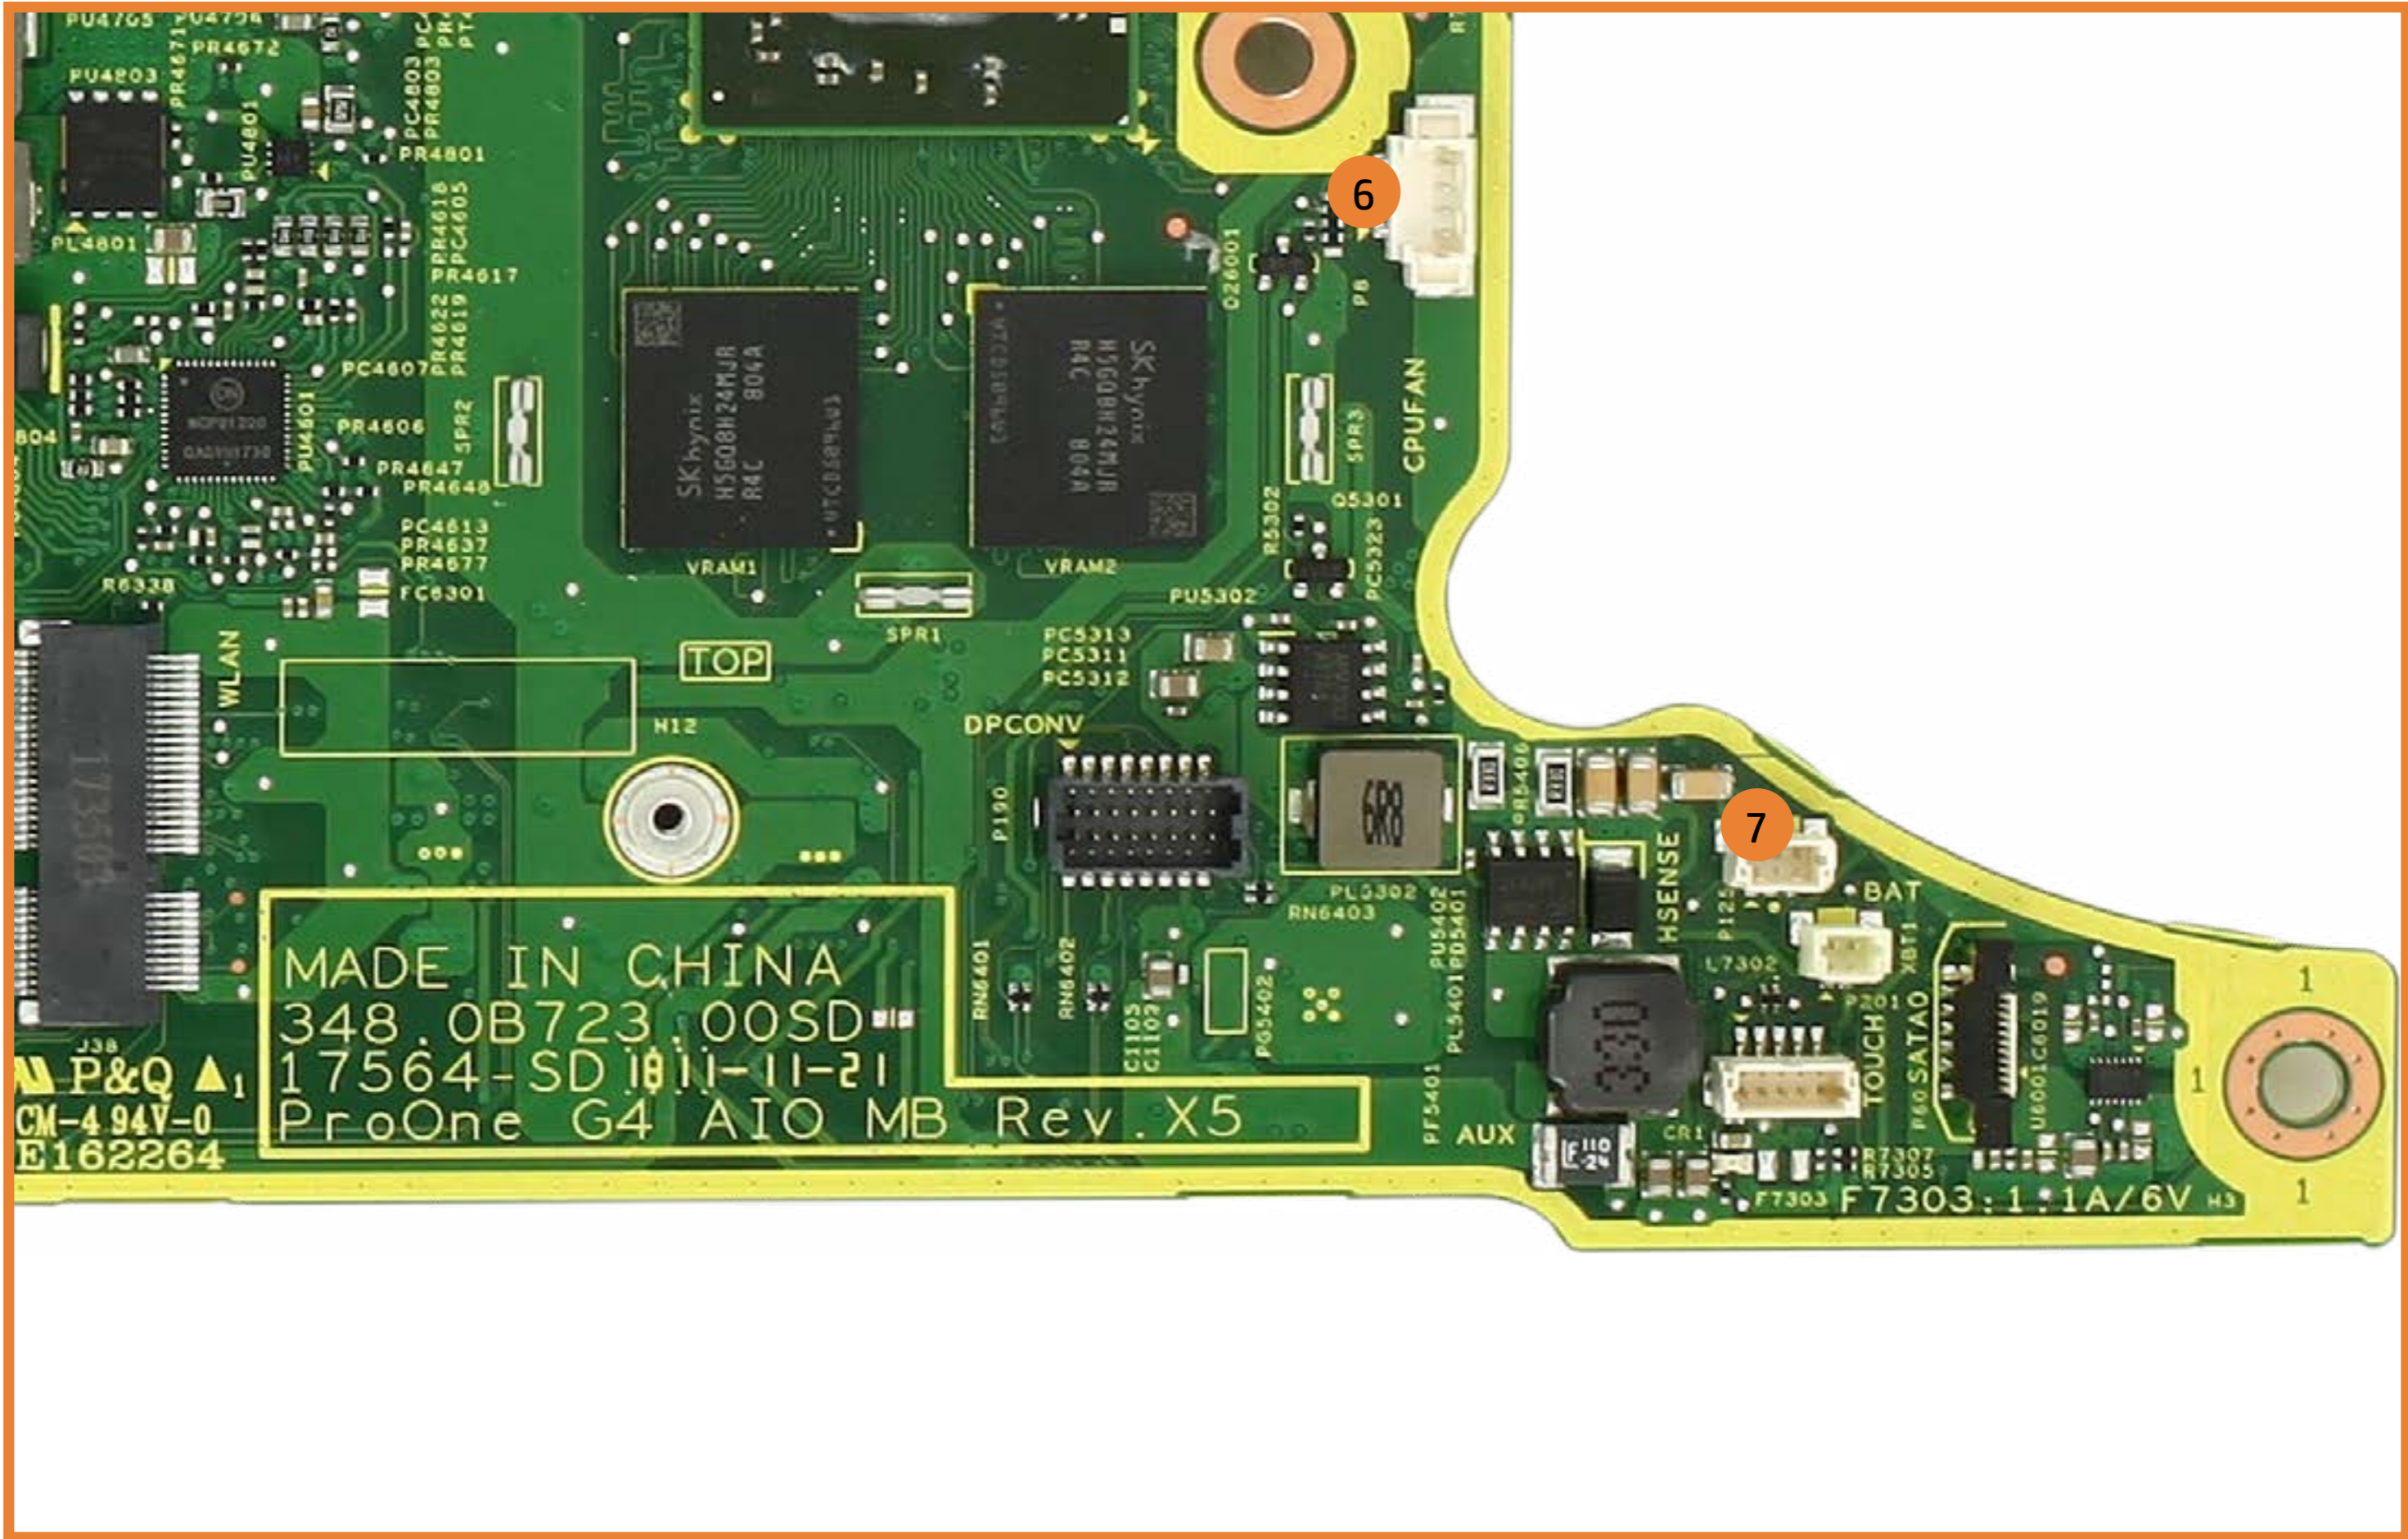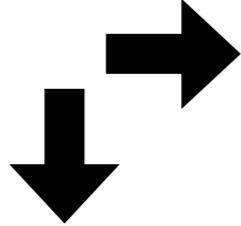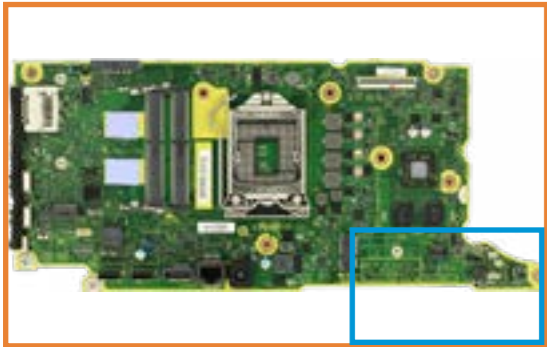

1. CMOS Reset
2. Optical Drive
3. Memory Modules
4. Processor
5. Display Connector
6. Fan Connector
7. Hood Sensor
8. Battery
9. Hard Drive
10. Touch Panel
11. Display Panel
12. WLAN Module
13. Power Connector
14. RJ-45 (network) jack
15. Display Port
16. USB 3.1 Type-A
17. Speaker
18. Option Board
19. Power Button
20. Headphone/Microphone Jack
21. USB 3.1 Type-A
22. M.2 SSD drive
23. USB 3.1 Type-A (charging)
24. USB 3.1 Type-C
25. SD Card Reader
26. Webcam

MADE IN CHINA
 348.0B723.00SD
 17564-SD 1011-11-21
 ProOne G4 AIO MB Rev. X5