

Interactive Part Locator

HP ProDesk 680 G4 MT

Welcome to the interactive part locator for the
HP ProDesk 680 G4 MT

Here's how to use it...

[System Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the System Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

System Views

Front

Left


Right

Rear


Internal

Parts List

Front View

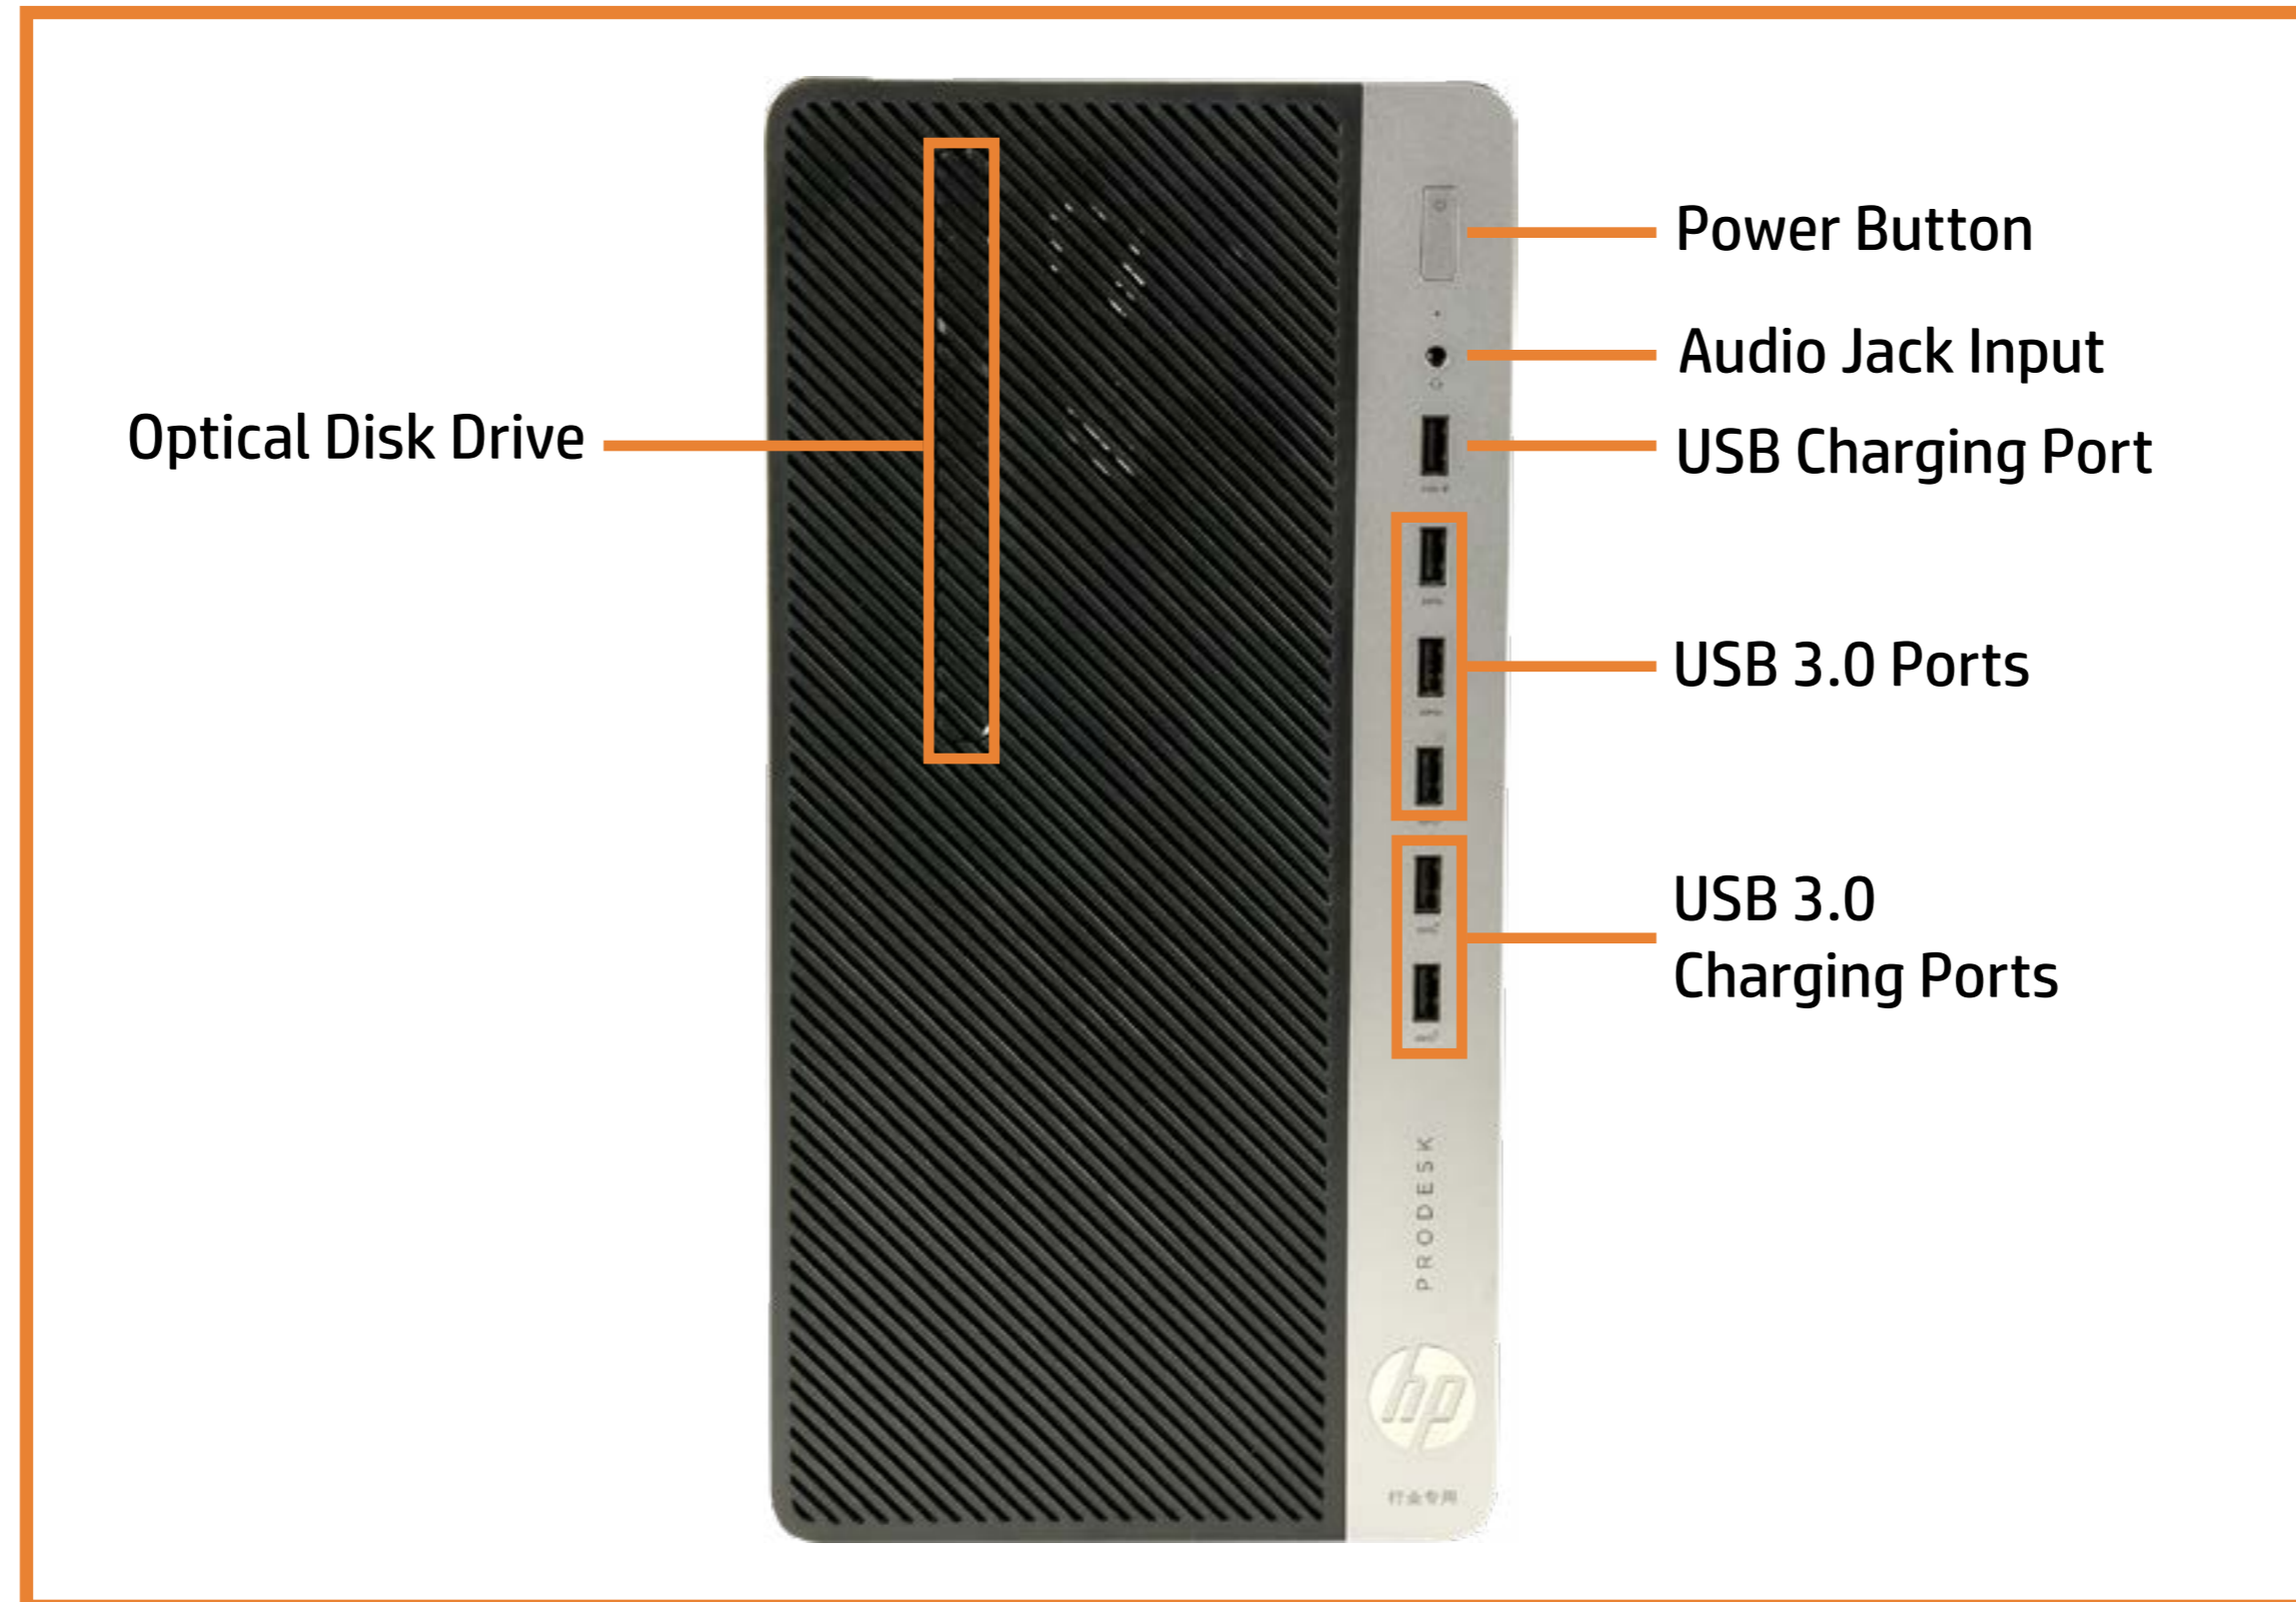


Left View

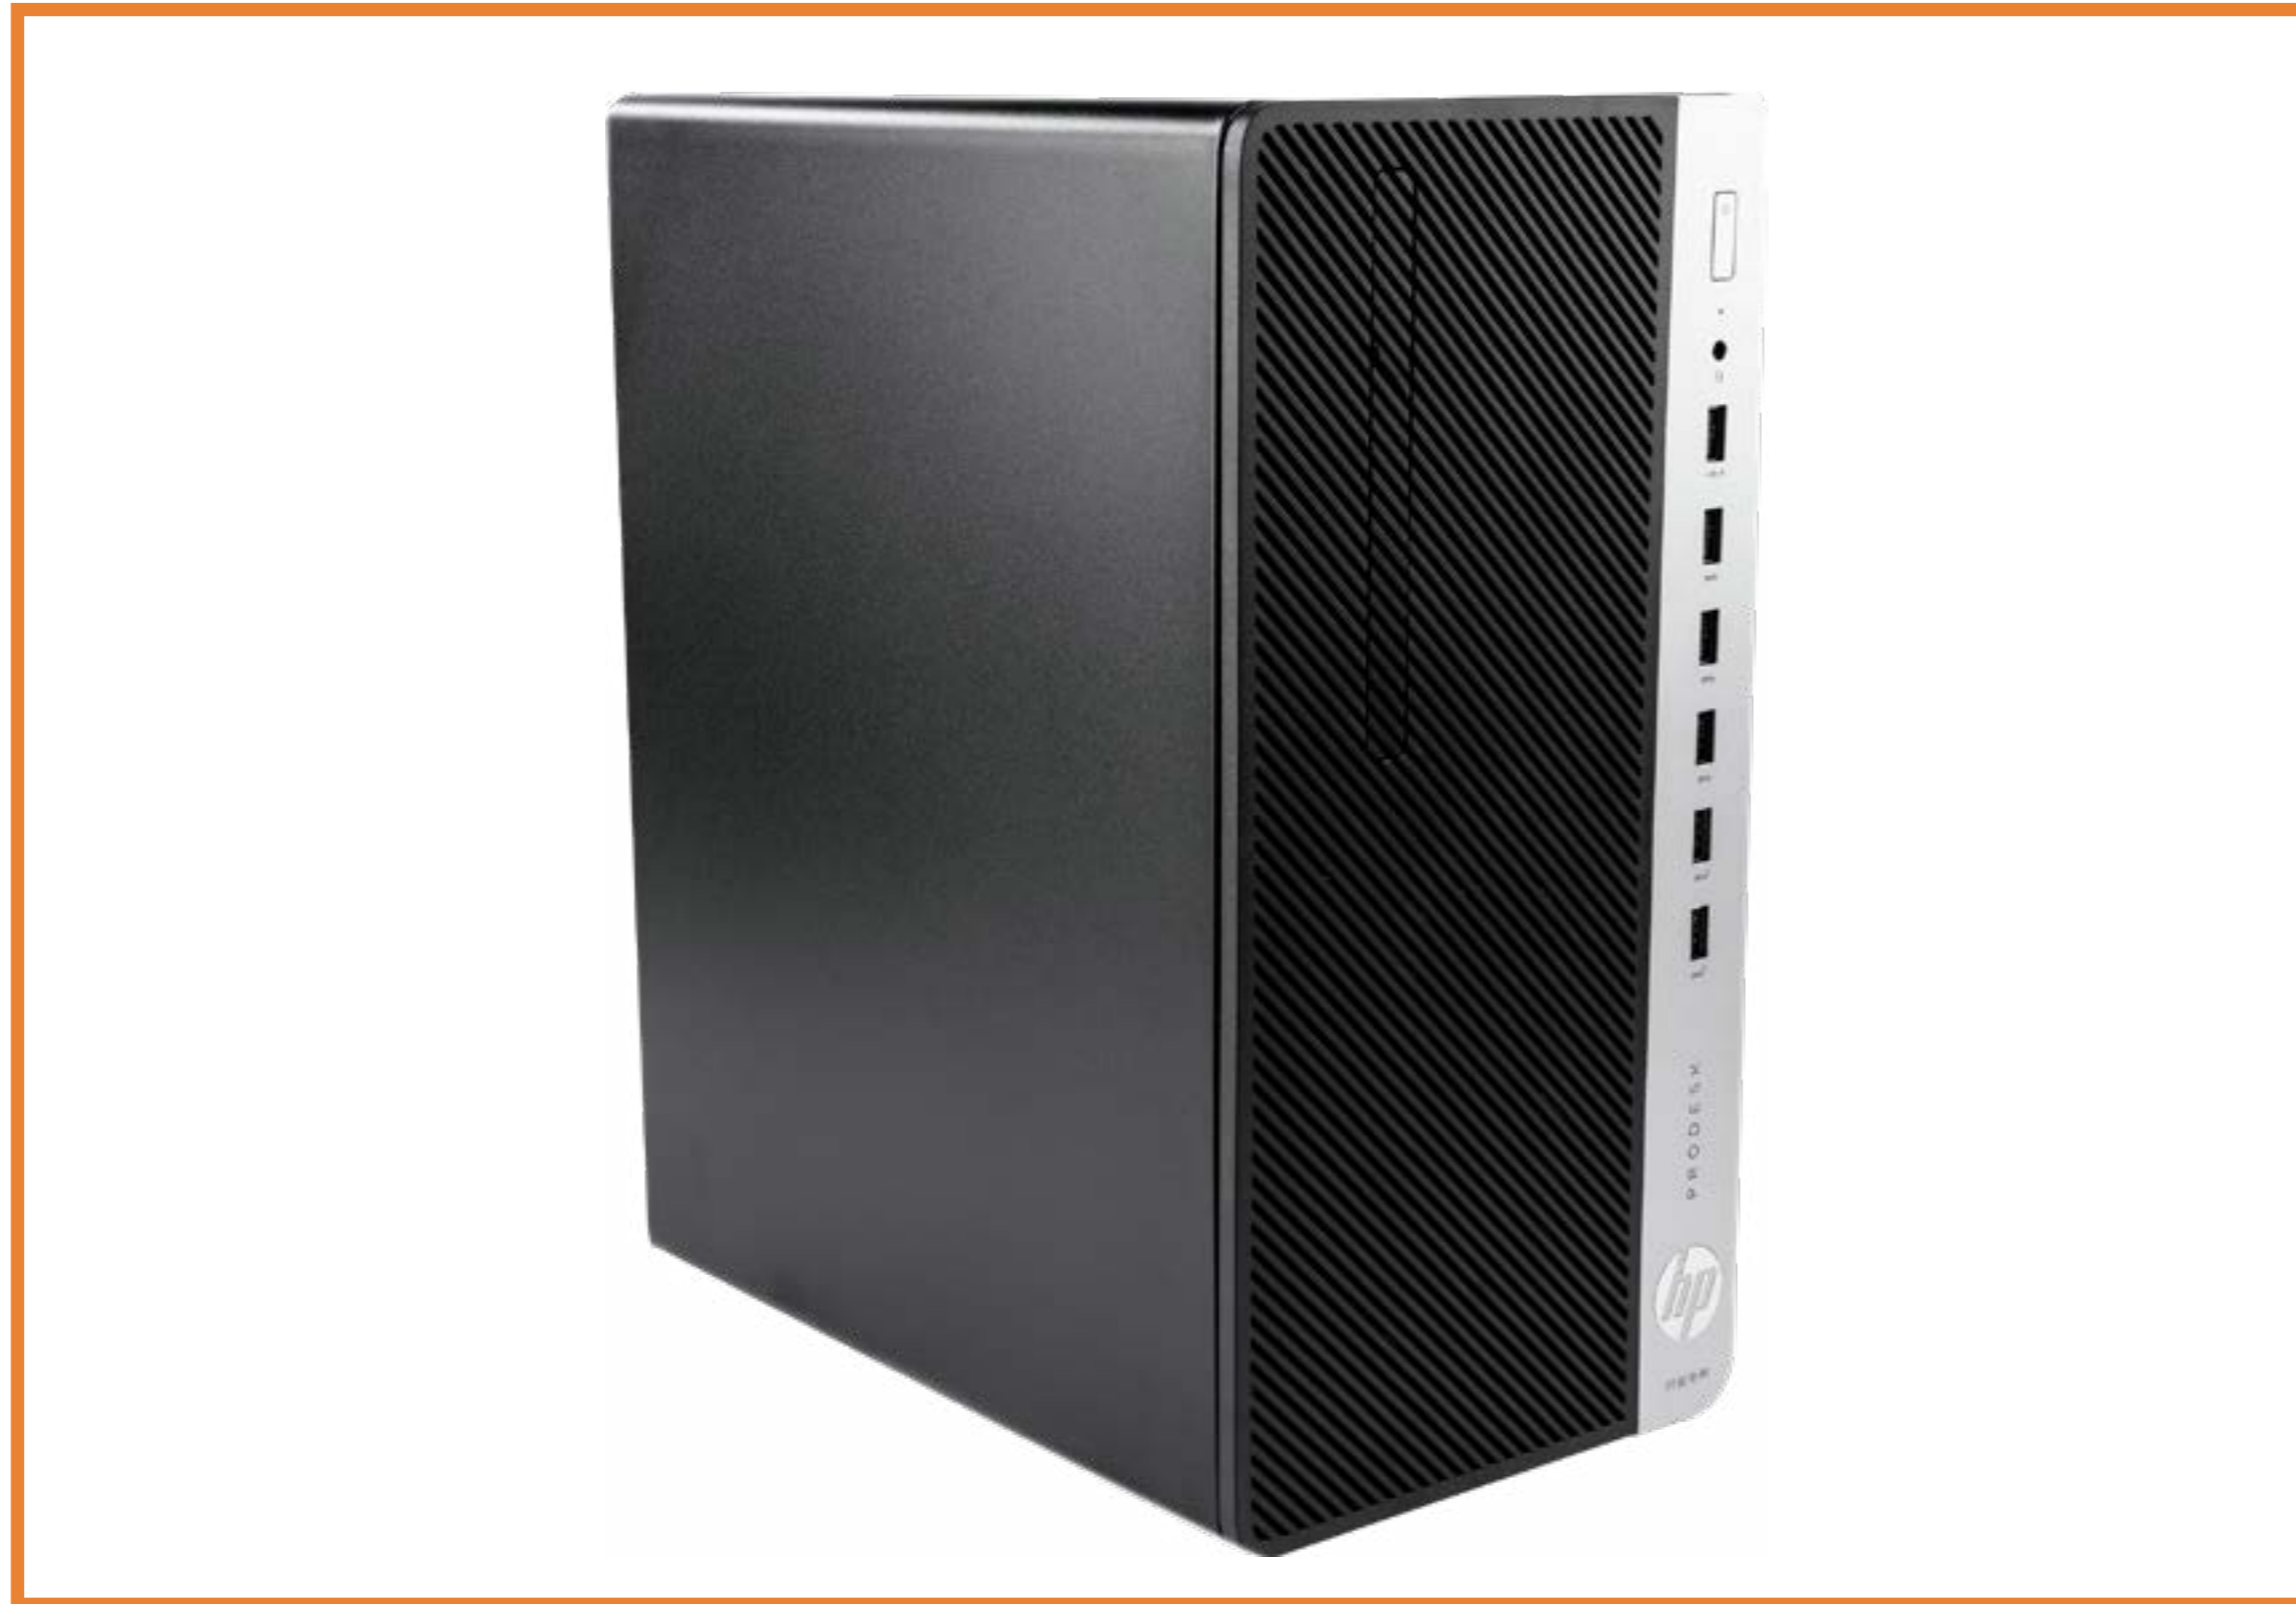

Right View



Rear View

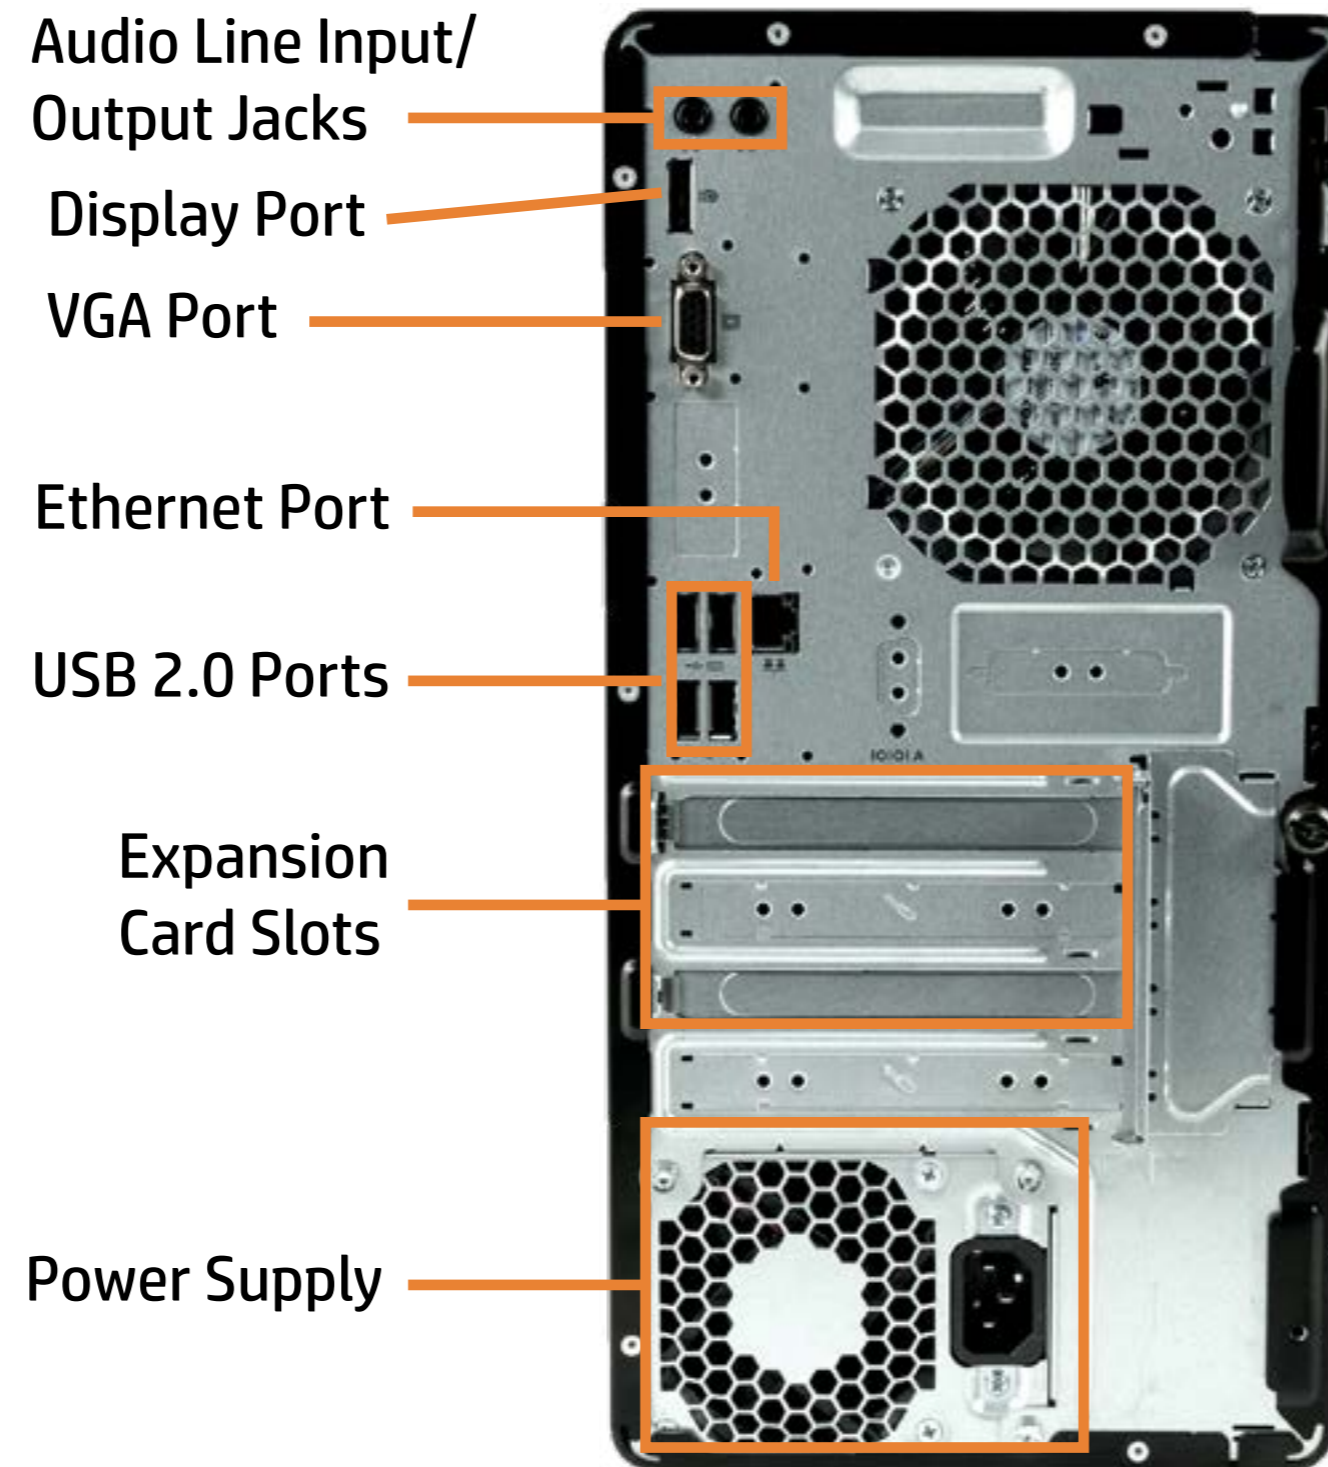


Internal View 1




Hard Drives -
3.5 inch

Go to Internal View 2

Internal View 2

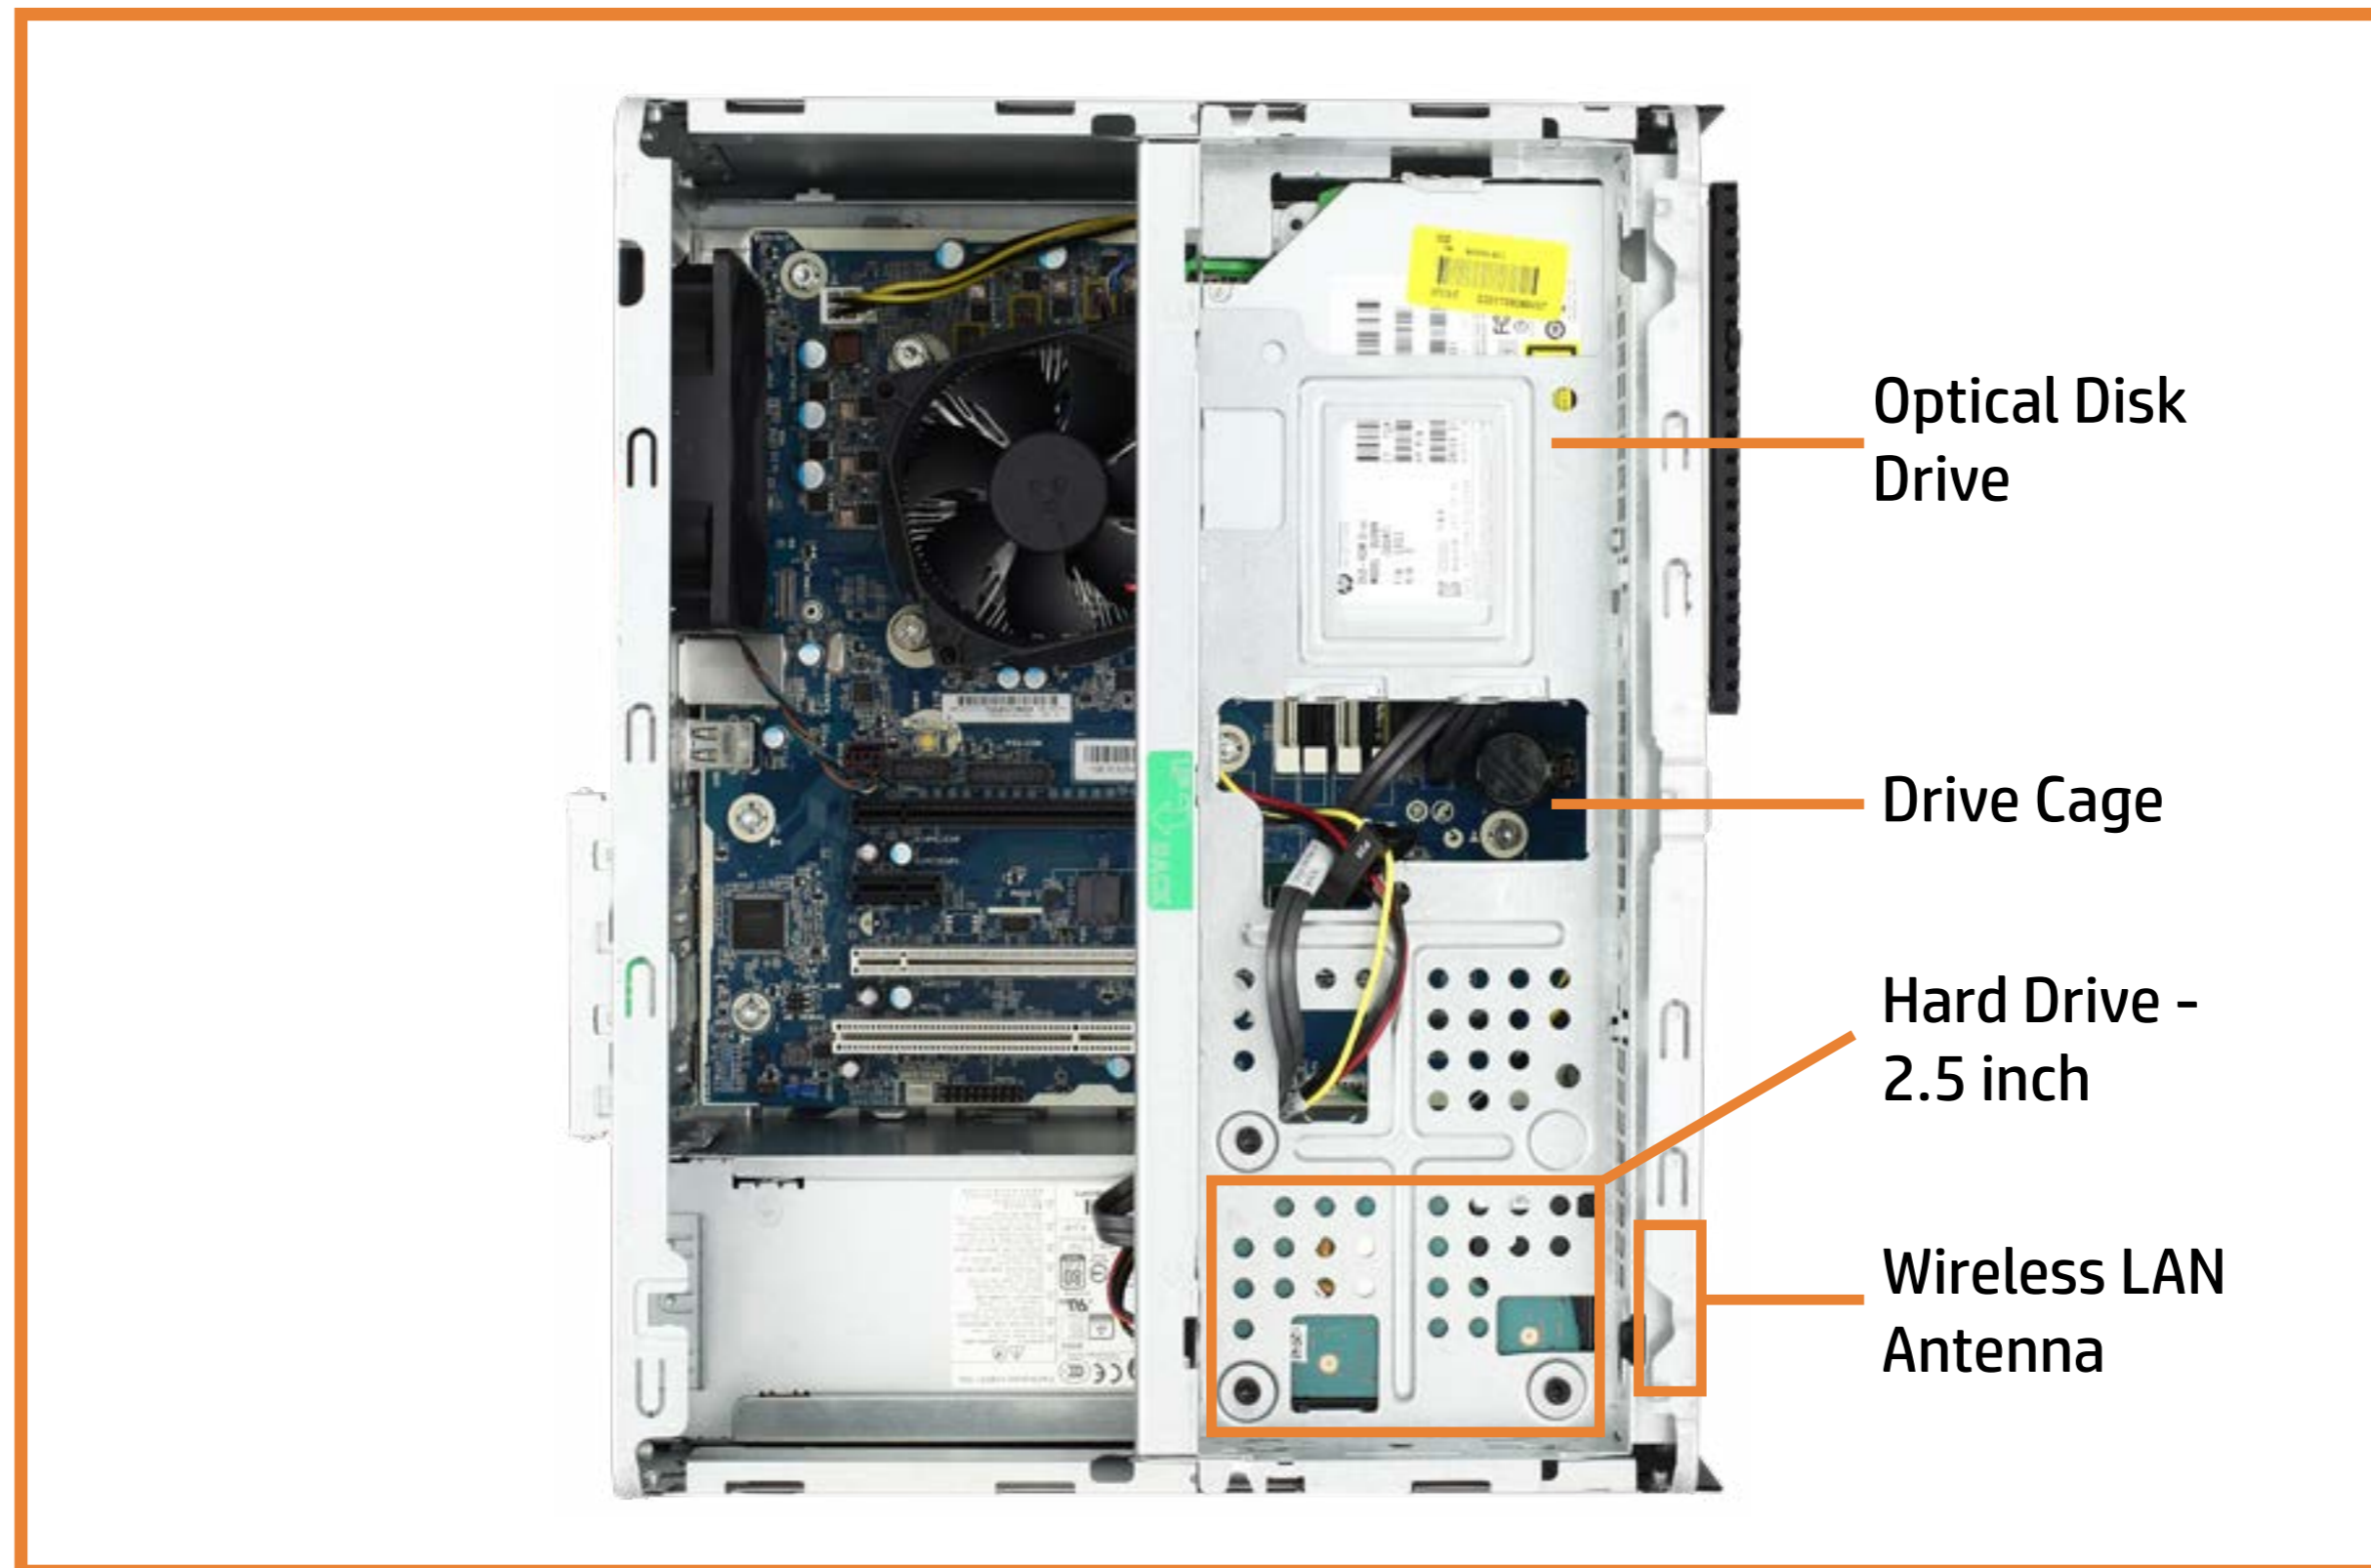

Internal View 3

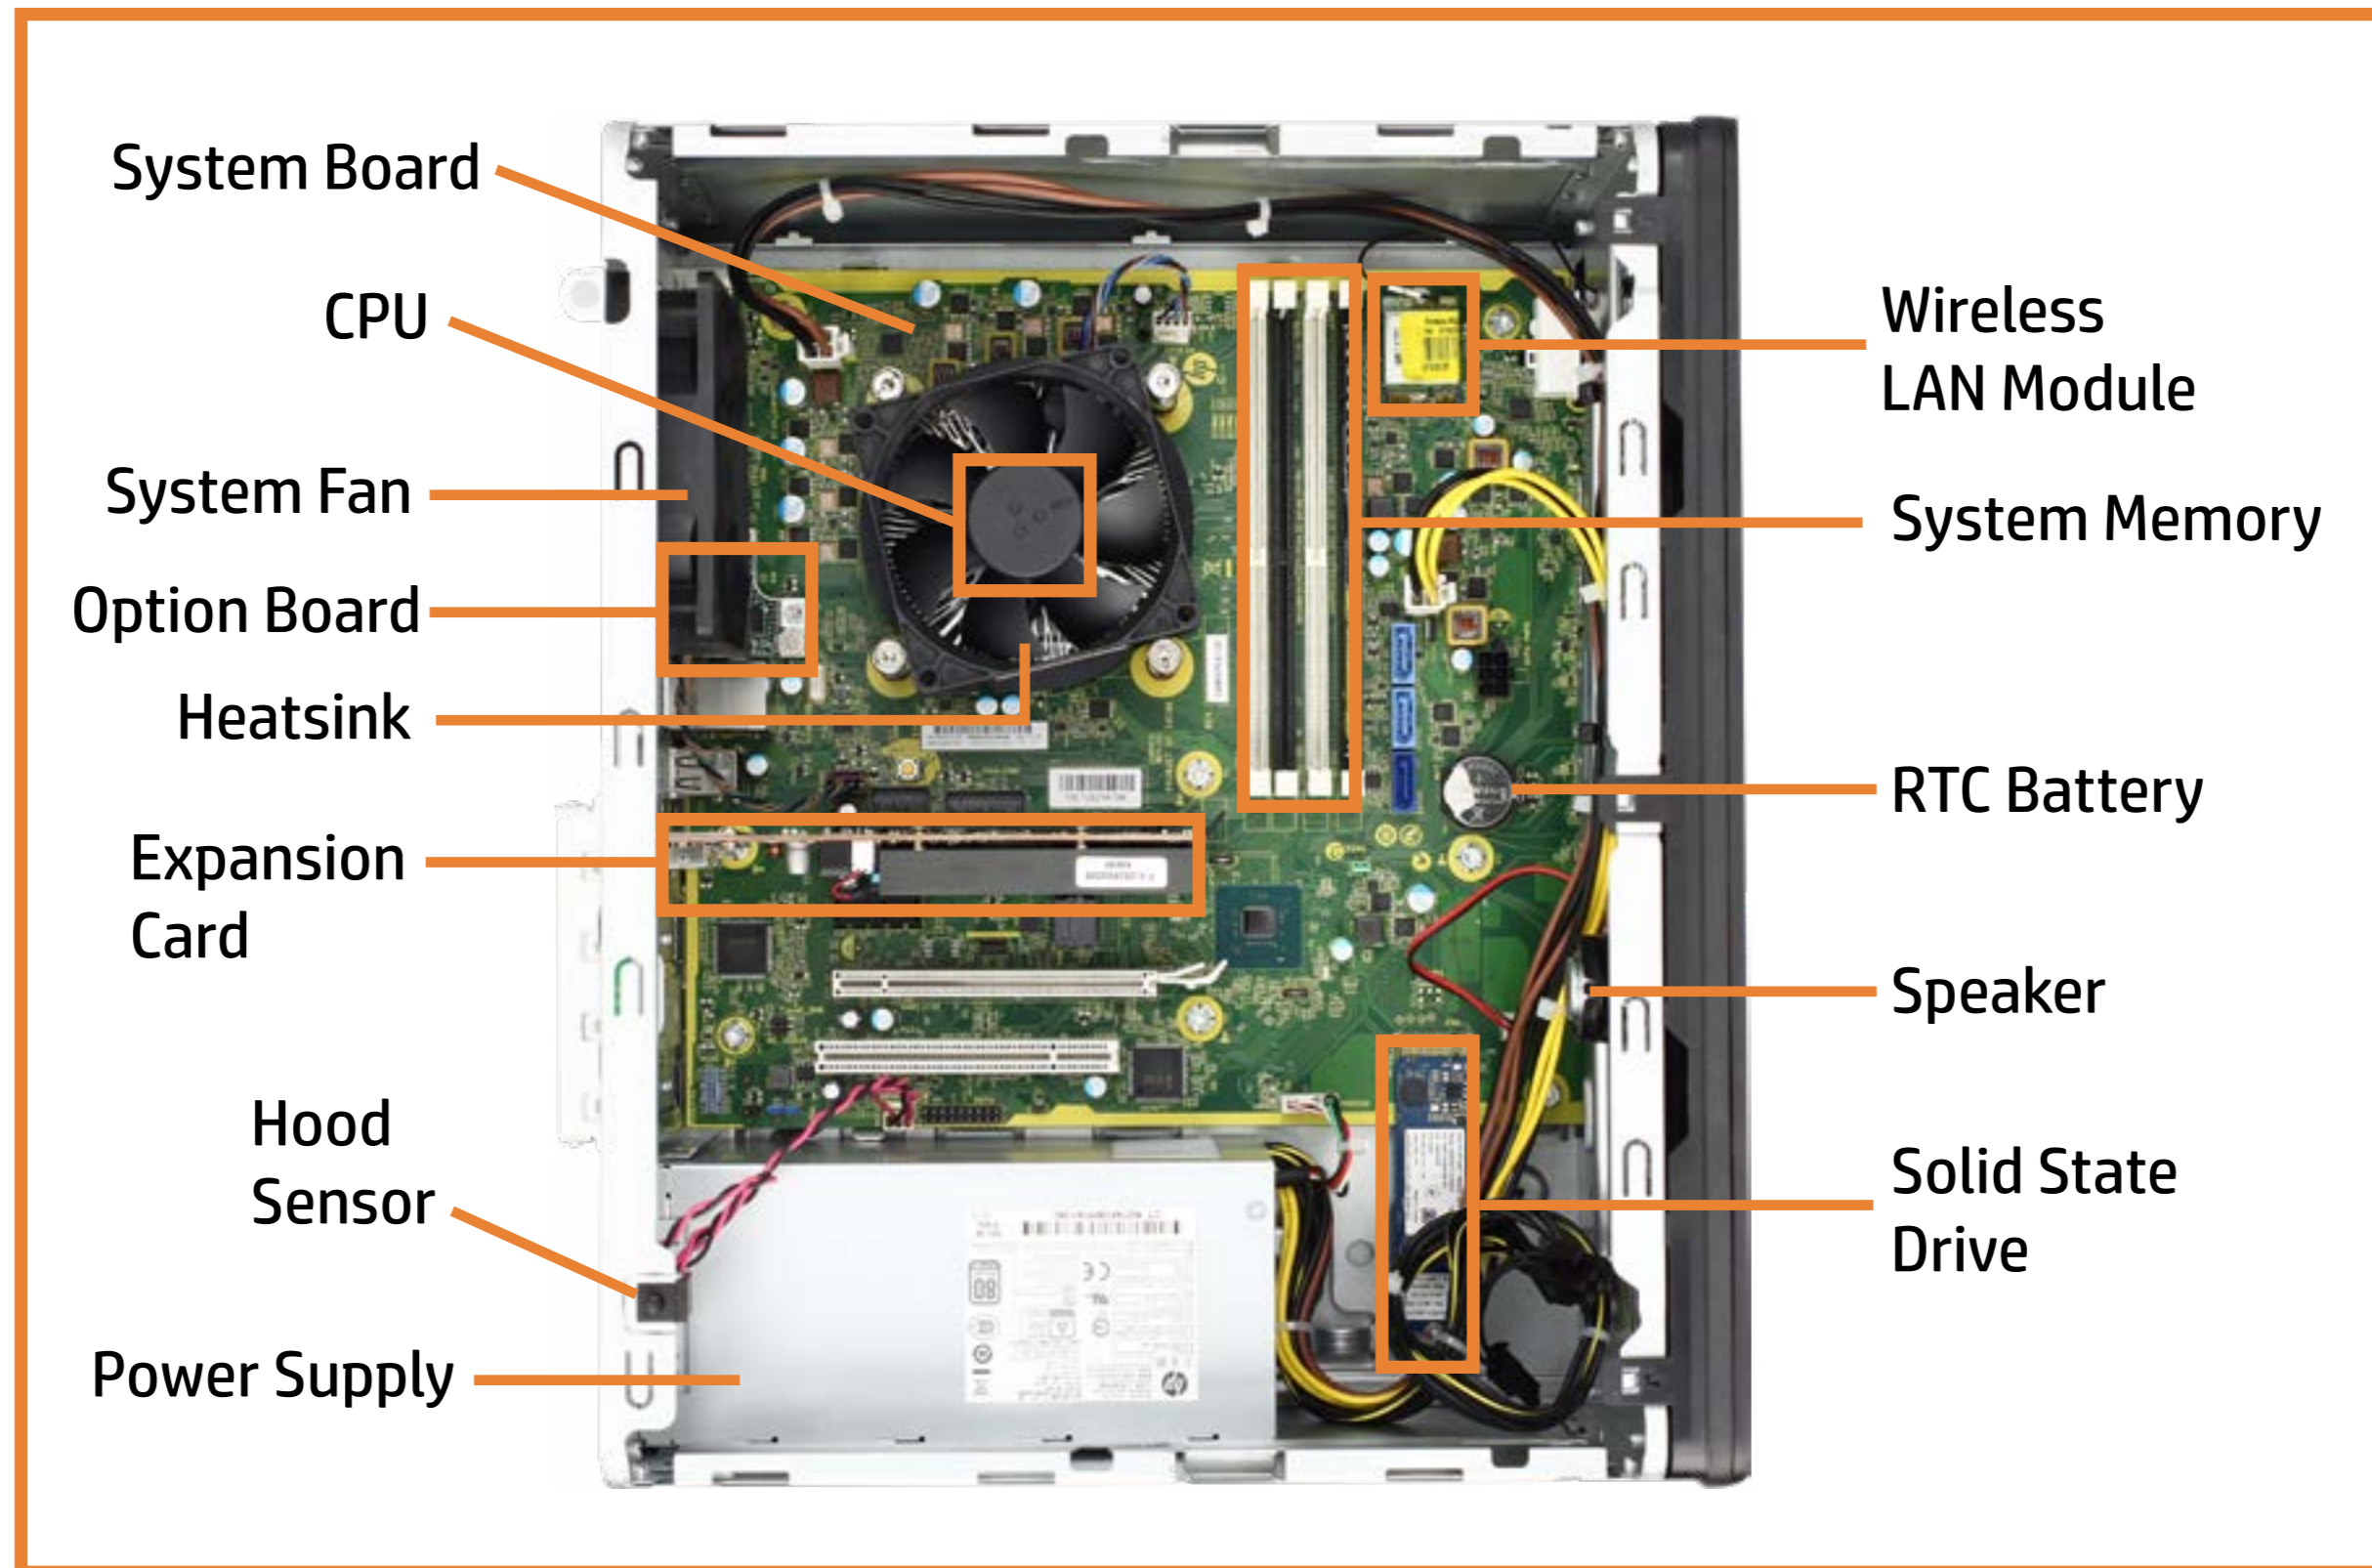

[Back to Internal View 2](#)

Main Bezel/Dust Filter Bezel




Main Bezel/Dust Filter Bezel


Access Panel




Optical Disk Drive

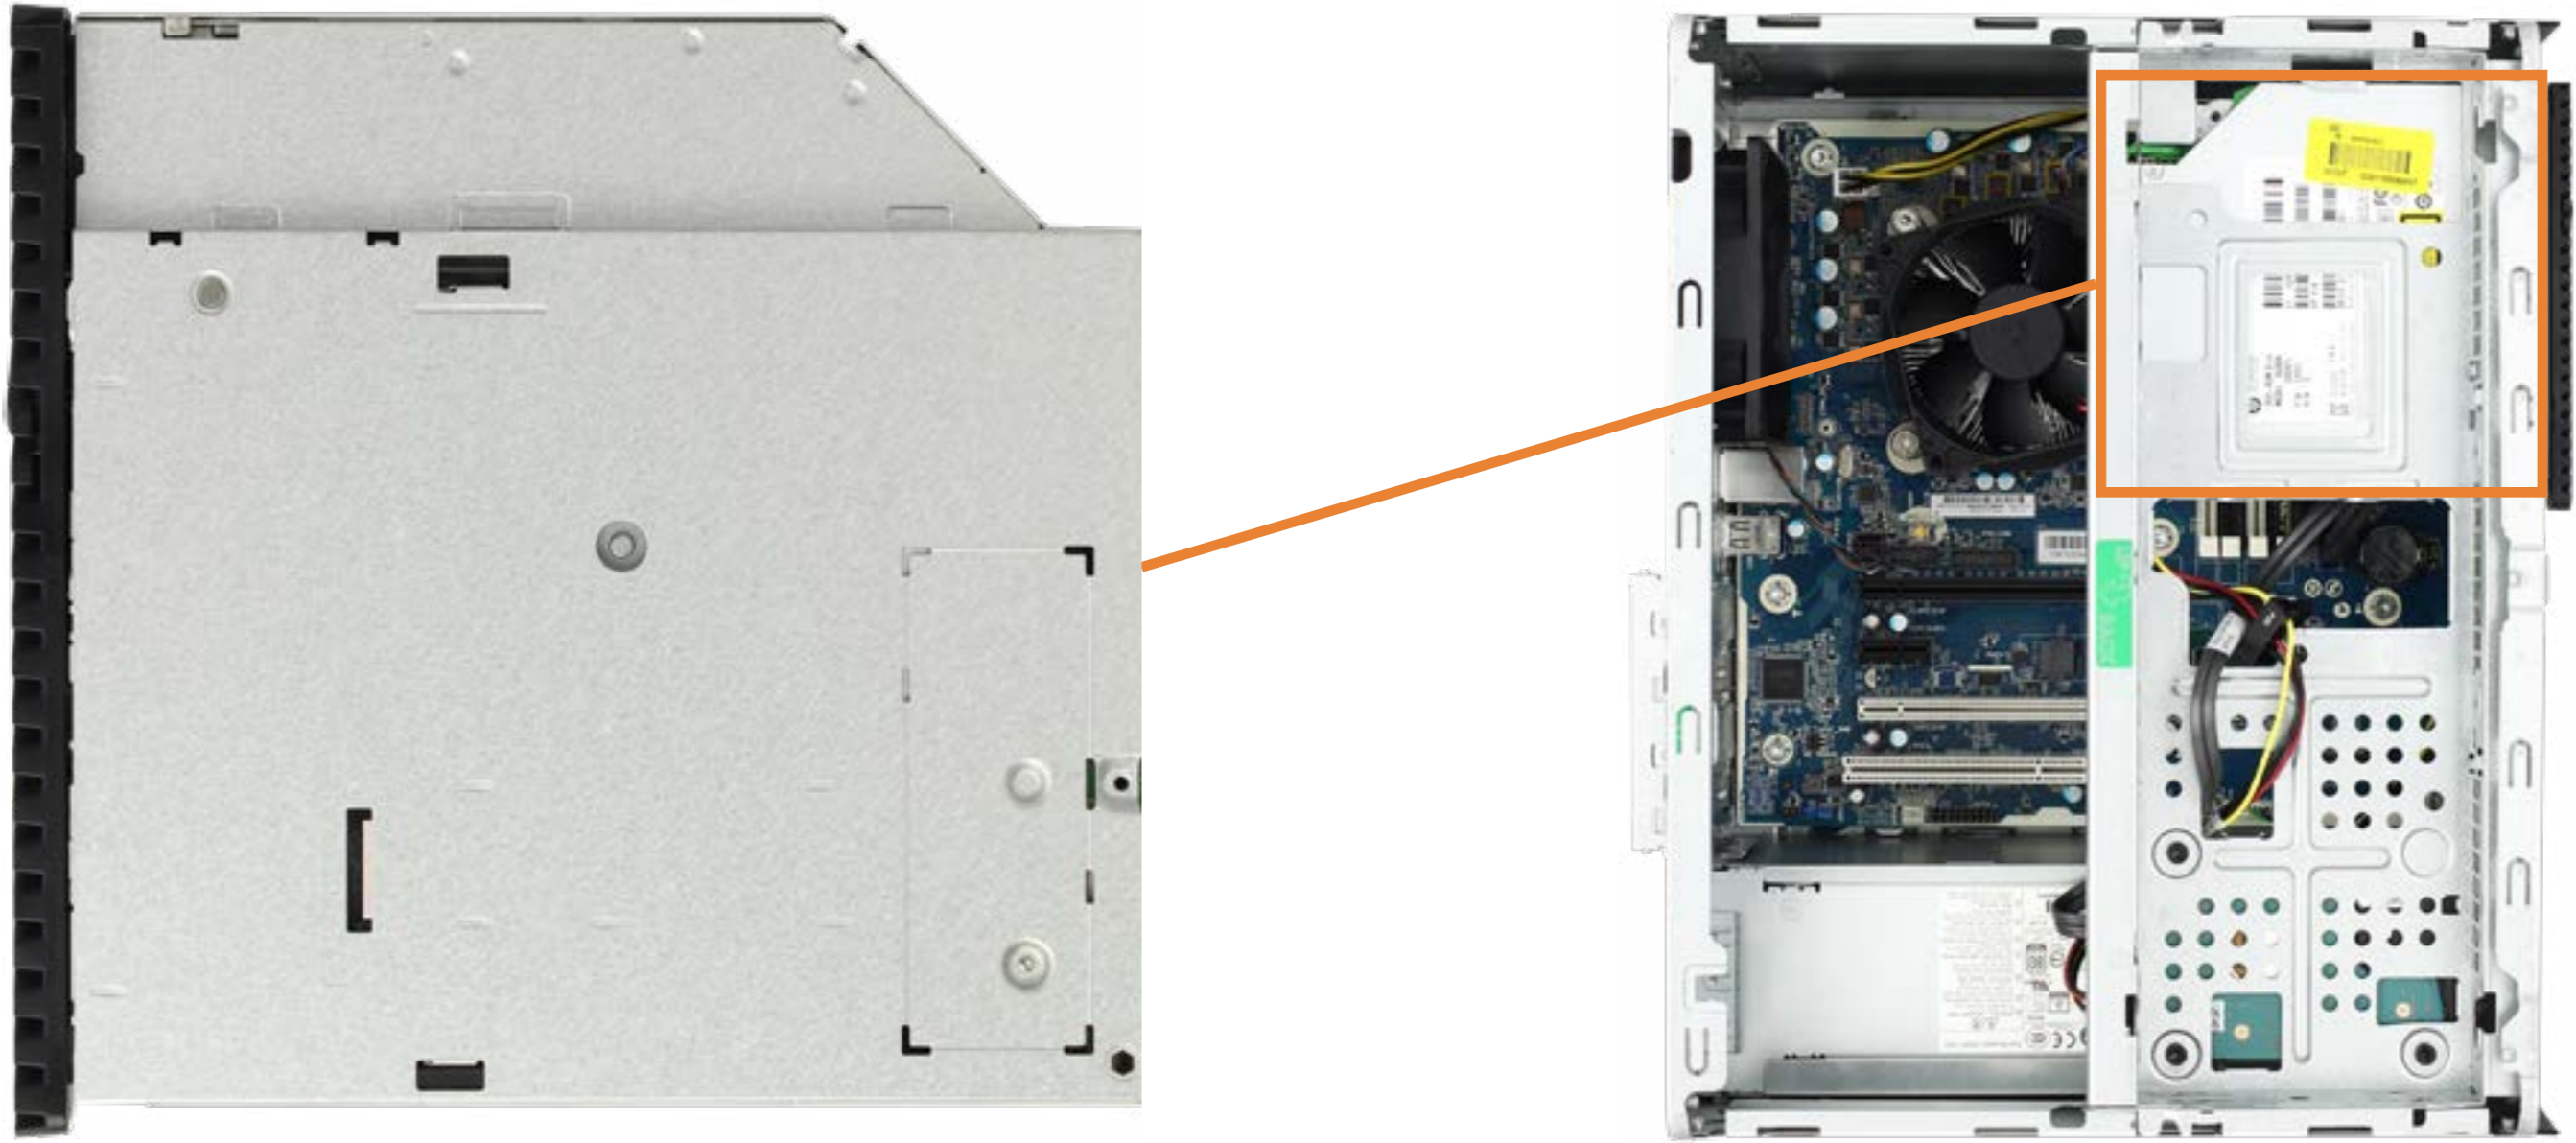

Drive Cage

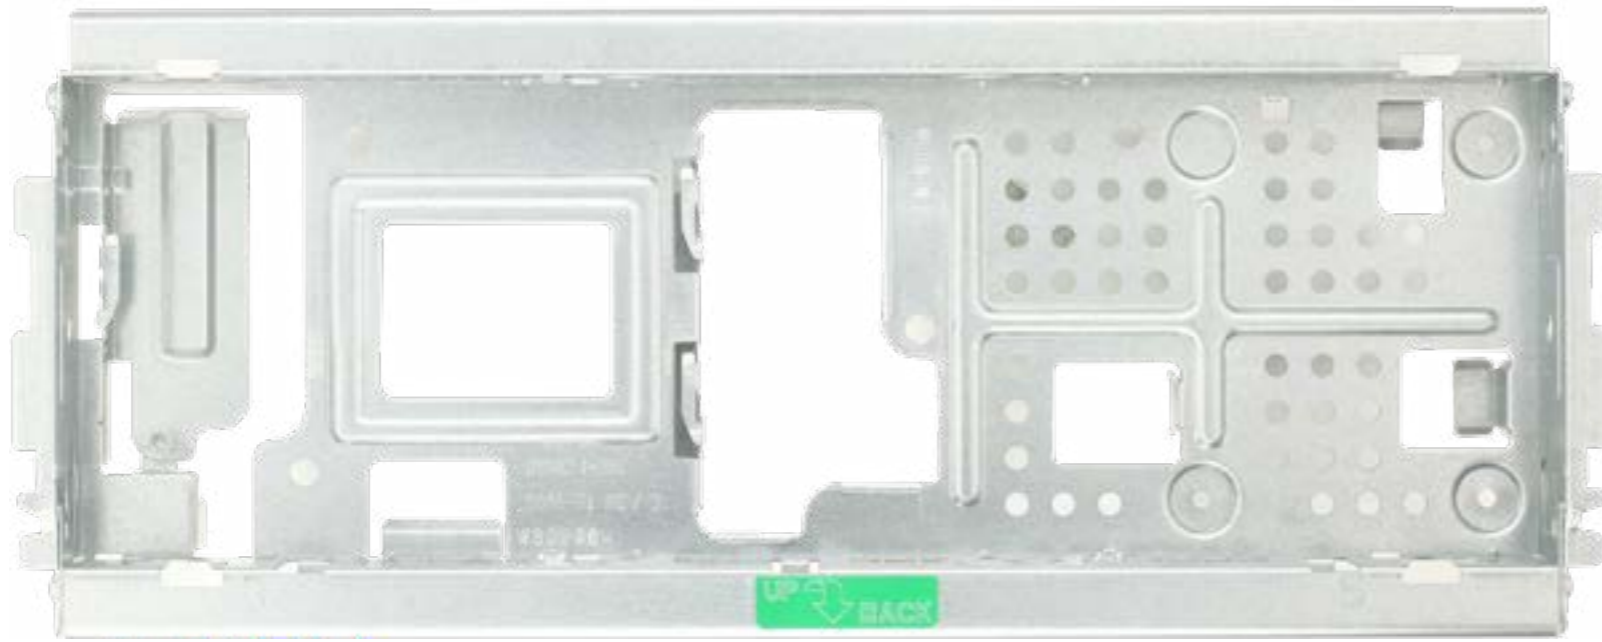


System Fan

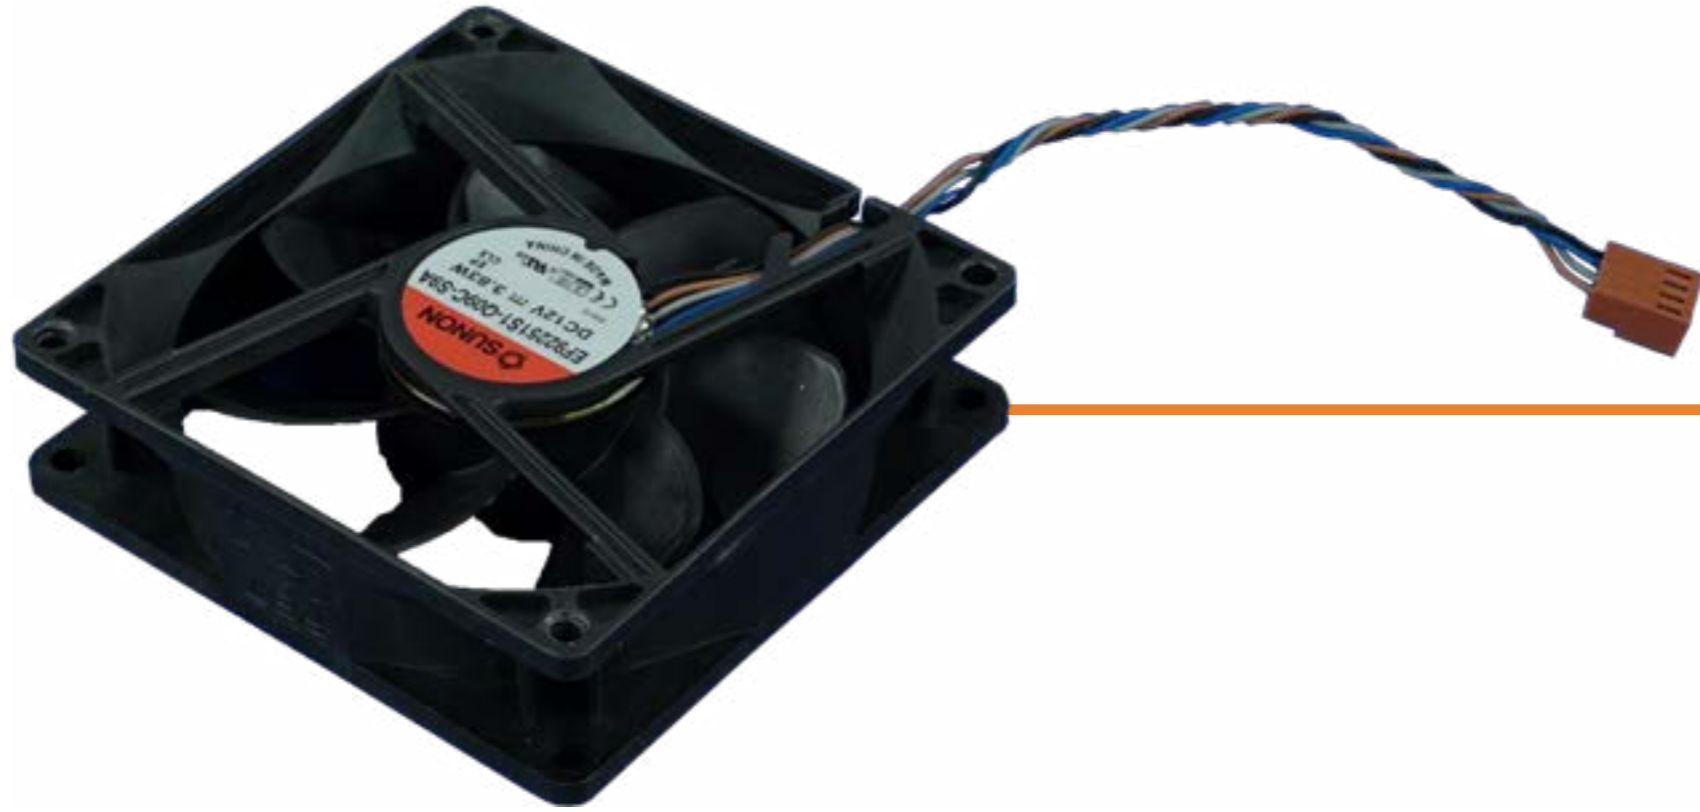


Hard Drive - 3.5 inch




Hard Drives - 2.5 inch

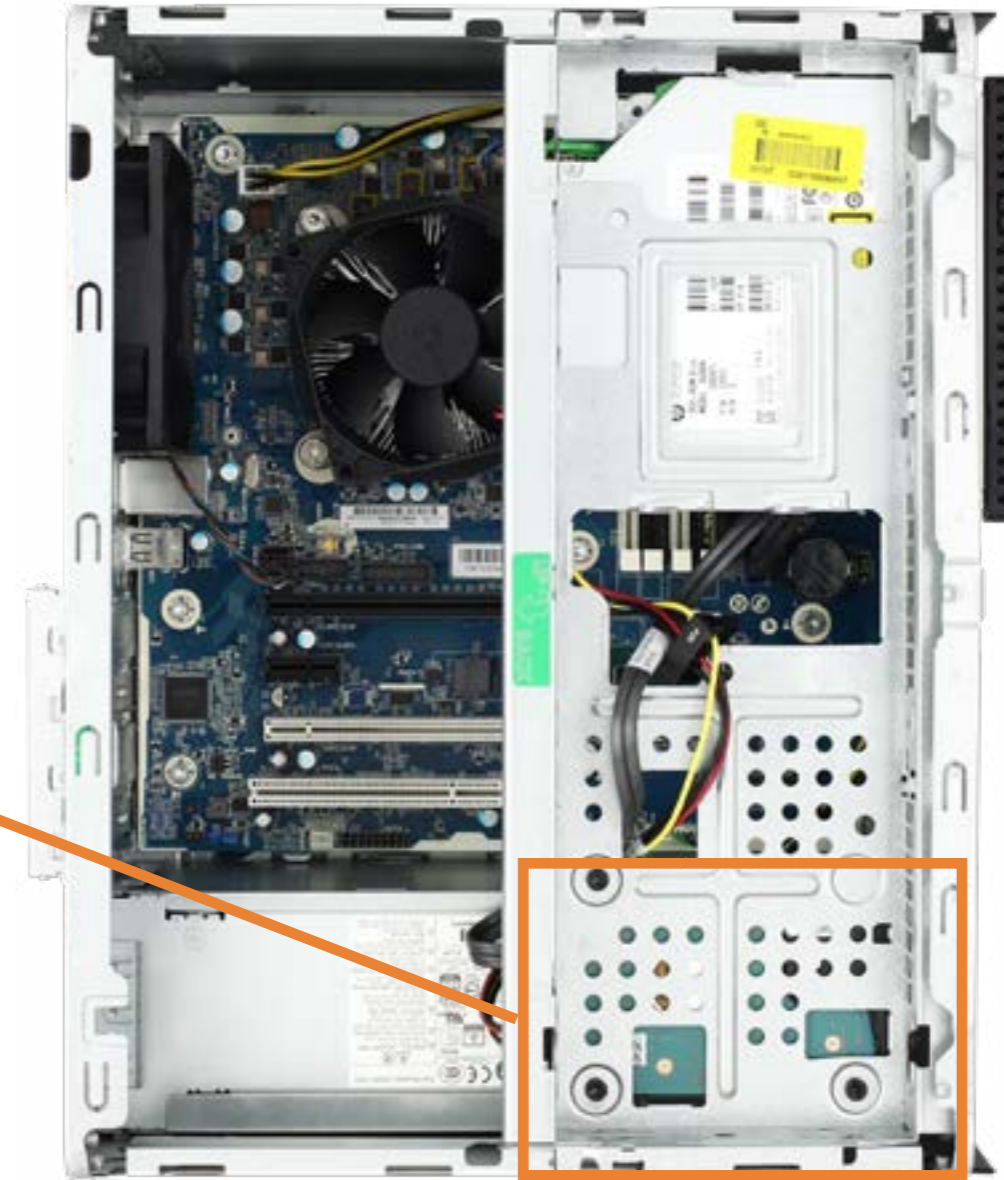

Hood Sensor

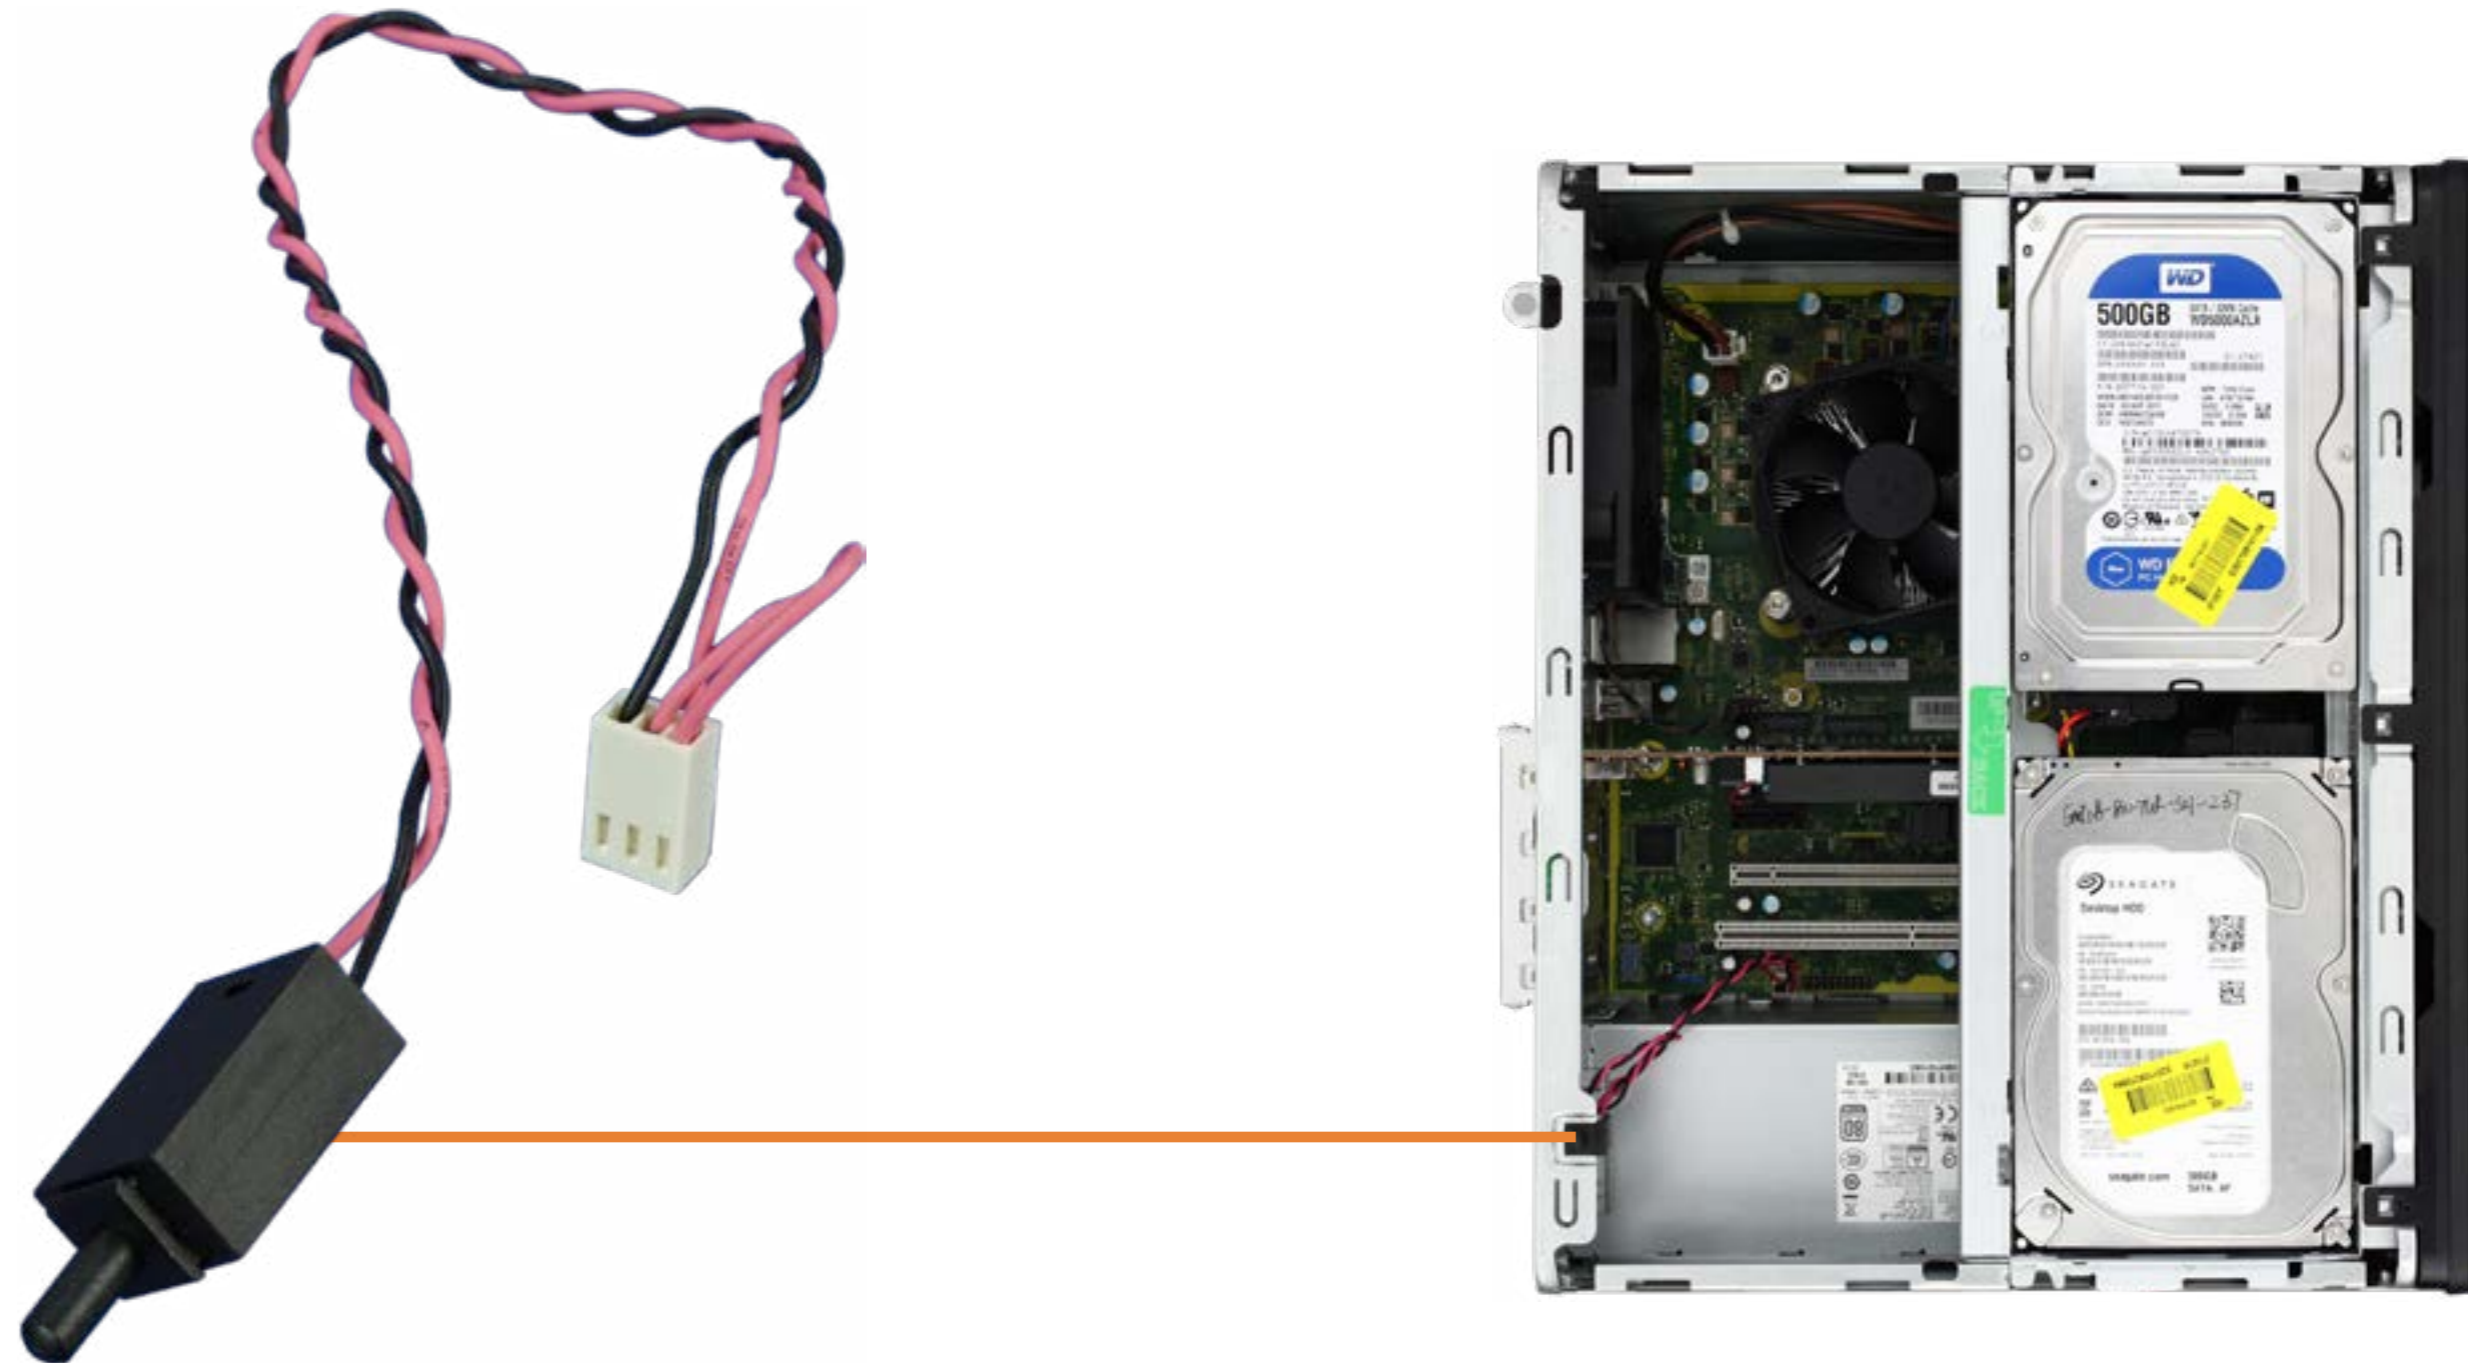


Heatsink

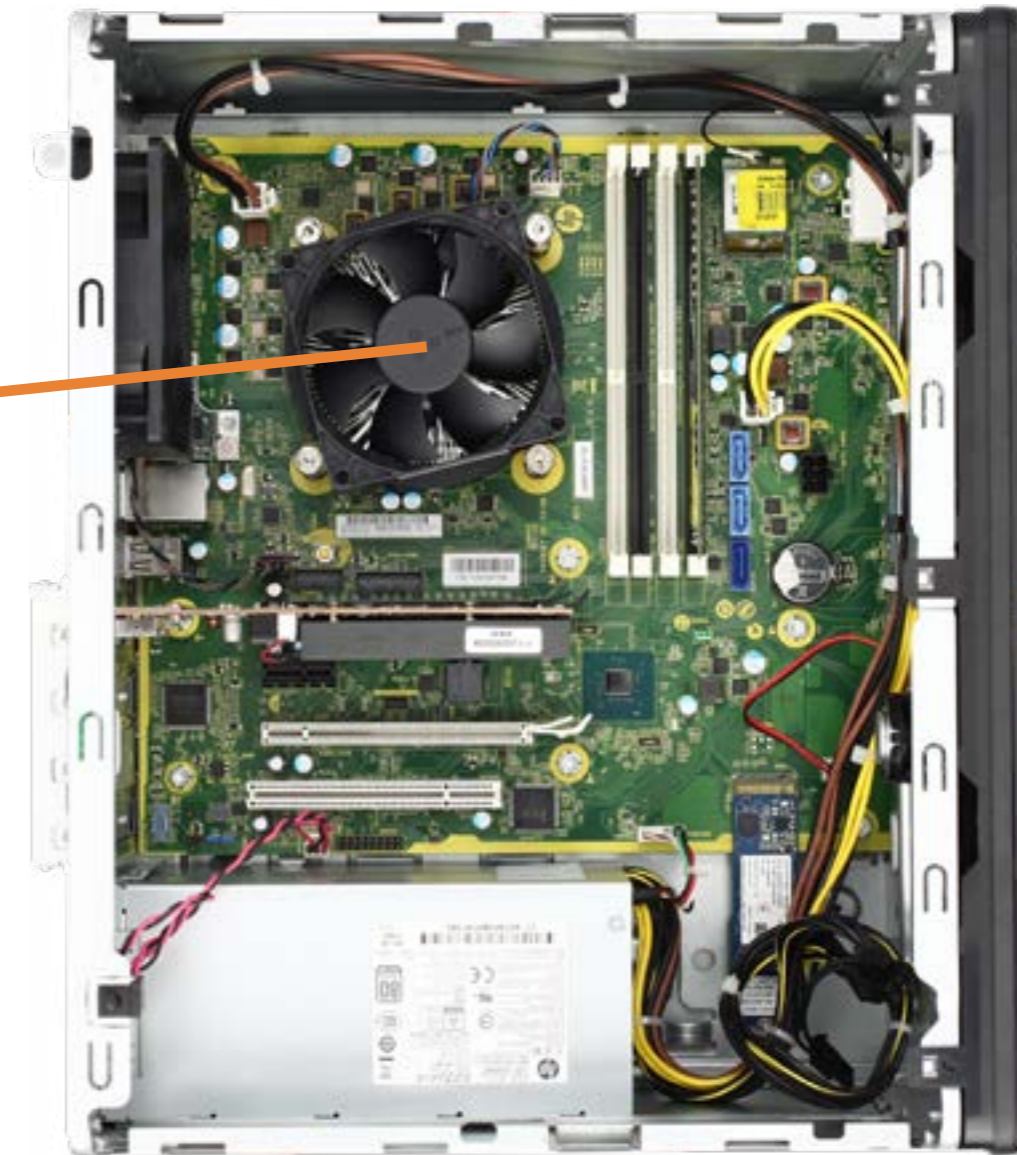

Expansion Card



System Memory

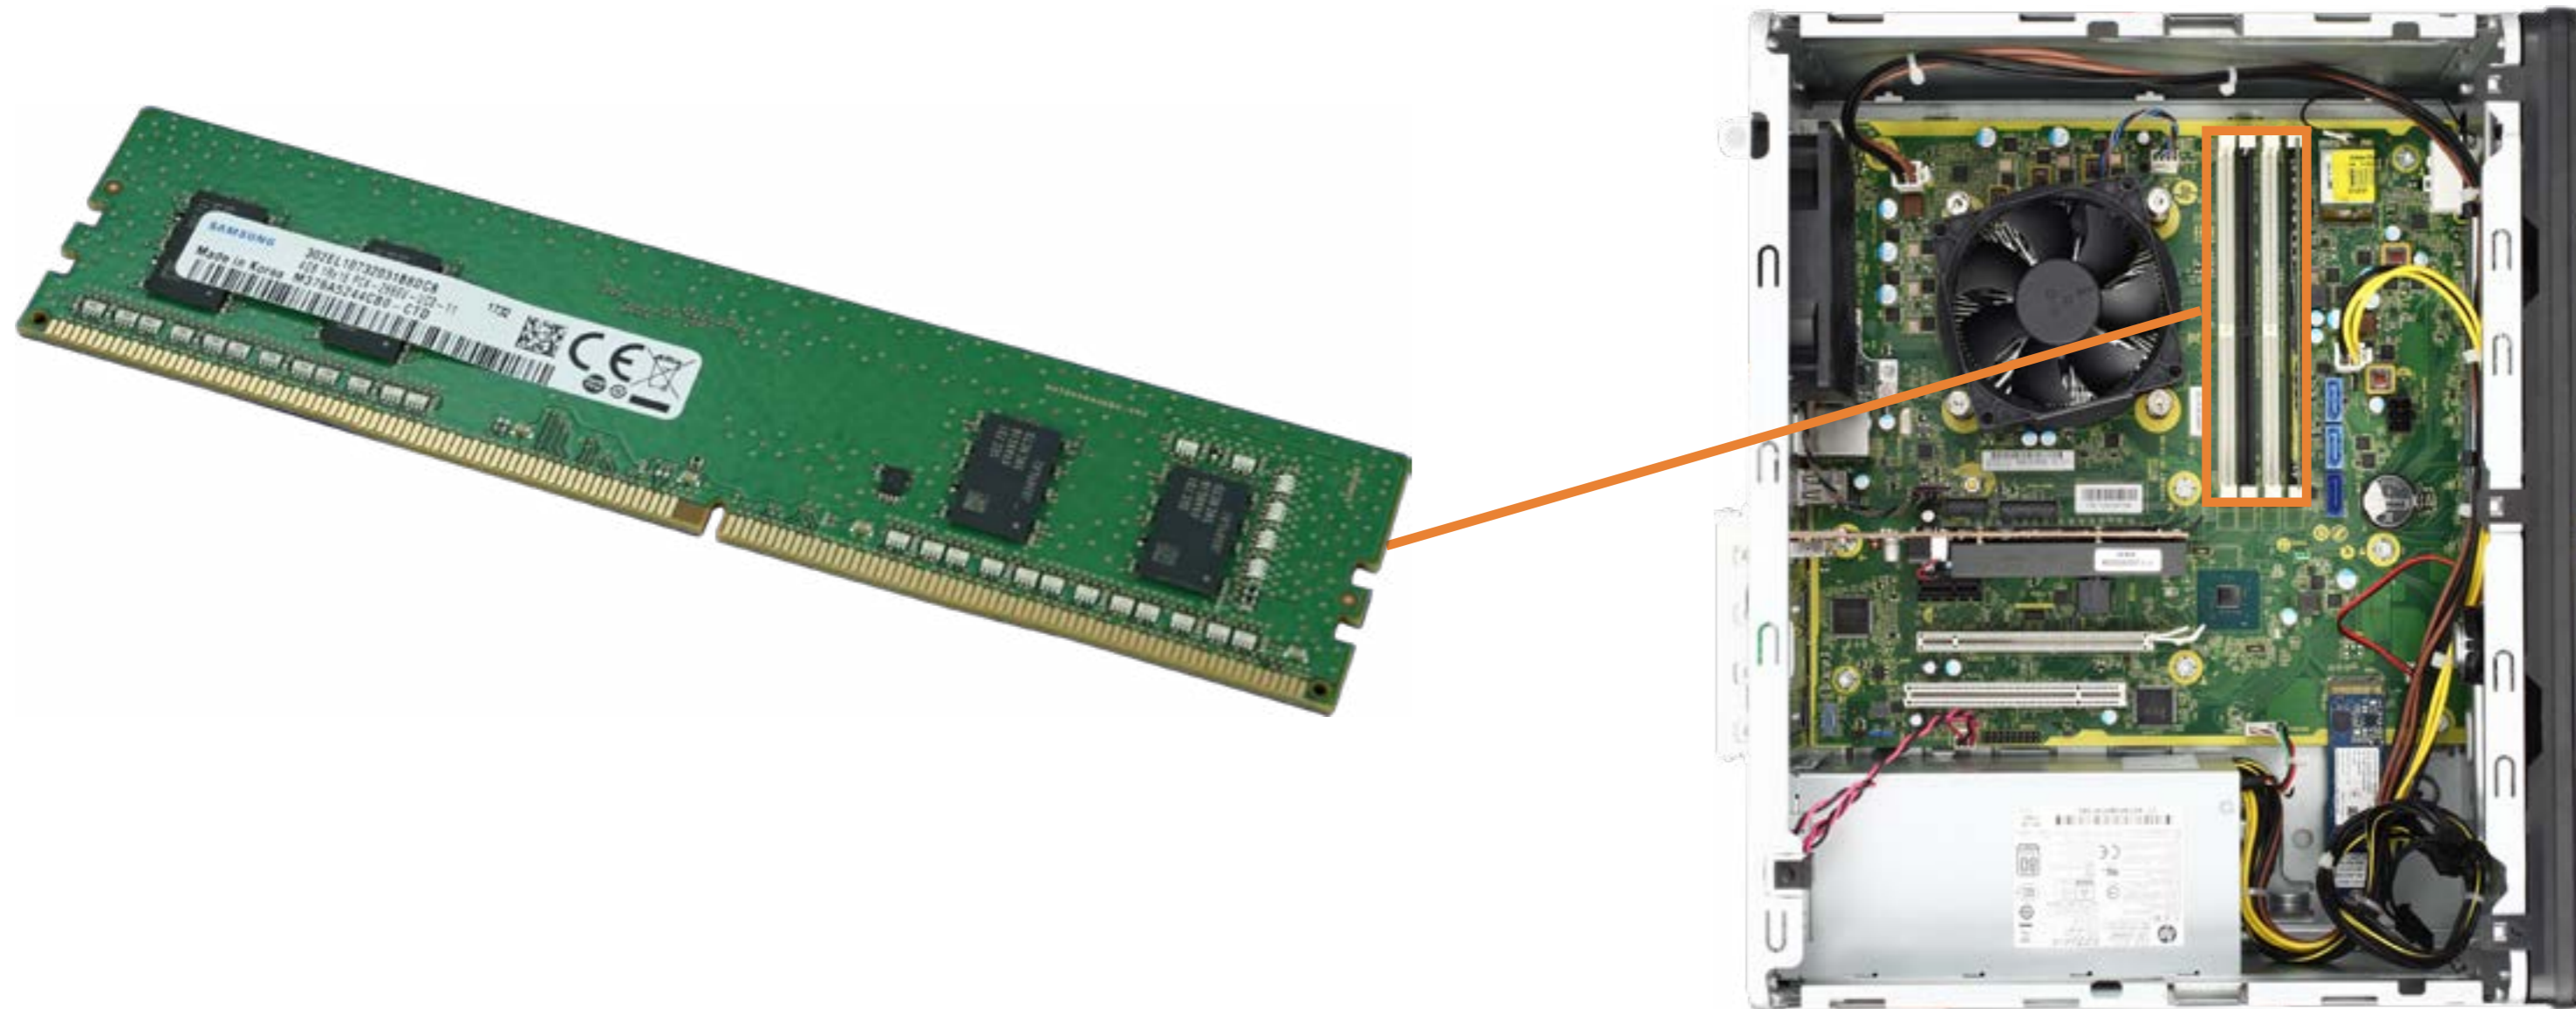

Option Board




Power Supply




Real-time Clock Battery



CPU

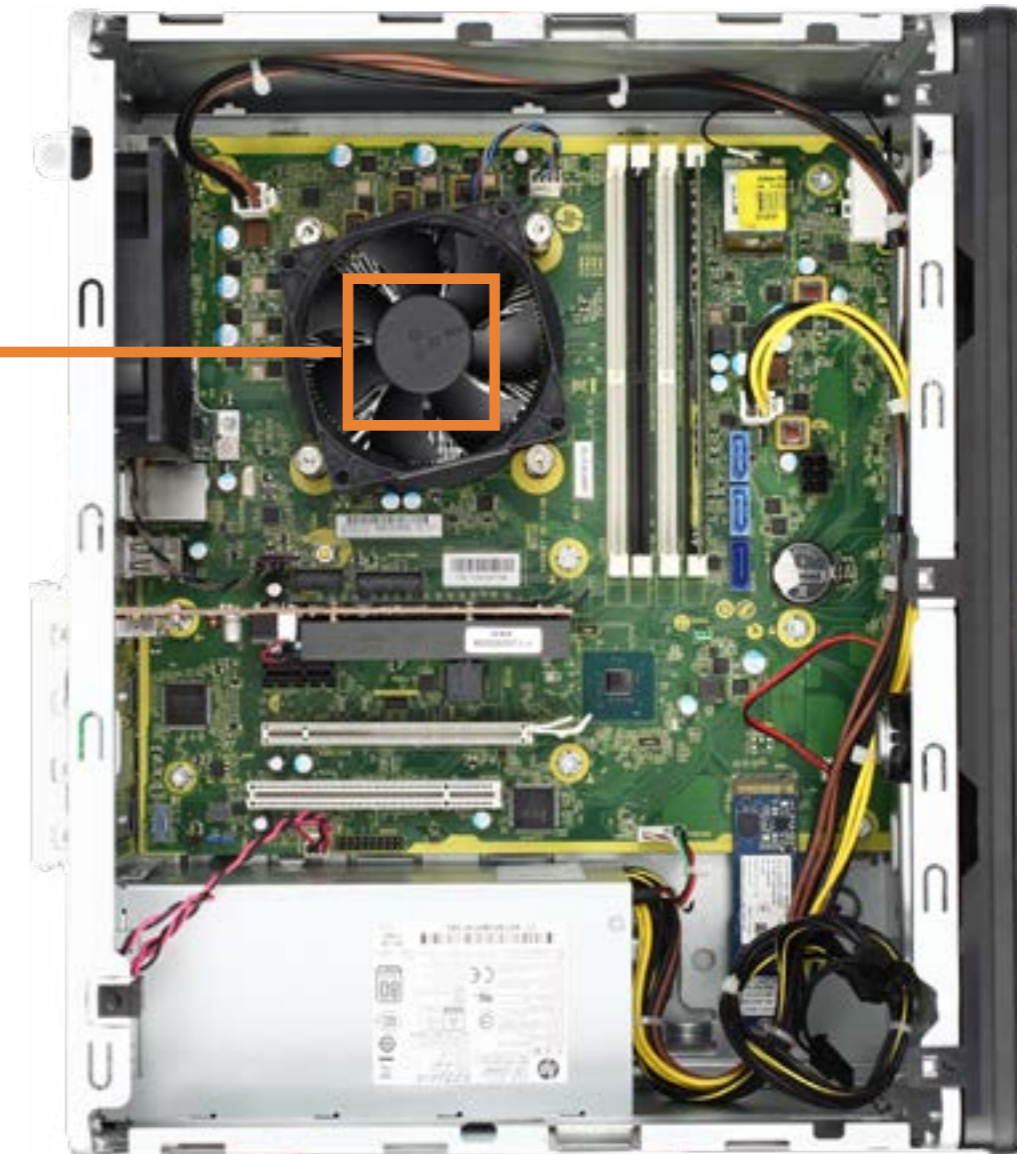


Speaker

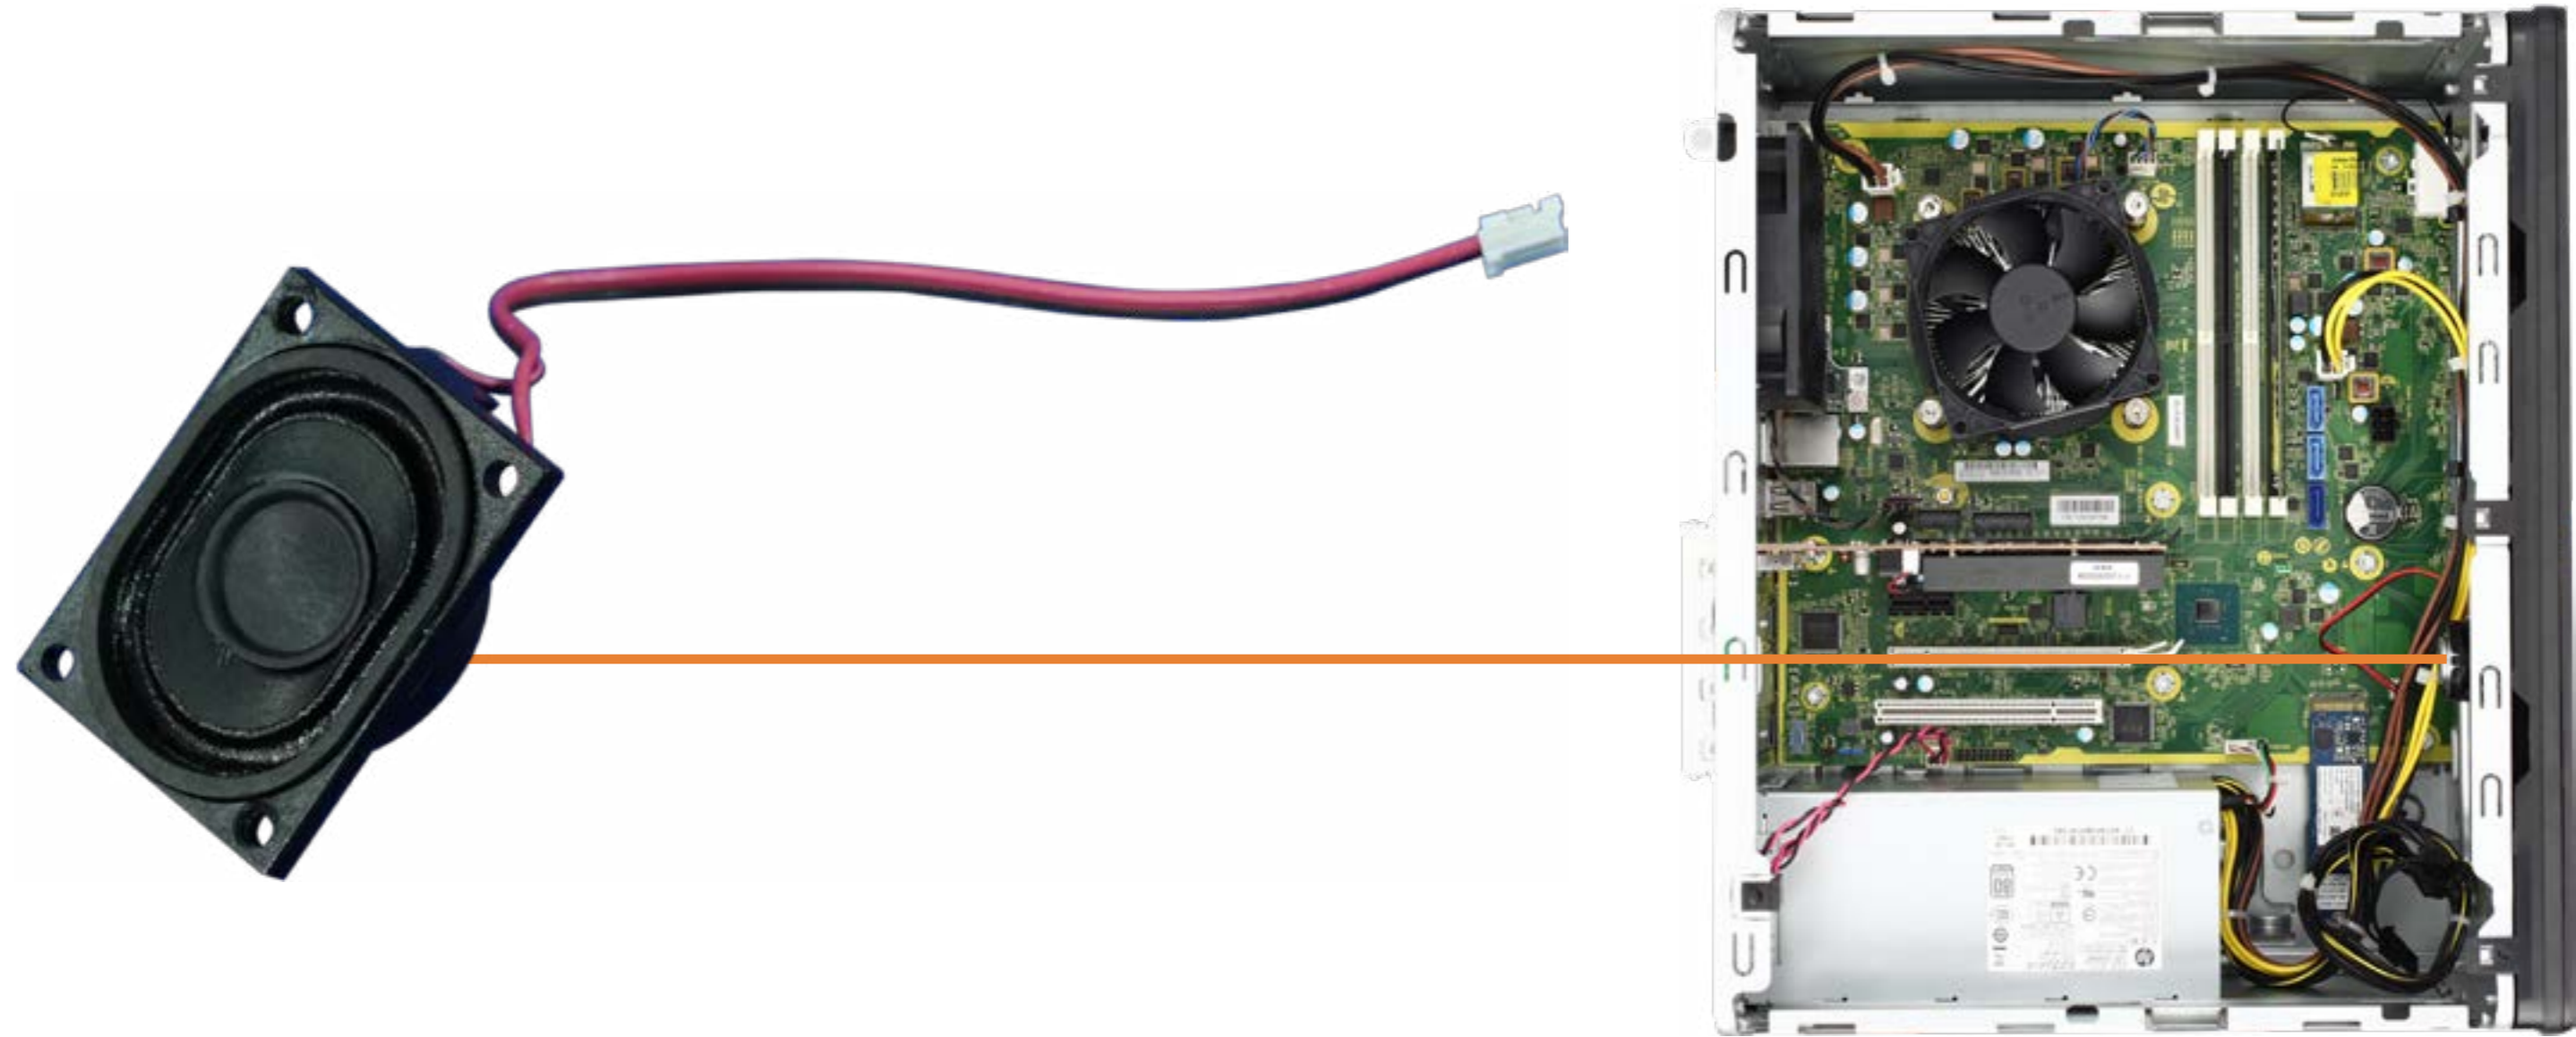


Solid State Drive



Wireless LAN Module

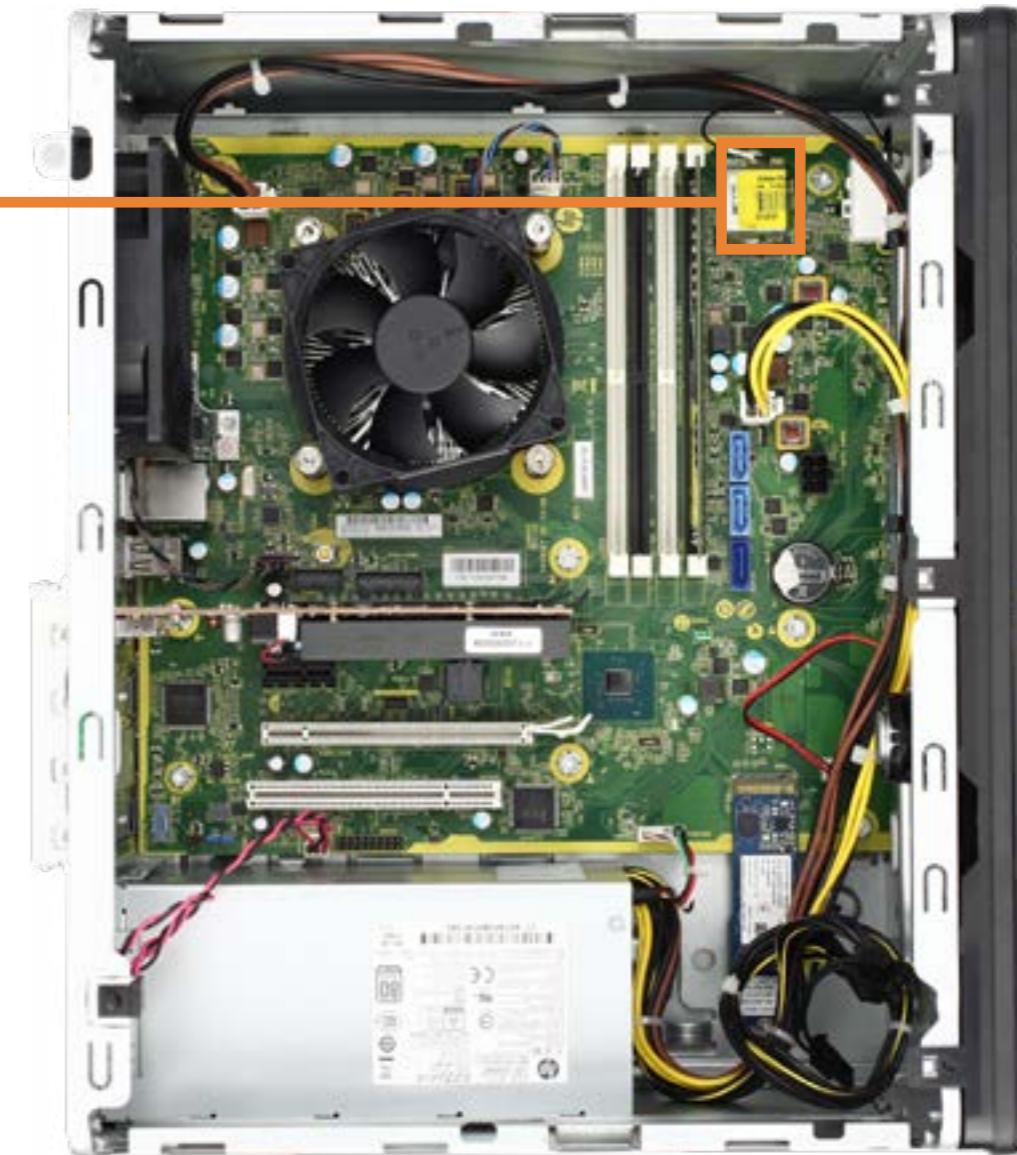

Motherboard

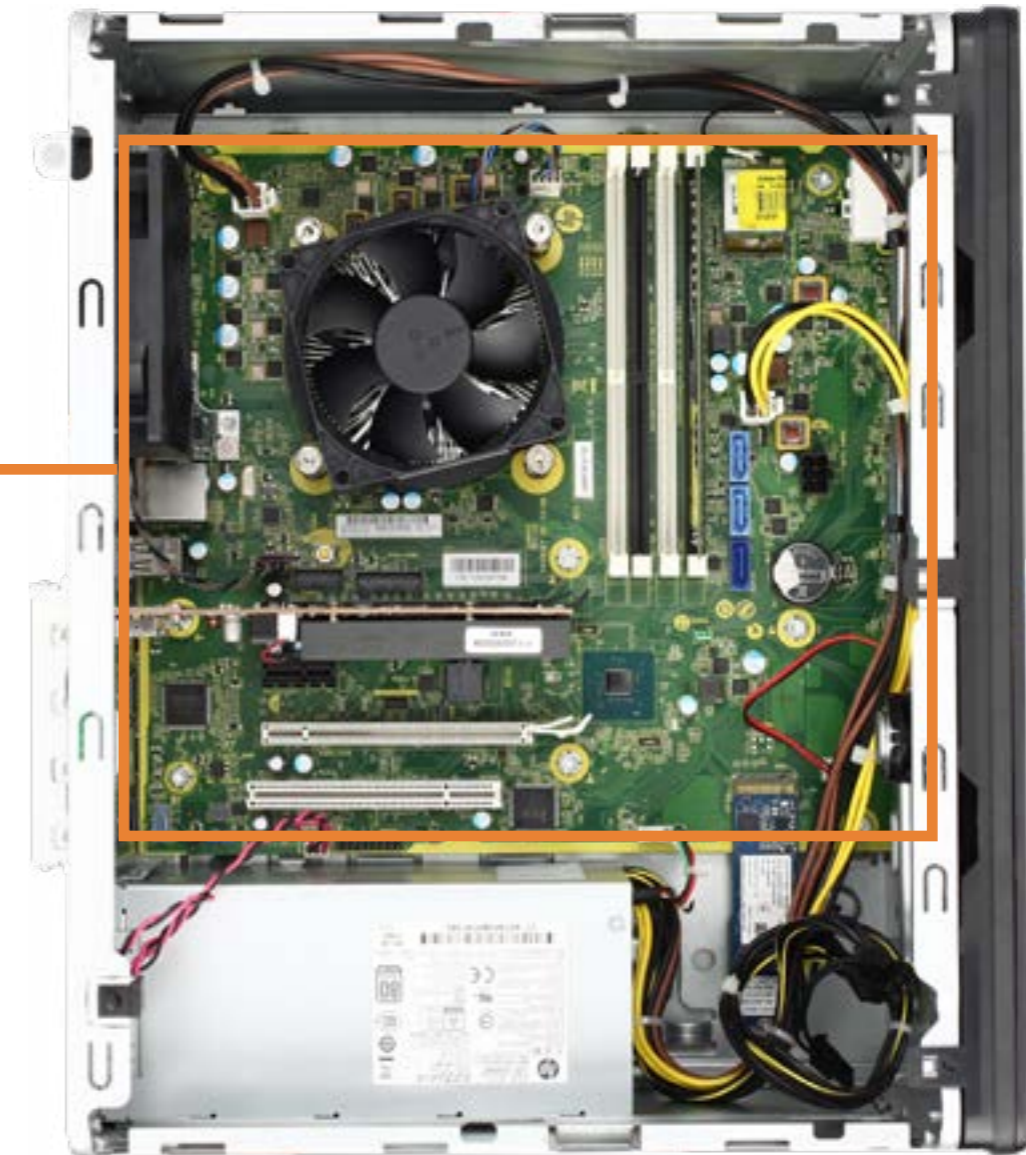

Wireless LAN Antenna

Wireless
LAN Antenna

