

# Interactive BIOS simulator

## HP ProDesk 680 G4 MT

Welcome to the interactive BIOS simulator for the  
HP ProDesk 680 G4 MT

### Here's how to use it...

[BIOS Utility Menus](#): (Click the link to navigate to the individual menus)

On this page you will find thumbnail images of each of the product's BIOS utility menus. To view a specific menu in greater detail, simply click that thumbnail. Just as in the live BIOS, on each menu, you can select the tab of each of the other utility menus to navigate directly to that menu.

### Menu options:

While the menu options cannot be toggled, many of them offer item specific information about that option. To view this information, use the cursor to rollover the option and the information will present in a pane on the right of the BIOS screen.

### That's it!

**On every page there is a link that brings you back to either this Welcome page or the BIOS Utility Menus page enabling you to navigate to whatever BIOS option you wish to review.**

# BIOS Utility Menus

Main

Security

Advanced

UEFI Drivers



Item Specific Help

Supress Post Errors

Help



 
BASIC SYSTEM INFORMATION

Product Name	HP ProDesk 680 G4 MT
Processor 1	Intel(R) Pentium(R) Gold G5600 CPU @ 3.90GHz
Memory Size	4096 MB
System BIOS	R04 Ver. 00.21.00 08/22/2018

SERVICE -----

Born On Date	00/00/0000
Serial Number	HCNW201022
SKU Number	Z0000AV
Universally Unique Identifier (UUID)	5EBCF09D-091A-98F6-ECCF-F16A02BAE708
Asset Tracking Number	HCNW201022

Item Specific Help





Item Specific Help

Product Name HP ProDesk 680 G4 MT  
Memory Size 4096 MB

PROCESSOR 1 -----

ProcessorType Intel(R) Pentium(R) Gold G5600 CPU @ 3.90GHz  
Cache Size (L1/L2/L3) 126 KB / 512 KB / 4 MB  
Processor Speed 3900 MHz  
Processor Cores 2  
MicroCode Revision 8E  
Processor Stepping B  
Memory Speed 2400 MHz  
DIMM1 4 GB Samsung  
DIMM2 Empty  
DIMM3 Empty  
DIMM4 Empty



Item Specific Help

FIRMWARE -----

System BIOS	R04 Ver. 00.21.00 08/22/2018
ME Firmware Version	12.0.7.1122
ME Firmware Mode	Enabled
Audio Controller	Conexant CX20632
Video BIOS Version	Intel(R) GOP Driver (9.0.1079)
Reference Code Revision	7.0.31.34
Embedded Controller Firmware Version	80.32.00
Super IO Firmware Version:	7.9.34



Item Specific Help

SERVICE -----	
Born On Date	00/00/0000
Serial Number	HCNW201022
SKU Number	Z0000AV
Universally Unique Identifier (UUID)	5EBCF09D-091A-98F6-ECCF-F16A02BAE708
Asset Tracking Number	HCNW201022
Feature Byte	7QaE.e8
Build ID	15WWAAT6aa#SABA#DABA
Product Family	103C_53307F HP ProDesk
System Board ID	8580
System Board CT Number	PHALBX2CYB6A2A
COMMUNICATION -----	
Integrated MAC Address 1	10-E7-C6-29-41-36



# HP PC Hardware Diagnostics UEFI

Please select a Language.

Cestina

Dansk

Deutsch

Nederlands

Espanol

eesti keel

Suomi

Francais

Hrvatski

Magyar







# HP PC Hardware Diagnostics UEFI

Version 6.6.1.0

For more information and updates, please visit [www.hp.com/go/techcenter/PCDiags](http://www.hp.com/go/techcenter/PCDiags).

System Tests

Component Test

Test Logs

Languages



Exiting...

Are you Sure?

No



BIOS Event Log

Clear BIOS Event Log on Next Boot

Item Specific Help

**1. Check HP.com for BIOS Updates**

Checks for the latest BIOS release revision on the network, and lets the user decide whether to download the BIOS image and update System.

**2. Lock BIOS Version**

If not selected, then BIOS updates are allowed, if selected then updates to BIOS are not allowed.

**3. Allow BIOS Updates Using a Network**

Enable/Disable automatic BIOS updates through the network in a scheduled basis.

**4. BIOS Update Preferences**

Sets the configurations to perform BIOS updates through the network.

**5. Network Configuration Settings**

Configure network settings to be used for download and upload.

Help



# Export to USB Key

---

The file cannot be accessed. Please insert a USB Storage device and try again



Help



View BIOS Event Log

Date	Time	Description
01/15/2019	23:37	90E-Power Supply Fan Not Detected
01/15/2019	22:44	90E-Power Supply Fan Not Detected
09/03/2018	03:14	90E-Power Supply Fan Not Detected
09/03/2018	03:04	90E-Power Supply Fan Not Detected
09/03/2018	03:04	90E-Power Supply Fan Not Detected
09/03/2018	03:03	90E-Power Supply Fan Not Detected
09/03/2018	03:03	90E-Power Supply Fan Not Detected

Item Specific Help

**1. Check HP.com for BIOS Updates**

Checks for the latest BIOS release revision on the network, and lets the user decide whether to download the BIOS image and update System.

**2. Lock BIOS Version**

If not selected, then BIOS updates are allowed, if selected then updates to BIOS are not allowed.

**3. Allow BIOS Updates Using a Network**

Enable/Disable automatic BIOS updates through the network in a scheduled basis.

**4. BIOS Update Preferences**

Sets the configurations to perform BIOS updates through the network.

**5. Network Configuration Settings**

Configure network settings to be used for download and upload.

Help



Update System BIOS

Current System BIOS Version:	R04 Ver. 00.21.00
Current BIOS Release Date:	08/22/2018
Installation Date of Current BIOS:	09/03/2018
Most Recent Update Check:	Never Checked

Item Specific Help

**1. Check HP.com for BIOS Updates**

Checks for the latest BIOS release revision on the network, and lets the user decide whether to download the BIOS image and update System.

**2. Lock BIOS Version**

If not selected, then BIOS updates are allowed, if selected then updates to BIOS are not allowed.

**3. Allow BIOS Updates Using a Network**

Enable/Disable automatic BIOS updates through the network in a scheduled basis.

**4. BIOS Update Preferences**

Sets the configurations to perform BIOS updates through the network.

**5. Network Configuration Settings**

Configure network settings to be used for download and upload.

1

2

3

4

5

Lock BIOS Version

BIOS Rollback Policy

Allow BIOS Updates Using a Network

Help



Network Configuration Settings

Proxy Server **1**

**2**

IPv4 Configuration

**3**

DNS Configuration

**4**

Data transfer timeout

100 **5**

Force HTTP no-cache **6**

Item Specific Help

- 1. Proxy Server**  
Enable/Disable the use of a proxy server.
- 2. Edit Proxy Server**  
Specify the Proxy Server Address and the Port Number through the common-use <server>:<port> notation.
- 3. Test Network Connection**  
Check the network connection using current BIOS update configuration.  
*Click on the field to see the options.*
- 4. IPv4 Configuration**  
Setup for static IPv4 address.  
*Click on the field to see the options.*
- 5. DNS Configuration**  
Configure a list of DNS addresses.
- 6. Force HTTP no-cache**  
Disable HTTP caching.

Help



# Test Network Connection Failed

---

An error has occurred with your network connection. Please see the error message below.

IPv4 Configuration: Automatic

IPv4 Address:

IPv4 Subnet Mask:

IPv4 Gateway:

DNS Configuration: Automatic

Primary DNS:

Secondary DNS:

MAC Address:

Current Proxy:

Current Customer Source URL: HP.com

Error: Could not detect network link or network cable is unplugged.



Help





# Configure Proxy Address

---

There is no Proxy URL Configured.

Provide the Proxy URL and (option) Port Number if your system is on a network that requires proxy access.

Examples:

proxy.host.com:8088

proxy.host.com

192.168.0.1:8088

Press ESC to CANCEL

Type the PROXY URL with optional Port Number and press ENTER or SAVE

Help



# Configure IPv4 Address

---

There is no static IPv4 Address configured

Provide the static IPv4 Address if your system needs manual network configuration.

Example:

192.202.145.23

192.168.0.48

192.3.78.200

Do not forget to configure the other items of IPv4 Configuration: IPv4 Subnet Mask and IPv4 Gateway

Press ESC to CANCEL

Type the IPv4 ADDRESS and press ENTER to SAVE

Help



# Configure IPv4 Subnet Mask

---

There is no static IPv4 Subnet Mask address configured.

Provide the static IPv4 Subnet Mask address if your system needs manual network configuration.

Example:

255.255.255.254

255.255.255.240

255.255.255.0

Do not forget to configure the other items of IPv4 Configuration: IPv4 Address and IPv4 Gateway

Press ESC to CANCEL

Type the IPv4 SUBNET MASK address and press ENTER to SAVE

Help



# Configure IPv4 Gateway

---

There is no static IPv4 Gateway address configured.

Provide the static IPv4 Gateway address if your system needs manual network configuration.

Example:

192.202.145.250

192.168.0.247

192.3.78.230

Do not forget to configure the other items of IPv4 Configuration: IPv4 Address and IPv4 Subnet Mask

Press ESC to CANCEL

Type the IPv4 GATEWAY address and press ENTER to SAVE

Help



# Configure DNS Addresses

---

There is no DNS address configured.

Provide one or more DNS addresses if your system is on a network that requires a DNS server.

Example:

192.168.0.245

192.5.43.250

192.67.9.220, 192.145.32.222, 192.8.39.247

Press ESC to CANCEL

Type the DNS SERVER ADDRESSES between commas and press ENTER to SAVE

Help



# System BIOS Update

---

The system could not find one of the BIOS Update binary files. Please make sure the correct BIN file is located on the system hard drive or on removable USB Key under the “HP\BIOS\New” folder or under the “EFI\HP\BIOS\New” folder. It must also be placed under the “HP\BIOS\Previous” folder or under the “EFI\HP\BIOS\Previous” folder.



Help



# Network BIOS Update

---

MS Windows Bitlocker Drive Encryption (BDE) may be enabled on your system. HP requires that BDE be suspended temporarily before the BIOS is flashed and that you obtain your BDE recovery password or recovery PIN before suspending BDE. After the BIOS is updated, BDE can be resumed.



Help



# Network BIOS Update

---

Could not detect network link or network cable is unplugged



30

Help





# Minimum BIOS Version

---

Current Minimum BIOS Version 00.00.00

Minimum BIOS Version

Help



BIOS Update Preferences

Check for Update on Next Reboot **1**

BIOS Source **2**

**3**

Automatic BIOS Update Setting **4**

BIOS Update Frequency **5**

Item Specific Help

- 1. Check for Update on Next Reboot**  
Enable/Disable an automatic BIOS check on next reboot.
- 2. BIOS Source**  
Choose one of the available options.  
*Click on the field to see the options.*
- 3. Edit Custom URL**  
Specify a custom BIOS update address.
- 4. Automatic BIOS Update Setting**  
Choose one of the available options.  
*Click on the field to see the options.*
- 5. BIOS Update Frequency**  
Choose one of the available options.



# Configure Update Source

---

There is no custome URL Configured

BIOS Update source can be changed to a CUSTOM URL instead of HP.com.  
This is only recommended for systems in a managed IT environment

Examples:

`http://www.host.com/path`

`ftp://ftp.host.com/path`

`ftp://user:password@ftp.host.com/path`

`http://192.168.0.1/path`

Press ESC to CANCEL

Type the CUSTOM URL for BIOS update checks via network and Press ENTER to SAVE

Help



Change Date And Time

Set Date (MM/DD/YYYY)

06 / 04 / 2018

Set Time (HH:MM):

29 : 53

Item Specific Help

Help



Item Specific Help

Help



---

Feature Byte

Current Setting: 7QaE.e8

Help



---

Build ID

Current Setting: 15WWAAT6aa#SABA#DABA

Press the space key followed by the enter key to clear current setting

Help



---

Serial Number

Current Setting: HCNW201022

Press the space key followed by the enter key to clear current setting

Help





---

SKU Number

Current Setting: Z0000AV

Press the space key followed by the enter key to clear current setting

Help



---

**Product Family**

**Current Setting: 103C\_53307F HP ProDesk**

Press the space key followed by the enter key to clear current setting

Help



---

System Board CT Number

Current Setting: PHALBX2CYB6A2A

Press the space key followed by the enter key to clear current setting

Help



---

Product Name

Current Setting: HP ProDesk 680 G4 MT

Press the space key followed by the enter key to clear current setting

Help



Main

HP Computer Setup

System IDs

Item Specific Help

Help



---

Asset Tracking Number

Current Setting: HCNW201022

Press the space key followed by the enter key to clear current setting

Help



---

Ownership Tag

Current Setting:

Press the space key followed by the enter key to clear current setting

Help



Replicated Setup

Item Specific Help

Help





# Replicated Setup

---

The file cannot be accessed. Please insert a USB storage device and try again



Help



# Replicated Setup

---

The file cannot be accessed. Please insert a USB storage device and try again



Help



Are you sure you want to save your current settings as custom defaults

Item Specific Help

Help



## Administrator Tools

1

## Security Configuration

Physical Presence Interface 2

Intel Software Guard Extension (SGX) 3

## Utilities

Absolute® Persistence Module Current State

Activation Status : Inactive

Absolute® Persistence Module Permanent Disable : No

System Management Command

### Item Specific Help

#### 1. Create BIOS Administrator Password

The Administrator password controls access to the following features:

- Setup Menu (F10)
- 3rd Party Option ROM Management (F3)
- Update System ROM
- WMI Commands that change system settings
- BIOS Configuration Utility (BCU)
- Alternative Power-On Password

#### 2. Physical Presence Interface

When this feature is set to “Enable”, then the user is notified on system power up when changes are made to system security policy, and the user must manually agree to those changes before the change is confirmed.

#### 3. Intel Software Guard Extensions (SGX)

Enable/Disable Software Guard Extensions (SGX).

Help



# BIOS Administrator Password

---

Enter BIOS Administrator Password

Help



# POST Power-On Password

---

Enter POST Power-On Password

Help



## Password Policies

At least one symbol is required in Administrator and User password

At least one number is required in Administrator and User password

At least one upper case character is required in Administrator and User password

At least one lower case character is required in Administrator and User password

Are spaces allowed in Administrator and User password?

## Clear Password Jumper

Prompt Admin password on F9 (Boot Menu)

Prompt Admin password on F11 (System Recovery)

Prompt Admin password on F12 (Netword Boot)

Prompt Admin password on Capsule Update

Help



TPM Embedded Security

TPM Specification Version

2.0

TPM Device

1

TPM State 2

Clear TPM

TPM Activation Policy

### Item Specific Help

#### 1. TPM Device

Exposes the integrated Trusted Platform Module (TPM) for use.

*Click on the field to see the options.*

#### TPM State

Enables the integrated Trusted Platform Module (TPM).

Help





# Security

## Secure Platform Management (SPM)

HP Sure Run Current State: Inactive

➔ [Deactivate HP Sure Run](#)

SPM Current State: Not Provisioned

➔ [Unprovisioned SPM](#)

### Item Specific Help



## Hard Drive Utilities

### Save/Restore GPT of System Hard Drive **1**

Save/Restore GPT of the system hard drive is only available with drives that have a GUID Partition Table.

Boot Sector (MBR/GPT) Recovery Policy

### Allow OPAL Hard Drive SID Authentication

#### Item Specific Help

- 1. Save/Restore GPT of System Hard Drive**  
Enabling this feature will save the GUID Partition table (GPT) of the system Hard Drive. If the GPT is subsequently changed the user will be prompted to choose whether to restore GPT.

Help



# Security

HP Computer Setup

Select a Drive

Item Specific Help

Help



# Secure Erase

---

This operation will erase all data on the hard drive. Please make sure the computer is connected to AC power during this process.

Continue

Help



## DriveLock Security Options

- ➔ Set DriveLock Master Password **1** **2**
- ➔ Enable DriveLock **3**

The DriveLock Master and User passwords cannot be changed if you enable Automatic DriveLock or it was already enabled

### Item Specific Help

#### 1. Automatic DriveLock

In Automatic DriveLock, your BIOS Administrator password is the DriveLock Master password, and the BIOS generates the DriveLock User Password. If you enable Automatic DriveLock on a drive, you will need to use your BIOS Administrator password to unlock the drive if it is placed in another system.

#### 2. Set DriveLock Master Password


Sets the drive's Master password, but it does not enable DriveLock.

#### 3. Enable DriveLock

Sets the drive's User password and enables DriveLock.



## DriveLock Security Options

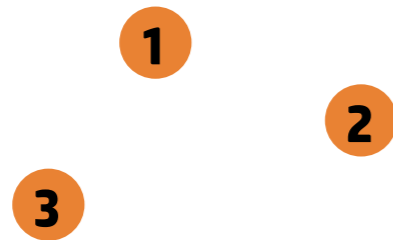

Help

### Item Specific Help

#### 1. Automatic DriveLock

In Automatic DriveLock, your BIOS Administrator password is the DriveLock Master password, and the BIOS generates the DriveLock User Password. If you enable Automatic DriveLock on a drive, you will need to use your BIOS Administrator password to unlock the drive if it is placed in another system.

#### 2. Set DriveLock Master Password

Sets the drive's Master password, but it does not enable DriveLock.

#### 3. Enable DriveLock

Sets the drive's User password and enables DriveLock.



# Security

HP Computer Setup

Select a Drive

Item Specific Help

Help



# Set DriveLock Password

---

Please exercise caution when using DriveLock.  
Losing the passwords will render a drive premanently unusable.

Please be aware these settings take place immediately: save not necessary.

Enter DriveLock Master Password.

Help





# Set DriveLock User Password

---

Please exercise caution when using DriveLock.  
Losing the passwords will render a drive premanently unusable.

Please be aware these settings take place immediatly: save not necessary.

Enter DriveLock User Password.

Help



# Restore Security Settings to Factory Defaults

---

Are you sure you want to restore security settings to default?

Help



1

Remote HP PC Hardware Diagnostics

2

3

Help

Item Specific Help

**1. Port Options**

Enable/Disable Port Settings.

**2. Settings**

Set the configuration for Remote HP PC Hardware Diagnostics, including the URLs used for download and upload, the scheduled execution frequency, etc.

**3. Execute Remote HP PC Hardware Diagnostics**

Immediate execution of Remote HP PC Hardware Diagnostics based on the configurations in Settings options. Note that any unsaved BIOS settings are lost.



# Advanced

HP Computer Setup

Display Language

Select Language

Select Keyboard Layout

Item Specific Help

Help



## Scheduled Power-On

Sunday **1**

Monday **1**

Tuesday **1**

Wednesday **1**

Thursday **1**

Friday **1**

Saturday **1**

Hour 0  
Minute 0

Help

### Item Specific Help

#### 1. Sunday

Enable the days of the week to turn the system on. This feature wakes the system up from a powered off state.



# Advanced

## Boot Options

### Startup Delay (sec.)

Fast Boot

CD-ROM Boot

USB Storage Boot

Network (PXE) Boot

### After Power Loss

Prompt on Memory size change

Prompt on Fixed Storage Change

Audio Alerts During Boot

NumLock on at boot

UEFI Boot Order

1

-----  
SATA0: TOSHIBA MQ01ACF050

SATA CD: hp HLDS DVDROM DUDON

NETWORK BOOT: IPV4 Network - Intel(R) Ethernet Connection (7) 1219-LM

NETWORK BOOT: IPV6 Network - Intel(R) Ethernet Connection (7) 1219-LM  
-----

### Legacy Boot Order

-----  
SATA0: TOSHIBA MQ01ACF050

SATA CD: hp HLDS DVDROM DUDON  
-----

## Item Specific Help

### 1. After Power Loss

Determine the system's state after power is lost to the unit.

Help



# Advanced

## Secure Boot Configuration

### Configure Legacy Support and Secure Boot

### Secure Boot Key Management

Import Custom Secure Boot keys (This selection will disable secure boot)

Clear Secure Boot keys

Reset Secure Boot keys to factory defaults

Enable MS UEFI CA key

### Ready BIOS for Device Guard Use

Requires BIOS Administrator credentials to be configured and Secure Boot to be enabled.

### Item Specific Help

Help



## System Options

Configure Storage Controller for Intel Optane

Hyperthreading **1**

Multi-processor

Virtualization Technology (VTx)

Virtualization Technology for Directed I/O (VTd)

PCI Express x16 Slot 1 **2**

PCI Express x1 Slot 1 **3**

PCI Express x4 Slot 1 **4**

PCI Slot 1 **5**

M.2 WLAN/BT **6**

M.2 SSD **7**

Allow PCIe/PCI SERR# Interrupt

Power Button Protection

### Item Specific Help

#### 1. Hyperthreading

Permits the user to control the processor capability.

#### 2. PCI Express x 16 Slot 1

Hides the slot from the OS.

#### 3. PCI Express x 1 Slot 1

Hides the slot from the OS.

#### 4. PCI Express x 4 Slot 1

Hides the slot from the OS.

#### 5. PCI Slot 1

Hides the slot from the OS.

#### 6. M.2 WLAN/BT

Hides the slot from the OS.

#### 7. M.2 SSD

Hides the slot from the OS.

Help





# Enable High Resolution Mode

---

All USB devices in a dock will connect at USB2 speeds and the Gigabit NIC will experience reduced performance when High Resolution mode is enabled





# TURBO BOOST ON DC SUPPORT

---

To maximize battery life and reduce thermal impacts to the computer, HP does not recommend enabling this option when the computer is operating on DC. This option is automatically enabled on AC.





# Advanced

## Built-In Device Options

### Video memory size

Audio Device **1**

Microphone

Internal Speakers

Headphone Output

Wake on Voice (WoV)

Wireless Network Device (WLAN)

Bluetooth

### HP LAN-Wireless Protection

LAN/WLAN Auto Switching

Fan Always on while on AC Power

Boost Converter

### Backlit keyboard timeout

Automatic Keyboard Backlit

Force enable HP Sure View

Integrated Camera

Fingerprint Device

Touch Device

NFC

### Disable battery on next shut down **2**

#### Item Specific Help

##### 1. Audio Device

Hides the audio device from the OS.

##### 2. Disable battery on next shut down

Set this item to 'Next shut down' to disconnect the battery. This is to maintain battery life in situations where the system will not be used for long periods of time. Once in this state, AC power must be disconnected and reconnected to turn the system back on.



# Advanced

## Port Options

Left USB Ports **1**

Right USB Ports **2**

USB Legacy Port Charging **3**

Disable Charging Port

in sleep/off if battery below (%): ▲ ▼ 10

UP/DOWN = Change Settings, ESC = Cancel, ENTER = Accept **X** ✓

Thunderbolt Type-C Ports

Thunderbolt Mode **4**

Require BIOS PW to change Thunderbolt Security Level

Thunderbolt Security Level

Thunderbolt function is disabled due to Thunderbolt Type-C Ports or Thunderbolt Mode disabled

Native PCIe Hot plug

Thunderbolt S4 Boot is disabled due to Native PCIe Hot plug enabled

### Item Specific Help

#### 1. Left USB Ports

Hides the left USB ports from the OS.

#### 2. Right USB Ports

Hides the right USB ports from the OS.

#### 3. USB Legacy Port Charging

Enable USB Charging port for charging capability when system Hibernate/Shutdown.

#### 4. Thunderbolt Mode

When Thunderbolt Mode is disabled, only DisplayPort and USB Type-C devices will function on the Thunderbolt Port.

Help



# Advanced

HP Computer Setup

## Option ROM Launch Policy

Configure Option ROM Launch Policy

1

### Item Specific Help

- 1. Configure Option ROM Launch Policy**  
Configure the launching of EFI versus Legacy Option ROM.

Help



## Power Management Options

Runtime Power Management **1**

Extended Idle Power States **2**

Deep Sleep

Power control

Battery Health Manger **3**

HP will balance your battery health and battery duration.

### Item Specific Help

#### 1. Runtime Power Management

Enables Runtime Power Management.

#### 2. Extended Idle Power States

Increases the OS's Idle Power Savings.

#### 3. Options

“Maximize my battery health”: Your Battery will always charge to 100% to maximize your battery duration. This may shorten your battery lifespan. “Let HP manage my battery charging”: HP will balance your battery health and battery duration. “Maximize my battery duration”: Your battery will always charge to 100% to maximize your battery duration. This may shorten your battery lifespan.

Help



| **Advanced** |

---

**HP** Computer Setup

**Item Specific Help**



# Advanced

## Remote Management Options

Active Management (AMT)

USB Key Provisioning Support

USB Redirection Support

Unconfigure AMT on next boot

SOL Terminal Emulation Mode

Show unconfigure ME Confirmation Prompt

Verbose Boot Messages

Watchdog Timer **2**

OS Watchdog Timer (min.)

BIOS Watchdog Timer (min.)

CIRA Timeout (min.)

**1**

**3**

**4**

**5**

### Item Specific Help

- 1. Unconfigure AMT on next boot**  
Perform AMT/ME unconfigure without password operation.
- 2. Watchdog Timer**  
Enable/Disable WatchDog Timer.
- 3. OS watchdog Timer (min.)**  
set OS Watchdog timer (Minutes).
- 4. BIO Watchdog Timer (min.)**  
Set BIOS watchdog timer (minutes).
- 5. CIRA Timeout (min.)**  
Set CIRA Timeout (Minutes).





# Configure Factory/System MAC Address

---

Current Factory : B4-B6-86-2B-76-C9

Current System : B4-B6-86-2B-76-C9

Examples:

1234567890AB

12-34-56-78-90-AB

Writes blank to clear the MAC address

The Second Byte must be even digit, either 0, 2, 4, 6, 8, A, C or E

Press ESC to CANCEL

Type the System MAC Address and press ENTER to SAVE

Help



## Remote HP PC Hardware Diagnostics

Diagnostics Download URL

2

1

Diagnostics Logs Upload URL

3

4

5

Scheduled Execution

6

Frequency

7

Execute On Next Boot

8

HP PC Hardware Diagnostics will be downloaded and executed once on the next boot

Help

### Item Specific Help

- 1. Diagnostics Download URL**  
Select between HP server URL and a custom server URL.
- 2. Custom Download Address**  
Configure a URL for HP PC Hardware Diagnostics download.
- 3. Custom Upload Address**  
Configure a URL for diagnostics logs upload.
- 4. Username**  
Configure the username for uploading diagnostics logs to the server, if authentication is required.
- 5. Password**  
Configure the password for uploading diagnostics logs to the server, if authentication is required.
- 6. Scheduled Execution**  
Enable/disable the scheduled execution of Remote HP PC Hardware Diagnostics.
- 7. Frequency**  
Select the frequency for scheduled execution of Remote HP PC Hardware Diagnostics.
- 8. Execute On Next Boot**  
Enable/disable the execution on next boot. The flag will be disabled after the diagnostics have run.



# Custom Download URL

---

There is no Custom Download URL configured.  
Type a new Custom Download URL and press ENTER to save.  
Press ESC to CANCEL

a

Help



# Custom Upload URL

---

There is no Custom Download URL configured.  
Type a new Custom Download URL and press ENTER to save.  
Press ESC to CANCEL

a

Help



# Custom Server Username

---

There is no Username configured.  
Type a new Username and press ENTER to save.  
Press ESC to CANCEL

Help



# Remote HP PC Hardware Diagnostics Results

---

Remote HP PC Hardware Diagnostics was never executed.

Help



# Custom Server Password

---

There is no Upload Server Password configured.  
Type a new Upload Server Password and press ENTER to save.  
Press ESC to CANCEL

Help



# Remote HP PC Hardware Diagnostics Execution

---

Status of last attempt to execute: Could not detect network link or network cable is unplugged.

Help





# UEFI Drivers

HP Computer Setup

This will restart the system into the 3rd Party Option ROM Management application. You can get to this application directly by pressing F3 during startup.

Item Specific Help

Help