Interactive BIOS simulator

Z2 G4 Entry Tower Workstation

Welcome to the interactive BIOS simulator for the Z2 G4 Entry Tower Workstation

Here's how to use it...

BIOS Utility Menus: (Click the link to navigate to the individual menus) On this page you will find thumbnail images of each of the product's BIOS utility menus. To view a specific menu in greater detail, simply click that thumbnail. Just as in the live BIOS, on each menu, you can select the tab of each of the other utility menus to navigate directly to that menu.

Menu options:

While the menu options cannot be toggled, many of them offer item specific information about that option. To view this information, use the cursor to rollover the option and the information will present in a pane on the right of the BIOS screen.

That's it!

On every page there is a link that brings you back to either this Welcome page or the BIOS Utility Menus page enabling you to navigate to whatever BIOS option you wish to review.

BIOS Utility Menus

Main

Security

Advanced

UEFI Drivers

Suppress POST Errors



Item Specific Help

BASIC SYSTEM INFORMATION

Product Name Processor 1 Memory Size System BIOS Z2 G4 Entry Tower Workstation Intel(R) Xeon(R) E-2144 CPU @ 3.60 GHz 16384 MB ECC DDR4 @ 2667 MHz Q50 Ver. 00.31.01 02/12/2018

SERVICE -----

Serial Number SKU Number Universally Unique Identifier (UUID) Asset Tracking Number

2YW27AV B9A3BE55-53C5-F275-2A25-AFFEBF2ACF63



HP Computer Setup

Item Specific Help	

ADVANCED SYSTEM INFORMATION

Product Name Memory Size Z2 G4 Entry Tower Workstation 16384 MB ECC DDR4 @ 2667 MHz

PROCESSOR 1 -----

Processor Type Cache Size (L1/L2/L3) Processor Speed MicroCode Revision Processor Stepping Memory Speed DIMM1 DIMM2 DIMM3 Intel(R) Xeon(R) E-2144G CPU @ 3.60 GHz 256 KB / 1 MB / 8 MB 3600 MGz 84 A 2667 MHz 16 GB Hynix/Hyundai Empty Empty Empty



HP Computer Setup

Item Specific Help

ADVANCED SYSTEM INFORMATION

FIRMWARE ------

System BIOS	Q50 Ver. 00.31.01 02/12/2018
ME Firmware Version	12.0.0.1059
ME Firmware Mode	Enabled
Video BIOS Version	AMD GOP Release Drive Rev. 1.62.0.15.50.M
Reference Code Revision	7.0.1C.58
Super I/O Firmware Version	7.8.5

SERVICE ------

Serial Number SKU Number Universally Unique Identifier (UUID) Asset Tracking Number

2YW27AV BBF5585E-FED7-2554-85A5-CD74C0C587DD





Feature Byte Build ID Product Family System Board ID System Board CT Number

103C_53335X HP Workstation 8455 PGVQTXACYAJB1Y

Integrated MAC Address 1

3C-52-82-66-27-FD



HP Computer Setup

Item Specific Help



HP PC Hardware Diagnostics UEFI

Please select a Language.

English
Cestina
Dansk
Deutsch
Nederlands
Espanol
eesti keel
Suomi
Francais
Hrvatski
Magyar



Update System BIOS

Current System BIOS Version: Current BIOS Release Date: Installation Date of Current BIOS: Most Recent Update Check: Q50 Ver. 80.35.01 02/12/2018 01/01/2017 Never Checked

Lock BIOS Version **2** BIOS Rollback Policy

Allow BIOS Updates Using a Network **4**

1



HP Computer Setup

Item Specific Help

1. Check HP.com for BIOS Updates

Checks for the latest BIOS release revision on the network, and lets the user decide whether to download the BIOS image and update System.

2. Lock BIOS Version

If not selected, then BIOS updates are allowed, if selected then updates to BIOS are not allowed.

- 3. Click on the field to see the options.
- **4. Allow BIOS Updates Using a Network** Enable/Disable automatic BIOS updates through the network in a scheduled basis.

3

MS Windows Bitlocker Drive Encryption (BDE) may be enabled on your system. HP requires that BDE be suspended temporarily before the BIOS is flashed and that you obtain your BDE recovery password or recovery PIN before suspending BDE. After the BIOS is updated, BDE can be resumed.



Minimum BIOS Version

Current Minimum BIOS Version: 00.00.00

Minimum BIOS Version:



BIOS Update Preferences

Check for Update on Next Reboot 1

BIOS Source

3

Automatic BIOS Update Setting

BIOS Update Frequency

4

2



HP Computer Setup

Item Specific Help

Check for Update on Next Reboot
 Enable/Disable an automatic BIOS check on next reboot.

2. BIOS Source

Choose one of the available options. *Click on the field to see the options.*

3. Edit Custom URL

Specify a custom BIOS update address.

4. Automatic BIOS Update Setting

Choose one of the available options. *Click on the field to see the options.*

5. BIOS Update Frequency

Choose one of the available options.

Network Configuration Settings





HP Computer Setup

Item Specific Help **1. Proxy Server** Enable/Disable the use of a proxy server. 2. Edit Proxy Server Specify the Proxy Server Address and the Port Number through the common-use <server>:<port> notation. **3. Test Network Connection** Check the network connection using current BIOS update configuration. Click on the field to see the options. 4. IPv4 Configuration Setup for static IPv4 address. Click on the field to see the options. 5. IPv4 Address Setup for static IPv4 address. 6. IPv4 Subnet Mask Configure a valid IPv4 address for subnet mask. 7. IPv4 Gateway Configure a valid IPv4 address for gateway. 8. DNS Configuration Configure a list of DNS addresses. 9. DNS Addresses Configure a comma separated list of DNS addresses. 10. Force HTTP no-cache Disable HTTP caching.

Help

4

8



Item Specific Help

Change Date And Time

Set Date (MM/DD/YYYY) Set Time (HH:MM): 06 / 04 / 2018 20 : 53



HP Computer Setup

Item Specific Help	



HP Computer Setup

Item Specific Help	

Feature Byte

3X476J6S6b7B7M7R7U7W7m7saBaEapaqauawbVbXbhcAd6dUdpdqfXgdhK.B8



Build ID

Current Setting: 18WWZIAT6av#SABA#DABA



Serial Number

Current Setting: 5CD8103G6P



SKU Number

Current Setting: XW1SKU1#ABA



Product Family

Current Setting: 103C_5336AN HP ZBook Studio



System Board CT Number

Current Setting: PXW1AAF8JAI00Y



Product Name

Current Setting: HP ZBook Studio G5



System IDs



HP Computer Setup

Item Specific Help	

Asset Tracking Number

Current Setting: 5CD8103G6P



Ownership Tag

Current Setting:



Replicated Setup



HP Computer Setup

Item Specific Help	

Administrator Tools



3

Fingerprint Reset on Reboot Security Configuration

Physical Presence Interface **2** Trusted Execution Technology (TXT) Intel Software Guard Extension (SGX) Utilities

Absolute® Persistence Module Current State Activation Status : Inactive Absolute® Persistence Module Permanent Disable : No System Management Command



HP Computer Setup

Item Specific Help 1. Create BIOS Administrator Password The Administrator password controls access to the following features: • Setup Menu (F10) • 3rd Party Option ROM Management (F3) • Update System ROM • WMI Commands that change system settings • BIOS Configuration Utility (BCU) Alternative Power-On Password 2. Physical Presence Interface When this feature is set to "Enable", then the user is notified on system power up when changes are made to system security policy, and the user must manually agree to those changes before the change is confirmed 3. Intel Software Guard Extensions (SGX) Enable/Disable Software Guard Extensions (SGX)

BIOS Administrator Password

Enter BIOS Administrator Password



Enter POST Power-On Password



TPM Embedded Security

TPM Specification Version

TPM Device

TPM State **2**

Clear TPM

TPM Activation Policy

1

2.0



HP Computer Setup

Item Specific Help

1. TPM Device

Exposes the integrated Trusted Platform Module (TPM) for use.

2. TPM State

Enables the integrated Trusted Platform Module (TPM).

BIOS Sure Start

Verify Boot Block on every boot

BIOS Data Recovery Policy

Dynamic Runtime Scanning of Boot Block

Sure Start BIOS Settings Protection Requires BIOS Administrator Password to be set

Sure Start Secure Boot Keys Protection

Enchanced HP Firmware Runtime Intrusion Prevention and Detection

1

Sure Start Security Event Policy

Sure Start Security Boot Notification



Item Specific Help

- **1. Sure Start Security Event Policy** This setting controls HP Sure Start behavior upon identifying a critical security event (any modification to HP firmware) during OS runtime.
- Log event only: HP Sure Start will log all critical security events in the HP Sure Start Audit log within the HP Sure Start non-volatile (flash) memory
- Log Event and notify user: In addition to logging all critical security events. HP Sure Start will notify the user within the operating system that a critical event has occurred.
- Log Event and power off system: In addition to logging all critical events. HP Sure Start will power off system upon detecting a HP Sure Start Security Event. Due to the potential for data loss, use of this setting is only recommended in situations where security integrity of the system is a higher priority than the risk of potential data loss.

Secure Platform Management (SPM)

HP Sure Run Current State: Inactivev

SPM Current State: Not Provisioned



Item Specific Help

Hard Drive Utilities

Save/Restore MBR of the system hard drive is only available with drives that have a Master Boot Record.

Save/Restore GPT of System Hard Drive **1**

Boot Sector (MBR/GPT) Recovery Policy

Allow OPAL Hard Drive SID Authentication



HP Computer Setup

Item Specific Help

1. Save/Restore GPT of System Hard Drive Enabling this feature will save the GUID Partition table (GPT) of the system Hard Drive. If the GPT is subsequently changed the user will he prompted to choose whether to restore GPT.

Smart Cover

Cover Removal Sensor





HP Computer Setup

Item Specific Help

Cover Removal Sensor
 Choose one of thve available options.
 Click on the field to see the options.

Hard Drive Utilities

Save/Restore MBR of the system hard drive is only available with drives that have a Master Boot Record.

Save/Restore GPT of System Hard Drive **1**

Boot Sector (MBR/GPT) Recovery Policy

Allow OPAL Hard Drive SID Authentication



HP Computer Setup

Item Specific Help

1. Save/Restore GPT of System Hard Drive Enabling this feature will save the GUID Partition table (GPT) of the system Hard Drive. If the GPT is subsequently changed the user will he prompted to choose whether to restore GPT.

Select a Drive



HP Computer Setup

Item Specific Help	

Select a Drive



HP Computer Setup

Item Specific Help	

1

DriveLock Security Options

Automatic Drivelock

2



HP Computer Setup

Item Specific Help

1. Set DriveLock Master Password

Sets the drive's Master password, but it does not enable DriveLock.

2. Enable DriveLock

Sets the drive's User password and enables DriveLock.



Set DriveLock Master Password

Please exercise caution when using DriveLock. Losing the passwords will render a drive permaneently unusable.

Please be aware these settings take place immediately: save not necessary.

Enter DriveLock Master Password.



Set DriveLock User Password

Please exercise caution when using DriveLock. Losing the passwords will render a drive permaneently unusable.

Please be aware these settings take place immediately: save not necessary.

Enter DriveLock User Password.



Select a Drive

SATA1: ST2000LX001-1RG174-SSHD (Drive is Locked)



HP Computer Setup

Item Specific Help	

Secure Erase

This operation will erase all data on the hard drive. Please make sure the computer is connected to AC power during this process.



Are you sure you want to restore security settings to default?



Item Specific Help

3

1

Remote HP PC Hardware Diagnostics

2



HP Computer Setup

Item Specific Help

1. Port Options

Enable/Disable Port Settings

2. Settings

Set the configuration for Remote HP PC Hardware Diagnostics, including the URLs used for download and upload, the scheduled execution frequency, etc.

3. Execute Remote HP PC Harware Diagnostics

Immediate execution of Remote HP PC Hardware Diagnostics based on the configurations in Settings option. Note that any unsaved BIOS settings are lost.

Display Language

Select Language

Select Keyboard Layout



Item Specific Help

Scheduled Power-On

Sunday	
Monday	
Tuesday	
Wednesday	
Thursday	
Friday	
Saturday	
Hour	0
Minute	0



Item Specific Help

Boot Options

Startup Delay (sec.)

Fast Boot USB Storage Boot Network (PXE) Boot Power On When AC Detected Power On When Lid is Opened Prompt on Battery Errors Prompt on Memory Size Change Prompt on Fixed Storage Change Audio Alerts During Boot NumLock on at Boot

M.2 SSD 1: Windows Boot Manager USB: SATA1: ST2000LX001-1RG174-SSHD

Legacy Boot Order

USB:

SATA1: ST2000LX001-1RG174-SSHD M.2 SSD 1: KXG50ZNV1T02 TOSHIBA-Z7NS10LJTP8T



Item Specific Help

HP Sure Recover

HP Sure Recover1Recover from Network2Recover after Boot Failure3

Recover Agent

URL:

Username:

Provisioning Version:

ftp://ftp.hp.com/pub/pcbios/CPR

0

Recovery Image
URL:
Username:
Provisioning Version:

0



Item Specific Help

1. HP Sure Recover

If this setting is enabled, the system firmware will honor local and remote requests to reinstall the OS. If it is disabled, all requests to reinstall the OS will be ignored.

2. Recover from Network

If this setting is enabled, the system firmware will obtain the recovery agent from the network. Otherwise, the system firmware will obtain the recovery agent from a local drive.

3. Recover after Boot Failure

If this setting is enabled and no bootable UEFI OS is found, the system firmware will launch HP Sure Recover.

Secure Boot Configuration

Configure Legacy Support and Secure Boot

Secure Boot Key Management Import Custom Secure Boot keys Clear Secure Boot keys Reset Secure Boot keys to factory defaults Enable MS UEFI CA key

Access to the above settings requires Sure Start Secure Boot Keys Protection to be disabled

Ready BIOS for Device Guard Use

Requires BIOS Administrator Password to be configured and Secure Boot to be enabled.



Item Specific Help

System Options

Startup Delay (sec.)

Configure Storage Controller for RAID

Configure Storage Controller for Intel Optane

Turbo-boost

Hyperthreading **1**

Multi-processor

Hyperthreading and Multi-processor has been enabled and grayed out because Deep sleep is set to On.

Virtualization Technology (VTx)
Virtualization Technology for Directed I/O (VTd)
POST Prompt for RAID Configuration
Fast Charge
USB Type-C Connector System Software Interface (UCSI)
Swap Fn and Ctrl (Keys)
Launch Hotkeys without Fn Keypress
Dynamic Platform and Thermal Framework (DPTF)



HP Computer Setup

Item Specific Help 1. Hyperthreading Permits the user to control the processor capability

Built-In Device Options

Graphics

Audio Device

Microphone

Internal Speakers

Headphone Output

Lock Wireless Output Wireless Network Device (WLAN)

Bluetooth

HP LAN-Wireless Protection

LAN/WLAN Auto Switching Wake On LAN Fan Always on while on AC Power Boost Converter

Backlit keyboard timeout

Integrated Camera Fingerprint Device Touch Device

Disable battery on next shutdown



Item Specific Help

Port Options

Media Card Reader Left USB Ports Left USB Port 1 Left USB Port 2 USB Legacy Port Charging **Disable Charging Port** 10 in sleep/of if battery below (%): Thunderbolt Type-C Ports Thunderbolt Mode Require BIOS PW to change Thunderbolt Security Level Thunderbolt Security Level Native PCIe Hot Plug Thunderbolt S4 Boot is disable due to Native PCIe Hot plug enabled M.2 SSD 1

M.2 SSD 2

SATA 1

Restrict USB Devices



Item Specific Help			

Option ROM Launch Policy

Configure Option ROM Launch Policy





- Item Specific Help
- Configure Option ROM Launch Policy
 Configure the launching of the EFI versus
 Legacy Option ROMs

Power Management Options

Runtime Power Management

Extended Idle Power States

Wake when Lid is Opened

Wake when AC is Detected

Wake on USB

Power Control



Item Specific Help			

3

4

Remote Management Options

Active Management (AMT)

USB Key Provisioning Support

USB Redirection Support

Unconfigure AMT on next boot

SOL Terminal Emulation Mode

Show Unconfigure ME Confirmaiton Prompt

2

Verbose Boot Messages

Watchdog Timer

OS Watchdog Timer (min.)

BIOS Watchdog Timer (min.)

CIRA Timeout (min.)



HP Computer Setup

Item Specific Help 1. Unconfigure AMT on next boot Perform AMT/ME unconfigure without password operation. 2. Watchdog Timer Enable/Disable watchDog Timer. 3. OS Watchdog Timer (min.) Set OS Watchdog timer (min.) 4. BIOS Watchdog Timer (min.) Set BIOS Watchdog timer (min.)

Settings





1



HP Computer Setup

Item Specific Help **1. Diagnostics Download URL** Select between HP server URL and a custom server URL. 2. Custom Download Address Configure a URL for HP PC Hardware Diagnostics download. 3. Custom Upload Address Configure a URL for diagnostics logs upload. 4. Username Configure the username for uploading diagnostics logs to the server, if authentication is required. 5. Password Configure the password for uploading diagnostics logs to the server, if authentication is required. **6. Scheduled Execution** Enable/disable the scheduled execution of Remote HP PC Hardware Diagnostics. 7. Frequency Select the frequency for scheduled execution of Remote HP PC Hardware **Diagnostics**. 8. Execute On Next Boot Enable/disable the execution on next boot. The flag will be disabled after the diagnostics have run. 9. Last Execution Result

Display the results of the last Remote HP PC Hardware Diagnostics execution.



Item Specific Help			

Custom Upload URL

There is no Custom Upload URL configured. Type a new Custom Upload URL and press ENTER to save. Press ESC to CANCEL



Upload Server Username

There is no Username configured. Type a new Username and press ENTER to save. Press ESC to CANCEL



Upload Server Password

There is no Upload Server Password configured. Type a new Upload Server Password and press ENTER to save. Press ESC to CANCEL



	UEFI Drivers

This will restart the system into the 3rd Party Option ROM Management application. You can get to this application directly by pressing F3 during startup.



Item Specific Help				