

Interactive Part Locator

HP Chromebook 11 G8 EE

Welcome to the interactive part locator for the
HP Chromebook 11 G8 EE

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left

Right

Rear


Internal

Parts List

Front View



Left View

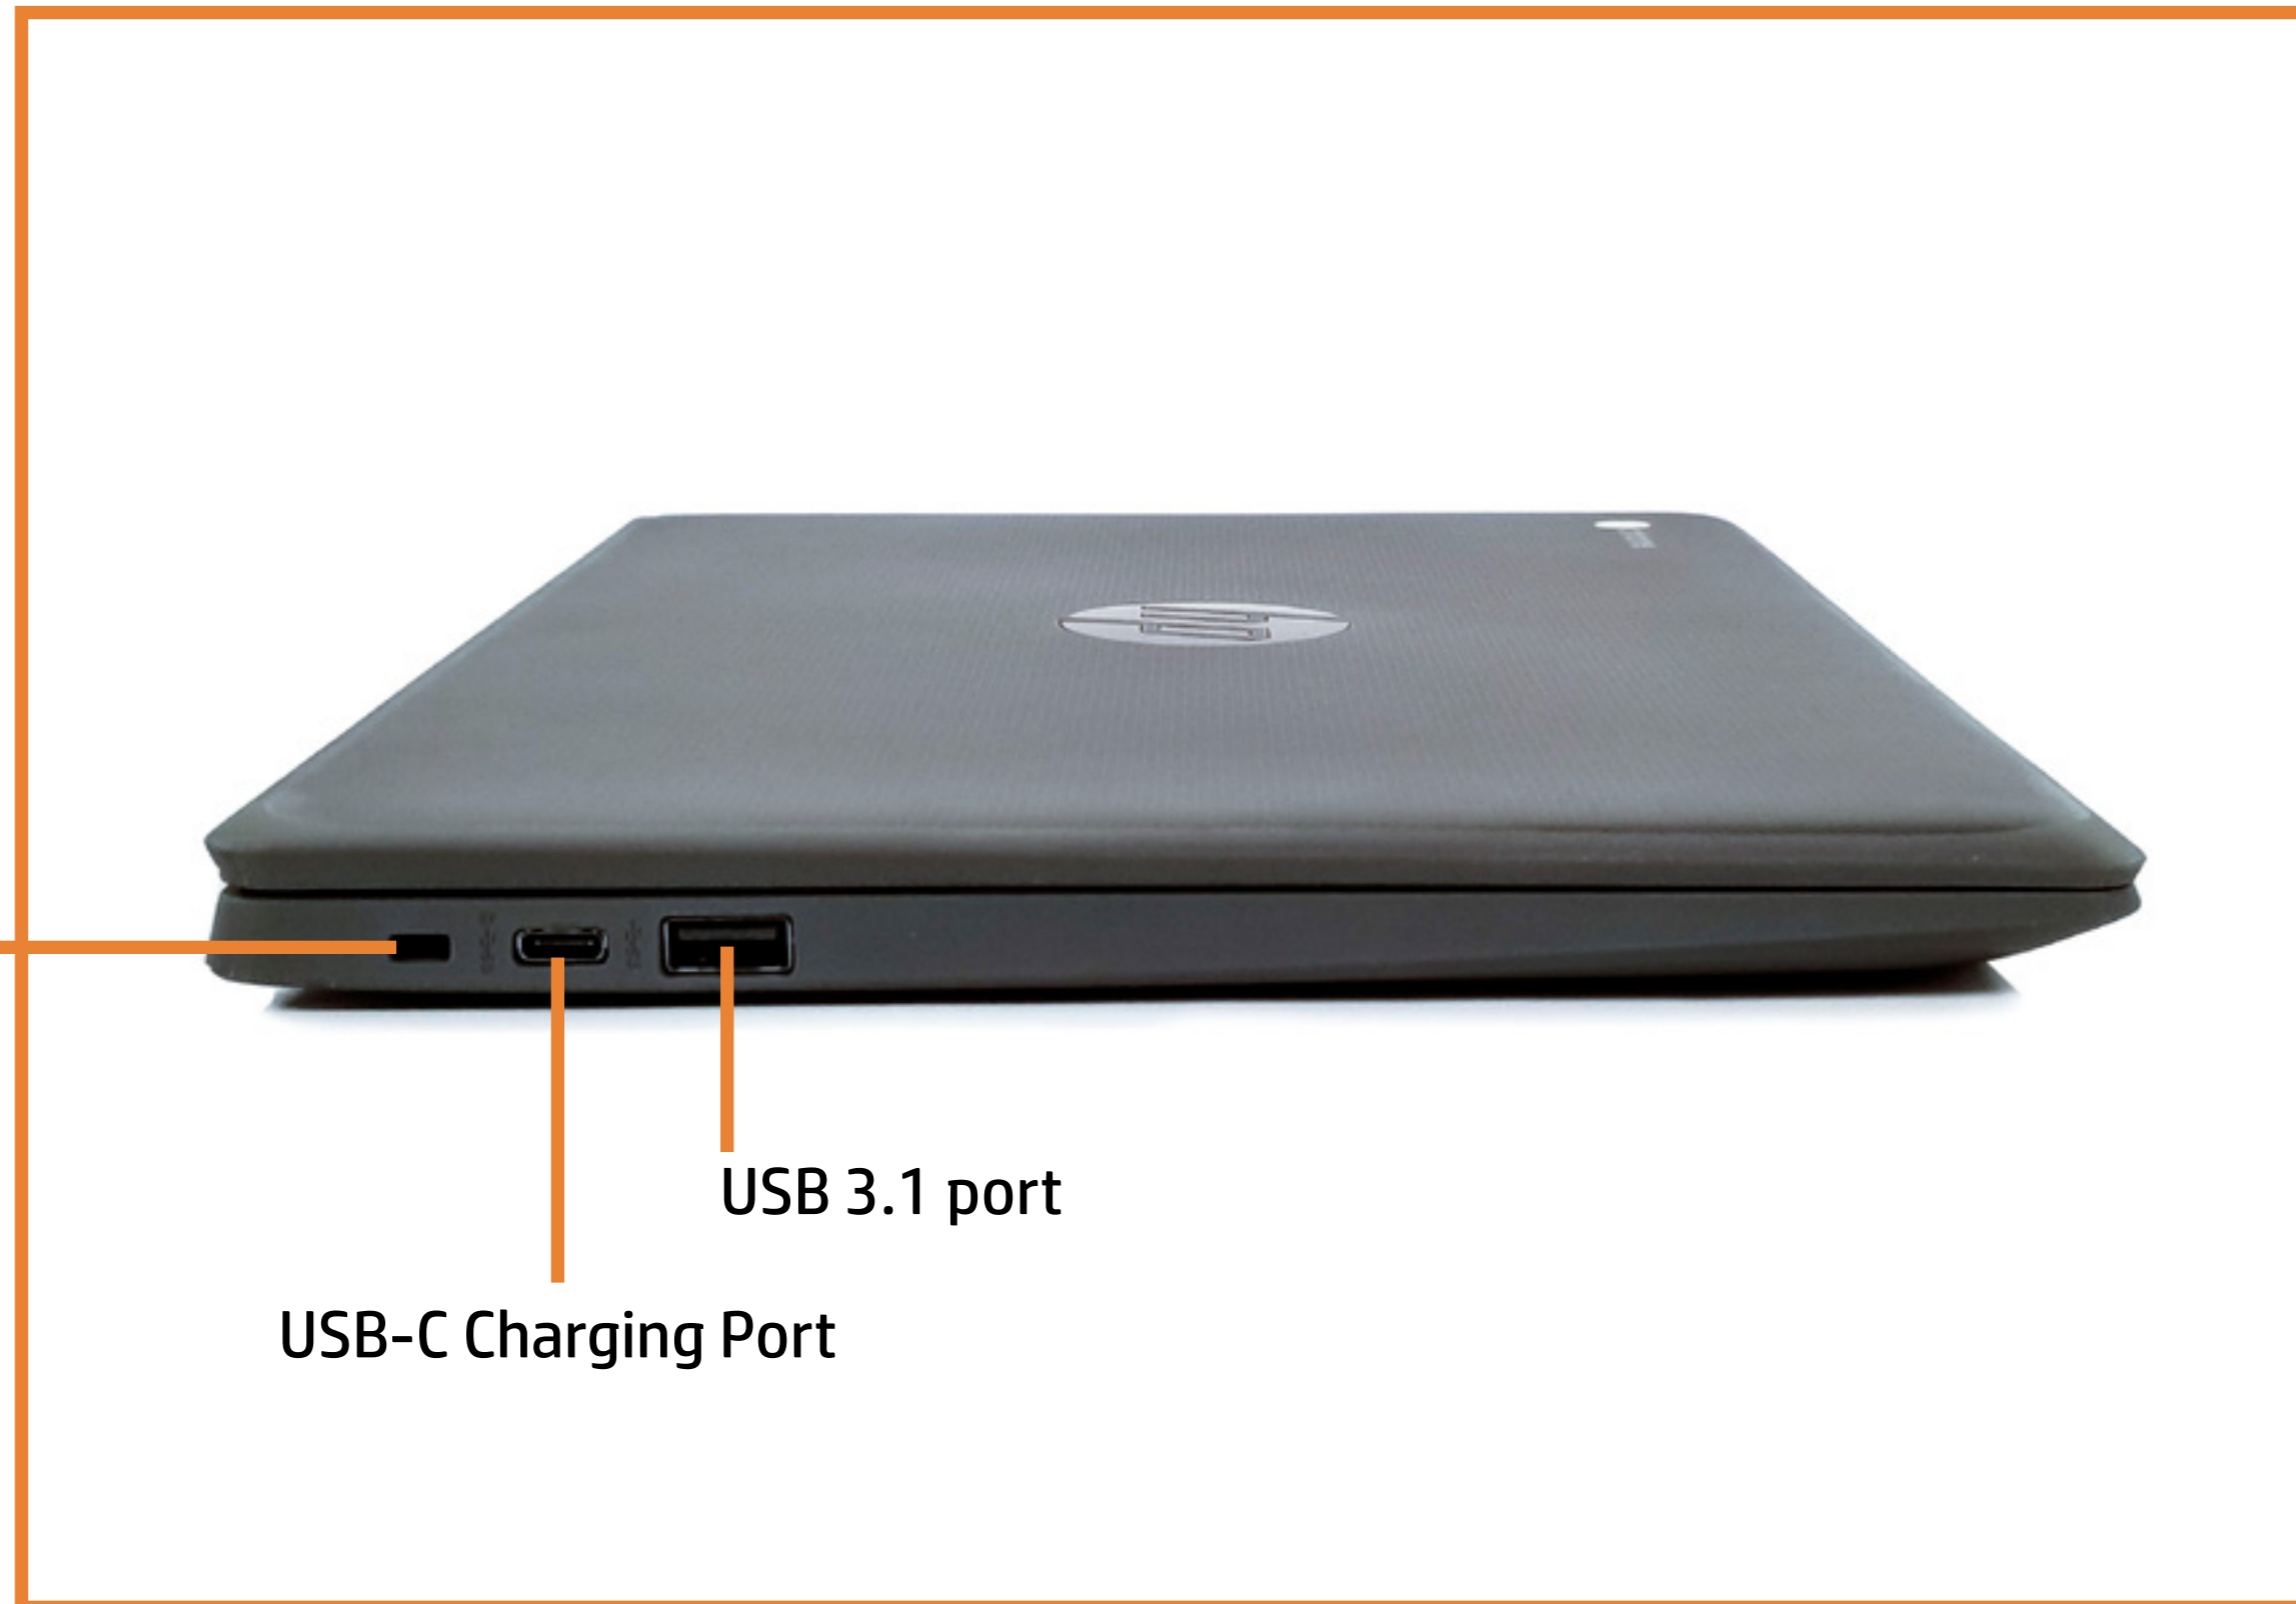


Security Lock Slot

USB-C Charging Port

USB 3.1 port

Right View

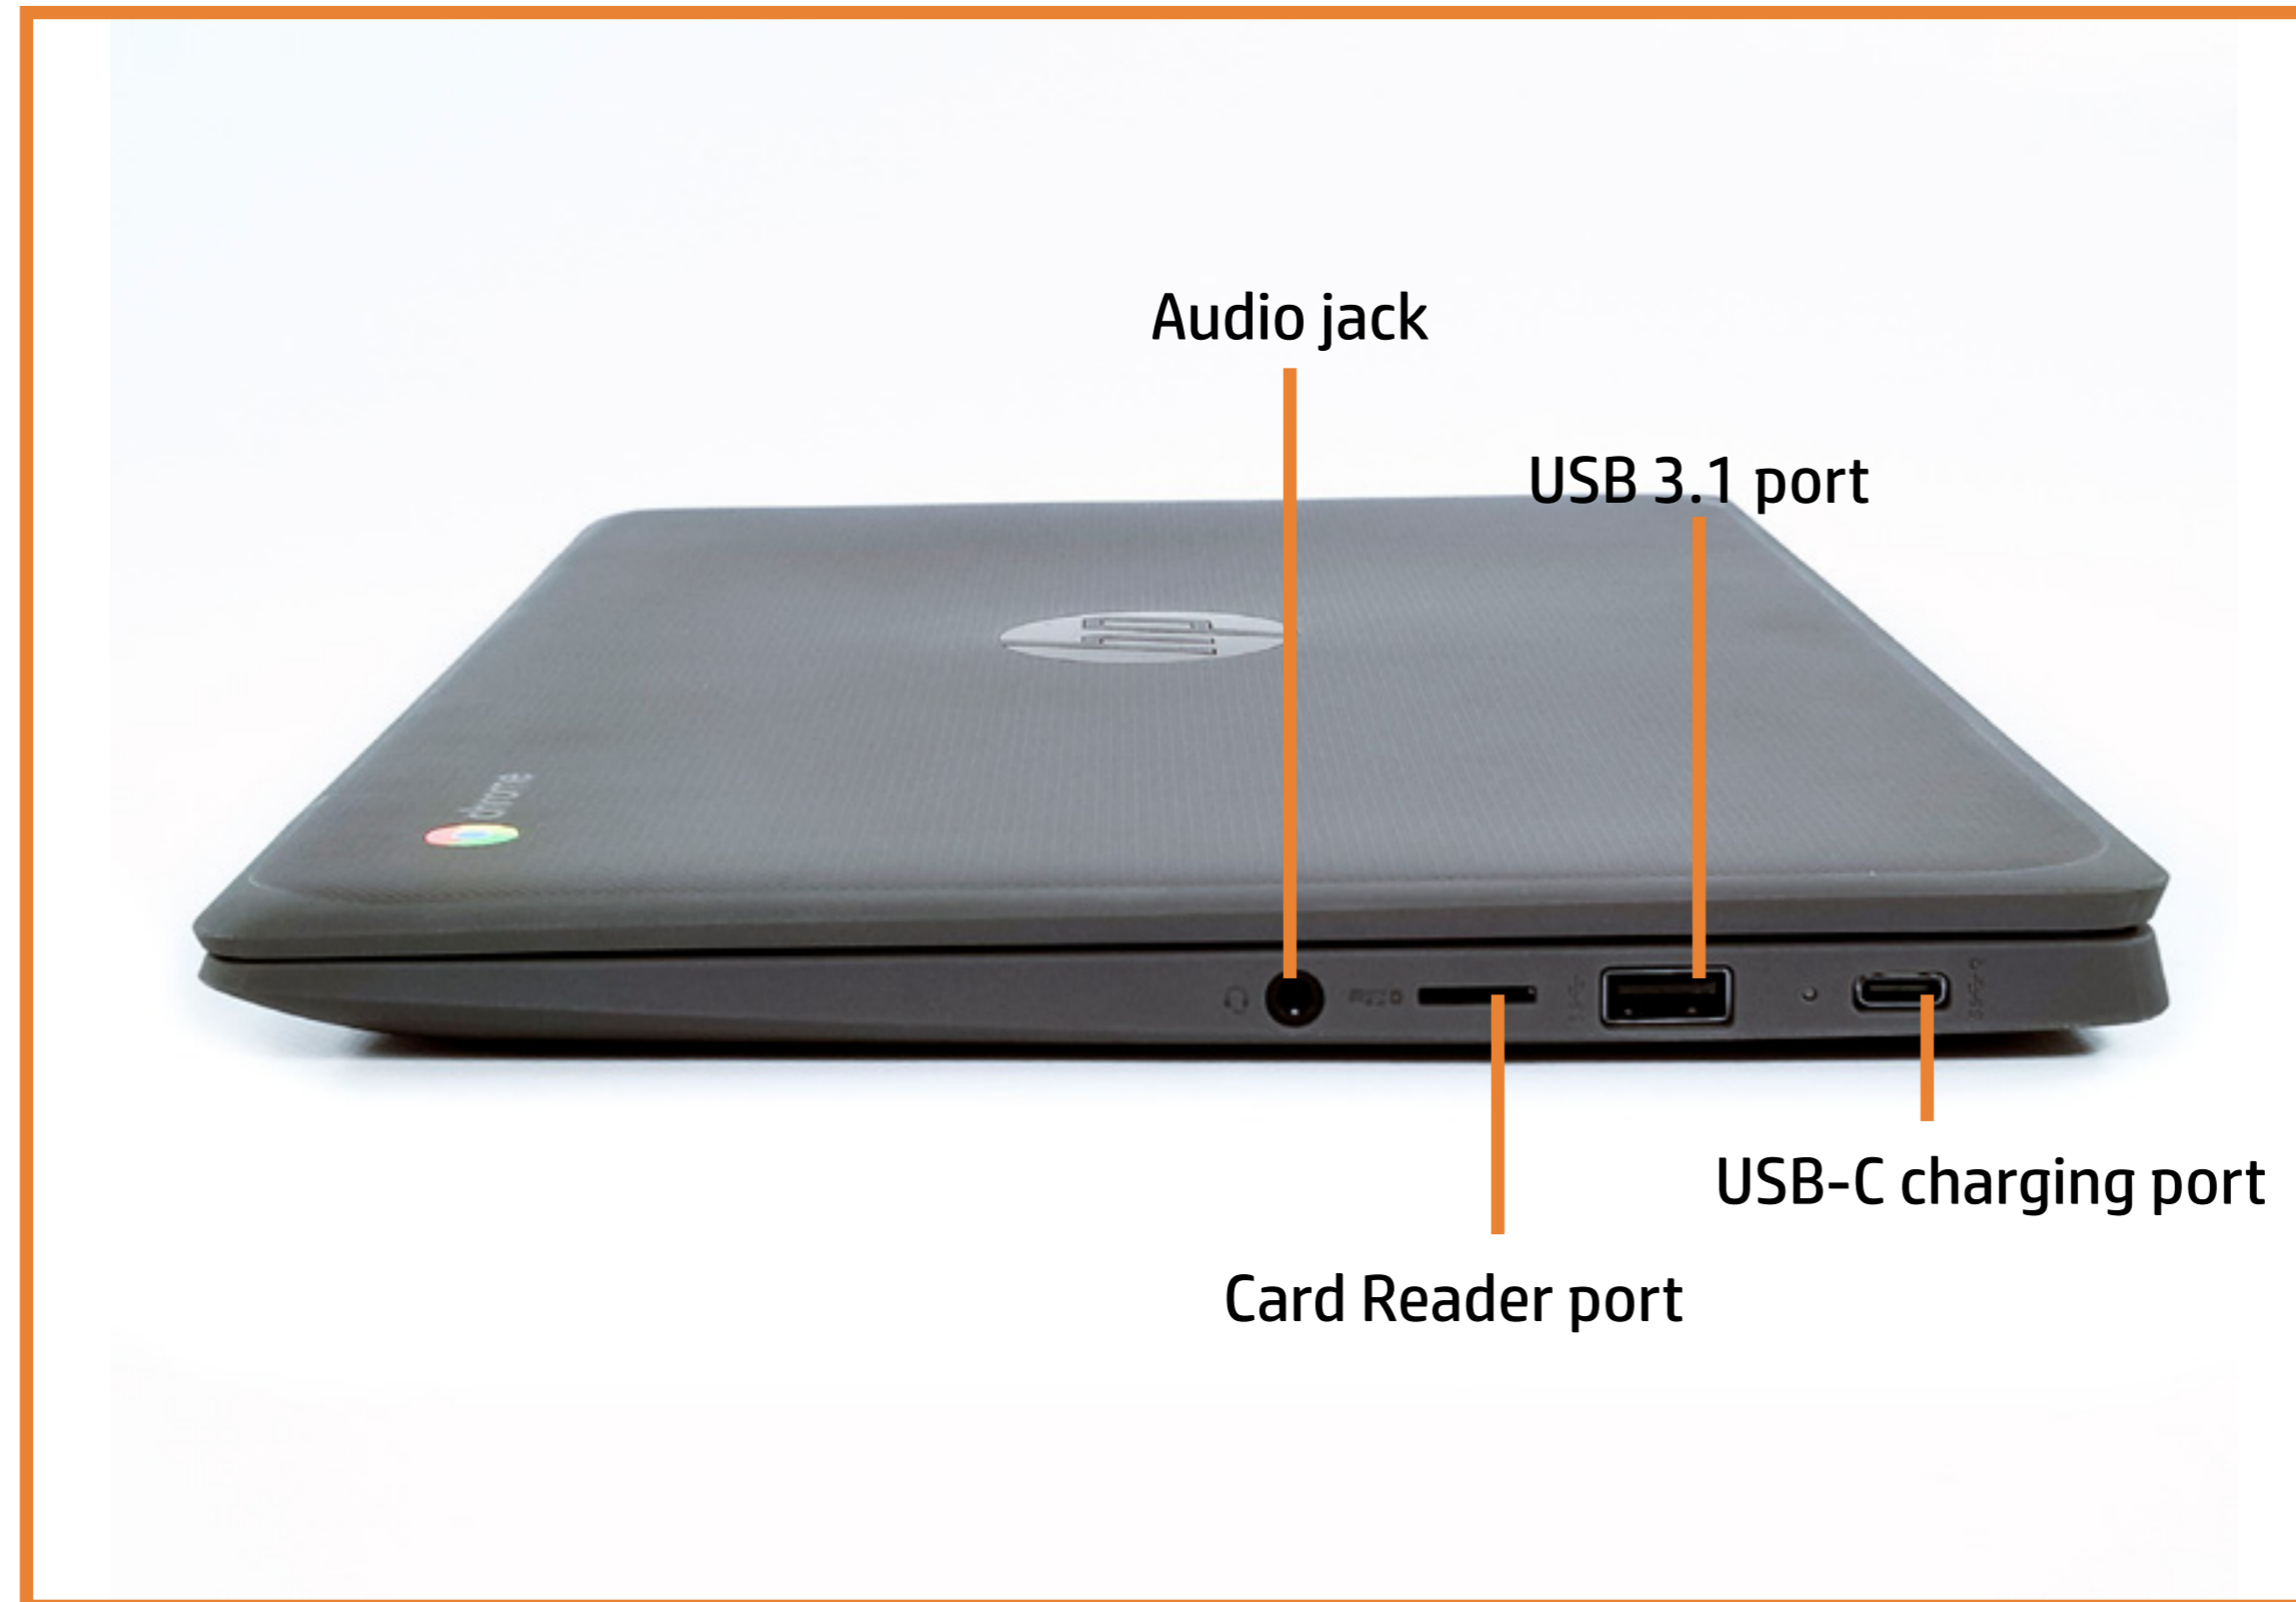

Rear View



Internal View 1

Wireless Module

USB/Power Button Board


Battery

Speakers

Motherboard



Internal View 2

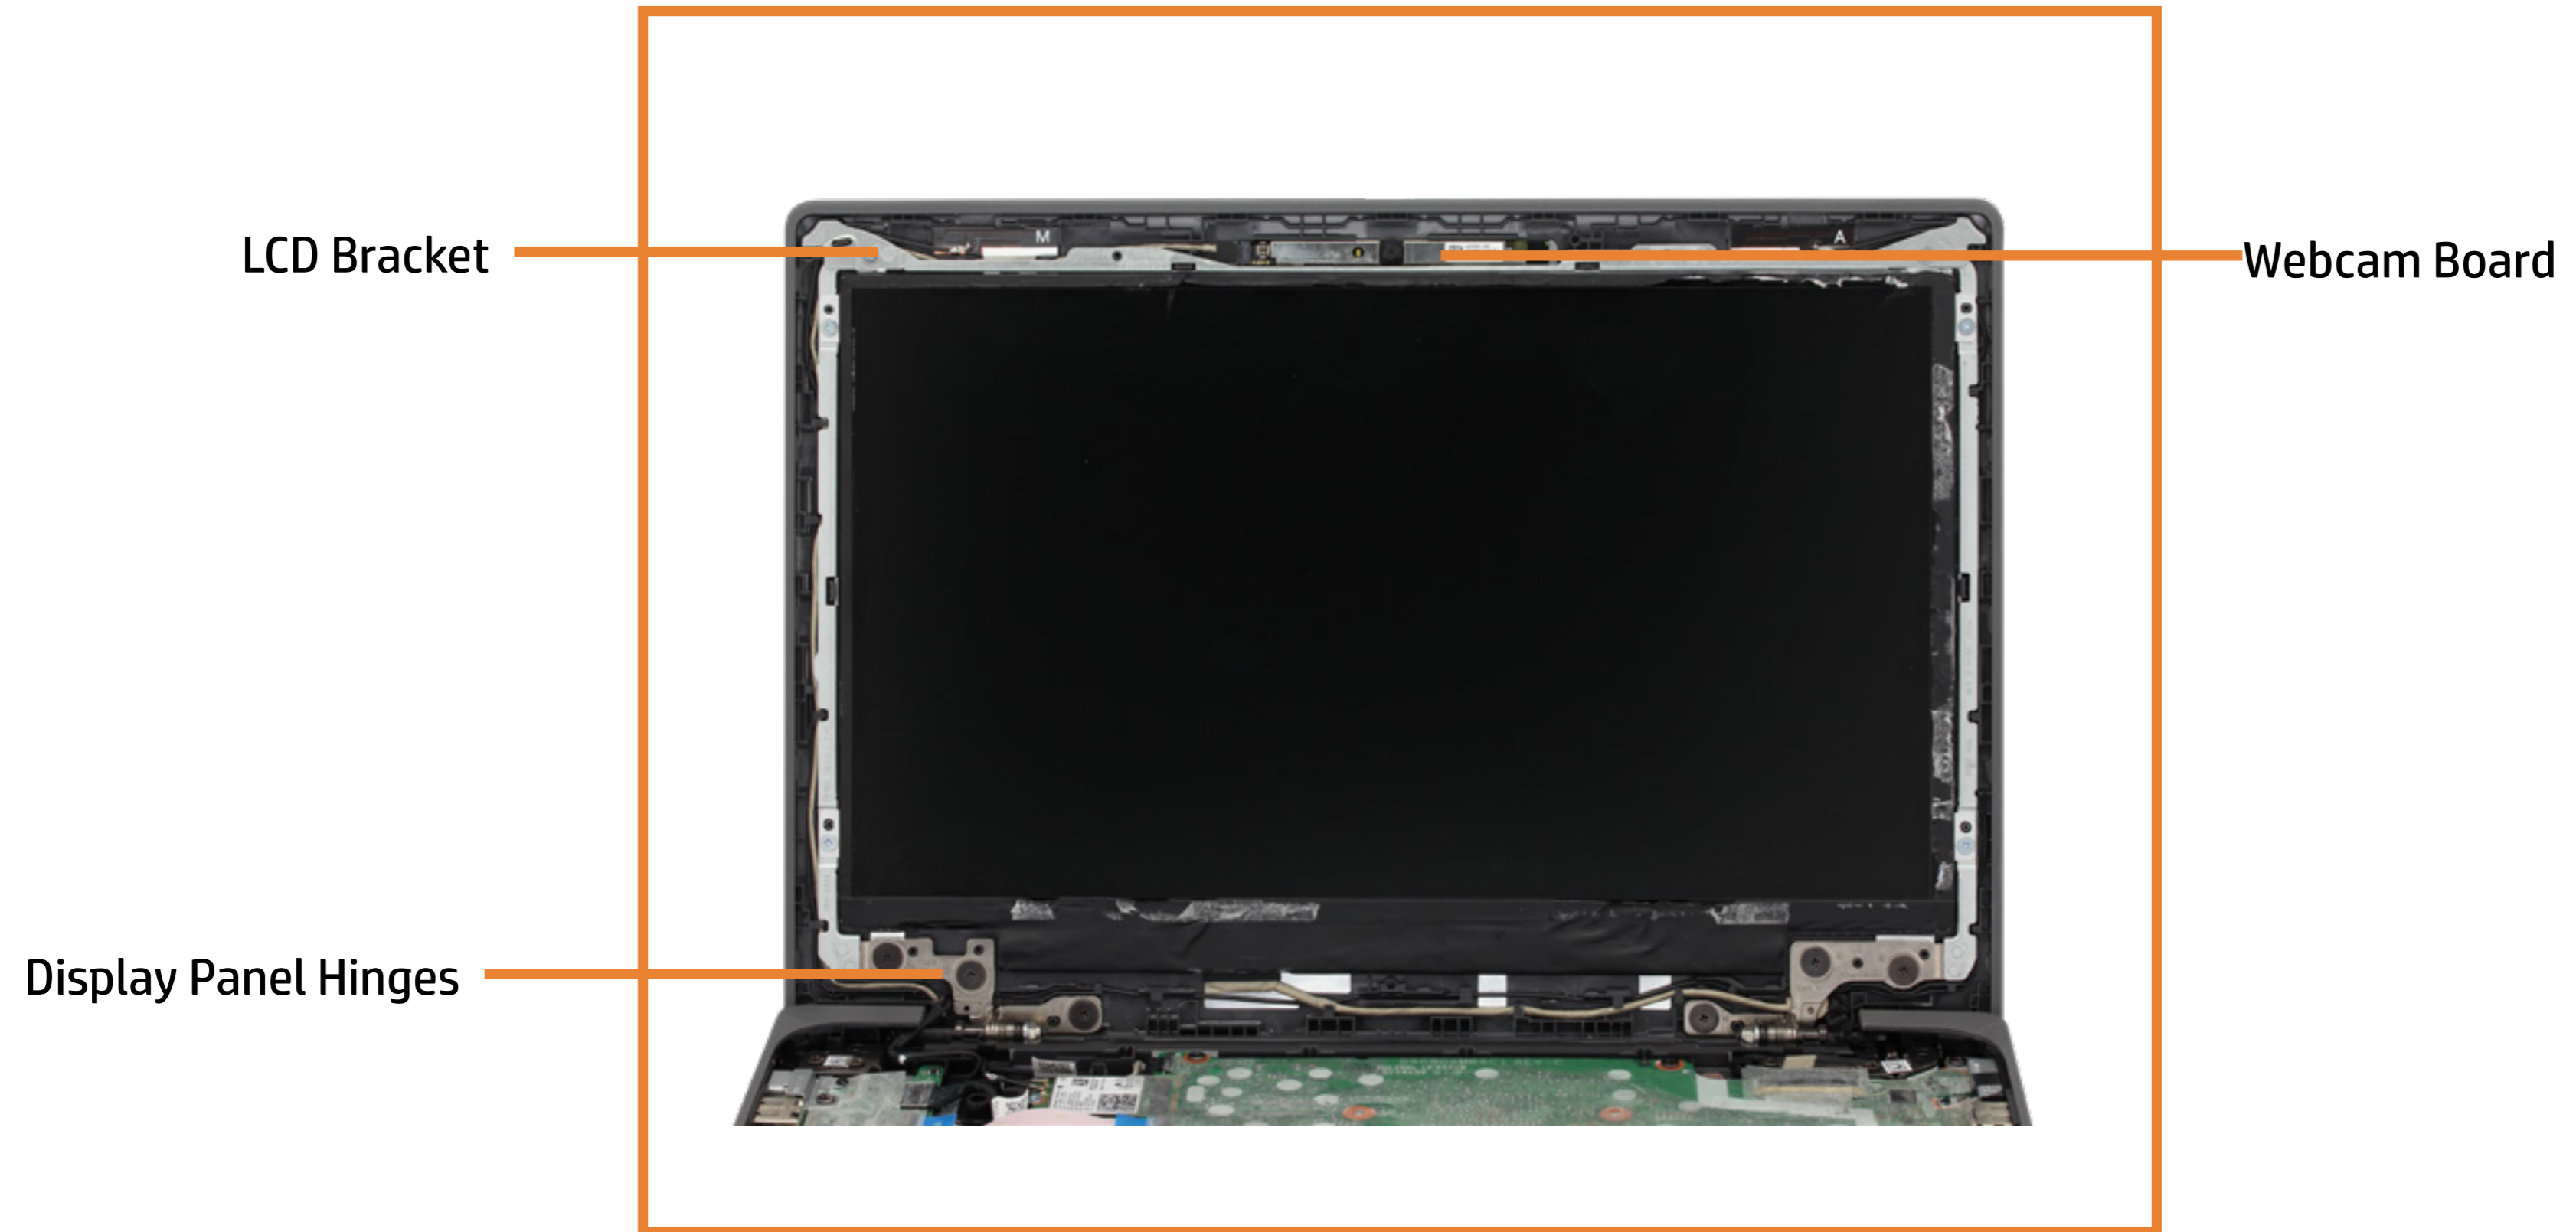


Top Cover

Top Cover



Touchpad Board

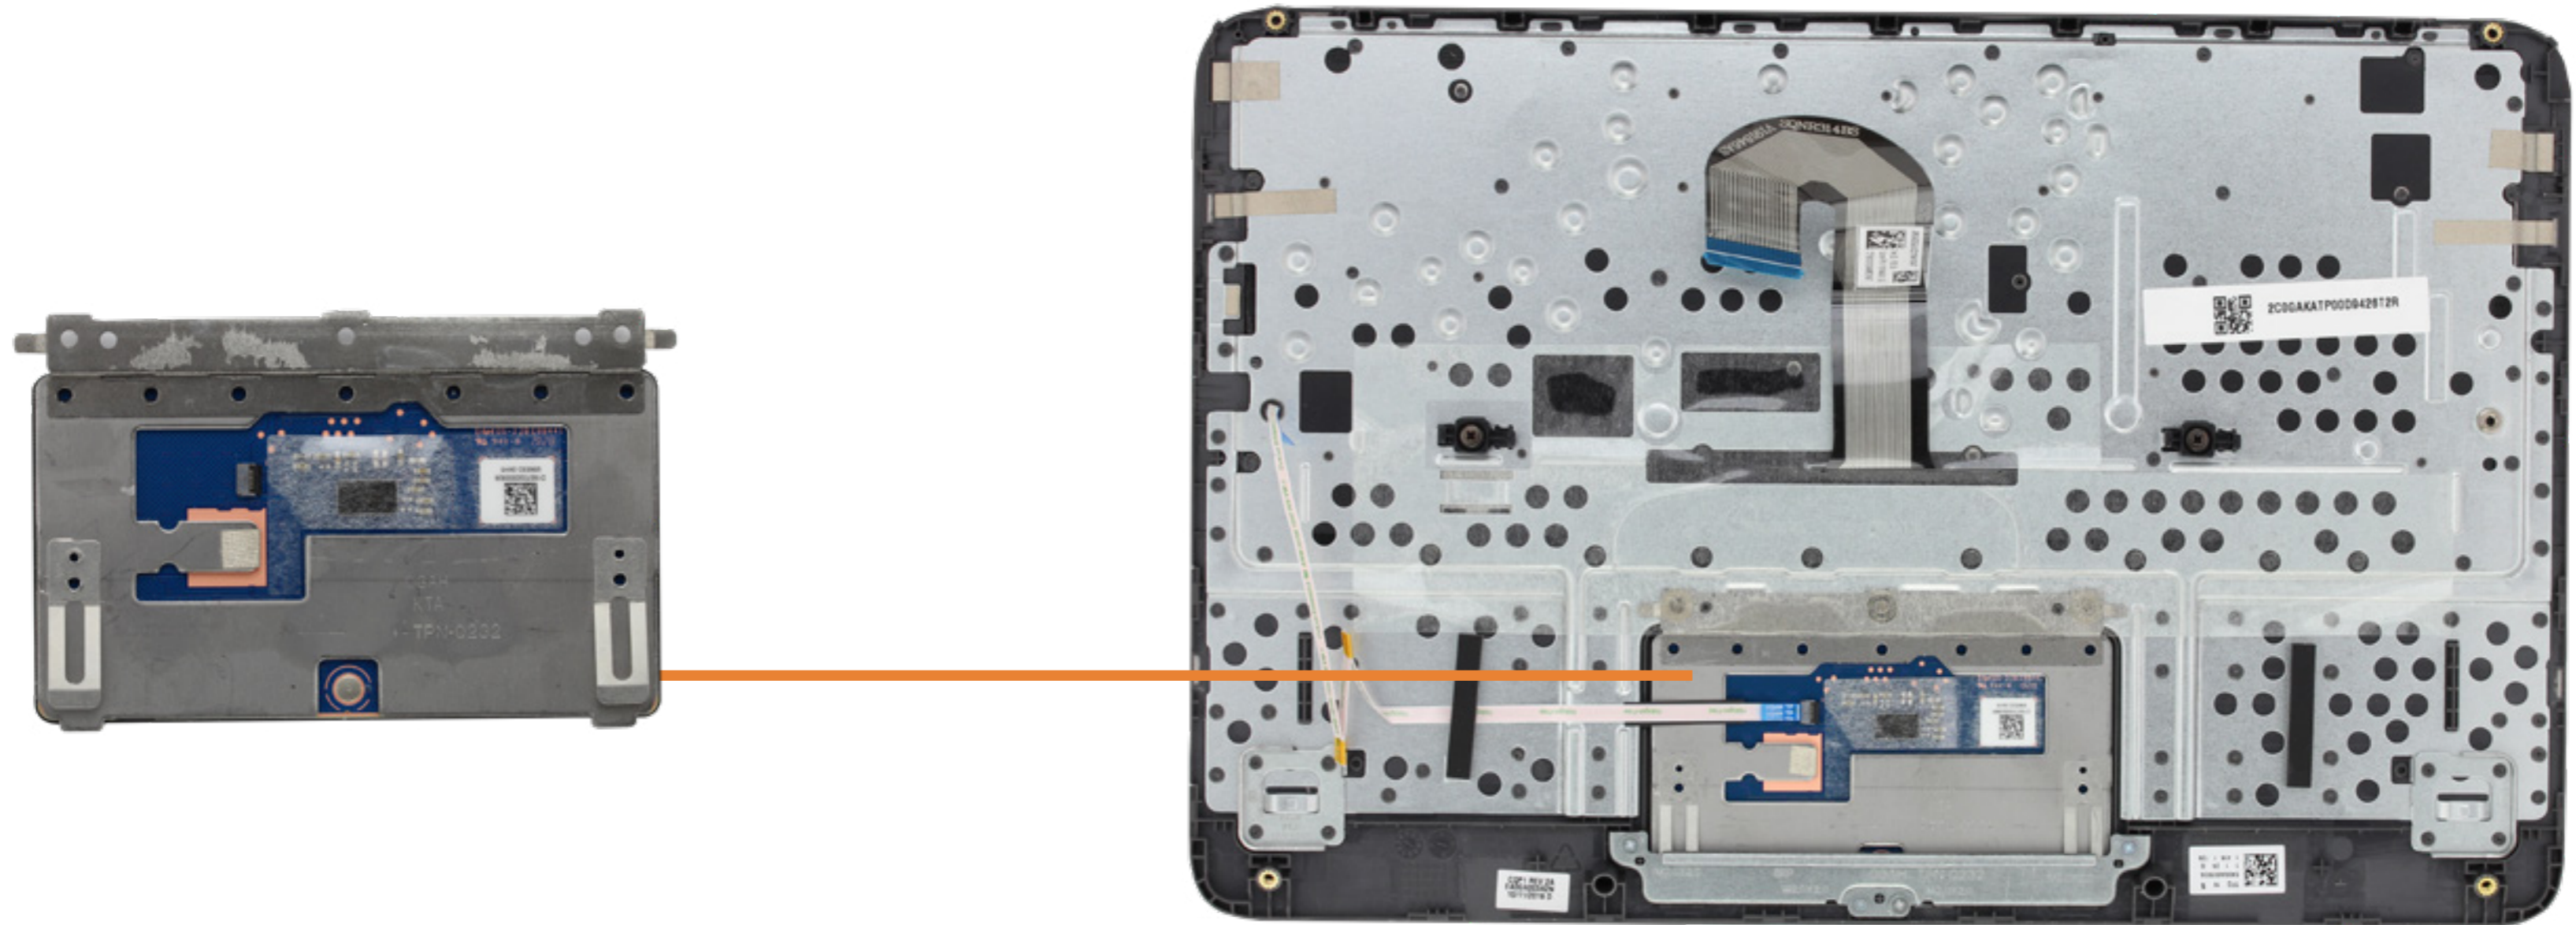


Display Bezel





Speakers




Battery

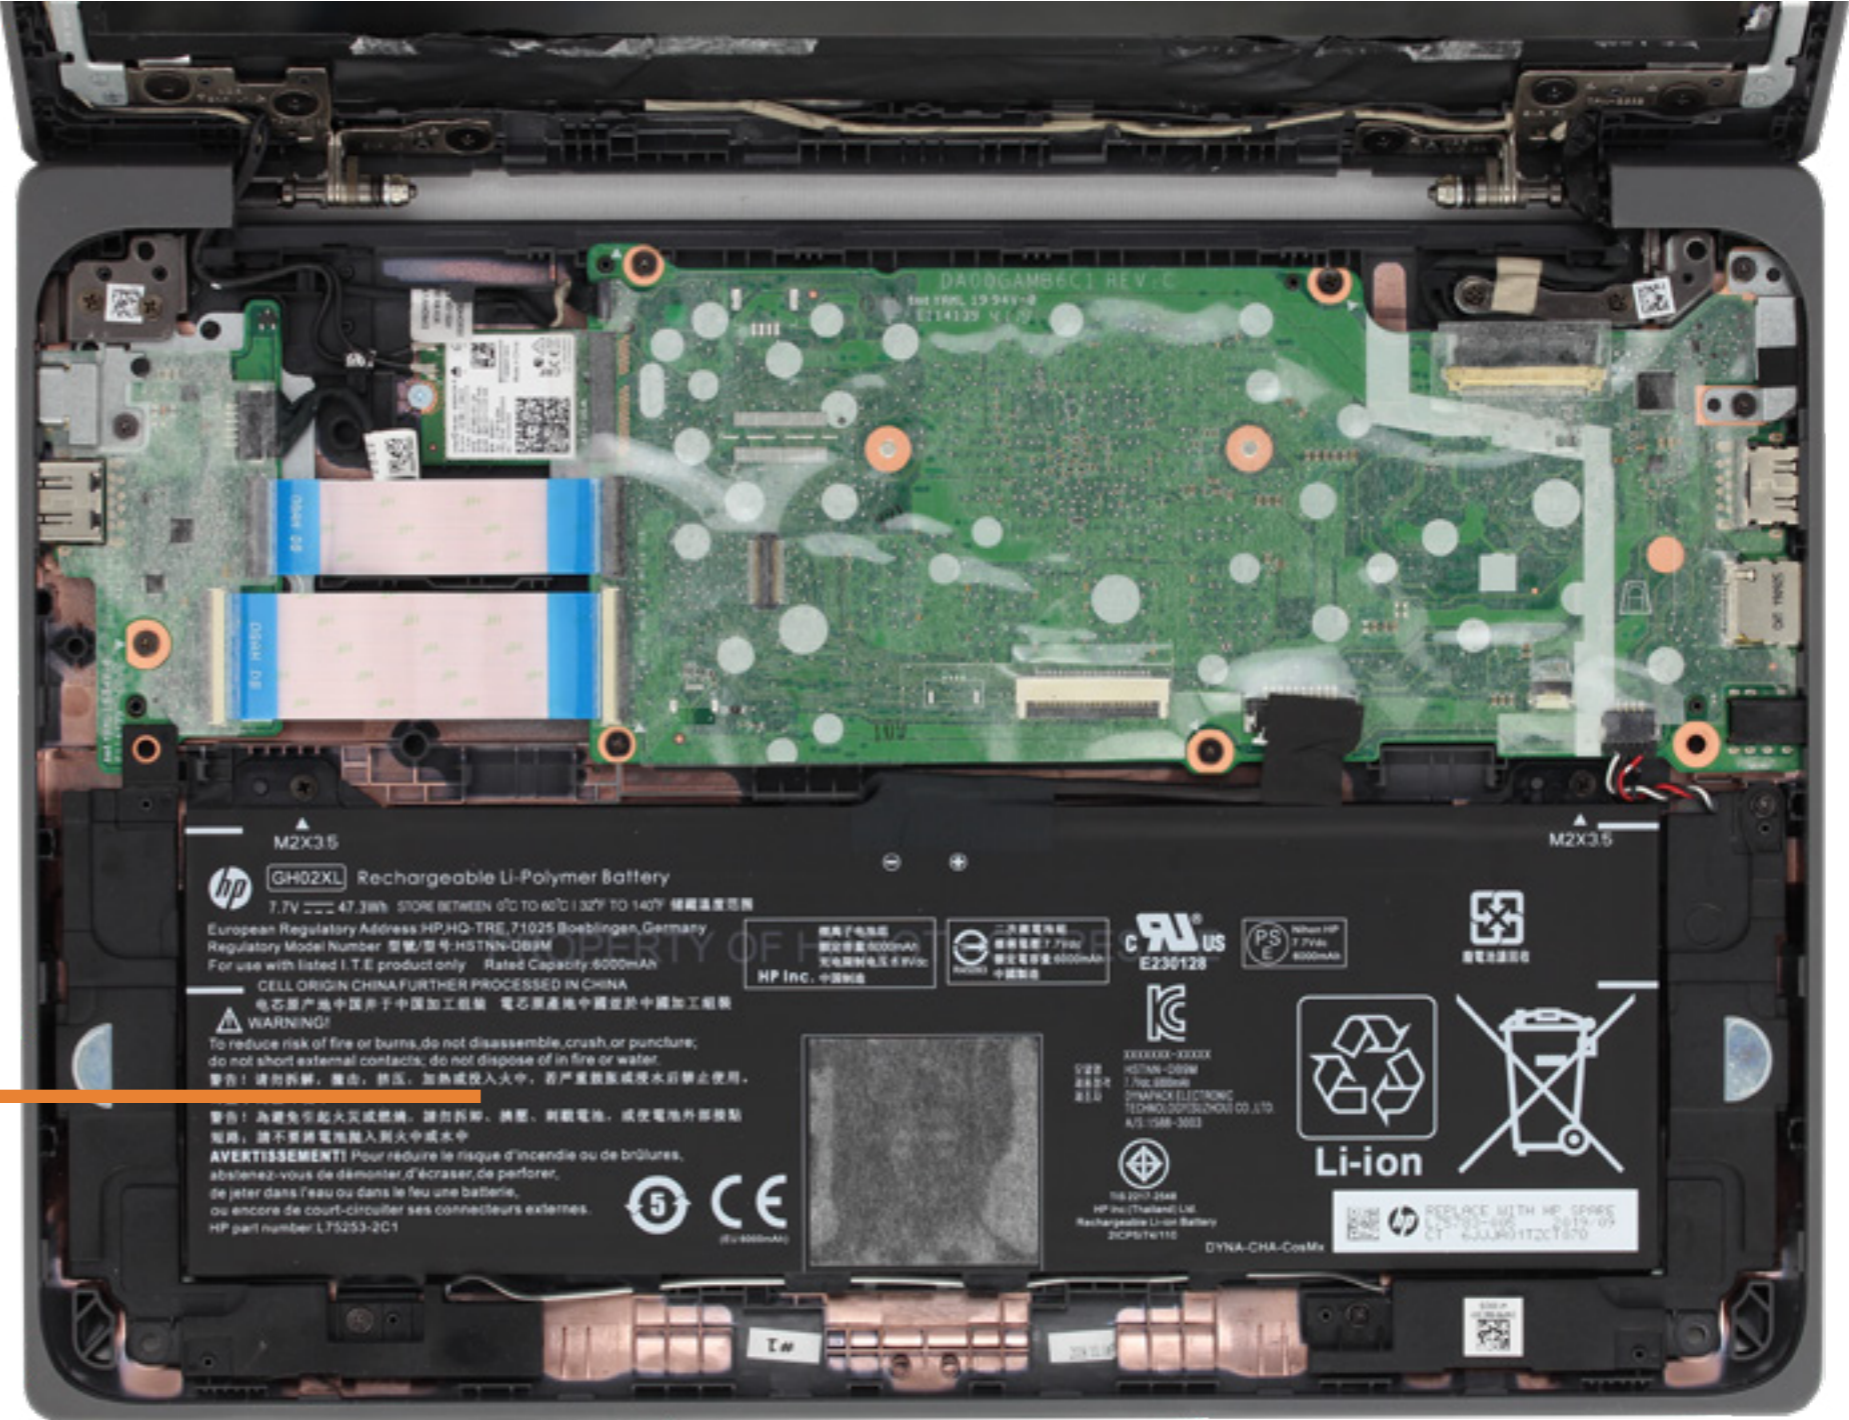


USB/Power Button Board

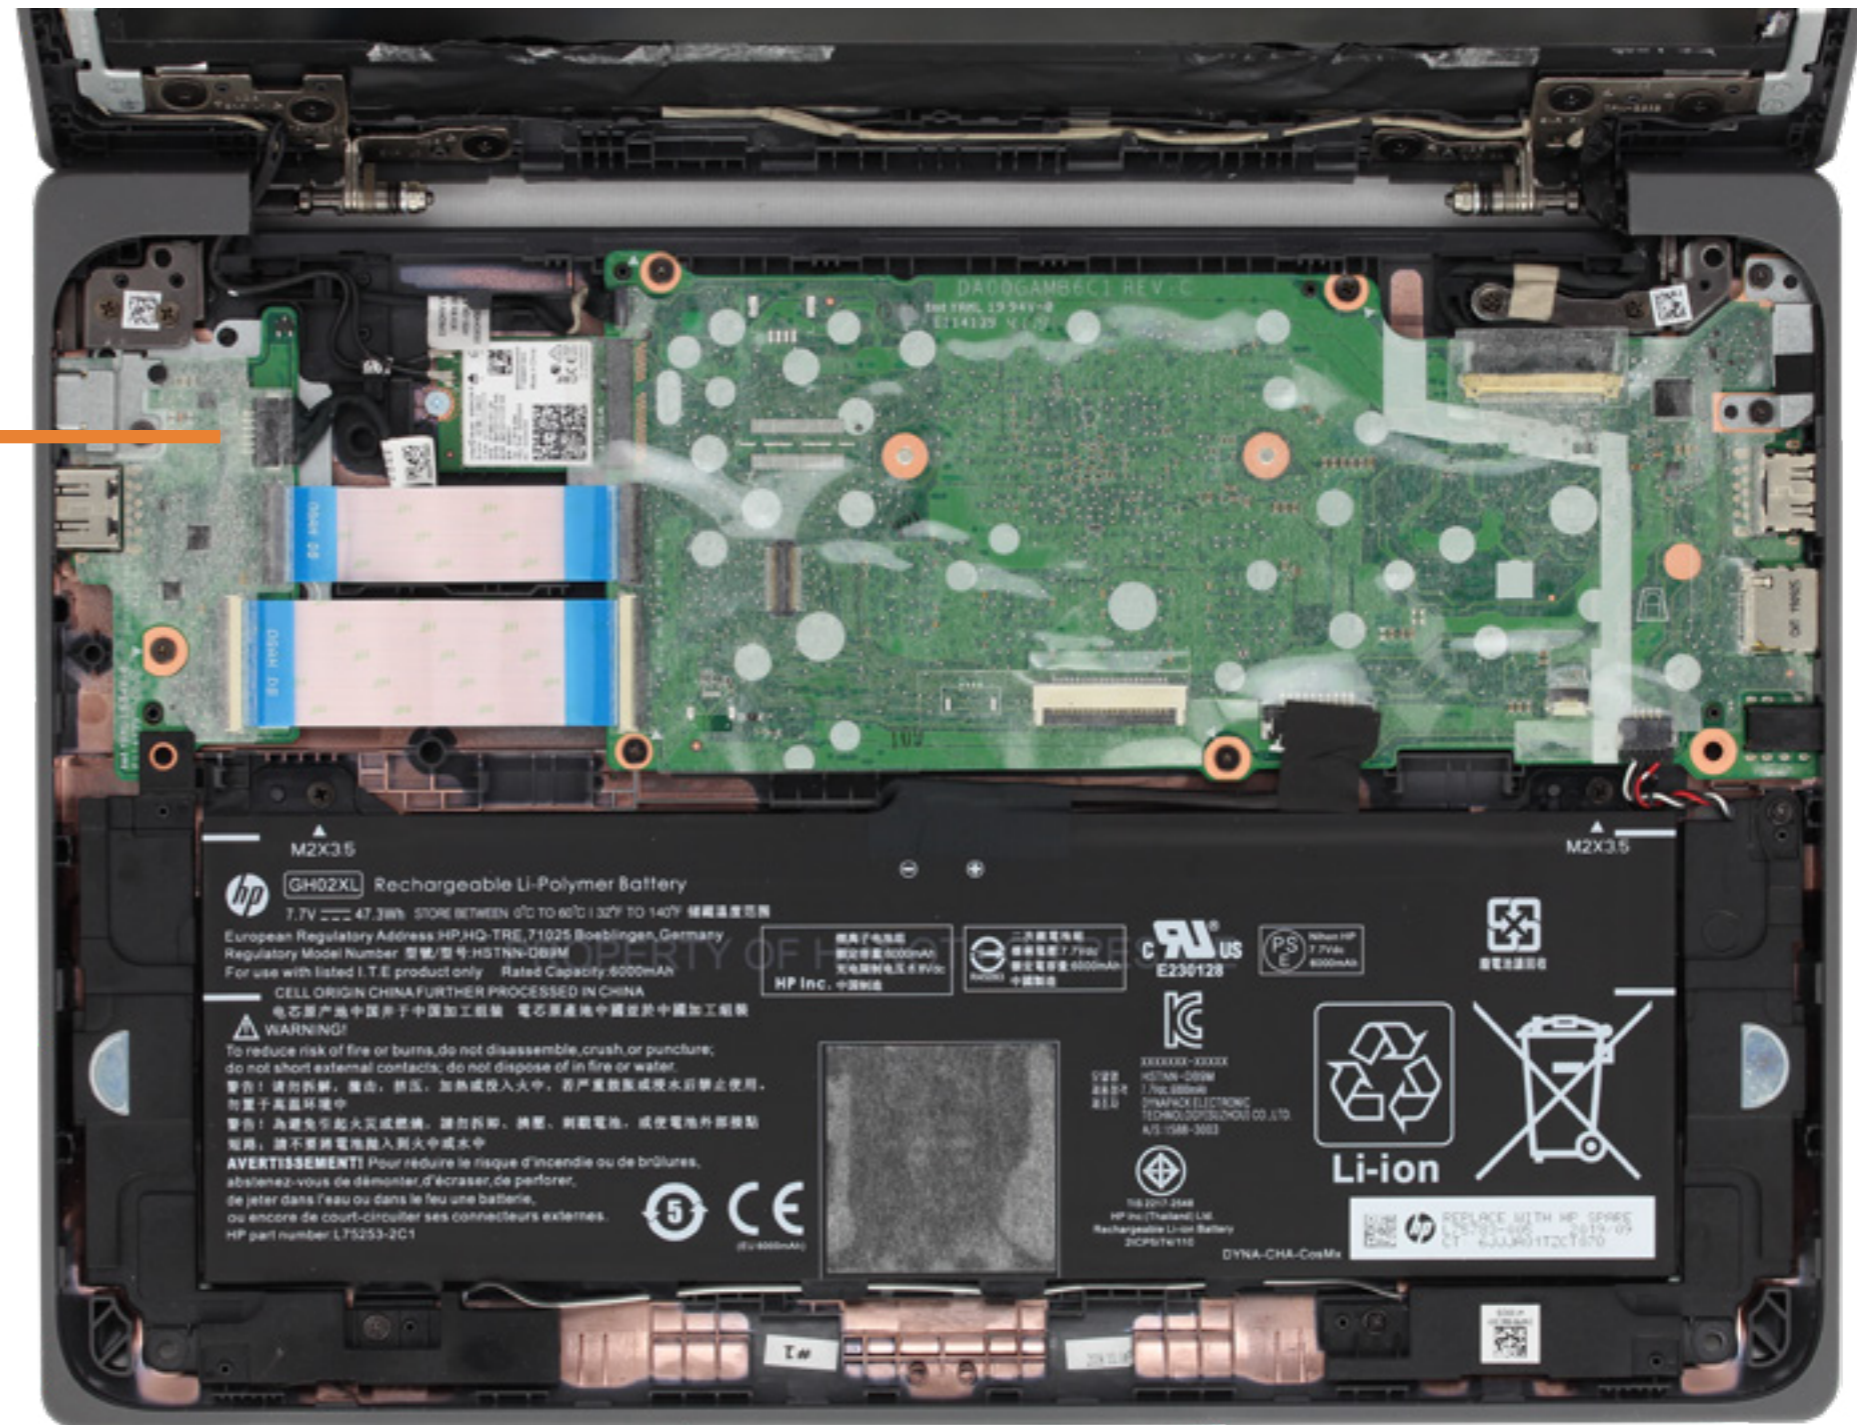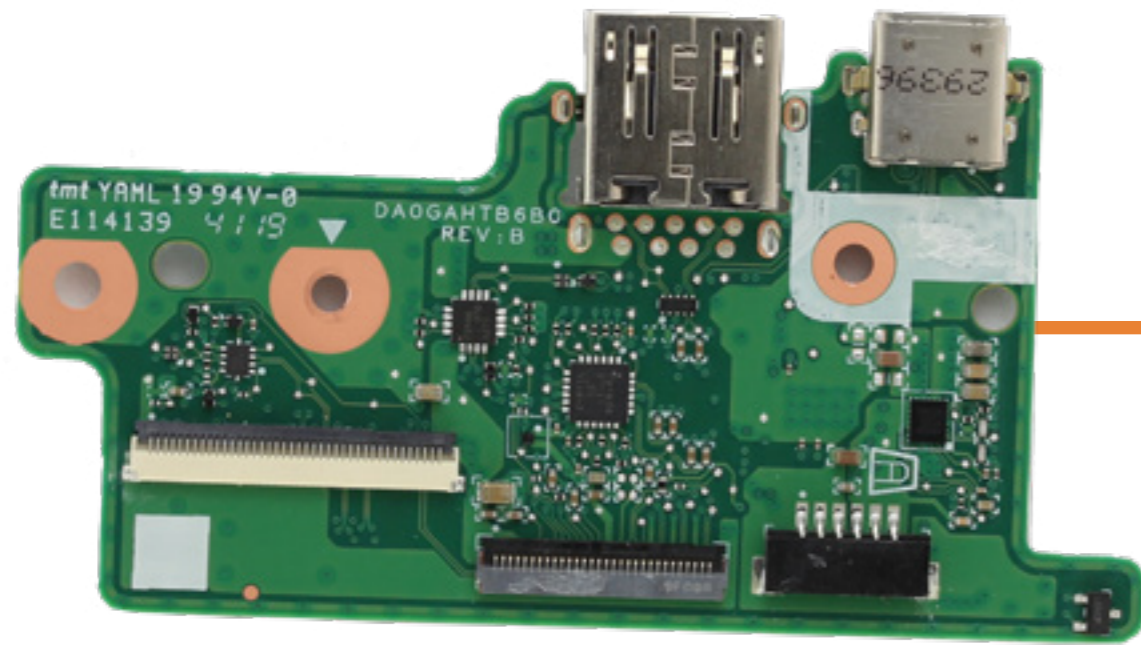

Motherboard

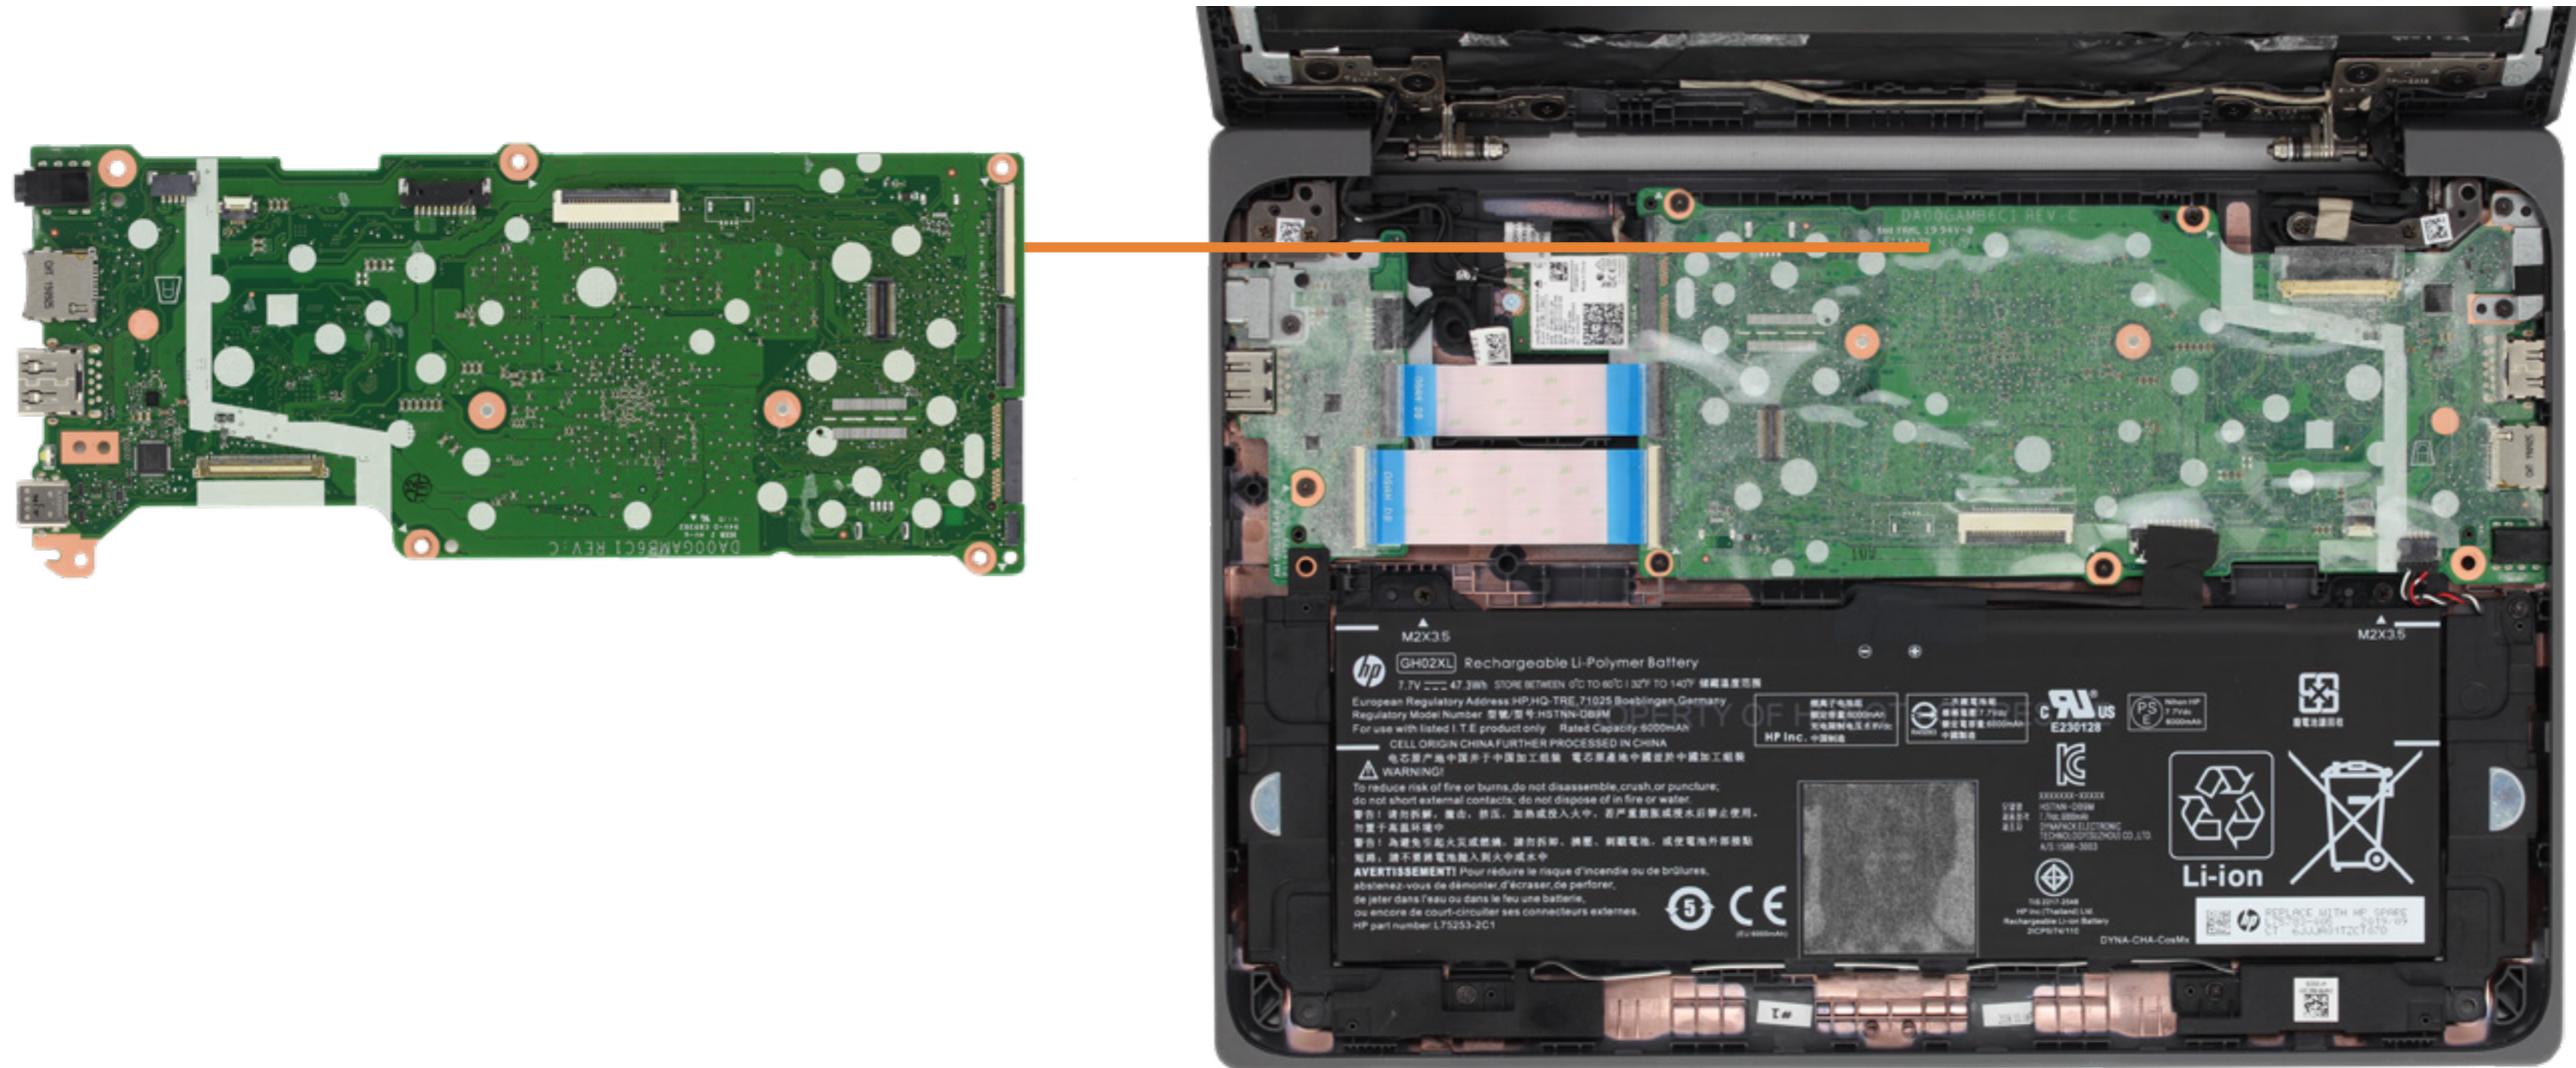


Display Panel

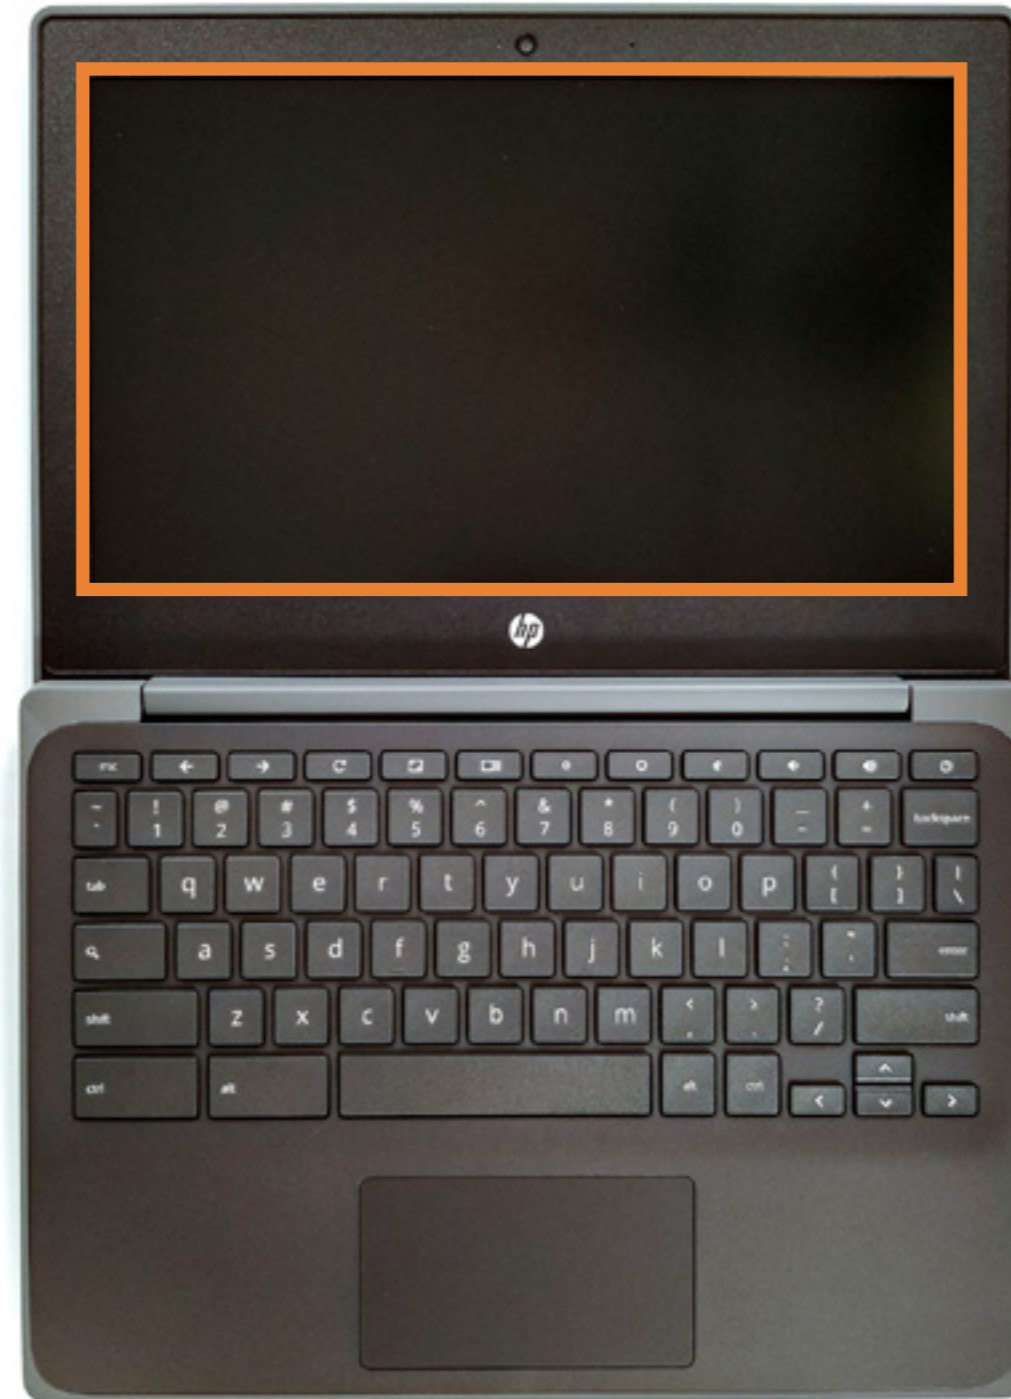


Webcam Board



Display Panel Hinges

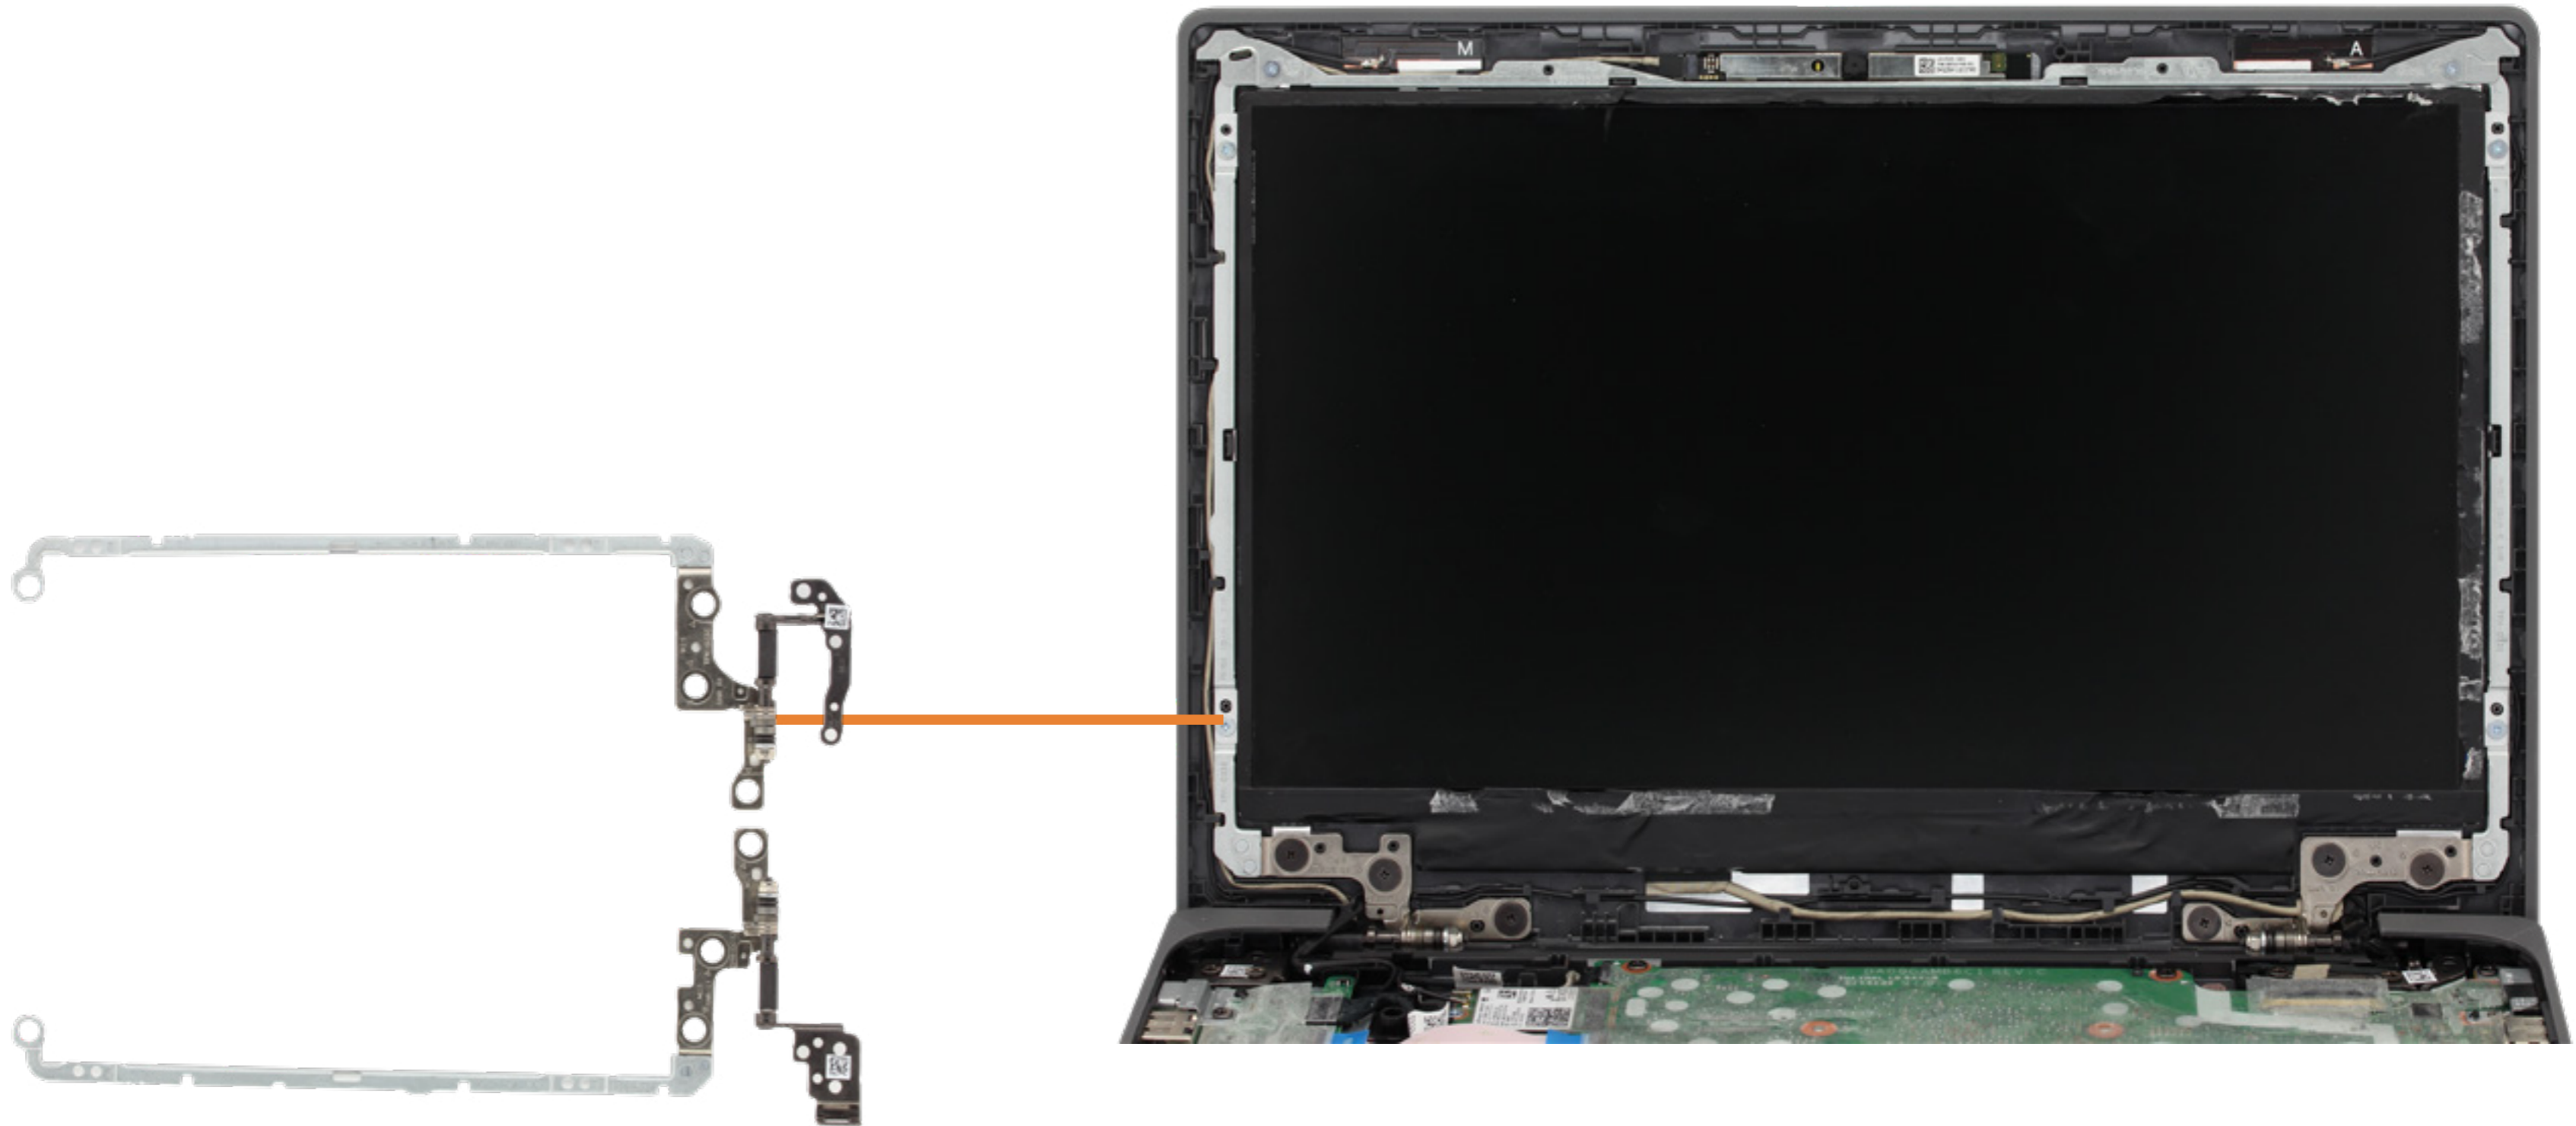

Hinge Cap

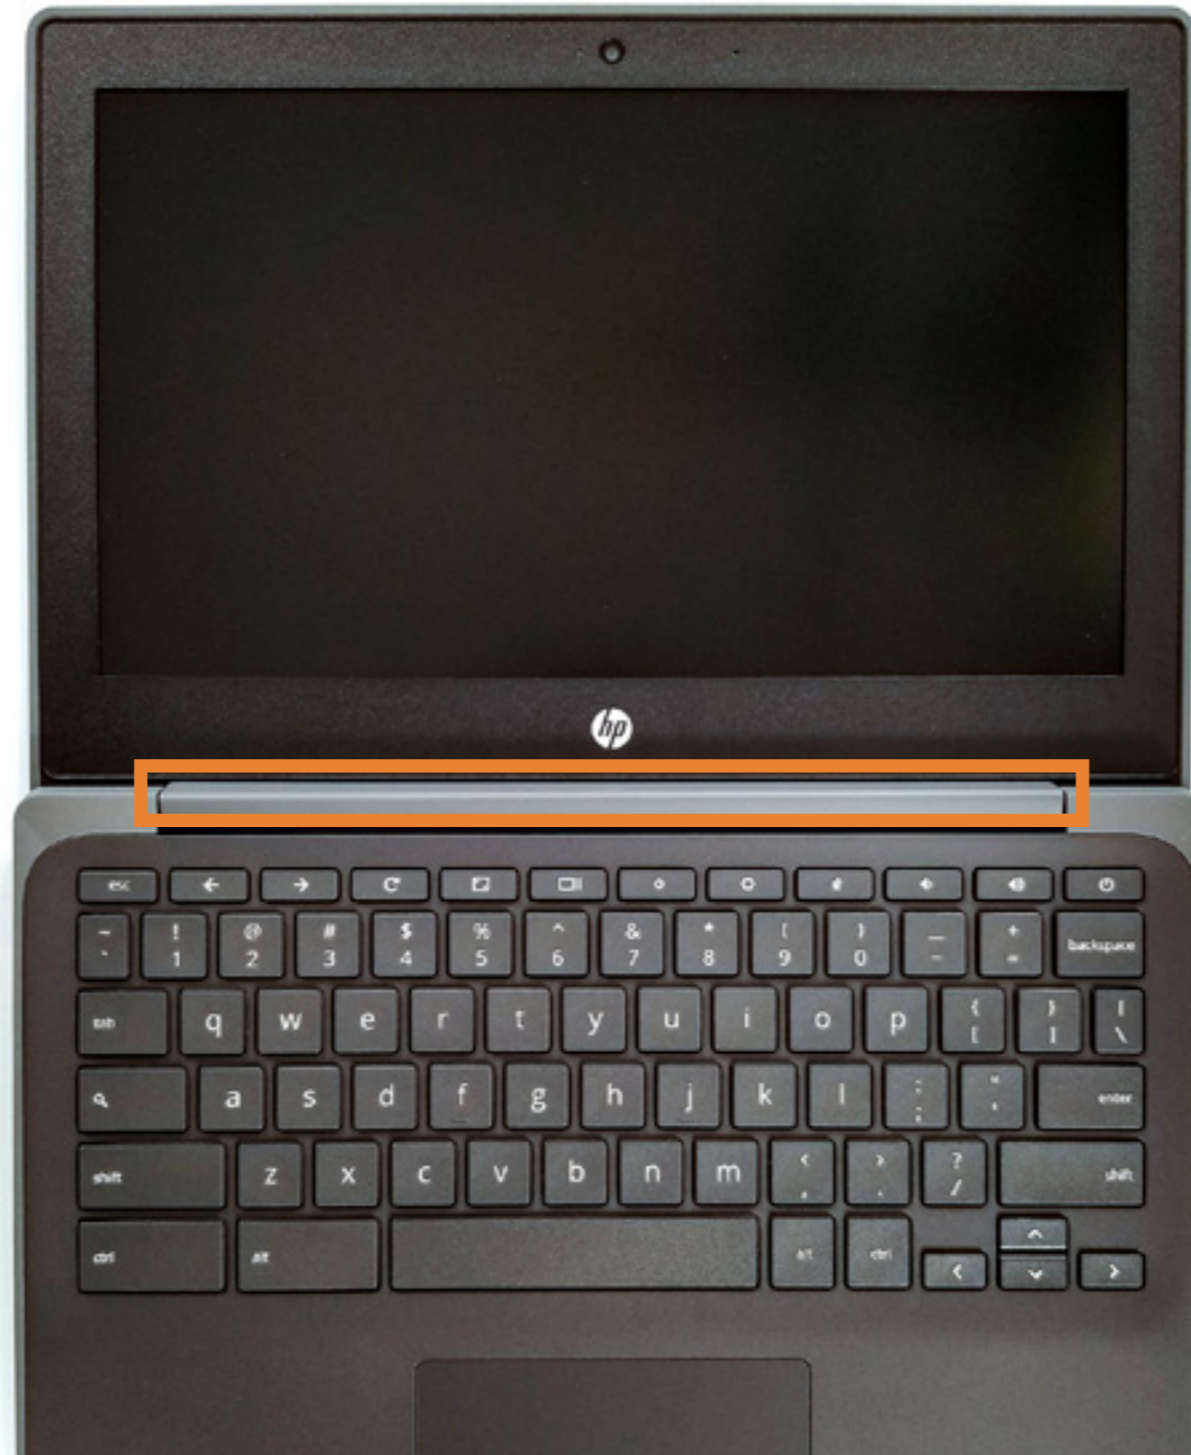

LCD Bracket

