Reference and Support [EN] 参考及支援 [ZHTW] リファレンスとサポート [JA]



HP ENVY 6000 All-in-One series

Printer Features





- 1 Input tray
- 2 Output tray
- 3 Scanner
- 4 Access ink cartridges
- 5 Power button
- 6 Wi-Fi Reset button

Control panel



Status lights

Pulsing purple

Printer is in wireless setup mode.

Pulsing blue Connecting to network

Solid light blue

Connected/ready for use

Solid amber

Problem. Check the HP Smart app for troubleshooting information.

Pulsing green

Updating or busy

	settings and status.
(((.	Wireless light Indicates wireless connection status
\otimes	Cancel button/light
(\downarrow)	Resume button/light Press when lit to continue a job.
Ð	Color Copy button/light
ً	Black and White Copy button/light
	Number Counter
Ε	Error Code Consult online user guide.

Information button/light Press to print a summary of printer.

Сору

- 1. Place the original on the scanner glass.
- Press Copy (Black
 or Color
 or).

 Note: To increase the number of copies, press multiple times.

Print/Scan

Print from or scan to many iOS, Android, Microsoft[®] Windows[®], and macOS devices. Visit **123.hp.com** from your devices to get started.

For more information on lights and errors, visit **hp.com/support**

Help and tips for Wi-Fi and connectivity

If the software is unable to find your printer during setup, check the following conditions to resolve the issue.

Potential Issue	Solution
Printer Wi-Fi setup mode timed out	If the status light is not purple, the printer might not be in Wi-Fi setup mode. Restart setup mode:
	 On the back of the printer, press and hold the Wi-Fi Reset button
	2. Wait for one minute. Close and reopen HP Smart, and then try connecting again.
Computer or mobile device too far from printer	Move your computer or mobile device closer to the printer. Your device might be out of range of the printer's Wi-Fi signal.
Computer connected to a Virtual Private Network (VPN) or remote work network	Disconnect from a VPN before installing HP Smart software. You can't install apps from the Microsoft Store when connected to a VPN.
	Connect to the VPN again after finishing printer setup.
	Note : Consider your location and the security of the Wi-Fi network before disconnecting from a VPN.
Wi-Fi turned off on computer (computer connected by Ethernet)	If your computer is connected by Ethernet, turn on the computer's Wi-Fi while setting up the printer. Disconnect the Ethernet cable temporarily to complete setup over Wi-Fi.
Bluetooth and location services are turned off on your mobile device	If setting up with a mobile device, turn on Bluetooth and location services. This helps the software find your network and printer.
	Note : Your location is not being determined and no location information is being sent to HP as part of the setup process.



Help and Support

For printer information, troubleshooting, and videos, visit the printer support website.



hp.com/support

The information contained herein is subject to change without notice.







控制台



狀態指示燈

紫色脈衝燈光

印表機處於無線設定模式。

藍色脈衝燈光

正在連線至網路

恆亮淺藍色

已連線/準備就緒可供使用

恆亮琥珀色

存在問題。請查看 HP Smart 應 用程式以取得疑難排解資訊。

綠色脈衝燈光

正在更新或忙碌中

ĺ	資訊 按鈕/指示燈 按下即可列印印表機設定及狀態的 摘要。
(((.	無線 指示燈 表示無線連線狀態。
\otimes	取消 按鈕/指示燈
(\downarrow)	重新開始 按鈕/指示燈 亮起時按下即可讓工作繼續。
Ð	彩色影印 按鈕/指示燈
ً	黑白影印 按鈕/指示燈
	計數

E 錯誤代碼 參閱線上使用者指南。

影印

- 1. 將原稿放在掃描器玻璃板上。
- 2.按下影印(黑白) 或彩色)。
 附註:若要增加份數,請多按幾次即可。

列印/掃描

可透過多種 iOS、Android、Microsoft Windows 及 macOS 裝置列印,或是掃描至這些裝置。 透過個人裝置造訪 123.hp.com 以開始使用。

如需有關指示燈和錯誤的更多資訊,請造訪 hp.com/support

有關 Wi-Fi 及連線的說明與訣竅

若軟體在設定期間無法找到您的印表機,請檢查下列情況以解決問題。

可能的問題	解決方案
印表機 Wi-Fi 設定模式逾時	如果狀態指示燈未亮起紫色,則印表機可能並未 處於 Wi-Fi 設定模式。重新啟動設定模式:
	 按住印表機背面的 Wi-Fi 重設按鈕 [●] 5 秒,接 著放開按鈕。狀態指示燈將會發出紫色脈衝 燈光。
	2. 等待一分鐘。關閉並重新開啟 HP Smart,然後 嘗試再次連線。
電腦或行動裝置距離 印表機太遠	將您的電腦或行動裝置移至靠近印表機的位置。 您的裝置可能不在印表機 Wi-Fi 訊號範圍內。
電腦已連線至虛擬私人網路 (VPN) 或 遠端工作網路	中斷 VPN 連線,然後再安裝 HP Smart 軟體。當連 線至 VPN 時,您無法從 Microsoft Store 安裝應用 程式。 完成印表機設定後,再次連線至 VPN。
	附註 :在中斷 VPN 連線前,請考慮您的位置 及 Wi-Fi 網路安全性。
電腦上的 Wi-Fi 已關閉 (電腦已透過乙 太網路連線)	如果您的電腦是透過乙太網路連線,請於設定印 表機時開啟電腦的 Wi-Fi。 您無需拔除乙太網路纜線。
行動裝置上的 Bluetooth 和位置服務 已關閉	如果使用行動裝置進行設定,請開啟 Bluetooth 和位置服務。此舉可協助軟體找到您的網路及 印表機。
	附註 :我們不會確認您的位置,在設定過程 中也不會有任何位置資訊傳送至 HP。



如需列印資訊、疑難排解,以及視訊等 內容,請造訪印表機支援網站。

說明及支援



hp.com/support

プリンターの機能





コントロール パネル

- 情報ボタン/ランプ プリンターの設定およびステータスの 概要を印刷します。 **ワイヤレス** ランプ \approx ワイヤレス接続のステータスを示し ます。 (X)キャンセルボタン/ランプ 再開ボタン/ランプ (\downarrow) 点灯時に押すとジョブを続行します。 Ð **カラー コピー** ボタン/ランプ **モノクロコピー** ボタン/ランプ
 - ____ エラーコード
 - E オンラインのユーザーガイドを参照し てください。

コピー

- 1. 原稿をスキャナーのガラス面に置きます。
- 2.[コピー](モノクロ ⑧ またはカラー ⑧) を押します。 注記:部数を増やすには、ボタンを複数回押します。

印刷/スキャン

多くの iOS、Android、Microsoft ® Windows ® 、macOS デバイスから印刷したり、これらのデバイスにスキ ャンしたりできます。 使用を開始するには、お使いのデバイスから 123.hp.com にアクセスしてください。

ステータス ランプ

紫色が脈打つように光る

プリンターはワイヤレス セットアッ プモードになっています。

Ø

青色が脈打つように光る

ネットワークに接続中です。

ライト ブルーで点灯

接続済みまたは使用可能です。

黄色で点灯

問題が発生しています。HP Smart ア プリでトラブルシューティング情報 を確認してください。

緑色が脈打つように光る

更新中またはビジー状態です。

ランプおよびエラーに関する詳細については、hp.com/support にアクセスしてください。

Wi-Fi および接続に関するヘルプとヒント

セットアップ中にソフトウェアがプリンターを検出できない場合は、以下の状態を確認して問題を解 決してください。

潜在的な問題	解決策
プリンターの Wi-Fi セットアップモ ードがタイムアウトしました	ステータス ランプが紫色でない場合、プリンター は Wi-Fi セットアップ モードになっていない可能性 があります。セットアップ モードを再起動してくだ さい :
	1. プリンターの背面の Wi-Fi リセット ボタン ⑧ を 5 秒間押し続けてから放します。ステータ ス ランプが紫色に脈打つように光ります。
	2.1 分待ちます。HP Smart を閉じてからもうー 度開き、再度接続を試みます。
コンピューターまたはモバイル デバイスが プリンターから離れすぎています	コンピューターまたはモバイル デバイスをプリンタ ーに近づけてください。お使いのデバイスは、プリン ターの Wi-Fi 信号の範囲外にいる可能性があります。
コンピューターが仮想プライベート ネ ットワーク (VPN) またはリモート ワーク ネットワークに接続されています	HP Smart ソフトウェアをインストールする前に VPN から 切断してください。VPN に接続されていると、Microsoft Store からアプリをインストールできません。 プリンターのセットアップが完了してから再度 VPN に 接続してください。
	注記 : VPN から切断する前に、位置情報と Wi-Fi ネ ットワークのセキュリティを考慮してください。
コンピューターで Wi-Fi がオフになって います (Ethernet で接続されているコン ピューター)	お使いのコンピューターが Ethernet で接続されてい る場合、プリンターのセットアップ中はコンピュー ターの Wi-Fi をオンにしてください。 Ethernet ケーブ ルを取り外す必要はありません。
お使いのモバイル デバイスで Bluetooth および位置情報サービスがオフになっ ています	モバイル デバイスでセットアップする場 合、Bluetooth および位置情報サービスをオンにして ください。これにより、ソフトウェアがネットワー クおよびプリンターを検出できるようになります。
	注記 :位置情報が特定されておらず、セットア ッププロセスの一環として位置情報が HP に送 信されていません。



プリンター情報、トラブルシューティング、 ビデオについては、プリンターのサポート Web サイトにアクセスしてください。



hp.com/support



© Copyright 2021 HP Development Company, L.P.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United Stated and/or other countries. Mac, OS X, macOS, and AirPrint are trademarks of Apple Inc., registered in the U.S. and other countries. Android is a trademark of Google LLC. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.



