

# Interactive Part Locator

## HP Pro C640 Chromebook

Welcome to the interactive part locator for the  
HP Pro C640 Chromebook

### Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

**That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.**

# External Views

Front

Left

Right

Rear

Top

Bottom


Internal

# Parts List


# Front View



# Left View

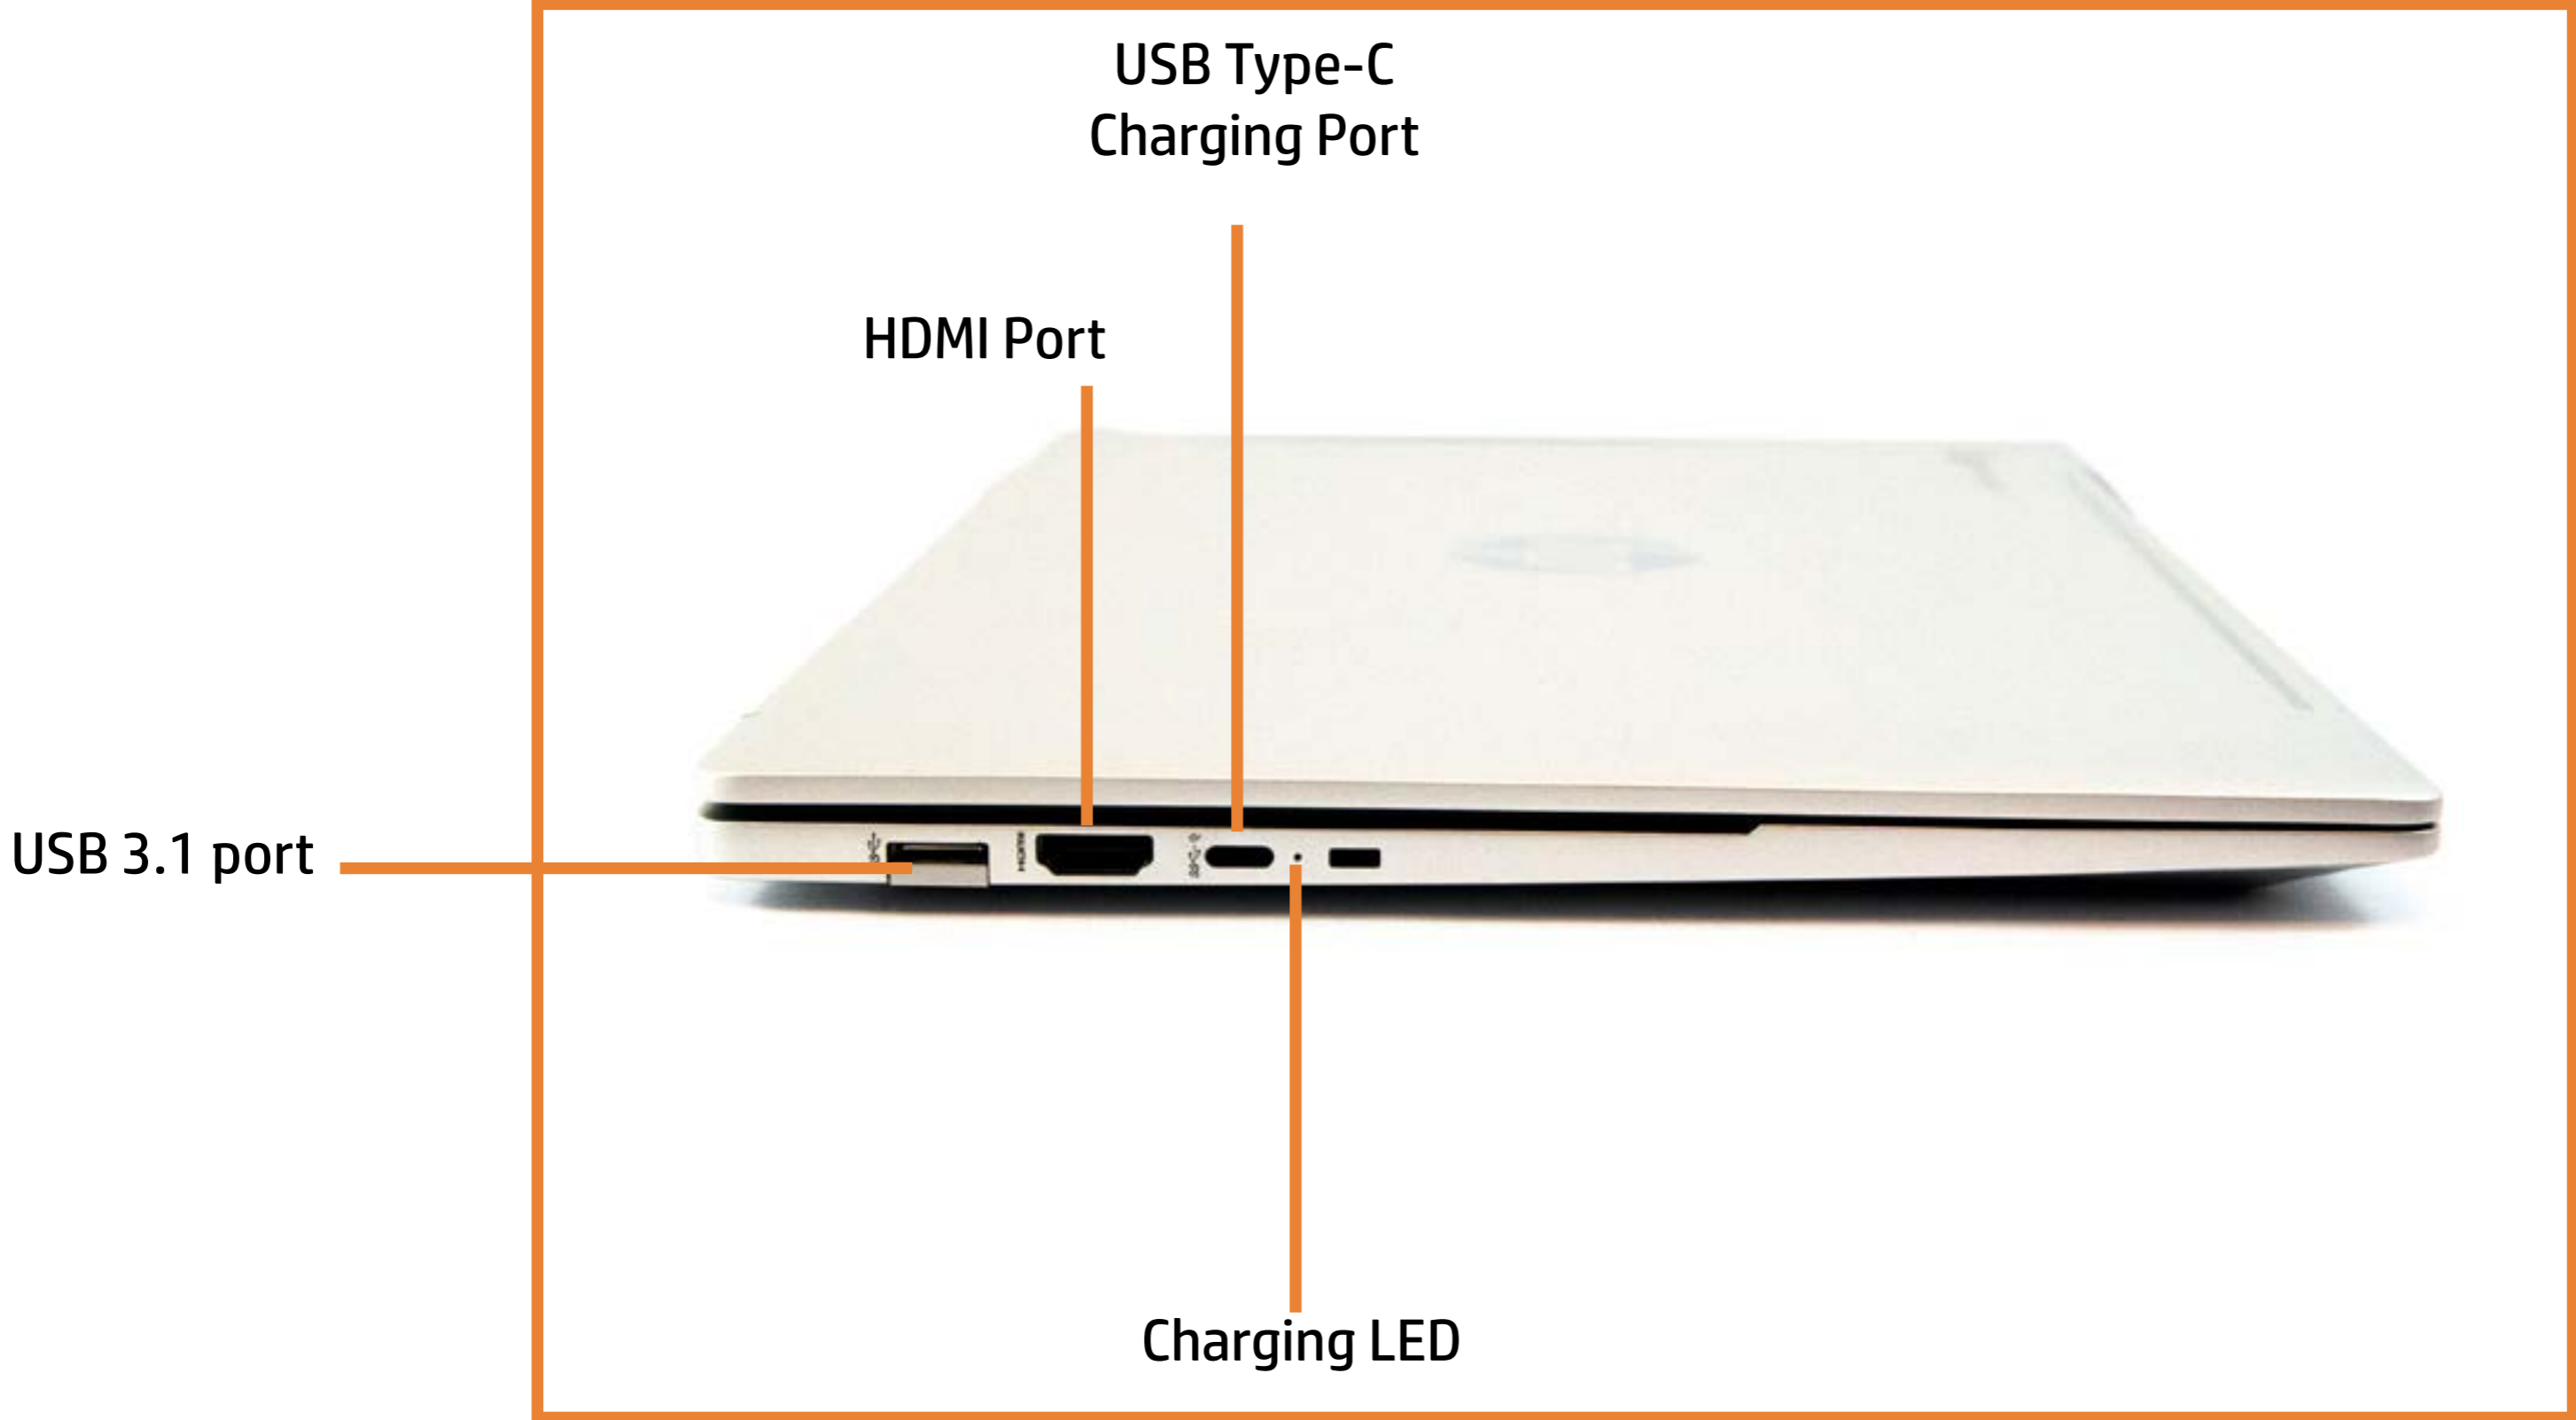

# Right View

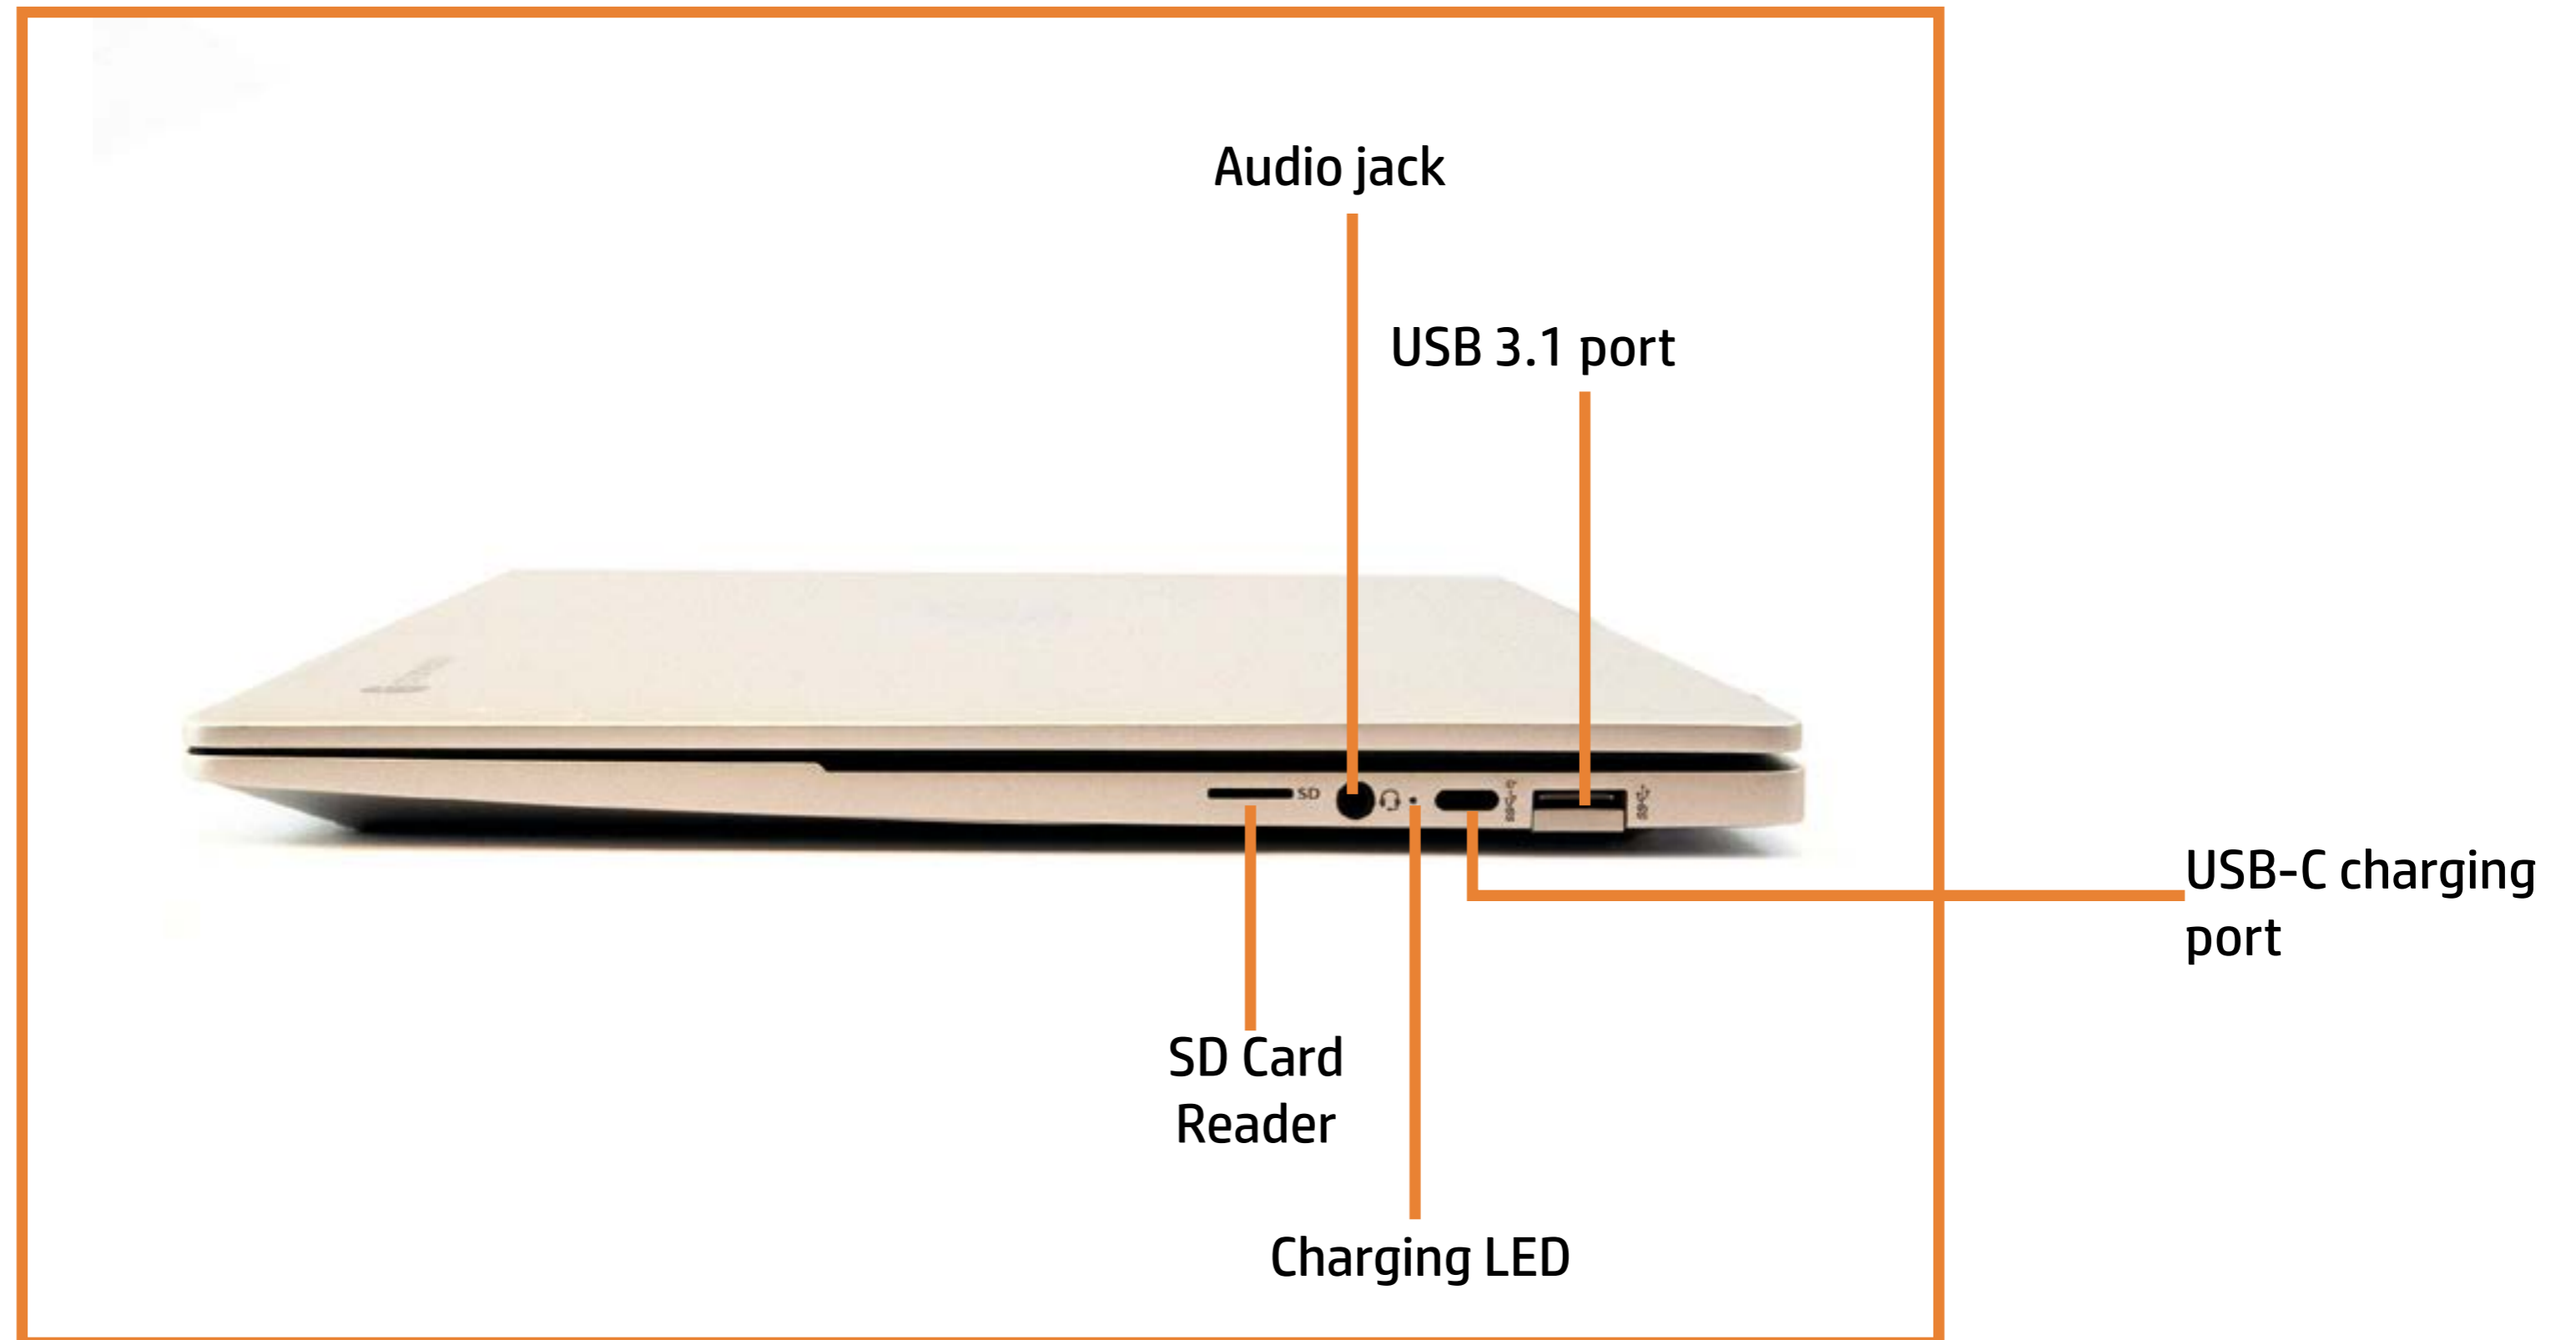

## Rear View




# Bottom View

Base Enclosure





# Top View

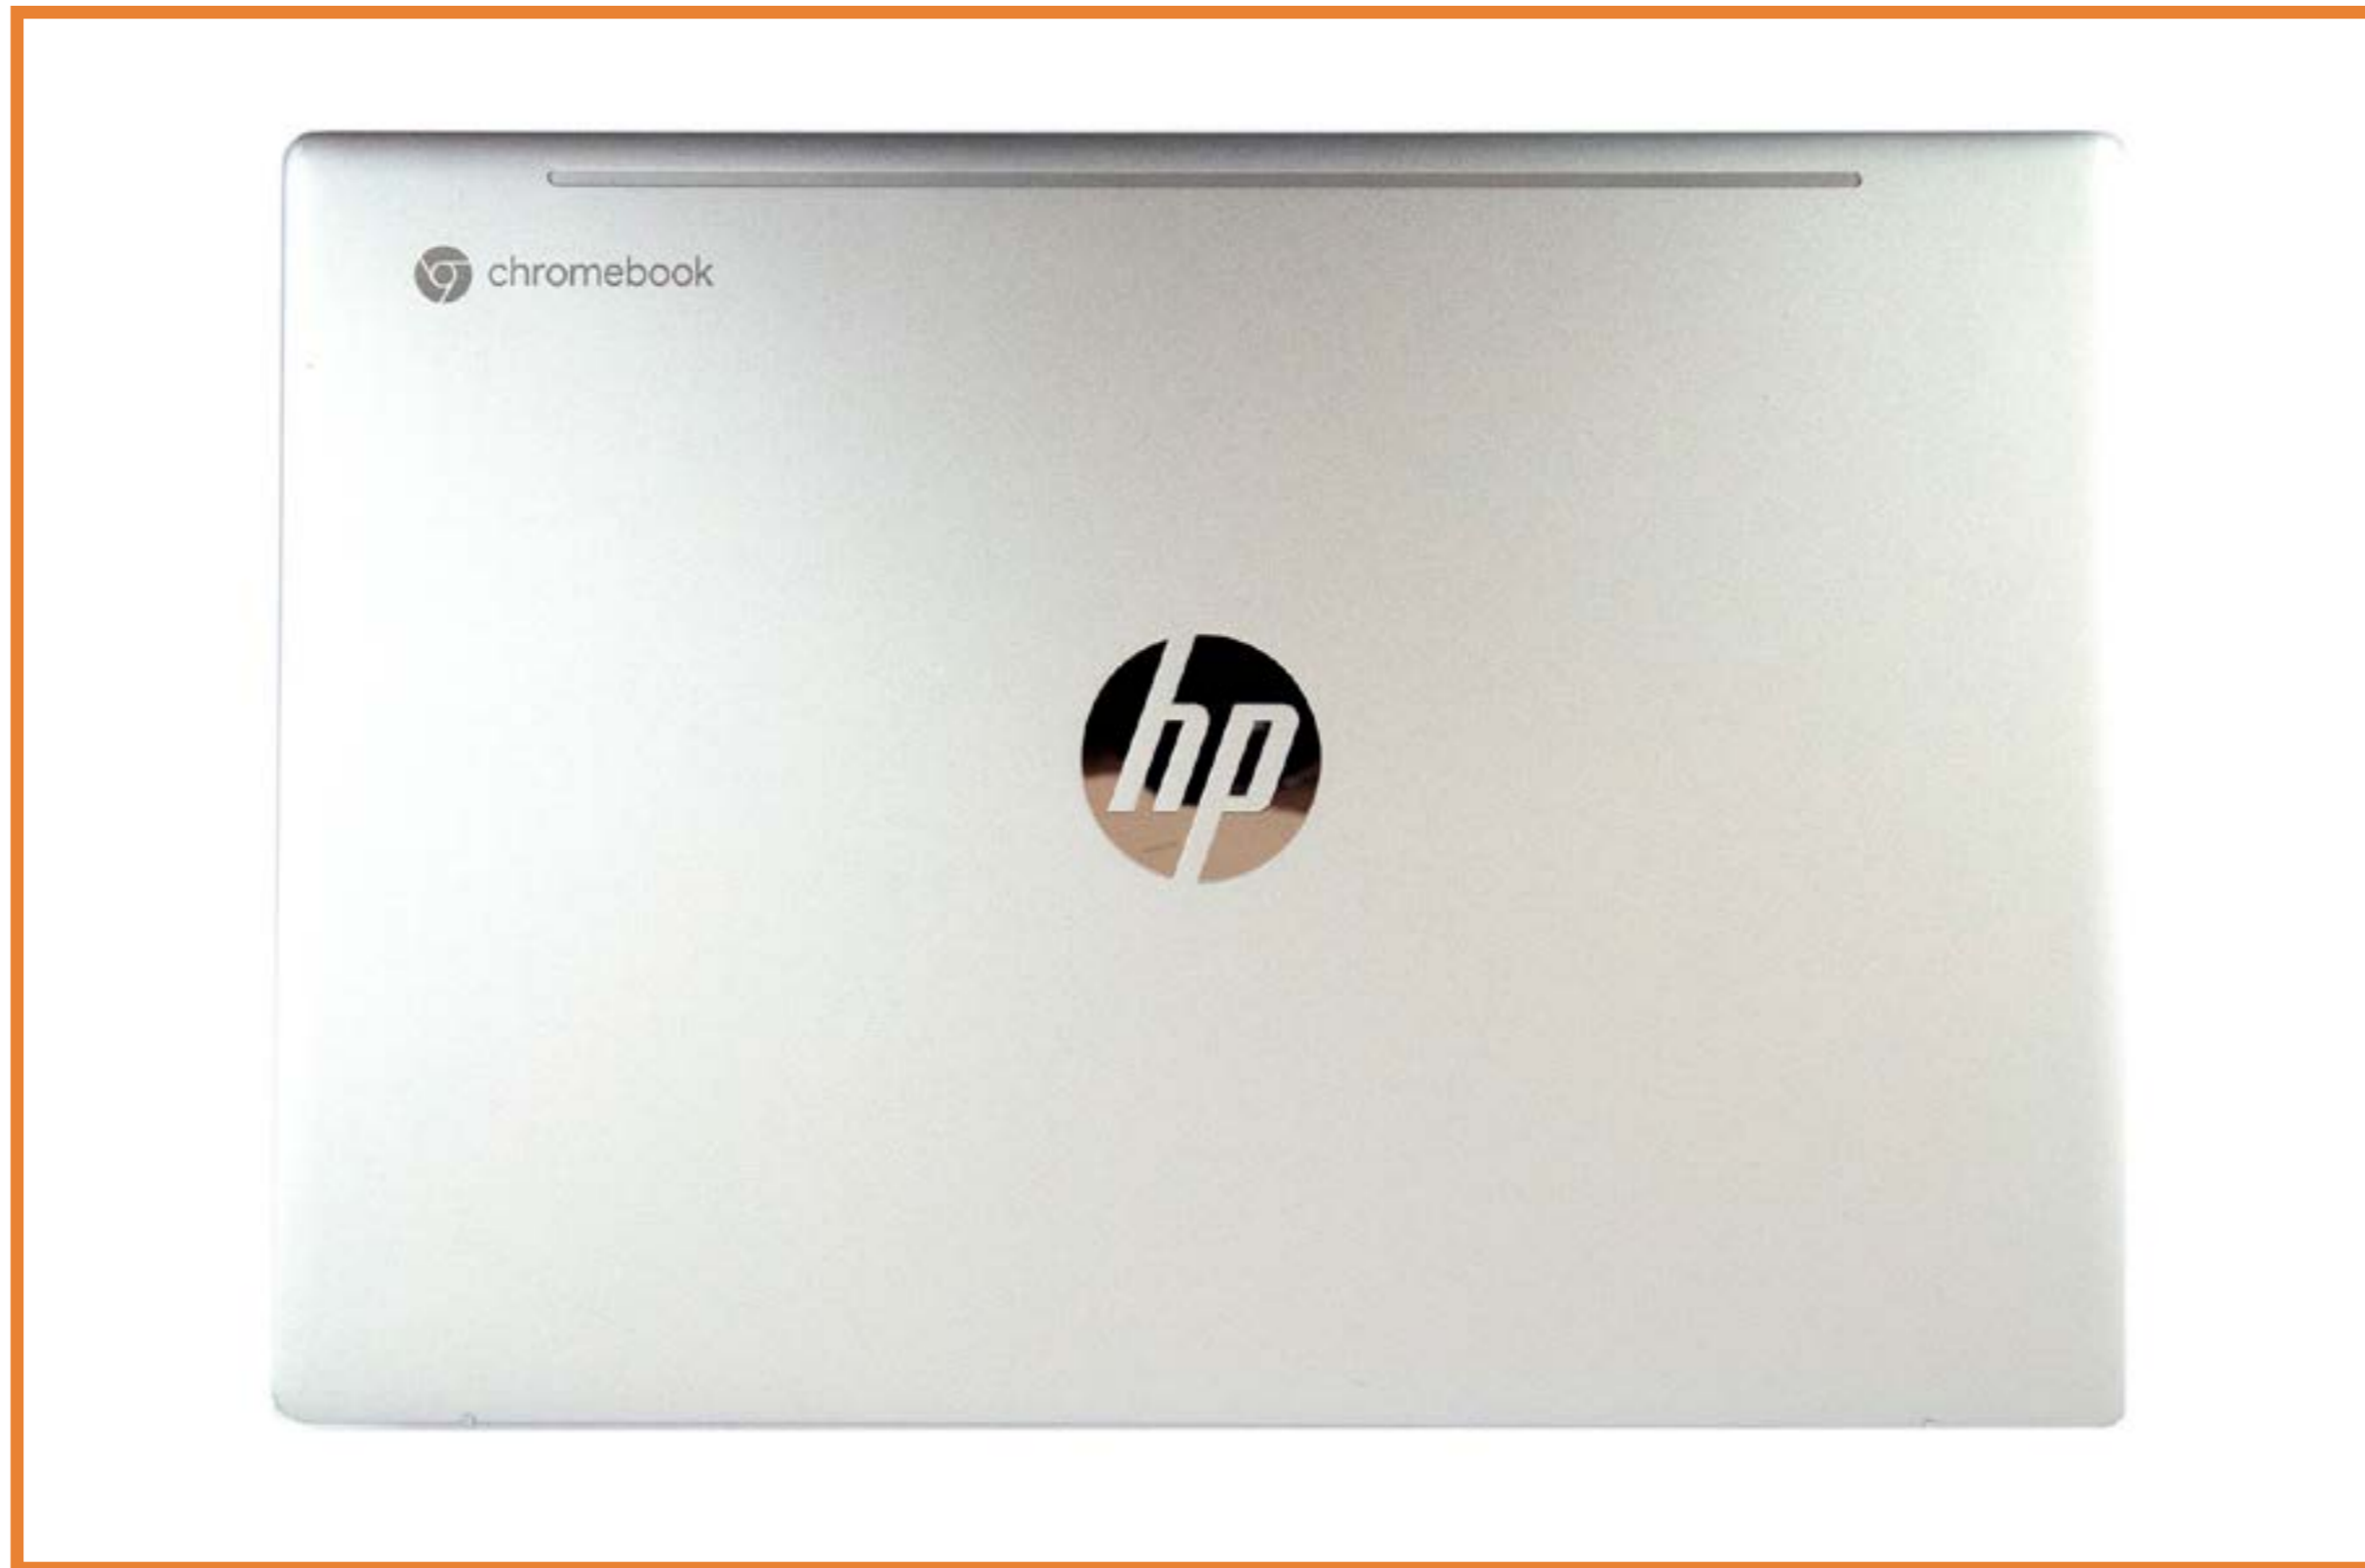


# Internal View 1


Heatsink

Fan

Battery

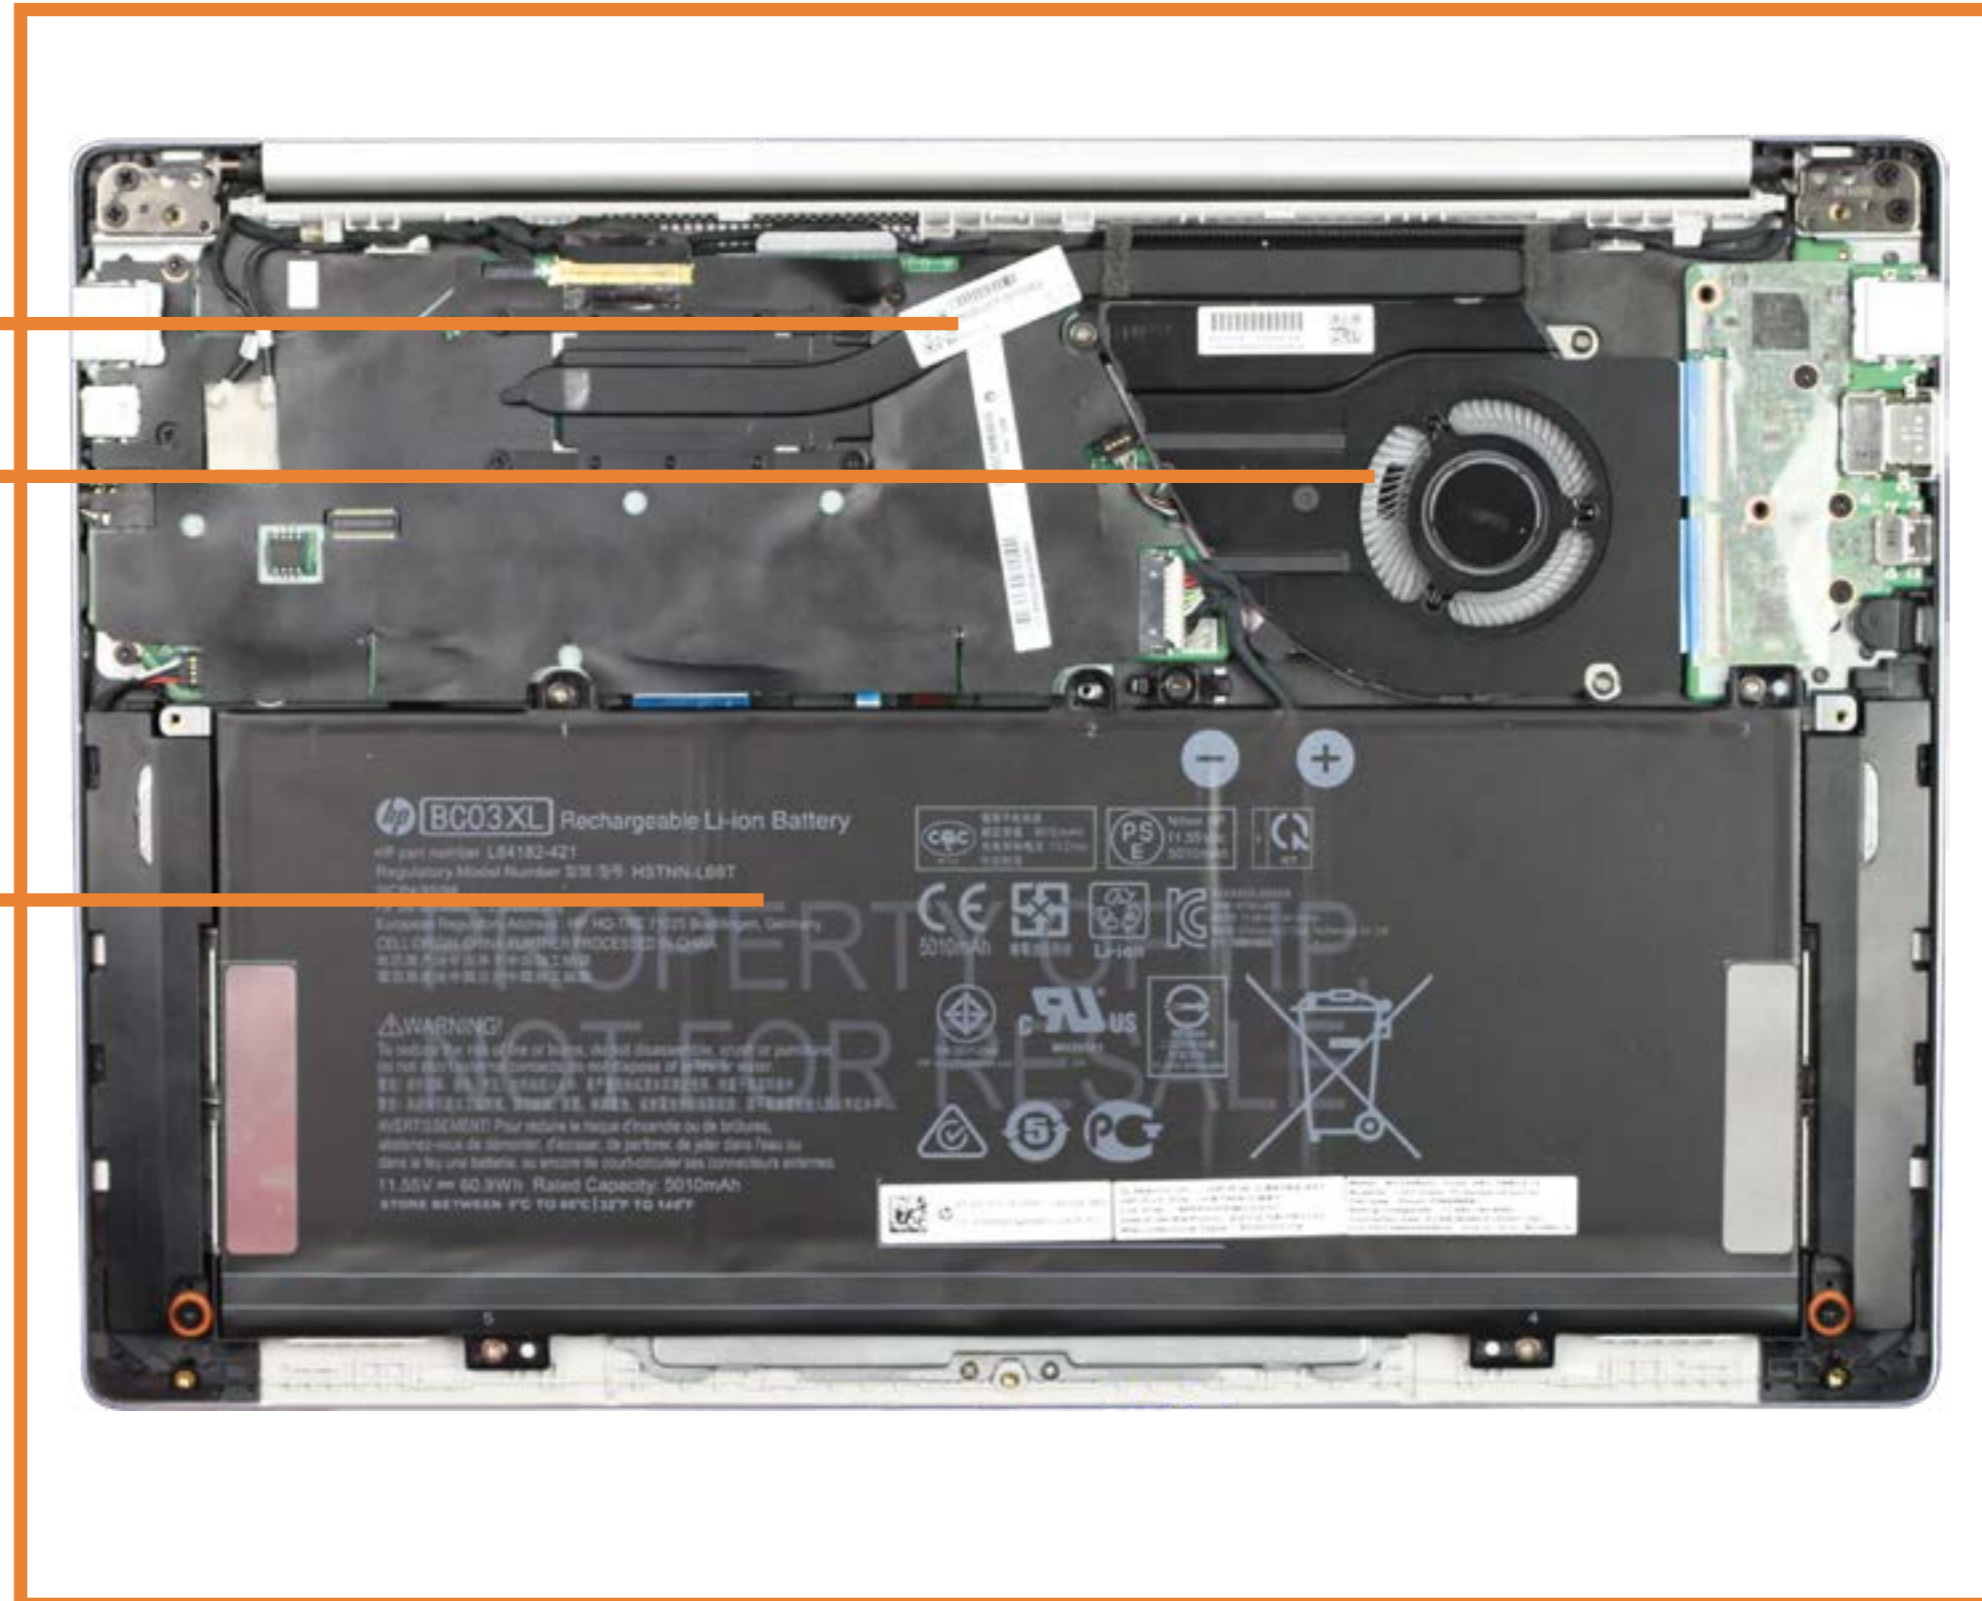

# Internal View 2

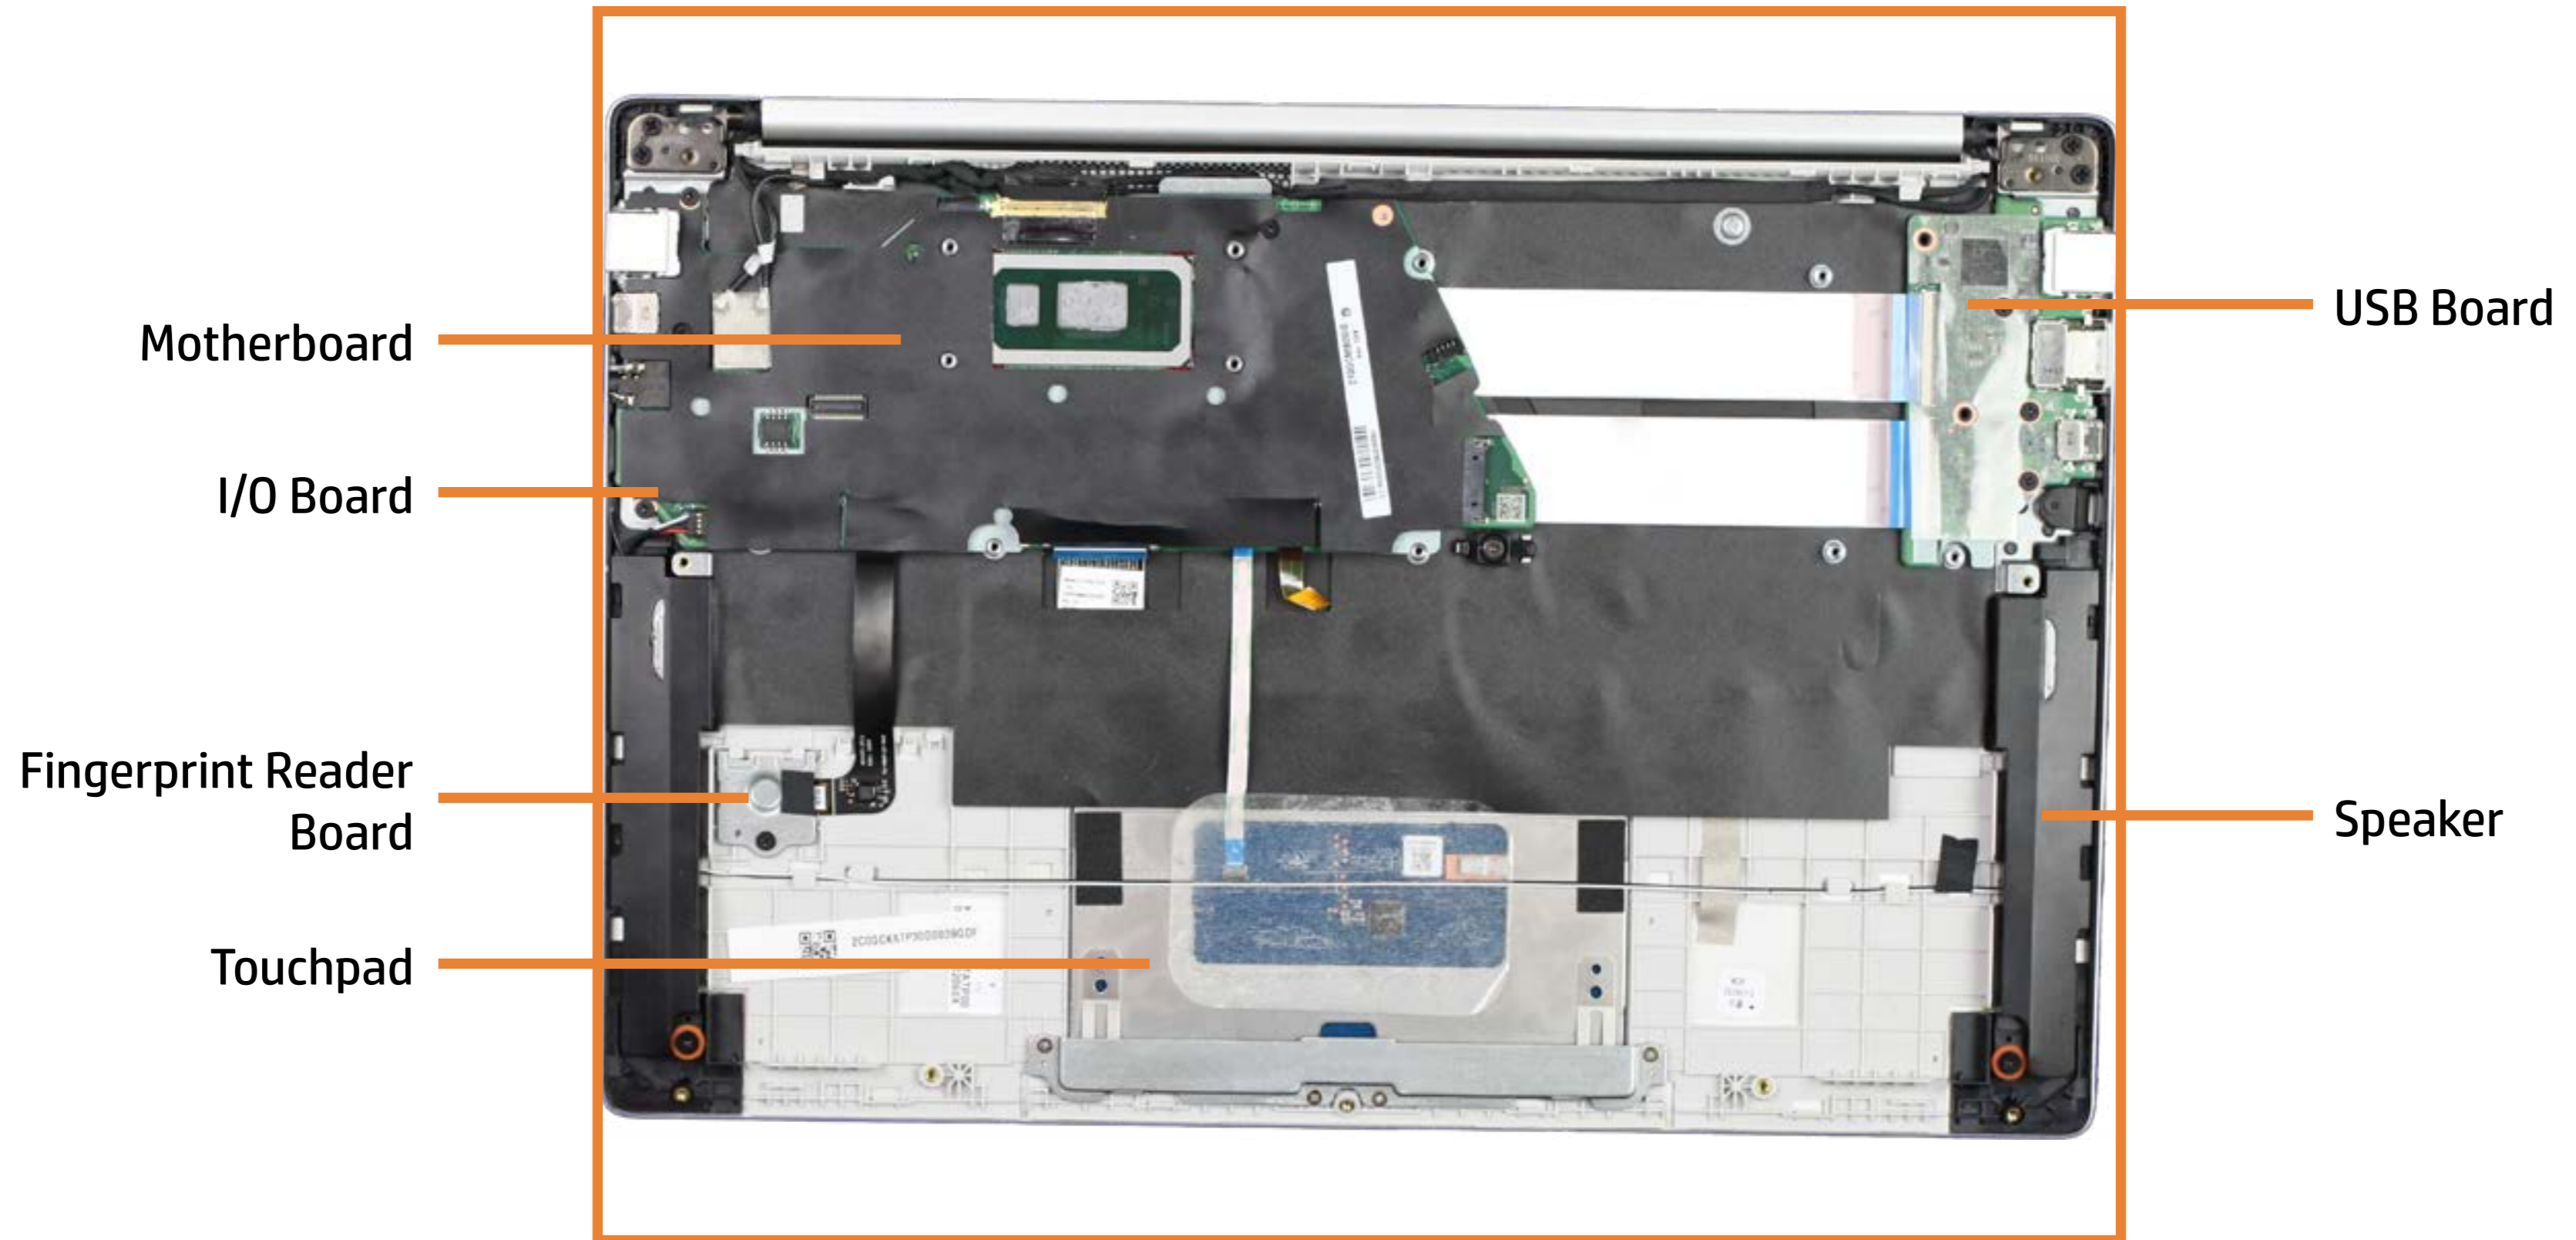

# Base Enclosure

Base Enclosure





# Fan

Fan





# Touchpad Board

Touchpad Board





# Fingerprint Reader Board

Fingerprint Reader Board



# Speakers

Speakers



# USB Board

USB Board



# Motherboard

Motherboard



# Top Cover

Top Cover



# Display Panel Assembly

Display Panel  
Assembly



# Hinge Cover

Hinge Cover



# LCD Bezel

LCD Bezel





# LCD Panel

LCD Panel



# LCD Panel Hinges

LCD Panel Hinges



# LCD Bracket

LCD Bracket



# Webcam

Webcam

