

# Interactive Part Locator

## HP ProDesk 600 G6 DM

Welcome to the interactive part locator for the  
HP ProDesk 600 G6 DM

### **Here's how to use it...**

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

**That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.**

# External Views

Front

Left

Right

Rear


Top

Bottom

Internal

# Parts List

# Front View

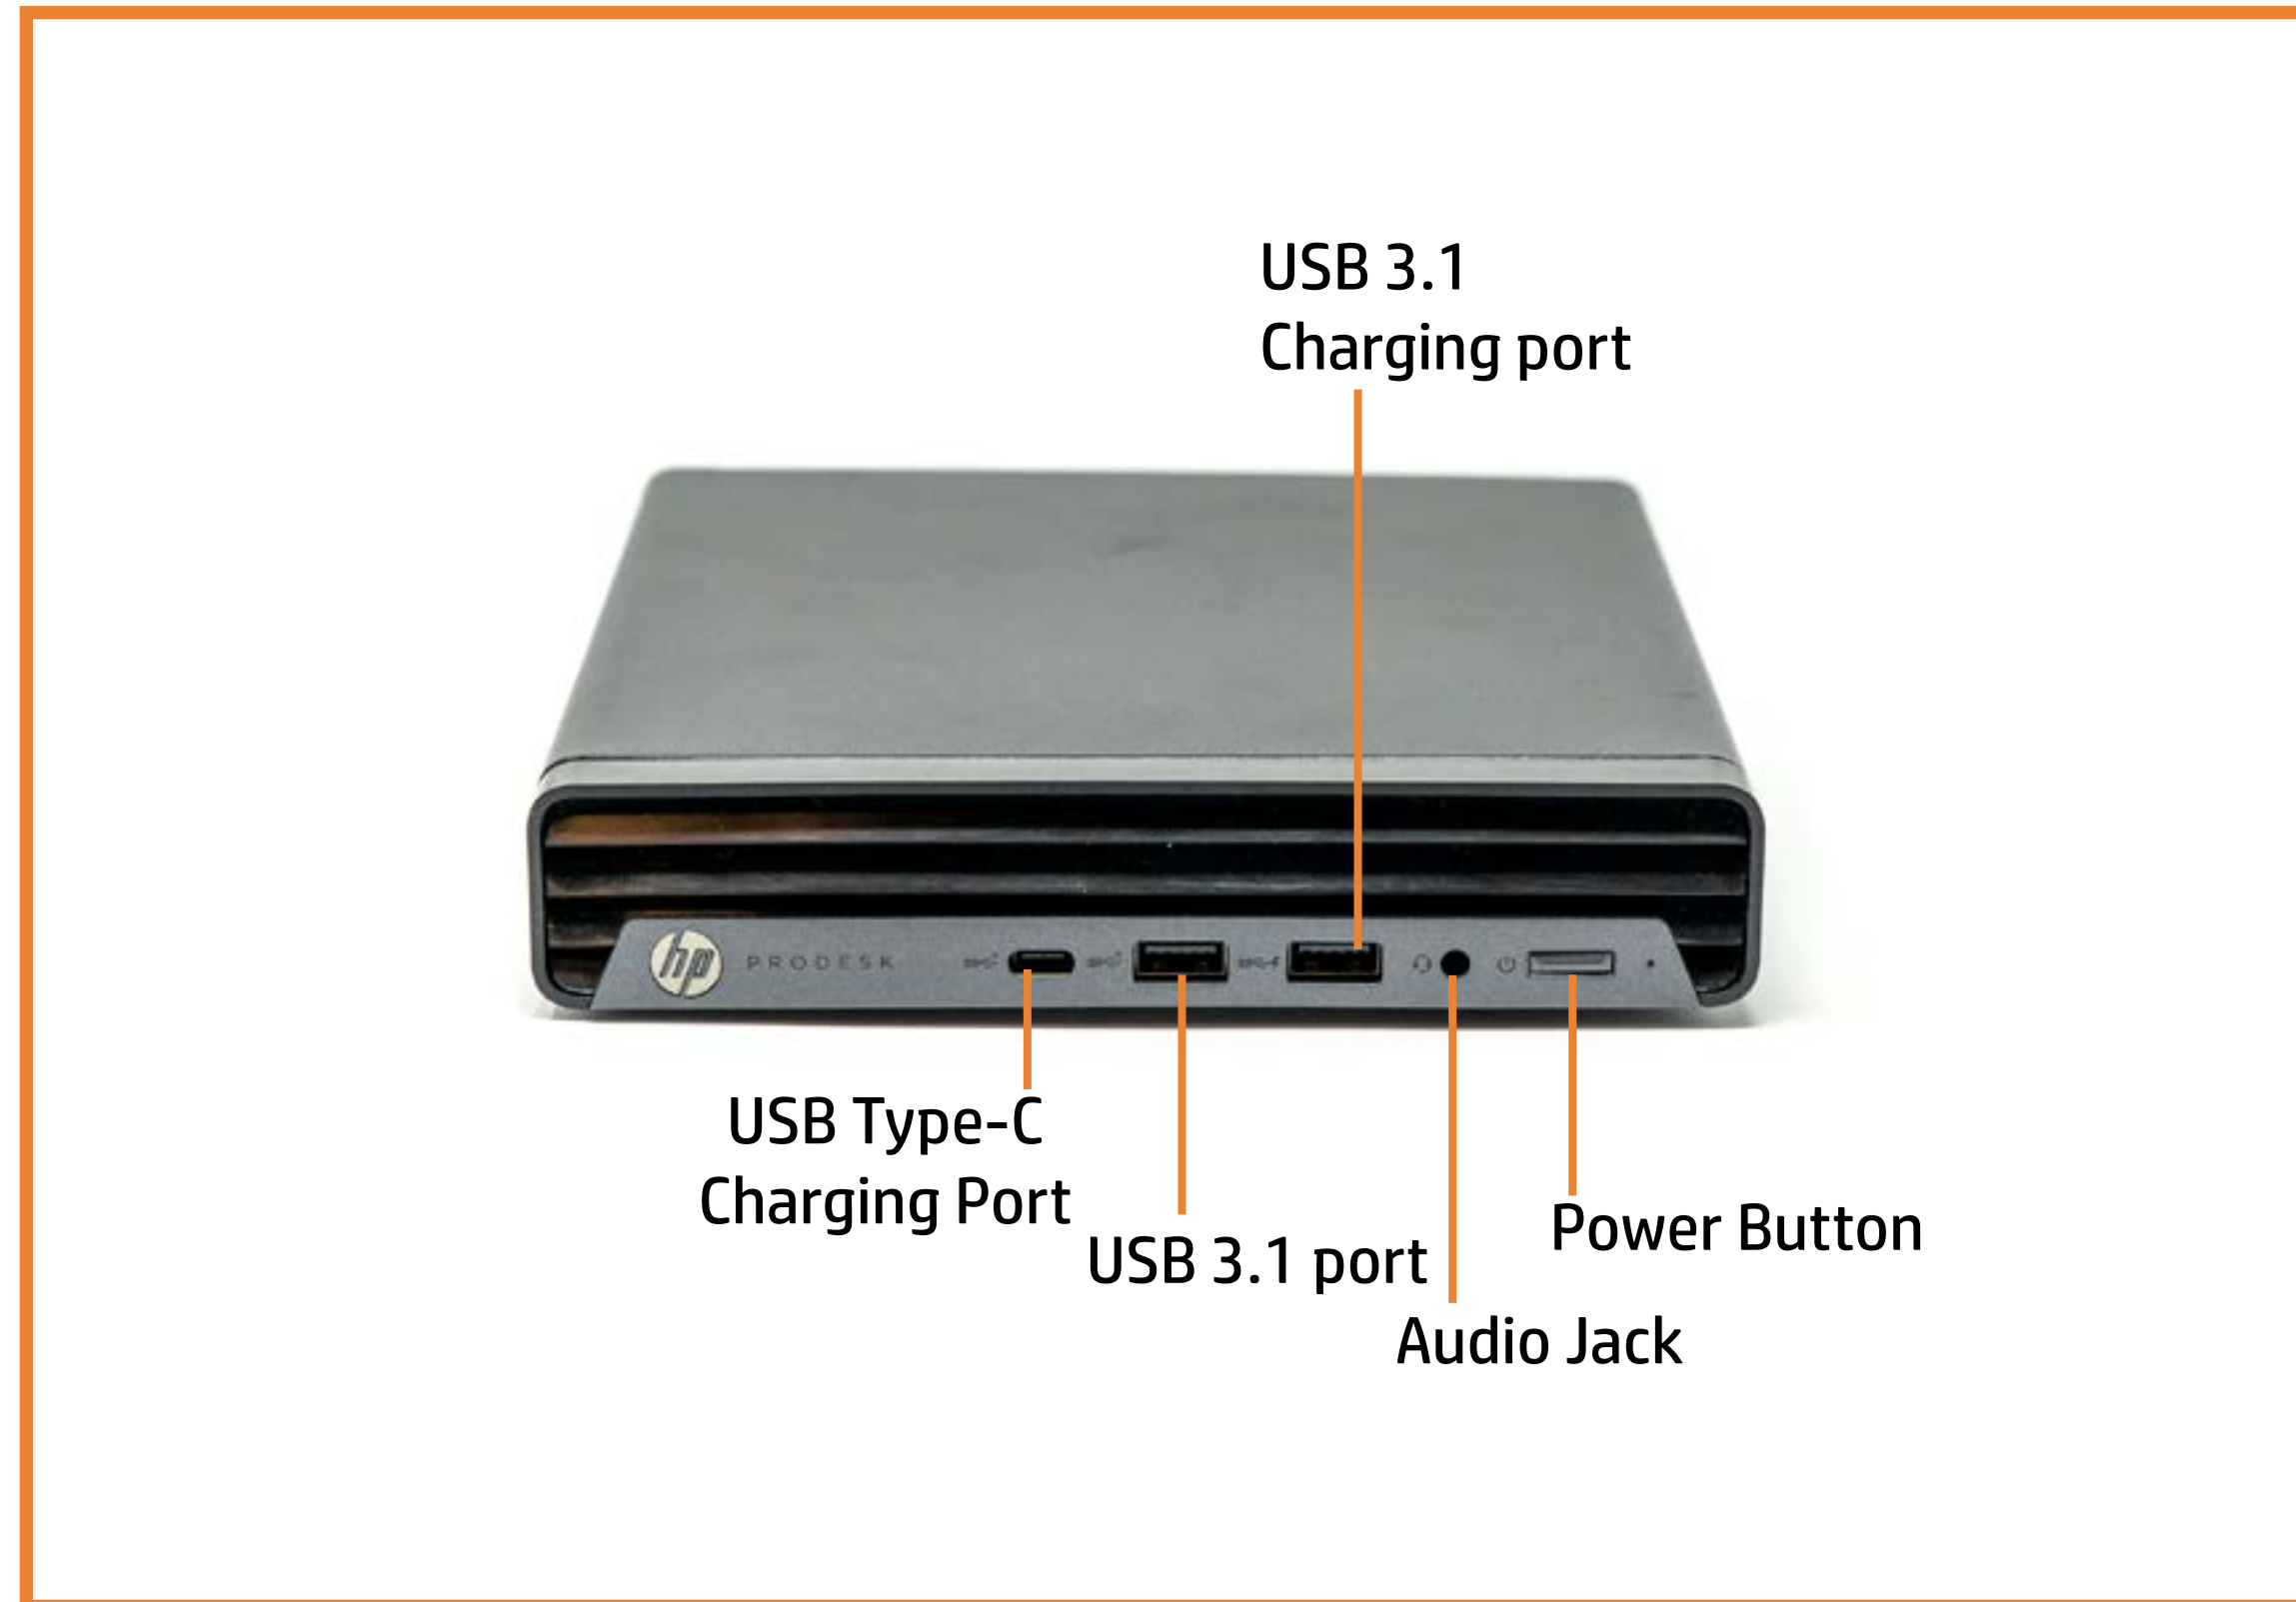


# Left View



## Right View



# Rear View

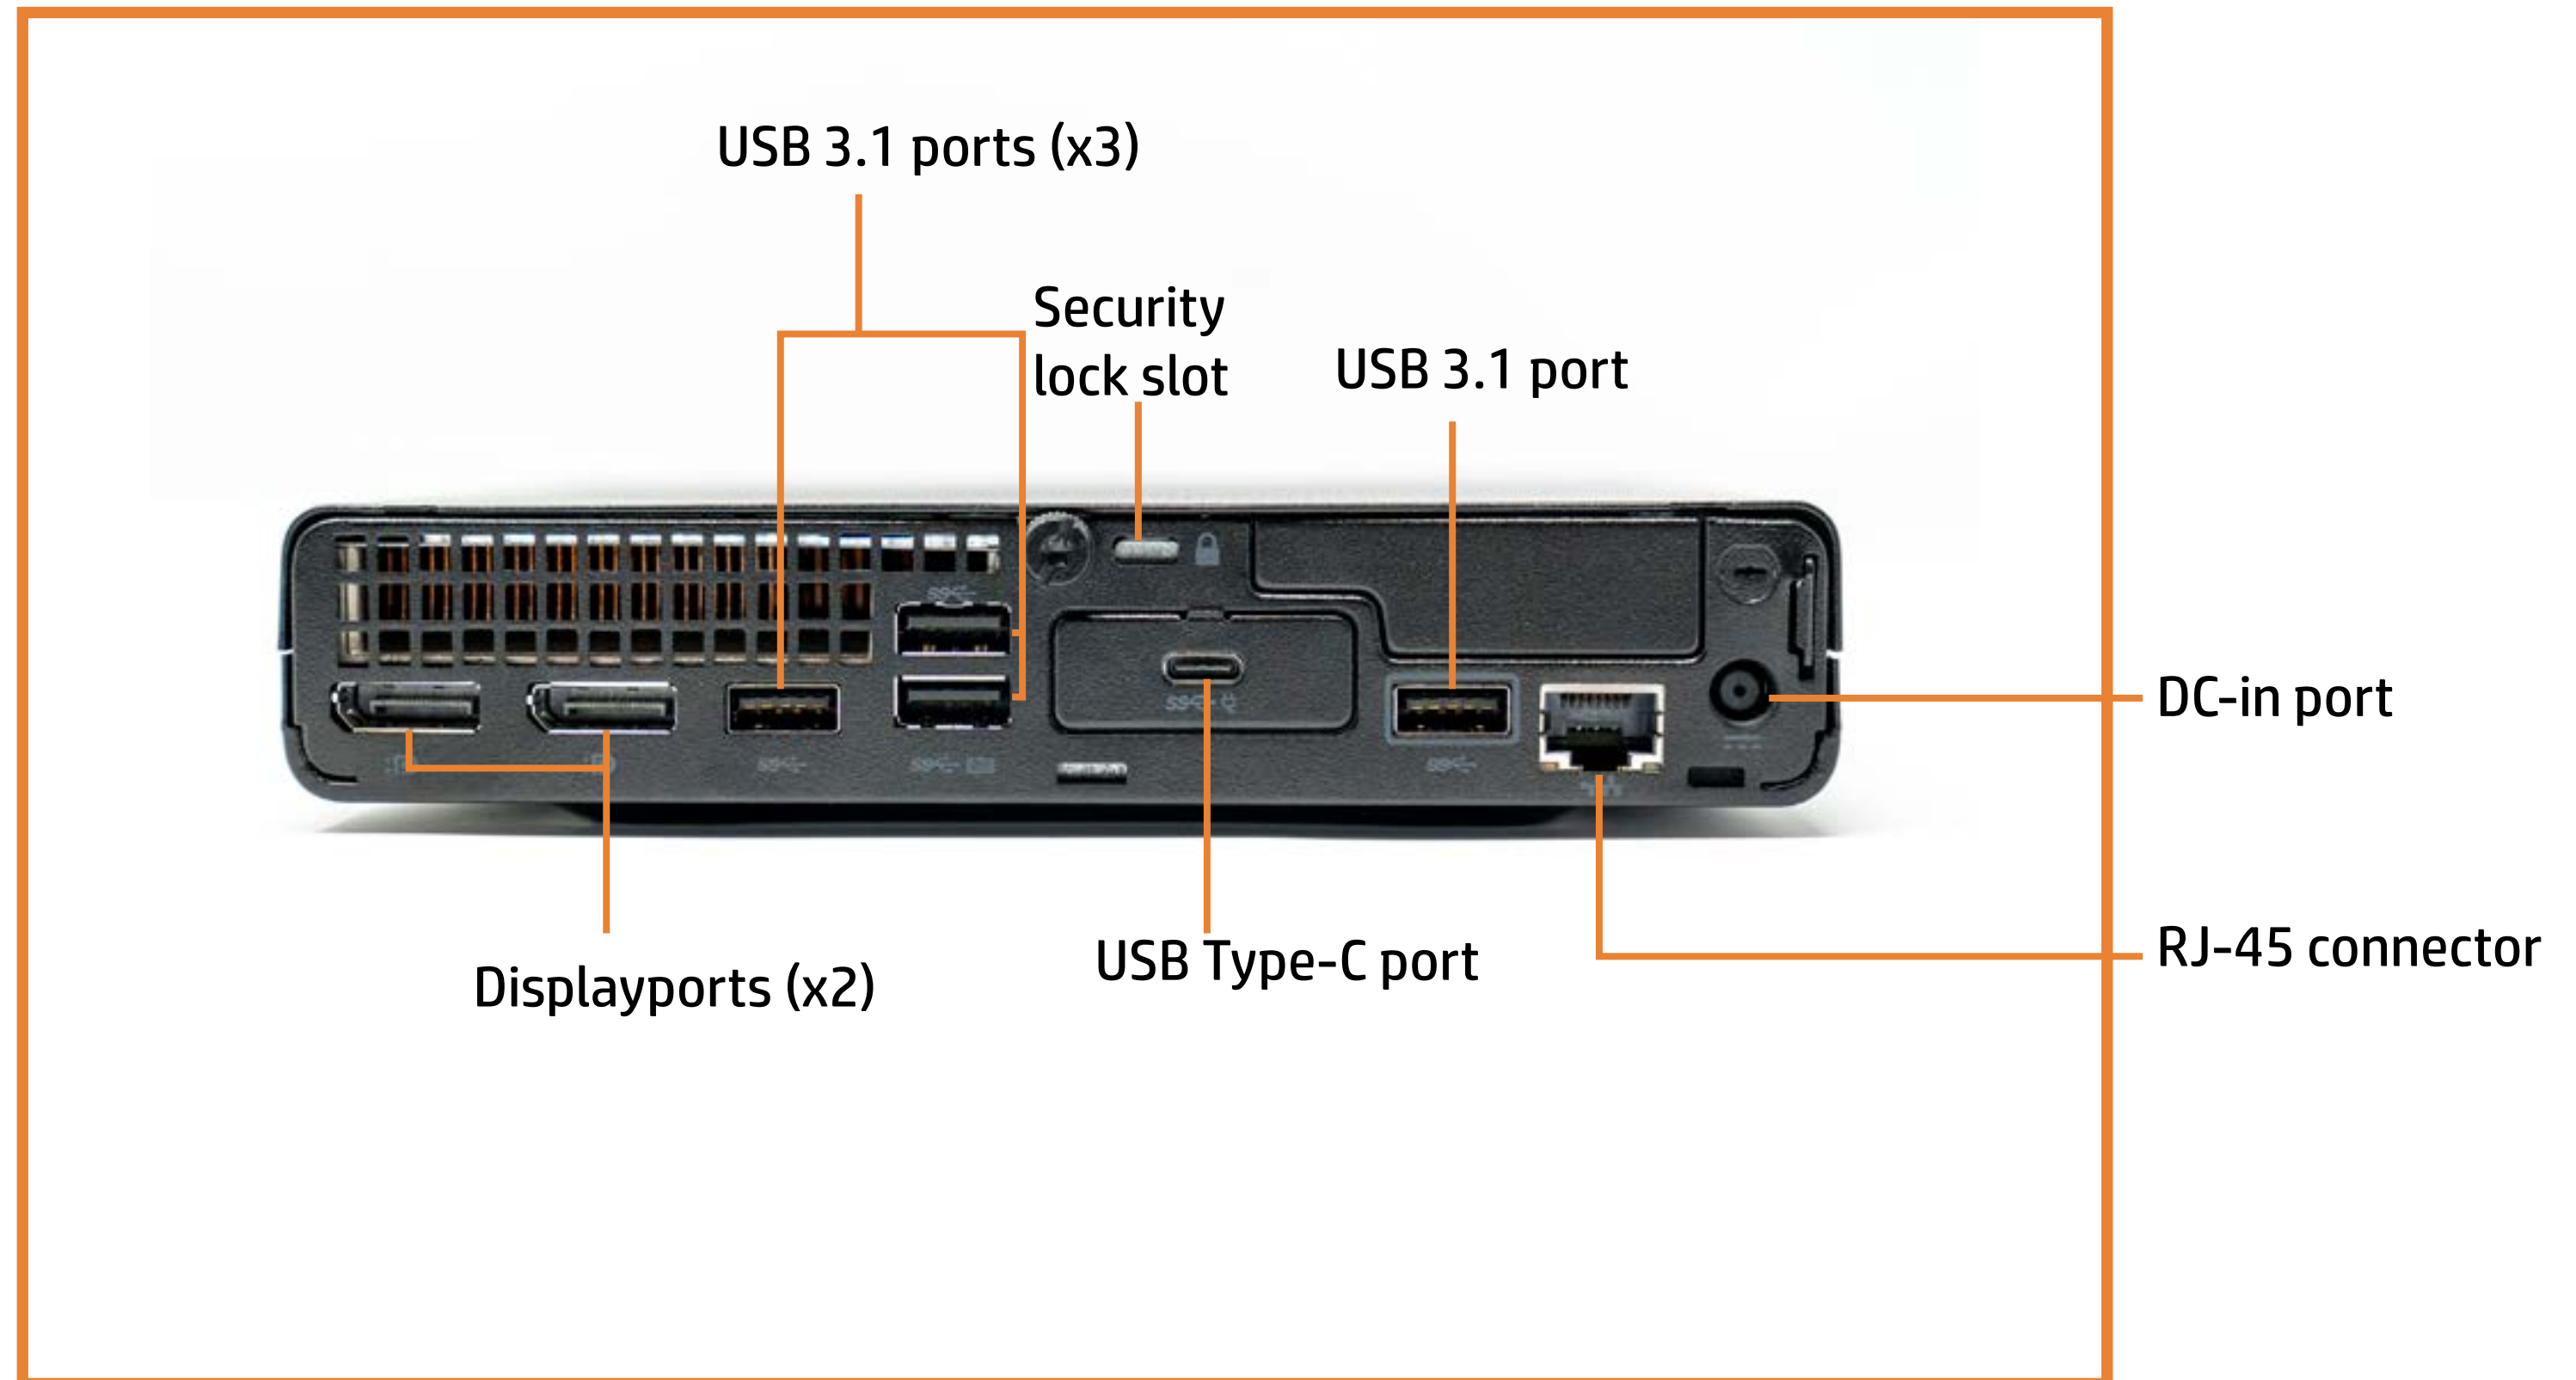

# Bottom View






# Top View




# Internal View 1

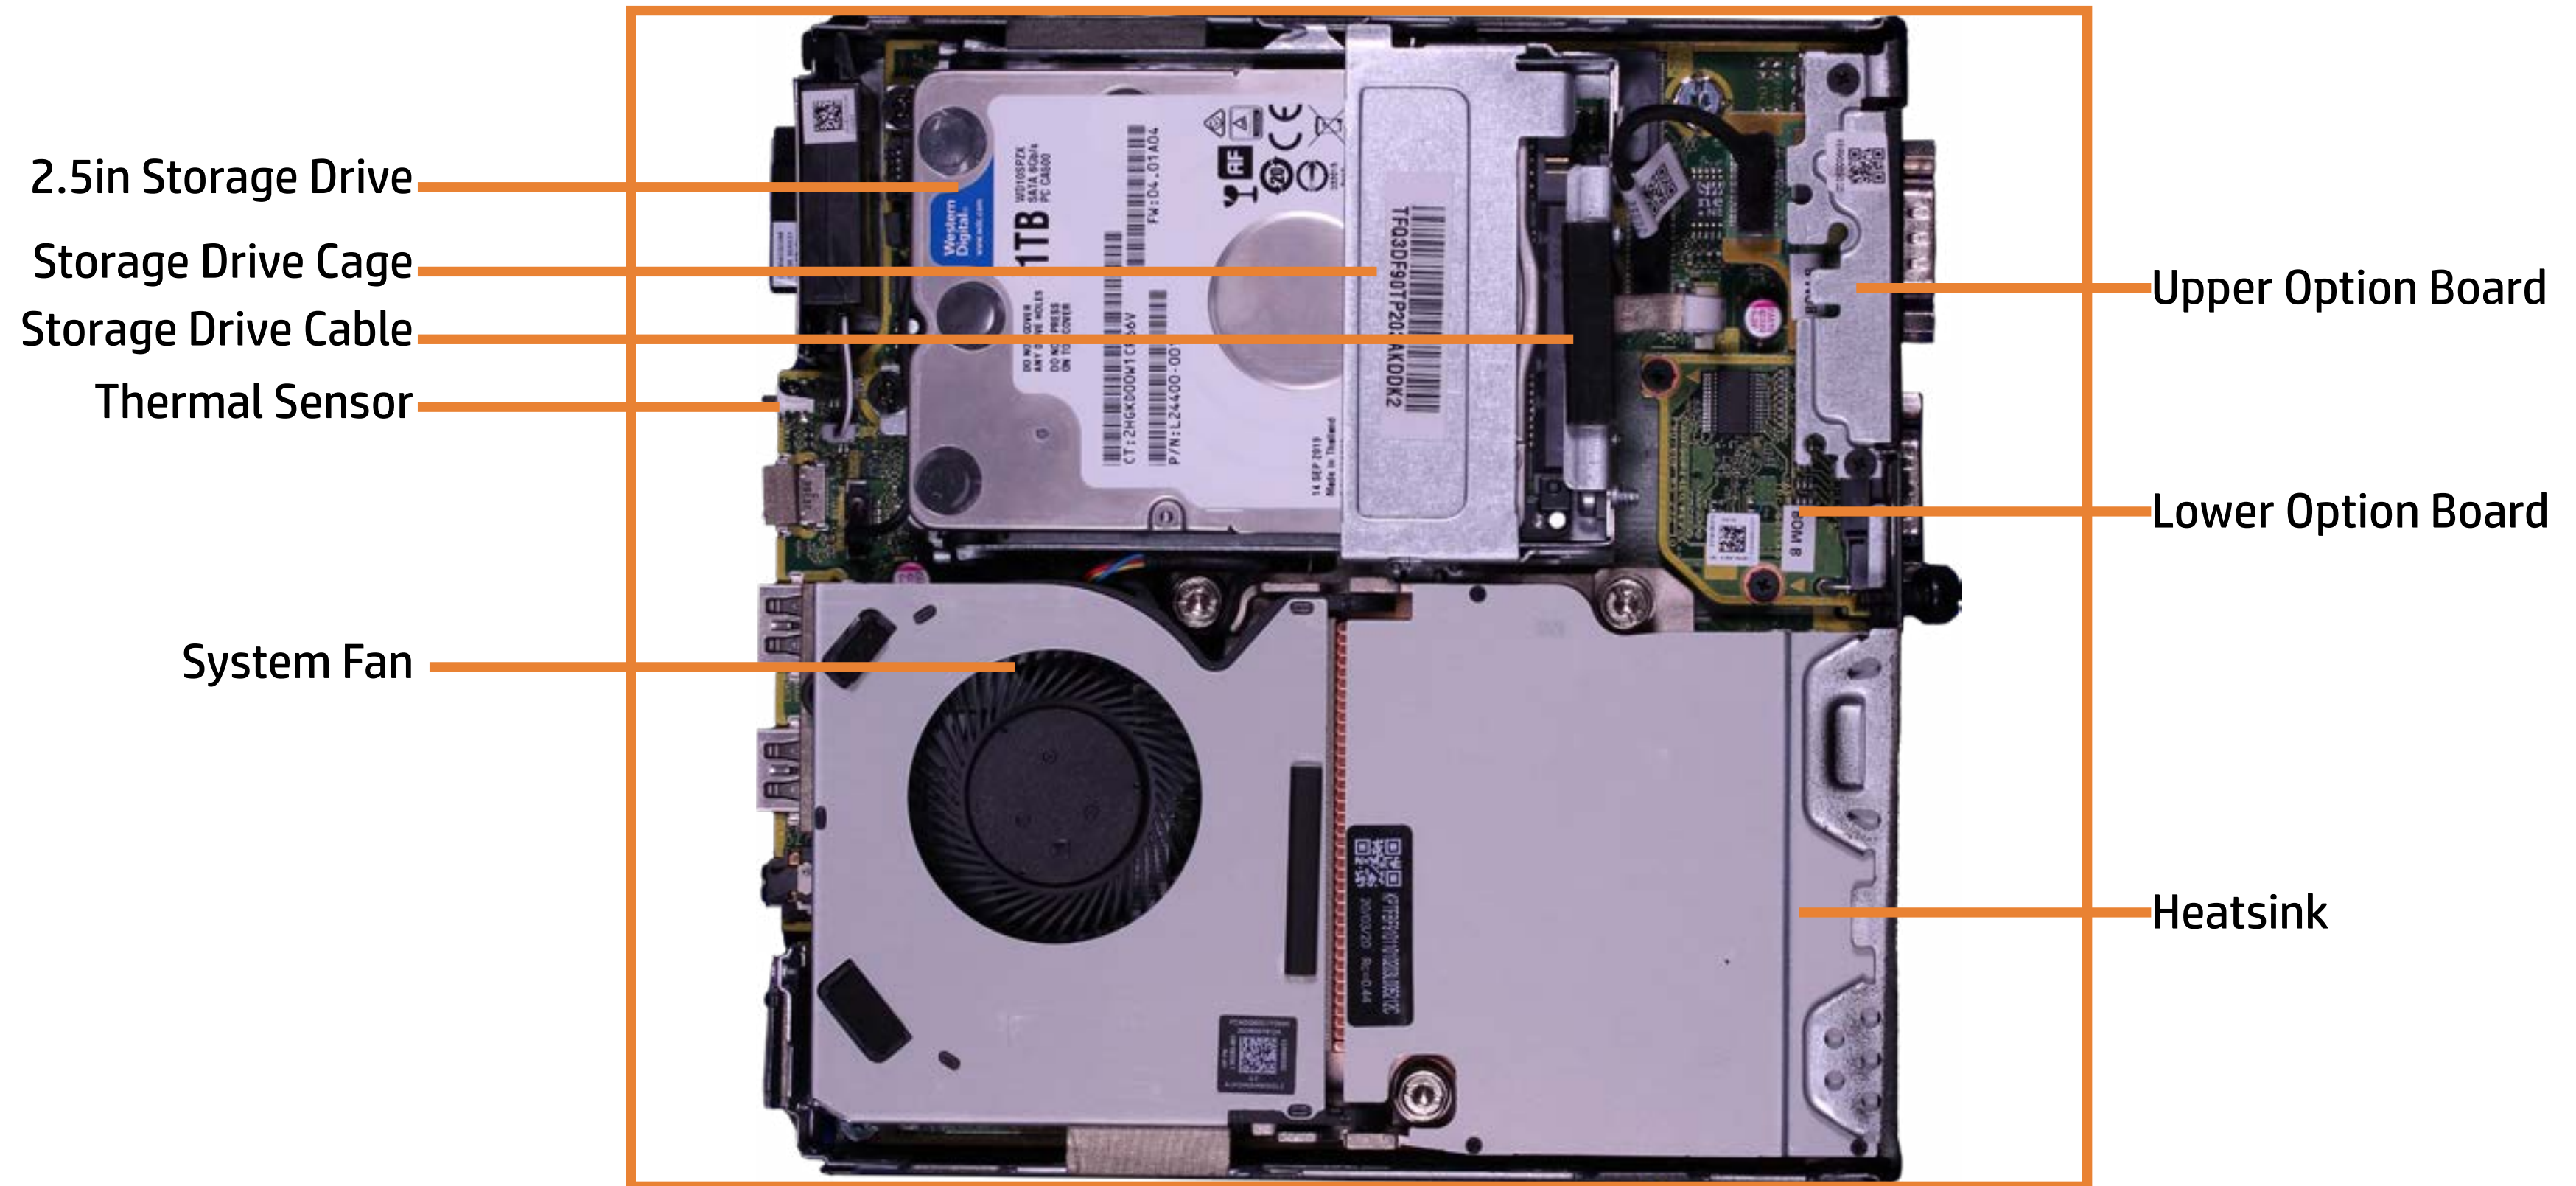



# Internal View 2

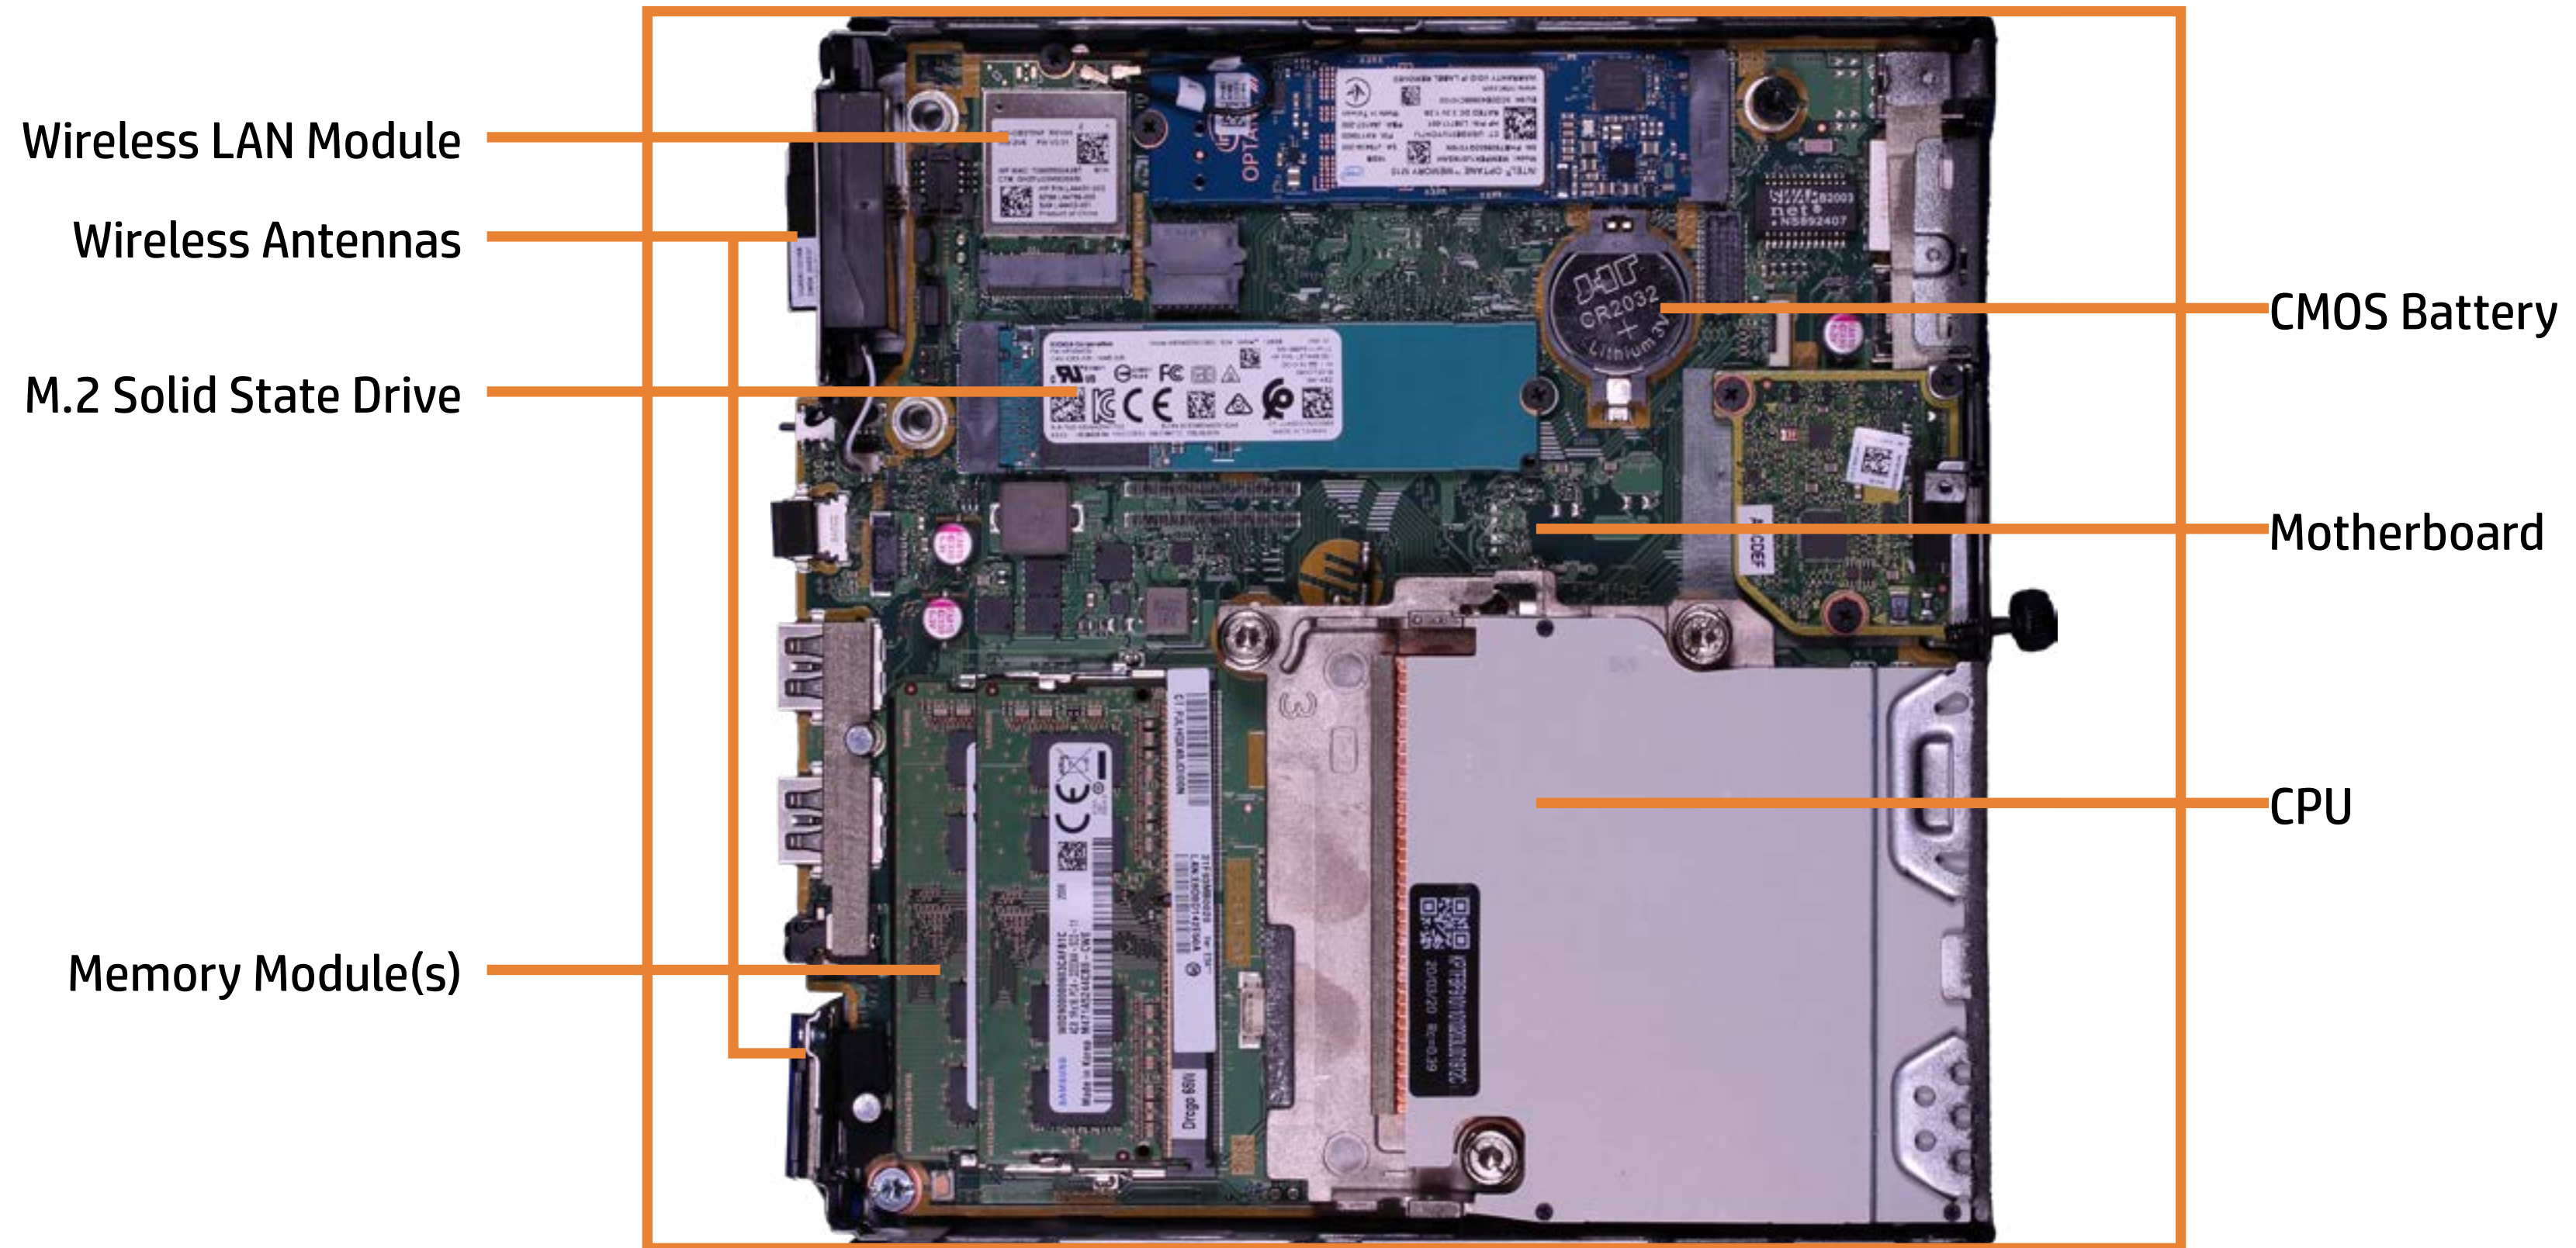

Wireless LAN Module

Wireless Antennas

M.2 Solid State Drive

CMOS Battery

Motherboard

CPU

Memory Module(s)

# Access Panel

Access Panel





## 2.5in Storage Drive






# Storage Drive Cage






# Storage Drive Cage Fan

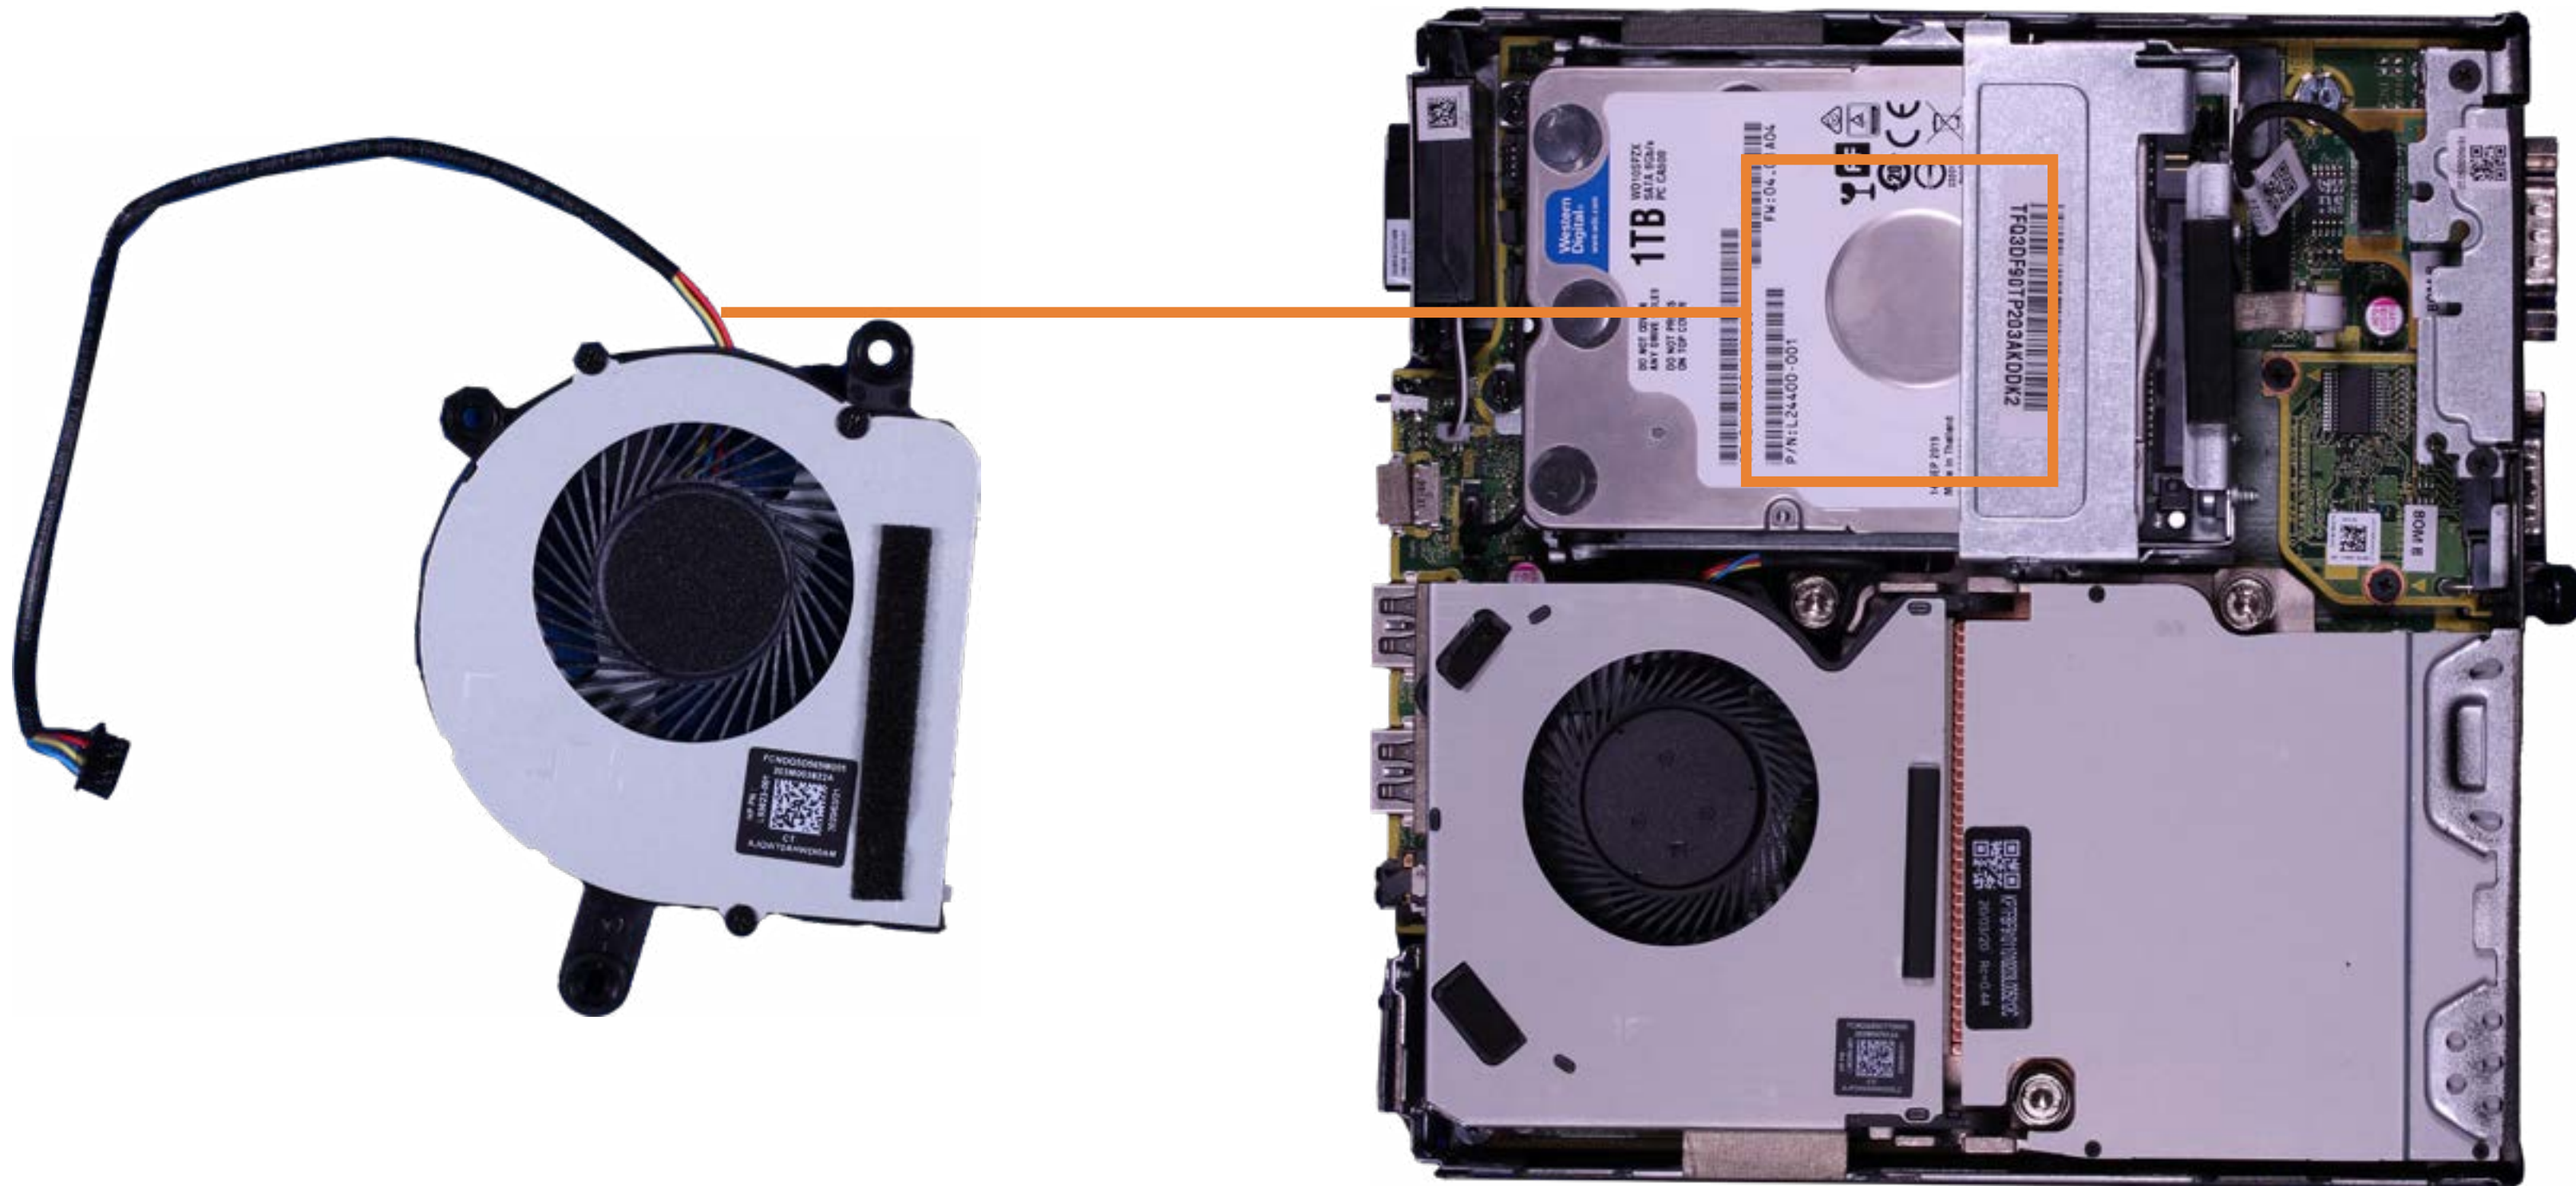



# Storage Drive Cable

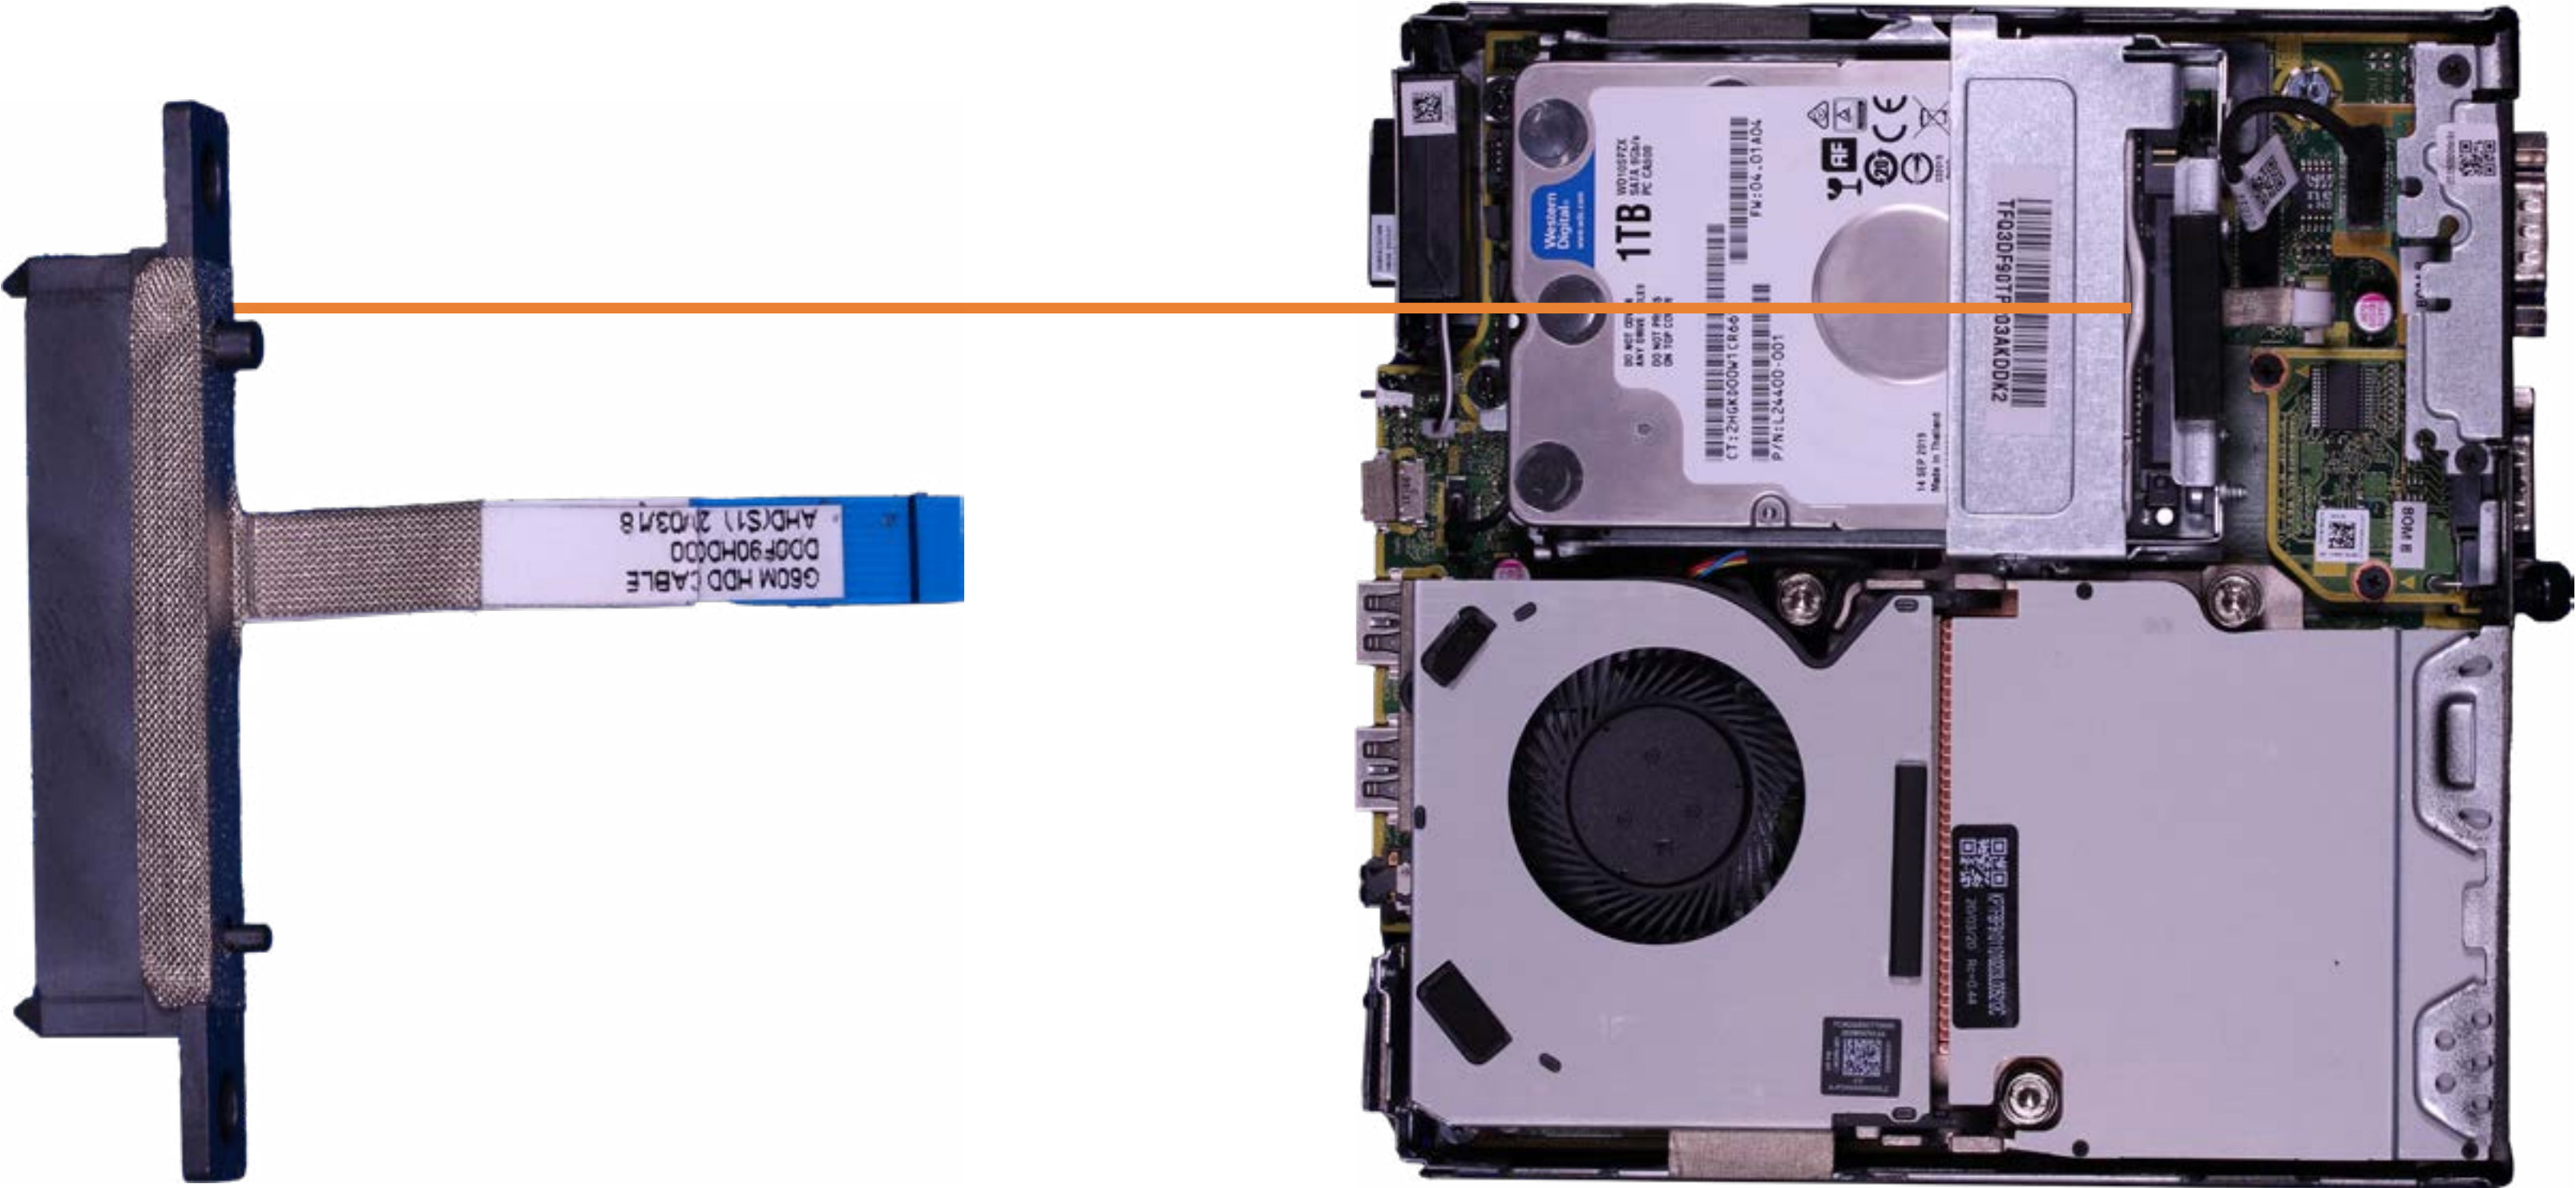




# System Fan





# Upper Option Board

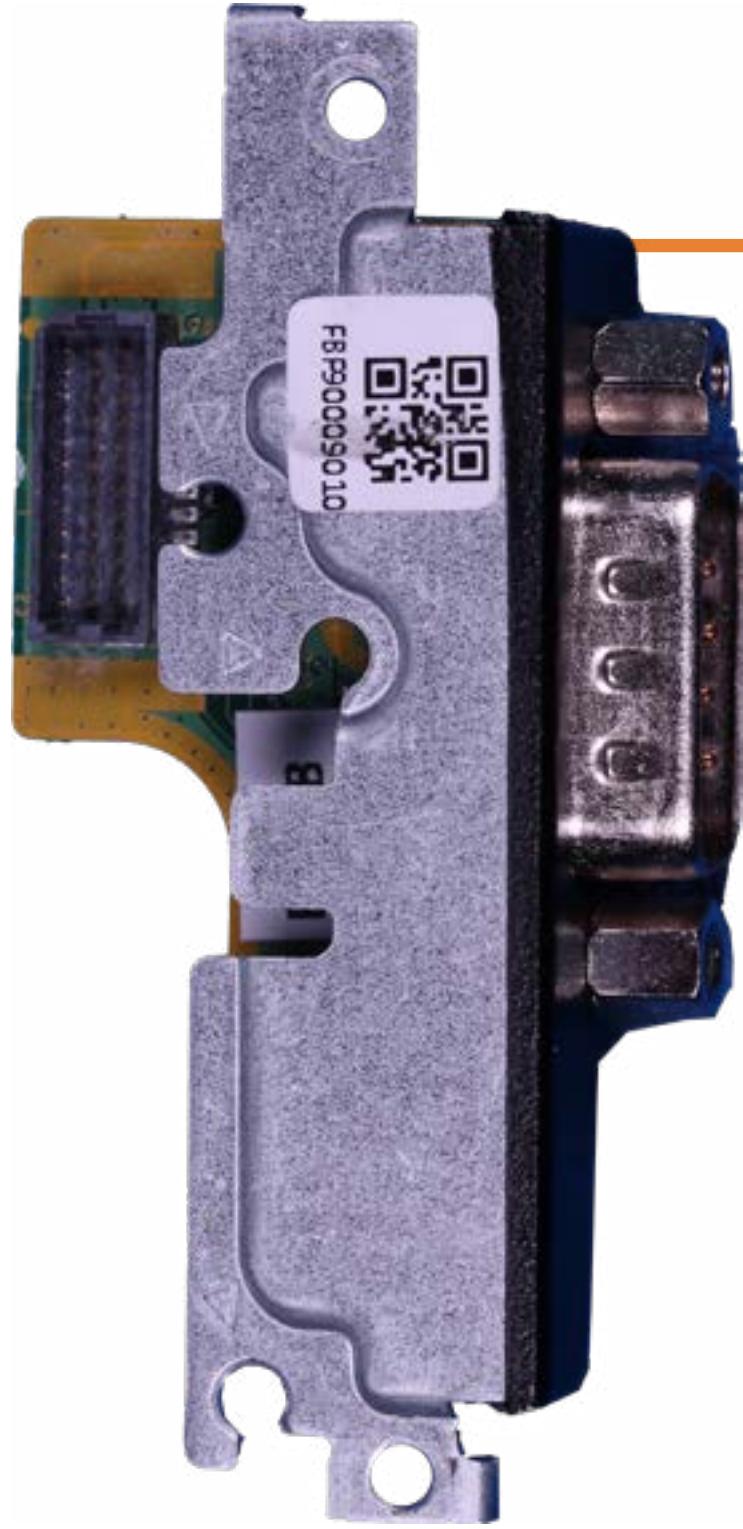




# Memory Module(s)






# Thermal Sensor

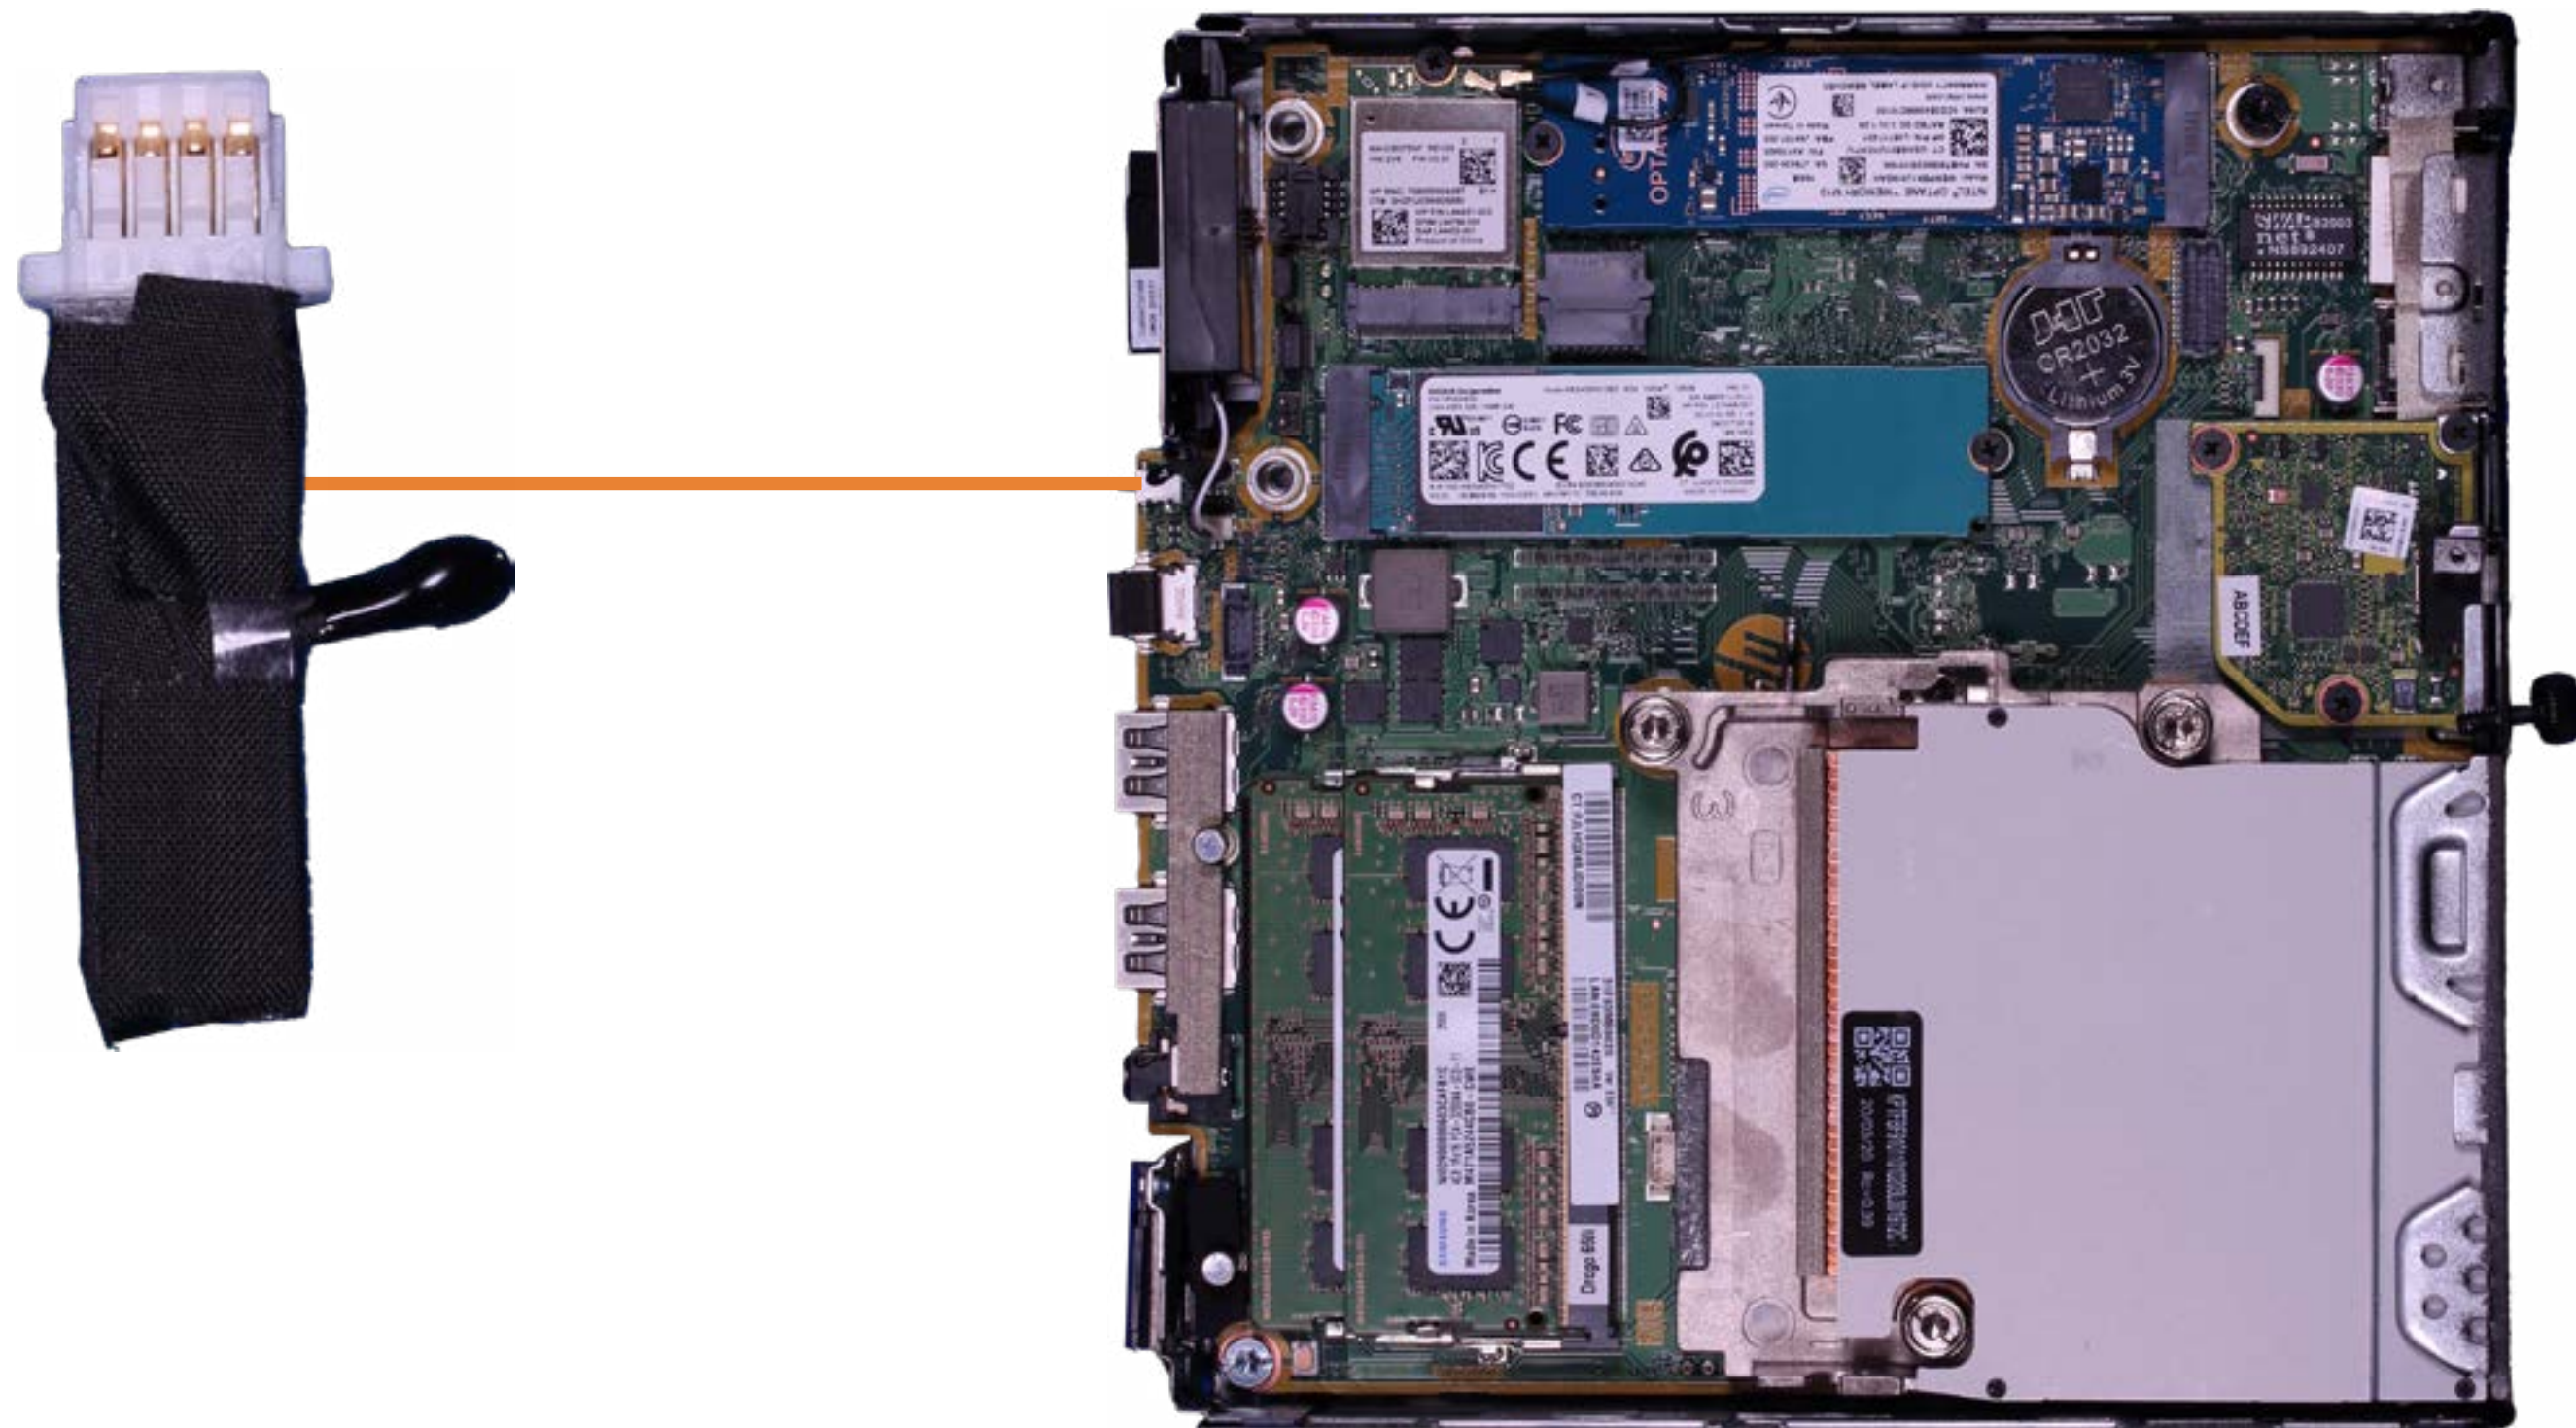




# Speaker

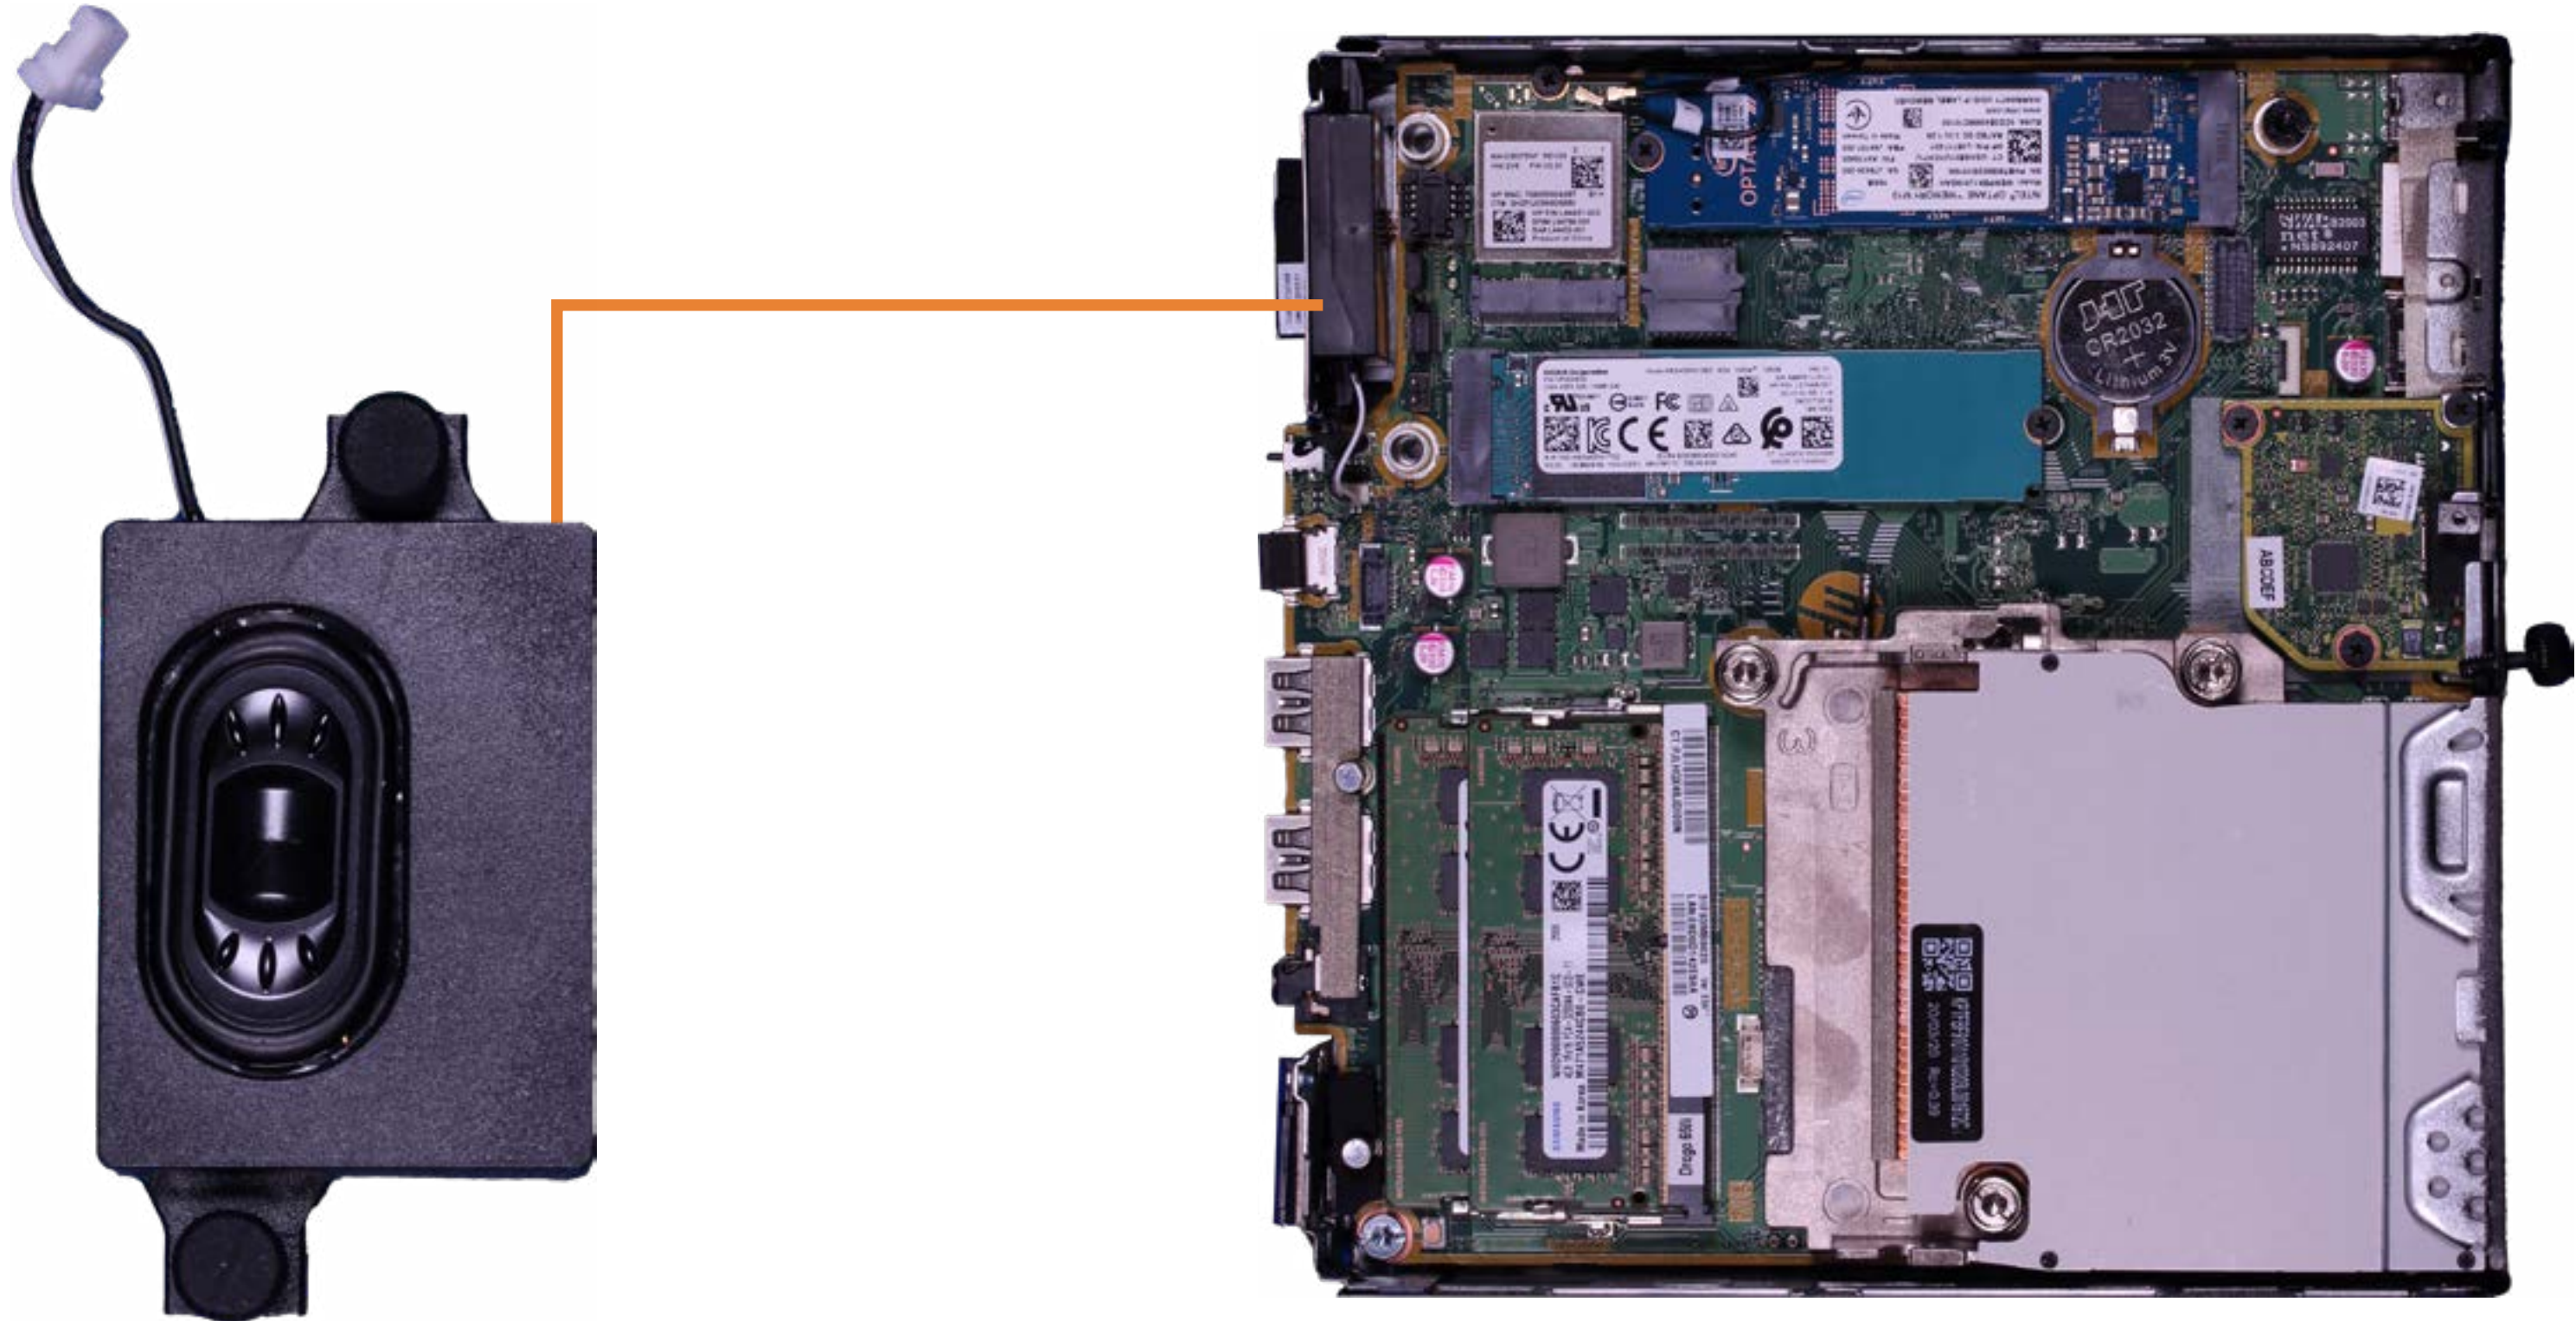



# Wireless LAN Module

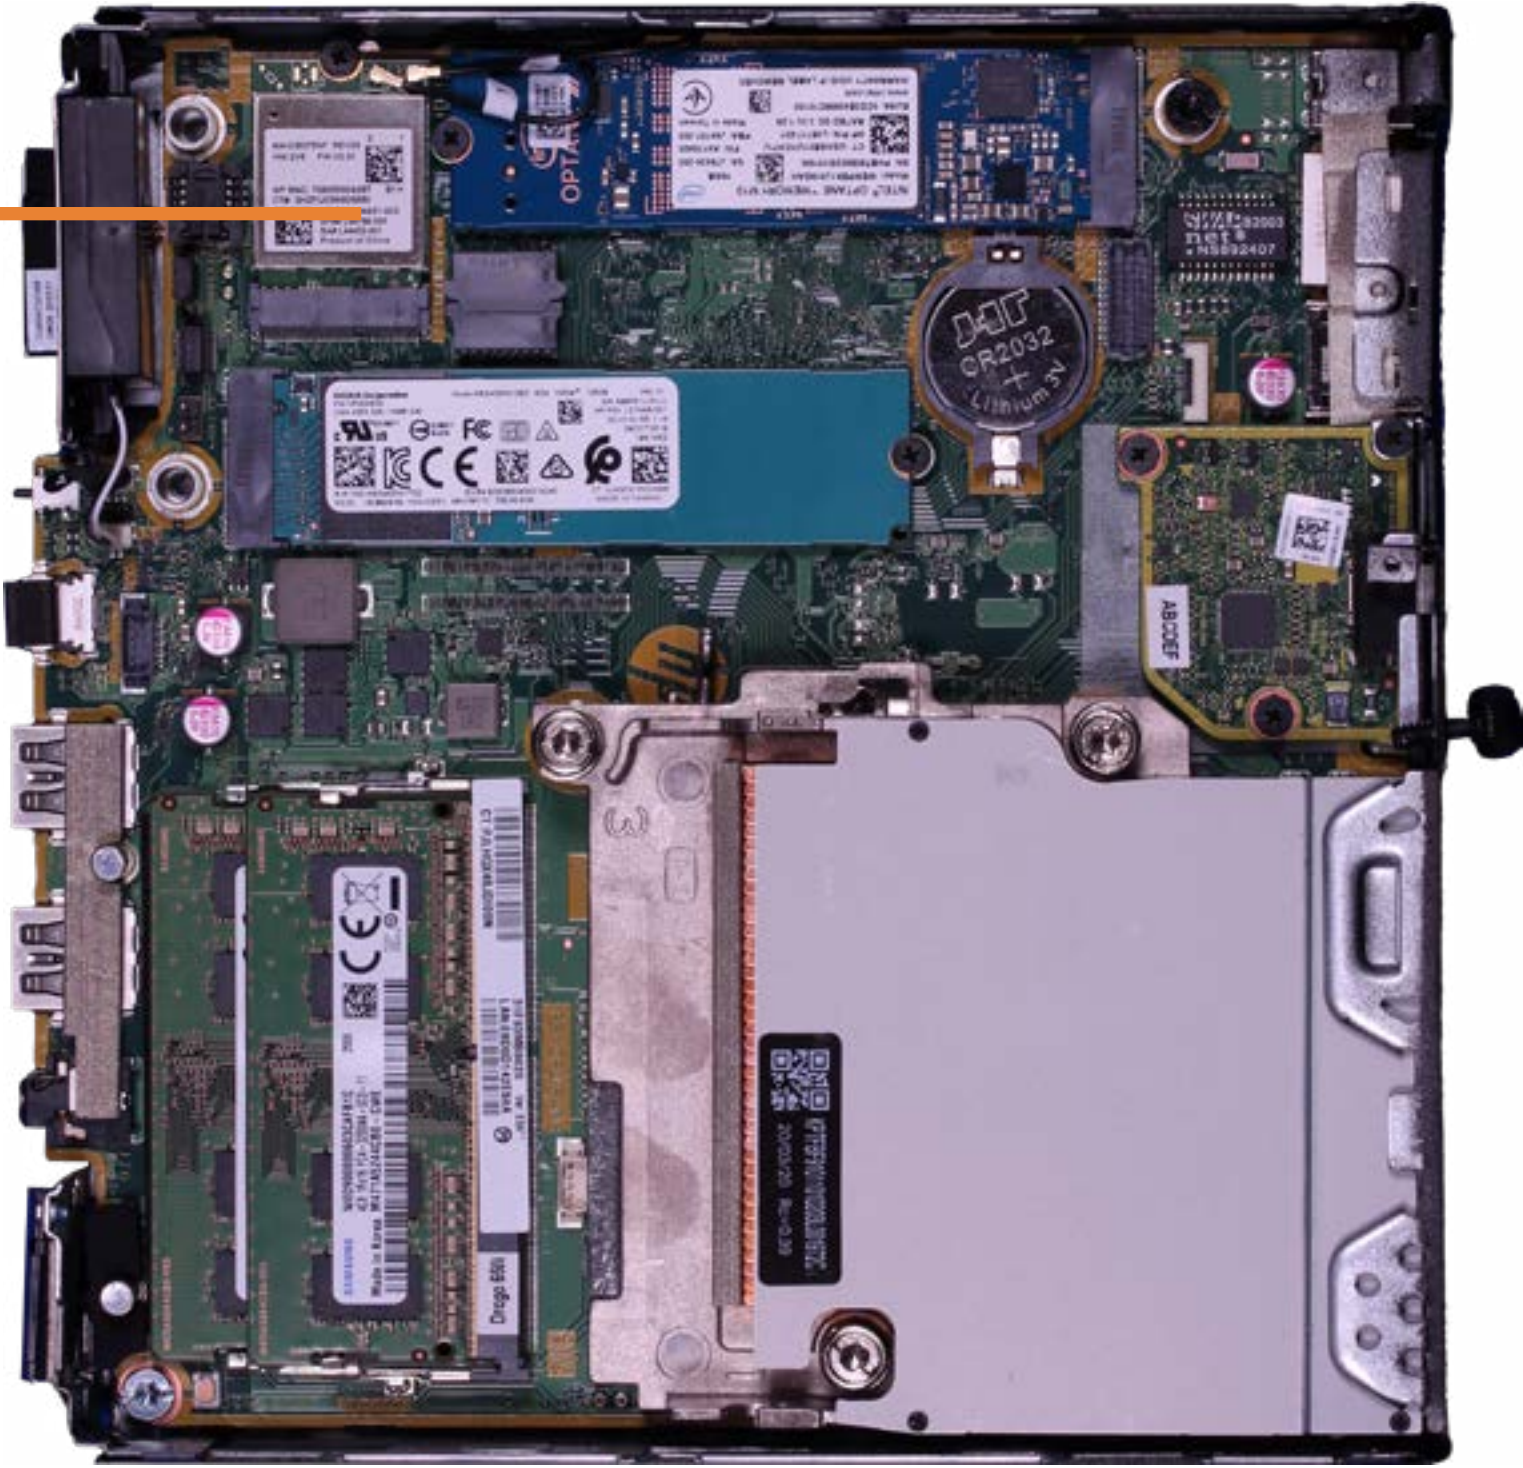




# M.2 Solid State Drive







# Lower Option Board

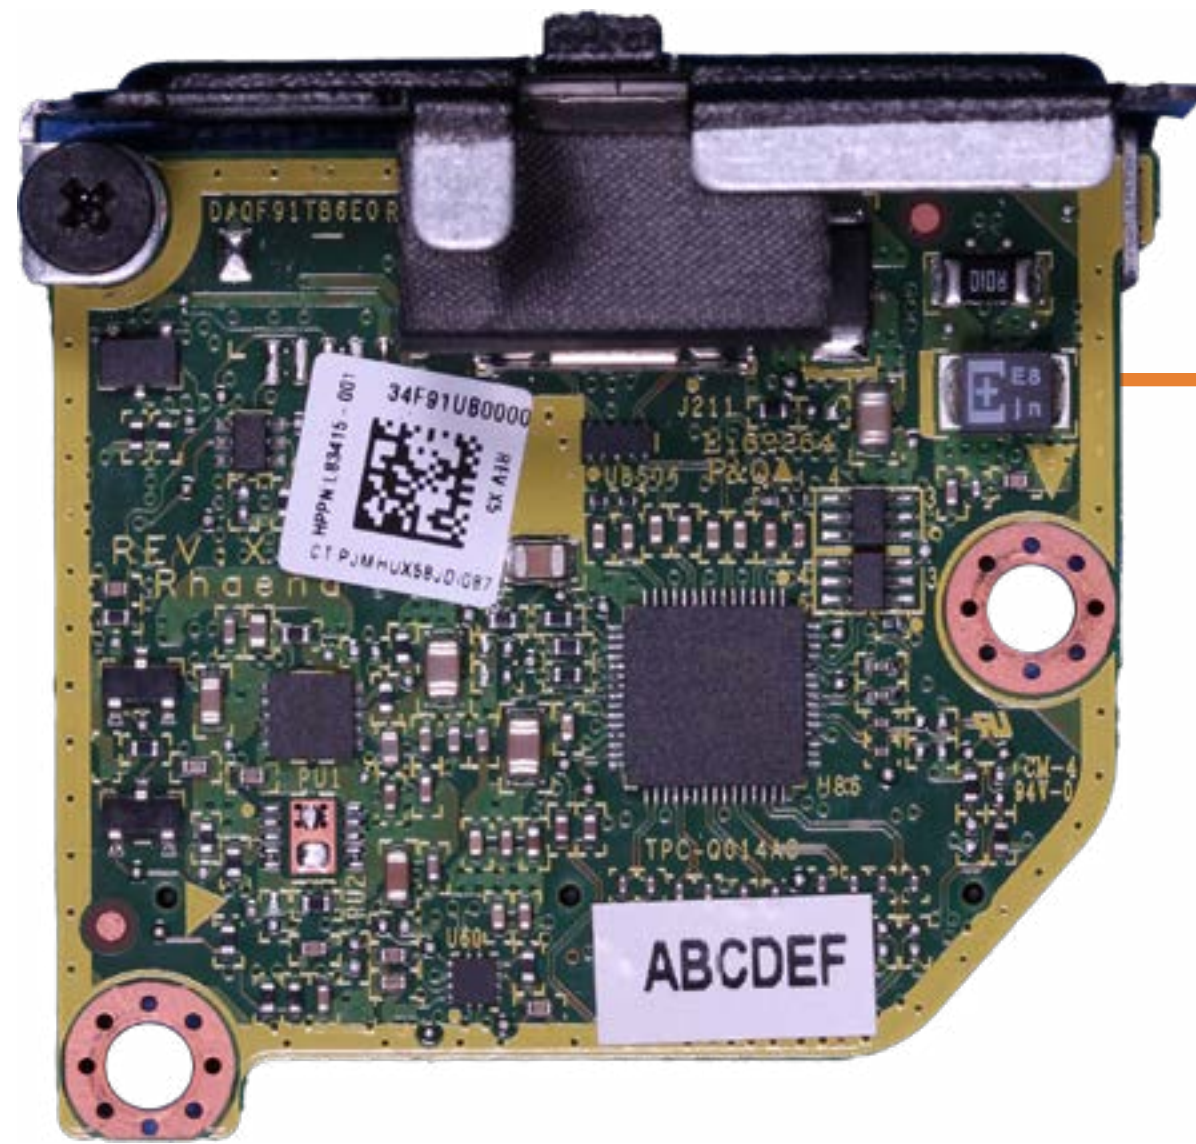





# CMOS Battery

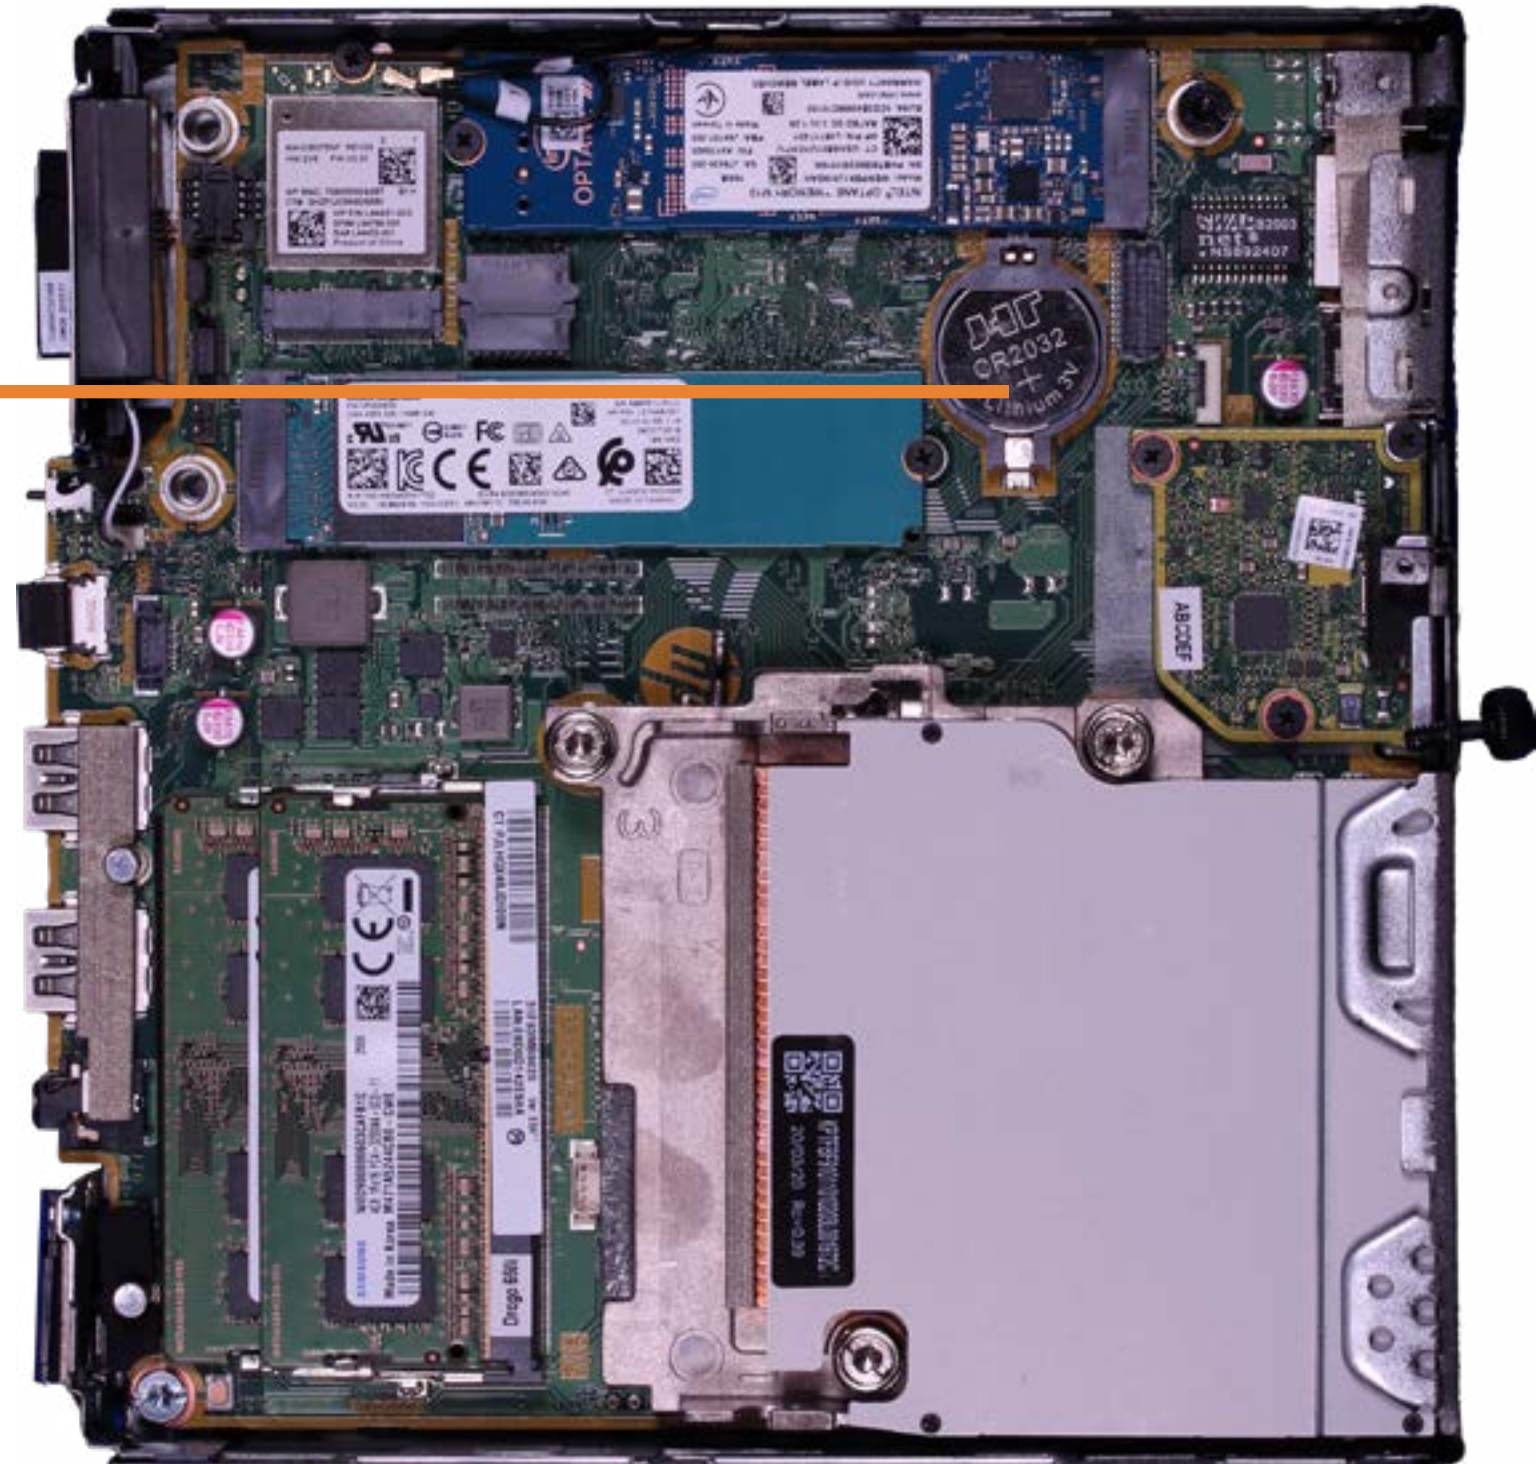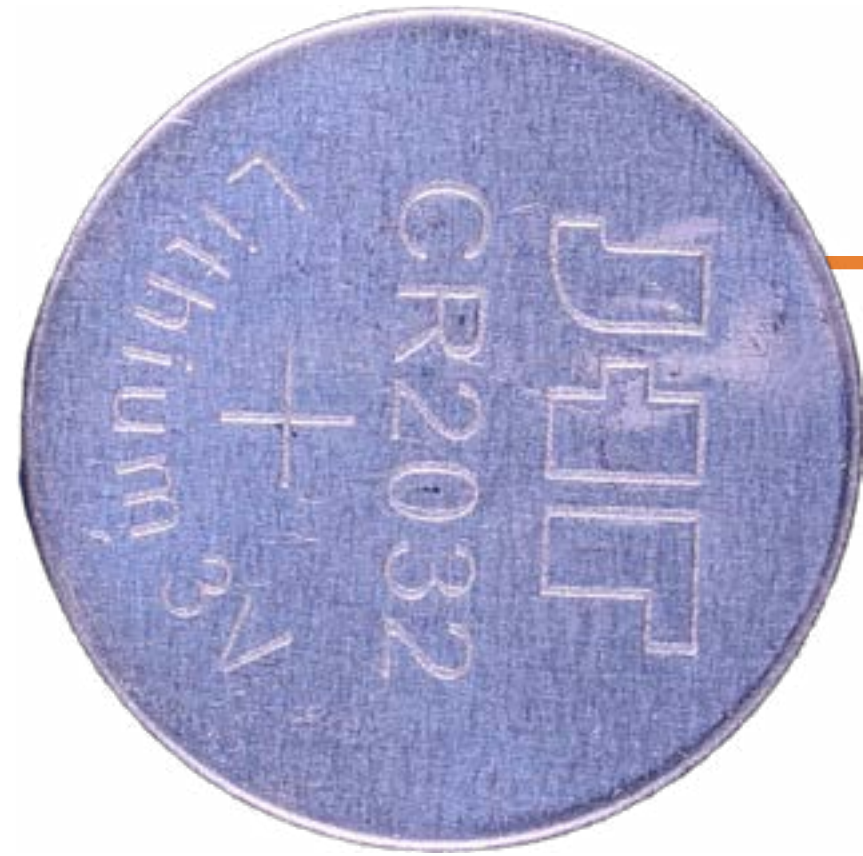



# Heat sink

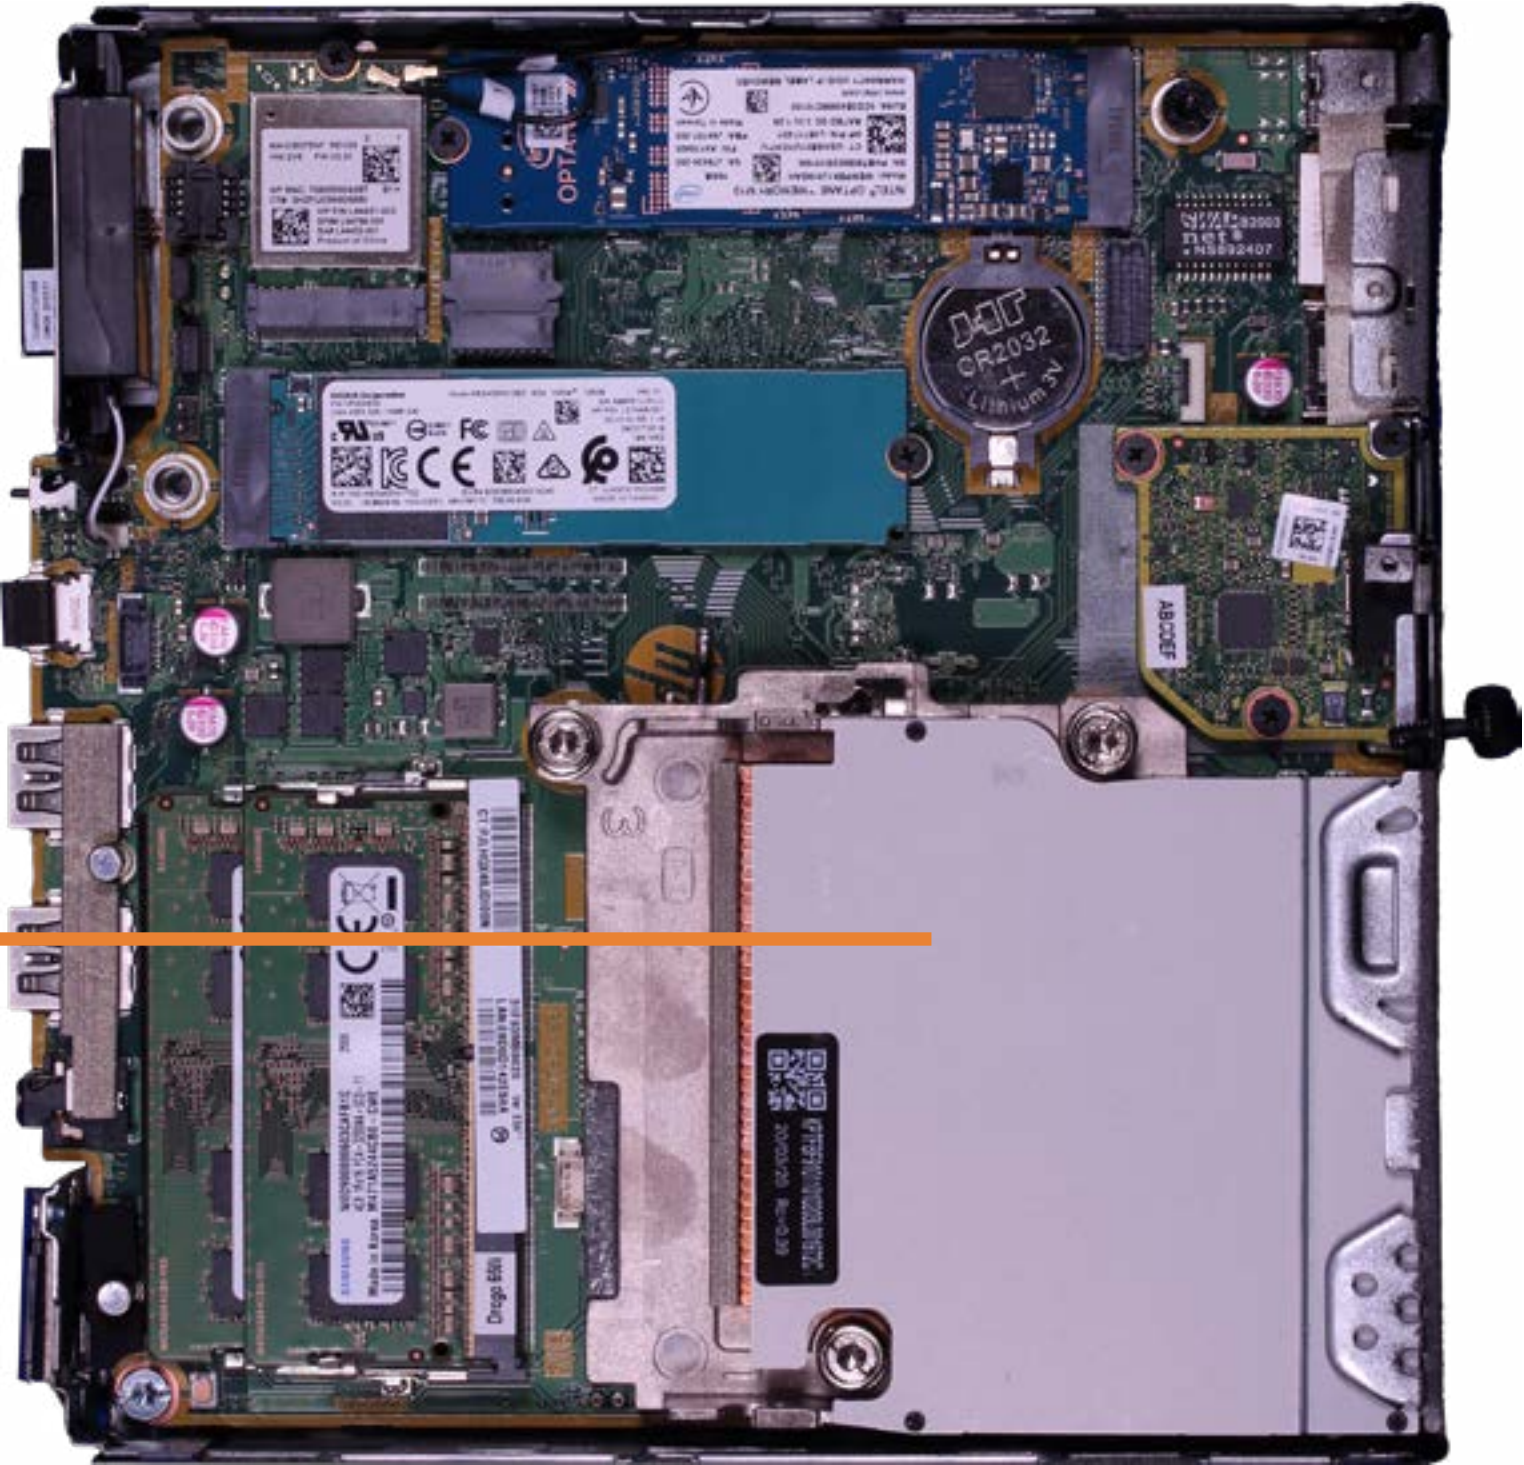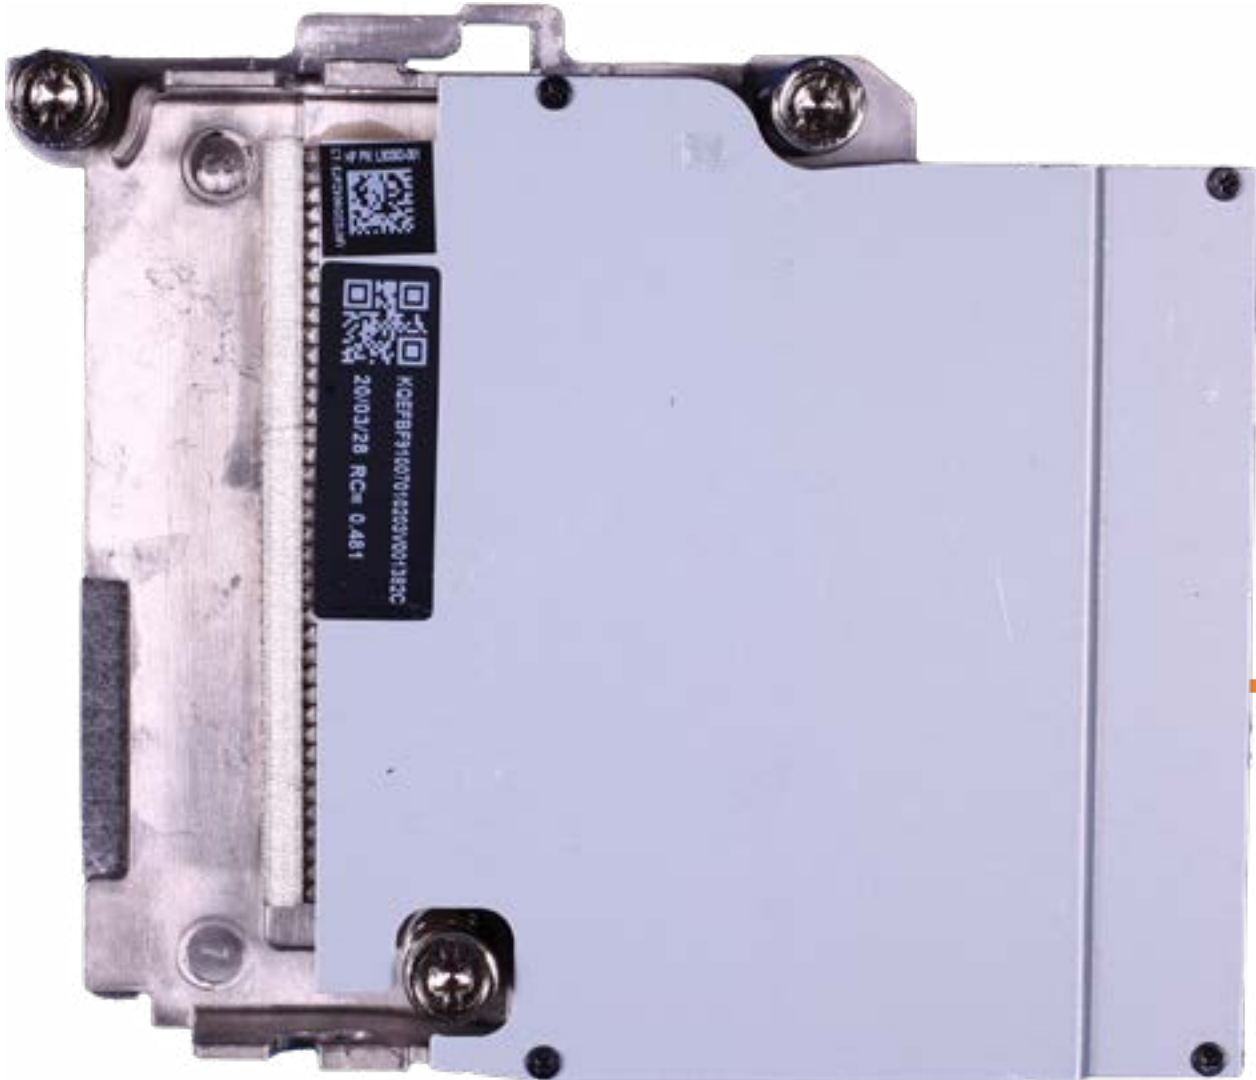




# CPU





# Mother Board

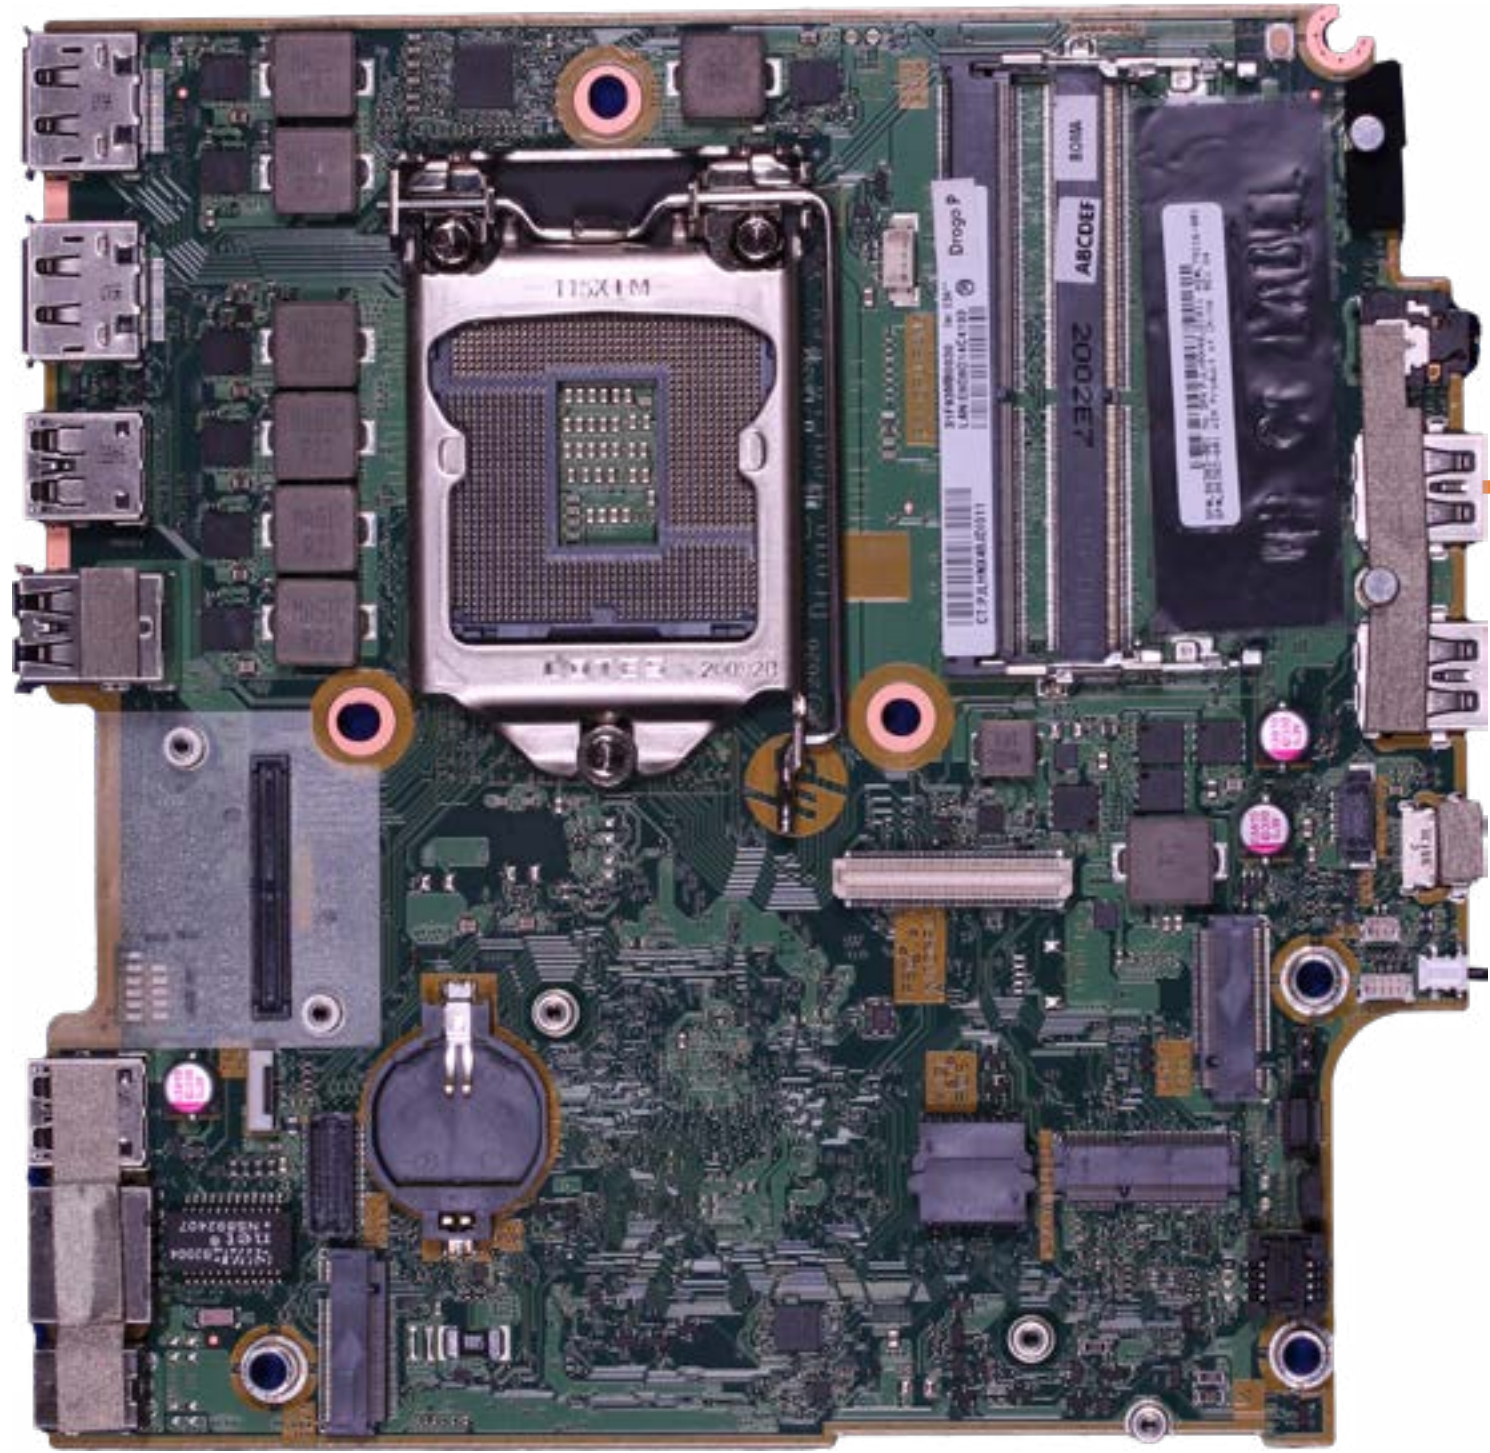



# Wireless Antennas

