

Interactive Part Locator

HP Chromebook 11a-na0000

Welcome to the interactive part locator
for the HP Chromebook 11a-na0000

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

[Back to Welcome page](#)



Front



Left



Right



Rear



Display



Top



Internal



Bottom

[Go to Parts List](#)

Front View

[Back to External Views](#)



[Go to Parts List](#)

Left View

[Back to External Views](#)




USB-A 2.0 port

[Go to Parts List](#)

Right View


[Back to External Views](#)

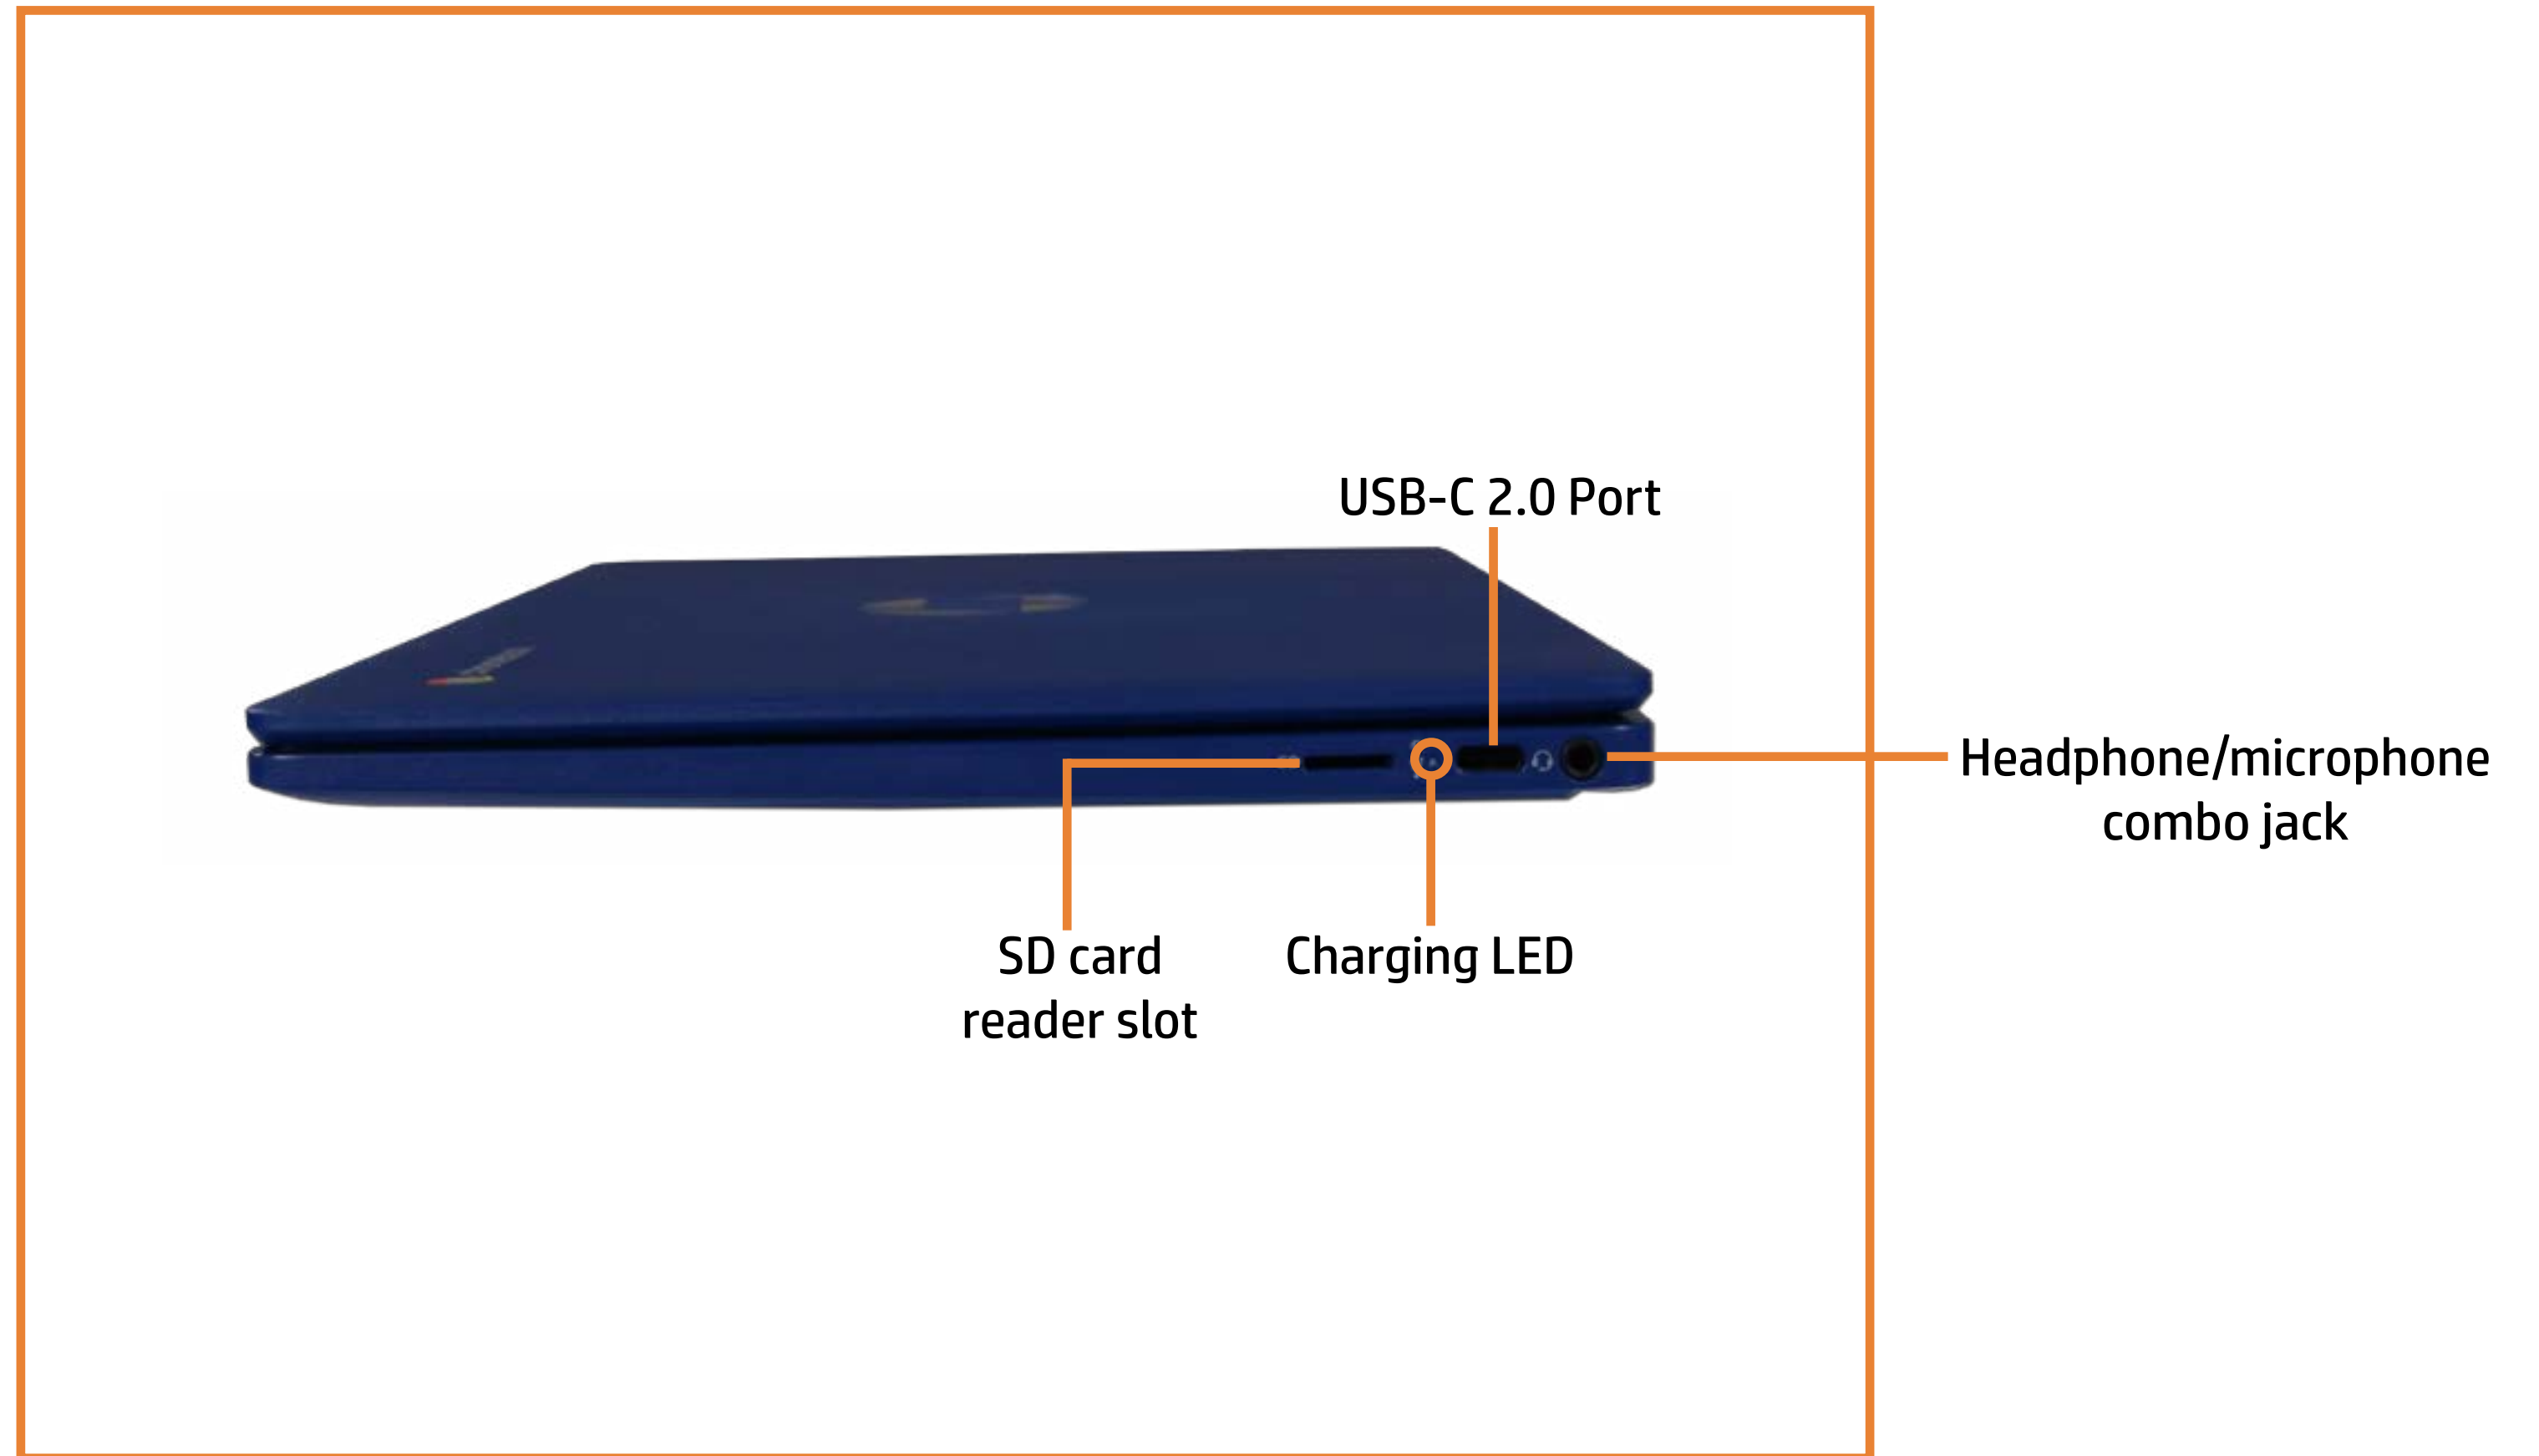

[Go to Parts List](#)

Display View


[Back to External Views](#)

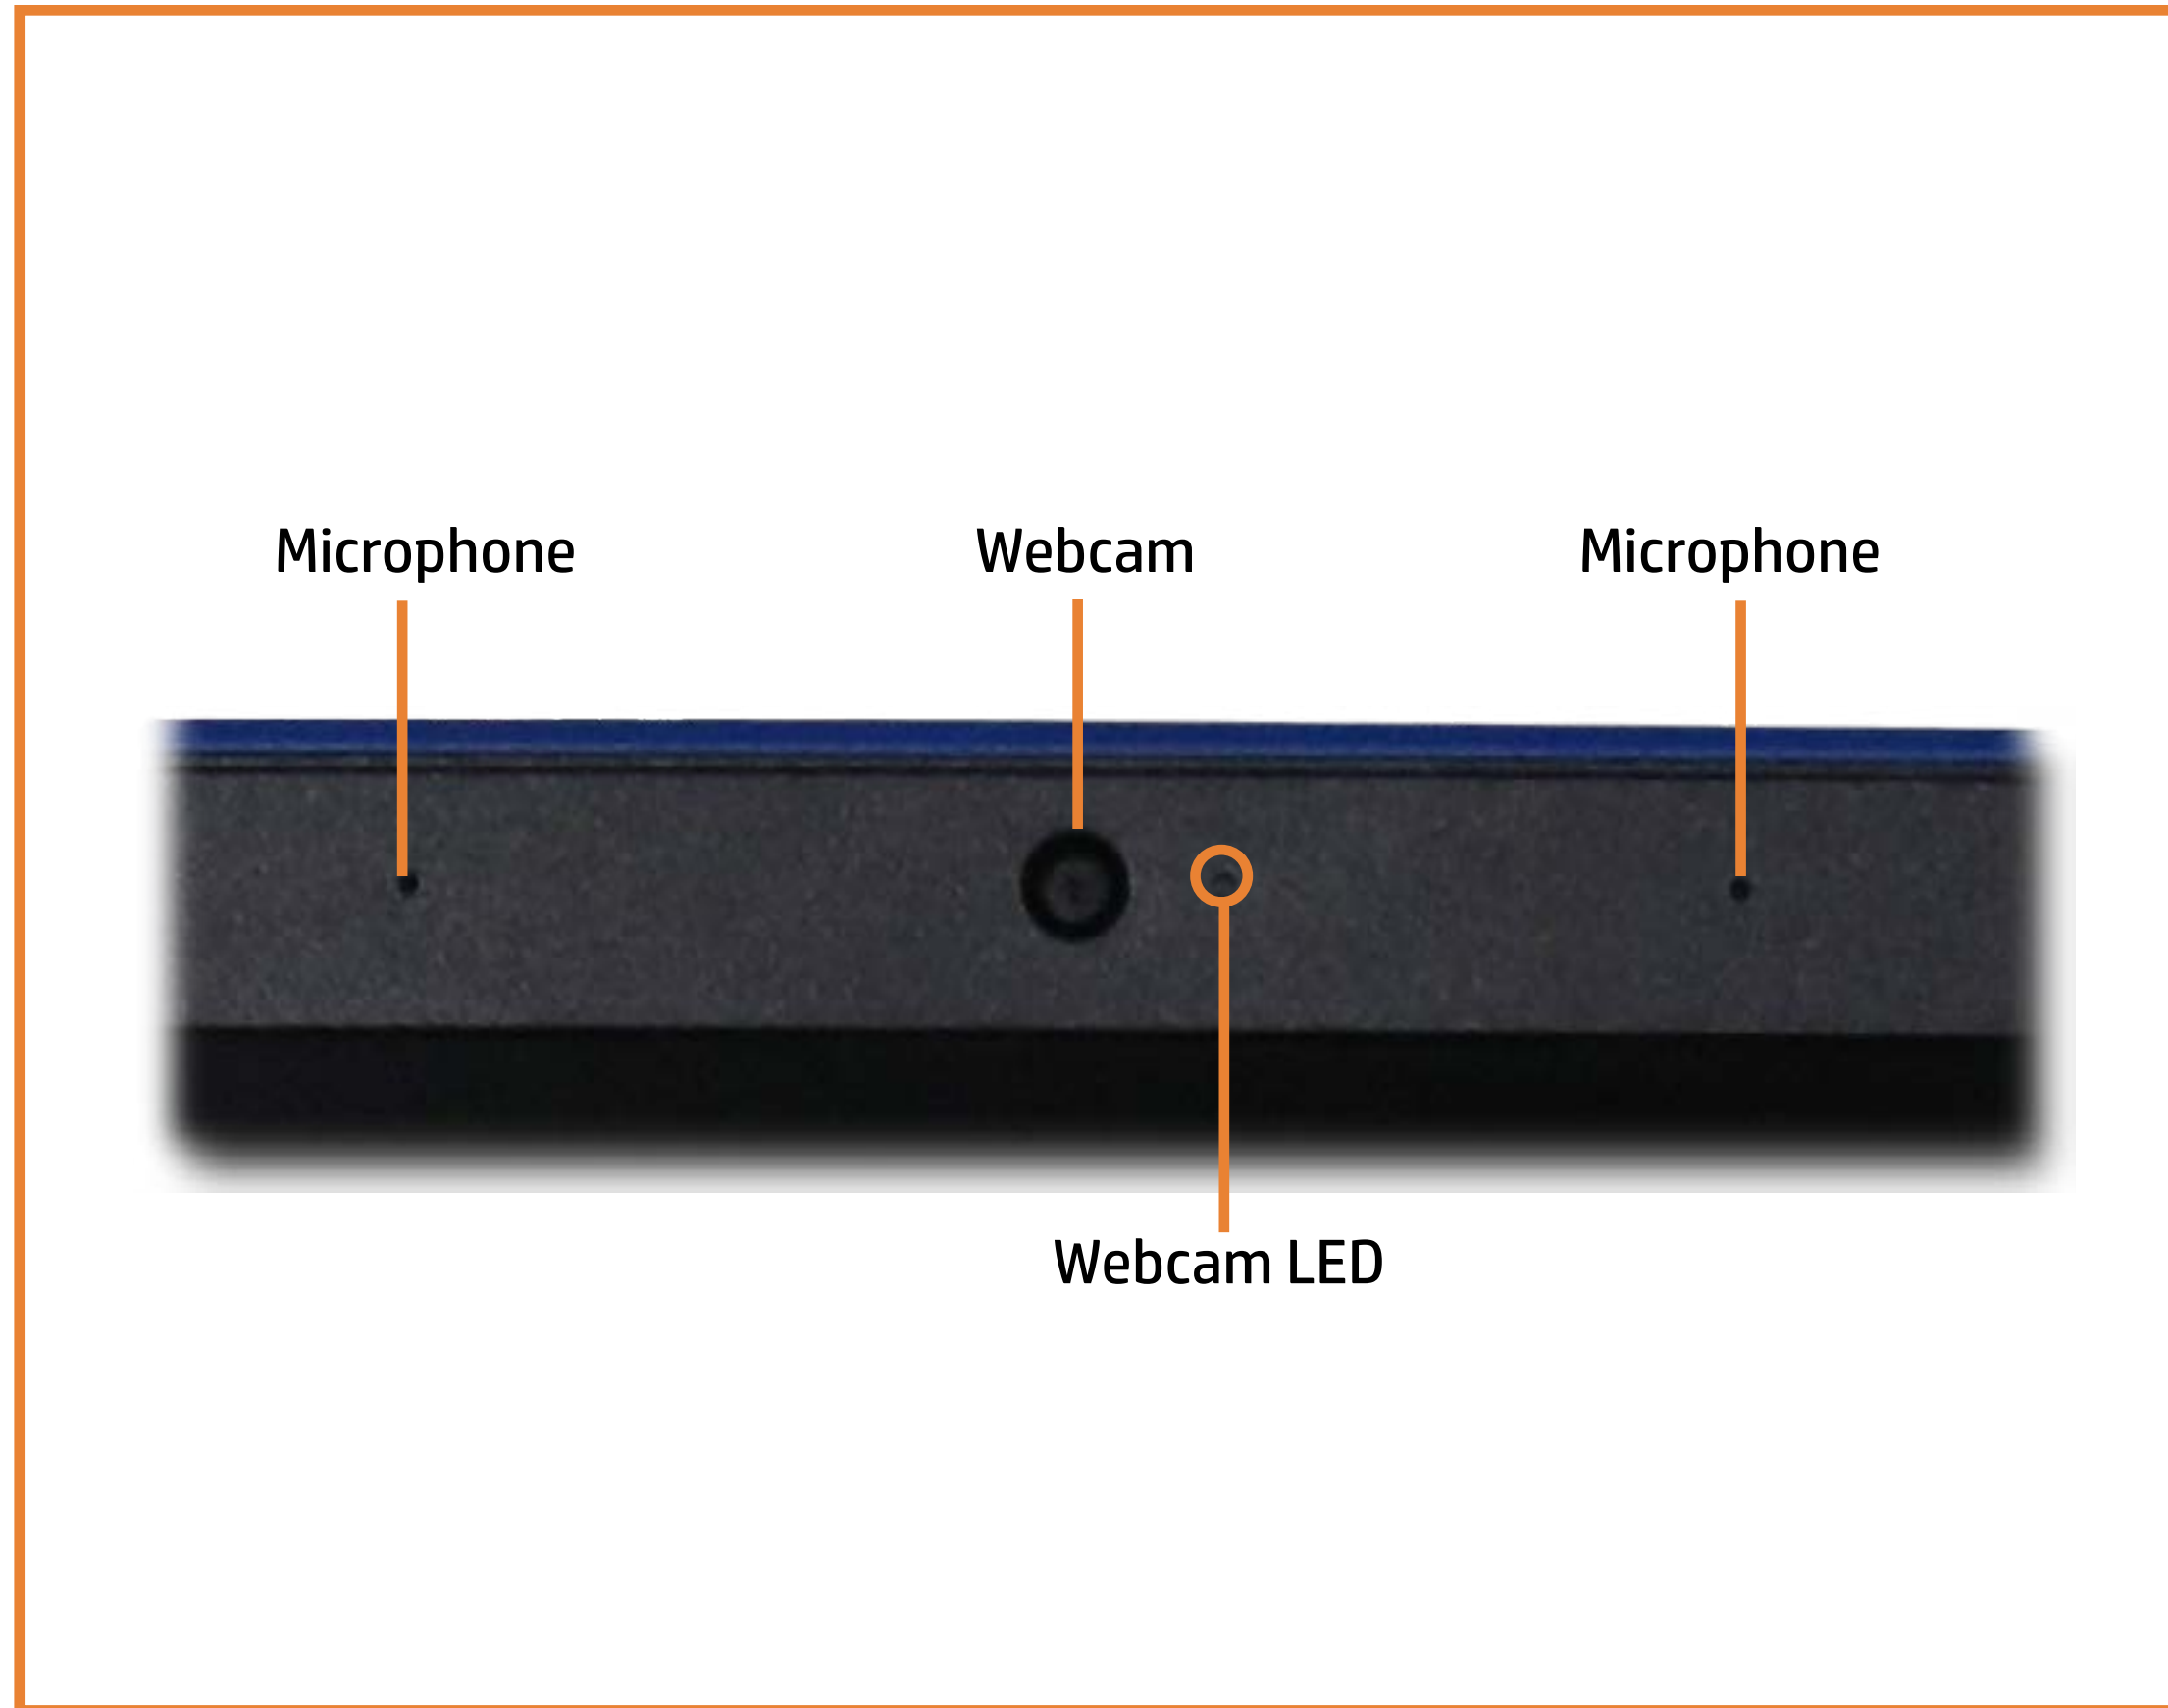

[Go to Parts List](#)

Rear View

[Back to External Views](#)

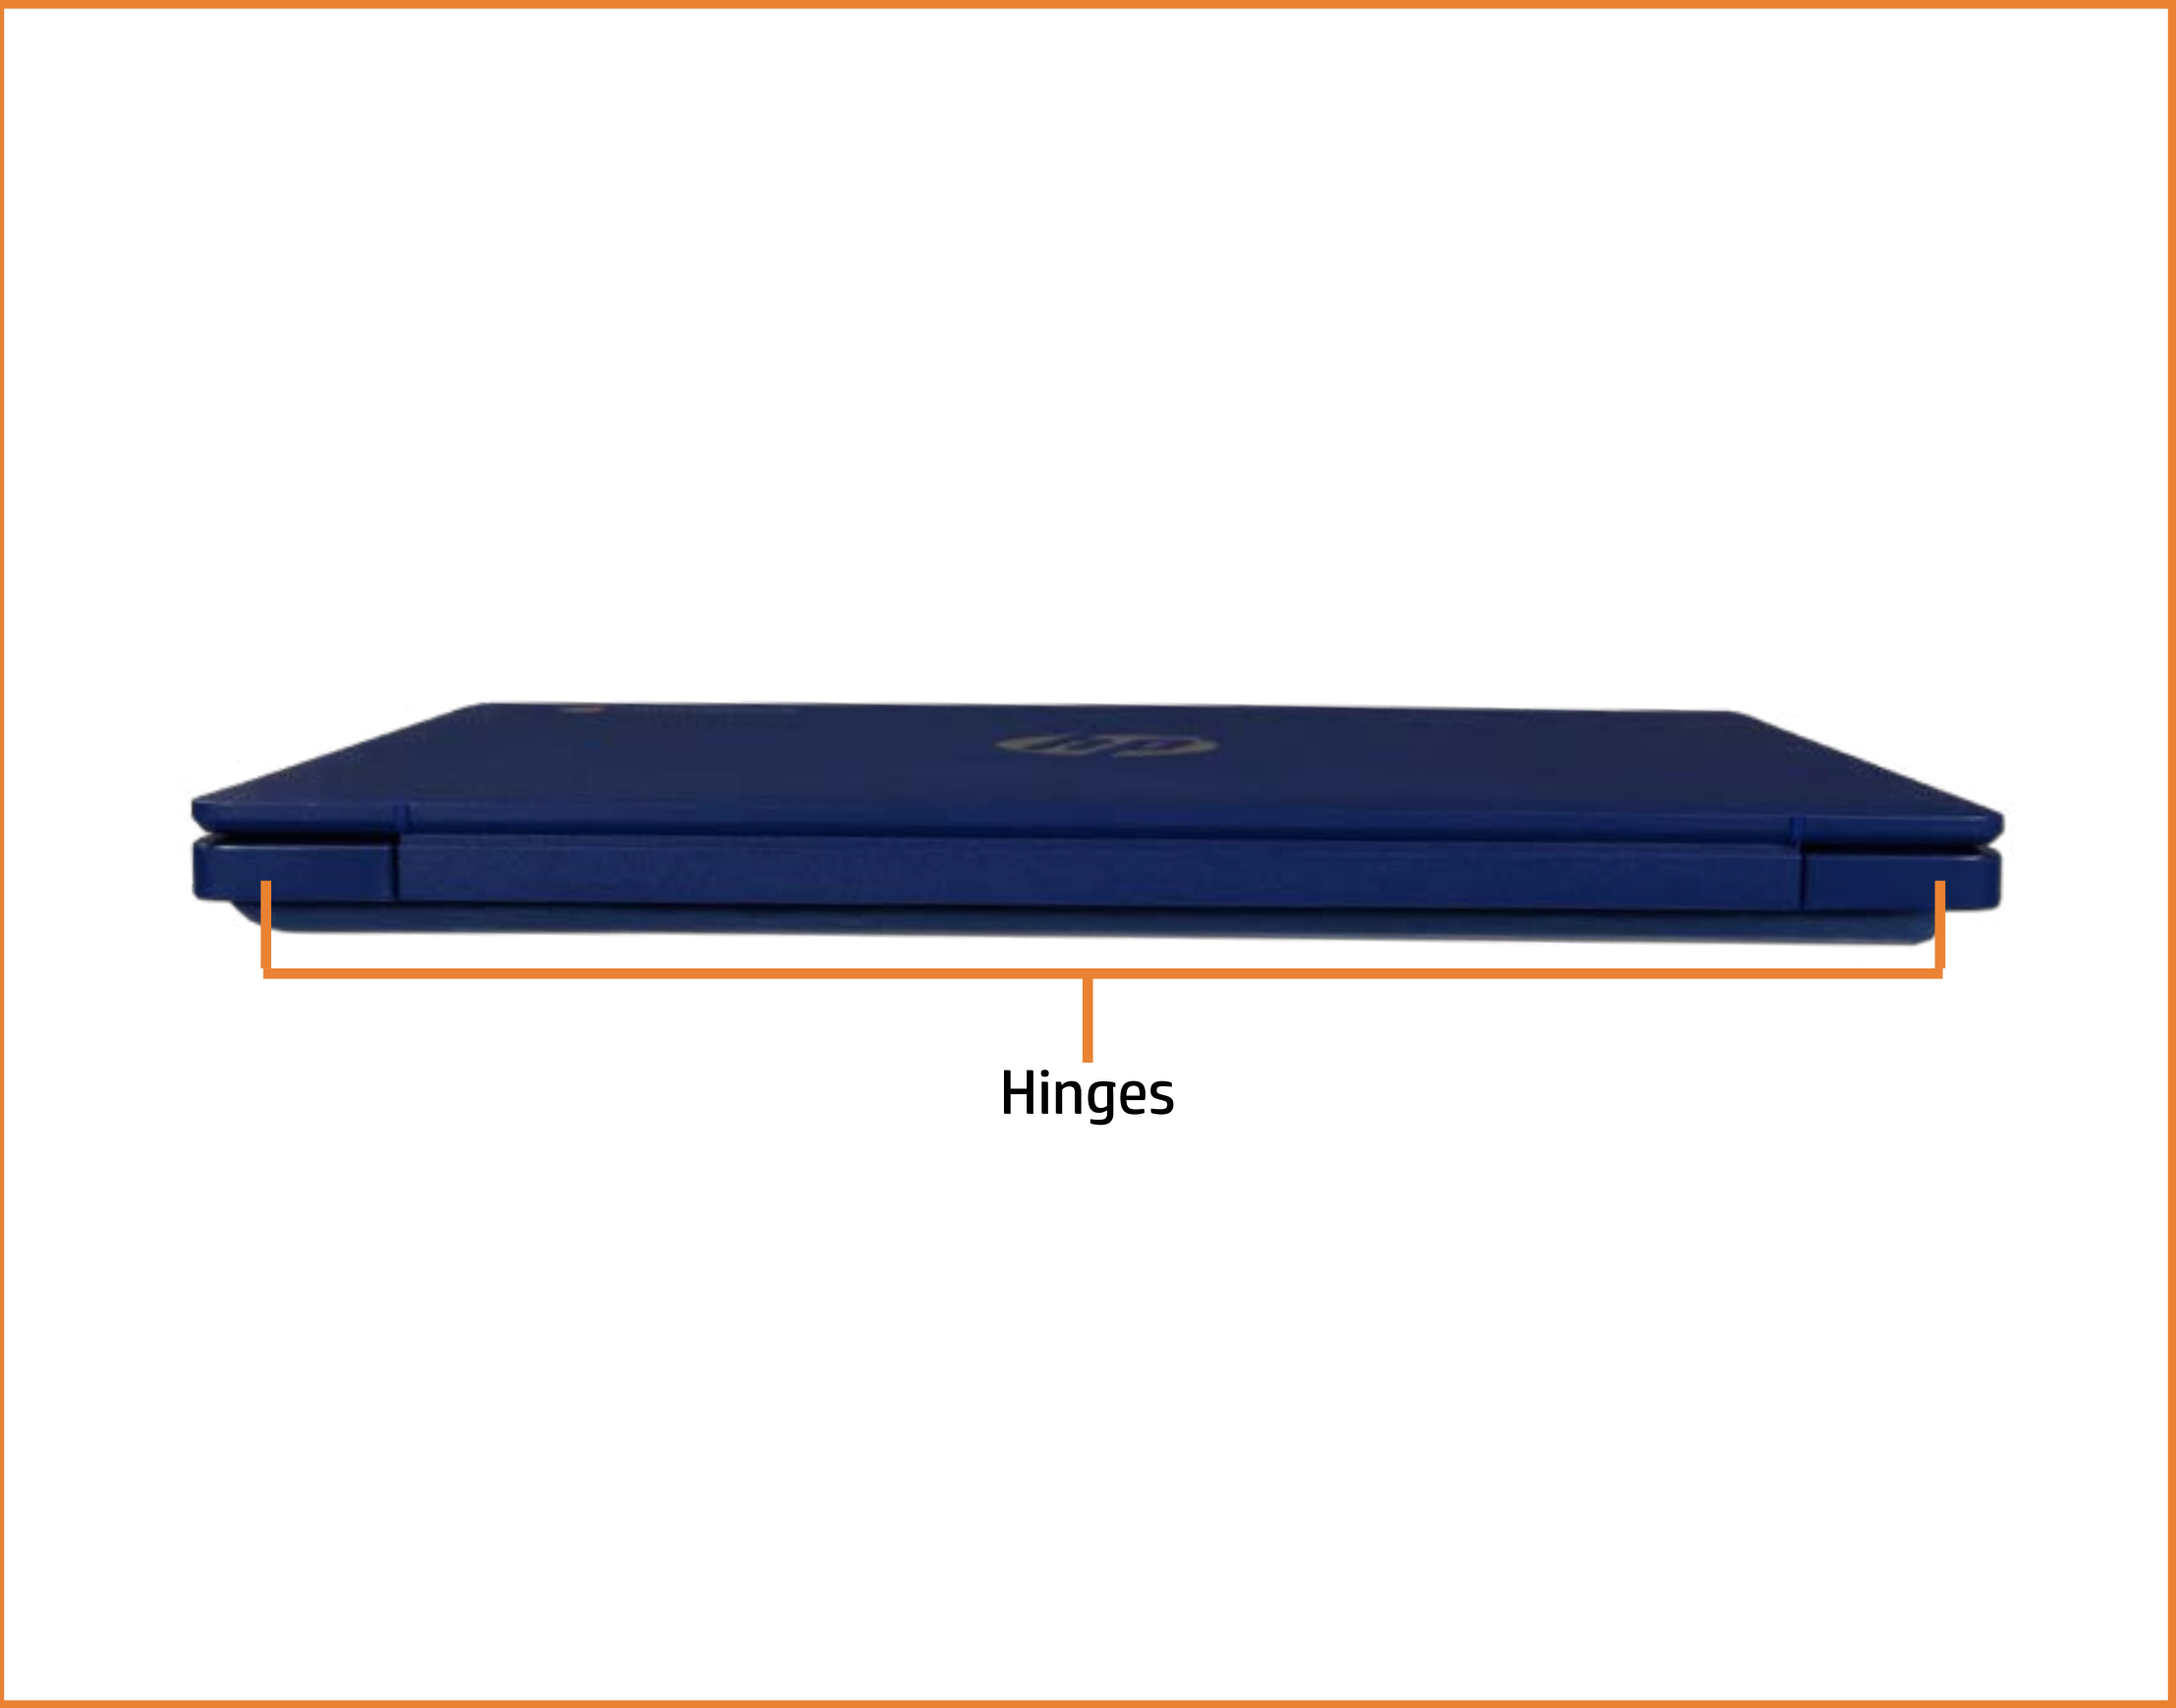

Hinges

[Go to Parts List](#)

Top View


[Back to External Views](#)



[Go to Parts List](#)

Internal View

[Back to External Views](#)

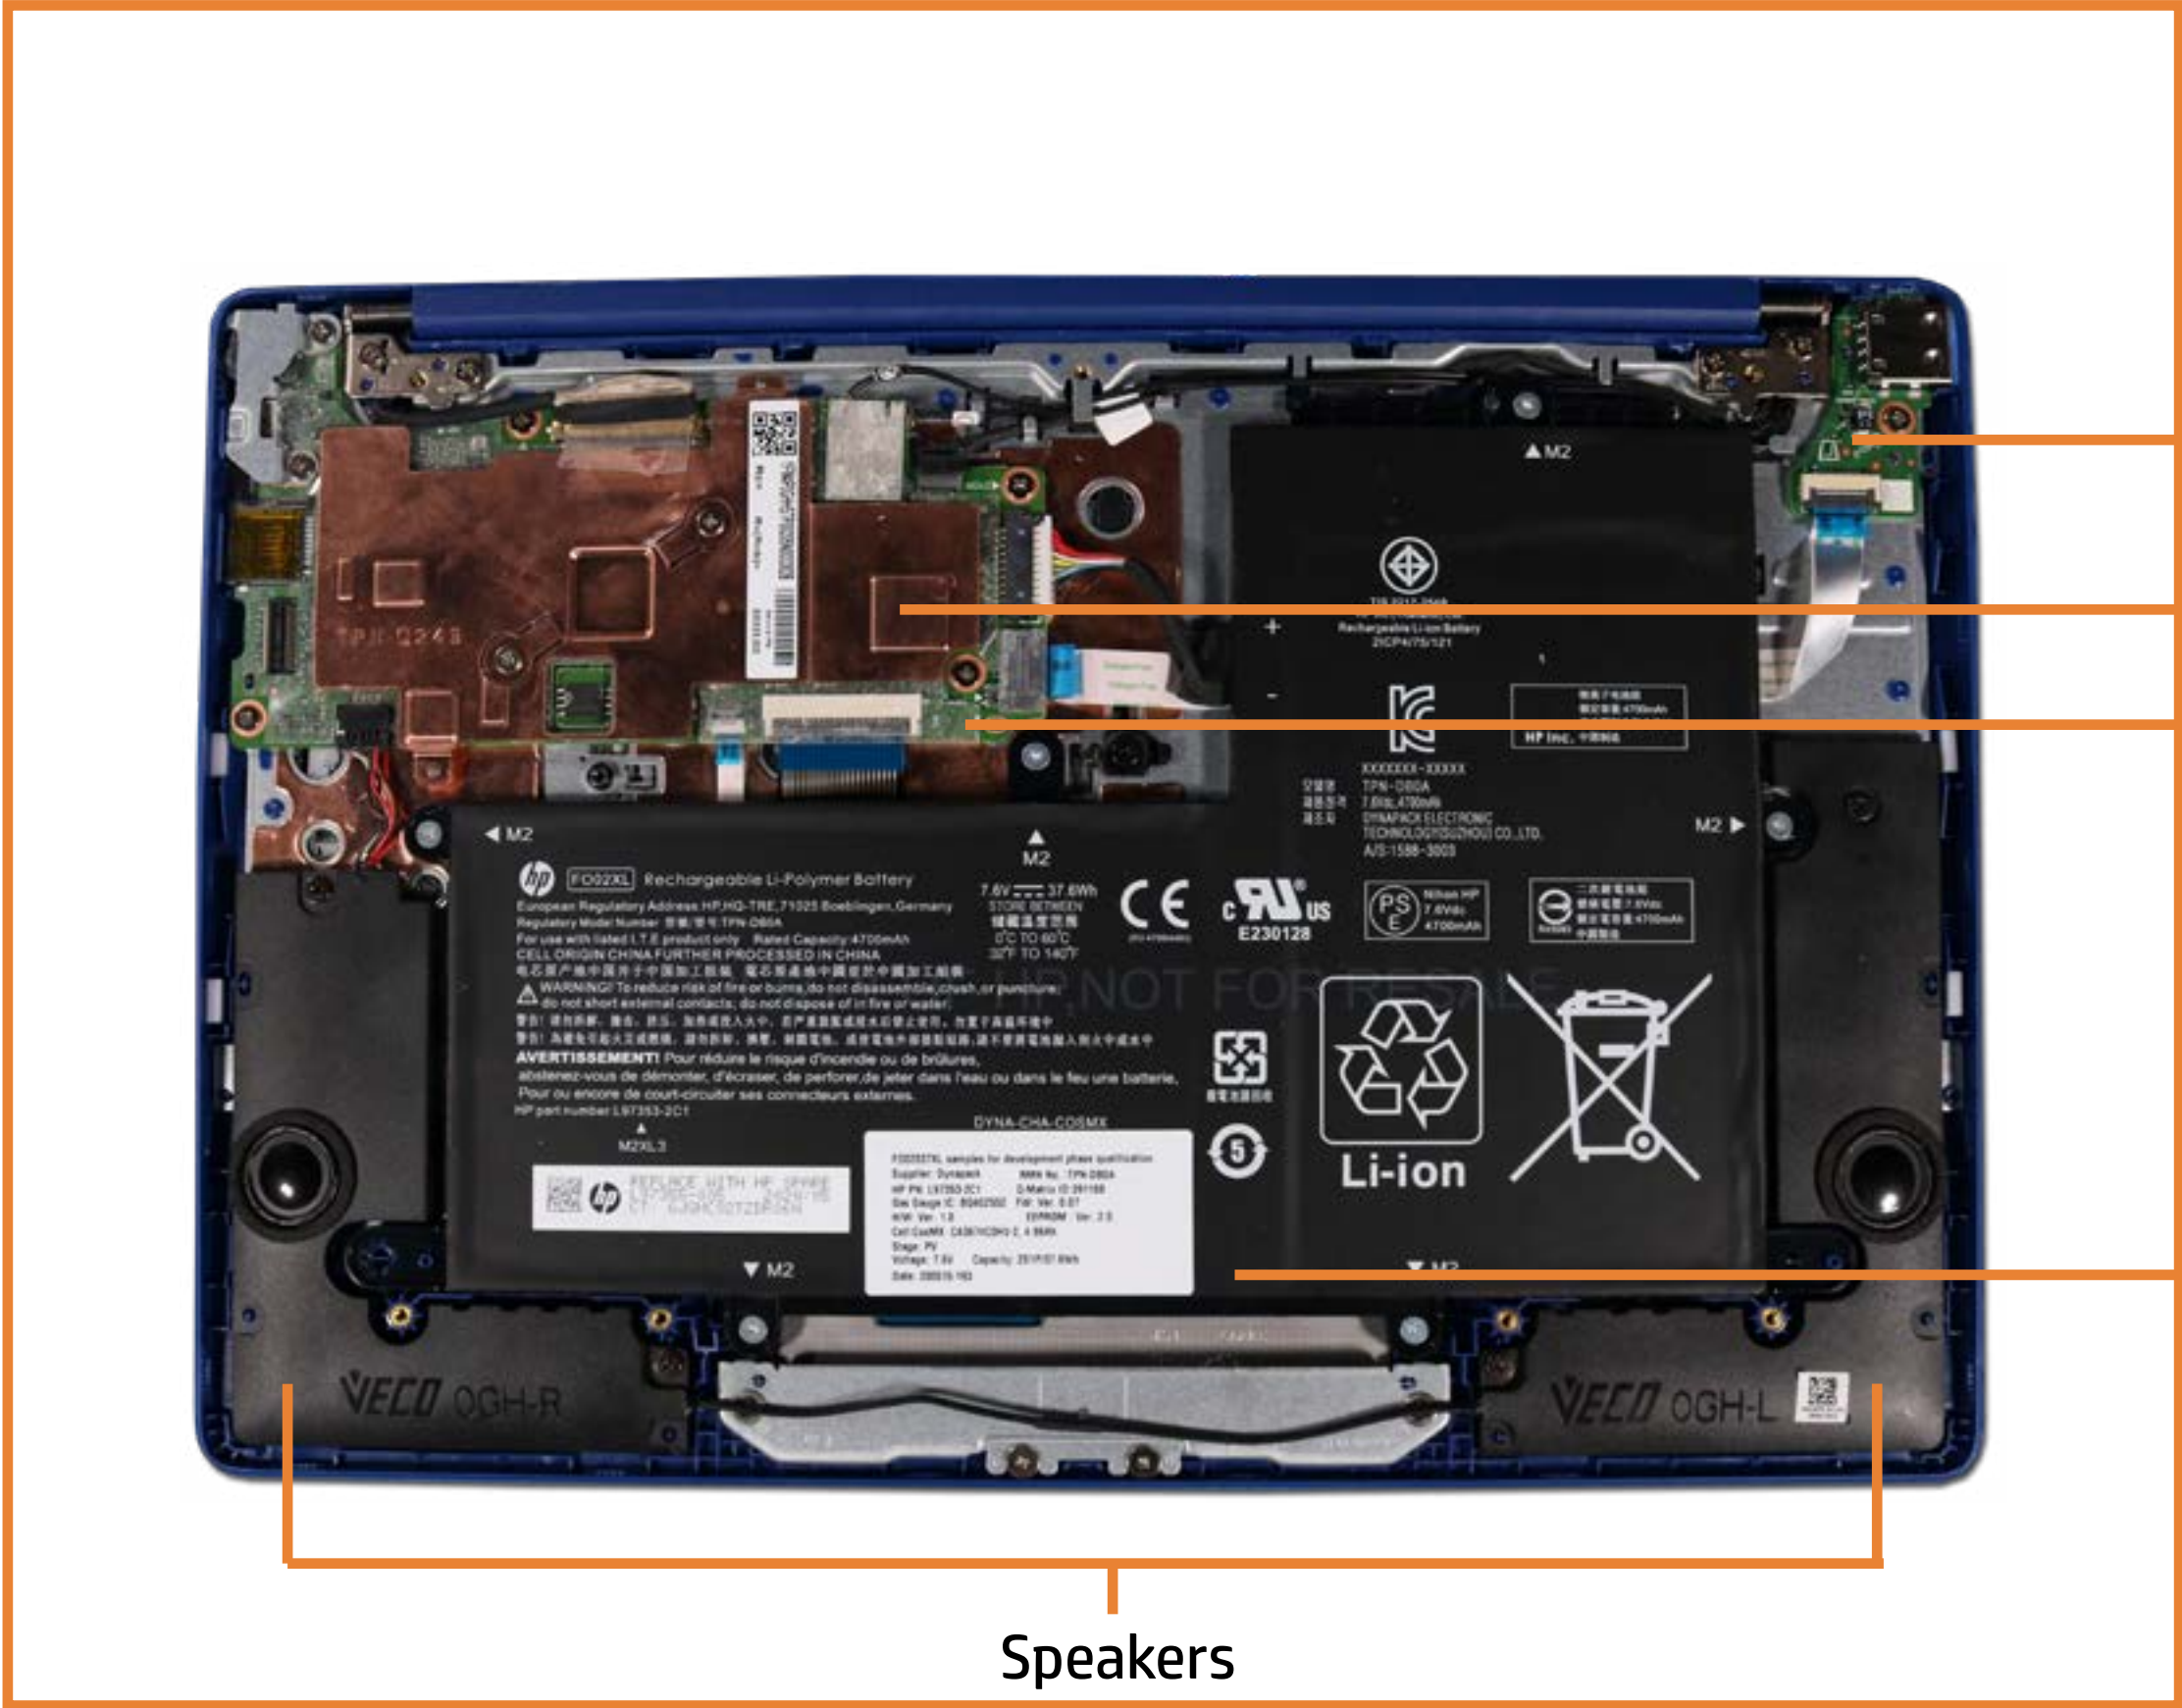

USB Board

Heat Sink

System Board

Battery


Speakers

[Go to Parts List](#)

Bottom View

[Back to External Views](#)

Service tag

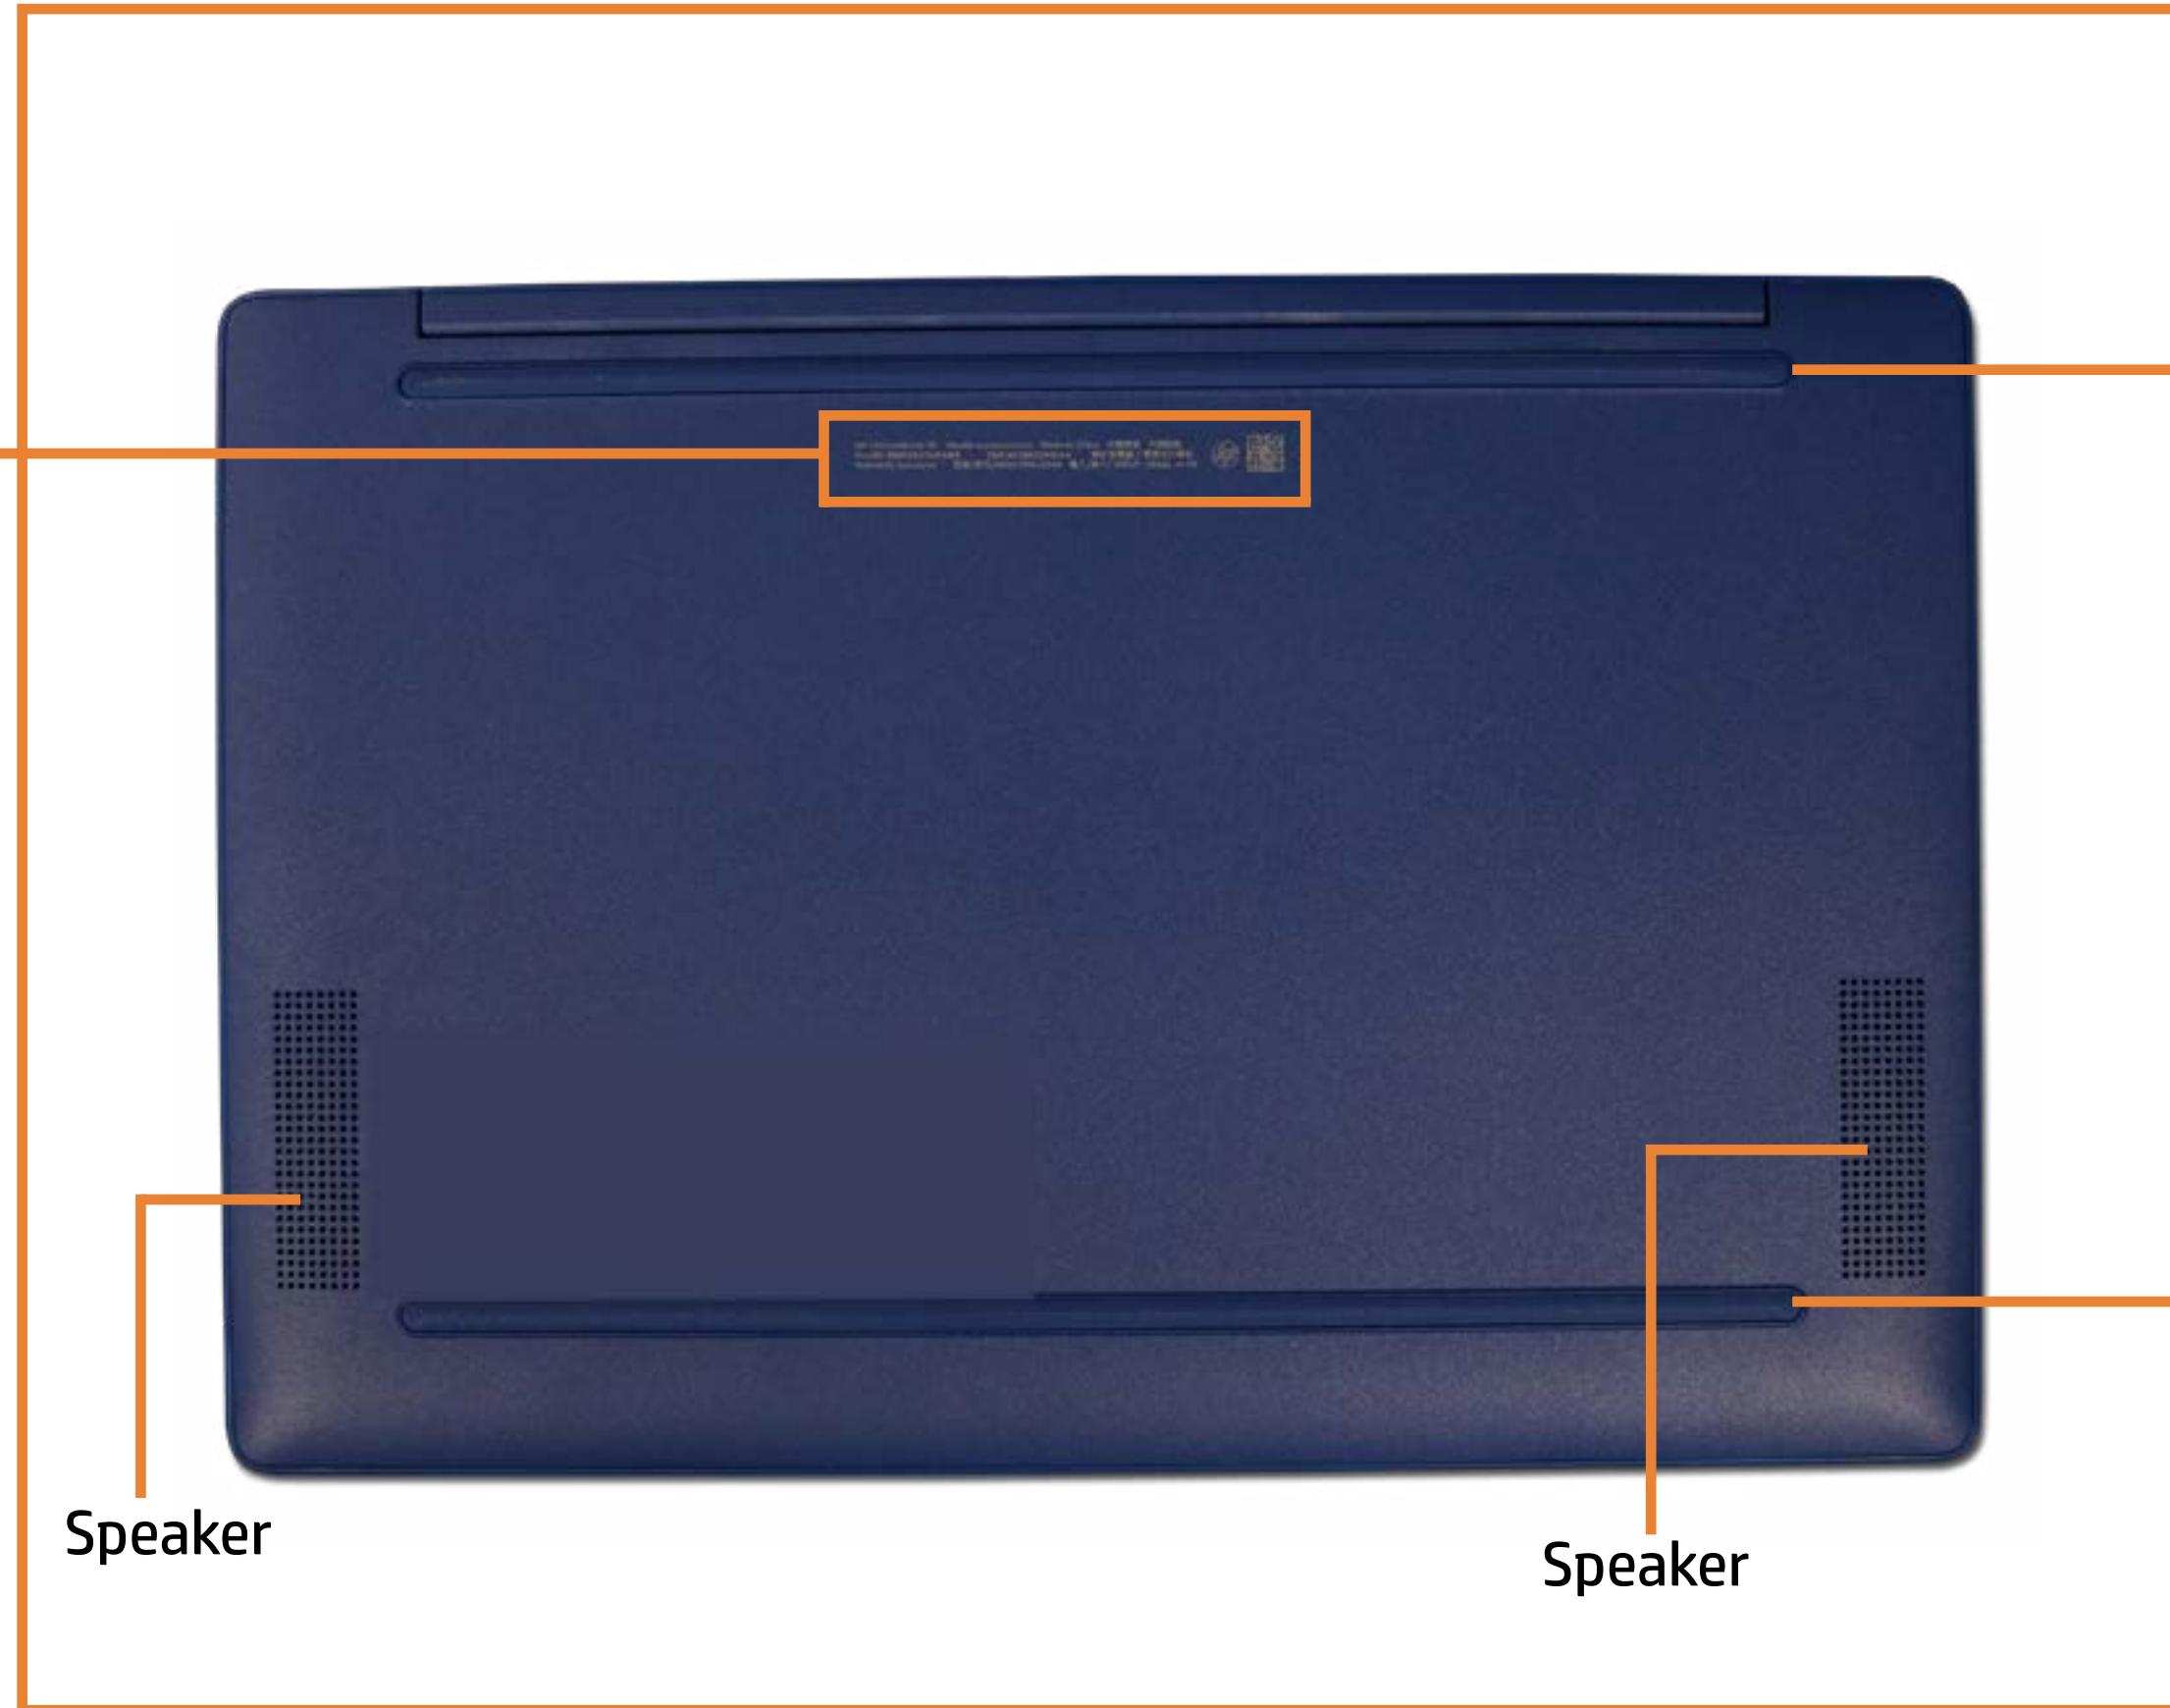

Speaker

Speaker

Rubber feet

[Go to Parts List](#)

Base Enclosure

Base Enclosure

- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

Battery


- Base Enclosure
- Battery**
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

USB Board



- Base Enclosure
- Battery
- USB Board**
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

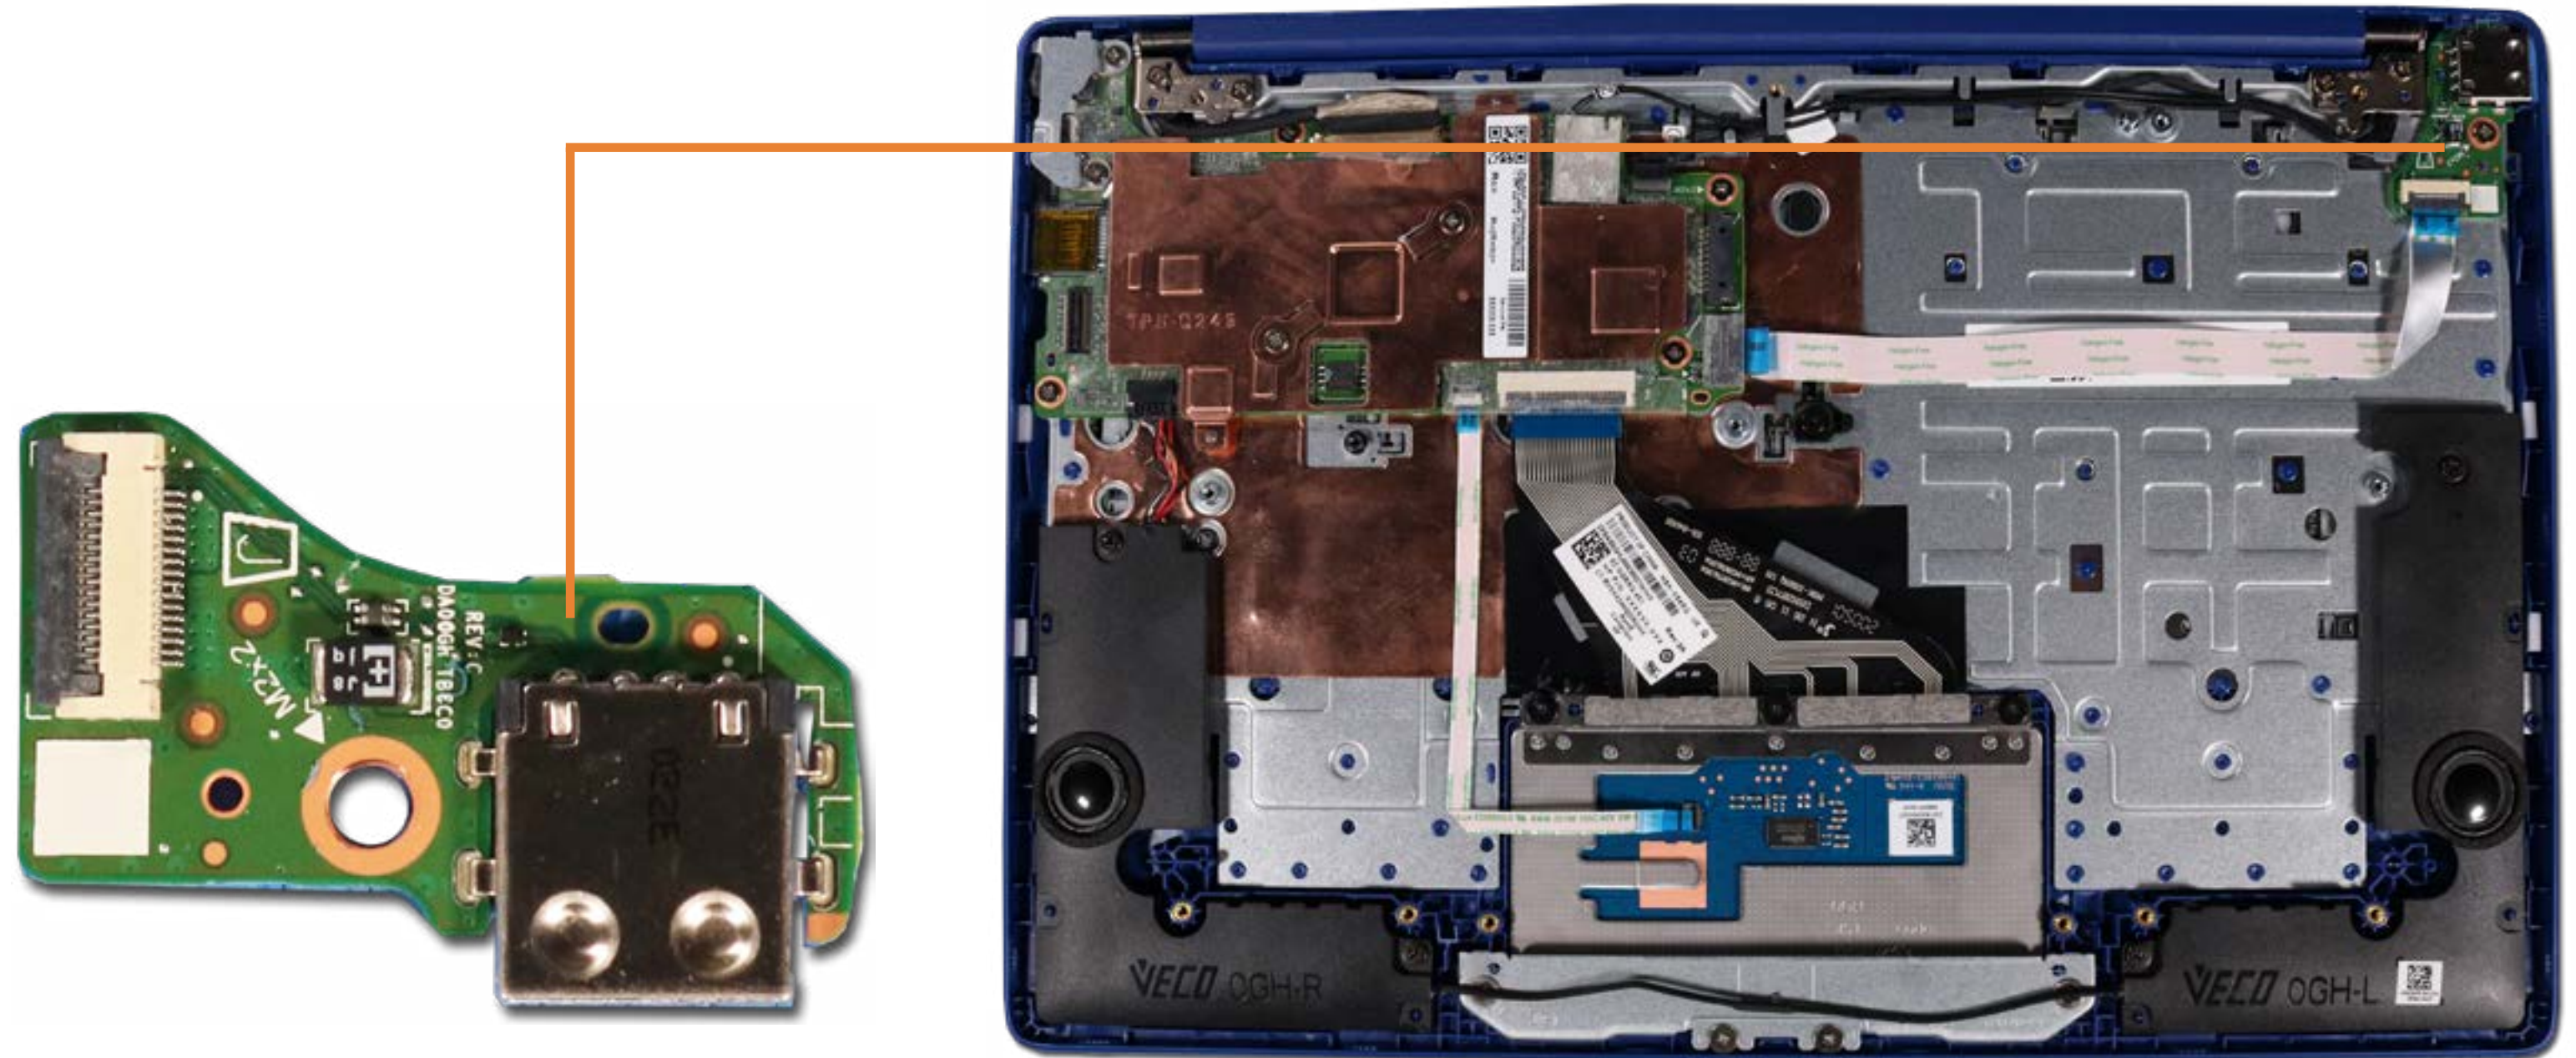

[Go to External Views](#)

Speakers


- Base Enclosure
- Battery
- USB Board
- Speakers**
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

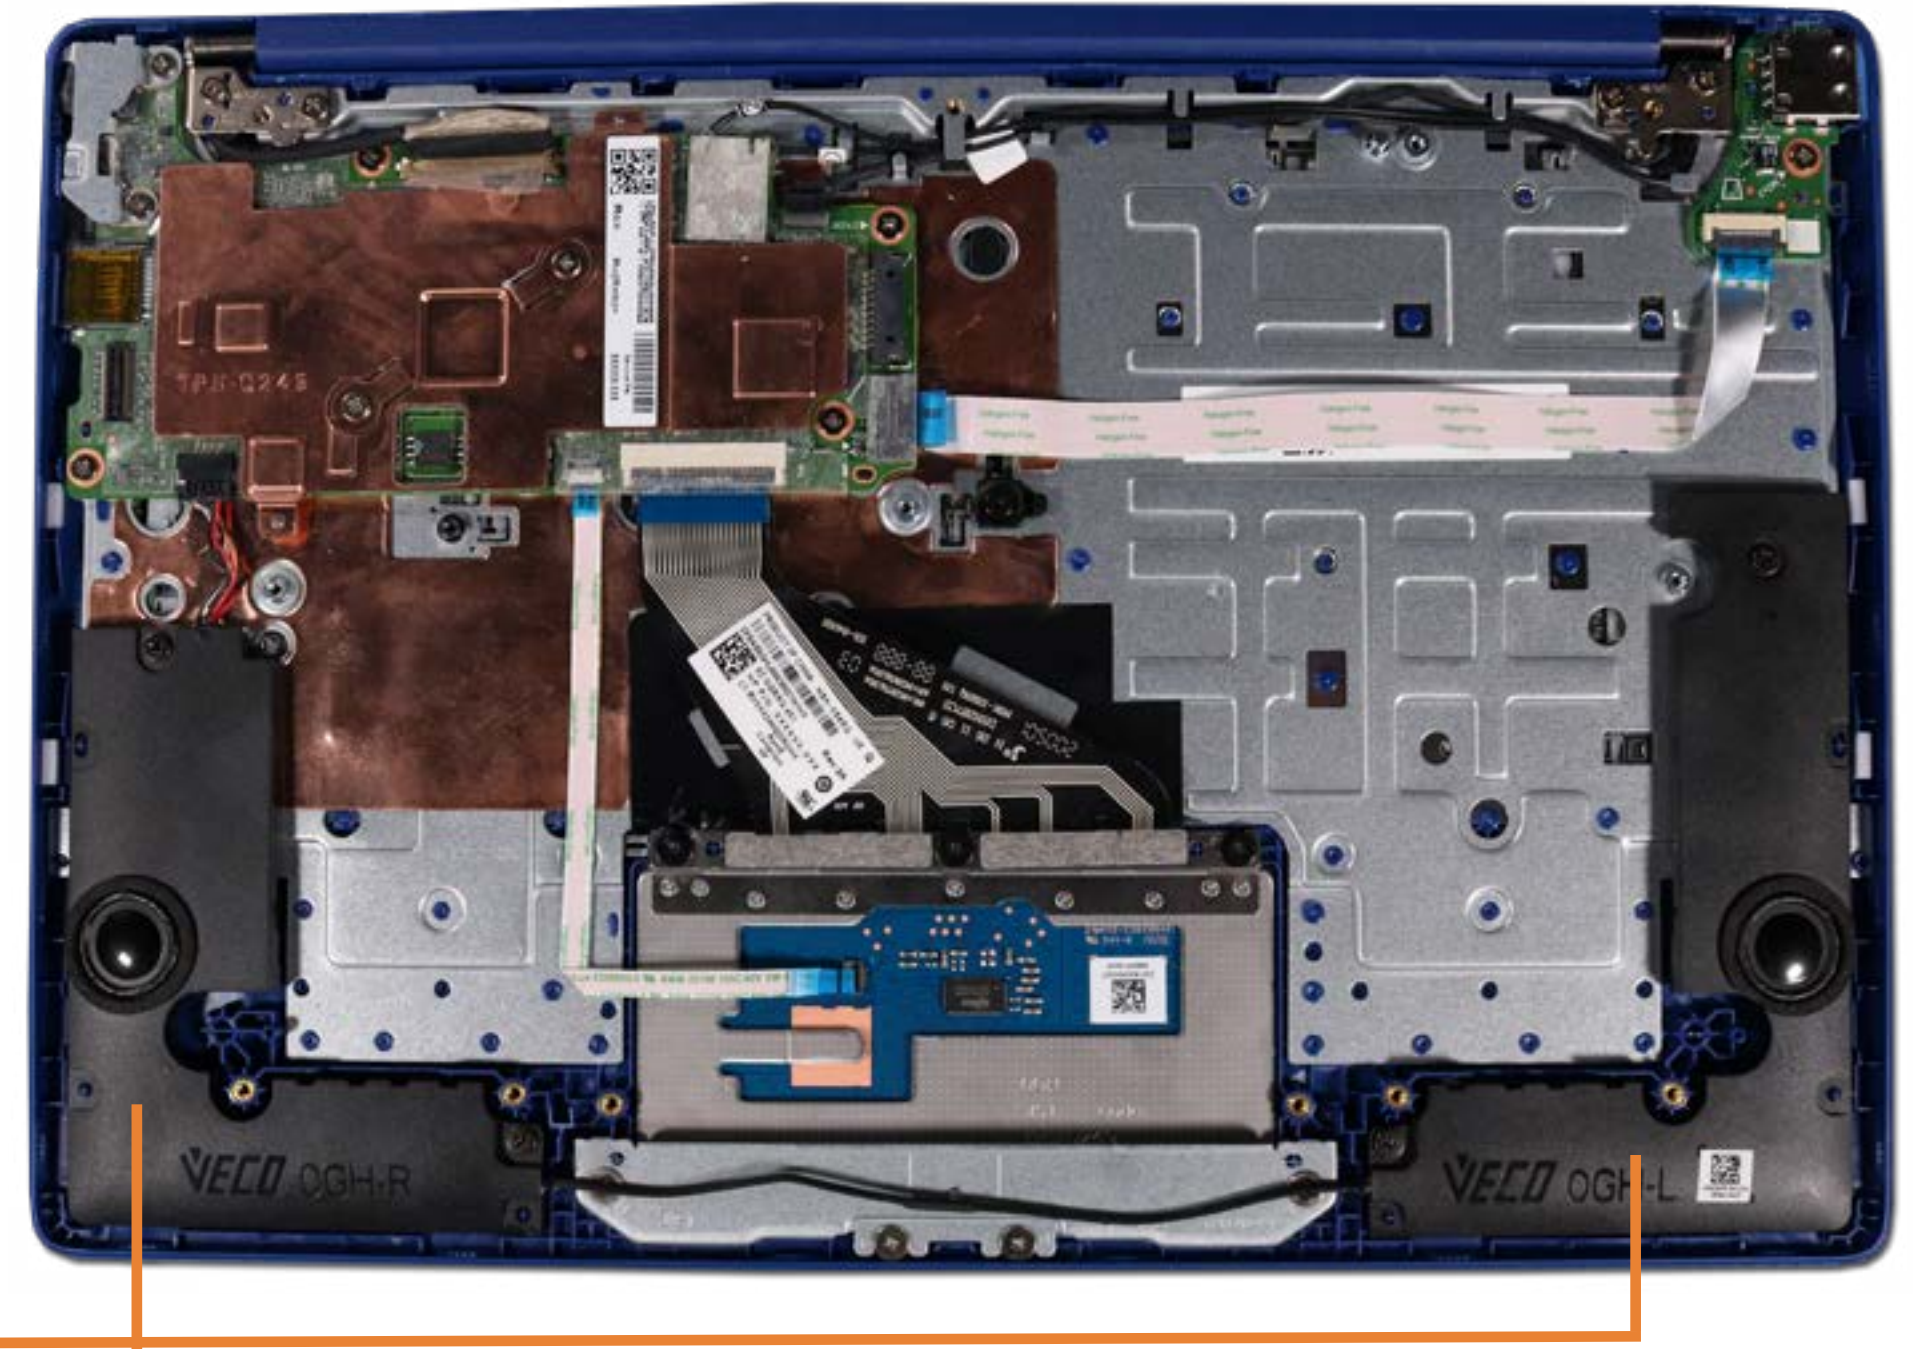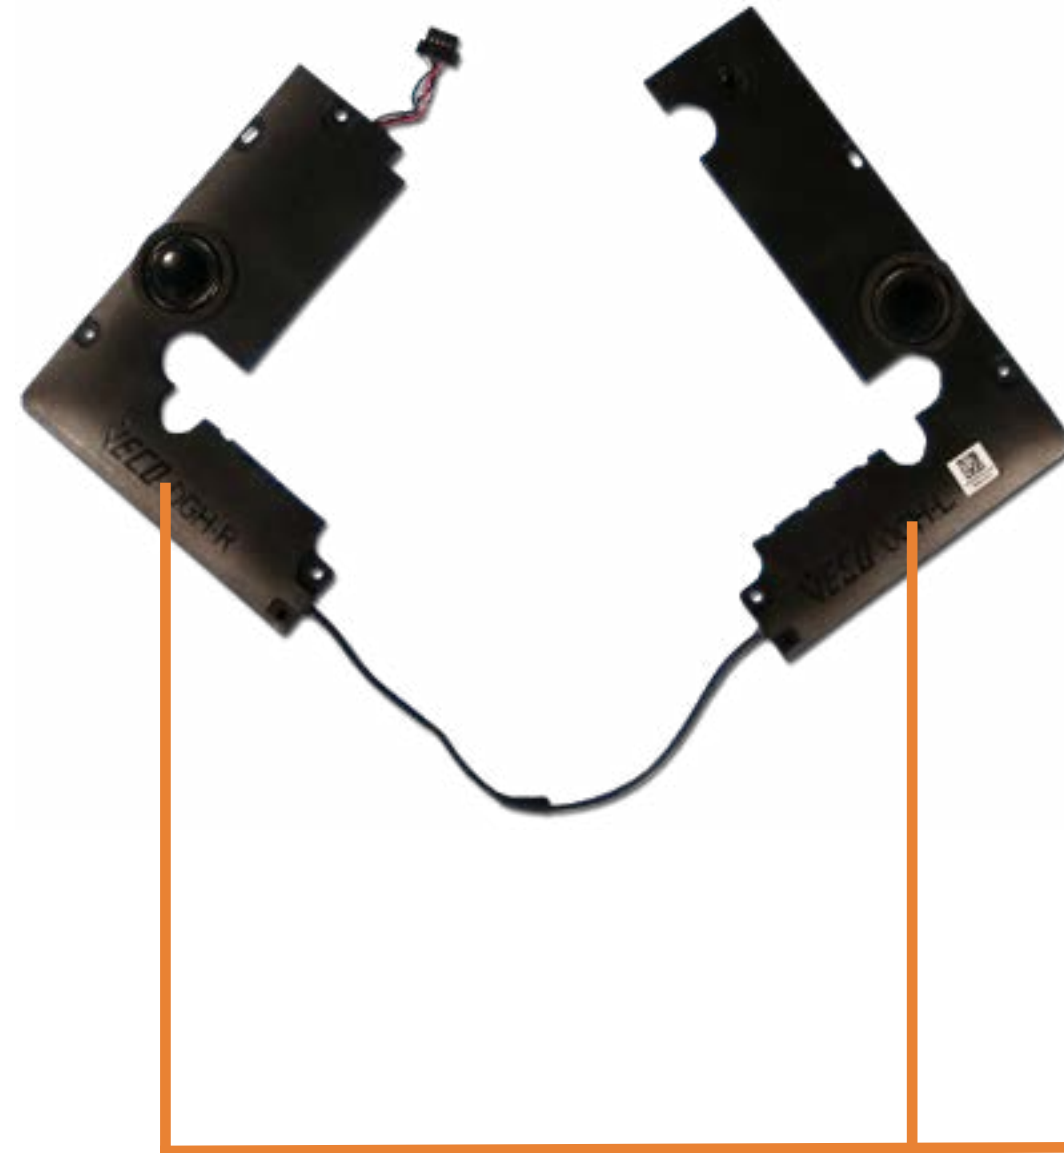

[Go to External Views](#)

Touchpad

- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad**
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

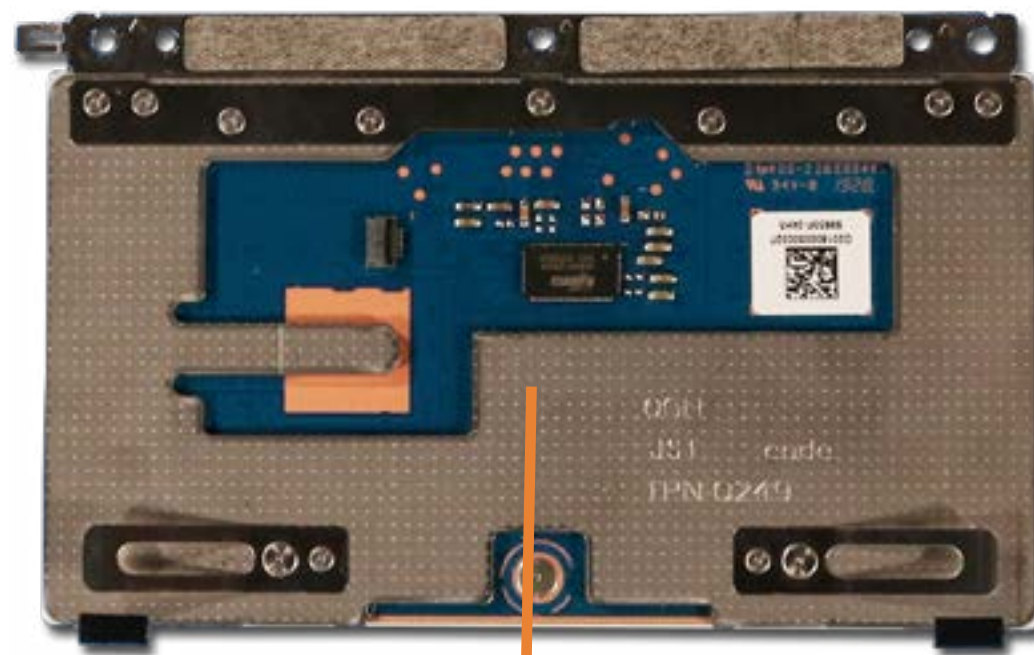

[Go to External Views](#)

Heat Sink


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink**
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

System Board (Top)


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)**
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

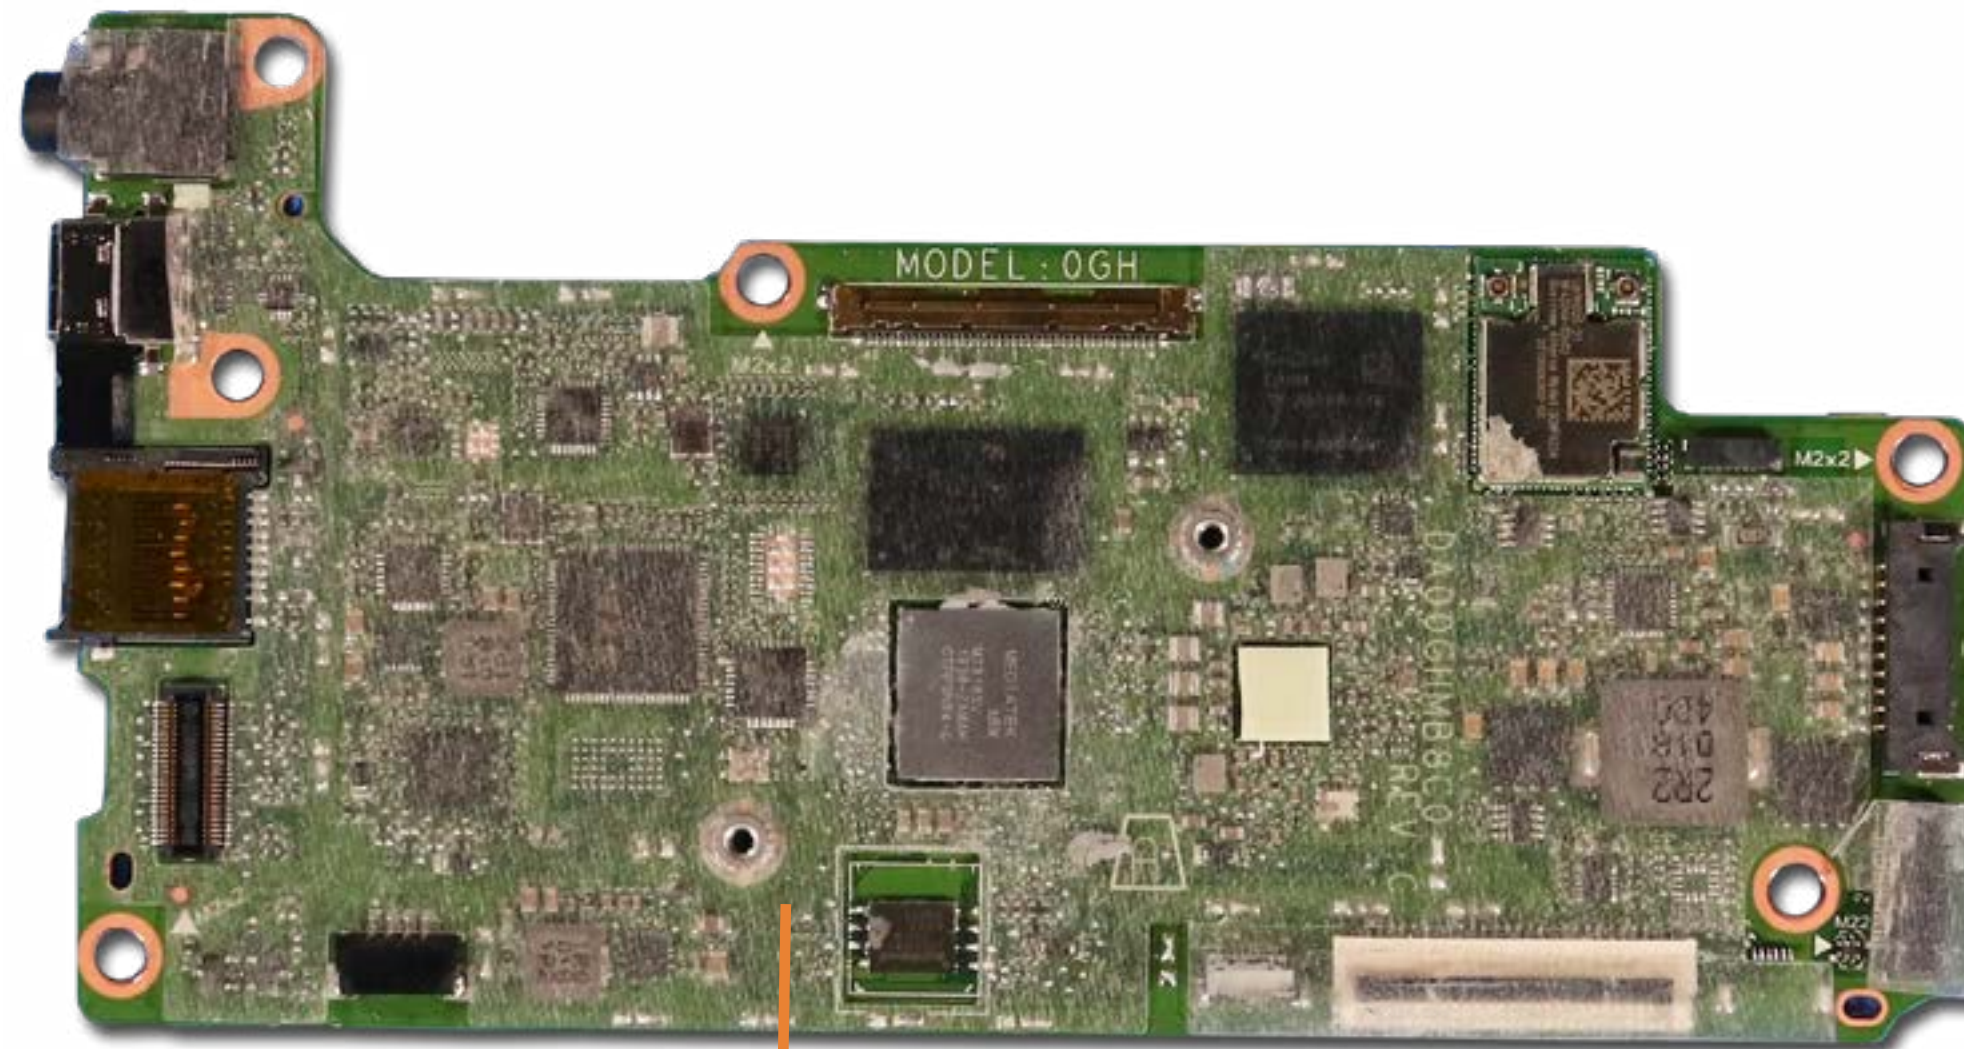

[Go to External Views](#)

System Board (Bottom)

- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)**
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

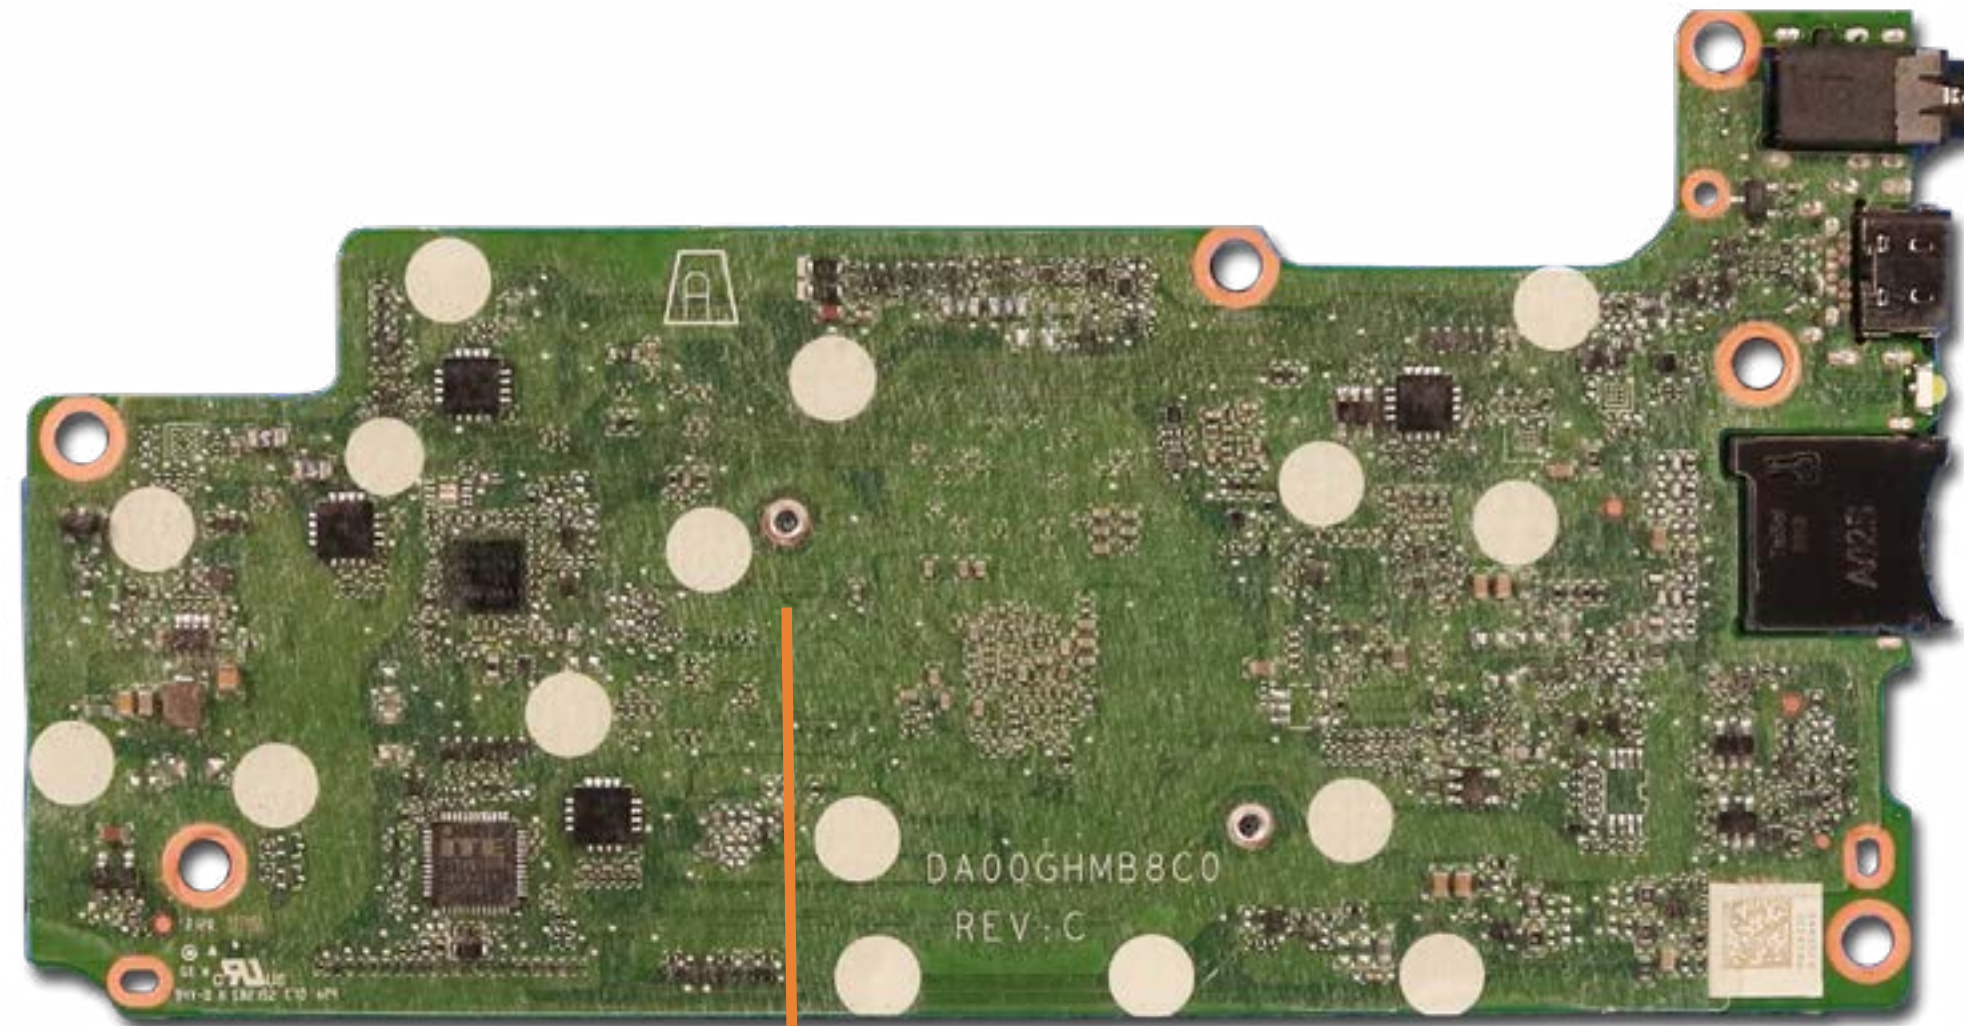

[Go to External Views](#)

Top Cover with Keyboard

- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard**
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

Display Panel Assembly


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly**
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

Display Bezel


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel**
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

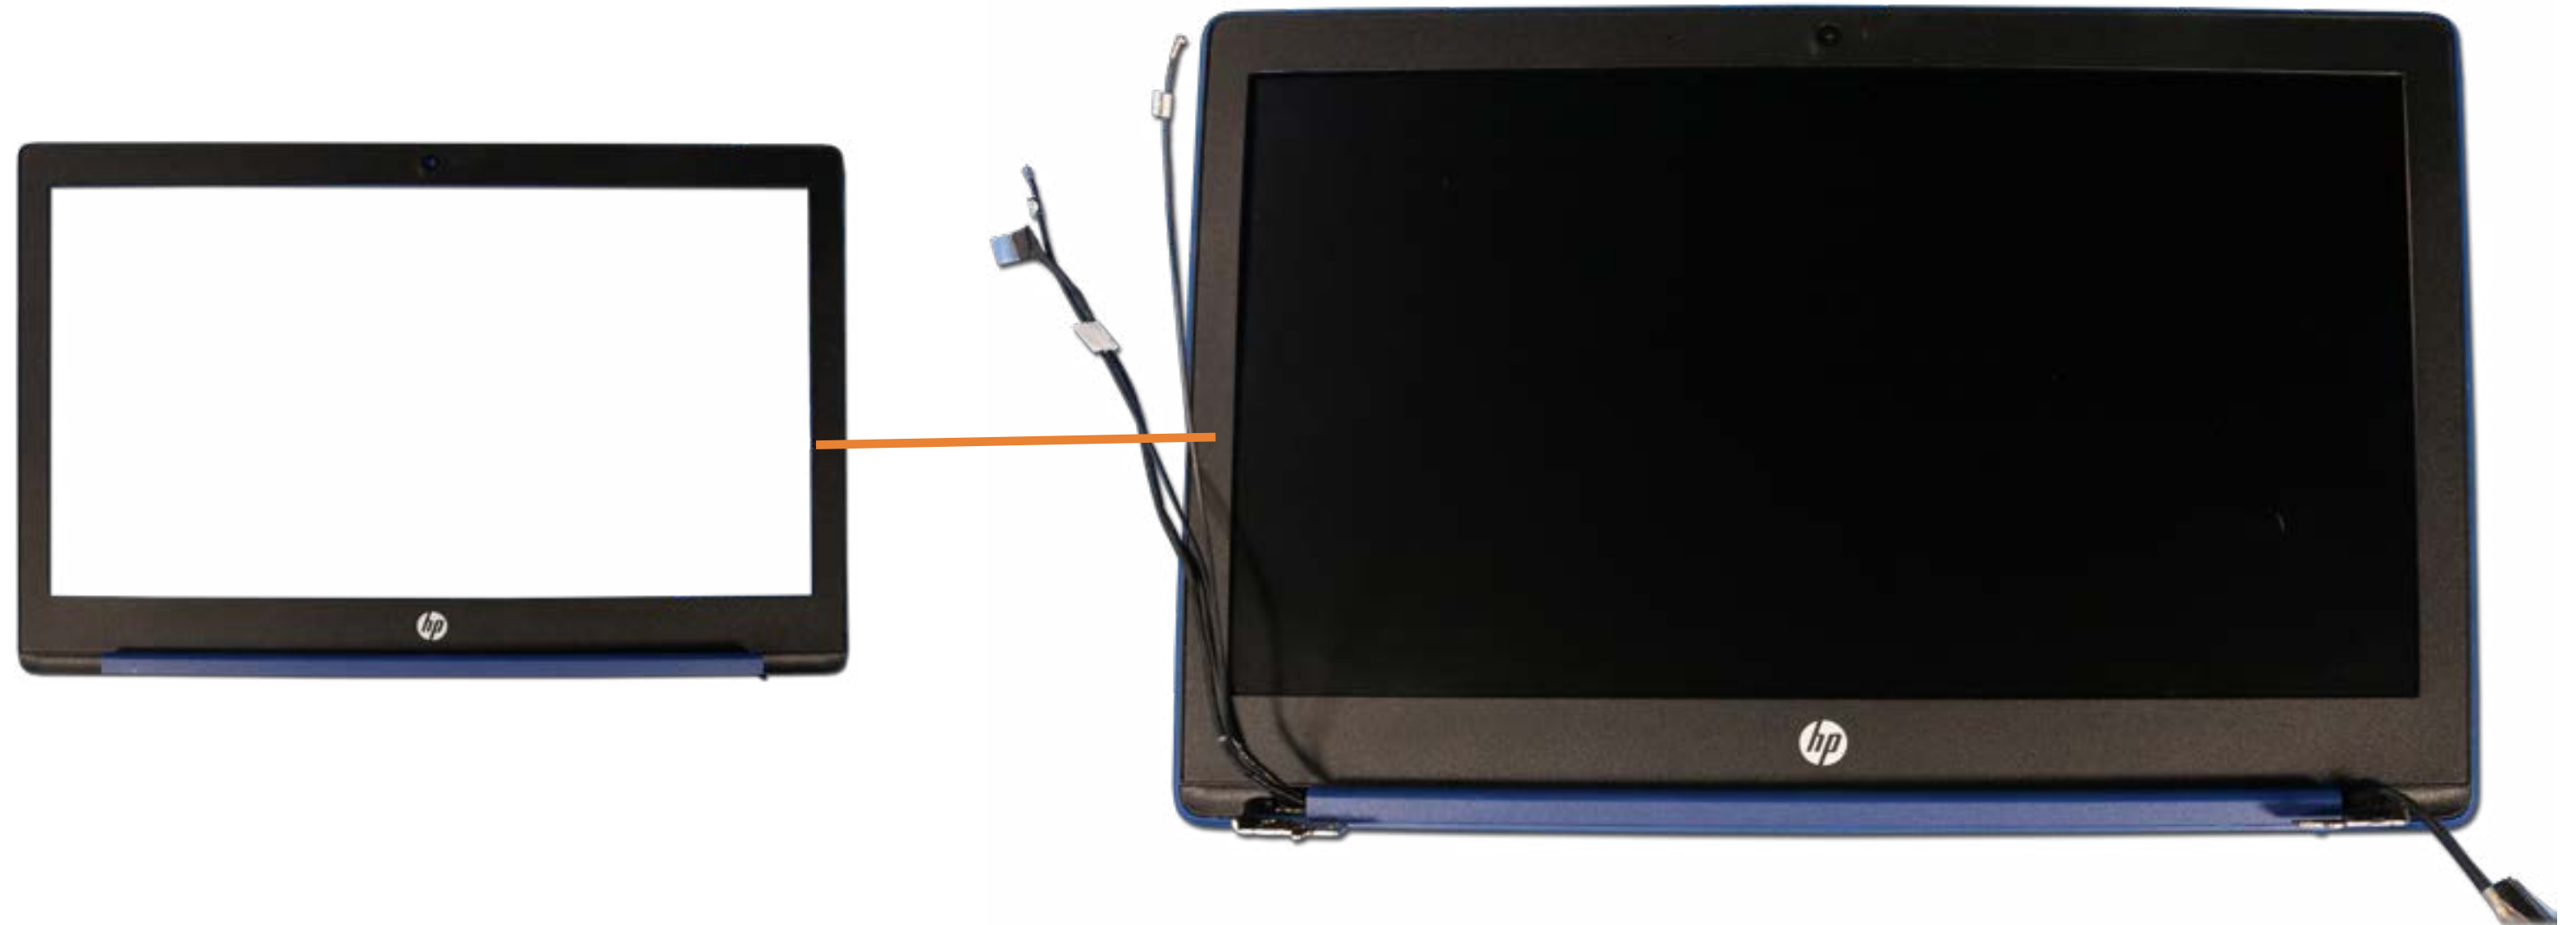

[Go to External Views](#)

Display Panel


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel**
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

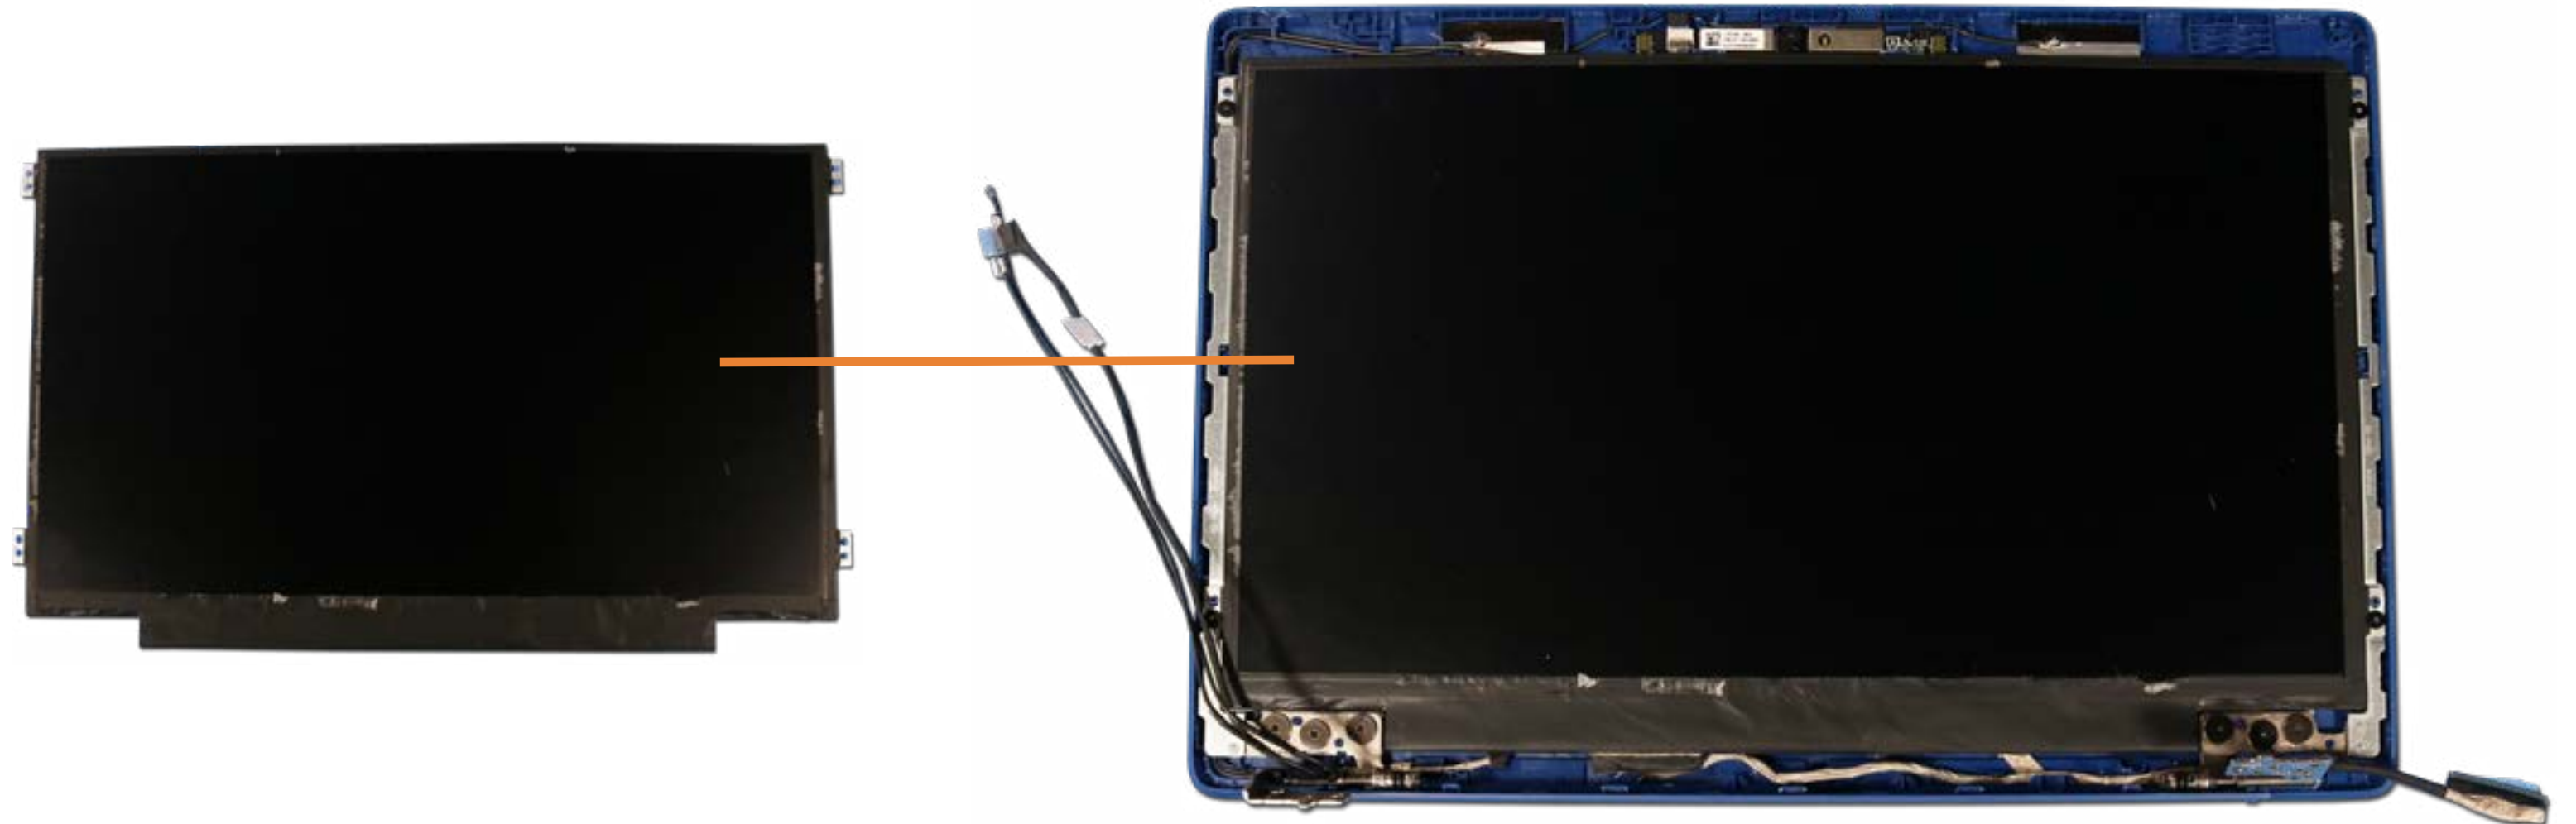

[Go to External Views](#)

Hinges

- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges**
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas

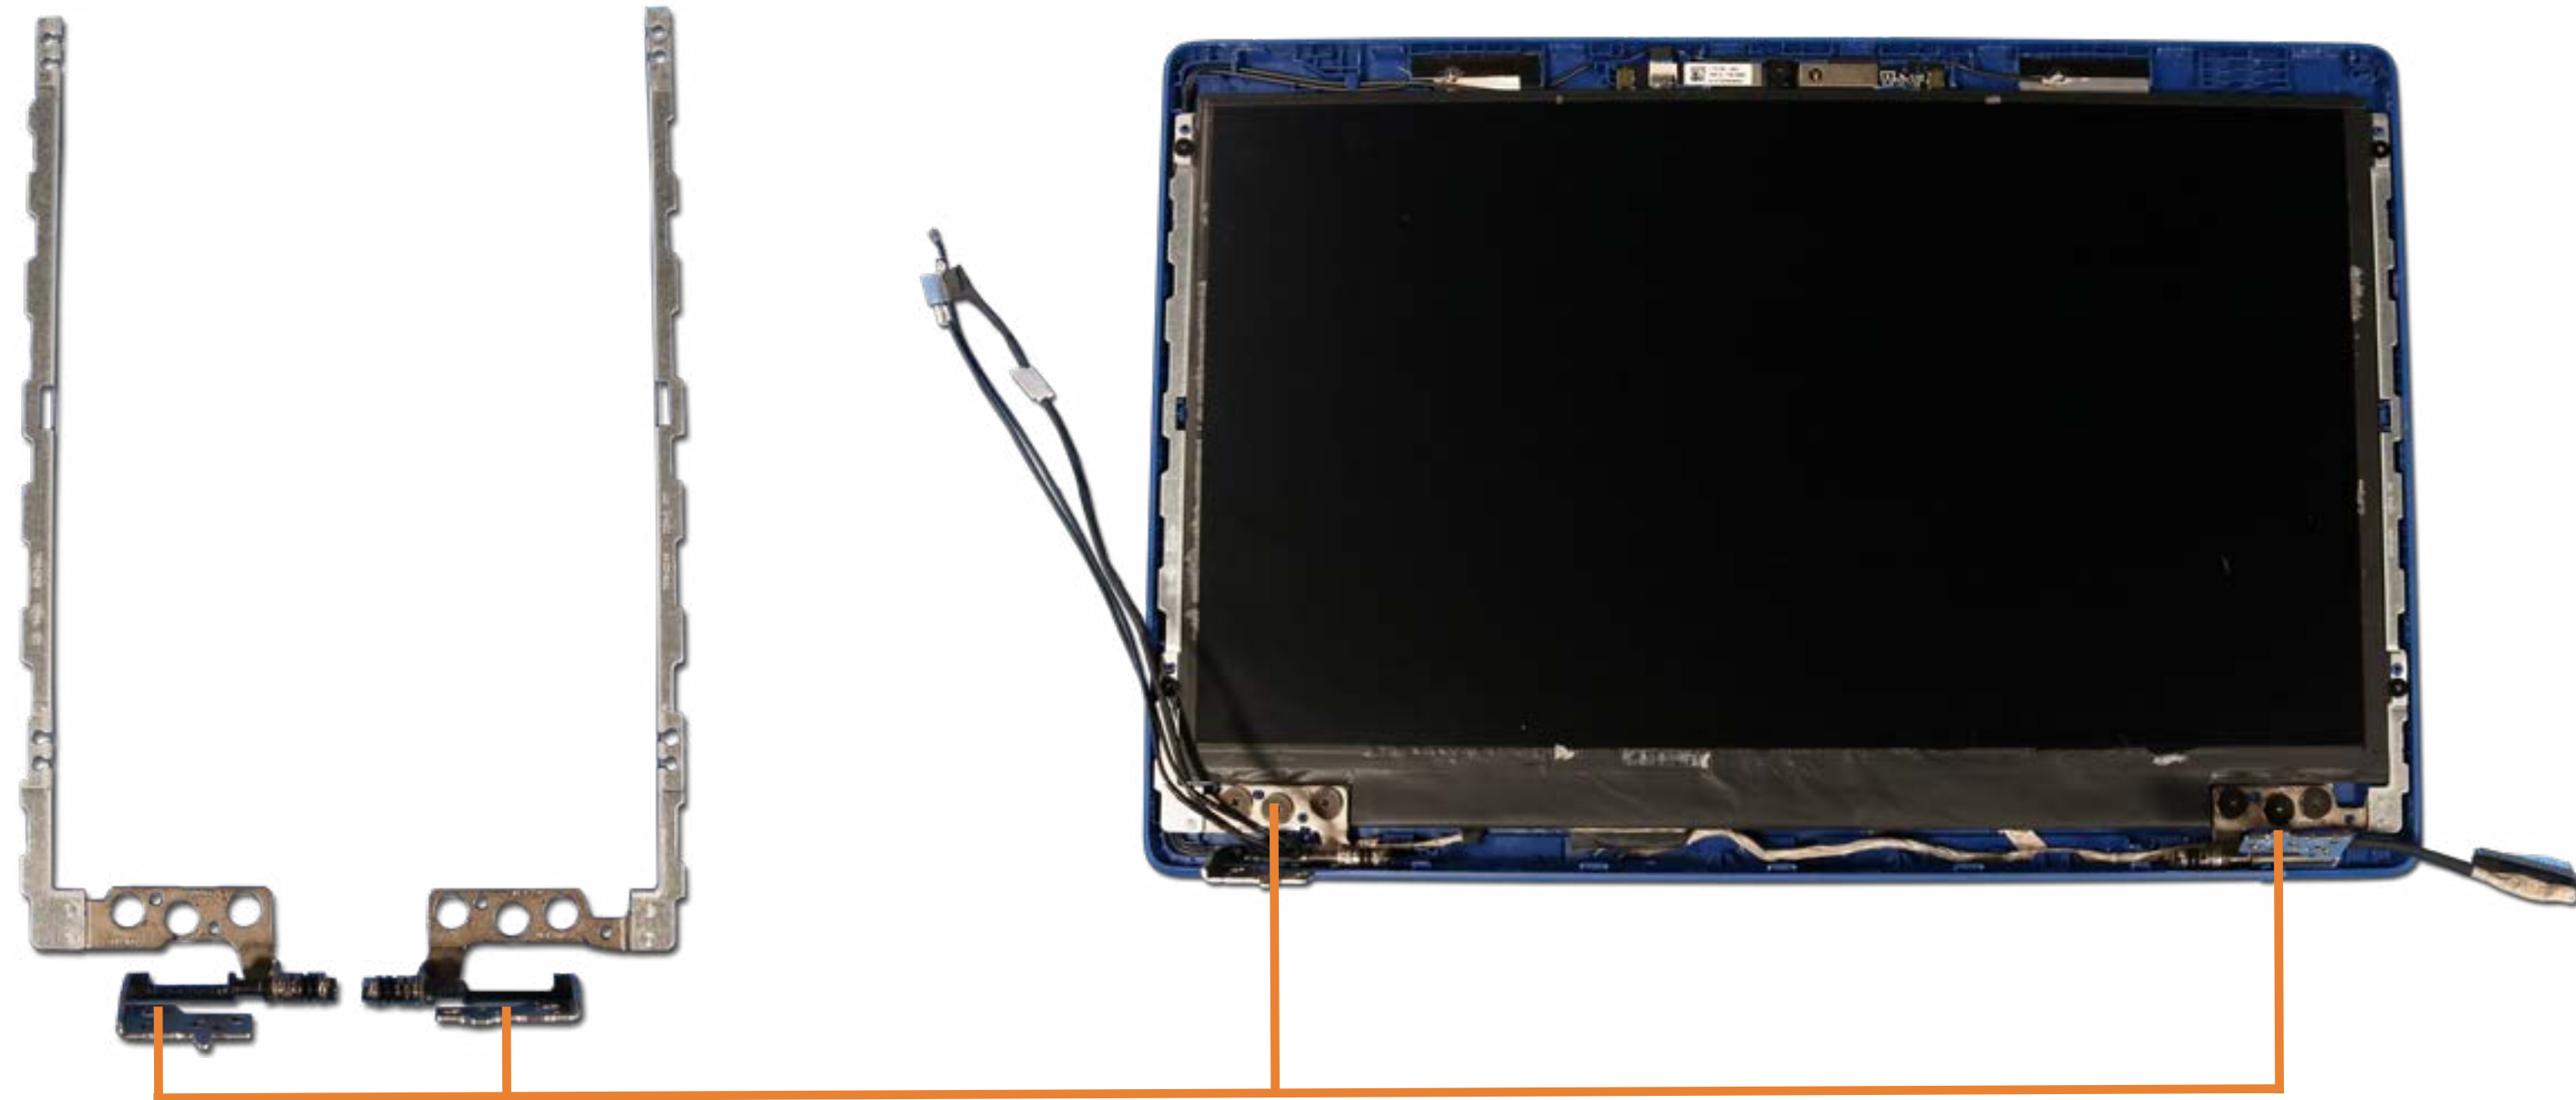

[Go to External Views](#)

Webcam

- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam**
- Display Panel Cable
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

Display Panel Cable


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable**
- Webcam Cable
- Wireless Antennas



[Go to External Views](#)

Webcam Cable


- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable**
- Wireless Antennas

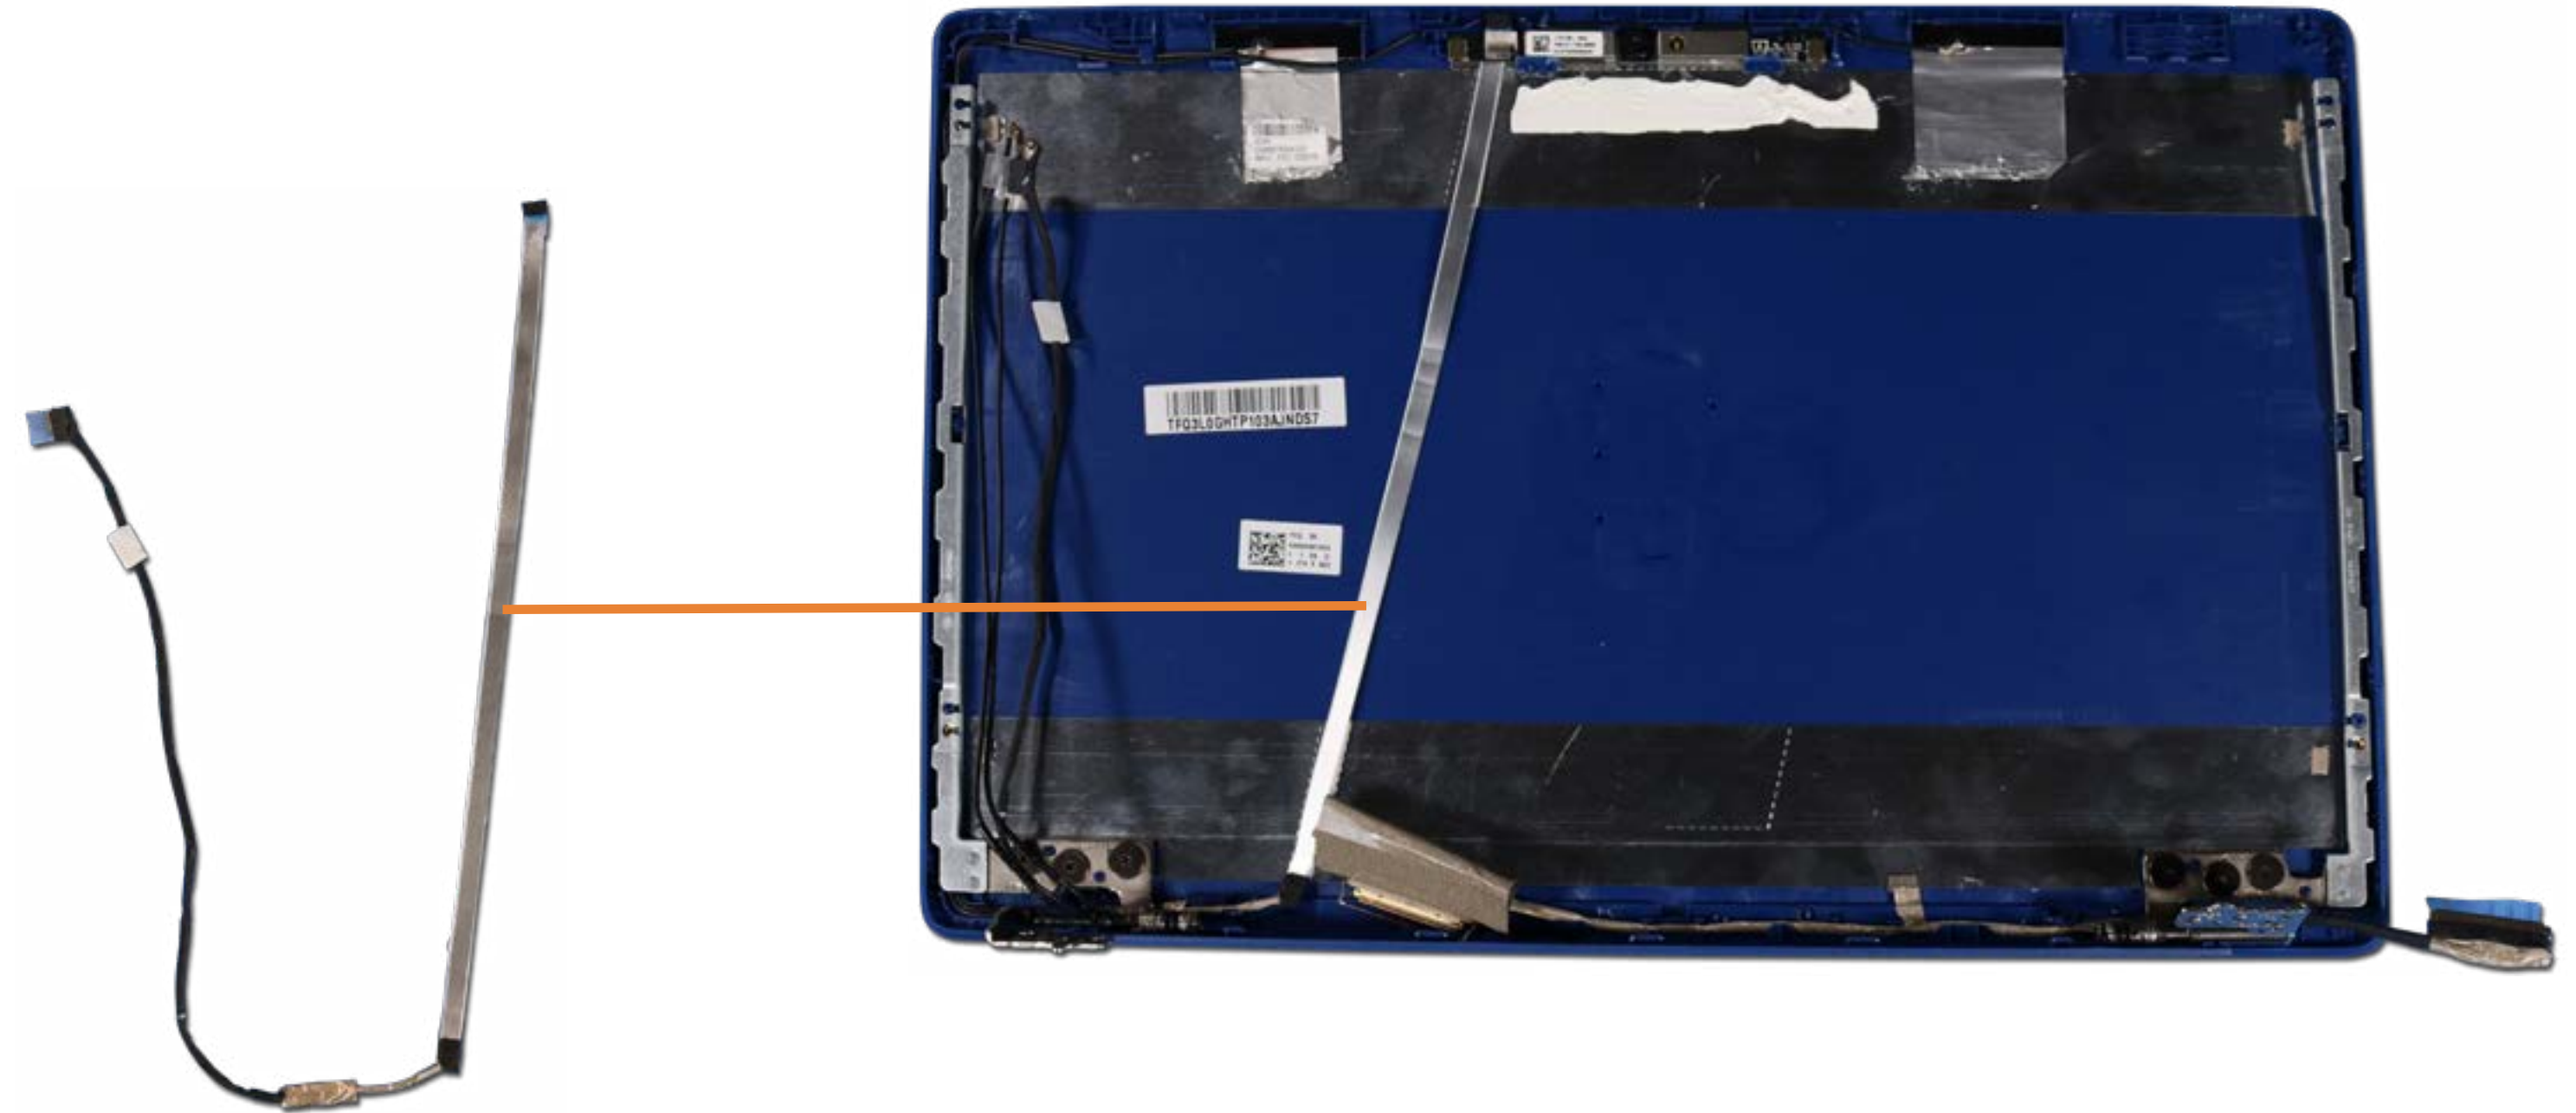

[Go to External Views](#)

Wireless Antennas

- Base Enclosure
- Battery
- USB Board
- Speakers
- Touchpad
- Heat Sink
- System Board (Top)
- System Board (Bottom)
- Top Cover with Keyboard
- Display Panel Assembly
- Display Bezel
- Display Panel
- Hinges
- Webcam
- Display Panel Cable
- Webcam Cable
- Wireless Antennas**

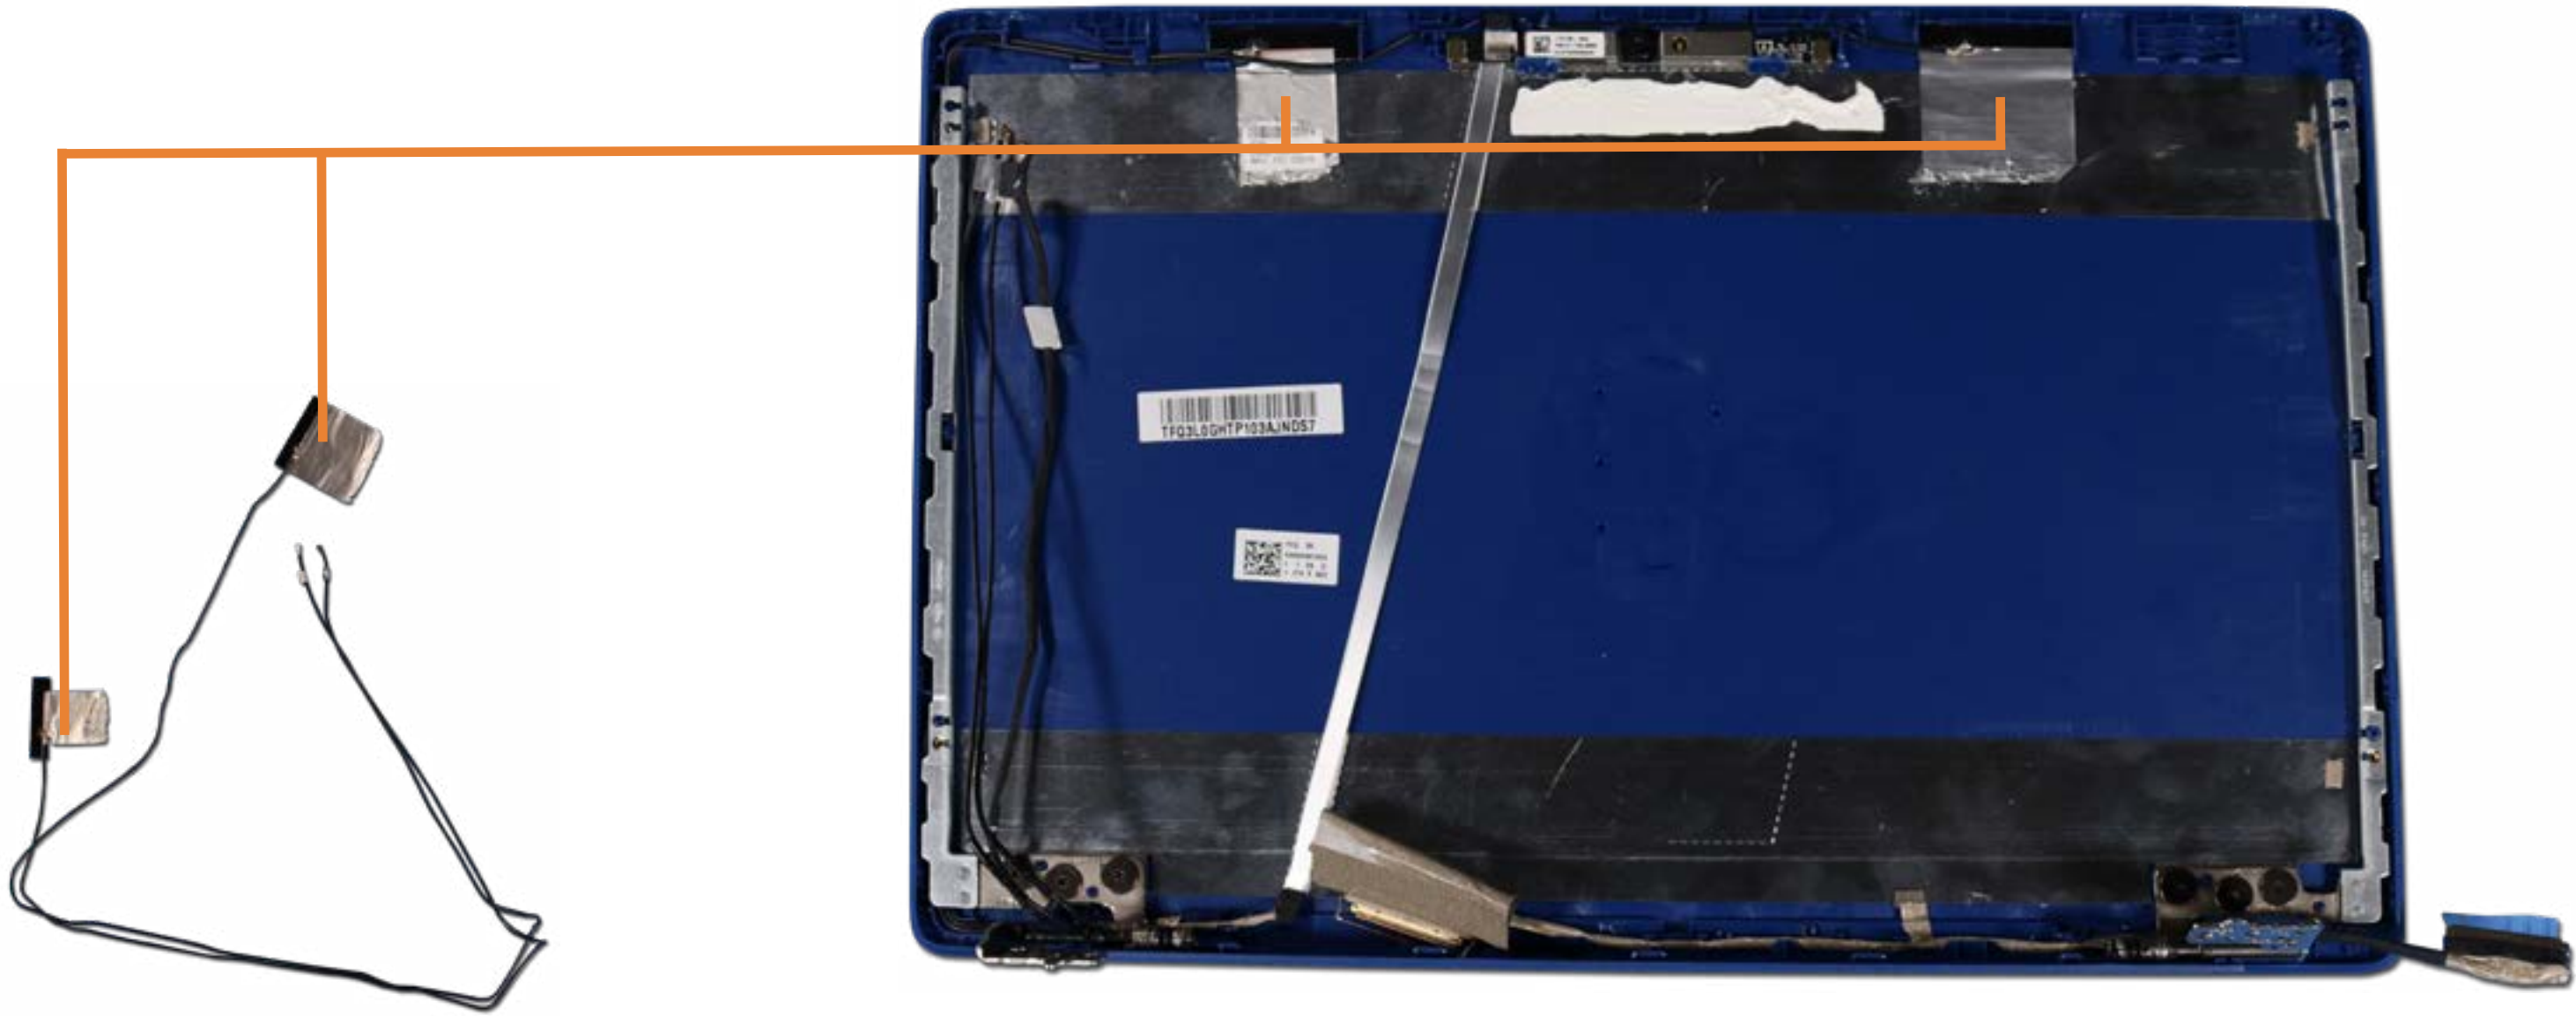

[Go to External Views](#)