

# Interactive Beep and LED Diagnostic

## HP ProDesk 600 G6 Small Form Factor PC

Welcome to the interactive beep and LED diagnostic viewer for the HP ProDesk 600 G6 Small Form Factor PC

### **Here's how to use it...**

[Beep & LED Diagnostic](#) (Click the link to navigate this platform's diagnostic codes)

On this page you will find a diagnostic viewer with a menu of this product's diagnostic error features. To identify the diagnostic codes for an error feature, simply click that feature. To learn more about the behavior and meaning of the specific beep codes, click the beep code and review the information that presents in the right-hand pane. There is also a LED diagnostic, which you can review by hovering over the information icon on the image.

**That's it! On every page there is a link that brings you back to the Welcome page.**

# BIOS

BIOS

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



# Hardware

## Hardware

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



# Thermal

## Thermal

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



# System Board

## System Board

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



# Network

Network

**Click or hover your mouse over the information icon to learn more about the item.**

