

Interactive Part Locator

HP ProDesk 600 G6 Small Form Factor PC

Welcome to the interactive part locator for the
HP ProDesk 600 G6 Small Form Factor PC

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left


Right

Rear

Internal

Parts List

Front View

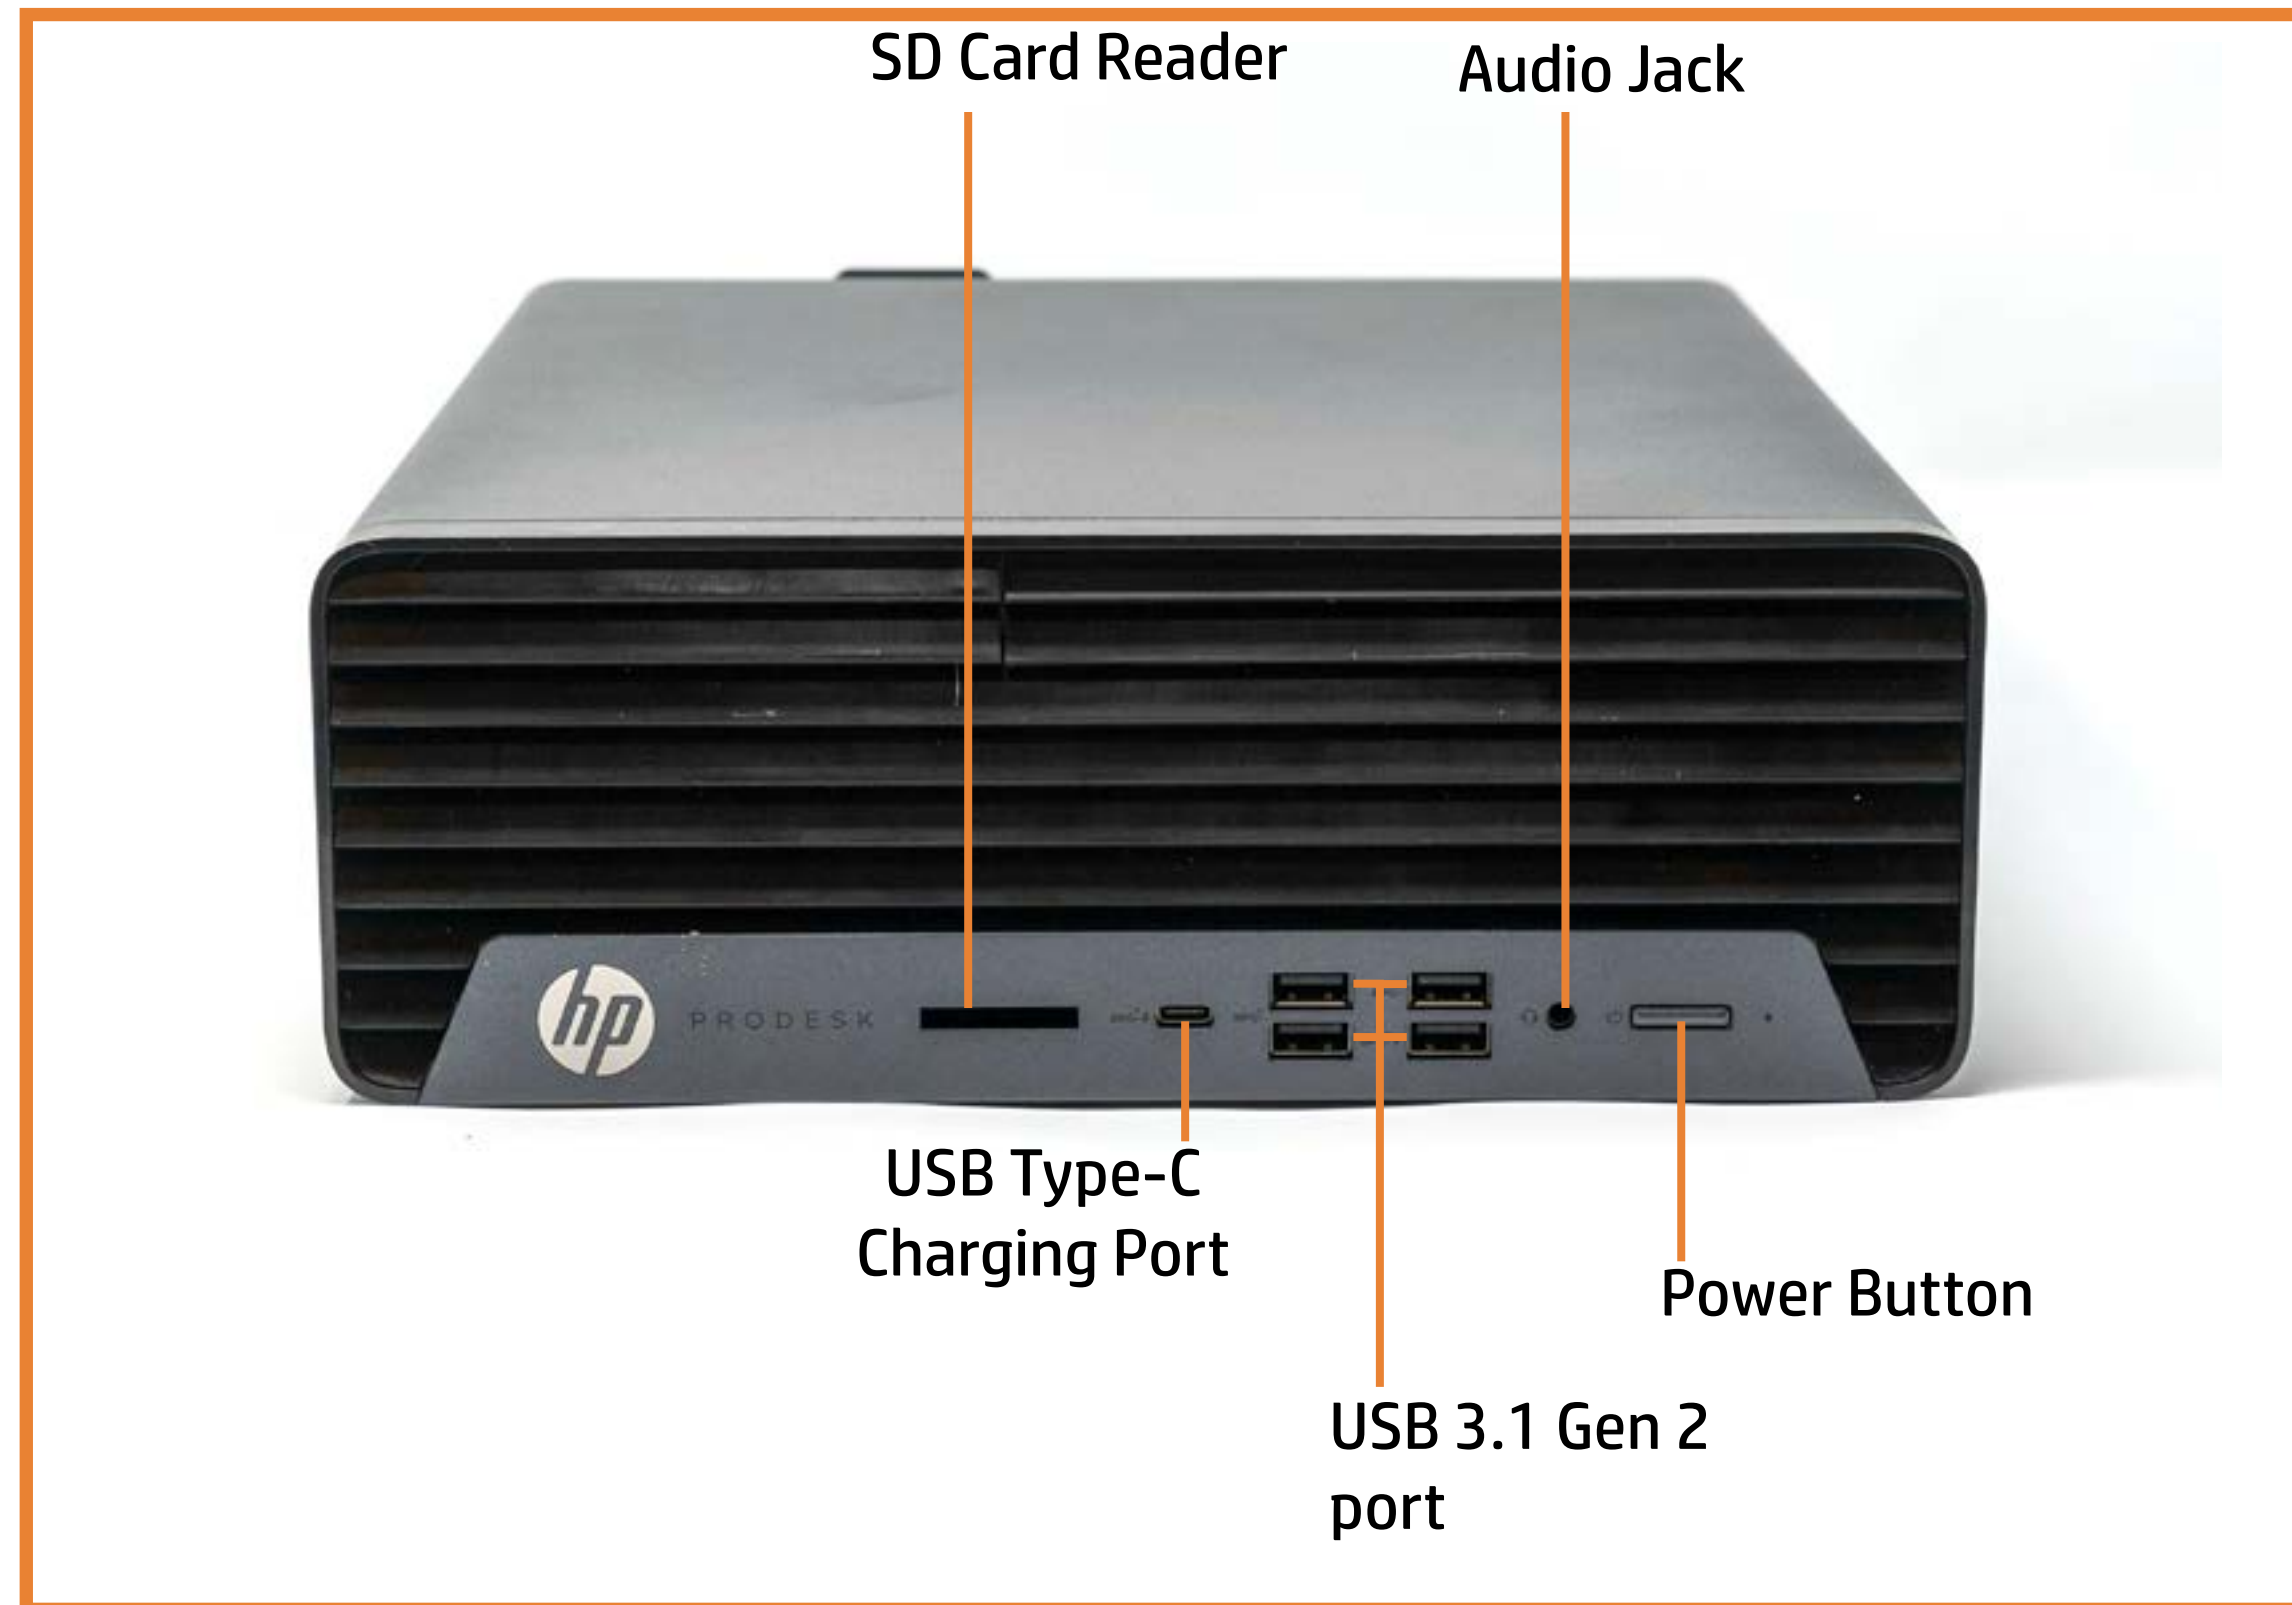


Left View



Right View



Rear View

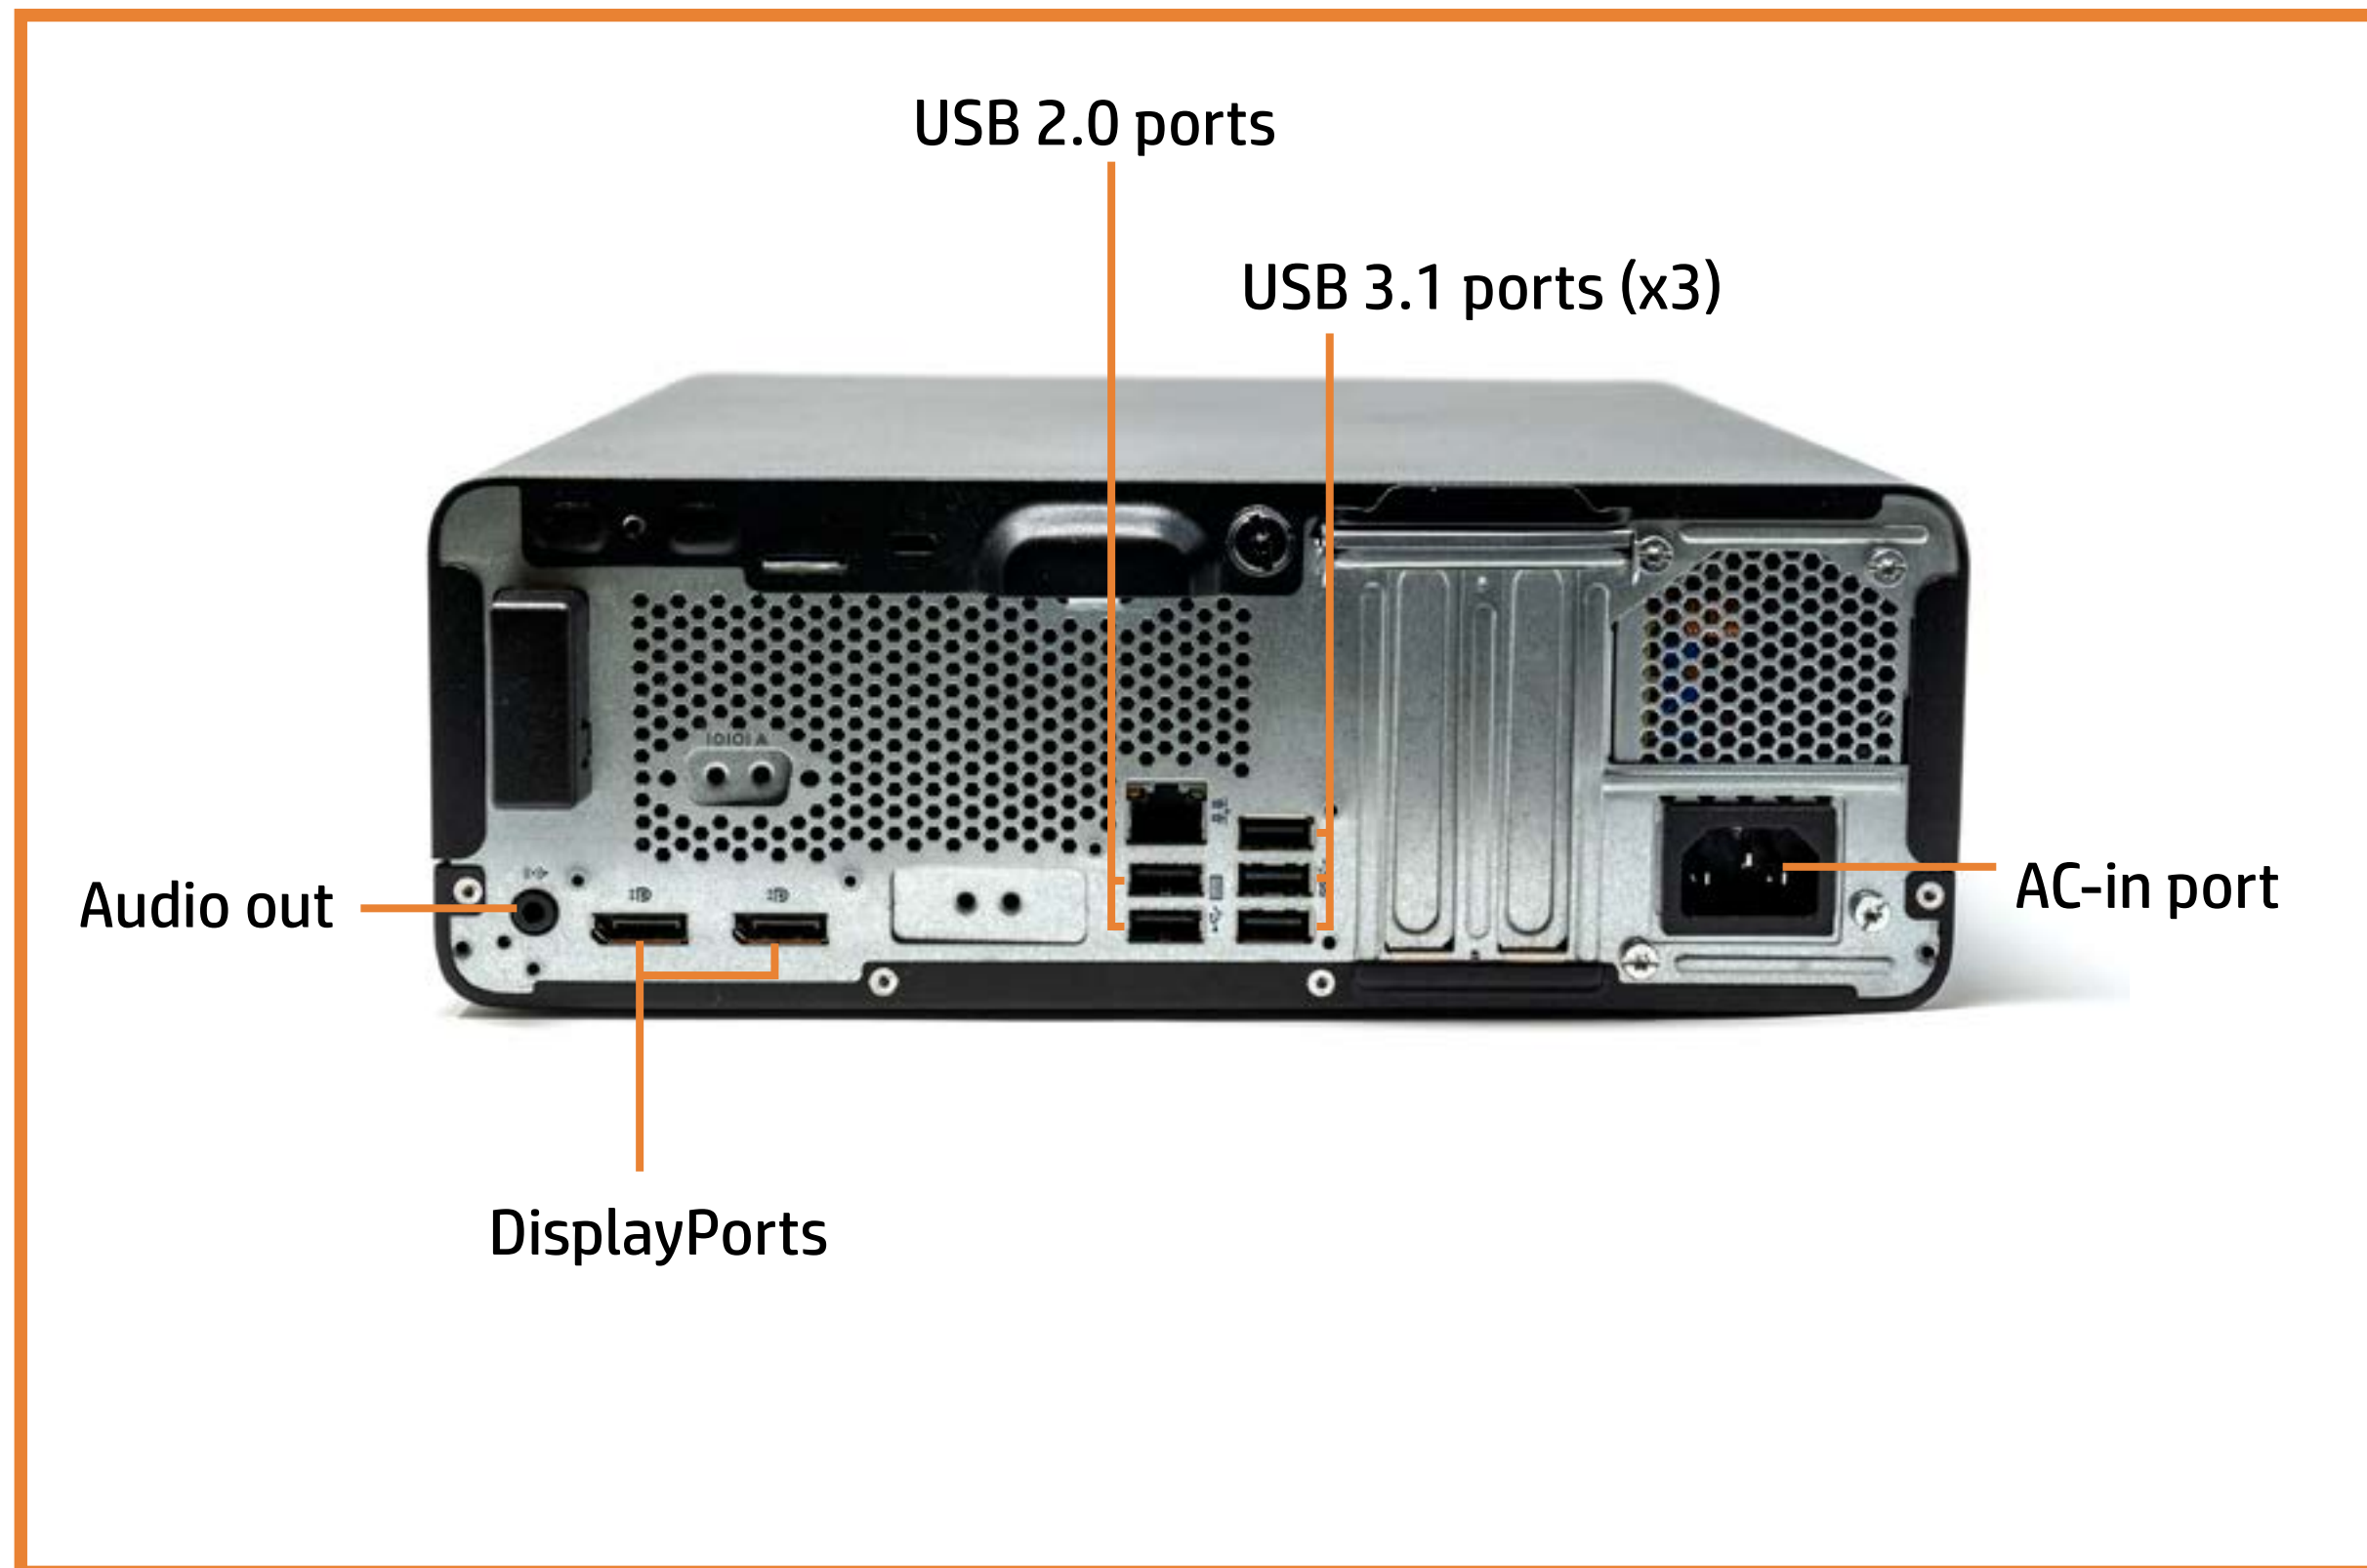


Internal View 1

Optical Drive


Heatsink

Fan Duct

Hood Sensor

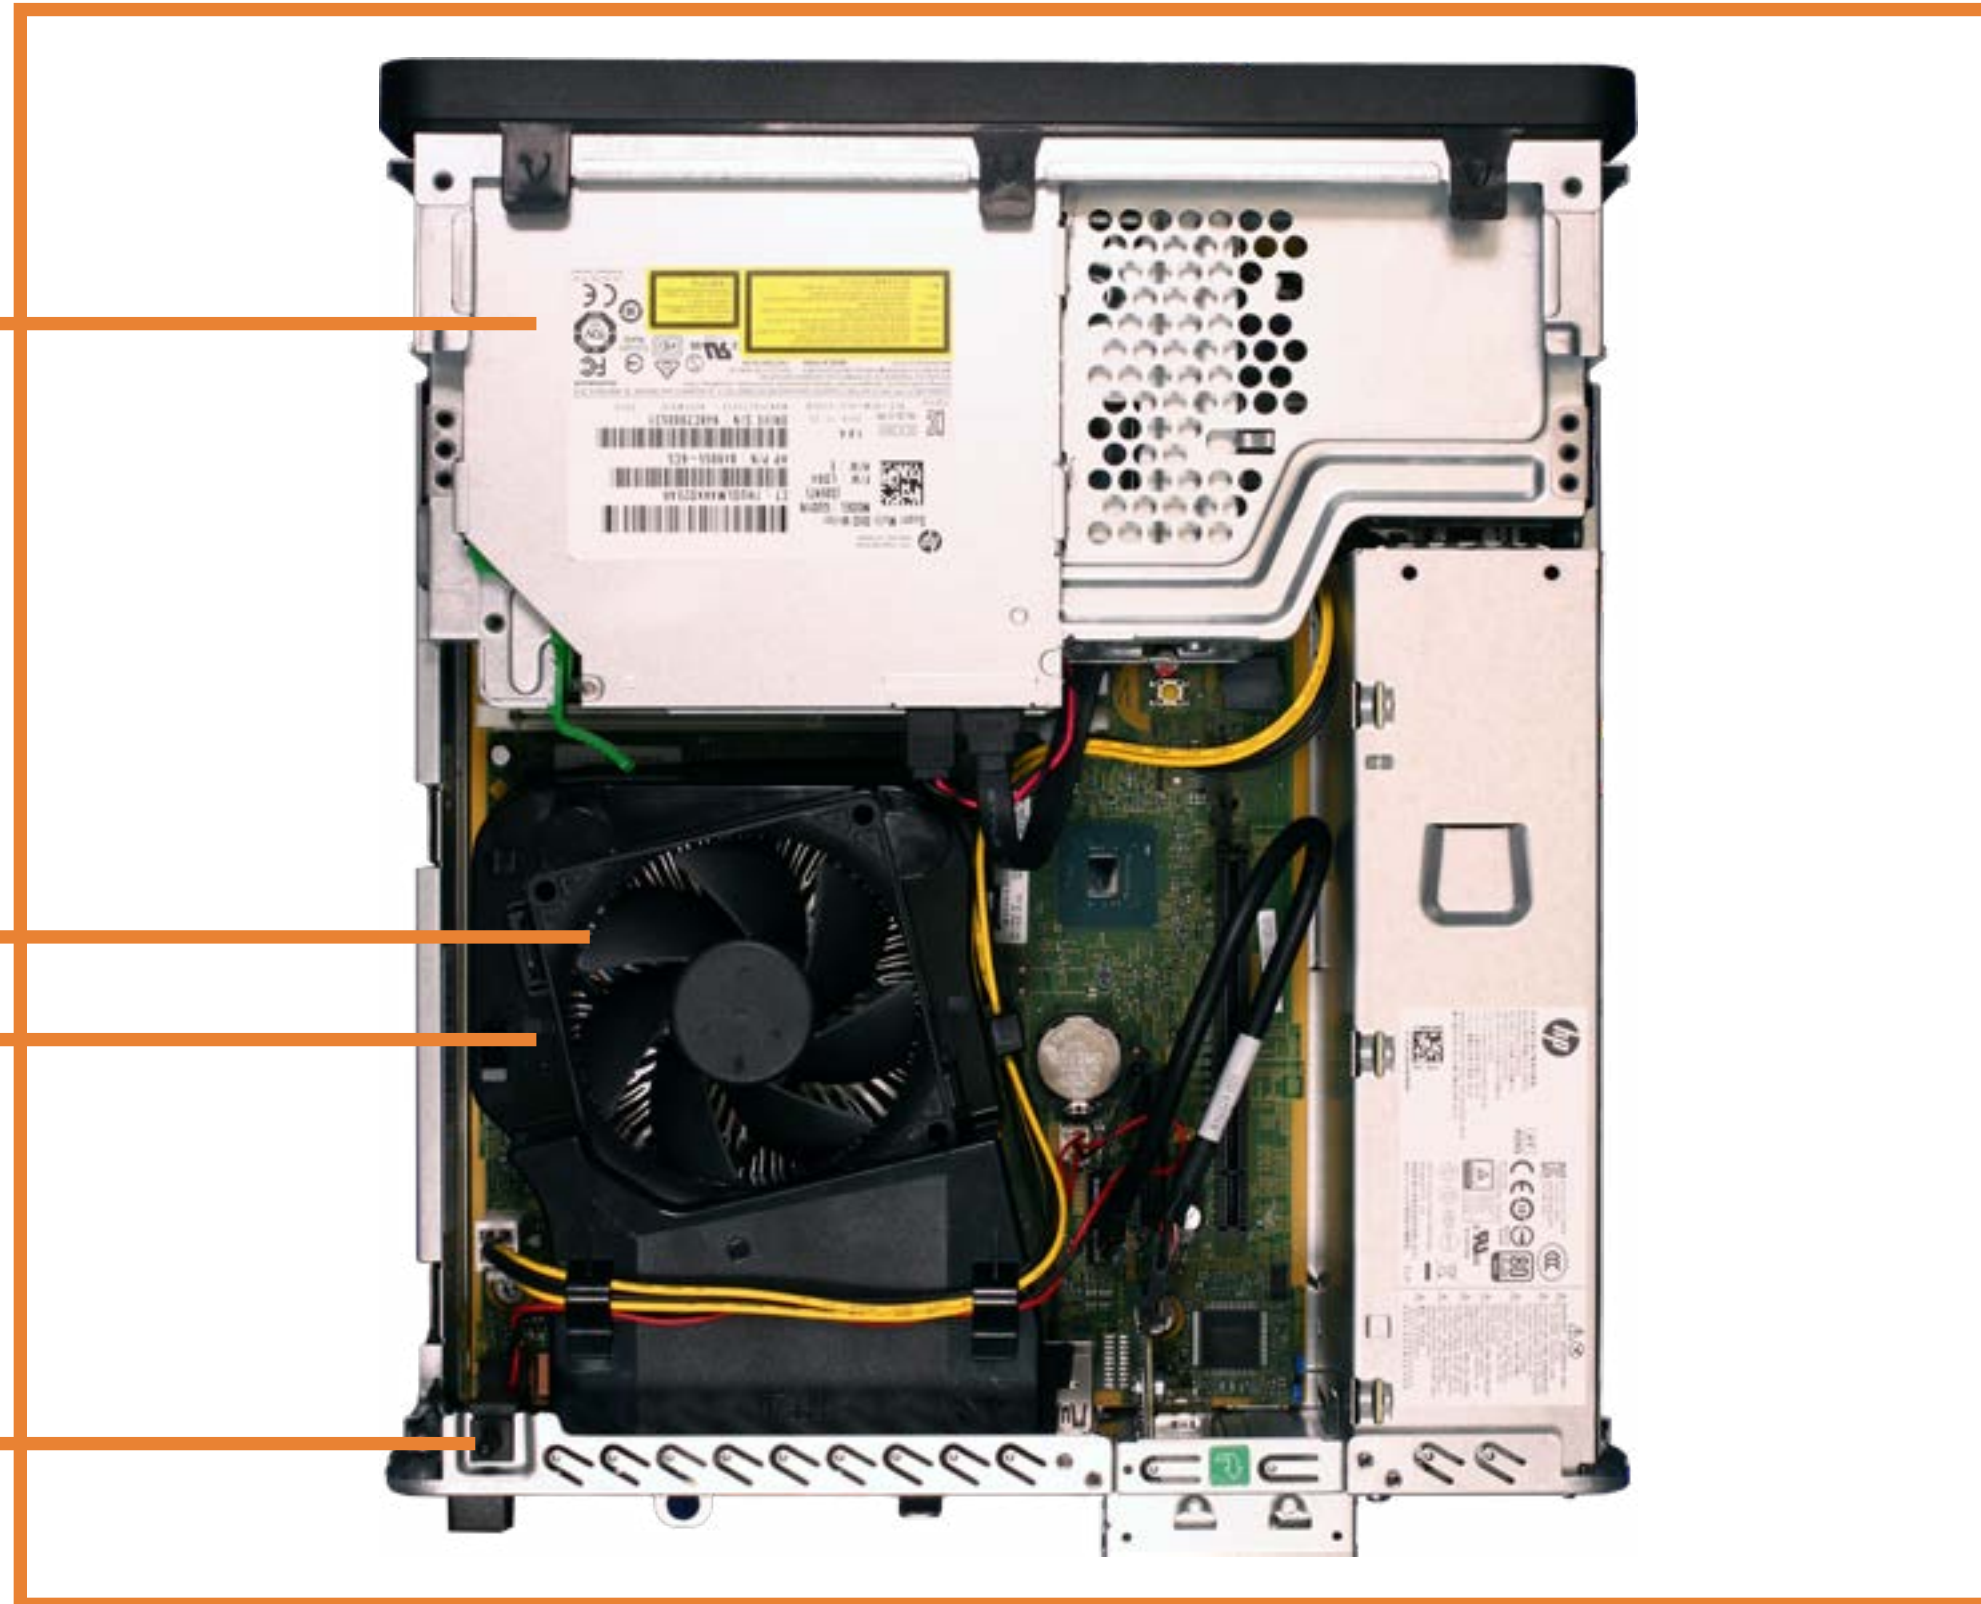

Internal View 2

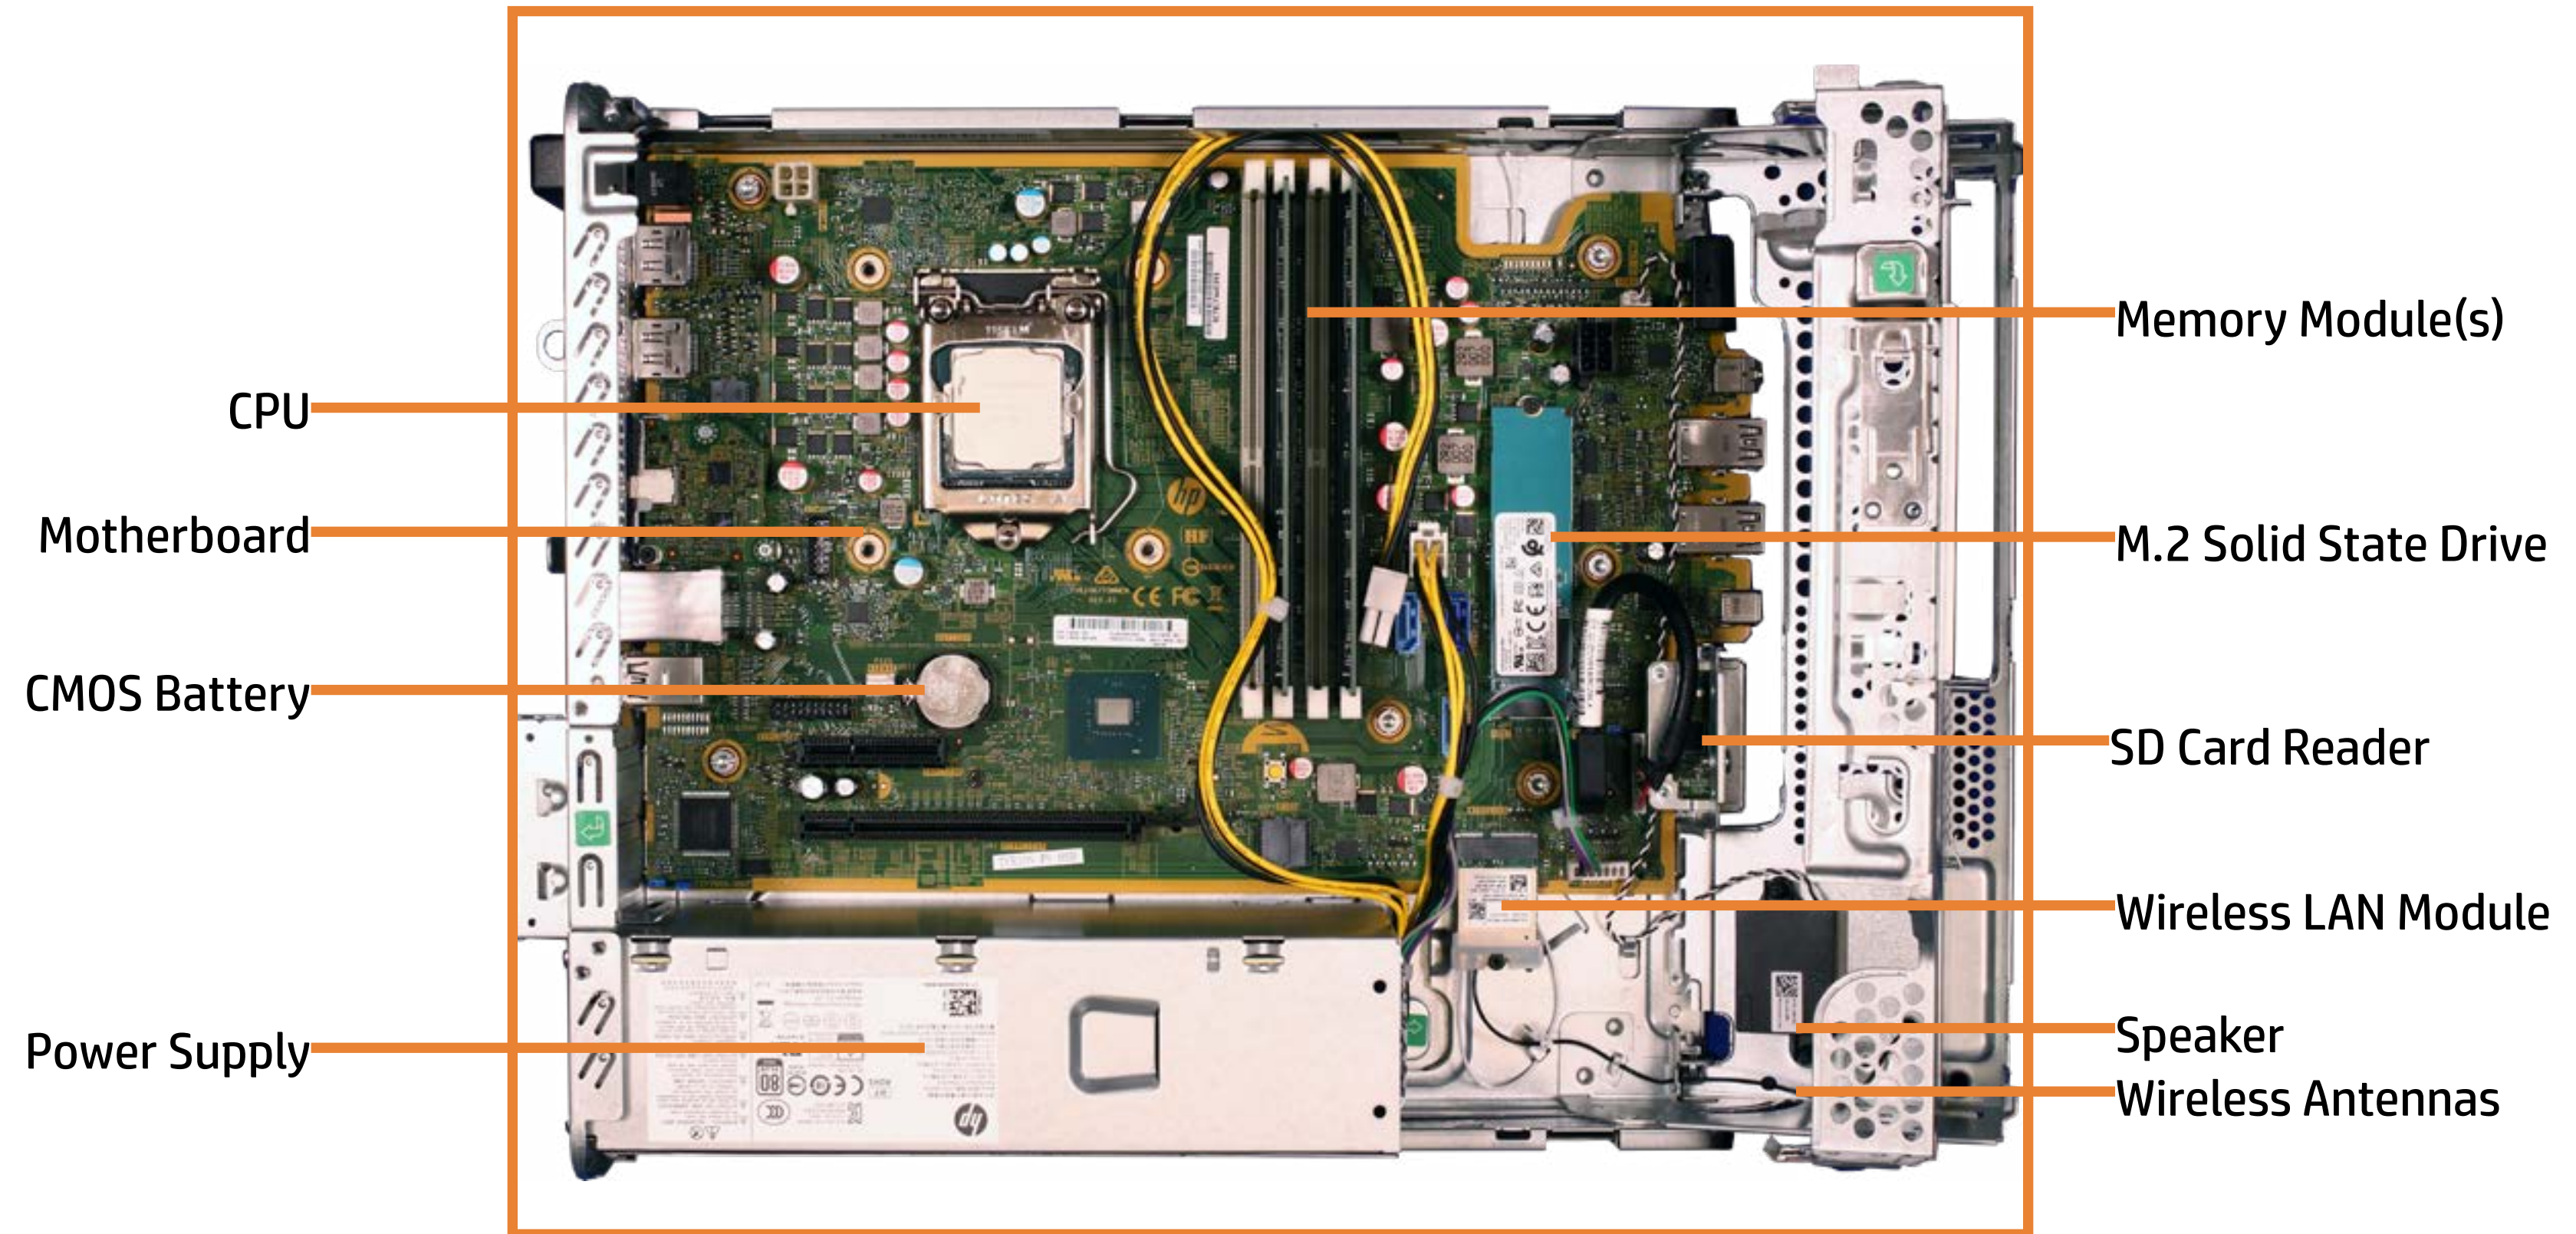

Access Panel

Access Panel




Front Bezel


Access Panel




Optical Drive

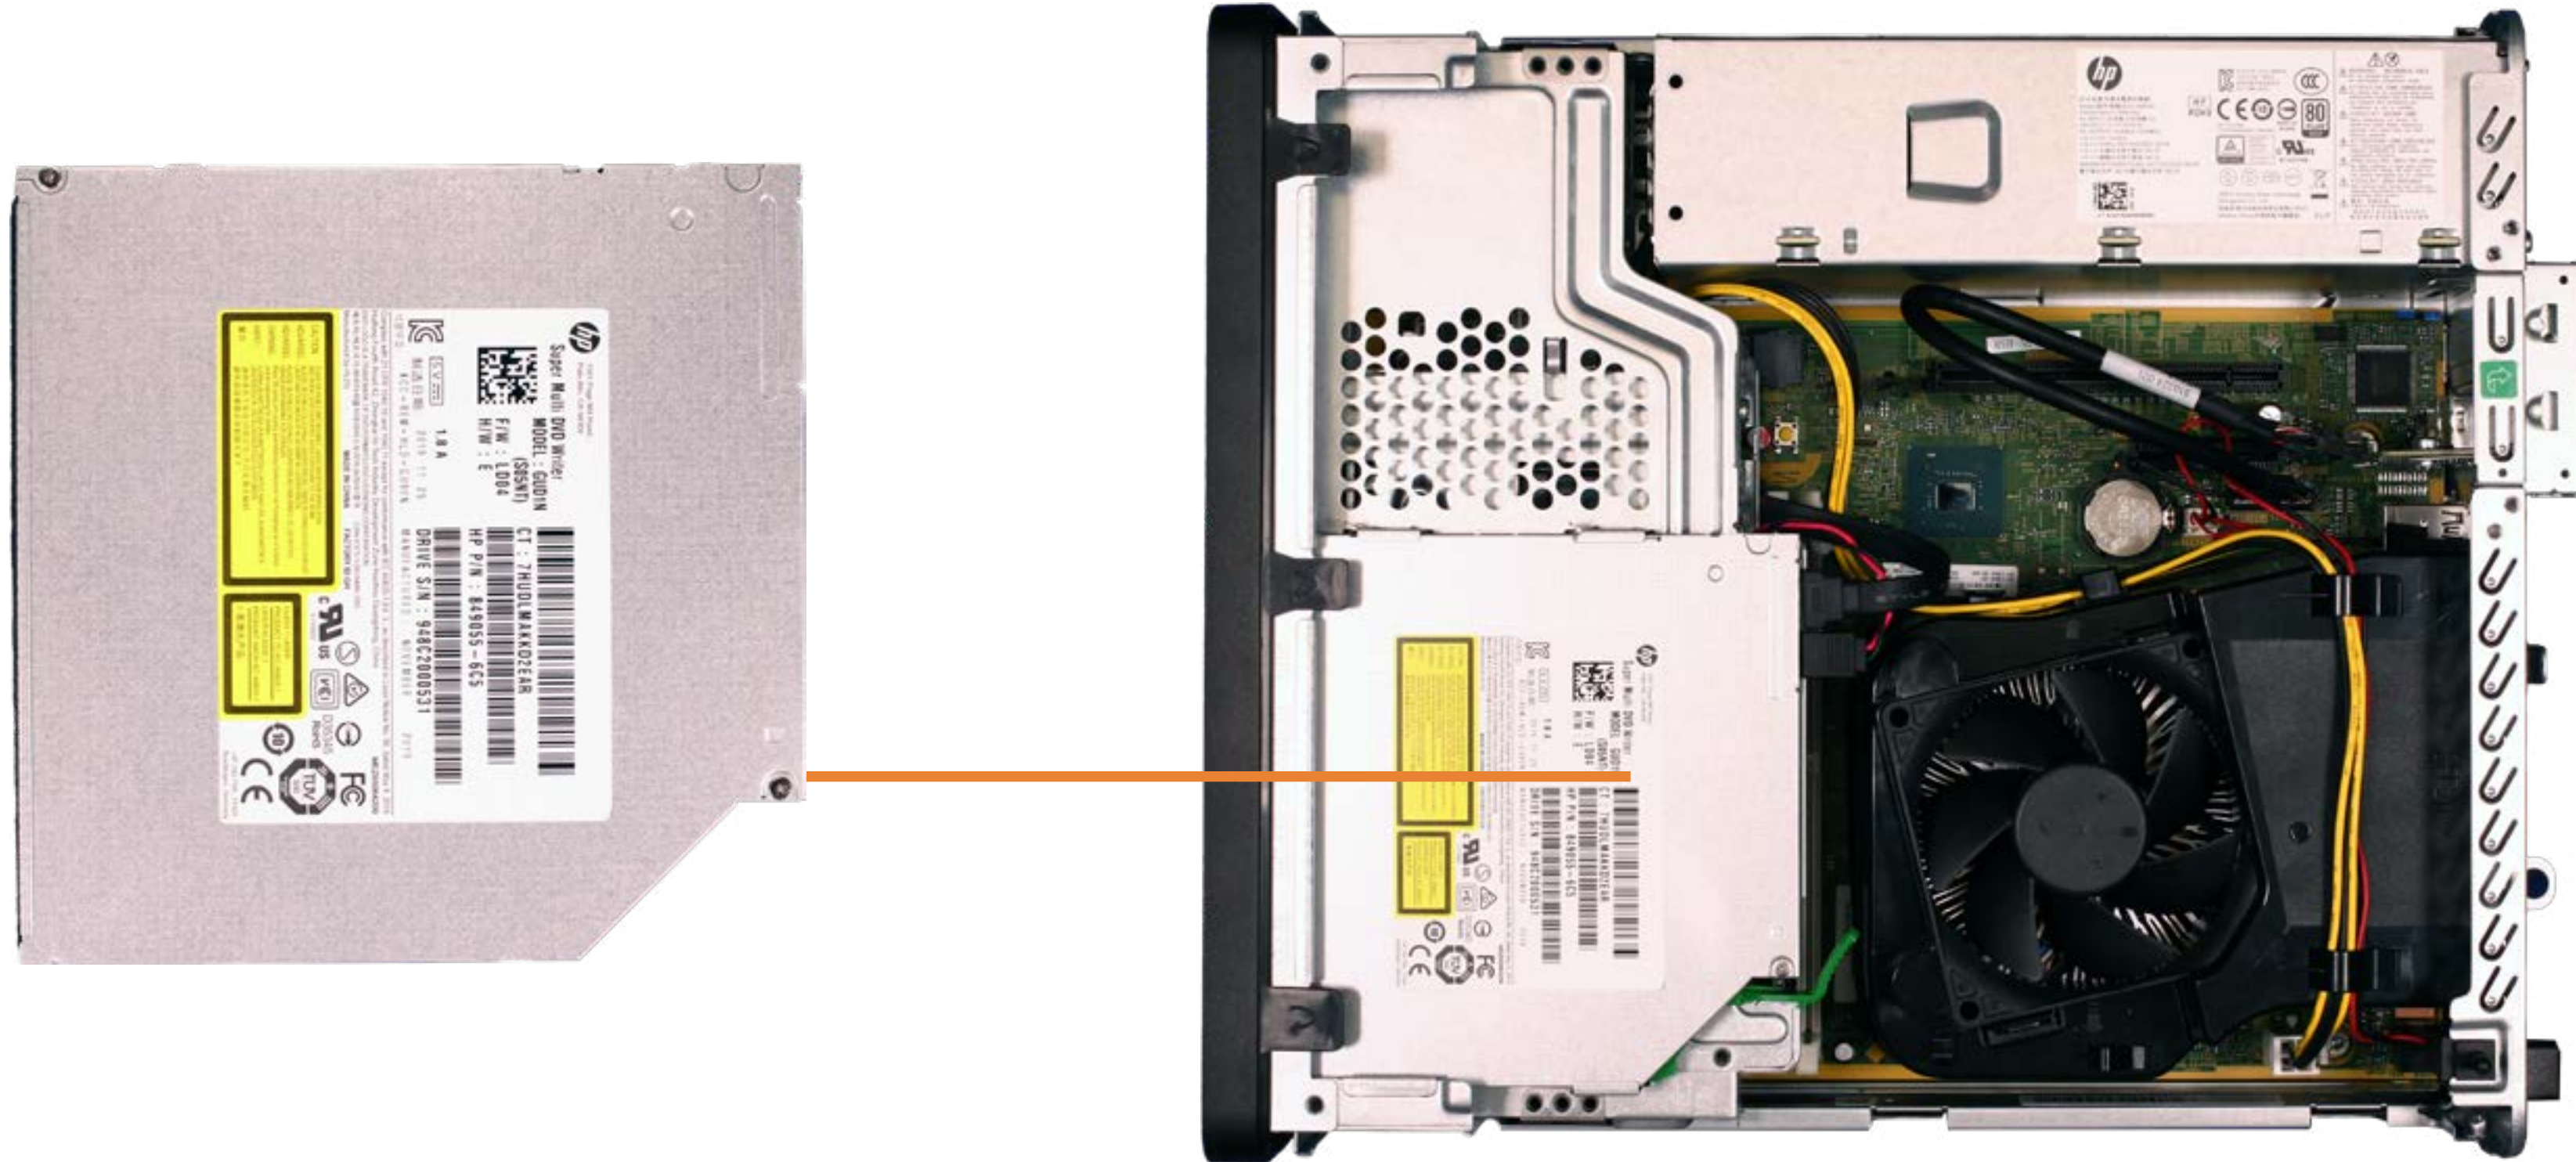



Fan Duct

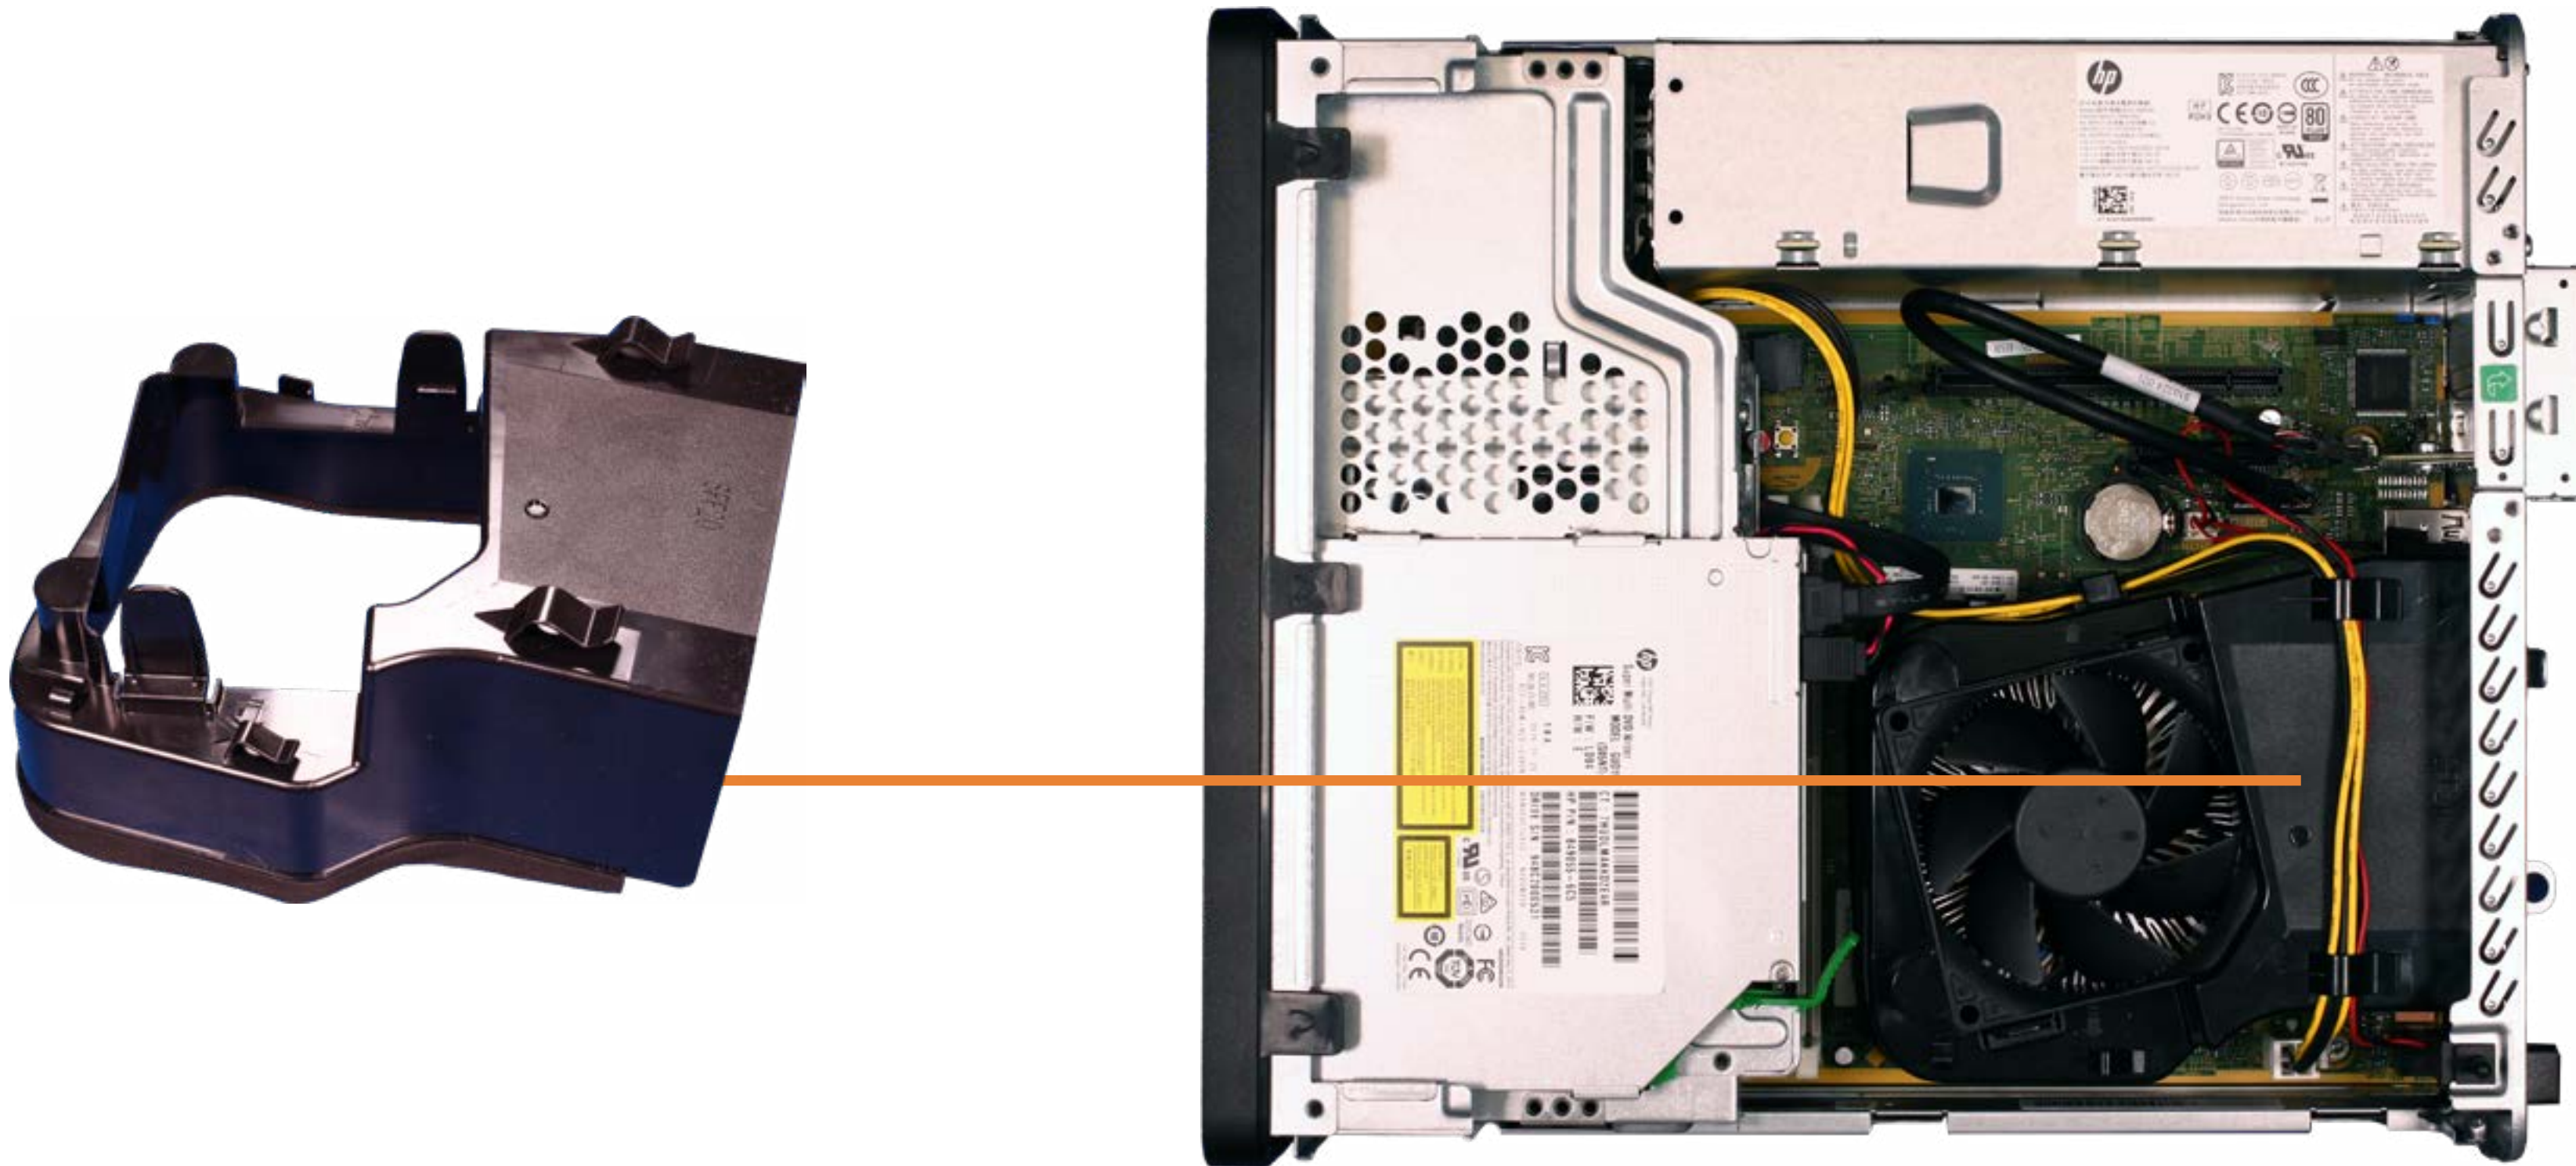

Hood Sensor

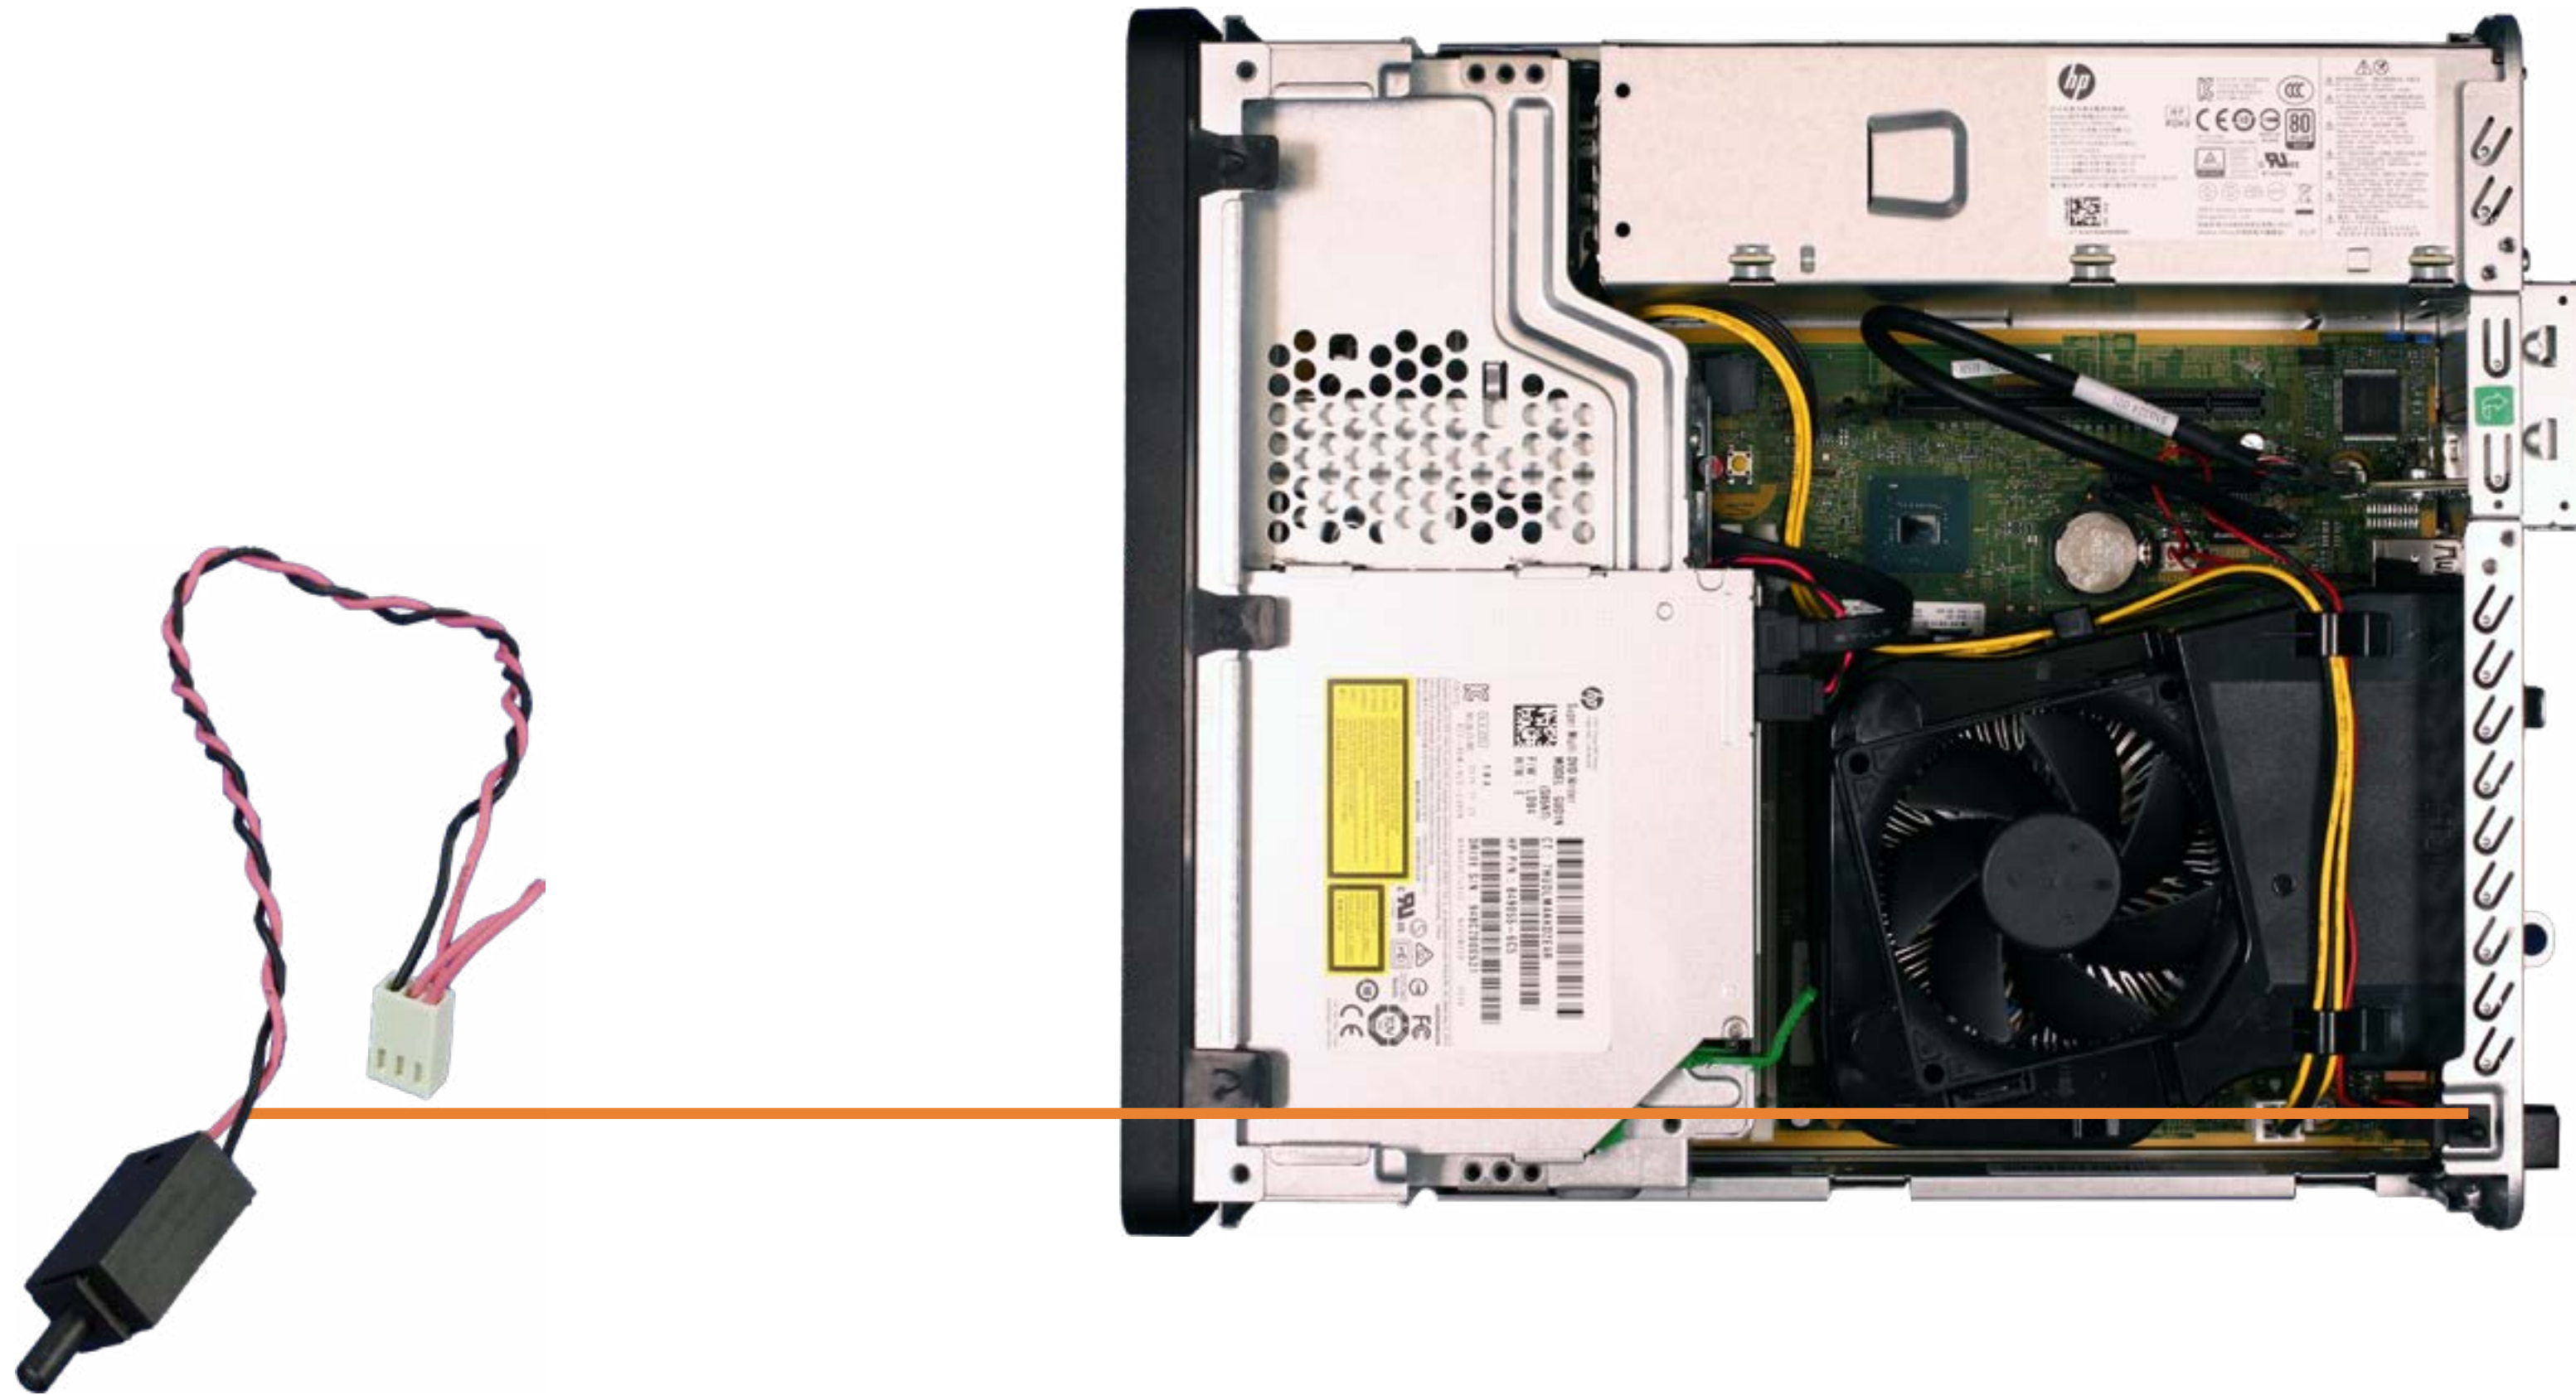


Expansion Card

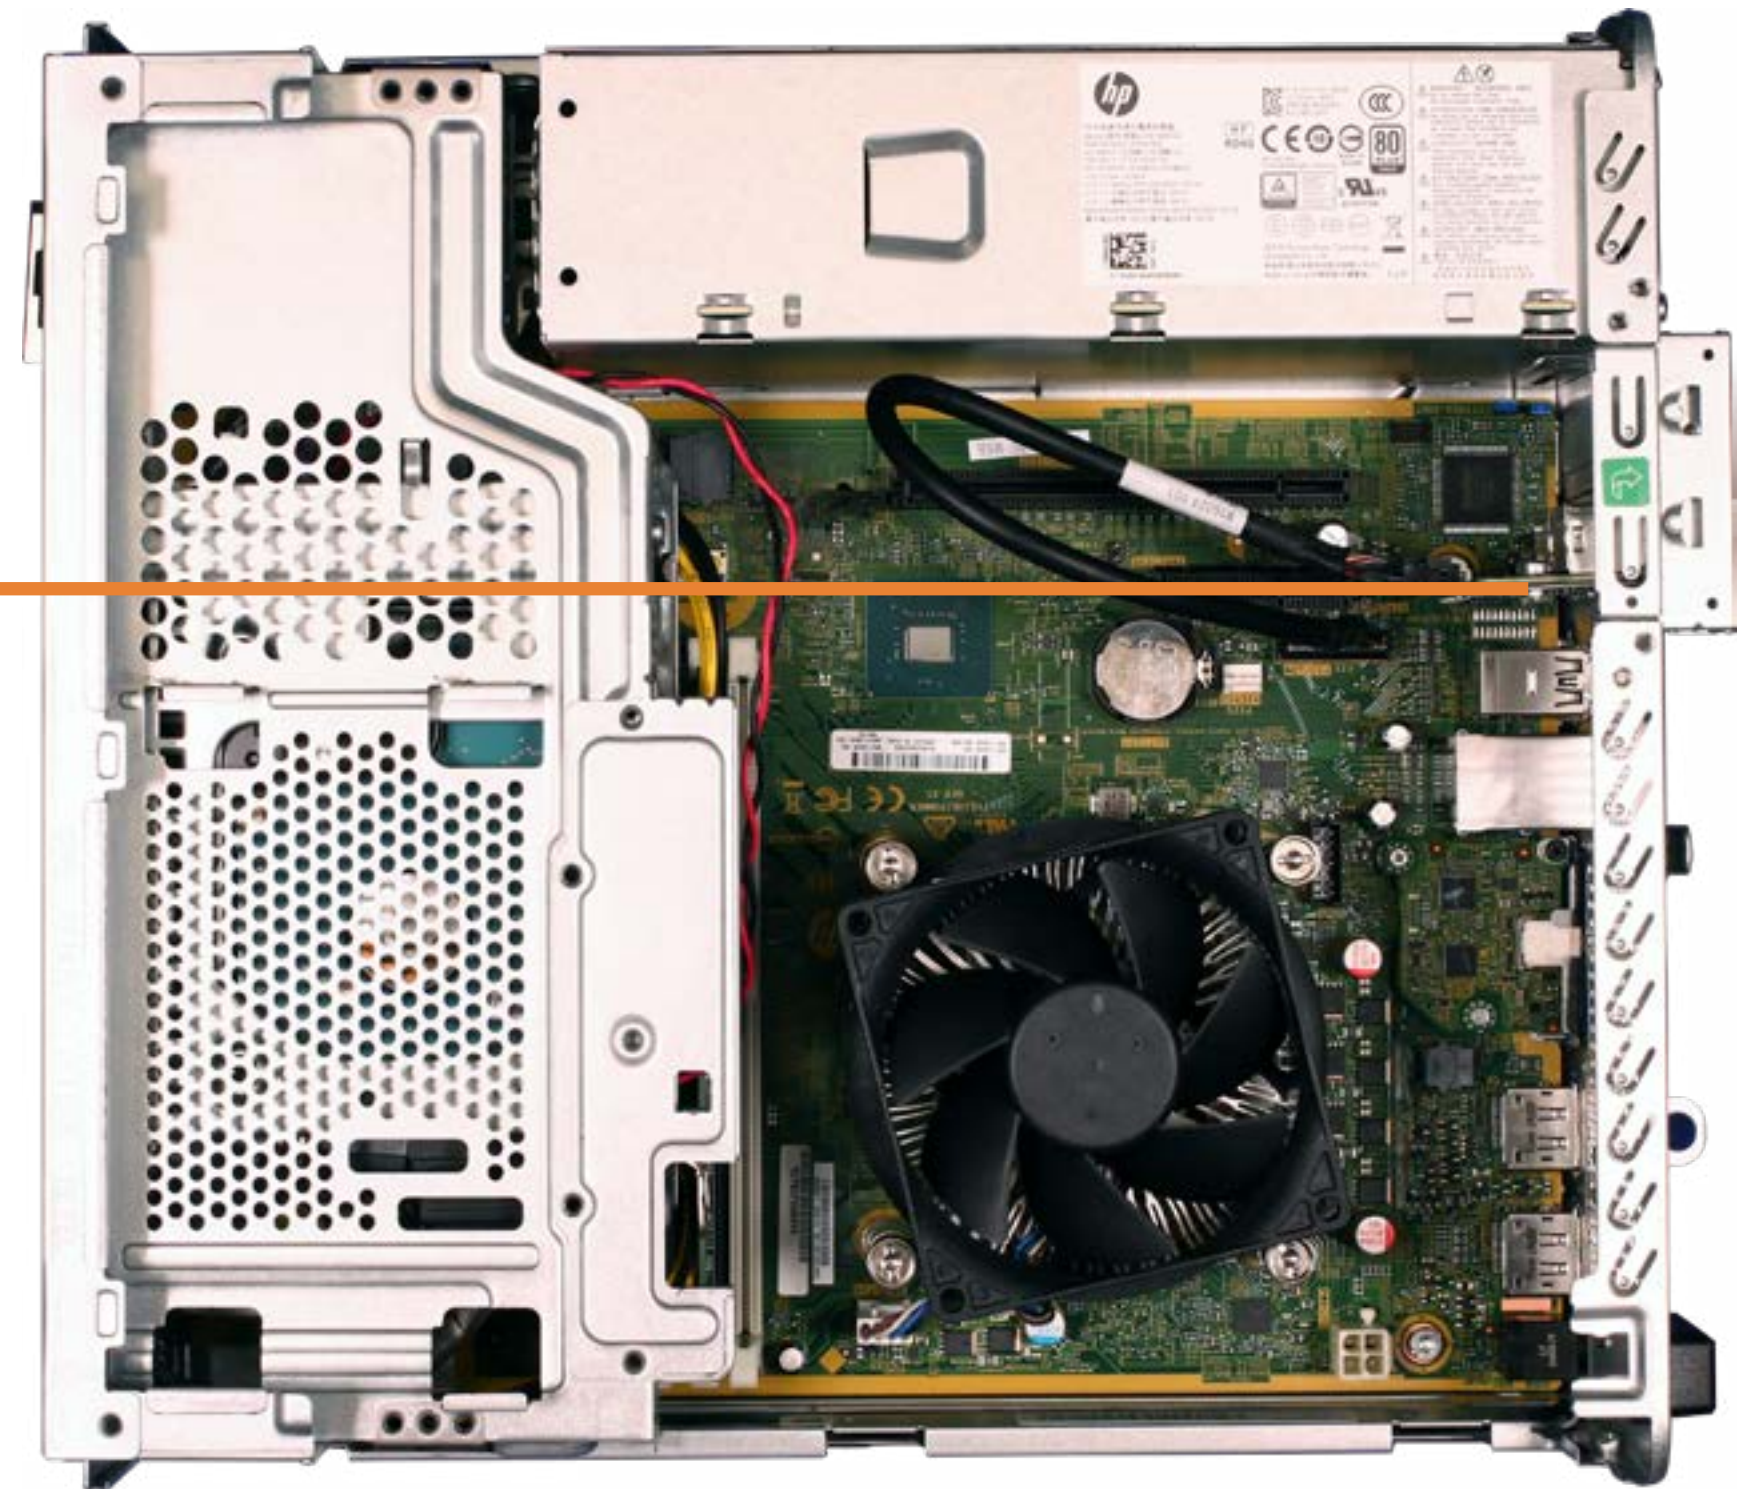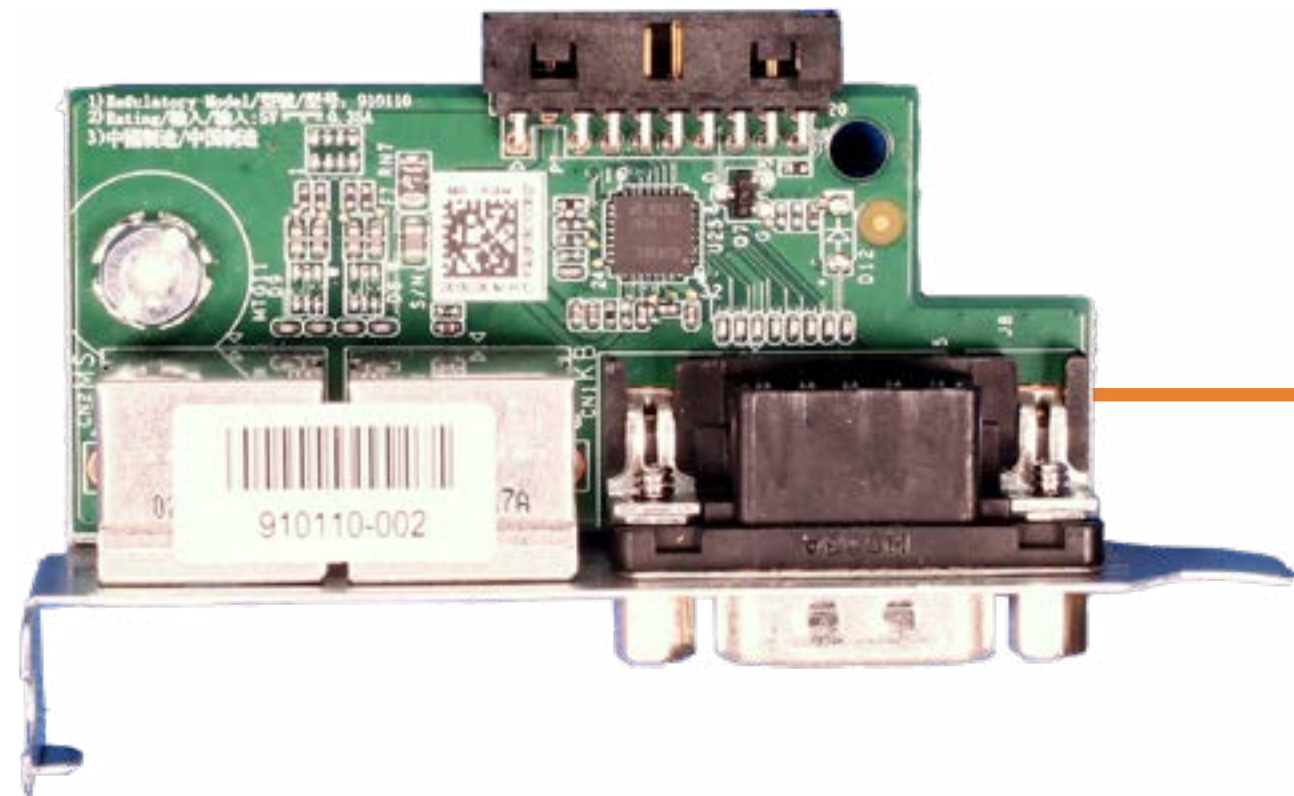


Hard Disk Drive




Heatsink

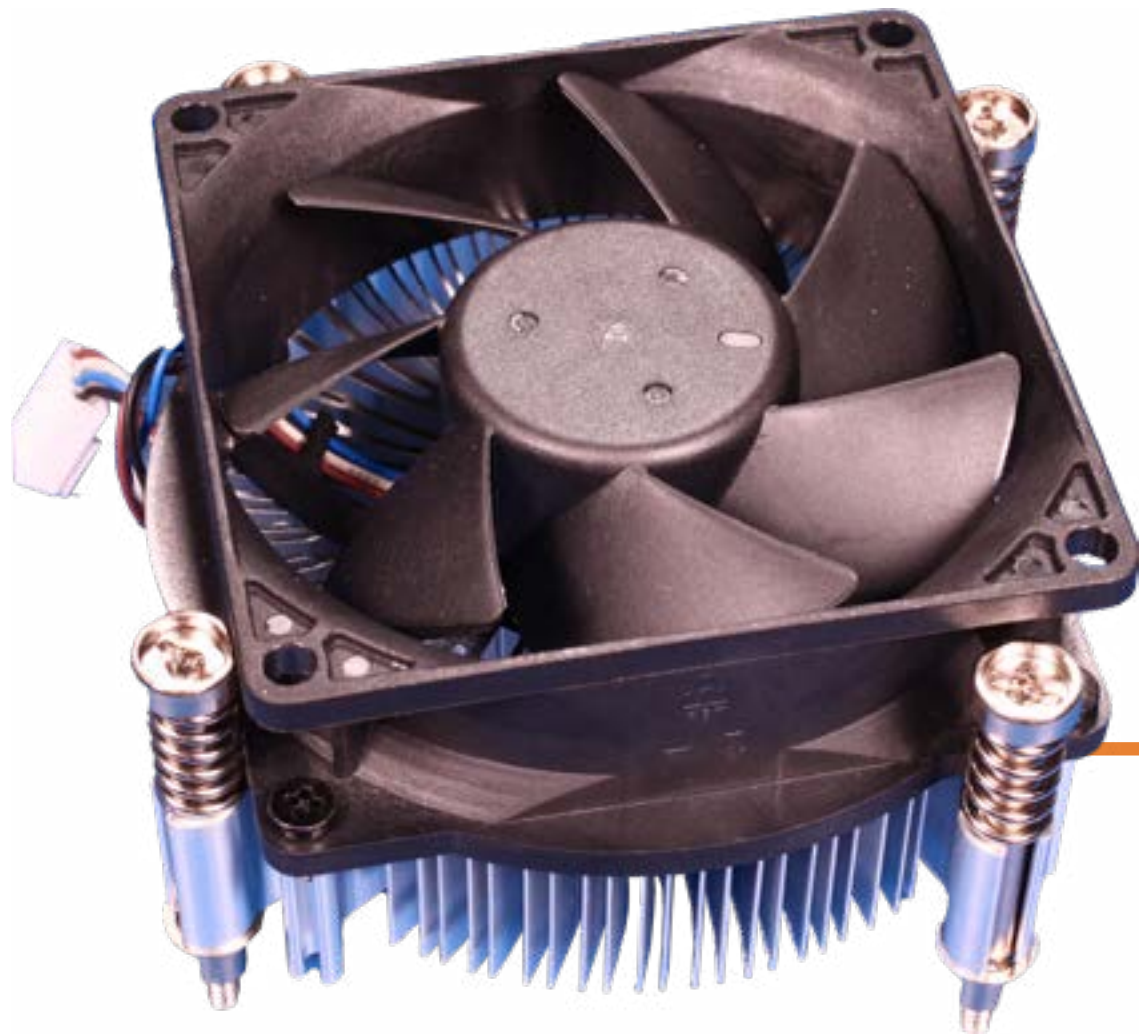


M.2 Solid State Drive

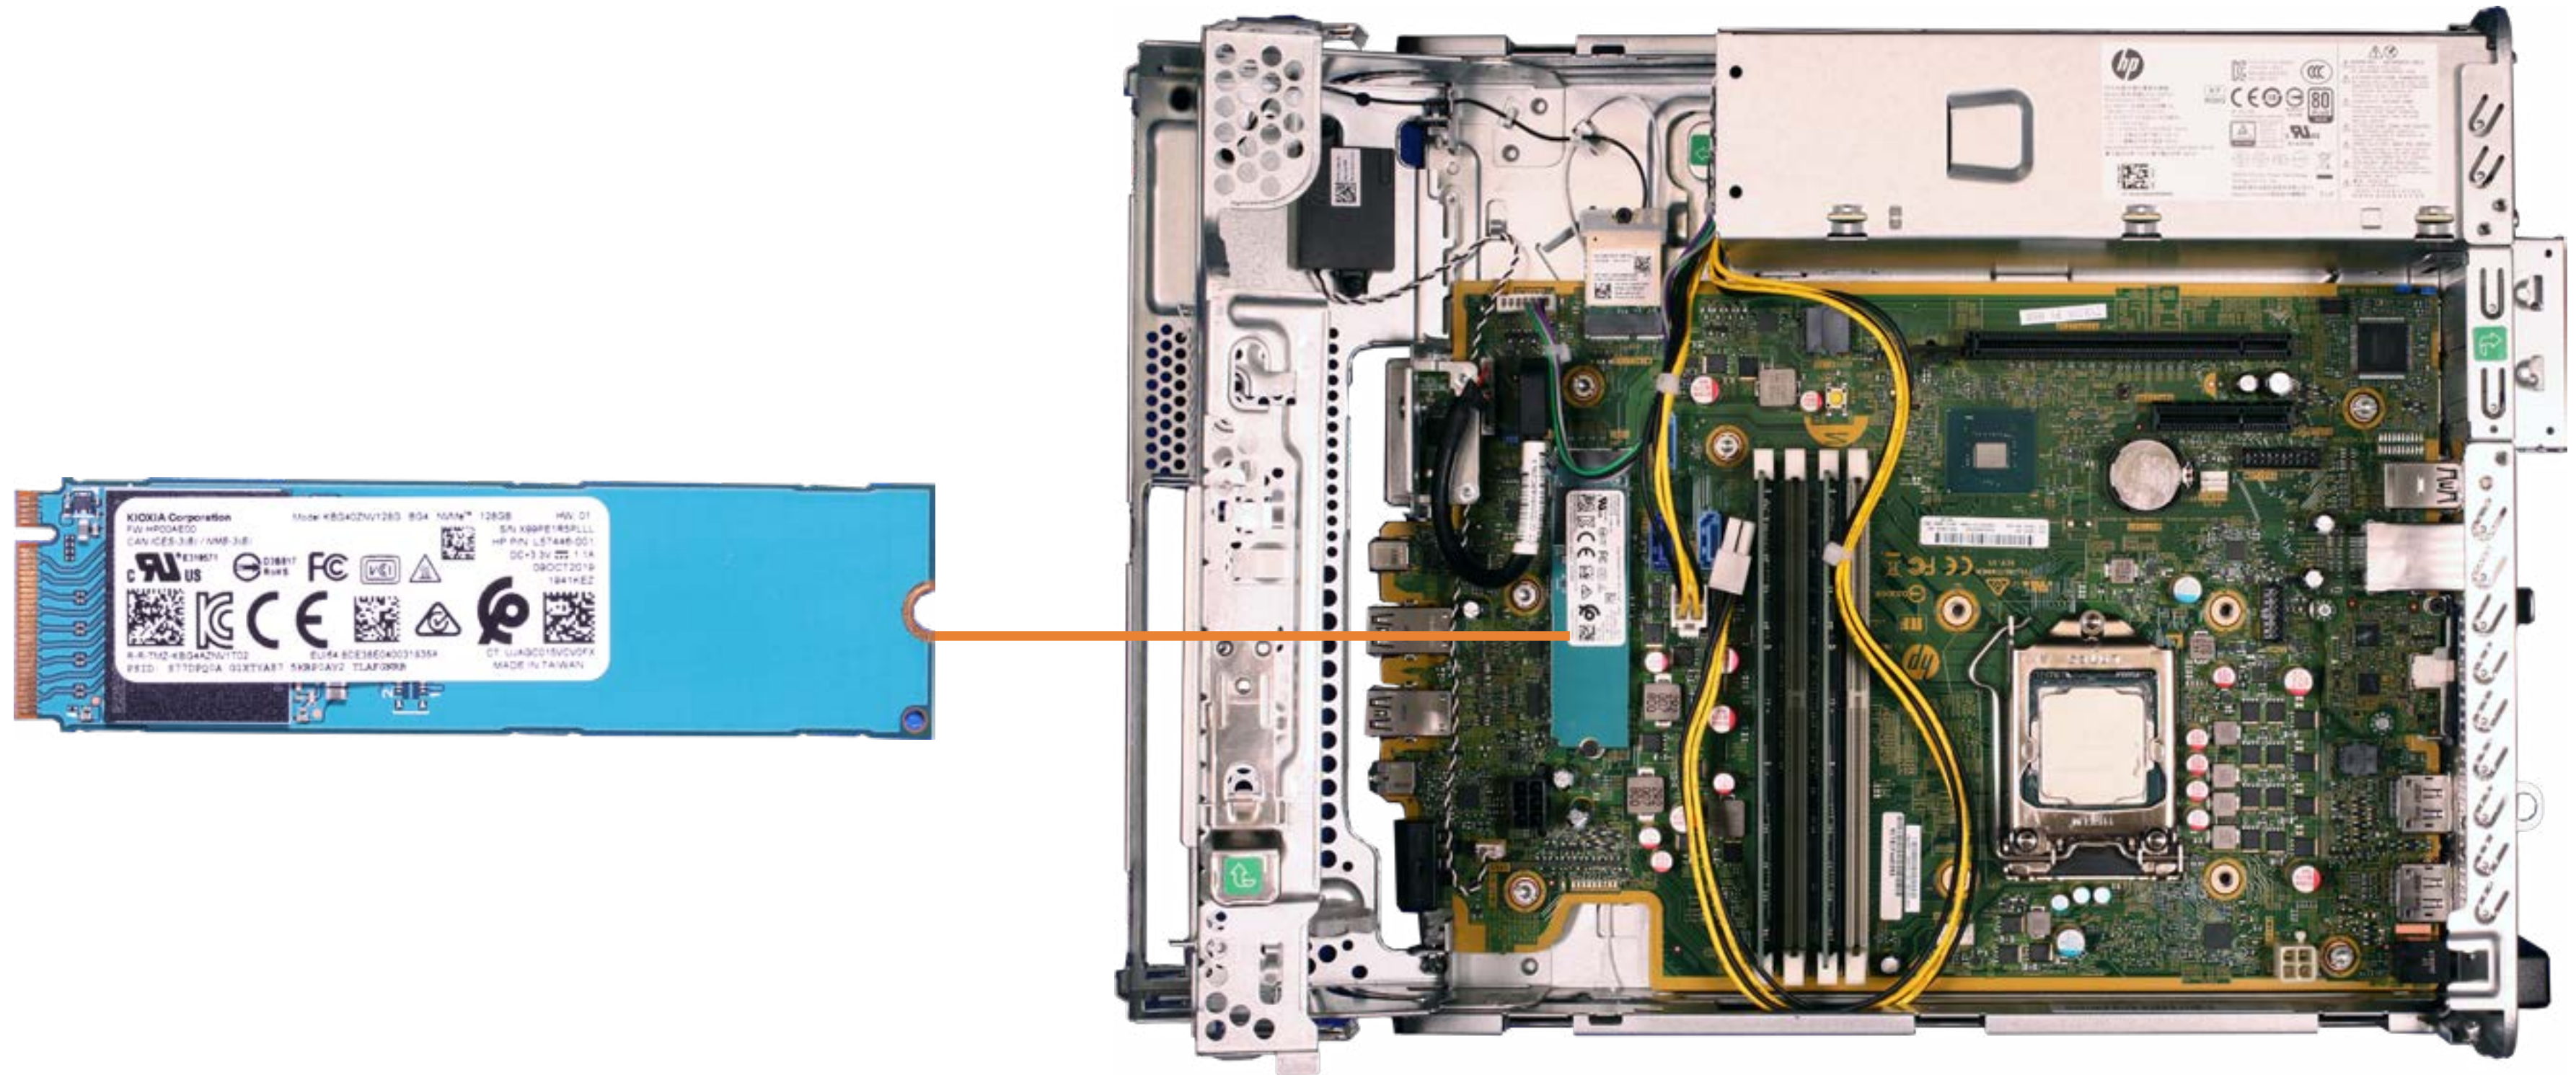


Wireless LAN Module

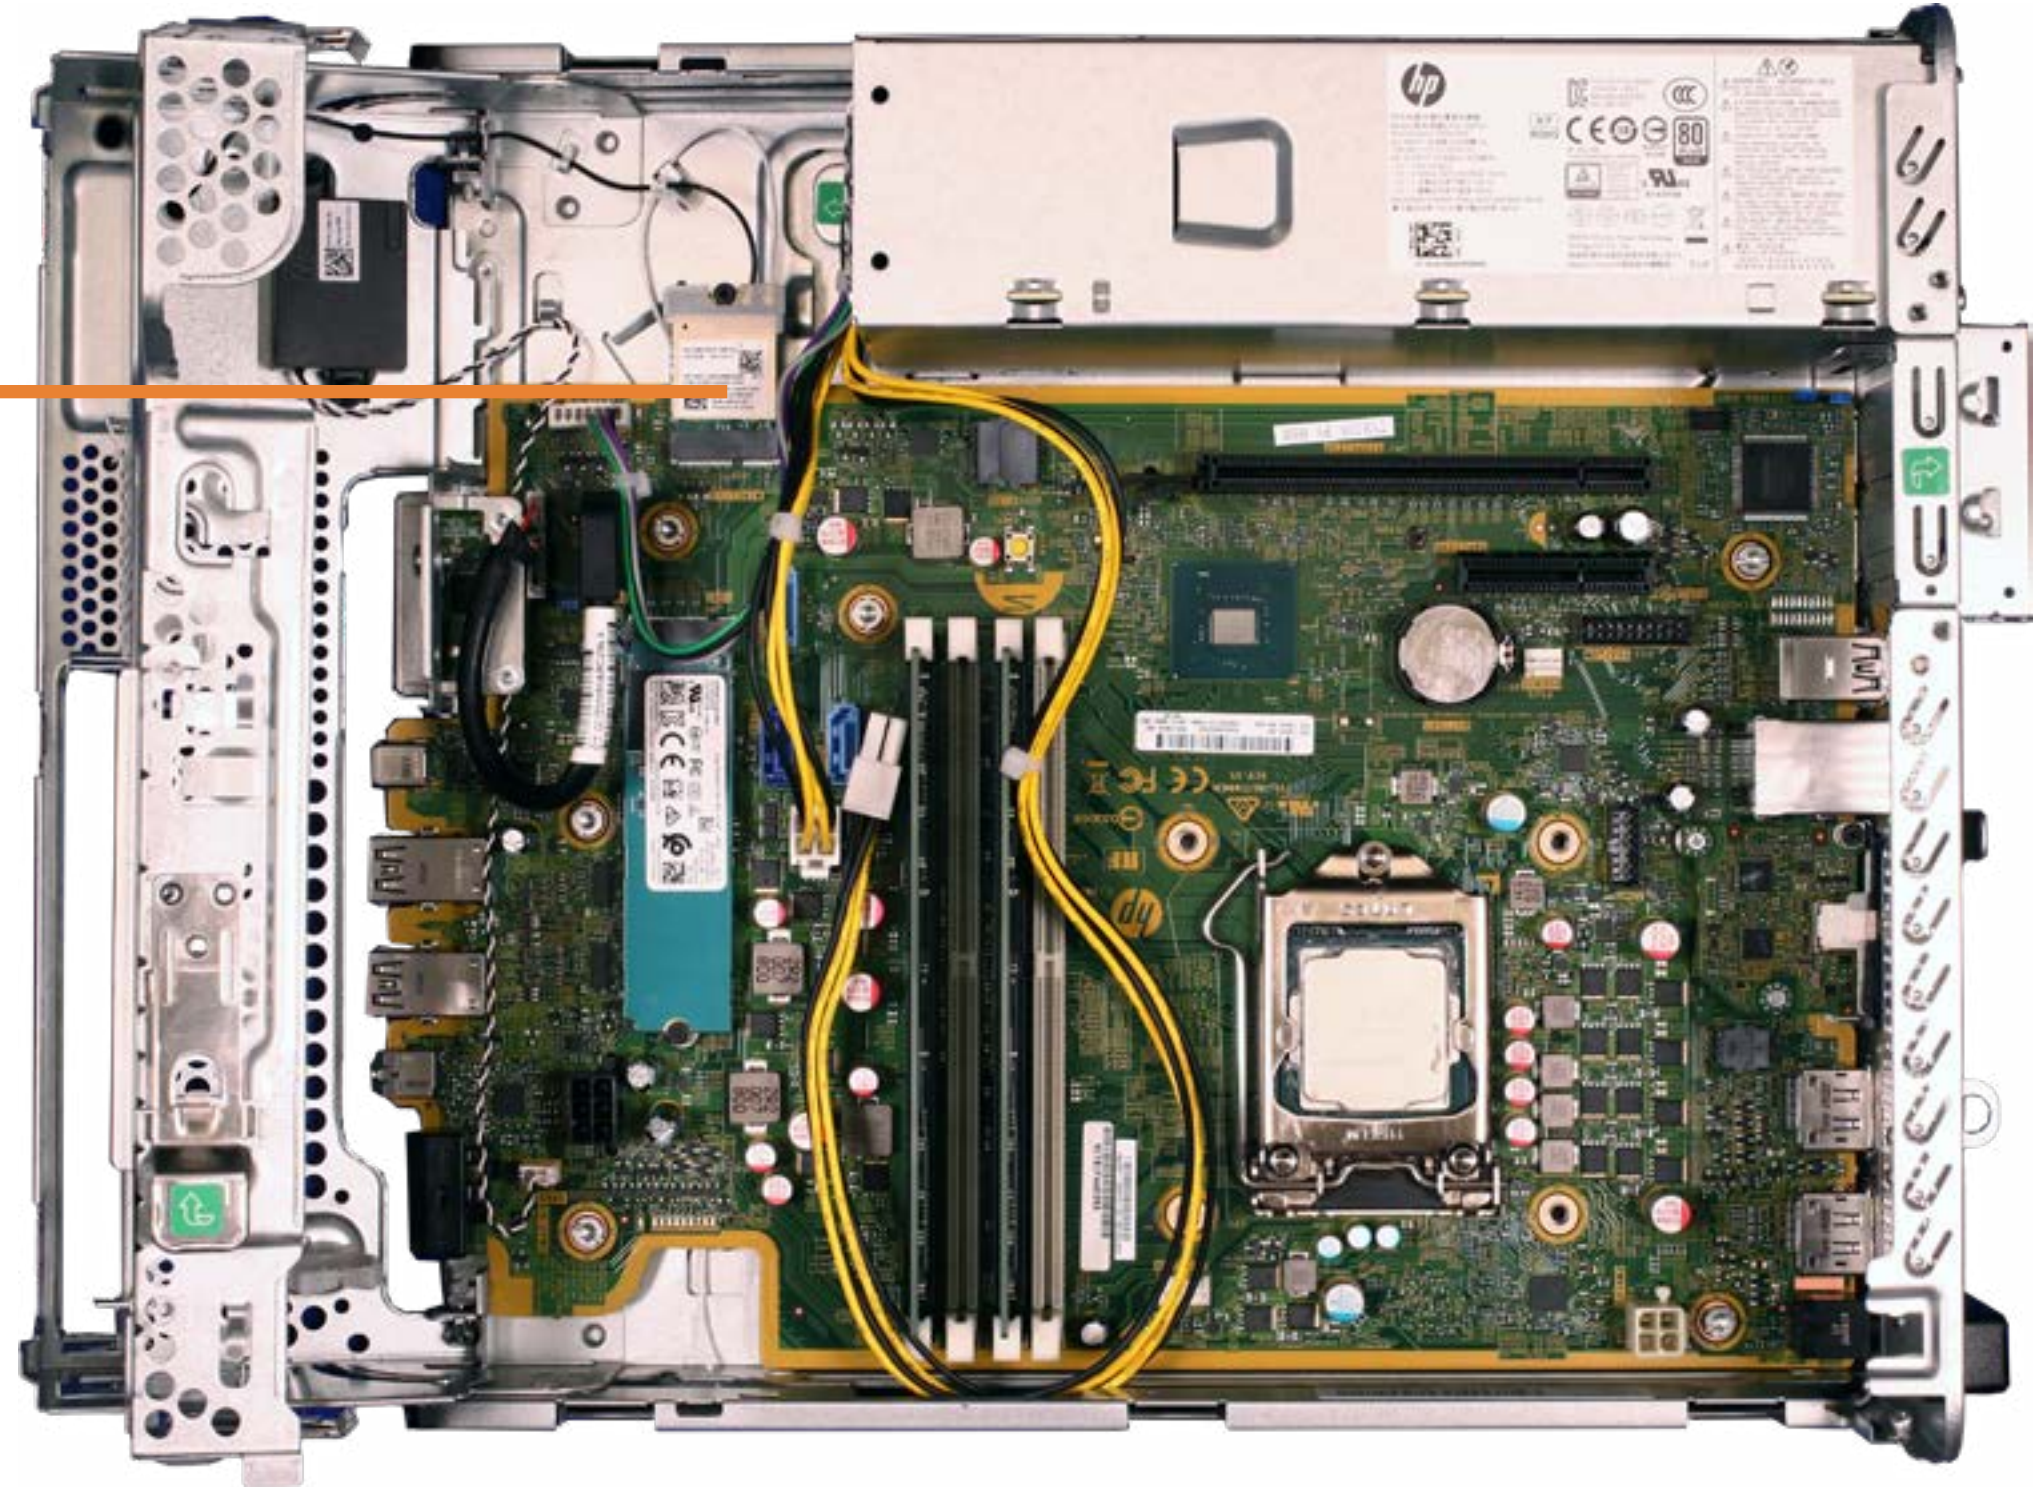


Memory Module(s)

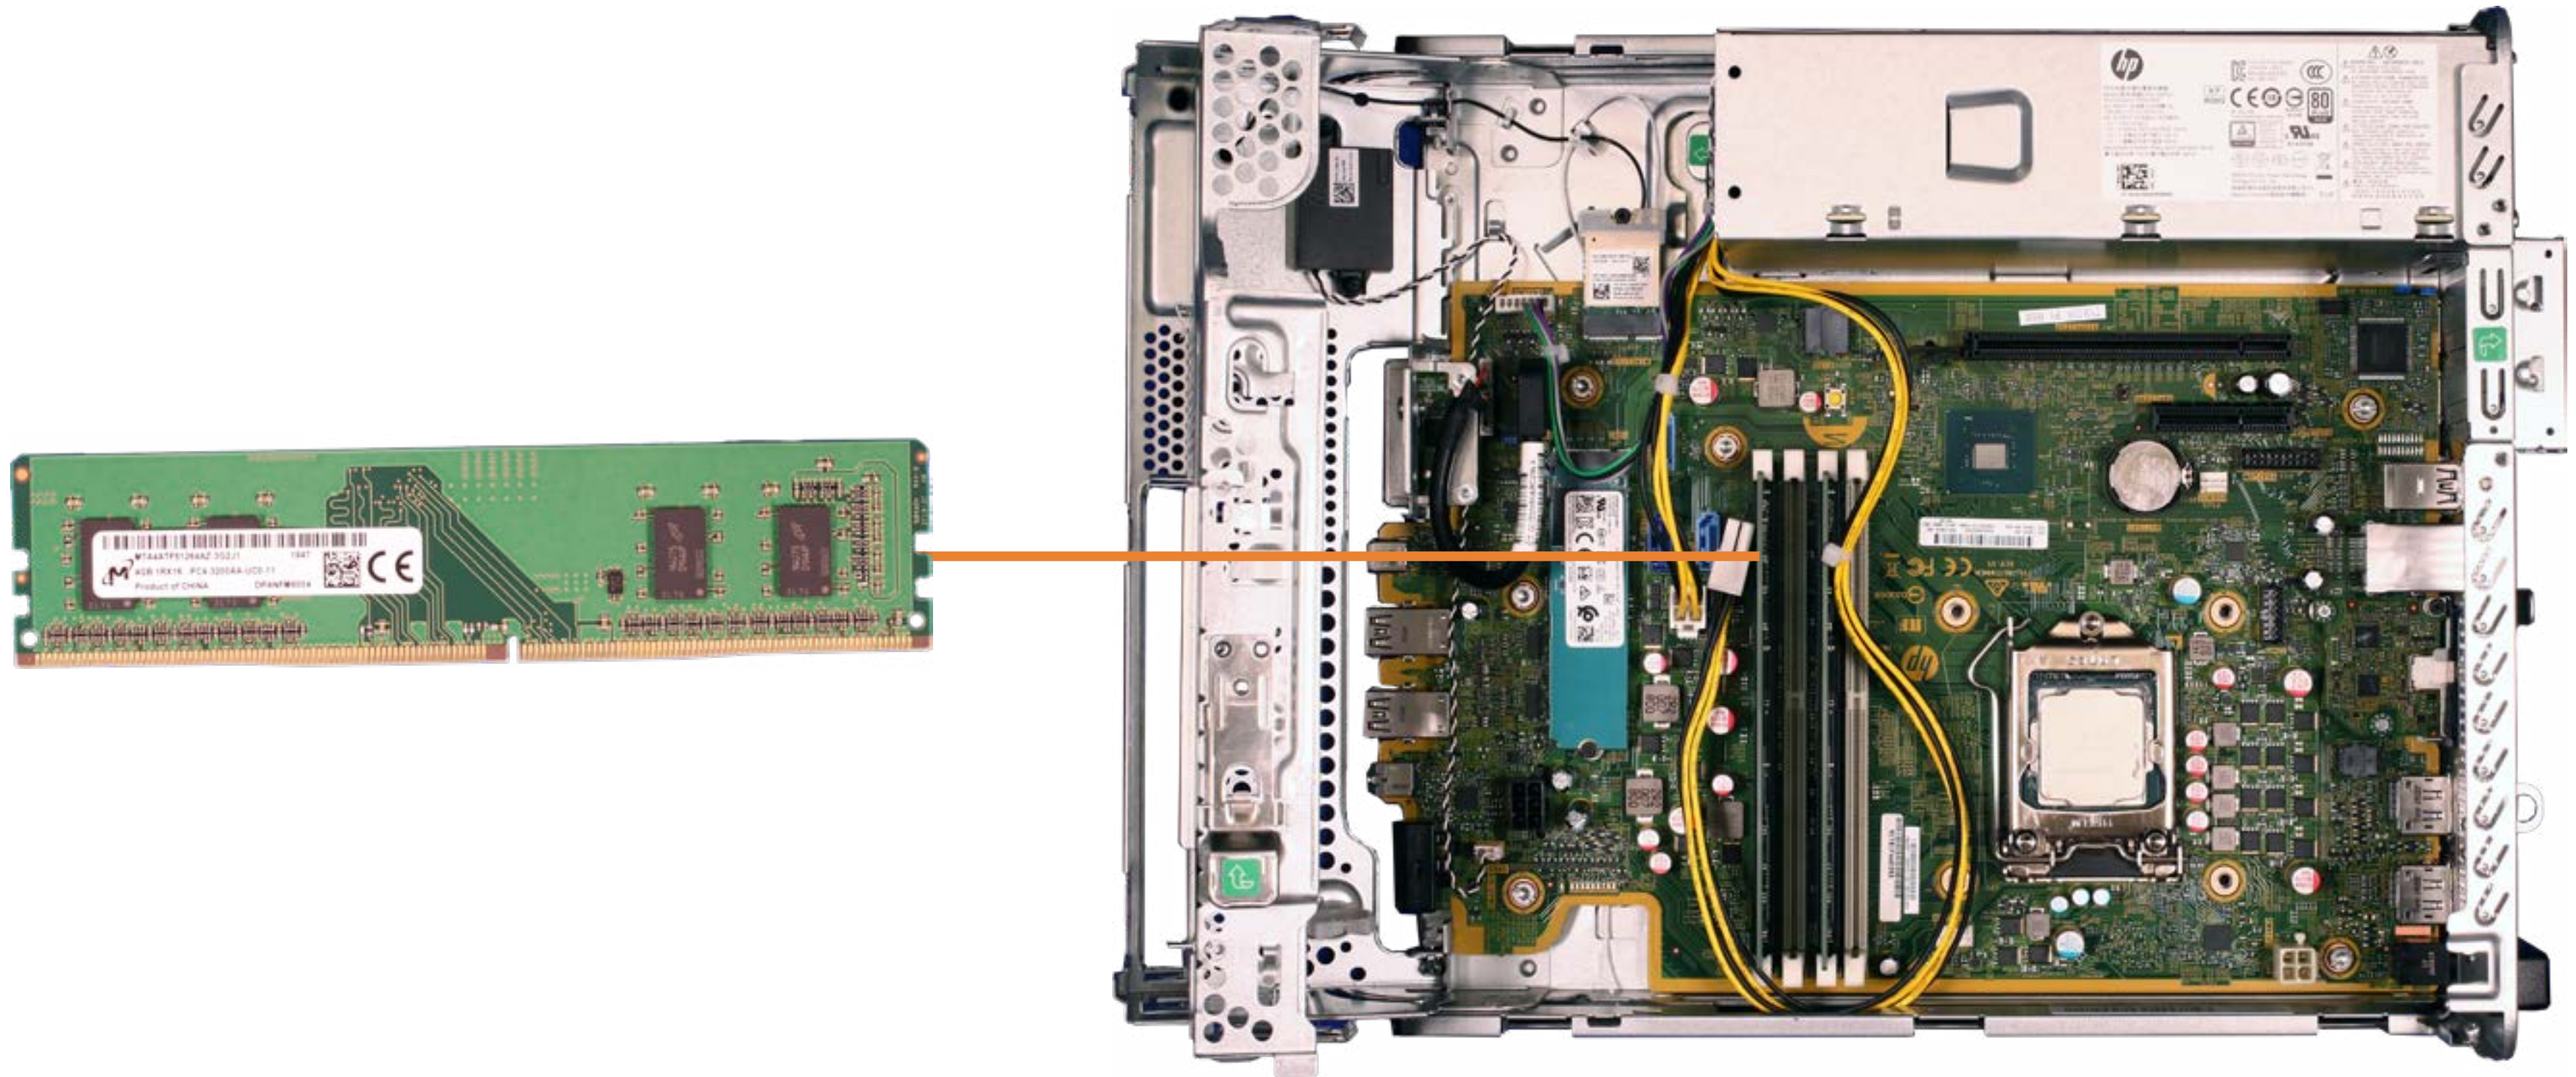


Power Supply

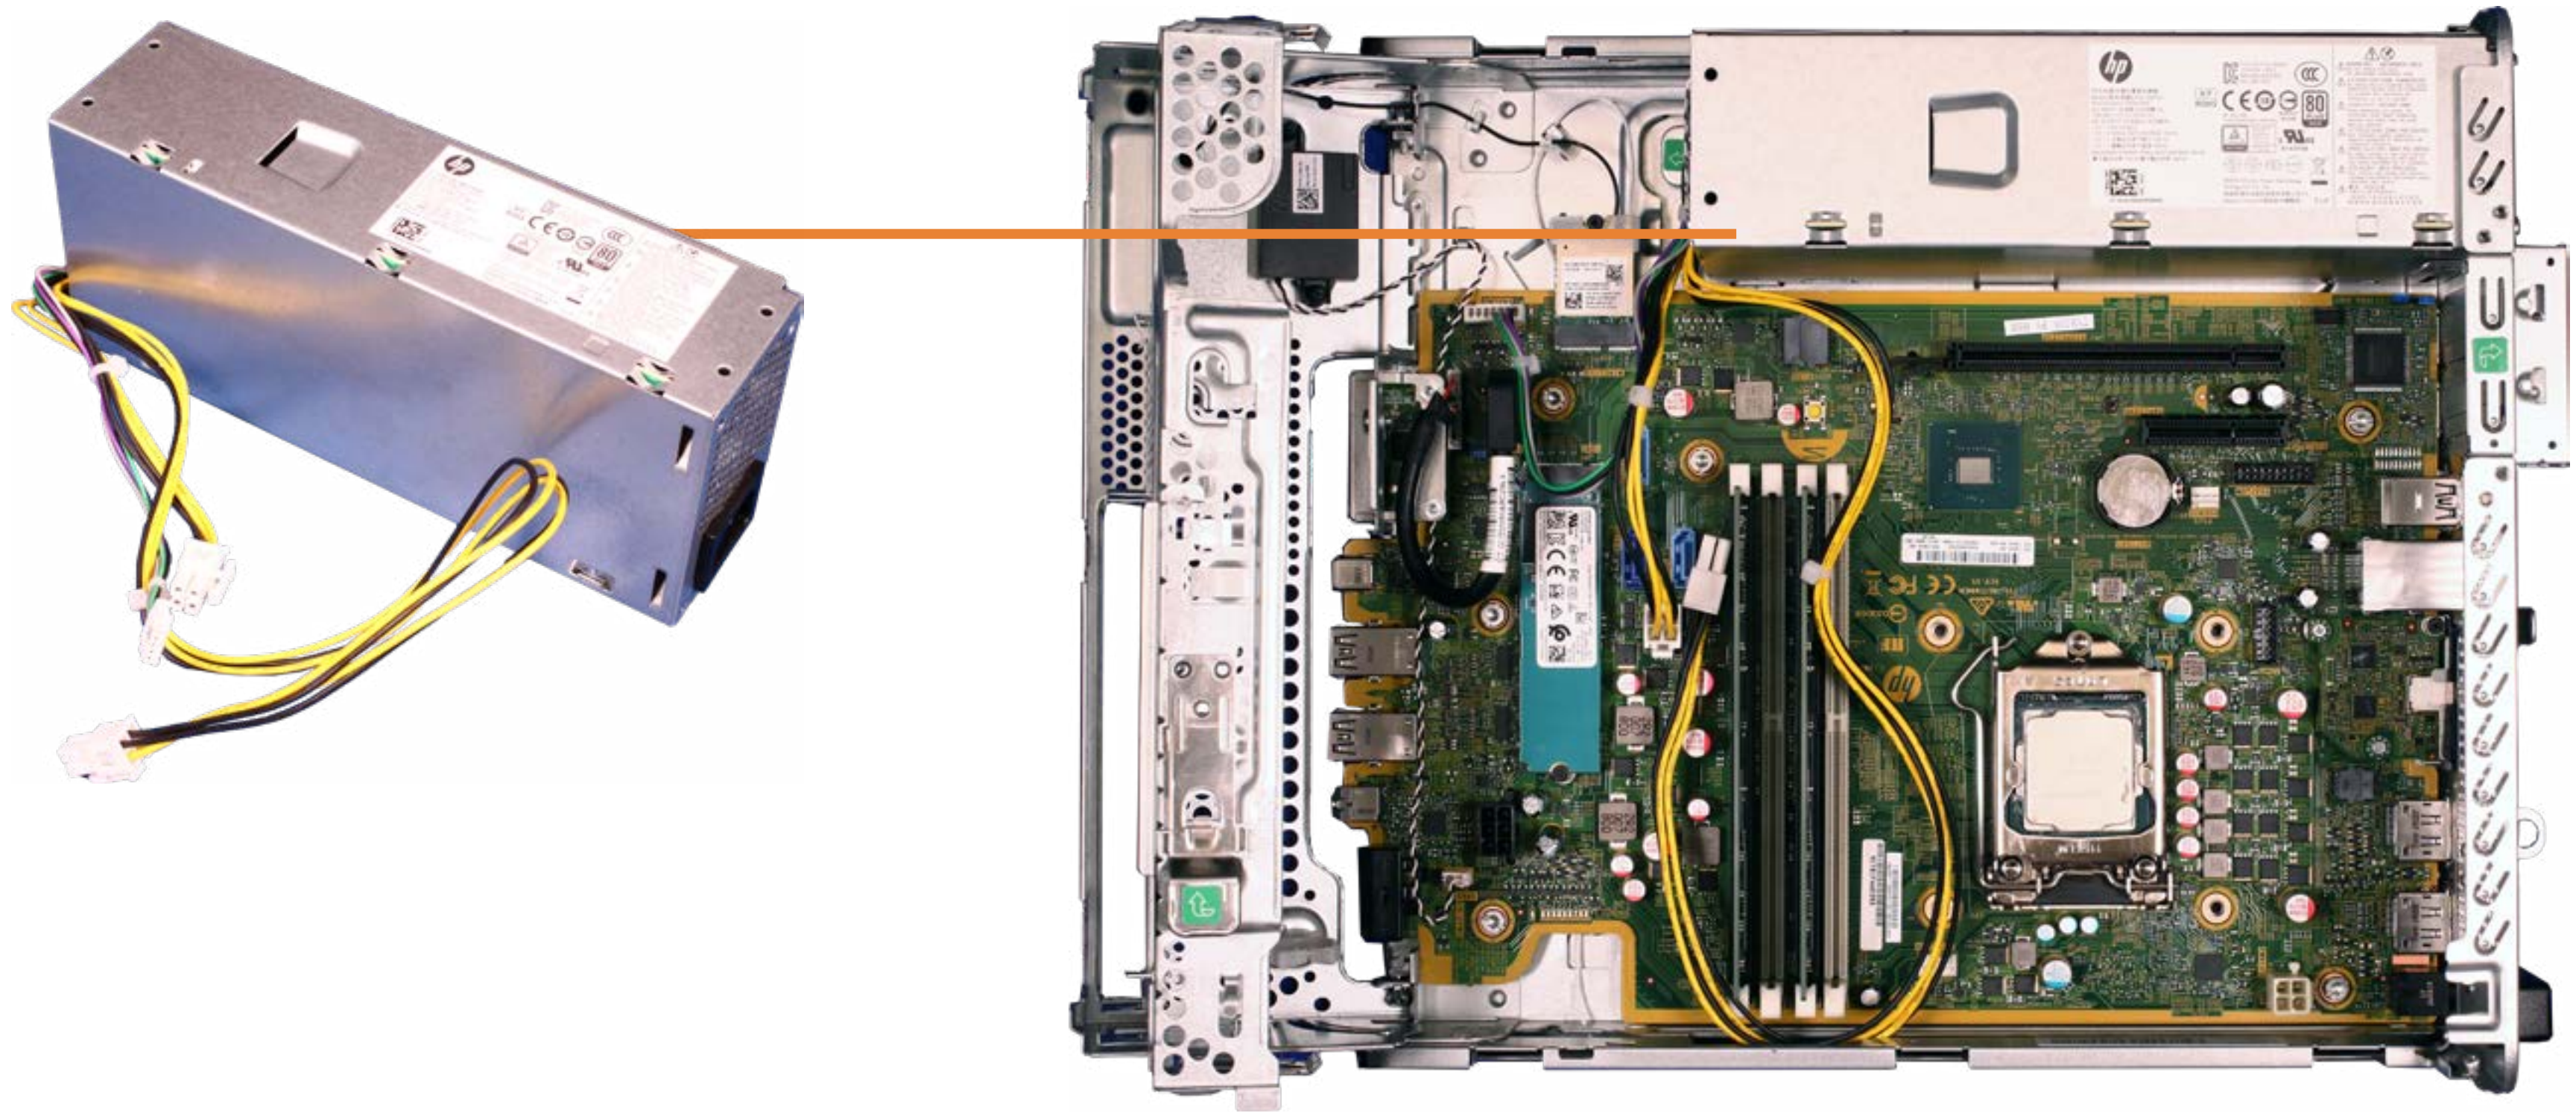


Speaker

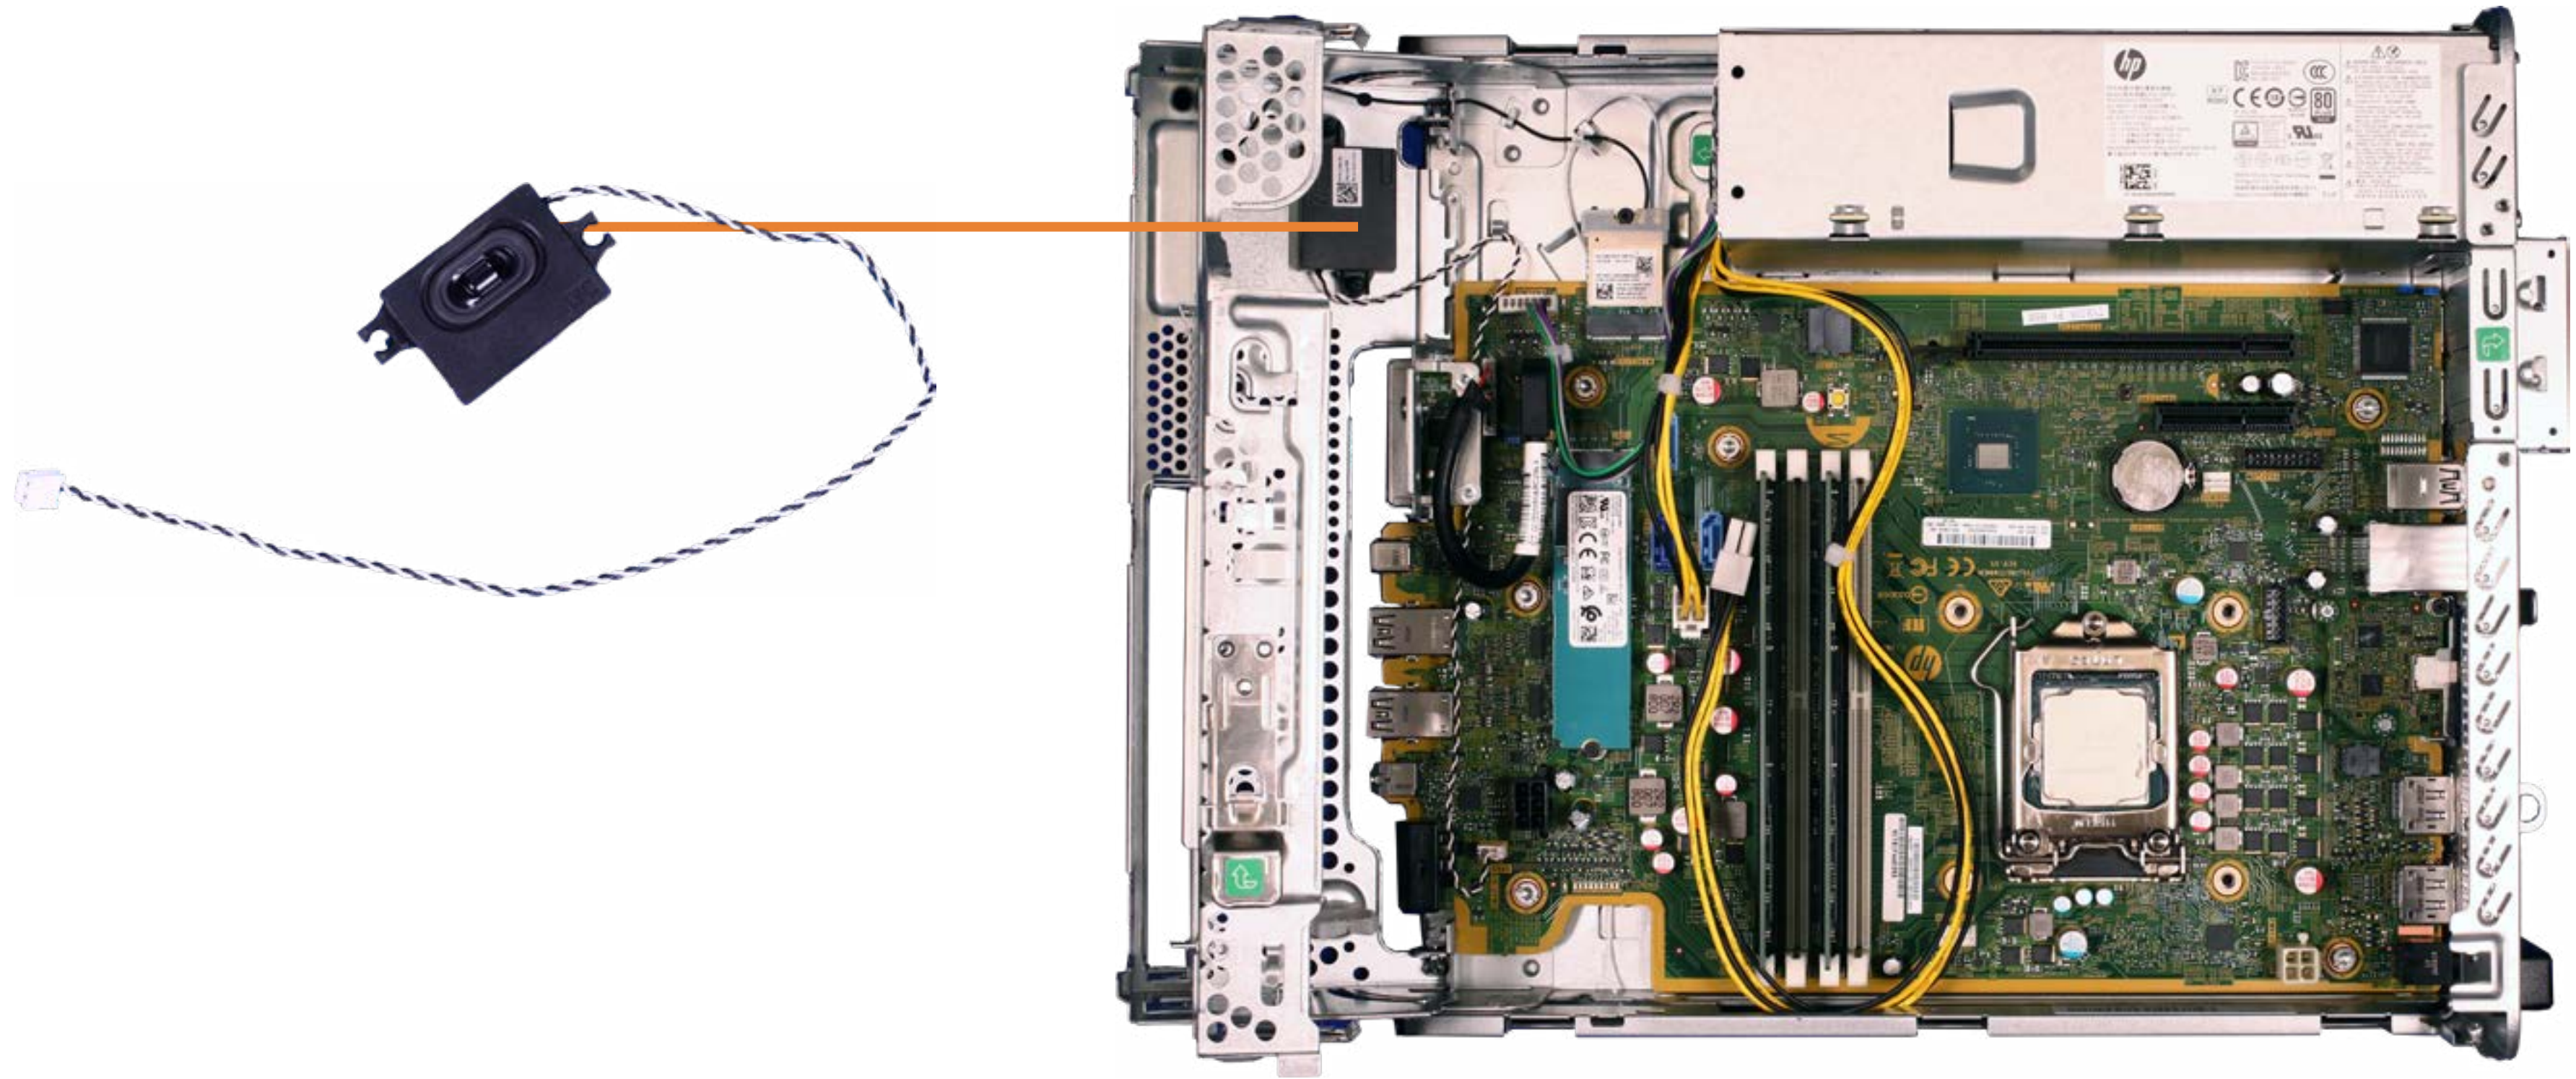



SD Card Reader

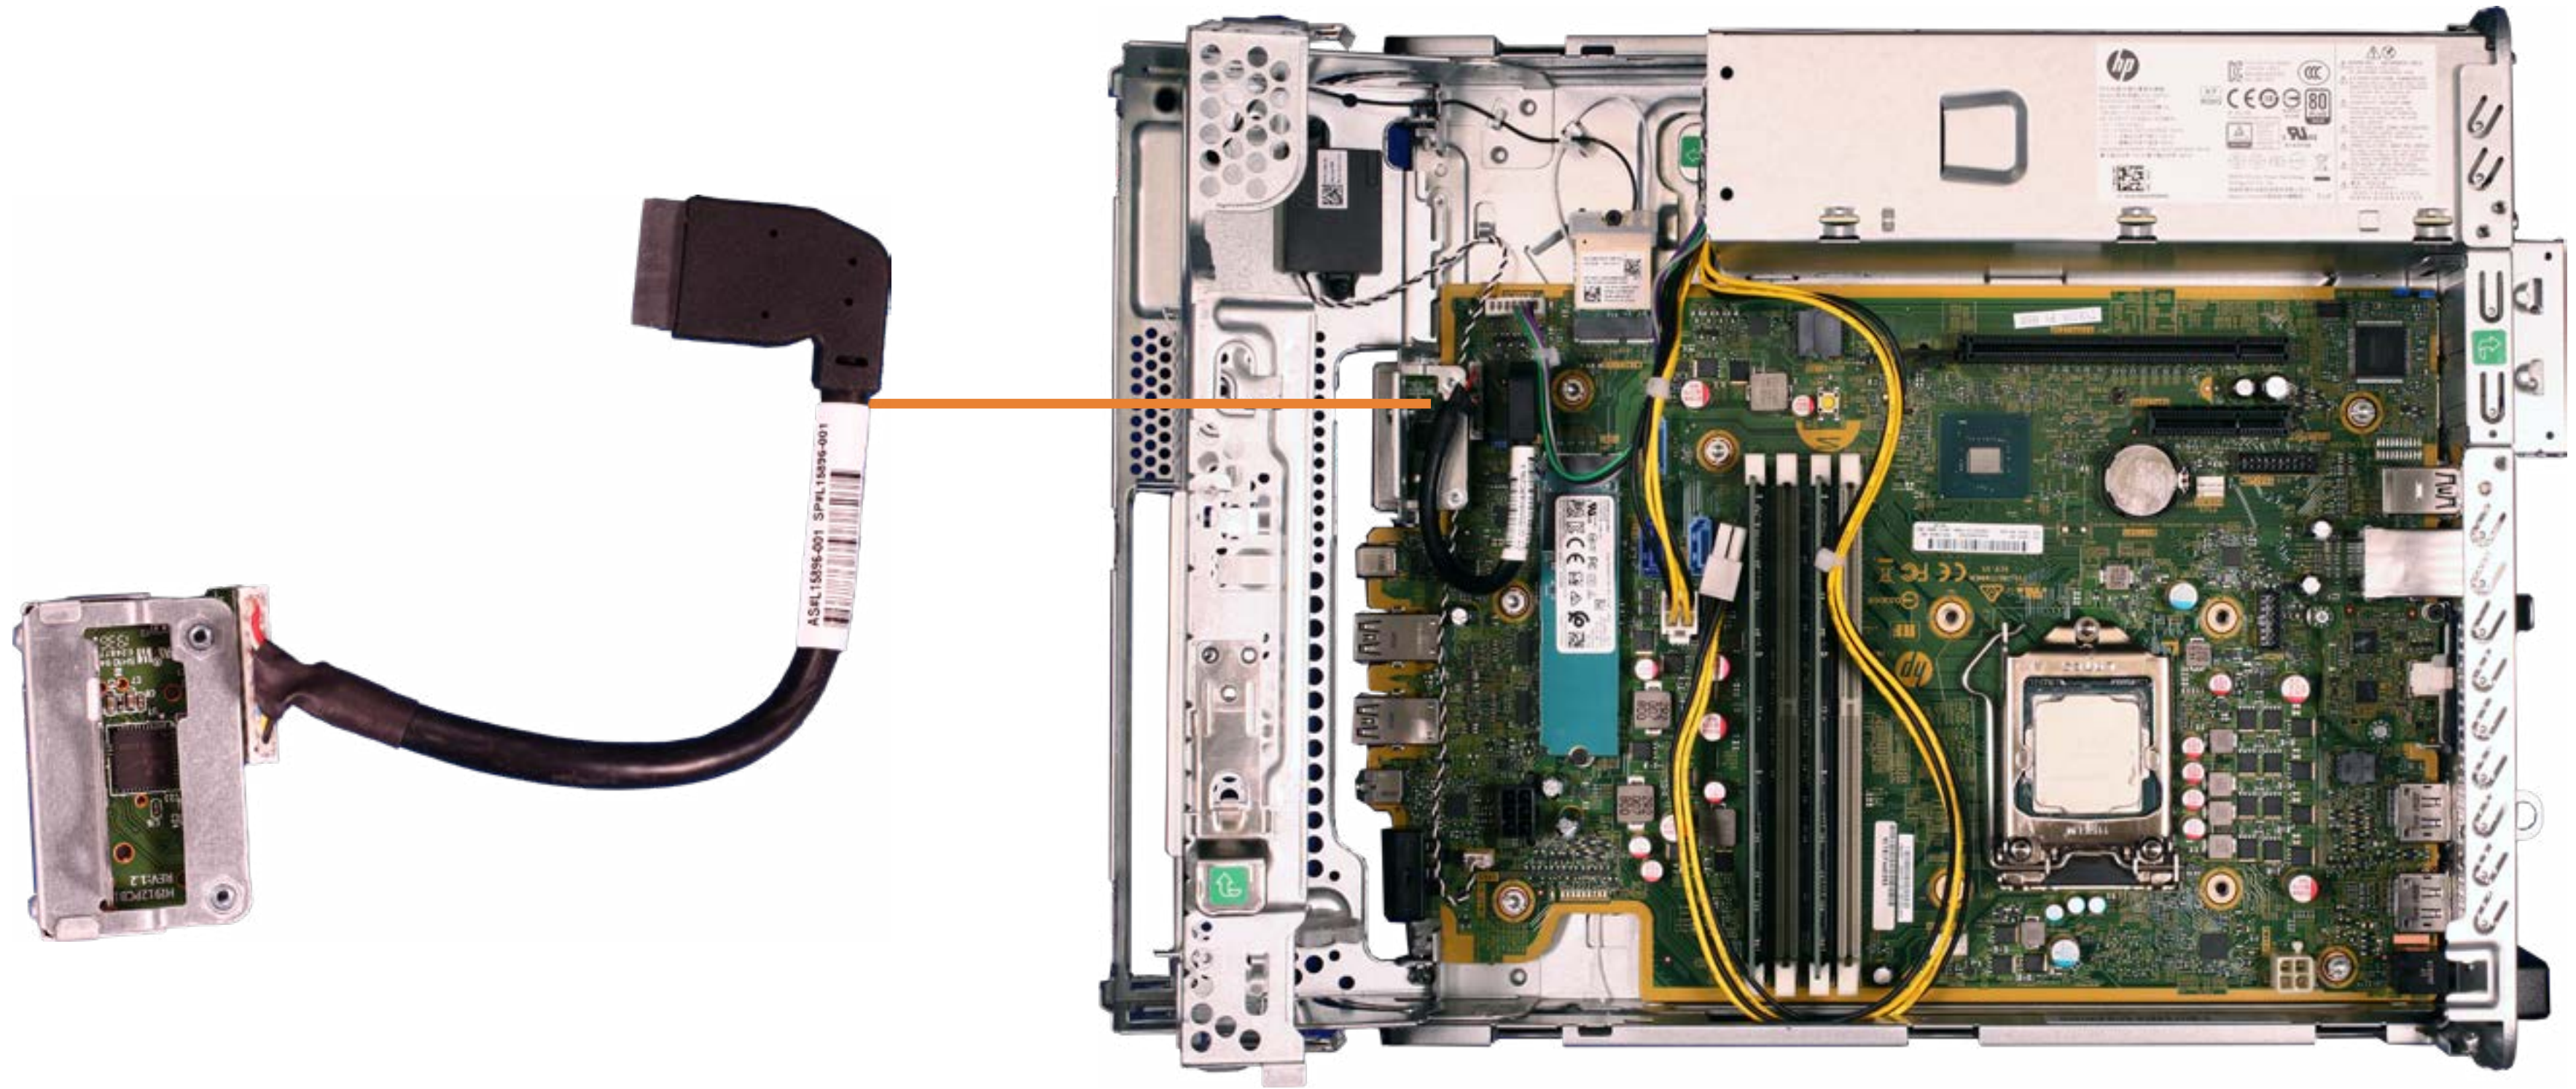


CMOS Battery

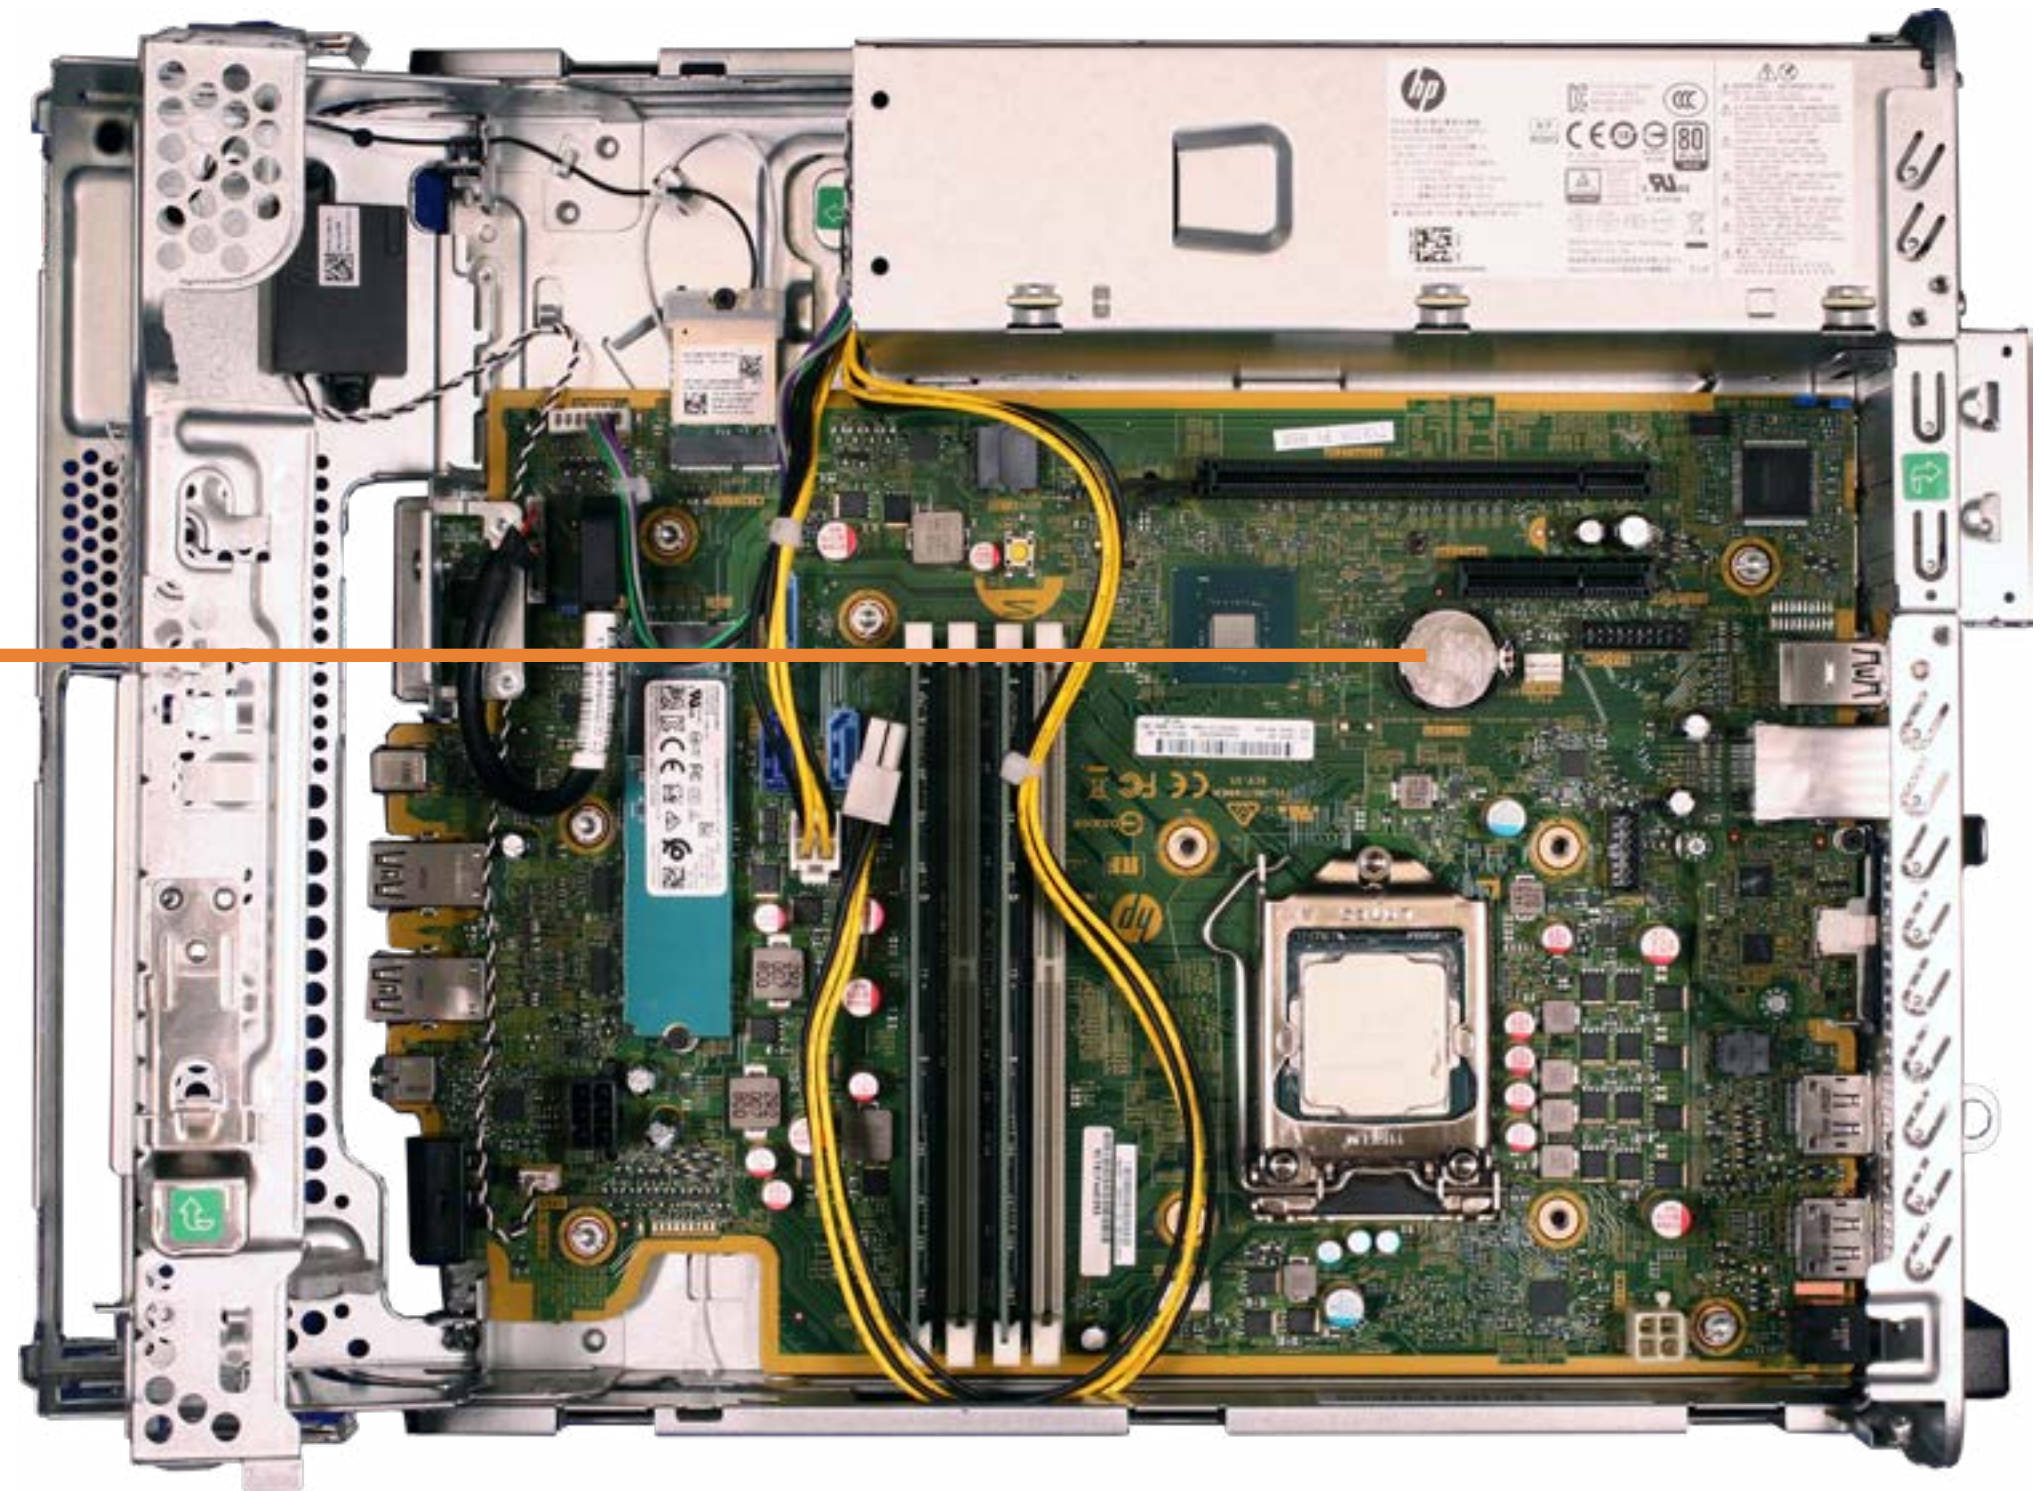



Option Board

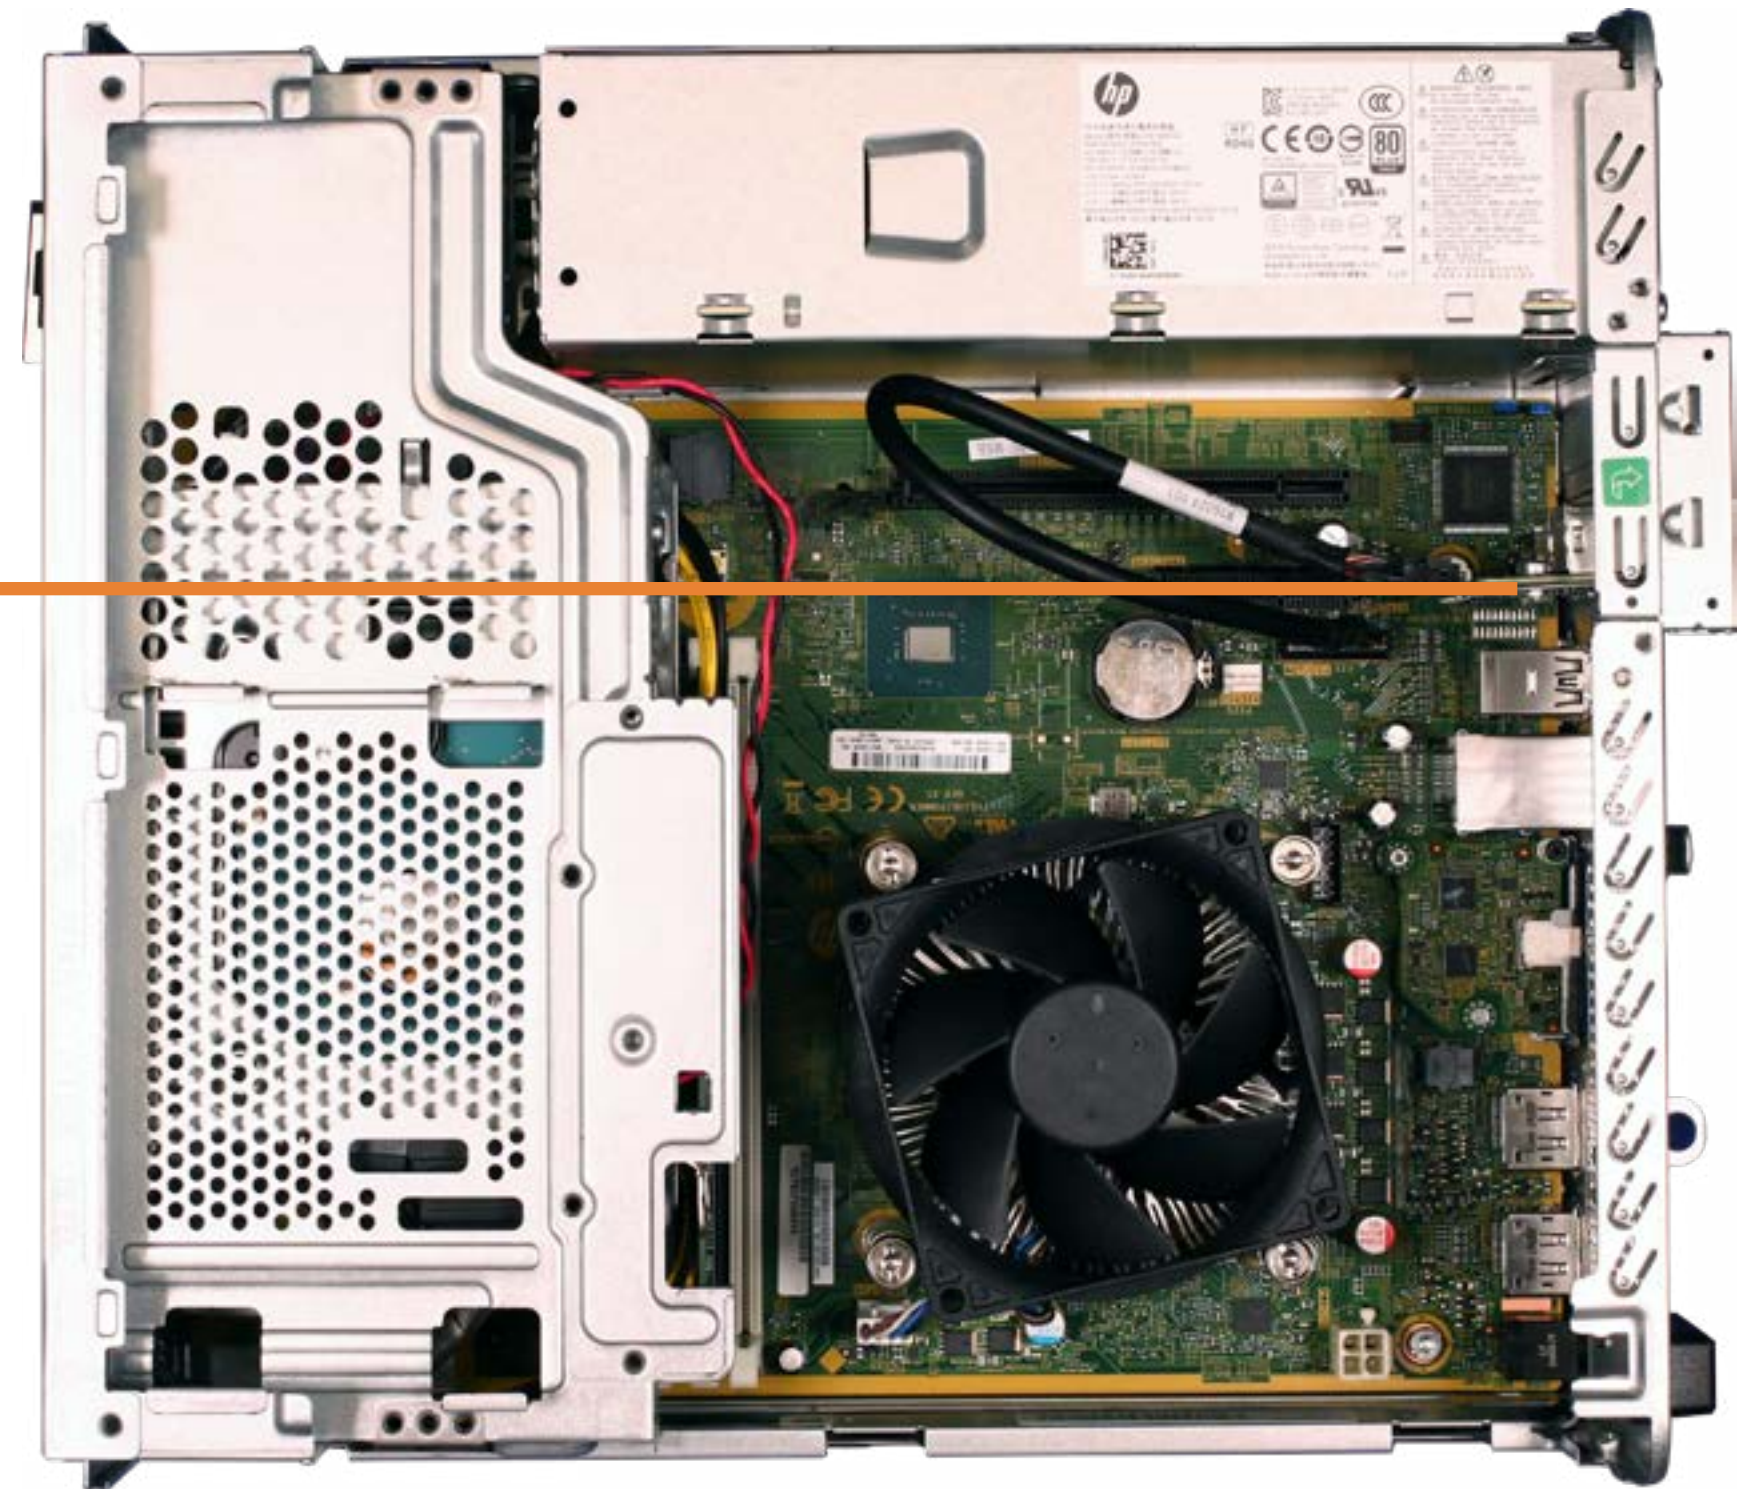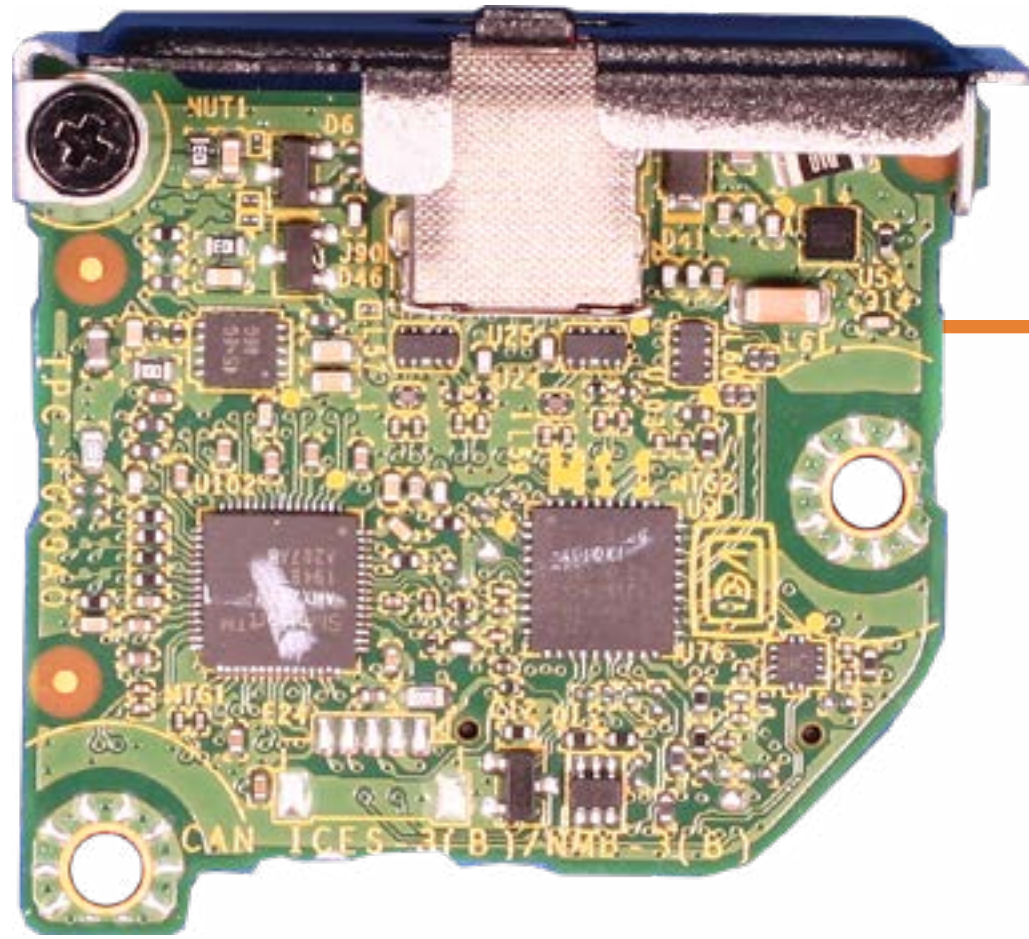

CPU

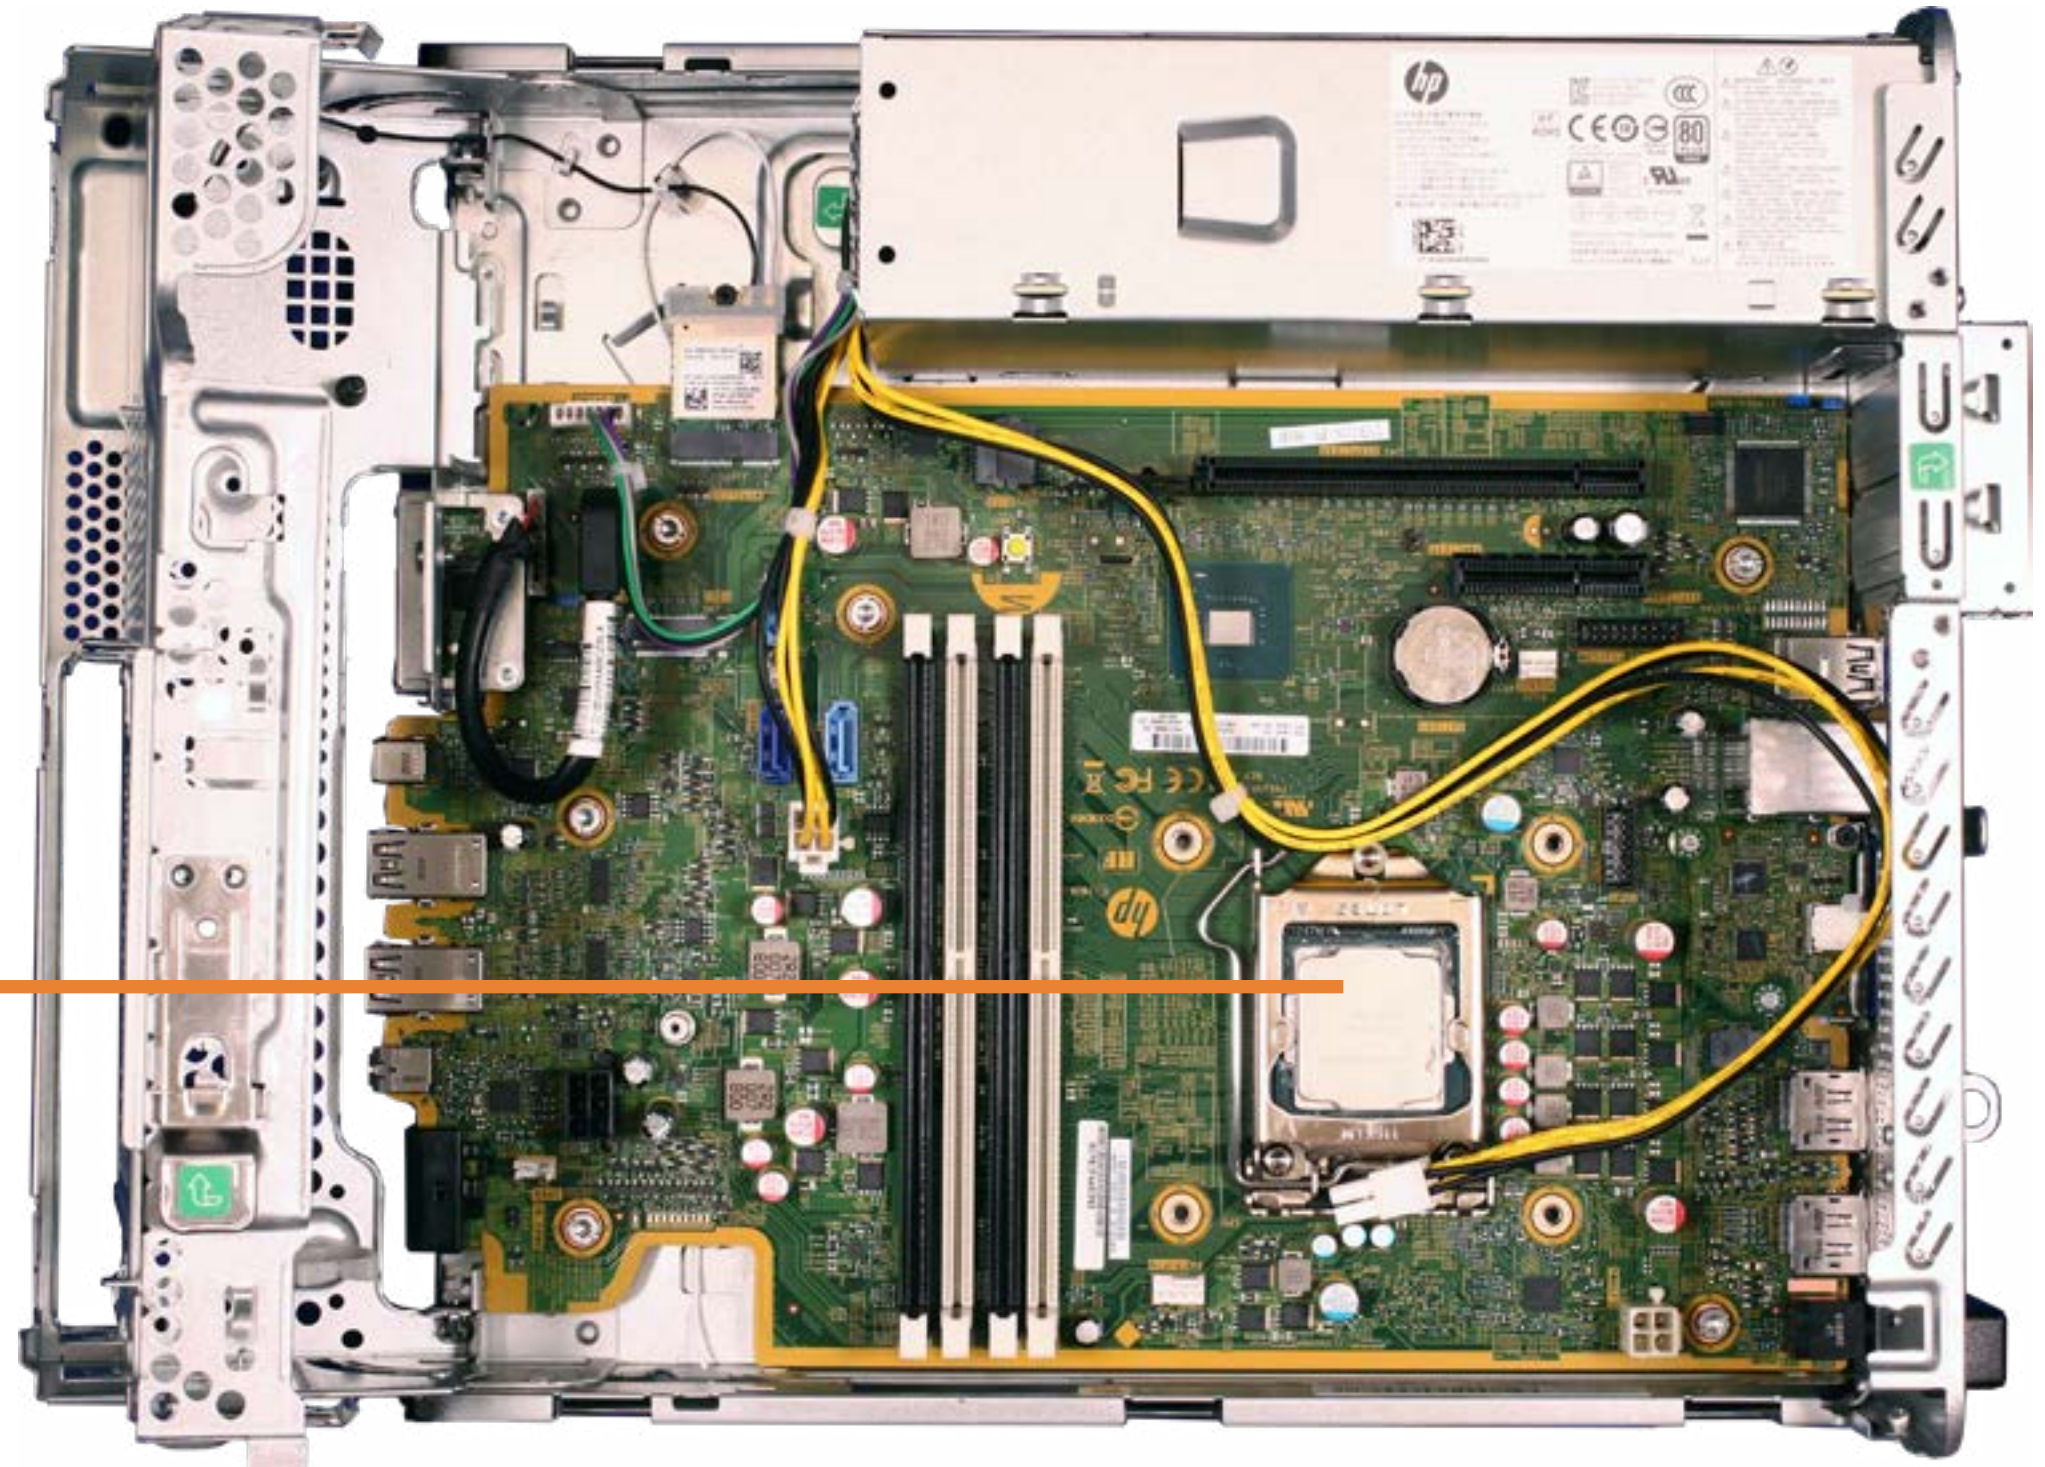

Motherboard

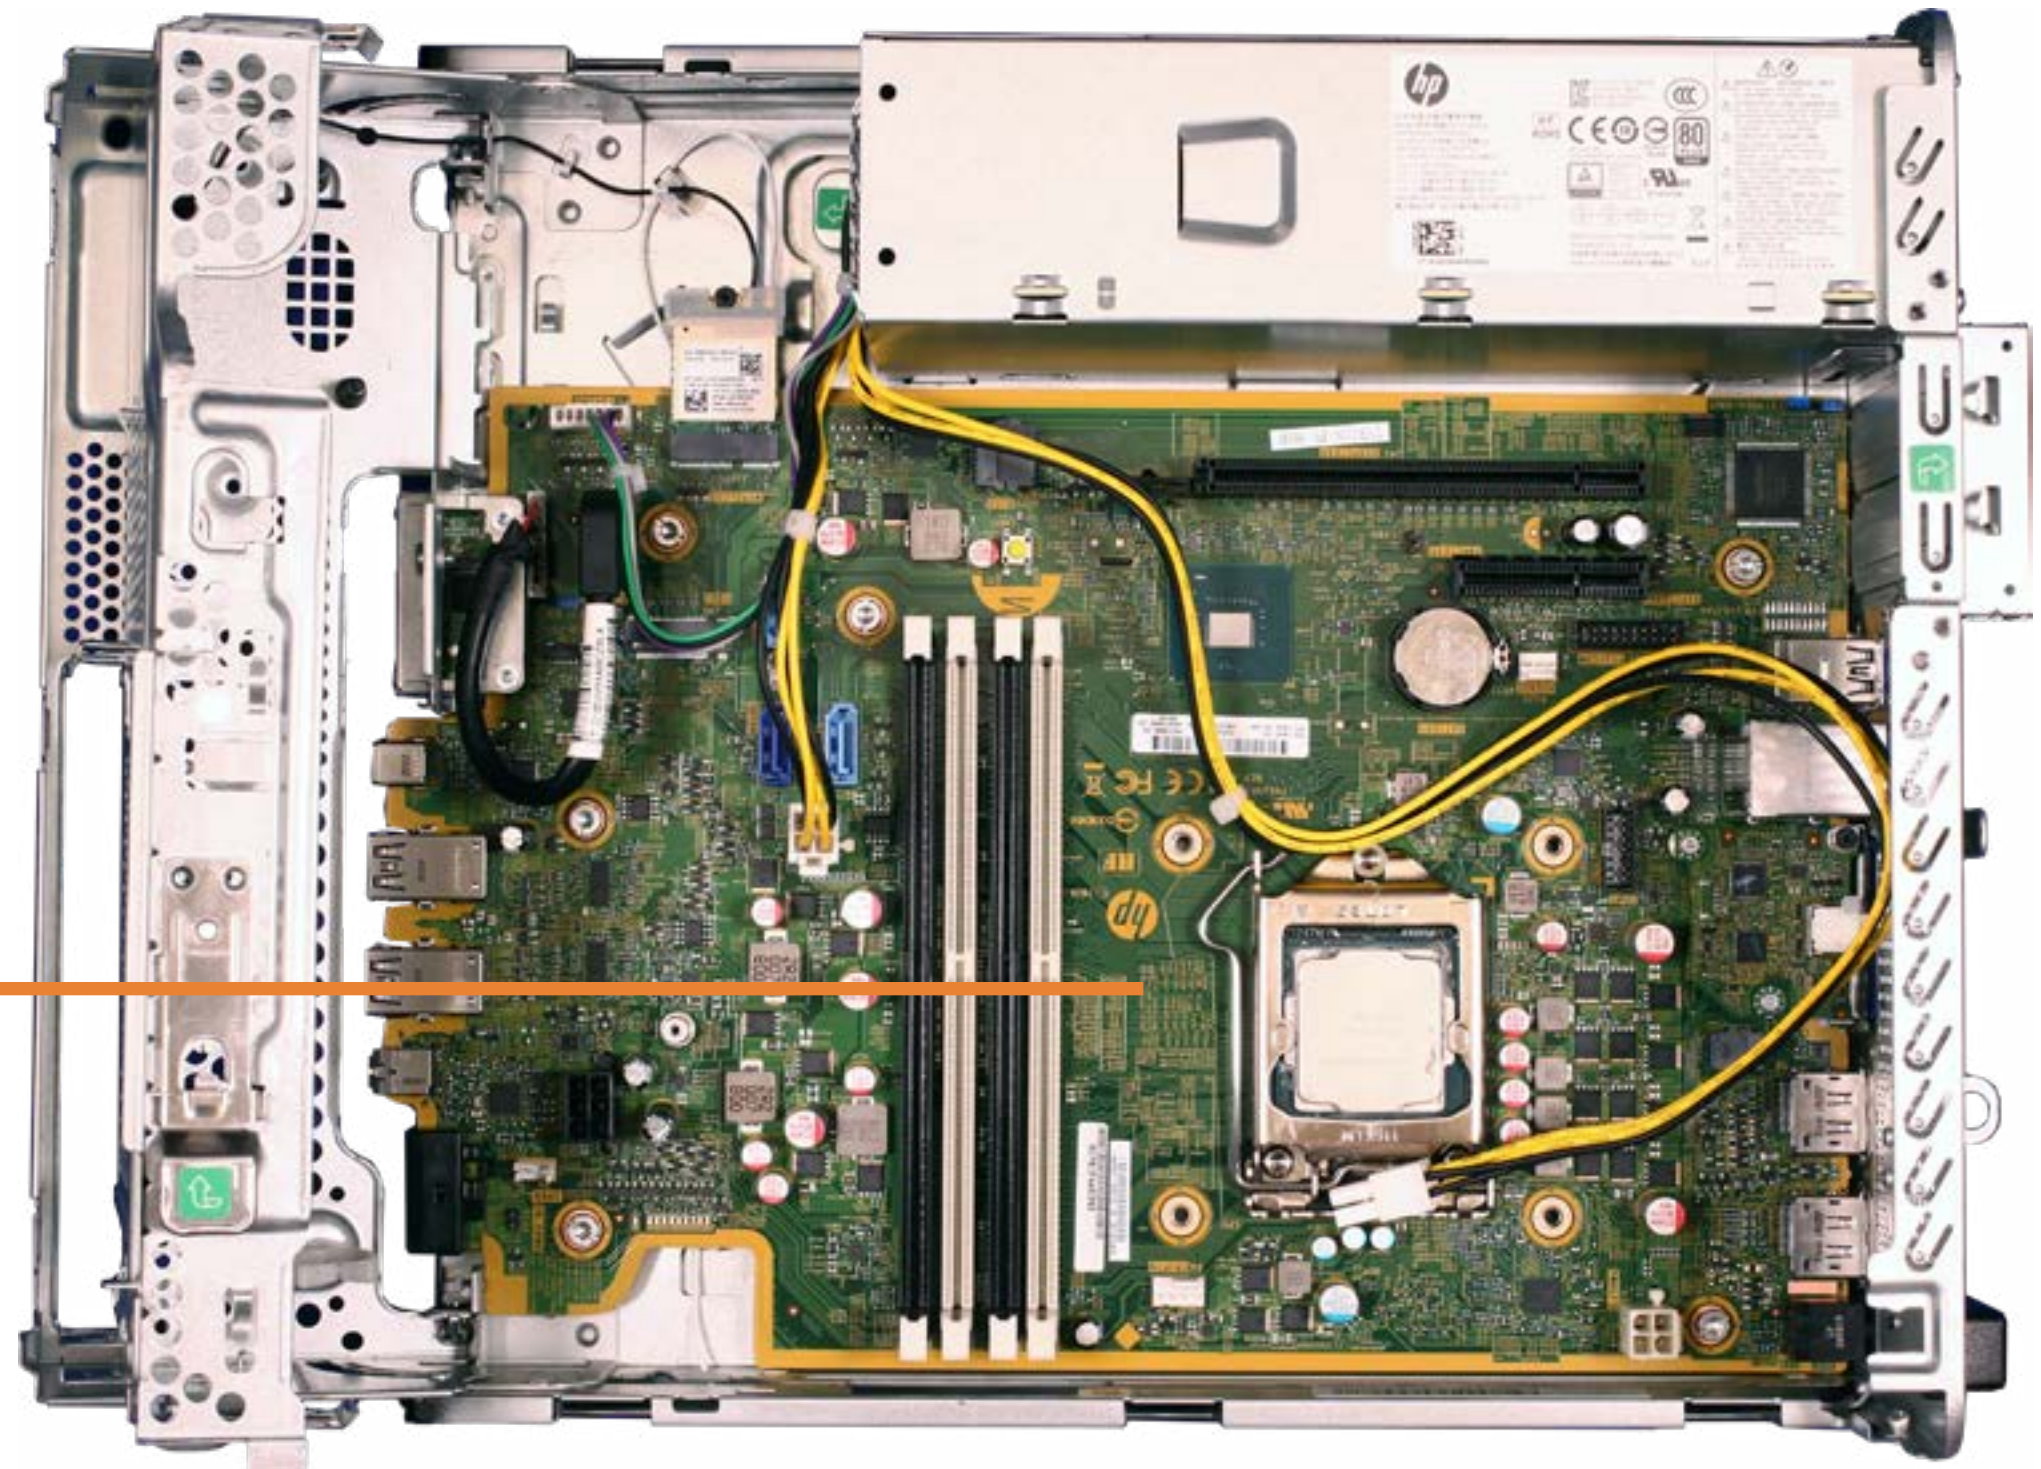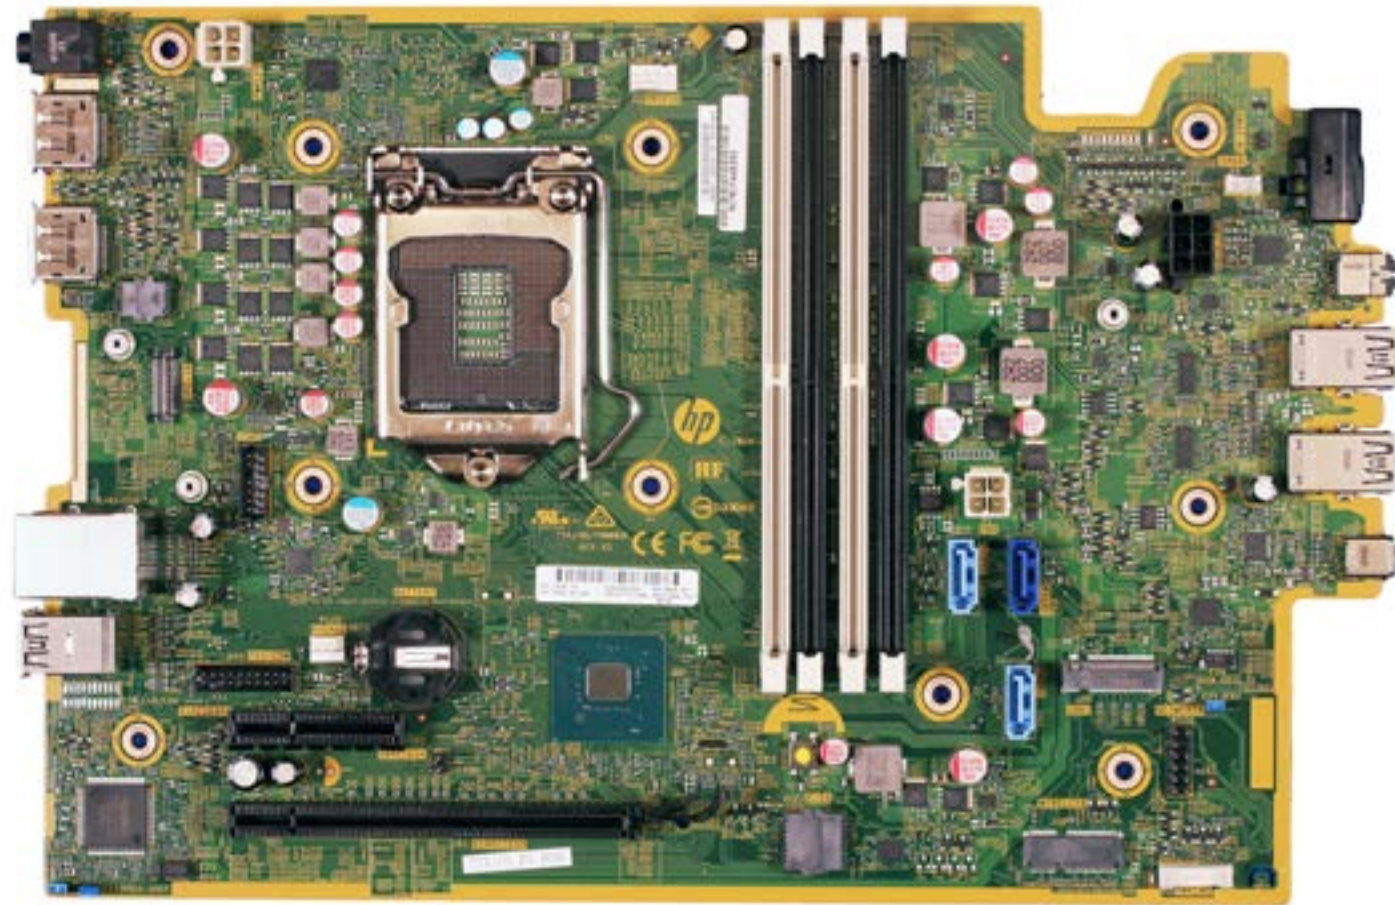

Wireless Antennas

