Interactive LED Diagnostic

HP Spectre x360 14-ea0000 Convertible PC

Welcome to the interactive LED diagnostic viewer for the HP Spectre x360 14-ea0000 Convertible PC

Here's how to use it...

LED Diagnostic (Click the link to navigate this platform's LED diagnostic states) On this page you will find an image viewer with a menu of this product's external views. To identify the location of the LEDs for each view, simply click that view. To learn more about the diagnostic behavior of each LED, hover over the information icon (1) above the LED and review the information that presents in the right-hand pane.


That's it! On every page there is a link that brings you back to the Welcome page.

Top View




Back to Welcome page

Right Edge

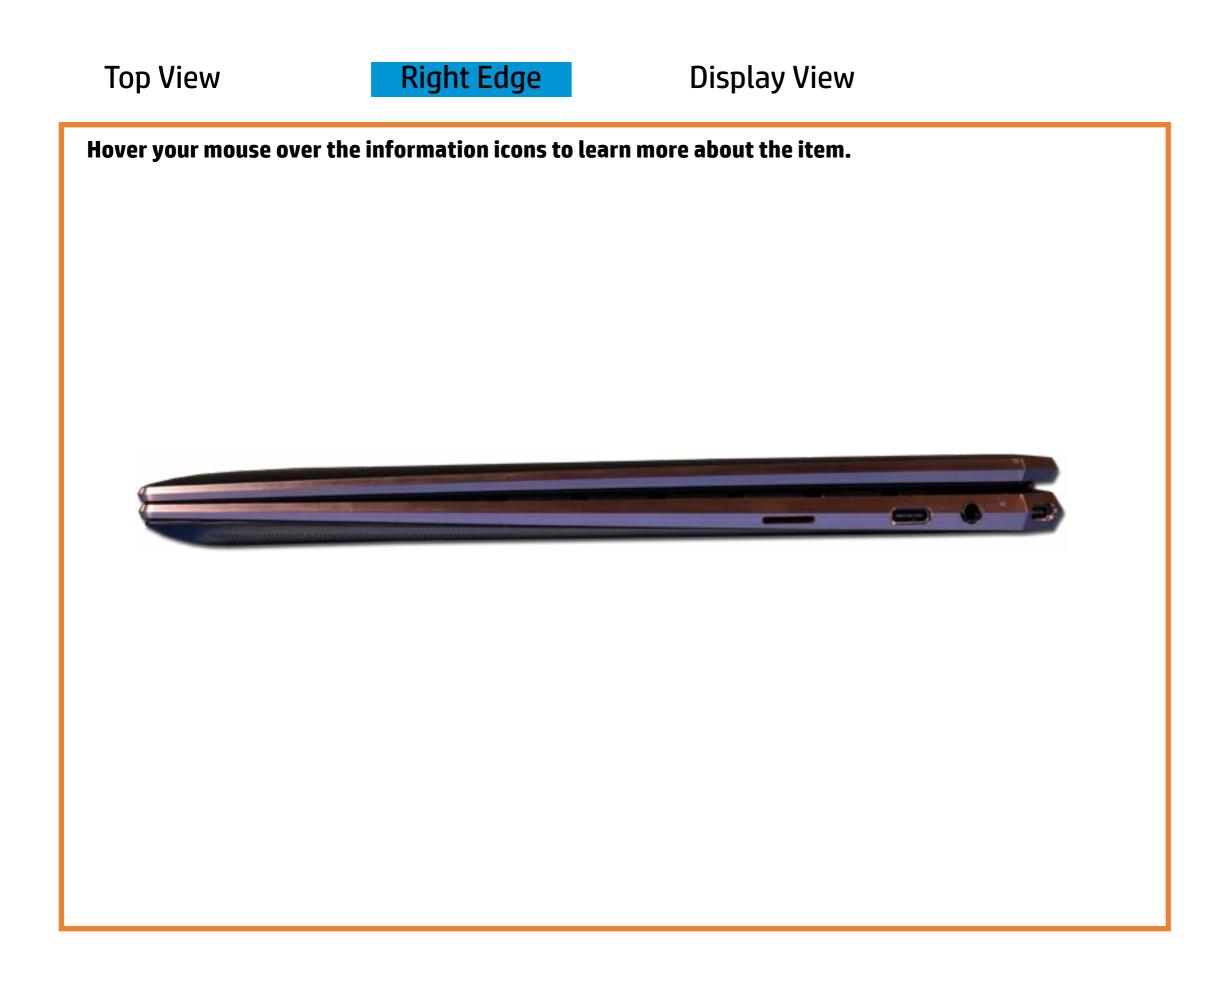

Back to Welcome page

Display View

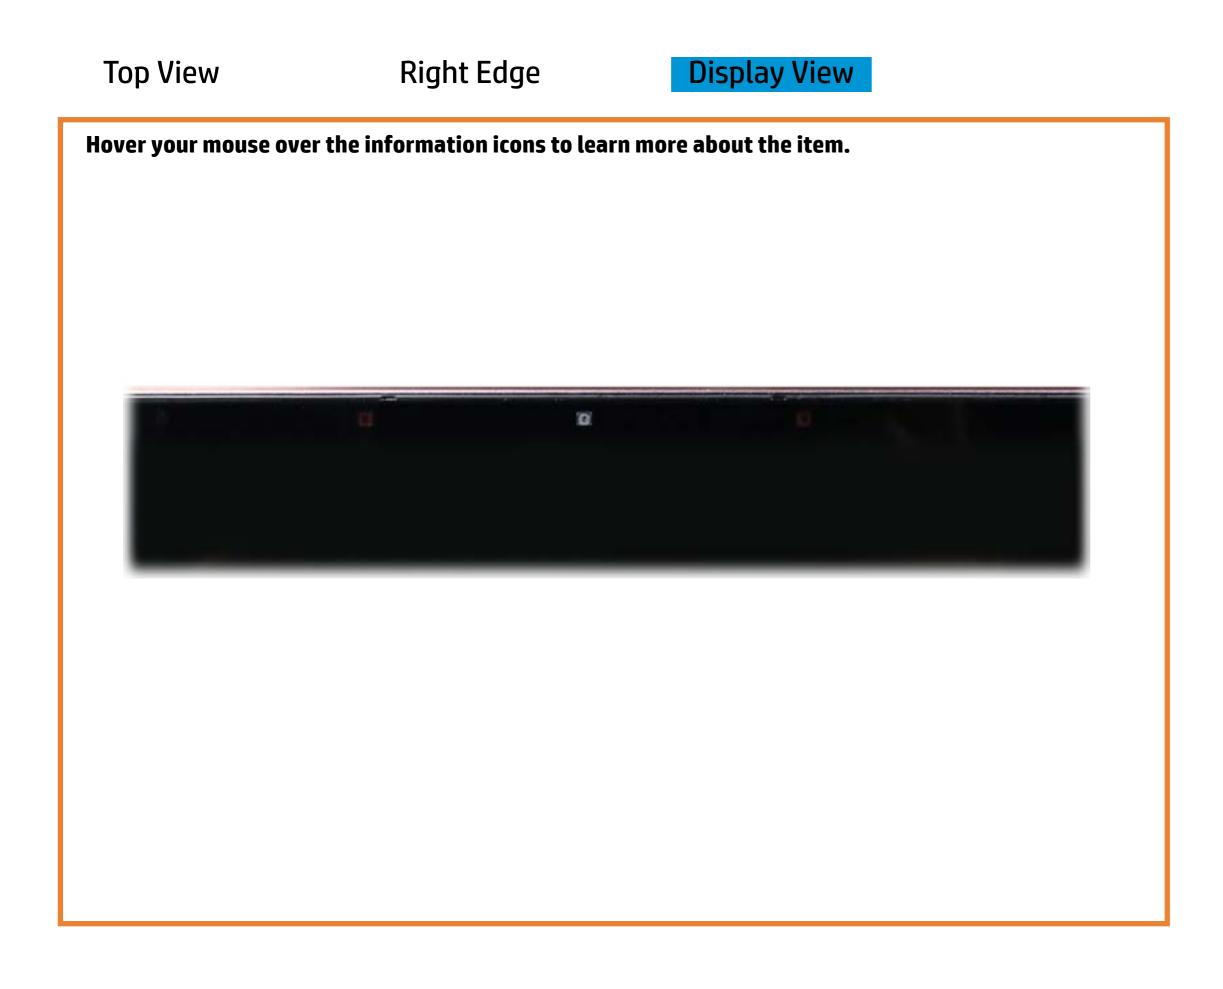

Back to Welcome page