

Interactive Part Locator

HP EliteBook 855 G8 Notebook PC

Welcome to the interactive part locator for the
HP EliteBook 855 G8 Notebook PC

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left

Right

Rear


Internal

Parts List


Front View



Left View

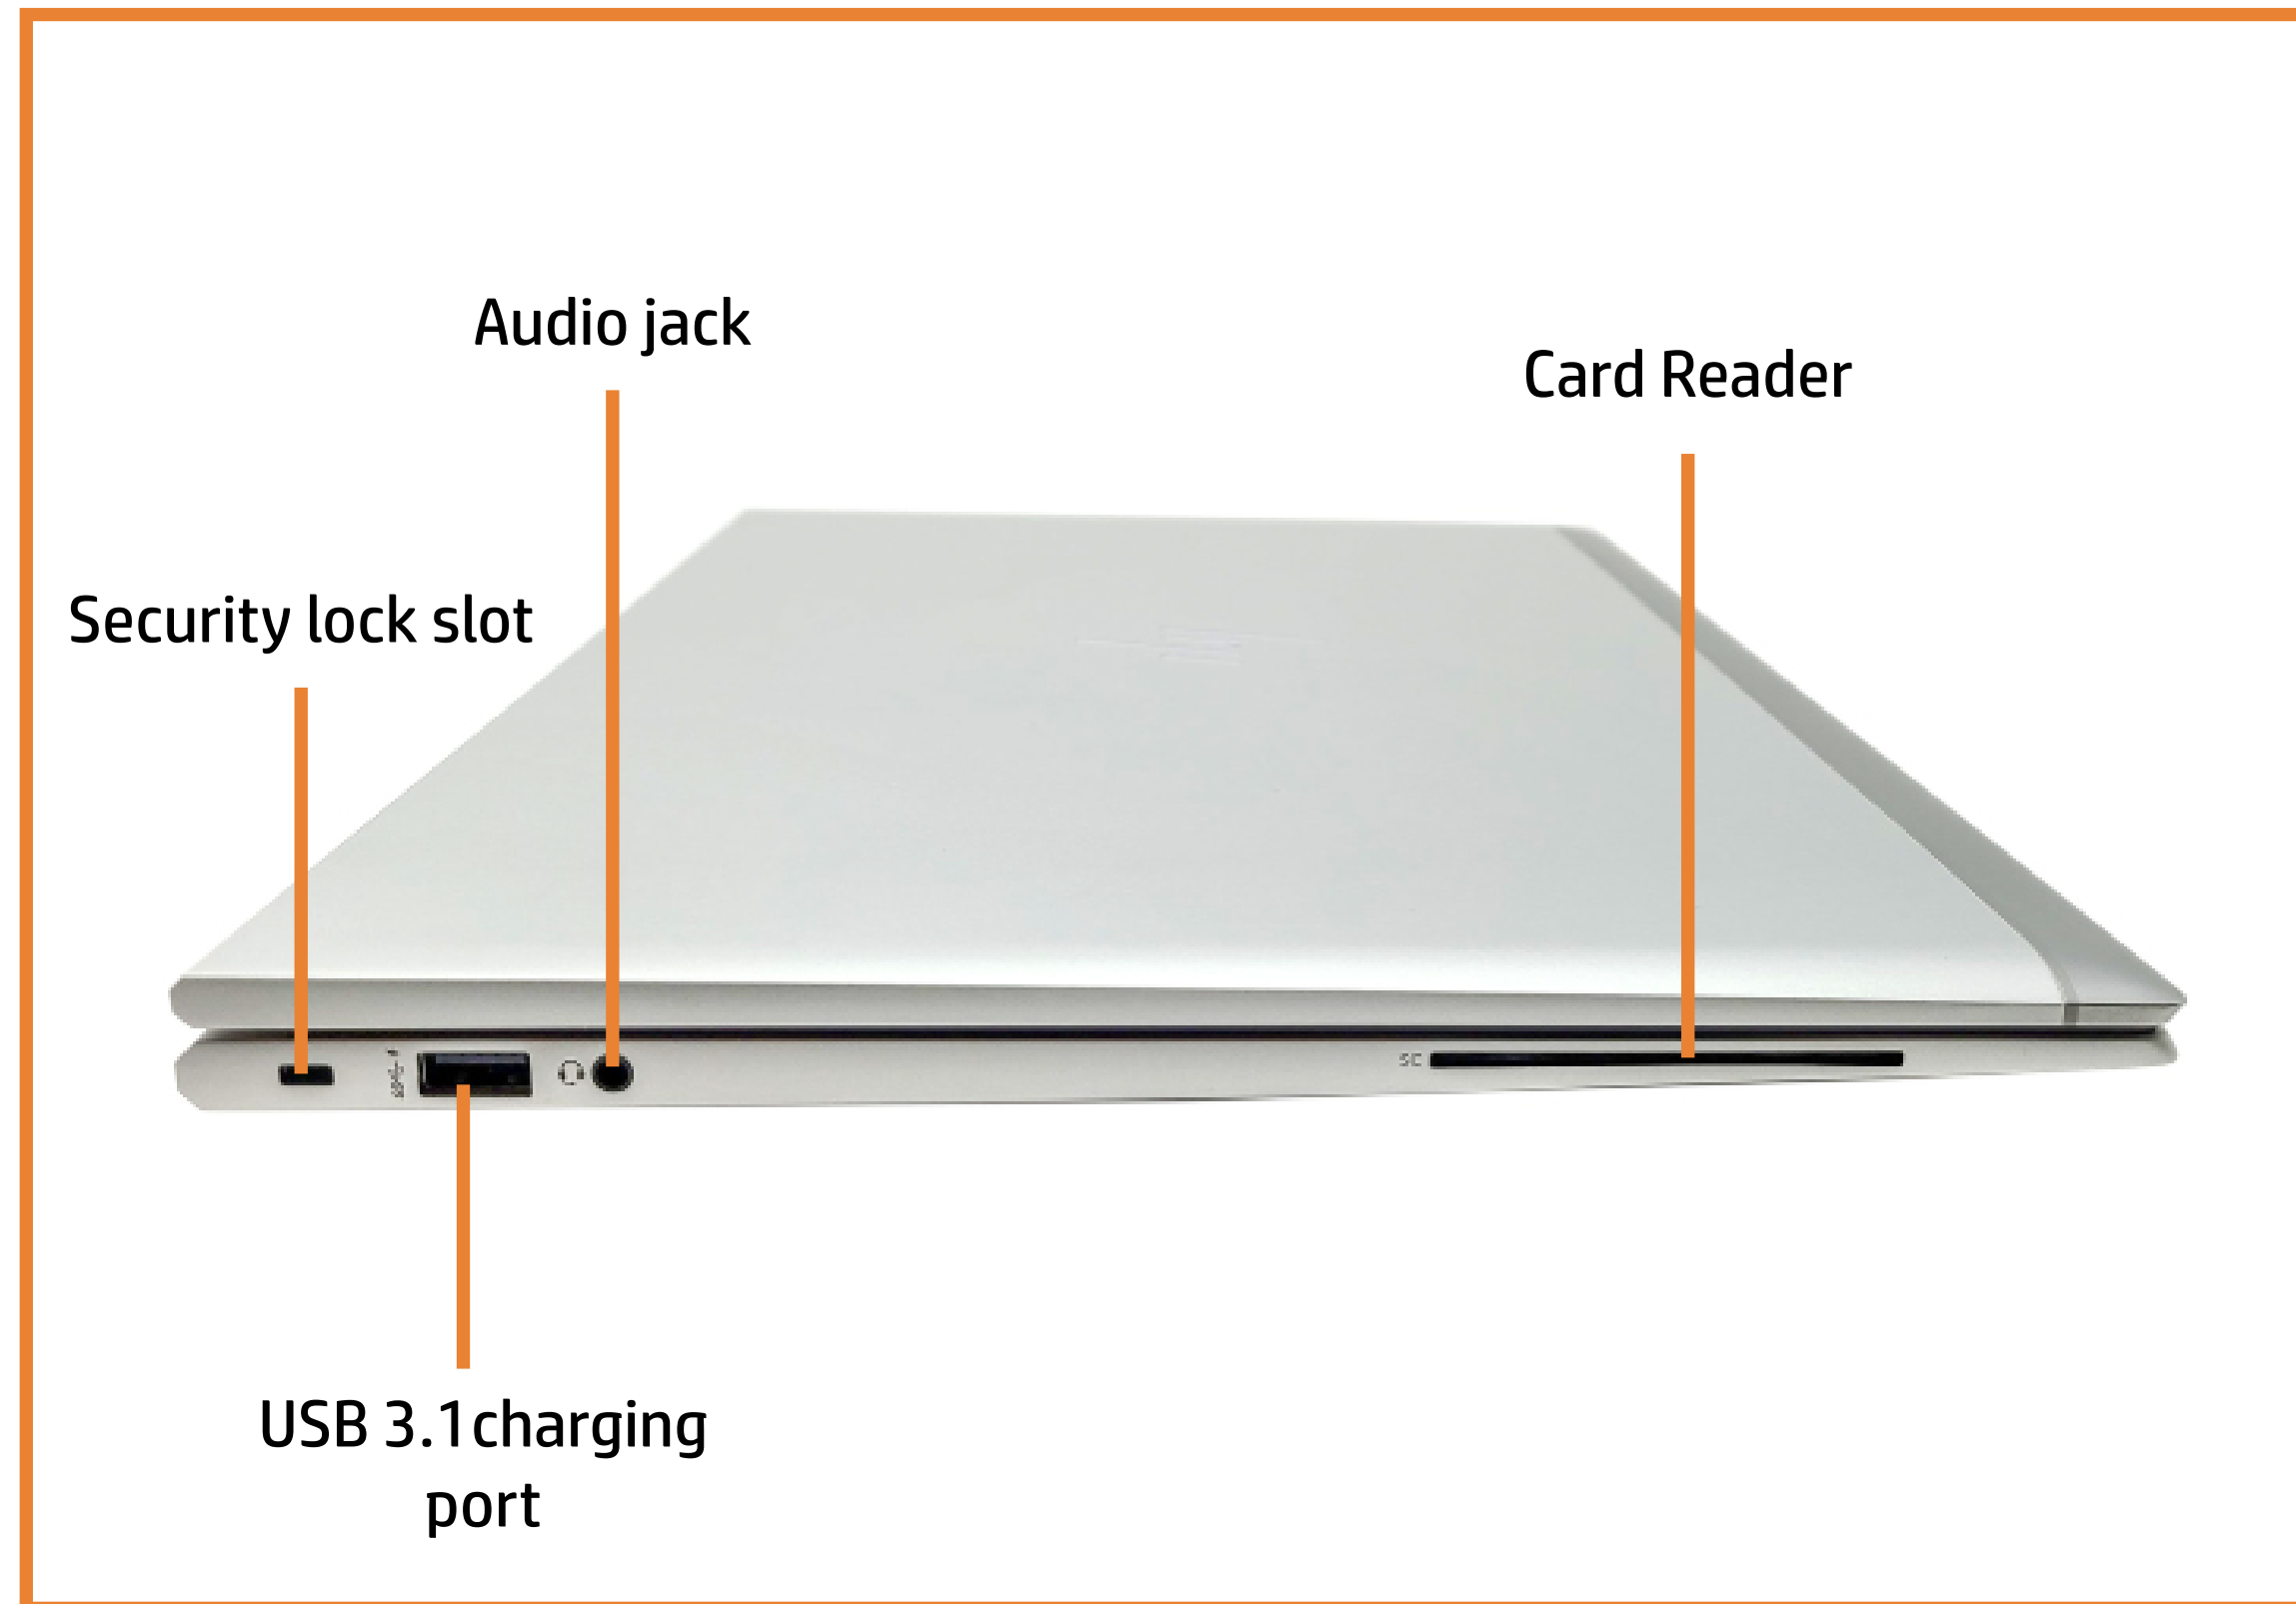


Right View

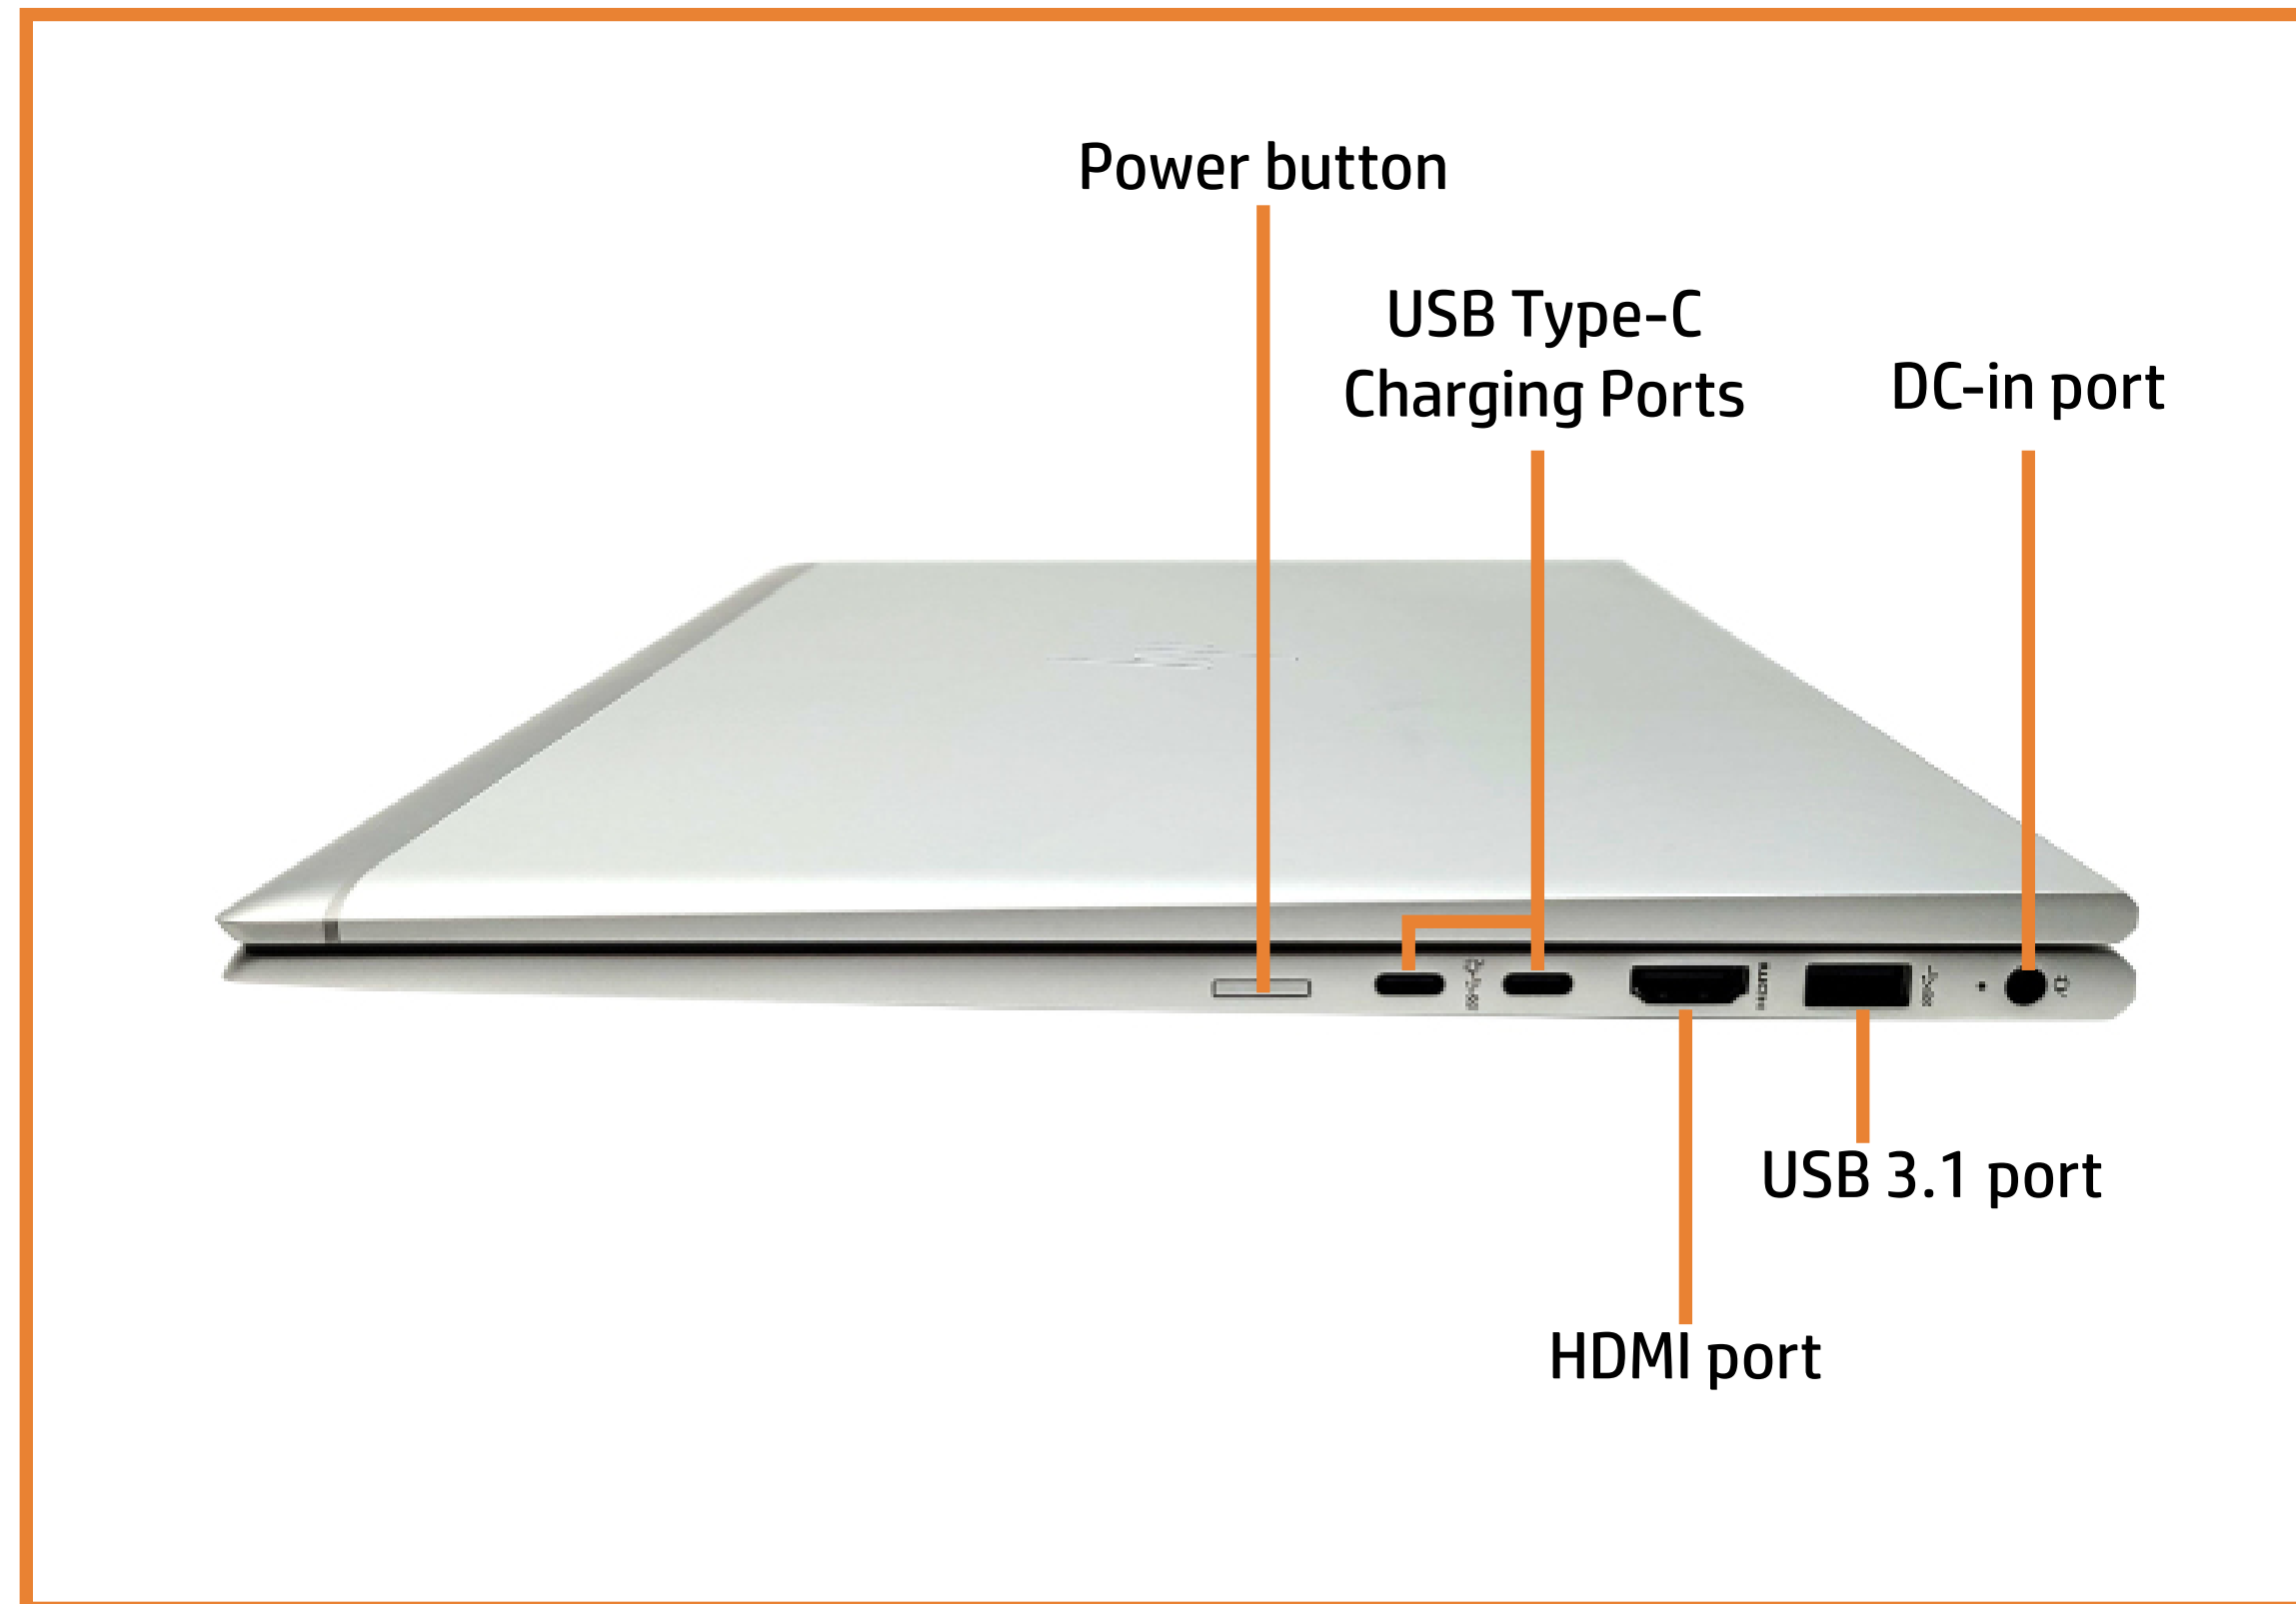

Rear View



Internal View 1

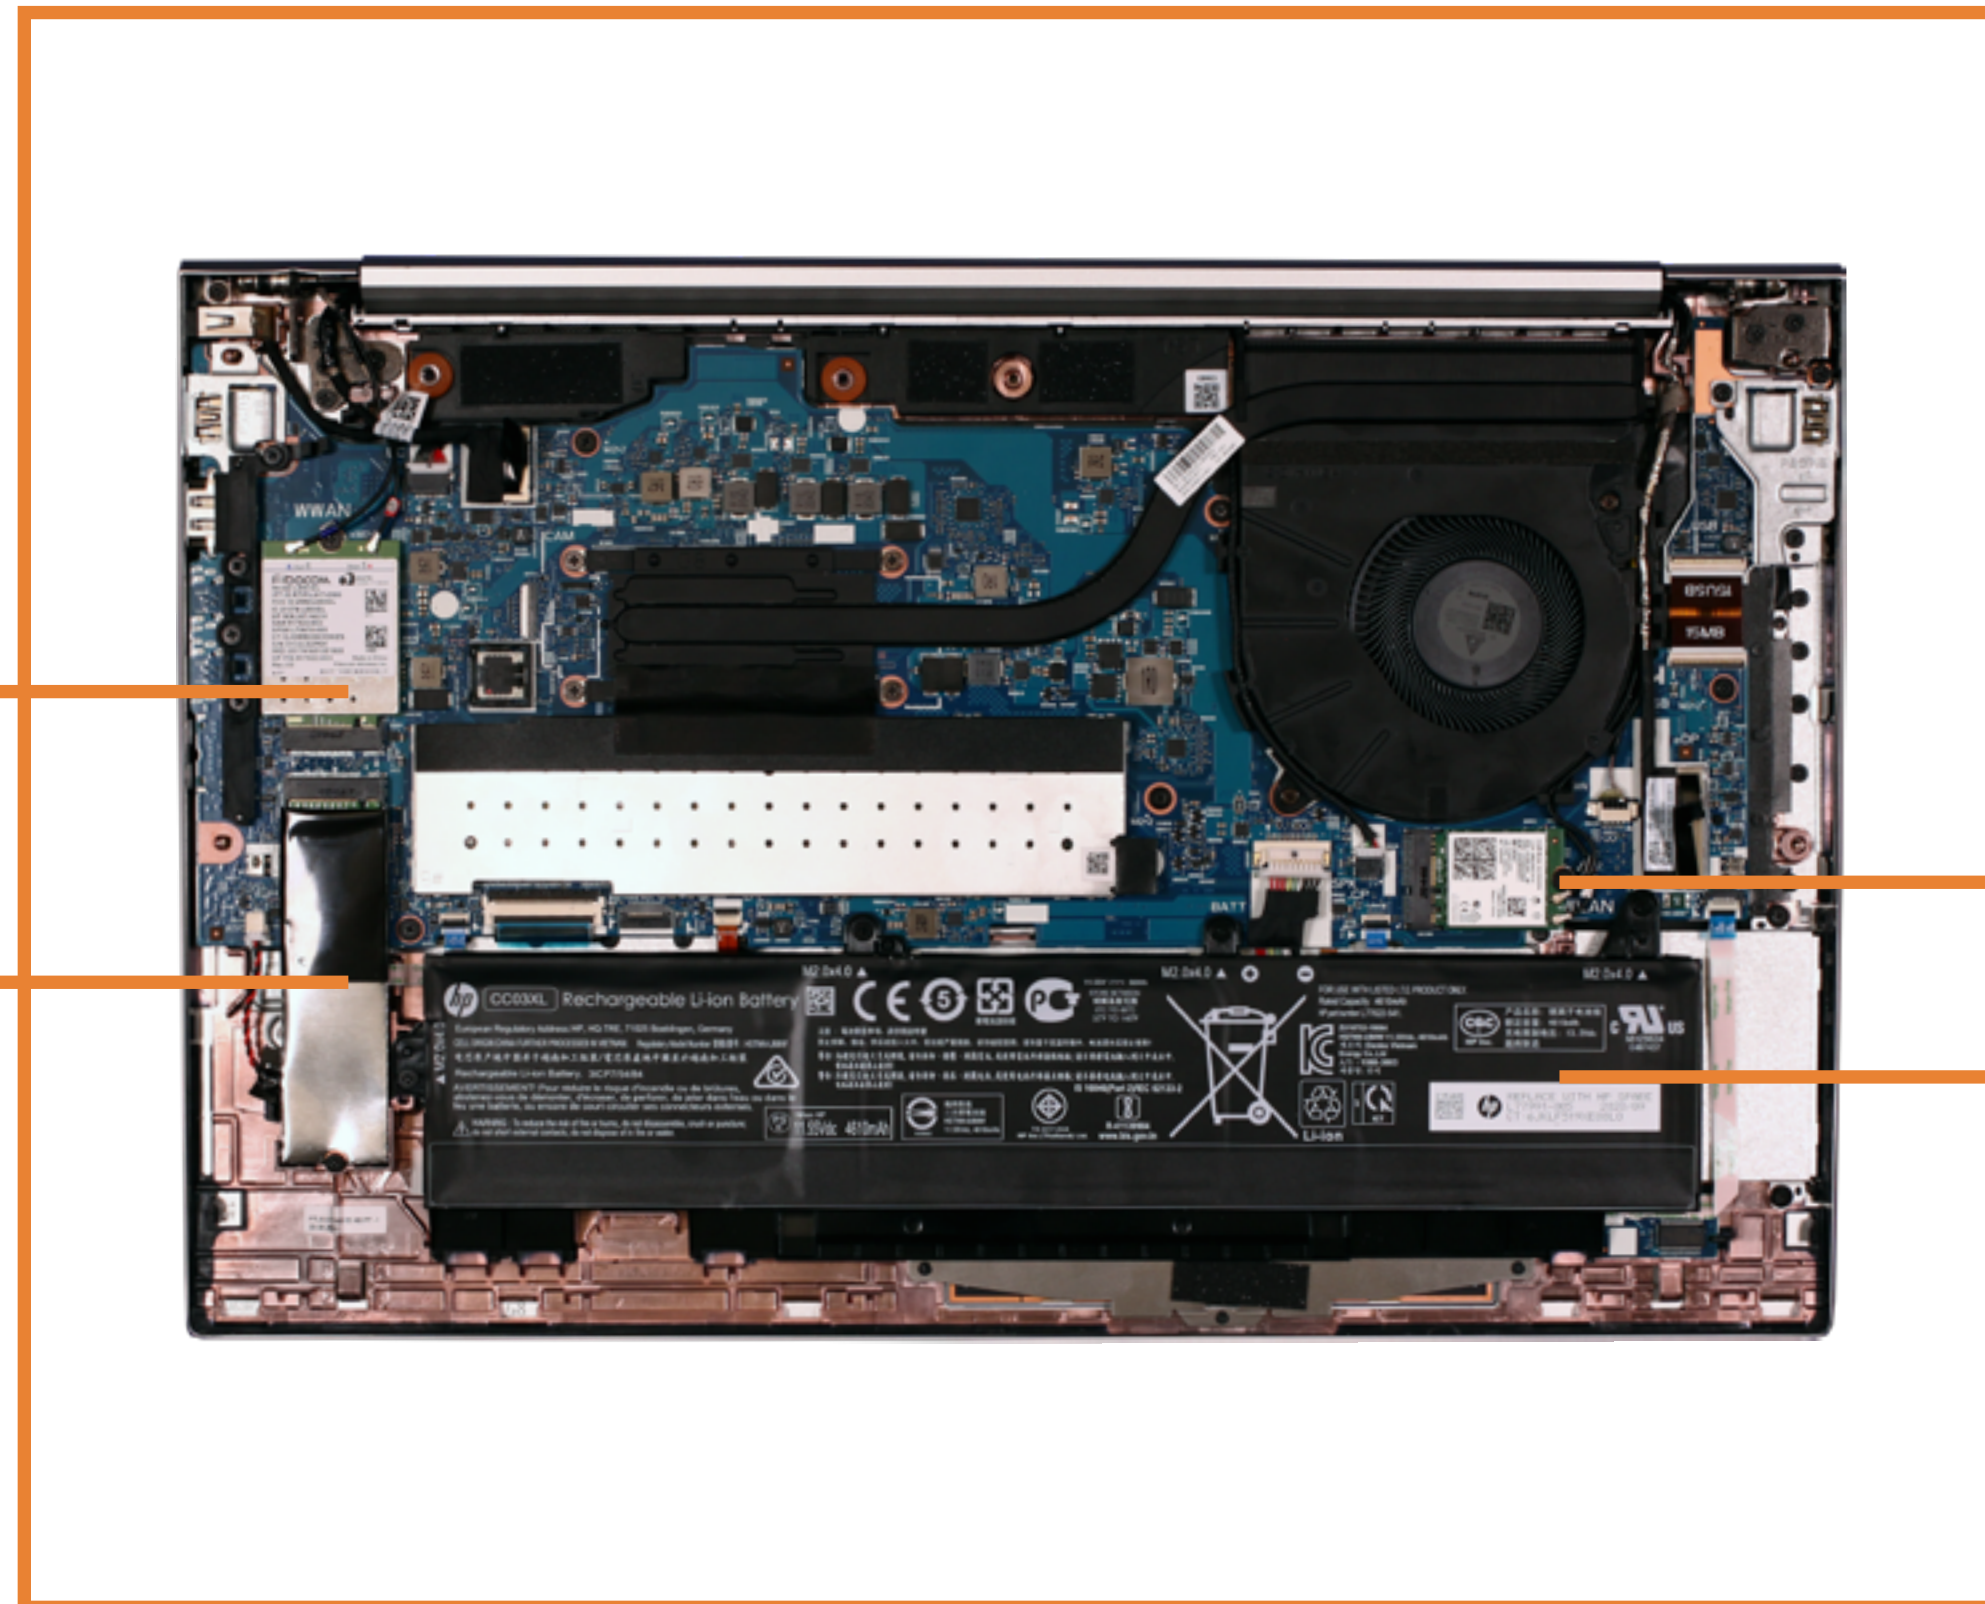


Wireless WAN Module

M.2 Solid State Drive

Wireless LAN Module


Battery

Internal View 2

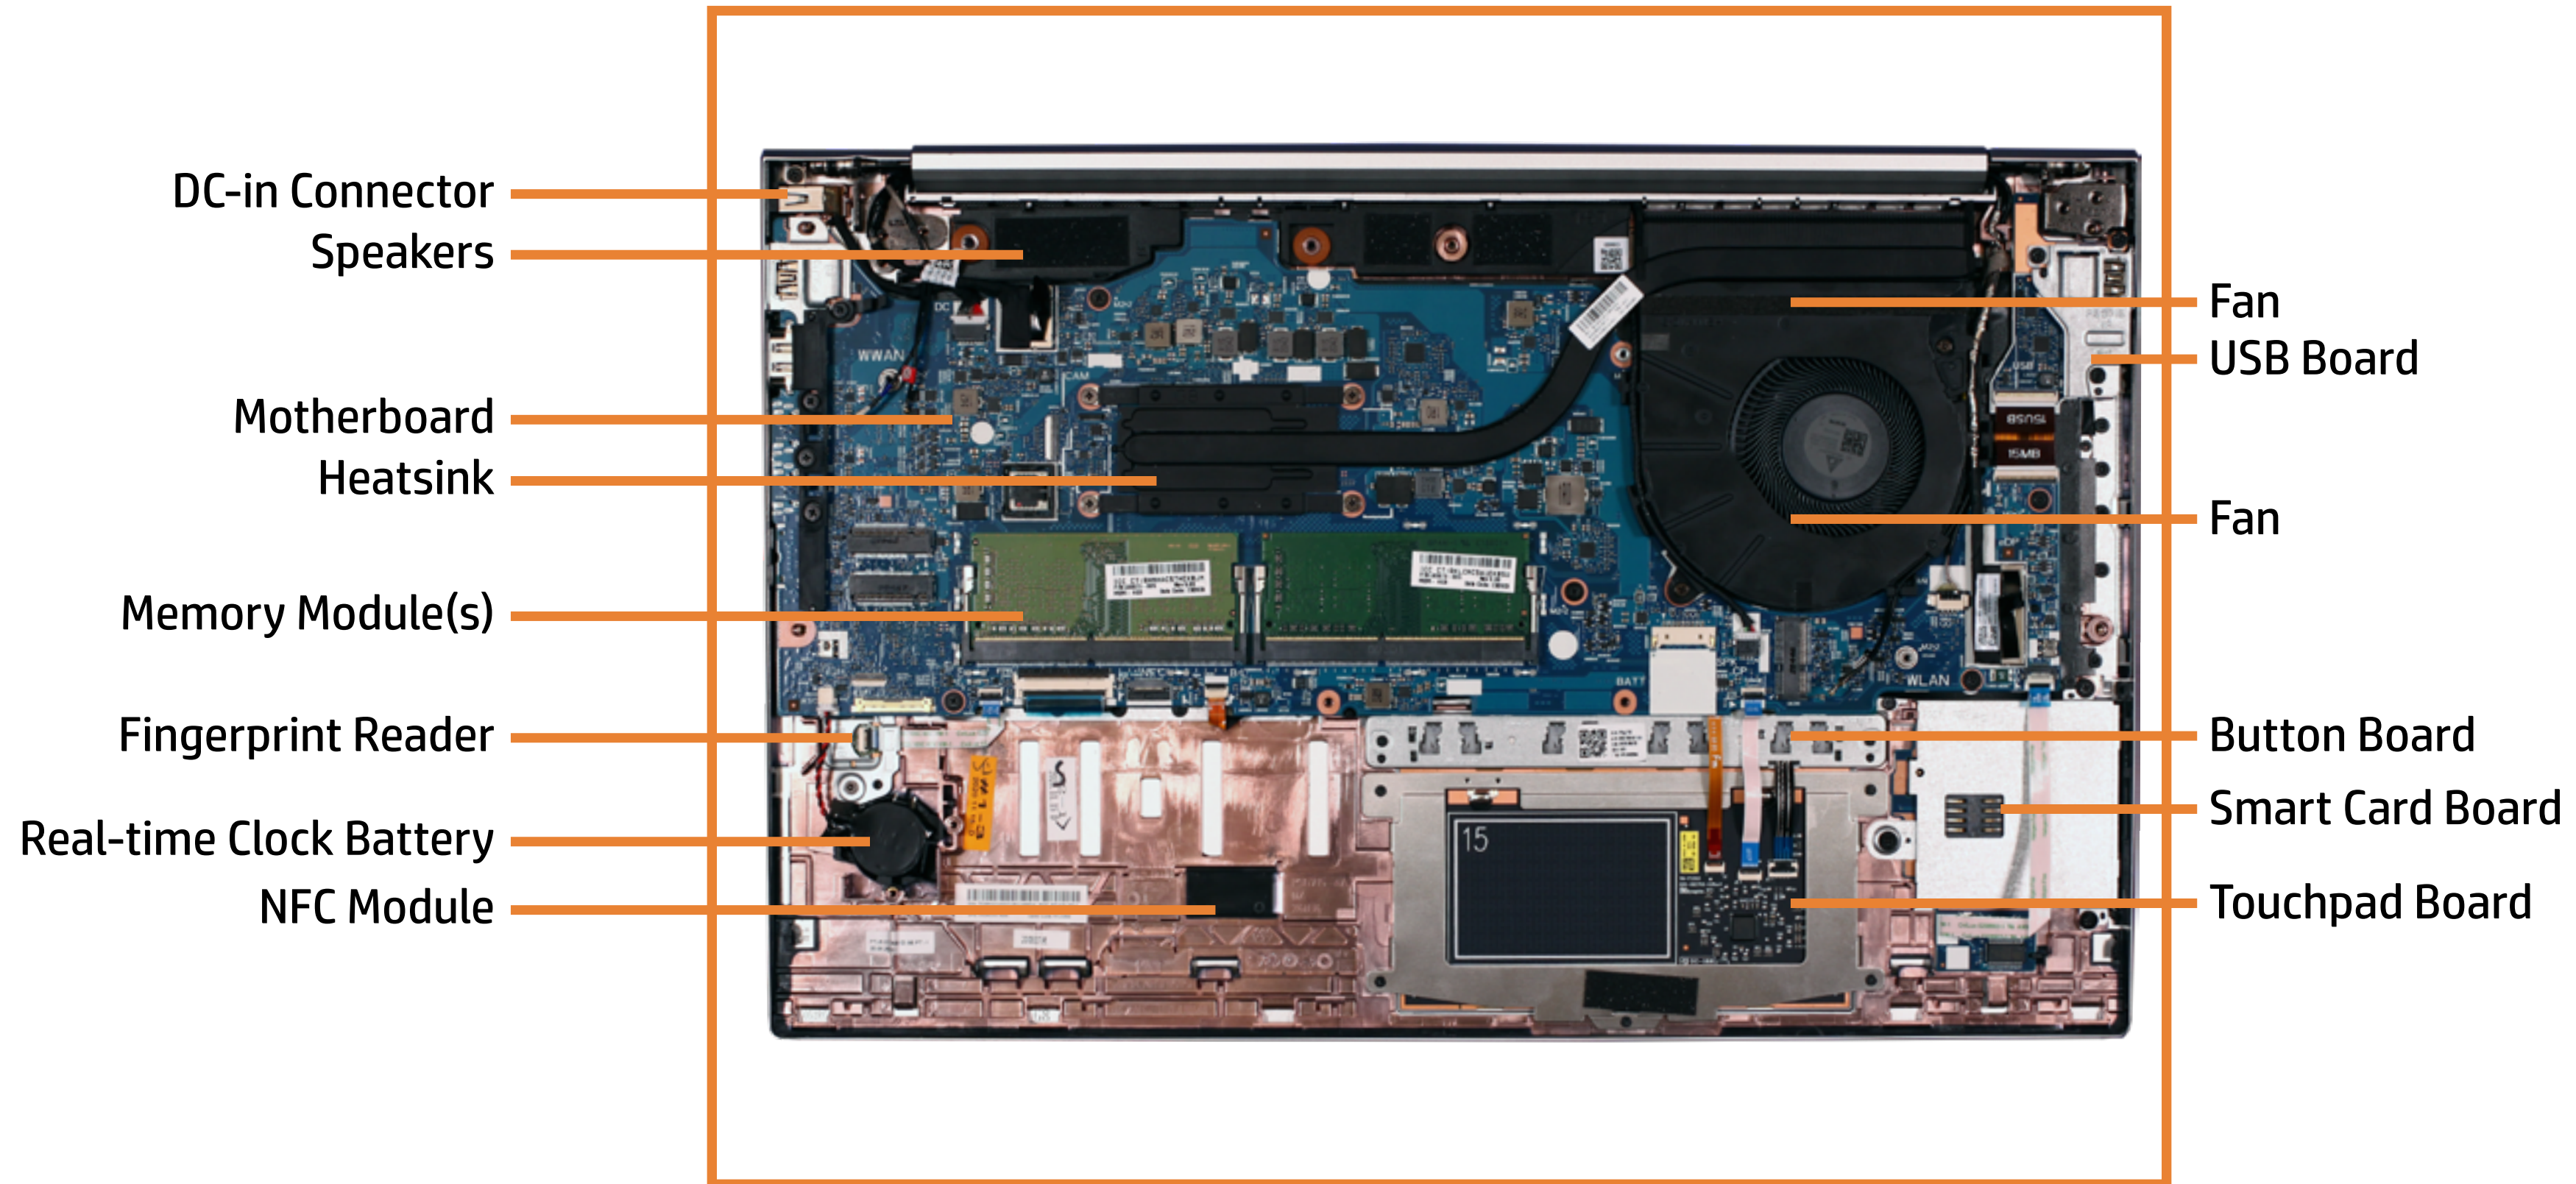


Base Enclosure


Base Enclosure

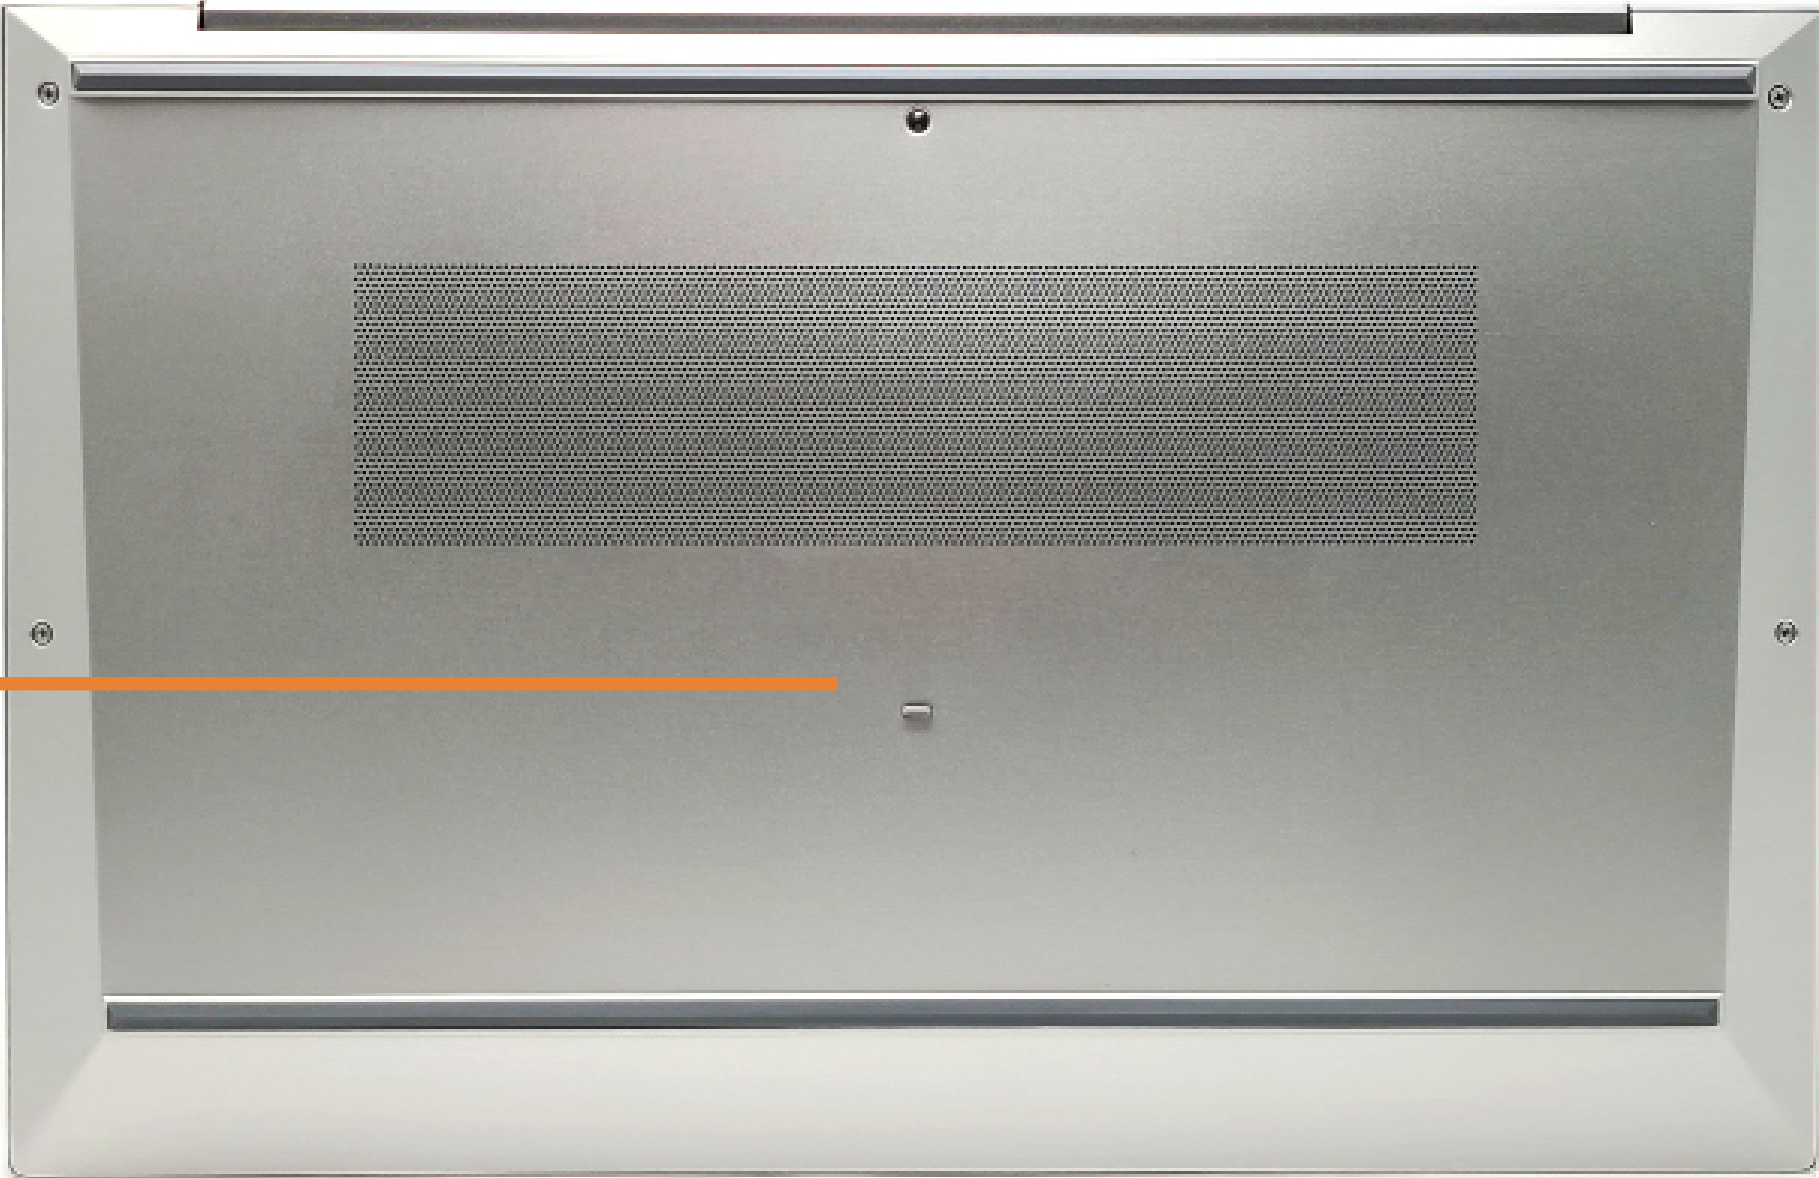


Battery

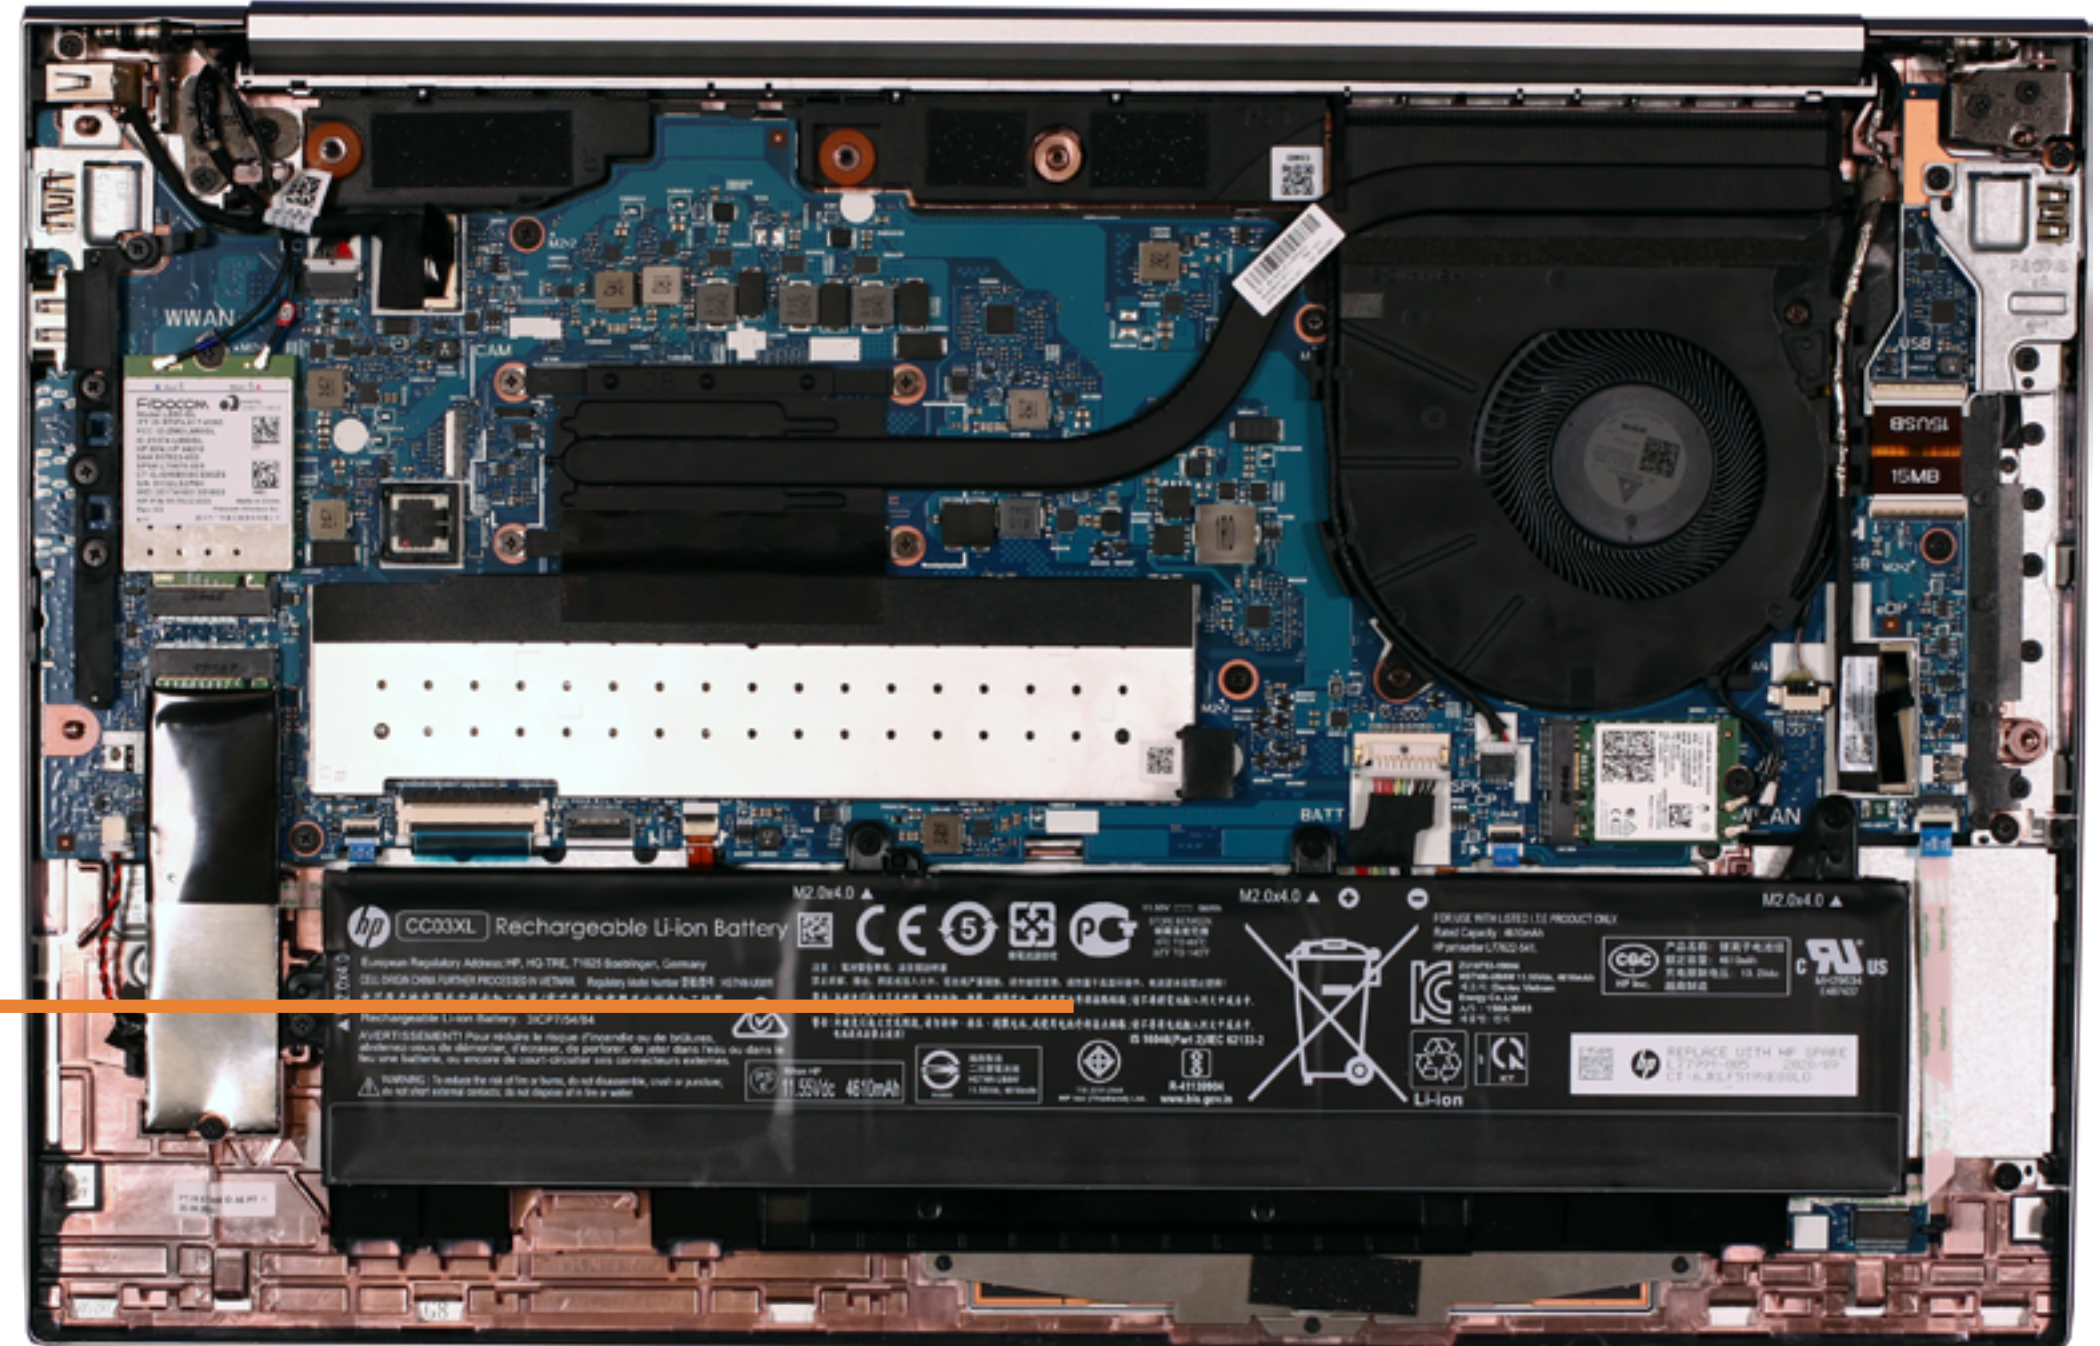


M.2 Solid State Drive

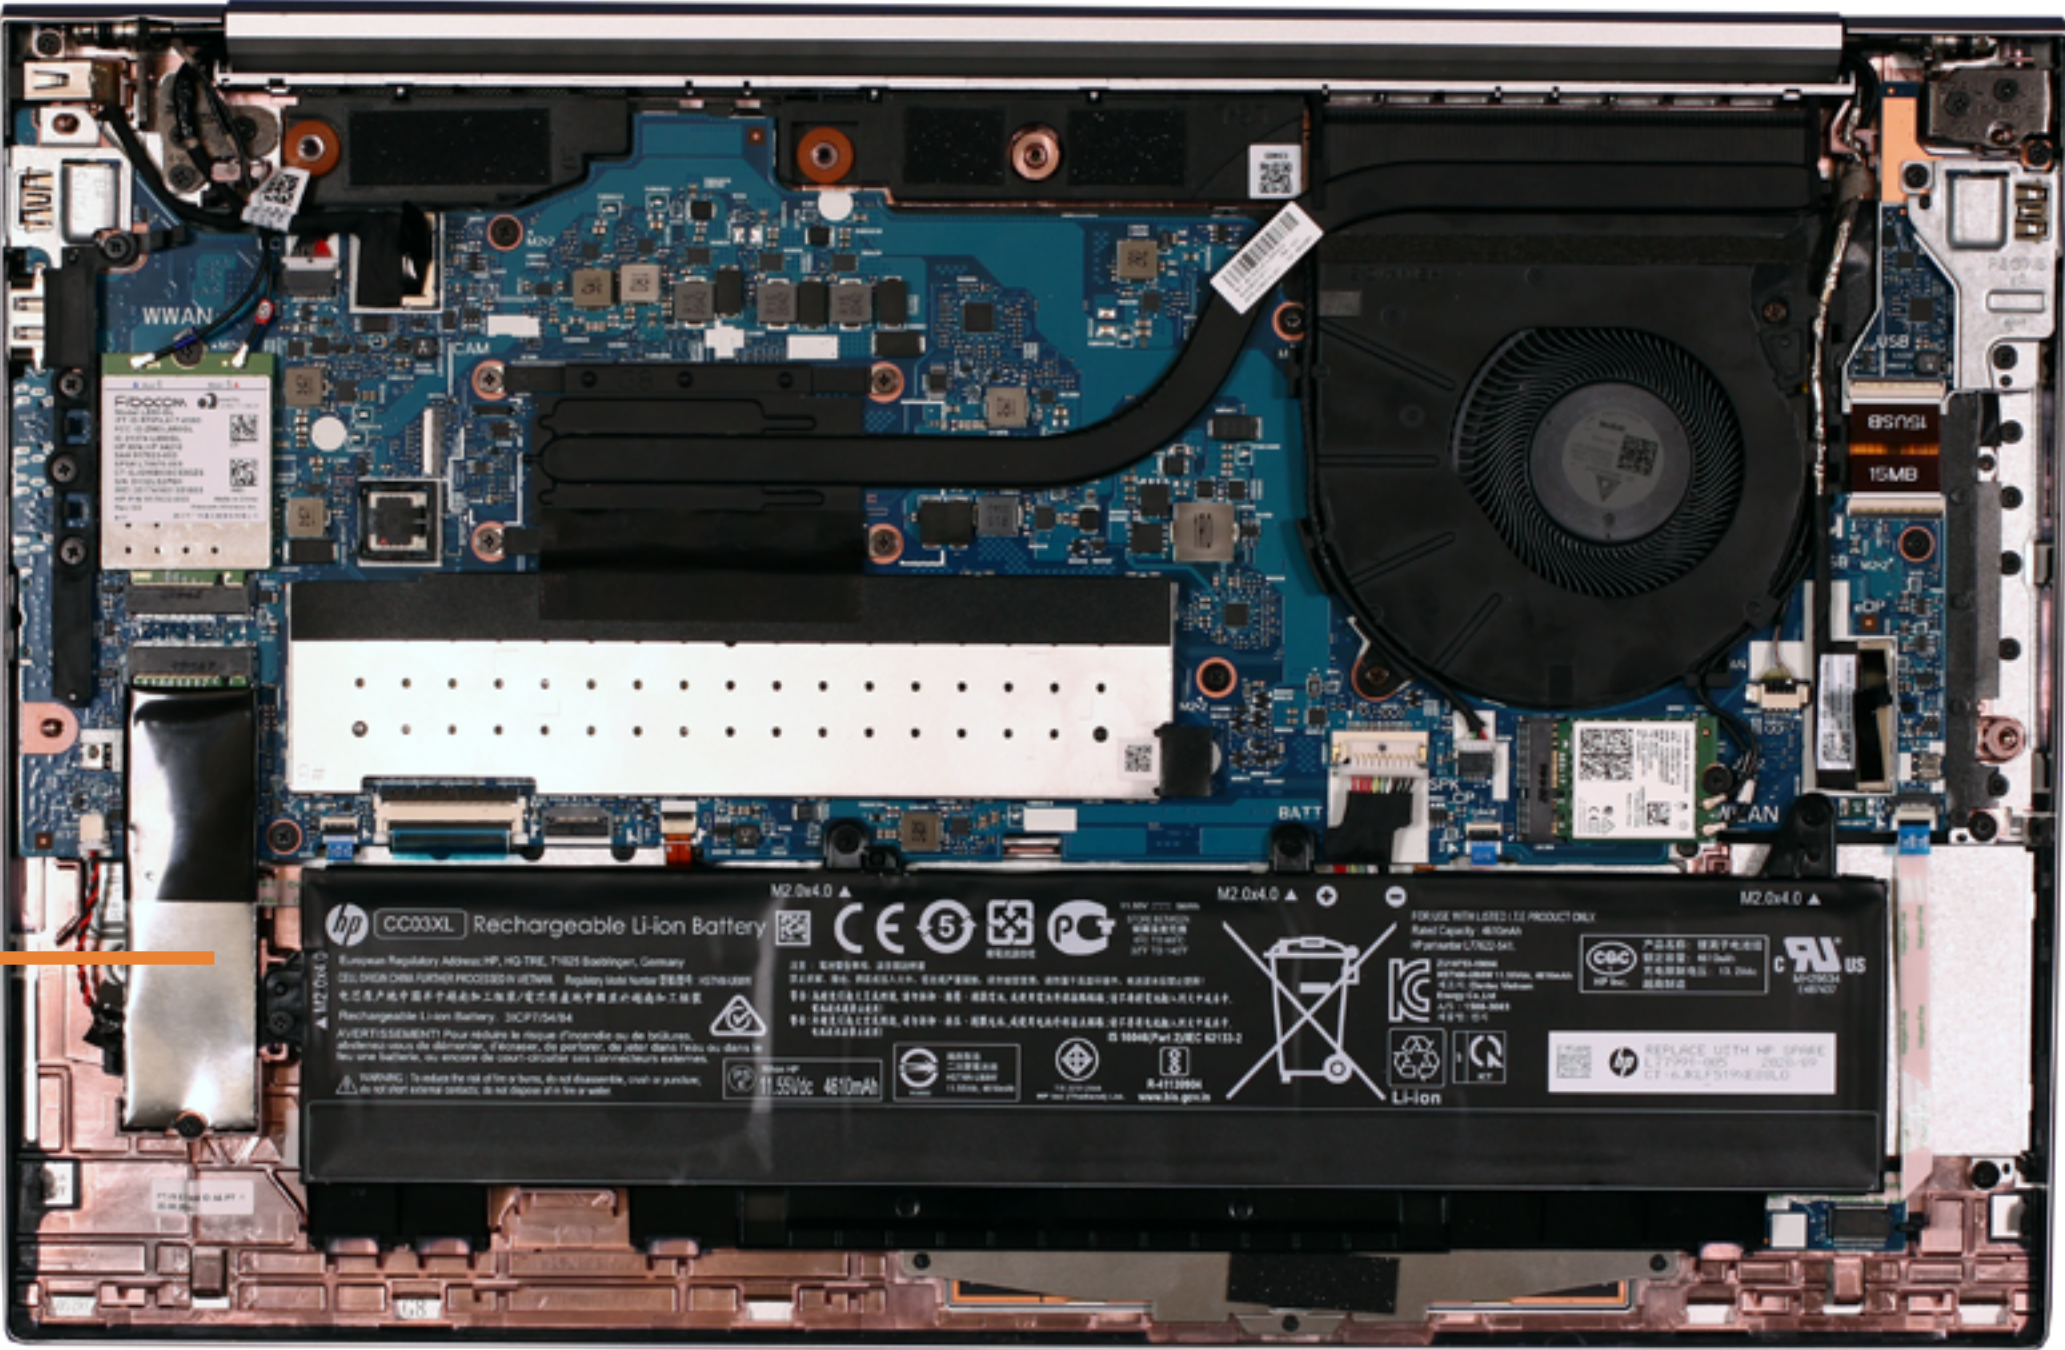


Wireless LAN Module

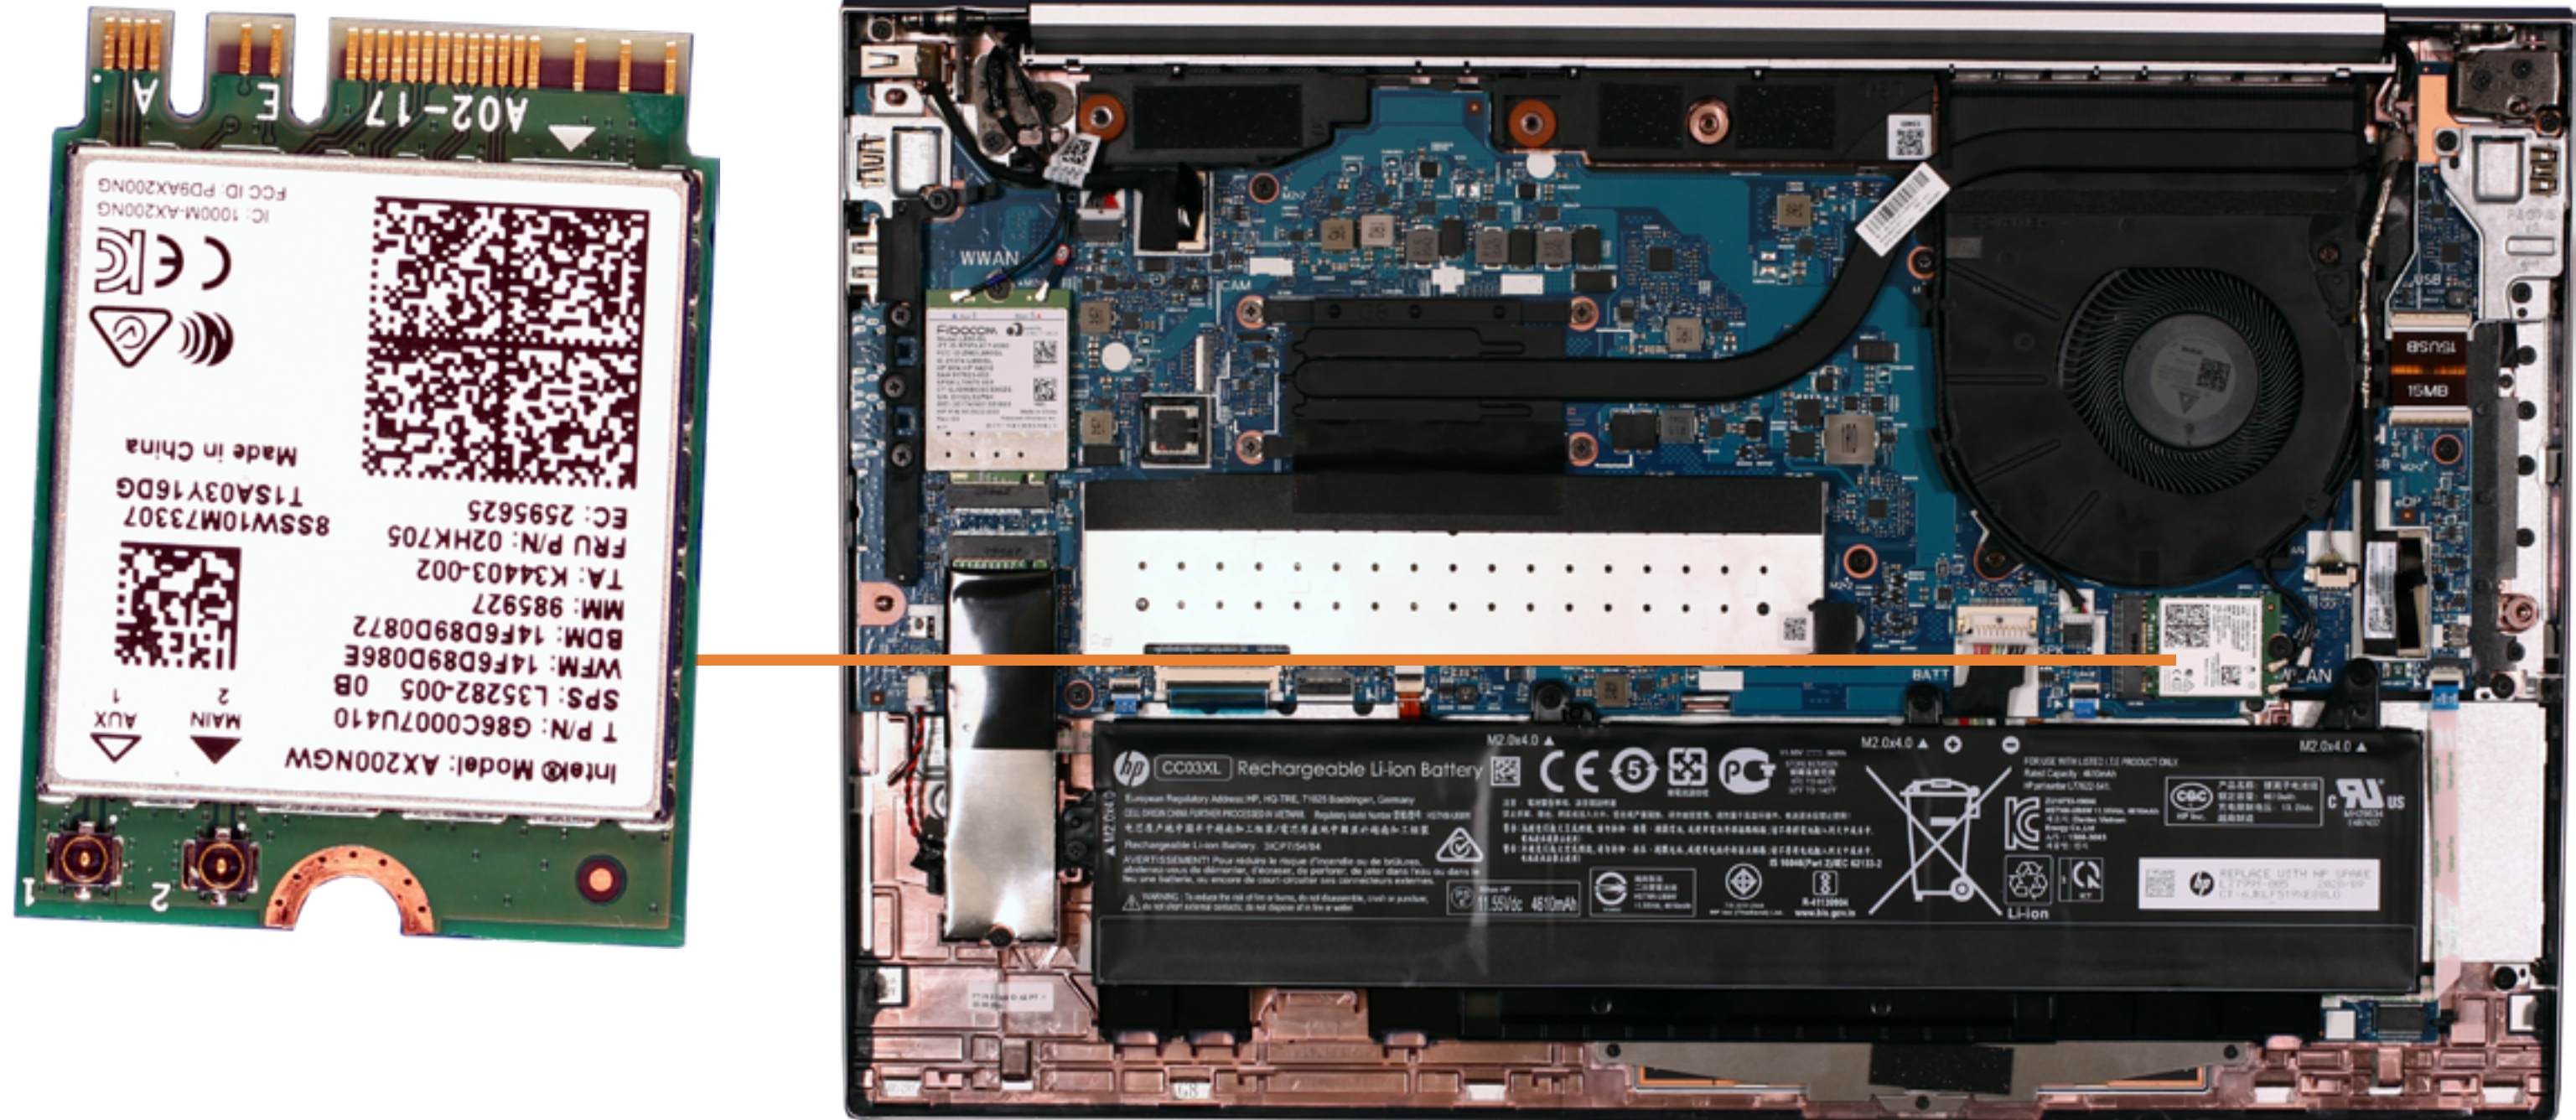


Wireless WAN Module

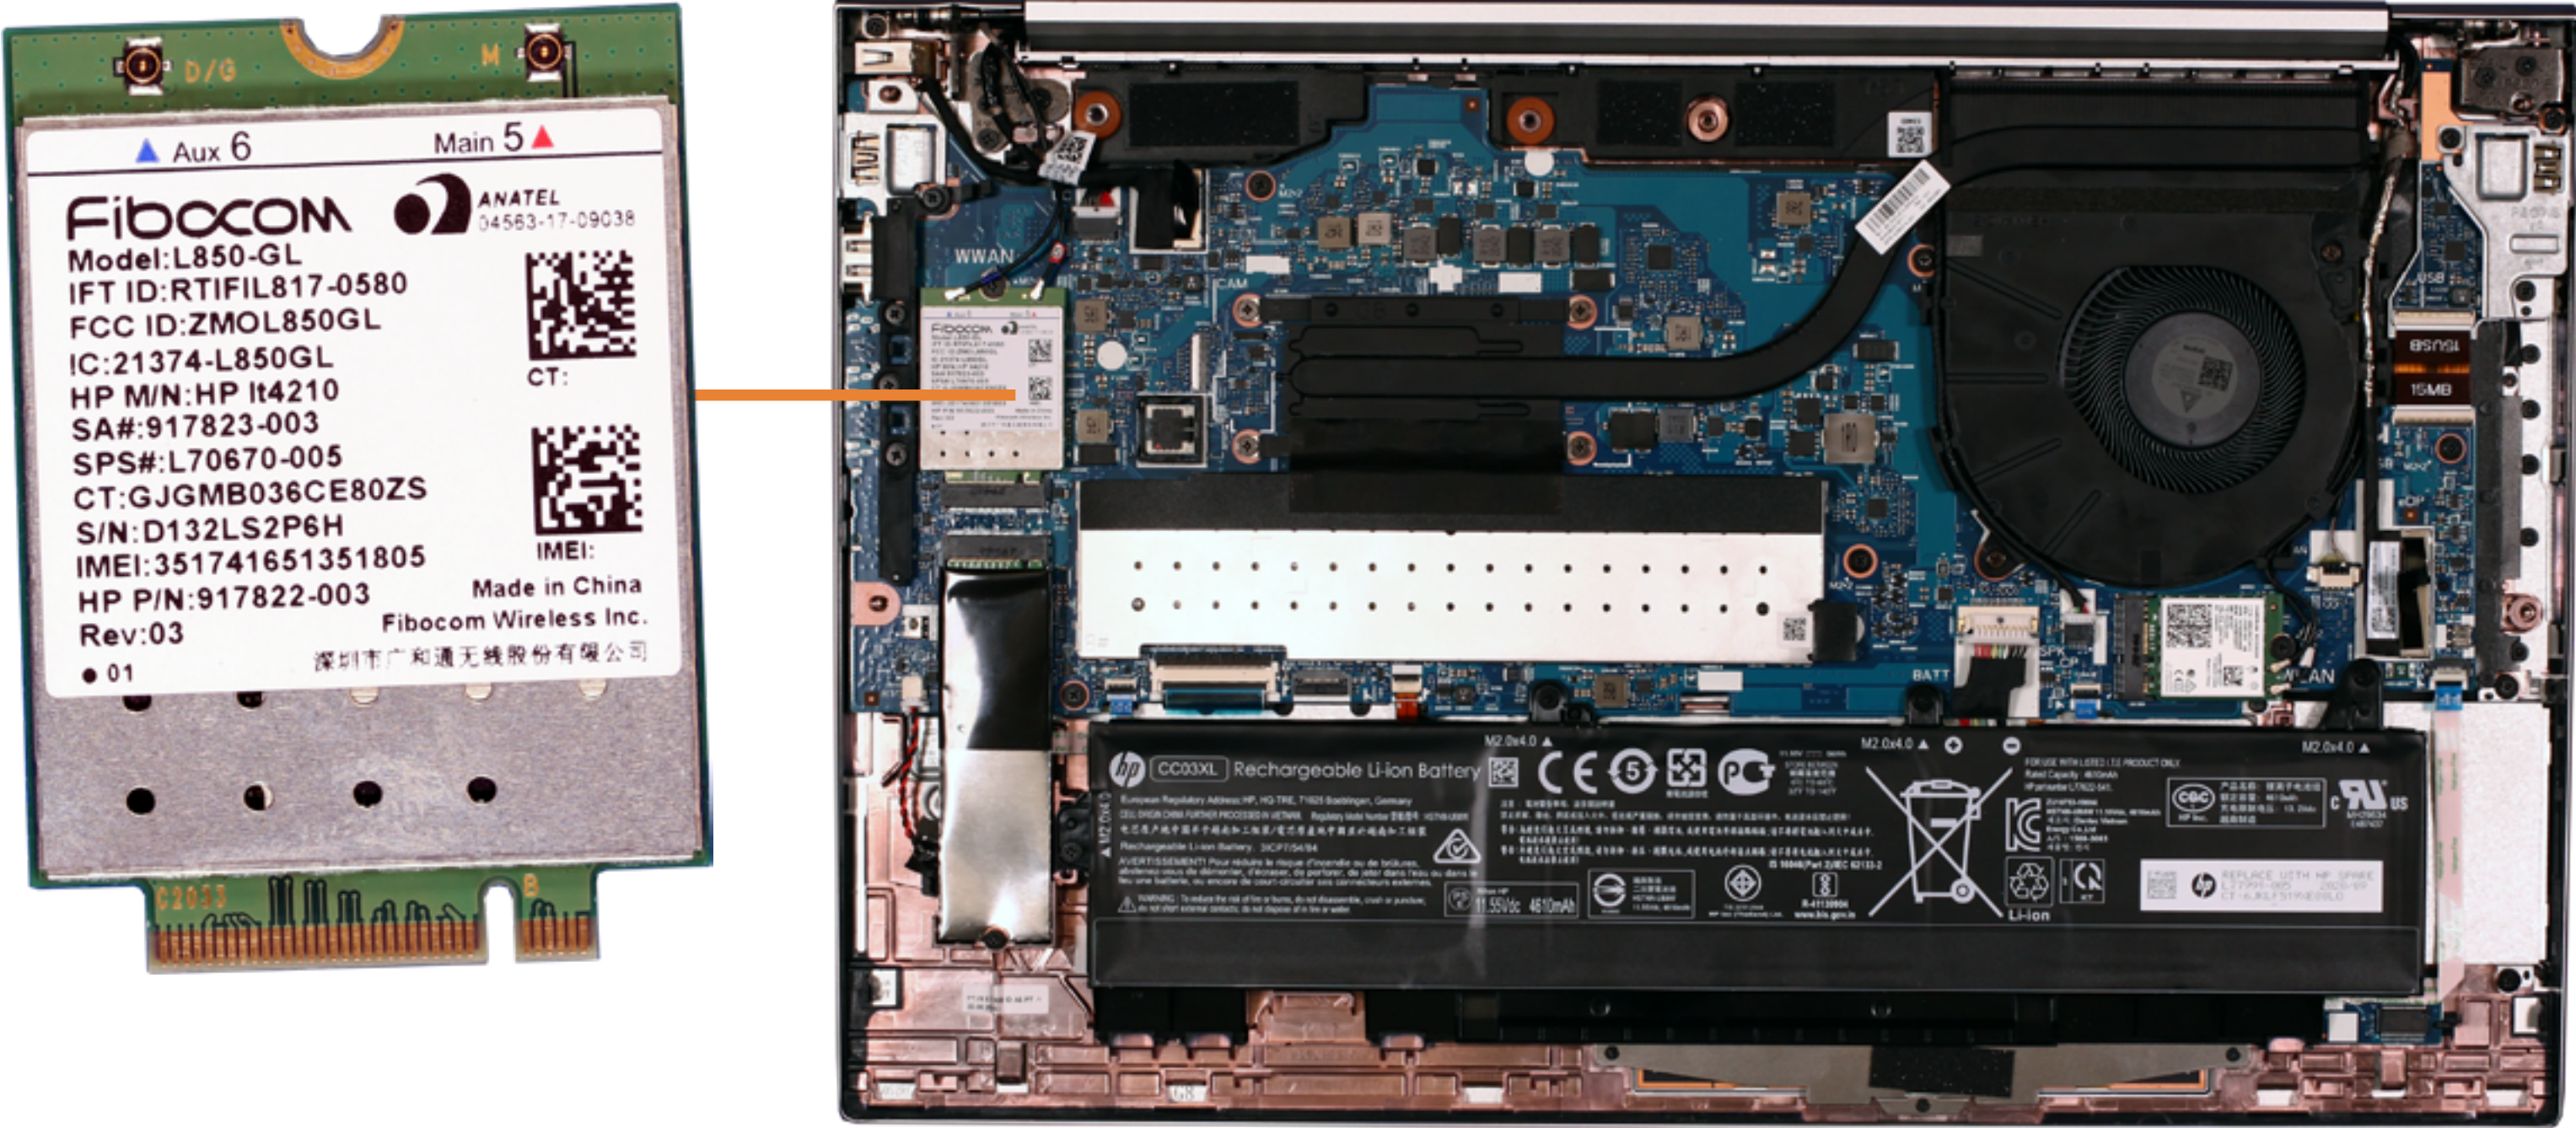


Memory Module

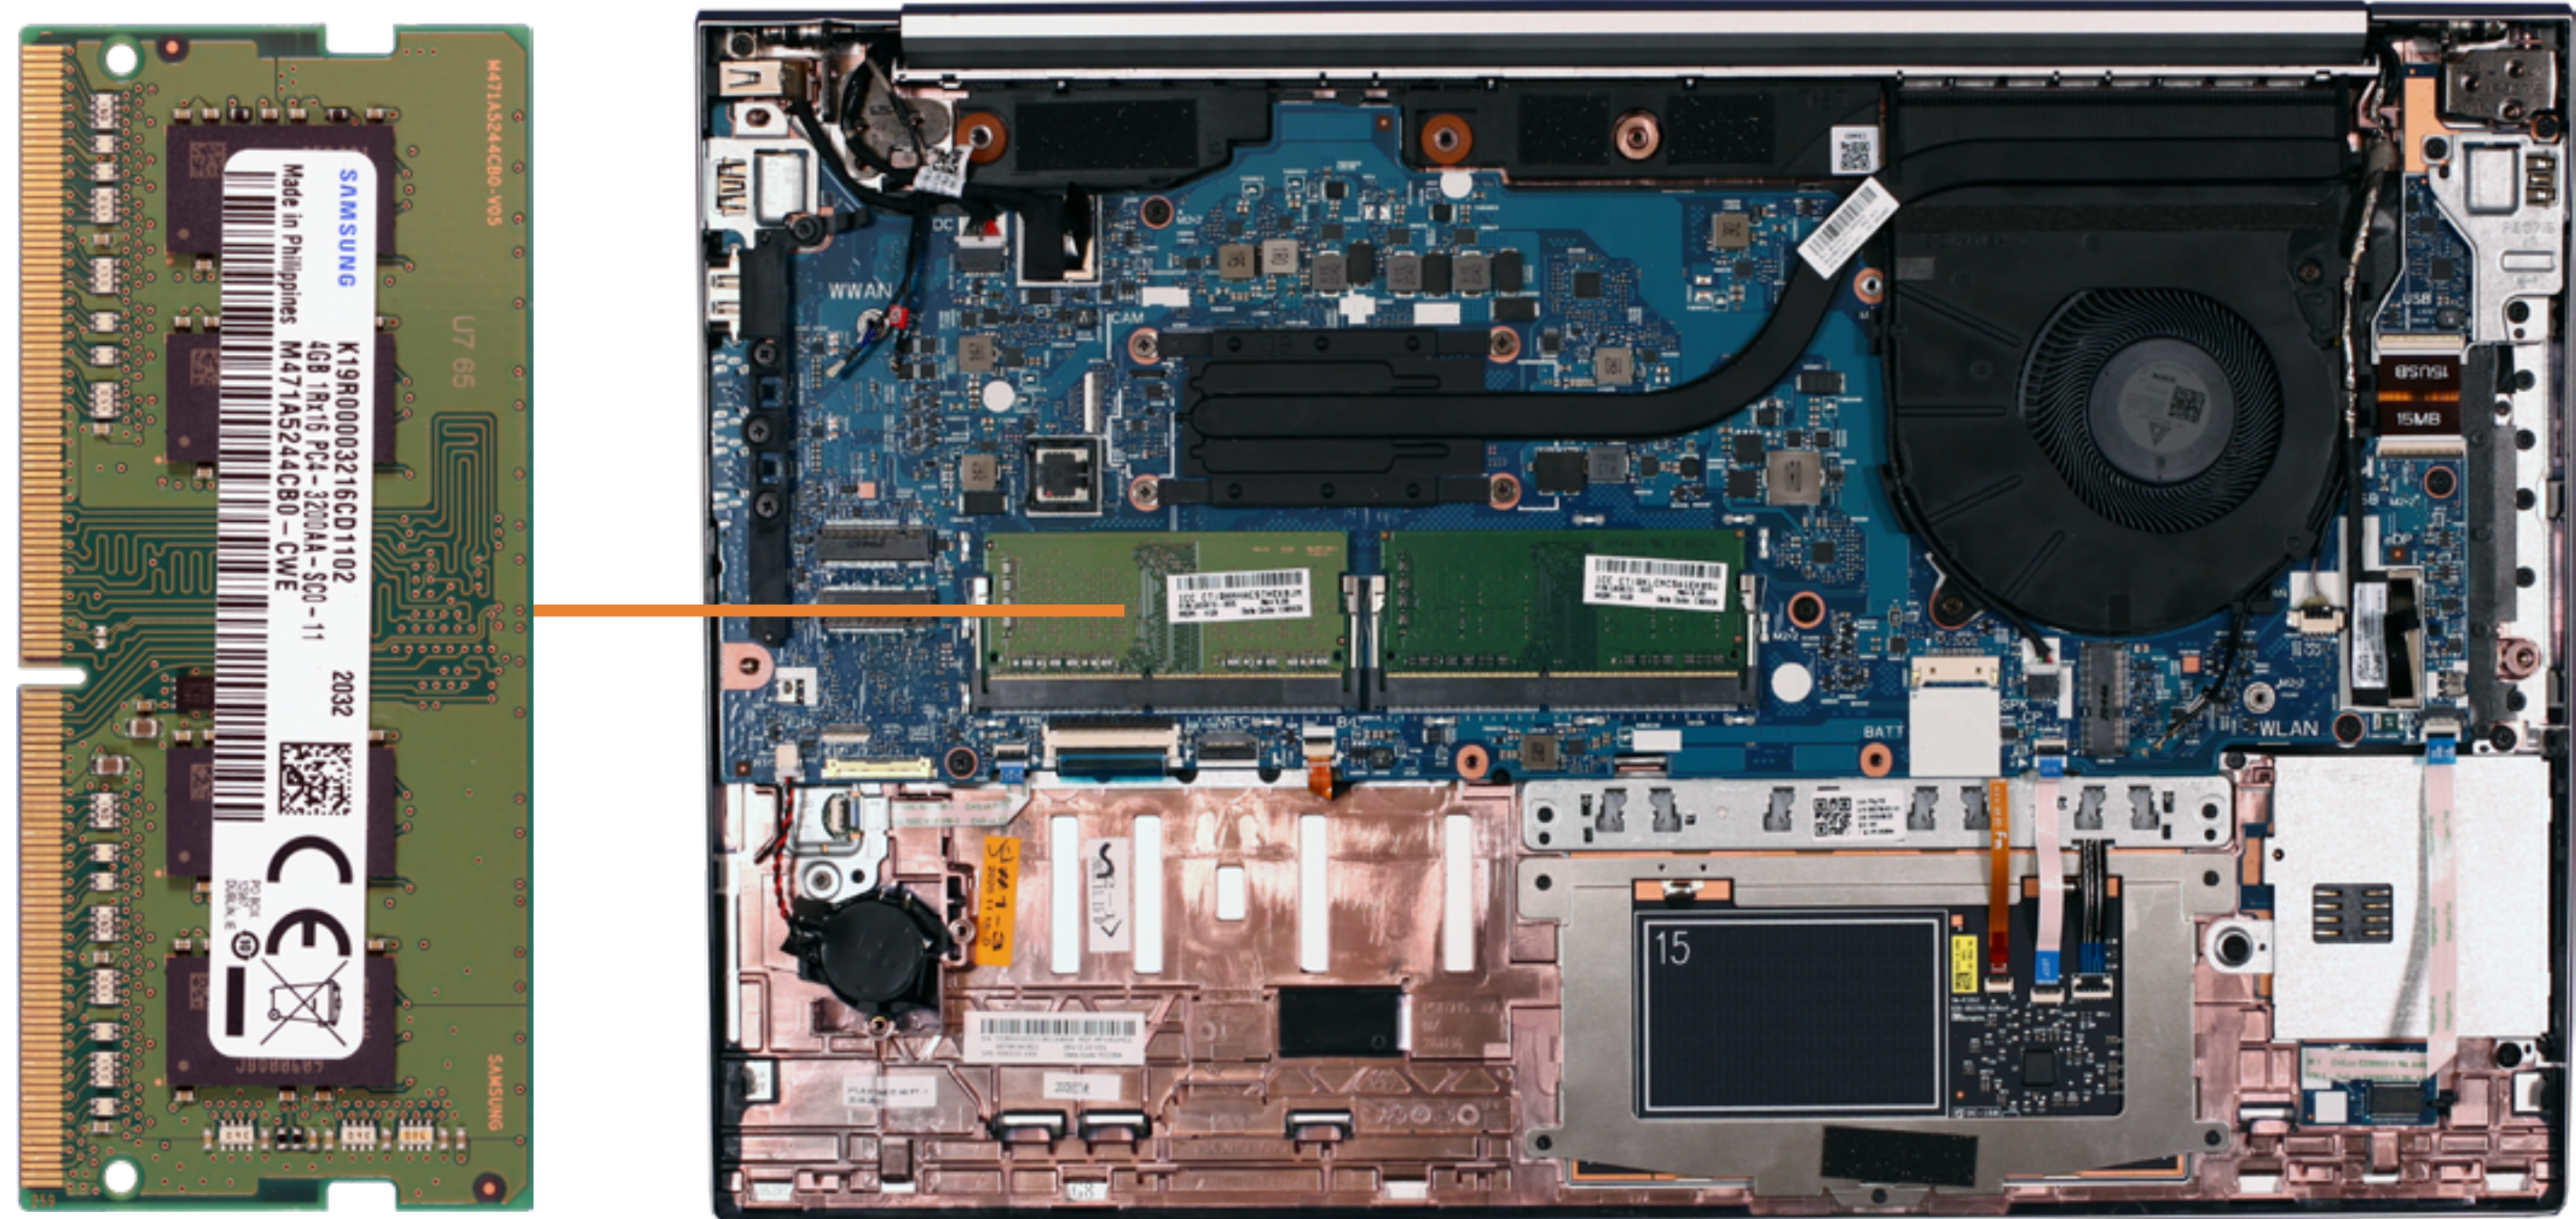


Touchpad Board

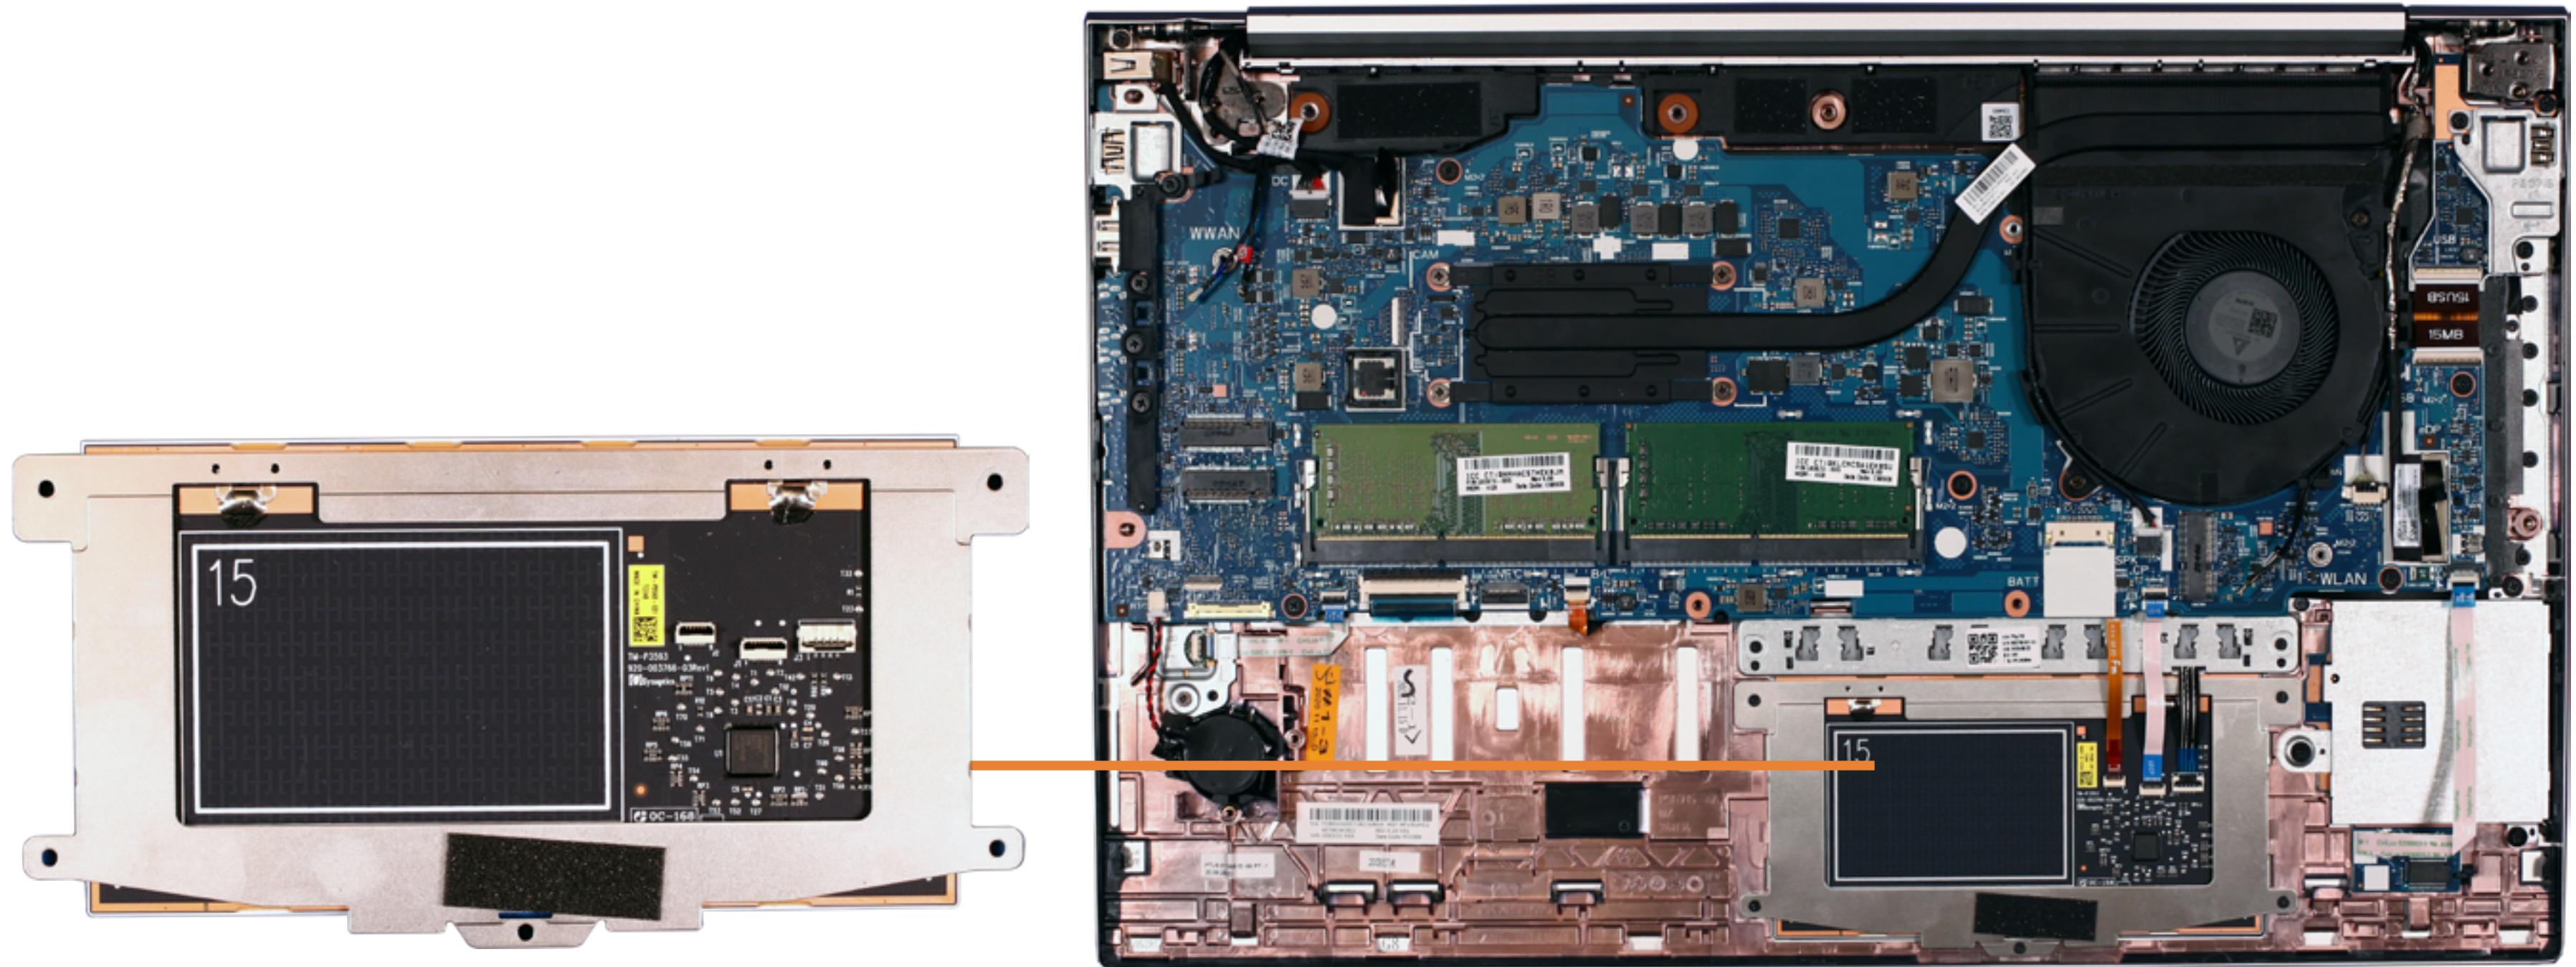



Button Board

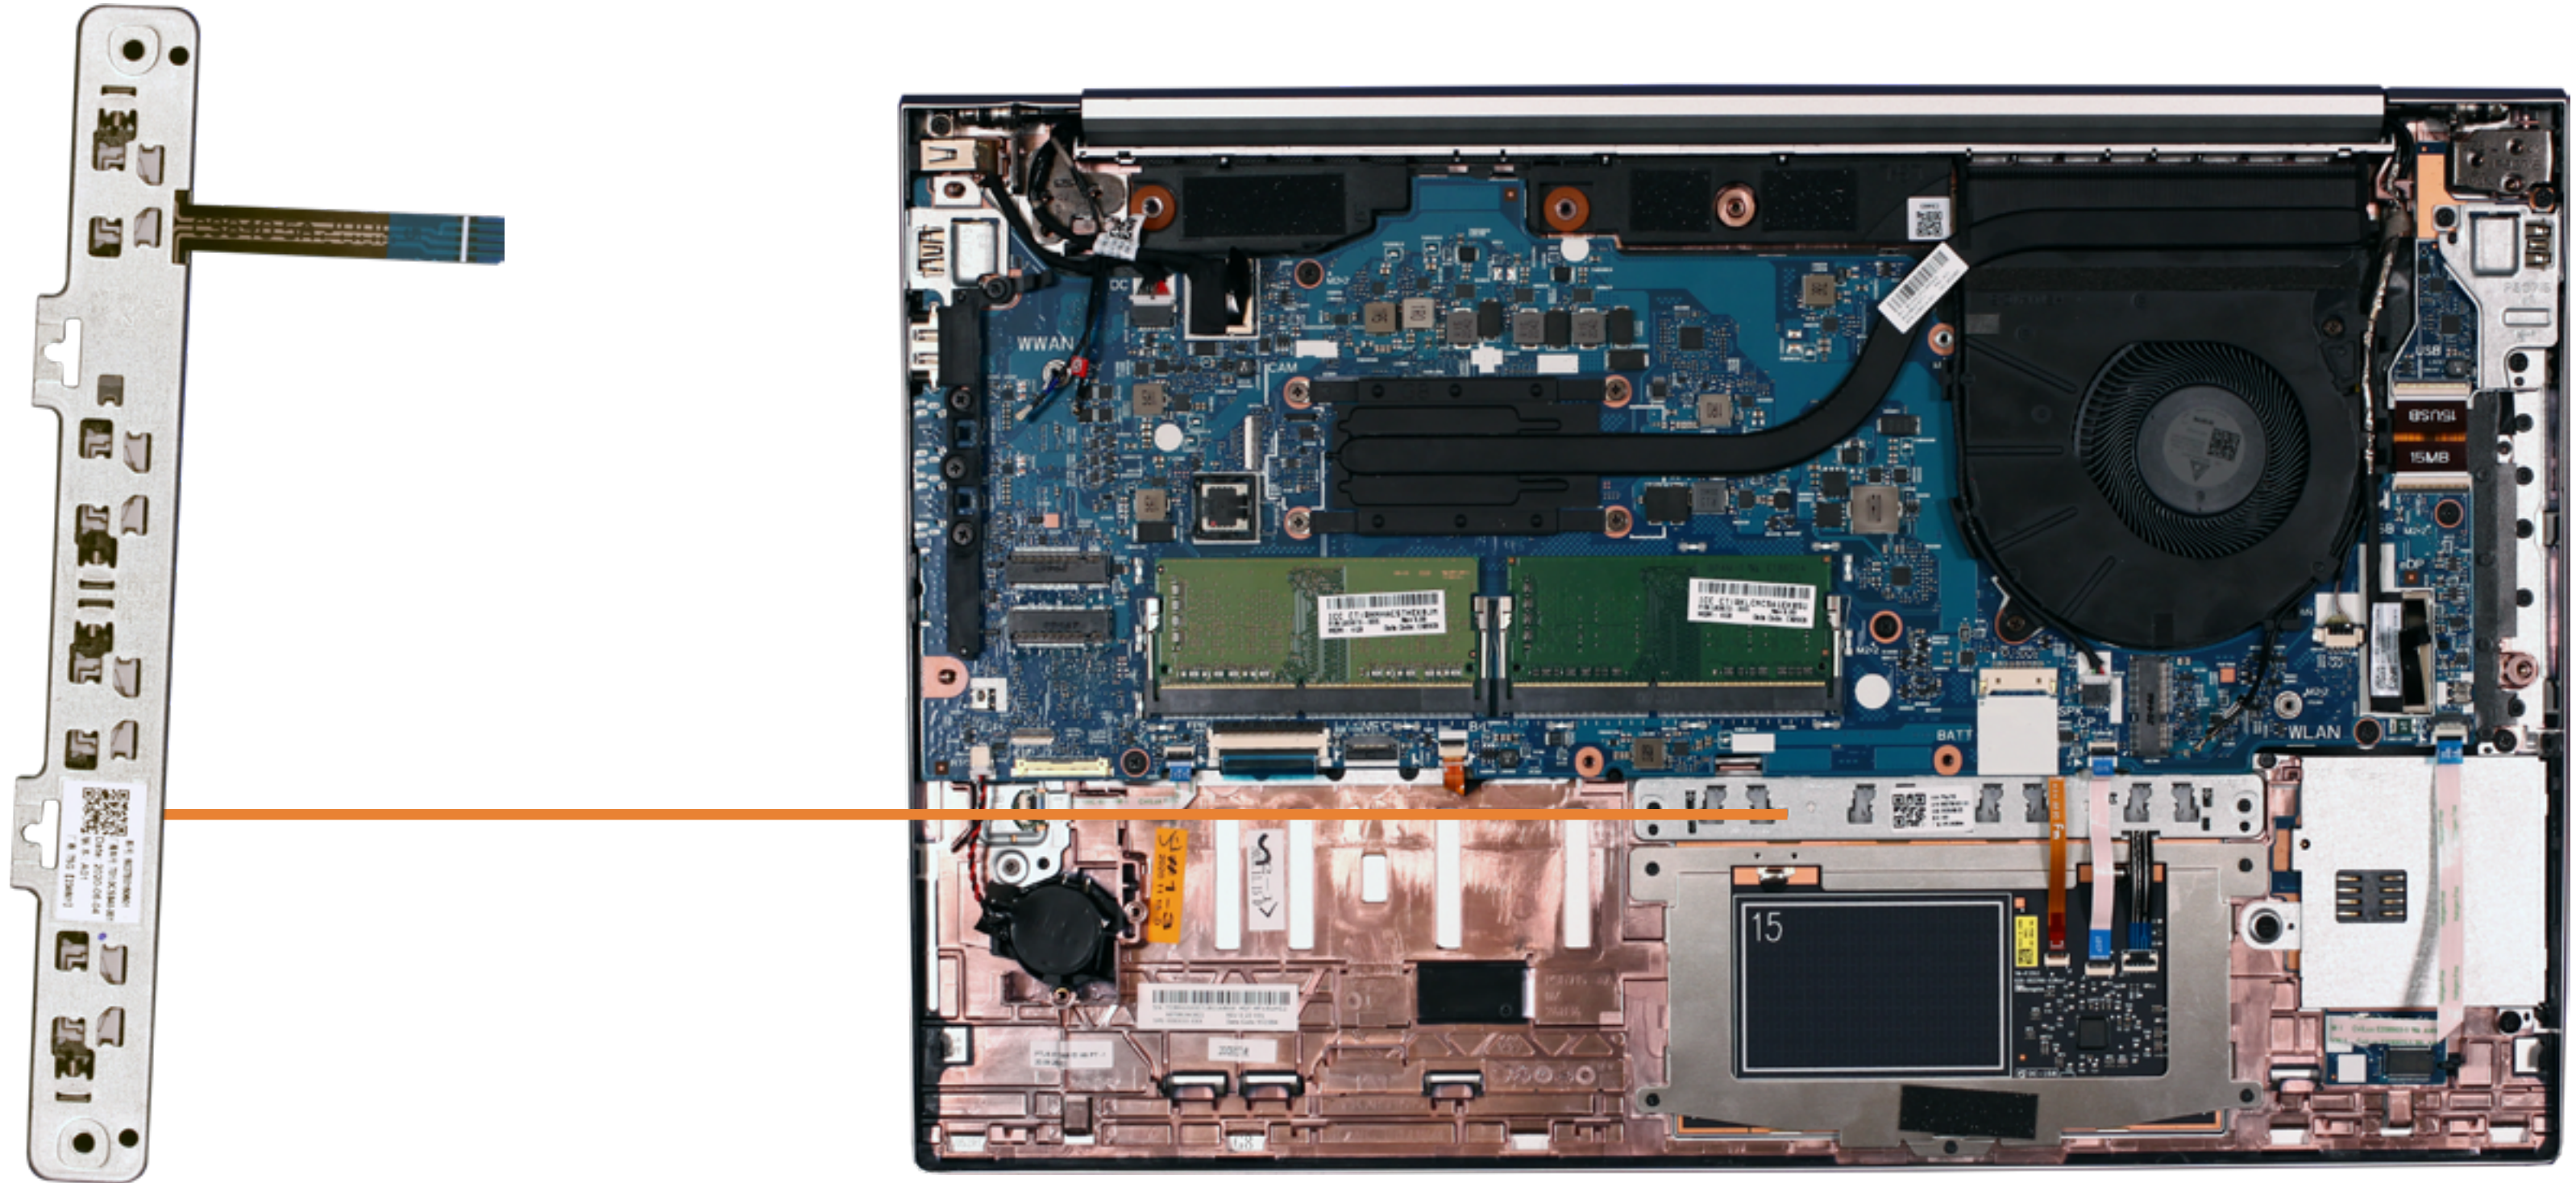


NFC Module

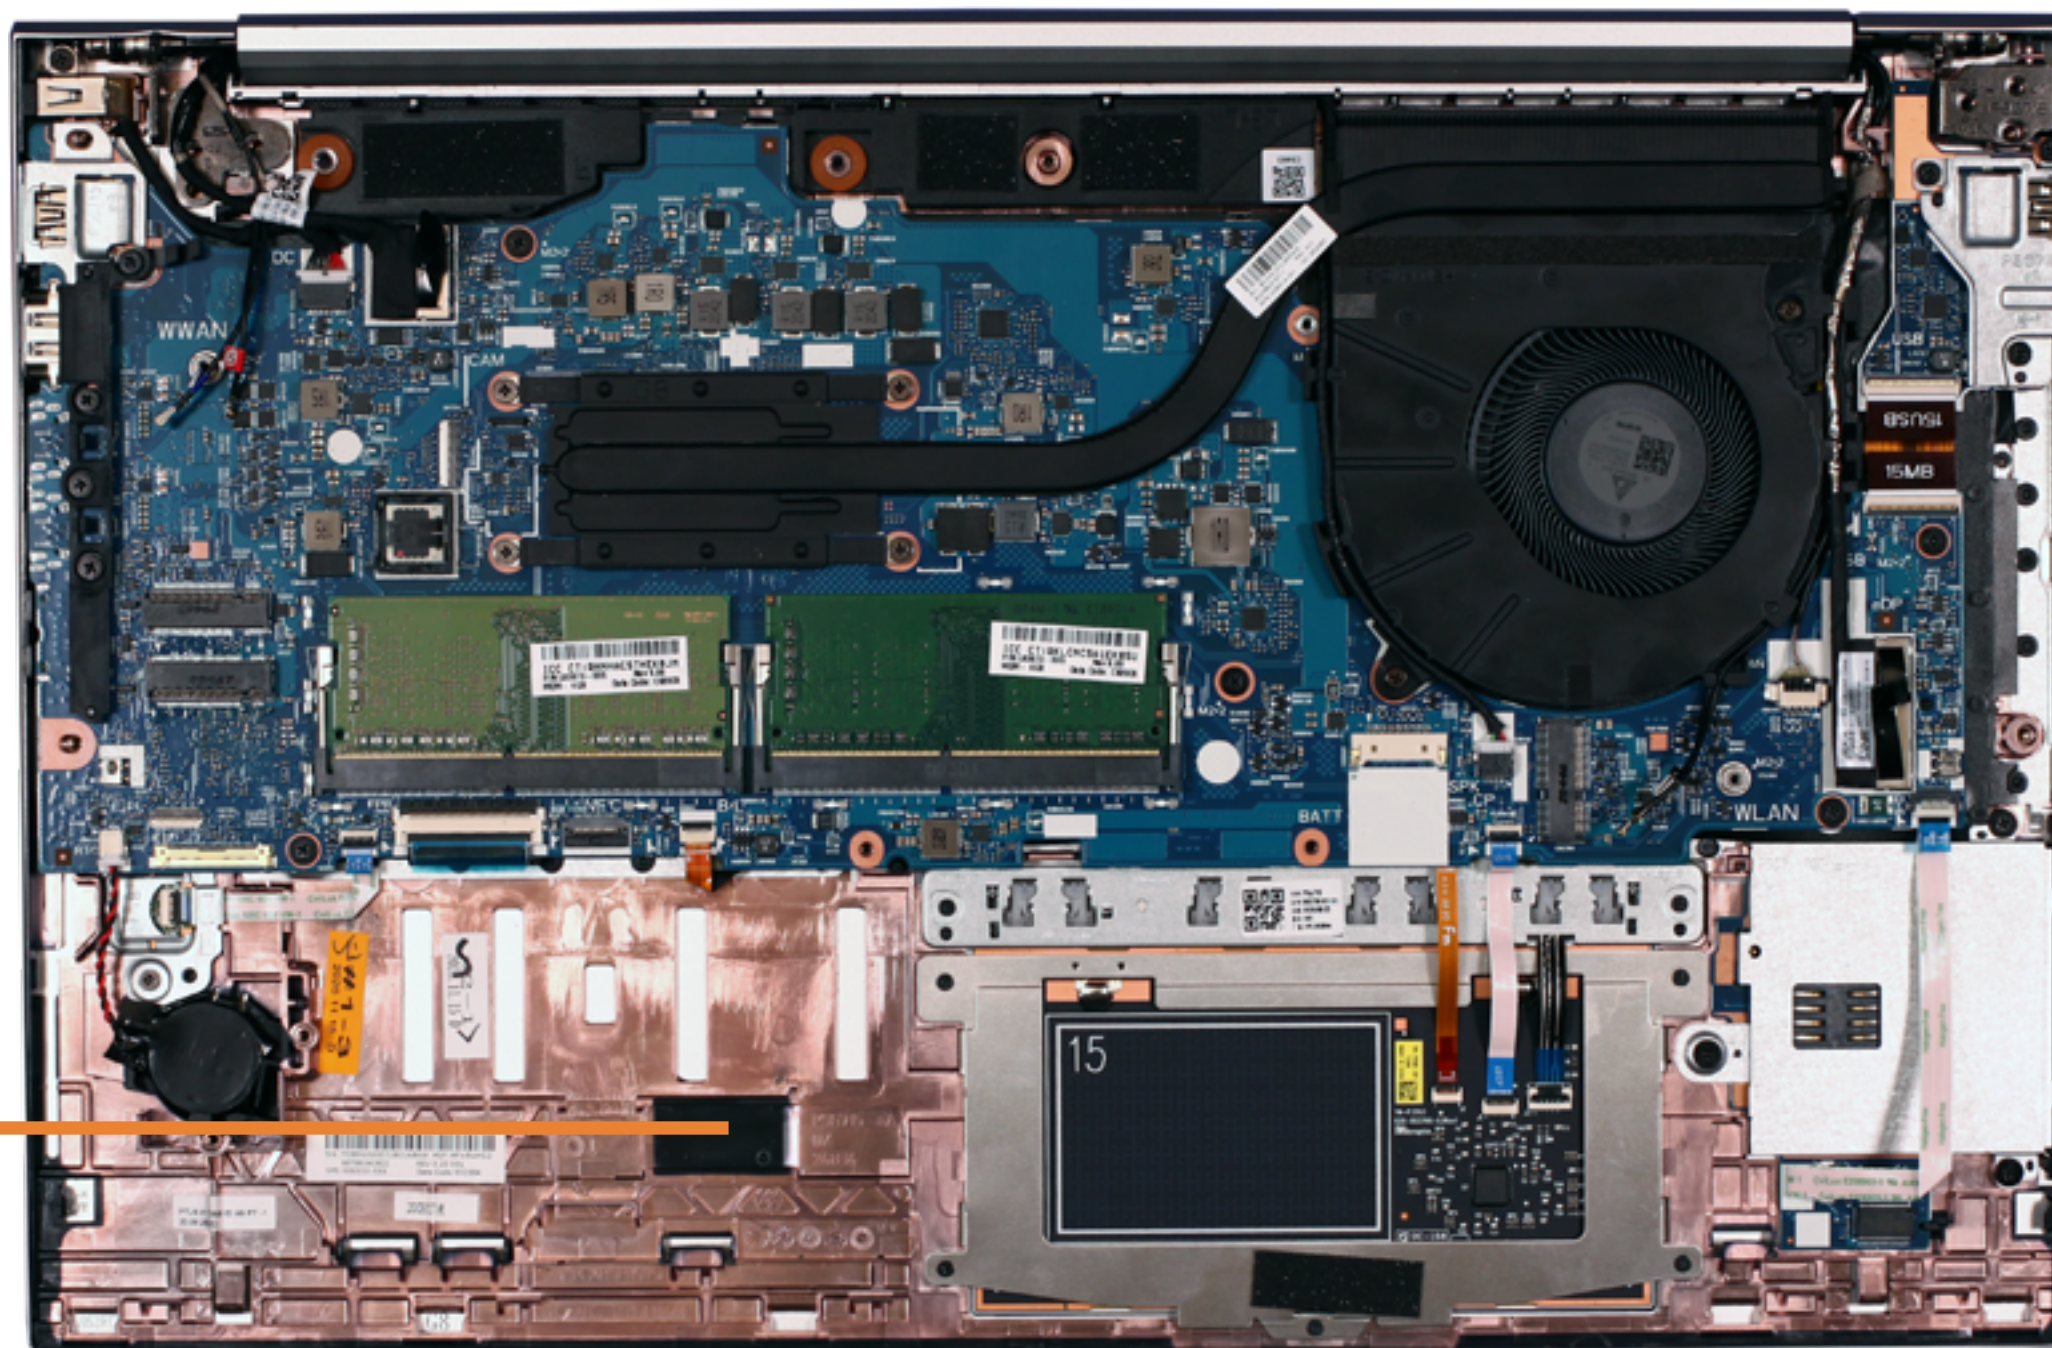


Fingerprint Reader

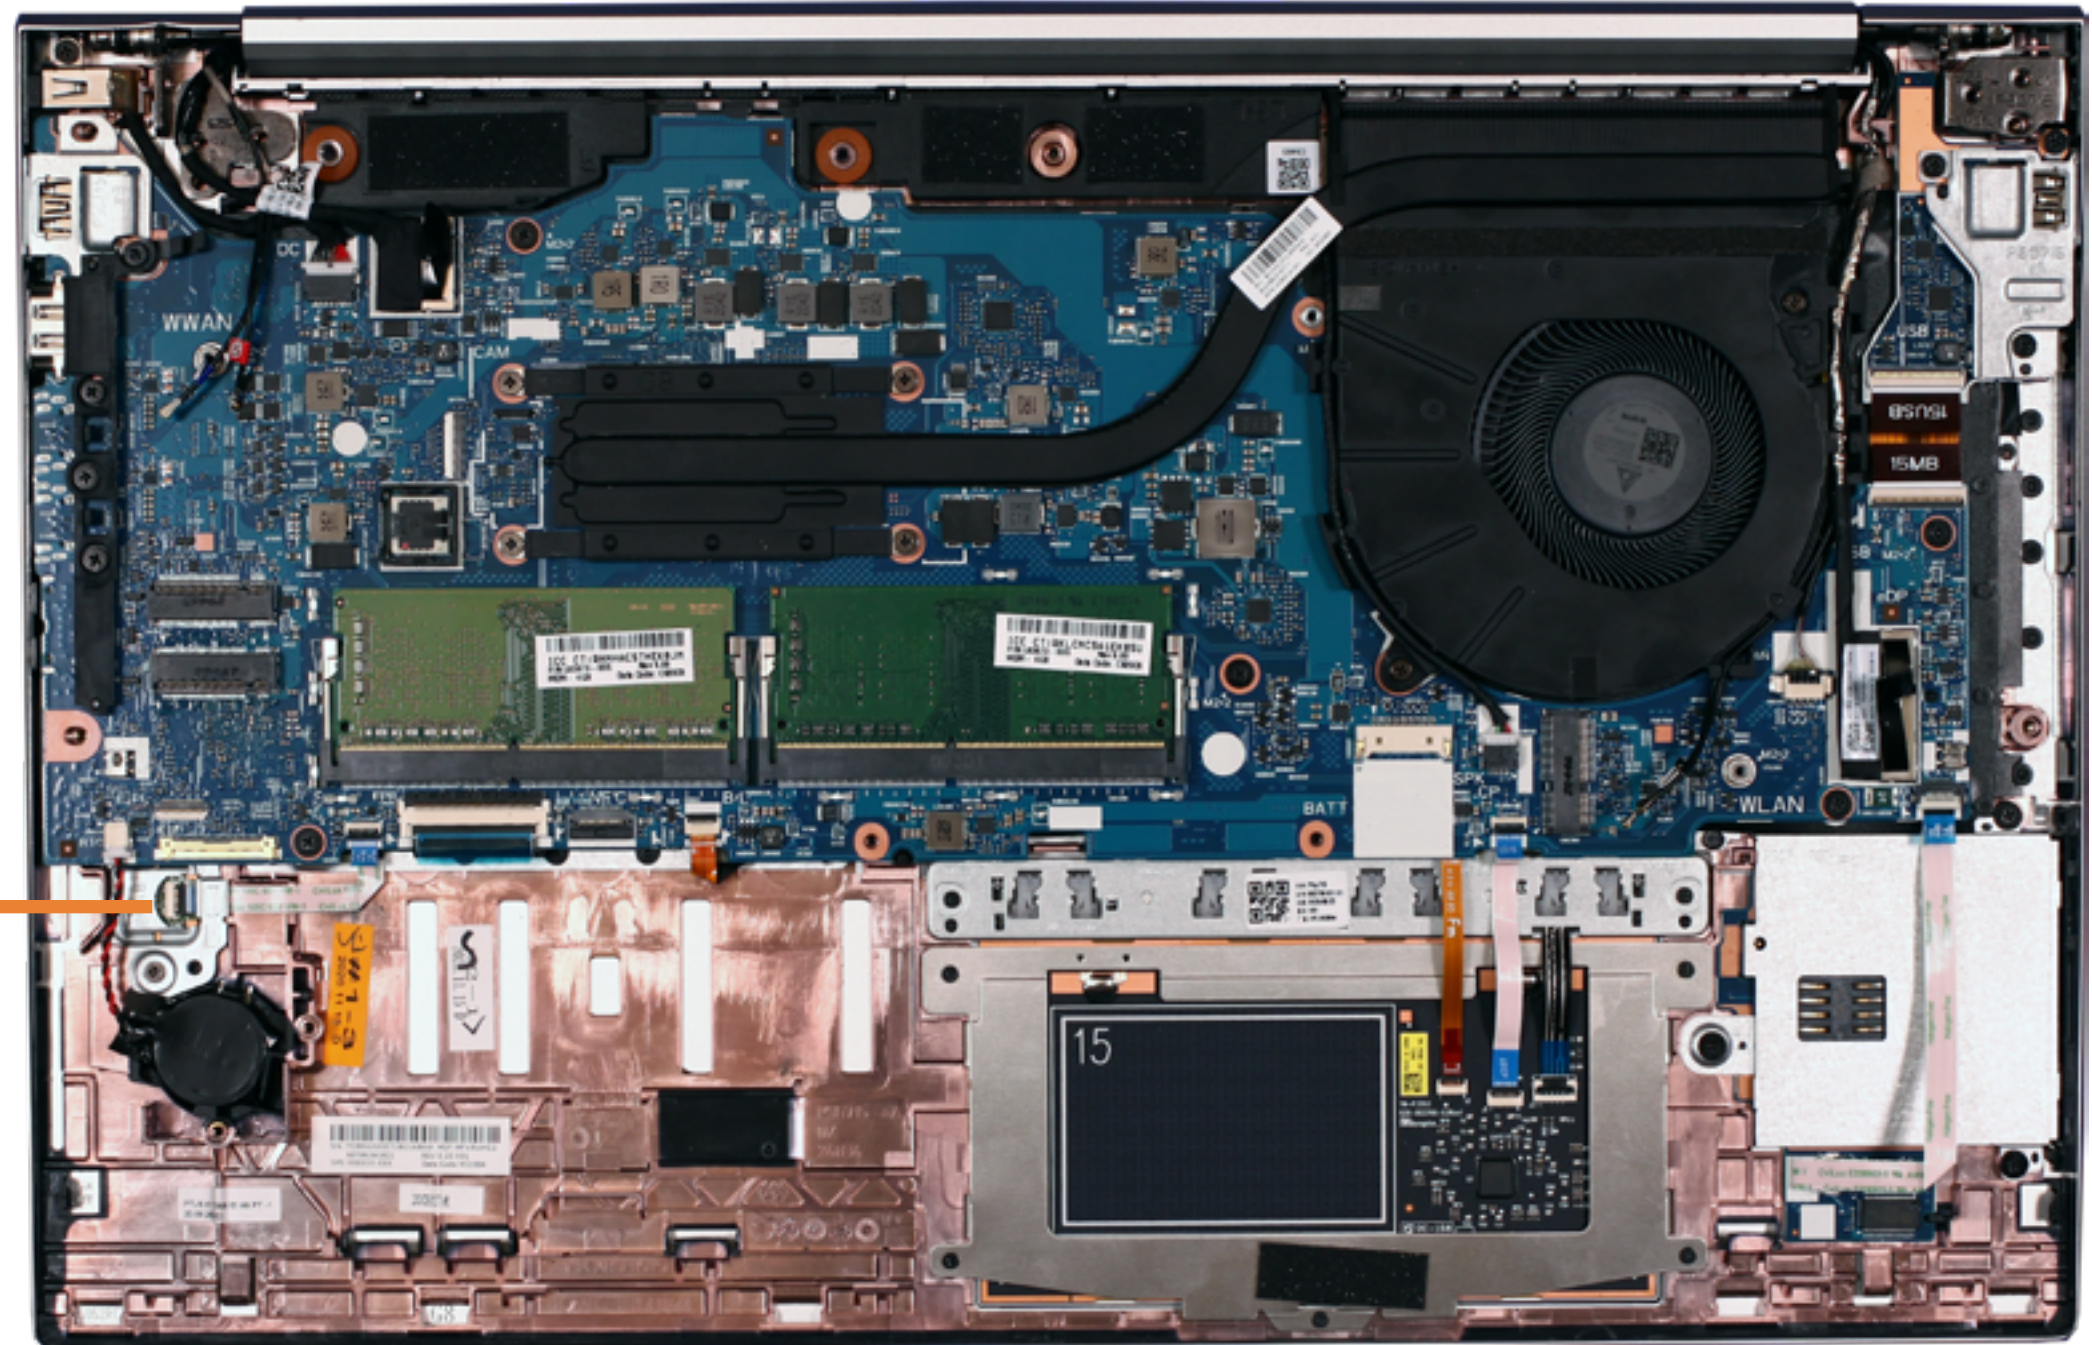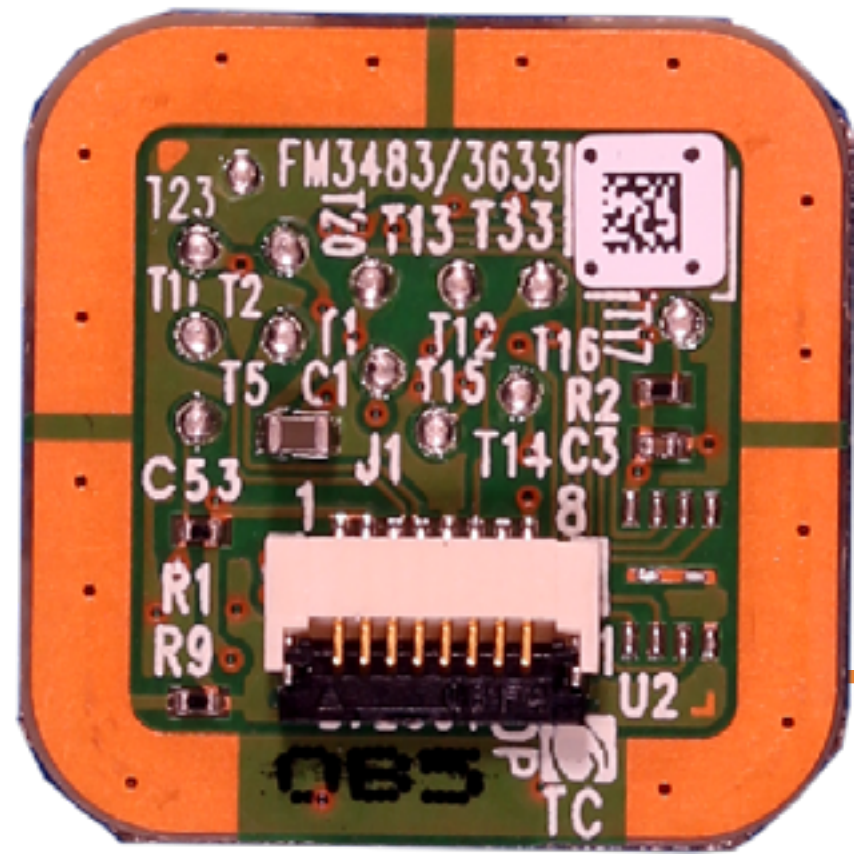


Speakers

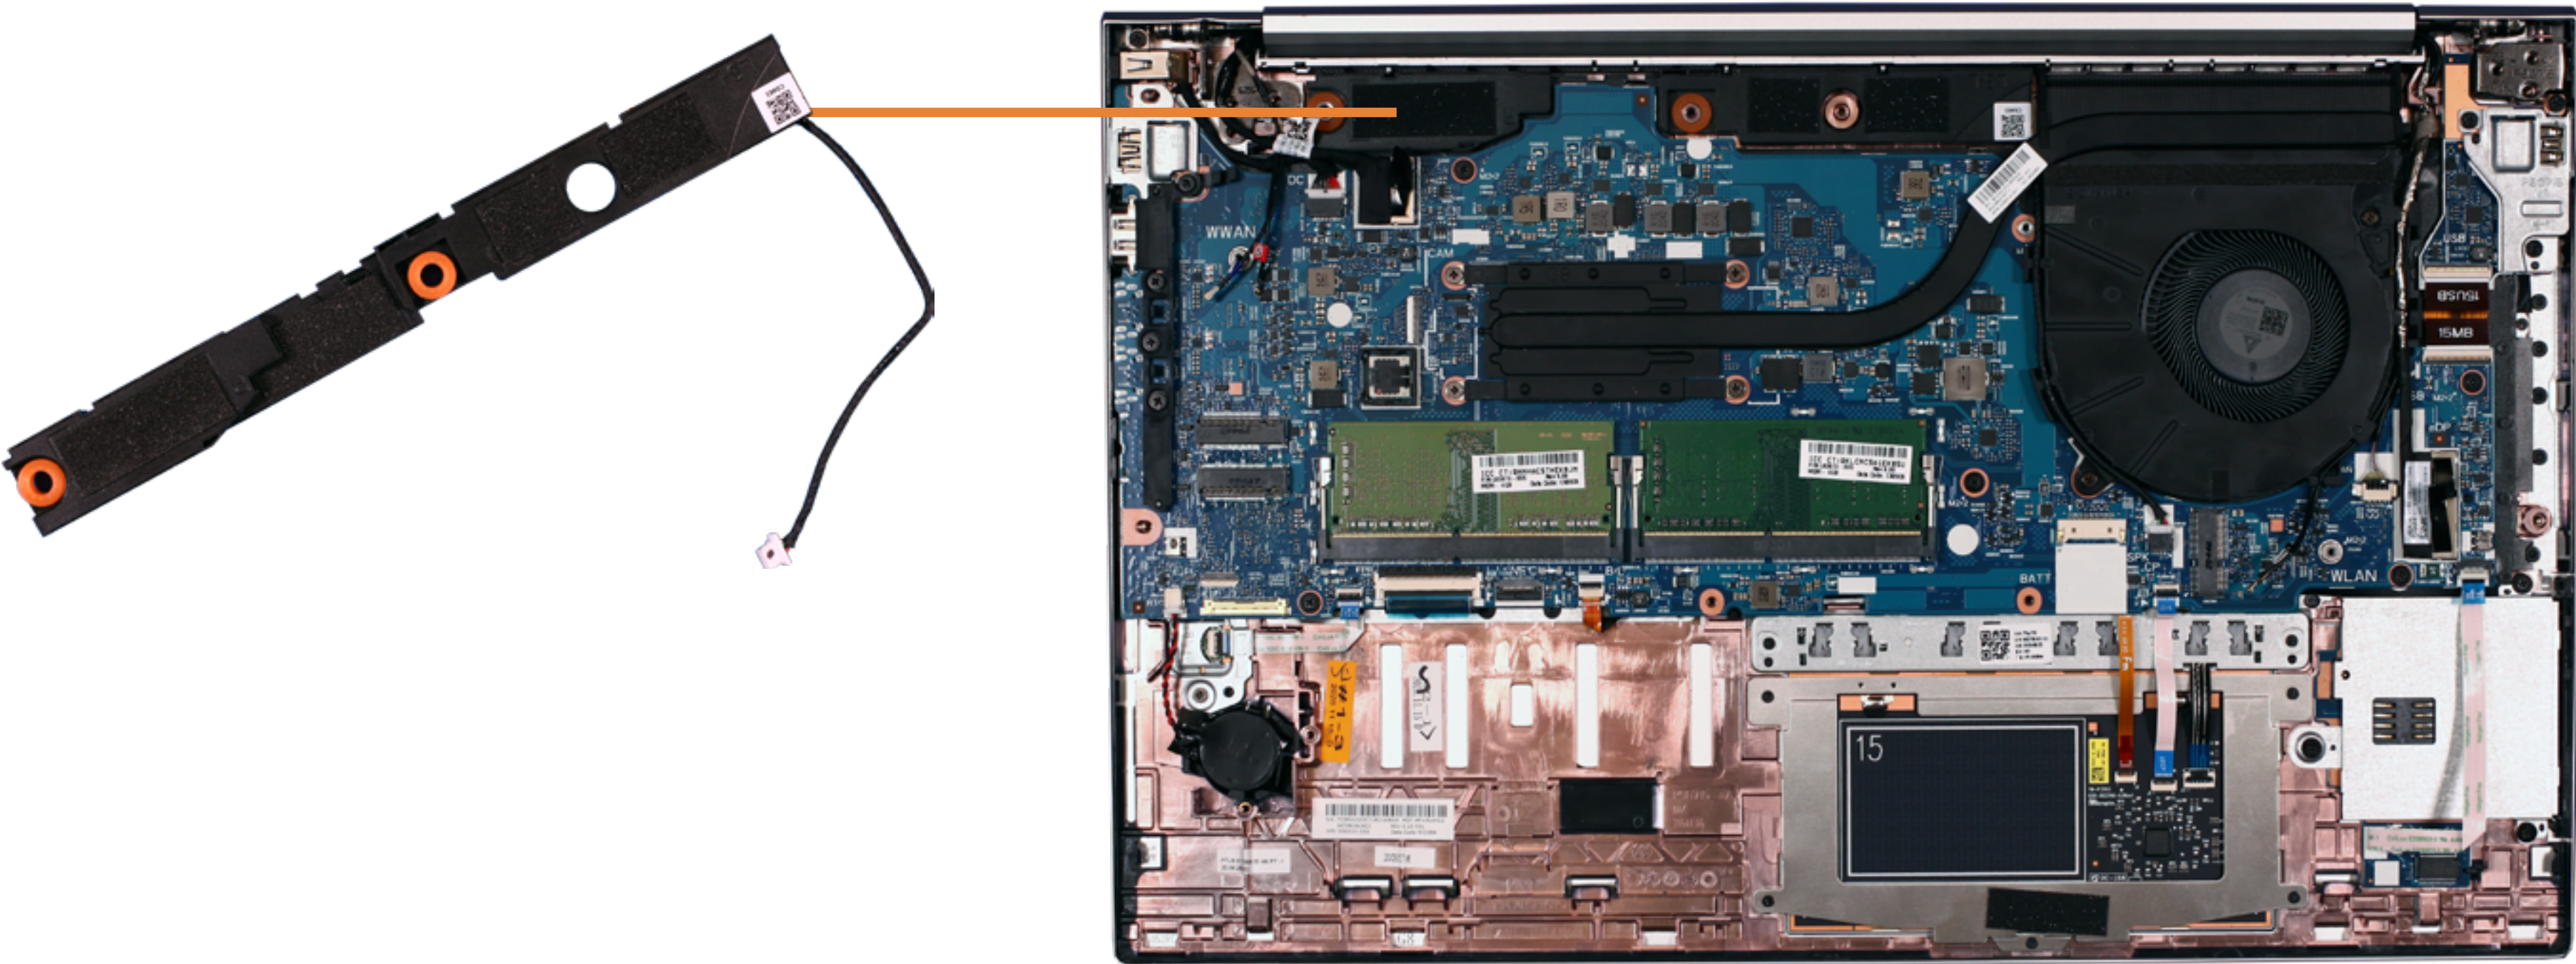


USB Board

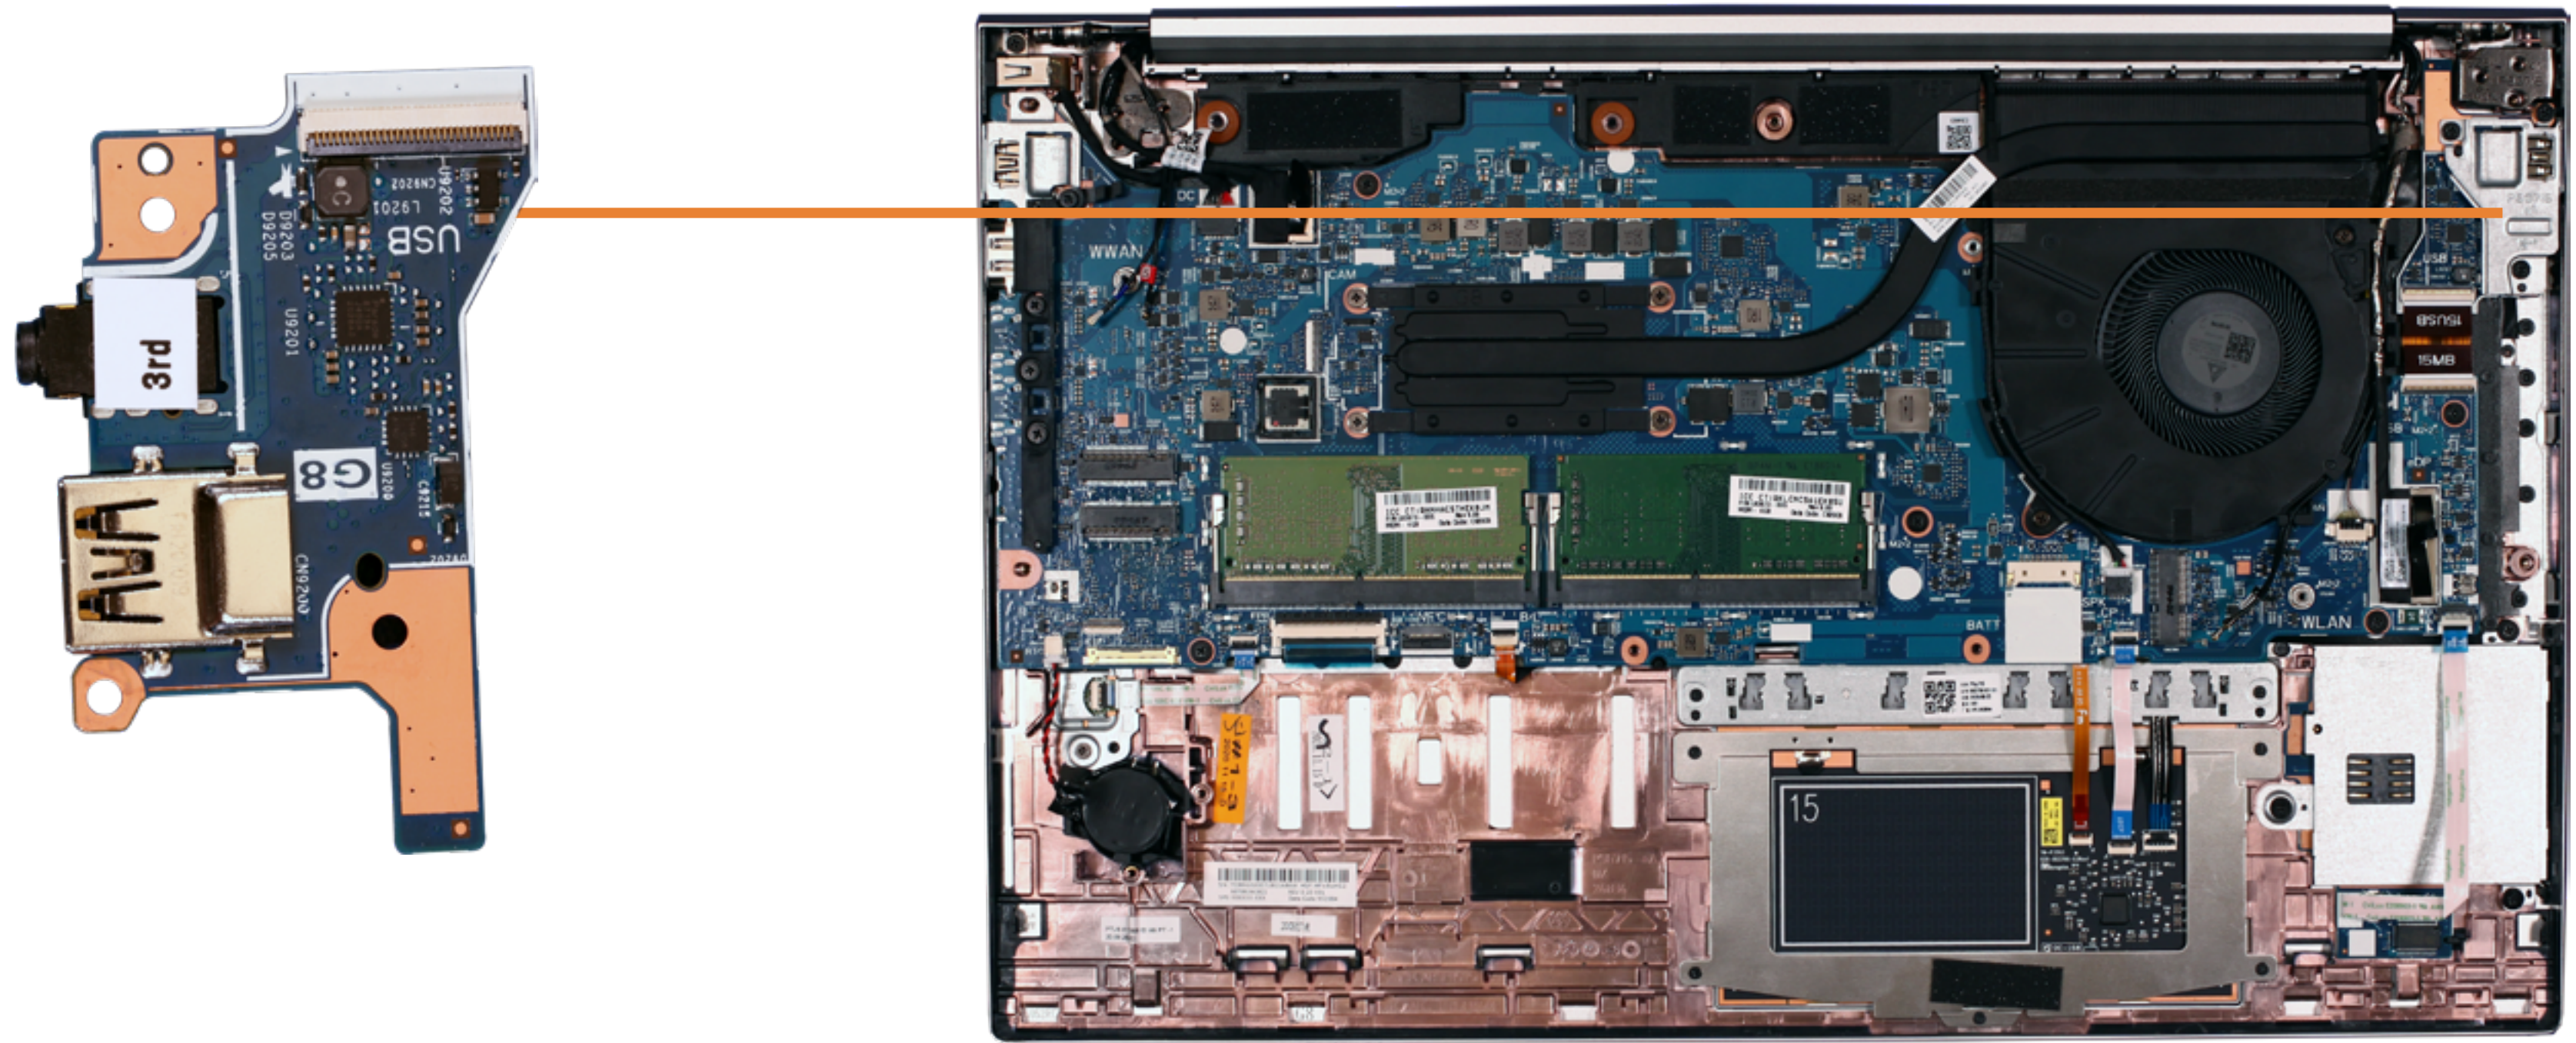


Smart Card Board

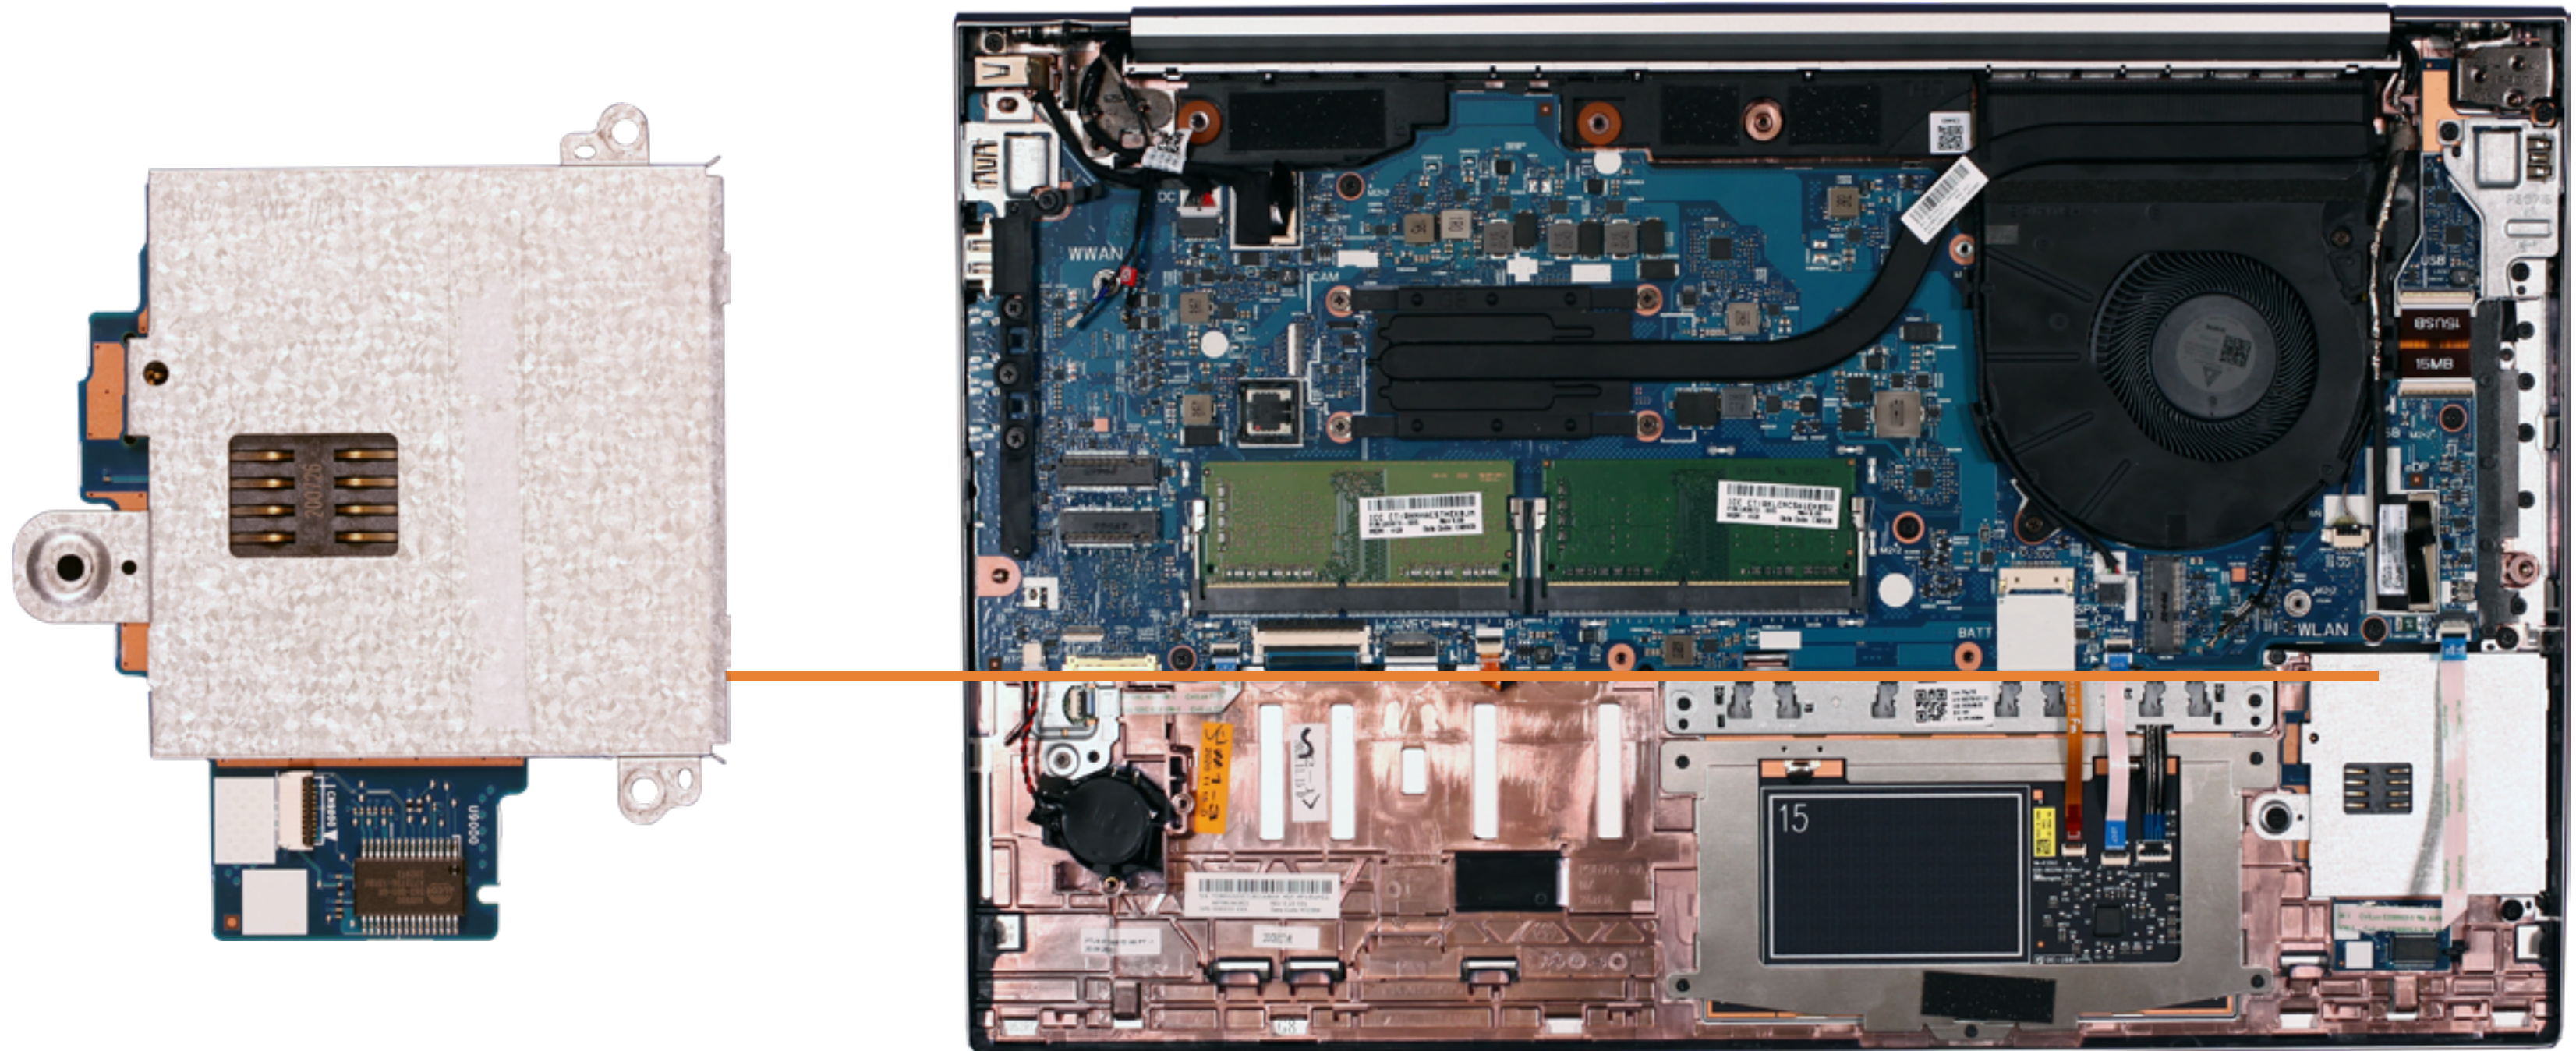


Real-time Clock Battery

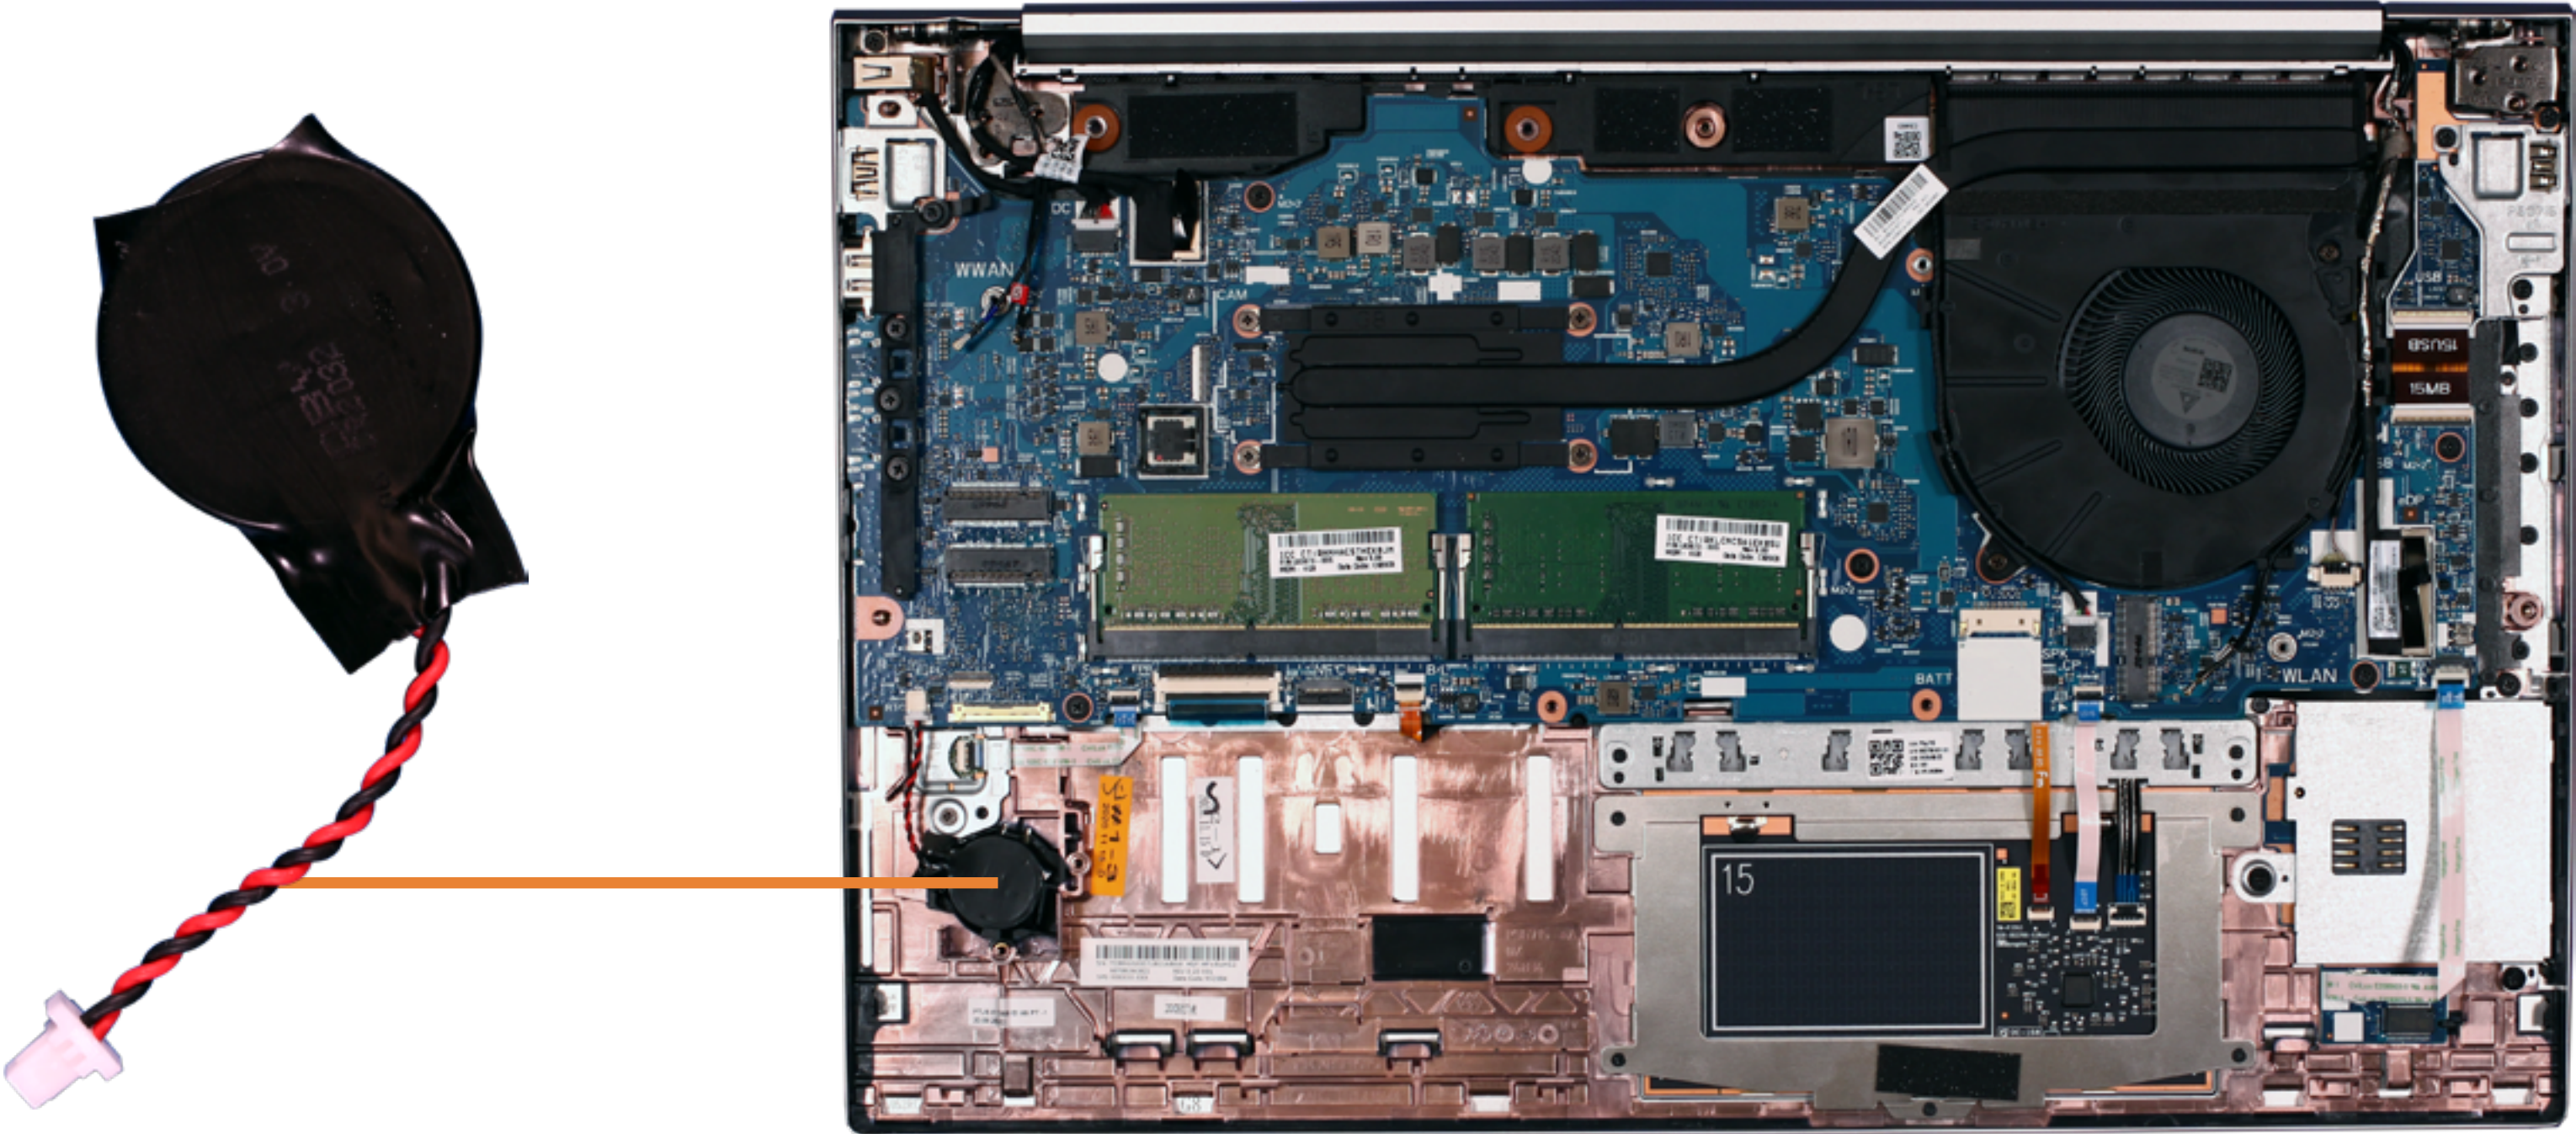



Fan

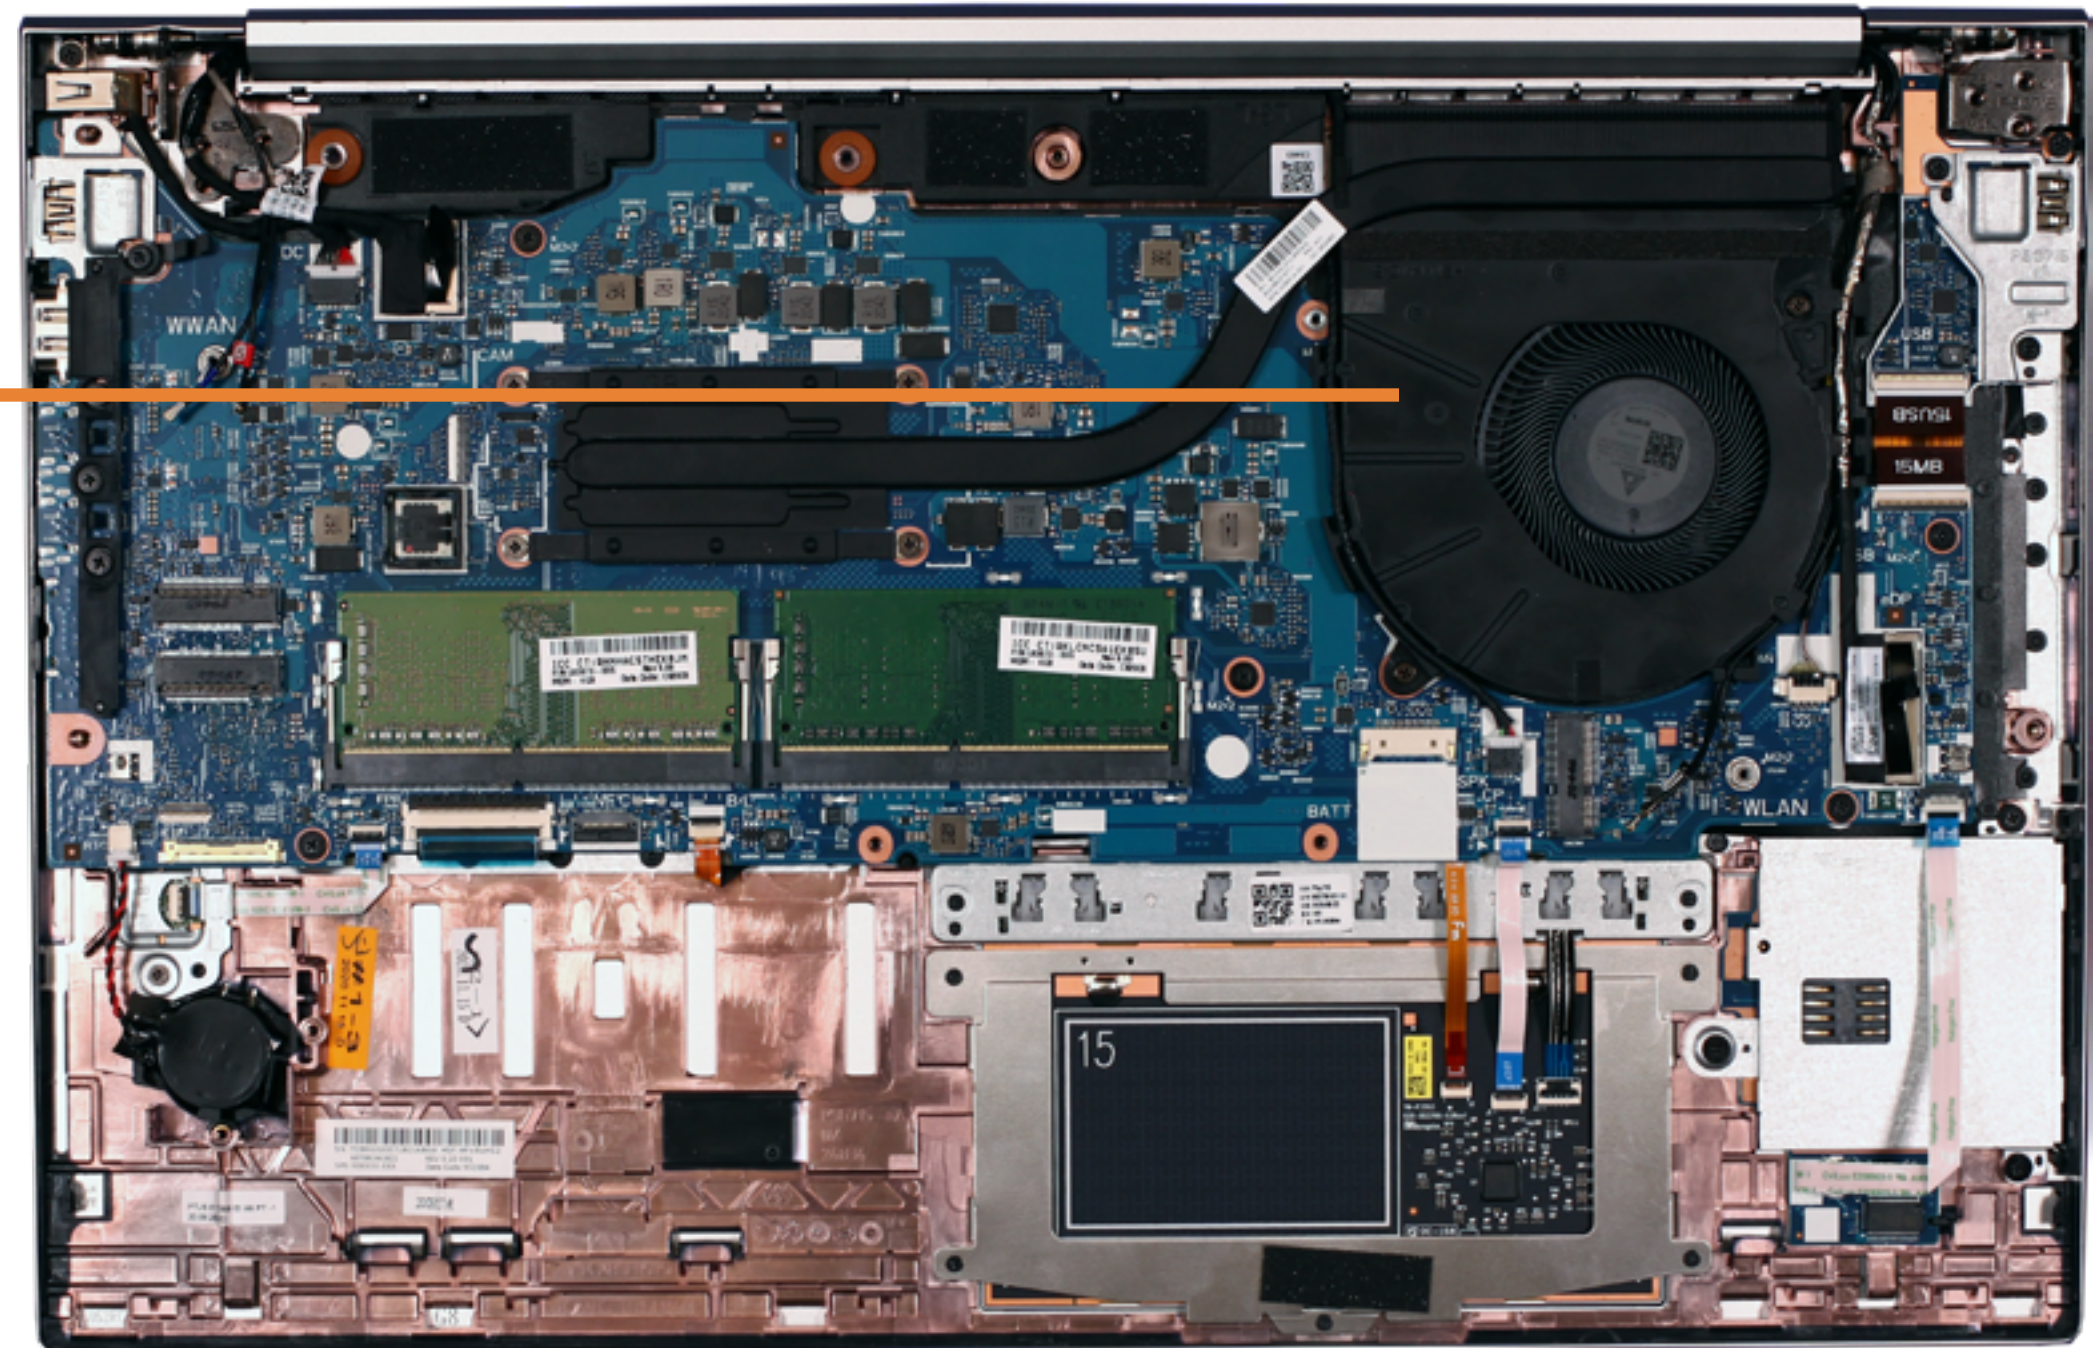


Heatsink

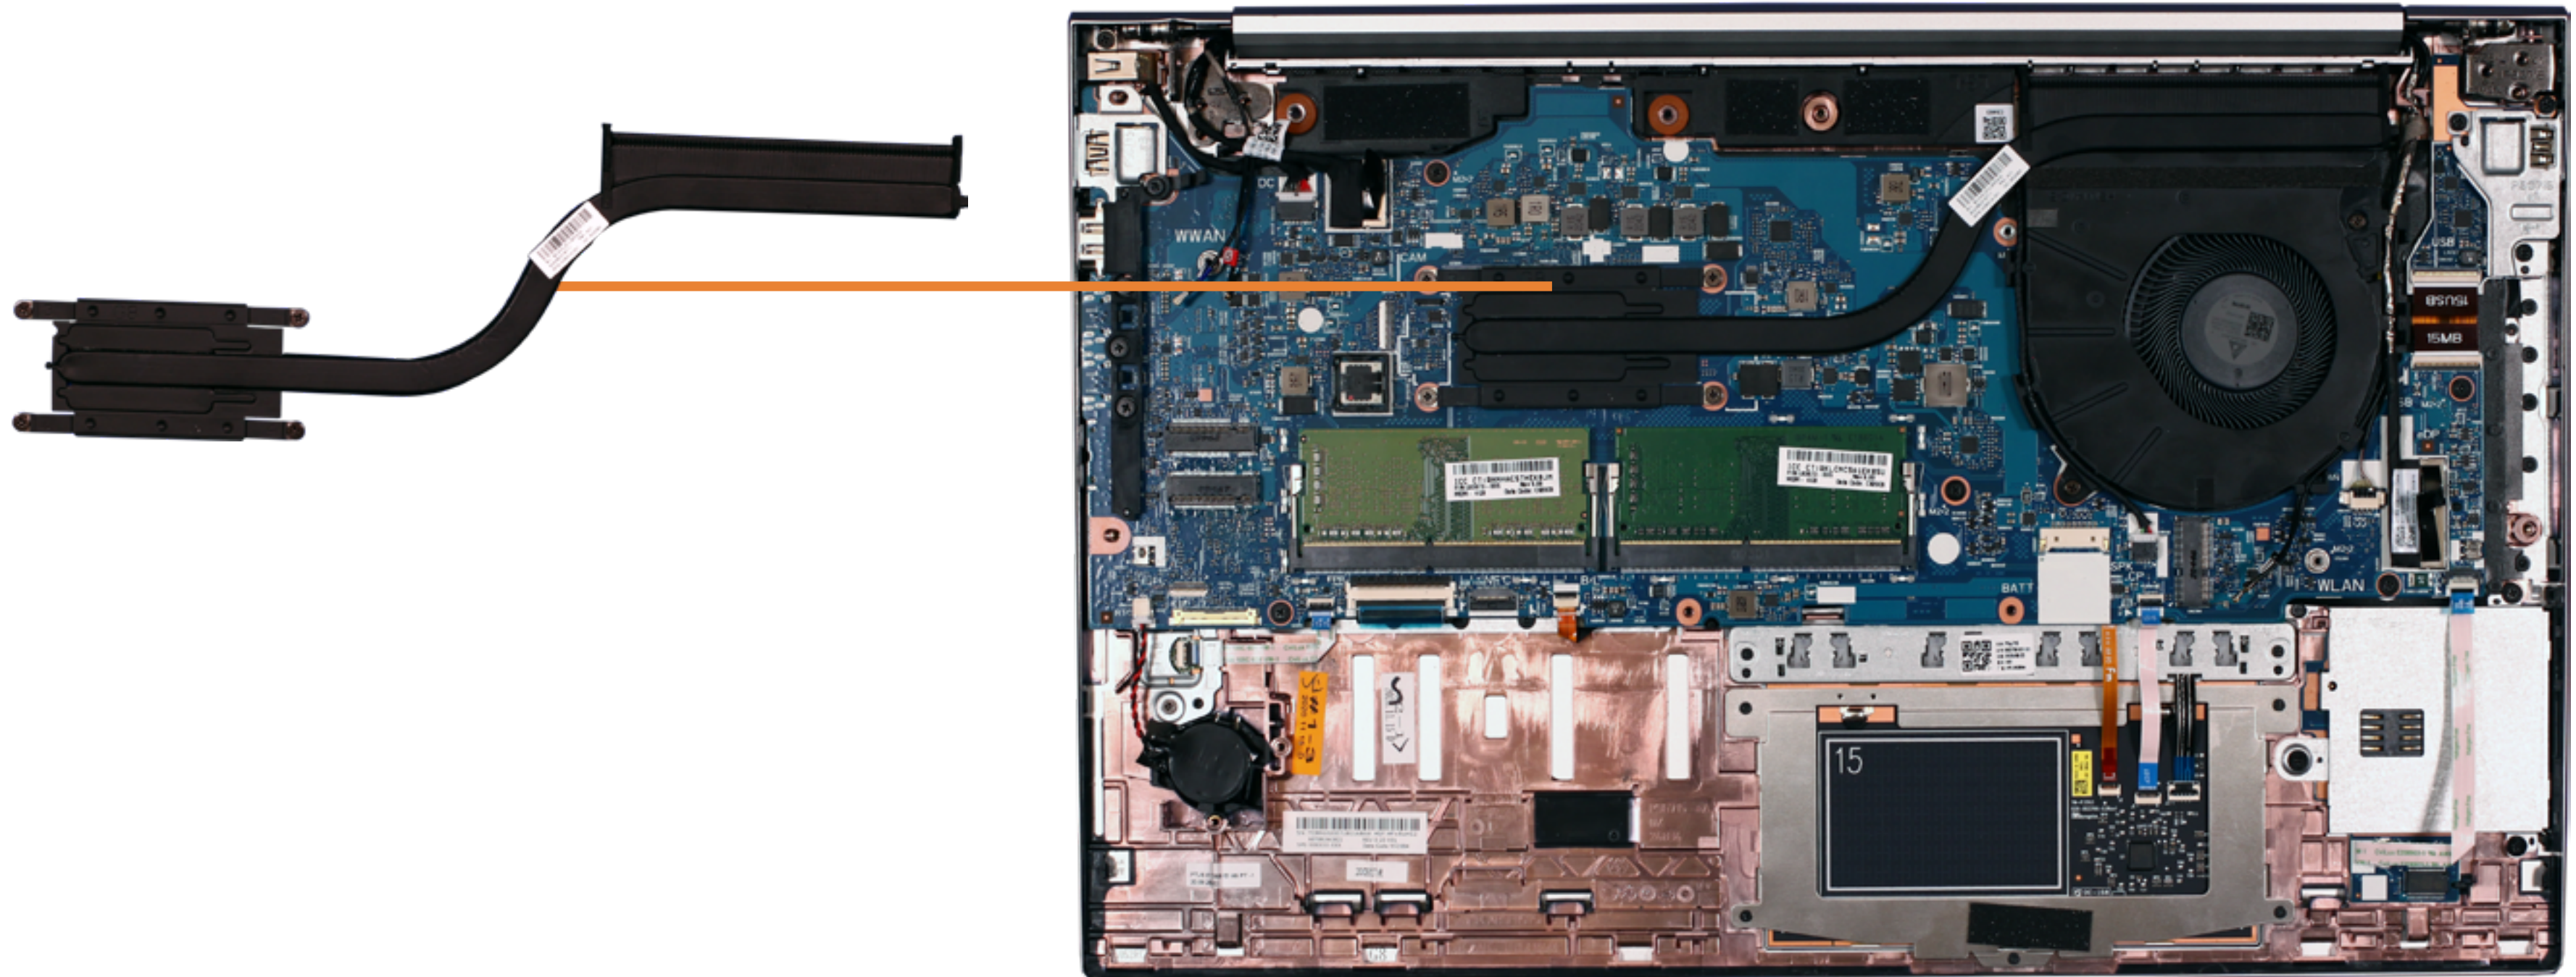

Motherboard

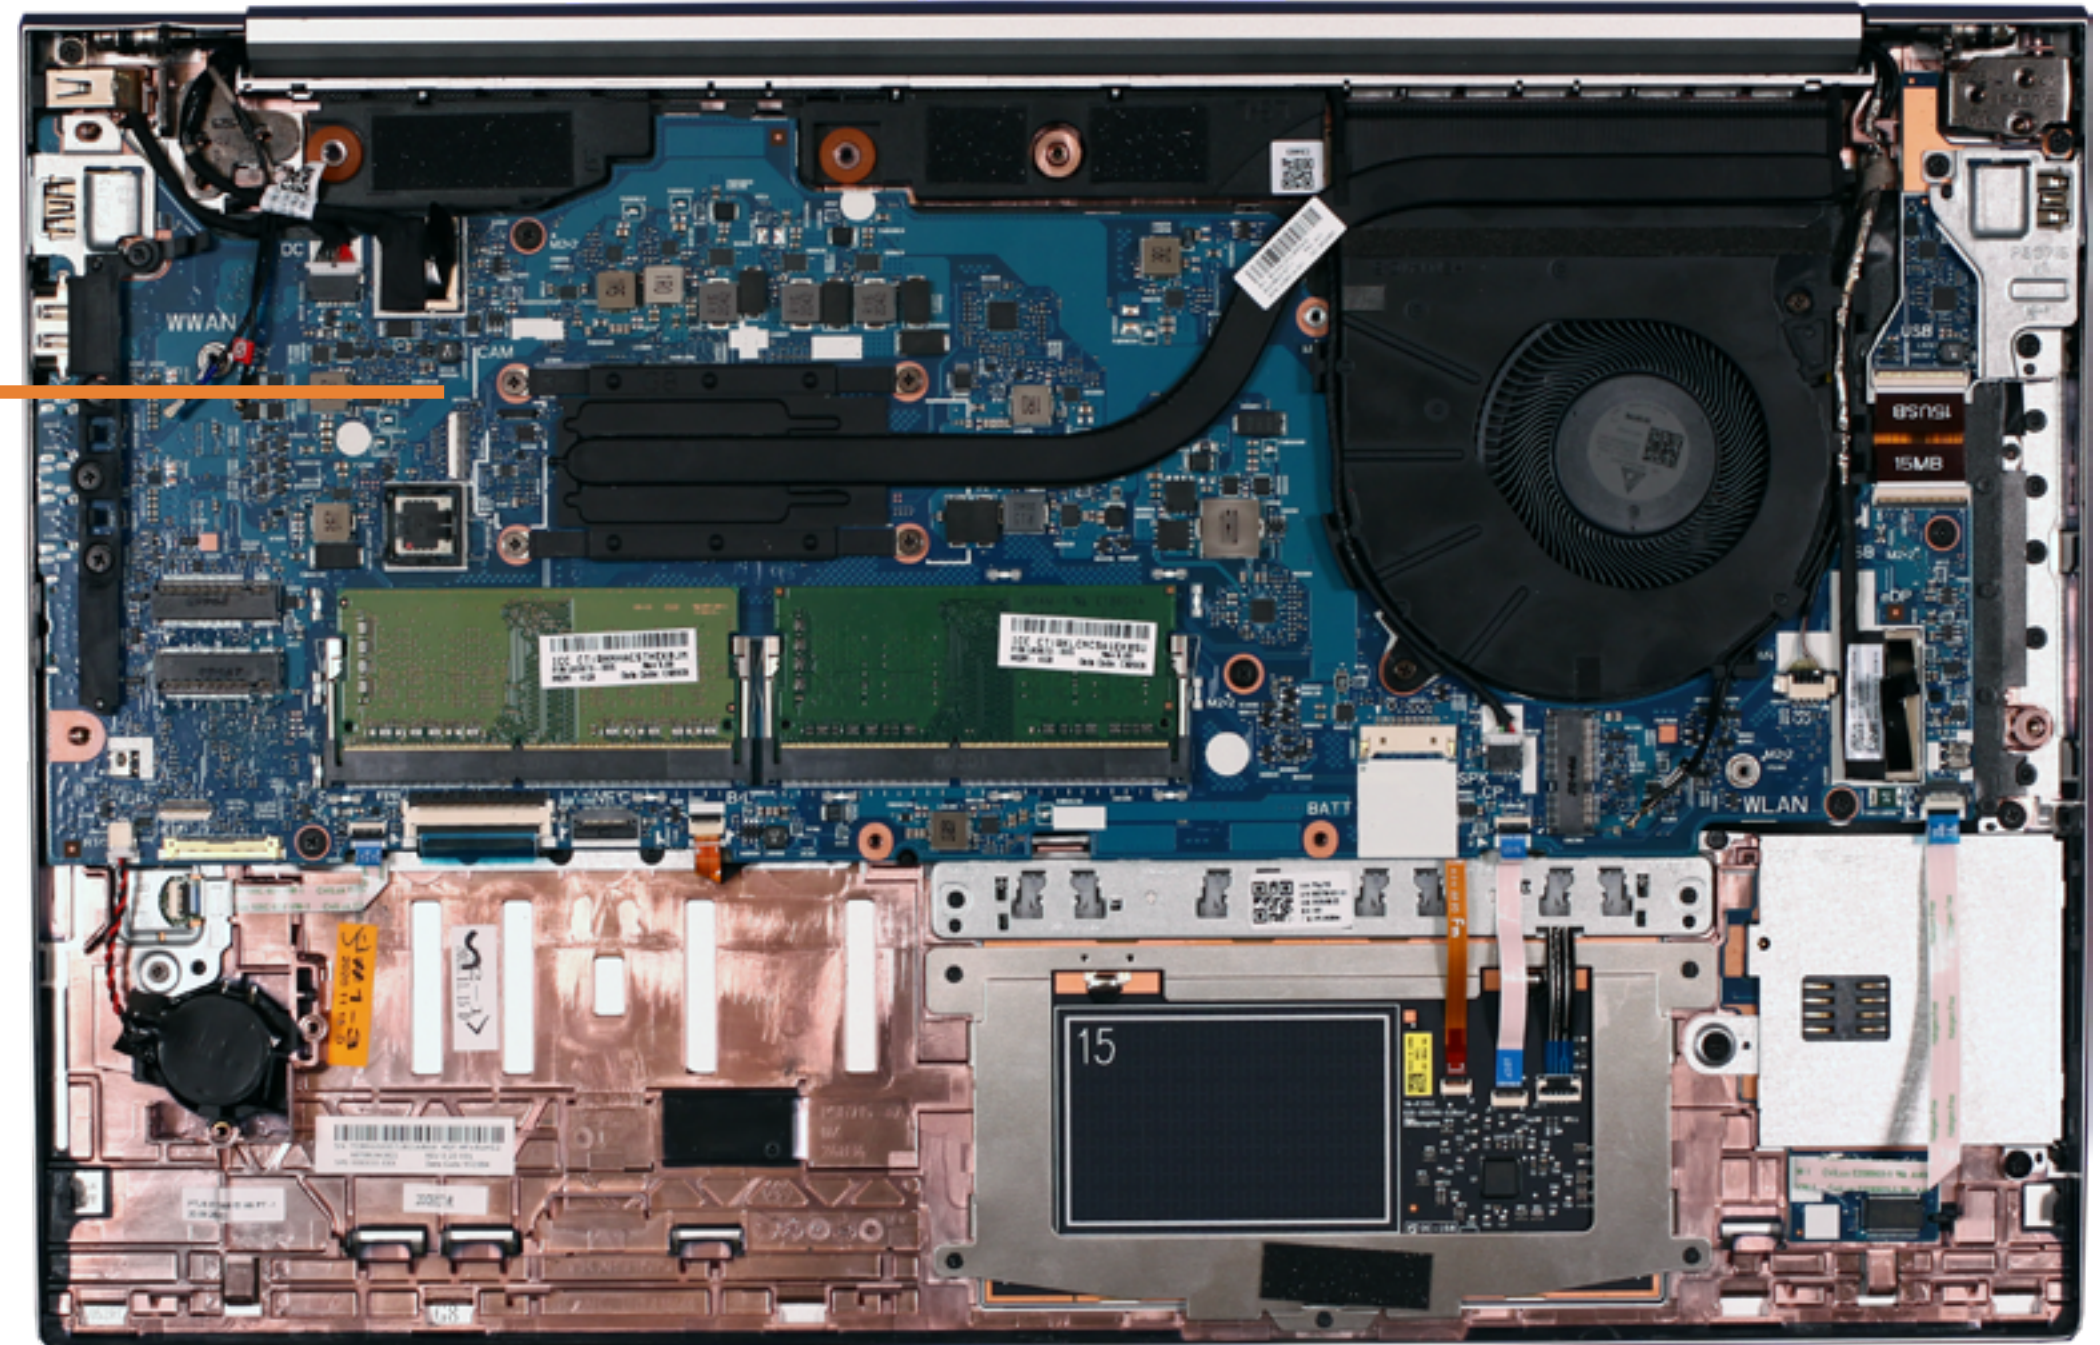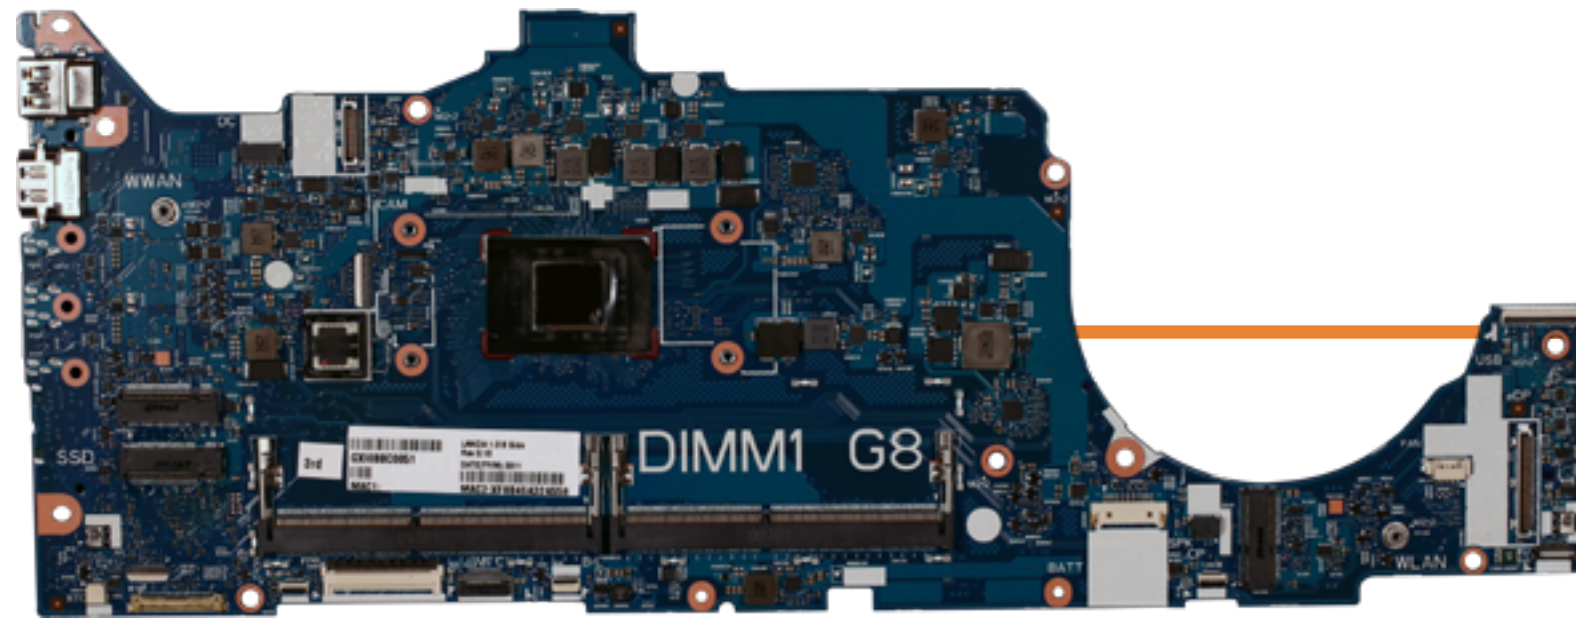

DC-in Connector

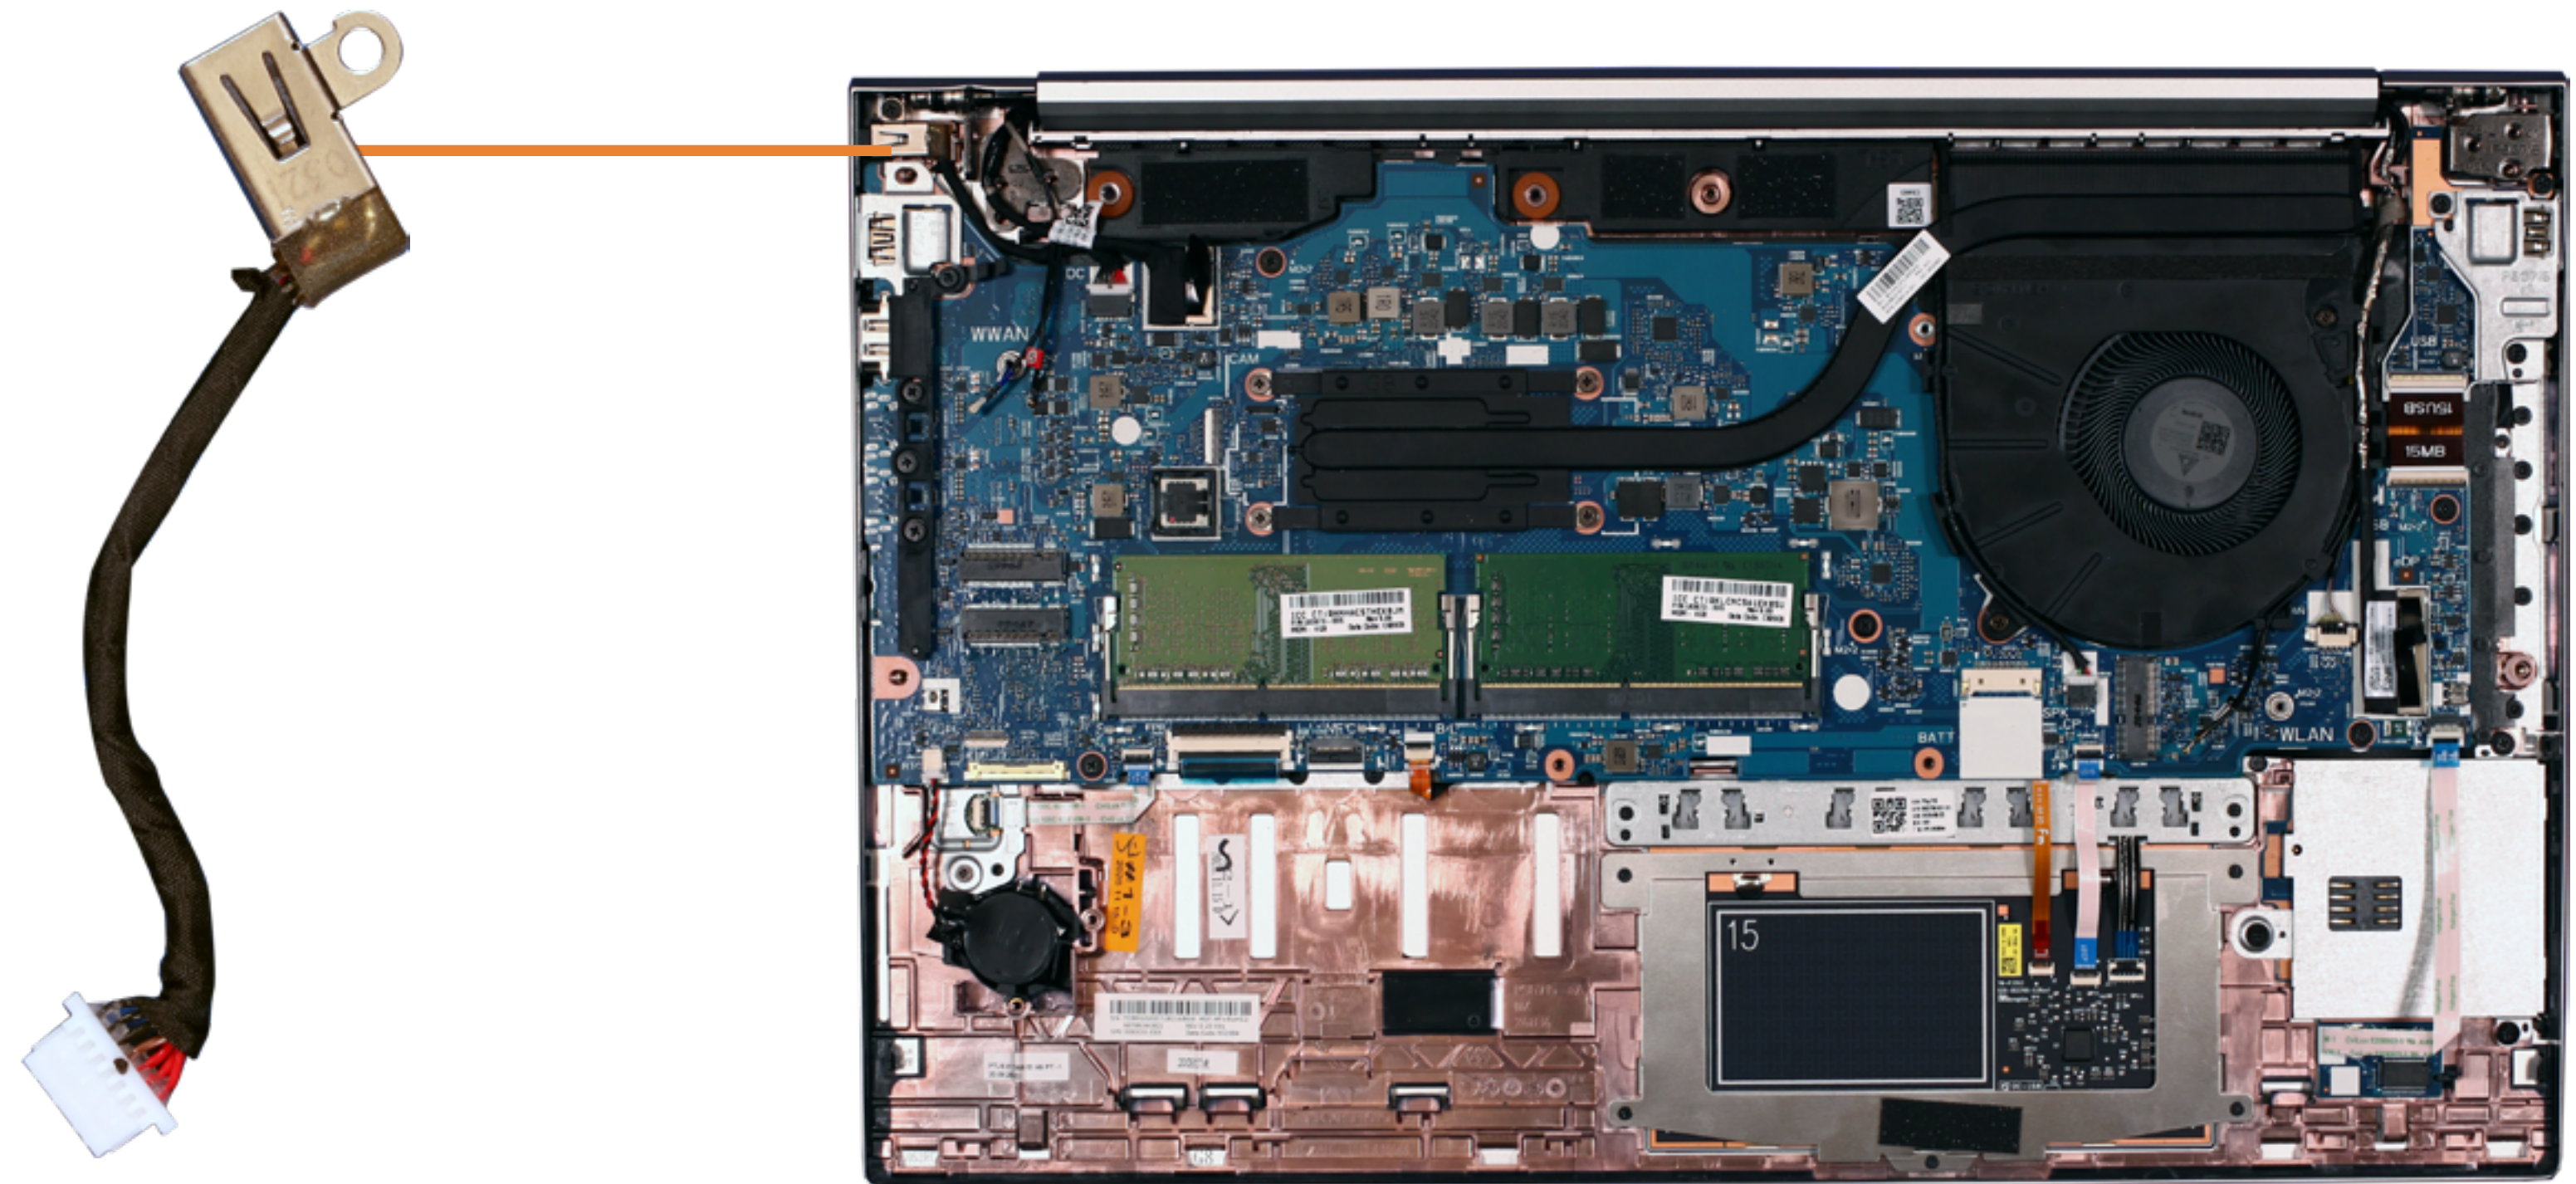

Display Panel Assembly



Display Bezel

Display Bezel



Display Panel



Display Panel




Display Panel Hinges




Hub Board

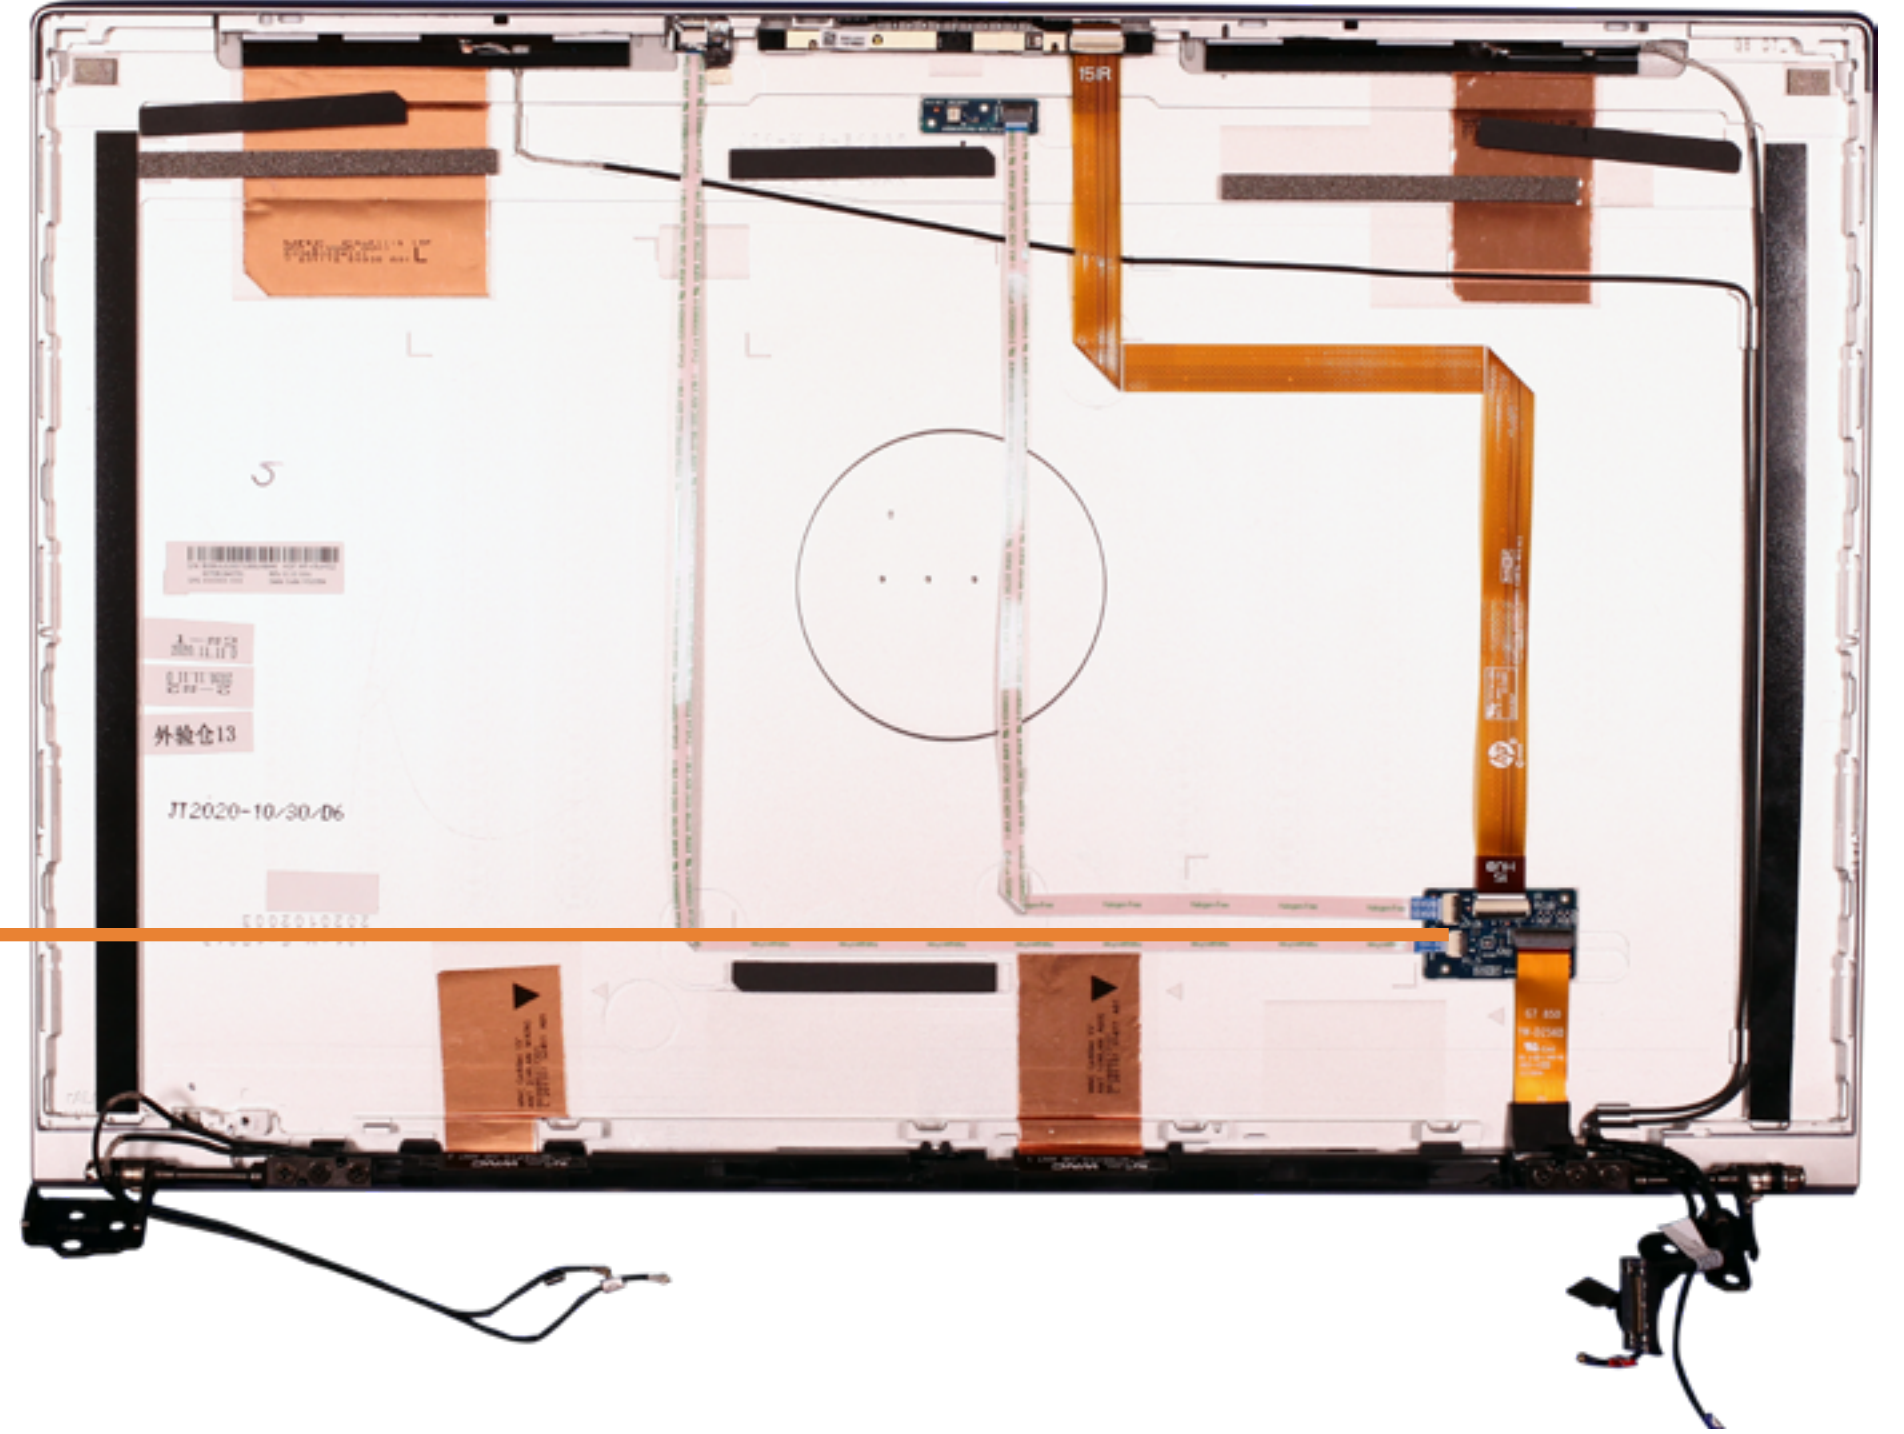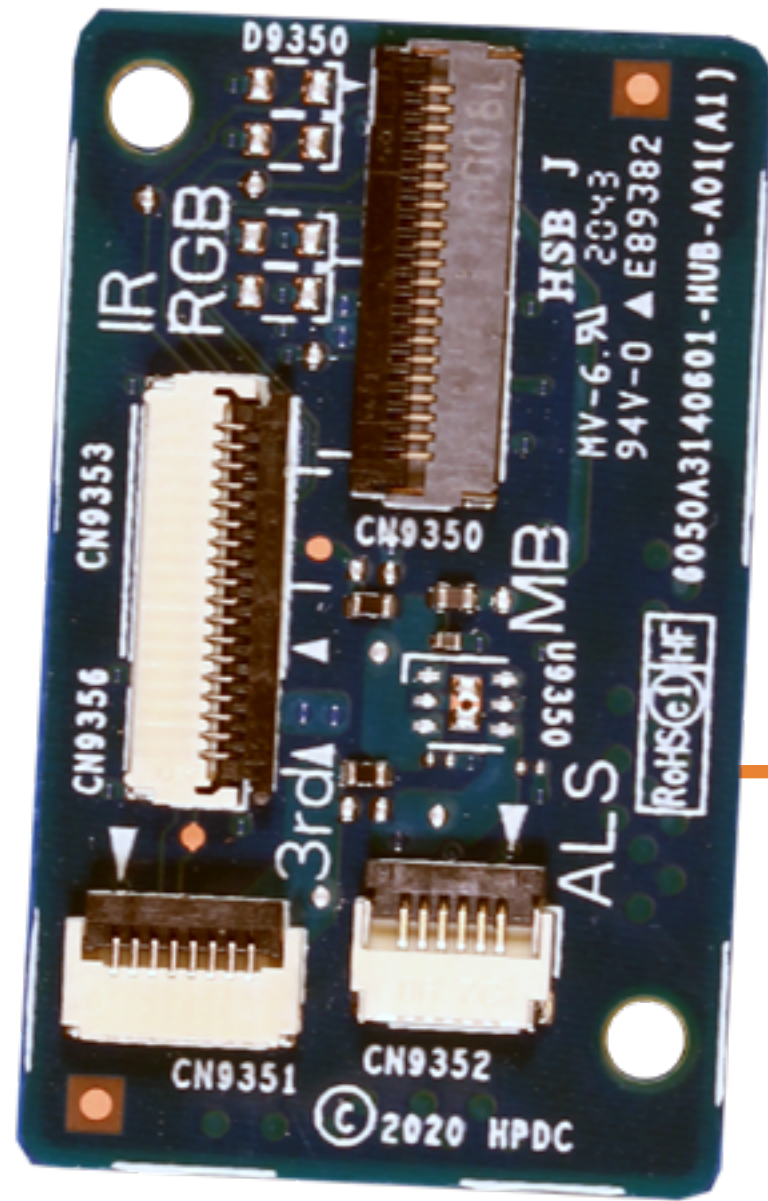

ALS Board

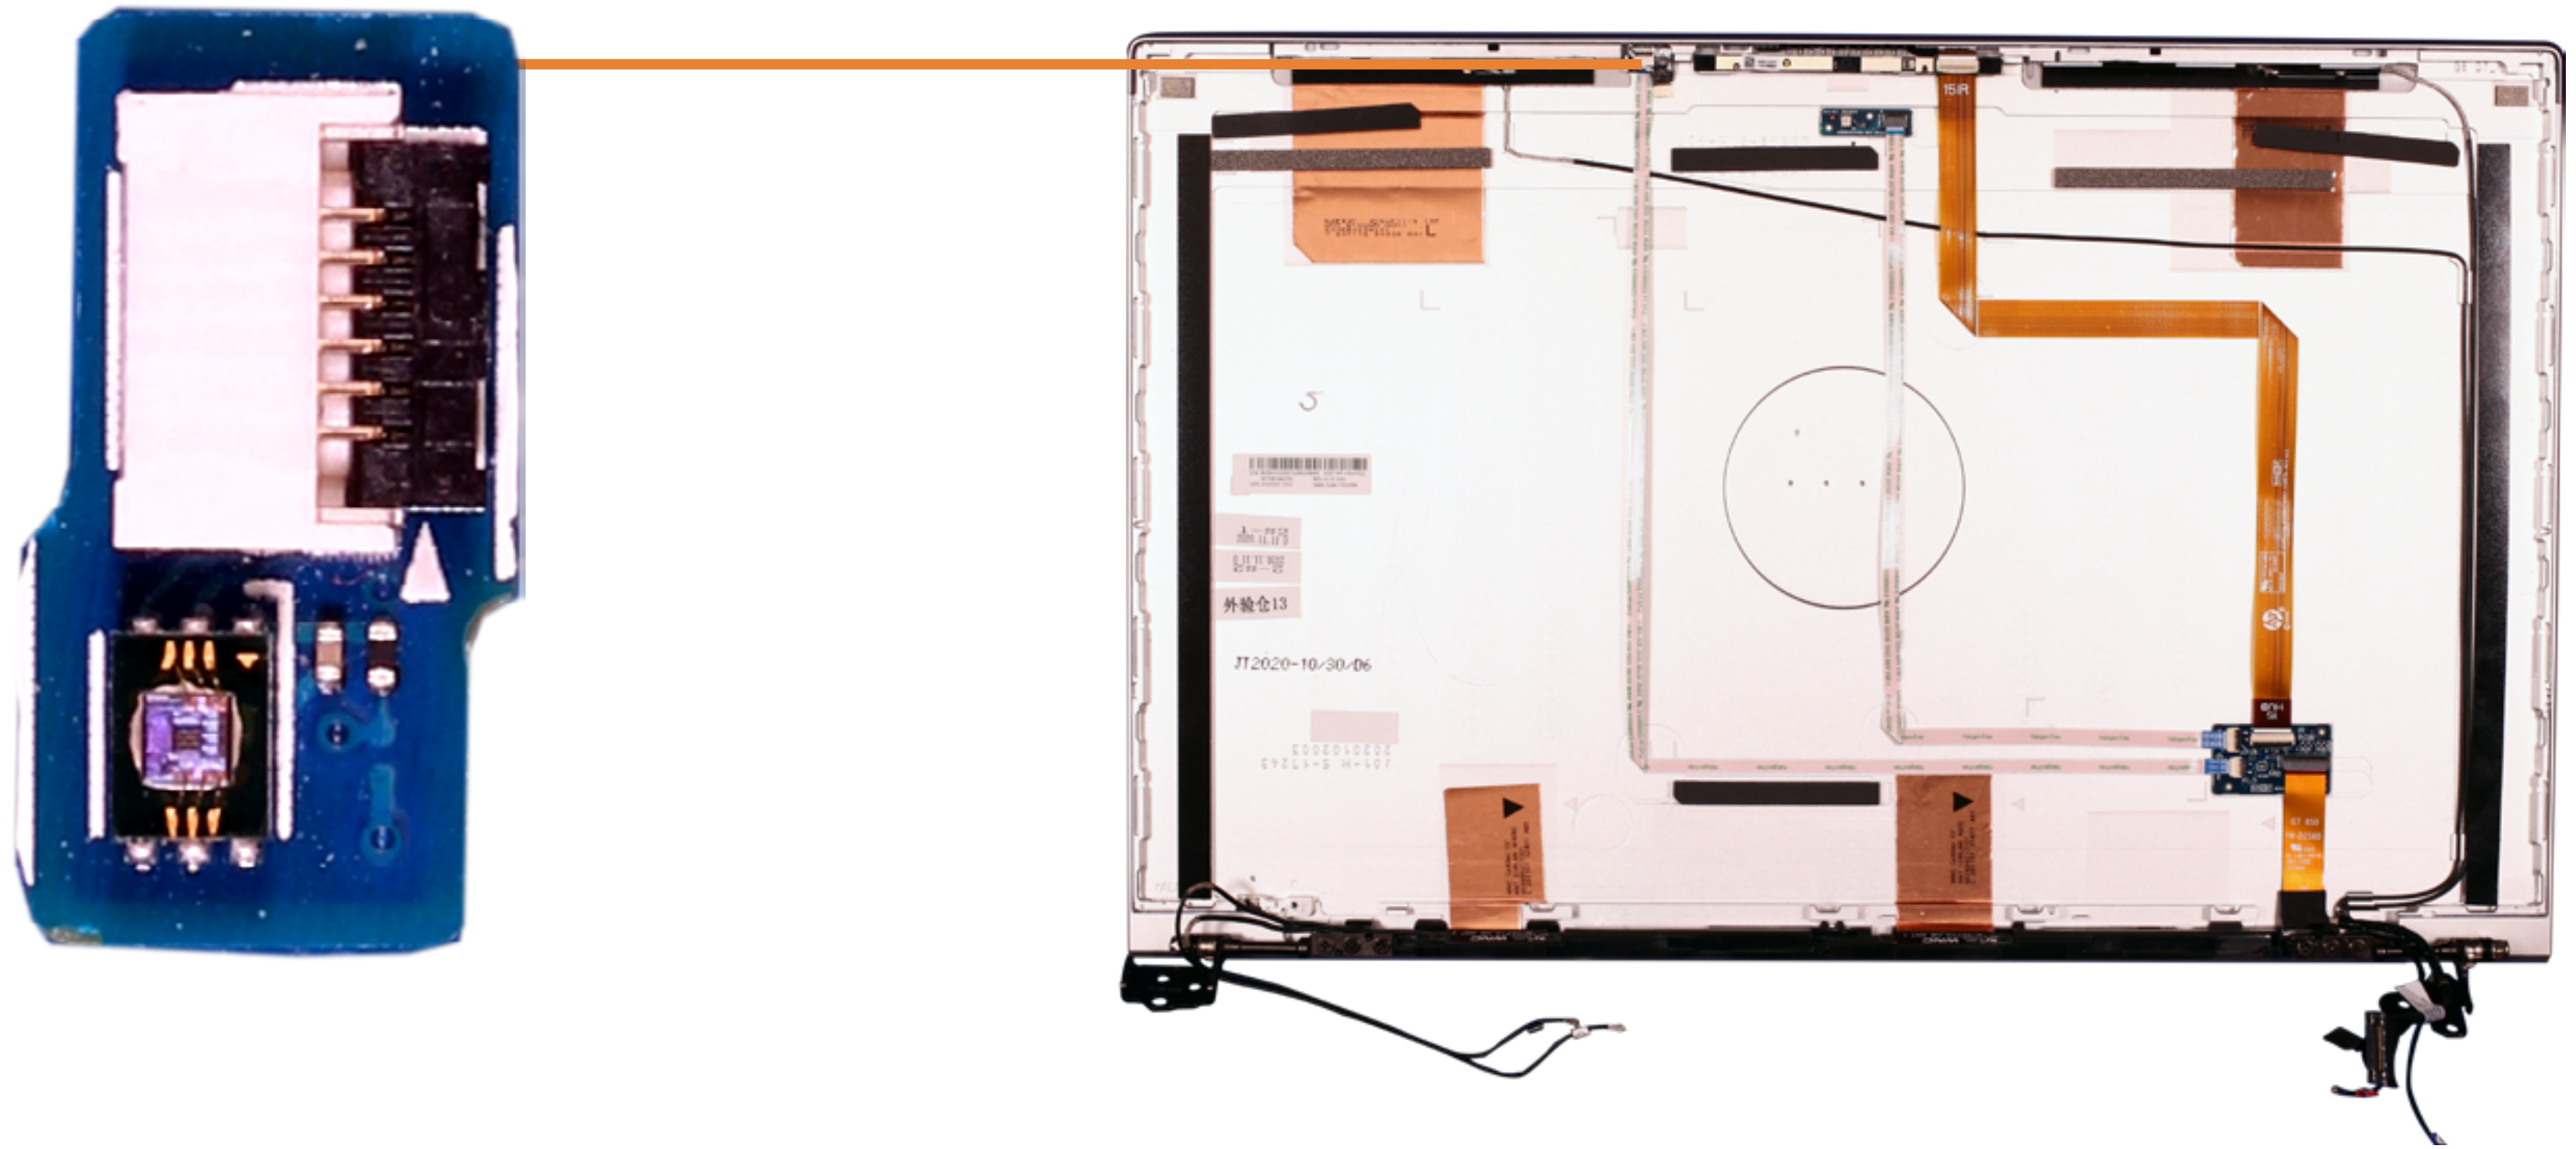

3rd Microphone

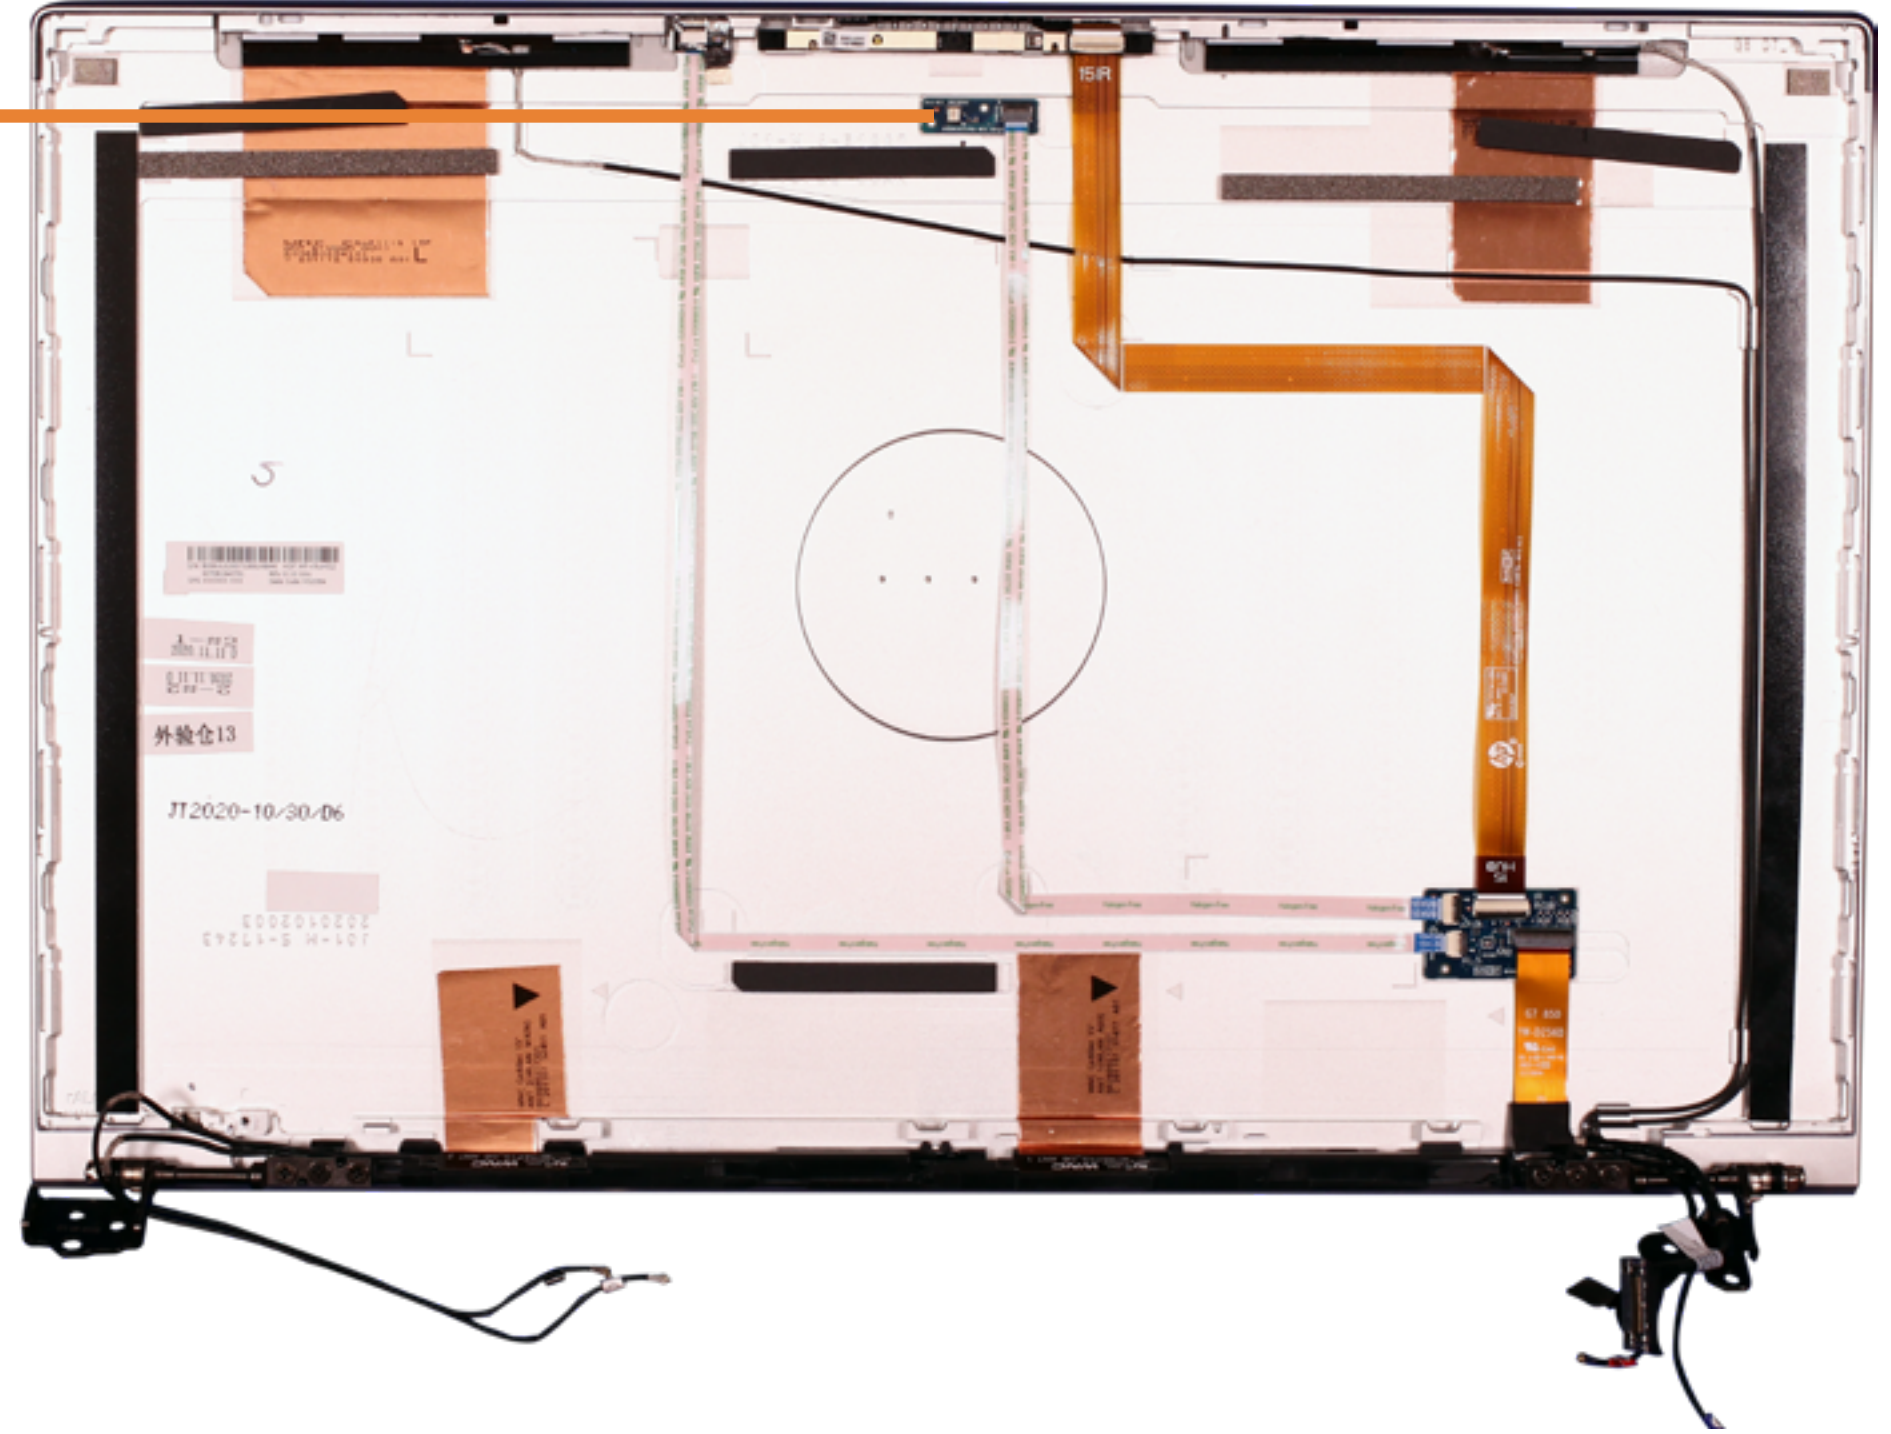

Webcam

