

Interactive Part Locator

Victus by HP 16 Laptop PC

Welcome to the interactive part locator for the
Victus by HP 16 Laptop PC

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left

Right

Rear


Internal

Parts List

Front View



Left View

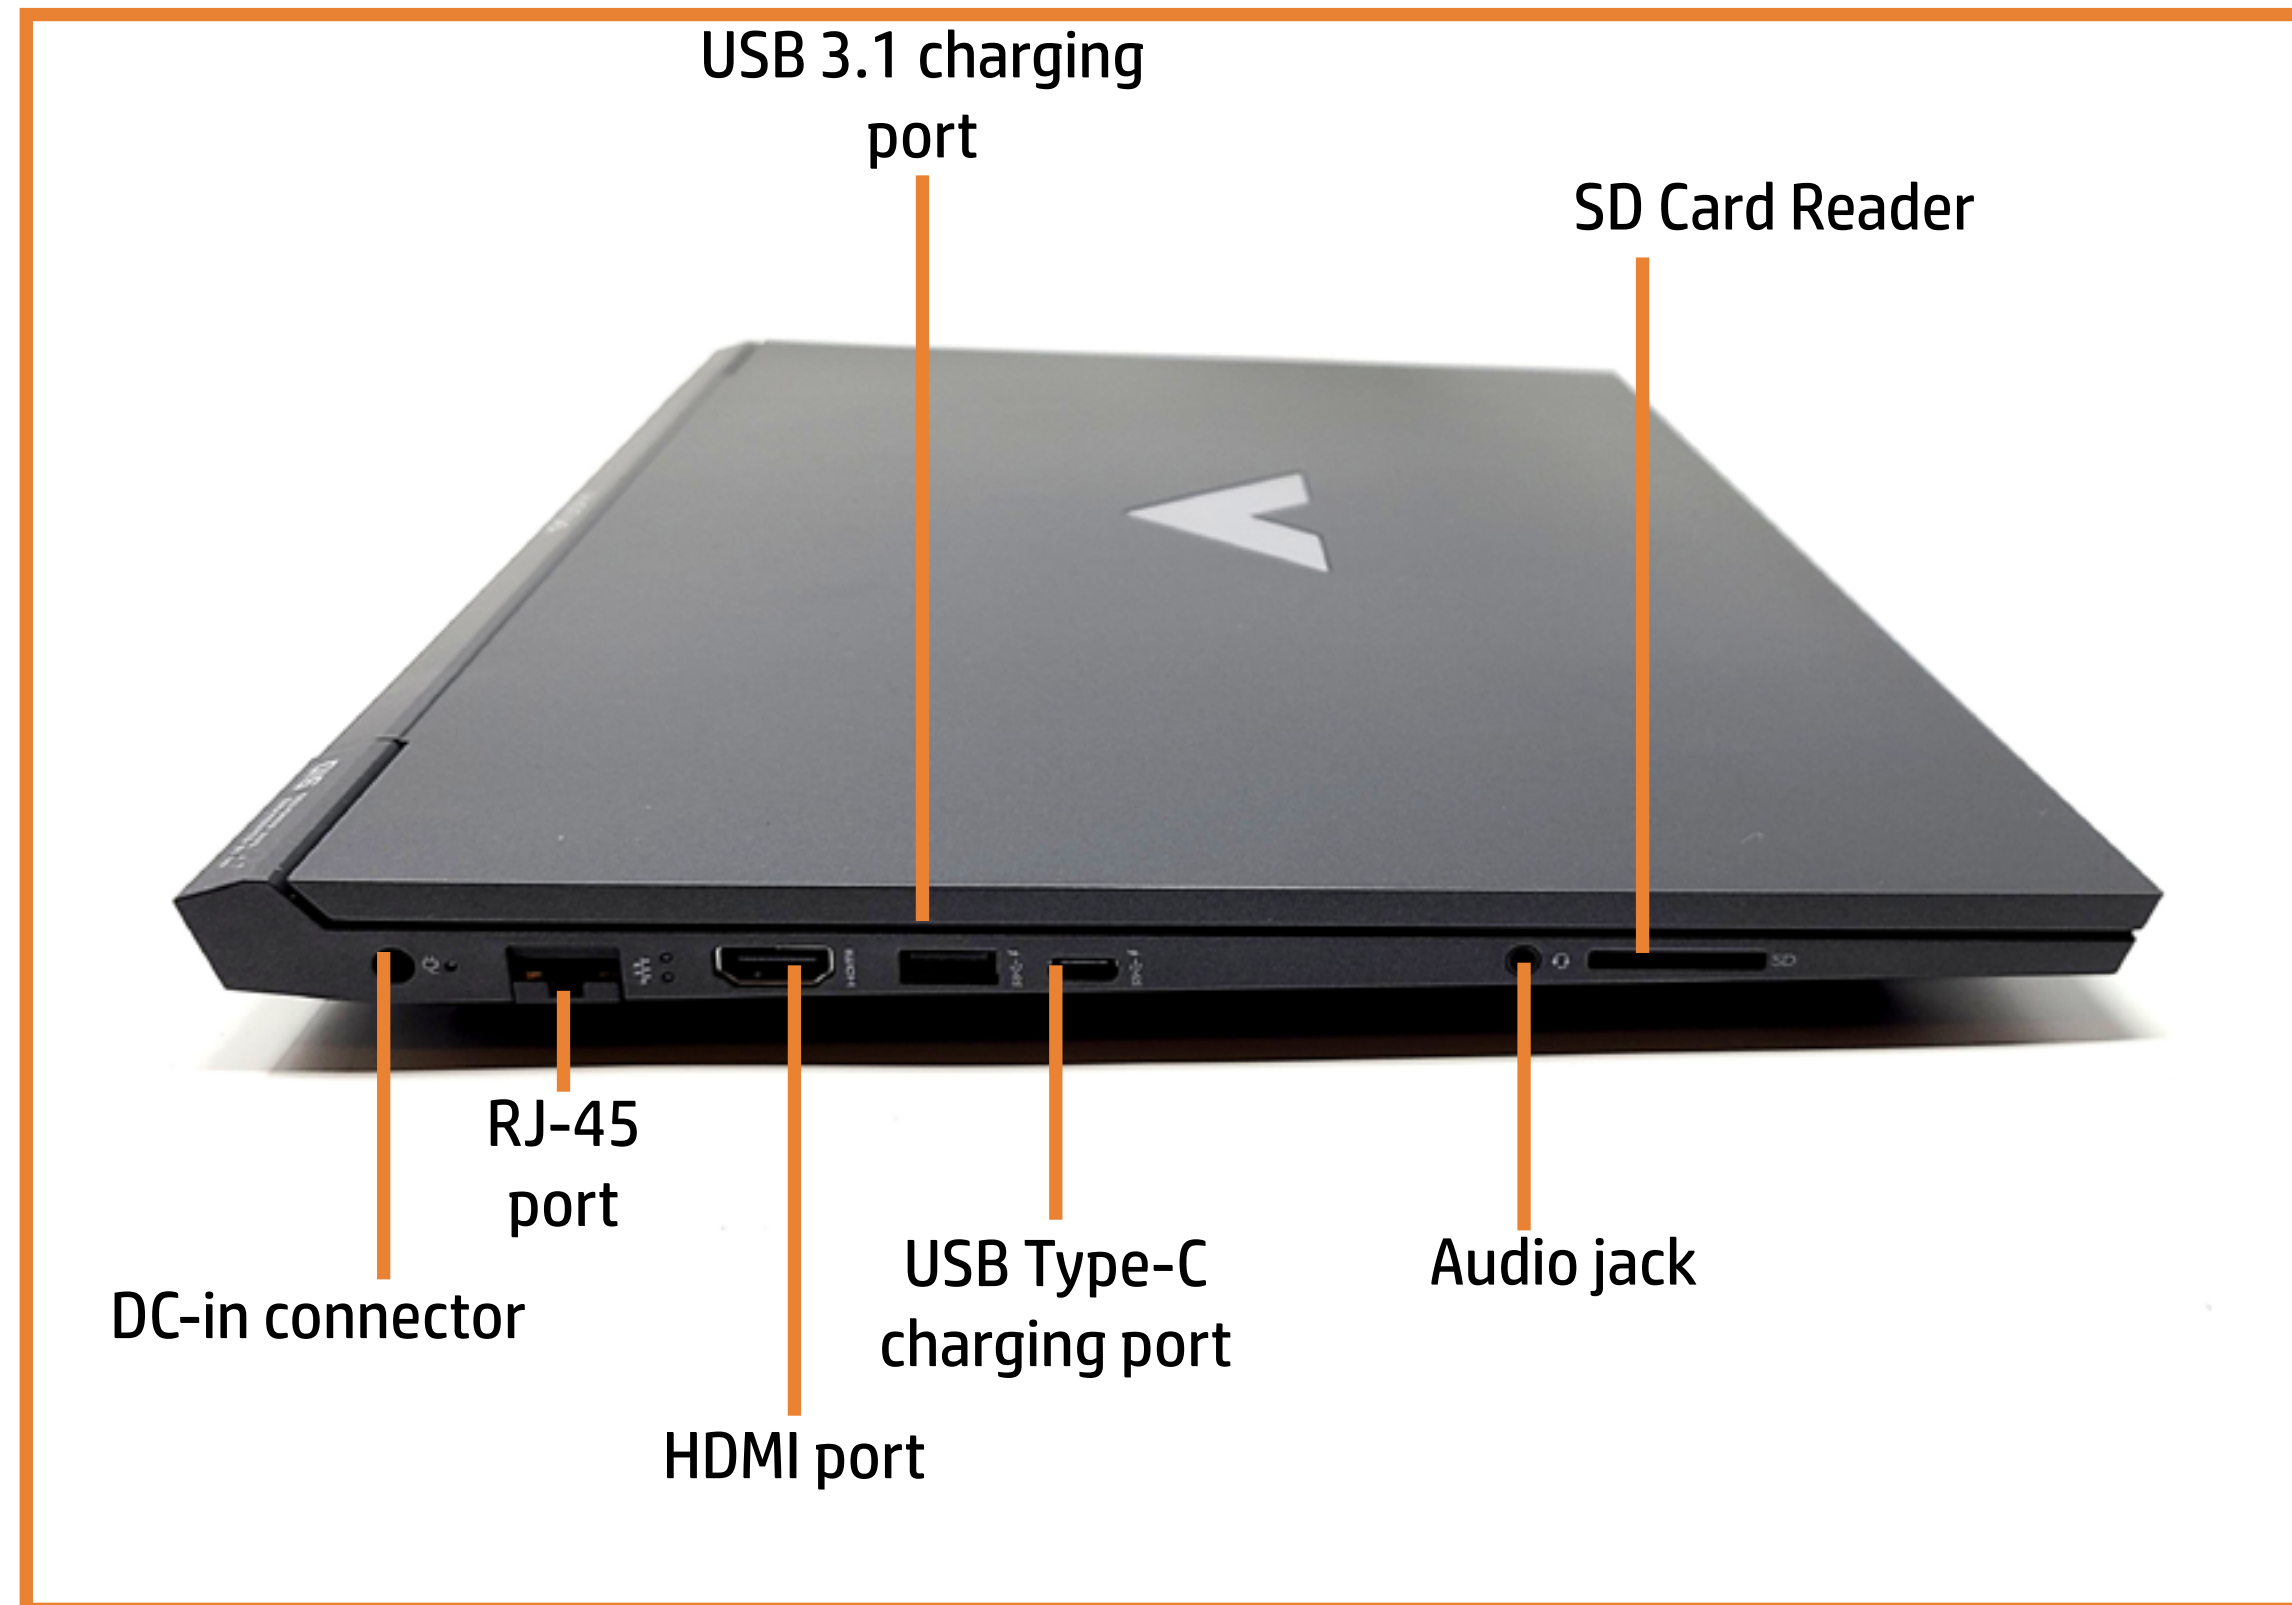


Right View



Rear View




Internal View 1

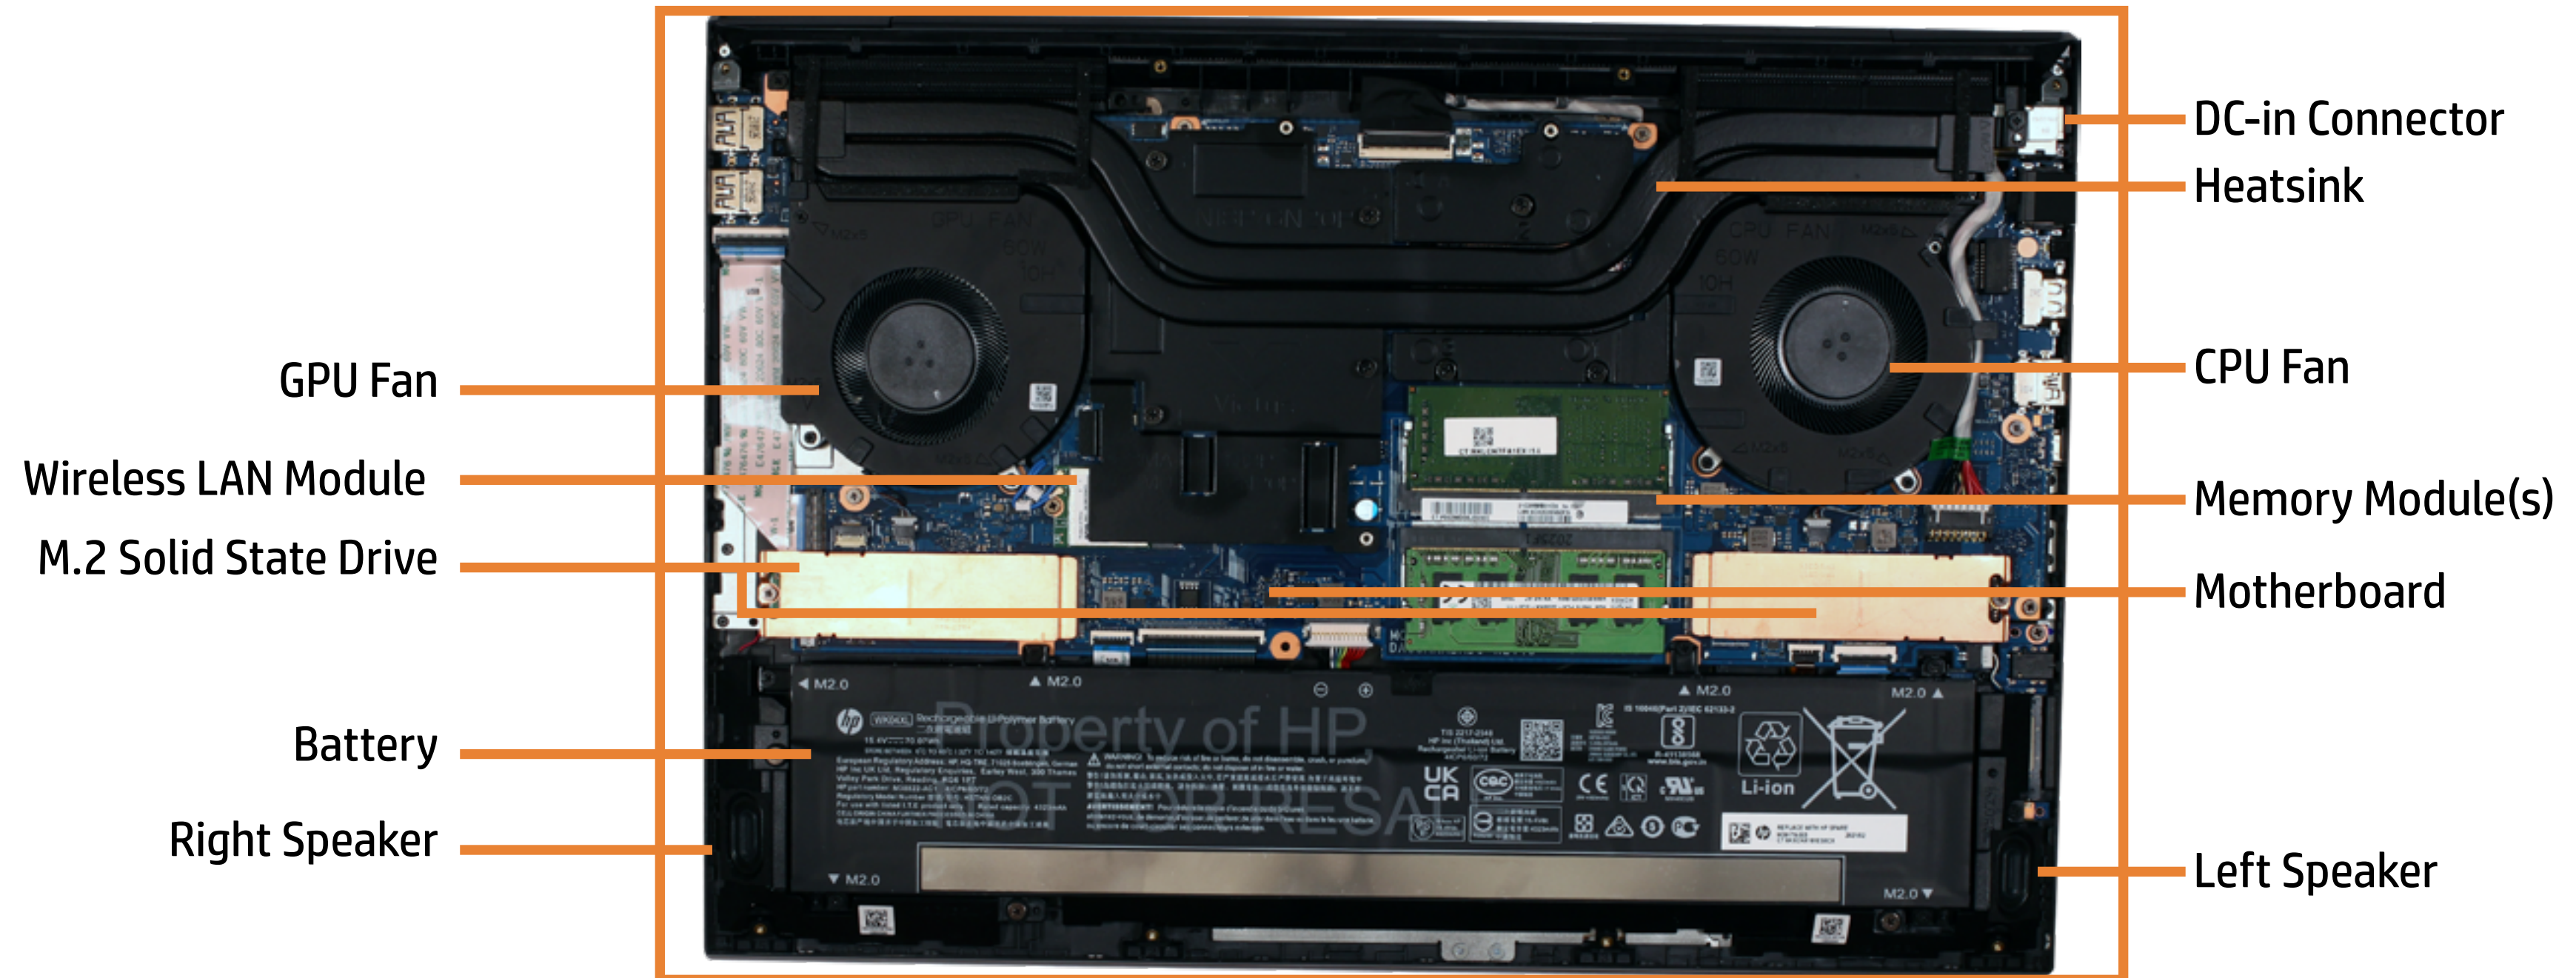

Internal View 2

USB Board

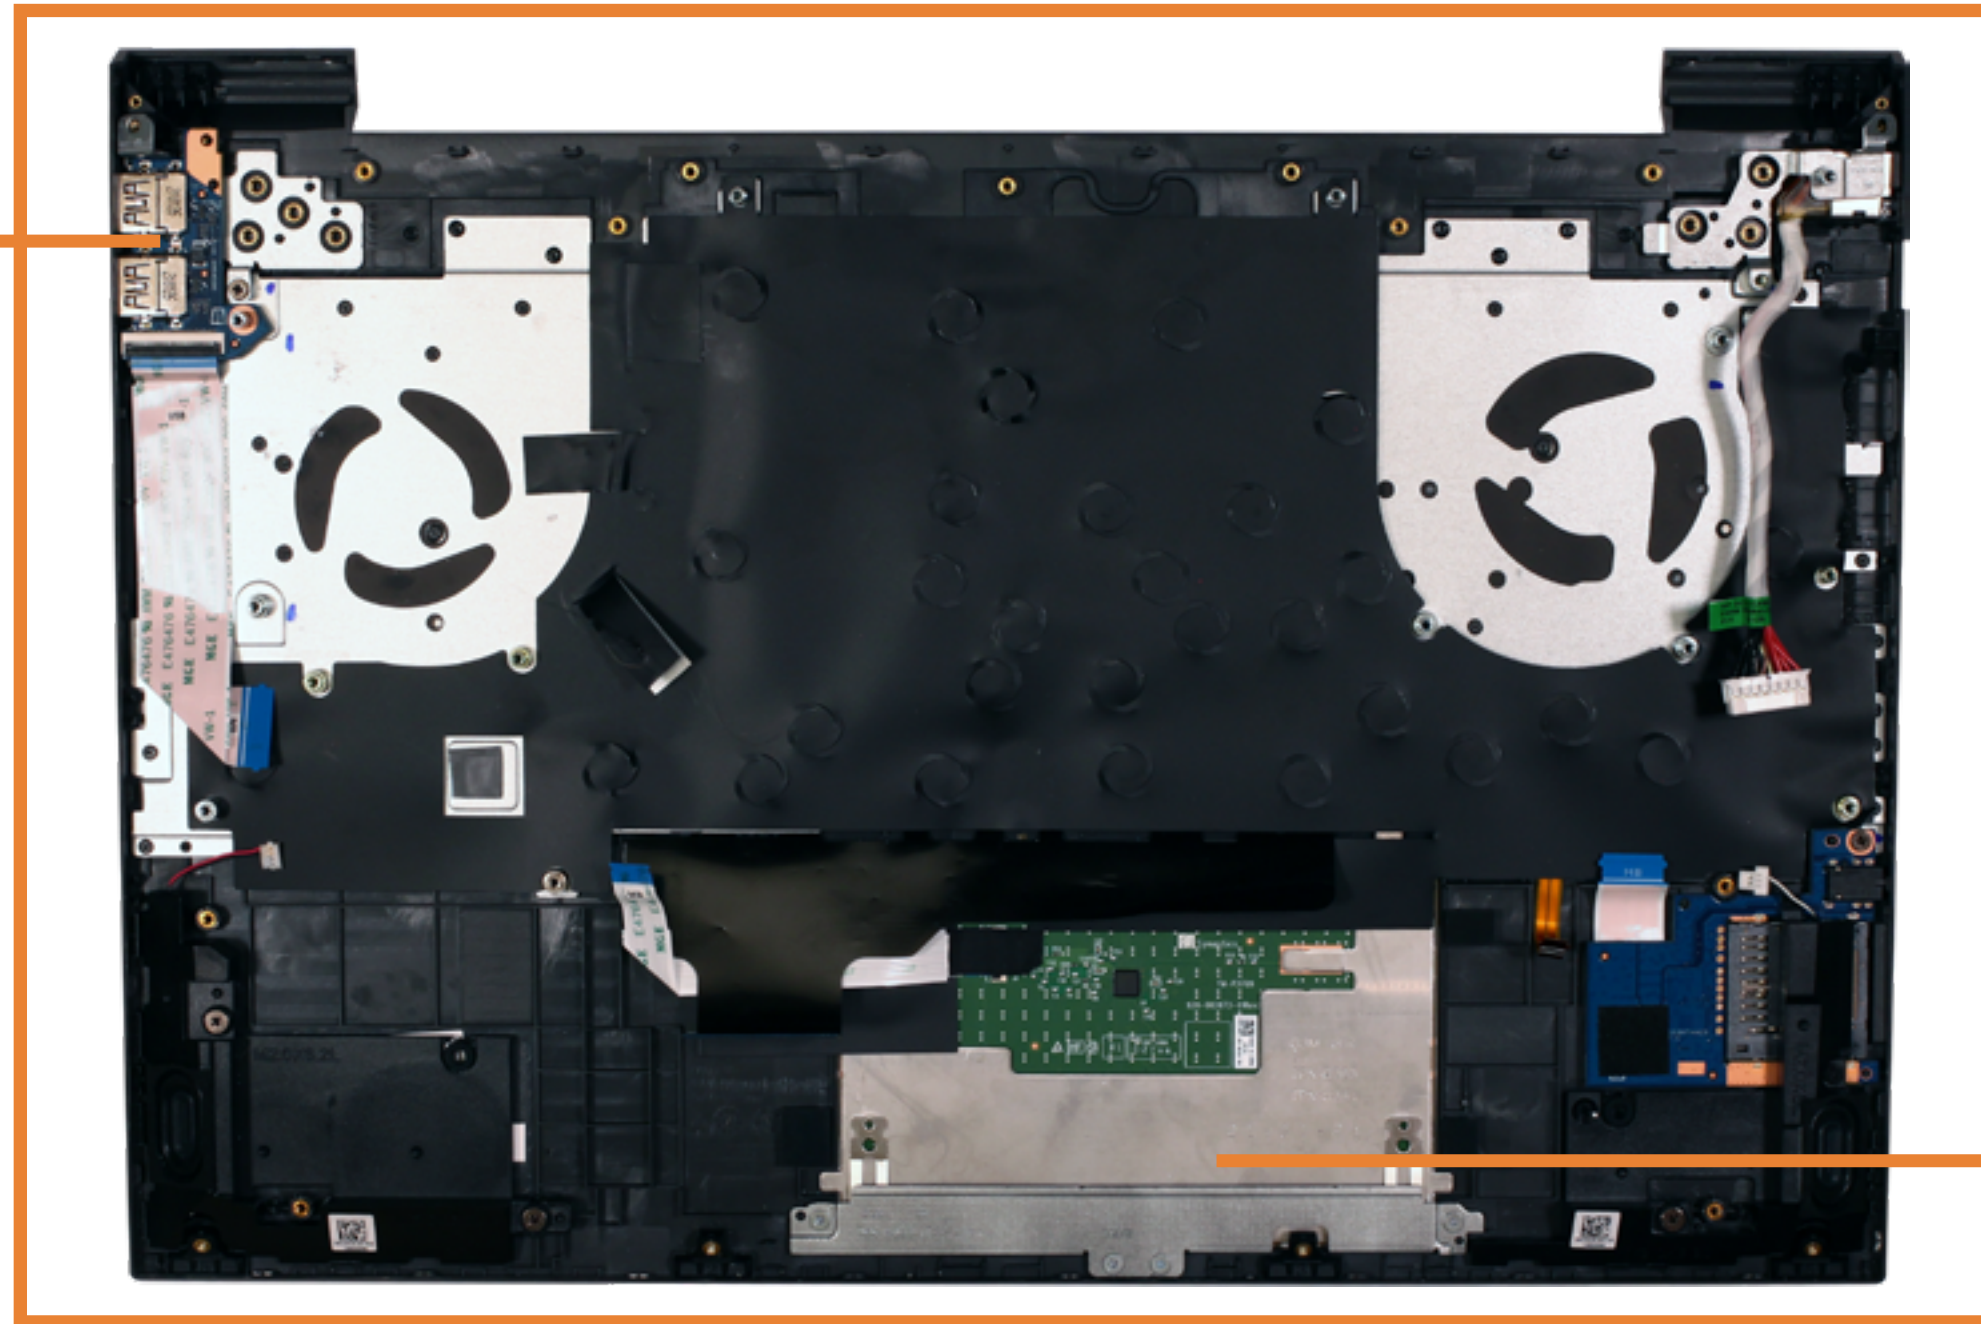


Touchpad Board

Base Enclosure




Base Enclosure


M.2 Solid State Drive

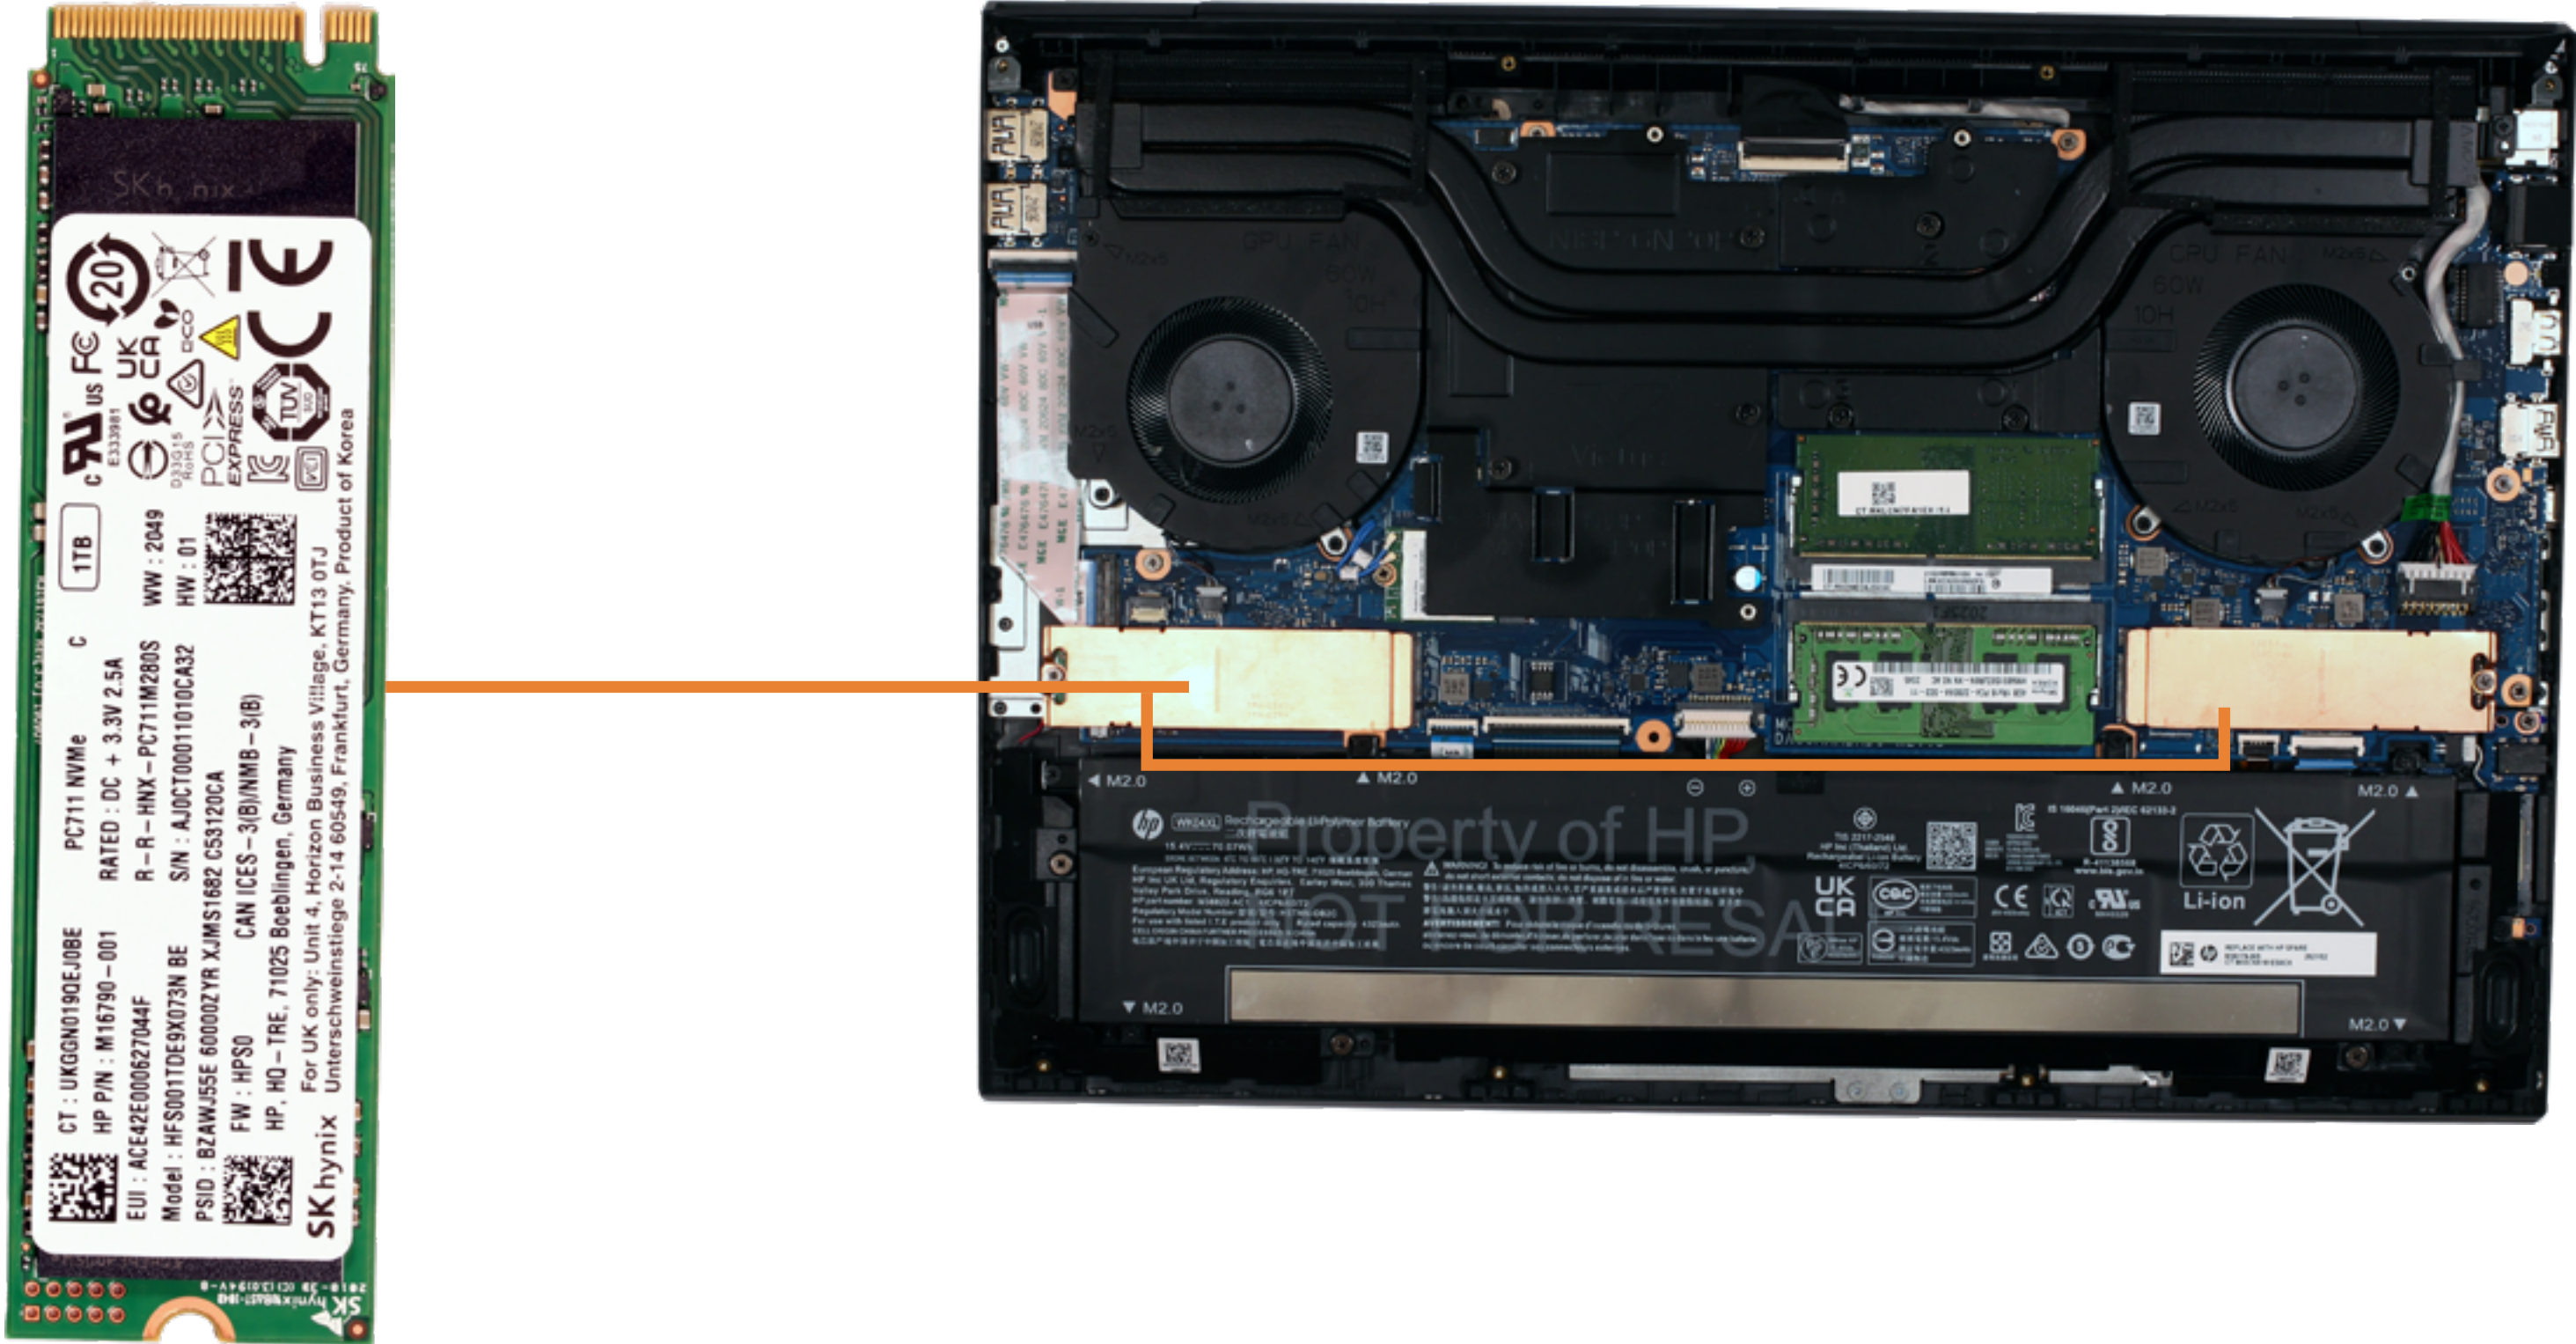



Battery

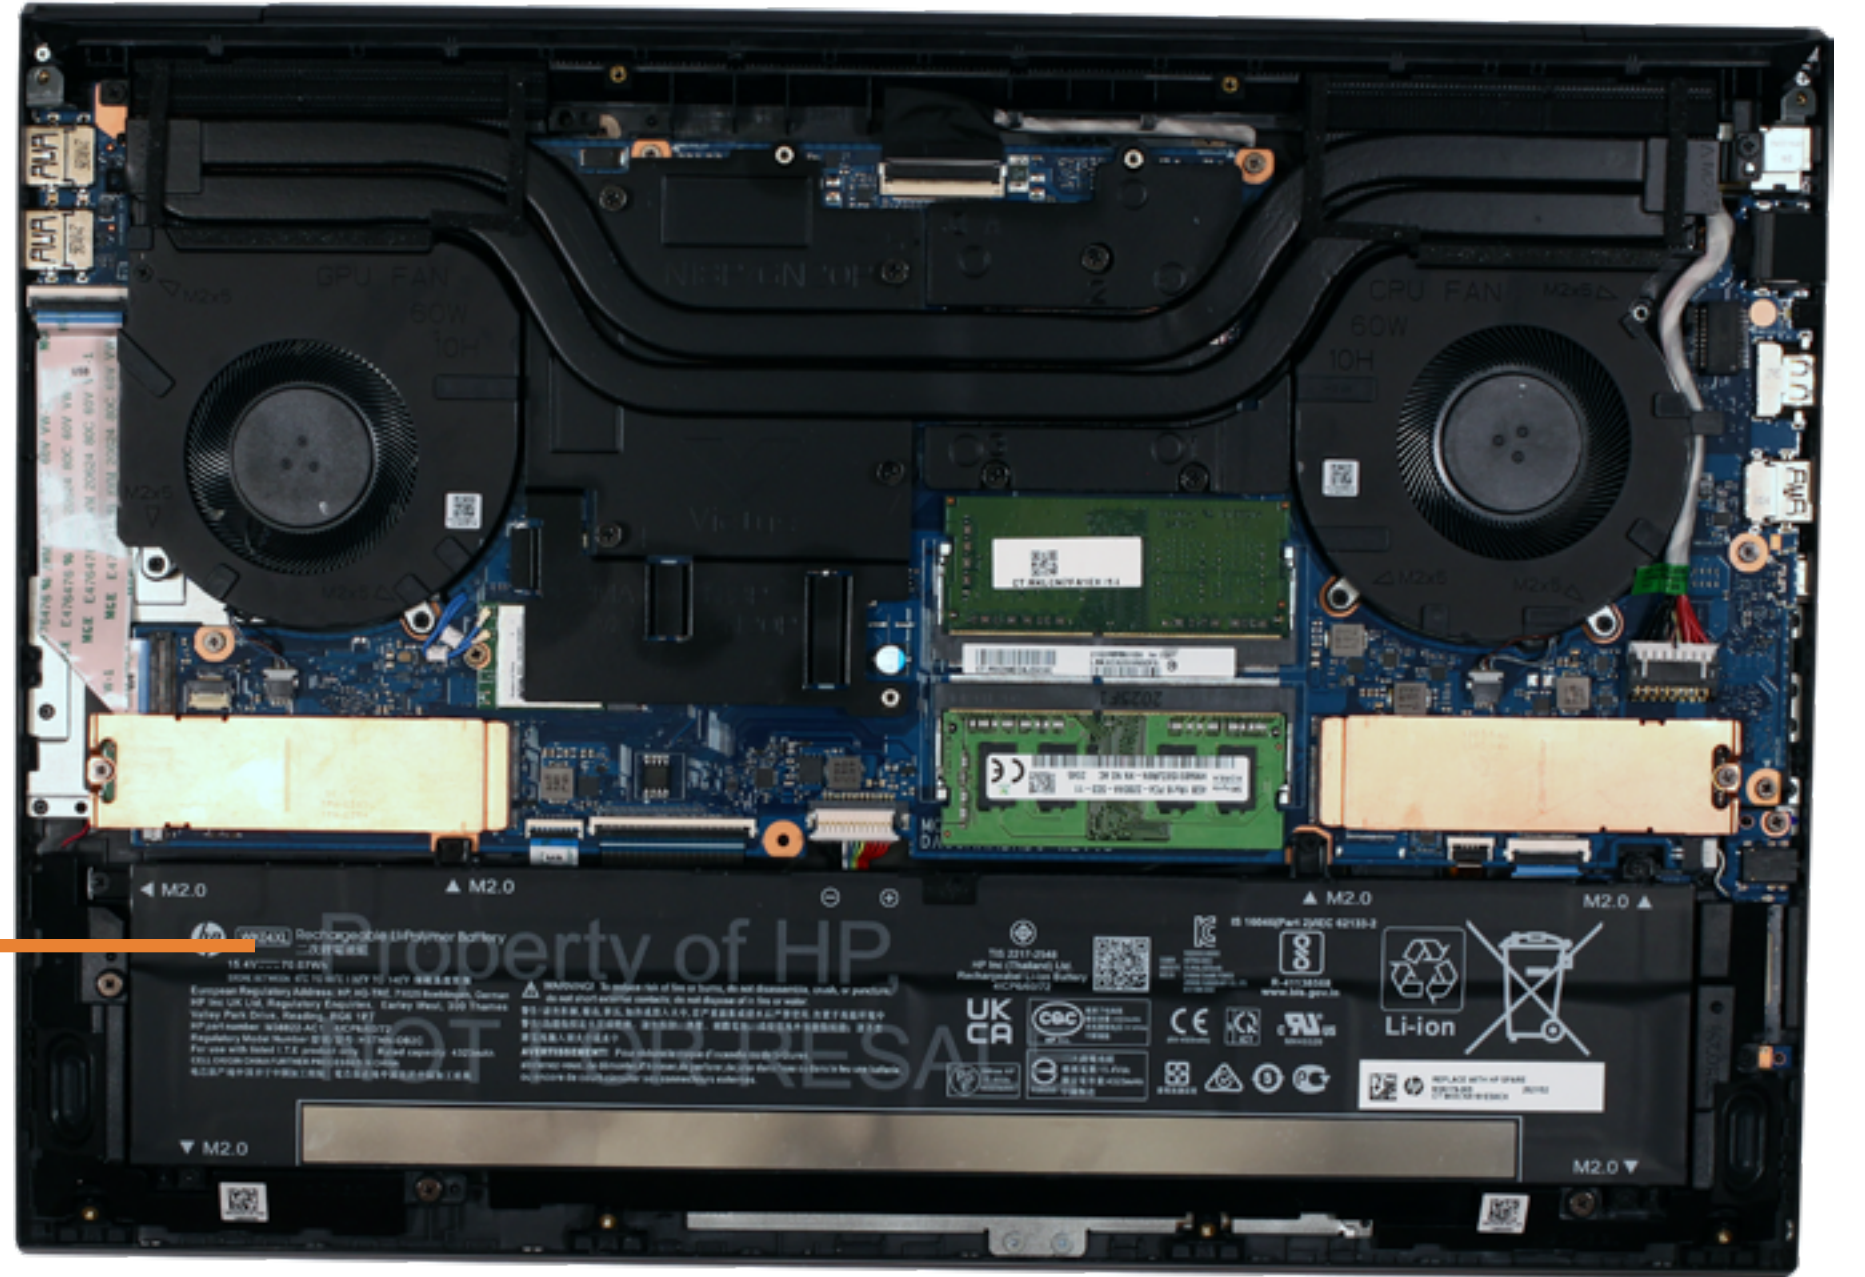



Memory Module(s)

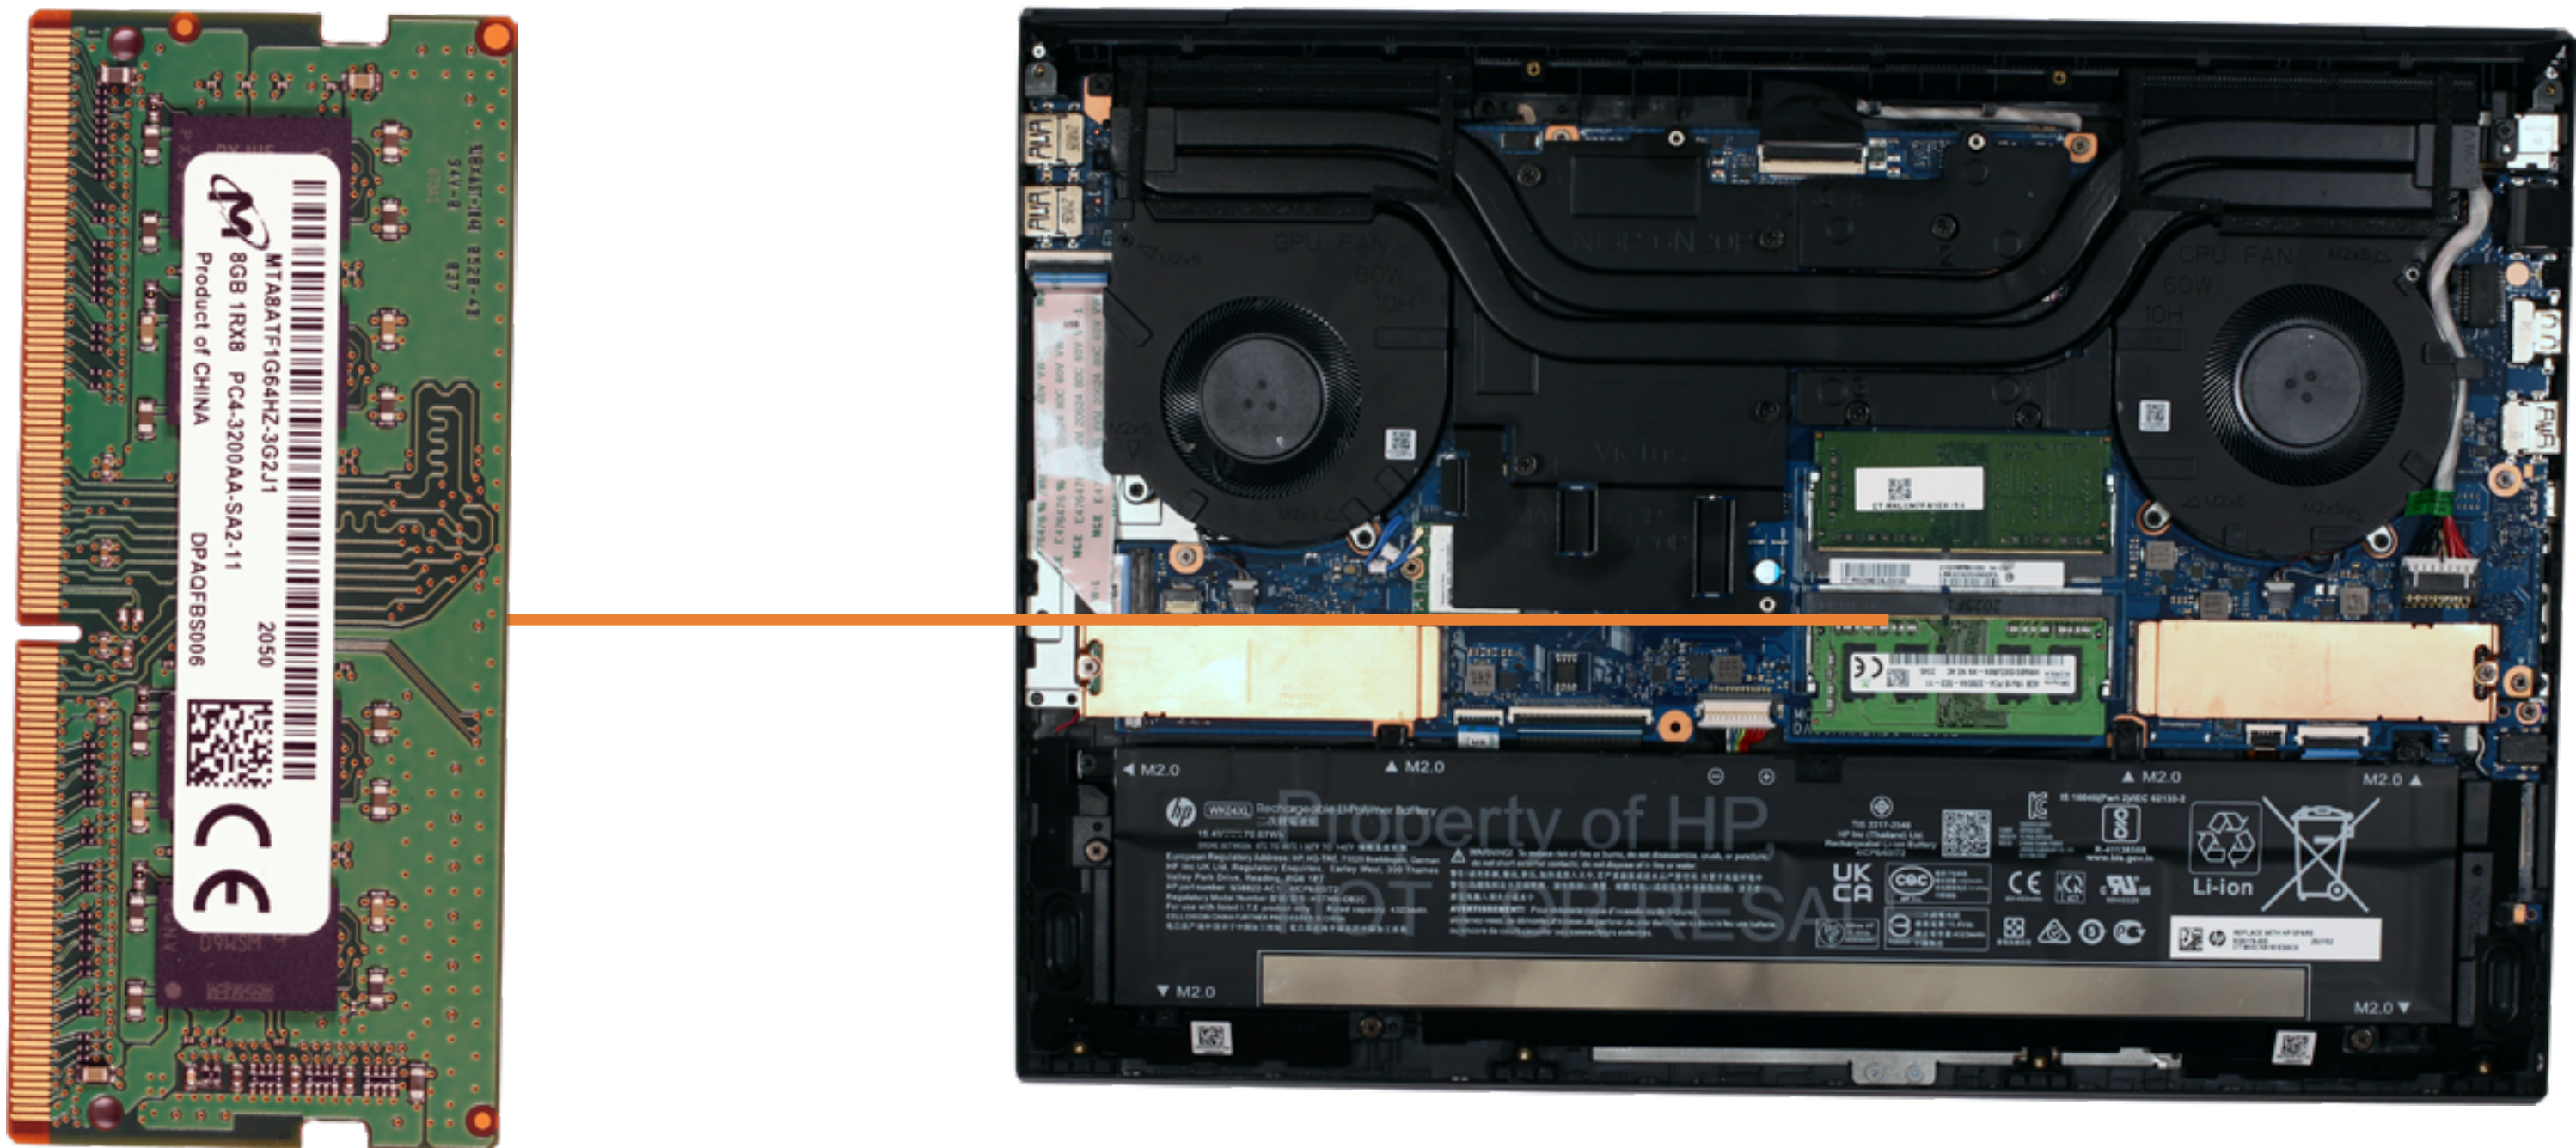


Left Speaker

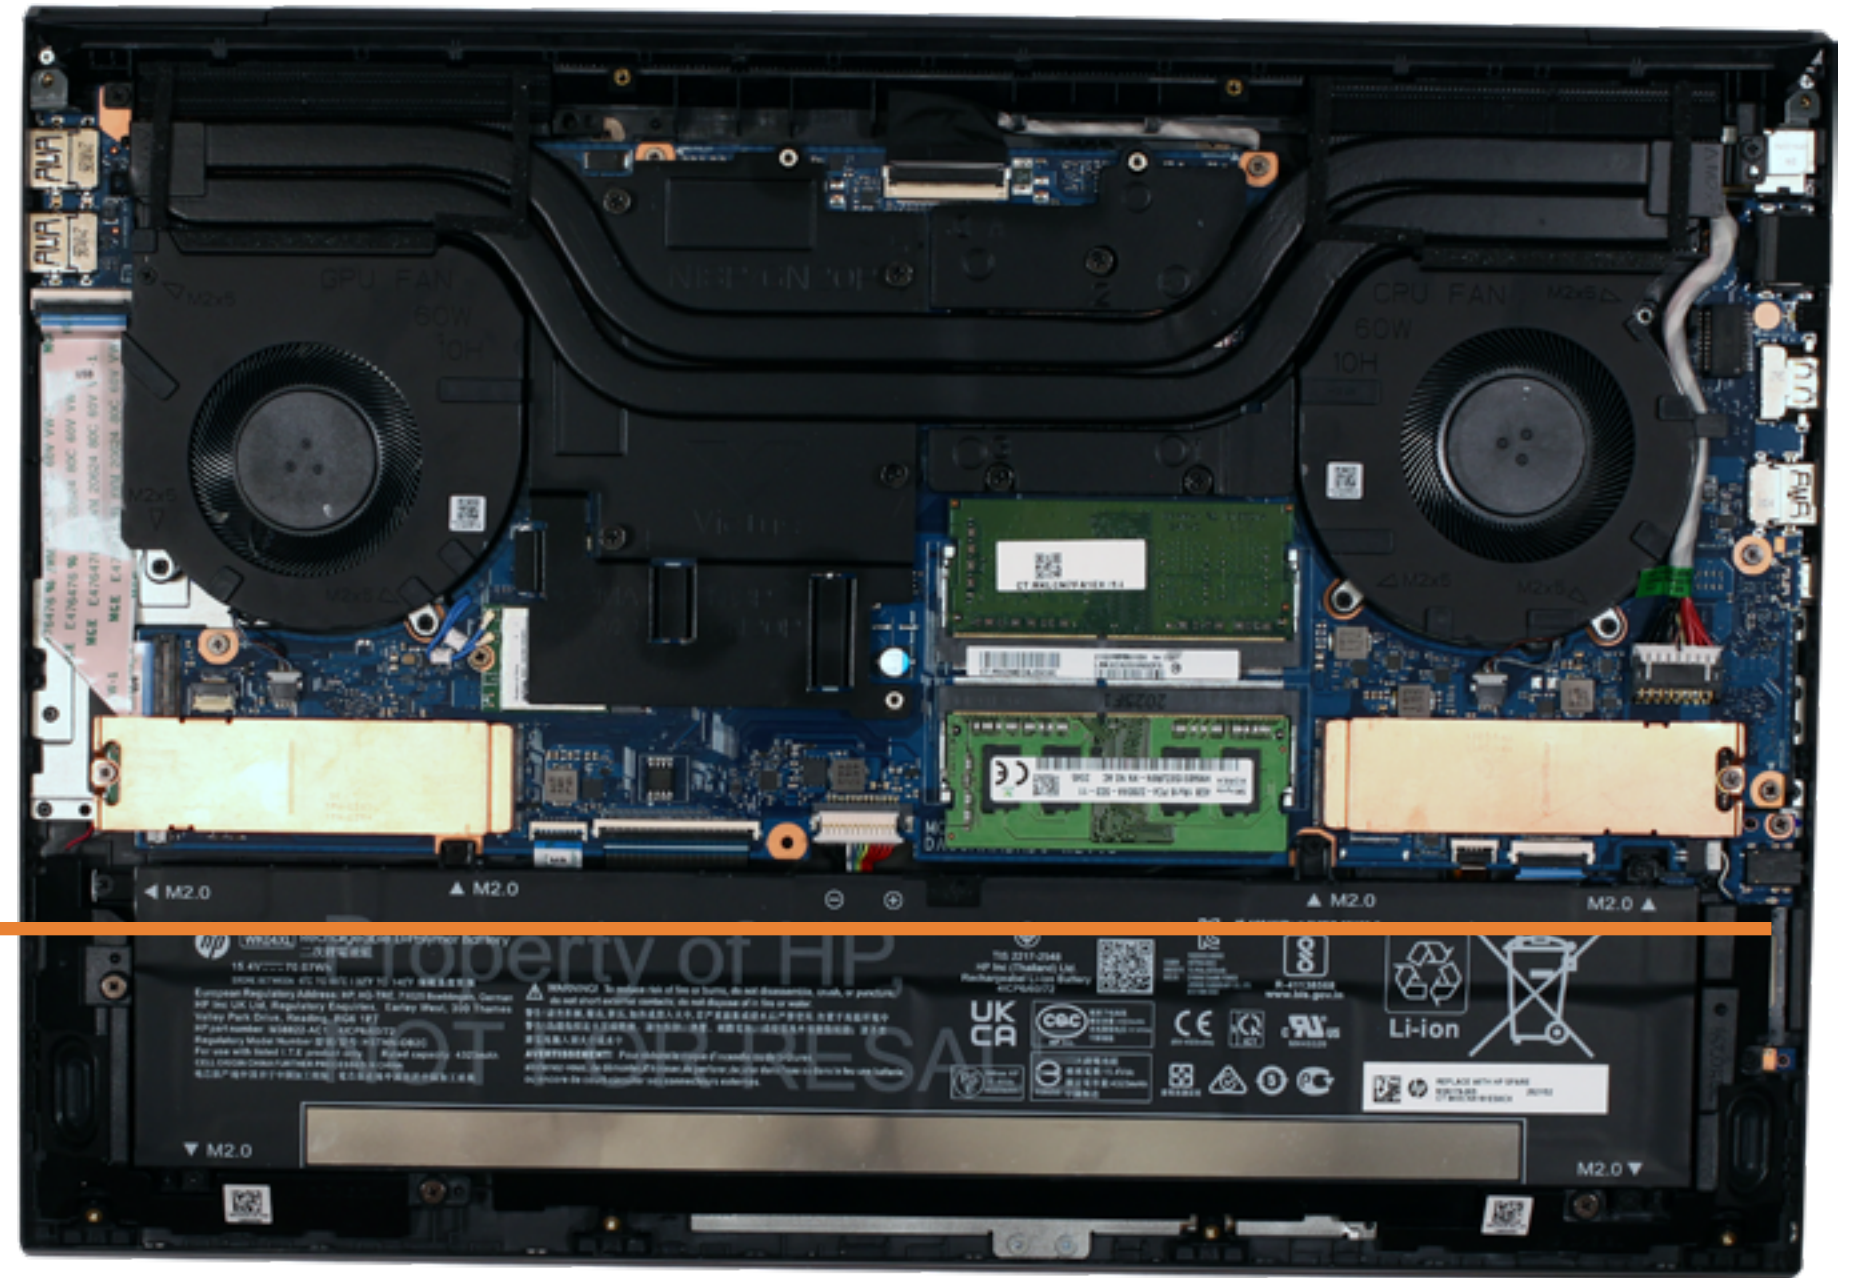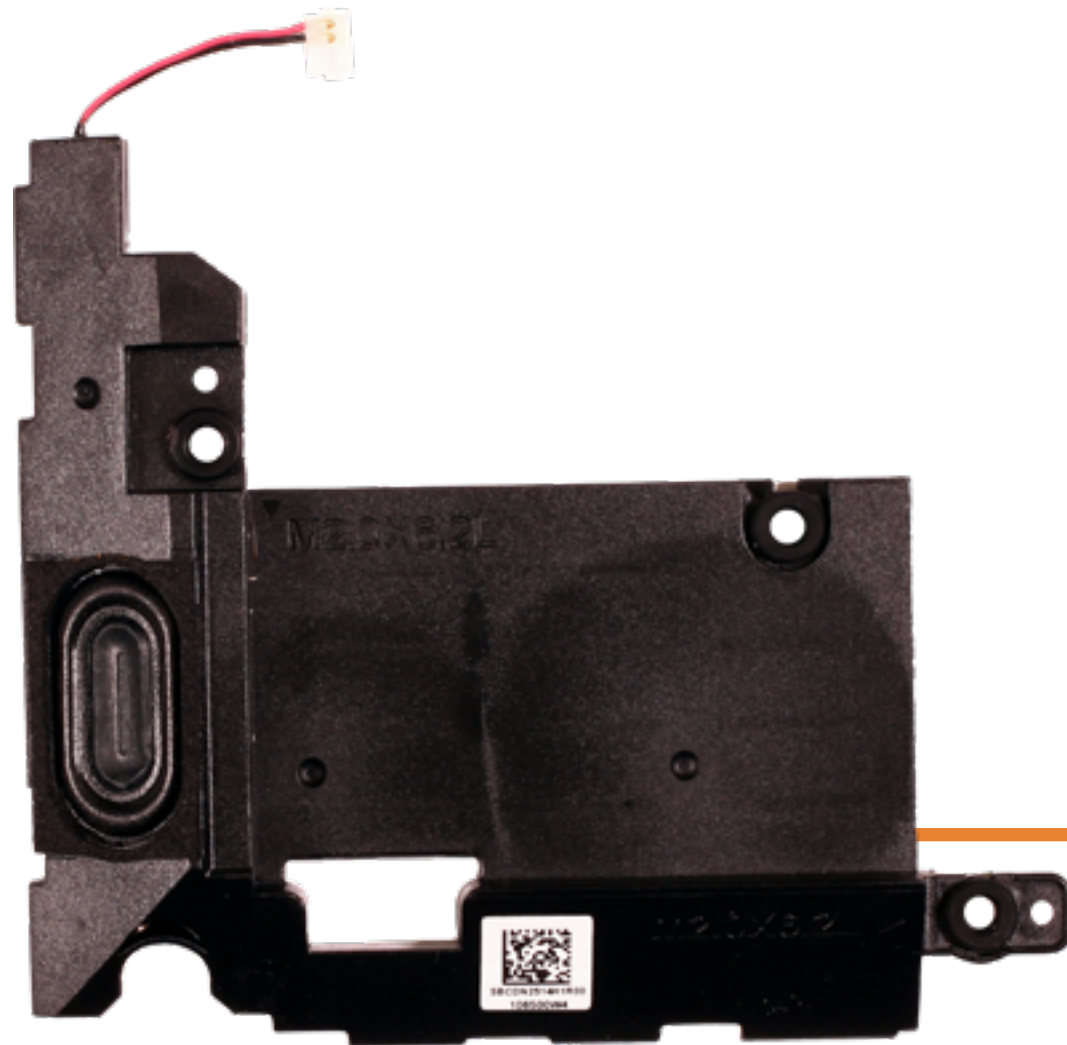



Right Speaker

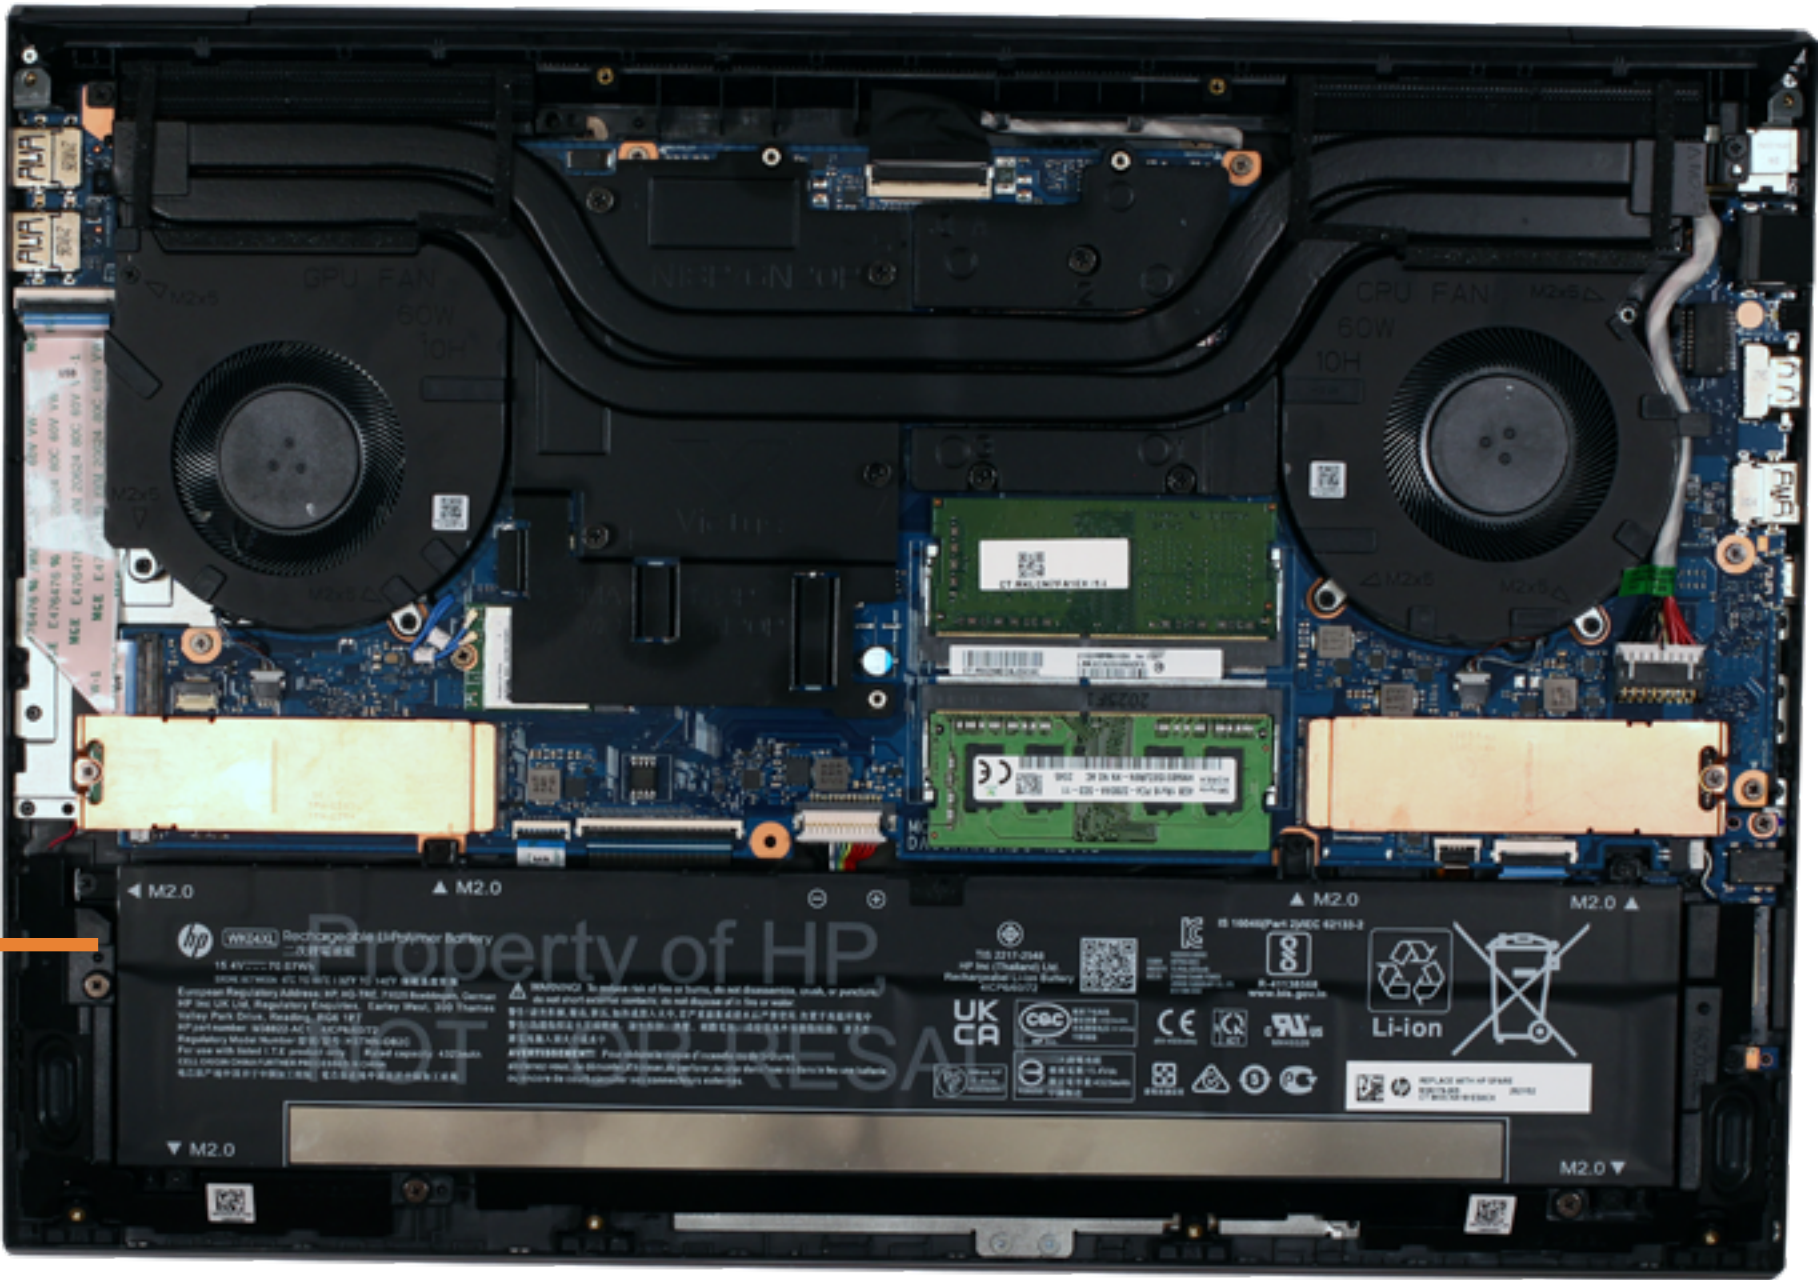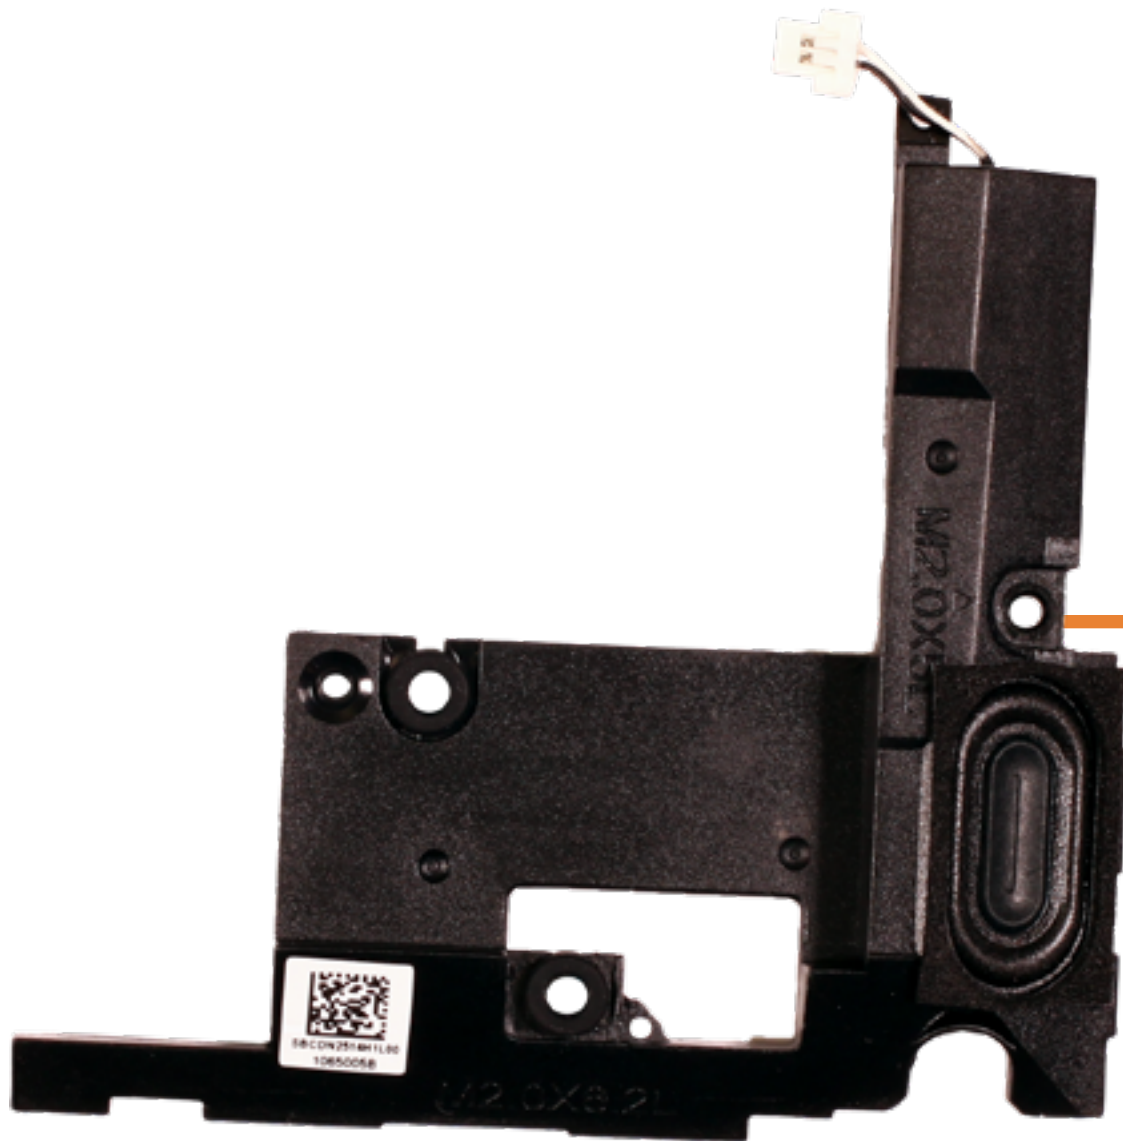



DC-in Connector

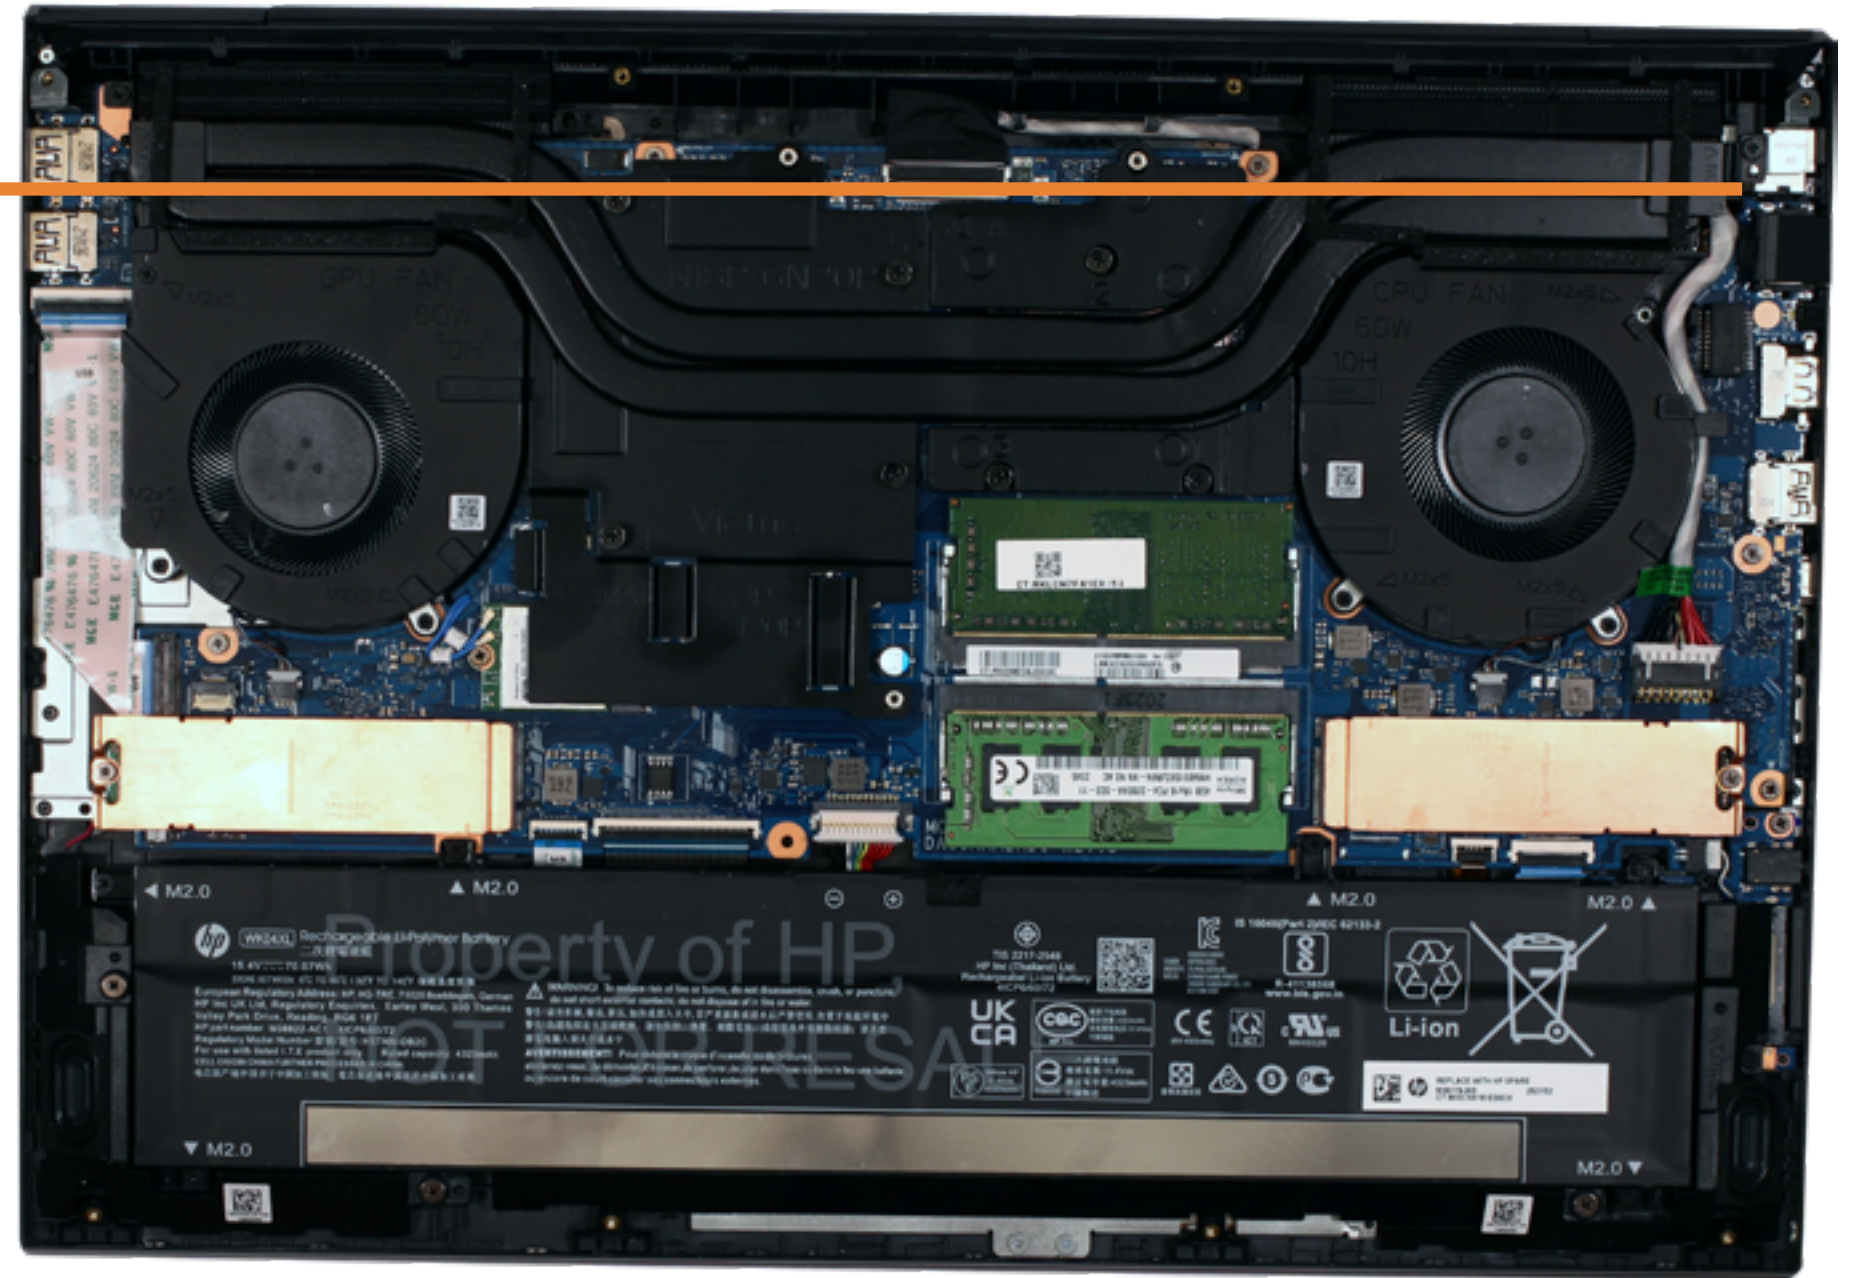



Heatsink

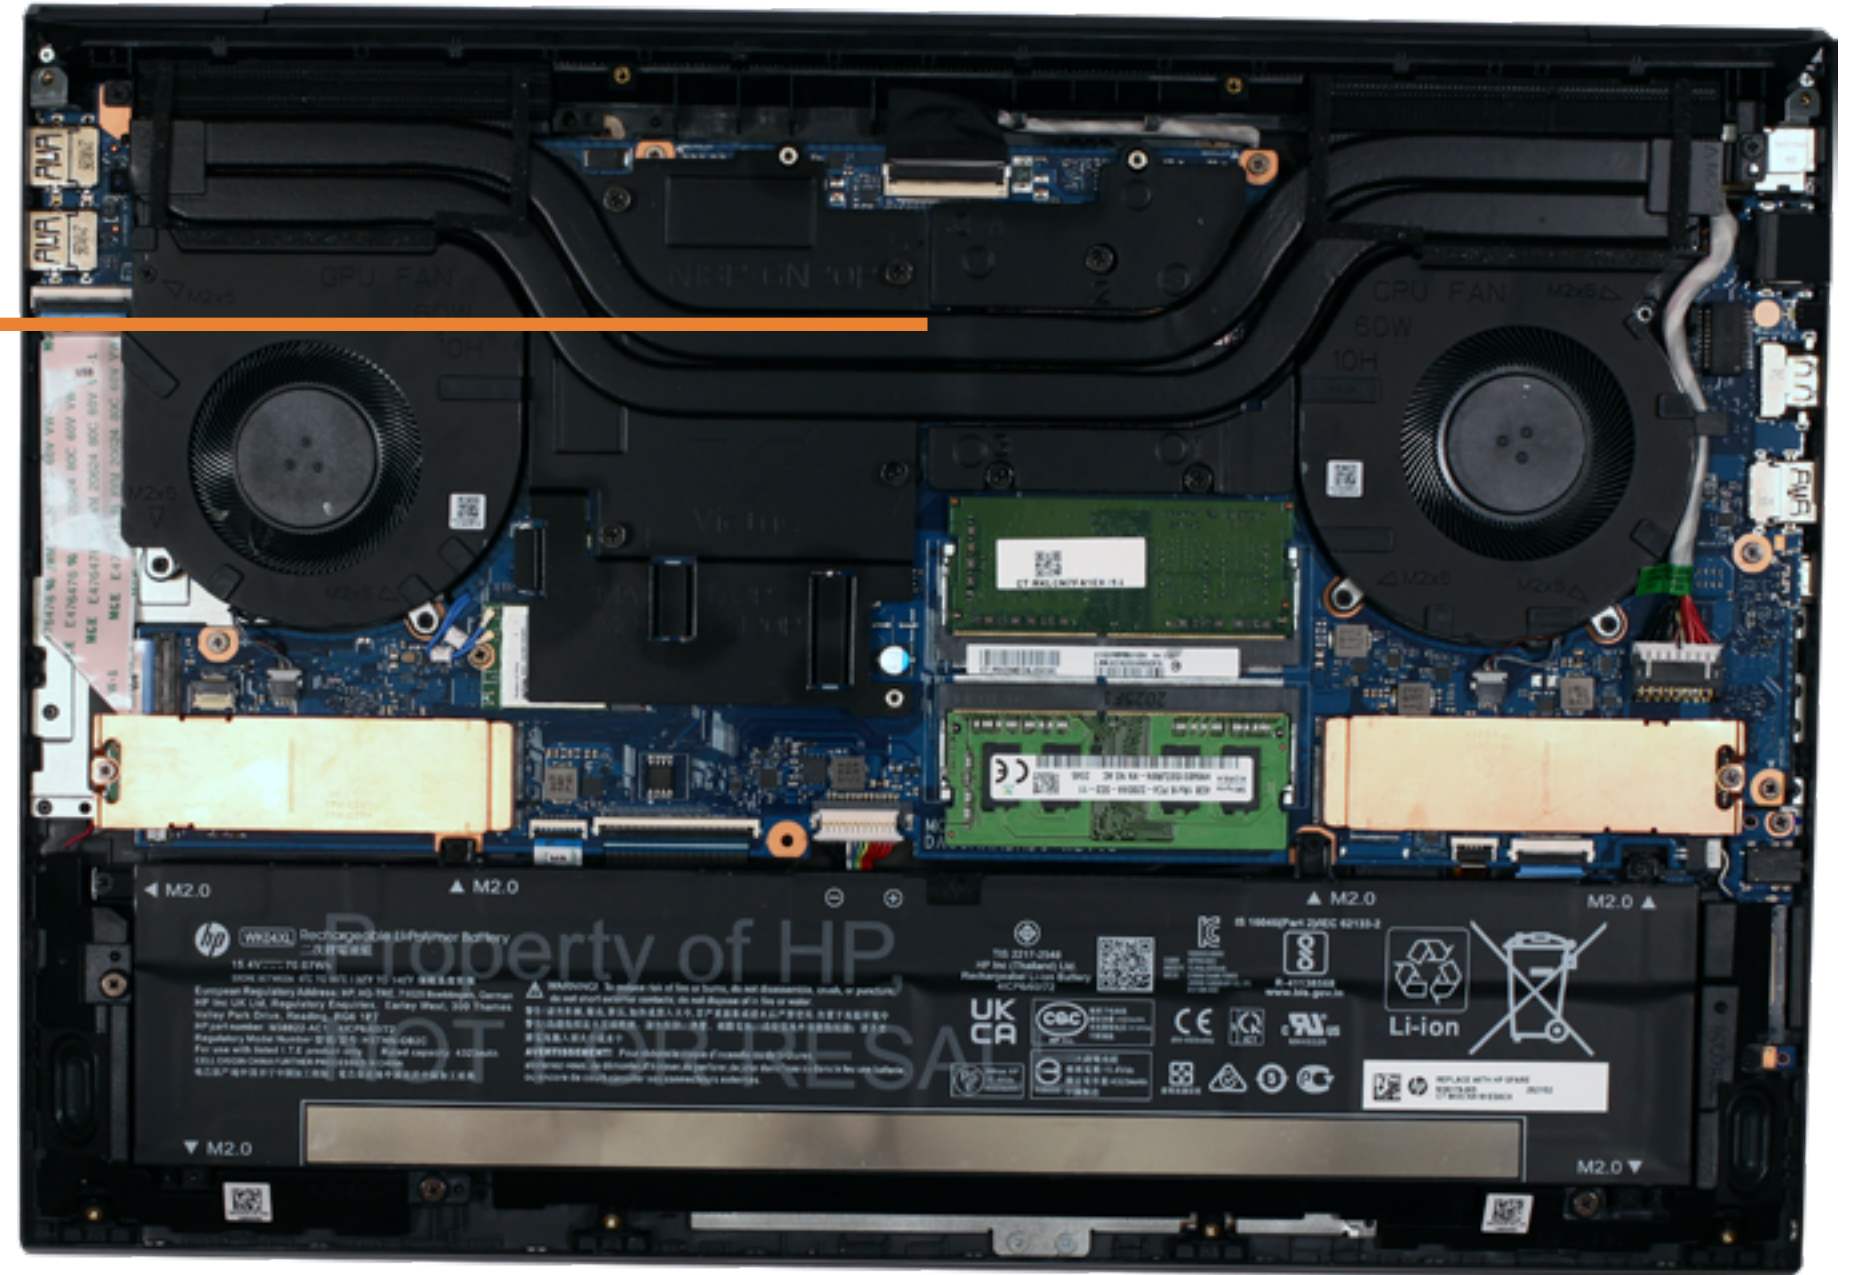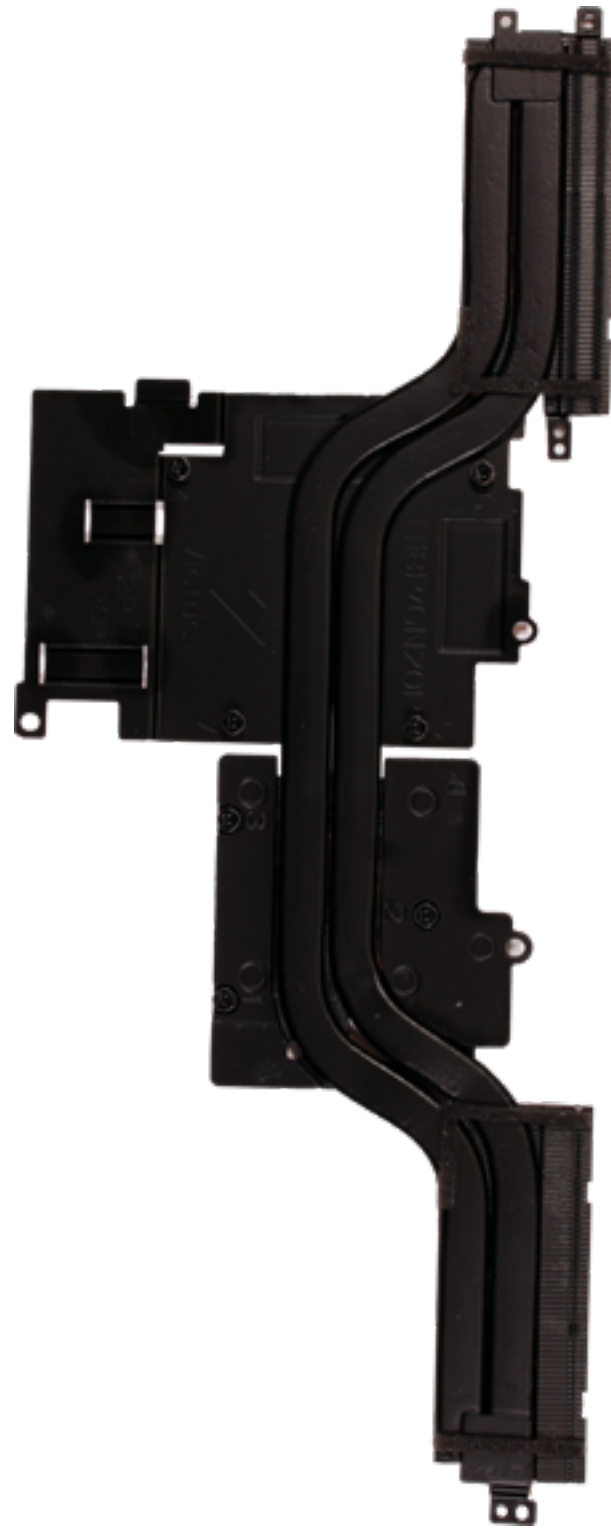



Wireless LAN Module

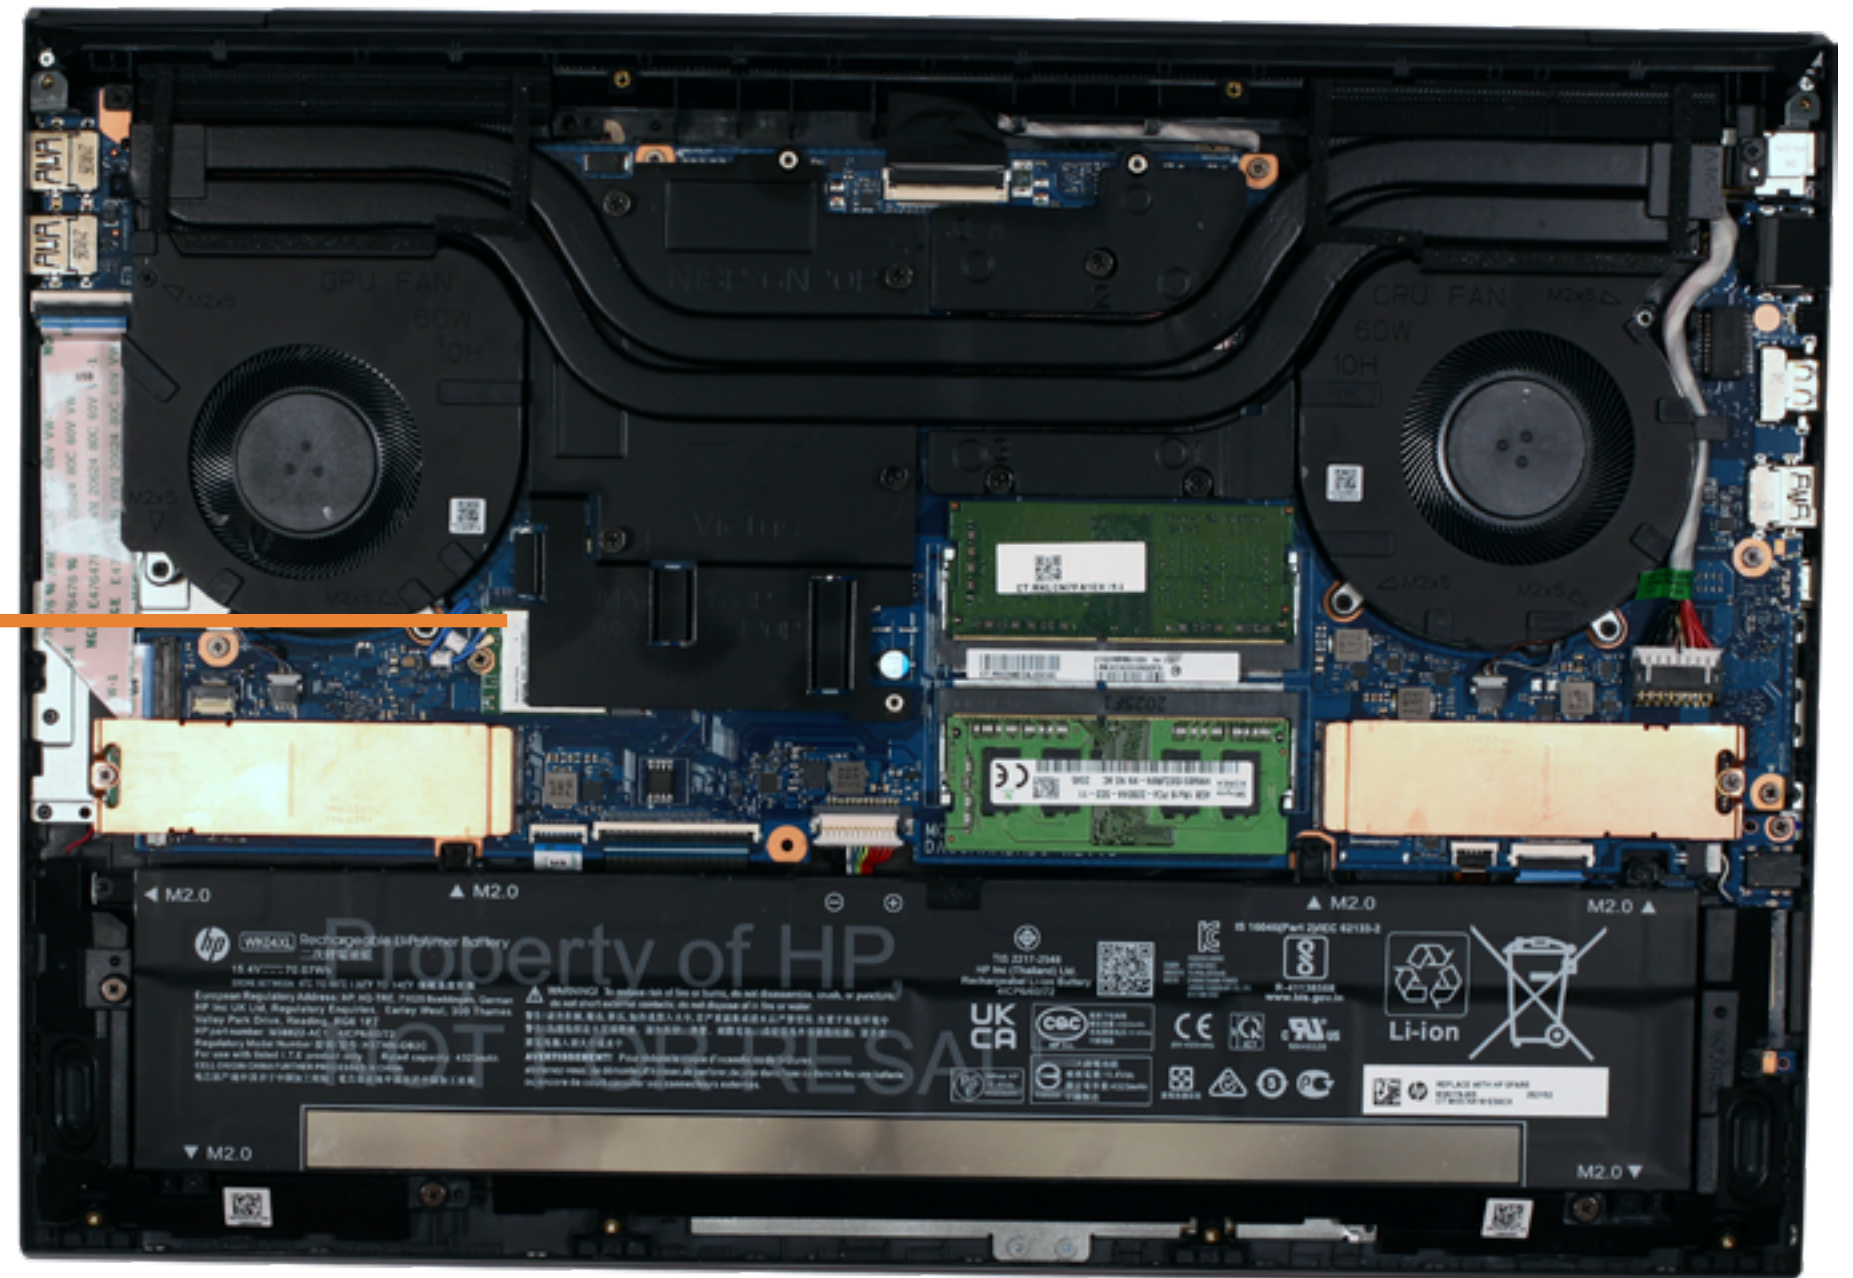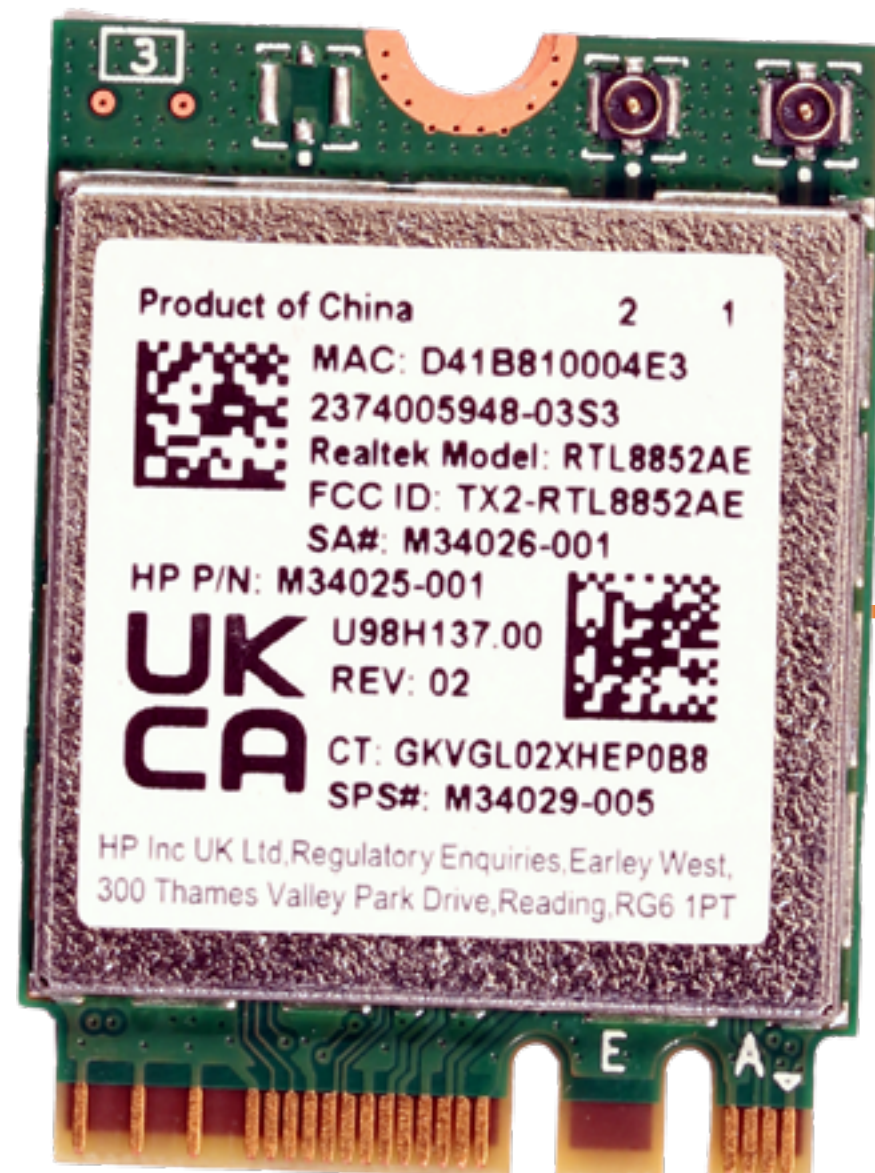



CPU Fan

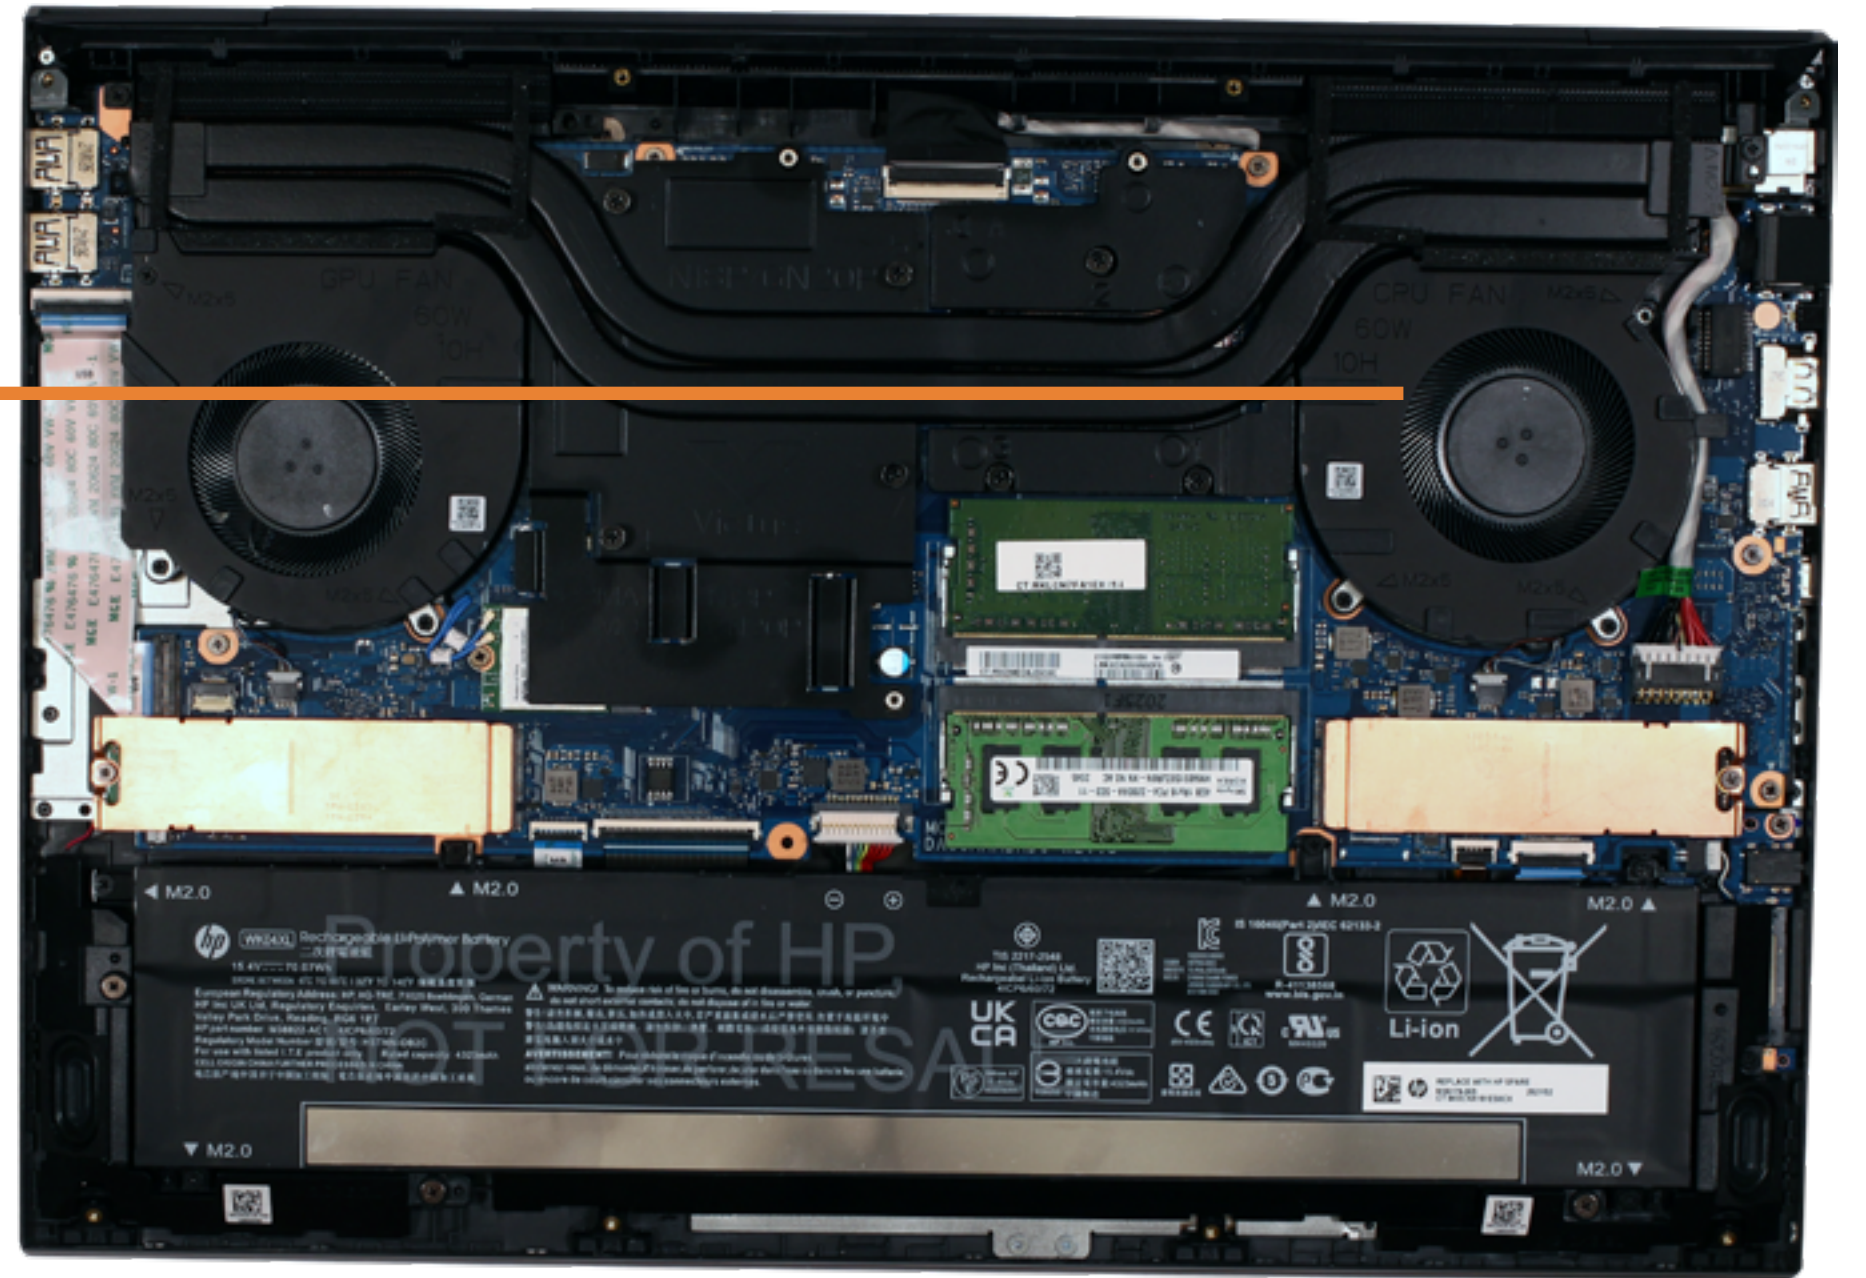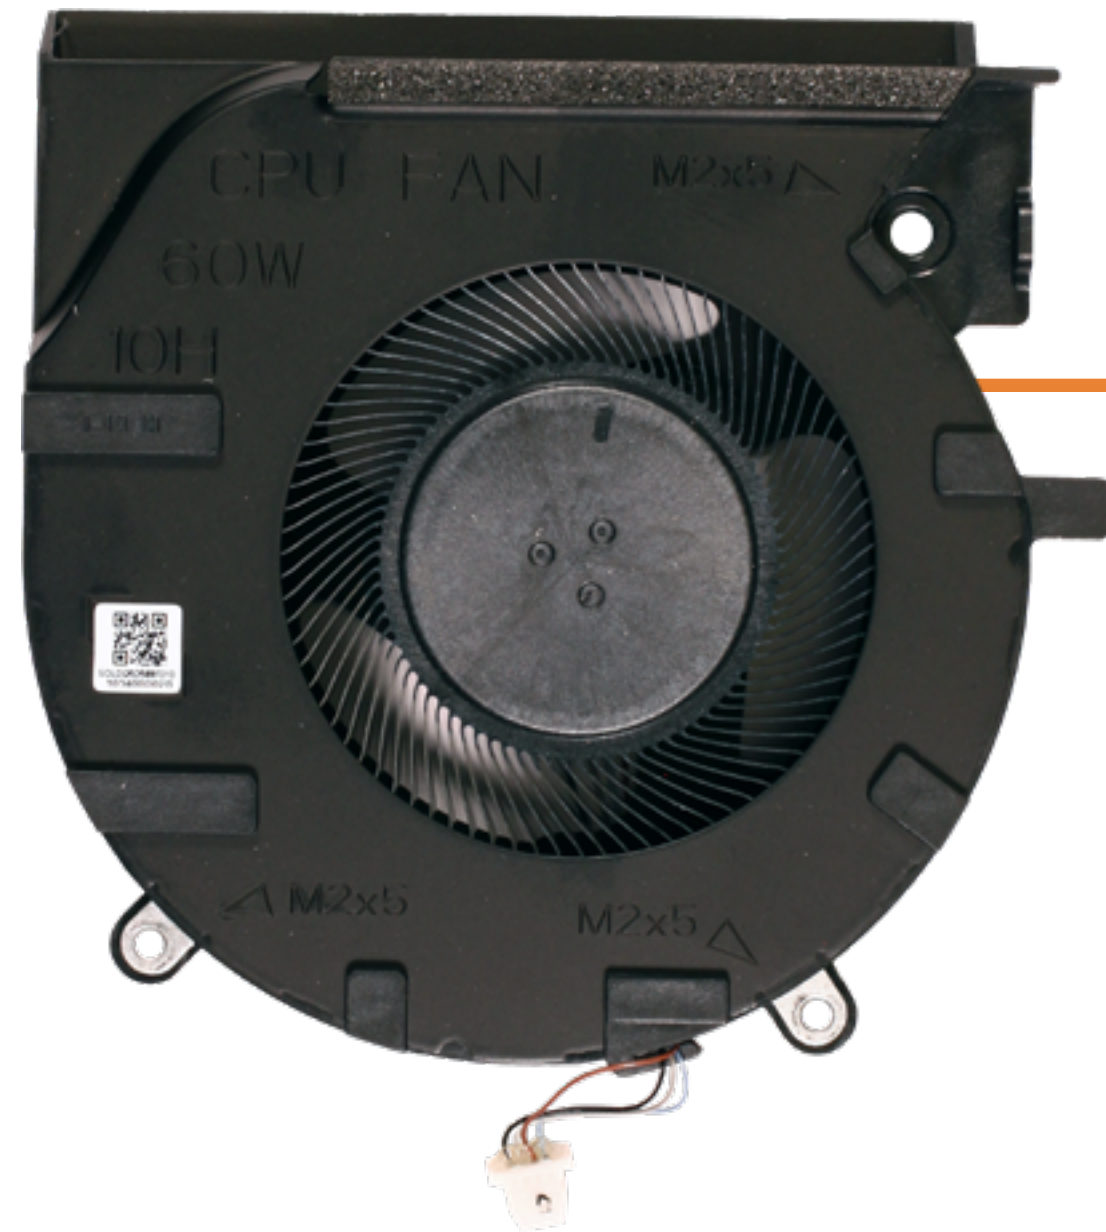


GPU Fan

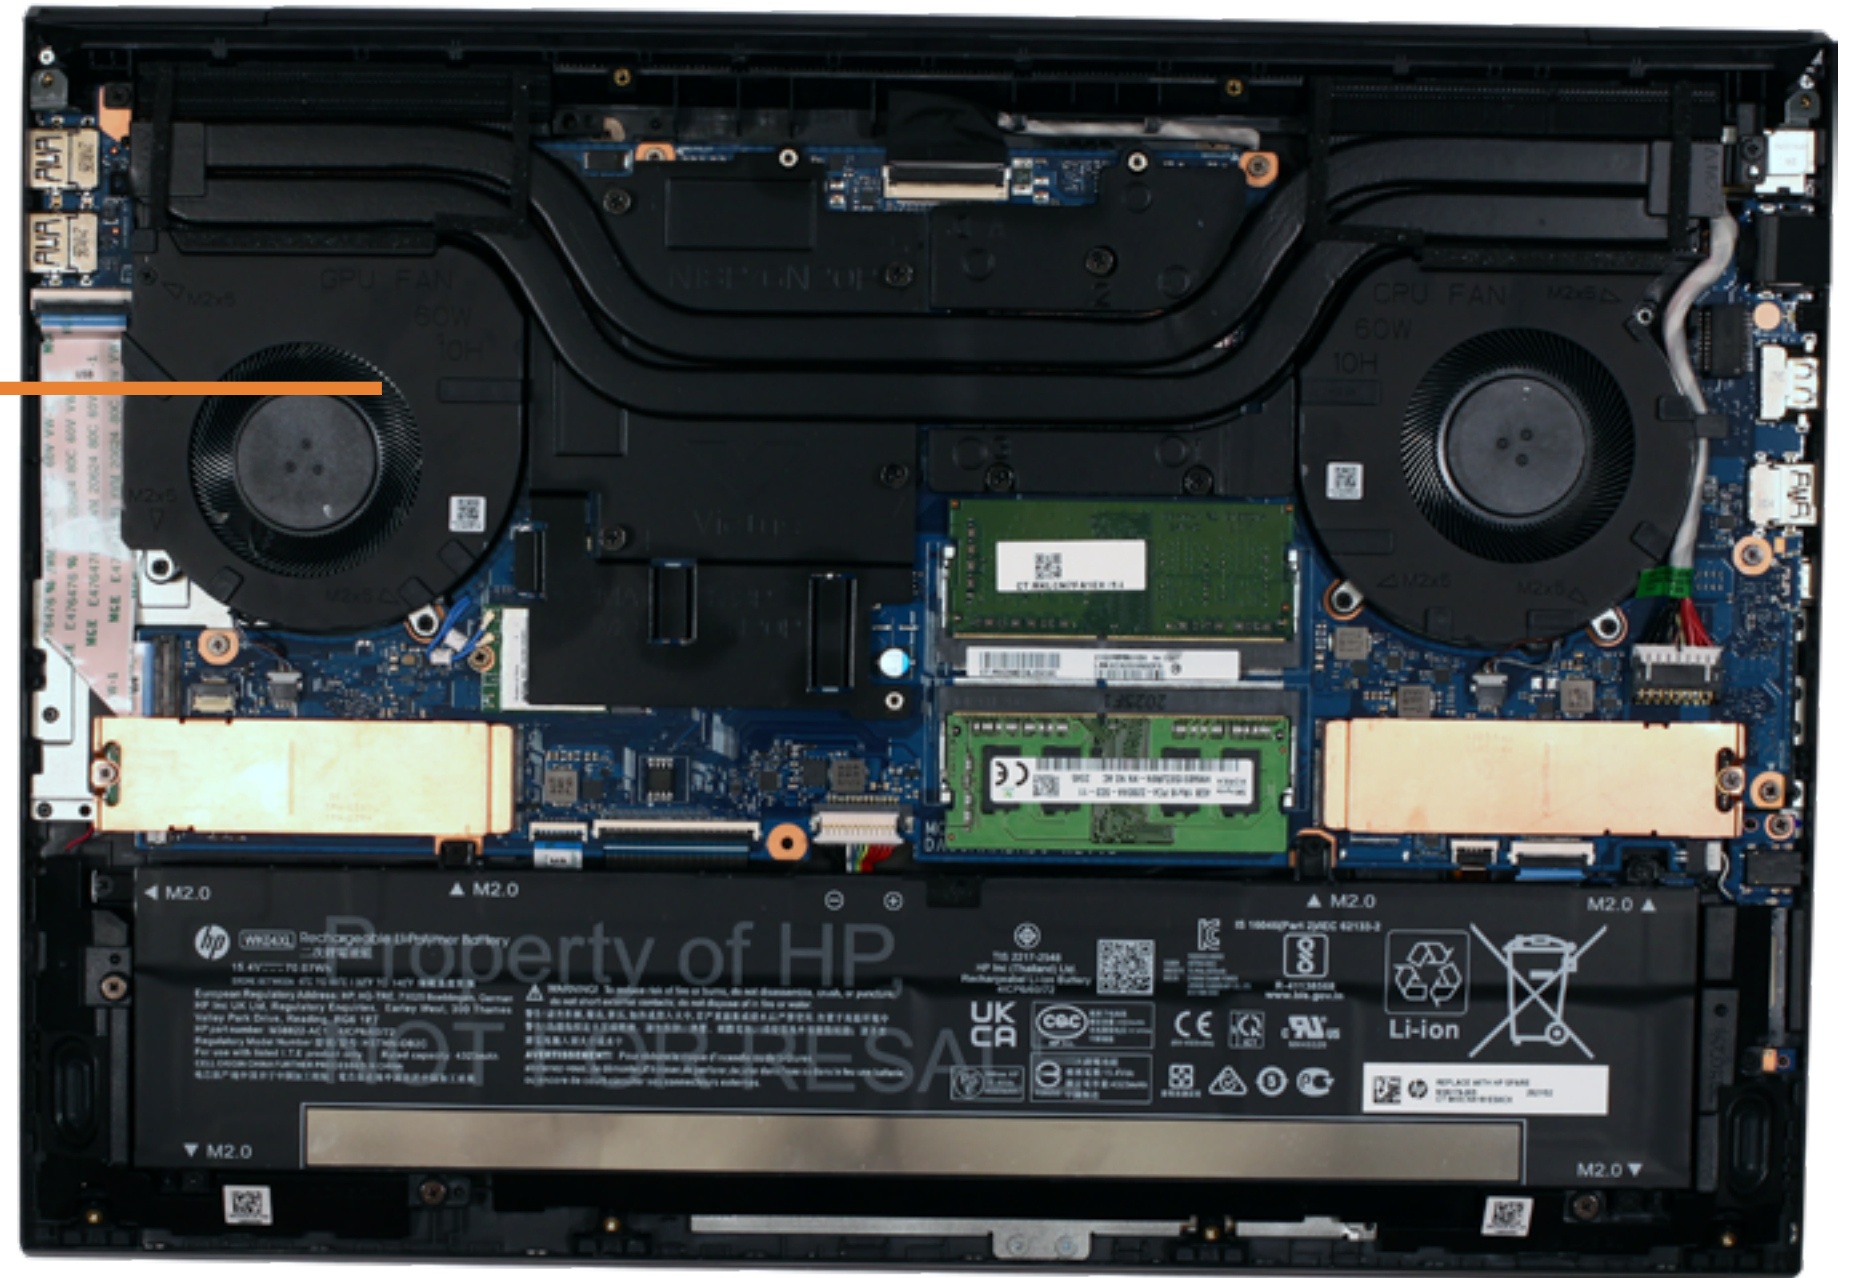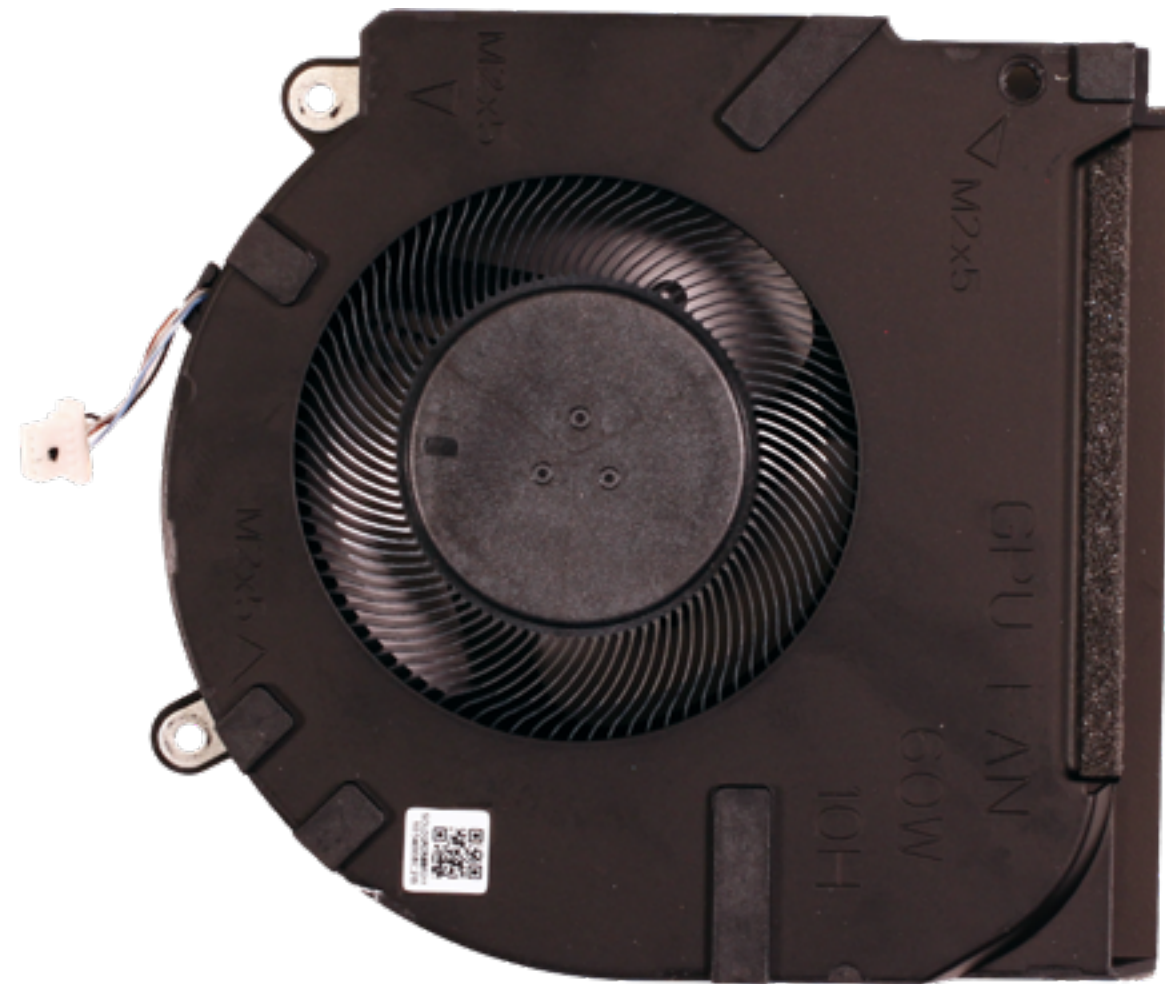


USB Board

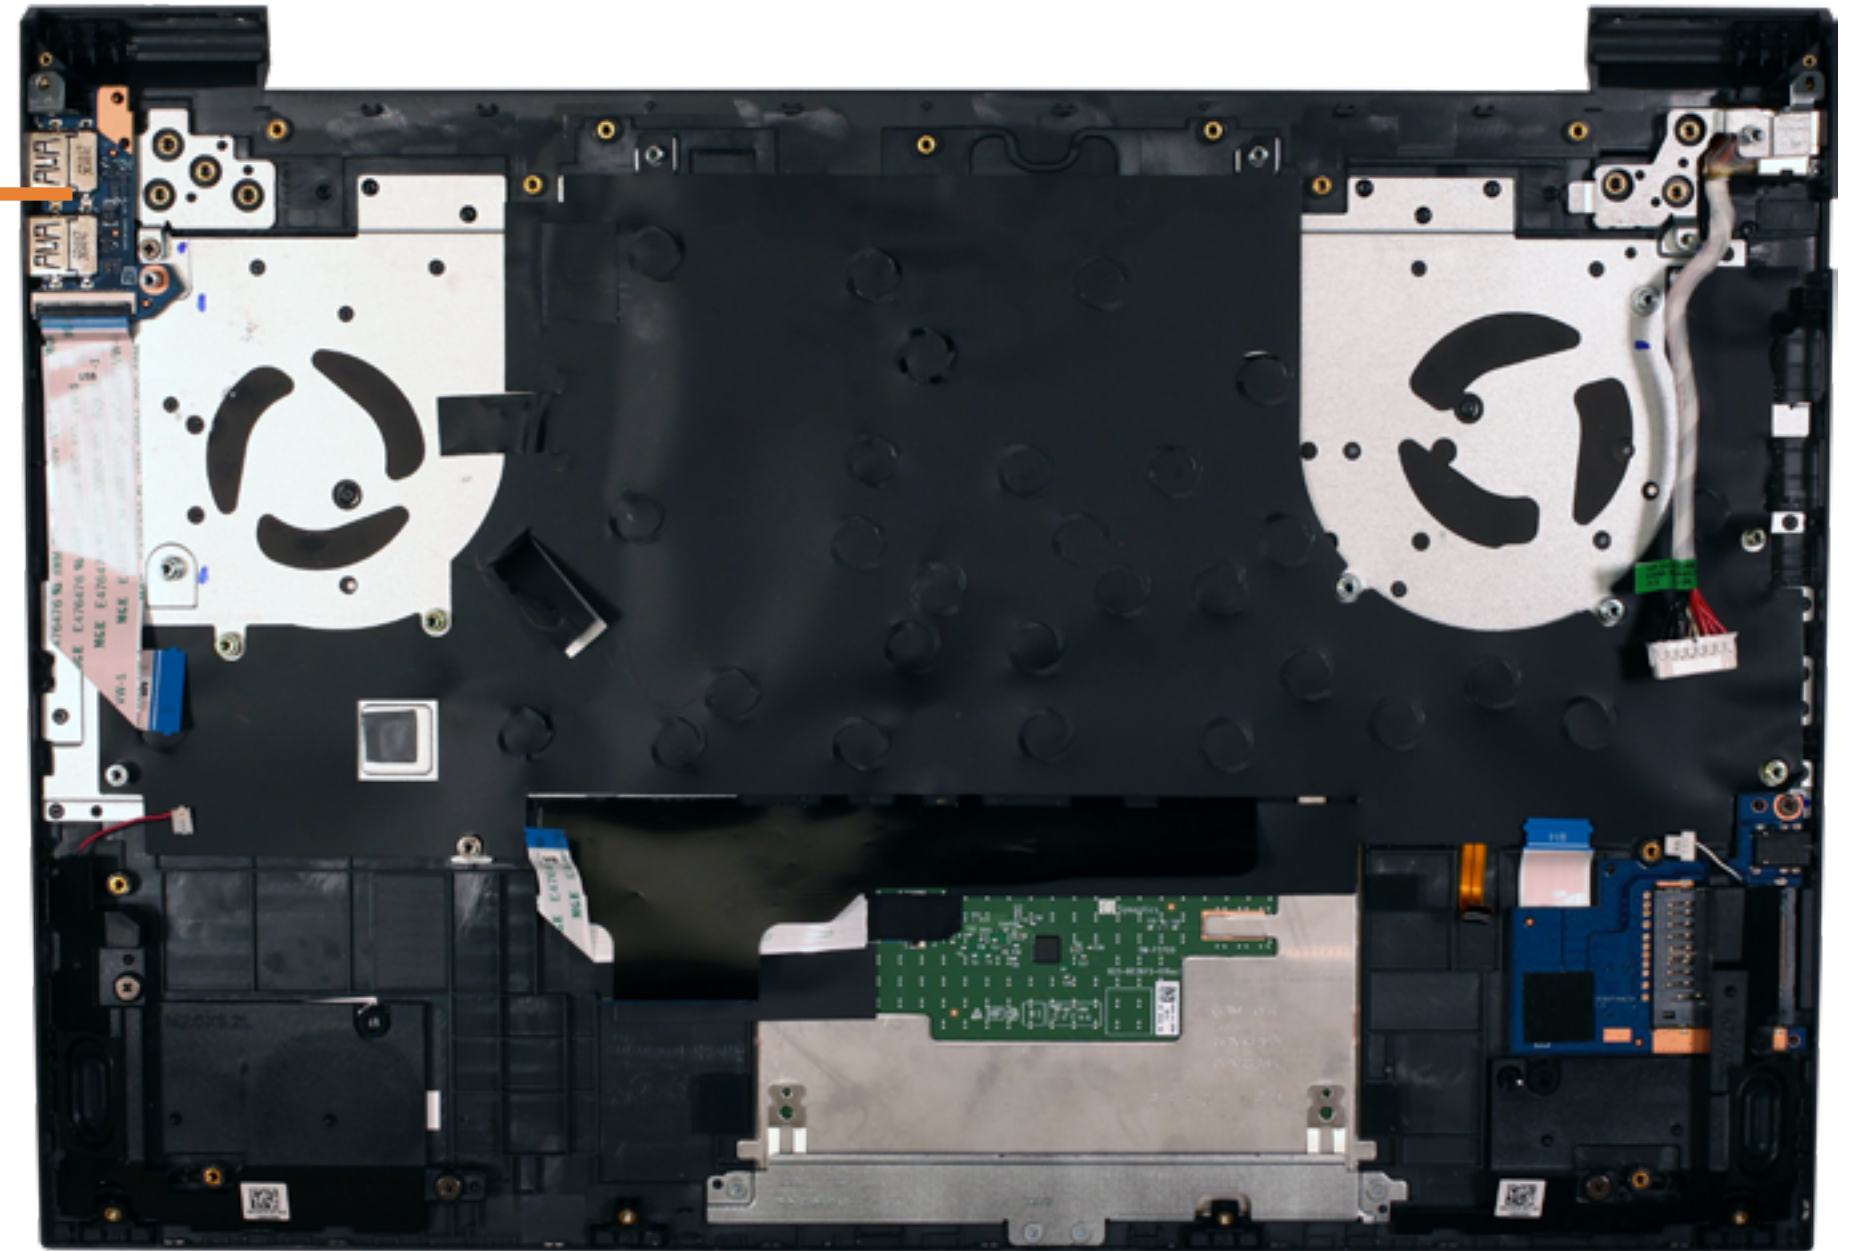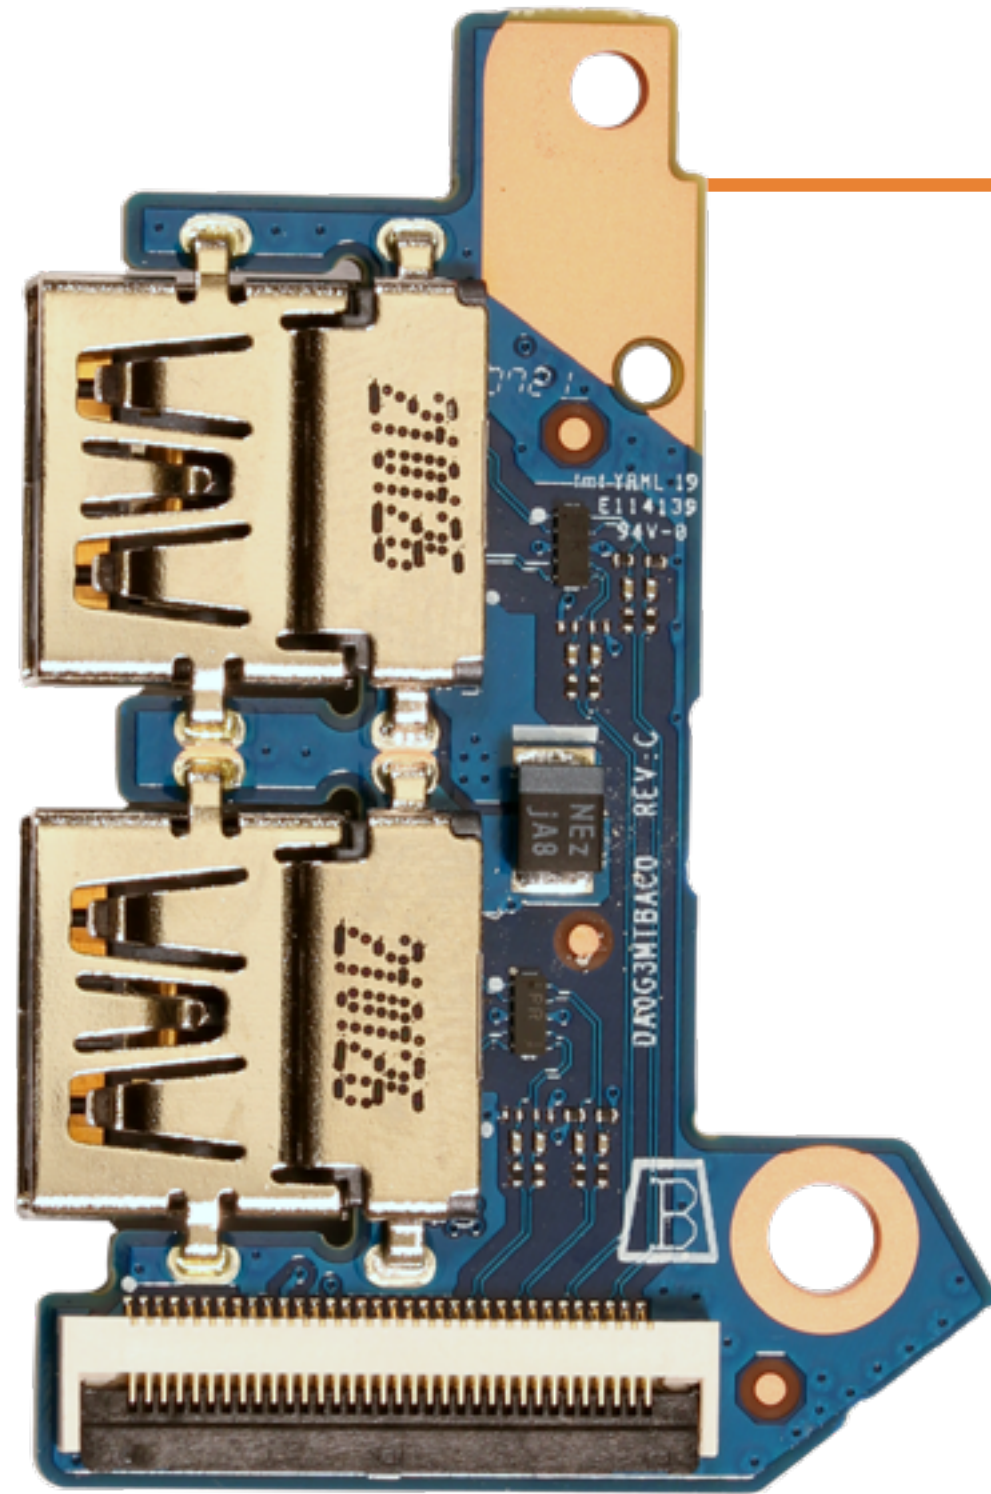



Motherboard

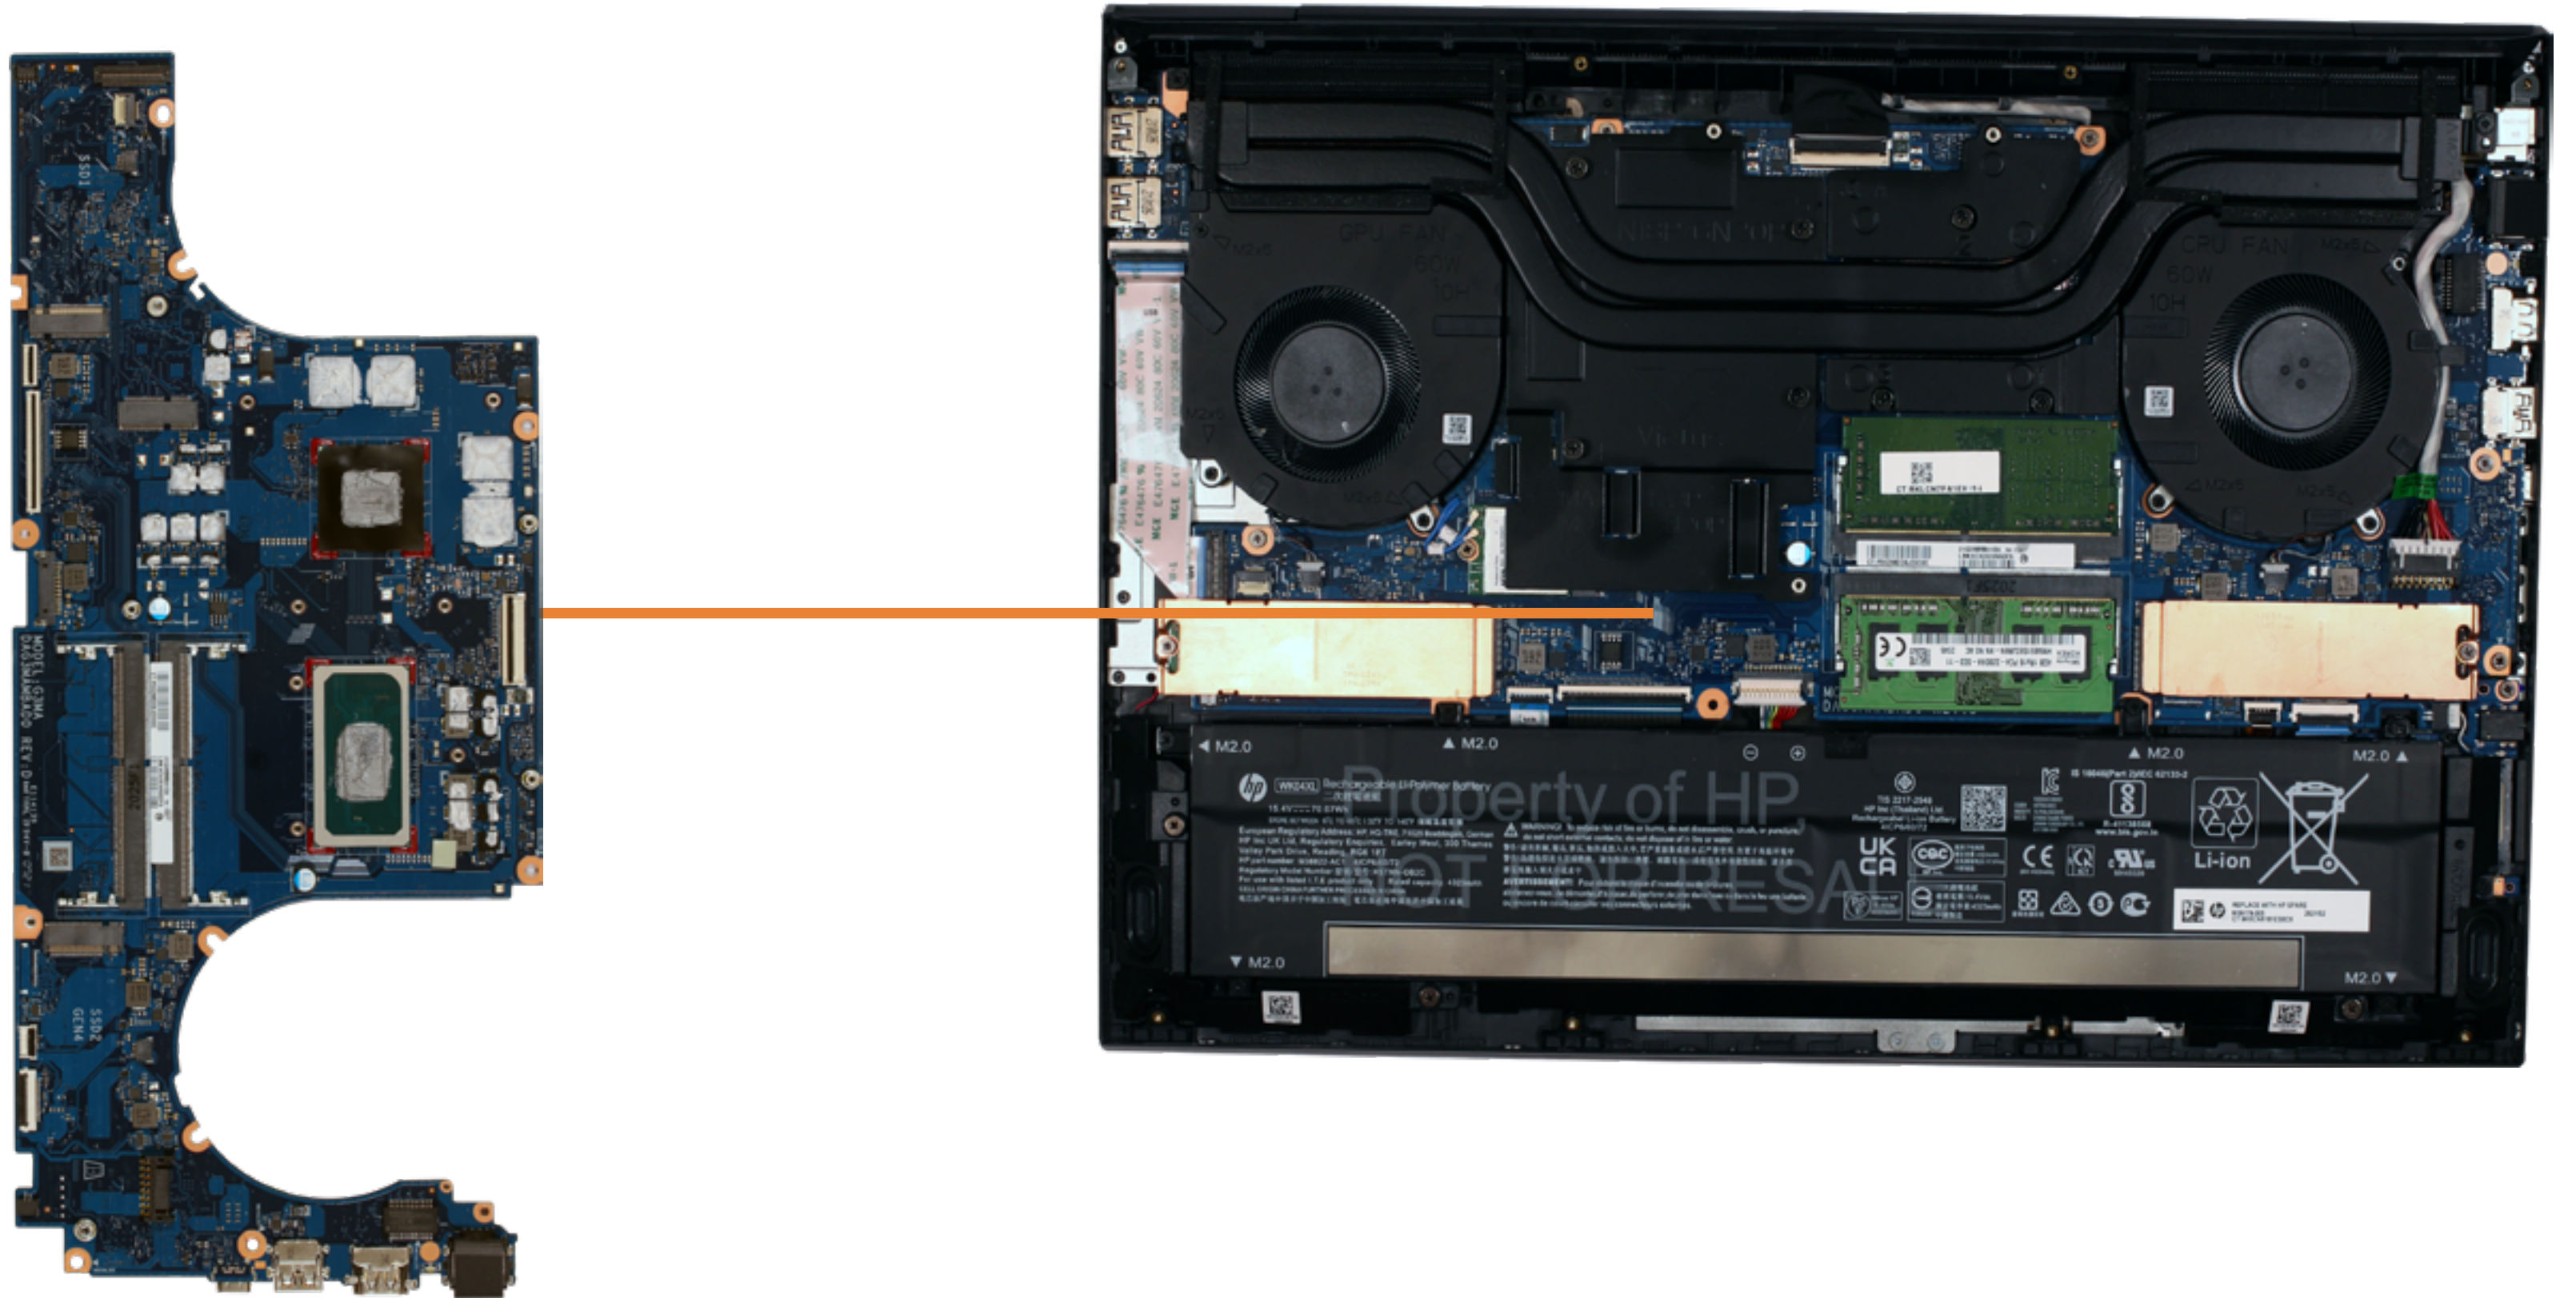

Card Reader Board

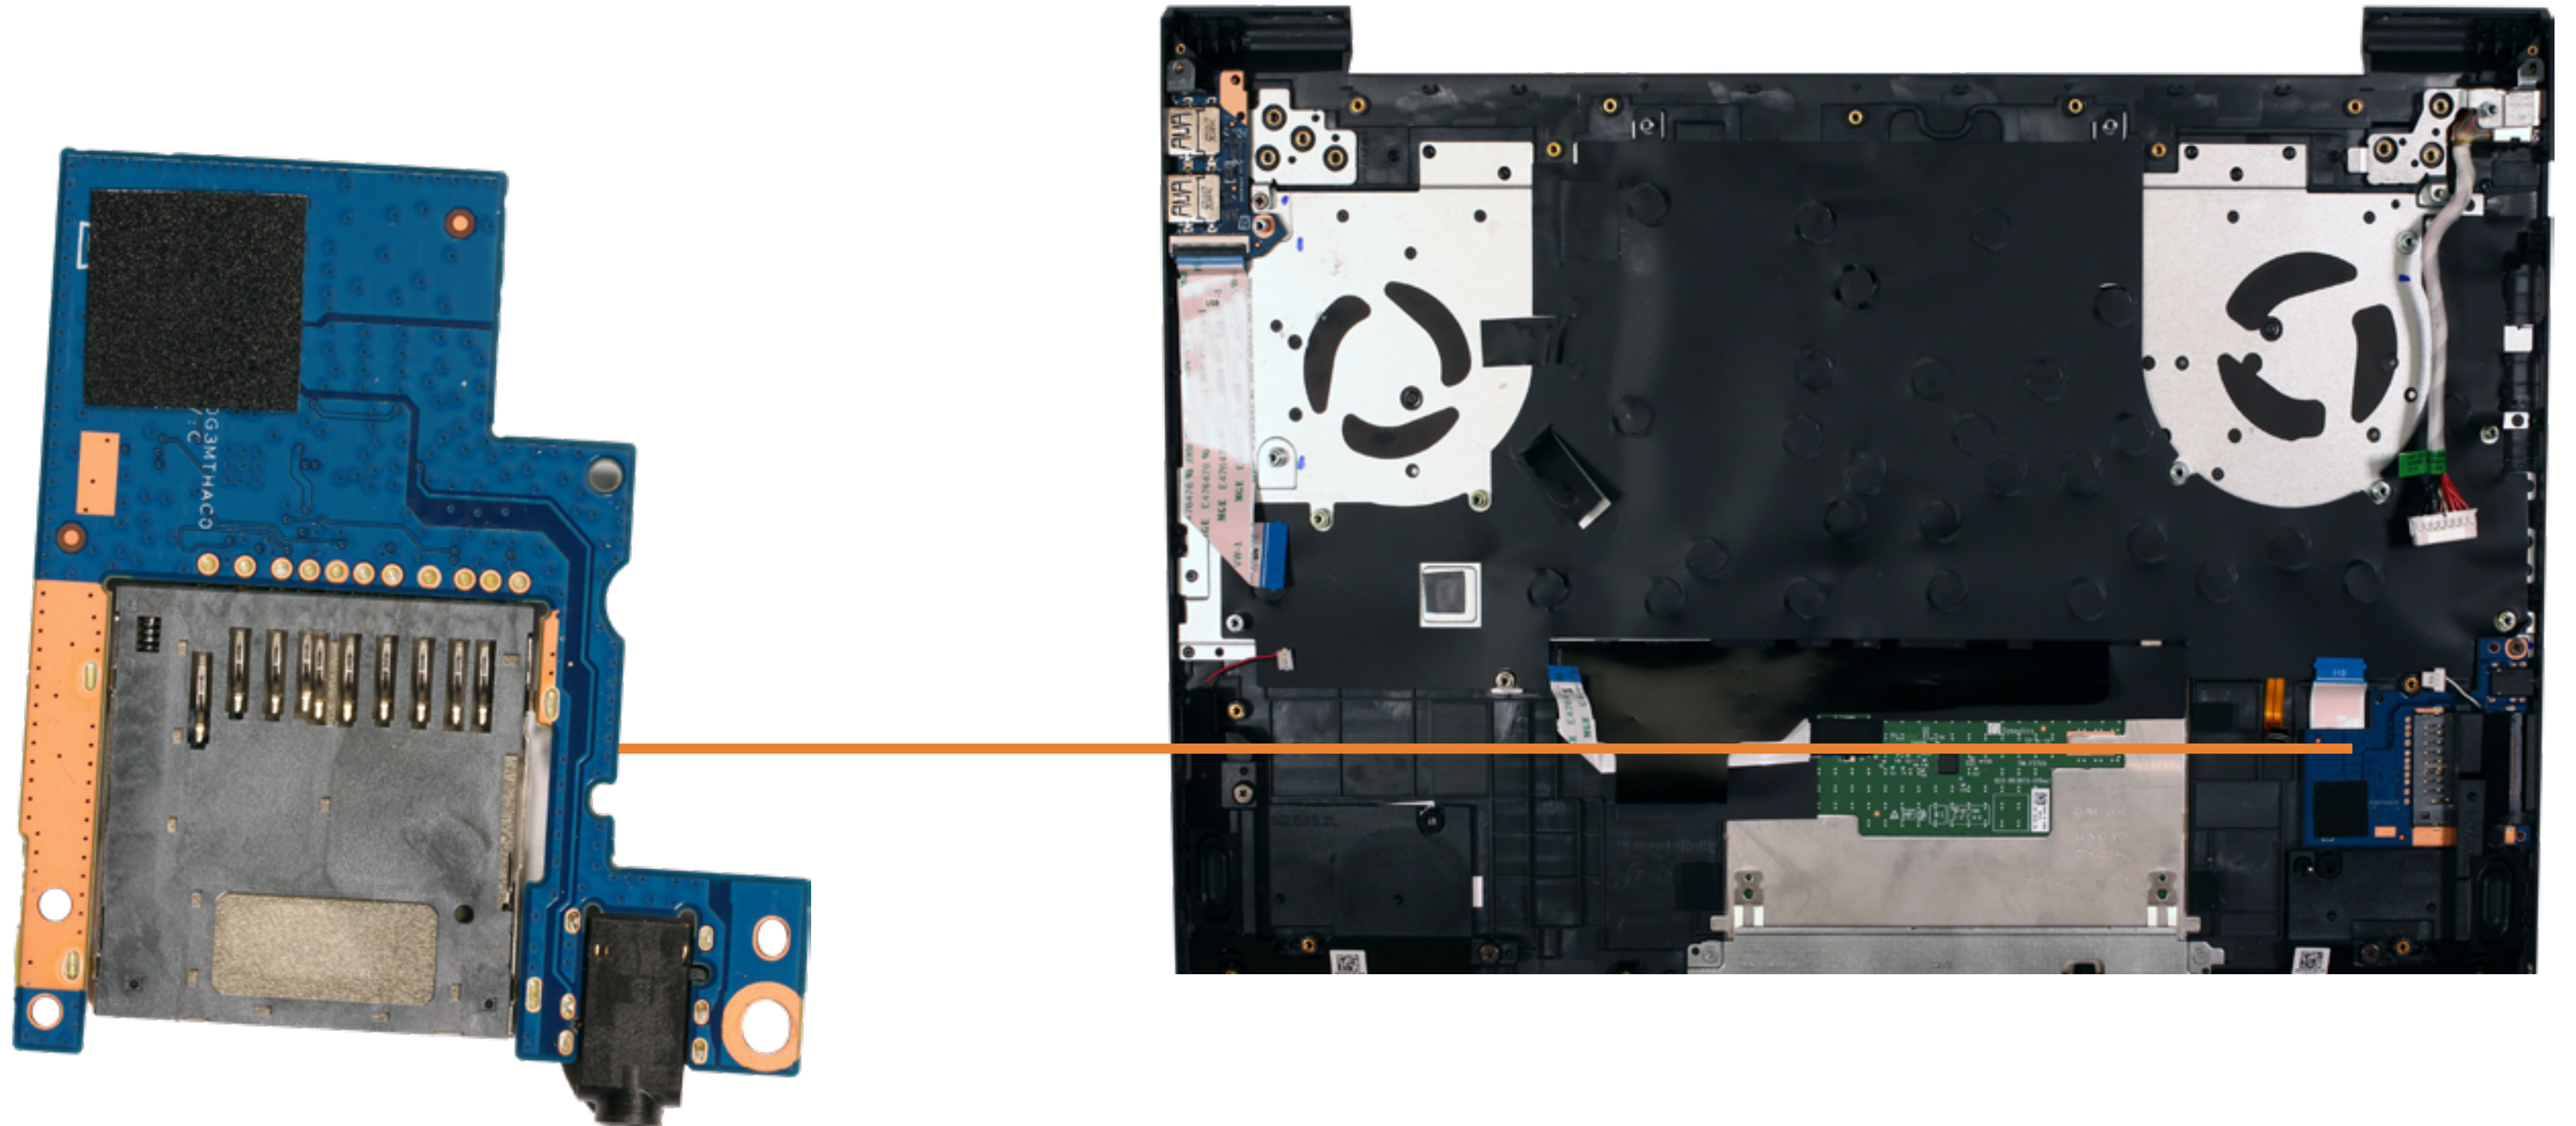

Touchpad Board

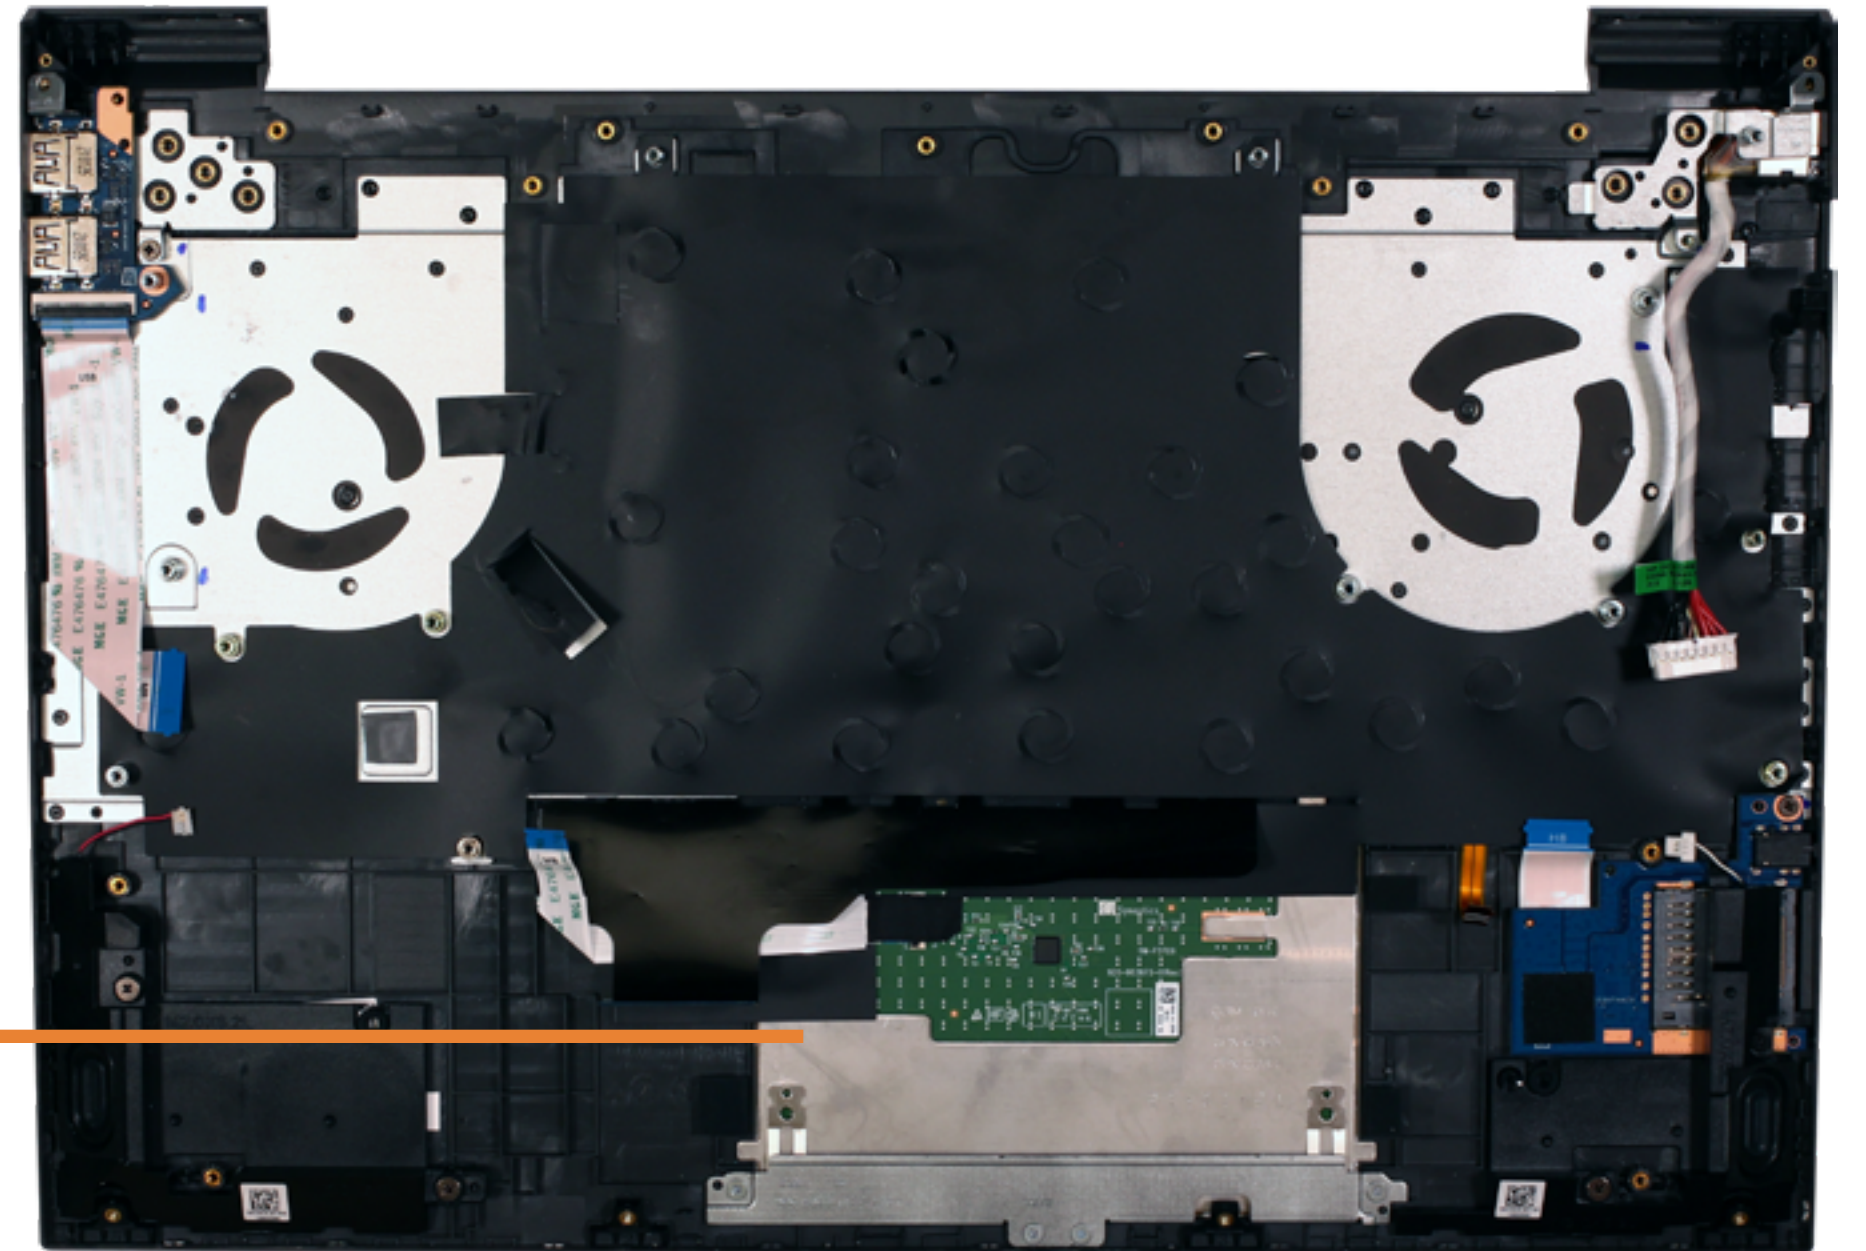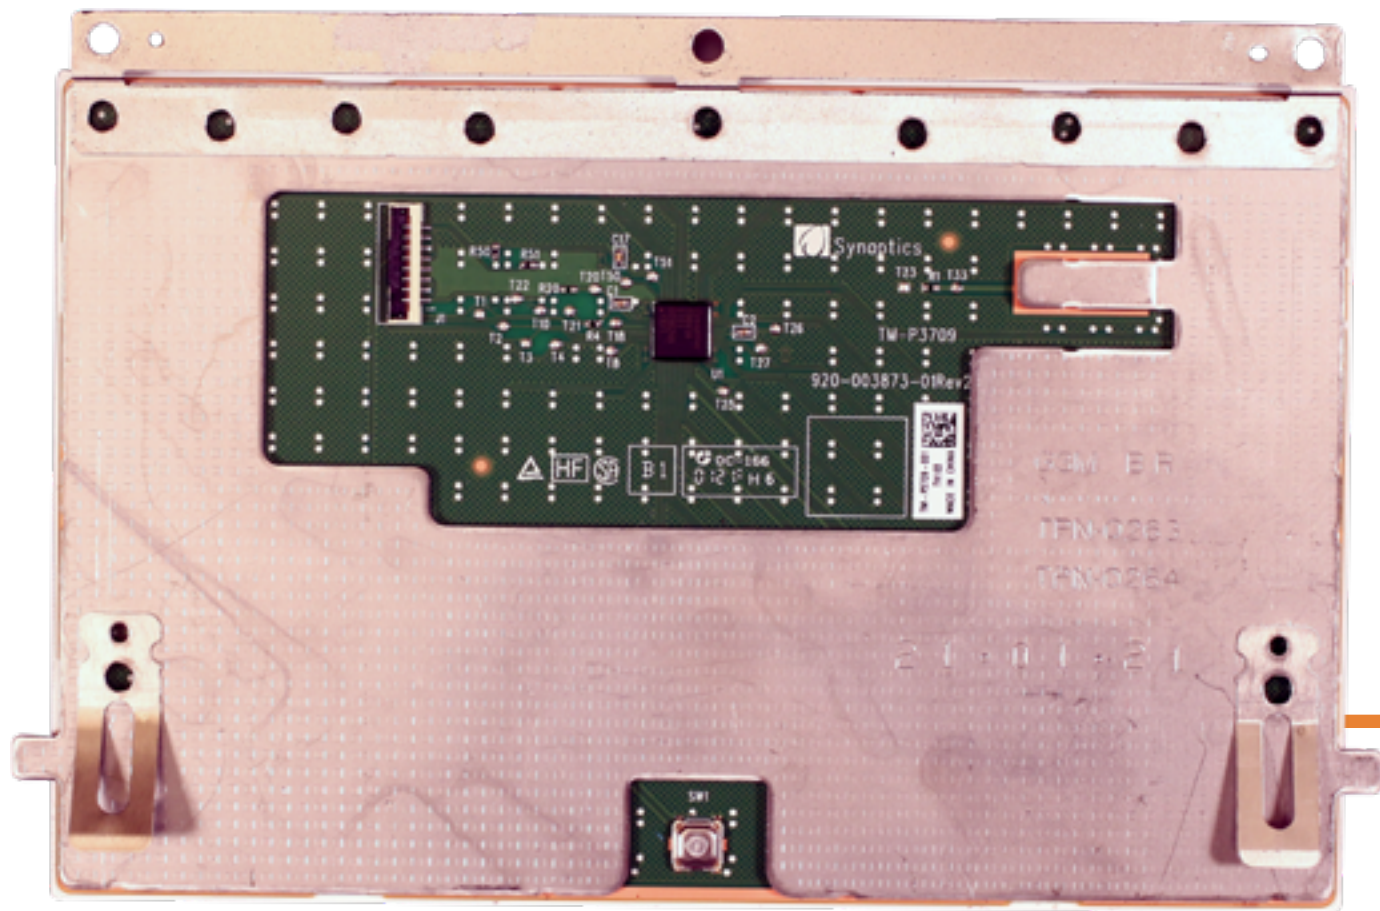

Top Cover



Top Cover

Display Panel Assembly



Display Panel Assembly

Display Bezel



Display Bezel

Display Panel



Display Panel

Support Bracket



Webcam



Display Panel Hinges

