

Interactive Part Locator

HP EliteOne 800 G8 AiO PC

Welcome to the interactive part locator for the
HP EliteOne 800 G8 AiO PC

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left

Right

Rear

Internal

Parts List


Front View




Left View




Right View

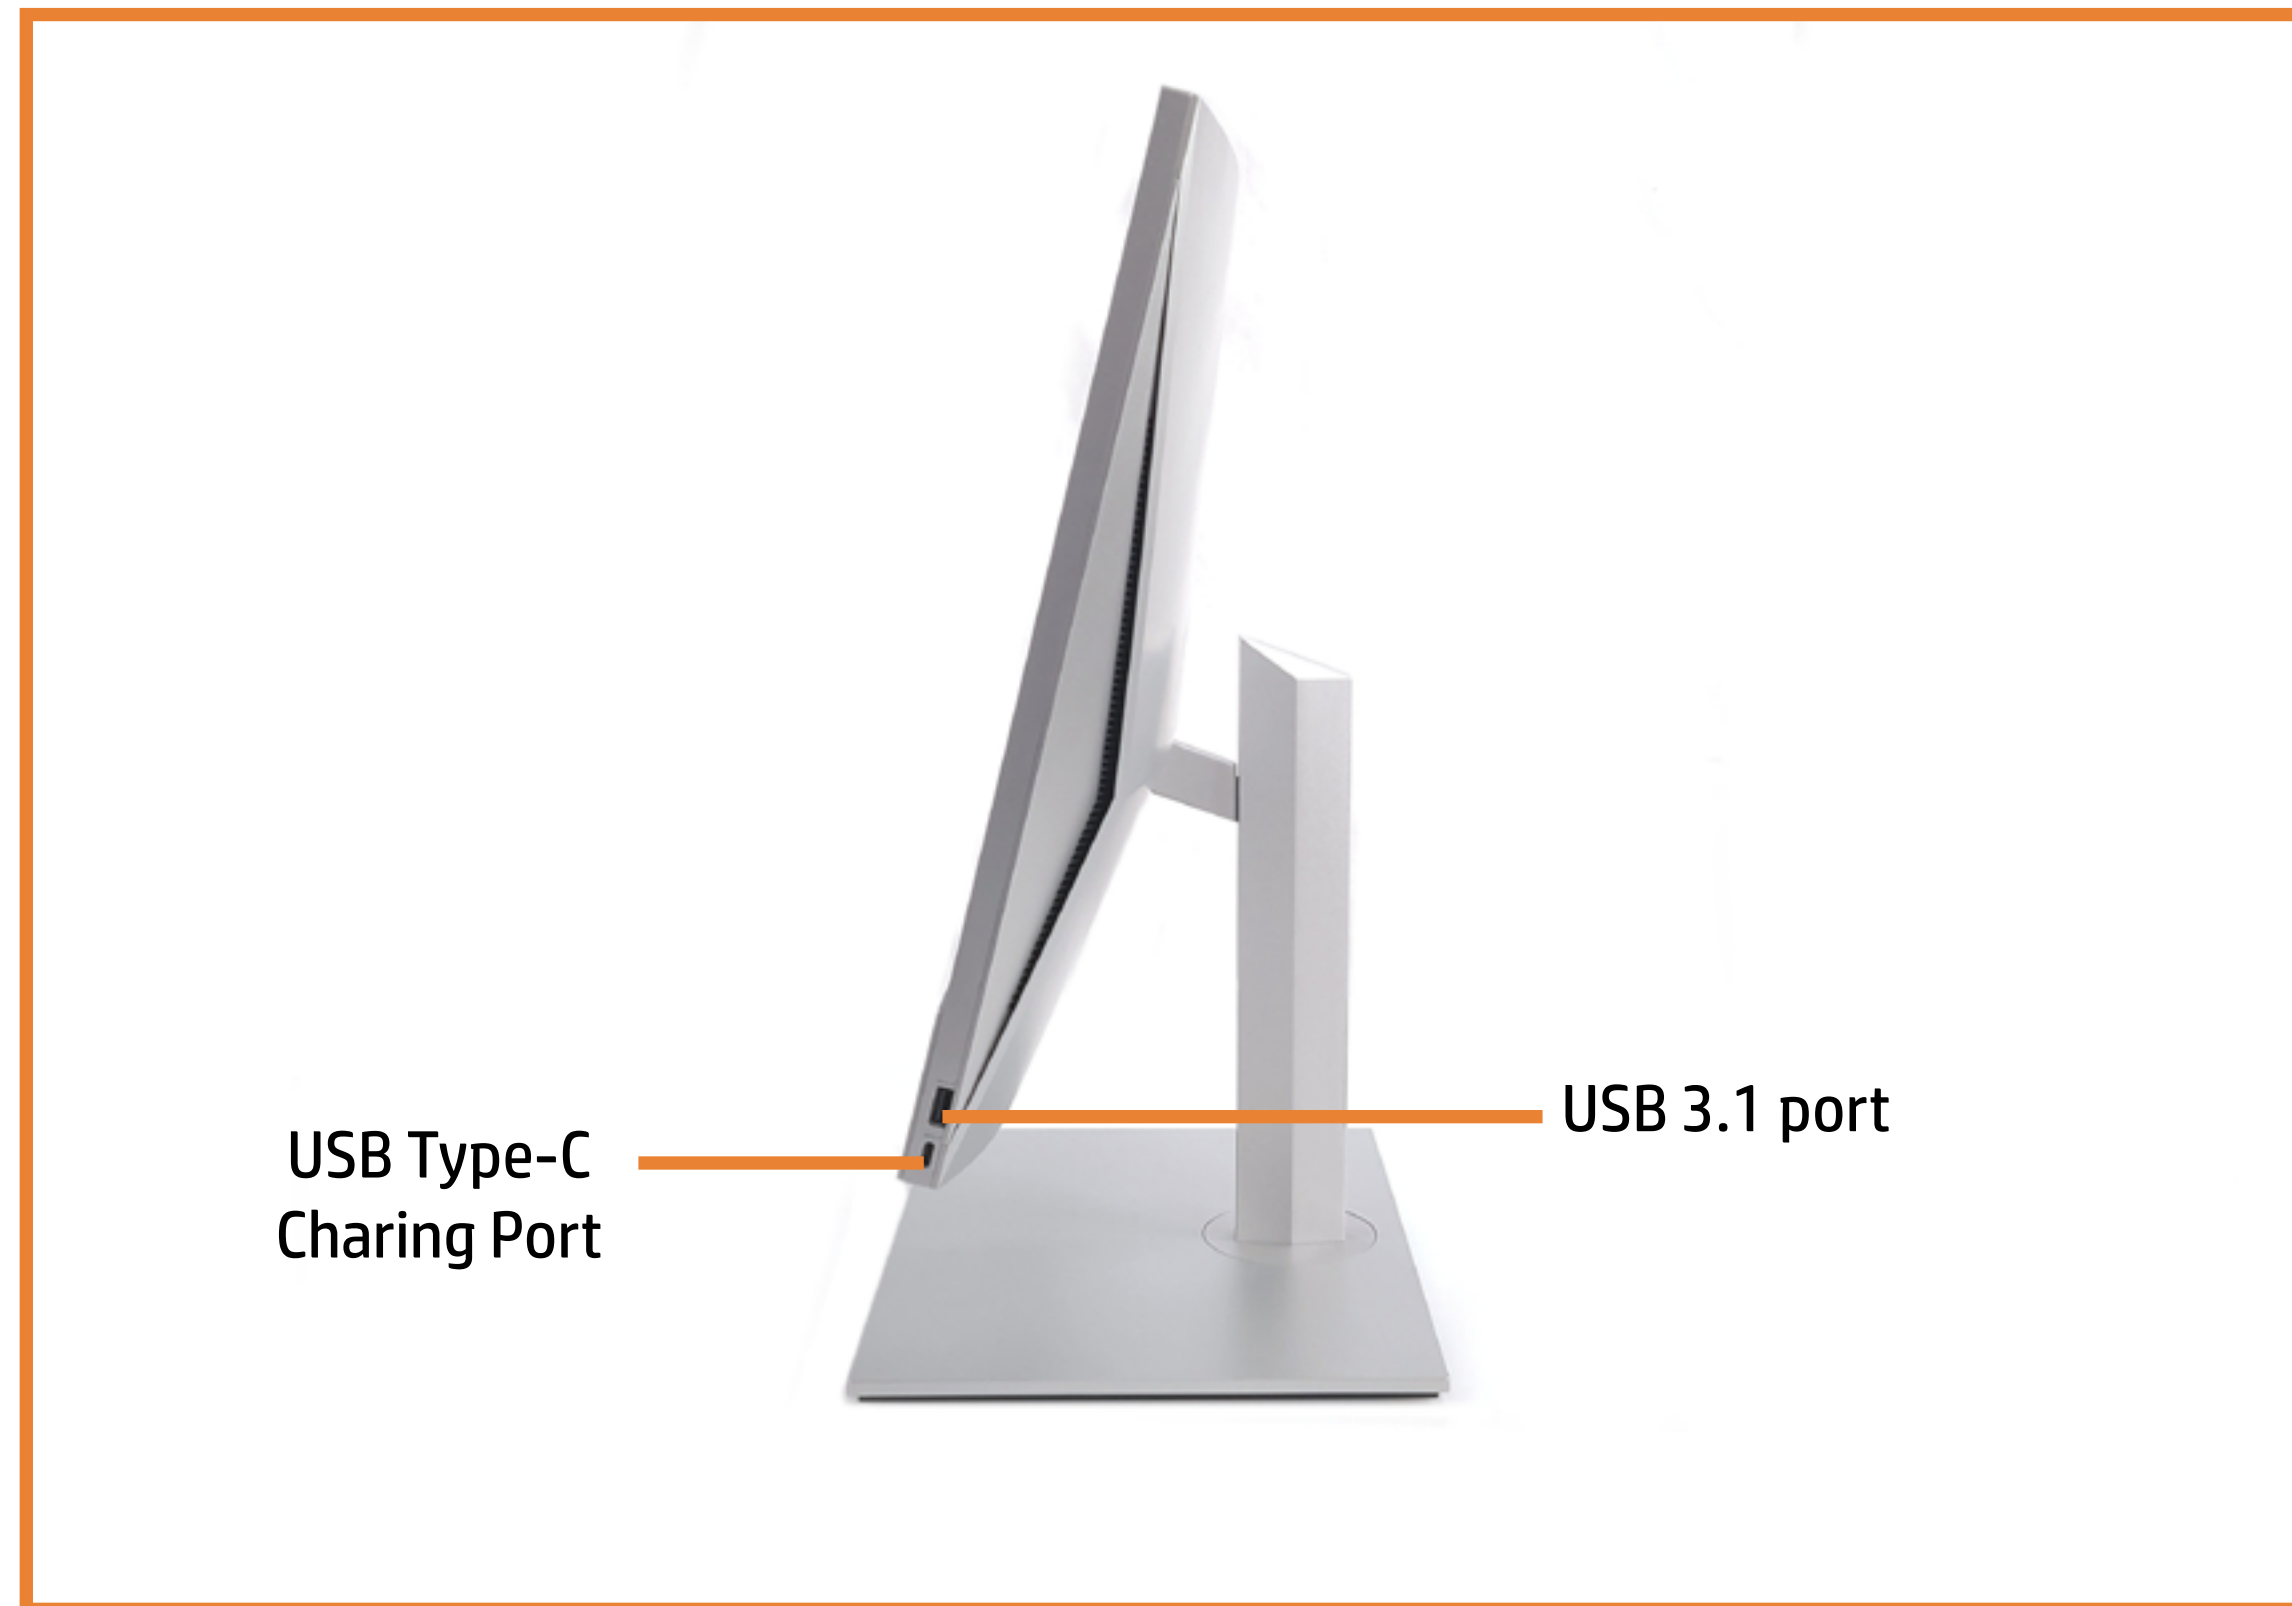

Rear View

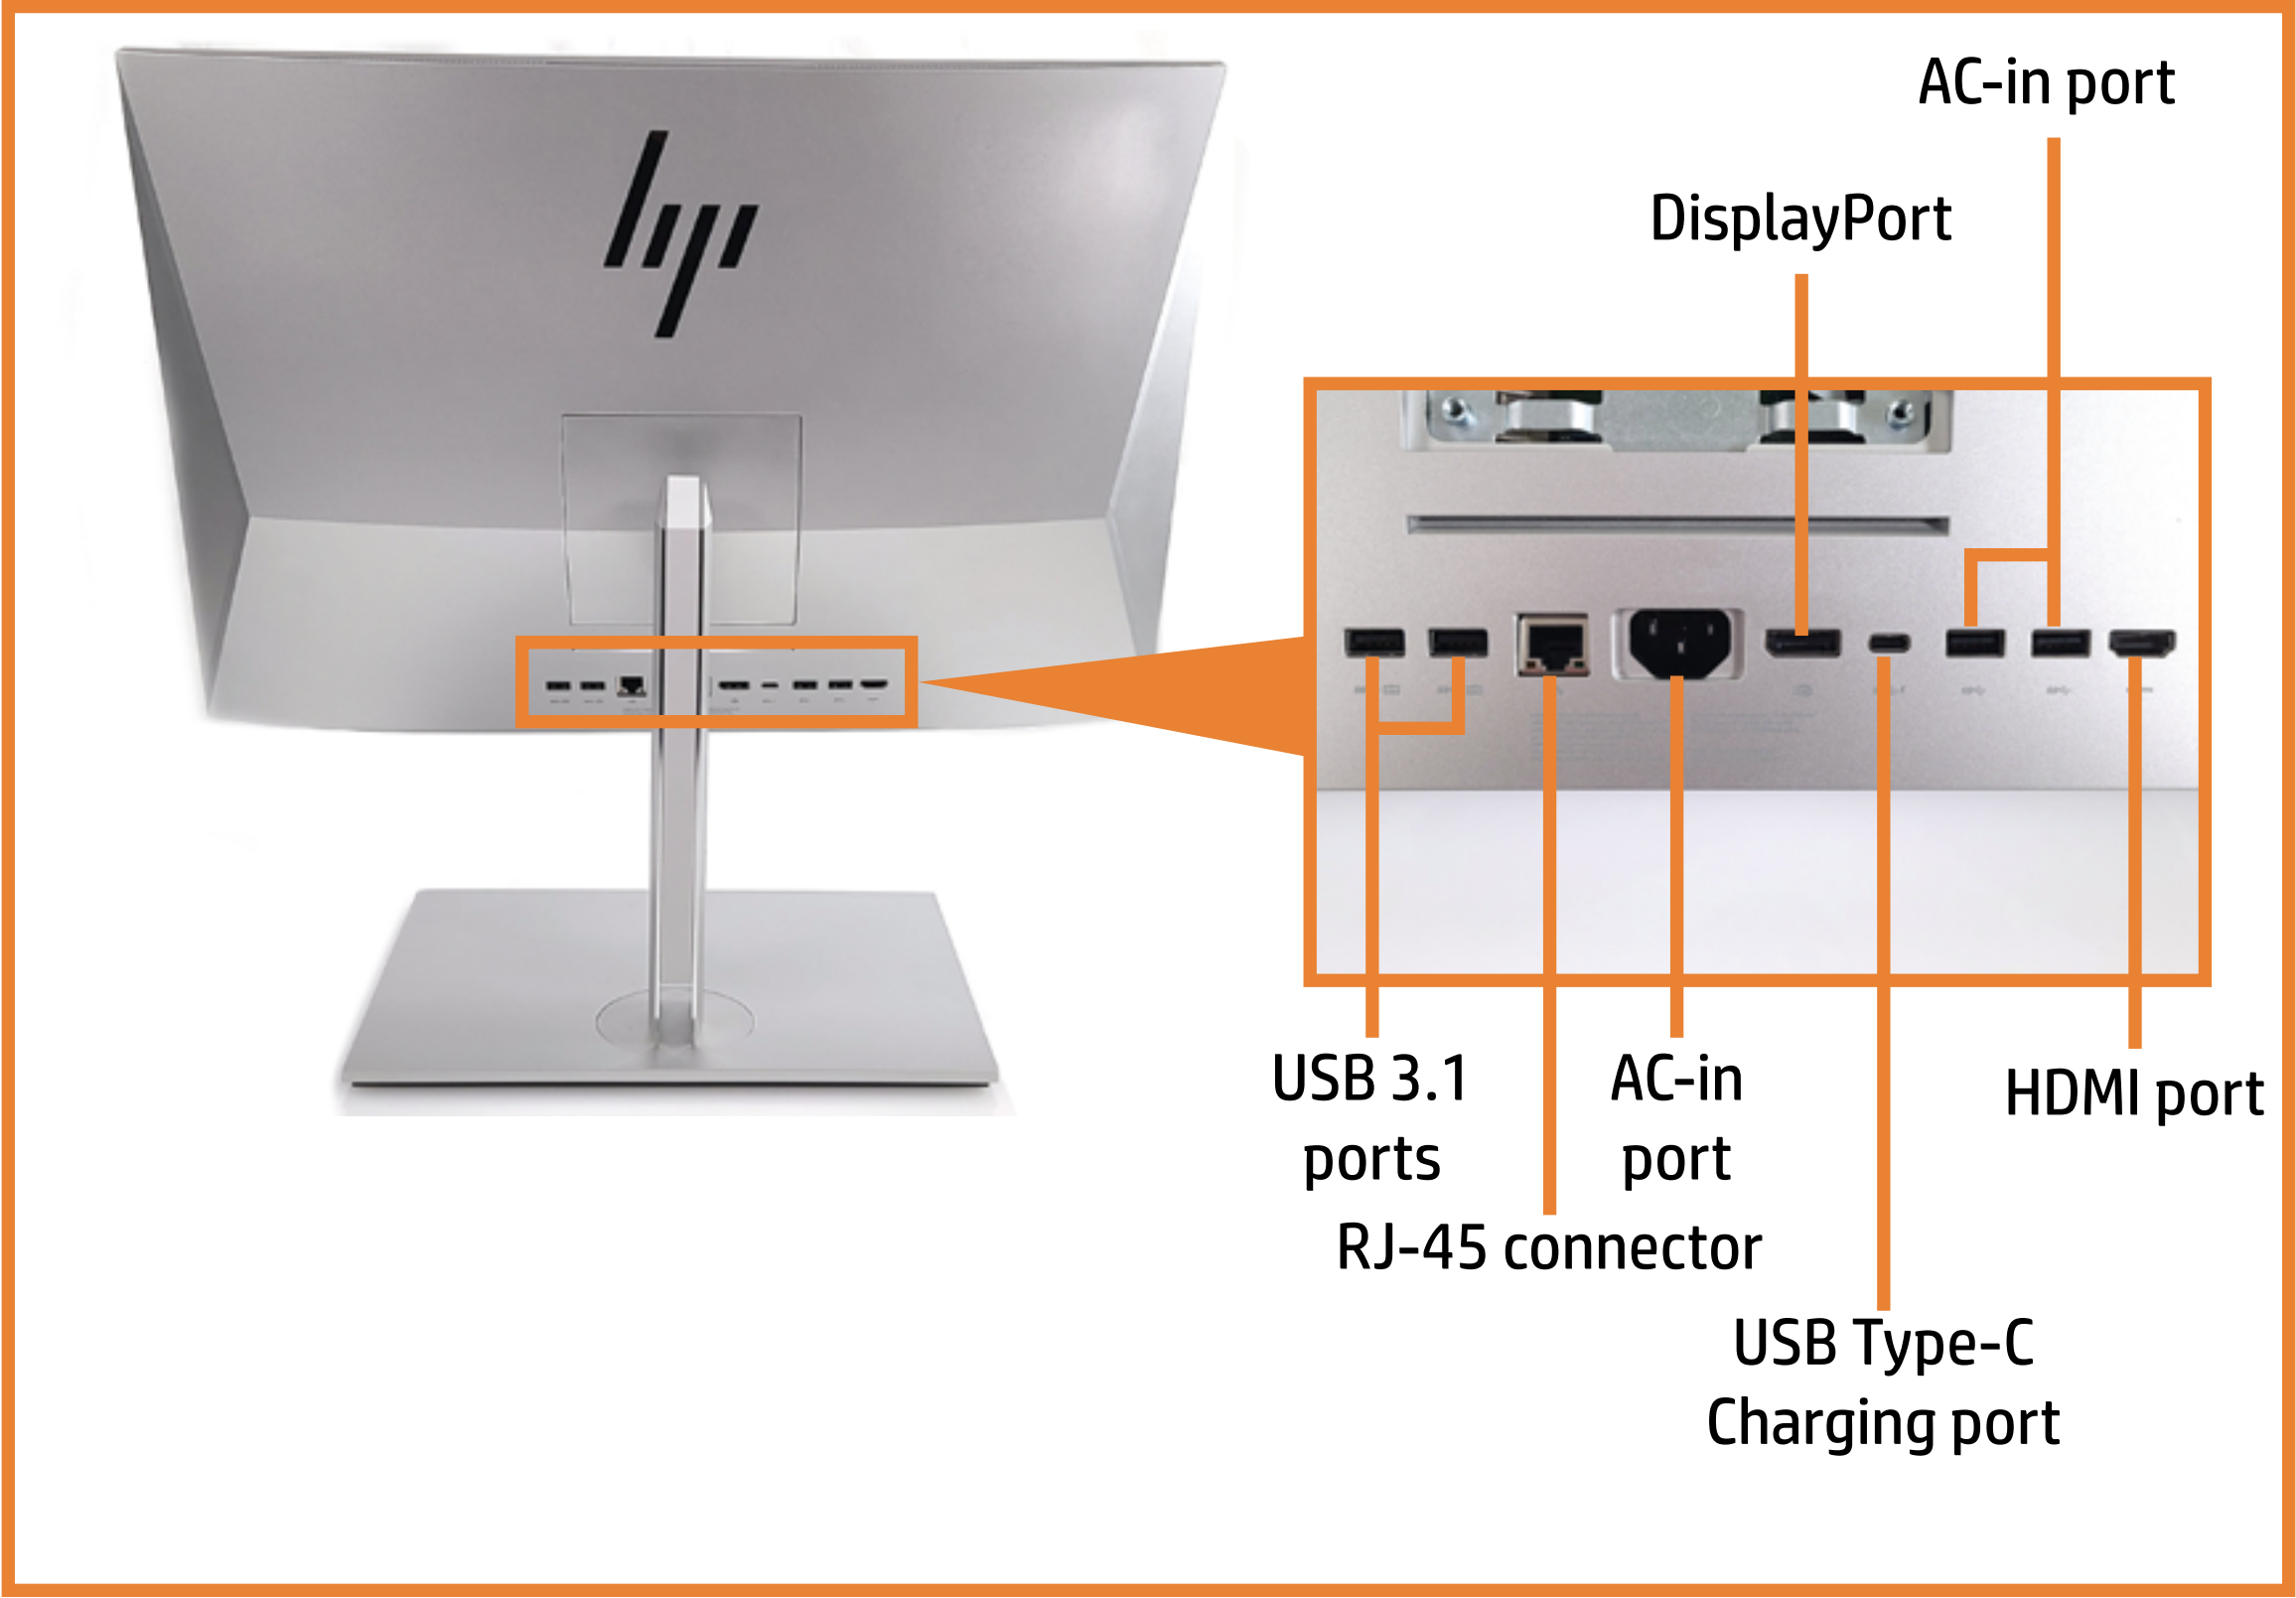


Internal View 1

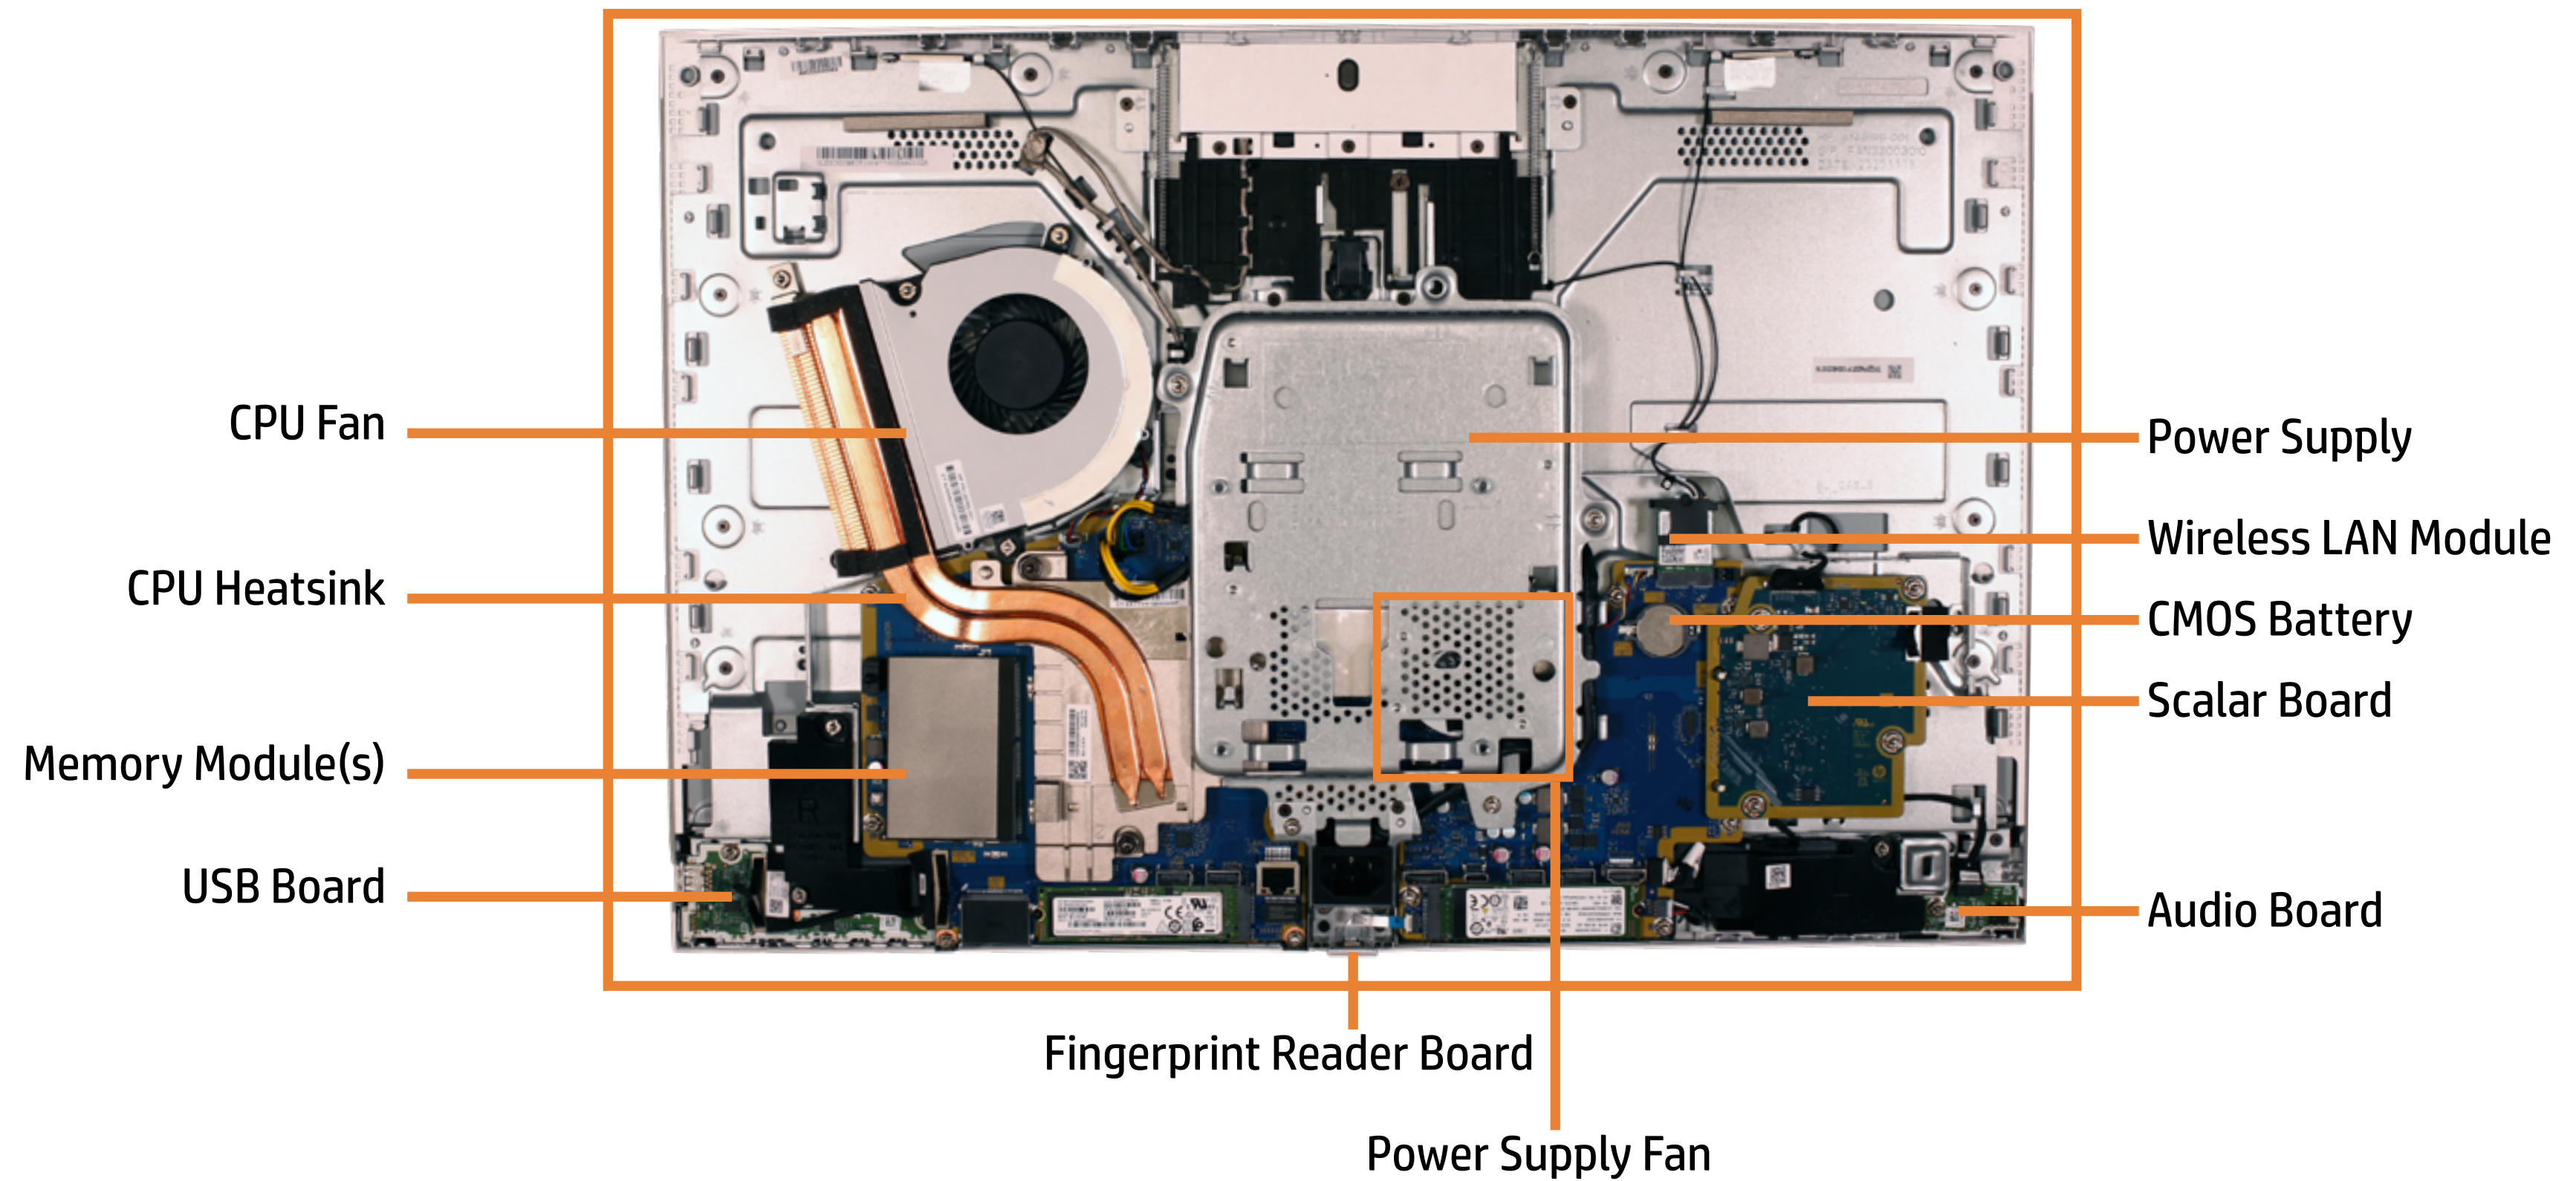

Internal View 2

Webcam Assembly

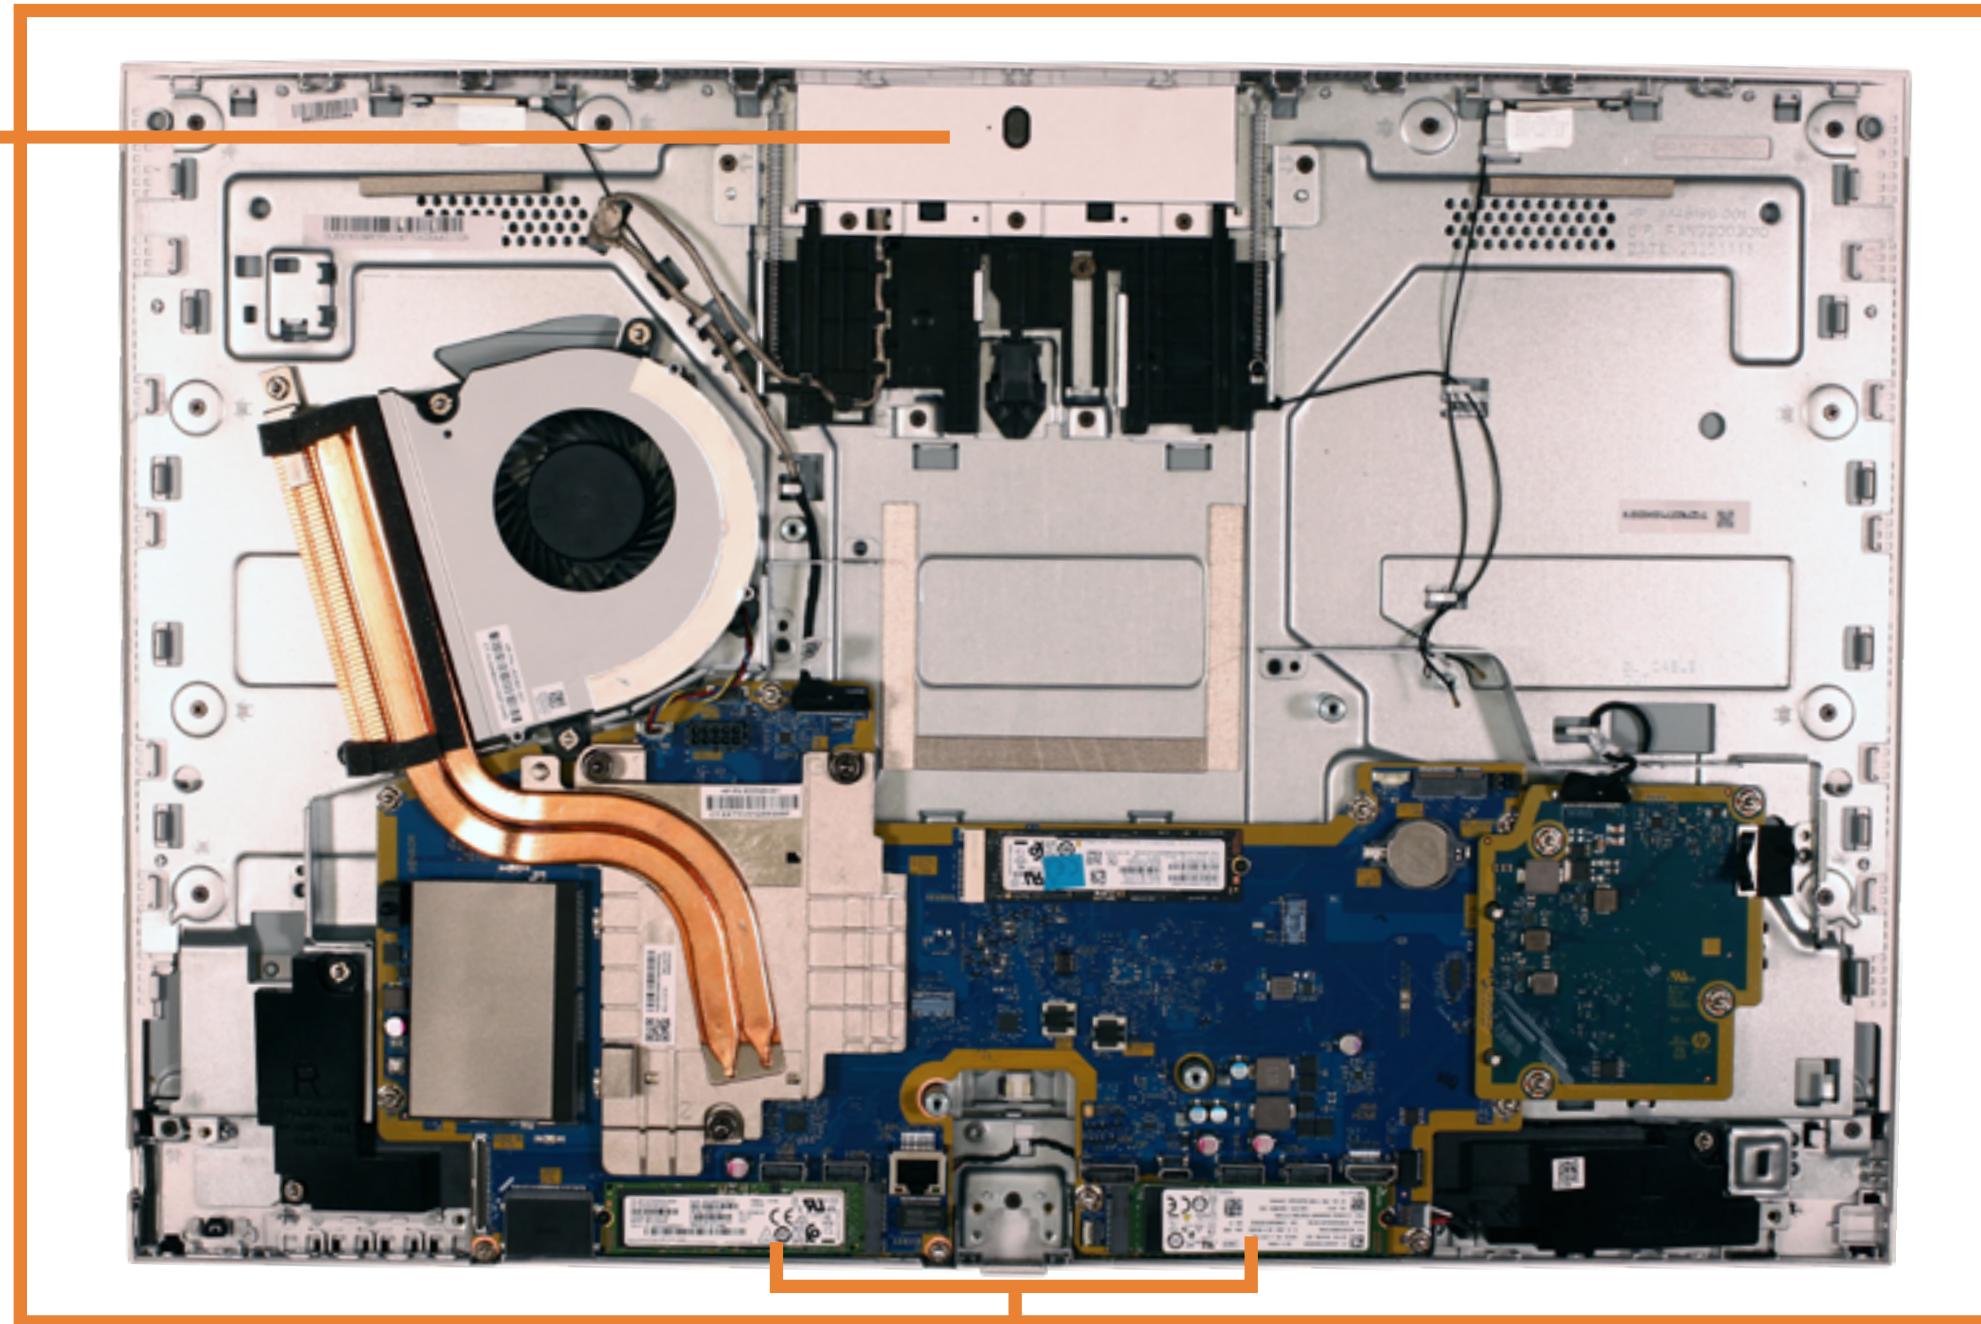

M.2 Solid State Drive

Display Stand




Display Stand

Rear Cover




Rear Cover


Memory Module(s)

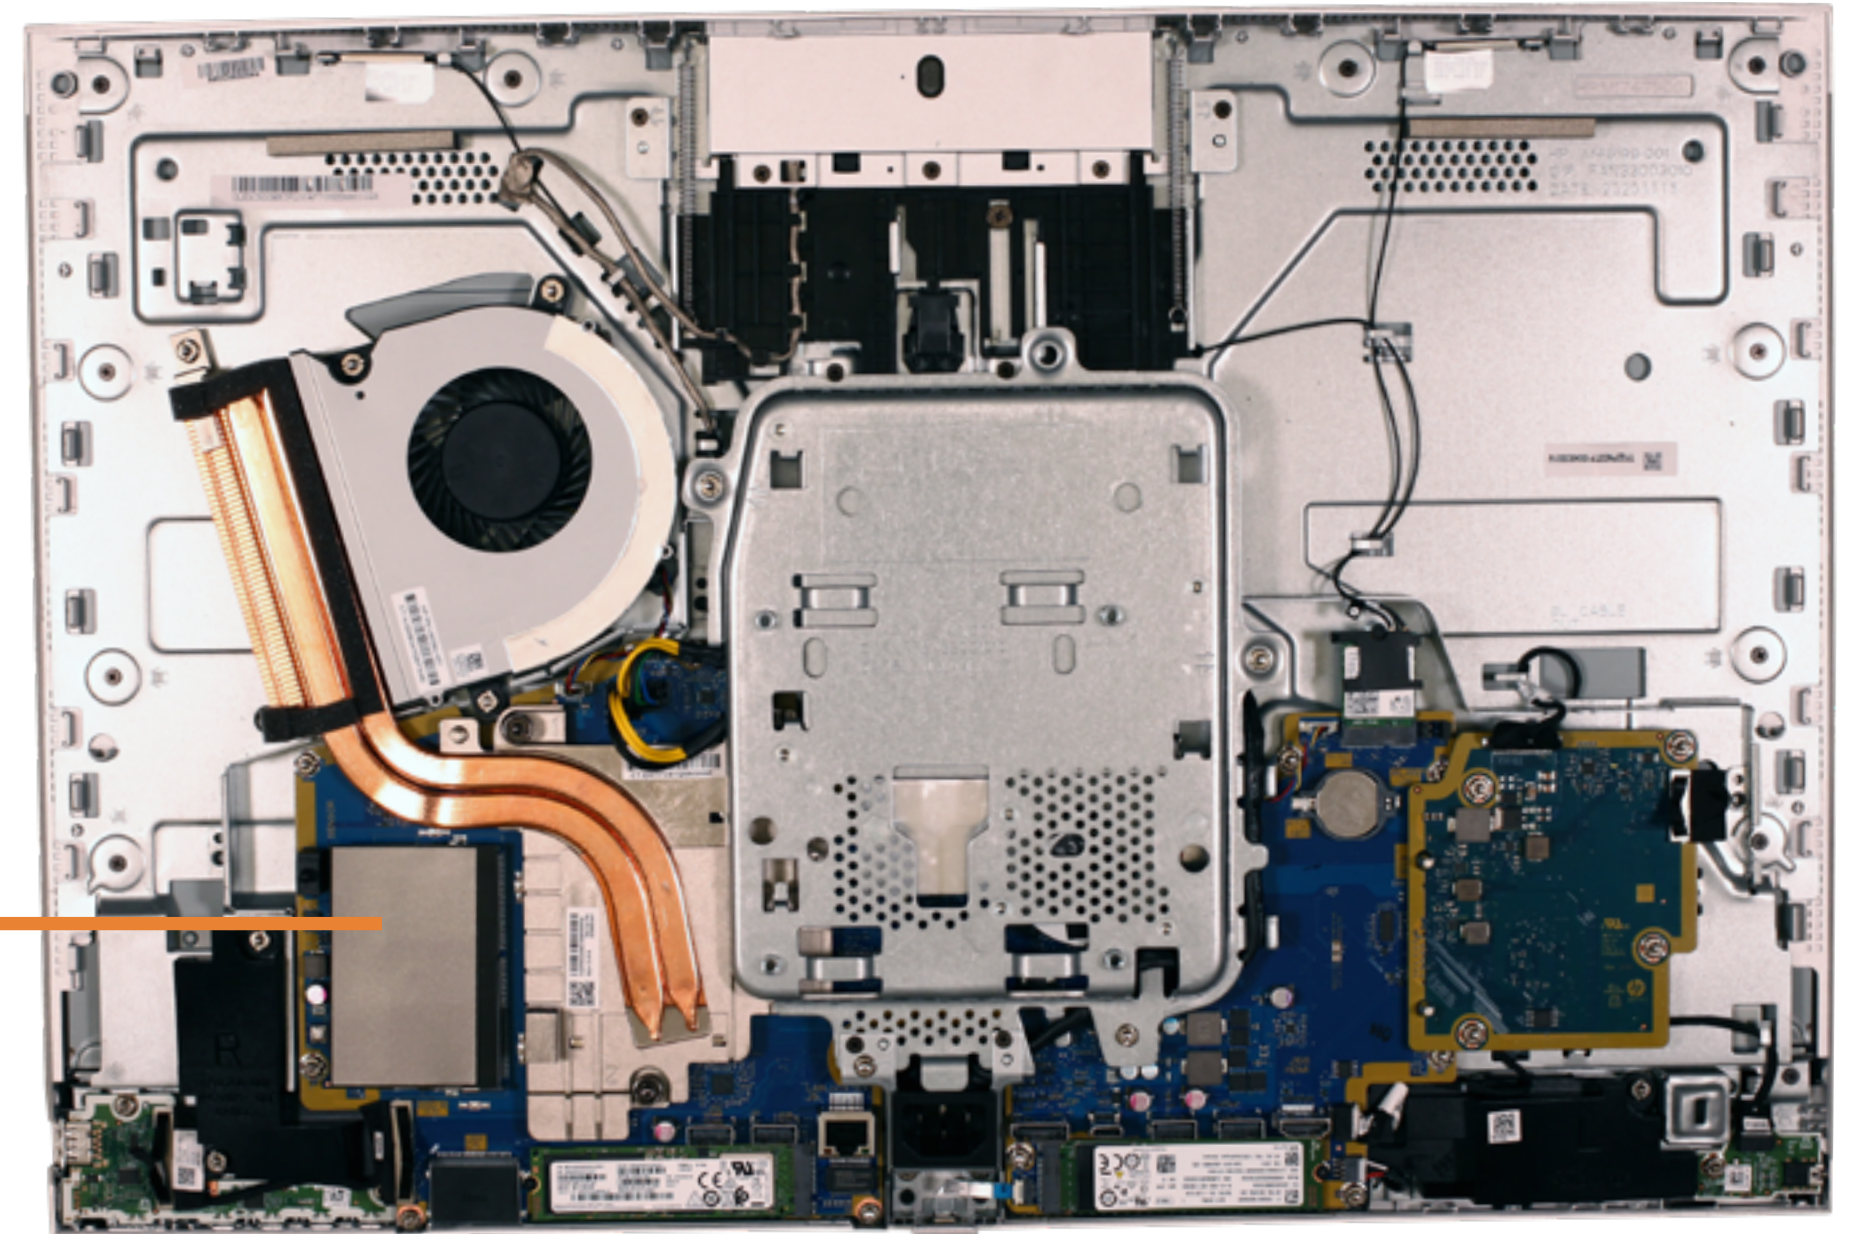



CMOS Battery

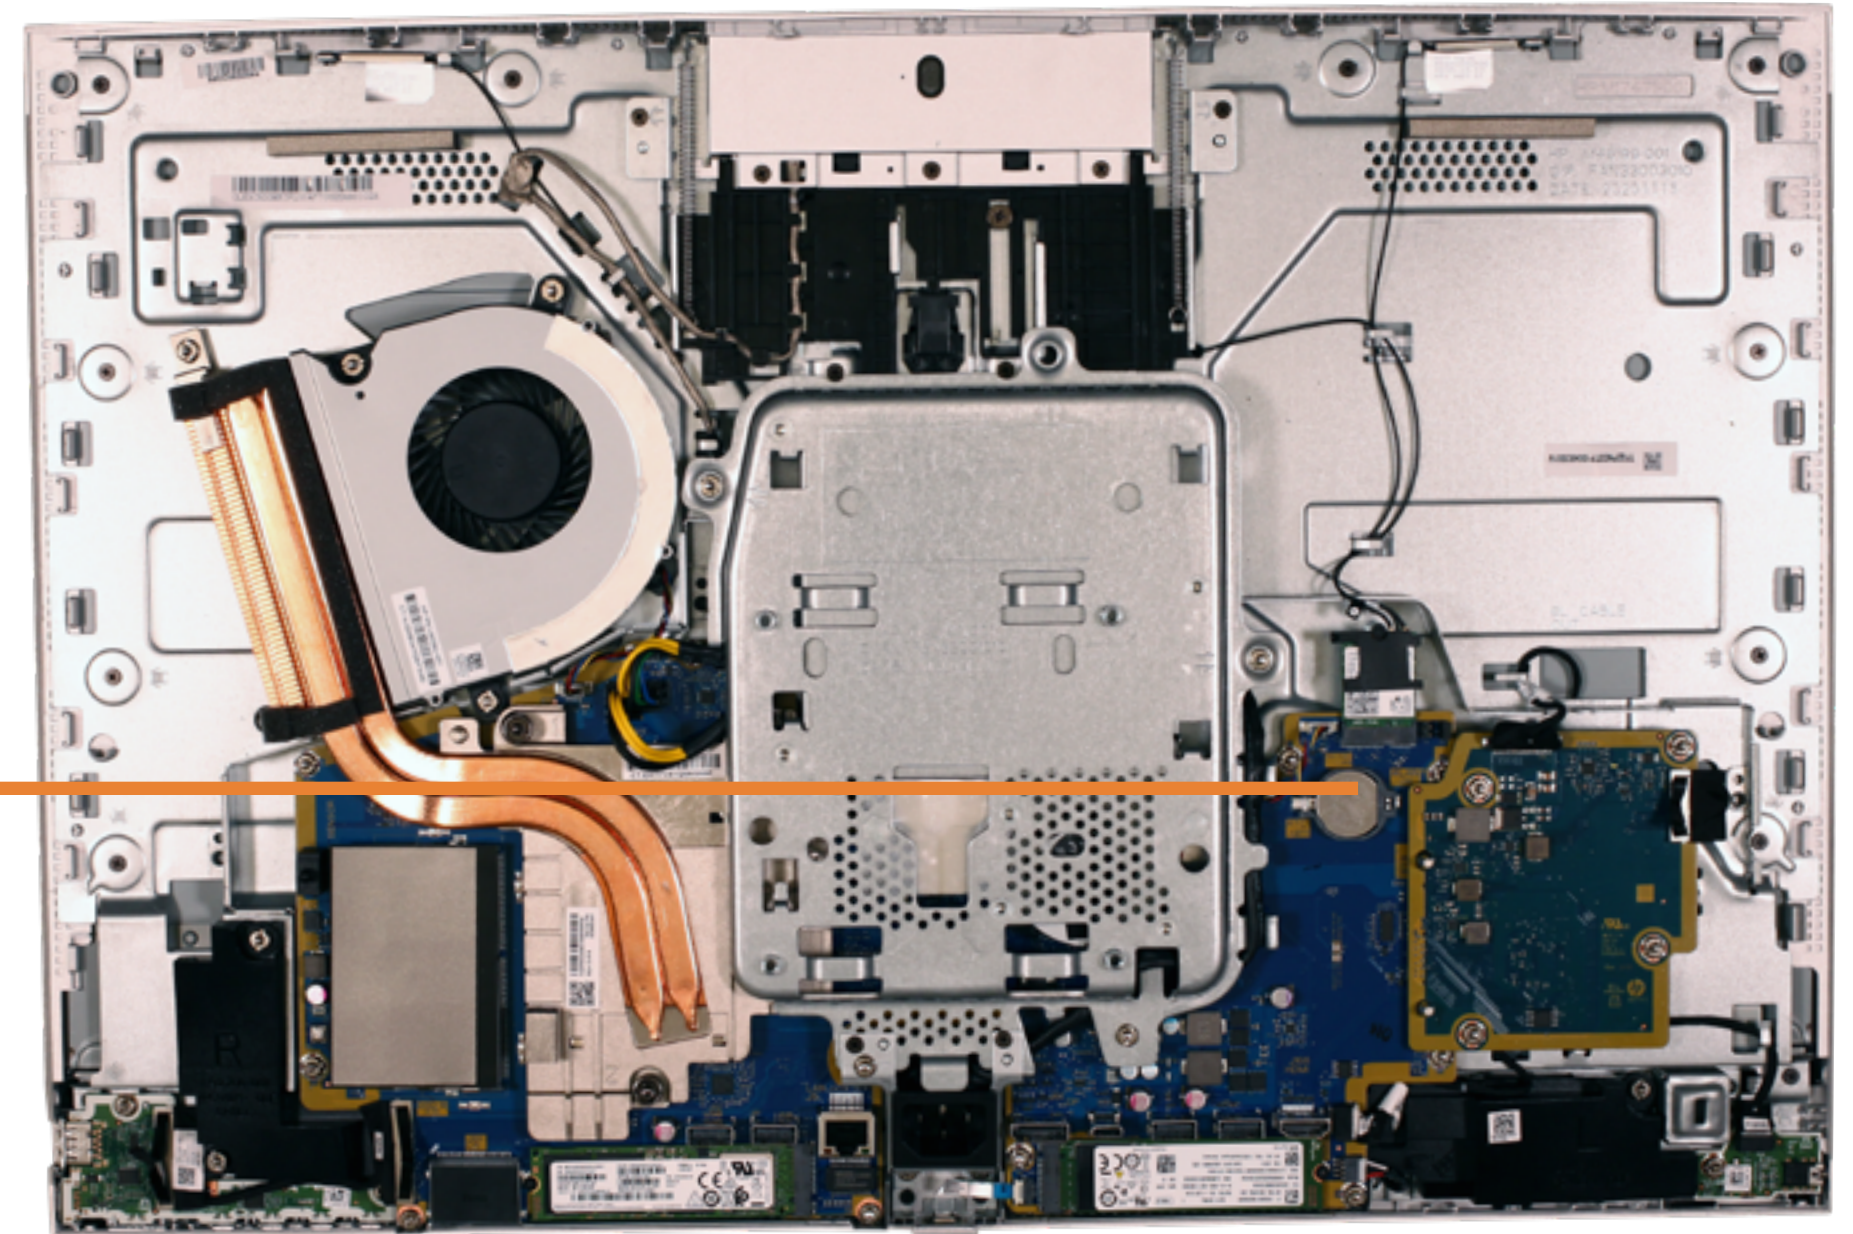



CPU Fan

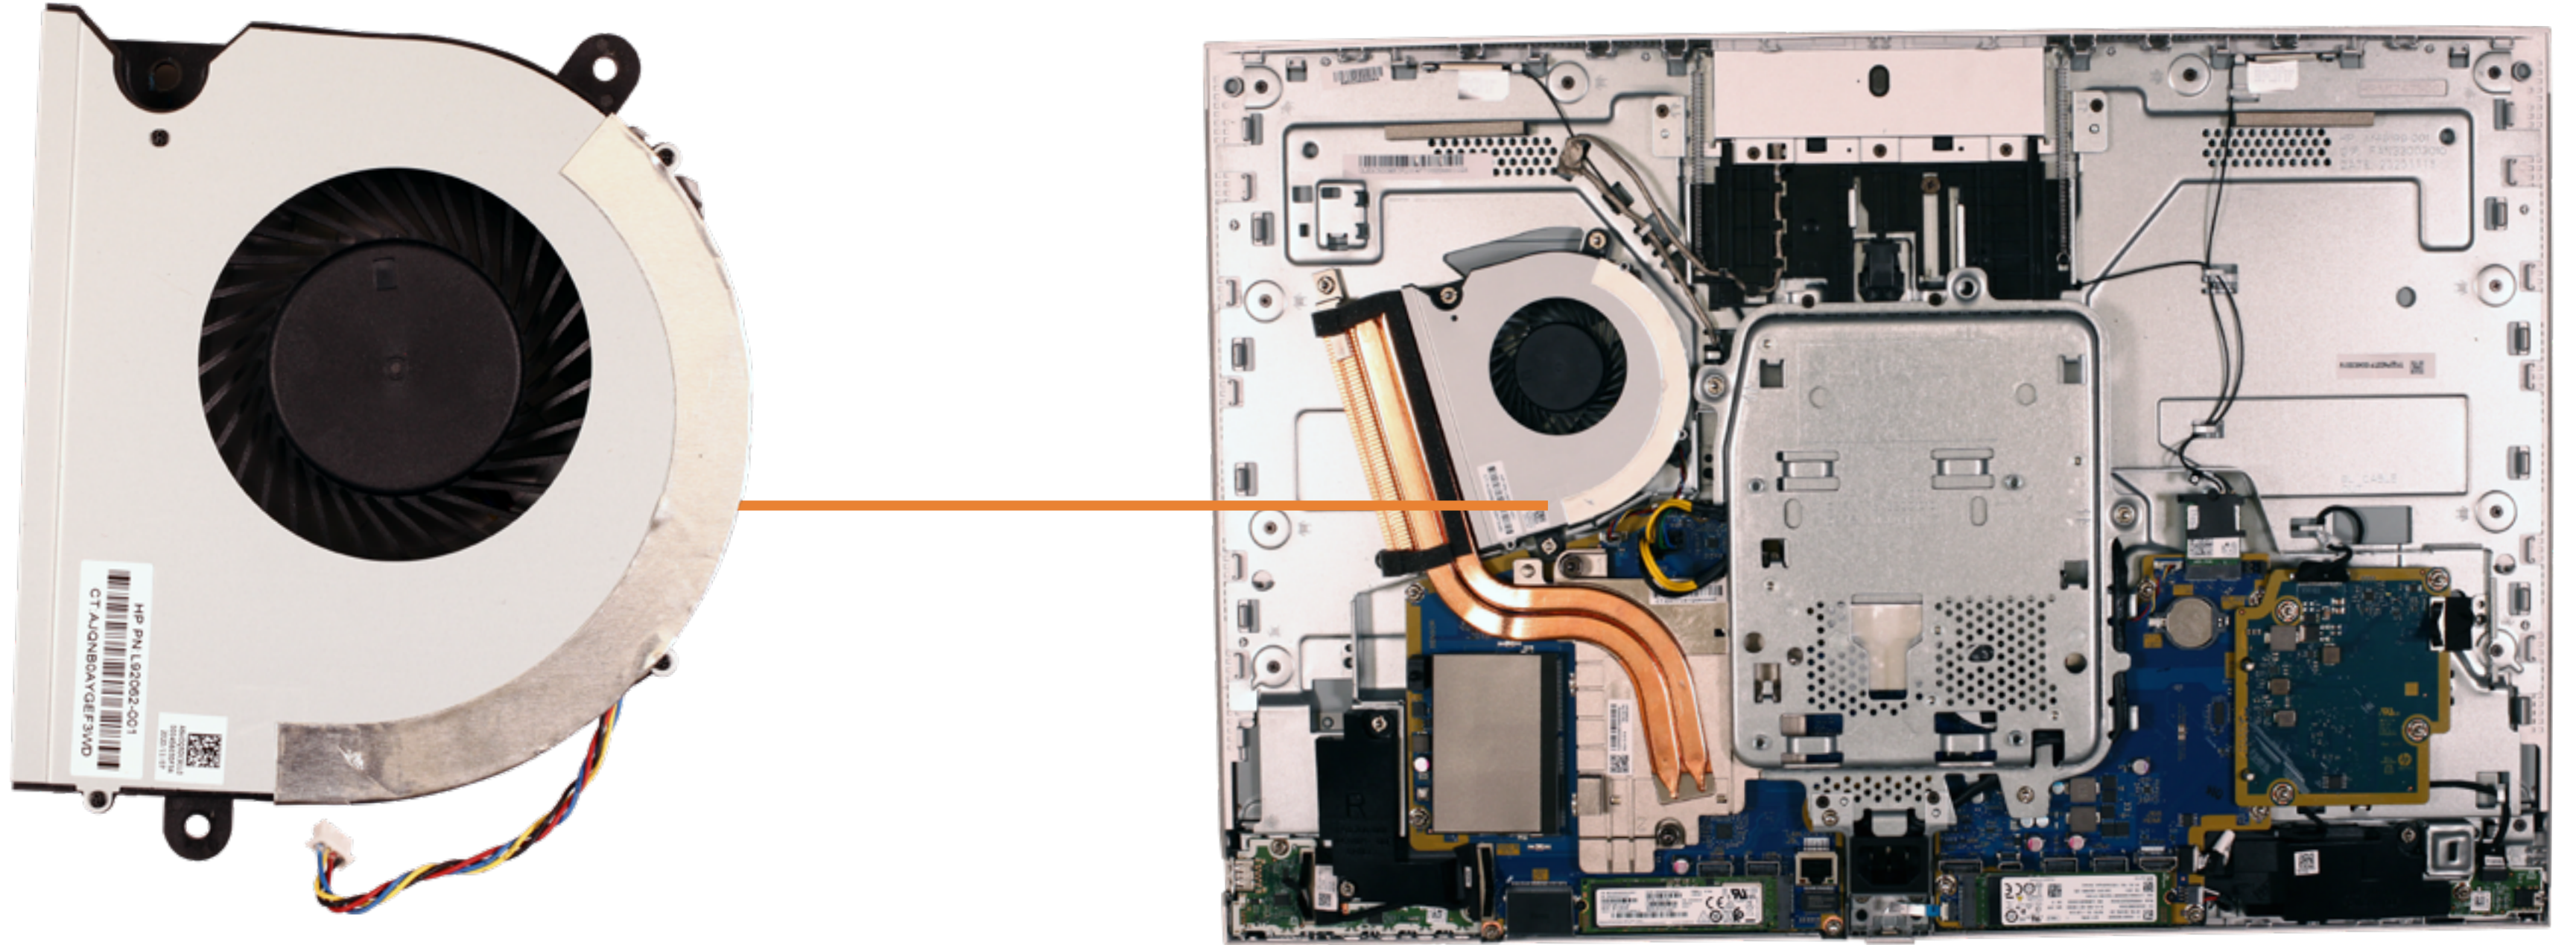



Audio Board

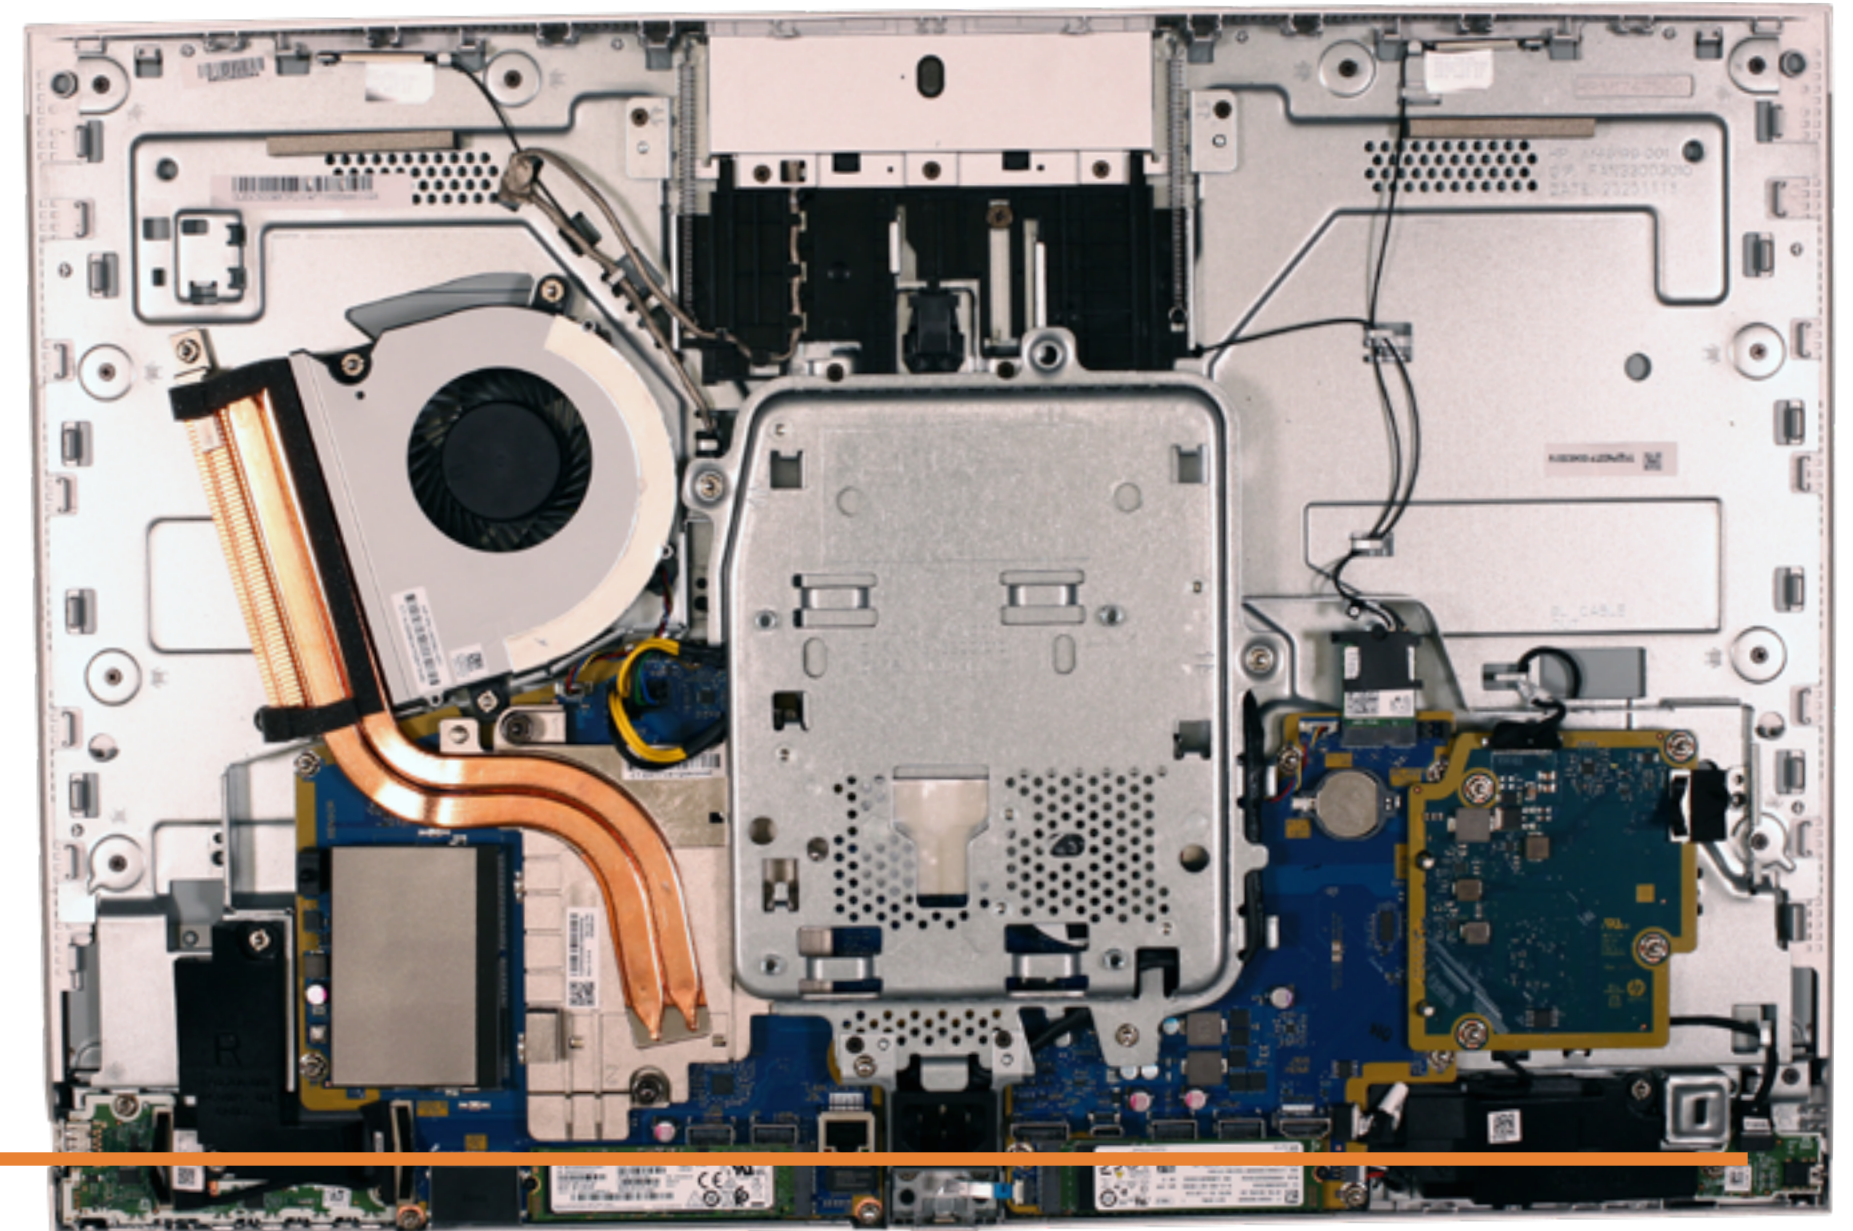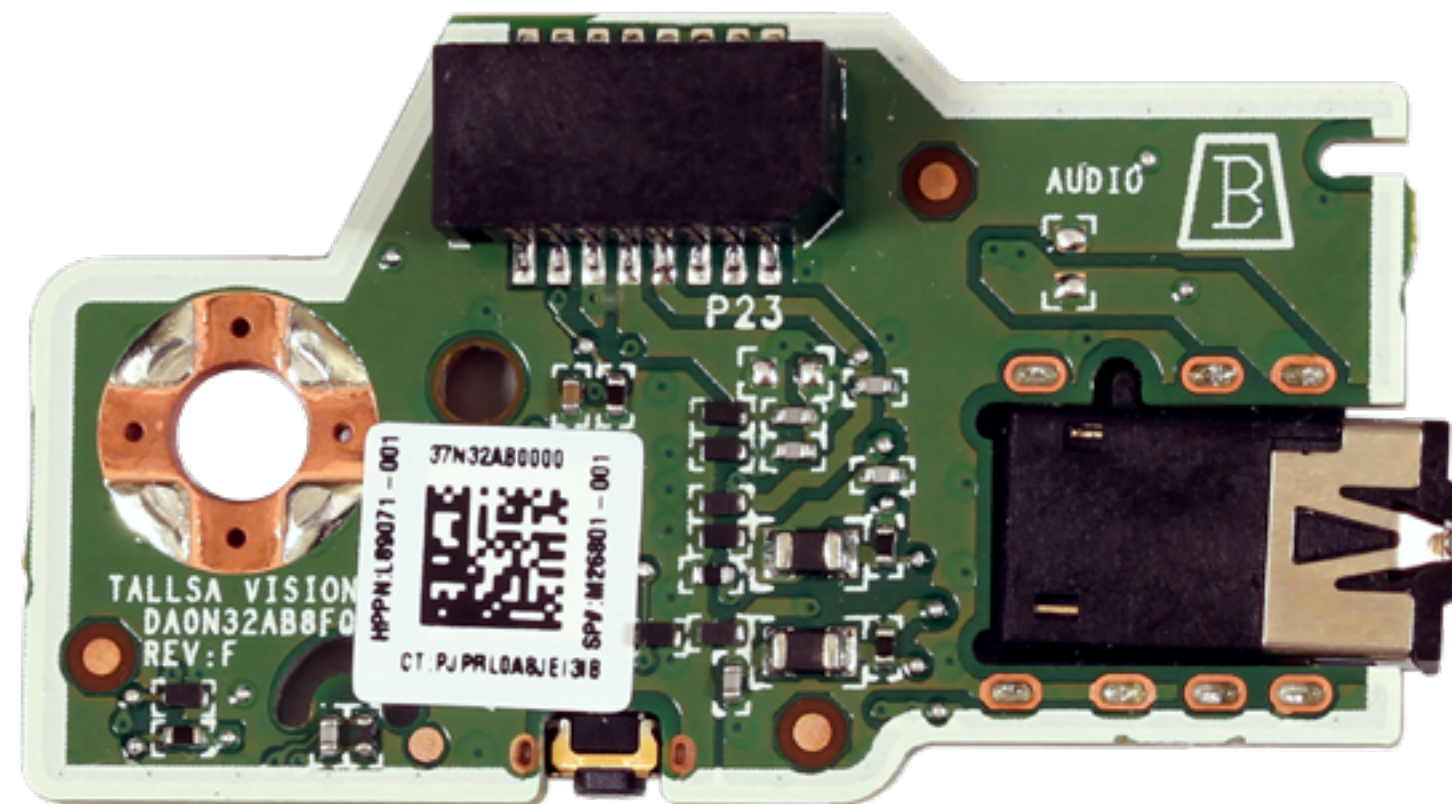


USB Board

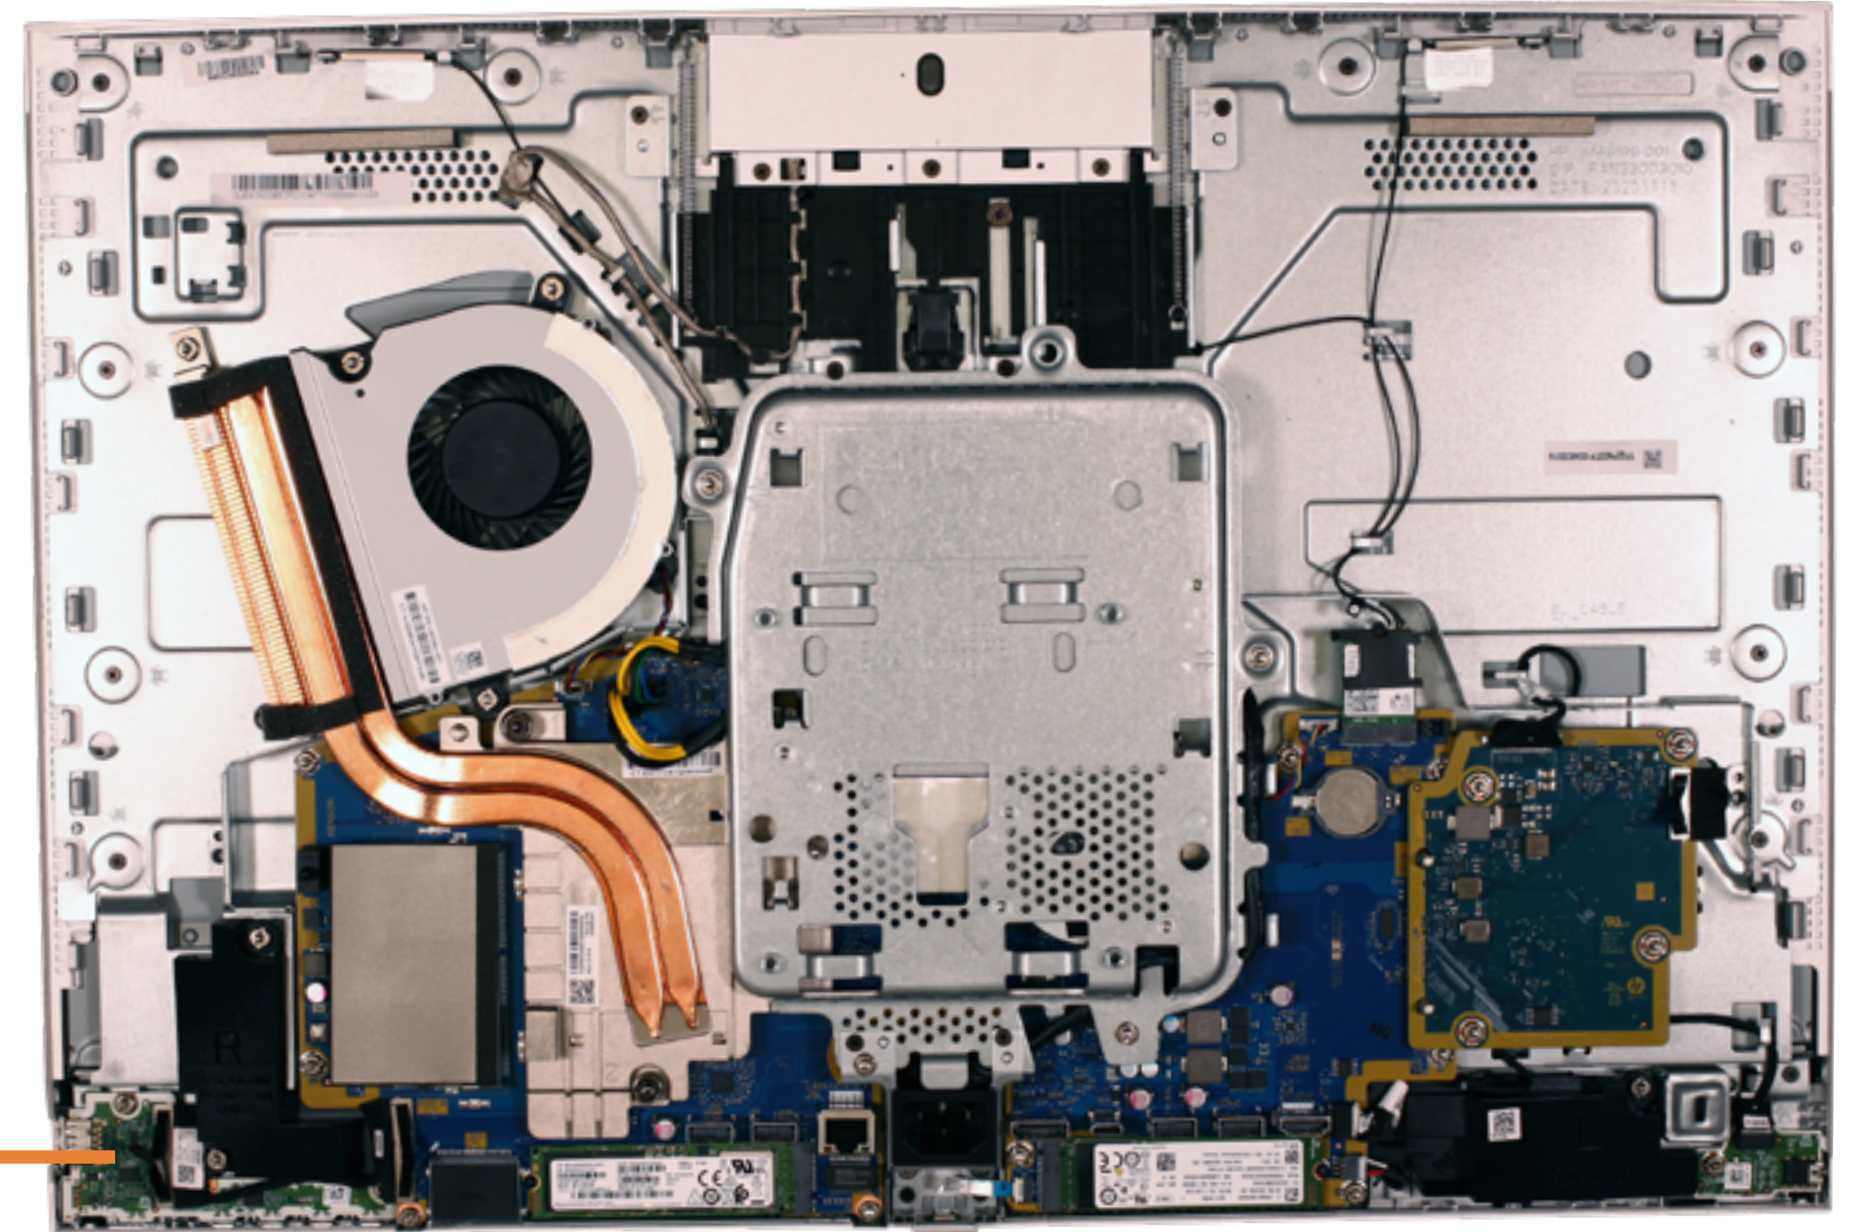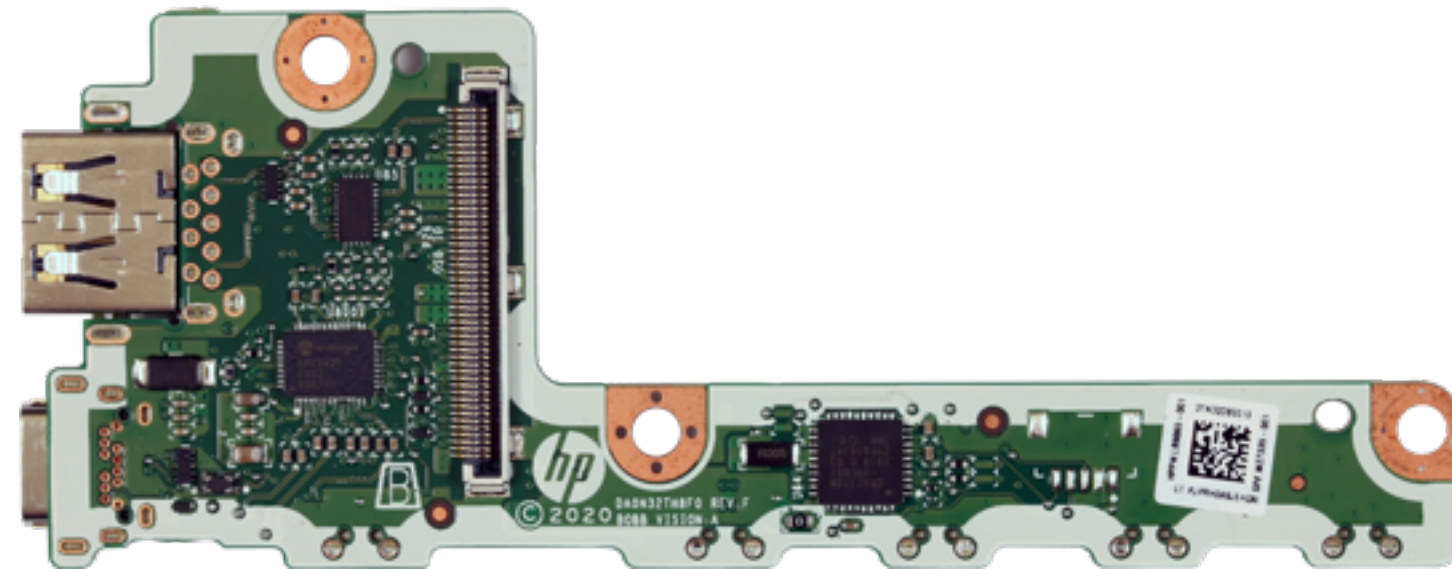



Fingerprint Reader Board

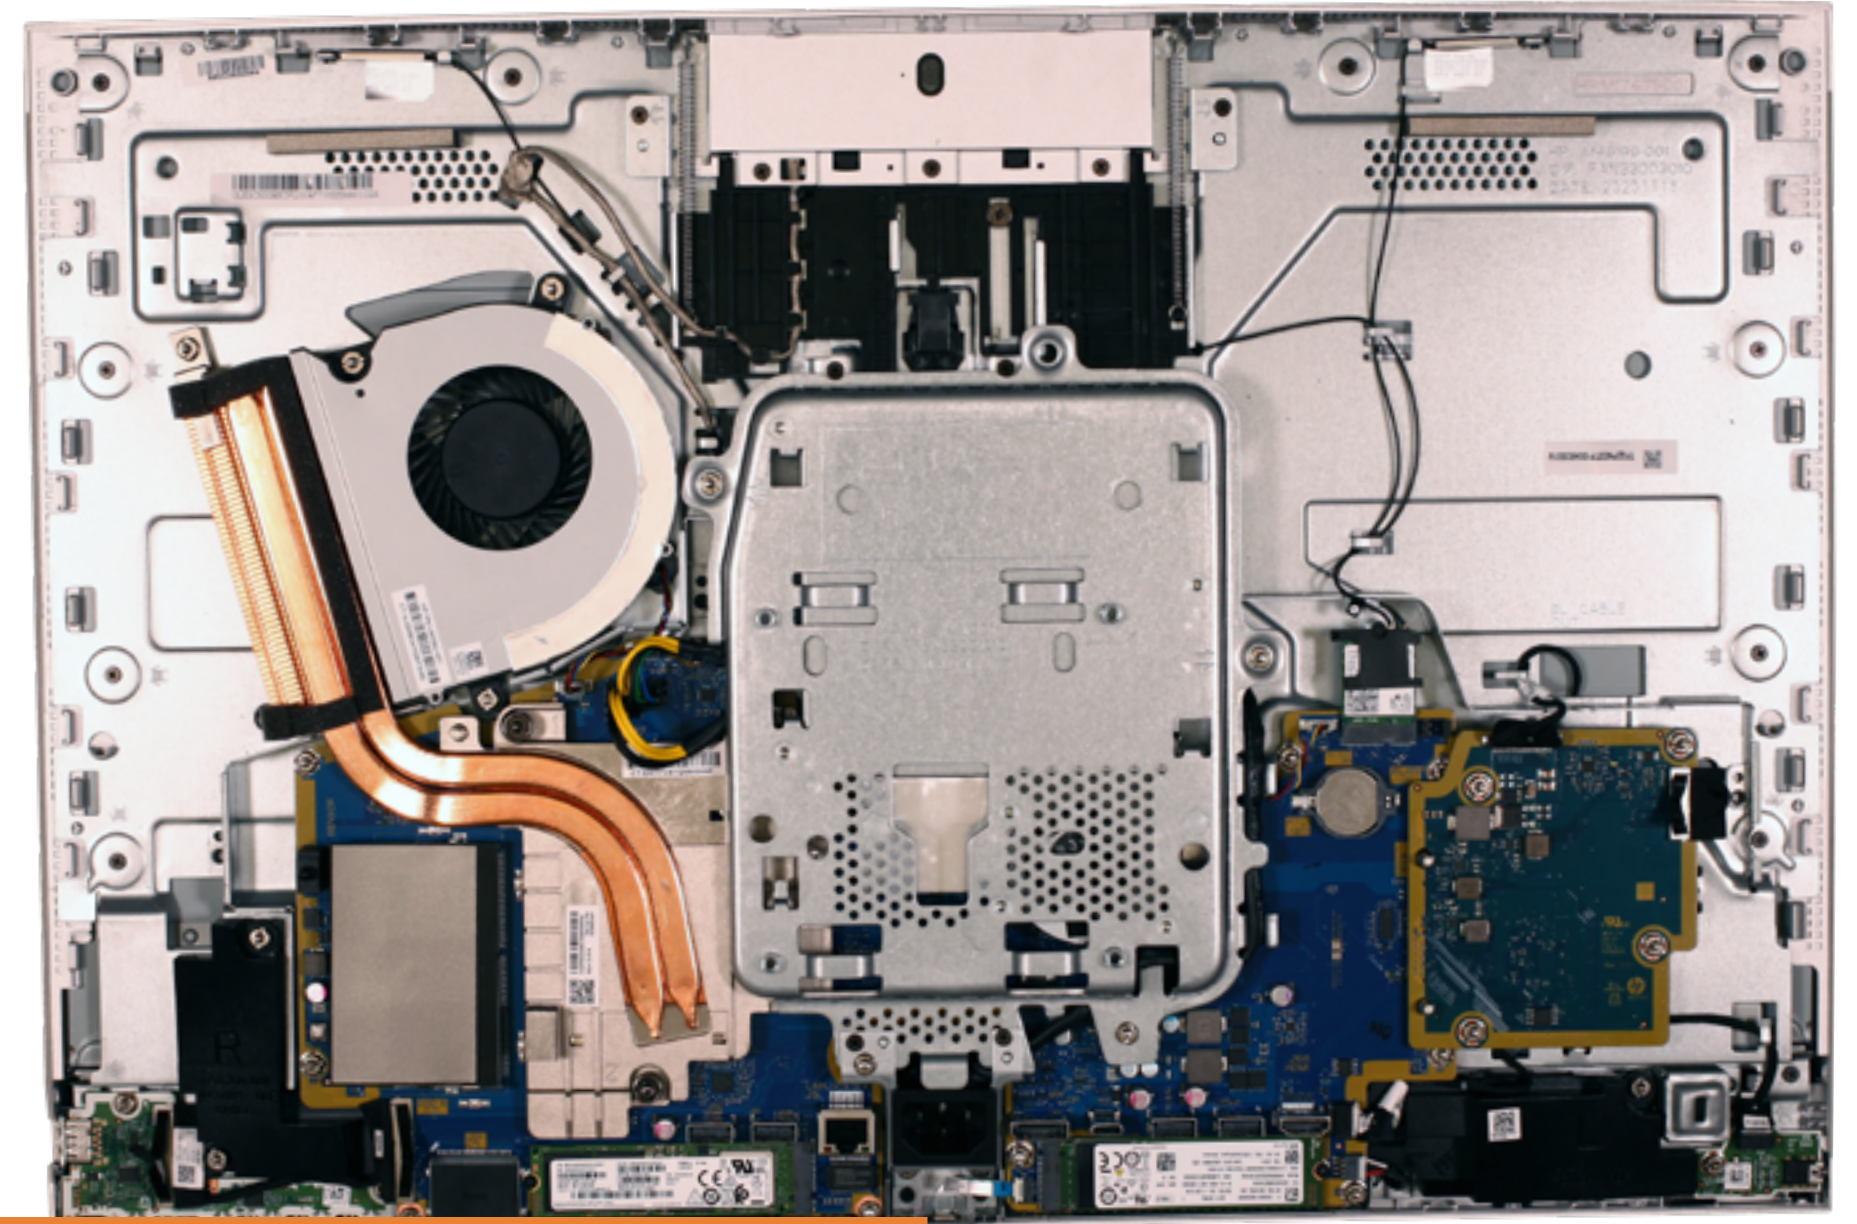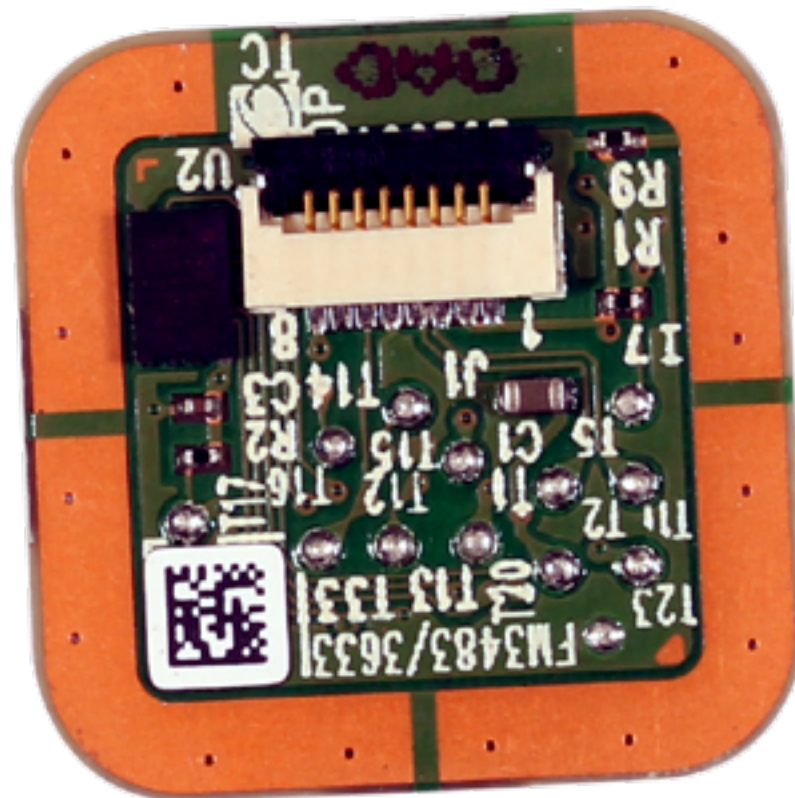



Wireless LAN Module

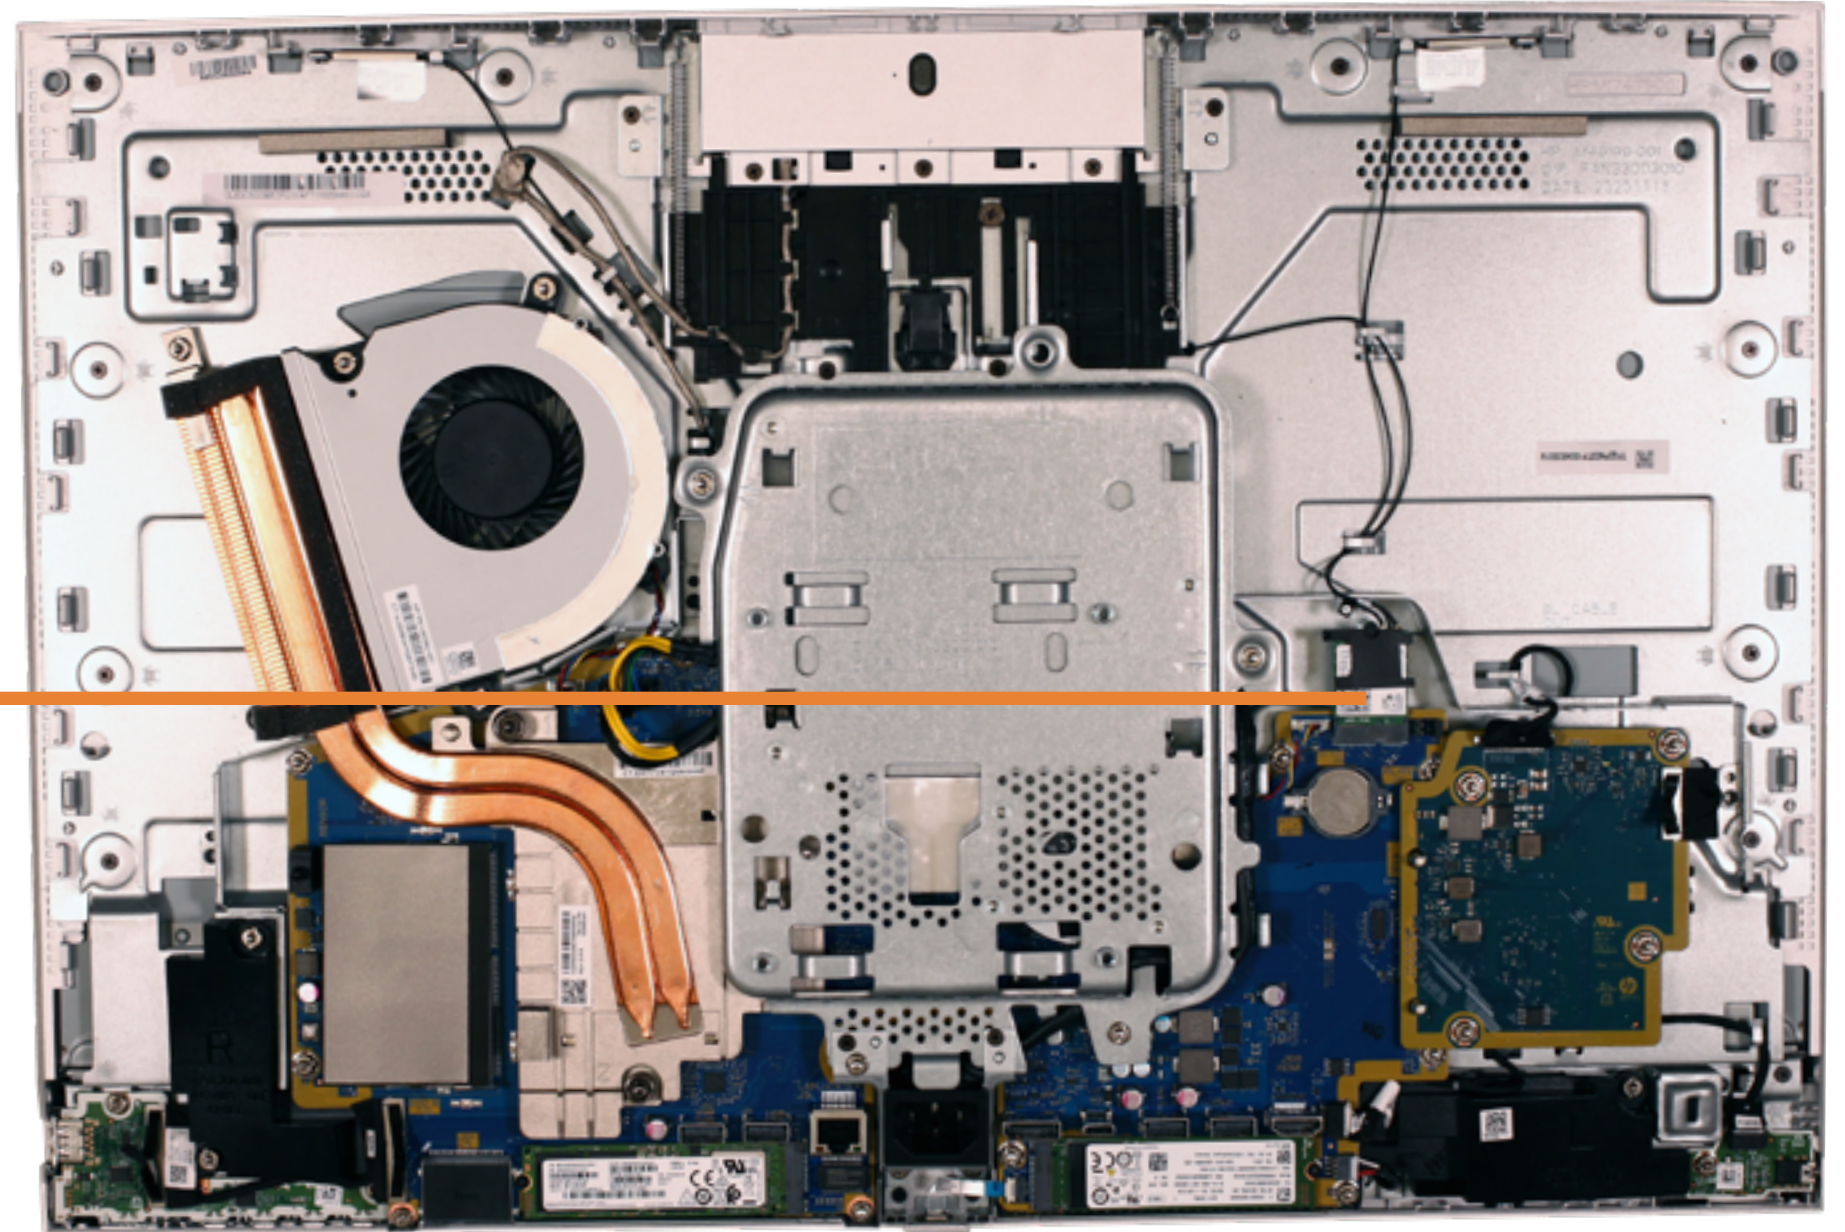



Scalar Board

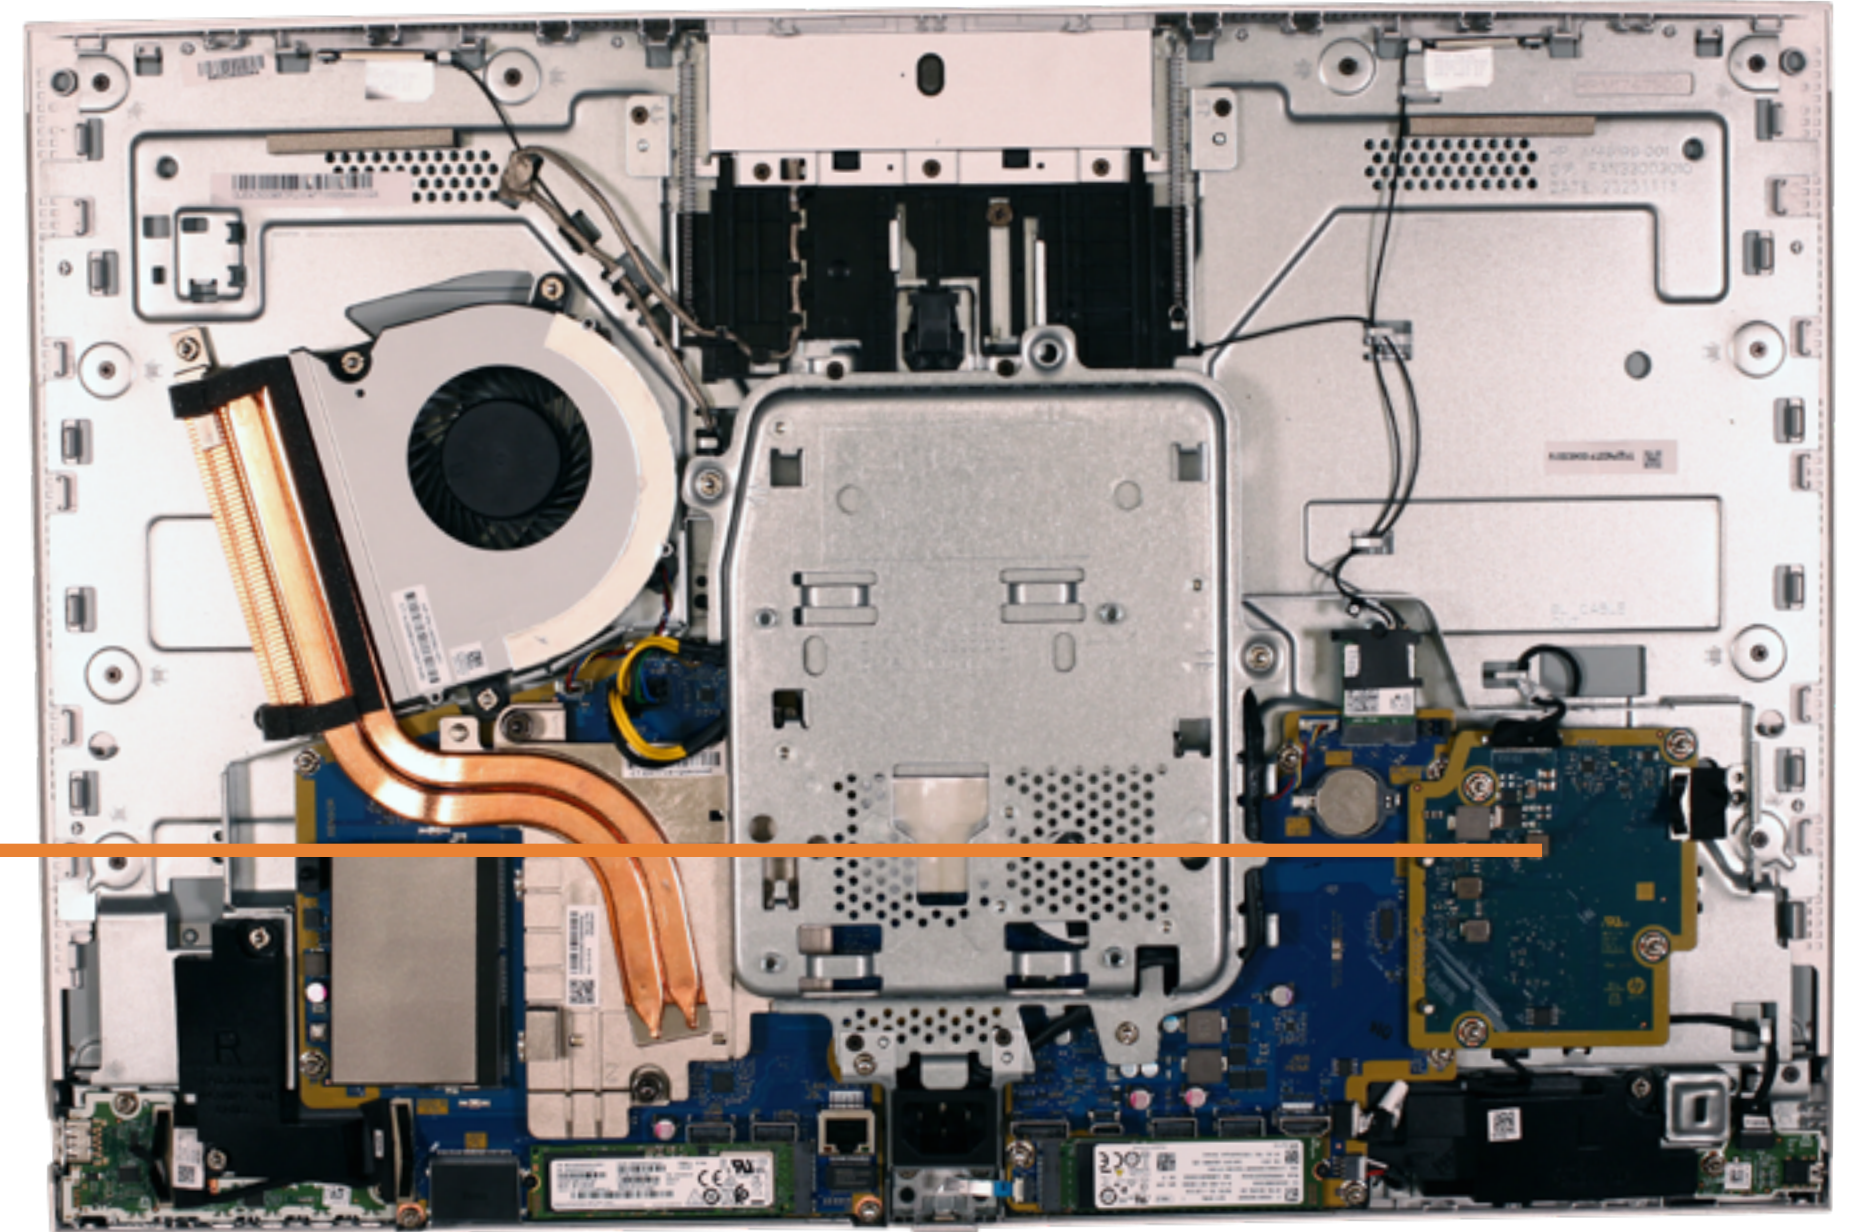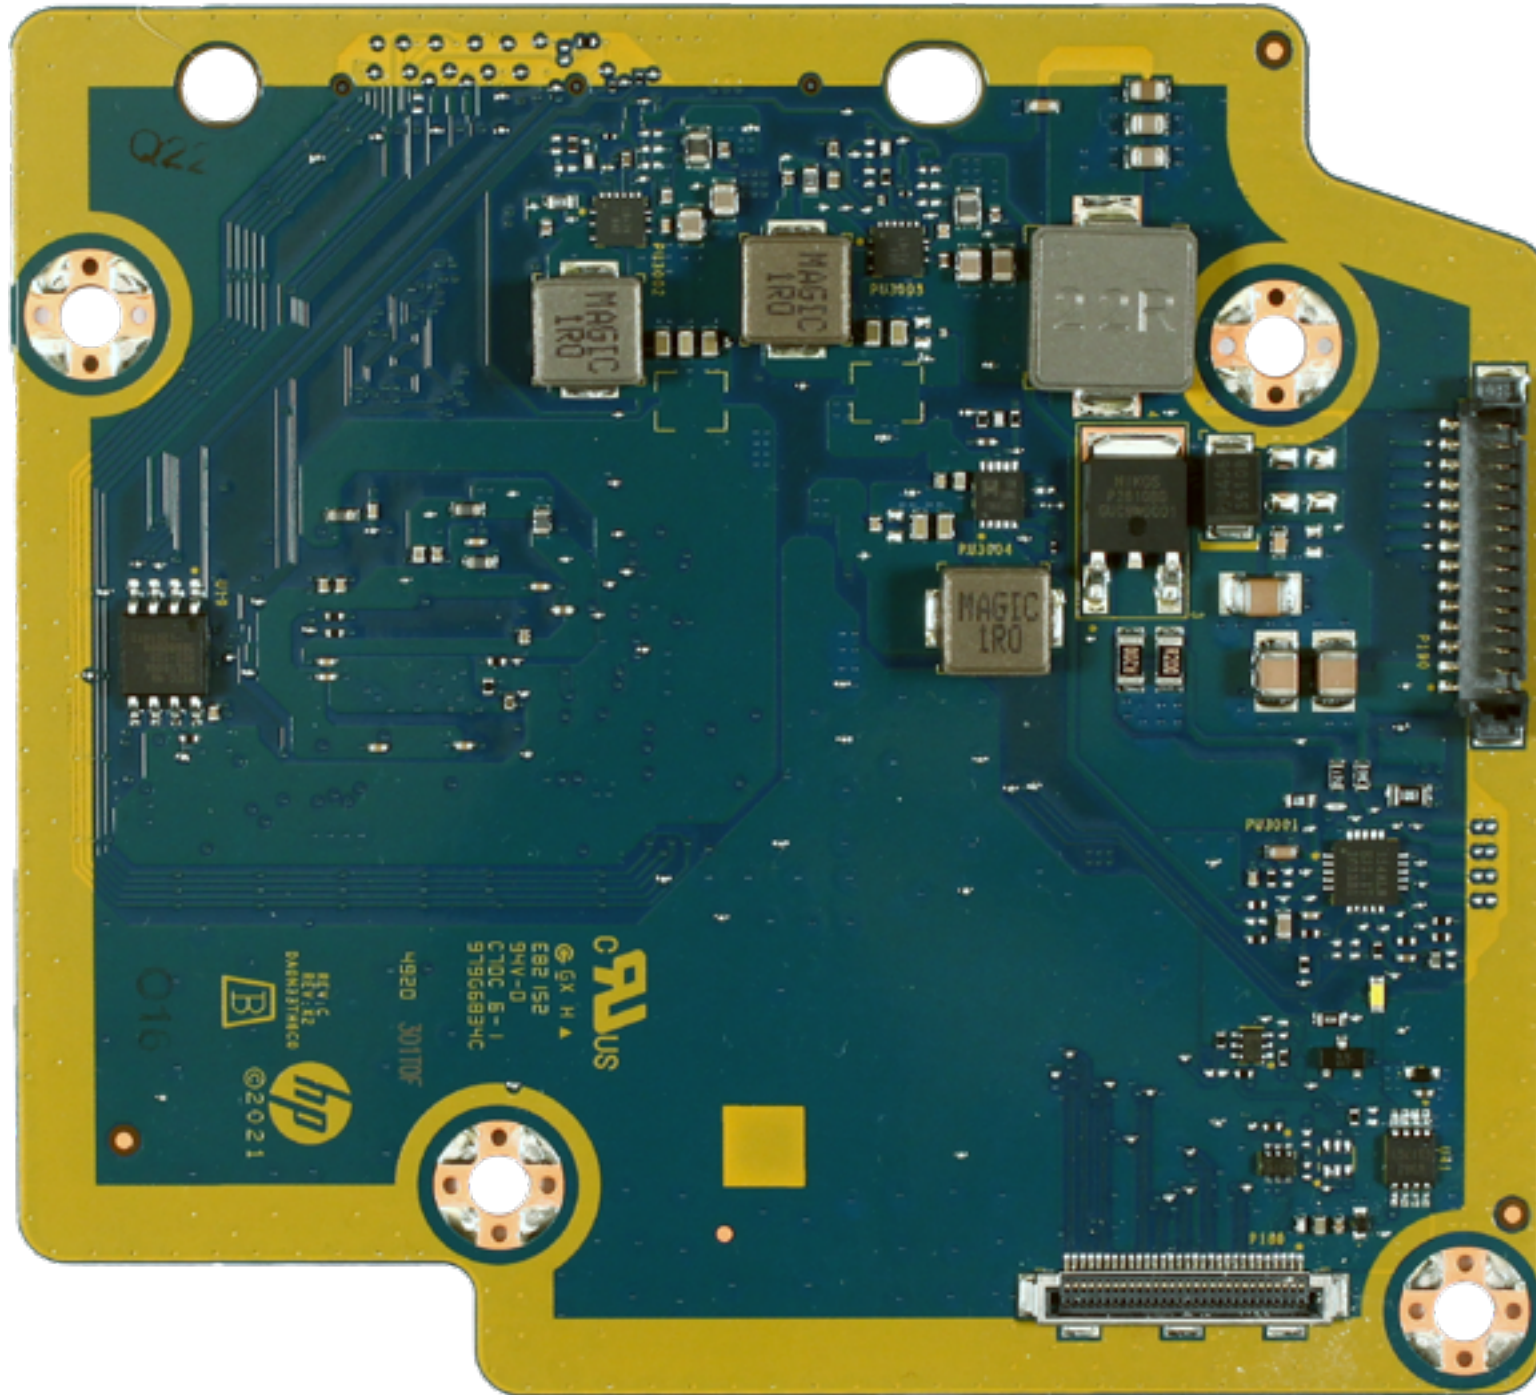



Power Supply Fan

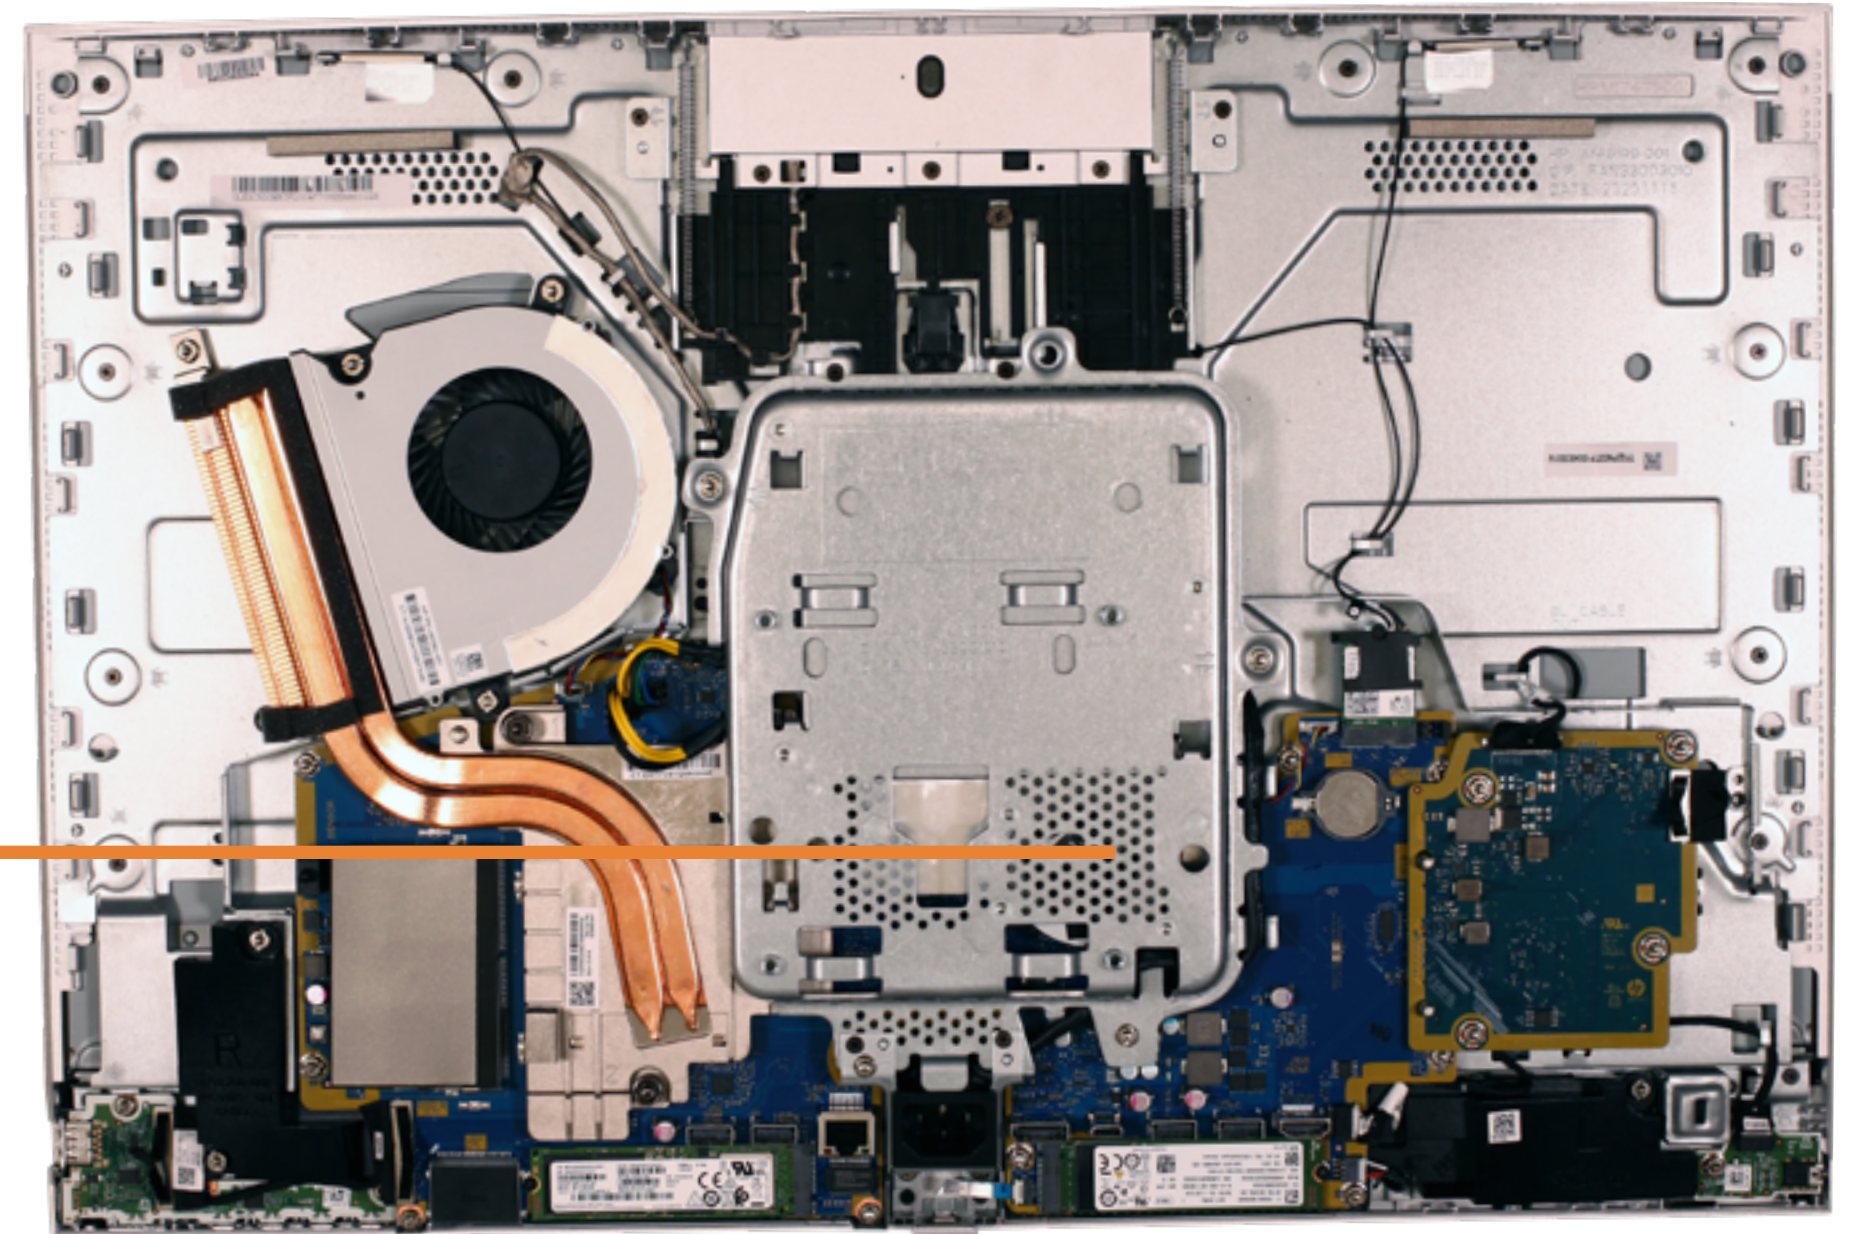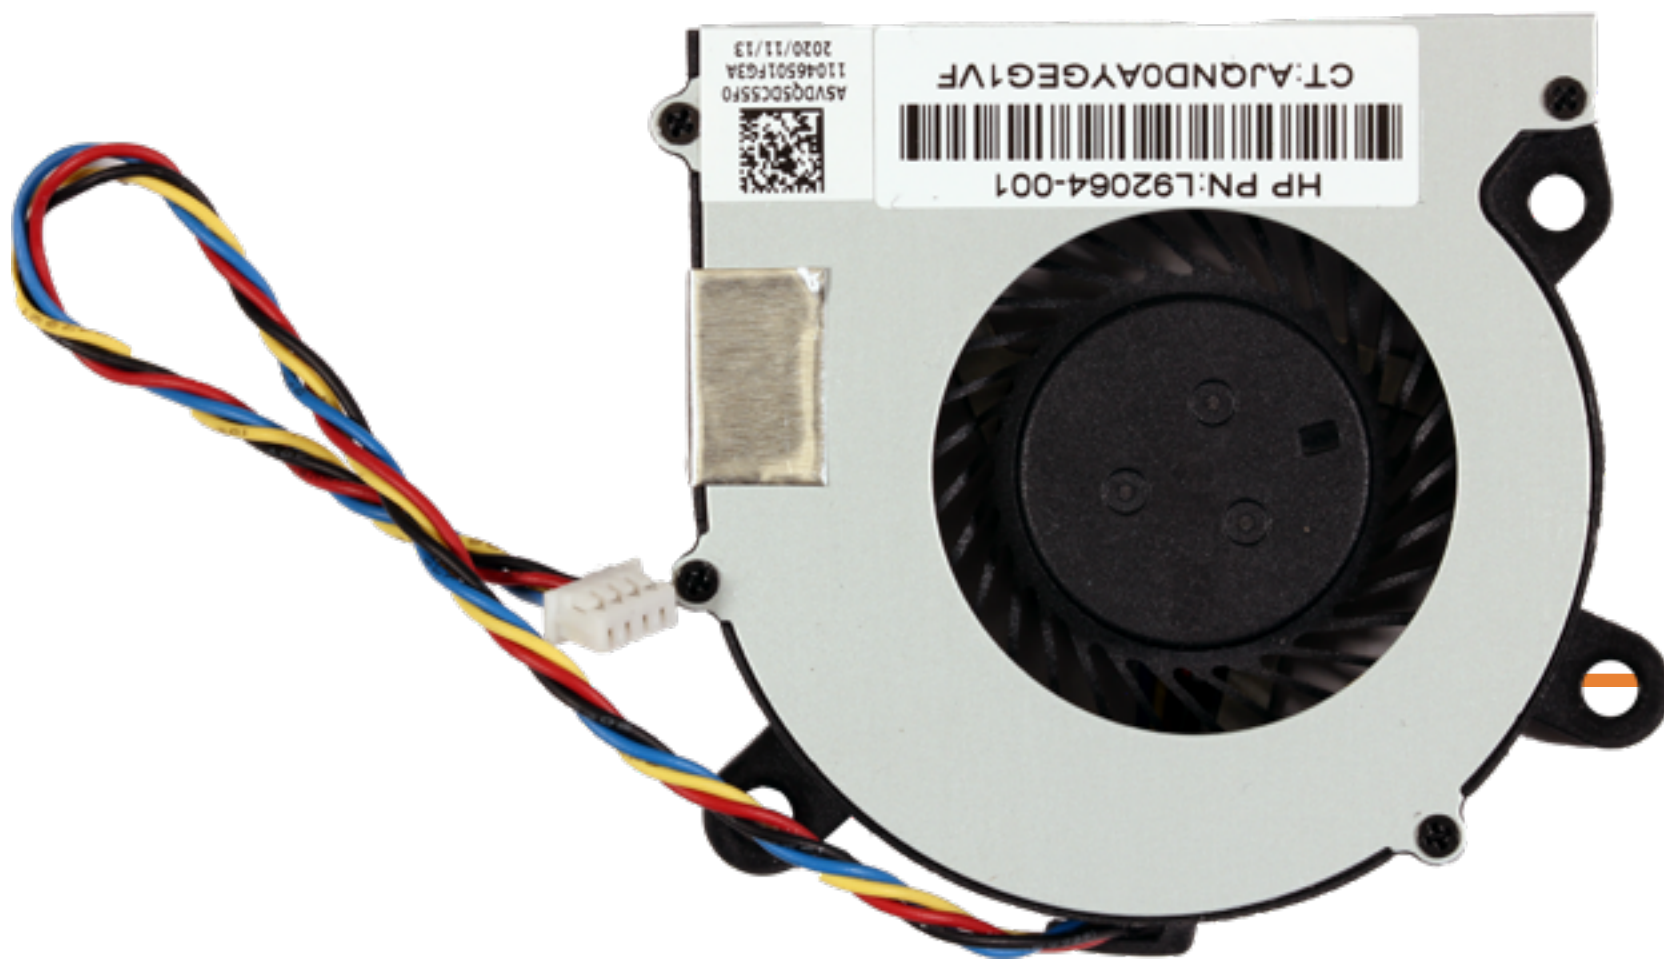


Power Supply

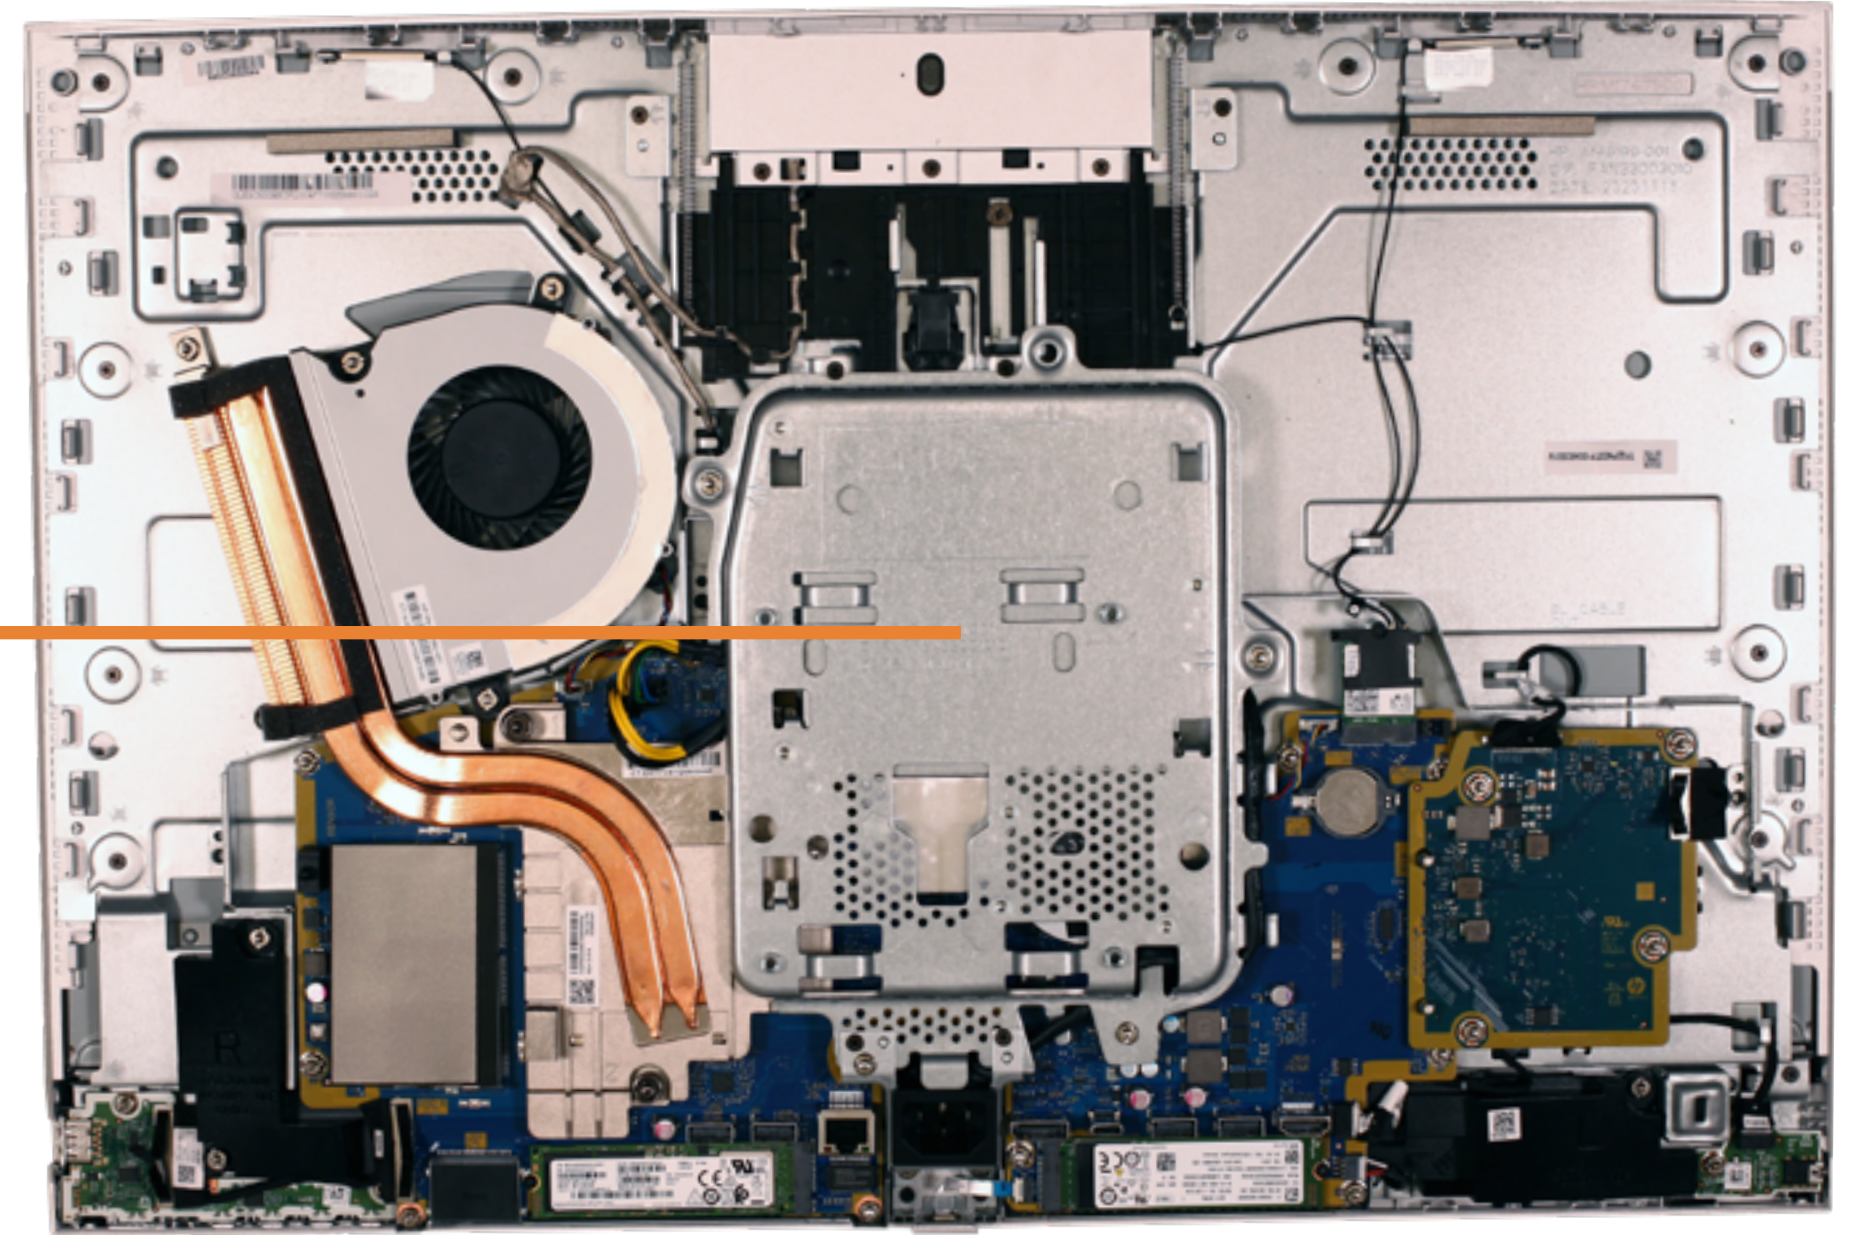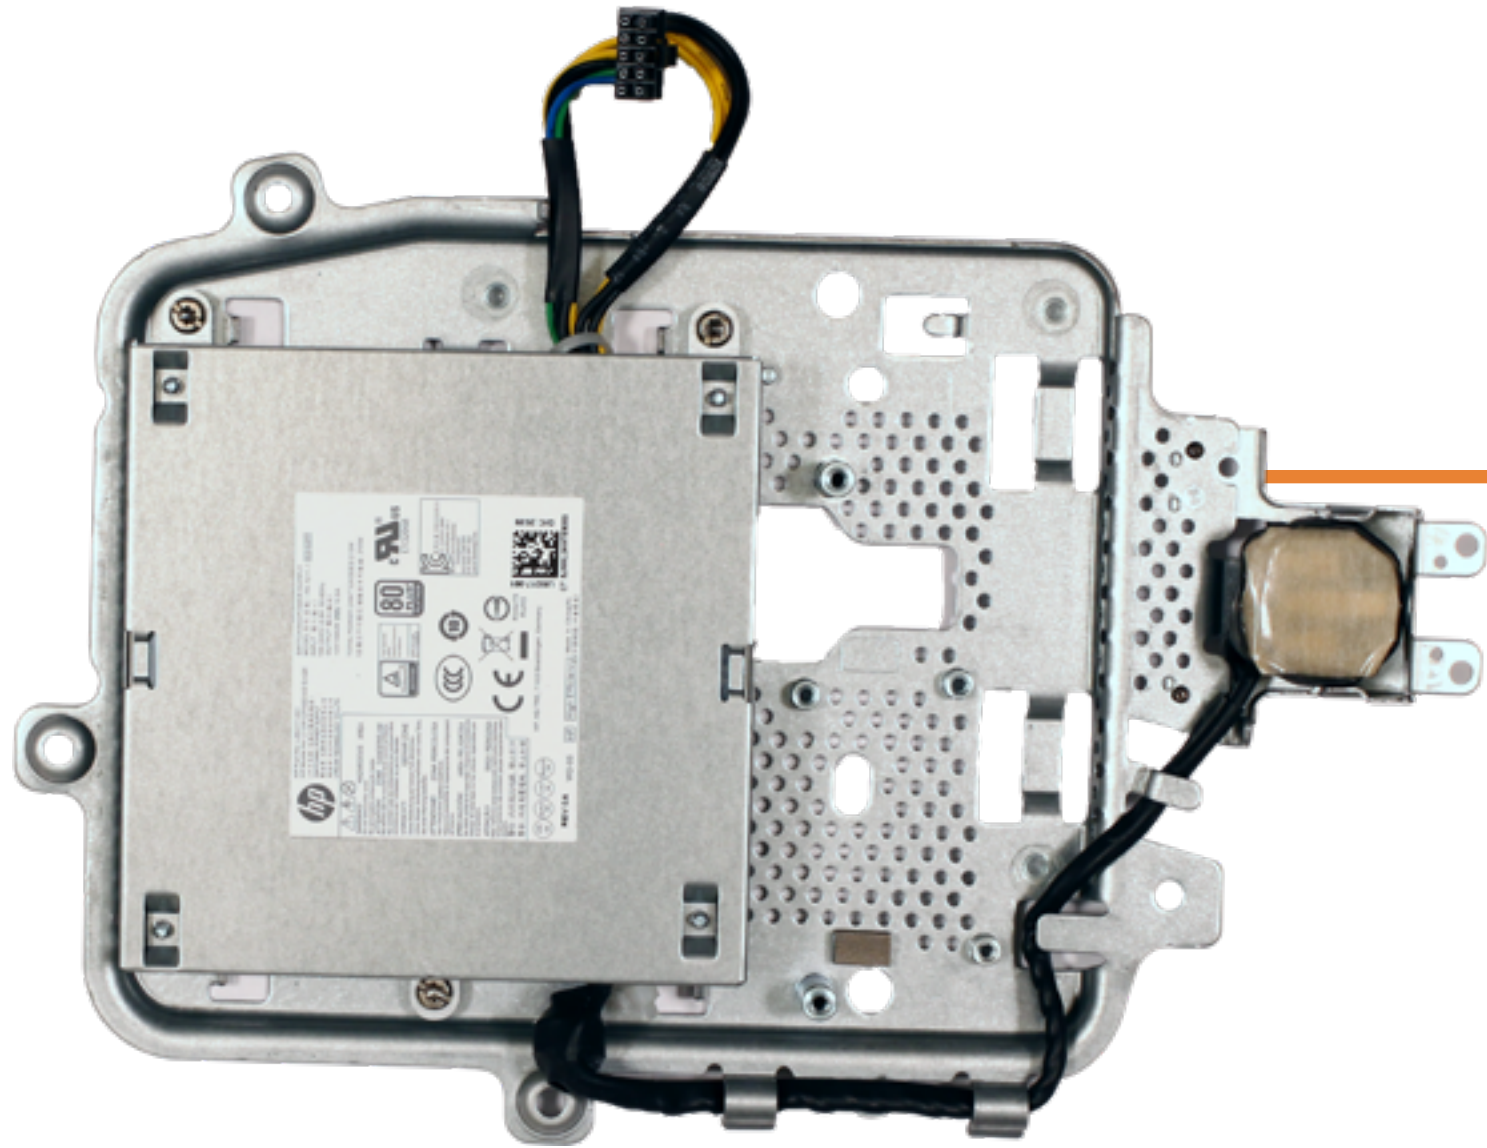



M.2 Solid State Drive

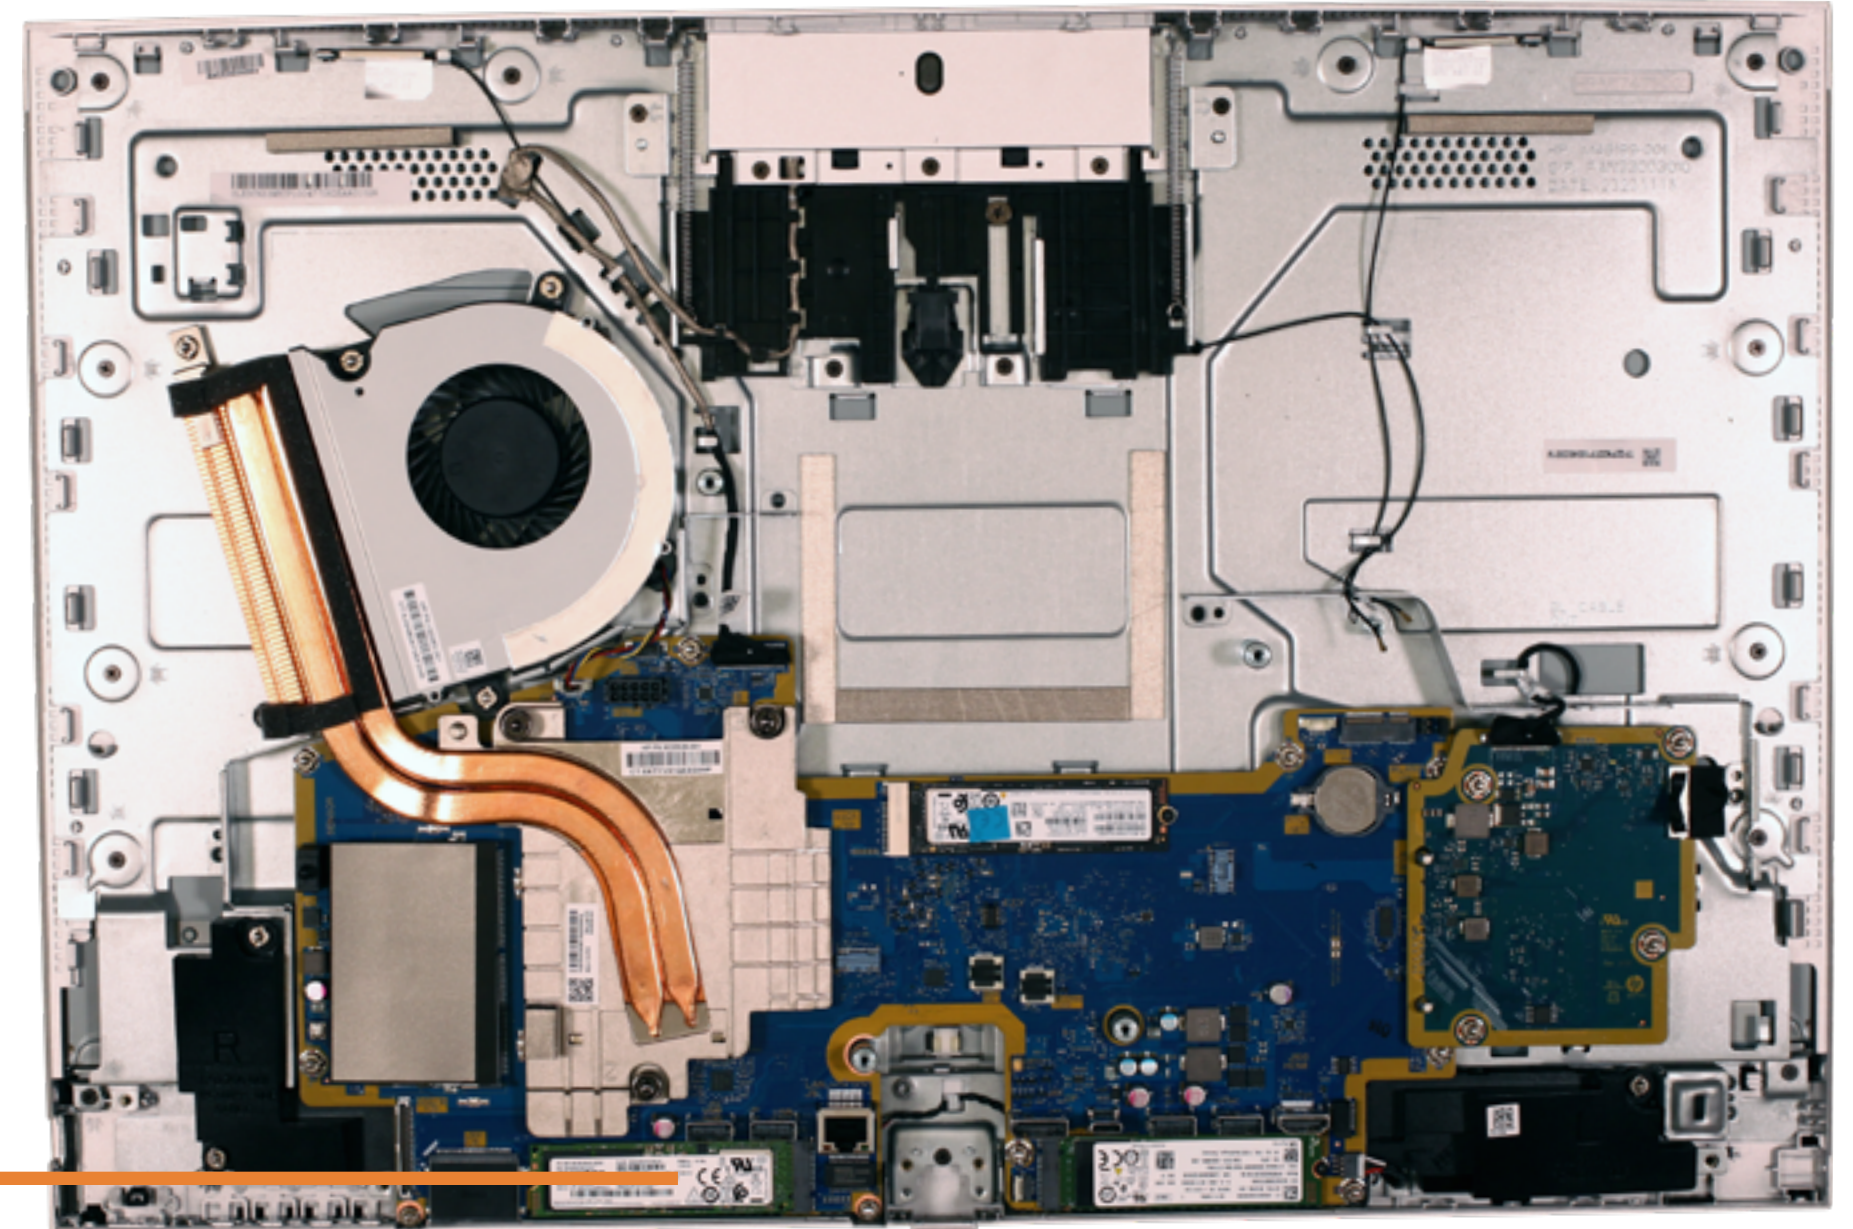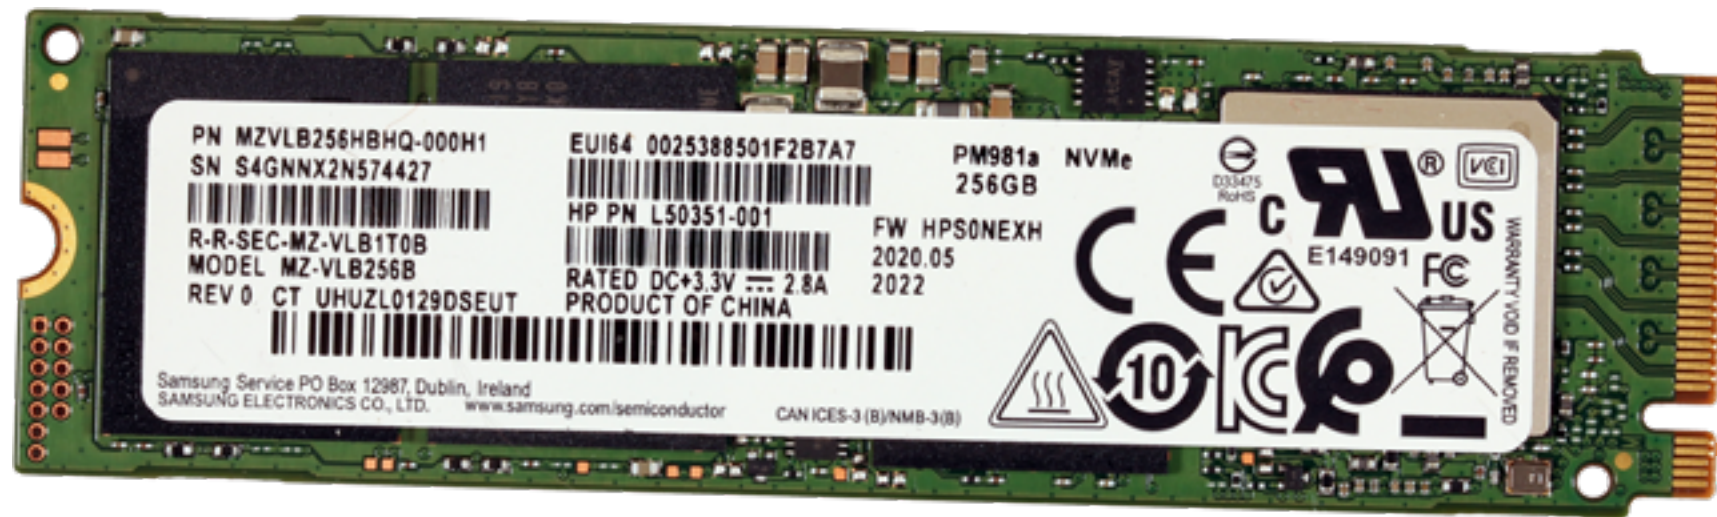


Webcam Assembly

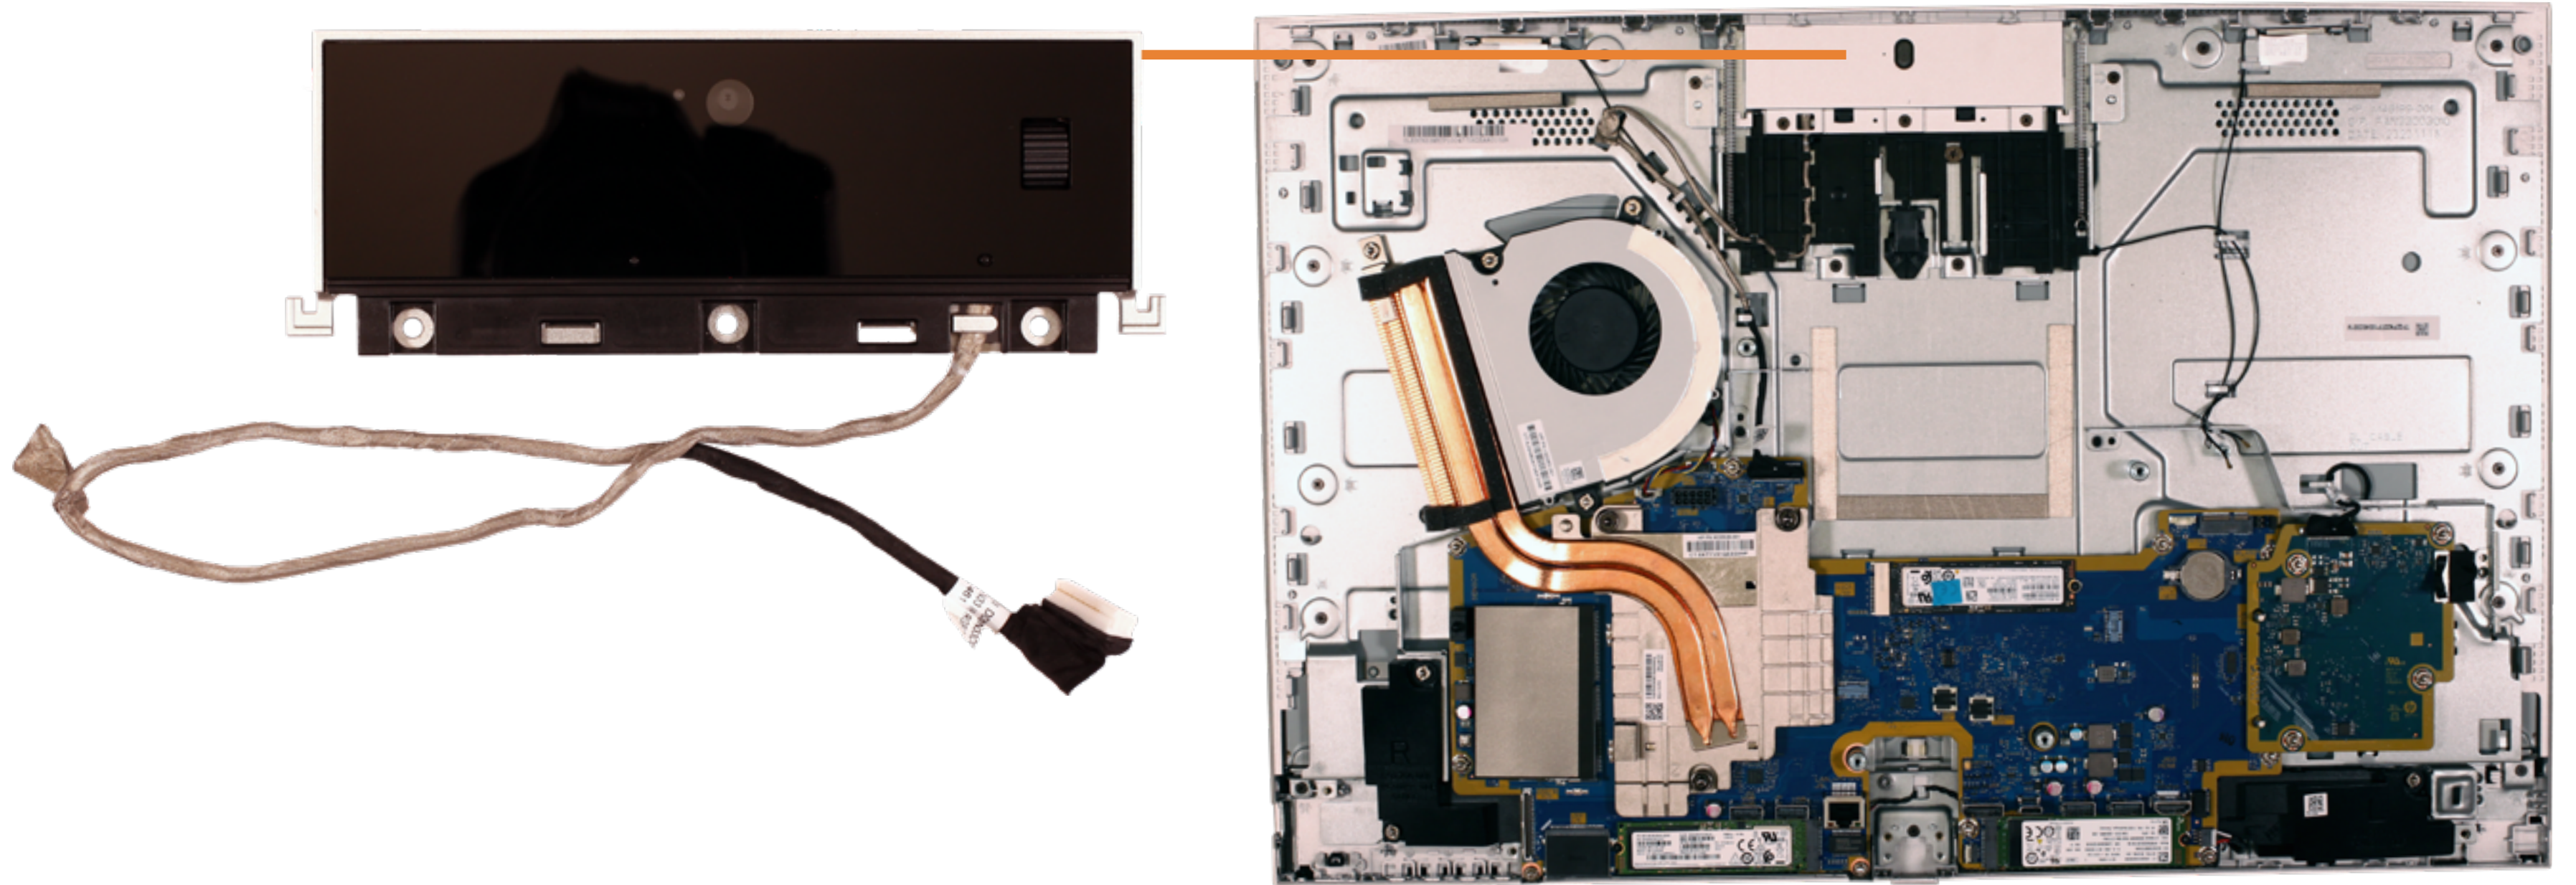



CPU Heatsink

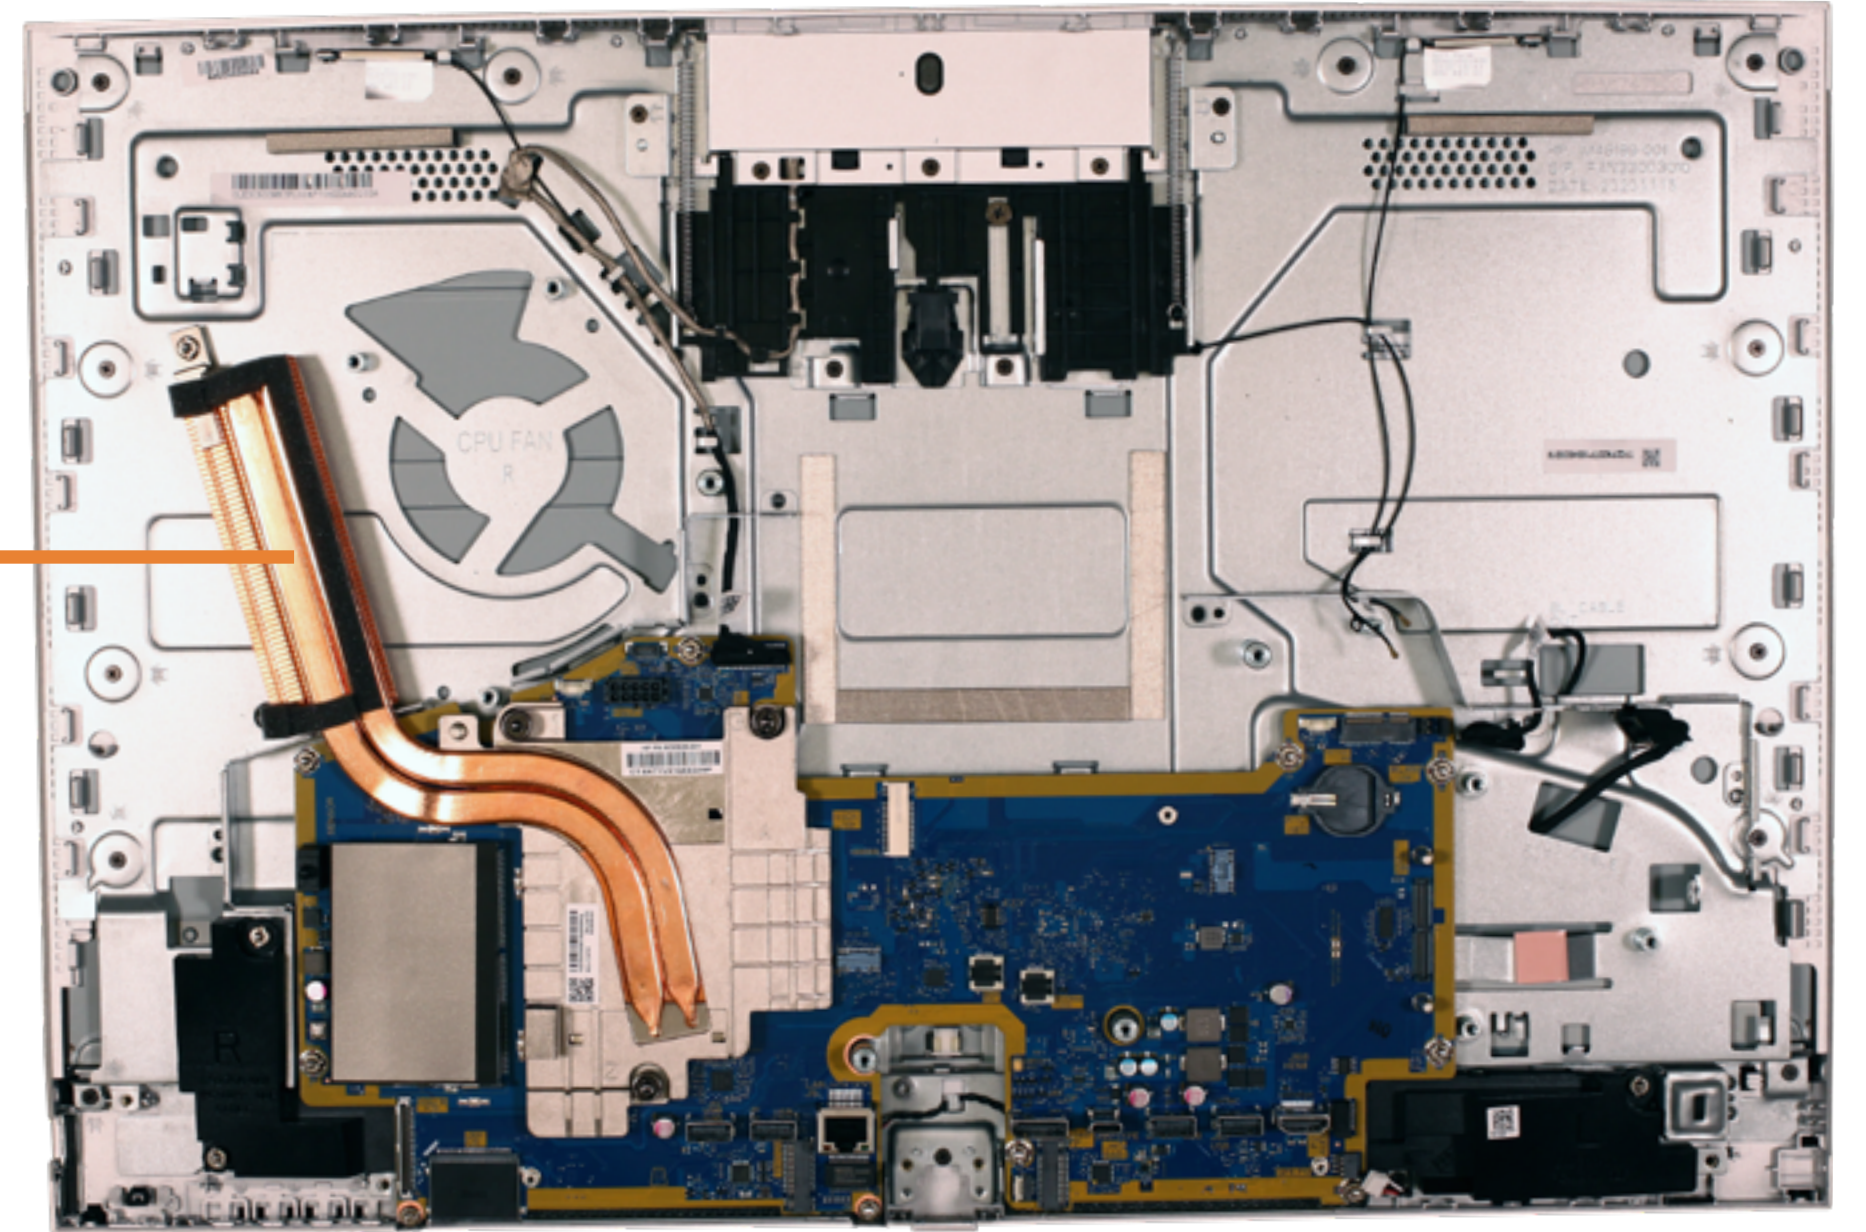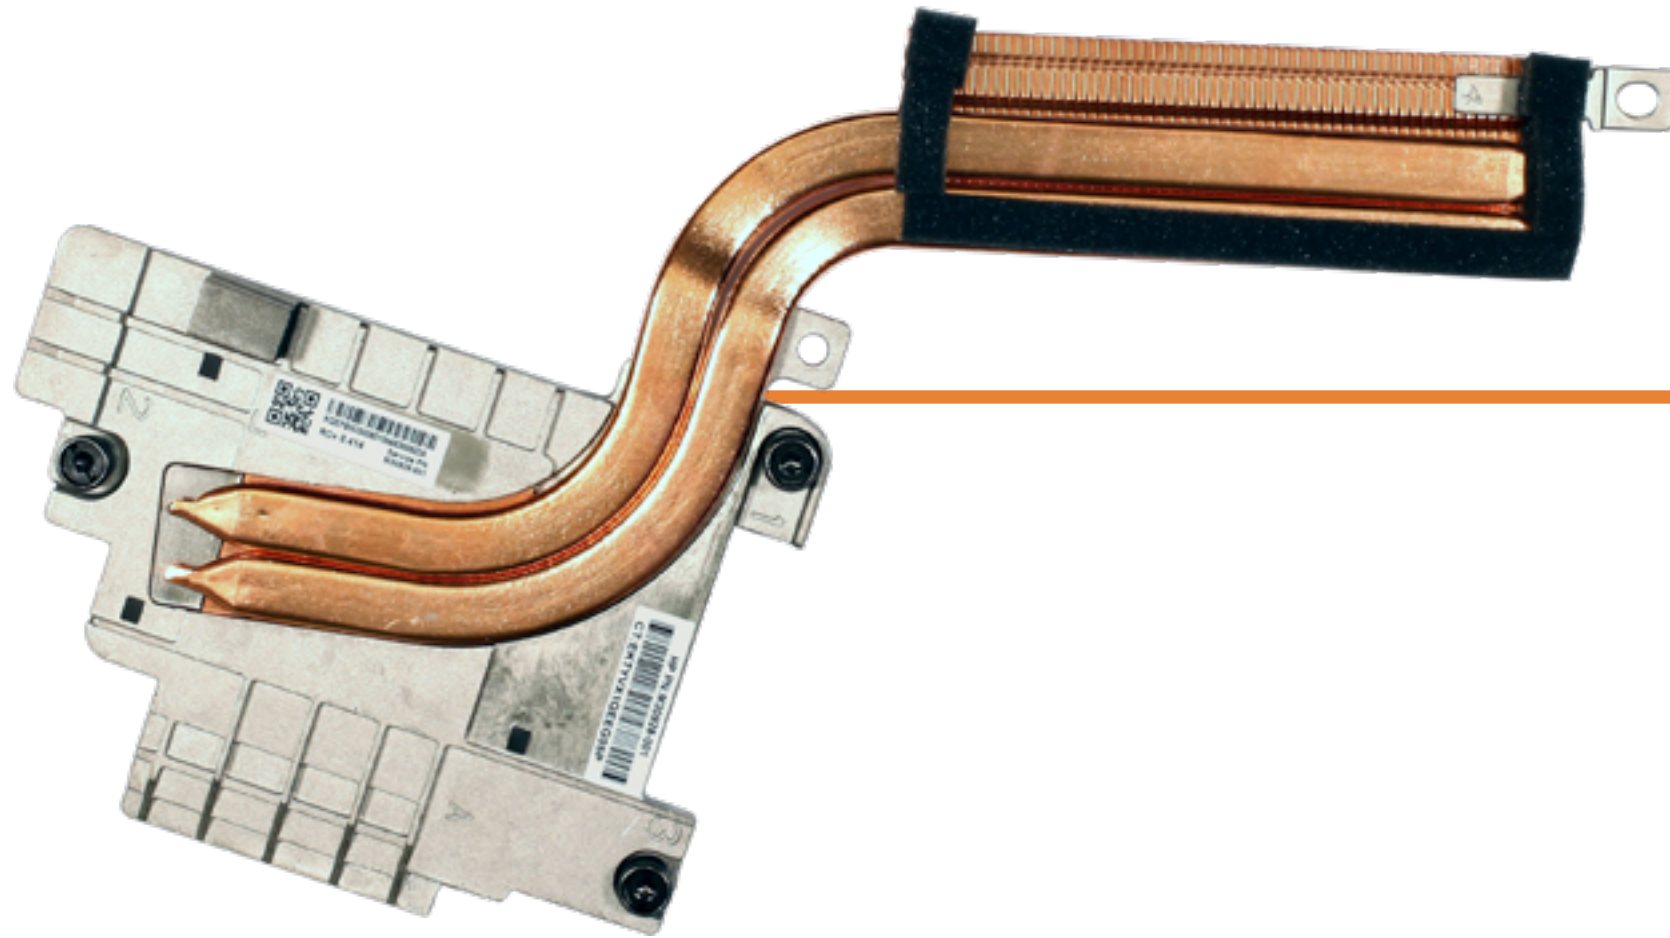


CPU(Intel)

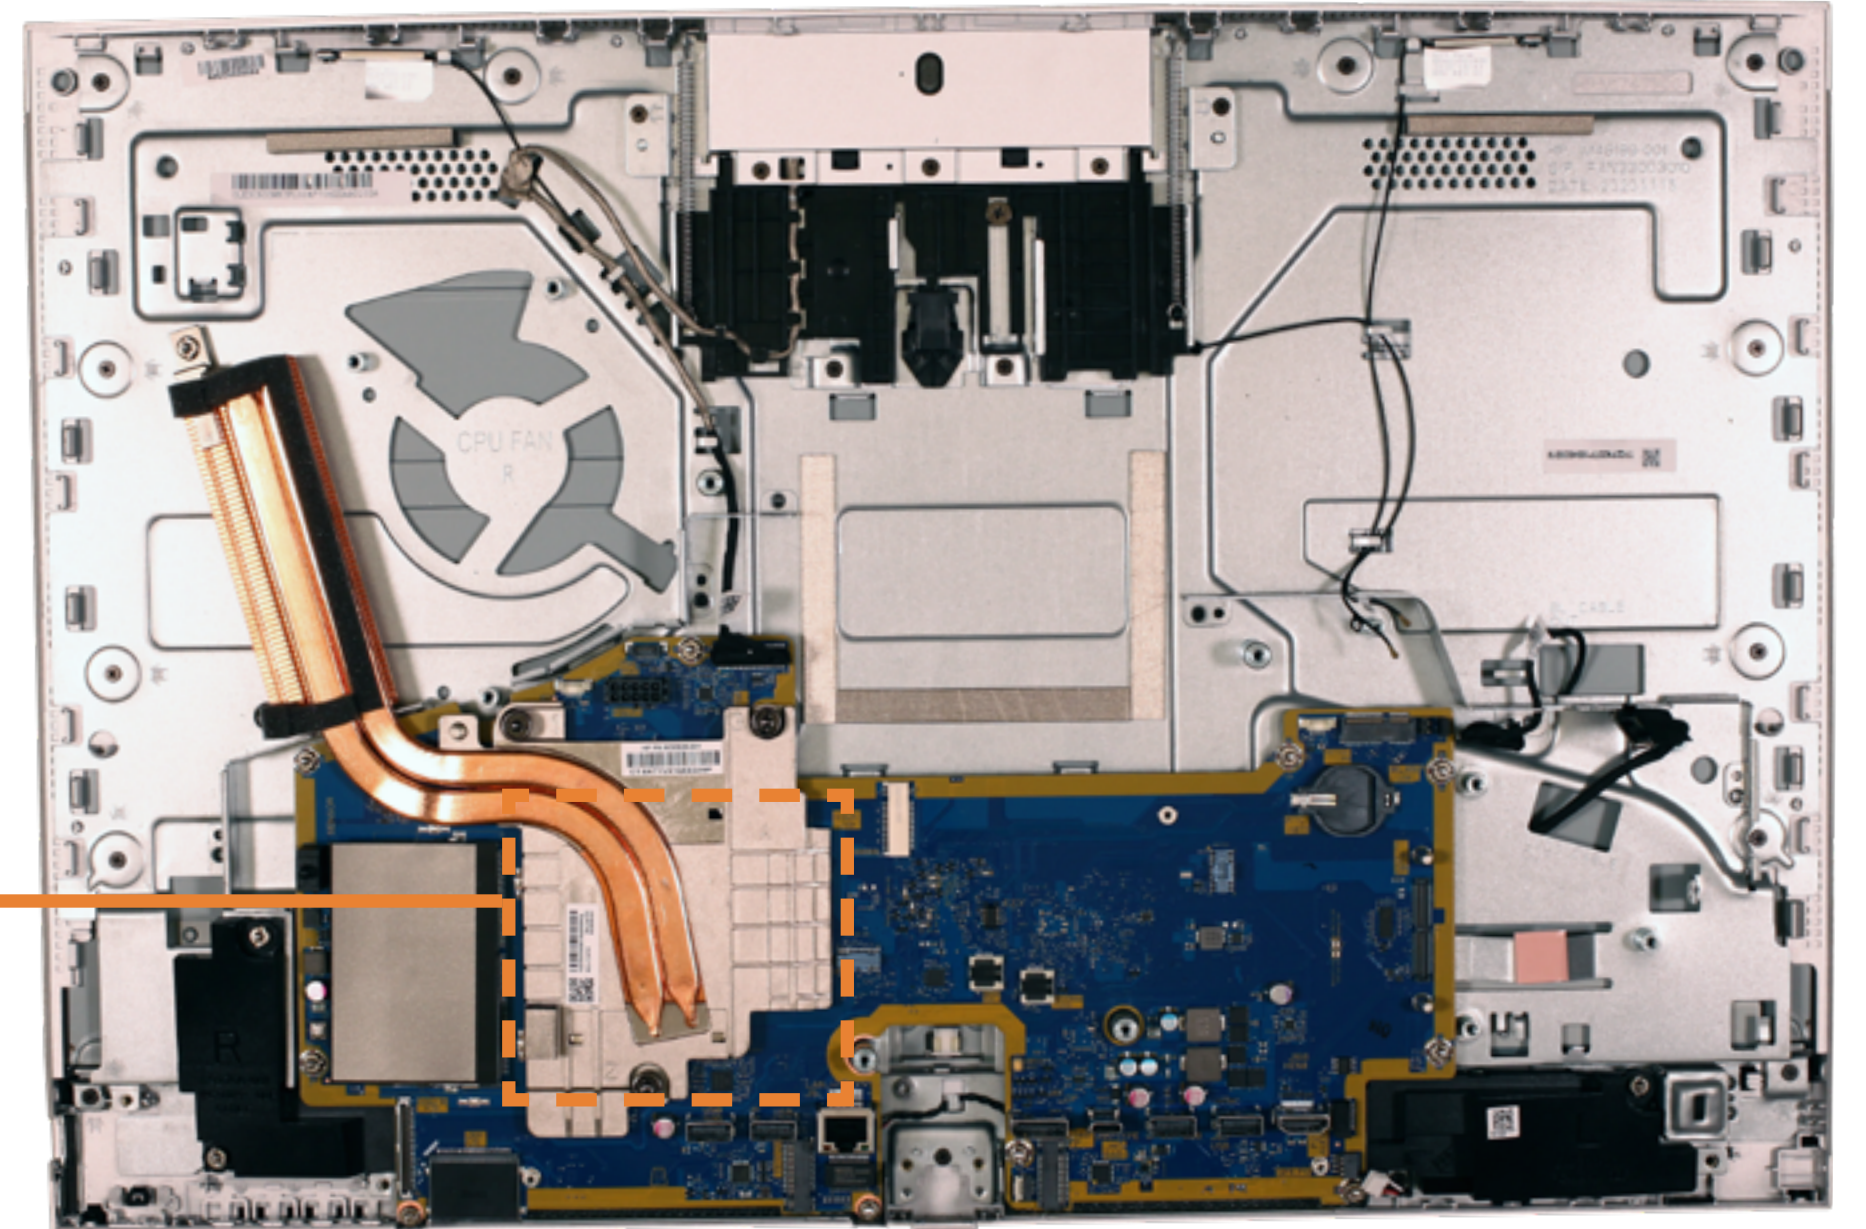


Motherboard

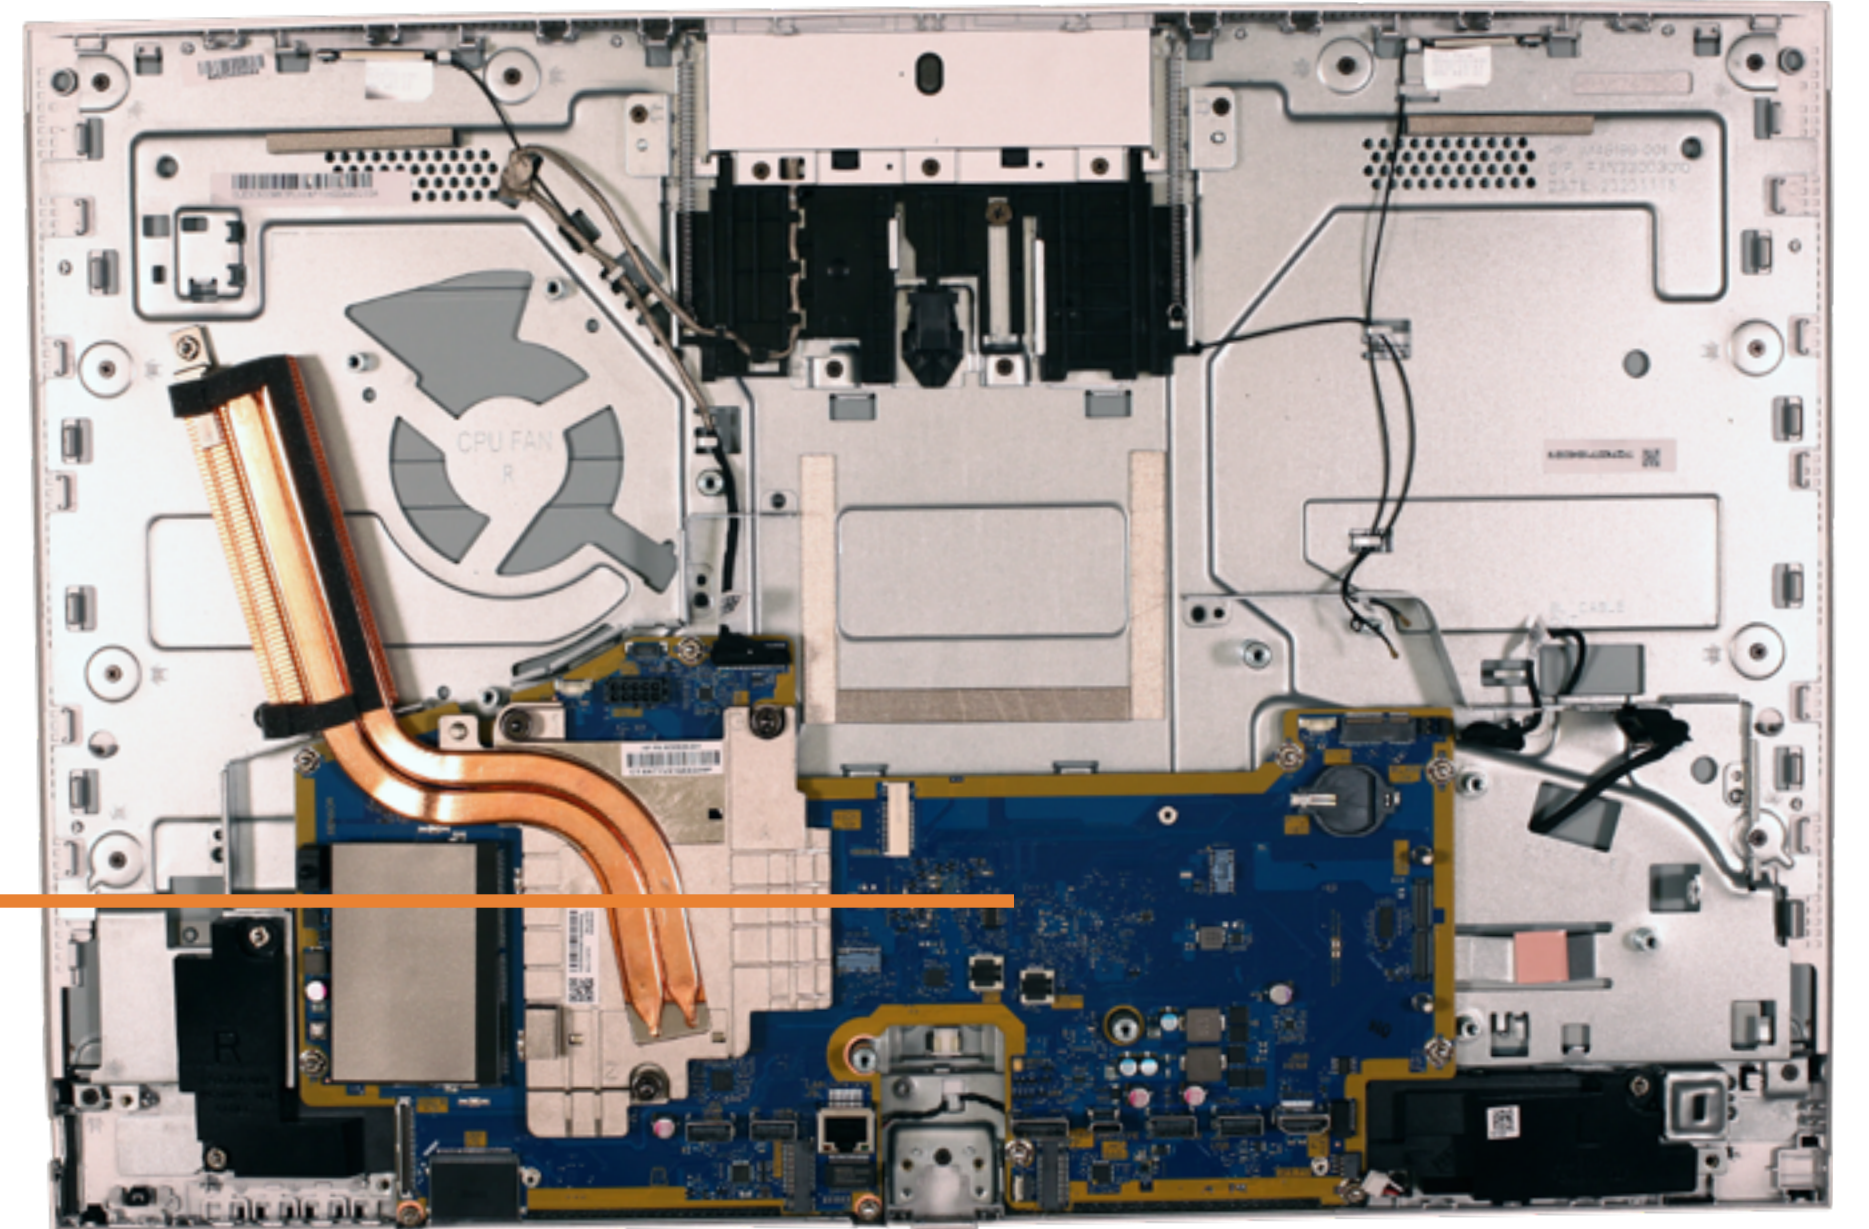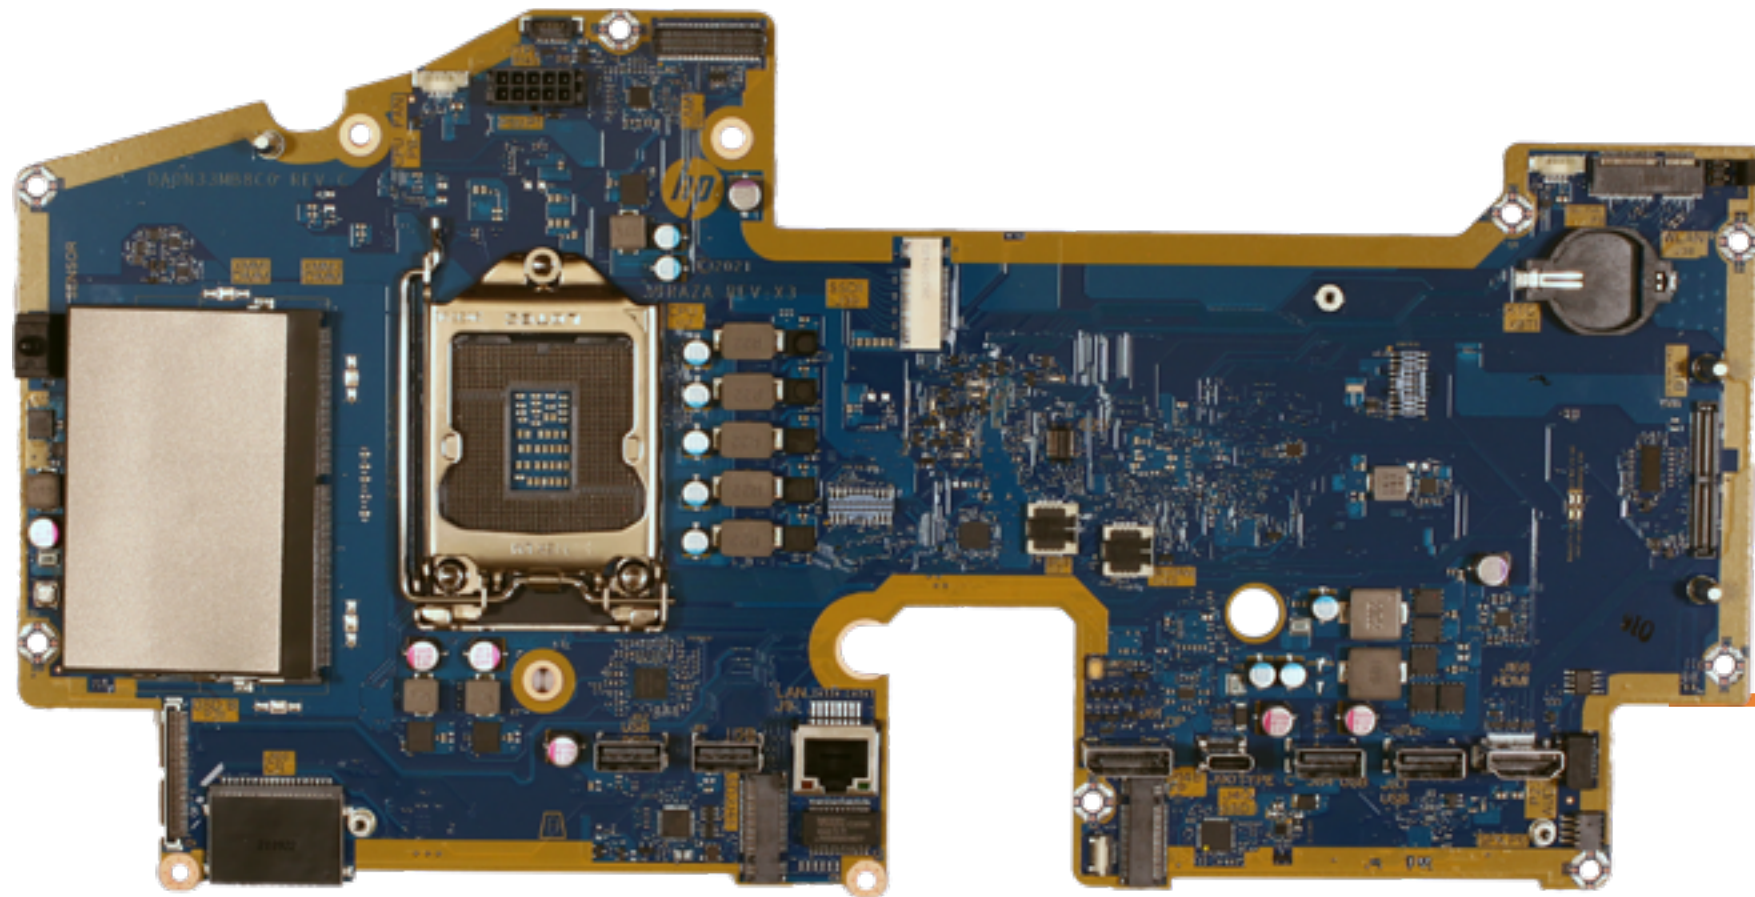

Speakers

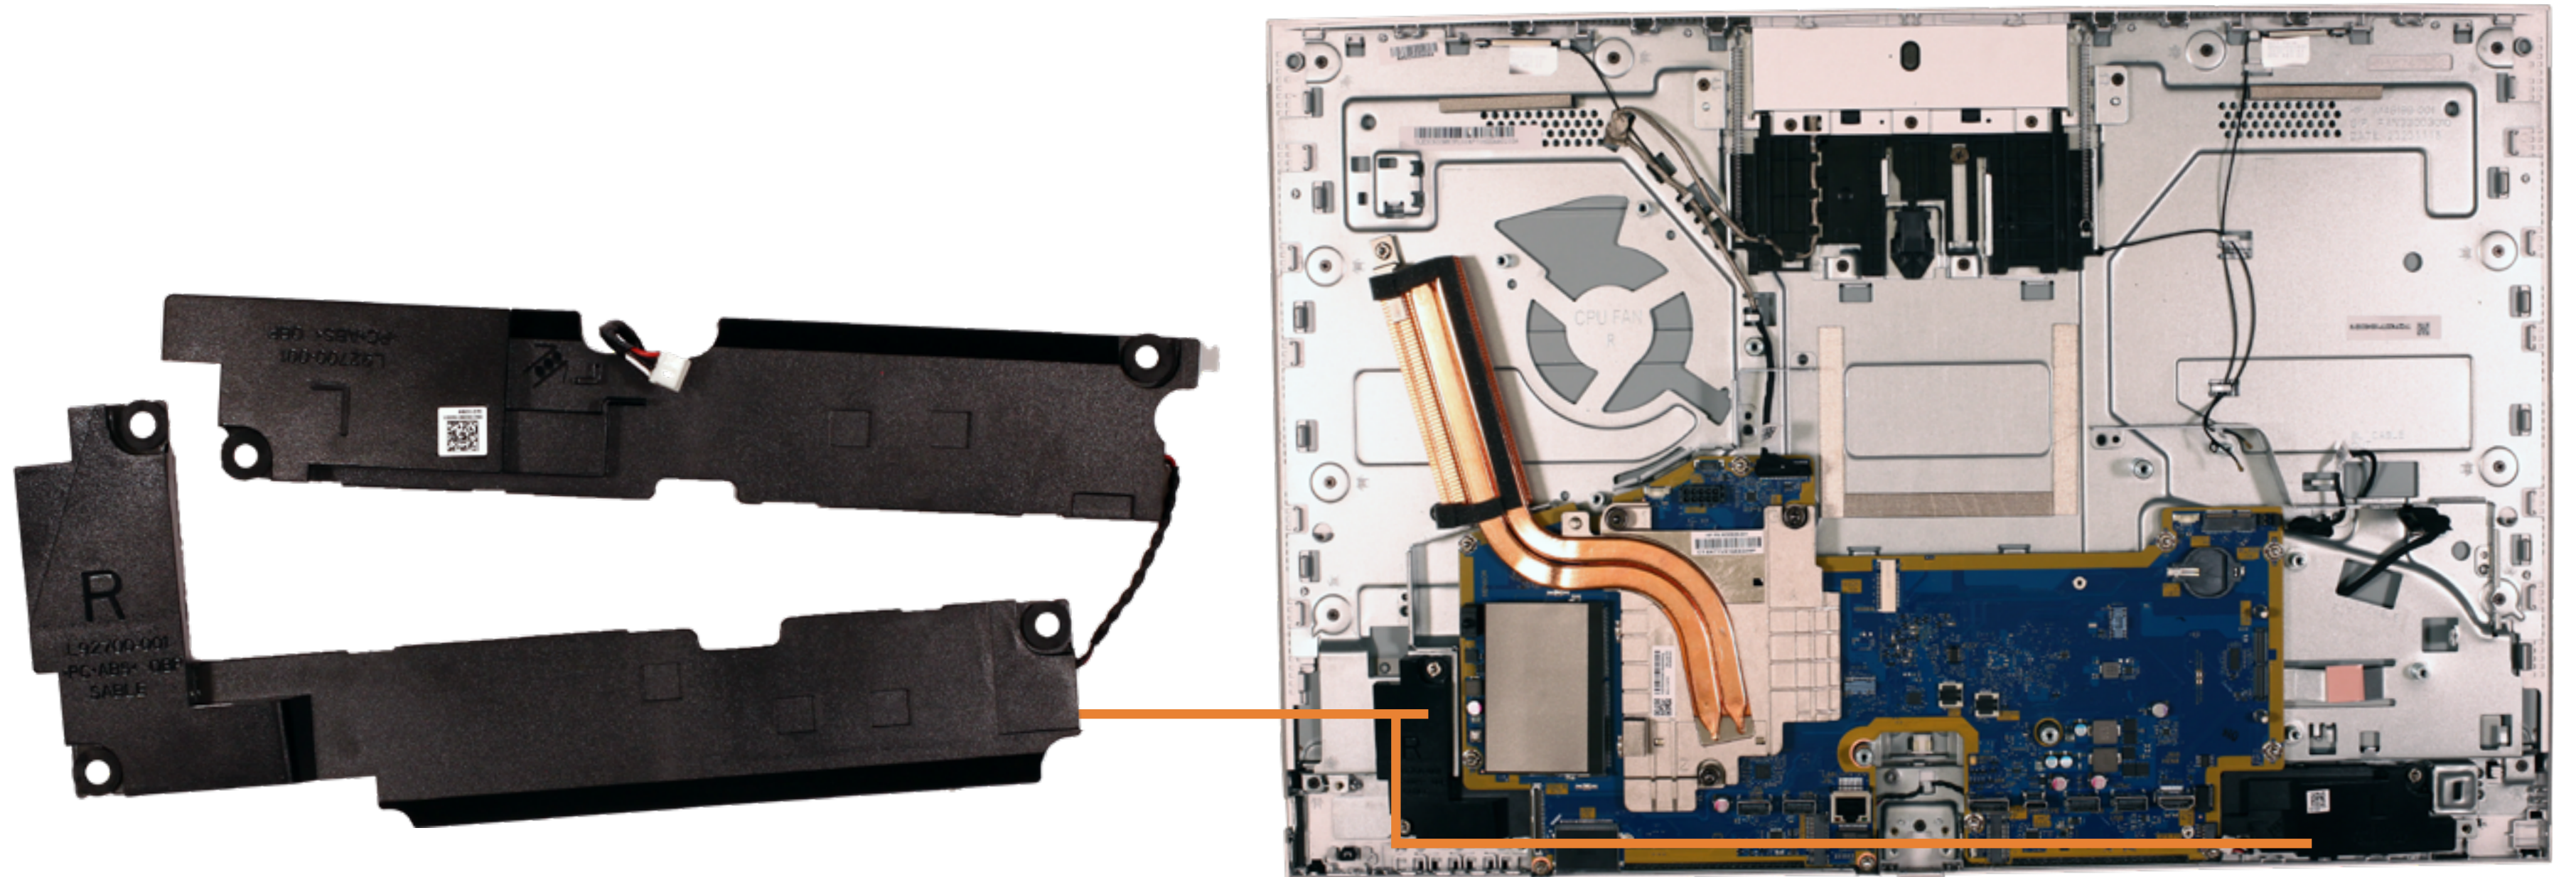

Middle Frame

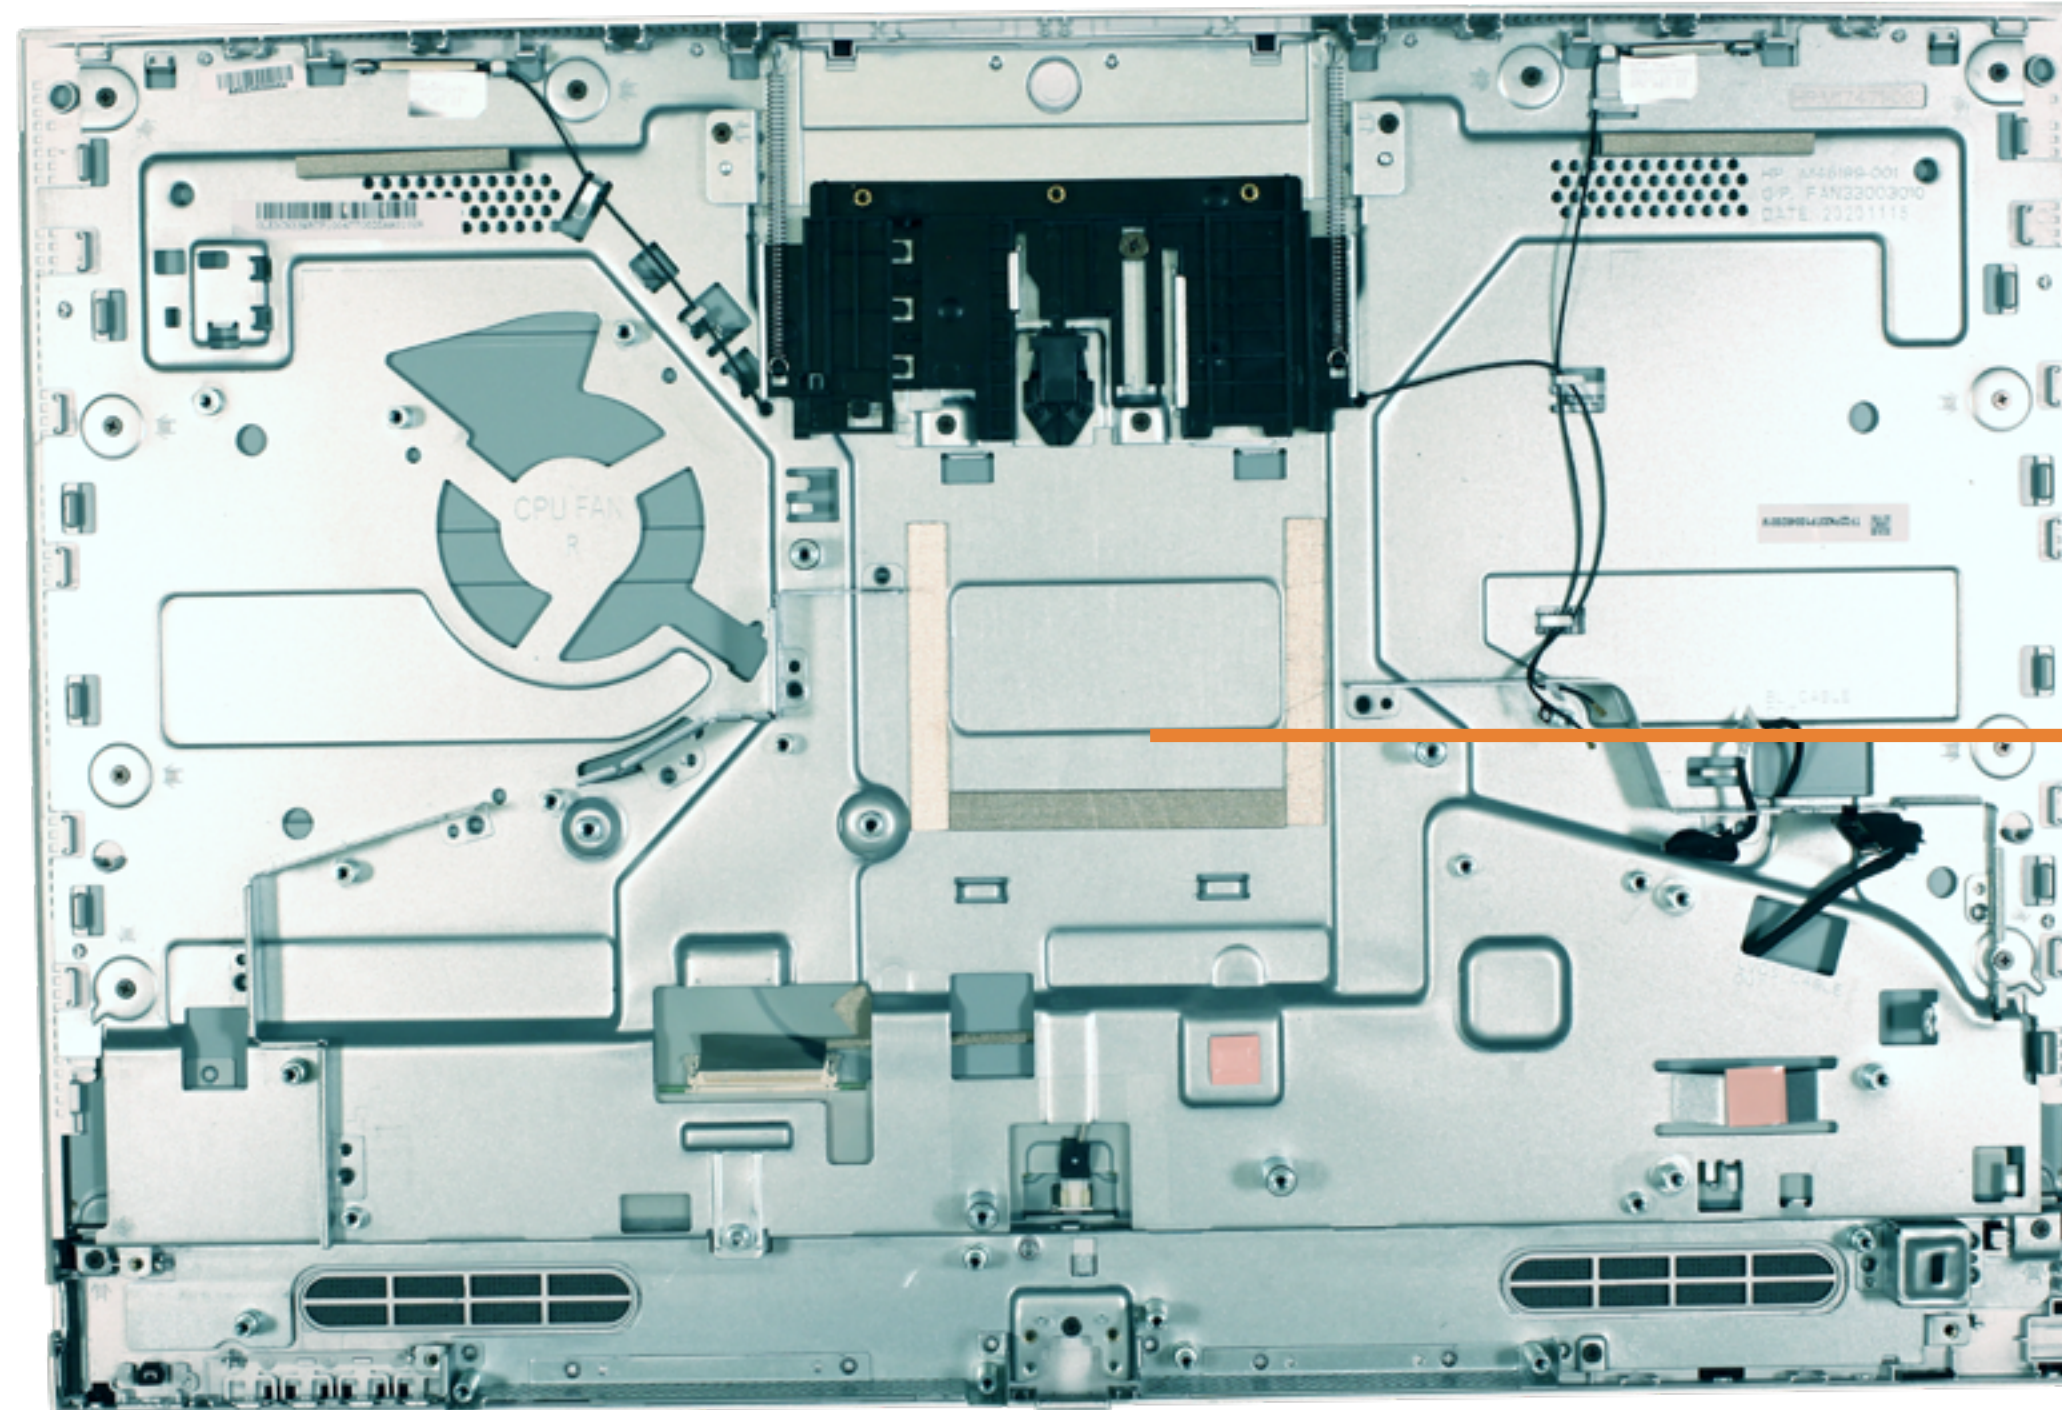

Middle Frame

Display Panel



Display Panel