


Reference Guide

Read this guide to get to know the printer control panel, learn how to interpret control panel light patterns, solve wireless connection problems, and find more information.

Printer control panel

NOTE: The buttons and button functions differ depending on your device model.

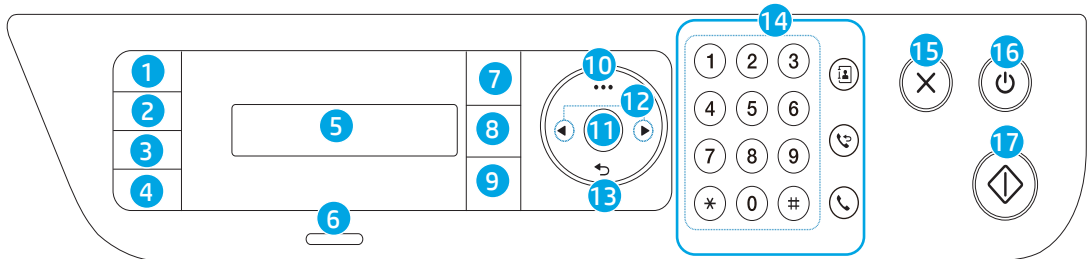

1 **ID Copy** button 

9 **Scan** button *

15 **Cancel** button 

2 **Contrast** button 

10 **Menu** button 

16 **Power** button/**Ready** light 

3 **Scale** button  or
Scan button 

11 **OK** button

17 **Start** button 

4 **Information** button  or
Wireless button 




12 **Left/Right** arrow buttons  * Fax models only

5 **Control panel display**

13 **Back** button 

6 **Status** light 

14 **Fax** buttons: *

- Numeric keypad
- **Address book** button 
- **Redial/Pause** button 
- **On Hook Dial** button 

7 **Fax** button *

8 **Copy** button *

Control panel light patterns



Ready



(blinking green)

Initializing or processing



(blinking orange)

Paper jam or out of paper

Printer operating environment guidelines



Keep printer out of direct sunlight



Recommended temperature range:
17.5° – 25° C
(63.5° – 77° F)



Recommended humidity range:
30% – 70%



Keep printer in well-ventilated area



Do not exceed voltage limits

Learn more



Product support
www.hp.com/support/laser1000mfp

Printed in China

© Copyright 2022 HP Development Company, L.P.



715A2-90002