



Maintenance and Service Guide

SUMMARY

This guide provides information about spare parts, removal and replacement of parts, security, backing up, and more.

© Copyright 2020 HP Development Company, L.P.

AMD, Athlon, Ryzen, Radeon, and Radeon Vega are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel is a trademark of Intel Corporation or its subsidiaries in the U.S. and/or other countries. SDHC, SDXC, and microSD are trademarks or registered trademarks of SD-3C LLC. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Miracast is a registered trademark of Wi-Fi Alliance.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2020

Document Part Number: M08079-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. Go to <http://www.microsoft.com> for details.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 Product description	1
2 Components	5
Right side	5
Left side	6
Display	7
Low blue light mode (select products only)	7
Keyboard area	8
Touchpad components	8
Lights	9
Button, vent, speakers, and fingerprint reader	9
Special keys	11
Bottom	12
Labels	12
3 Illustrated parts catalog	15
Computer major components	15
Display assembly subcomponents	18
Mass storage devices	19
Cables	20
Miscellaneous parts	21
4 Removal and replacement procedures preliminary requirements	23
Tools required	23
Service considerations	23
Plastic parts	23
Cables and connectors	23
Drive handling	23
Workstation guidelines	24
Electrostatic discharge information	24
Generating static electricity	25
Preventing electrostatic damage to equipment	25
Personal grounding methods and equipment	26
Grounding the work area	26
Recommended materials and equipment	26
Packaging and transporting guidelines	27

5 Removal and replacement procedures for authorized service provider parts	29
Component replacement procedures	29
Preparation for disassembly	29
Bottom cover	29
Battery	31
Hard drive	32
WLAN module	34
Solid-state drive	35
Memory modules	36
Solid-state drive board	38
Card reader board	40
USB board	40
Audio board	41
Touchpad button board	42
Fingerprint reader	43
Fan	44
Heat sink	45
System board	48
Display assembly	50
Power connector cable	57
Speakers	58
Keyboard with top cover	59
6 Using Setup Utility (BIOS)	61
Starting Setup Utility (BIOS)	61
Updating Setup Utility (BIOS)	61
Determining the BIOS version	61
Preparing for a BIOS update	62
Downloading a BIOS update	62
Installing a BIOS update	62
7 Backing up, restoring, and recovering	65
Backing up information and creating recovery media	65
Using Windows tools	65
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	65
Restoring and recovery	66
Restoring, resetting, and refreshing using Windows tools	66
Recovering using HP Recovery media	66
Changing the computer boot order	66
Using HP Sure Recover (select products only)	67

8 Using HP PC Hardware Diagnostics	69
Using HP PC Hardware Diagnostics Windows (select products only)	69
Using an HP PC Hardware Diagnostics Windows hardware failure ID code	69
Accessing HP PC Hardware Diagnostics Windows	69
Accessing HP PC Hardware Diagnostics Windows from HP Help and Support	69
Accessing HP PC Hardware Diagnostics Windows from Support Assistant	70
Downloading HP PC Hardware Diagnostics Windows	70
Downloading the latest HP PC Hardware Diagnostics Windows version from HP	70
Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store	70
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	70
Installing HP PC Hardware Diagnostics Windows	71
Using HP PC Hardware Diagnostics UEFI	71
Using an HP PC Hardware Diagnostics UEFI hardware failure ID code	71
Starting HP PC Hardware Diagnostics UEFI	71
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	72
Downloading the latest HP PC Hardware Diagnostics UEFI version	72
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	72
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	72
Downloading Remote HP PC Hardware Diagnostics UEFI	73
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	73
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	73
Customizing Remote HP PC Hardware Diagnostics UEFI settings	73
9 Specifications	75
Computer specifications	75
39.6 cm (15.6 in) display specifications	75
Solid-state drive specifications	76
Solid-state drive specifications (SATA-3)	77
10 Power cord set requirements	79
Requirements for all countries	79
Requirements for specific countries and regions	79
11 Recycling	81
Index	83

1 Product description

This table provides detailed product information.

Table 1-1 Product components and their descriptions

Category	Description
Product Name	HP 15 Laptop PC HP 15s Laptop PC Model numbers: 15-gw0xxx, 15s-gu0xxx, 15s-gr0xxx, 15s-gy0xxx CTO model number: 15z-gw000
Processors	AMD® processors AMD Ryzen™ 7-3700U (2.3 GHz [turbo up to 4.0 GHz], 4 cores, 2400 MHz/6 MB L2 cache, 25 W) AMD Ryzen 5-3500U (2.1 GHz [turbo up to 3.7 GHz], 4 cores, 2400 MHz/6 MB L3 cache, 15 W) AMD Ryzen 3-3250U (2.6 GHz [turbo up to 3.5 GHz], 2 cores, 2400 MHz/4 MB L3 cache, 15 W) AMD Athlon™ Gold3150U (2.4 GHz [turbo up to 3.3 GHz], 2 cores, 2400 MHz/4 MB L3 cache, 15 W) AMD Athlon Silver3050U (2.3 GHz [turbo up to 3.2 GHz], 2 cores, 2400 MHz/4 MB L3 cache, 15 W)
Graphics	Internal graphics AMD Radeon™ Vega™ 10 Graphics (Ryzen 7 processors) AMD Radeon Vega 8 Graphics (Ryzen 5 processors) AMD Radeon Graphics Supports HD Decode, DX12, and HDMI Hybrid graphics AMD Radeon™ 620 with up to 2048 MB of dedicated GDDR5 video memory Supports GPS (GPU Performance Scaling) Supports HD Decode, DX12, and HDMI
Display	15.6 in (39.6 cm), WLED, narrow bezel, slim-flat (3.2 mm) High-definition (HD) (1366 × 768), antiglare, SVA, 220 nits HD, BrightView, SVA, 220 nits HD, BrightView, SVA, 220 nits, Touch-on Panel (TOP) Full high-definition (FHD) (1920 × 1080), antiglare, UWVA, 250 nits, eDP FHD, antiglare, SVA, 220 nits
Memory	Two SODIMM slots, not customer accessible or upgradeable supporting up to 16 GB of RAM DDR4-2400 dual-channel support (DDR4-3200 bridge to DDR4-2666, DDR4-2666 downgrade to DDR-2400) Supports the following configurations:

Table 1-1 Product components and their descriptions (continued)

Category	Description
	<ul style="list-style-type: none"> • 16 GB (8 × 2) • 12 GB (8 + 4) • 8 GB (8 × 1) or (4 × 2) • 4 GB (4 × 1)
Primary storage	<p>PCIe, NVMe, M.2 2280 solid-state drives</p> <p>1 TB, PCIe</p> <p>512 GB, PCIe</p> <p>256 GB, PCIe</p> <p>128 GB, SATA-3, TLC</p> <p>Hard drives, SATA, 6.35 cm (2.5 in.), 7.2 mm (0.28 in.)</p> <p>2 TB, 5400 rpm</p> <p>1 TB, 5400 rpm</p> <p>500 GB, 7200 rpm</p> <p>Dual storage configurations</p> <p>1 TB, 5400 rpm hard drive + 256 GB, PCIe, solid-state drive</p> <p>1 TB, 5400 rpm hard drive + 128 GB, SATA-3, TLC, solid-state drive</p>
Audio and video	<p>Audio control panel: HP Audio Center</p> <p>Dual speakers</p> <p>HP TrueVision HD Camera: indicator LED, USB 2.0, HD, f2.0</p> <p>720p by 30 frames per second</p> <p>Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression</p> <p>HP Webcam: indicator LED, USB 2.0, f2.4</p> <p>640 × 480 by 30 frames per second</p> <p>Single digital microphone</p>
RJ-45 (network) jack	Integrated 10/100/1000 NIC
Wireless	<p>Compatible with Miracast® devices</p> <p>Turbo Lite WLAN SVTP</p> <p>Integrated wireless options with dual antennas (M.2/PCIe)</p> <p>Realtek RTL8822CE 802.11ac 2 × 2 Wi-Fi + Bluetooth® 5 (MU-MIMO supported)</p> <p>Intel Wi-Fi 6 AX200 + Bluetooth 5 (non-vPro) (802.11ax 2 × 2, MU-MIMO, supporting gigabit file transfer speeds)</p> <p>Integrated wireless options with single antenna (M.2/PCIe)</p> <p>Realtek RTL8821CE 802.11ac 1 × 1 Wi-Fi + Bluetooth 4.2 (MU-MIMO supported)</p>

Table 1-1 Product components and their descriptions (continued)

Category	Description
Media card reader	Supports microSD™, SDHC™, SDXC™ Push-pull insertion/removal
Ports	Hot plug/unplug and autodetect for correct output to wide-aspect vs. standard aspect video HDMI v1.4b supporting: up to 1920 × 1080 @ 60 Hz Audio-out (headphone)/audio-in (microphone) combo jack USB 3.2 Gen 1 Type C (supports data transfer; left side) USB 3.2 Gen 1 Type A (2) (right side) RJ-45 (network) jack AC Smart Pin adapter plug
Keyboard/pointing devices	Keyboard Full size, backlit, 3-coat paint, island style, with numeric keypad Full size, 2-coat paint, island style, with numeric keypad Full size, textured, with numeric keypad Touchpad Clickpad with image sensor Multitouch gestures enabled Precision touchpad support Support for Modern Trackpad Gestures Taps enabled as default
Power requirements	Battery 3 cell, 41 Whr, polymer, HP Long Life HP Fast Charge Technology Smart AC adapters (4.5 mm) 65 W, slim barrel, nPFC, right angle 65 W, slim barrel, nPFC, EM 45 W, slim barrel, nPFC, right angle 45 W, slim barrel, nPFC, EM Power cord C5, 1 m
Security	Supports Trusted Platform Module (TPM) 2.0, firmware based Integrated fingerprint reader
Operating system	Windows® 10 Home 64 Windows 10 Home 64 Chinese Market CPPP

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Windows 10 Home 64 High-end Chinese Market CPPP
	Windows 10 Home 64 Plus
	Windows 10 Home 64 Plus Single Language
	Windows 10 Home 64 Plus Single Language Africa Market
	Windows 10 Home 64 Plus Single Language APAC EM PPP
	Windows 10 Home 64 Plus Single Language India Market
	Windows 10 Home 64 Plus Single Language Indonesia Market
	Windows 10 Home 64 Single Language
	Windows 10 Home 64 Single Language Africa Market
	Windows 10 Home 64 Single Language APAC EM PPP
	Windows 10 Home 64 Single Language India Market
	Windows 10 Home 64 Single Language Indonesia Market
	Windows 10 Home 64 Single Language Value Africa Market
	Windows 10 Home 64 Single Language Value APAC EM PPP
	Windows 10 Home 64 Single Language Value India Market
	Windows 10 Home 64 Single Language Value Indonesia Market
	Windows 10 Home 64 Value Single Language
	Windows 10 Home S 64
	Windows 10 Home S 64 Plus
	Windows 10 Pro 64
	FreeDOS 3.0
Serviceability	End user replaceable parts
	AC adapter

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right side

Use the illustration and table to identify the components on the right side of the computer.

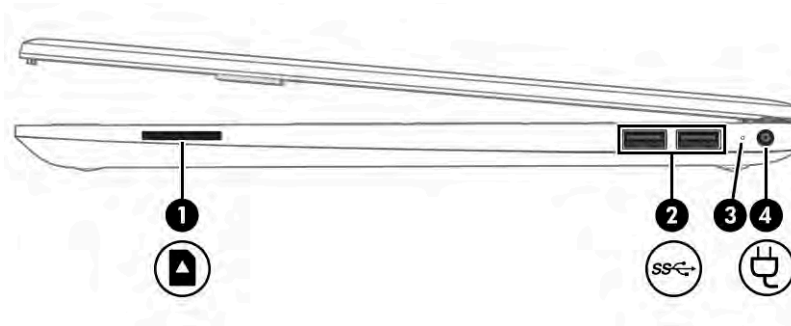





Table 2-1 Right-side components and their descriptions

Component	Description
(1)  Memory card reader	<p>Reads optional memory cards that enable you to store, manage, share, or access information.</p> <p>To insert a card:</p> <ol style="list-style-type: none">1. Hold the card label-side up, with connectors facing the computer.2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated. <p>To remove a card:</p> <ul style="list-style-type: none">▲ Pull the card out of the memory card reader.
(2)  USB SuperSpeed ports (2)	<p>Connect a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provide high-speed data transfer.</p>
(3) AC adapter and battery light	<ul style="list-style-type: none">• White: The AC adapter is connected and the battery is fully charged.• Blinking white: The AC adapter is disconnected and the battery has reached a low battery level.• Amber: The AC adapter is connected and the battery is charging.• Off: The battery is not charging.
(4)  Power connector	<p>Connects an AC adapter.</p>

Left side

Use the illustration and table to identify the components on the left side of the computer.

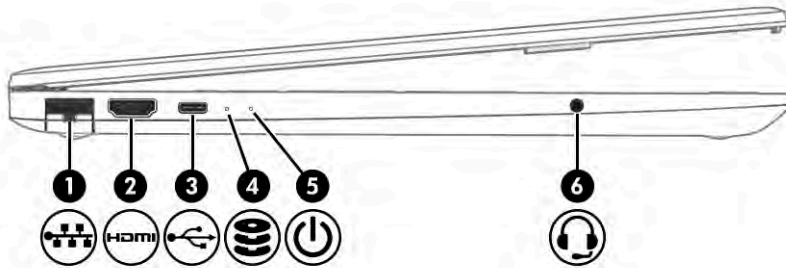
 







Table 2-2 Left-side components and their descriptions

Component	Description
<p>(1)  RJ-45 (network) jack/status lights</p>	<p>Connects a network cable.</p> <ul style="list-style-type: none"> White: The network is connected. Amber: Activity is occurring on the network.
<p>(2)  HDMI port</p>	<p>Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.</p>
<p>(3)  USB Type-C port</p>	<p>Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides data transfer.</p> <p>NOTE: Cables, adapters, or both (purchased separately) may be required.</p>
<p>(4)  Drive light</p>	<p>Blinking white: The solid-state drive is being accessed.</p>
<p>(5)  Power light</p>	<ul style="list-style-type: none"> On: The computer is on. Blinking white (select products only): The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
<p>(6)  Audio-out (headphone)/Audio-in (microphone) combo jack</p>	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ul style="list-style-type: none"> ▲ Type HP Documentation in the taskbar search box, and then select HP Documentation. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p>

Display

The computer display can include essential components such as speakers, antennas, cameras, and microphones.

Low blue light mode (select products only)

Your computer display is shipped from the factory in low blue light mode for improved eye comfort and safety. Also, blue light mode automatically adjusts blue light emissions when you are using the computer at night or for reading.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

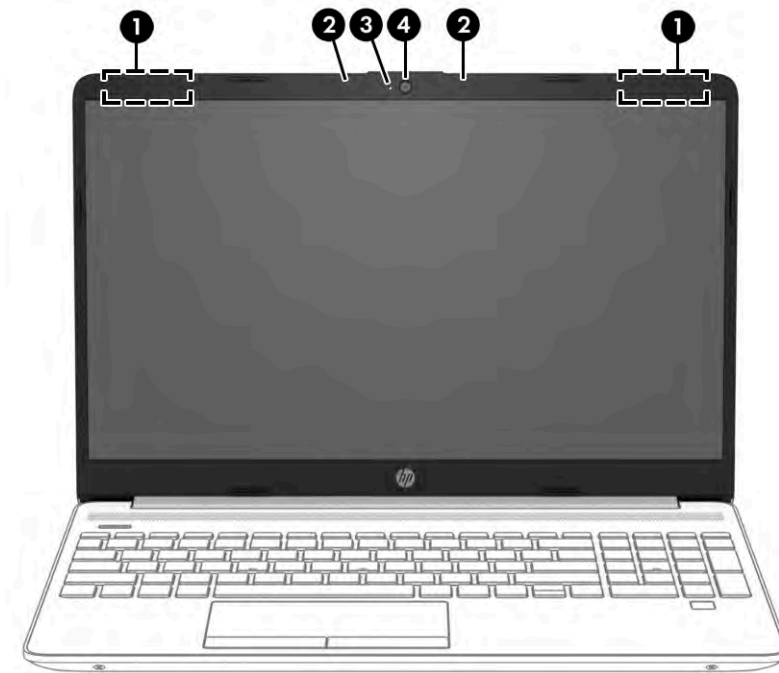


Table 2-3 Display components and their descriptions

Component	Description
(1) WLAN antennas* (1 or 2 depending on model)	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) Internal microphones	Record sound.
(3) Camera light	On: The camera is in use.
(4) Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

Table 2-3 Display components and their descriptions (continued)

Component	Description
	For wireless regulatory notices, see the section of the <i>Regulatory, Safety, and Environmental Notices</i> that applies to your country or region.
	To access this guide:
	▲ Type HP Documentation in the taskbar search box, and then select HP Documentation .

Keyboard area

Keyboards can vary by language.

Touchpad components

Identify the touchpad components.

To adjust touchpad settings and gestures, or to turn off the touchpad:

1. Type **touchpad settings** in the taskbar search box, and then press **enter**.
2. Choose a setting.

To turn on the touchpad:

1. Type **touchpad settings** in the taskbar search box, and then press **enter**.
2. Using an external mouse, click the **touchpad** button.

- or -

- ▲ Press the **Tab** key repeatedly until the pointer rests on the **touchpad** button. Then press the spacebar to select the button.

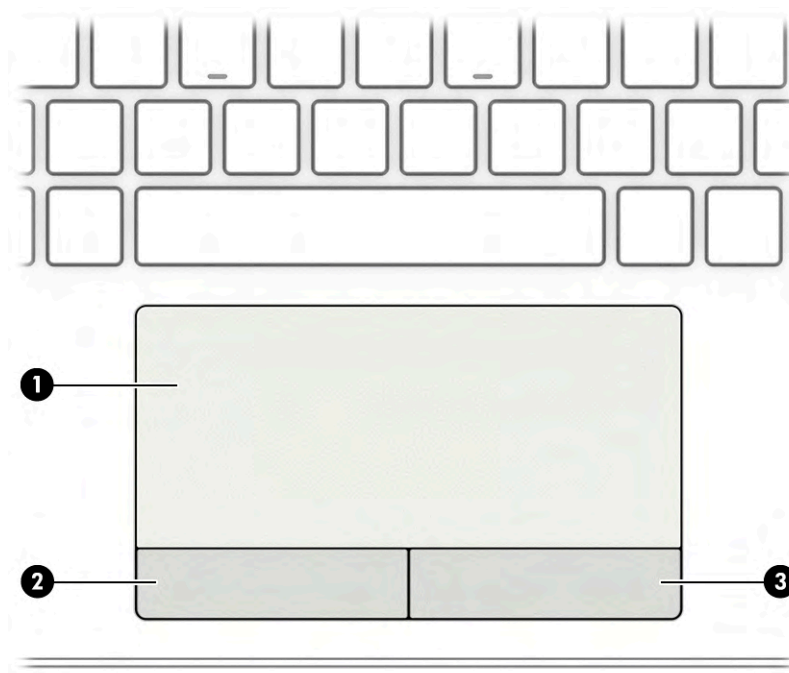


Table 2-4 Touchpad components and their descriptions

Component	Description
(1) Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2) Left touchpad button	Functions like the left button on an external mouse.
(3) Right touchpad button	Functions like the right button on an external mouse.

Lights

Identify the lights on the computer.

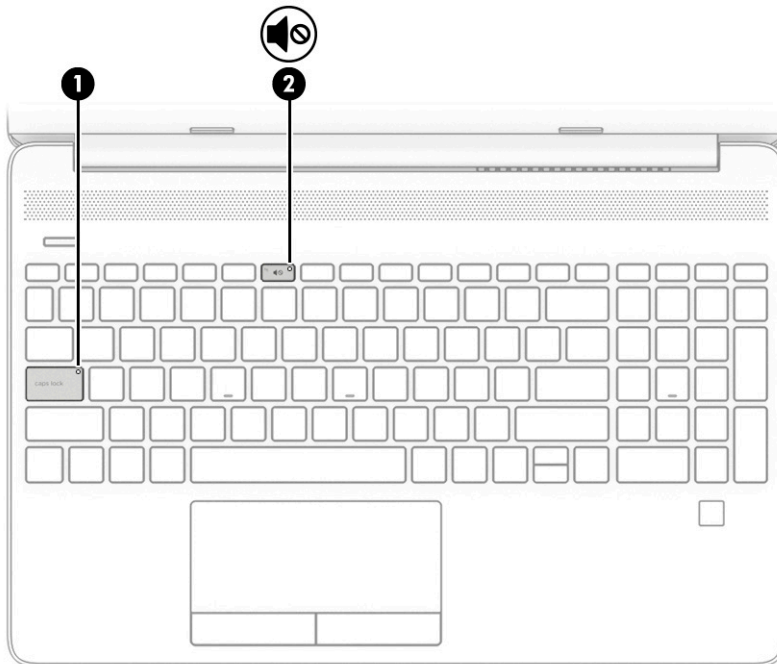



Table 2-5 Lights and their descriptions

Component	Description
(1) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(2)  Mute light	<ul style="list-style-type: none">• On: Computer sound is off.• Off: Computer sound is on.

Button, vent, speakers, and fingerprint reader

Identify the computer button, vent, speakers, and fingerprint reader.

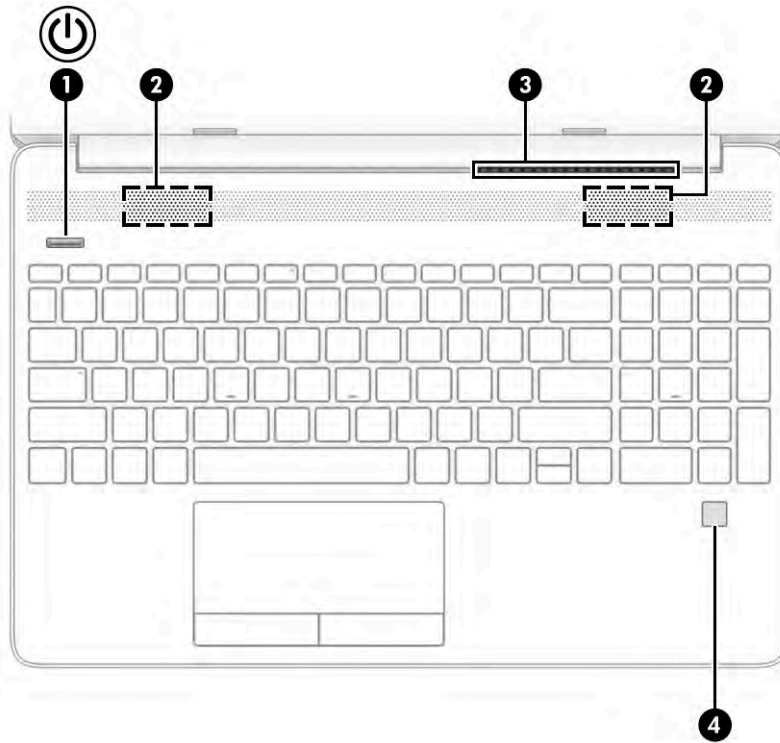


Table 2-6 Button, vent, speakers, and fingerprint reader and their descriptions


Component	Description
(1)  Power button	<ul style="list-style-type: none"> • When the computer is off, press the button briefly to turn on the computer. • When the computer is on, press the button briefly to initiate Sleep. • When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only). • When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 10 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options:</p> <p>▲ Right-click the Power icon, and then select Power Options.</p>
(2) Speakers (2)	Produce sound
(3) Vent	Enables airflow to cool internal components.
(4) Fingerprint reader (select products only)	<p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p> <p>Allows a fingerprint logon to Windows, instead of a password logon.</p>

Table 2-6 Button, vent, speakers, and fingerprint reader and their descriptions (continued)

Component	Description
	<p>▲ Touch your finger to the fingerprint reader.</p> <p>IMPORTANT: To prevent fingerprint logon issues, make sure when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.</p>

Special keys

Identify the special keys.

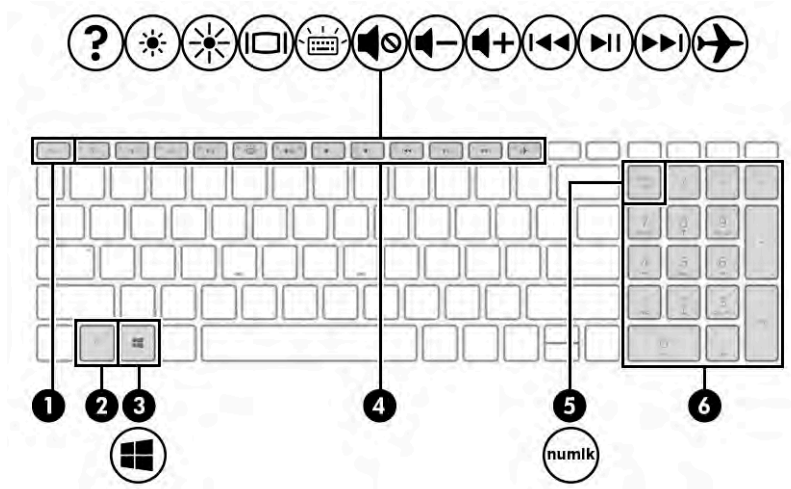



Table 2-7 Special keys and their descriptions

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes specific functions when pressed in combination with another key.
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions.
(5) <code>num lock</code> key	Alternates between the navigational and numeric functions on the integrated numeric keypad.
(6) Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When <code>num lock</code> is pressed, the keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.

Bottom

Identify the bottom component.

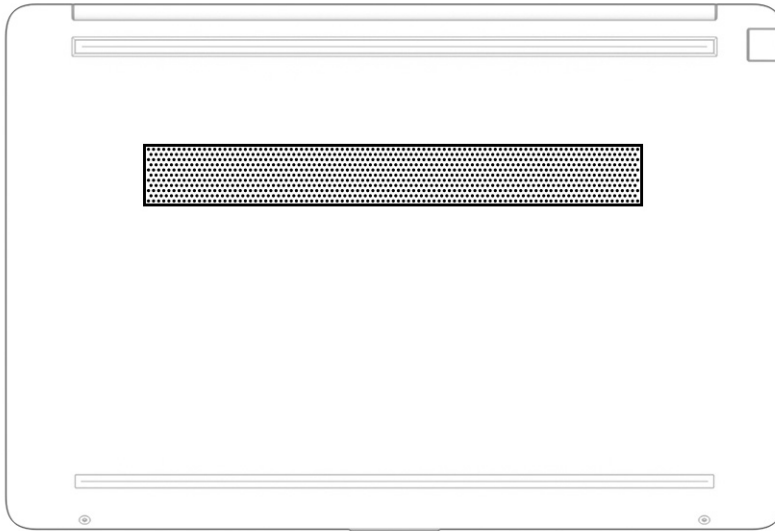



Table 2-8 Bottom component and its description

Component	Description
Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information that you might need when you troubleshoot system problems or travel internationally with the computer. Labels can be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label information order might vary by country and might not include the wording "Model" due to the country regulation.

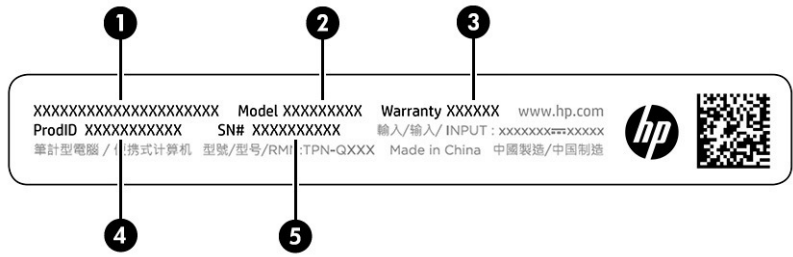


Table 2-9 Service label components

Component	
(1)	HP product name
(2)	Model number
(3)	Warranty period
(4)	Product ID
(5)	Serial number

- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Use this table to determine the spare parts that are available for the computer.

Computer major components

To identify the computer major components, use this illustration and table.

NOTE: HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

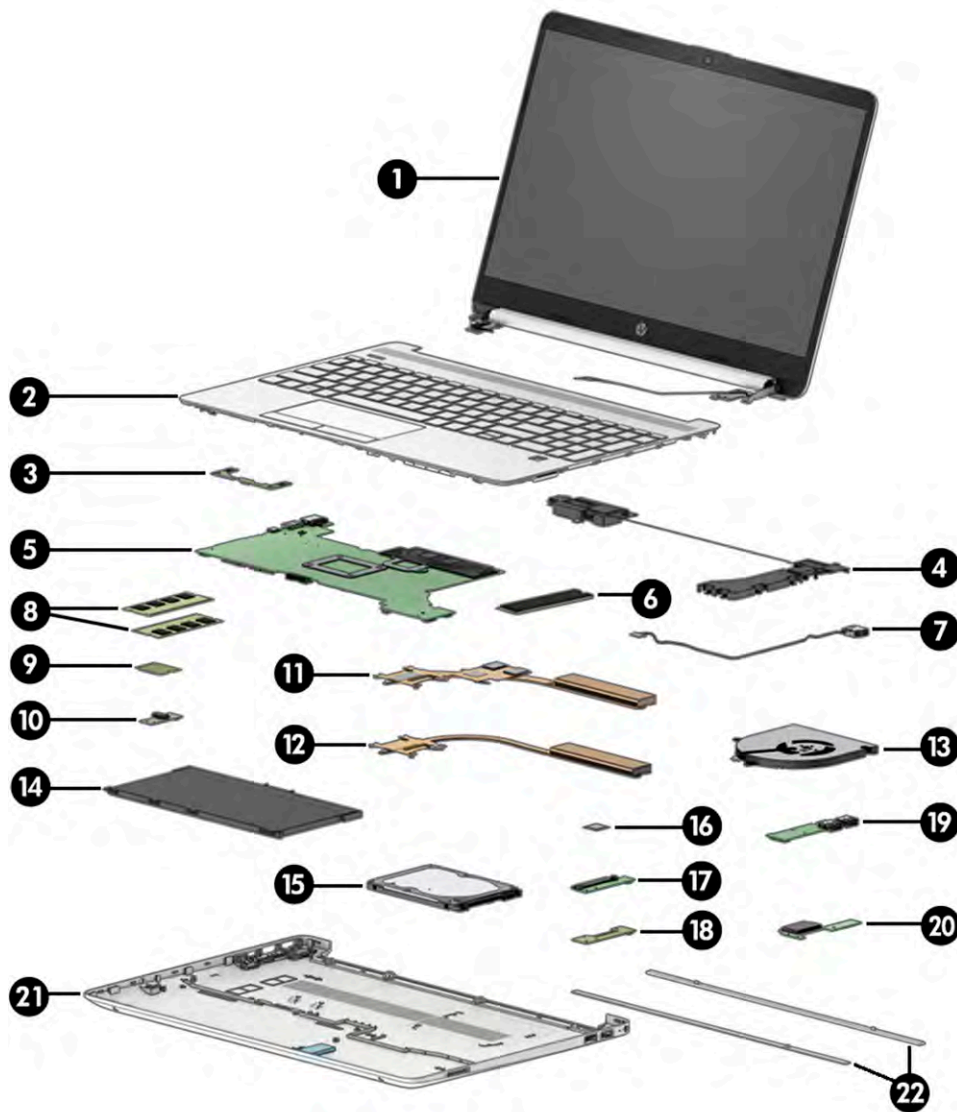


Table 3-1 Computer major component descriptions and part numbers

Item	Component	Spare part number
(1)	Display assembly NOTE: Display assemblies are offered as spare parts only at a subcomponent level.	not available as a spare part
(2)	Keyboard/top cover For a detailed list of country codes, see Keyboard with top cover on page 59 .	
	Silver, backlit	L52022-xx1
	Silver, no backlight	L52023-xx1
	Silver, fingerprint reader, backlit	L52154-xx1
	Silver, fingerprint reader, no backlight	L52155-xx1
	Grey with black keyboard, no backlight	L94458-xx1
	Black with black keyboard, no backlight	L94460-xx1
(3)	Touchpad button board NOTE: The touchpad button board cable is available using spare part number L52037-001. The touchpad cable is available using spare part number L52038-001.	L52029-001
(4)	Speakers (left and right)	L52040-001
(5)	System board (includes processor) All system boards use the following part numbers: xxxxxx-001: Non-Windows operating system xxxxxx-601: Windows 10 operating system	
	AMD Ryzen 3-3250U processor and 2 GB of discrete graphics memory	M03665-xx1
	AMD Athlon 3150U processor and 2 GB of discrete graphics memory	M03666-xx1
	AMD Ryzen 7-3700U processor	M03671-xx1
	AMD Ryzen 5-3500U processor	M03670-xx1
	AMD Ryzen 3-3250U processor	M03669-xx1
	AMD Athlon 3150U processor	M03668-xx1
	AMD Athlon 3050U processor	M03667-xx1
(6)	Solid-state drive	
	1 TB, PCIe	L78856-001
	512 GB, PCIe	L52006-001
	256 GB, PCIe	L52005-001
	128 GB, SATA-3, TLC	L52003-001
(7)	Power connector (DC-in) cable	L51995-001
(8)	Memory modules (DDR4-2666)	
	8 GB	937236-855
	4 GB	L10598-855

Table 3-1 Computer major component descriptions and part numbers (continued)

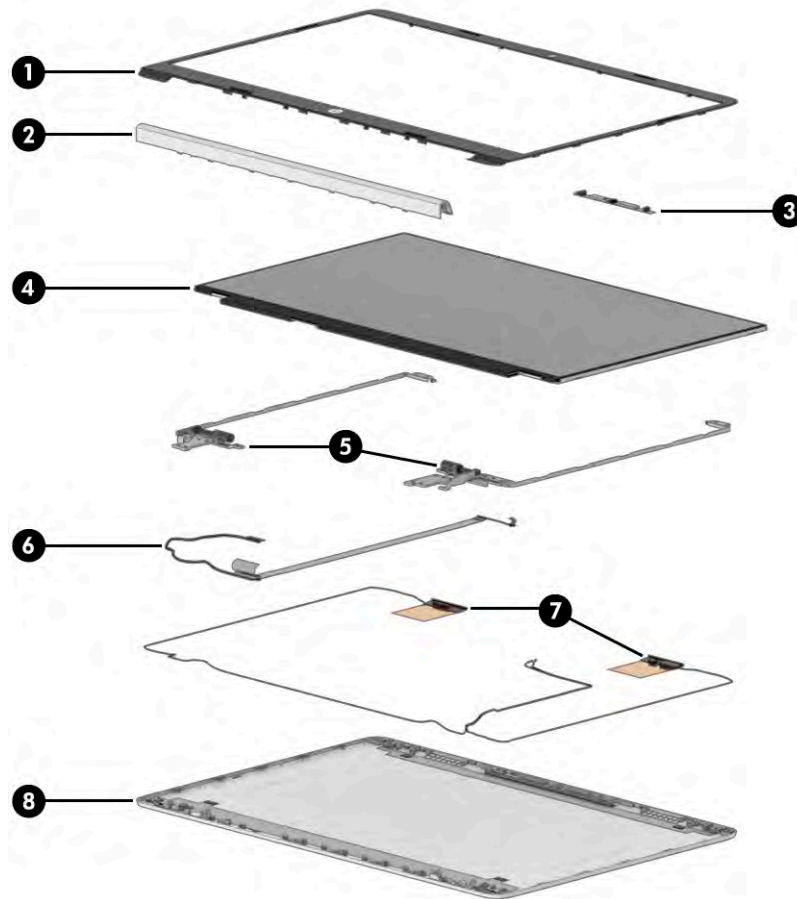
Item	Component	Spare part number
(9)	WLAN module	
	Realtek RTL8821CE 802.11ac 1 × 1 Wi-Fi + Bluetooth 4.2	L17365-005
	Intel Wi-Fi 6 AX200 802.11ax 2 × 2 Wi-Fi + Bluetooth 5 (non-vPro)	L35282-005
	Realtek RTL8822CE 802.11ac 2 × 2 Wi-Fi + Bluetooth 5	L44796-005
(10)	Audio board	L52028-001
	NOTE: The audio board cable is available using spare part number L52035-001.	
(11)	Heat sink, discrete graphics (includes replacement thermal material)	L52032-001
(12)	Heat sink, UMA graphics (includes replacement thermal material)	L52033-001
(13)	Fan	L52034-001
(14)	Battery (3 cell, 41 Whr)	L11119-855
(15)	Hard drive (does not include hard drive cable)	
	2 TB, 5400 rpm	912487-855
	1 TB, 5400 rpm	L30422-005
	500 GB, 5400 rpm	778186-005
(16)	Fingerprint reader	M16090-001
	NOTE: The fingerprint reader cable is available using spare part number L52036-001.	
(17)	Hard drive board	L52024-001
	NOTE: The hard drive board cable is available using spare part number L52025-001.	
(18)	Solid-state drive board	L52026-001
	NOTE: The solid-state drive board cable is available using spare part number L52025-001.	
(19)	USB board	M03673-001
	NOTE: The USB board cable is available using spare part number L52039-001.	
(20)	Card reader board	L52030-001
	NOTE: The card reader board cable is available using spare part number L52027-001.	
(21)	Bottom cover	
	Silver	L52007-001
	Gold	L52008-001
	Grey	L94448-001
	Black	L94450-001
	Red	M03726-001
(22)	Rubber Foot Kit	
	Natural silver	L52041-001
	Dark ash silver	L94457-001

Table 3-1 Computer major component descriptions and part numbers (continued)

Item	Component	Spare part number
	Gold	L52042-001
	Red	M04099-001

Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

**Table 3-2 Display component descriptions and part numbers**

Item	Component	Spare part number
(1)	Display bezel	L52014-001
(2)	Hinge cover (includes display bezel adhesive and display rear cover adhesive)	
	Silver	L52010-001
	Gold	L52011-001
	Grey	L94451-001
	Black	L94453-001

Table 3-2 Display component descriptions and part numbers (continued)

Item	Component	Spare part number
	Red	M03727-001
(3)	Camera module (includes display panel adhesive kit)	
	HD camera	L51996-001
	VGA camera	M03672-001
(4)	Display panel (includes display panel adhesive kit)	
	FHD, SVA, 220 nits	L51997-001
	FHD, UWVA, 250 nits	L68082-001
	HD, BrightView	L52000-001
	HD, BrightView, Touch-on Panel (TOP)	L52001-001
	HD, antiglare	L51999-001
(5)	Hinges (includes left and right display hinges; includes display panel adhesive and display bezel adhesive)	L52009-001
(6)	Display panel cable (includes display panel adhesive and display bezel adhesive)	
	For use with non-touch panels	L52015-001
	For use with touch screen panels	L52016-001
(7)	Wireless antenna kits (includes display panel adhesive kit)	
	Single antenna	L52017-001
	Dual antennas	L52018-001
(8)	Display back cover (includes antenna cables, display bezel adhesive and display panel adhesive tape kit)	
	Silver	L52012-001
	Gold	L52013-001
	Grey	L94454-001
	Black	L94456-001
	Red	M03725-001
	Adhesive tape kit (includes display panel adhesive and display bezel adhesive; not illustrated)	L52528-001

Mass storage devices

To identify the mass storage devices, use this illustration and table.

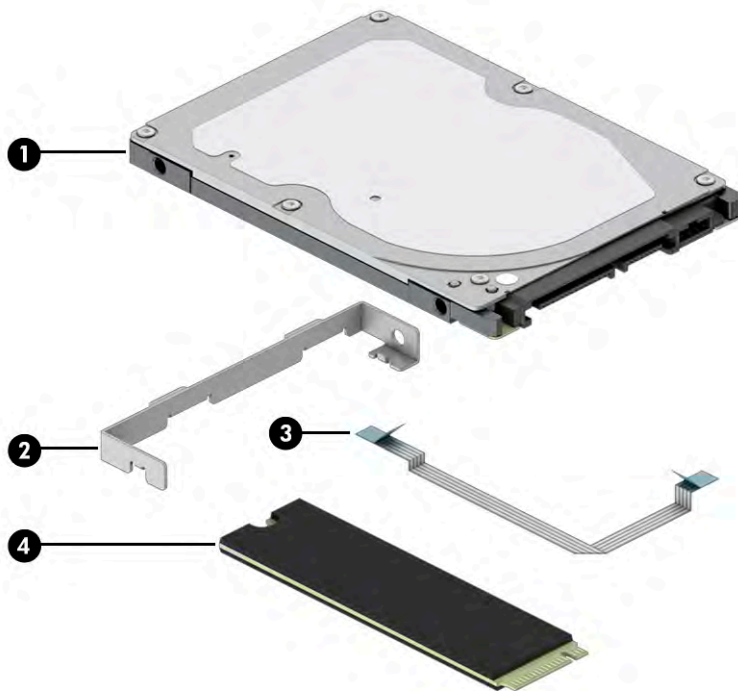


Table 3-3 Mass storage device descriptions and part numbers

Component	Spare part number
(1) Hard drive (does not include hard drive cable)	
2 TB, 5400 rpm	912487-855
1 TB, 5400 rpm	L30422-005
500 GB, 5400 rpm	778186-005
(2) Hard drive bracket	not available as a spare part
(3) Hard drive cable	L52025-001
(4) Solid-state drive	
512 GB, PCIe	L52006-001
256 GB, PCIe	L52005-001
128 GB, SATA-3, TLC	L52003-001

Cables

To identify the cables, use this illustration and table.

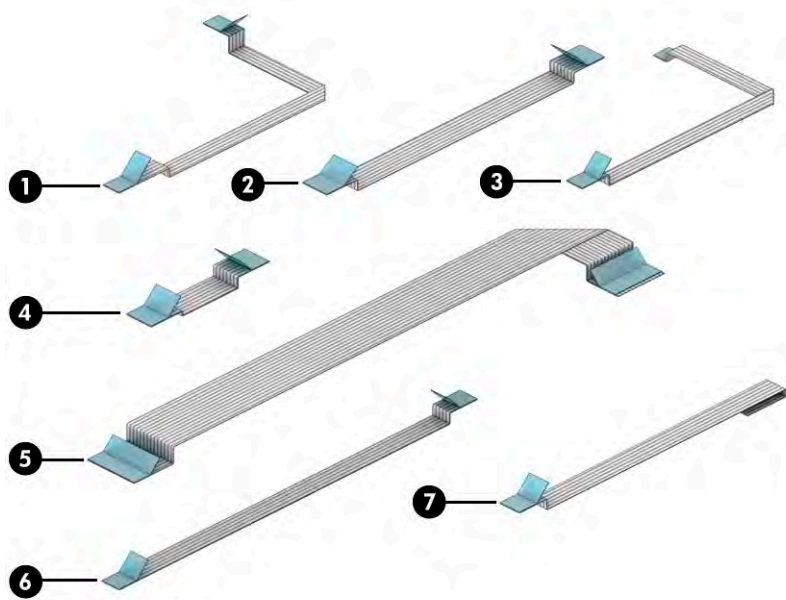


Table 3-4 Cable descriptions and part numbers

Item	Component	Spare part number
(1)	Hard drive/solid-state drive cable	L52025-001
(2)	USB board cable	L52039-001
(3)	Audio board cable	L52035-001
(4)	Card reader board cable	L52027-001
(5)	Fingerprint reader board cable	L52036-001
(6)	Touchpad button board cable	L52037-001
(7)	Touchpad cable	L52038-001

Miscellaneous parts

To identify the miscellaneous parts, use this table.

Table 3-5 Miscellaneous part descriptions and part numbers

Component	Spare part number
AC adapters	
65 W HP Smart AC adapter (non-PFC, EM, RC, 4.5 mm)	913691-850
65 W AC adapter (non-PFC, S-3P, 4.5 mm)	710412-001
45 W HP Smart AC adapter (non-PFC, RC, 4.5 mm, non-slim)	741727-001
45 W HP Smart AC adapter for use in Argentina (non-PFC, RC, 4.5 mm, right angle)	741553-852
Screw Kit	L52043-001
Adapter, USB Type-C-to-USB Type-A	833960-001
Adapter, HP HDMI-to-VGA	701943-001

Table 3-5 Miscellaneous part descriptions and part numbers (continued)

Component	Spare part number
Hub, HP USB Type-C-to- USB Type-A	916838-001
HP USB External DVD±RW drive	747080-001
Power cords (C5, 1.0 m)	
Argentina	L19357-001
Australia	L19358-001
Denmark	L19360-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-001
India	L19363-001
Israel	L19362-001
Italy	L19364-001
Japan	L19365-001
North America	L19367-001
People's Republic of China	L19368-001
South Africa	L19369-001
South Korea	L19366-001
Switzerland	L19370-001
Taiwan	L19372-001
Thailand	L19371-001
United Kingdom	L19373-001

4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.


Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.


 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

Handle cables with extreme care to avoid damage.

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

Drive handling

Note the following guidelines when handling drives.



IMPORTANT: Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package “FRAGILE.”

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you remove or install internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described [Personal grounding methods and equipment on page 26](#).

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing DIPs (dual in-line packages) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V

Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



NOTE: As little as 700 V can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity. The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components.

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.

- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- **Heel straps/Toe straps/Boot straps** can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material. Provide a wrist strap connected to the work surface and properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep work area free of nonconductive materials such as ordinary plastic assembly aids and polystyrene foam.
- Use field service tools, such as cutters, screwdrivers, and vacuums, that are conductive.

Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance

- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing $1\text{ M}\Omega \pm 10\%$ resistance
- Material handling packages
- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes


Packaging and transporting guidelines


Follow these grounding guidelines when packaging and transporting equipment.

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

5 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Components described in this chapter should be accessed only by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

Component replacement procedures

To remove and replace computer components, use these procedures.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

You must remove, replace, or loosen as many as 50 screws when you service the parts described in this chapter. Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

To remove and replace computer components, use these procedures.

See [Removal and replacement procedures preliminary requirements on page 23](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

To remove the bottom cover, use this procedure and illustration.

Table 5-1 Bottom cover description and part number

Description	Spare part number
Bottom cover, silver	L52007-001
Bottom cover, gold	L52008-001
Bottom cover, grey	L94448-001
Bottom cover, black	L94450-001
Bottom cover, red	M03726-001
Rubber feet, natural silver	L52041-001

Table 5-1 Bottom cover description and part number (continued)

Description	Spare part number
Rubber feet, dark ash silver	L94457-001
Rubber feet, gold	L52042-001
Rubber feet, red	M04099-001


Before removing the bottom cover, prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).

Remove the bottom cover:

1. Remove the two rubber feet **(1)**.


The rubber feet are available using spare part number L52041-001 for natural silver models and L52042-001 for pale gold models.

2. Remove the four Phillips M2.5 × 8.0 screws **(2)** from under the feet and the two Phillips M2.0 × 4.0 screws **(3)** along the bottom edge of the bottom cover.

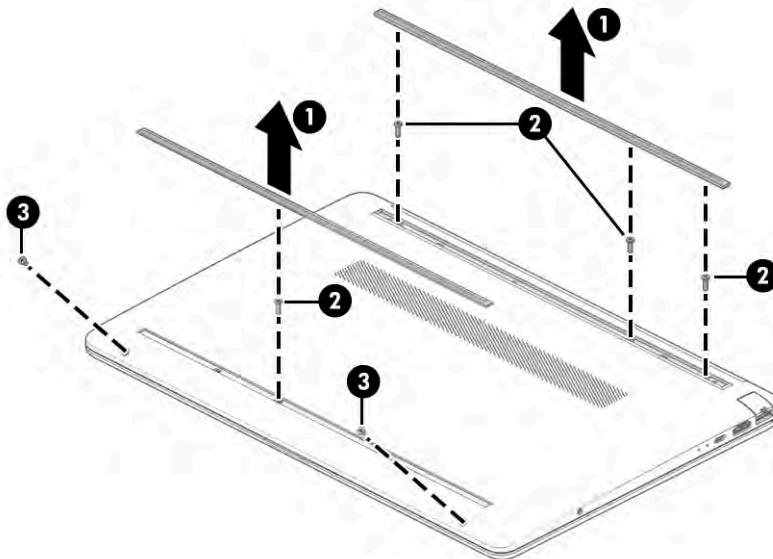

3. Use a plastic tool **(1)** to release the bottom cover from the computer **(2)**.

4. Remove the bottom cover from the computer (3).

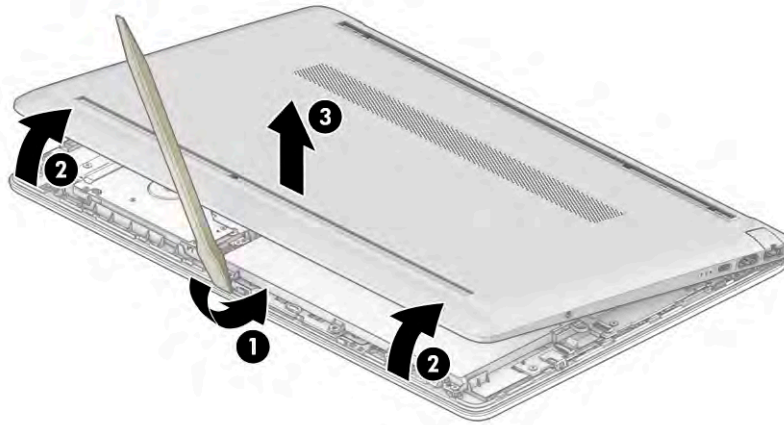

To replace the bottom cover, reverse the removal procedures.

Battery

To remove the battery, use this procedure and illustration.

Table 5-2 Battery description and part number

Description	Spare part number
3 cell, 41 Whr, Li-ion battery	L11119-855

WARNING! To avoid personal injury and damage to the product:

- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. They can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.

Before removing the battery, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).

WARNING! To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

IMPORTANT! Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

Remove the battery:

1. Remove the four Phillips M2.0 × 2.8 screws (1) that secure the battery to the computer.
2. Rotate the top of the battery upward (2), and then remove it from the computer (3).

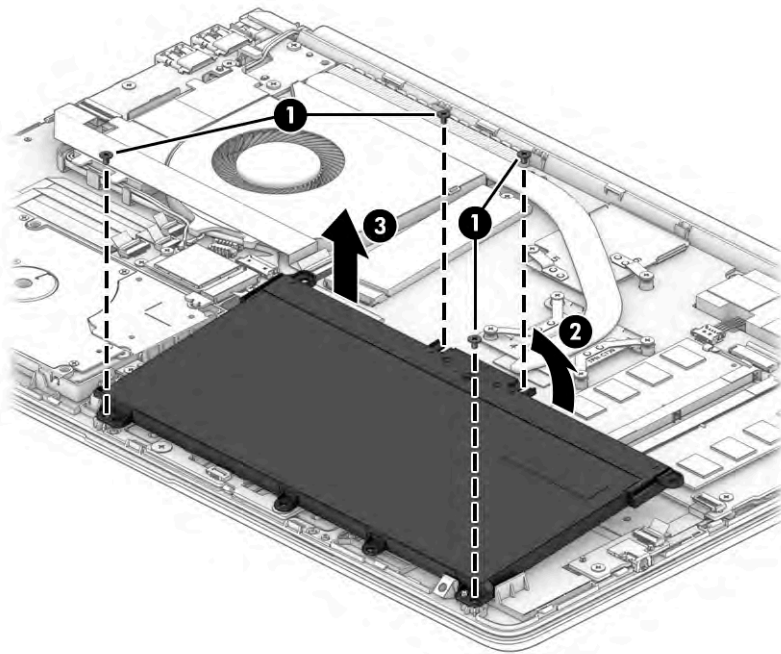

To replace the battery, reverse the removal procedures.

Hard drive

To remove the hard drive, use these procedures and illustrations.

Table 5-3 Hard drive, hard drive bracket and hard drive cable descriptions and part numbers


Description	Spare part number
2 TB, 5400 rpm	912487-855
1 TB, 5400 rpm	L30422-005
500 GB, 5400 rpm	778186-005
Hard drive board	L52024-001
Hard drive cable	L52025-001

Before removing the hard drive, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the hard drive:


1. Disconnect the hard drive cable from the ZIF connector on the system board **(1)**.
2. Remove the three Phillips M2.0 × 2.8 screws **(2)** that secure the hard drive and hard drive board to the computer.
3. Remove the hard drive from the computer **(3)**.

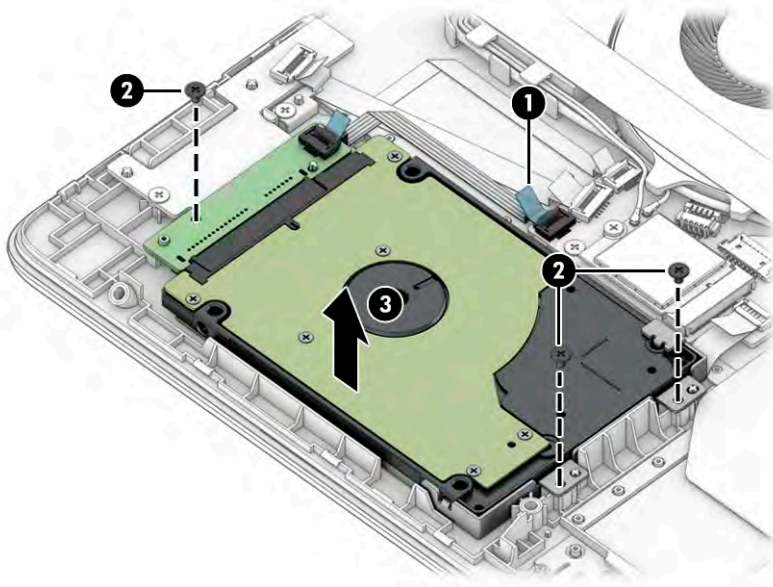

4. If it is necessary to remove the bracket from the hard drive, remove the Phillips M3.0 × 3.0 screw **(1)**, and then remove the bracket from the drive **(2)**.

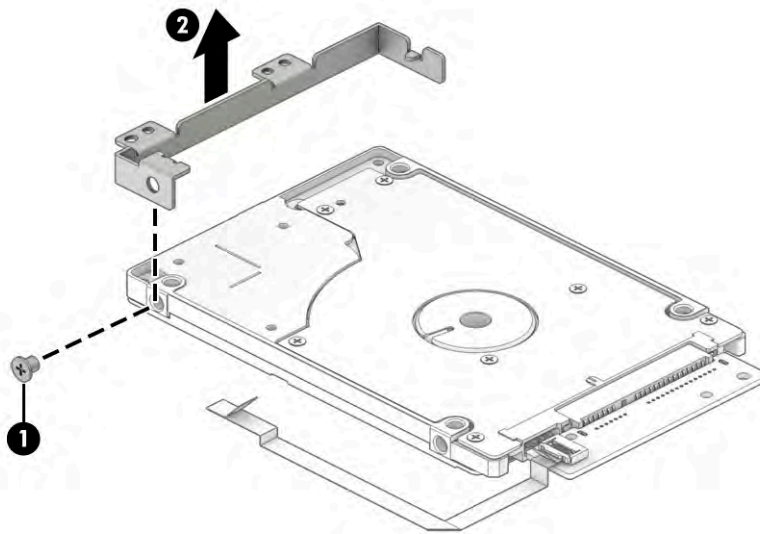

5. If it is necessary to remove the board from the hard drive, disconnect the hard drive cable from the ZIF connector on the hard drive board (1), and then pull the board off the drive (2).

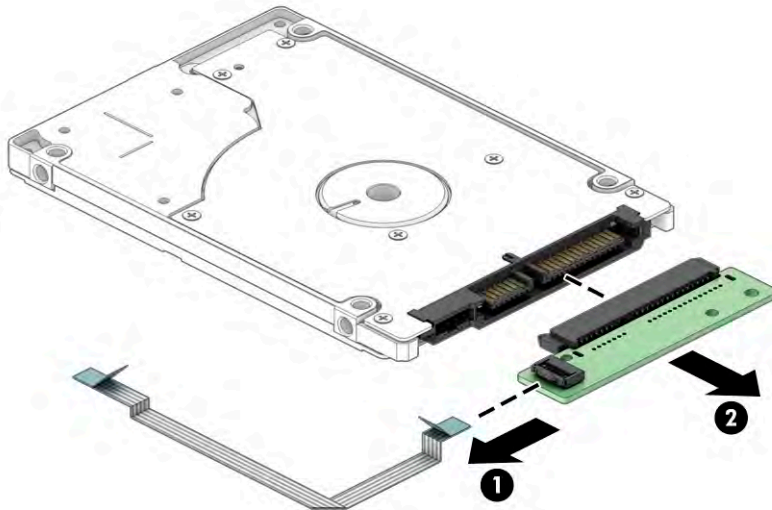

Reverse this procedure to reassemble the hard drive.

WLAN module

To remove the WLAN module, use this procedure and illustration.

Table 5-4 WLAN module descriptions and part numbers

Description	Spare part number
Realtek RTL8821CE 802.11ac 1 × 1 Wi-Fi + Bluetooth 4.2	L17365-005
Intel Wi-Fi 6 AX200 802.11ax 2 × 2 Wi-Fi + Bluetooth 5 (non-vPro)	L35282-005
Realtek RTL8822CE 802.11ac 2 × 2 Wi-Fi + Bluetooth 5	L44796-005



IMPORTANT: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the WLAN module:


1. Carefully disconnect the two antenna cables from the module (1).

2. Remove the Phillips M2.0 × 2.5 screw (2), and then remove the WLAN module (3).

 **NOTE:** Models have either one or two WLAN antennas. On models with two antennas, the #1 white WLAN antenna cable connects to the WLAN module #1 Main terminal. The #2 black WLAN antenna cable connects to the WLAN module #1 Aux terminal.

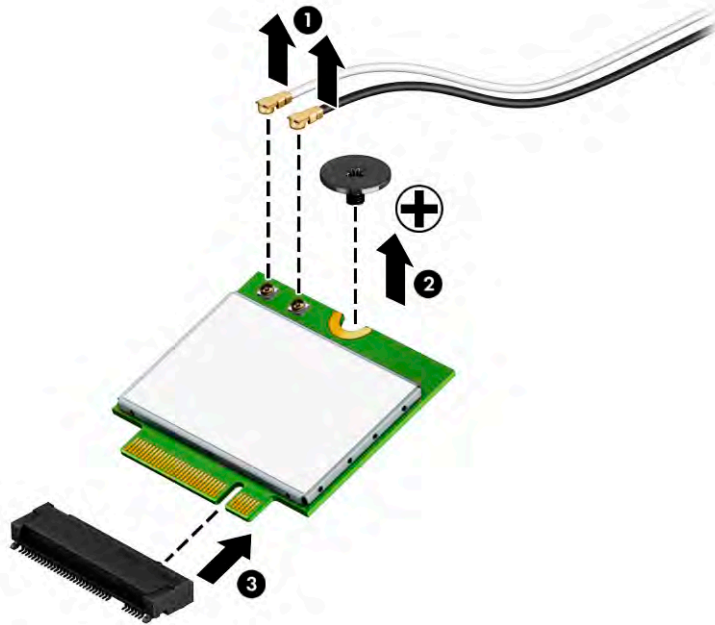

3. If the WLAN antenna is not connected to the terminal on the WLAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.

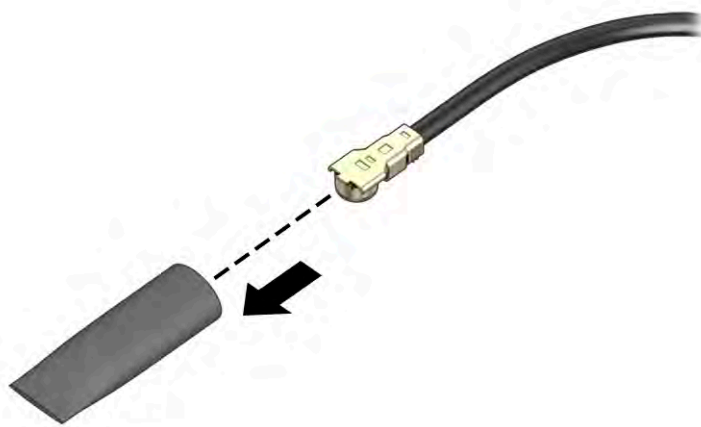

Reverse this procedure to install the WLAN module.

Solid-state drive

To remove the M.2 solid-state drive, use this procedure and illustration.

Table 5-5 Solid-state drive descriptions and part numbers


Description	Spare part number
1 TB, PCIe	L78856-001
512 GB, PCIe	L52006-001
256 GB, PCIe	L52005-001
128 GB, SATA-3, TLC	L52003-001

Before removing the solid-state drive, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the solid-state drive:

1. Remove the Phillips M2.0 × 2.5 screw **(1)** that secures the drive to the computer.
2. Pull the drive away from the socket to remove it **(2)**.

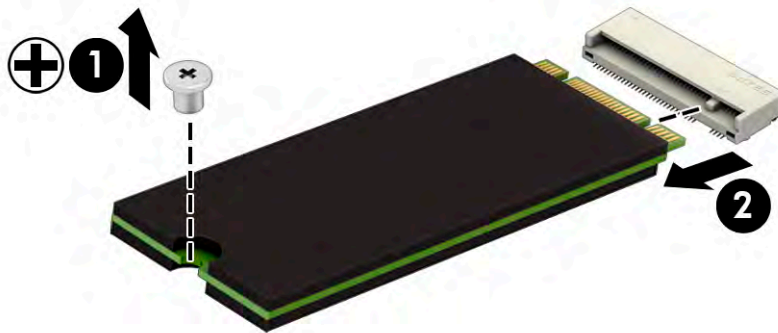

To install the solid-state drive, reverse the removal procedures.



NOTE: Solid-state drives are designed with a notch to prevent incorrect insertion.

Memory modules

To remove the memory modules, use this procedure and illustration.

Table 5-6 Memory module descriptions and part numbers


Description	Spare part number
Memory module, 8 GB	937236-855
Memory module, 4 GB	L10598-855


Before removing the memory, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

If you are replacing a memory module, remove the existing memory module:

- ▲ Spread the two retention clips outward **(1)** until the memory module tilts up at a 45° angle, and then remove the module **(2)**. Use the same procedure to remove all memory modules.

 **IMPORTANT:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

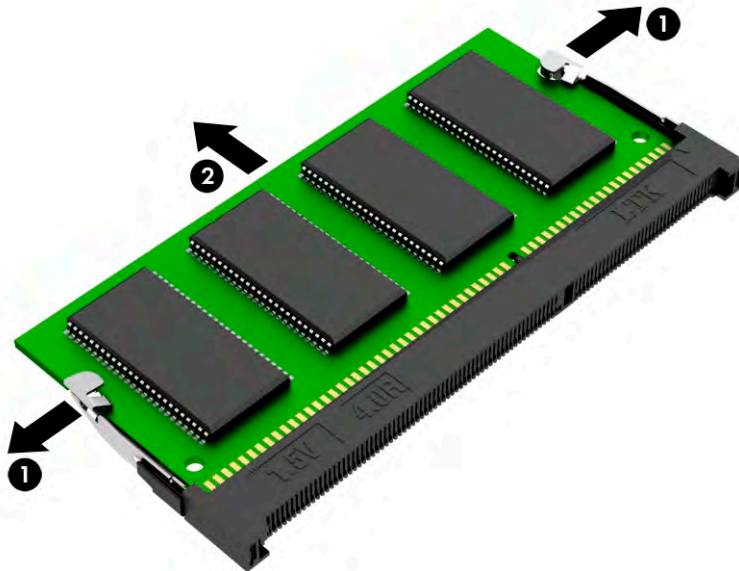


To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:

1. Align the notched edge of the module with the tab in the slot **(1)**, and then press the module into the slot at an angle until it is seated **(2)**.

2. Press down on the module until the side retention clips snap into place **(3)**.

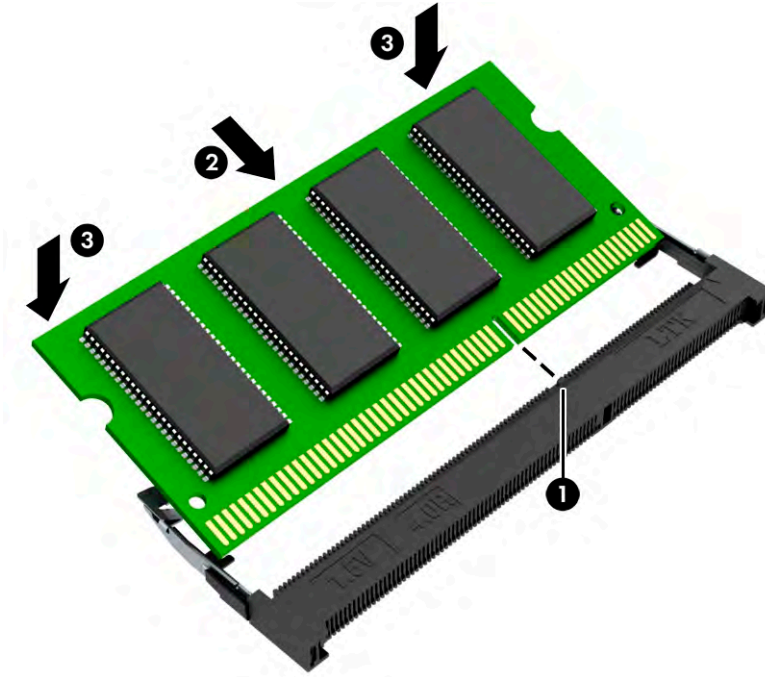

Solid-state drive board

To remove the solid-state drive board, use this procedure and illustration.

Table 5-7 Solid-state drive board description and part number

Description	Spare part number
Solid-state drive board	L52026-001
Solid-state drive board cable	L52025-001


Before removing the solid-state drive board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).
4. Remove the solid-state drive (see [Solid-state drive on page 35](#)).


Remove the solid-state drive board:

1. Disconnect the cable from the ZIF connector on the solid-state drive board **(1)**.
2. Remove the three Phillips M2.0 × 2.8 screws **(2)** that secure the board to the computer.

3. Remove the board from the computer (3).

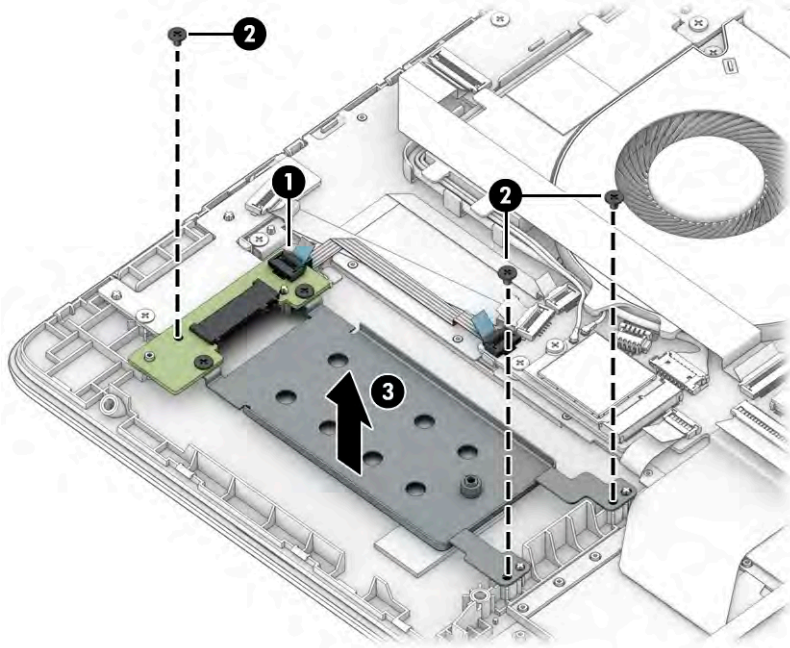

4. To remove the board from the bracket, disconnect the cable from the ZIF connector on the solid-state drive board (1).
5. Remove the two Phillips M2.0 × 2.8 screws (2) that secure the board to the bracket.
6. Remove the board from the bracket (3).

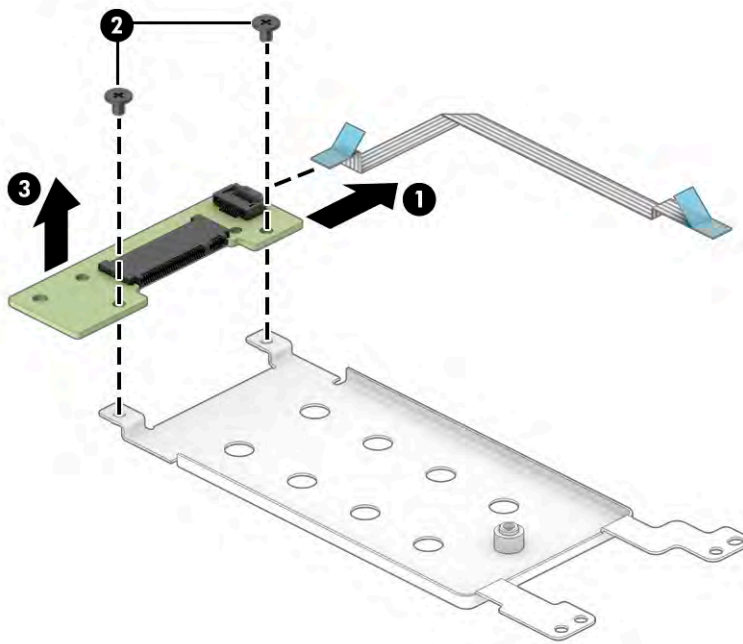

Reverse this procedure to install the solid-state drive board.

Card reader board

To remove the card reader board, use this procedure and illustration.

Table 5-8 Card reader board description and part number


Description	Spare part number
Card reader board	L52030-001
Card reader board cable	L52027-001

Before removing the card reader board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the card reader board:

1. Disconnect the cable from the ZIF connector on the card reader board **(1)**.
2. Remove the Phillips M2.0 × 2.8 screw **(2)** that secures the board to the computer.
3. Remove the board from the computer **(3)**.

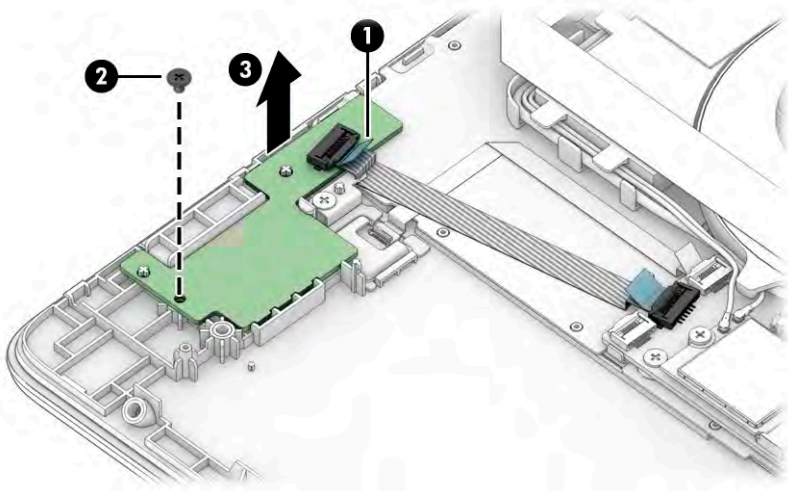

Reverse this procedure to install the card reader board.

USB board

To remove the USB board, use this procedure and illustration.

Table 5-9 USB board description and part number


Description	Spare part number
USB board	M03673-001
USB board cable	L52039-001

Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the USB board:

1. Disconnect the cable from the ZIF connector on the USB board (**1**).
2. Remove the two Phillips M2.0 × 2.8 screws (**2**) that secure the board to the computer.
3. Remove the board from the computer (**3**).

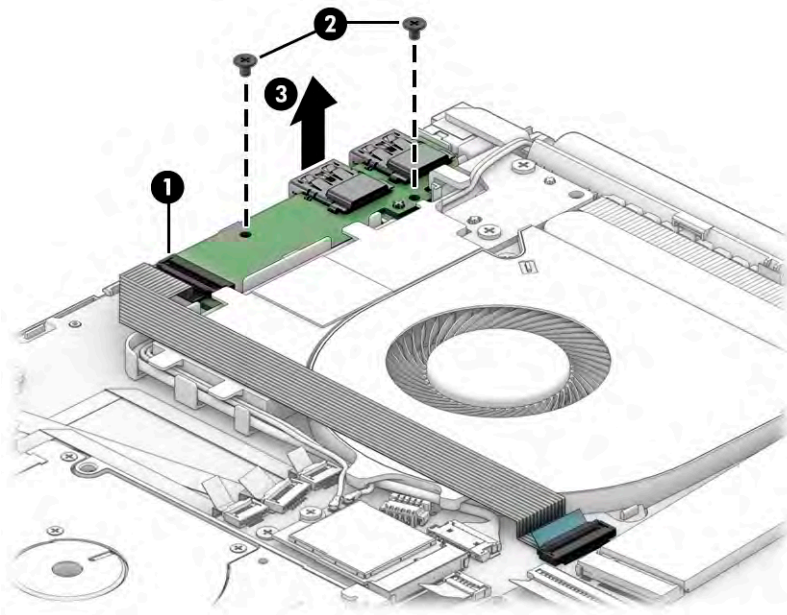

Reverse this procedure to install the USB board.

Audio board

To remove the audio board, use this procedure and illustration.

Table 5-10 Audio board description and part number


Description	Spare part number
Audio board	L52028-001
Audio board cable	L52035-001

Before removing the audio board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the audio board:

1. Disconnect the cable from the ZIF connector on the audio board **(1)**.
2. Remove the Phillips M2.0 × 2.8 screw **(2)** that secures the board to the computer.
3. Remove the board from the computer **(3)**.

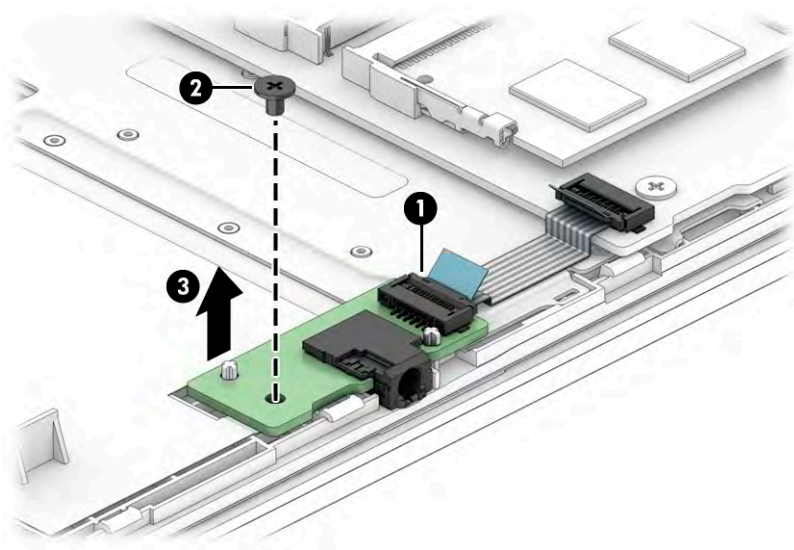

Reverse this procedure to install the audio board.

Touchpad button board

To remove the touchpad, use this procedure and illustration.

Table 5-11 Touchpad button board description and part number

Description	Spare part number
Touchpad button board	L52029-001
Touchpad button board cable	L52037-001
Touchpad cable	L52038-001


Before removing the touchpad button board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the touchpad button board:

1. Disconnect the cable from the ZIF connector on the touchpad button board **(1)**.
2. Remove the two Phillips M2.0 × 2.8 screws **(2)** that secure the board to the computer.

3. Remove the board from the computer (3).

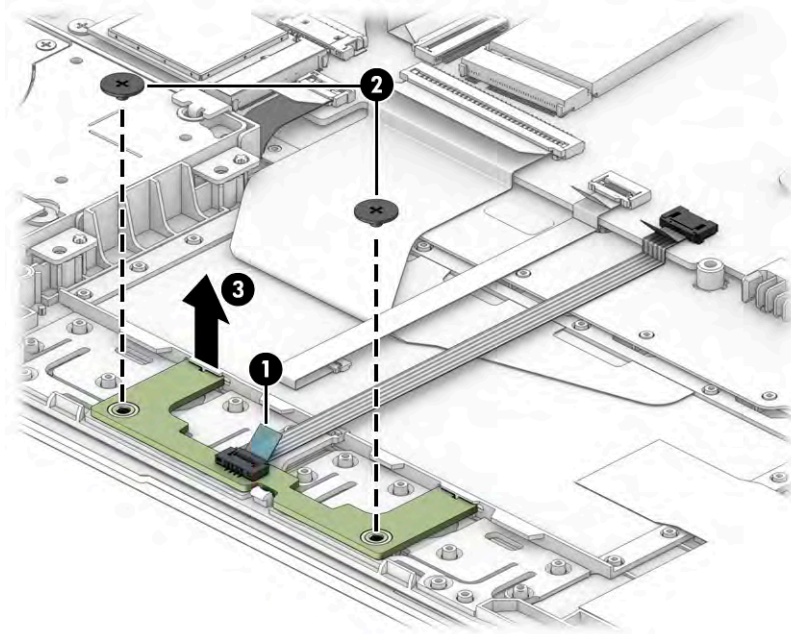

Reverse this procedure to install the touchpad button board.

Fingerprint reader

To remove the fingerprint reader, use this procedure and illustration.

Table 5-12 Fingerprint reader description and part number

Description	Spare part number
Fingerprint reader	M16090-001
Fingerprint reader cable	L52036-001


Before removing the fingerprint reader, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the fingerprint reader:

1. Disconnect the cable from the fingerprint reader board (1).
2. Remove the Phillips M2.0 × 2.8 screw (2) that secures the fingerprint reader bracket to the computer.
3. Remove the bracket from on top of the fingerprint reader (3).

4. Remove the fingerprint reader from the computer **(4)**.

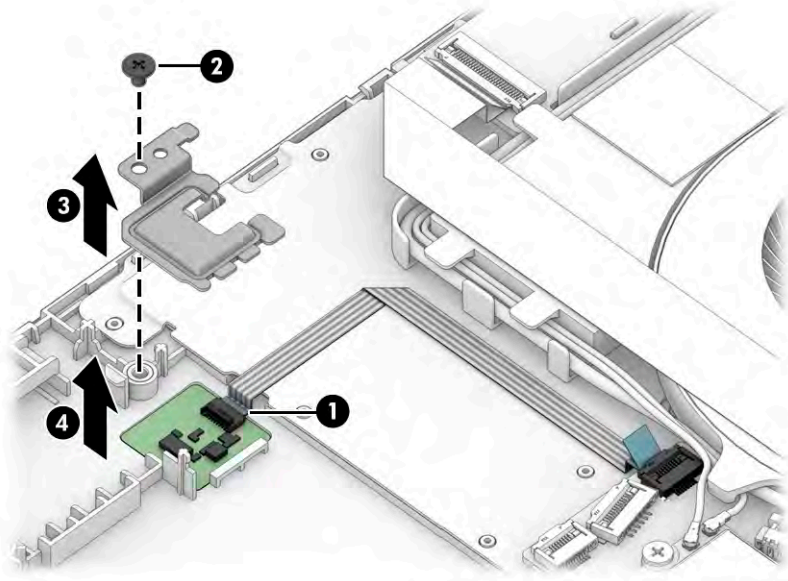

Reverse this procedure to install the fingerprint reader.

Fan

To remove the fan, use this procedure and illustration.

Table 5-13 Fan description and part number

Description	Spare part number
Fan	L52034-001


Before removing the fan, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the fan:

1. Remove the USB board cable from the top of the fan **(1)**.
2. Disconnect the fan cable **(2)** from the system board.
3. Disconnect the power connector (DC-in) cable from the system board and remove the cable from the clips in the fan **(3)**.
4. Remove the Phillips M2.0 x 4.0 screw **(4)** that secures the fan to the computer.

5. Remove the fan from the computer (5).

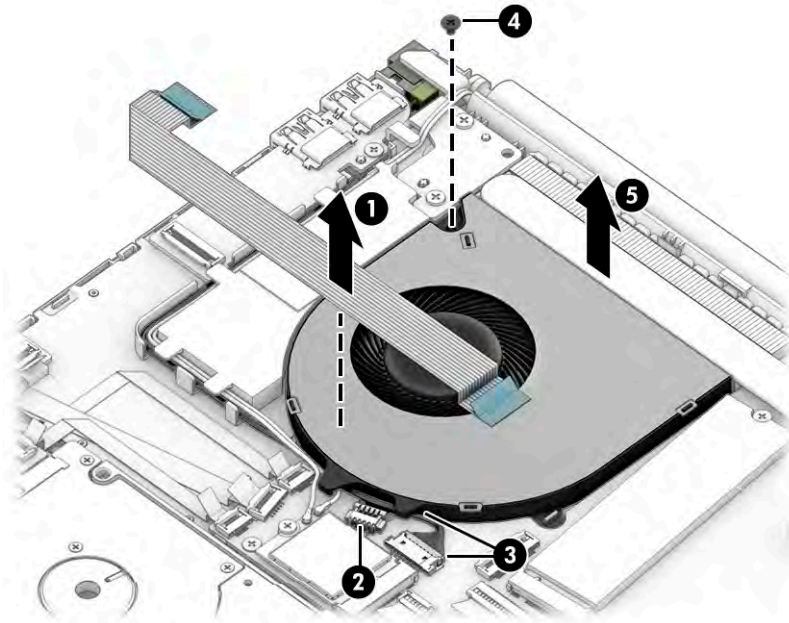

Reverse this procedure to install the fan.

Heat sink

To remove the heat sink, use these procedures and illustrations.

Table 5-14 Heat sink descriptions and part numbers

Description	Spare part number
Heat sink for use in models with UMA graphics memory	L52033-001
Heat sink for use in models with discrete graphics memory	L52032-001


Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the heat sink:


1. **Discrete graphics:** In the order indicated on the heat sink, remove the six Phillips M2.0 × 2.8 screws (1) that secure the heat sink to the system board.

2. Remove the heat sink (2).

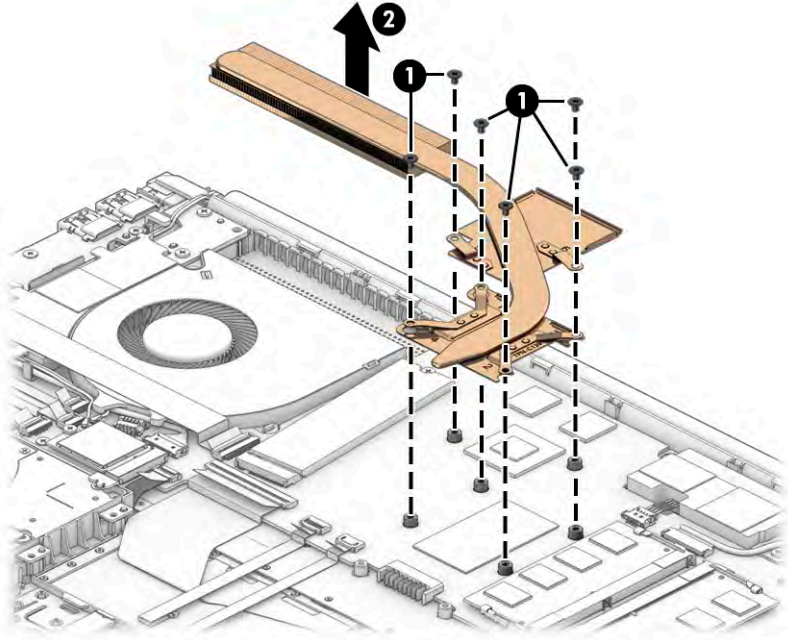


3. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

Thermal paste is used on the integrated system board processor (1) and associated location on the heat sink (2). Thermal pads are used on specific system board components (3) and associated locations on the heat sink (4).

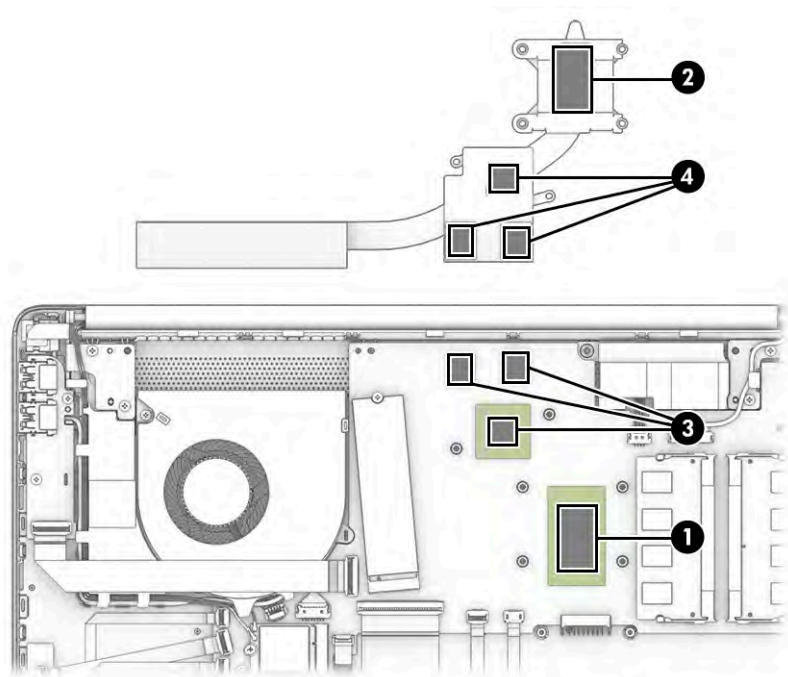


4. **UMA graphics:** In the order indicated on the heat sink, remove the four Phillips M2.0 × 2.8 screws (1) that secure the heat sink to the system board.

5. Remove the heat sink (2).

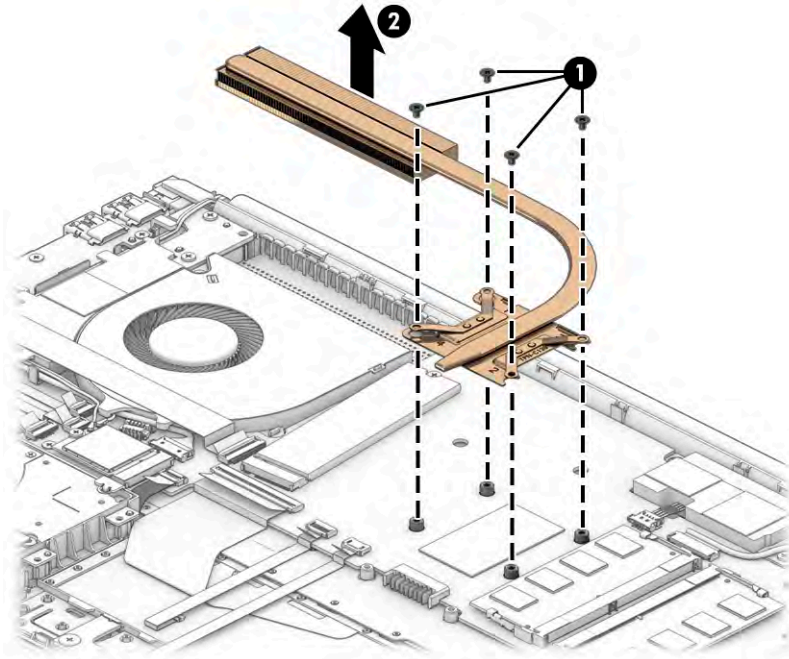

6. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

Thermal paste is used on the integrated system board processor (1) and the heat sink (2).

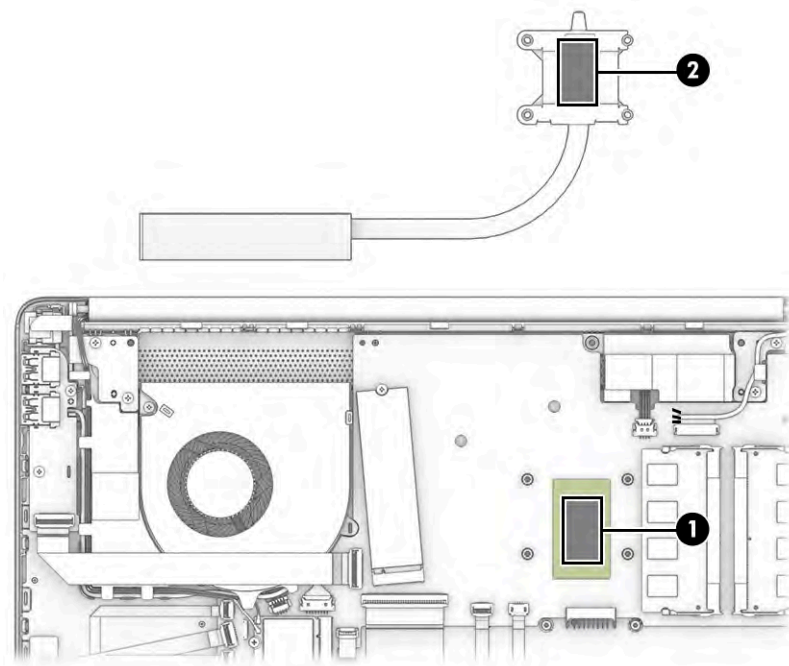

Reverse this procedure to install the heat sink.

System board

To remove the system board, use these procedures and illustrations.

Table 5-15 System board descriptions and part numbers

Description	Spare part number
System board (includes processor):	
All system boards use the following part numbers:	
xxxxxx-001: Non-Windows operating system	
xxxxxx-601: Windows 10 operating system	
AMD Ryzen 3-3250U processor and 2 GB of discrete graphics memory	M03665-xx1
AMD Athlon 3150U processor and 2 GB of discrete graphics memory	M03666-xx1
AMD Ryzen 7-3700U processor	M03671-xx1
AMD Ryzen 5-3500U processor	M03670-xx1
AMD Ryzen 3-3250U processor	M03669-xx1
AMD Athlon 3150U processor	M03668-xx1
AMD Athlon 3050U processor	M03667-xx1

Before removing the system board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).
4. Remove the fan (see [Fan on page 44](#)).


When you replace the system board, be sure to remove the following components (as applicable) from the defective system board and install them on the replacement system board:

- Memory modules (see [Memory modules on page 36](#)).
- WLAN module (see [WLAN module on page 34](#)).
- Solid-state drive (see [Solid-state drive on page 35](#)).
- Heat sink (see [Heat sink on page 45](#)).


Remove the system board:

1. Disconnect the following cables from the system board:
 - Card reader board cable (ZIF) **(1)**
 - Fingerprint reader cable (ZIF) **(2)**
 - Power connector (DC-in) board cable **(3)**
 - USB board cable (ZIF) **(4)**
 - Keyboard cable (ZIF) **(5)**
 - Touchpad cable (ZIF) **(6)**

- TouchPad button board cable (ZIF) **(7)**
- Speaker cable **(8)**
- Display cable (ZIF) **(9)**
- Audio board cable (ZIF) **(10)**
- WLAN antennas from the WLAN module **(11)**
- Hard drive board cable (ZIF) **(12)**

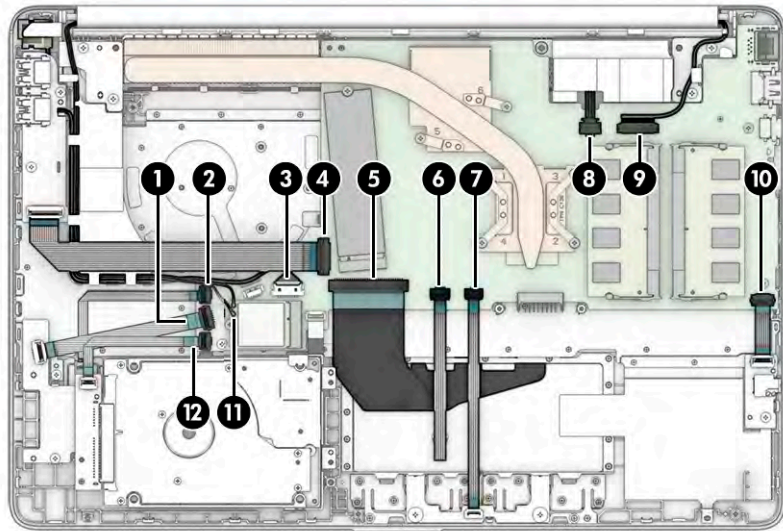


2. Remove the three Phillips M2.0 × 2.8 screws **(1)** that secure the system board to the computer.
3. Lift the system board out of the computer **(2)**.

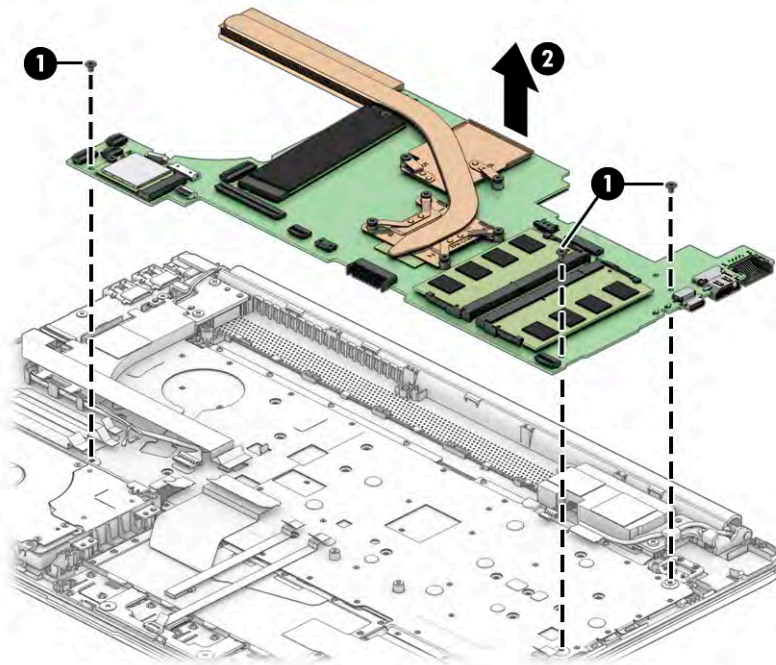

Reverse this procedure to install the system board.

Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.


 **NOTE:** The display assembly is spared at the subcomponent level. For display assembly spare part information, see the individual removal subsections.

Before removing the display panel, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

Remove the display assembly:

1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.


 **NOTE:** The WLAN antenna cable labeled 1/MAIN connects to the WLAN module Main terminal. The WLAN antenna cable labeled 2/AUX connects to the WLAN module Aux terminal.

2. Release the WLAN antenna cables from the retention clips and routing channel built into the right speaker **(2)**.
3. Disconnect the display cable from the system board ZIF connector **(3)**.
4. Release the display panel from the retention clips and routing channel built into the left display hinge **(4)**.

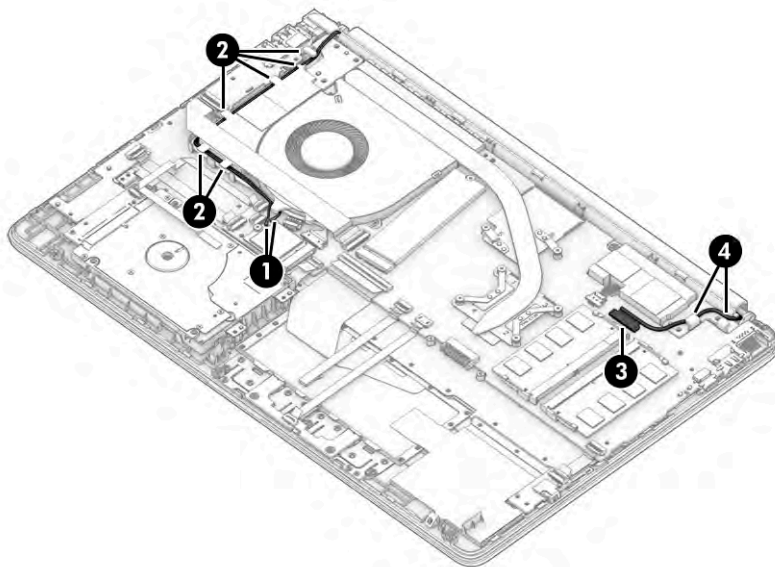

5. Remove the four Phillips M2.5 × 6.0 screws **(1)** that secure the display assembly to the computer.
6. Open the display to open the hinges **(2)**.

7. Separate the display from the computer (3).

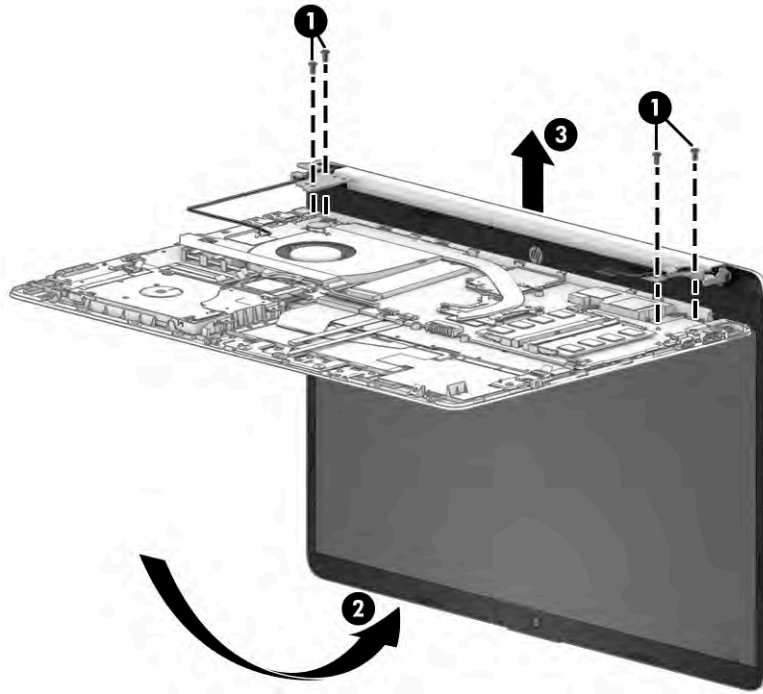

8. If you need to remove the hinge cover, use a plastic tool to lift and disengage the inside of both sides of the cover **(1)**, and then remove the cover from the display **(2)**.

Hinge covers are available as the following spare part numbers:


L52011-001: Gold

L52010-001: Silver

L94451-001: Grey


L94453-001: Black

M03727-001: Red

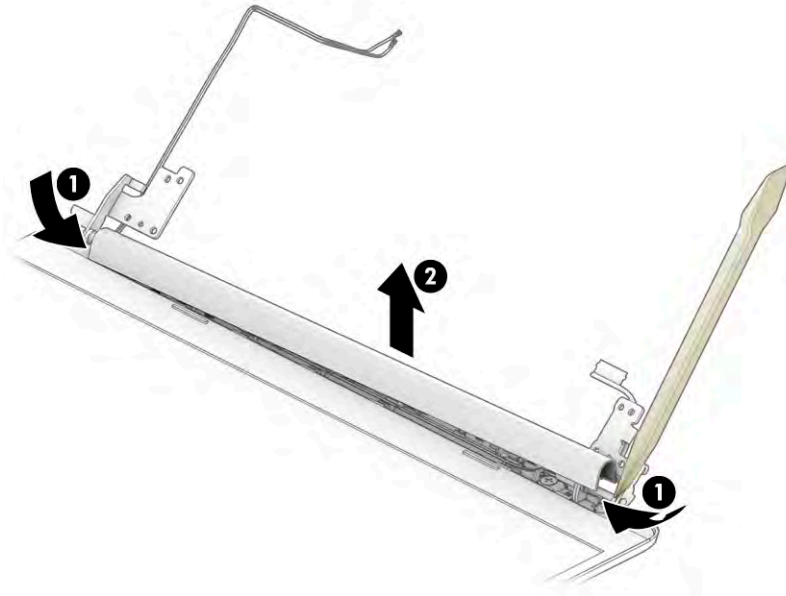


9. If you need to remove the display bezel:
 - a. Release the top edge of the display bezel **(1)** from the display assembly.
 - b. Release the left and right edges of the display bezel **(2)** from the display assembly.
 - c. Release the bottom edge of the display bezel **(3)** from the display assembly.
 - d. Remove the display bezel **(4)** from the display assembly.

The bezel is available as spare part number L52014-001.

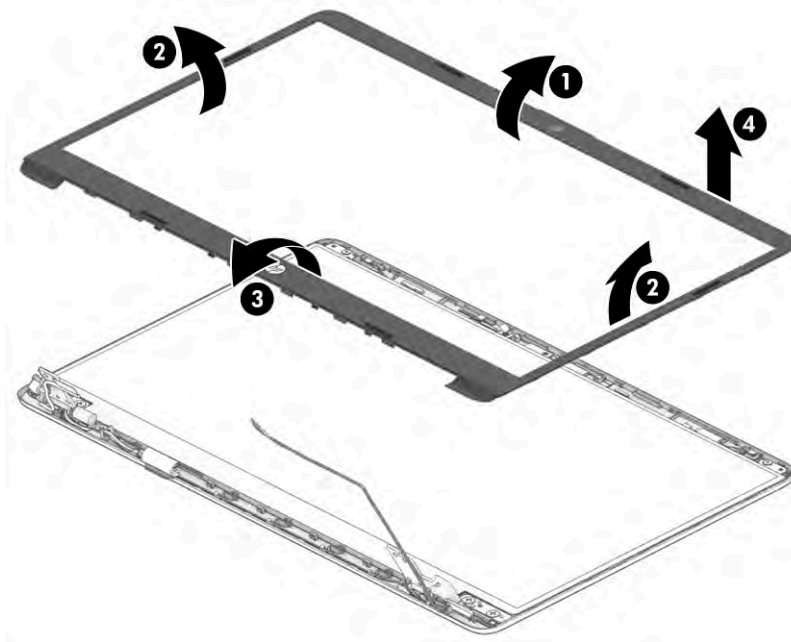

10. If you need to remove the camera module:

- a. Lift the tape from on top of the connector on the camera module **(1)**, and then disconnect the cable **(2)** from the module.
- b. Use a tool to detach the camera module **(3)** from the display back cover. (The module is attached with double-sided adhesive.) The camera module is available as spare part number L51996-001 for the HD camera and M03672-0012 for the VGA camera.

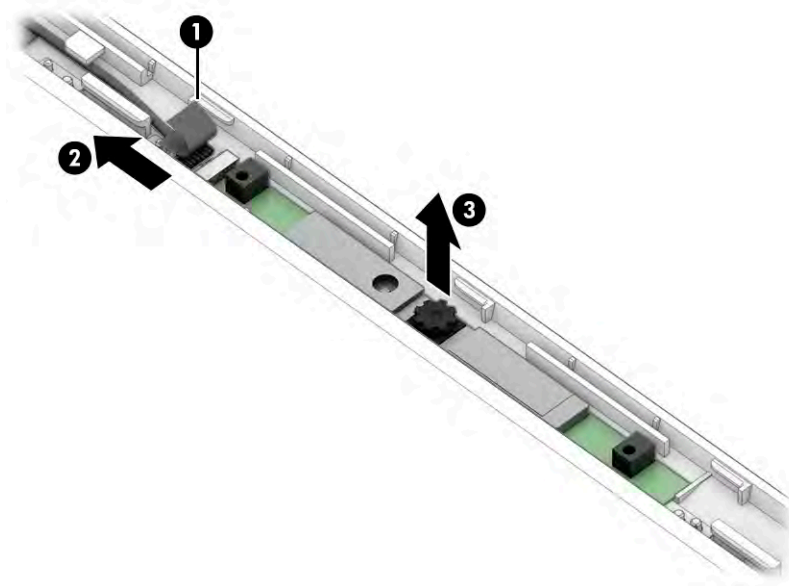

11. If you need to remove the display panel:

- a. The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the end of the tape **(1)**. While turning the tweezers, wrap the tape around the tweezers **(2)** as you continue to pull the tape out from behind the display panel **(3)**. You must pull the tape multiple times before it is completely removed.

- b. Rotate the display panel over and place it next to the display enclosure **(4)**.

 **NOTE:** You have to pull on the tape multiple times before it is completely removed.

Display adhesive is available as spare part number L52528-001.

Display panels are available as the following spare part numbers:


L51997-001: FHD, SVA, 220 nits

L68082-001: FHD, UWVA, 250 nits


L51999-001: HD, antiglare

L52000-001: HD, BrightView

L52001-001: HD, BrightView, Touch-on Panel (TOP)

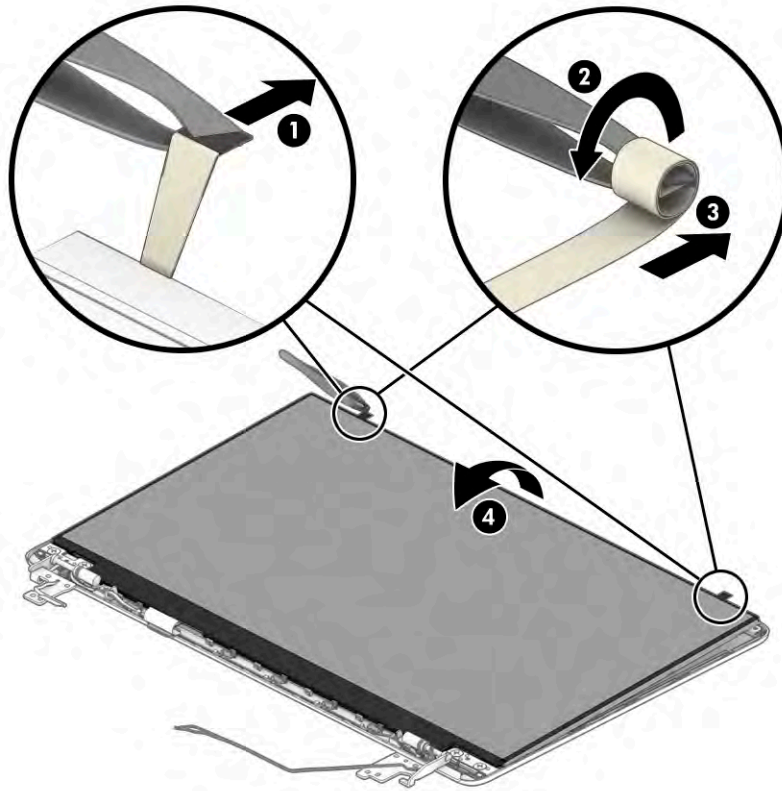


- c. Release the adhesive support strip **(1)** that secures the display panel cable connector to the display panel.
- d. Disconnect the display panel cable **(2)** from the display panel, and then remove the display panel **(3)**.
- e. Remove the display panel **(4)**.

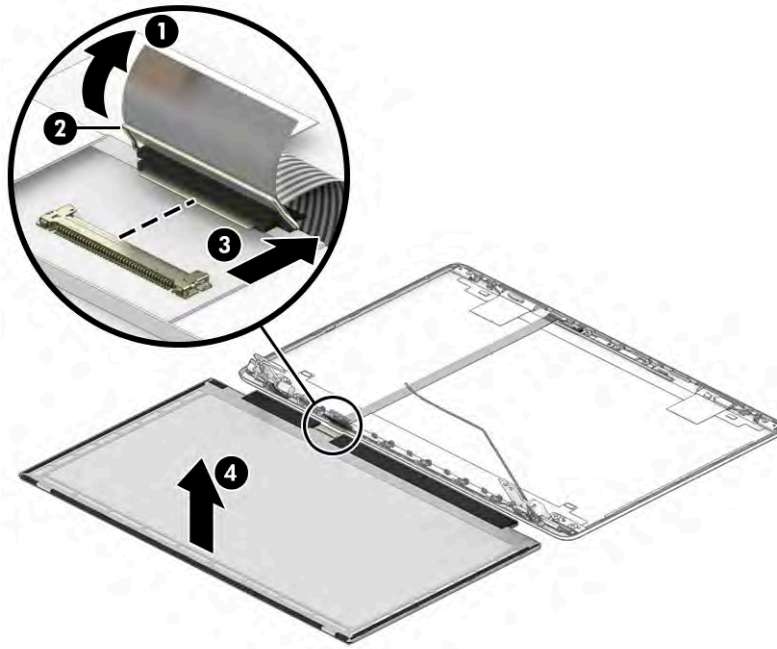

12. If you need to remove the hinges from the display enclosure:

- a.** Remove the Phillips M2.0 × 2.8 screw **(1)** from the top of each hinge.
- b.** Remove the three Phillips M2.5 × 3.5 screws **(2)** from the bottom of each hinge.
- c.** Remove the display hinges from the display back cover **(3)**.

The display hinges are available as spare part number L52009-001.

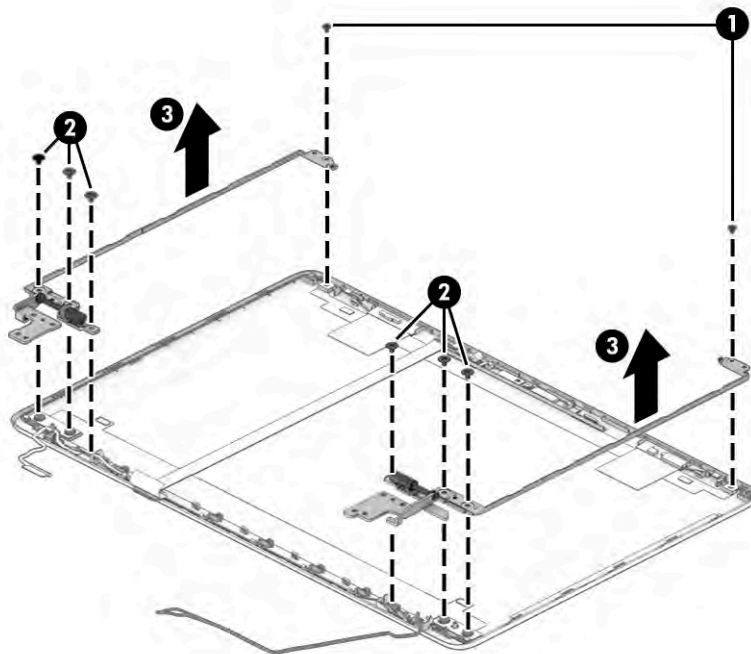


13. Lift the tape from on top of the connector on the camera module **(1)**, and then disconnect the cable from the module **(2)**. Peel the cable off the inside of the display back cover **(3)**. The cable is secured with adhesive. Remove the display panel cable **(4)**.

Display panel cables are available as the following spare part numbers:

L52015-001: Nontouch display panels

L52016-001: Touch display panels

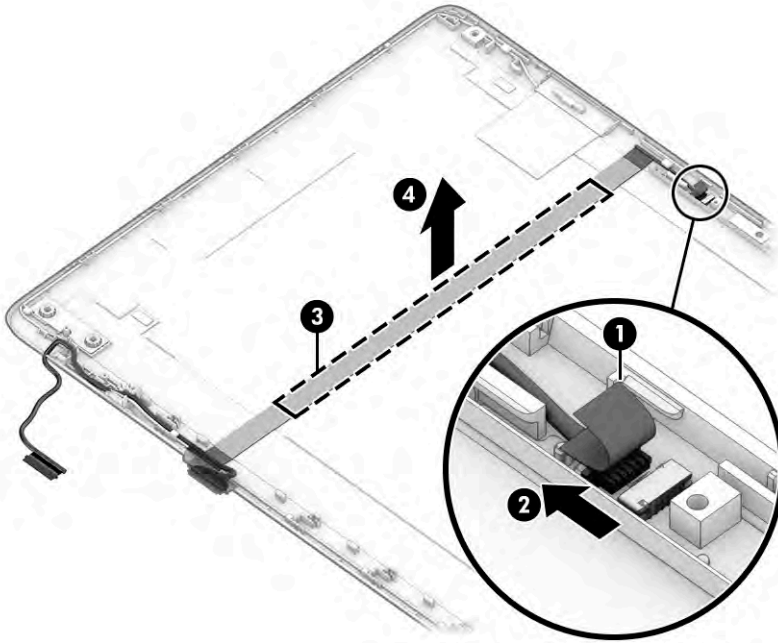

14. Detach the wireless antennas (1) from the display back cover. The antennas are secured with adhesive. Release the wireless antenna cables from the retention clips (2) and routing channels built into the sides of the display back cover. Remove the antennas from the display back cover (3).

The wireless cables and antennas are available as spare part number L52018-001 for dual antennas or L52017-001 for single antennas.

Display back covers are available as the following spare part numbers:


L52012-001: Silver

L52013-001: Gold

L94454-001: Grey

L94456-001: Black

M03725-001: Red

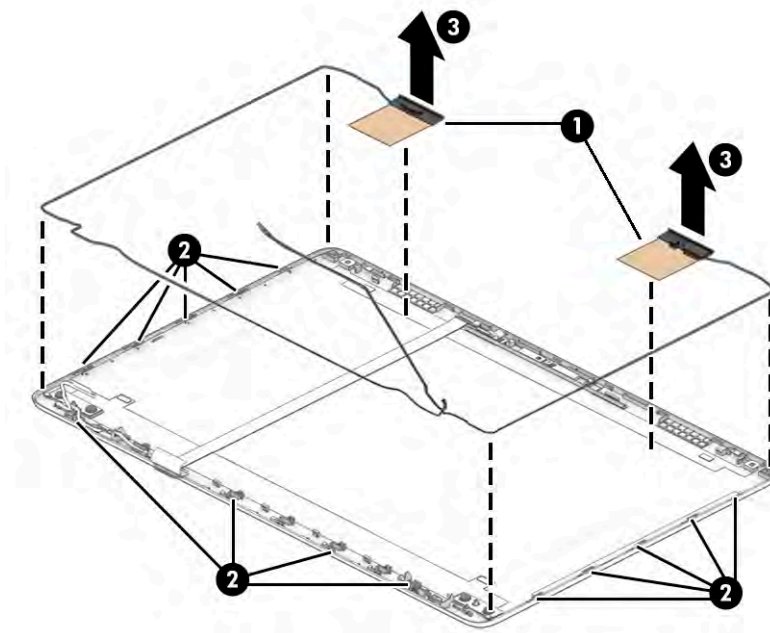

Reverse this procedure to reassemble and replace the display assembly.

Power connector cable

To remove the power connector cable, use this procedure and illustration.

Table 5-16 Power connector cable description and part number

Description	Spare part number
Power connector cable	L51995-001


Before removing the power connector cable, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).

4. Remove the USB board (see [USB board on page 40](#)).
5. Remove the display assembly (see [Display assembly on page 50](#)).

Remove the power connector cable:

1. Disconnect the power connector cable from the system board **(1)**.
2. Release the cable from the retention clips and routing channel built into the fan and speaker **(2)**.
3. Remove the power connector cable from the computer **(3)**.

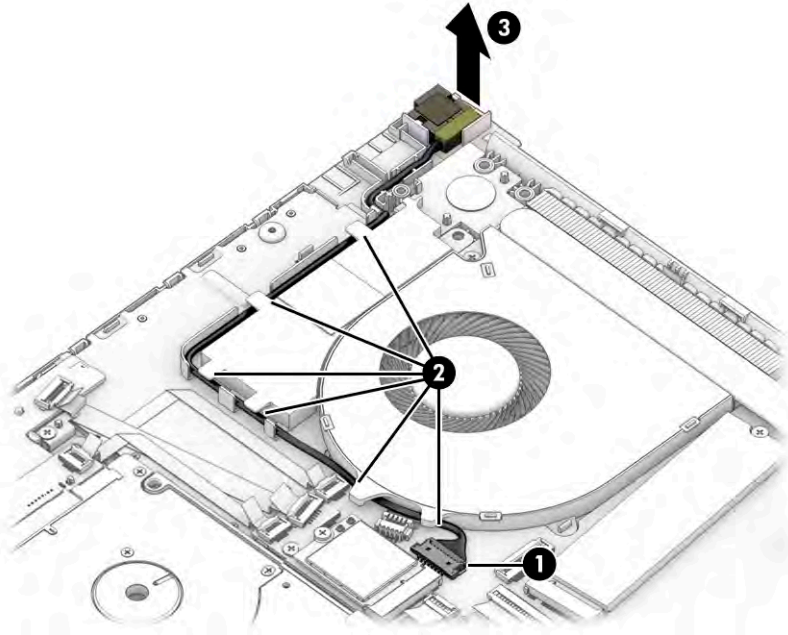

Reverse this procedure to install the power connector cable.

Speakers

To remove the speakers, use this procedure and illustration.

Table 5-17 Speaker description and part number

Description	Spare part number
Speaker Kit	L52040-001


Before removing the speakers, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 29](#)).
2. Remove the bottom cover ([Bottom cover on page 29](#)).
3. Remove the battery (see [Battery on page 31](#)).
4. Remove the display (see [Display assembly on page 50](#)).
5. Remove the power connector cable (see [Power connector cable on page 57](#)).

Remove the speakers:

1. Release the cable from the retention clips and routing channel built into the computer **(1)**.

- Remove the speakers from the computer (2).

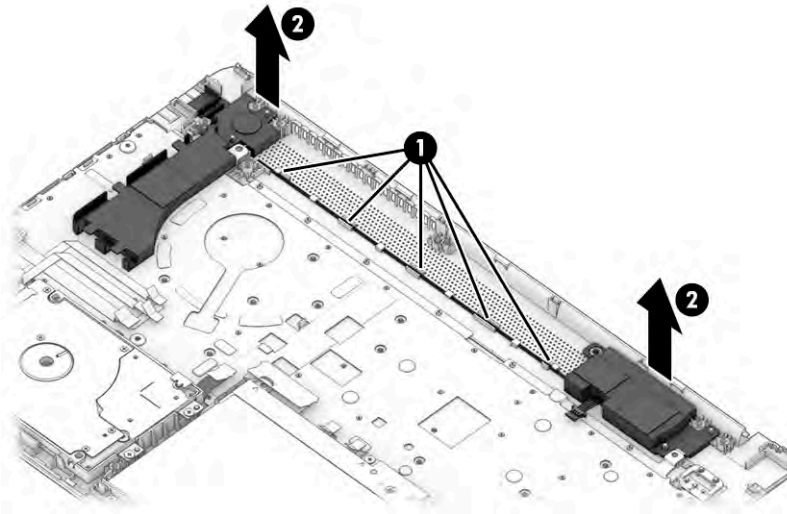

Reverse this procedure to install the speakers.

Keyboard with top cover

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top cover/keyboards. The second table provides the country codes.

Table 5-18 Keyboard with top cover descriptions and part numbers

Description	Spare part number
Keyboard with top cover, silver, backlit	L52022-xx1
Keyboard with top cover, silver, no backlight	L52023-xx1
Keyboard with top cover, silver, fingerprint reader, backlit	L52154-xx1
Keyboard with top cover, silver, fingerprint reader, no backlight	L52155-xx1
Keyboard with top cover, grey with black keyboard, no backlight	L94458-xx1
Keyboard with top cover, black with black keyboard, no backlight	L94460-xx1

Table 5-19 Spare part country codes


For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Slovenia	-BA1
Brazil	-201	India	-D61	South Korea	-AD1
Bulgaria	-261	Israel	-BB1	Spain	-071
Chile	-161	Italy	-061	Switzerland	-BG1
Czech Republic/Slovakia	-FL1	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281

Table 5-19 Spare part country codes (continued)

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001
Hungary	-211	Saudi Arabia	-171		


6 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)

You have several ways to access the Setup Utility (BIOS).

 **IMPORTANT:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

▲ Turn on or restart the computer and quickly press **f10**.

– or –

Turn on or restart the computer, quickly press **esc**, and then press **f10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) might be available on the HP website. Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*. Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.


To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
 1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
 - or –
 - Select the question mark icon in the taskbar.
 2. Select **My notebook**, and then select **Specifications**.
- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 61](#)).
 2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press `ctrl+alt+s`.


To check for later BIOS versions, see [Preparing for a BIOS update on page 62](#).

Preparing for a BIOS update

Be sure to follow all prerequisites before downloading and installing a BIOS update.

 **IMPORTANT:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

Downloading a BIOS update

After you review the prerequisites, you can check for and download BIOS updates.

1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You might need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.
Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

Installing a BIOS update

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps.

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.




NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

7 Backing up, restoring, and recovering

This chapter provides information about processes that are standard procedure for most products.

- **Backing up your personal information**—You can use Windows tools to back up your personal information (see [Using Windows tools on page 65](#)).
- **Creating a restore point**—You can use Windows tools to create a restore point (see [Using Windows tools on page 65](#)).
- **Creating recovery media** (select products only)—You can use the HP Cloud Recovery Download Tool (select products only) to create recovery media (see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 65](#)).
- **Restoring and recovery**—Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state (see [Using Windows tools on page 65](#)).

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.


Backing up information and creating recovery media

These methods of creating recovery media and backups are available on select products only. Choose the appropriate method for your computer model.


Using Windows tools

You can use Windows tools to back up personal information and create system restore points and recovery media.

 **IMPORTANT:** Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.

 **NOTE:** If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get Help app.

 **NOTE:** You must be connected to the Internet to access the Get Help app.

1. Select the **Start** button, and then select the **Get Help** app.
2. Enter the task you want to perform.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

For details:

- ▲ Go to <http://www.hp.com/support>, search for HP Cloud Recovery, and then select the result that matches the type of computer that you have.



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

Restoring and recovery

You have several options for recovering your system. Choose the method that best matches your situation and level of expertise.



NOTE: Not all methods are available on all products.

Restoring, resetting, and refreshing using Windows tools

Windows offers several options for restoring, resetting, and refreshing the computer.

For details, see [Using Windows tools on page 65](#).

Recovering using HP Recovery media

You can use HP Recovery media to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool.

For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 65](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- ▲ Insert the HP Recovery media, and then restart the computer.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order. This is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

To change the boot order:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.
 - For computers or tablets with keyboards attached, turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.
 - For tablets without keyboards, turn on or restart the tablet, quickly hold down the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly hold down the volume down button, and then select **f9**.
3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

Using HP Sure Recover (select products only)

Select computer models are configured with HP Sure Recover, a PC OS recovery solution built into the hardware and firmware. HP Sure Recover can fully restore the HP OS image without installed recovery software.

Using HP Sure Recover, an administrator or user can restore the system and install:

- Latest version of the operating system
- Platform-specific device drivers
- Software applications, in the case of a custom image

To access the latest documentation for HP Sure Recover, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

8 Using HP PC Hardware Diagnostics

The HP PC Hardware Diagnostics utility allows you to run diagnostics tests to determine whether your computer hardware is running properly. The three versions are HP PC Hardware Diagnostics Windows, HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface), and (for select products only) a firmware feature called Remote HP PC Hardware Diagnostics UEFI.

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 70](#).

Using an HP PC Hardware Diagnostics Windows hardware failure ID code

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated.

- ▲ Depending on the instructions on the screen, choose one of these options:
 - If failure ID link is displayed, select the link and follow the on-screen instructions.
 - If instructions for calling support are displayed. Follow those instructions.

Accessing HP PC Hardware Diagnostics Windows

After HP PC Hardware Diagnostics Windows is installed, you can access it from HP Help and Support or HP Support Assistant.

Accessing HP PC Hardware Diagnostics Windows from HP Help and Support

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support.

To access HP PC Hardware Diagnostics Windows from HP Help and Support:

1. Select the **Start** button, and then select **HP Help and Support**.
2. Select **HP PC Hardware Diagnostics Windows**.
3. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Accessing HP PC Hardware Diagnostics Windows from Support Assistant

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Support Assistant.

To access HP PC Hardware Diagnostics Windows from HP Support Assistant:

1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.
2. Select **Troubleshooting and fixes**.
3. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.
4. When the tool opens, select the type of diagnostic test that you want to run, and then follow the on-screen instructions.



NOTE: To stop a diagnostic test, select **Cancel**.

Downloading HP PC Hardware Diagnostics Windows

The HP PC Hardware Diagnostics Windows downloading instructions are provided in English only. You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version from HP

To download HP PC Hardware Diagnostics Windows from HP, follow these steps.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select a location on your computer or a USB flash drive.

The tool downloads to the selected location.

Downloading the HP PC Hardware Diagnostics Windows from the Microsoft Store

You can download the HP PC Hardware Diagnostics Windows from the Microsoft Store.

1. Select the Microsoft app on your desktop or enter `Microsoft Store` in the taskbar search box.
2. Enter `HP PC Hardware Diagnostics Windows` in the **Microsoft Store** search box.
3. Follow the on-screen directions.

The tool downloads to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

You can download HP PC Hardware Diagnostics Windows by product name or number.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.

The tool downloads to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, navigate to the folder on your computer or the USB flash drive where the .exe file downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.



NOTE: For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 72](#).

If your PC does not start in Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

Using an HP PC Hardware Diagnostics UEFI hardware failure ID code

When HP PC Hardware Diagnostics UEFI detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated.

For assistance in solving the problem:

- ▲ Select **Contact HP**, accept the HP privacy disclaimer, and then use a mobile device to scan the Failure ID code that appears on the next screen. The HP Customer Support - Service Center page appears with your Failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the Failure ID code.



NOTE: To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.



NOTE: If you need to stop a diagnostic test, press [esc](#).

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow this procedure.

1. Turn on or restart the computer, and quickly press [esc](#).
2. Press [f2](#).

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 72](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in some situations.

- HP PC Hardware Diagnostics UEFI is not included in the preinstallation image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI downloading instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive, follow this procedure.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)

You can download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive.



NOTE: For some products, you might have to download the software to a USB flash drive by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it might upload results to a preconfigured server.

For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI

HP Remote PC Hardware Diagnostics UEFI is also available as a SoftPaq that you can download to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

You can download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive.

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number

You can download HP Remote PC Hardware Diagnostics UEFI by product name or number.



NOTE: For some products, you might have to download the software by using the product name or number.

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform the following customizations:

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a hard drive or USB flash drive) to run remote diagnostics.
- Set a location for storing the test results. You can also set the user name and password that you use for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Specifications

This chapter provides specifications for your computer.

Computer specifications

This section provides specifications for your computer. When traveling with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

Table 9-1 Computer specifications

	Metric	U.S.
Dimensions		
Width	358.5 mm	14.1 in
Depth	242 mm	9.5 in
Height (front to back)	19.9 mm	0.8 in
Weight		
	1740 g	3.84 lb
Input power		
Operating voltage and current	19.5 V dc @ 3.33 A – 65 W 19.5 V dc @ 2.31 A – 45 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	–20°C to 60°C	–4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	–15 m to 3,048 m	–50 ft to 10,000 ft
Nonoperating	–15 m to 12,192 m	–50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

39.6 cm (15.6 in) display specifications

This section provides specifications for your display.

Table 9-2 Display specifications

	Metric	U.S.
Active diagonal size	39.6 cm	15.6 in
Resolution	1368 × 766 (HD) 1920 × 1080 (FHD)	
Surface treatment	Antiglare (HD panels) Brightview (HD, FHD panel)	
Brightness	220 nits (HD panels) 250 nits (HD, FHD panels)	
Viewing angle	SVA (HD panels) UWVA (HD, FHD panels)	
Backlight	WLED	
Display panel interface	eDP	

Solid-state drive specifications

This section provides specifications for your solid-state drives.

Table 9-3 Solid-state drive specifications

	256 GB*	512 GB*	1 TB*
Dimensions			
Height	1.0 mm	1.0 mm	1.0 mm
Length	50.8 mm	50.8 mm	50.8 mm
Width	28.9 mm	28.9 mm	28.9 mm
Weight	< 10 g	< 10 g	< 10 g
Interface type			
Ready time, maximum (to not busy)	1.0 ms	< 1.0 ms	1.0 ms
Access times, logical	0.1 ms	0.1 ms	0.1 ms
Transfer rate			
Sequential read	up to 2150 MB/s	up to 2150 MB/s	up to 2150 MB/s
Random read	Up to 300,000 IOPs	Up to 300,000 IOPs	Up to 300,000 IOPs
Sequential write	up to 1550 MB/s	up to 1550 MB/s	up to 1550 MB/s
Random write	Up to 100,000 IOPs	Up to 100,000 IOPs	Up to 100,000 IOPs
Total logical sectors	468,883,296	1,000,215,216	1,500,336,388
Operating temperature	0°C to 70°C (32°F to 158°F)		

Table 9-3 Solid-state drive specifications (continued)

	256 GB*	512 GB*	1 TB*
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.			
NOTE: Certain restrictions and exclusions apply. Contact support for details.			

Solid-state drive specifications (SATA-3)

This section provides specifications for your solid-state drive.

Table 9-4 Solid-state drive specifications

	128 GB*
Dimensions	
Height	1.35 mm
Weight	< 10 g
Interface type	
Ready time, maximum (to not busy)	1.0 ms
Access times, logical	0.1 ms
Transfer rate	up to 540 MB/s
Total logical sectors	234,441,648
Operating temperature	0°C to 70°C (32°F to 158°F)
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.	
NOTE: Certain restrictions and exclusions apply. Contact support for details.	

10 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V ac to 120 V ac, or from 220 V ac to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V ac or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

Table 10-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

Table 10-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

11 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

A

- AC adapter and battery light, identifying lights
 - AC adapter and battery 5
- AC adapters, spare part numbers 21
- audio board
 - removal 41
 - spare part numbers 41
- Audio-out (headphone)/Audio-in (microphone) combo jack 6

B

- backup, creating 65
- backups 65
- battery
 - illustrated 15
 - spare part number 15
- BIOS
 - determining version 61
 - downloading an update 62
 - starting the Setup Utility 61
 - updating 61
- Bluetooth label 12
- boot order, changing 66
- bottom components 12
- bottom cover
 - illustrated 15
 - removal 29
 - spare part number 15, 29
- button
 - left touchpad 9
 - right touchpad 9
- buttons
 - power 10

C

- cables
 - spare part numbers 20
- camera
 - identifying 7
 - illustrated 18
 - spare part number 18
- camera light, identifying 7
- caps lock light 9

- card reader board
 - removal 40
 - spare part numbers 40
- card reader/audio board
 - illustrated 15
 - spare part number 15
- cautions
 - electrostatic discharge 23, 24
- components
 - bottom 12
 - display 7
 - keyboard area 8
 - left side 6
 - right side 5
- computer major components 15
- computer specifications 75

D

- display
 - specifications 75
- display assembly
 - subcomponents 18
- display back cover
 - illustrated 18
 - spare part number 18
- display bezel
 - illustrated 18
 - spare part number 18
- display cable
 - illustrated 18
 - spare part number 18
- display components 7
- display panel
 - illustrated 18
 - spare part number 18

E

- electrostatic discharge (ESD) 23, 24
 - preventing damage 23, 24, 25
- esc key, identifying keys
 - esc 11

F

- fan
 - illustrated 15
 - removal 44
 - spare part number 15, 44
- fingerprint reader
 - removal 43
 - spare part numbers 43
- fingerprint reader, identifying 10
- fn key, identifying 11

G

- grounding methods 23, 24, 26
- guidelines
 - packaging 23, 27
 - transporting 23, 27
 - workstation 23, 24

H

- hard drive
 - removal 32
 - spare part numbers 19, 32
 - specifications 75
- heat sink
 - illustrated 15
 - removal 45
 - spare part number 15
 - spare part numbers 45
- hinge
 - illustrated 18
 - spare part number 18
- hinge cover
 - illustrated 18
 - spare part number 18
- HP PC Hardware Diagnostics UEFI
 - downloading 72
 - starting 71
 - using 71
- HP PC Hardware Diagnostics Windows
 - accessing 69, 70
 - downloading 70
 - installing 71
 - using 69
- HP Recovery media
 - recovery 66

HP Sure Recover 67

I

illustrated parts catalog 15

internal microphones, identifying 7

J

jacks

audio-out (headphone)/audio-in
(microphone) combo,
identifying 6

K

keyboard

product description 3

keyboard with top cover

spare part numbers 59

keys

action 11

fn 11

Windows 11

L

labels

Bluetooth 12

regulatory 12

serial number 12

service 12

wireless certification 12

WLAN 12

left side components 6

lights

camera 7

caps lock 9

mute 9

mute light, identifying 9

M

memory card reader 5

memory modules

removal 36

spare part numbers 36

P

packaging guidelines 23, 27

pointing device, product
description 3

ports

product description 3

USB SuperSpeed 5

power button, identifying 10

power connector

identifying 5

power connector cable

illustrated 15

removal 57

spare part number 15

spare part numbers 57

power cord

requirements for all countries
79

requirements for specific
countries and regions 79

set requirements 79

power cords, spare part numbers

21

product description

keyboard 3

pointing device 3

ports 3

product name and number,
computer 12

R

recovery 65, 66

discs 66

media 66

USB flash drive 66

recovery media 65

creating using HP Cloud Recovery
Download Tool 65

creating using Windows tools 65

regulatory information

regulatory label 12

wireless certification labels 12

Remote HP PC Hardware Diagnostics

UEFI settings

customizing 73

using 72

removal and replacement

procedures 29

solid-state drive 35

restoring 65

right side components 5

S

Screw Kit, spare part number 21

serial number, computer 12

service labels, locating 12

slots

memory card reader 5

solid-state drive

illustrated 15

removal and replacement 35

spare part number 15

spare part numbers 19

specifications 76, 77

solid-state drive board

removal 38

spare part numbers 38

spare part country codes 59

speaker

illustrated 15

removal 58

spare part number 15

spare part numbers 58

speakers, identifying 10

special keys, using 11

specifications

computer 75

display 75

hard drive 75

solid-state drive 76, 77

static electricity 23, 24, 25

system board

illustrated 15

removal 48

spare part number 15

spare part numbers 48

system restore point, creating 65

T

top cover/keyboard

illustrated 15

spare part number 15

touchpad

illustrated 15

spare part number 15

touchpad button board

removal 42

spare part numbers 42

touchpad cable

spare part number 20

touchpad zone, identifying 9

transporting guidelines 23, 27

traveling with the computer 12

U

USB board

illustrated 15

removal 40

- spare part number 15
- spare part numbers 40
- USB board cable
 - spare part number 20
- USB SuperSpeed ports
 - identifying 5

V

- vent, identifying 10

W

Windows

- backup 65
- recovery media 65
- system restore point 65
- Windows key, identifying 11
- Windows tools, using 65
- wireless antennas
 - illustrated 18
 - spare part number 18
- wireless antennas, identifying 7
- wireless certification label 12
- WLAN antennas, identifying 7
- WLAN device 12
- WLAN label 12
- WLAN module
 - removal 34
 - spare part numbers 34
- workstation guidelines 23, 24

