

Interactive Part Locator

HP EliteDesk 800 35W/65W/95W G6 DM

Welcome to the interactive part locator for the
HP EliteDesk 800 35W/65W/95W G6 DM

Here's how to use it...

[External Views](#) (Click the link to navigate to the views)

On this page you will find large icons of each of the external views of this product. To view a specific view in greater detail, simply click that view.

[Parts List](#) (Click the link to navigate to the parts)

On this page, you will find a list of all of the replaceable parts for this product. To view a specific part and its location in the product, click the part name in the list.

That's it! On every page there is a link that brings you back to either the External Views or the Parts List, enabling you to navigate to whatever view or part you wish to review.

External Views

Front

Left

Right

Rear


Top

Bottom

Internal

Parts List

Front View

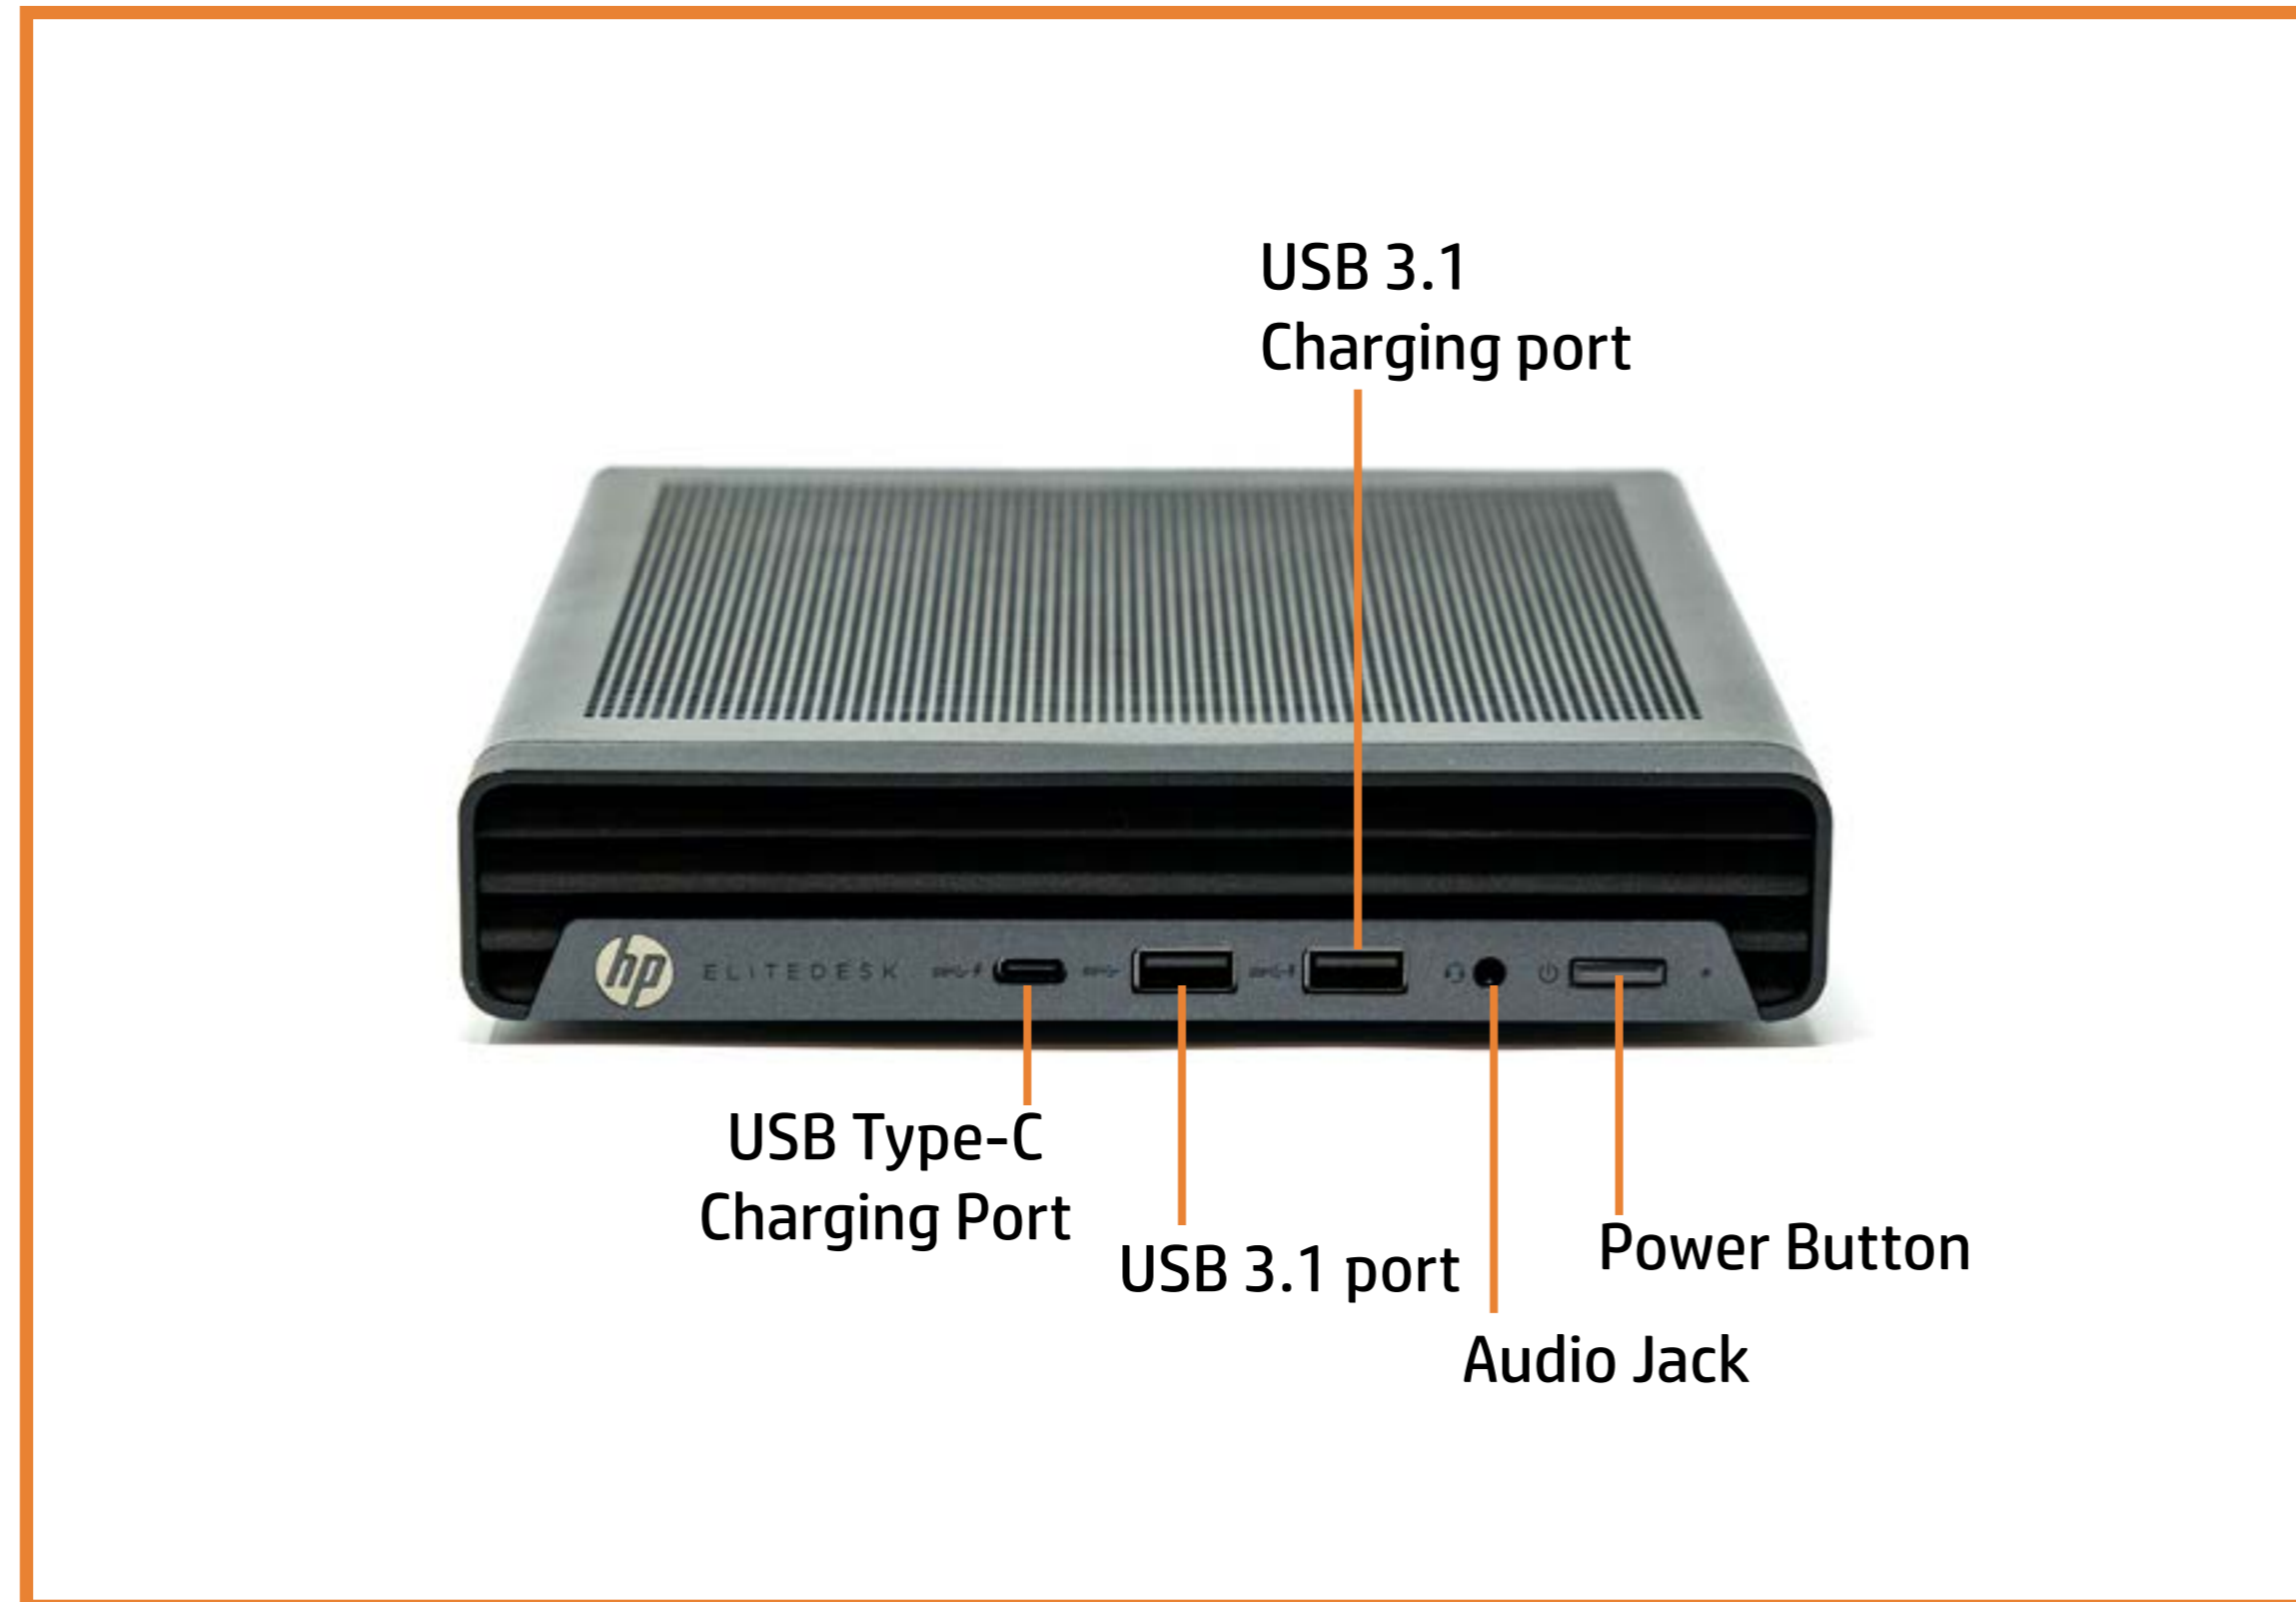


Left View



Right View



Rear View

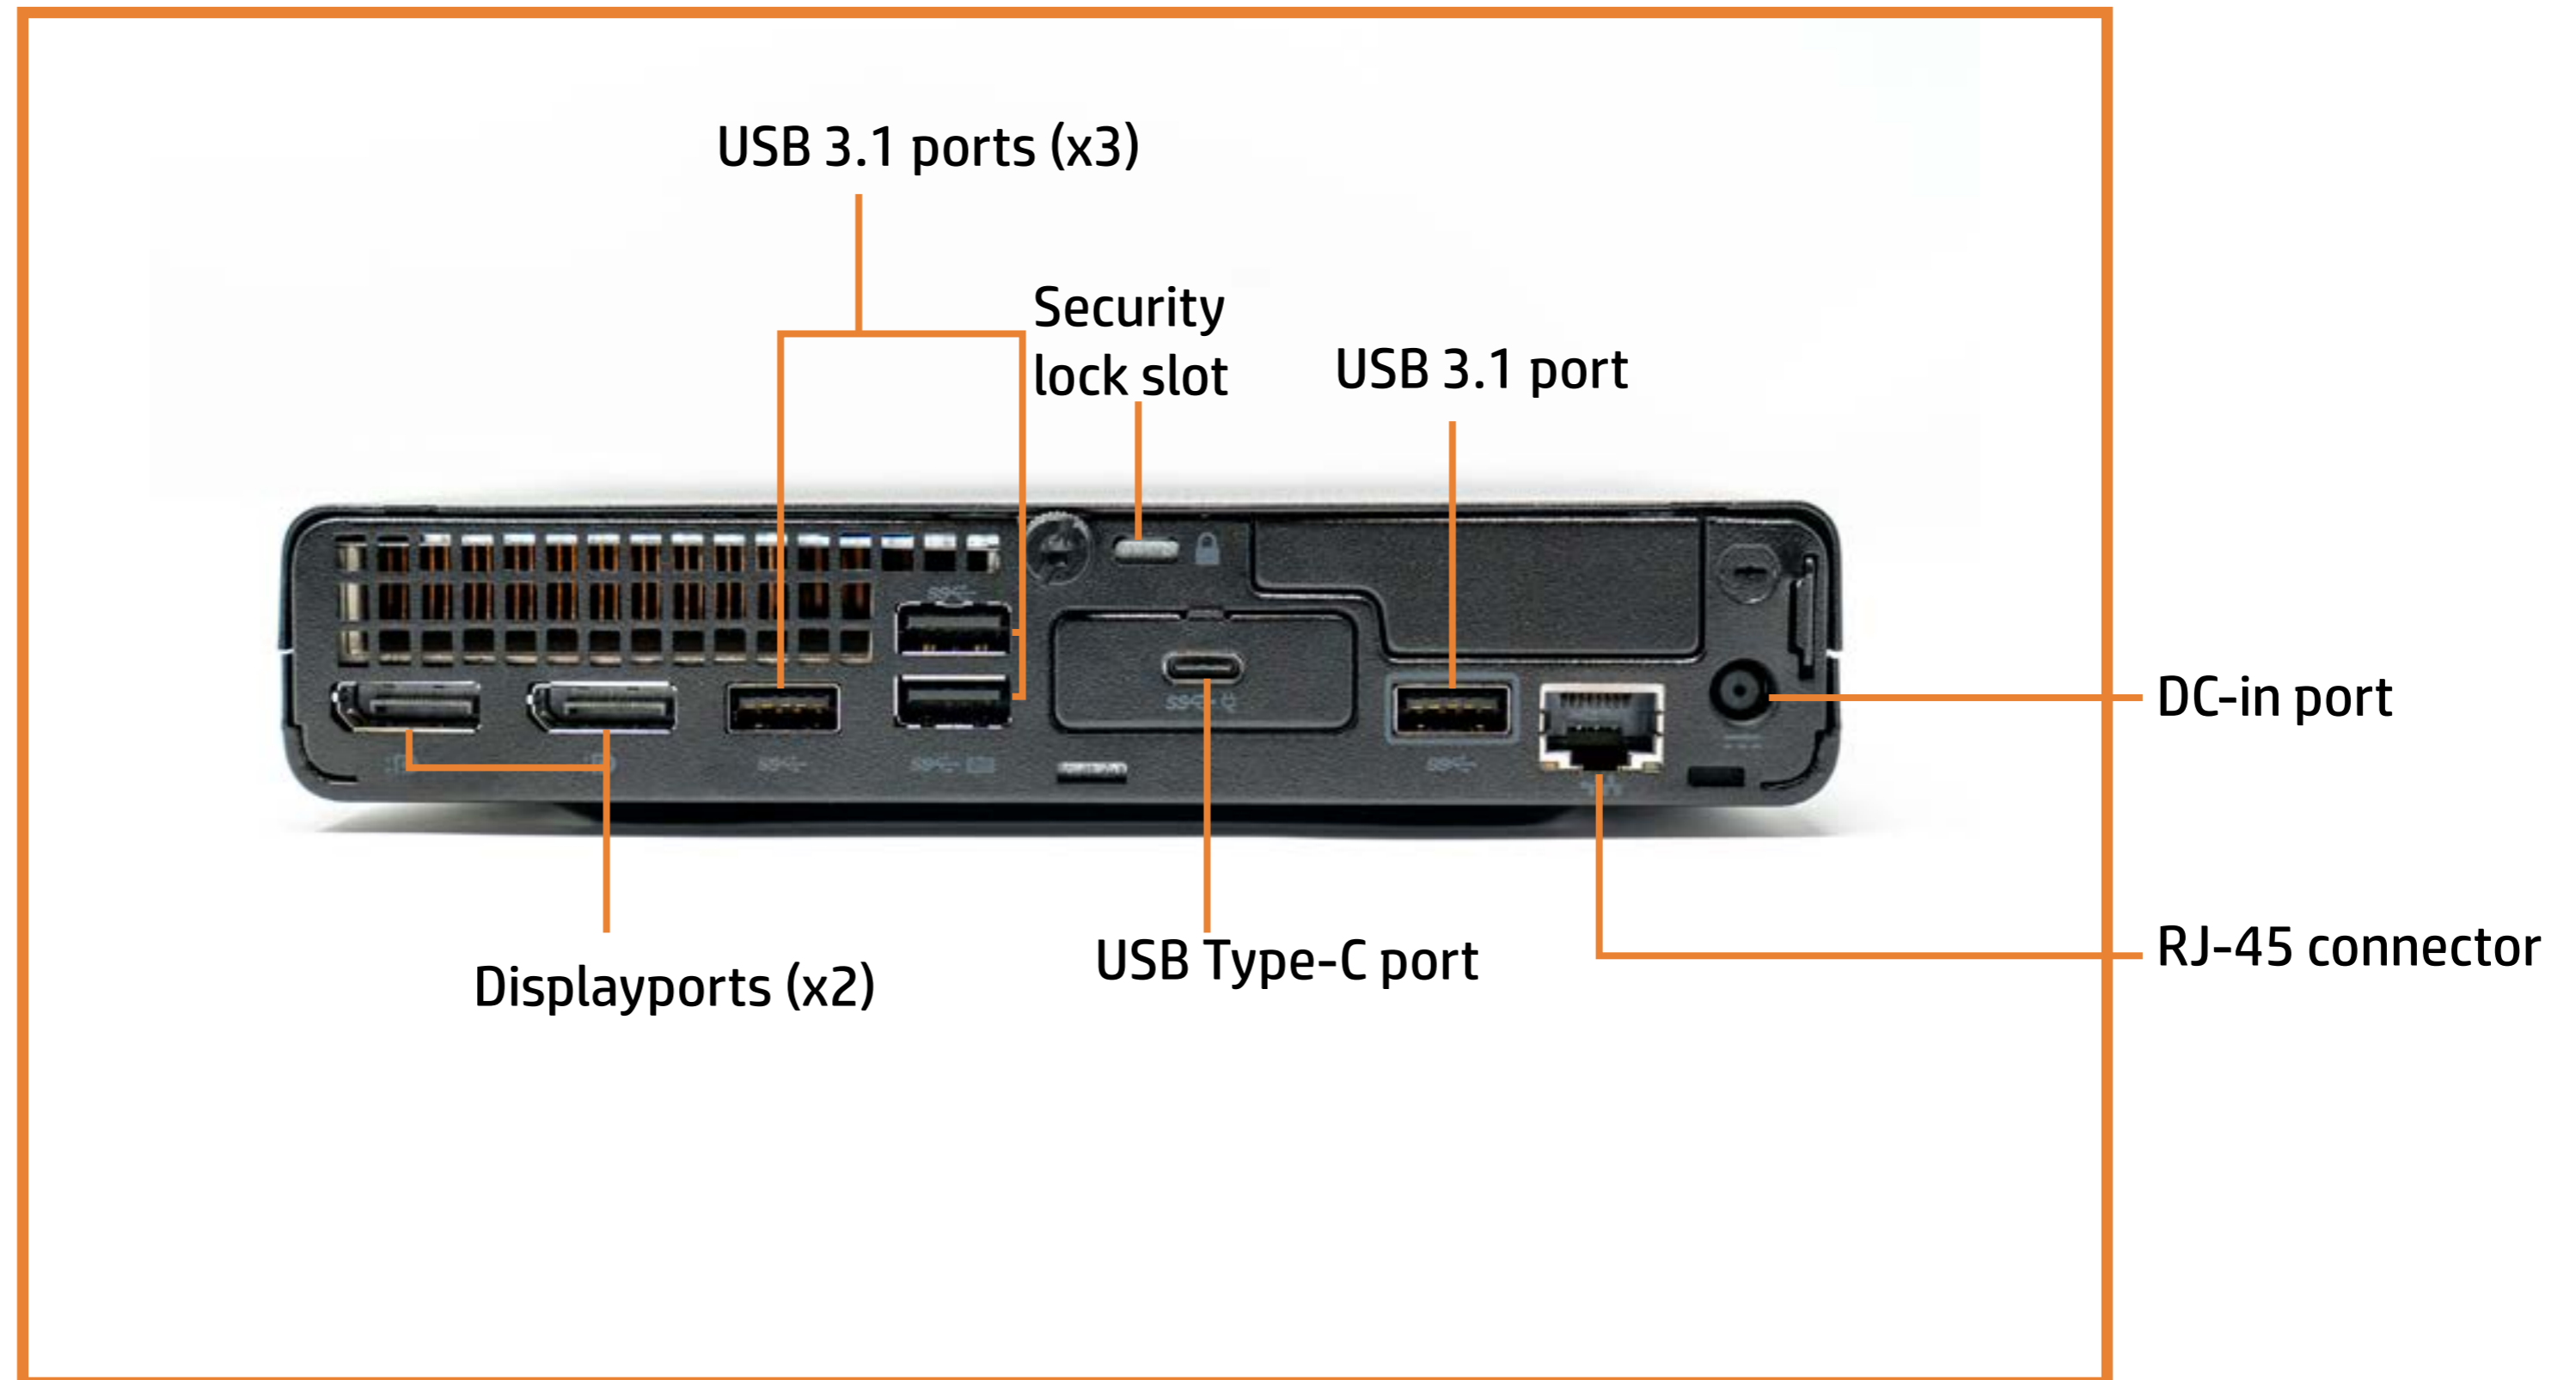


Bottom View




Top View



Internal View 1

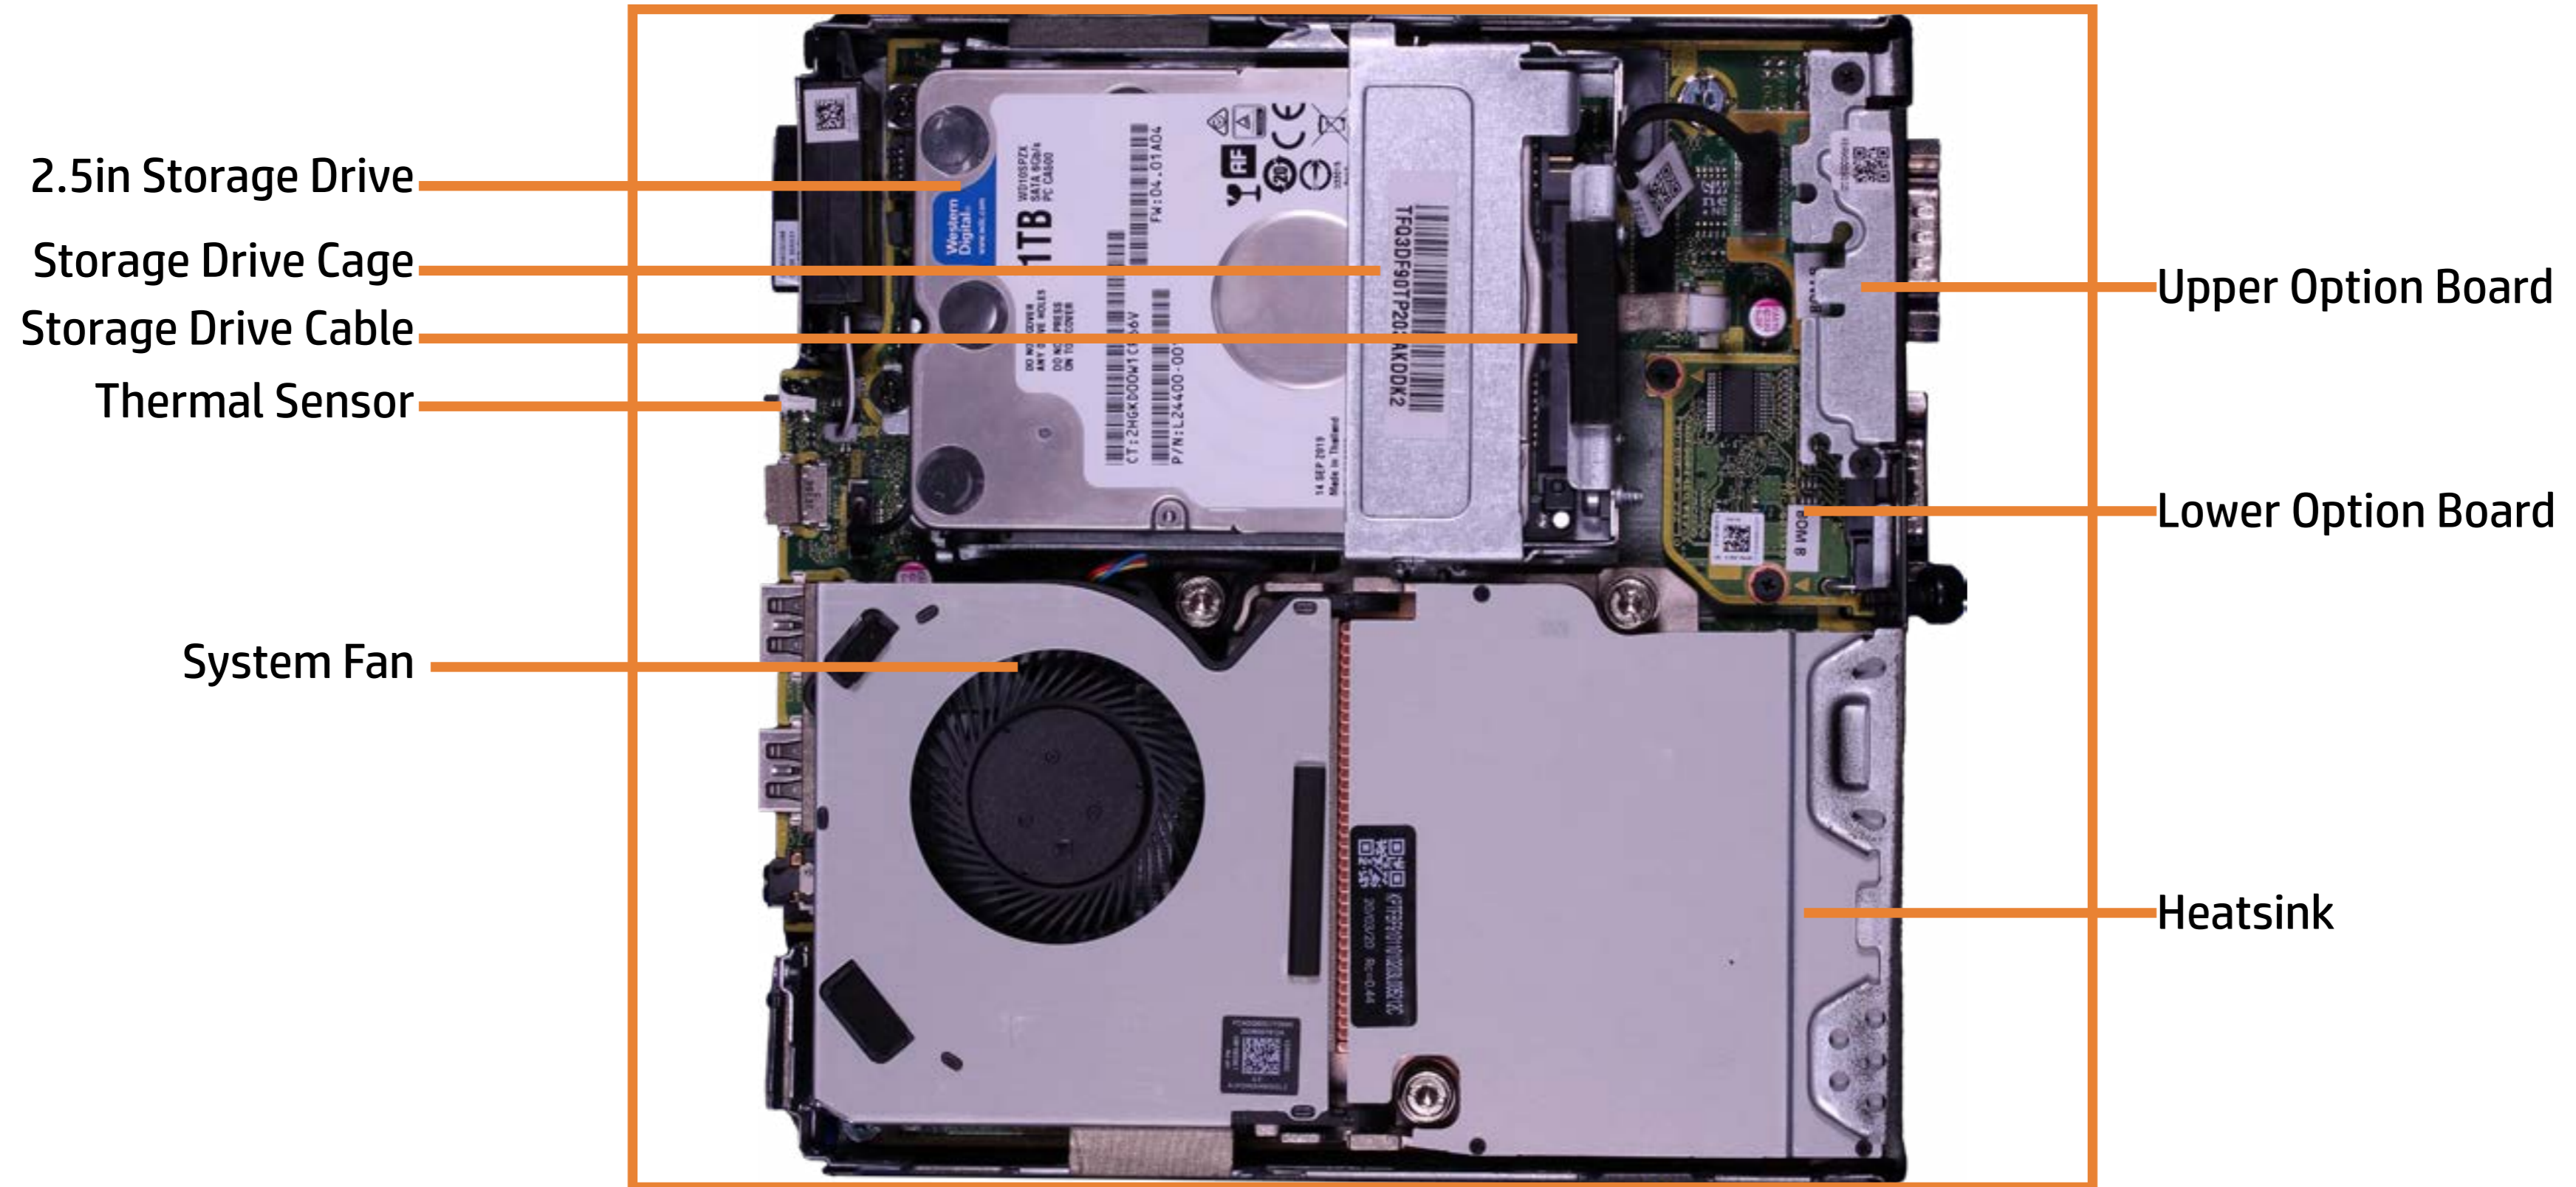

Internal View 2

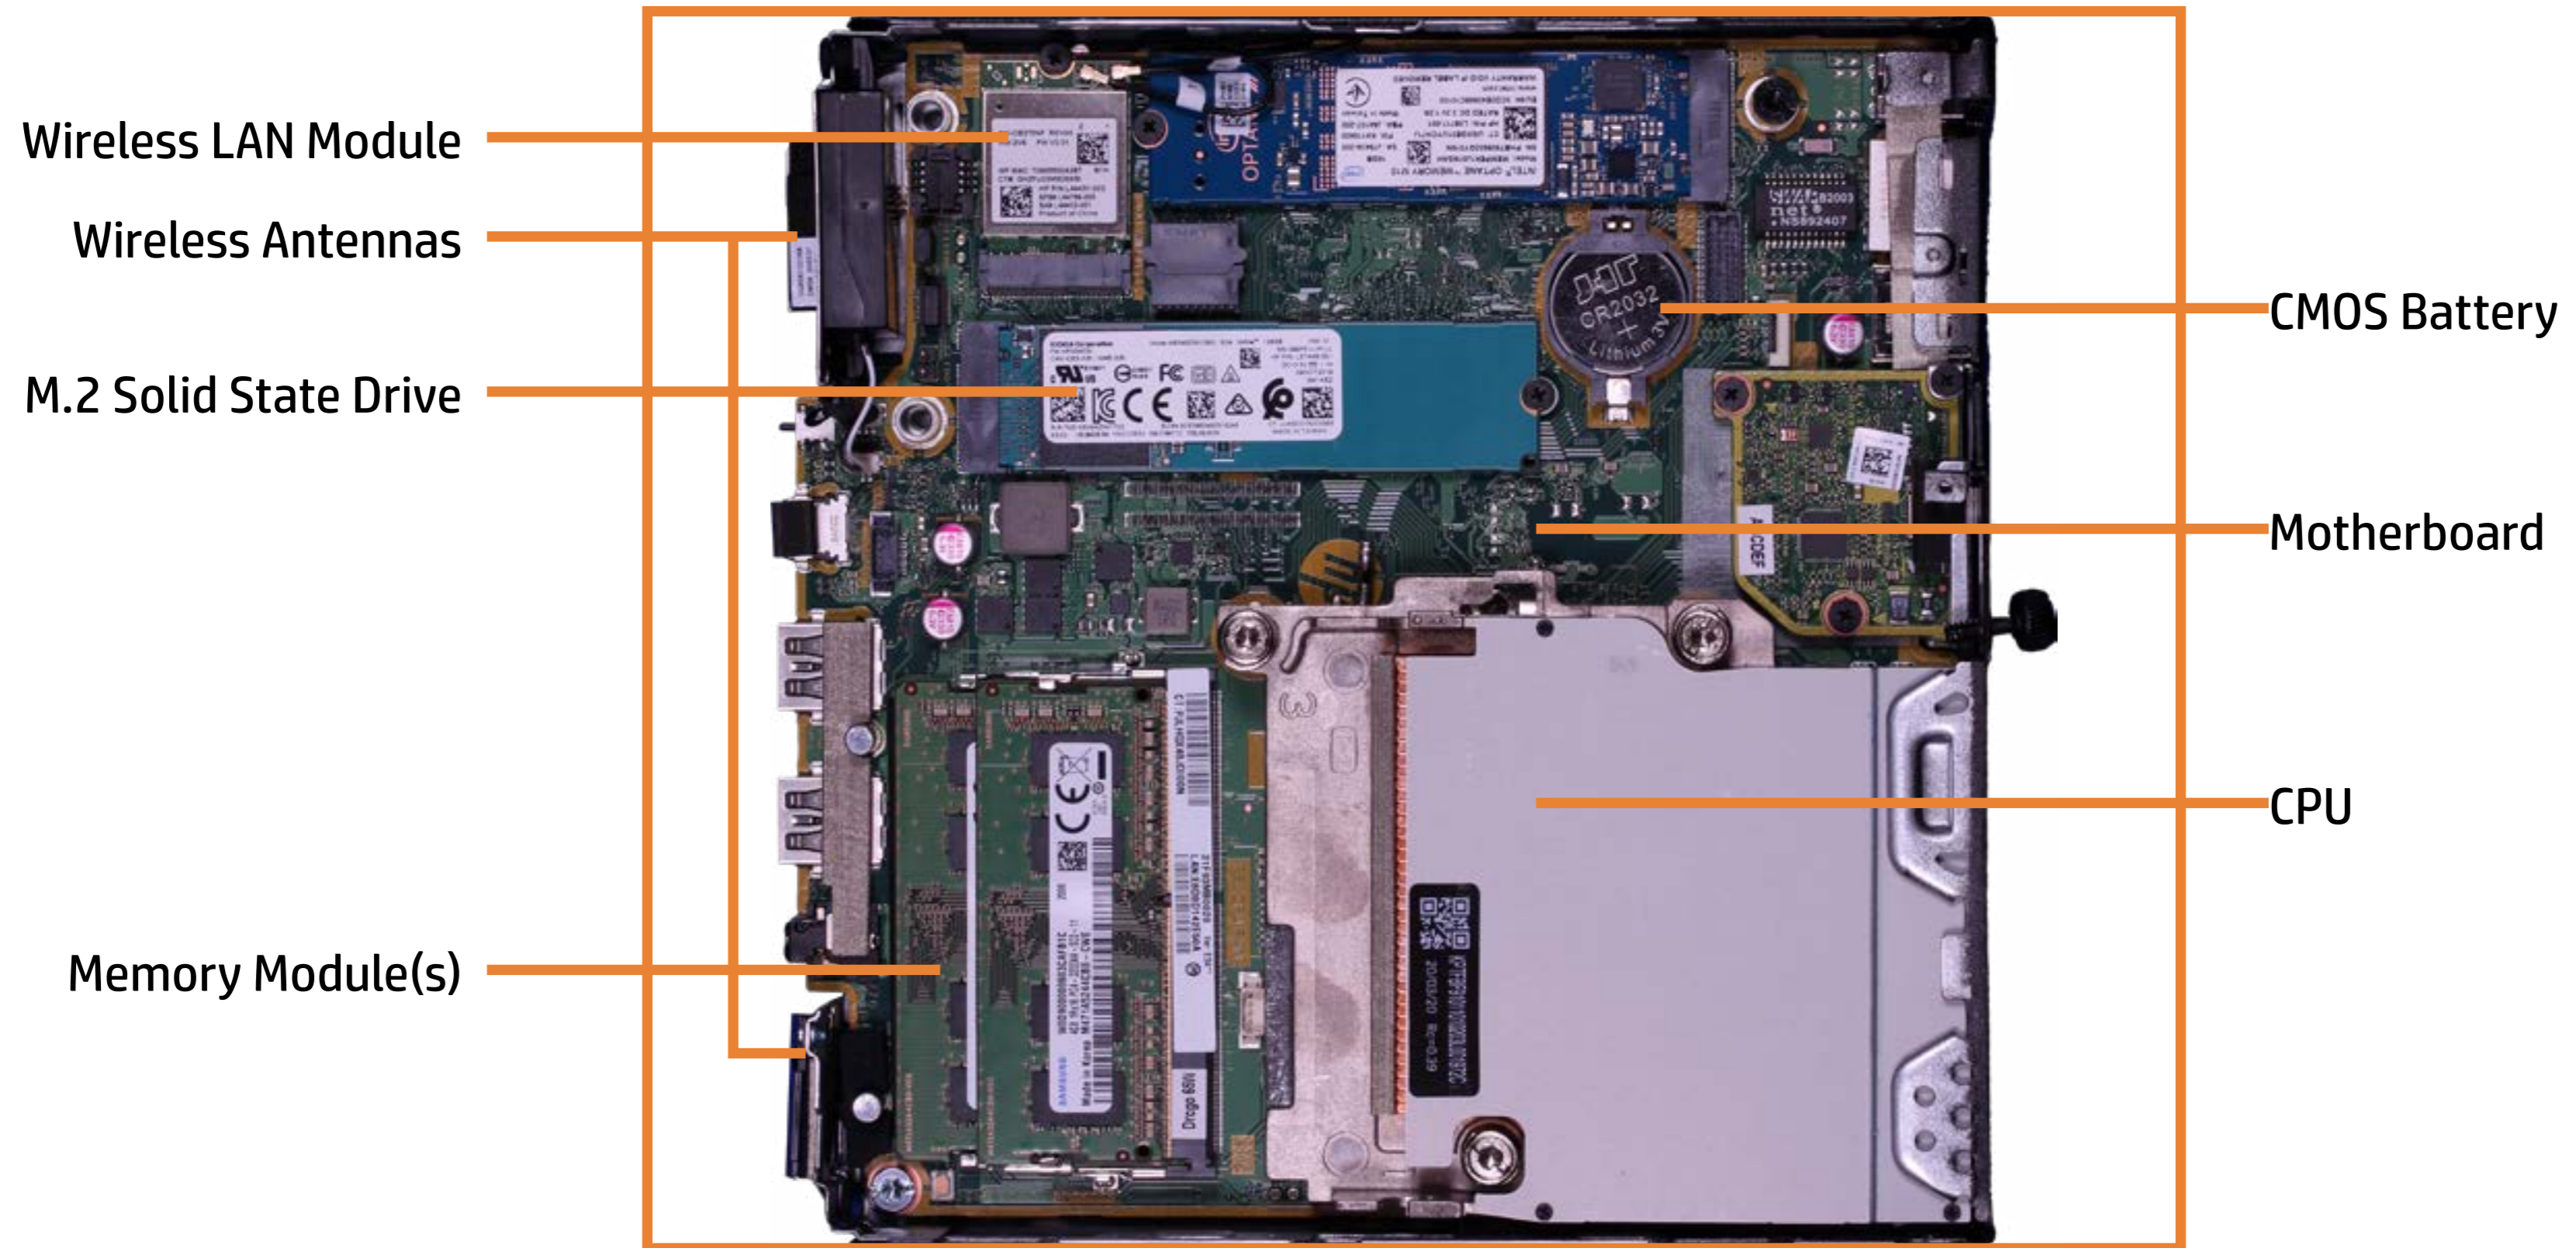

Wireless LAN Module

Wireless Antennas

M.2 Solid State Drive

CMOS Battery

Motherboard

CPU

Memory Module(s)

Access Panel

Access Panel




Storage Drive Cage



Storage Drive Cage Fan





Storage Drive Cable

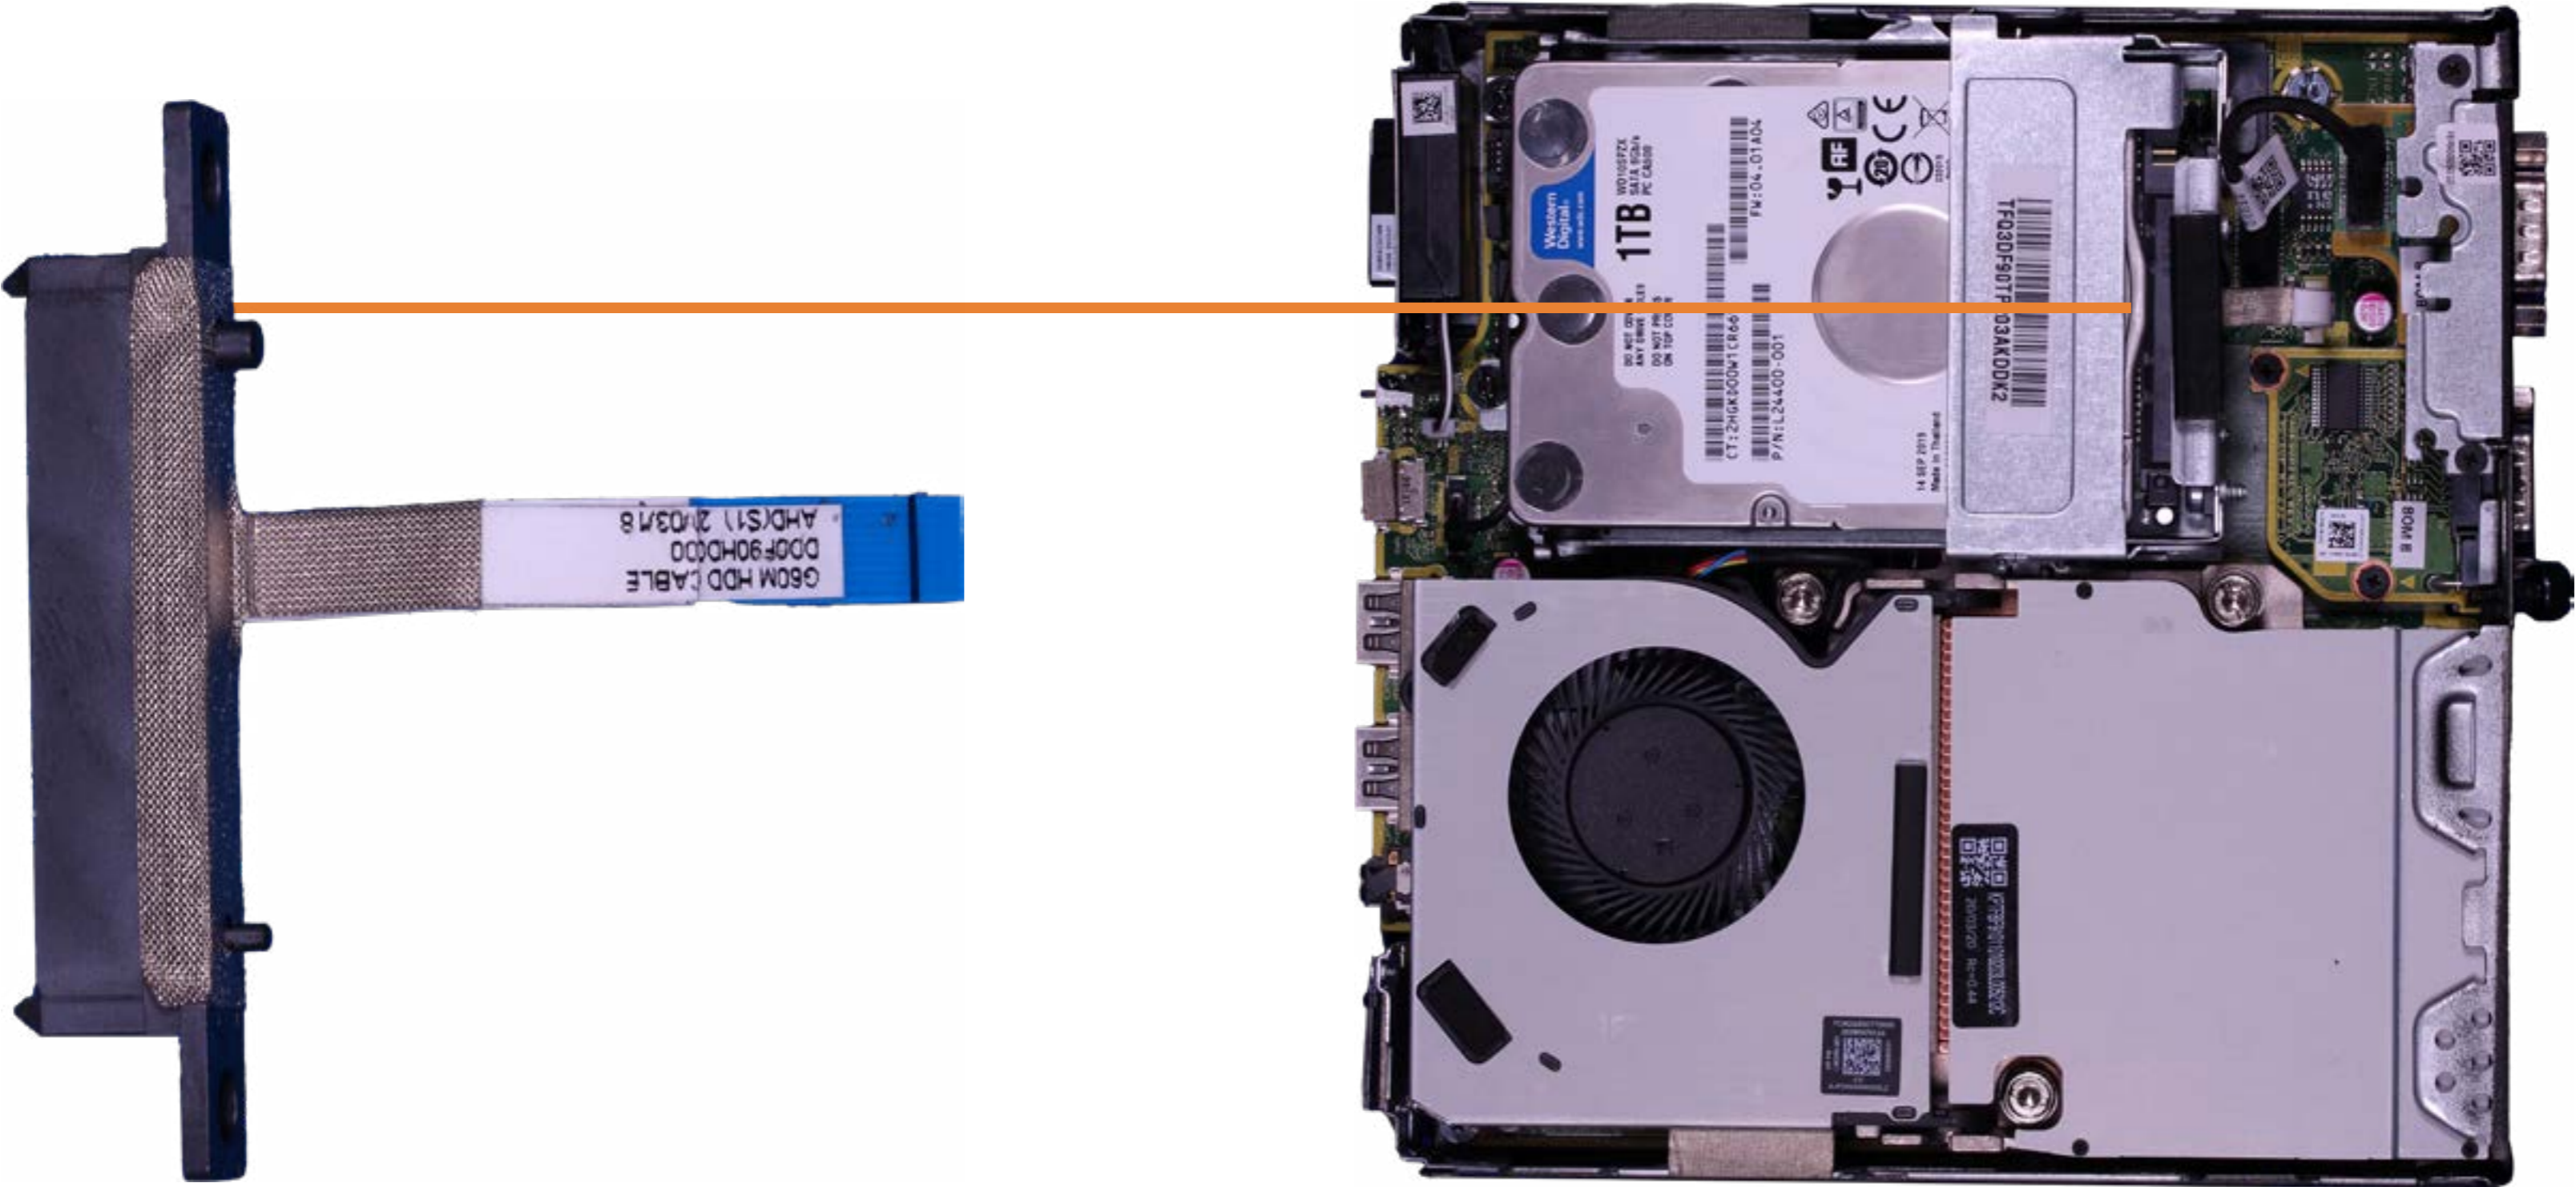

System Fan




Upper Option Board

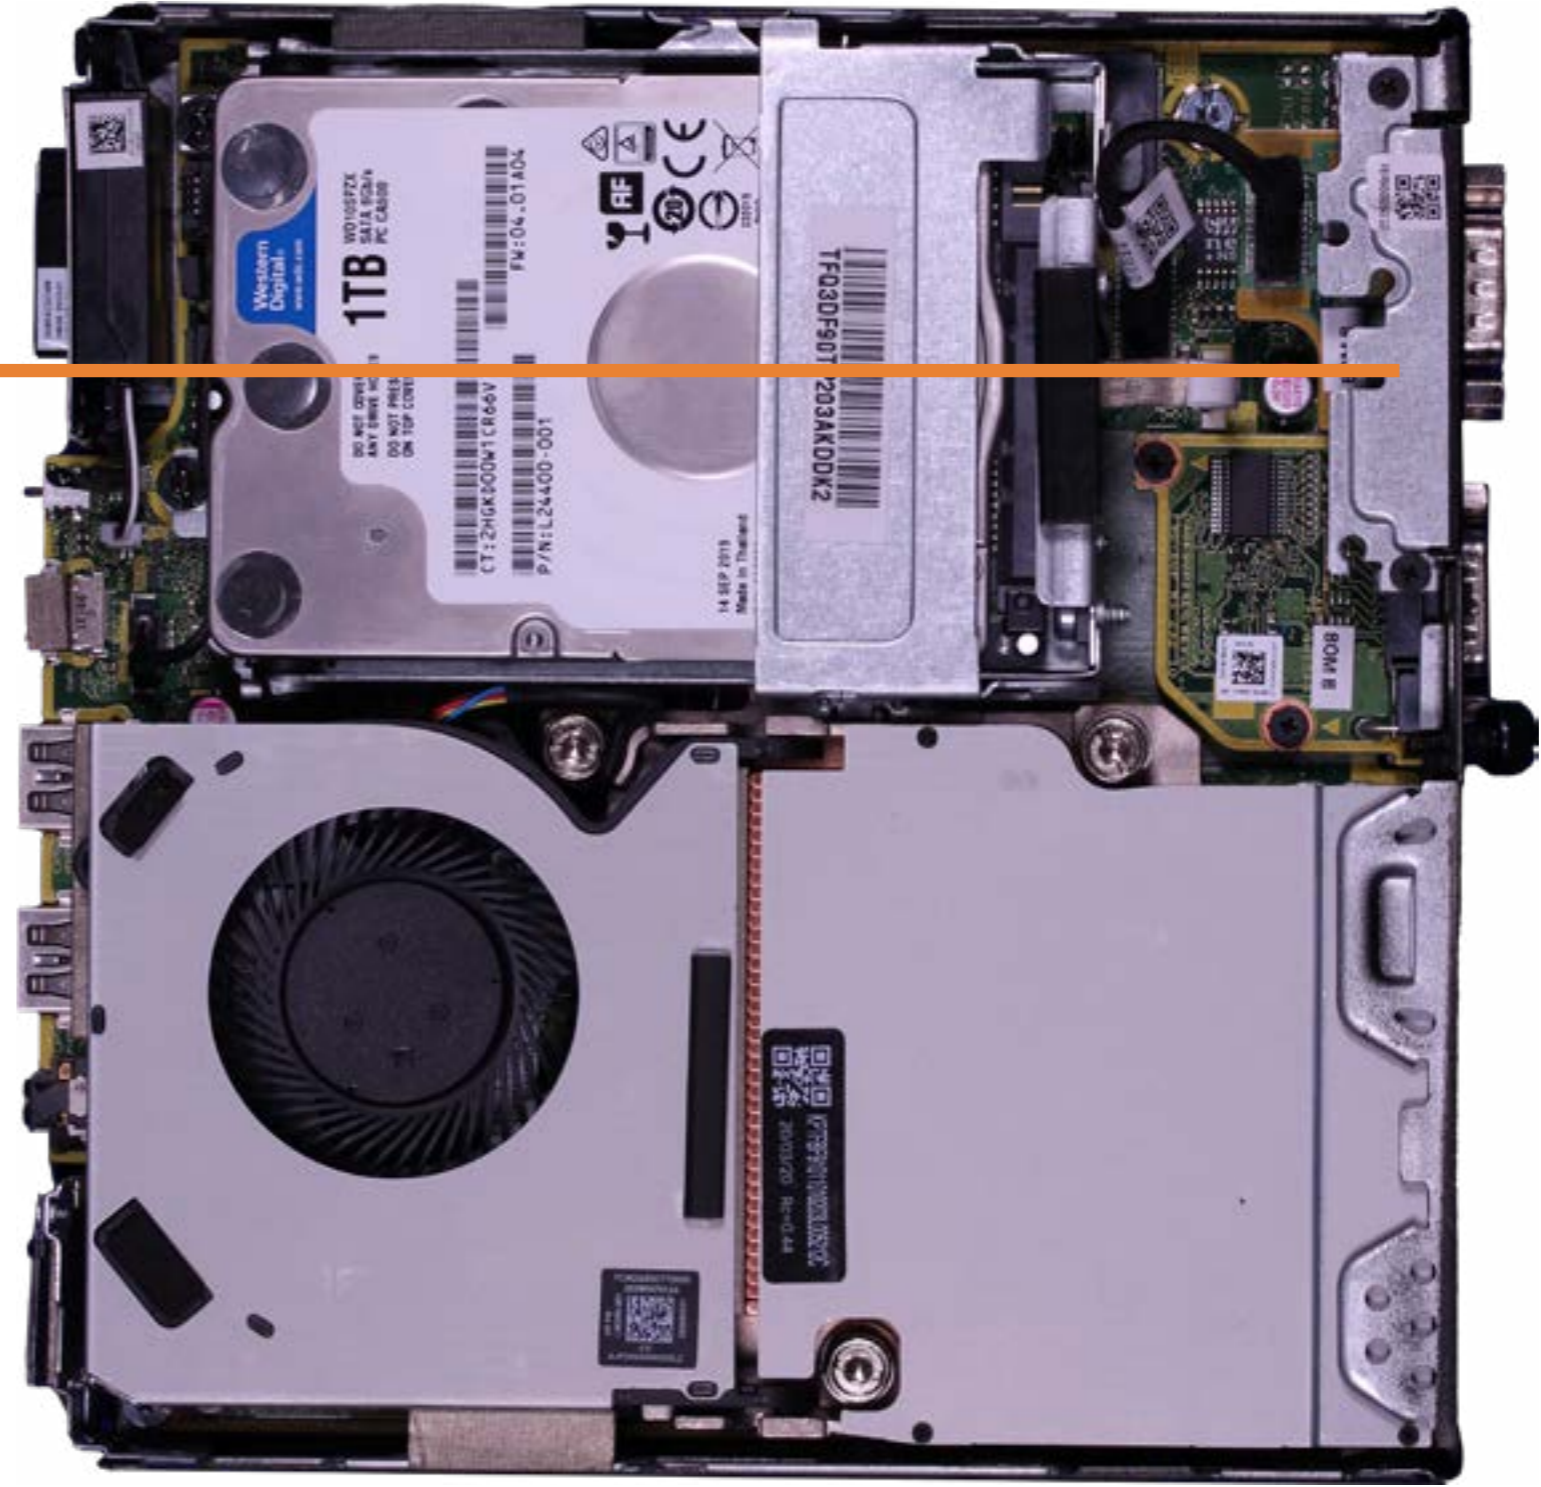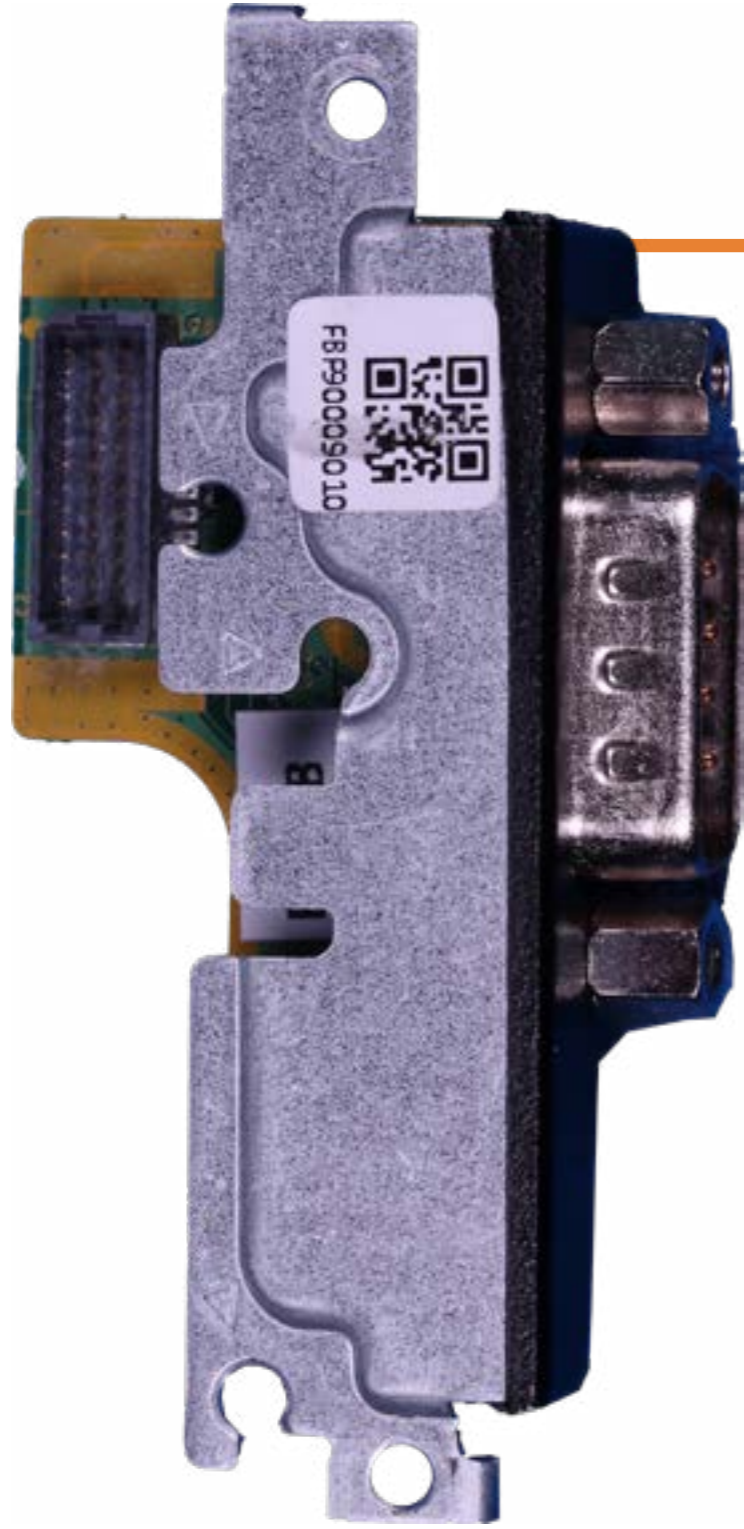


Memory Module(s)




Thermal Sensor

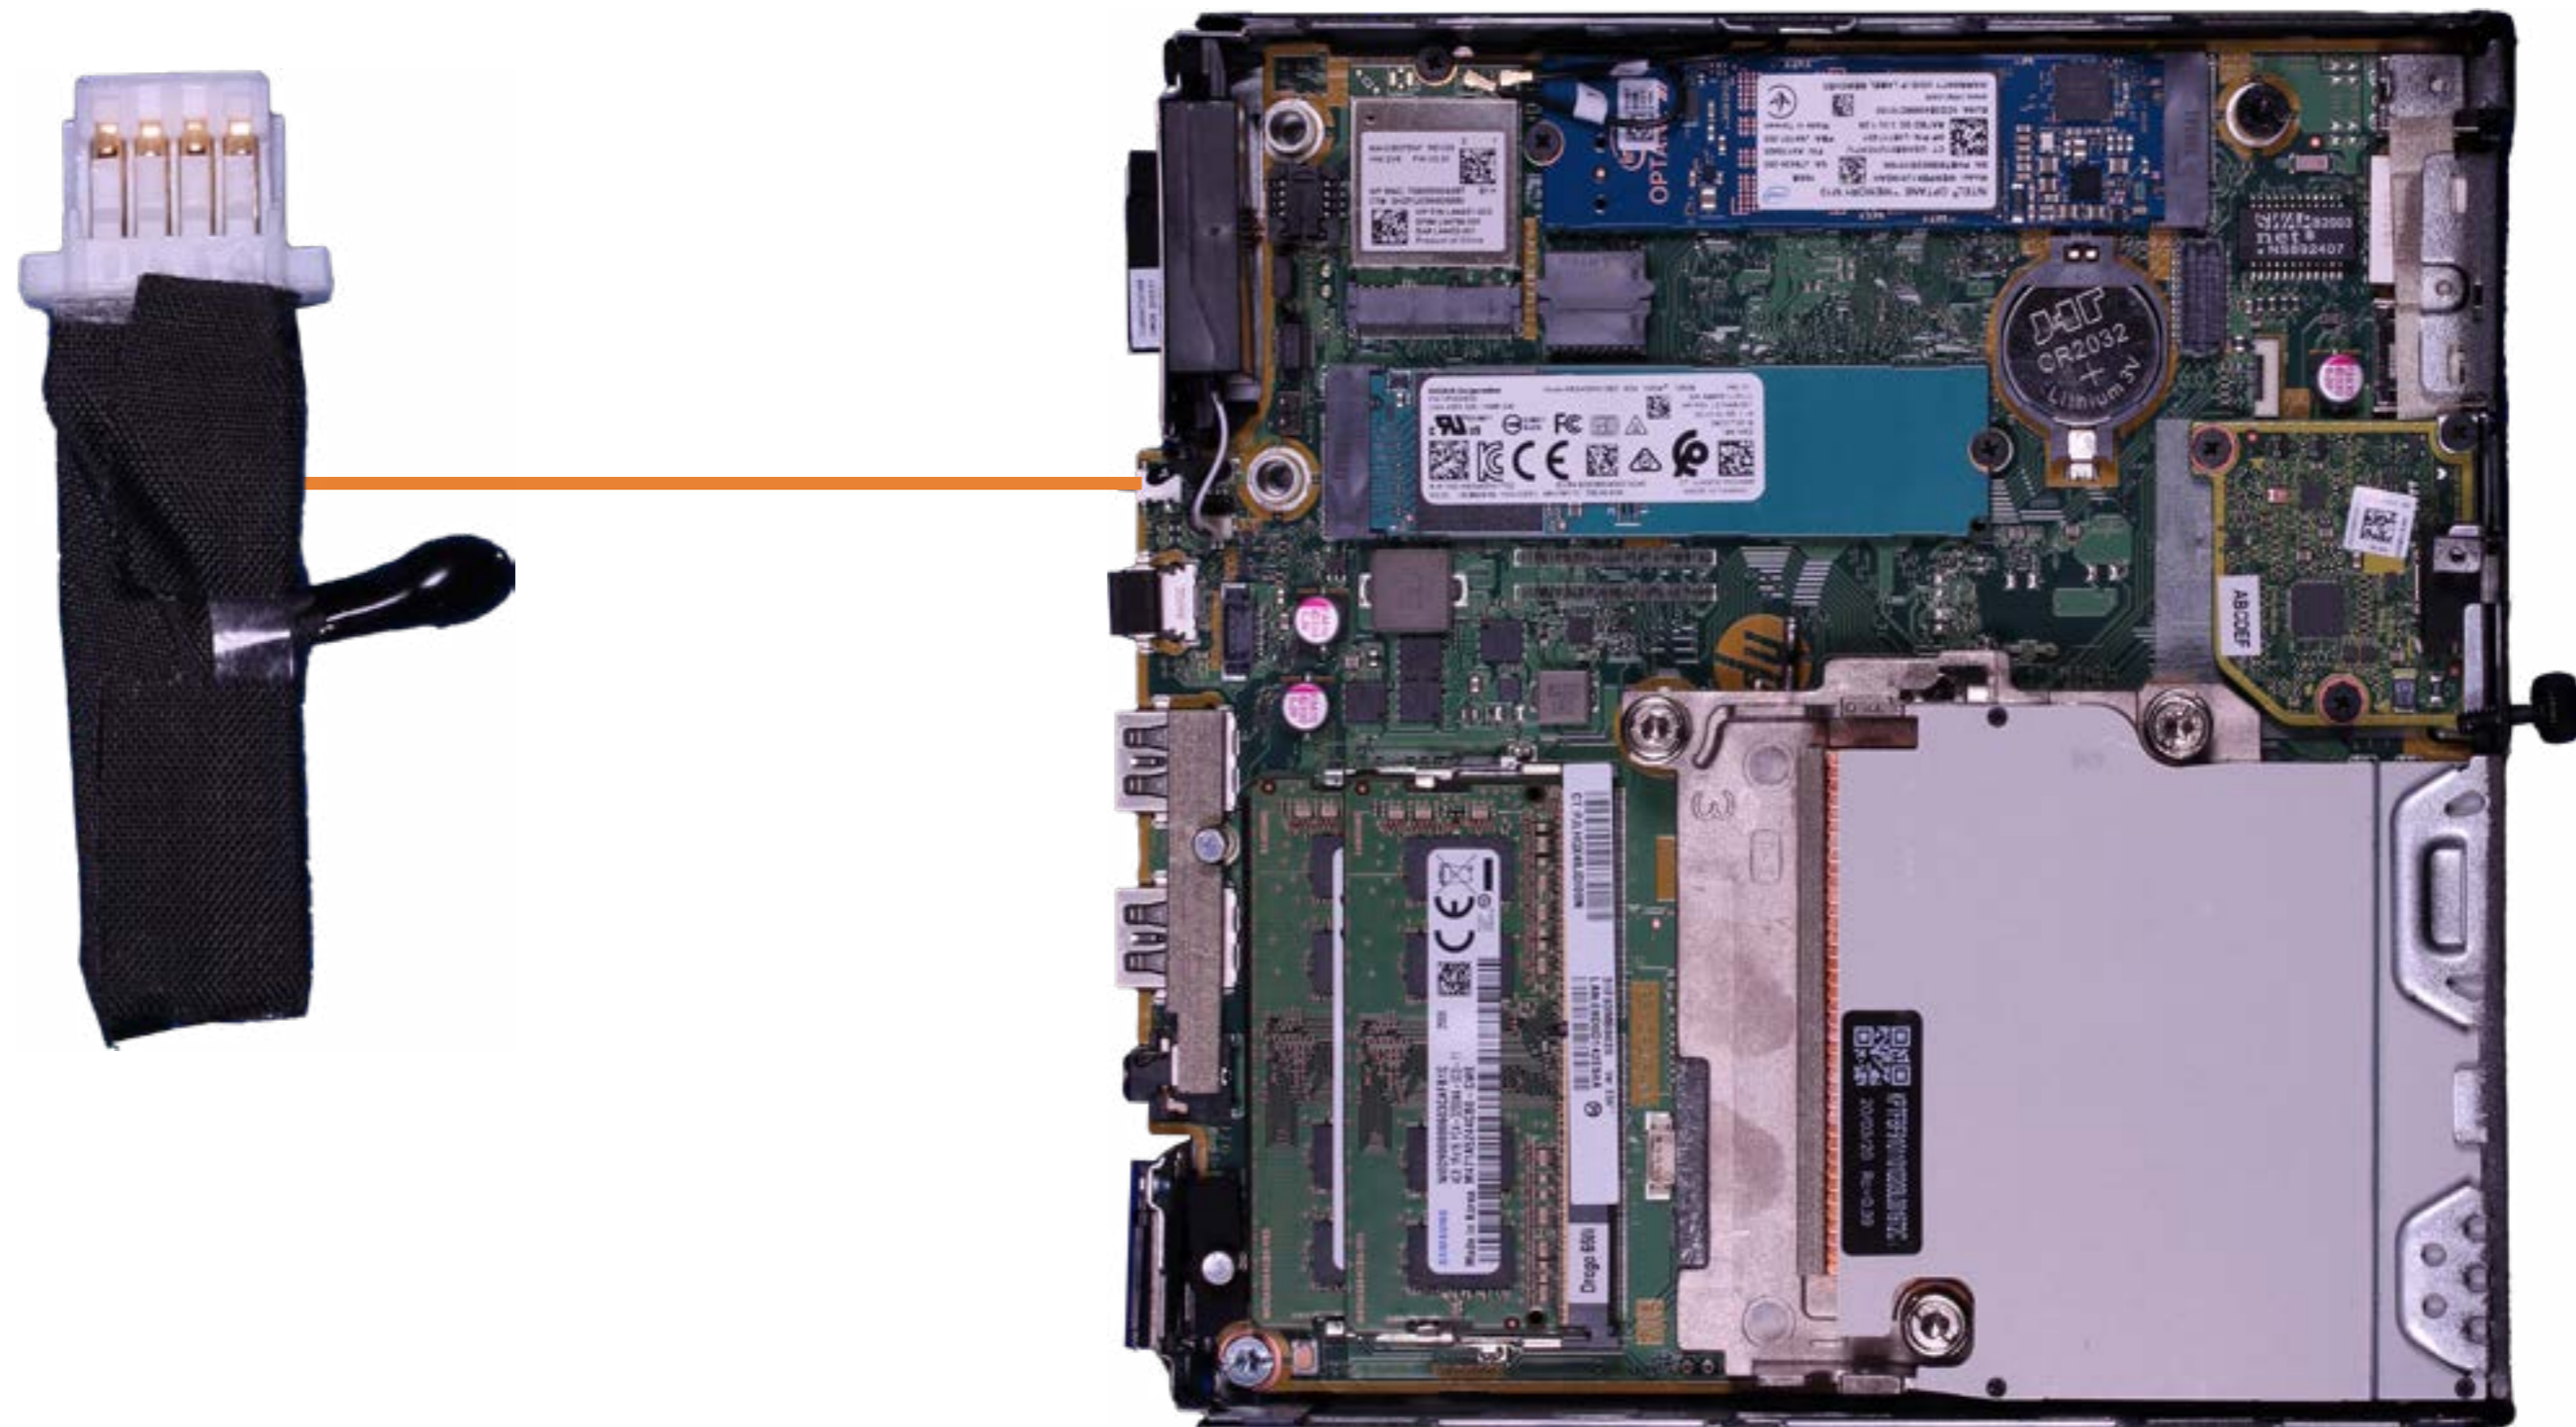

Speaker

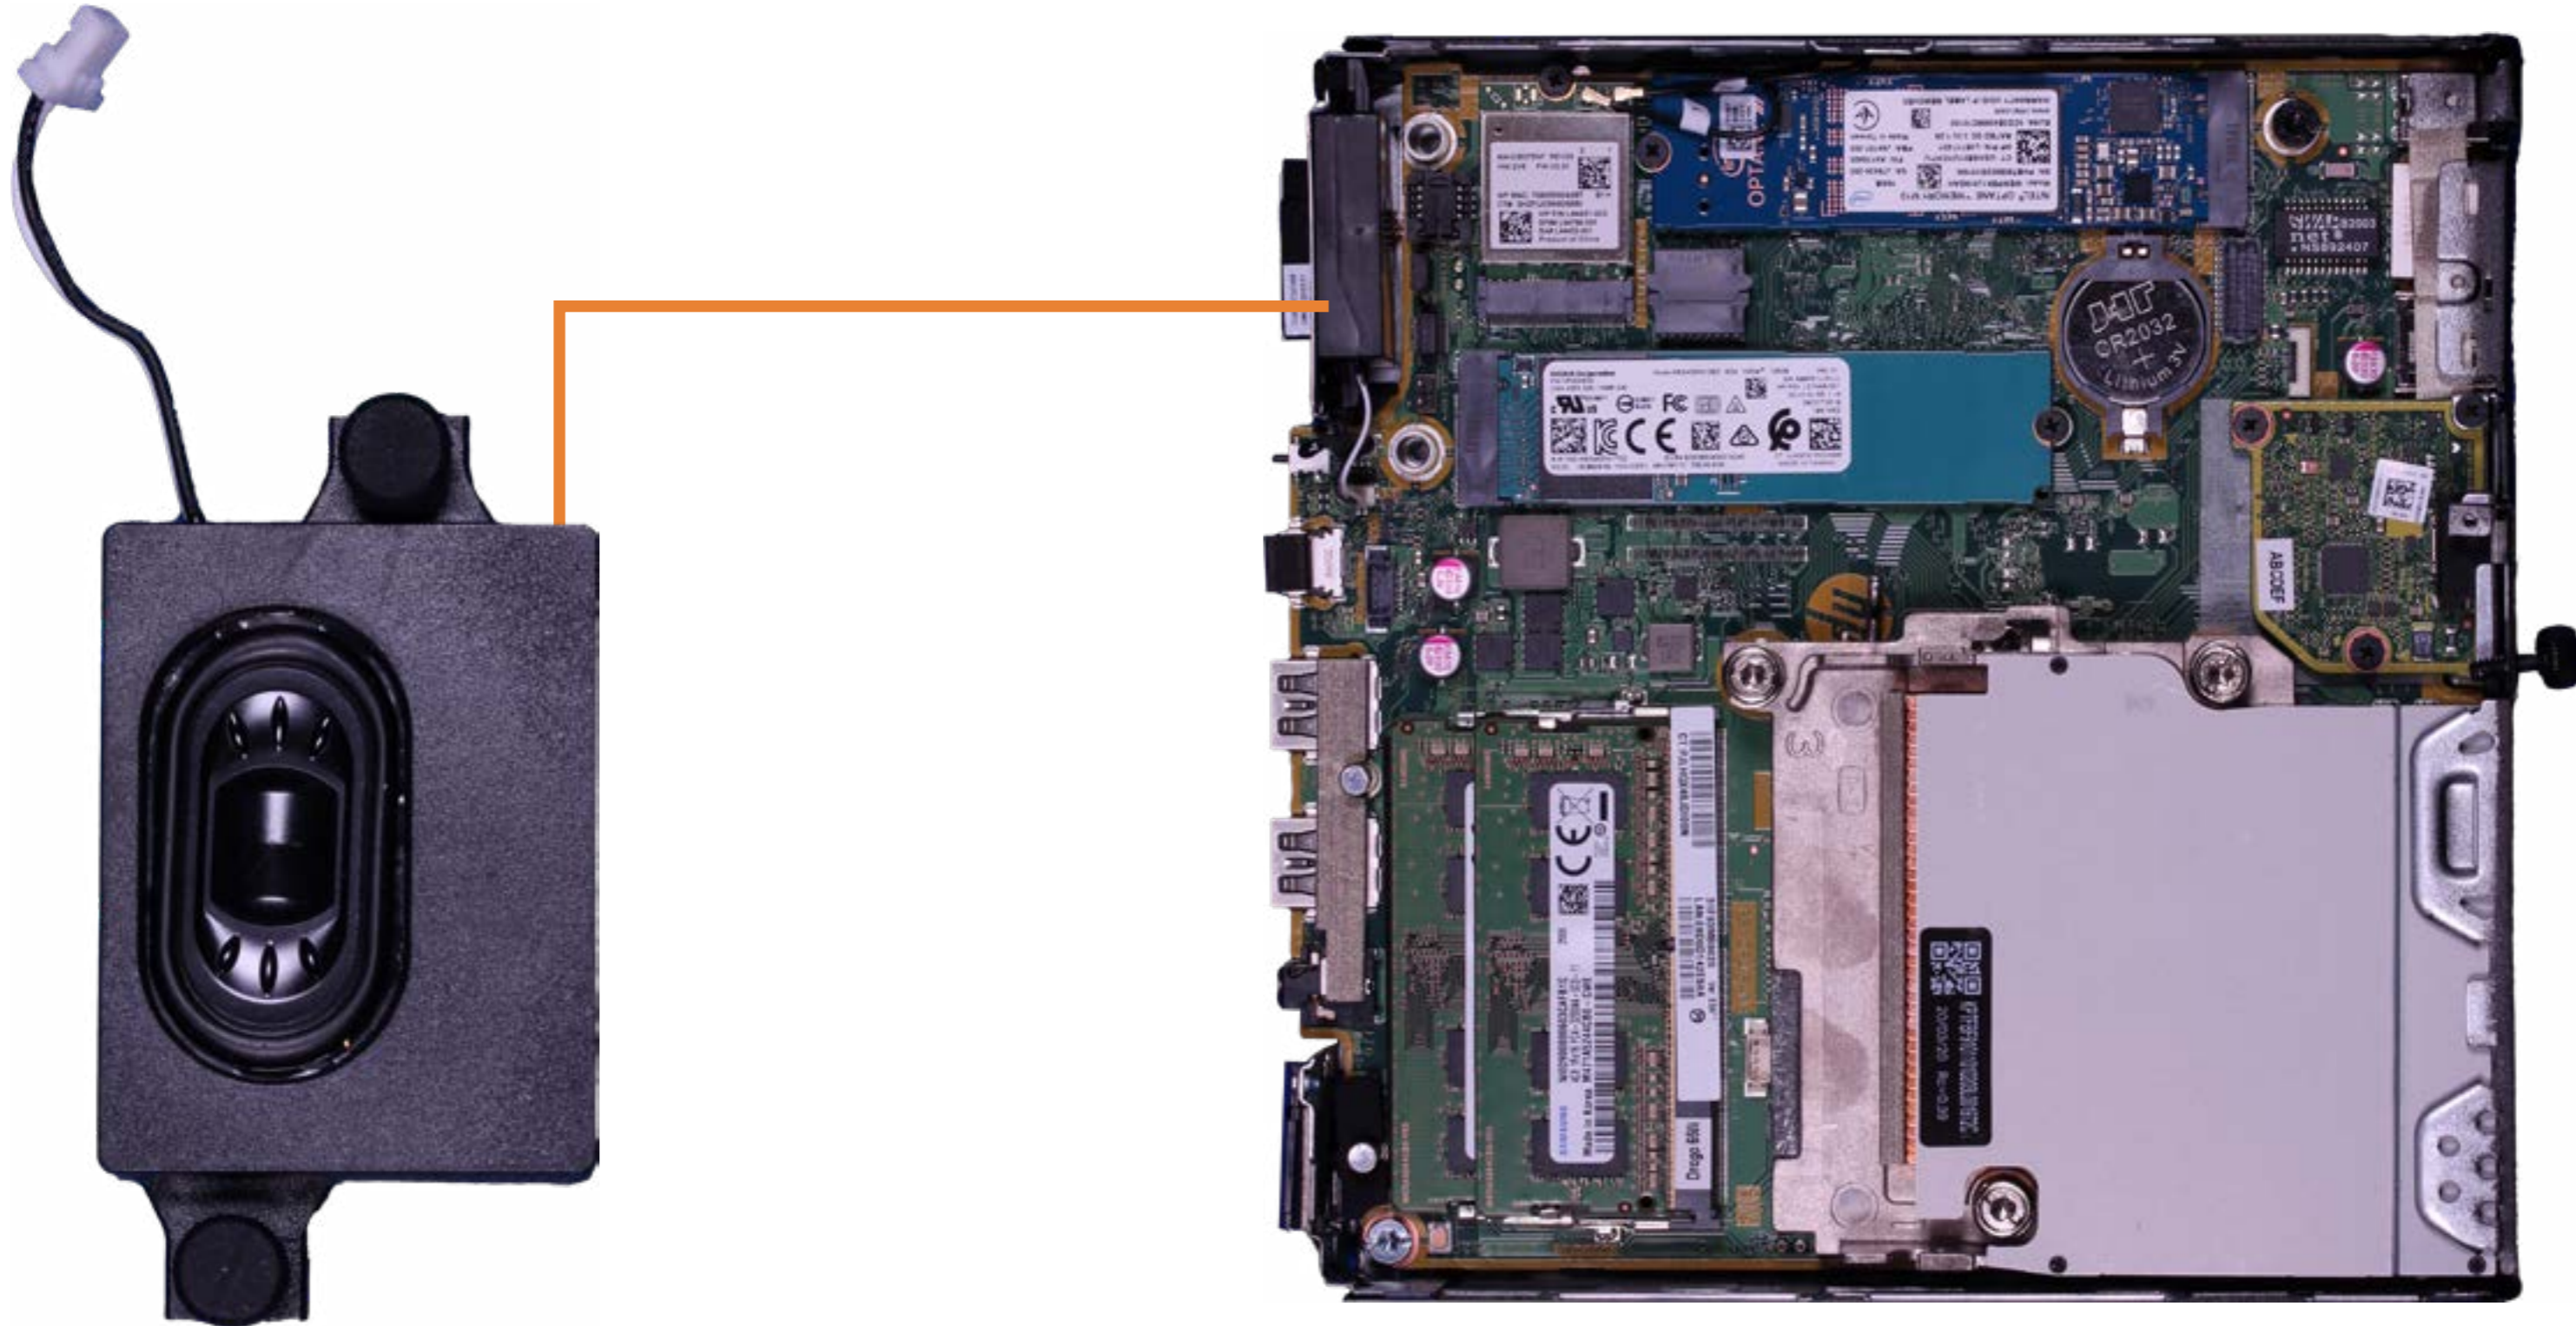


Wireless LAN Module

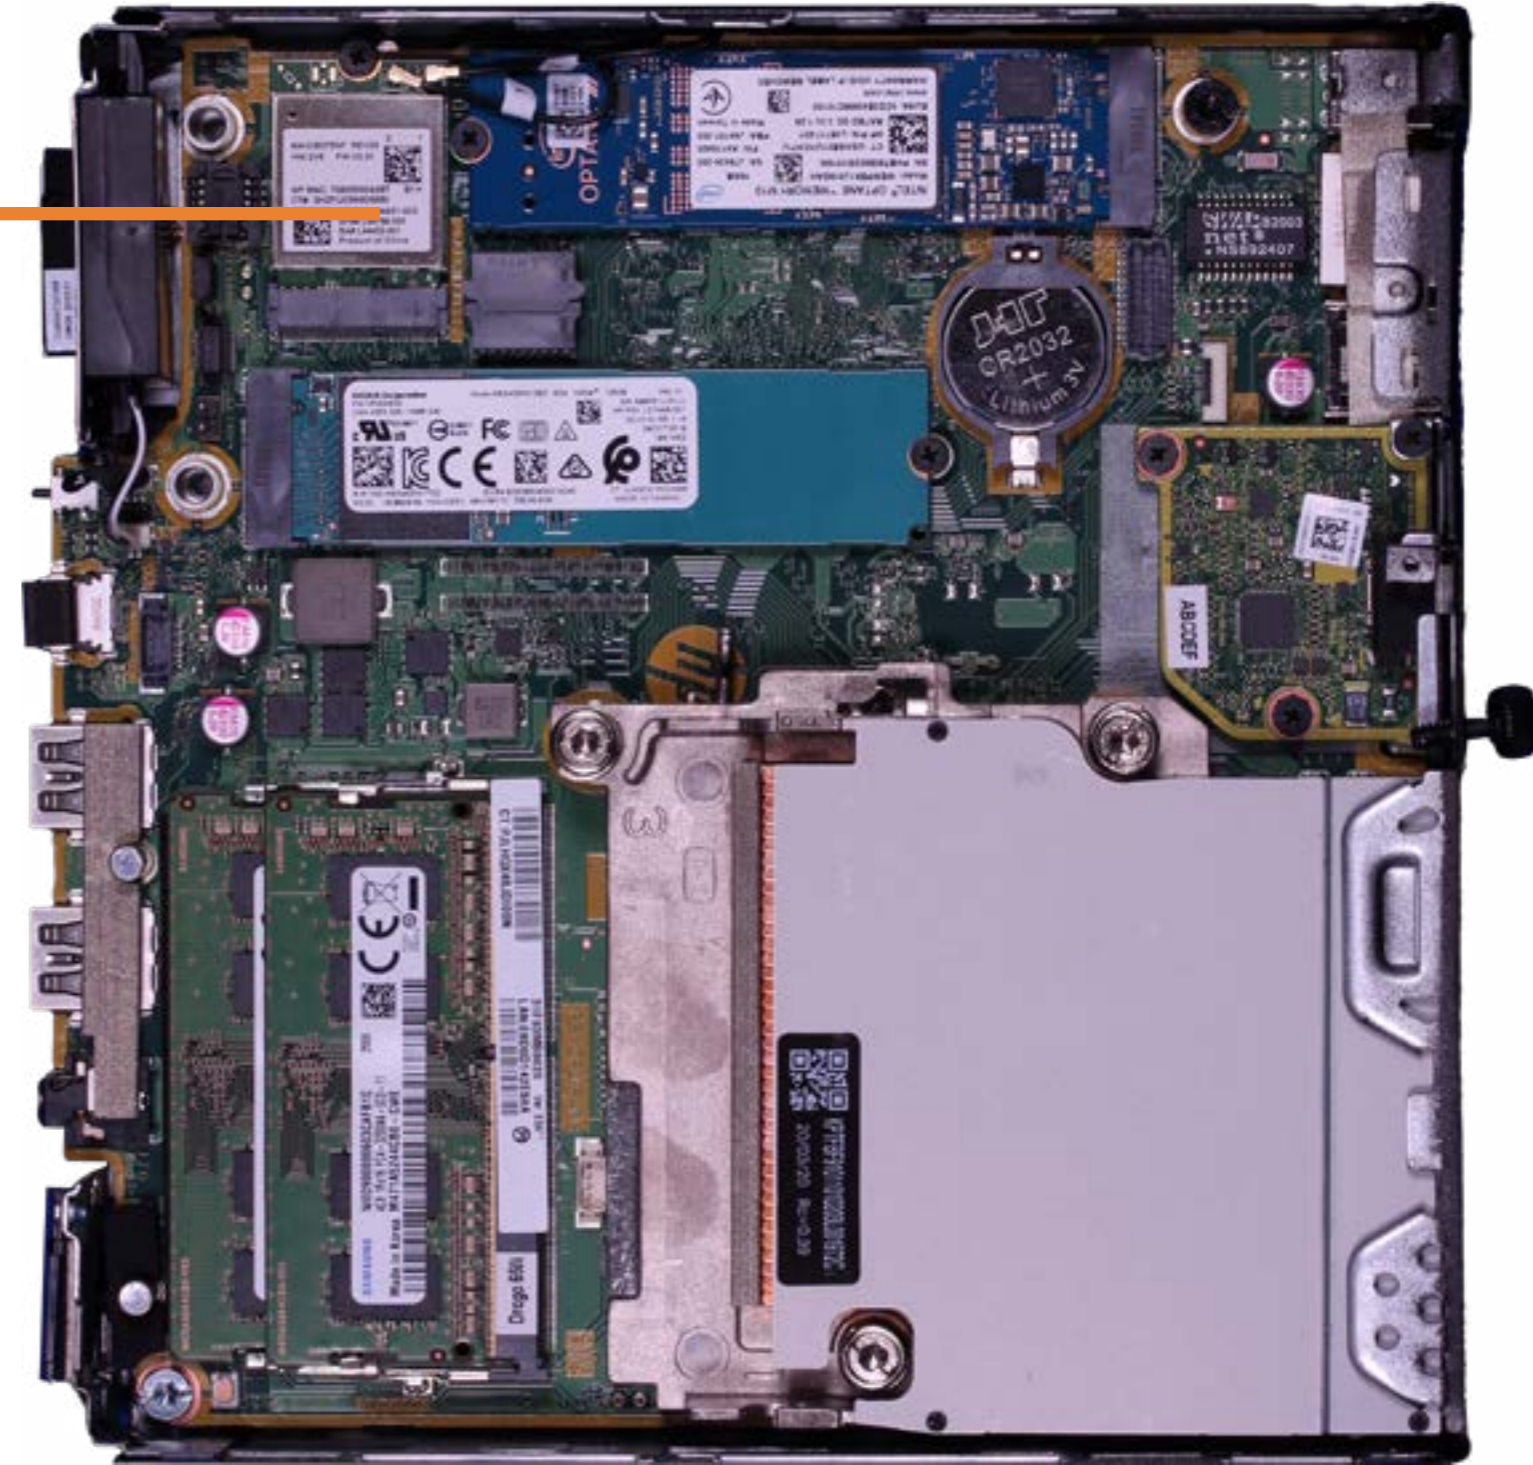



M.2 Solid State Drive






Lower Option Board

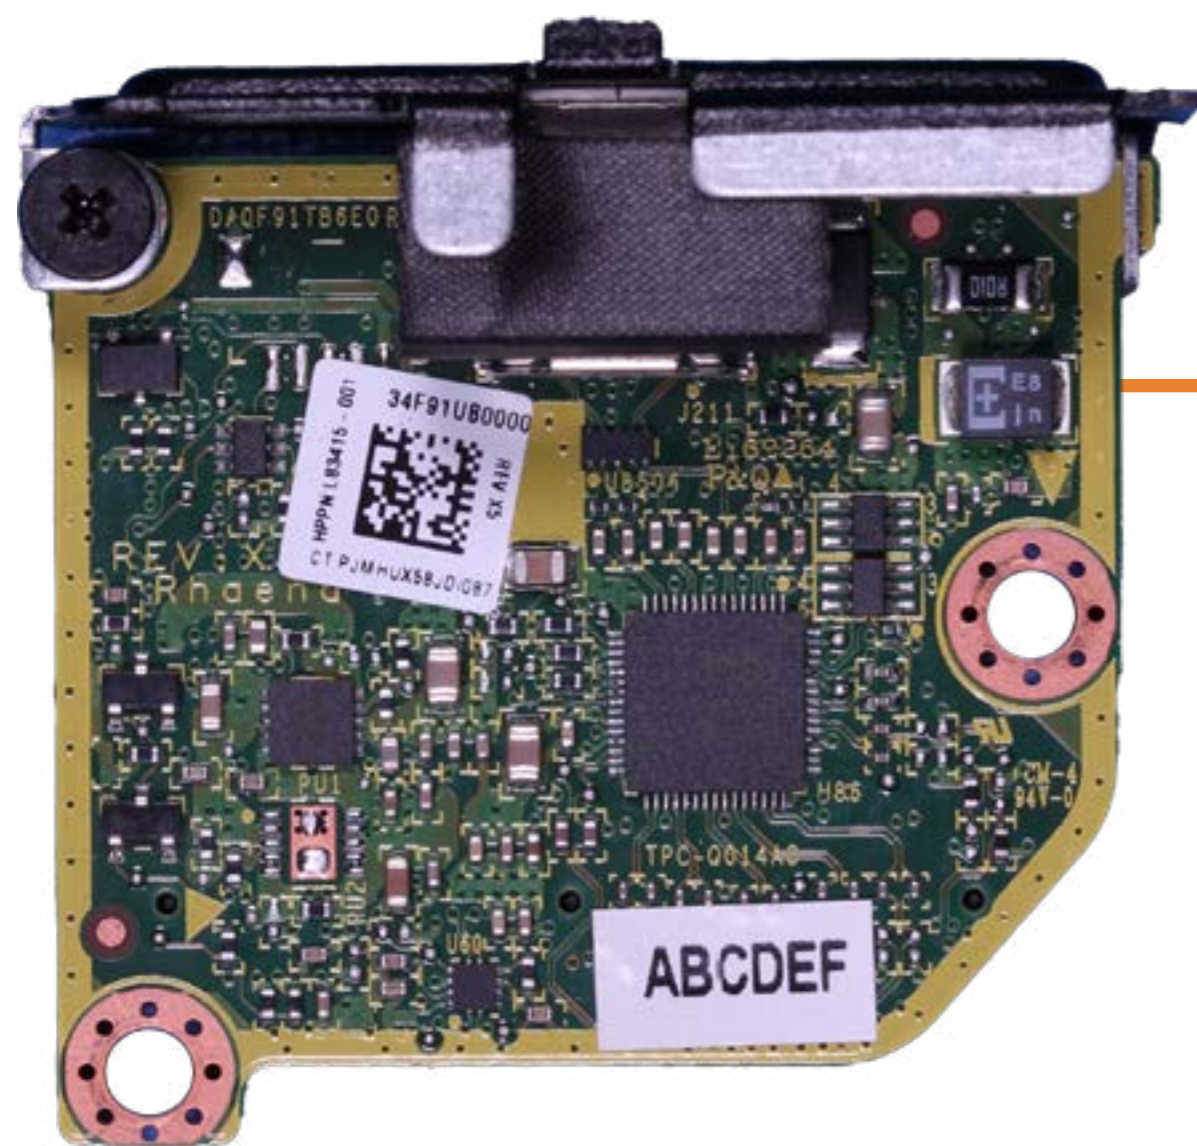

CMOS Battery

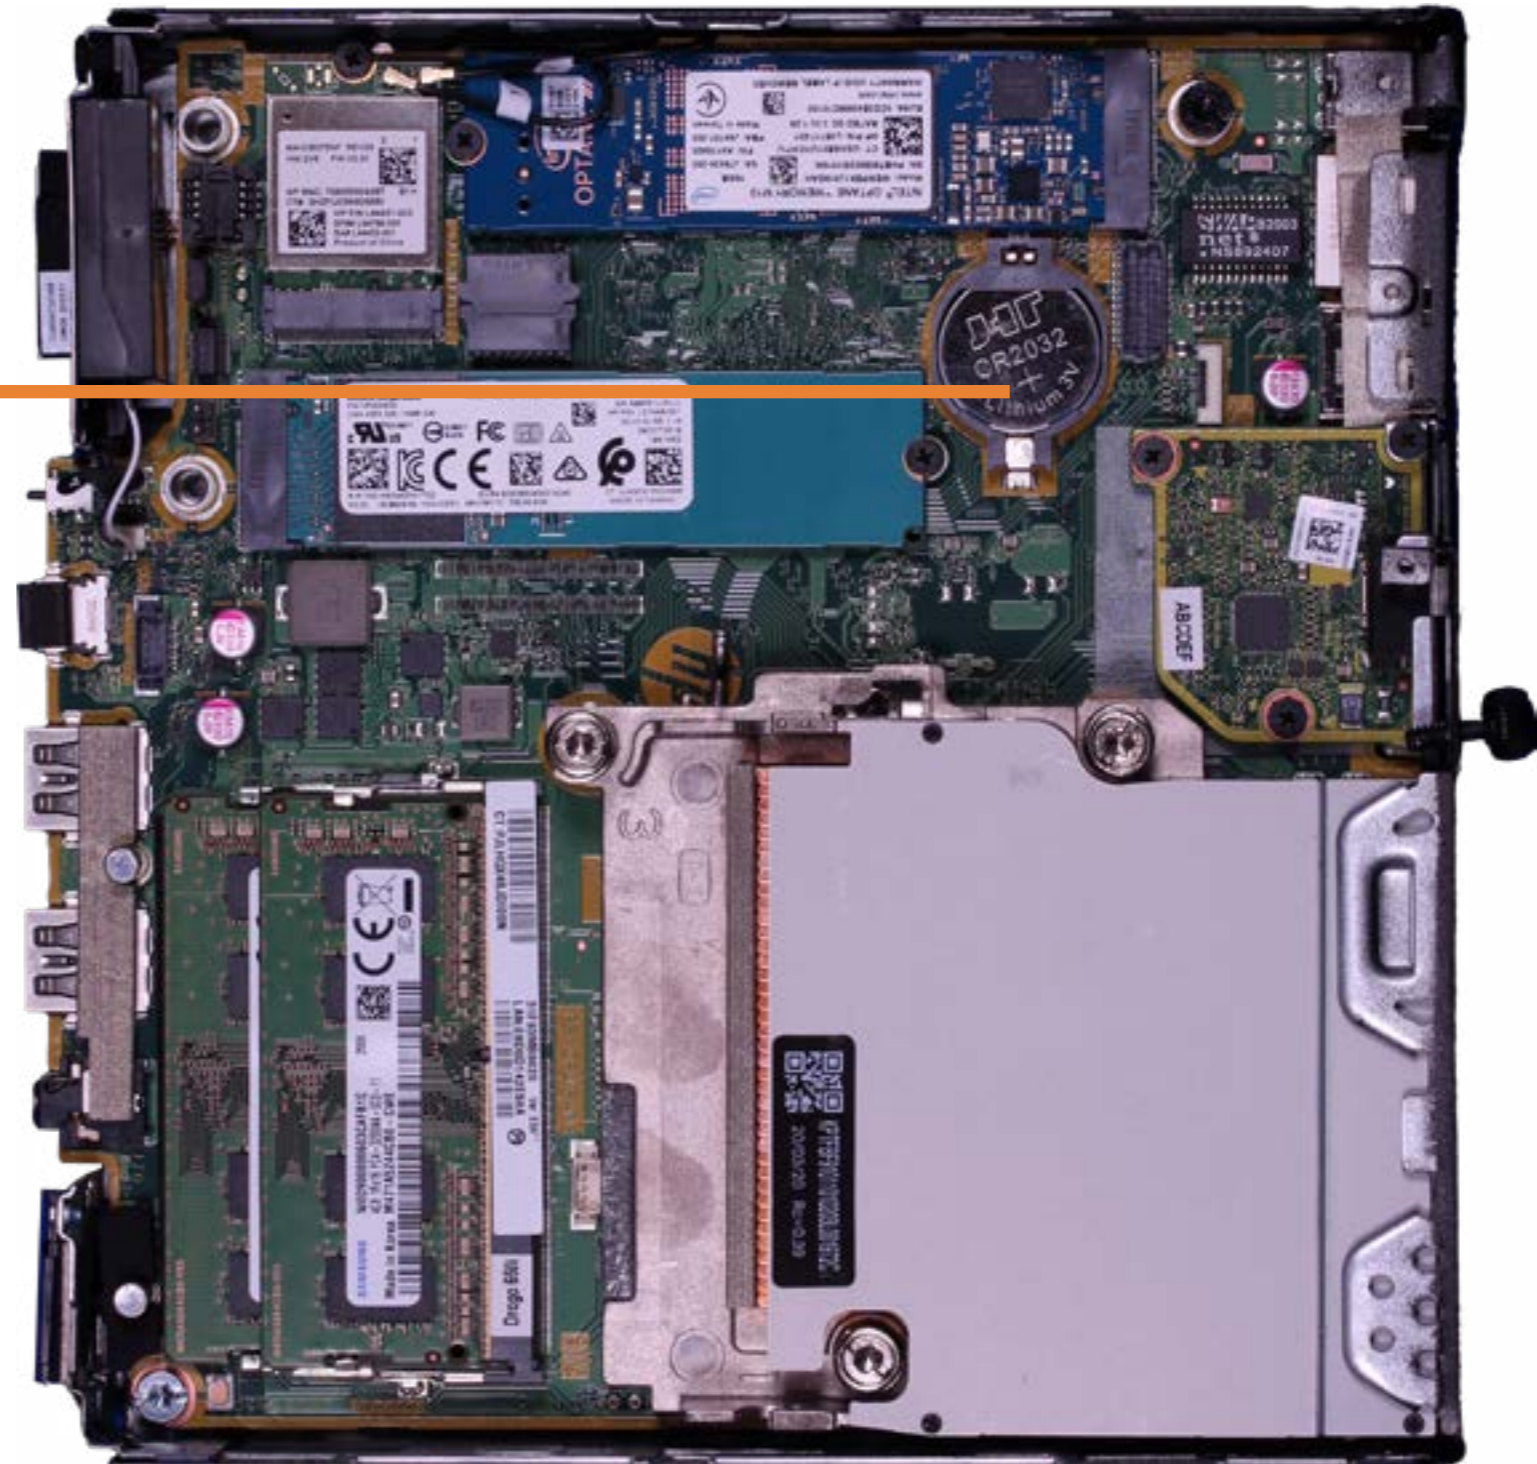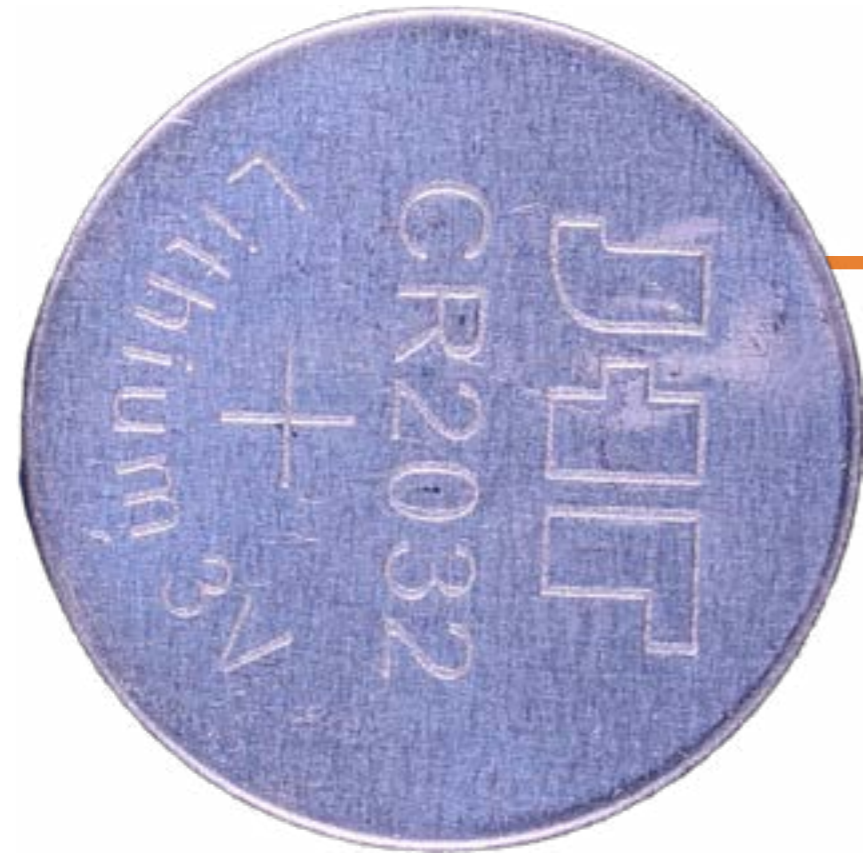


Heat sink

 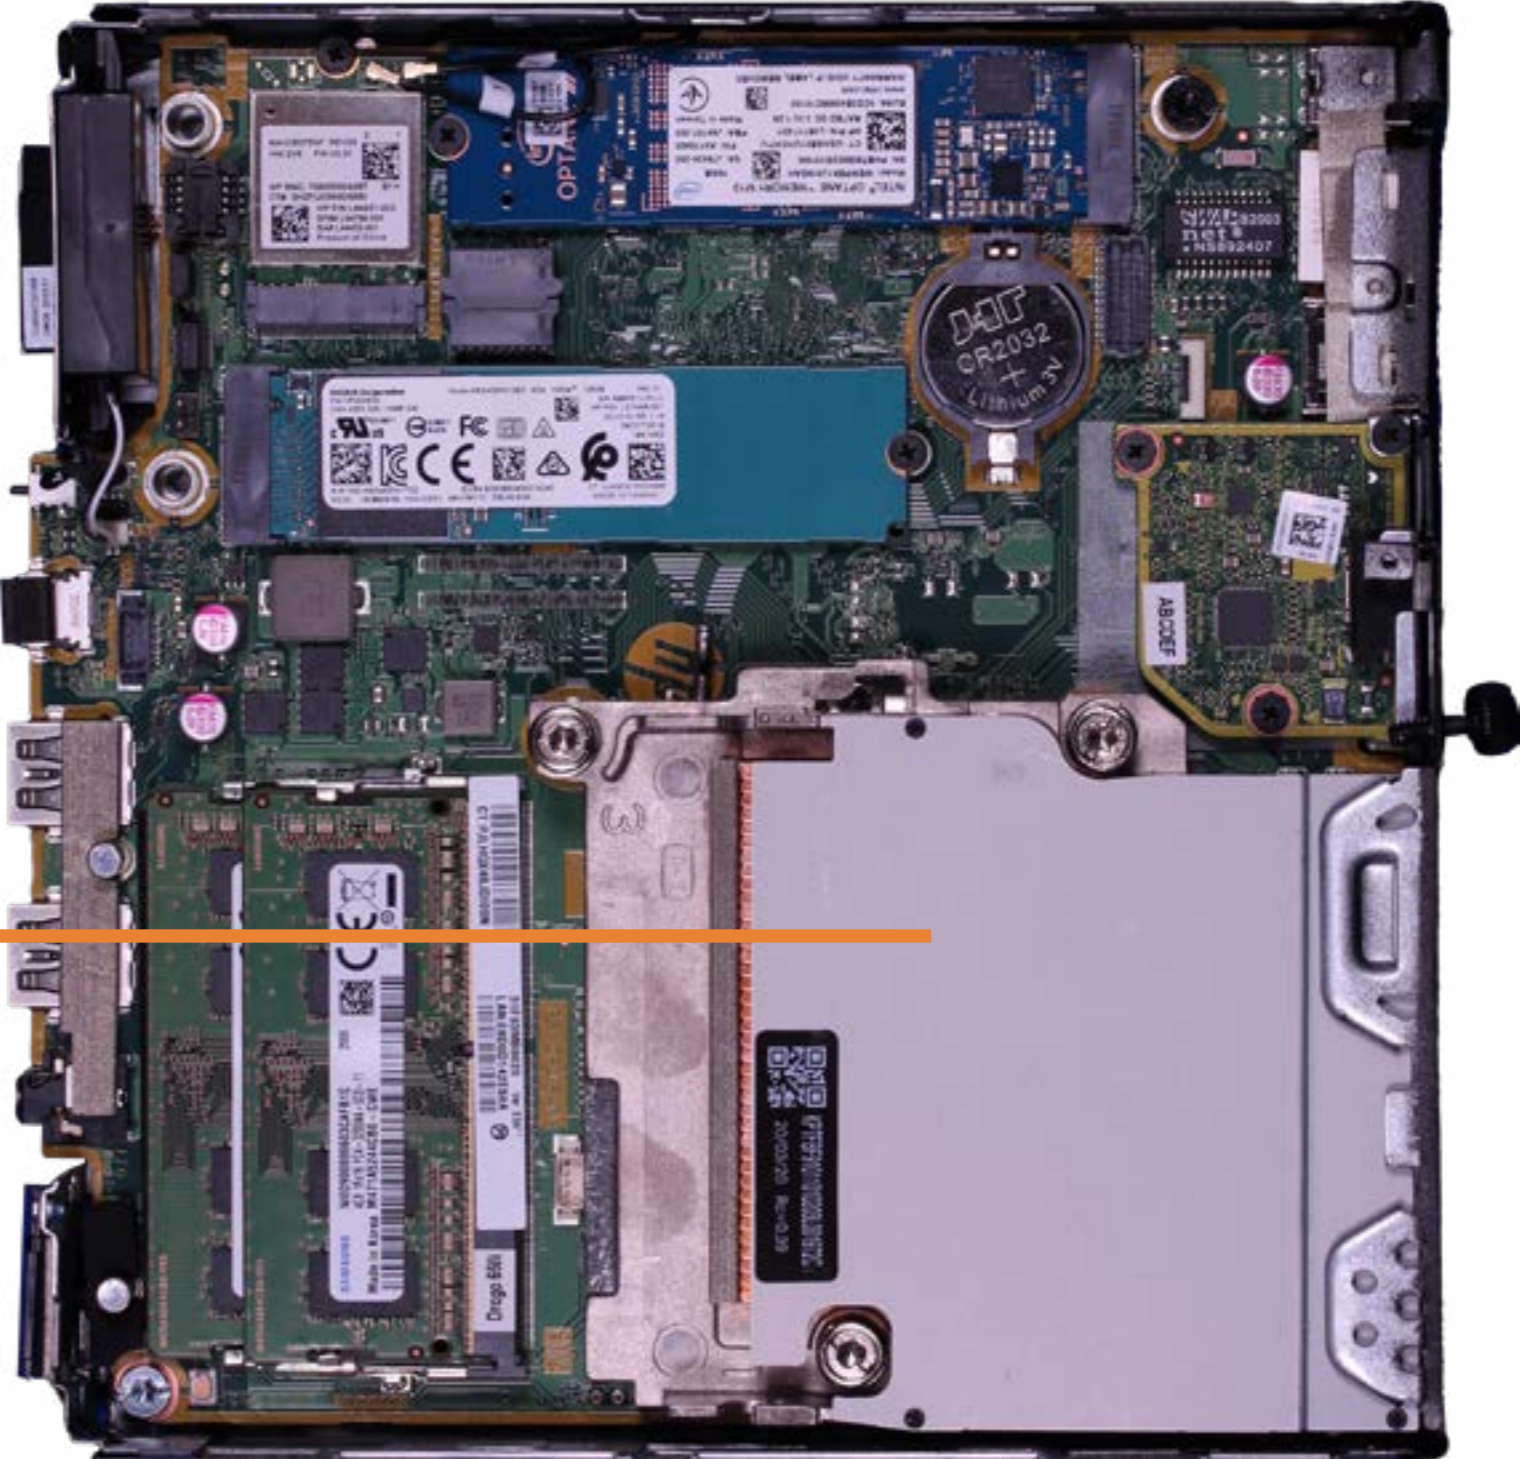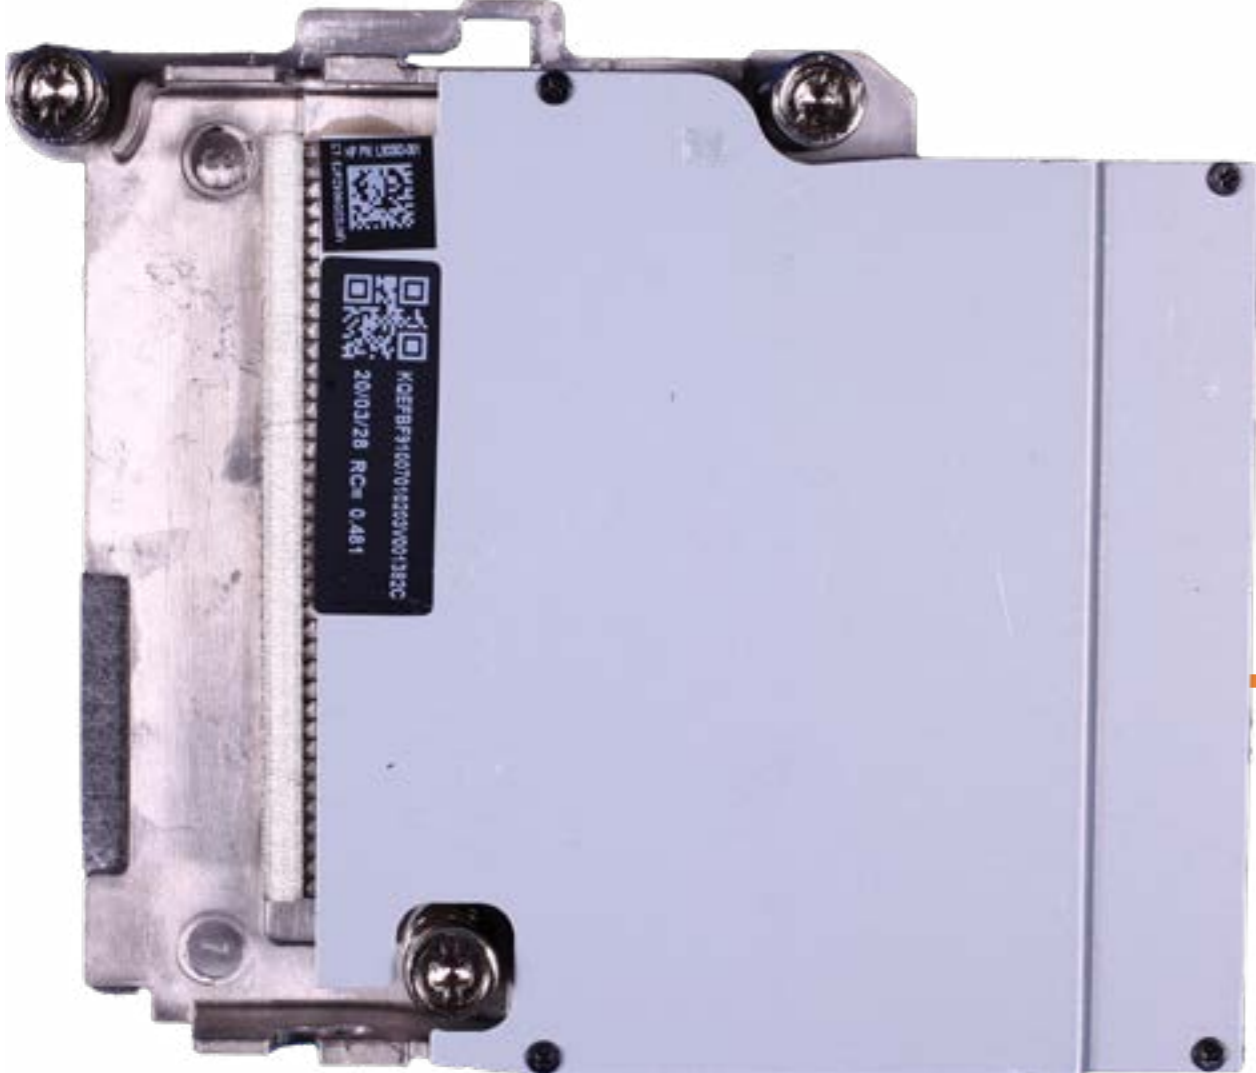

CPU



Mother Board

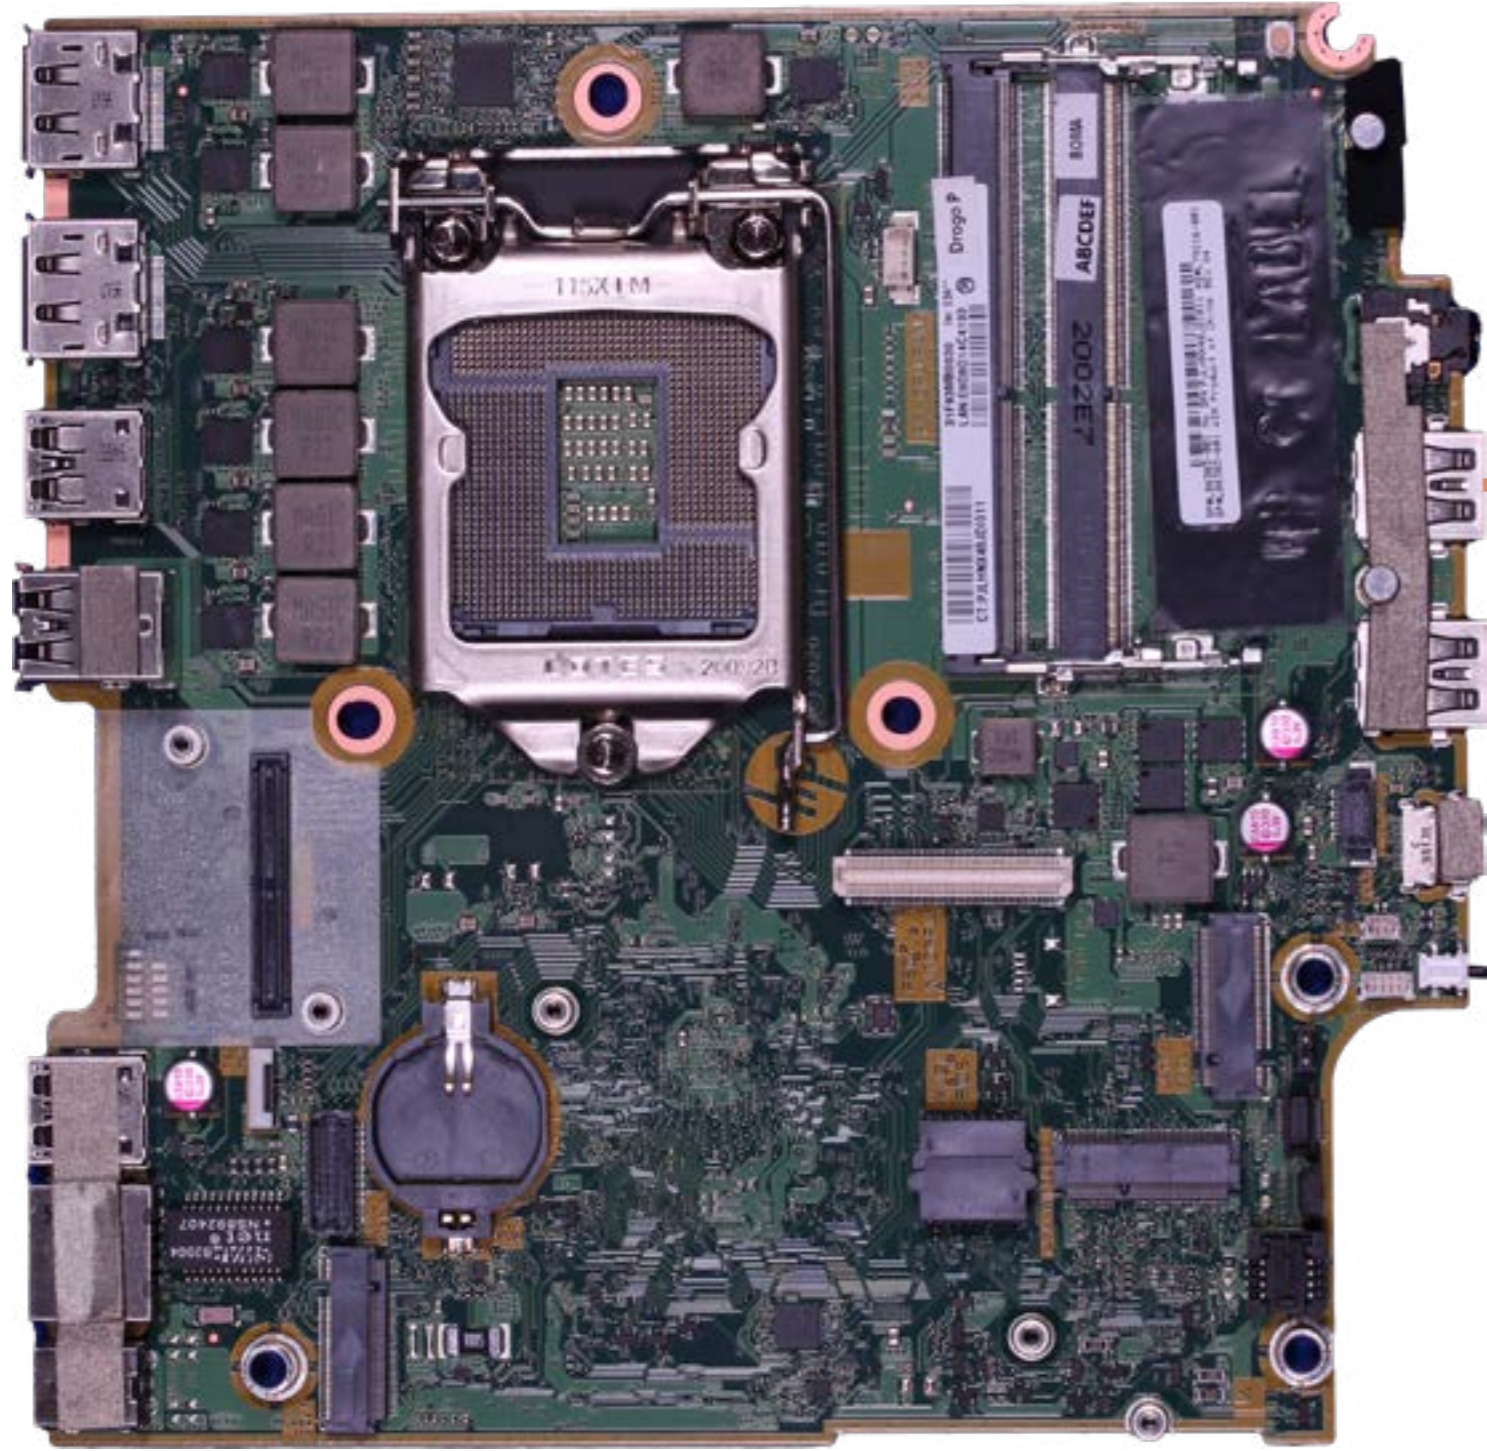

Wireless Antennas

