

HP Deskjet D1400 Printer series

HP Photosmart Software Help



Hewlett-Packard Company notices

The information contained in this document is subject to change without notice.

All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Acknowledgements

Microsoft, MS, MS-DOS, and Windows are registered trademarks of Microsoft Corporation.

TrueType is a U.S. trademark of Apple Computer, Inc.

Adobe, AdobeRGB, and Acrobat are trademarks of Adobe Systems Incorporated.

Terms and conventions

The following terms and conventions are used in this user's guide.

Terms

The HP Deskjet printer is also referred to as the **HP Deskjet**, **HP printer**, or **printer**.

Cautions and warnings

A **Caution** indicates possible damage to the HP Deskjet printer or to other equipment. For example:

 **CAUTION:** Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections.

A **Warning** indicates possible harm to you or to others. For example:

 **WARNING!** Keep both new and used print cartridges out of the reach of children.

Accessibility

Your HP printer provides a number of features that make it accessible for people with disabilities.

Visual

The printer software is accessible for users with visual impairments or low vision through the use of Windows accessibility options and features. It also supports most assistive technology such as screen readers, Braille readers, and voice-to-text applications. For users who are color blind, colored buttons and tabs used in the software and on the HP printer have simple text or icon labels that convey the appropriate action.

Mobility

For users with mobility impairments, the printer software functions can be executed through keyboard commands. The software also supports Windows accessibility options such as StickyKeys, ToggleKeys, FilterKeys, and MouseKeys. The printer doors, buttons, paper trays, and paper guides can be operated by users with limited strength and reach.

Support

For more details about the accessibility of this product and HP's commitment to product accessibility, visit HP's Web site at: www.hp.com/accessibility.

Contents

1	Welcome	5
2	Special features	6
3	Get started	
	Printer at a glance	7
	Power button and light	8
	Paper tray	8
	Unfold the paper tray	9
	Use the paper tray	10
	Print cartridges	10
	Replace print cartridges	10
	Ink-backup mode	11
	Ink-backup mode output	12
	Exit ink-backup mode	12
4	Connect the printer	
	USB	13
5	Print photos	
	Print borderless photos	14
	Print photos with a border	16
	HP Real Life Technologies photo fix	17
	Exif Print	17
	Store and handle photo paper	18
	Save money when printing photos	18
6	Print other documents	
	Print e-mail	19
	Print documents	20
	Print letters	21
	Print envelopes	22
	Print postcards	23
	Print index cards and other small media	24
	Print labels	25
	Print CD/DVD tattoos	25
	Print transparencies	27
	Print brochures	27
	Print greeting cards	28
	Print booklets	29
	Print posters	31
	Print iron-on transfers	32
7	Printing tips	
	Print a test page	34

Printing shortcuts.....	34
Create printing shortcuts.....	35
Set the page order.....	35
Fast/Economical printing.....	36
Print multiple pages on a single sheet of paper.....	36
Print in grayscale.....	36
Two-sided printing.....	37
Print preview.....	37
Set a custom paper size.....	38
Select a paper type.....	38
Change the print speed or quality.....	38
Print resolution.....	39
Maximum dpi.....	39
Resize a document.....	40
Bound two-sided documents.....	40
8 Printer software	
Make the HP Deskjet the default printer.....	42
Set default print settings.....	42
Printer Properties dialog box.....	43
What's This? help.....	44
Ink Status window.....	44
Download printer software updates.....	45
9 Maintenance	
Install print cartridges.....	46
Print cartridges.....	46
Selection numbers.....	46
Printing with one print cartridge.....	47
Installation instructions.....	47
Align the print cartridges.....	50
Automatically clean print cartridges.....	50
View estimated ink levels.....	50
Maintain the printer body.....	51
Remove ink from your skin and clothing.....	51
Manually clean print cartridges.....	51
Maintain print cartridges.....	53
Print cartridge storage and handling.....	53
Print cartridge protector.....	53
Printer Toolbox.....	54
10 Troubleshooting	
Error messages.....	55
Print cartridge error messages.....	55
Other error messages.....	56
Installation problems.....	56
Power light is on or flashing.....	58
What the flashing light means.....	59
If an error message appears.....	59
If no error message appears.....	59

Contents

Printer does not print.....	59
Verify the following.....	59
Check the printer cable connection.....	60
Printer is stalled.....	61
If the printer still does not print.....	61
Document prints slowly.....	61
Print cartridge problems.....	62
Paper problems.....	65
Paper jam.....	65
Out of paper message.....	67
Printer prints on multiple sheets at once.....	67
Photos do not print correctly.....	68
Check the paper tray.....	68
Check the printer properties.....	68
Problems with borderless documents.....	68
Borderless printing guidelines.....	68
Image is printed at an angle.....	69
Fading occurs on the edges of a photo.....	69
Photo has an unwanted border.....	69
For small photo paper.....	70
For small photo paper with a tear-off tab.....	70
Print quality is poor.....	71
Document is misprinted.....	72
Text and images are misaligned.....	73
Document is printed off-center or at an angle.....	73
Parts of the document are missing or printed in the wrong place.....	73
Envelope is printed at an angle.....	73
Document does not reflect the new print settings	73
If you continue to have problems.....	73
A HP support	
Ink cartridge warranty information.....	74
Support process.....	74
HP support by phone.....	75
Phone support period.....	75
Placing a call.....	75
After the phone support period.....	75
B Order supplies	
Order paper or other media.....	76
Order print cartridges.....	76
Order other supplies.....	76
C Technical information	
Printer specifications.....	78

Environmental product stewardship program.....	78
Paper use.....	79
Plastics.....	79
Material safety data sheets.....	79
Recycling program.....	79
HP inkjet supplies recycling program.....	79
Energy consumption.....	79
Disposal of Waste Equipment by Users in Private Households in the European Union....	80
Regulatory notices.....	81
FCC statement.....	81
LED indicator statement.....	81
Notice to users in Korea.....	81
VCCI (Class B) compliance statement for users in Japan.....	81
Notice to users in Japan about power cord.....	82
Index.....	83

1 Welcome

Welcome to the HP Deskjet D1400 Printer series Help. For details on how to use your computer and the printer together, see the following table and select an appropriate topic. You can also use the table of contents pane on the left to locate information.

 **NOTE:** For information about installing the software, see the Setup Guide that came with the printer.



Section	Description
Special features	Learn about some of the printer's special features.
Get started	Learn how to operate the printer and use and replace the print cartridges.
Connect the printer	Learn how to connect the printer to your computer.
Print photos	Learn how to print photos, adjust the appearance of photos before you print, install a photo print cartridge, store and handle photo paper, and share photos with friends and family.
Print other documents	Learn how to print a variety of documents, including e-mail, greeting cards, envelopes, labels, posters, booklets, transparencies, and iron-on media.
Printing tips	Learn how to use printing shortcuts, select a paper type, change the print resolution, set the page order, print multiple pages on a single sheet, preview a document, and use two-sided printing.
Printer software	Learn how to make the HP Deskjet the default printer, set default print settings, and download printer software updates.
Maintenance	Learn how to install and care for print cartridges, view how much ink is left in a print cartridge, print a test page, and remove ink stains.
Troubleshooting	Find a solution to a hardware or software problem.
HP support	Find out how to contact HP support.
Order supplies	Order supplies for the printer.
Specifications	Learn about the paper capacity, requirements, and other specifications for the printer.
HP inkjet supplies recycling program	Find out how to recycle print cartridges.

2 Special features

Congratulations! You have purchased an HP Deskjet printer that is equipped with several exciting features:


- **User friendly:** Easy to install and operate.
- **Borderless printing:** Print 4 x 6 inch photos to the edges of the paper by using the [borderless](#) printing feature.
- **Ink level indicator:** Know the approximate ink level of each print cartridge with the onscreen Ink Status window. For information, see [View estimated ink levels](#).
- **Ink-backup mode:** Continue printing with one print cartridge when the other print cartridge has run out of ink. For information, see [ink-backup mode](#).

3 Get started


- [Printer at a glance](#)
- [Power button and light](#)
- [Paper tray](#)
- [Print cartridges](#)
- [Ink-backup mode](#)

Printer at a glance


Click the links below to learn about the printer features.

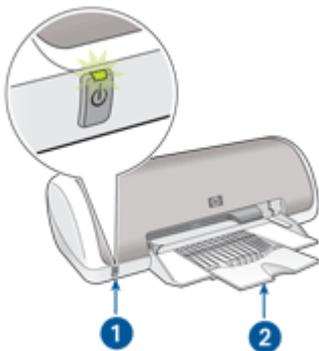

- | | |
|---|--|
| 1 | Power button and light |
| 2 | Paper tray |

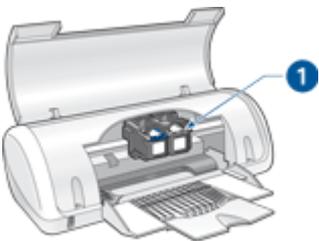

- | | |
|---|----------------------------------|
| 1 | Print cartridges |
|---|----------------------------------|

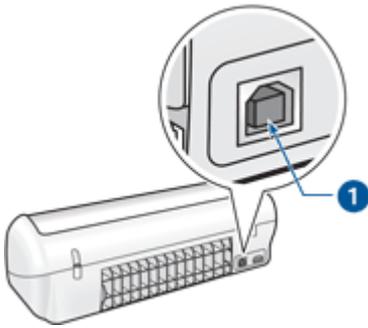

1 | [USB port](#)

Power button and light

Use the Power button to turn the printer on and off. It can take a few seconds for the printer to turn on after you press the Power button.



1 | Power button and light

The Power light flashes when the printer is processing.

△ **CAUTION:** Always use the Power button to turn the printer on and off. Using a power strip, surge protector, or a wall-mounted switch to turn the printer on and off might cause printer failure.

Paper tray


The fold-out paper tray holds paper and other media to be printed. Unfold the paper tray before printing.

- [Unfold the paper tray](#)
- [Use the paper tray](#)


Unfold the paper tray

To unfold the paper tray


1. Raise the printer cover.

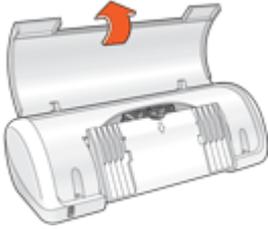


2. Lower the paper tray.

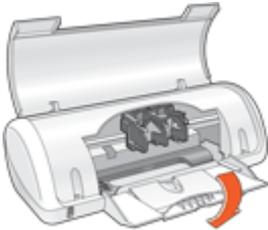

3. Fold out the tray extension.

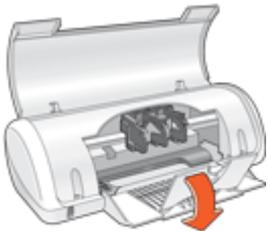


4. Lower the printer cover.

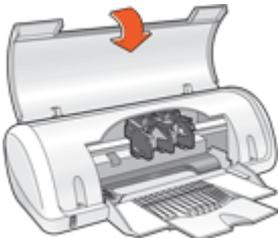

Use the paper tray

Print on different sizes of media by sliding the paper guide to the right or to the left. The printer deposits printed pages on the top of the paper tray.

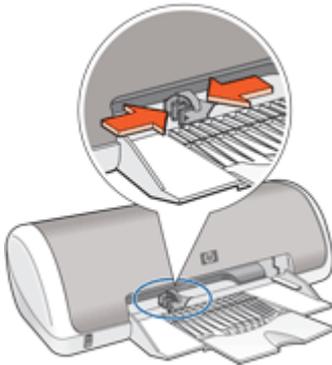

Print cartridges

Two print cartridges can be used with the printer.



1	Tri-color print cartridge
2	Black print cartridge

 **NOTE:** Your printer might be packaged with only a tri-color print cartridge. For better results, install a black print cartridge in addition to the tri-color print cartridge. You can print without a black print cartridge but doing so can cause the printer to print more slowly and printed colors to differ from those you would see if a black print cartridge and a tri-color print cartridge were installed.

For information on ordering print cartridges, see [Order supplies](#).

Replace print cartridges



When buying print cartridges, look for the print cartridge selection number.

You can find the selection number in three places:

- Selection number label: Look at the label on the print cartridge that you are replacing.



1	Selection number label
---	------------------------

- Printer documentation: For a list of print cartridge selection numbers, see the reference guide that came with the printer.
- Print Cartridge Ordering Information dialog box: For a list of print cartridge selection numbers, open the printer [Toolbox](#), click the **Estimated Ink Level** tab, and then click the **Print Cartridge Information** button.

If a print cartridge runs out of ink, the printer can operate in ink-backup mode. For more information, see [Ink-backup mode](#).

For information about installing a replacement print cartridge, see [Installation instructions](#).


Ink-backup mode

In the ink-backup mode, the printer operates with only one print cartridge. The ink-backup mode is initiated when a print cartridge is removed from the print cartridge cradle.

 **NOTE:** When the printer operates in ink-backup mode, a message is displayed on screen. If the message is displayed and two print cartridges are installed in the printer, verify that the protective piece of plastic tape has been removed from each print cartridge. When plastic tape covers the print cartridge contacts, the printer cannot detect that the print cartridge is installed.

To remove plastic tape from a print cartridge

- ▲ Hold the print cartridge so that the copper strips are on the bottom and facing toward the printer, and then carefully remove the plastic tape.

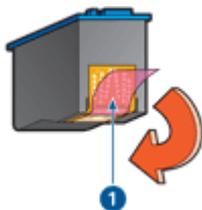

1	Remove plastic tape
---	---------------------

- △ **CAUTION:** Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections. Do not remove the copper strips. They are required electrical contacts.
-

For more information about ink-backup mode, see the following topics:

- [Ink-backup mode output](#)
- [Exit ink-backup mode](#)

Ink-backup mode output

Printing in ink-backup mode slows the printer and affects the quality of printouts.

Installed print cartridge	Result
Black print cartridge	Colors print as grayscale.
Tri-color print cartridge	Colors print but black is grayed and is not a true black.

Exit ink-backup mode

Install two print cartridges in the printer to exit ink-backup mode.

For information about installing a print cartridge, see [Installation instructions](#).


4 Connect the printer

- [USB](#)

USB

The printer connects to the computer with a universal serial bus (USB) cable.

 **NOTE:** For best printing performance, use a USB 2.0 compatible cable.

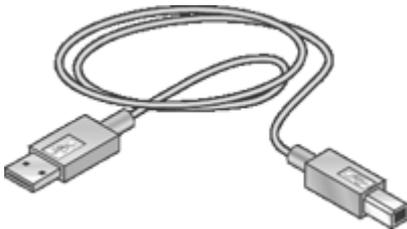

For instructions about connecting the printer with a USB cable, see the Setup Guide that came with the printer.

 **NOTE:** A USB cable might not be packaged with your printer.

5 Print photos

The printer software offers several features that make printing digital photos easier and improve photo quality.

Learn how to print photos



Print a [borderless photo](#).



Print a photo with a [border](#).

Learn how to perform other photo printing tasks

- Print an [Exif Print-formatted](#) photo if you have Exif Print-enabled software.
- Prevent photo paper from curling by following the [photo paper storage and handling guidelines](#).
- Use HP Everyday Photo Paper to [save money and ink](#) when printing photos.

Print borderless photos

To print borderless photos, use 4 x 6 inch photo paper with a 0.5 inch tab (10 x 15 cm with 1.25 cm tab). The photo prints without borders on three sides and with a small border on the bottom edge that you tear off to make the photo completely borderless.

Guidelines

- Use 4 x 6 inch photo paper with a 0.5 inch tab (10 x 15 cm with 1.25 cm tab).
- Do not print borderless photos in ink-backup mode. Always have two print cartridges installed in the printer.
For more information, see [Ink-backup mode](#).
- Open the file in a software program such as HP Photosmart Software and resize the photo. Ensure that the size corresponds to the paper size that you want to use.
- For maximum fade resistance, use HP Premium Plus Photo Paper.
- Verify that the photo paper that you are using is flat. For information about preventing photo paper from curling, see the [photo paper storage instructions](#).
- Do not exceed the paper tray capacity: 15 sheets of photo paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Verify that the photo paper is flat.
3. Place the photo paper in the right side of the tray. The side to be printed on should face down and the short edge should point towards the printer.
If you are using photo paper that has a tear-off tab, verify that the tab is pointing away from the printer.

4. Push the paper into the printer until it stops.
5. Slide the paper guide firmly against the edge of the paper.



Print

 **NOTE:** If your software program includes a photo printing feature, follow the instructions that are provided with the software program. Otherwise, follow these instructions.

1. Open the photo in a software program that allows editing, such as HP Photosmart Software.
2. Open the [Printer Properties dialog box](#).
3. Click the **Printing Shortcuts** tab.
4. In the **Printing Shortcuts** list, click **Photo Printing-Borderless**, and then select the following options:
 - **Print Quality: Normal or Best**

 **NOTE:** For maximum dpi quality, go to the **Features** tab, and then click **Maximum dpi** in the **Print Quality** drop-down list.

- **Paper Type:** An appropriate photo paper type
 - **Paper Size:** An appropriate borderless photo paper size
 - **Orientation: Portrait or Landscape**
5. If necessary, change the [HP Real Life Technologies photo fix](#) setting.
 6. Select any other print settings that you want, and then click **OK**.
If you printed on photo paper with a tear-off tab, remove the tab to make the document completely borderless.



Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.


Print photos with a border

Guidelines


- For maximum fade resistance, use HP Premium Plus Photo Paper.
 - Verify that the photo paper that you are using is flat. For information about preventing photo paper from curling, see the [photo paper storage instructions](#).
 - Do not exceed the paper tray capacity: 15 sheets of photo paper.
-

Prepare to print

1. Slide the paper guide all the way to the left.
2. Verify that the photo paper is flat.
3. Place the photo paper in the right side of the tray. The side to be printed on should face down and the short edge should point towards the printer.
4. Push the paper into the printer until it stops.
5. Slide the paper guide firmly against the edge of the paper.

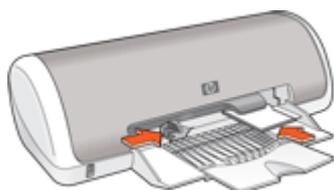

Small photos

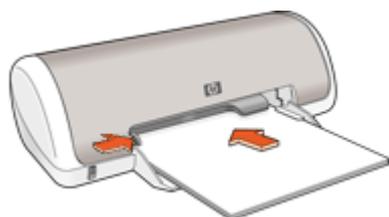

Large photos

Print



NOTE: If your software program includes a photo printing feature, follow the instructions that are provided with the software program. Otherwise, follow these instructions.

1. Open the photo in a software program that allows editing, such as HP Photosmart Software.
2. Open the [Printer Properties dialog box](#).
3. Click the **Printing Shortcuts** tab.

4. In the **Printing Shortcuts** list, click **Photo Printing-with white borders**, and then select the following options:

- **Print Quality: Normal or Best**



NOTE: For maximum dpi quality, go to the **Features** tab, and then click **Maximum dpi** in the **Print Quality** drop-down list.

- **Paper Type:** An appropriate photo paper type
 - **Paper Size:** An appropriate photo paper size
 - **Orientation: Portrait or Landscape**
5. If necessary, change the [HP Real Life Technologies photo fix](#) setting.
 6. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

HP Real Life Technologies photo fix

HP Real Life Technologies enhance the quality of your printed photos.

In most cases, you do not need to change the **Basic** default print setting. The Basic setting sharpens the images that you print, and improves the quality and clarity of low resolution images, such as those downloaded from the Internet.

You can change the setting to **Full** if the images that you print are under exposed or over exposed, contain dark areas or red eye, or have colors that appear washed out.

You can also select the **Off** setting if you prefer to edit the image manually in a software program such as HP Photosmart Software.

To change the HP Real Life Technologies setting

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the HP Real Life Technologies **Photo fix** drop-down list, select the appropriate setting for the photo you are printing.

Exif Print

Exif Print (Exchangeable Image File Format 2.2) is an international digital imaging standard that simplifies digital photography and enhances printed photos. When a photo is taken with an Exif Print-enabled digital camera, Exif Print captures information such as exposure time, type of flash, and color saturation, and stores it in the image file. The printer software then uses this information to automatically perform image-specific enhancements to create outstanding photos.

To print Exif Print-enhanced photos, you must have the following items:

- A digital camera that supports Exif Print
- Exif Print-enabled photo software, such as HP Photosmart Software

To print Exif Print-enhanced photos

1. Open the photo in an Exif Print-enabled software program that allows editing, such as HP Photosmart Software.
2. Open the [Printer Properties dialog box](#).
3. Click the **Features** tab.
4. In the **Paper Type** drop-down list, click **More**, and then select the appropriate photo paper type.
5. In the **Print Quality** drop-down list, click **Normal**, **Best**, or **Maximum dpi**.
6. Select any other print settings that you want, and then click **OK**.
The printer software automatically optimizes the printed image.

Store and handle photo paper

Follow these instructions to maintain the quality of HP brand photo paper.

Storage

- Keep unused photo paper in a sealed plastic bag. Store the packaged photo paper on a flat surface in a cool place.
- When you are ready to print, remove only the paper that you plan to use immediately from the plastic bag. When you have finished printing, return any unused photo paper to the plastic bag.
- Do not leave unused photo paper in the paper tray. The paper might start to curl, which can reduce the quality of your photos.

Handling

- Always hold photo paper by its edges. Fingerprints on photo paper can reduce print quality.
- If the corners of the photo paper curl more than 10 mm (0.4 inch), flatten the paper by putting it in the storage bag, and then gently bending it in the opposite direction of the curl until the paper lies flat.
Photo paper should be flat before it is printed on.

Save money when printing photos

To save money and ink when printing photos, use HP Everyday Photo Paper and set the print quality to **Normal**.

HP Everyday Photo Paper is designed to create quality photos with less ink.



NOTE: For higher-quality photos, use HP Premium Plus Photo Paper and set the print quality to **Best** or **Maximum dpi**.

6 Print other documents



[E-mail](#)



[Documents](#)



[Letters](#)



[Envelopes](#)



[Postcards](#)



[Index cards](#)



[Labels](#)



[CD/DVD tattoos](#)



[Transparencies](#)



[Brochures](#)



[Greeting cards](#)



[Booklets](#)



[Posters](#)



[Iron-on transfers](#)

Printing tips: Minimize your cost and effort while maximizing the quality of your printouts with [printing tips](#).

Printer software: Learn about the [printer software](#).

Print e-mail


Guidelines

Do not exceed the paper tray capacity: 80 sheets of plain paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.

3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

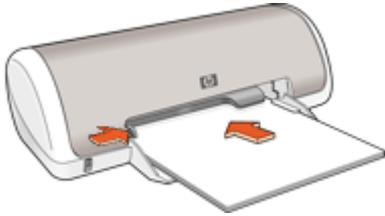

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **General Everyday Printing** or **Fast/Economical Printing**, and then specify the following print settings:
 - **Paper Type:** Plain paper
 - **Paper Size:** An appropriate paper size
4. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print documents

Guidelines

- For draft documents, use [Fast/Economical printing](#).
- Save paper with [two-sided printing](#).
- Do not exceed the paper tray capacity: 80 sheets of paper.


Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.

3. Push the paper into the printer until it stops.

 **NOTE:** The paper will extend over the edge of the tray.

4. Slide the paper guide firmly against the edge of the paper.

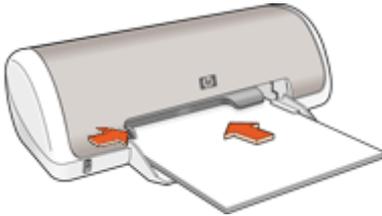

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **General Everyday Printing**, and then specify the following print settings:
 - **Paper Type: Plain paper**
 - **Paper Size:** An appropriate paper size
4. Select the following print settings:
 - **Print Quality** if you want a print quality other than Normal
 - **Print On Both Sides** if you want to print on both sides of the paper
For more information, see [Two-sided printing](#).
5. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print letters

Guidelines


- For information about printing an envelope for your letter, see [envelopes](#).
- Do not exceed the paper tray capacity: 80 sheets of paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.

 **NOTE:** If you are using letterhead paper, the letterhead should face down and point toward the printer.

3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

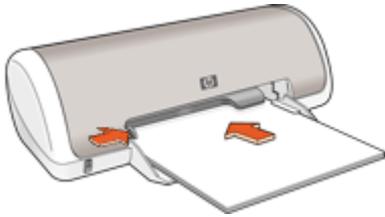

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Presentation Printing**, and then specify the following print settings:
 - **Paper Type: Plain paper**
 - **Paper Size:** An appropriate paper size
4. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print envelopes

Guidelines


- Avoid using envelopes that have the following features:
 - Clasps or windows
 - Thick, irregular, or curled edges
 - Shiny or embossed coatings
 - Wrinkles, tears, or other damage
- You can print a single envelope or multiple envelopes.
- Align the envelope edges before inserting the envelopes in the paper tray.
- Do not exceed the paper tray capacity: 10 envelopes.



Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the envelopes in the right side of the tray. The side to be printed on should face down. The flap should be on the left side.

3. Push the envelopes into the printer until they stop.
4. Slide the paper guide firmly against the edge of the envelopes.

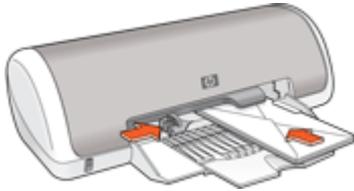

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then select the following print settings:
 - **Paper Type: Plain paper**
 - **Size:** An appropriate envelope size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.


Print postcards

Guidelines

Do not exceed the paper tray capacity: 20 postcards.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the cards in the right side of the tray. The side to be printed on should face down and the short edge should point toward the printer.
3. Push the cards into the printer until they stop.
4. Slide the paper guide firmly against the edge of the cards.

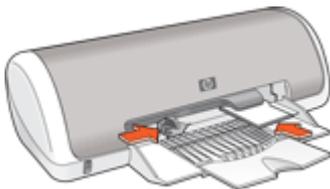

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Paper Type:** Click **More**, click **Specialty Papers**, and then select an appropriate card type.
 - **Print Quality:** **Normal** or **Best**
 - **Size:** An appropriate card size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

 **NOTE:** If an out-of-paper message is displayed, see [Out of paper message](#) for help in resolving the problem.


Print index cards and other small media

Guidelines

Do not exceed the paper tray capacity: 20 cards.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the cards in the right side of the tray. The side to be printed on should face down and the short edge should point toward the printer.
3. Push the cards into the printer until they stop.
4. Slide the paper guide firmly against the edge of the cards.

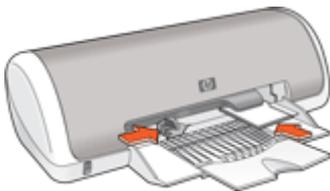

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Paper Type:** **Plain paper**
 - **Size:** An appropriate card size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

 **NOTE:** If an out-of-paper message is displayed, see [Out of paper message](#) for help in resolving the problem.


Print labels

Guidelines

- Use only paper, plastic, or clear labels that are designed specifically for inkjet printers.
- Use only full sheets of labels.
- Avoid using labels that are sticky, wrinkled, or pulling away from the protective backing.
- Do not exceed the paper tray capacity: 15 sheets of labels (use only Letter or A4-size sheets).

Prepare to print

1. Slide the paper guide all the way to the left.
2. Fan the edges of the label sheets to separate them, and then align the edges.
3. Place the label sheets in the right side of the tray. The label side should face down.
4. Push the sheets into the printer until they stop.
5. Slide the paper guide firmly against the edge of the sheets.

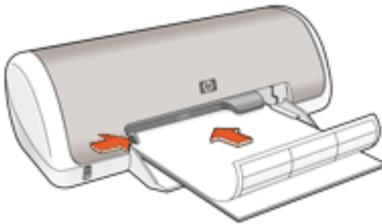

Print

 **NOTE:** If your software program includes a label printing feature, follow the instructions that are provided with the software program. Otherwise, follow the instructions below.

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **General Everyday Printing**, and then specify the following print settings:
 - **Paper Type:** Plain paper
 - **Paper Size:** An appropriate paper size
4. Click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print CD/DVD tattoos


 **NOTE:** This feature might not be available in your country/region.

Guidelines

- See the instructions that are included with the CD/DVD tattoo for the most current printing tips.
- To avoid damaging the printer, do not feed a CD/DVD tattoo through the printer more than once.
- Make sure the CD/DVD tattoo covers the entire backing sheet with no exposed spaces. Separating any part of the CD/DVD tattoo from the protective backing sheet before printing could damage the printer.
- Avoid using a CD/DVD tattoo that is pulling away from the protective backing, or that is wrinkled, curled, or damaged in any way.
- Do not exceed the input tray capacity: 1 sheet of CD/DVD tattoo paper.

Prepare to print

1. Raise the output tray, and then remove all paper from the input tray.
2. Slide the paper guide all the way to the left.
3. Place one sheet of CD/DVD tattoo paper in the right side of the input tray. The side to be printed on should face down.
4. Push the paper into the printer until it stops.
5. Slide the paper guide firmly against the edge of the paper.

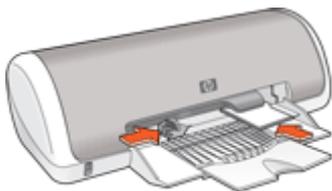

6. Lower the output tray.

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the print settings in the order shown below:
 - **Size:** 5x7in.
 - **Paper Type:** Click **More**, click **Specialty Papers**, and then click **HP CD/DVD Tattoo**.
 - **Print Quality:** **Best**



NOTE: If you are using the HP Photosmart Essential Software, click the **Advanced** tab. Then expand **Printer Features**, and set **Mirror Image** to **On**.

3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.


Print transparencies

Guidelines

- For great results, use HP Premium Inkjet Transparency Film.
- Do not exceed the paper tray capacity: 20 transparencies.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the transparencies in the right side of the tray. The side to be printed should face down and the adhesive strip should face up and toward the printer.
3. Carefully push the transparencies into the printer until they stop, so that the adhesive strips do not catch on one another.
4. Slide the paper guide firmly against the edge of the transparencies.

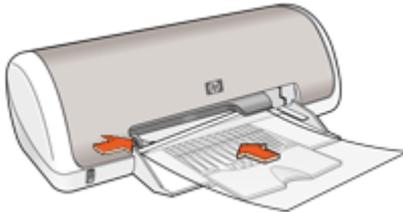

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Presentation Printing**, and then specify the following print settings:
 - **Paper Type:** Click **More**, and then select an appropriate transparency film.
 - **Paper Size:** An appropriate paper size
4. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print brochures


Guidelines

- Open the file in a software program and assign the brochure size. Ensure that the size corresponds to the paper size on which you want to print the brochure.
- Do not exceed the paper tray capacity: 30 sheets of brochure paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the paper in the right side of the tray. The side to be printed on should face down.

3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

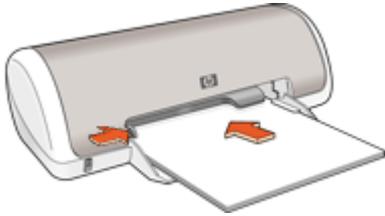

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. Specify the following print settings:
 - **Print Quality: Best**
 - **Paper Type:** Click **More**, and then select an appropriate HP inkjet paper.
 - **Orientation: Portrait or Landscape**
 - **Size:** An appropriate paper size
 - **Two-sided printing: Manual**For more information, see [Two-sided printing](#).
4. Click **OK** to print.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print greeting cards


Greeting cards

- Unfold prefolded cards, and then place them in the paper tray.
- For great results, use HP Greeting Card Paper.
- Do not exceed the paper tray capacity: 20 cards.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Fan the edges of the greeting cards to separate them, and then align the edges.
3. Place the greeting cards in the right side of the tray. The side to be printed on should face down.

4. Push the cards into the printer until they stop.
5. Slide the paper guide firmly against the edge of the cards.

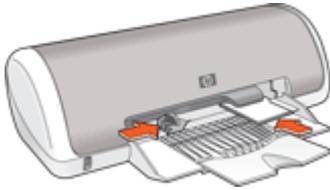

Print

 **NOTE:** If your software program includes a greeting card printing feature, follow the instructions that are provided with the software program. Otherwise, follow the instructions below.


1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Print Quality:** **Normal**
 - **Paper Type:** Click **More**, and then select an appropriate card type.
 - **Size:** An appropriate card size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print booklets

Booklet printing automatically arranges and resizes the pages of a document so that when the document is folded into a booklet, the page order is correct.

For example, when a four-page booklet is printed on both sides of the paper, the pages are reordered and printed like this:

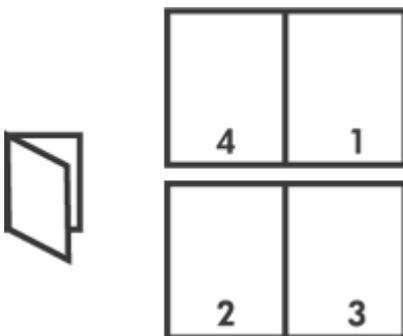


Guidelines

Do not exceed the paper tray capacity: 80 sheets of paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.
3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

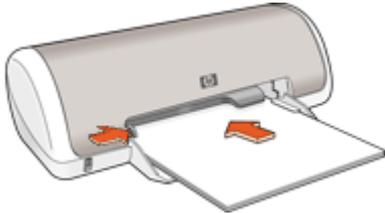

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Two-sided (Duplex) Printing**.
4. In the **Print On Both Sides** drop-down list, select one of the following binding options:
 - **Left Edge Booklet**
 - **Right Edge Booklet**
5. Select any other print settings that you want, and then click **OK**.
6. When prompted, reload the printed pages in the paper tray as shown below.



7. Click **Continue** to finish printing the booklet.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print posters

Guidelines


- For poster printing, sections of the poster are automatically arranged on individual sheets that can be taped together. After the sections of a poster have been printed, trim the edges of the sheets and tape the sheets together.



- Do not exceed the paper tray capacity: 80 sheets of paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.
3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

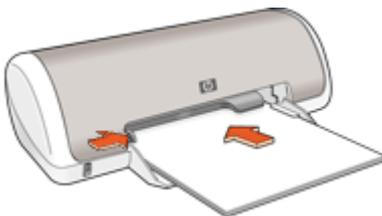

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Paper Type:** Plain paper
 - **Orientation:** Portrait or Landscape
 - **Size:** An appropriate paper size
3. Click the **Advanced** tab, and then click **Printer Features**.
4. In the **Poster Printing** drop-down list, select the number of sheets for the poster.
5. Click the **Select Tiles** button.

6. Check that the number of tiles that are selected matches the number of sheets for the poster, and then click **OK**.
7. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print iron-on transfers

Guidelines


- When printing a mirror image, the text and the pictures are horizontally reversed from what is displayed on the computer screen.



- Do not exceed the paper tray capacity: 10 iron-on transfers.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the iron-on transfer paper in the right side of the tray. The side to be printed on should face down.
3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

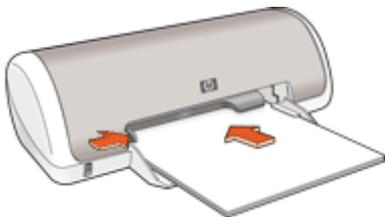

Print

 **NOTE:** If your software program includes an iron-on transfer printing feature, follow the instructions that are provided with the software program. Otherwise, follow the instructions below.

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Print Quality:** **Normal** or **Best**
 - **Paper Type:** Click **More**, click **Specialty Papers**, and then click **Other specialty paper**.
 - **Size:** An appropriate paper size
3. Click the **Advanced** tab.
4. Click **Printer Features**, and then set **Mirror Image** to **On**.



NOTE: Some iron-on transfer software programs do not require you to print a mirror image.

5. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

7 Printing tips

Check your printer

- [Connect the printer](#) to your computer.
- [Print a test page](#).

Save time

- Use the [Printing Shortcuts](#) tab.
- Set the [order](#) that the pages print.

Save money

- Use [Fast/Economical printing](#).
- Print [multiple pages on a single sheet of paper](#).
- Print in [grayscale](#).
- Print a [two-sided document](#).
- Use [HP Everyday Photo Paper](#) to save money and ink when printing photos.

Enhance the quality of prints

- [Preview](#) the document before printing it.
- Print on a [custom paper size](#).
- [Select a paper type](#).
- Change the [print speed and quality](#).
- View the [print resolution](#).
- Achieve the highest printing resolution with [Maximum dpi](#).
- [Resize](#) the document as needed.

Print a test page

You can print a test page to verify that the printer can print from the computer correctly.

To print a test page

1. Load Letter or A4 unused plain white paper in the paper tray.
2. Open the printer [Toolbox](#).
3. On the Device Services tab, click the **Print a Test Page** button.
The Print a Test Page dialog box is displayed.
4. Click the **Print Page** button.
Recycle or discard the test page.

Printing shortcuts

Use printing shortcuts to print with print settings that you use often. The printer software has several specially designed printing shortcuts that are available in the Printing Shortcuts list.

 **NOTE:** When you select a printing shortcut the appropriate printing options are automatically displayed. You can leave them as is or change them.

Use printing shortcuts

Use the Printing Shortcuts tab for the following print tasks:

- [General everyday printing](#)
- [Photo printing–borderless](#)
- [Photo printing–with white borders](#)
- [Fast/Economical printing](#)
- [Presentation printing](#)
- [Two-sided, duplex, printing](#)

You can also [create](#) your own printing shortcuts.

Create printing shortcuts

In addition to the printing shortcuts that are available in the Printing Shortcuts list, you can create your own printing shortcuts.

If you frequently print on transparency film, for example, you can create a printing shortcut by selecting the Presentation Printing shortcut, changing the paper type to HP Premium Inkjet Transparency Film, and then saving the modified shortcut under a new name; for example, Transparency Presentations. After creating the printing shortcut, simply select it when printing on transparency film rather than changing the print settings each time.

To create a printing shortcut

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click a printing shortcut.
The print settings for the selected printing shortcut are displayed.
4. Change the print settings to those you want in the new printing shortcut.
5. In the **Type new shortcut name here** box, type a name for the new printing shortcut, and then click **Save**.
The printing shortcut is added to the list.

To delete a printing shortcut

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click the printing shortcut that you want to delete.
4. Click **Delete**.
The printing shortcut is removed from the list.

 **NOTE:** Only the shortcuts that you have created can be deleted. The original HP shortcuts cannot be deleted.

Set the page order

The page order determines the order in which your multipage documents print.

To set the page order

1. Open the [Printer Properties dialog box](#).
2. Click the **Advanced** tab.
3. Click **Document Options**, and then click **Layout Options**.
4. Select one of the following **Page Order** options:
 - **Front to back**: Prints the first page of the document last. This setting saves time because you do not have to reorder the printed pages. It is the appropriate setting for most print jobs.
 - **Back to front**: Prints the last page of the document last.
5. Select any other print settings that you want, and then click **OK**.

Fast/Economical printing

Use Fast/Economical printing to produce draft-quality printouts quickly.

To use Fast/Economical printing

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Fast/Economical Printing**.
4. Specify the print settings that you want, and then click **OK**.

Print multiple pages on a single sheet of paper

Use the printer software to print multiple pages of a document on a single sheet of paper. The printer software automatically resizes the document text and images to fit on the printed page.

To print multiple pages on a single sheet of paper

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Pages Per Sheet** drop-down list, select the number of pages that you want to appear on each sheet of paper.
4. In the **Page Order** drop-down list, select a layout for the pages.
A preview of the page order is displayed at the top of the Features tab.
5. Select any other print settings that you want, and then click **OK**.

Print in grayscale

To print in grayscale


1. Open the [Printer Properties dialog box](#).
2. Click the **Color** tab.
3. Click **Print In Grayscale**.
4. In the **Print In Grayscale** drop-down list, select an option.
5. Select any other print settings that you want, and then click **OK**.

Two-sided printing

Use two-sided printing, also called duplexing, to print on both sides of the paper. Printing on both sides of the paper is not only economical, but environmentally conscious as well.

To print a two-sided document

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** drop-down list, click **Two-sided (Duplex) Printing**.
4. In the **Print On Both Sides** drop-down list, click **Manually**.
5. Select any other print settings that you want, and then click **OK**.
The printer prints the odd-numbered pages first.
6. After the odd-numbered pages have been printed, reload the printed pages with the printed side facing up.

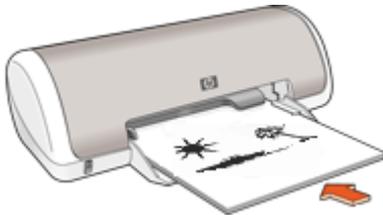

7. Click **Continue** to print the even-numbered pages.

To create a two-sided document with a binding, see [Bound two-sided documents](#).

General Everyday printing

Use General Everyday printing to print documents quickly.

- [Documents](#)
- [E-mail](#)

Print preview

Use the print preview function to view a printout on your computer before printing a document. If the printout does not look correct, you can cancel the print job and adjust the print settings as needed.

To preview a printed document

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** or the **Color** tab.
3. Select the **Show preview before printing** check box.

4. Select any other print settings that you want, and then click **OK**. Before the document prints, a preview is displayed.
5. Do one of the following:
 - Click **OK** to print the document.
 - Click **Cancel** to cancel the print job. Adjust the print settings as needed before printing the document.

Set a custom paper size

Use the **Custom Paper Size** dialog box to print on a special paper size.



NOTE: This feature is not available for all paper types.

To define a custom paper size

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Size** drop-down list, select **Custom**. The Custom Paper Size dialog box is displayed.
4. In the **Name** box, type a name for the custom paper size.
5. In the **Width** and **Length** boxes, type the dimensions of the custom paper size. The minimum and maximum dimensions are displayed beneath Width and Length.
6. Click the unit of measurement: **Inches** or **Millimeters**.
7. Click **Save** to save the custom paper size.
8. Click **OK** to exit the **Custom Paper Size** dialog box.
9. To use the custom paper size, select its name in the **Size** drop-down list.

Select a paper type

When printing a higher-quality document, HP recommends that you select a specific paper type.

To select a specific paper type

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. Click **More** in the **Paper Type** drop-down list, and then select the paper type that you want to use.
4. Click **OK**.
5. Select any other print settings that you want, and then click **OK**.

Change the print speed or quality

The HP Deskjet automatically chooses a print quality and speed setting depending on the paper type setting you select. You can also change the print quality setting to customize the speed and quality of the print process.

Print quality settings

- **Fast Draft** produces draft-quality output at the fastest printing speed, while using the least amount of ink.
- **Fast Normal** produces higher quality output than the Fast Draft setting and prints more quickly than the Normal setting.
- **Normal** provides the best balance between print quality and speed and is appropriate for most documents.
- **Best** provides the best balance between high quality and speed and can be used for high quality prints. For most documents, the Best setting prints more slowly than the Normal setting.
- **Maximum dpi** optimizes the dots per inch (dpi) that the HP Deskjet prints. Printing in maximum dpi takes longer than printing with other settings and requires a large amount of disk space. For more information, see [Maximum dpi](#).

To select a print quality and speed

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Paper Type** drop-down list, select the type of paper that you have loaded.
4. In the **Print Quality** drop-down list, select the appropriate quality setting for your project.

Print resolution

The printer software displays the print resolution in dots per inch (dpi). The dpi varies according to the paper type and print quality that you select in the printer software.

To view the print resolution

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Paper Type** drop-down list, select the type of paper that you have loaded.
4. In the **Print Quality** drop-down list, select the appropriate print quality setting for your project.
5. Click the **Resolution** button to view the print resolution dpi.

Maximum dpi

Use maximum dpi mode to print high-quality, sharp images.

To get the most benefit from maximum dpi mode, use it to print high-quality images such as digital photographs. When you select the maximum dpi setting, the printer software displays the optimized dots per inch (dpi) that the HP Deskjet printer will print.

Printing in maximum dpi takes longer than printing with other settings and requires a large amount of disk space.

To print in Maximum dpi mode

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Paper Type** drop-down list, click **More**, and then select the appropriate paper type.
4. In the **Print Quality** drop-down list, click **Maximum dpi**.



NOTE: To view the maximum dpi that the HP Deskjet printer will print, click **Resolution**.

5. Select any other print settings that you want, and then click **OK**.

Resize a document

Use the printer software to print a document that is formatted for one paper size on another paper size. Doing this can be useful if you do not have the correct paper size available.

For example, if you have created a document that is formatted for letter-size paper, but you do not have any letter-size paper available, you can print the document on another paper size that is available.

To resize a document for a different paper size

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. Click **Scale to paper size**, and then select the target paper size in the drop-down list. The target paper size is the size of the paper on which you are printing, not the size for which the document was formatted.
4. Select any other print settings that you want, and then click **OK**.

Bound two-sided documents

If you want to bind printed pages into a book, you can adjust the print settings to accommodate the binding.

Bound two-sided documents can have a book binding (binding on the side) or a tablet binding (binding at the top). Book binding is the most common type of binding.

To print a two-sided document with a book binding

- ▲ Follow the [instructions](#) for basic two-sided printing.

To print a two-sided document with a tablet binding

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Two-sided printing** drop-down list, click **Manual**.
4. Select the following check boxes:
 - **Flip Pages Up**
 - **Preserve Layout**

5. Select any other print settings that you want, and then click **OK**.
The printer prints the odd-numbered pages first.
6. After the odd-numbered pages have been printed, reload the printed pages, with the printed side facing up according to the document orientation, portrait or landscape.



Figure 7-1 Portrait



Figure 7-2 Landscape

7. Click **Continue** to print the even-numbered pages.

Presentation printing

Use Presentation printing to print high-quality documents, including:

- [Letters](#)
- [Brochures](#)
- [Transparencies](#)

8 Printer software

- Make the HP Deskjet the [default printer](#).
- Set the [default print settings](#) for all documents.
- Use the [Printer Properties dialog box](#) to select printing options.
- Use the [What's This? help](#) to learn more about specific print settings.
- View the [Ink Status window](#) for the approximate ink level of each print cartridge.
- Download [printer software updates](#) for the latest features and improvements.

Make the HP Deskjet the default printer

You can set the HP Deskjet as the default printer to use from any software program. This means that the HP Deskjet is automatically selected in the printer drop-down list when you click **Print** from the **File** menu in a software program.

Windows 2000 users

1. On the Windows taskbar, click **Start**, point to **Settings**, and then click **Printers**.
2. Right-click the HP Deskjet icon, and then click **Set as Default Printer**.

Windows XP users

1. On the Windows taskbar, click **Start**, and then click **Printers and Faxes**.
2. Right-click the HP Deskjet icon, and then click **Set as Default Printer**.


Set default print settings

The HP Deskjet uses default print settings for all documents unless you specify other settings.

To save time when printing, set the default print settings to options that you use often. That way, you do not have to specify the options every time you use the printer.

To change the default print settings

1. Double-click the HP Digital Imaging Monitor icon on the right side of the Windows taskbar.

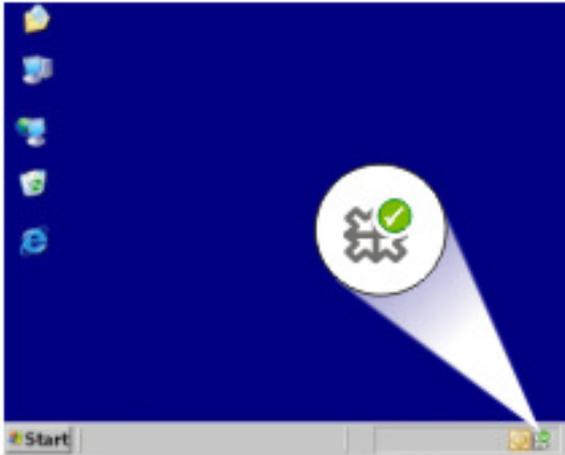

-
- | | |
|---|---------------------------------|
| 1 | HP Digital Imaging Monitor icon |
|---|---------------------------------|

The HP Solution Center is displayed.

2. In the HP Solution Center, click **Settings**, point to **Print Settings**, and then click **Printer Settings**.
3. Make changes to the print settings, and then click **OK**.

Printer Properties dialog box

The printer is controlled by software that is installed on your computer. Use the printer software, also known as the printer driver, to change the print settings for a document.

To change the print settings, open the Printer Properties dialog box.

 **NOTE:** The Printer Properties dialog box is also referred to as the Printing Preferences dialog box.

To open the Printer Properties dialog box

1. Open the file that you want to print.
2. Click **File**, click **Print**, and then click **Properties** or **Preferences**.
The Printer Properties dialog box is displayed.



NOTE: The path to the Printer Properties dialog box can vary depending on the software program you are using.

What's This? help

Use the [What's This? help](#) to learn about the features that you see on the Printer Properties dialog box.

What's This? help

Use What's This? help to learn more about the available printing options.

To use What's This? help

1. Move the cursor over the feature that you want to learn more about.
2. Click the right mouse button.
The What's This box is displayed.
3. Move the cursor over the **What's This?** box, and then click the left mouse button.
An explanation of the feature is displayed.

Ink Status window

The Ink Status window is displayed each time the printer prints a file. The window displays the approximate ink level of each print cartridge. To close the Ink Status window, click **Close**.



NOTE: This feature might not be available in your operating environment.

Print cartridge information and ordering

For print cartridge information and to link to HP's Web site for ordering print cartridges, click the **Print Cartridge Information** button.

Displaying the Ink Status window

If you do not want the Ink Status window to appear when you print, select the **Do not show this again** check box in the lower-left corner of the window.

If you previously chose not to show the Ink Status window but now want it to appear when you print, follow these steps:

1. For Windows 2000, click **Start**, and then click **Settings**. For Windows XP, click **Start**, and then click **Printers and Faxes**.
A list that includes the printers installed on your computer is displayed.
2. Highlight the printer name, and then right-click to display a list of options.
3. Click **Properties**.
The Printer Properties dialog box is displayed.
4. Click the **Device Settings** tab.
5. For **Display Ink Status Window**, click **On**, and then click **OK**.

Download printer software updates

Download the latest printer software update every few months to ensure you have the latest features and improvements.

To download a printer software update

1. Make sure you are connected to the Internet.
2. From the Windows **Start** menu, click **Programs** or **All Programs**, point to **HP**, and then click **HP Update**.
The HP Update window is displayed.
3. Click **Next**.
HP Update searches the HP Web site for printer software updates.
 - If the computer has the most recent version of the printer software installed, **No updates are available for your system at this time** is displayed in the HP Update window.
 - If the computer does not have the most recent version of the printer software installed, a list of options to download later versions of the software is displayed in the HP Update window.
4. If a software update is available, select the check box beside the update name.
5. Click **Install**.
6. Follow the onscreen instructions.

Download HP Photosmart Software

Installing the printer software update you download from the HP Web site does not update the HP Photosmart Software you might have installed on the computer. For information about updating the HP Photosmart Software, see the HP Photosmart Help.

9 Maintenance

- [Install print cartridges](#)
- [Align the print cartridges](#)
- [Automatically clean print cartridges](#)
- [View estimated ink levels](#)
- [Maintain the printer body](#)
- [Remove ink from your skin and clothing](#)
- [Manually clean print cartridges](#)
- [Maintain print cartridges](#)
- [Printer Toolbox](#)

Install print cartridges

When you need to replace print cartridges, make sure you have the correct print cartridges for your printer, and then install them in the print cartridge cradle.

- [Print cartridges](#)
- [Selection numbers](#)
- [Printing with one print cartridge](#)
- [Installation instructions](#)

Print cartridges

Always install the tri-color print cartridge in the left side of the print cartridge cradle.

Install the black print cartridge in the right side of the print cartridge cradle.

 **NOTE:** Your printer might be packaged with only a tri-color print cartridge. For better results, install a black print cartridge in addition to the tri-color print cartridge. You can print without a black print cartridge but doing so can cause the printer to print more slowly and printed colors to differ from those you would see if a black print cartridge and a tri-color print cartridge were installed.

To order print cartridges, go to www.hp.com. Choose your country/region, and then click **Buy** or **Online Shopping**.

Selection numbers

When buying replacement print cartridges, look for the print cartridge selection number.

You can find the selection number in three places:

- Selection number label: Look at the label on the print cartridge that you are replacing.



1	Selection number label
---	------------------------

- Printer documentation: For a list of print cartridge selection numbers, see the reference guide that came with the printer.
- Print Cartridge Information dialog box: For a list of print cartridge selection numbers, open the printer [Toolbox](#), click the **Estimated Ink Level** tab, and then click the **Print Cartridge Information** button.

Printing with one print cartridge

The printer can operate with only one print cartridge installed. For more information, see [Ink-backup mode](#).

Installation instructions

To install a print cartridge


1. Press the **Power** button to turn on the printer.
2. Open the printer cover.
The print cartridge cradle moves to the center of the printer.
3. Push down on the print cartridge.

4. Slide the print cartridge out of the cradle.




1	Press the Power button
2	Open the printer cover
3	Push down on the print cartridge
4	Slide the print cartridge out of the cradle

5. Remove the replacement print cartridge from its packaging and carefully remove the plastic tape. Hold the print cartridge so that the copper strip is on the bottom and facing toward the printer.

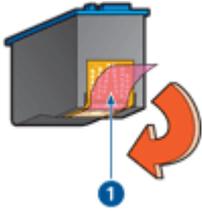


1	Remove plastic tape
---	---------------------

- △ **CAUTION:** Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections. Do not remove the copper strips. They are required electrical contacts.

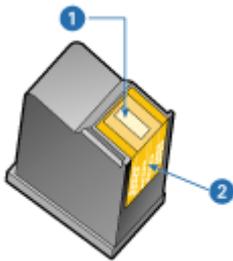

1	Ink nozzles
2	Copper contacts

6. Slide the print cartridge firmly into the cradle at a slight upward angle until you feel resistance.

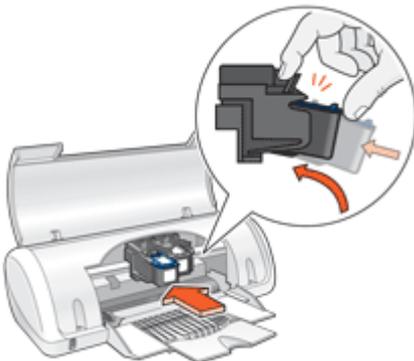

7. Push the cartridge into the cradle.
You hear a snap when the print cartridge is correctly positioned.
8. Close the printer cover.
9. [Align](#) the print cartridges for optimum print quality.

For information about storing print cartridges, see [Maintain print cartridges](#).

For information about recycling empty print cartridges, see [HP inkjet supplies recycling program](#).

⚠ WARNING! Keep both new and used print cartridges out of the reach of children.

Align the print cartridges

After installing a print cartridge, align the print cartridges to ensure the best print quality.

To align print cartridges

1. Load Letter or A4 unused plain white paper in the paper tray.
2. Open the printer [Toolbox](#).
3. Click **Align the Print Cartridges**.
4. Click **Align**, and then follow the onscreen instructions.
The HP Deskjet prints a test page, aligns the print cartridges, and calibrates the printer. Recycle or discard the test page.

Automatically clean print cartridges

If your printed pages are faded or if they contain ink streaks, the print cartridges might be low on ink or might need to be cleaned. For more information, see [View estimated ink levels](#).

If the print cartridges are not low on ink, clean the print cartridges automatically.

To clean the print cartridges

1. Open the printer [Toolbox](#).
2. Click **Clean the Print Cartridges**.
3. Click **Clean**, and then follow the onscreen instructions.

If your documents are still faded after cleaning, [manually clean the print cartridge contacts](#).

⚠ CAUTION: Clean print cartridges only when necessary. Unnecessary cleaning wastes ink and shortens the life of the cartridge.

View estimated ink levels

Follow these instructions to view the estimated ink levels of the print cartridges that are installed in the printer:

1. Open the printer [Toolbox](#).
2. Click the **Estimated Ink Level** tab.

 **NOTE:** If the print cartridges were used before being installed in the printer, or if they are not genuine HP cartridges or have been refilled, the estimated ink levels will not appear on the Estimated Ink Level tab.

The Estimated Ink Level tab also contains print cartridge ordering information. To view this information, click the **Print Cartridge Information** button.

 **NOTE:** Ink from the cartridges is used in the printing process in a number of different ways, including in the initialization process, which prepares the device and cartridges for printing, and in printhead servicing, which keeps print nozzles clear and ink flowing smoothly. In addition, some residual ink is left in the cartridge after it is used. For more information see www.hp.com/go/inkusage.

Maintain the printer body

Because the HP Deskjet ejects ink onto the paper in a fine mist, ink smudges will eventually appear.

To remove smudges, stains, or dried ink from the exterior

1. Turn off the HP Deskjet, and then disconnect the power cord.
2. Wipe the outside of the HP Deskjet with a soft cloth that has been lightly moistened with water.

 **CAUTION:** Do not use any type of cleaning solution. Household cleaners and detergents might damage the printer finish. Keep all fluids away from the interior. Do not lubricate the metal rod on which the print cartridge cradle slides. Noise is normal when the cradle moves back and forth.

Remove ink from your skin and clothing

Follow these instructions to remove ink from your skin and clothing:

Surface	Remedy
Skin	Wash the area with an abrasive soap.
White fabric	Wash the fabric in <i>cold</i> water and use chlorine bleach.
Color fabric	Wash the fabric in <i>cold</i> water and use sudsy ammonia.

 **CAUTION:** Always use cold water to remove ink from fabric. Warm or hot water can set the ink into the fabric.

Manually clean print cartridges

If the HP Deskjet is used in a dusty environment, a small amount of debris can accumulate on the print cartridge contacts. This debris can cause ink streaks on printed pages. The problem can be corrected by manually cleaning the print cartridge contacts.

You need the following items to clean the print cartridges:

- Distilled water (tap water can contain contaminants that can damage the print cartridge)
- Cotton swabs or other soft, lint-free material that will not stick to the print cartridge

Be careful not to get [ink on your hands or clothing](#) as you clean.

To prepare to clean


1. Open the HP Deskjet cover.
2. Wait until the print cartridge cradle moves to the center of the HP Deskjet and is idle and quiet.
3. Remove the print cartridges and place them on a piece of paper, with the copper strips facing up.

△ **CAUTION:** Do not leave the print cartridges outside the HP Deskjet for more than 30 minutes.

To manually clean print cartridge contacts

1. Lightly moisten a cotton swab with distilled water and squeeze any excess water from the swab.
2. Gently wipe the print cartridge copper contacts with the cotton swab.

△ **CAUTION:** Do not touch the print cartridge ink nozzles. Touching the ink nozzles will result in clogs, ink failure, and bad electrical connections.

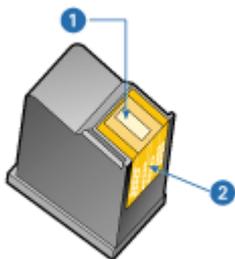

1	Ink nozzles (do not touch)
2	Copper contacts

3. Repeat this process until no ink residue or dust appears on the swab.
4. Insert the print cartridges in the HP Deskjet, and then close the cover. For more information, see [Installation instructions](#).

Maintain print cartridges

Follow these guidelines to maintain and store HP print cartridges and to ensure consistent print quality.

- [Print cartridge storage and handling](#)
- [Print cartridge protector](#)

Print cartridge storage and handling

Follow these guidelines to help maintain HP print cartridges and ensure consistent print quality:

- Install the cartridge on or before the **Install by** date, which is printed on the cartridge package.
- When you remove a photo print cartridge from the printer, store it in a print cartridge protector to prevent the ink from drying out. If you do not have a print cartridge protector, you can use an airtight plastic container to protect your print cartridge. For more information, see [Installation instructions](#).
- Keep all unused print cartridges in their original sealed packages until they are needed. Store print cartridges at room temperature (15° to 35° C or 59° to 95° F).
- Do not remove the plastic tape covering the ink nozzles until you are ready to install the print cartridge in the printer. If the plastic tape has been removed from the print cartridge, do not attempt to reattach it. Reattaching the tape damages the print cartridge.

△ **CAUTION:** Always turn the printer off with the Power button before you unplug the power cord or turn off a power strip. This allows the printer to store the print cartridges properly. When you store the printer, always leave the active print cartridges inside the printer.

Print cartridge protector

If you have purchased an HP photo print cartridge, you can store it in the protector that comes with the print cartridge. If you do not have a print cartridge protector, you can use an airtight plastic container to protect your print cartridge.

To insert the print cartridge into the print cartridge protector

- ▲ Slide the print cartridge at a slight angle into the protector, and snap it securely in place.



To remove the print cartridge from the print cartridge protector

1. Press down and back on the top of the protector to release the print cartridge.
2. Slide the print cartridge out of the protector.



△ **CAUTION:** Do not drop the print cartridge. Dropping the print cartridge can damage it.

Printer Toolbox

The printer Toolbox contains a number of useful tools to enhance the performance of the printer.

Use the printer Toolbox to perform the following tasks:

- [Align the print cartridges](#)
- [Clean the print cartridges](#)
- [Print a test page](#)
- [View estimated ink levels](#)

To open the printer Toolbox

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then click the **Printer services** button.
The Toolbox is displayed.

10 Troubleshooting

- [Error messages](#)
- [Installation problems](#)
- [Power light is on or flashing](#)
- [Printer does not print](#)
- [Document prints slowly](#)
- [Print cartridge problems](#)
- [Paper problems](#)
- [Photos do not print correctly](#)
- [Problems with borderless documents](#)
- [Print quality is poor](#)
- [Document is misprinted](#)
- [If you continue to have problems](#)

Error messages

If an error message displays on the computer screen, check the following topics for a solution:

- [Print cartridge error messages](#)
- [Other error messages](#)

Print cartridge error messages

If you receive a print cartridge error message, follow these directions.

Incorrect or missing print cartridge message

The printer can only print when the correct print cartridges are installed. If you receive a print cartridge error message, one or both of the print cartridges cannot be used in the printer.

To resolve the problem, follow the instructions in [Incorrect or missing print cartridge](#).

Print cartridge problem message

The printer cannot print if the print cartridges are faulty, or if they are not installed properly.

If you receive a message stating there is a problem with a print cartridge, follow the instructions in [Print cartridge is faulty or not installed properly](#) to resolve the problem.

"Print cartridge carriage is stalled" message

If the printer stalls while you are printing a document, follow the instructions in [Printer is stalled](#).

"Print cartridge is in the wrong slot" message

If you receive this error message, the print cartridge is installed in the wrong side of the print cartridge cradle. Follow the instructions in ["Print cartridge is in the wrong slot" message](#) to resolve the problem.

"Printing in ink-backup mode" message

If you receive this error message, follow the instructions in [Incorrect or missing print cartridge](#).

Other error messages

If you receive an error message, follow these directions.

Out of paper message

If you receive an out of paper message, follow the guidelines in [Out of paper message](#).

"There was an error writing to USB port" message

The printer might not be receiving correct data from another USB device or USB hub. Connect the printer directly to the USB port on the computer.

"Two-way communication cannot be established" or "Printer not responding" message

The printer might not be able to communicate with the computer if the USB cable is too long.

If you receive this error message, make sure that the USB cable is not greater than 3 meters (approximately 9.8 feet) in length.



NOTE: For best printing performance, use a USB 2.0 compatible cable.

Installation problems

If the software installation program stops or fails, check the following topics for more information:

- [Installation program stops](#)
- ["Unknown Device" message displays](#)
- [Printer name does not appear](#)

If you continue to have problems, visit HP Technical Support at www.hp.com/support.

Installation program stops

Cause: If the installation program stops when it looks for new hardware, one of the following issues is causing a communication problem:

- The USB cable is old or defective.
- Software, such as an antivirus program, is running.
- Another device, such as a scanner, is connected to the computer.

Solution:

To resolve the problem

1. Make sure that no USB devices other than the printer, the keyboard, and the mouse are connected to the computer.
2. Disconnect and reconnect the USB cable.
3. Make sure that the printer is connected directly to a USB port on the computer (instead of through a USB hub).
4. If the installation program still does not locate the printer, replace the USB cable, and then continue to the next step.
5. Click **Cancel**, and then restart the computer.
6. Turn the printer off, and then disconnect the USB cable and power cord.
7. Quit any antivirus programs or other software programs that are running on the computer.



NOTE: To quit an antivirus program, follow the manufacturer's instructions.

8. Reinstall the printer software:
 - a. Insert the printer software CD into the drive.
 - b. Follow the onscreen instructions. When the installation program prompts you, connect the USB cable and the power cord to the printer, and then make sure that the printer is on.



NOTE: Do not connect the USB cable until you are told to do so.

- c. Follow the onscreen instructions to finish the installation.
9. Restart the antivirus program.

"Unknown Device" message displays

Cause: During installation, an "Unknown Device" message might be displayed when you connect a USB cable between the printer and the computer. A possible cause might be a defective USB cable.

Solution:



NOTE: This is not a problem if you are using Windows 2000. If you are using Windows 2000 and this message is displayed, you can continue with the software installation.

To resolve the problem

1. Disconnect the USB cable from the printer.
 2. Disconnect the power cord from the printer.
 3. Wait approximately 30 seconds.
 4. Reconnect the power cord to the printer.
 5. Reconnect the USB cable to the printer.
 6. If the "Unknown Device" message is still displayed, replace the USB cable.
-

Printer name does not appear

Solution: If the printer software seems to install correctly, but the printer name does not appear in the list of printers when you click **Print** on the **File** menu or in the Printers folder in Control Panel, try reinstalling the printer software.

To reinstall the printer software

1. Quit any antivirus programs or other software programs that are running on the computer.

 **NOTE:** To quit an antivirus program, follow the manufacturer's instructions.

2. Uninstall the printer software:
 - a. Insert the printer software CD into the drive, and then follow the onscreen instructions.

 **NOTE:** If the installation program does not start automatically, click your CD drive letter in Windows Explorer, then double-click the setup.exe file. For example, double-click D:\setup.exe.

- b. When prompted, click **Remove All**.
 3. Reinstall the printer software:
 - a. Insert the printer software CD into the drive.
 - b. Follow the onscreen instructions to finish the installation.
 4. Restart the antivirus program.
-

Power light is on or flashing



1	Power light
---	-------------

- If the Power light is **on**, the printer is either printing or ready to print.
- If the Power light is **off**, the printer is off.
- If the Power light is **flashing**, see the following information.
- [What the flashing light means](#)
- [If an error message appears](#)
- [If no error message appears](#)

What the flashing light means

The Power light can flash for several reasons:

- The printer cover is open.
- The printer is out of paper.
- A problem exists with the printer, such as a paper jam or a problem with a print cartridge.

For information about clearing a paper jam, see [Paper jam](#).

If an error message appears

Read the error message that explains the problem and its solution.

If no error message appears

Check the status of the printer by using the printer tools. To gain access to the tools, open the [Printer Properties dialog box](#), click the **Features** tab, and then click the **Printer services** button.

Use the printer tools to perform the following tasks:

- View estimated ink levels.
- Clean the print cartridges.
- Calibrate the printer.
- Print a test page.
- Perform other functions as needed.

Printer does not print

- [Verify the following](#)
- [Check the printer cable connection](#)
- [Clear the print queue](#)
- [Printer is stalled](#)
- [If the printer still does not print](#)

Verify the following

Verify the following conditions if the printer is not printing:

- The printer is connected to the power source.
- The cable connections are secure.
- The printer is turned on.
- The print cartridges are the correct print cartridges for the printer and are properly installed.

For more information, see [Print cartridges](#) and [Installation instructions](#).

- The paper or other media is correctly loaded in the paper tray.
- The printer cover is closed.
- The rear access door is attached.

Check the printer cable connection

If your printer and computer are connected with a USB cable and the devices are not communicating with each other, try the following:

- Make sure the power cord is firmly connected to the printer and plugged into a power outlet.
- Check the USB cable. If you are using an older cable, it might not be working properly. If you experience problems, the USB cable might need to be replaced. Also verify that the cable does not exceed 3 meters (9.8 feet) in length.
- Check the connection from your printer to your computer. Verify that the USB cable is securely plugged into the USB port on the back of your printer. Make sure the other end of the USB cable is plugged into a USB port on your computer. After the cable is connected properly, turn your printer off and then on again.
- If you are connecting the printer through a USB hub, make sure the hub is turned on. If the hub is on, try connecting the printer directly to your computer.
- Try connecting the USB cable to another USB port on your computer. After you check the connections, try restarting your computer. Turn your printer off and then on again.



NOTE: For best printing performance, use a USB 2.0 compatible cable.

Clear the print queue

Cause: When you start a print job, it is sent to a list called the “print queue.” If the printer stops printing before the job is complete, the print job might be stalled in the print queue.

Solution:

To resolve a print job that is stalled in the queue

1. For Windows 2000, click **Start**, click **Settings**, and then click **Printers**. For Windows XP, click **Start**, and then click **Printers and Faxes**.
2. Double-click the name of the HP Deskjet printer.
3. Click the **Printer** menu, and then click **Pause Printing**.
4. Click the **Printer** menu again, and then click **Cancel All Documents**.
5. Click **Yes** to confirm the cancellation.
6. Click the **Printer** menu, and then uncheck **Pause Printing**.
7. If there are still documents in the list, restart the computer.
8. After restarting, if there are still documents in the list, repeat steps 1 – 6.

After resolving a print job that is stalled in the print queue, the print queue still might not be clear. In that situation, you need to stop and then restart the print service.

To stop and restart the print service

1. For Windows 2000, click **Start**, click **Control Panel**, and then click **Administrative Tools**. For Windows XP, click **Start**, click **Control Panel**, click **Performance and Maintenance**, and then click **Administrative Tools**.
2. Double-click **Services**, and then double-click **Print Spooler**.

3. Click **Stop**, and then click **Start** to restart the print service.
 4. Click **OK** to close the window.
-

Printer is stalled

If the printer stalls while printing a document, raise the printer cover, and then disconnect the power cable from the back of the printer.

△ **CAUTION:** First, check for any loose or broken parts in the printer. If you find loose or broken parts, go to www.hp.com/support.

If there are no loose or broken parts, follow these steps:

1. Check for and remove any obstacles, such as packing tape or materials, that prevent the print cartridges from moving back and forth.
2. Make sure the print cartridges are installed securely in the print cartridge cradle.
For more information, see [Installation instructions](#).
3. Make sure the tri-color print cartridge is installed in the left side of the cradle and the black print cartridge is installed in the right side of the cradle.
4. Check for and clear any paper jam.
For more information, see [Paper jam](#).
5. Lower the printer cover.
6. Connect the power cable to the back of the printer, and then turn on the printer.

If the printer still does not print

1. Select the topic below that best describes the problem:
 - [Paper jam](#)
 - [Out of paper message](#)
 - [Printer is stalled](#)
2. If the printer still does not print, shut down, and then restart your computer.

Document prints slowly

Multiple software programs are open

The computer resources are insufficient for the printer to print at its optimum speed.

To increase printer speed, close all unnecessary software programs when printing.

Complex documents, graphics, or photos are printing

Documents containing graphics or photos print more slowly than text documents.

Best or Maximum dpi print mode is selected

The printer prints more slowly when Best or Maximum dpi is selected as the print quality.

To increase the printer speed, select a different print quality mode.

Printer is in ink-backup mode

The printer might print more slowly if it is in ink-backup mode. For more information, see [Ink-backup mode](#).

To increase the print speed, use two print cartridges in the printer.

Printer software is outdated

Outdated printer software might be installed.

For information about updating the printer software, see [Download printer software updates](#).

Computer does not meet system requirements

If your computer does not have enough RAM or a large amount of free space on the hard drive, the printer processing time will be longer.

1. Verify that the computer hard disk space, RAM, and processor speed meet the system requirements.
The system requirements are listed in the reference guide that came with the printer.
2. Make space available on the hard drive by deleting unwanted files.

Print cartridge problems

- [Incorrect or missing print cartridge](#)
- [Print cartridge is faulty or not installed properly](#)
- ["Print cartridge is in the wrong slot" message](#)
- [Low on ink](#)
- ["Printing in ink-backup mode" message](#)


Incorrect or missing print cartridge

Cause: If the correct print cartridges have not been installed or if the print cartridges are missing, the printer cannot print.

Solution:

To verify and install the correct print cartridges

1. Open the printer cover.
2. Read the selection number on the print cartridge label.

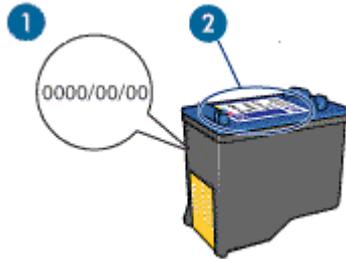

1	Selection number
---	------------------

3. Check the list of print cartridges that can be used in the printer.
 - a. Open the printer [Toolbox](#).
 - b. Click the **Estimated Ink Levels** tab.
 - c. Click the **Print Cartridge Information** button and view the list of print cartridge selection numbers.

The reference guide that came with the printer also shows the print cartridge selection numbers.
4. If the print cartridge selection number is correct, try cleaning the print cartridge. For more information, see [Manually clean print cartridges](#).
5. If the print cartridge has the wrong selection number, install a new print cartridge. For more information, see [Installation instructions](#).
6. Close the printer cover.

If the Power light is not flashing, then the problem is fixed.

If the Power light is flashing, visit HP Technical Support at www.hp.com/support.

Print cartridge is faulty or not installed properly

Cause: The printer cannot print if the print cartridges are faulty, or if they are not installed properly.

Solution:

To resolve the problem

1. Raise the printer cover.
2. Do one of the following:
 - If an error message is displayed on screen, remove the print cartridge that is named in the error message. Go to step 3.
 - If an error message is not displayed, remove and reinstall each print cartridge and close the printer cover.
 - If the Power light is not flashing, the problem is solved.
 - If the Power light is flashing, go to step 4.
3. Reinstall the print cartridge and close the printer cover. For more information, see [Installation instructions](#).
 - If the Power light is not flashing, the problem is solved.
 - If the Power light is flashing, go to step 4.
4. [Manually clean](#) the print cartridge.
5. Reinsert the print cartridge in the printer and close the printer cover.
 - If the Power light is still flashing, the print cartridge is faulty and must be replaced.



NOTE: You can print with one print cartridge in ink-backup mode if you do not have a replacement print cartridge available. For more information, see [Ink-backup mode](#).

6. If the Power light continues to flash after replacing the print cartridge, visit HP Technical Support at www.hp.com/support.

"Print cartridge is in the wrong slot" message

Cause: If you receive this error message, the print cartridge is installed in the wrong side of the print cartridge cradle.

Solution: Always install the tri-color print cartridge in the left print cartridge cradle compartment.

Install the black print cartridge in the right print cartridge cradle compartment.

Low on ink

Cause: At least one of the print cartridges is estimated to be low on ink and may need to be replaced soon.

Solution: Have a replacement cartridge on hand to avoid printing interruptions. You do not have to replace the cartridge until print quality deteriorates. If you have installed a refilled or remanufactured print cartridge, or a cartridge that has been used in another printer, the ink level indicator will be inaccurate or unavailable.

For information on how to replace print cartridges, see [Replace print cartridges](#).


"Printing in ink-backup mode" message

Cause: When the printer detects that only one print cartridge is installed, ink-backup mode is initiated. This printing mode lets you print with a single print cartridge, but it slows the printer and affects the quality of printouts.

Solution: If you receive the ink-backup mode message and two print cartridges are installed in the printer, verify that the protective piece of plastic tape has been removed from each print cartridge. When plastic tape covers the print cartridge contacts, the printer cannot detect that the print cartridge is installed.

To remove plastic tape from a print cartridge

- ▲ Hold the print cartridge so that the copper strips are on the bottom and facing toward the printer, and then carefully remove the plastic tape.

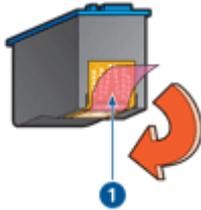

1	Remove plastic tape
---	---------------------

- △ **CAUTION:** Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections. Do not remove the copper strips. They are required electrical contacts.

Paper problems

- [Paper jam](#)
- [Printer does not feed paper](#)
- [Out of paper message](#)
- [Printer prints on multiple sheets at once](#)


Paper jam




To clear a paper jam

1. Remove the paper from the paper tray.
2. If you are printing labels, verify that a label did not become detached from the label sheet while passing through the printer.
3. Turn off the printer.
4. Disconnect the printer power cord from the electrical outlet.

5. Remove the rear access door. Press the handle to the right, and then pull out the door.

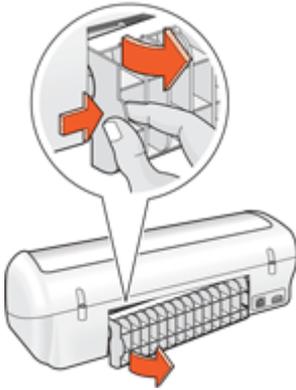

6. Remove the paper jam from the back of the printer, and then replace the rear access door securely.

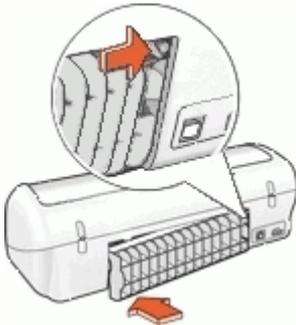

7. If the paper jam cannot be removed from the back of the printer, raise the printer cover, remove the paper jam from the front of the printer, and then lower the cover.

△ **CAUTION:** Remove the paper jam carefully as it is possible to damage the printer when removing paper from the front.

8. Reload paper in the paper tray.
9. Reconnect the printer power cord to the electrical outlet.
10. Turn on the printer.
11. Reprint the document.

 **NOTE:** If paper jams occur frequently, try using a heavier paper. See [Printer specifications](#) for paper weight specifications.

Printer does not feed paper

Solution: Try one or more of the following solutions:

- Reduce the number of sheets in the paper tray.
 - Remove the paper from the paper tray, and then reload it.
 - Use a different type of paper.
-

Out of paper message

Follow the appropriate steps for the condition that exists.

- [If the paper tray is loaded](#)
- [If the paper tray is empty](#)

If the paper tray is loaded

1. Verify the following:
 - A sufficient amount of paper is loaded in the paper tray (at least ten sheets).
 - The paper tray is not overly full.
 - The paper stack is touching the back of the paper tray.
2. Slide the paper guide so that it fits firmly against the edge of the paper.
3. Click **Continue** to resume printing.

If the paper tray is empty

1. Load paper in the paper tray.
2. Push the paper forward until it stops.
3. Slide the paper guide so that it fits firmly against the edge of the paper.
4. Click **Continue** to resume printing.

Printer prints on multiple sheets at once

If the printer prints on multiple sheets at once, check the following:

- [Paper weight](#)
- [Paper might be loaded improperly](#)

Paper weight

The printer might print on multiple sheets of paper at once if the paper is under the recommended [paper weight](#). Use paper that is within the recommended specifications.

Paper might be loaded improperly

The printer might print on multiple sheets of paper at once if the paper is loaded too far toward the back of the printer or if the paper guide is not positioned firmly against the paper. Reload the paper into the paper tray, pushing the paper until you feel resistance, and then slide the paper guide firmly against the edge of the paper stack.

The printer also might print on multiple sheets if different paper types are loaded in the printer. For example, photo paper might be mixed with plain paper. Empty the paper tray and load only the paper type that is appropriate for the document that you are printing.

Photos do not print correctly

- [Check the paper tray](#)
- [Check the printer properties](#)

Check the paper tray

1. Verify that the photo paper is placed in the paper tray with the side to be printed on facing down.
2. Slide the paper forward until it stops.
3. Slide the paper guide firmly against the edge of the paper.
Do not press the guide so firmly against the paper that the paper bends or curls.

Check the printer properties

Open the [Printer Properties dialog box](#) and verify the following options:

Tab	Setting
Features	Size: An appropriate paper size Paper Type: An appropriate photo paper Print Quality: Best or Maximum dpi

Problems with borderless documents

- [Borderless printing guidelines](#)
- [Image is printed at an angle](#)
- [Fading occurs on the edges of a photo](#)
- [Photo has an unwanted border](#)

Borderless printing guidelines

When printing borderless photos or brochures, follow these guidelines:

- Verify that the paper size that is specified in the **Paper Size** drop-down list on the **Printing Shortcuts** tab matches the size of the paper that is loaded in the paper tray.
- Select the appropriate paper type in the **Paper Type** drop-down list on the **Printing Shortcuts** tab.
- If printing in grayscale, select **High Quality** under **Print in Grayscale** on the **Color** tab.
- Do not print borderless documents in ink-backup mode. Always have two print cartridges installed in the printer when printing borderless documents.
For more information, see [Ink-backup mode](#).

Image is printed at an angle




Verify that no problem exists with the source image. For example, if you are printing a scanned image, verify that the image was not crooked when it was scanned.

If the problem is not caused by the source image, follow these steps:

1. Remove all paper from the paper tray.
2. Load the photo paper correctly in the paper tray.
3. Verify that the paper guide fits firmly against the edge of the paper.
4. Follow loading instructions for the paper type.

Fading occurs on the edges of a photo

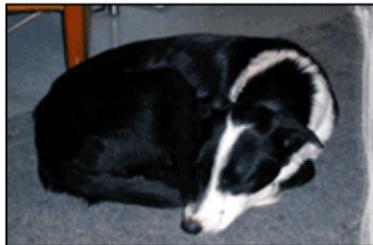


Verify that the photo paper is not curled. If the photo paper is curled, place the paper in a plastic bag and gently bend it in the opposite direction of the curl until the paper lies flat. If the problem persists, then use photo paper that is not curled.

For instructions about preventing photo paper from curling, see [Store and handle photo paper](#).

Photo has an unwanted border

- [For small photo paper](#)
- [For small photo paper with a tear-off tab](#)

For small photo paper

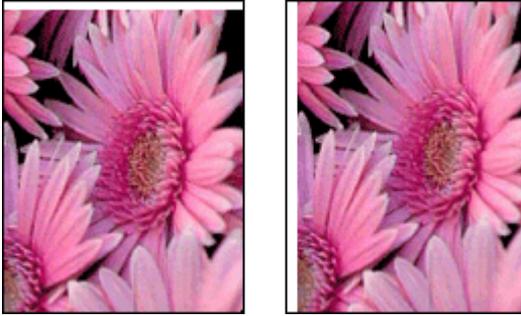

If the printout has an unwanted border, try the following solutions:

- [Align the print cartridges.](#)
- Open the [Printer Properties dialog box](#), click the **Features** tab, and verify that the selected paper size matches both the paper size that the photo is formatted for and the size of the paper that is loaded in the printer.
- Verify that no problem exists with the source image. For example, if you are printing a scanned image, verify that the image was not crooked when it was scanned.
- Verify that the software application you are using supports borderless printing.

For small photo paper with a tear-off tab

If the border appears below the tear-off tab, then remove the tab.



If the border appears above the tear-off tab, then [align the print cartridges.](#)



Print quality is poor

If you are having problems with print quality, try the solutions in this section and observe the following guidelines:

- Replace refilled or empty cartridges.
- Check the device settings to make sure that the print mode and paper selection is correct for the paper and the task.
For more information, see [Select a paper type](#).
- Print and evaluate a self-test.
For more information, see [Print a test page](#).
If the self-test shows a defect, try the following:
 - Clean the print cartridges automatically. For more information, see [Automatically clean print cartridges](#).
 - If there are ink streaks in your prints, clean the electrical contacts. For more information, see [Manually clean print cartridges](#).
 - Replace the print cartridge. For more information, see [Replace print cartridges](#).
- If the self-test does not show a problem, investigate other causes, such as the image file or software program.

For additional print cartridge troubleshooting, visit the HP Web site at www.hp.com/support.

This section contains the following topics:

- [Faded prints with ink streaks](#)
- [Prints are faded](#)
- [Blank pages print](#)

Faded prints with ink streaks


Solution: If your printed pages faded or if they contain ink streaks, the print cartridges might be low on ink or might need to be cleaned. For more information, see [View estimated ink levels](#) and [Automatically clean print cartridges](#).

Prints are faded

Solution:

- Verify that neither of the print cartridges is low on ink.
For more information, see [View estimated ink levels](#). If a print cartridge is low on ink, consider replacing the print cartridge. For the correct part numbers, see the reference guide that came with the printer.
- Verify that a black print cartridge is installed.
If the black text and images on your printouts are faded, you might be printing with only the tri-color print cartridge. Insert a black print cartridge, in addition to the tri-color print cartridge, for optimal black print quality.

- Verify that the protective piece of plastic tape has been removed from the print cartridges.

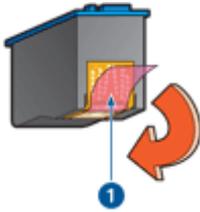


1	Remove plastic tape
---	---------------------

- Consider selecting a higher [print quality](#).
-

Blank pages print

Solution:

- The protective piece of plastic tape might still be attached to the print cartridges. Verify that the plastic tape has been removed from the print cartridges.

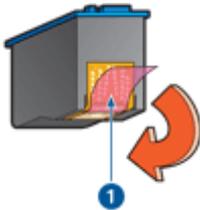

1	Remove plastic tape
---	---------------------

- The print cartridges might be out of ink. Replace one or both empty print cartridges. For more information, see [View estimated ink levels](#).
-

Document is misprinted

- [Text and images are misaligned](#)
- [Document is printed off-center or at an angle](#)
- [Parts of the document are missing or printed in the wrong place](#)
- [Envelope is printed at an angle](#)
- [Document does not reflect the new print settings](#)

Text and images are misaligned

If the text and images on your printouts are misaligned, then [align](#) the print cartridges.

Document is printed off-center or at an angle

1. Verify that only one type of paper is placed in the paper tray, and that the paper has been placed in the tray correctly.
2. Verify that the paper guide fits firmly against the edge of paper.
3. Reprint the document.

Parts of the document are missing or printed in the wrong place

Open the [Printer Properties dialog box](#) and confirm the following options:

Tab	Setting
Features	Portrait or Landscape: Verify the appropriate orientation.
	Size: Verify the appropriate paper size.
	Scale to paper size: Select this option to scale text and graphics to the paper size specified in the corresponding drop-down list.

If parts of the document are still missing, the printer settings might be overridden by the software program print settings. Select the appropriate print settings from within the software program.

Envelope is printed at an angle

1. Slide the flap inside the envelope before loading it in the printer.
2. Confirm that the paper guide fits firmly against the edge of the envelope.
3. Reprint the envelope.

Document does not reflect the new print settings

The printer settings might differ from the software program print settings. Select the appropriate print settings within the software program.

If you continue to have problems

If you continue to have problems after investigating the troubleshooting topics, shut down your computer and then restart it.

If you still have questions after restarting your computer, visit HP Technical Support at www.hp.com/support.

For information about the support process, see [HP support](#).


A HP support

- [Ink cartridge warranty information](#)
- [Support process](#)
- [HP support by phone](#)

Ink cartridge warranty information

The HP cartridge(s) warranty is applicable when the product is used in its designated HP printing device. This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with.

During the warranty period the product is covered as long as the HP ink is not depleted and the end of warranty date has not been reached. The end of warranty date, in YYYY/MM/DD format, may be found on the product as indicated:

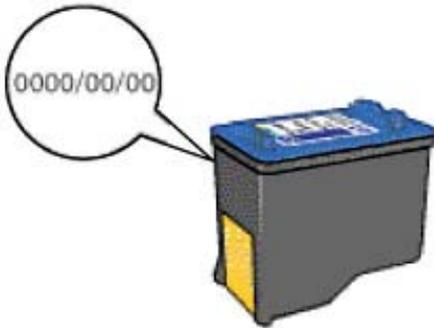

For a copy of the HP Limited Warranty Statement, see the Reference Guide that came with the printer.

Support process

If you have a problem, follow these steps

1. Check the documentation that came with the HP Deskjet.
2. Visit the HP online support Web site at www.hp.com/support. HP online support is available to all HP customers. It is the fastest source for up-to-date device information and expert assistance and includes the following features:
 - Fast access to qualified online support specialists
 - Software and driver updates for your HP Deskjet
 - Valuable HP Deskjet and troubleshooting information for common problems
 - Proactive device updates, support alerts, and HP newsgrams that are available when you register your device
3. For Europe only: Contact your local point of purchase. If your device has a hardware failure, you will be asked to bring it back to your local point of purchase. (Service is provided at no charge during the device limited warranty period. After the warranty period, you will be quoted a service charge.)
4. Call HP support. Support options and availability vary by device, country/region, and language.

HP support by phone

- [Phone support period](#)
- [Placing a call](#)
- [After the phone support period](#)

Phone support period

One year of phone support is available in North America, Asia Pacific, and Latin America (including Mexico). To determine the duration of phone support in Europe, the Middle East, and Africa, go to www.hp.com/support. Standard phone company charges apply.

Placing a call

Call HP support while you are in front of the computer and the HP Deskjet. Be prepared to provide the following information:

- Device model number (located on the label on the front of the device)
- Device serial number (located on the back or bottom of the device)
- Messages that appear when the situation occurs
- Answers to these questions:
 - Has this situation happened before?
 - Can you re-create it?
 - Did you add any new hardware or software to your computer at about the time that this situation began?
 - Did anything else occur prior to this situation (such as a thunderstorm, device was moved, etc.)?

After the phone support period

After the phone support period, help is available from HP at an additional cost. Help may also be available at the HP online support Web site: www.hp.com/support. Contact your HP dealer or call the support phone number for your country/region to learn more about support options.

B Order supplies

You can order HP products, such as recommended types of paper and print cartridges, online from the HP Web site.

This section contains the following topics:

- [Order paper or other media](#)
- [Order print cartridges](#)
- [Order other supplies](#)

Order paper or other media

To order HP papers and other supplies, such as HP Premium Photo Papers, go to www.hp.com/buy/supplies. If prompted, choose your country/region, follow the prompts to select your product, and then click one of the shopping links on the page.

Order print cartridges

For a list of print cartridge numbers, see the printed documentation that came with the HP Deskjet. You can also use the software that came with the HP Deskjet to find out the reorder number for all the print cartridges. You can order print cartridges online from the HP Web site. Additionally, you can contact a local HP reseller to find out the correct print cartridge reorder numbers for your device and purchase print cartridges.

To order HP papers and other supplies, go to www.hp.com/buy/supplies. If prompted, choose your country/region, follow the prompts to select your product, and then click one of the shopping links on the page.

 **NOTE:** Ordering print cartridges online is not supported in all countries/regions. If it is not supported in your country/region, contact a local HP reseller for information about purchasing print cartridges.

To order print cartridges through the HP Solution Center

1. In the HP Solution Center, click the tab that lists your HP Deskjet.
The Shopping Center page is displayed.
2. Click the **Buy online** button.
The Print Cartridge Information page is displayed.
3. Click **Shop Online**.
A privacy information page is displayed.
4. Click **Send**.
The Shop for Supplies window is displayed with a list of compatible cartridges for your printer.

Order other supplies

To order other supplies, such as HP Deskjet software, a copy of the Setup Guide or other printed documentation, or other customer-replaceable parts, call the phone number for your country/region.

Country/region	Number for ordering
Asia Pacific (except for Japan)	65 272 5300
Australia	1300 721 147
Europe	+49 180 5 290220 (Germany)

(continued)

Country/region	Number for ordering
	+44 870 606 9081 (U.K.)
New Zealand	0800 441 147
South Africa	+27 (0)11 8061030
U.S. and Canada	1-800-474-6836 (1-800-HP-INVENT)

To order supplies in other countries/regions not listed in the table, go to www.hp.com/support. If prompted, choose your country/region, and then click **Contact HP** for information on calling for technical support.

C Technical information

- [Printer specifications](#)
- [Environmental product stewardship program](#)
- [Regulatory notices](#)

Printer specifications

The HP Deskjet has the following specifications and requirements.

Software compatibility

Windows compatible (2000 and XP)

Physical specifications

Printer dimension (with the tray extended): 142 mm high x 422 mm wide x 315.76 mm deep (5.6 inches high x 16.6 inches wide x 12.43 inches deep)

Printer weight (without print cartridges): 2.04 kg (4.5 lbs)

Memory

384 KB integrated memory

Minimum system requirements

Operating system ¹	Processor	RAM	Hard disk space
Windows 2000 and XP	Pentium II or equivalent	64 MB	200 MB

1 For information about future operating system releases and support, visit the HP online support Web site at www.hp.com/support.



NOTE: For best printing performance, use a USB 2.0 compatible cable.

Paper tray capacity

Plain paper sheets: Up to 80

Paper size

For a complete list of supported media sizes, see the printer software.

Paper weights

Letter Paper: 65 to 90 g/m² (16 to 24 lb)

Legal Paper: 70 to 90 g/m² (20 to 24 lb)

Envelopes: 70 to 90 g/m² (20 to 24 lb)

Cards: Up to 200 g/m² (110-lb index maximum)

Photo Paper: Up to 280 g/m² (75-lb index maximum)

Environmental product stewardship program

Hewlett-Packard is committed to providing quality products in an environmentally sound manner. Design for recycling has been incorporated into this product. The number of materials has been kept to a minimum while ensuring proper functionality and reliability. Dissimilar materials have been designed to separate easily. Fasteners and other connections are easy to locate, access, and remove using common tools. High priority parts have been designed to access quickly for efficient disassembly and repair.

For more information, visit HP's Commitment to the Environment Web site at:
www.hp.com/hpinfo/globalcitizenship/environment/index.html

This section contains the following topics:

- [Paper use](#)
- [Plastics](#)
- [Material safety data sheets](#)
- [Recycling program](#)
- [HP inkjet supplies recycling program](#)
- [Energy consumption](#)
- [Disposal of Waste Equipment by Users in Private Households in the European Union](#)

Paper use

This product is suited for the use of recycled paper according to DIN 19309 and EN 12281:2002.

Plastics

Plastic parts over 25 grams are marked according to international standards that enhance the ability to identify plastics for recycling purposes at the end of product life.

Material safety data sheets

Material safety data sheets (MSDS) can be obtained from the HP Web site at:

www.hp.com/go/msds

Recycling program

HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit:

For more information regarding recycling of HP products, please visit:

www.hp.com/hpinfo/globalcitizenship/environment/recycle/

HP inkjet supplies recycling program

HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge. For more information, go to the following Web site:

www.hp.com/hpinfo/globalcitizenship/environment/recycle/

Energy consumption

This product is designed to reduce power consumption and save natural resources without compromising product performance. It has been designed to reduce total energy consumption both during operation and when the device is not active. Specific information on power consumption may be found in the product specifications.

Disposal of Waste Equipment by Users in Private Households in the European Union



English	<p>Disposal of Waste Equipment by Users in Private Households in the European Union This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at this point of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.</p>
Français	<p>Évacuation des équipements usagés par les utilisateurs dans les foyers privés au sein de l'Union européenne La présence de ce symbole sur le produit ou sur son emballage indique que vous ne pouvez pas vous débarrasser de ce produit de la même façon que vos déchets courants. Au contraire, vous êtes responsable de l'évacuation de vos équipements usagés et, à cet effet, vous êtes tenu de les remettre à un point de collecte agréé pour le recyclage des équipements électriques et électroniques usagés. Le tri, l'évacuation et le recyclage séparés de vos équipements usagés permettent de préserver les ressources naturelles et de s'assurer que ces équipements sont recyclés dans le respect de la santé humaine et de l'environnement. Pour plus d'informations sur les lieux de collecte des équipements usagés, veuillez contacter votre mairie, votre service de traitement des déchets ménagers ou le magasin où vous avez acheté le produit.</p>
Deutsch	<p>Entsorgung von Elektrogeräten durch Benutzer in privaten Haushalten in der EU Dieses Symbol auf dem Produkt oder dessen Verpackung gibt an, dass das Produkt nicht zusammen mit dem Restmüll entsorgt werden darf. Es obliegt daher Ihrer Verantwortung das Gerät an einer entsprechenden Stelle für die Entsorgung oder Wiederverwertung von Elektrogeräten aller Art abzugeben (z. B. ein Wertstoffhof). Die separate Sammlung und das Recyceln Ihrer alten Elektrogeräte zum Zeitpunkt ihrer Entsorgung trägt zum Schutz der Umwelt bei und gewährleistet, dass sie auf eine Art und Weise recycelt werden, die keine Gefährdung für die Gesundheit des Menschen und der Umwelt darstellt. Weitere Informationen darüber, wo Sie alte Elektrogeräte zum Recyceln abgeben können, erhalten Sie bei den örtlichen Behörden, Wertstoffhöfen oder dort, wo Sie das Gerät erworben haben.</p>
Italiano	<p>Smaltimento di apparecchiature da rottamare da parte di privati nell'Unione Europea Questo simbolo che appare sul prodotto o sulla confezione indica che il prodotto non deve essere smaltito assieme agli altri rifiuti domestici. Gli utenti devono provvedere allo smaltimento delle apparecchiature da rottamare portandole al luogo di raccolta indicato per il riciclaggio delle apparecchiature elettriche ed elettroniche. La raccolta e il riciclaggio separati delle apparecchiature da rottamare in fase di smaltimento favorisce con la conservazione delle risorse naturali e garantisce che tali apparecchiature vengano rottamate nel rispetto dell'ambiente e della tutela della salute. Per ulteriori informazioni sui punti di raccolta delle apparecchiature da rottamare, contattare il proprio comune di residenza, il servizio di smaltimento dei rifiuti locale o il negozio presso il quale è stato acquistato il prodotto.</p>
Español	<p>Eliminación de residuos de aparatos eléctricos y electrónicos por parte de usuarios domésticos en la Unión Europea Este símbolo en el producto o en el embalaje indica que no se puede desechar el producto junto con los residuos domésticos. Por el contrario, si debe eliminar este tipo de residuos es responsabilidad del usuario entregarlo en un punto de recogida designado de reciclado de aparatos electrónicos y eléctricos. El reciclaje y la recogida por separado de estos residuos en el momento de la eliminación ayudará a preservar recursos naturales y a garantizar que el reciclaje proteja la salud y el medio ambiente. Si desea información adicional sobre los lugares donde puede dejar estos residuos para su reciclado, póngase en contacto con las autoridades locales de su ciudad, con el servicio de gestión de residuos domésticos o con la tienda donde adquirió el producto.</p>
Češtiny	<p>Likvidace vysloužilého zařízení uživateli v domácnosti v zemích EU Tato značka na produktu nebo na jeho obalu označuje, že tento produkt nesmí být likvidován prostým vyhozením do běžného domovního odpadu. Odpovídaté za to, že vysloužilé zařízení bude předáno k likvidaci do stávajících sběrných míst určených k recyklaci vysloužilých elektrických a elektronických zařízení. Likvidace vysloužilého zařízení samostatným způsobem a recyklaci napomáhá zachování přírodních zdrojů a zajišťuje, že recyklační procesy způsobem ochrání lidé zdraví a životní prostředí. Další informace o tom, kam můžete vysloužilá zařízení předat k recyklaci, můžete získat od úřadů místní samosprávy, od společnosti provádějící znečištění a likvidaci domovního odpadu nebo v obchodě, kde jste produkt zakoupili.</p>
Dansk	<p>Bortskaffelse af affaldsudstyr for brugere i private husholdninger i EU Dette symbol på produktet eller på det emballage indikerer, at produktet ikke må bortskaffes sammen med andet husholdningsaffald. I stedet er det dit ansvar at bortskaffe affaldsudstyret ved at aflevere det på det eller benævnte indsamlingssted med henblik på genbrug af elektrisk og elektronisk affaldsudstyr. Den separate indsamling og genbrug af det affaldsudstyr på afskrænkede og med til at bevare naturlige ressourcer og sikre, at genbrug finder sted på en måde, der beskytter menneskers helbreds samt miljøet. Hvis du vil vide mere om, hvor du kan aflevere dit affaldsudstyr til genbrug, kan du kontakte kommunen, det lokale renovationsvæsen eller den forretning, hvor du købte produktet.</p>
Nederland	<p>Afvoer van afgedankte apparatuur door gebruikers in particuliere huishoudens in de Europese Unie Dit symbool op het product of de verpakking geeft aan dat dit product niet mag worden afgevoerd met het huishoudelijk afval. Het is uw verantwoordelijkheid uw afgedankte apparatuur af te leveren op een aangewezen verzamelpunt voor de verwerking van afgedankte elektrische en elektronische apparatuur. De gescheiden inzameling en verwerking van uw afgedankte apparatuur draagt bij tot het sparen van natuurlijke bronnen en tot het hergebruik van materiaal op een wijze die de volksgezondheid en het milieu beschermt. Voor meer informatie over waar u uw afgedankte apparatuur kunt inleveren voor recycling kunt u contact opnemen met het gemeentehuis, uw woonplaats, de reinigingsdienst of de winkel waar u het product hebt aangeschaft.</p>
Eesti	<p>Eraajapidamisest kasutatud kõrvaldada avalik ja seadmete käitlemine Euroopa Liidus Kui tootel või toote pakendil on see sümbol, ei tohi seda toodet viia alla olmejäätmete hulka. Teie kohus on viia tarbetuks muutunud seadme selleks ettenähtud elektrilise ja elektroonilise seadmete ühiselt kasutamise kohta. Ühiselt eraldatud seadmete eraldi kogumine ja käitlemine aitab säästa loodusvarasid ning lagada, et käitlemine toimub inimeste tervisele ja keskkonnale ohutult. Lisateavet selle kohta, kuhu saate ühiselt eraldada seadme käitlemiseks viia, saate küsida kohalikest omavalitsustest, olmejäätmete ühiselneemispunktist või kauplustest, kust te seadme ostsite.</p>
Suomi	<p>Hävitettävien laitteiden käsittely kotitalouksissa Euroopan unionissa Tämä tuotteen tai sen pakkausella oleva merkintä osoittaa, että tuotetta ei saa hävittää tavallisten jätteen mukana. Käyttäjän velvollisuus on huolehtia siitä, että hävitettävä laite toimitetaan sähkö- ja elektronikkalaitteiden keräyspisteeseen. Hävitettävien laitteiden erillinen keräys ja kierrätys säästää luonnonvaroja. Näin toimimalla varmistetaan myös, että kierrätyksessä tapahtuu tavalla, joka suojelee ihmisten terveyttä ja ympäristöä. Saat tarvittaessa lisätietoja jätteen kierrätyspakoista paikallisilta viranomaisilta, jätteyhdytyiltä tai tuotteen jälleenmyyjältä.</p>
Ελληνικά	<p>Απορρίψη εξοπλισμού στην οικιακή χρήση στην Ευρωπαϊκή Ένωση Το παρόν σύμβολο στον εξοπλισμό ή τη συσκευασία του υποδεικνύει ότι το προϊόν αυτό δεν πρέπει να απορριφθεί μαζί με άλλα οικιακά απορρίμματα. Αντίθετα, ευθύνη σας είναι να απορρίψετε το εξοπλισμό σε ειδικό σημείο, το οποίο σας υποδεικνύει ο κατασκευαστής ή ο πωλητής, για να διασφαλιστεί η επεξεργασία του προϊόντος με τρόπο που να μην επηρεάζει την υγεία των ανθρώπων και το περιβάλλον. Για περισσότερές πληροφορίες σχετικά με το πού μπορείτε να απορρίψετε τις χρηστές συσκευές σε οικιακό επίπεδο, απευθυνθείτε με τις κατά τόπους αρμόδιες αρχές ή με το κατάστημα από το οποίο αγοράσατε το προϊόν.</p>
Magyar	<p>A hulladékgazdálkodás kezeléséről a magánháztartásokban az Európai Unióban Ez a szimbólum, amely a terméken vagy annak csomagolásán van feltüntetve, azt jelzi, hogy a termék nem kezelhető együtt az egyéb háztartási hulladékkal. Az Ön feladata, hogy a készülék hulladékanyagként eljuttassa olyan kijelölt gyűjtőhelyre, amely az elektronikus hulladékanyagok és az elektronikus berendezések újrahasonosításával foglalkozik. A hulladékanyagok elkülönített gyűjtésére és újrahasonosítására hozzájárul a természet erőitől csak megőrzéshez, egyáltalán azt is biztosítja, hogy a hulladék újrahasonosítása az egészséges és környezetbarát módon történjen. A háztartási hulladékok elszállítására a helyi önkormányzatok, a háztartási hulladék-kezeléssel foglalkozó vállalatok vagy a termék forgalmazói járnak.</p>
Latviešu	<p>Lietaisju atbrīvošanas no nedrīgas ierīcēm Eiropas Savienības privātajās mājās mērķos Šis simbols uz ierīces vai tās iepakojuma norāda, ka šo ierīci nedrīkst izmetīt kopā ar pārējām mājsaimniecības atkritumiem. Jūs esat atbildīgs par atbrīvošanas no nedrīgas ierīces, to nododot no ādītāja savāks āvāks vieta, lai iktu veikta nedrīgā elektriskā un elektroniskā atkritumu atbrīvošana pārstād. Speciāla nedrīgas ierīces savāks āvā no atbrīvošanas pārstādē palīdz tavai dabas resursu un nodrošina ar atbrīvošanu pārstād, kas sargā cilvēku veselību un apkārtni vidi. Lai iegūtu papildu informāciju par to, kur atbrīvošanas pārstādē vai nogādāt nedrīgo ierīci, lūdz, sazinieties ar vietējo pašvaldību, mājsaimniecības atkritumu savāks āvā dienestu vai veikalu, kurā iegādājāties šo ierīci.</p>
Lietuvai	<p>Europos Sąjungos vartotojų ir privačių namų ūki atliekamų įrangos išmetimas Šis simbolas ant produkto arba jo pakuotės nurodo, kad produktą negali būti išmestas kartu su kitomis namų ūki atliekomis. Jūs privalote išmesti savo atliekamą įrangą atitinkamą tašką, į kurį atliekamą įrangą ir elektroninę įrangą perdirbimo punktu. Jei atliekamą įrangą bus atskiri surenkama ir perdirbama, bus išsaugoti natūralūs išteklių ir užtikinama, kad įrangą būtų atskirai surinkta ir perdirbta. Ši informacija apie tai, kur galite išmesti atliekamą perdirbti skirtą įrangą kreiptis į atliekamą vietos tarnybą, namų ūki atliekų šalinimo tarnybą arba pardavėją, kurioje pirkote produktą.</p>
Polski	<p>Utylizacja zużytego sprzętu z uwzględnieniem wyjątków w domach prywatnych w Unii Europejskiej Symbol ten umieszczony na produkcie lub na opakowaniu oznacza, że tego produktu nie należy wyrzucać razem z innymi odpadami domowymi. Użytkownik jest odpowiedzialny za dostarczenie zużytego sprzętu do wyznaczonego punktu gromadzenia zużytych urządzeń elektrycznych i elektronicznych. Gromadzenie osobno i recykling tego typu odpadów przyczynia się do ochrony zasobów naturalnych i jest bezpieczny dla zdrowia i środowiska naturalnego. O সঙ্গে informację na temat sposobu utylizacji zużytych urządzeń można uzyskać u odpowiednich władz lokalnych, w przedsiębiorstwach zajmujących się usuwaniem odpadów lub w miejscach zakupu produktu.</p>
Português	<p>Descarte de equipamentos por usuários em residências da União Europeia Este símbolo no produto ou na embalagem indica que o produto não pode ser descartado junto com o lixo doméstico. No entanto, é sua responsabilidade levar os equipamentos a serem descartados a um ponto de coleta designado para a reciclagem de equipamentos eletro-eletrônicos. A coleta separada e a reciclagem dos equipamentos no momento do descarte ajudam na conservação dos recursos naturais e garantem que os equipamentos serão reciclados de forma a proteger a saúde das pessoas e o meio ambiente. Para obter mais informações sobre onde descartar equipamentos para reciclagem, entre em contato com o escritório local de sua cidade, o serviço de limpeza pública de seu bairro ou a loja em que adquiriu o produto.</p>
Slovenčina	<p>Postup používateľov v krajinnách Európskej únie pri vyhadzovaní zariadenia v domácom používaní do odpadu Tento symbol na produkte alebo na jeho obale znamená, že nesmie byť vyhodnený s iným komunálnym odpadom. Namiesto toho máte povinnos odovzdať toto zariadenie na zbernom mieste, kde sa zabezpečuje recyklácia elektrických a elektronických zariadení. Separovanie a recyklácia zariadenia určeného na odpad pomôže ochrániť prírodné zdroje a zabezpečí tak spôsob recyklácie, ktorý bude chrániť ľudské zdravie a životné prostredie. Ďalšie informácie o separovanom zbere a recyklácii získate na miestnom obecnom úrade alebo v obchodnom mieste, kde ste produkt kúpili. Na vyhodení z odpadu na preloženie v gospodinjstvih znotraj Evropske unije Ta znak na izdelku ali embalaži izdelka pomeni, da izdelka ne smete odložiti skupaj z drugimi gospodinjstvenimi odpadki. Odpadno premo ste dolžni oddati na določnem zbirnem mestu za recikliranje odpadne elektrone in elektronske opreme. Z ločenim zbiranjem in recikliranjem odpadne elektrone in elektronske opreme bodo pomagal ohraniti naravne vire in zagotovili, da bo odpadna oprema reciklirana tako, da se varuje zdravje ljudi in okolje. Več informacij o mestih, kjer lahko oddate odpadno premo za recikliranje, lahko dobite na občini, v komunalnem podjetju ali trgovini, kjer ste izdelek kupili.</p>

Regulatory notices

- [FCC statement](#)
- [LED indicator statement](#)
- [Notice to users in Korea](#)
- [VCCI \(Class B\) compliance statement for users in Japan](#)
- [Notice to users in Japan about power cord](#)

FCC statement

The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications (part 15.21): The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by HP may void the user's authority to operate the equipment.

For further information, contact the Manager of Corporate Product Regulations, Hewlett-Packard Company, 3000 Hanover Street, Palo Alto, CA 94304, (650) 857-1501.

LED indicator statement

The display LEDs meet the requirements of EN 60825-1.

Notice to users in Korea

사용자 안내문(B급 기기)

이 기기는 비업무용으로 전자파 적합 등록을 받은 기기로서, 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

VCCI (Class B) compliance statement for users in Japan

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると受信障害を引き起こすことがあります。取り扱い説明書に従って正しい取り扱いをして下さい。

Notice to users in Japan about power cord

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Index

A

- accessibility 2
- after the support period 75
- aligning print cartridges 50

B

- booklet printing 29
- borderless printing 68
- bound two-sided printing 40
- brochure printing 27
- buttons
 - Power button 8

C

- calling HP support 75
- CD/DVD tattoo printing 25
- cleaning
 - print cartridges
 - automatically 50
 - print cartridges manually 51
 - printer body 51
- clearing the print queue 60
- custom paper size 38

D

- default print settings 42
- default printer 42
- digital photos 17
- document is misprinted
 - document is printed off-center or at an angle 73
- document printing 20
- document prints slowly
 - complex documents are printing 61
 - ink-backup mode 62
 - Maximum dpi selected 61
 - multiple programs are open 61
 - printer software is outdated 62
 - system requirements 62
- dpi, maximum 39
- duplexing 37, 40

E

- e-mail printing 19
- envelope printing 22
- environment
 - Environmental product stewardship program 78
- Environmental information
 - material safety data sheets 79
 - paper use 79
 - plastics 79
 - recycling program 79
- error messages
 - other errors 56
 - out of paper message 67
 - print cartridge errors 55
- estimated ink level 50
- European Union
 - recycling information 80
- Exif Print 17

F

- fast/economical printing 36
- FCC statement 81

G

- general everyday printing 37
- grayscale printing 36
- greeting card printing 28

H

- Hewlett-Packard Company
 - notices 2
- HP Photosmart Software
 - downloading 45

I

- index card printing 24
- ink
 - low 64
- Ink Status window 44
- ink, removing ink from skin and clothing 51
- ink-backup mode 11

Installation

- installation
 - program stops 56
- installing print cartridges 46
- iron-on transfer printing 32

L

- label printing 25
- LED indicator statement 81
- letter printing 21
- lights
 - Power light 8
- low ink 50

M

- maintenance
 - print cartridges 53
 - printer 46
 - printer body 51
- maximum dpi 39

O

- order
 - paper 76
 - print cartridges 76
 - Setup Guide 76
 - software 76
 - User Guide 76
- other document printing 19

P

- page order, setting 35
- paper
 - order 76
- paper jam 65
- paper tray 8
- paper type, selecting 38
- phone support period
 - period for support 75
- photo fix options 17
- photo has unwanted border
 - for small photo paper 70
- photo paper, storing and handling 18
- photo printing
 - borderless photos 14

- photos with a border 16
 - saving money 18
- photo printing problems
 - verifying print settings 68
- photos
 - digital 17
 - do not print correctly 68
- placing a call 75
- postcard printing 23
- poster printing 31
- power light is flashing
 - if an error message appears 59
 - if no error message appears 59
- presentation printing 41
- print cartridge problems
 - incorrect print cartridge 62
- print cartridges
 - aligning 50
 - cleaning automatically 50
 - cleaning manually 51
 - faulty 63
 - installing 46
 - low on ink 64
 - maintaining 53
 - not installed properly 63
 - order 76
 - ordering information 50
 - print with one print cartridge 11
 - problem message 63
 - replacing 10
 - selection numbers 46
 - used with the printer 10
- print preview 37
- print quality
 - blank pages print 72
- print queue, clearing 60
- print resolution 39
- print settings
 - changing 43
 - default settings 42
- print speed 38
- printer does not feed paper 67
- printer features 7
- printer is not printing 59
- printer is stalled 61
- printer maintenance 46
- printer name does not appear 58
- printer prints on multiple sheets
 - at once 67
- printer properties 43

- printer software
 - downloading updates 45
- printer specifications 78
- printer Toolbox 54
- printer troubleshooting 55
- printing
 - 4800 x 1200 optimized
 - dpi 39
 - booklets 29
 - borderless photos 14
 - bound two-sided printing 40
 - brochures 27
 - CD/DVD tattoos 25
 - custom paper size 38
 - digital photos 17
 - documents 20
 - e-mails 19
 - envelopes 22
 - Exif Print 17
 - fast/economical 36
 - general everyday printing 37
 - grayscale 36
 - greeting cards 28
 - high quality 39
 - index cards and small media 24
 - iron-on transfers 32
 - labels 25
 - letters 21
 - maximum dpi 39
 - multiple pages on single sheet 36
 - other documents 19
 - photos 14
 - photos with a border 16
 - postcards 23
 - posters 31
 - presentation printing 41
 - print preview 37
 - print quality 38
 - print resolution 39
 - print settings 43
 - print speed 38
 - resizing documents 40
 - selecting a paper type 38
 - setting the page order 35
 - software 42
 - tips 34
 - transparencies 27
 - two-sided printing 37
 - with one print cartridge 11
- Printing Shortcuts tab 34
- printing tips 34

- problems with borderless documents
 - for small photo paper with a tear off tab 70

R

- Real Life Technologies 17
- recycle
 - HP Deskjet 80
 - ink cartridges 79
- regulatory notices
 - FCC statement 81
 - notice to users in Japan (power cord) 82
 - notice to users in Japan (VCCI) 81
 - notice to users in Korea 81
 - WEEE 80
- removing ink from skin and clothing 51
- resizing documents 40

S

- settings 43

T

- terms and conventions in manual 2
- test page, printing 34
- Toolbox 54
- transparency printing 27
- troubleshooting
 - borderless printing
 - guidelines 68
 - borderless printing problems 68
 - document does not reflect new print settings 73
 - document prints slowly 61
 - envelope prints at angle 73
 - image prints at angle 69
 - ink streaks 71
 - installation program
 - stops 56
 - misprinted document 72
 - multiple pages print at once 67
 - paper jam 65
 - parts of the document are missing or in wrong place 73
 - photo printing problems 68

Index

- poor print quality 71
- print is faded 71
- printer 55
- printer does not feed
 - paper 67
- printer is not printing 59
- printer is stalled 61
- printer name does not appear 58
- text and images are misaligned 73
- unwanted border on photo 69
- two-sided printing 37

U

- Unknown Device message 57
- updates
 - downloading for software 45
 - HP Photosmart Software 45
- USB
 - connecting the printer 13

W

- What's This help 44

