

Administrator's Guide: Windows CE 6.0 - HP  
Thin Client t5530 and t5540  
Build 6.00.6xx or higher



© Copyright 2008–2009 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice.

Microsoft and Windows are trademarks of Microsoft Corporation in the U.S. and other countries.

Portions of this thin client use the WCECompat software library, which is licensed under the GNU Lesser General Public License, version 2.1. For a copy of this license, please see: <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>. The WCECompat library was originally obtained from: <http://www.essemer.com.au/windowsce>. The source code and build system for the WCECompat library supplied can be obtained by contacting support at: 1-800-474-6836 or: [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

**Administrator's Guide: Windows CE 6.0 - HP Thin Client t5530 and t5540**

Build 6.00.6xx or higher

Second Edition (June 2009)

First Edition (August 2008)

Document Part Number: 488064–002

## About This Book

---

- ⚠ **WARNING!** Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.
  - ⚠ **CAUTION:** Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.
  - 📝 **NOTE:** Text set off in this manner provides important supplemental information.
-



---

# Table of contents

## 1 Introduction

Image Updates .....	2
Setup Wizard .....	2



## 2 The Desktop













Display .....	4
Taskbar .....	4
Start Menu .....	5
Icons .....	5















## 3 HP ThinConnect


Advanced Window .....	7
Creating User Accounts .....	8
Connections .....	12
Adding Connections .....	12
Editing Connections .....	12
Deleting Connections .....	13
Assigning Connections to Users .....	13
Assign Connections Tab .....	13
Assigning Connections .....	15
Designating Connections as Primary or Secondary .....	15
Enabling Automatic Connection and Reconnection .....	16
Configuring the User Interface .....	17
Auto Starting HP ThinConnect .....	17
Setting the Terminal to Kiosk Mode .....	18
Enabling Automatic Log On and Keyboard Functions .....	19
Switching to a Different User .....	20

## 4 Control Panel

 Accessibility .....	22
 Boot Settings .....	23

	Certificates .....	24
	Date/Time .....	25
	DHCP Options .....	25
	Dialing .....	26
	Display .....	27
	Global ICA Client Settings .....	30
	Keyboard Shortcuts .....	30
	Preferences .....	31
	Server Location .....	32
	Firewall Settings .....	32
	HP Easy Config .....	34
	VMWare View Appliance .....	35
	Citrix Desktop Appliance .....	37
	Web Appliance .....	39
	HP Easy Update .....	41
	HP Device Manager .....	43
	HP ThinState Capture .....	44
	HP ThinState Capture .....	44
	HP ThinState Deploy .....	45
	Internet Options .....	46
	Keyboard .....	47
	LPD Control .....	47
	Modems .....	48
	Mouse .....	48

	Network and Dial-up Connections .....	49
	Dial-up Connection .....	49
	Direct Connection .....	50
	Virtual Private Network (PPTP) Connection .....	50
	Virtual Private Network (L2TP) Connection .....	50
	PPP Over Ethernet (PPPoE) Connection .....	50
	Port Lock .....	50
	Power Settings .....	51
	Printers .....	52
	 Printers .....	52
	Adding a Printer .....	53
	Setting up a Network Printer .....	55
	Modifying an Existing Printer Configuration .....	56
	Regional Settings .....	56
	Security .....	58
	Enabling Security .....	58
	Creating a User Account .....	59
	SNMP .....	59
	SNTP Client .....	64
	System .....	65
	Resetting Settings to Factory Defaults .....	66
	Copying Registry Settings .....	66
	System Update .....	67
	Terminal Server Client Licenses .....	68
	ThinPrint .....	69
	View or Remove Programs .....	69
	VNC Server .....	70
	Settings for VNC Server .....	71

 Volume and Sounds .....	71
---	----

## 5 Programs and Add-ons

Programs .....	73
ThinPrint .....	73
ThinPrint over TCP/IP .....	73
ThinPrint Network Printer .....	77
HP Connections for Citrix Software .....	79
Creating a New ICA connection .....	79
Deleting a Connection .....	80
Editing a Connection .....	80
Creating a Desktop Shortcut to a Connection .....	80
RDP 6.0 .....	80
Terminal Emulation Connection .....	81
TxtPad .....	83
Add-ons .....	83
ELO Touch Screen .....	83

## 6 Registry Import/Export

Clearing the Destination Registry .....	84
Exporting and Importing a Registry .....	85
Importing a Registry to Multiple Units .....	85
Exporting Registries from Multiple Units .....	85

<b>Index .....</b>	<b>86</b>
--------------------	-----------



---

# 1 Introduction

HP thin clients with Microsoft Windows CE are easy to deploy, manage, and secure, and include powerful features for mainstream business use.

- Easy to deploy
  - Setup Wizard for easy configuration
  - Familiar explorer shell that resembles Windows desktop
  - Altiris Deployment Server
  - HP Device Manager
  - HP ThinState Capture
- Easy to manage
  - Registry import tool
  - Can update to the latest image directly from HP
  - Can return to factory settings by pressing **F9**
- Easy to secure
  - Can disable USB mass storage
  - Can lock down user interface with HP ThinConnect
  - Secure default Guest account
  - More secure operating system

HP provides this client “ready to go” out of the box to meet most common customer requirements. You may want to add/remove features, lock down the user interface, etc. This guide will introduce you to the many features of this client and show you how to customize the client to your needs.

This guide provides the network administrator with instructions for local and remote configuration of the CE-based terminal. Typically, a terminal is configured locally then used as a template for other terminals, which are then configured using remote administration tools.

## Image Updates

HP provides periodic updates to the image for thin clients. Check the HP support site for important documentation that provides specific information for your image version. You can find support documentation at:

<http://welcome.hp.com/country/us/en/support.html>.


For the latest version of the HP thin client Microsoft Windows CE image, visit:

<http://h18004.www1.hp.com/support/files/thinclients/us/index.html>.

## Setup Wizard

The HP Microsoft Windows CE images include a Setup Wizard, which provides a simplified, easy-to-follow method to configure a thin client. The Setup Wizard launches after you unbundle the image. The Setup Wizard launches the first time after either the thin client has either been reset to factory defaults or a new software image has been loaded on the unit.

---


 **NOTE:** There is a 20-second delay after the Setup Wizard launches. If you do not click **Next** before the timer expires, the thin clients loads the default settings.

---

---

## 2 The Desktop

The t5530 and t5540 thin clients with Microsoft Windows CE use an Explorer shell (desktop) that resembles the typical Windows desktop to make it look familiar and easy to use. The desktop includes a taskbar, Start menu, shortcut icons, and a background image.


 **NOTE:** The taskbar and the Start menu are hidden by default.




# Display

To change the display settings, right-click on the desktop and select **Properties**. You can change the following:

- background image
- appearance
- resolution and color quality settings
- screen saver

 **NOTE:** You must reboot for changes to the display settings to take effect. If you do not know if your monitor supports a setting, click the **Test** button on the **Display Properties Settings** tab.

For more information about display settings, see  [Display on page 27](#) in the Control Panel chapter.

# Taskbar

Move the pointer to the bottom of the screen to display the taskbar. The taskbar is hidden by default to provide a clean ICA/RDP connection experience.

The taskbar provides access to system software. The taskbar includes:

- **Start** button
- active task buttons - currently running programs
- notification area - the system tray




To configure the thin client to show the taskbar:

1. Right-click on the taskbar.
2. Select **Properties**.
3. Clear the **Auto hide** check box.

## Start Menu

To open the Start menu, click the **Start** button on the taskbar. The **Start** menu provides access to software and settings, allows you to run commands, and allows you to shut down the system.

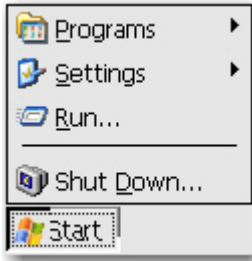


## Icons

The icons on the desktop provide shortcuts to software and connections. To launch a program from the desktop, double-click the respective icon.

You can add icons for connections by right-clicking on the connection icon in the HP Connection for Citrix software window and selecting **Send to Desktop**. For more information, see [HP Connections for Citrix Software on page 79](#) in Chapter 5.

---

 **NOTE:** Windows CE architecture does not allow you to change the properties of programs from desktop shortcuts. You can only change property values for the shortcut itself from the desktop.

---


## 3 HP ThinConnect


HP ThinConnect allows you to:

- Manage user accounts.
- Add, edit, and delete connections.
  - Terminal emulation
  - Microsoft Remote Desktop Client (RDP) connections
  - Internet Explorer
  - Citrix ICA connections
  - VMware View client
- Assign connections to users.

The main HP ThinConnect window allows you to perform actions for only the current user. To assign connections to other users, use the HP ThinConnect Advanced window. For more information about the Advanced window, see [Advanced Window on page 7](#).

You can access HP ThinConnect by clicking **Start > Programs > HP ThinConnect**.

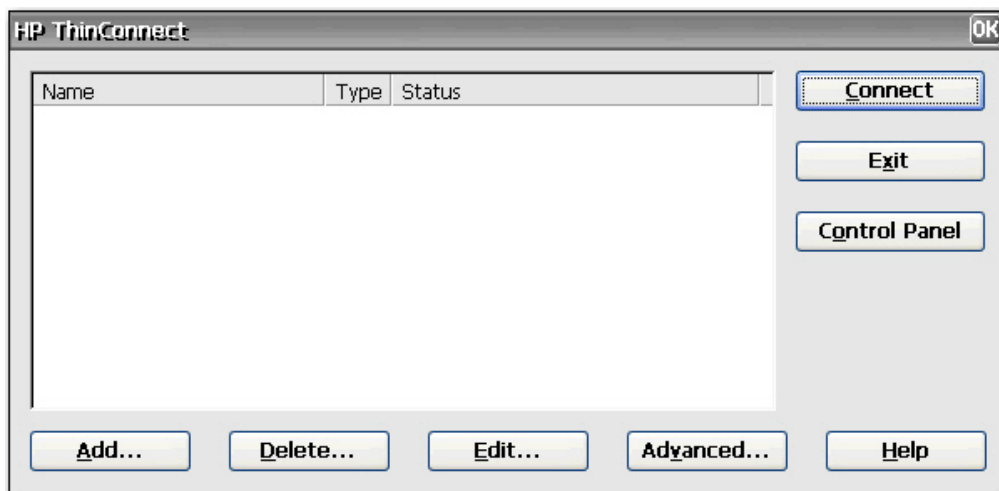

 **NOTE:** You must close all active connections to use the following buttons: **Add, Delete, Edit, Advanced, Exit**.

The HP ThinConnect window includes the following features:

- **Connection display area:** Lists all connections assigned to the user currently logged on to the terminal. For each connection, the display shows the name, type, and status of the connection.
- **Connect:** Click to activate a selected connection.
- **Exit:** Click to exit HP ThinConnect. The **OK** button performs the same function.
- **Control Panel:** Click to access the Control Panel. This feature requires appropriate permissions.
- **Add:** Click to create a new connection and add it to the list of connections assigned to the user currently logged on to the terminal. You can assign the new connection to other users in the Advanced window. For more information, see [Adding Connections on page 12](#).
- **Delete:** Click to delete a selected connection. The connection is deleted from the list of connections available to all users, not just the user currently logged on to the terminal. For more information, see [Deleting Connections on page 13](#).
- **Edit:** Click to edit the selected connection. For more information, see [Editing Connections on page 12](#).
- **Advanced:** Click to access the Advanced window, where you can configure and assign connections and configure the terminal user interface. For more information, see [Advanced Window on page 7](#).
- **Help:** Click to access help.


## Advanced Window

You can access the Advanced window by clicking the **Advanced** button in HP ThinConnect. You must log in with Administrator permissions or with the “User may add, edit, or delete connections” permission to access the Advanced window. The Advanced window allows you to configure and assign connections, set up user security accounts, and configure the user interface for the terminal.

---

△ **CAUTION:** Click either **OK** button to save changes and close the Advanced window. Click the **X** button or **Cancel** to exit without saving changes.

---

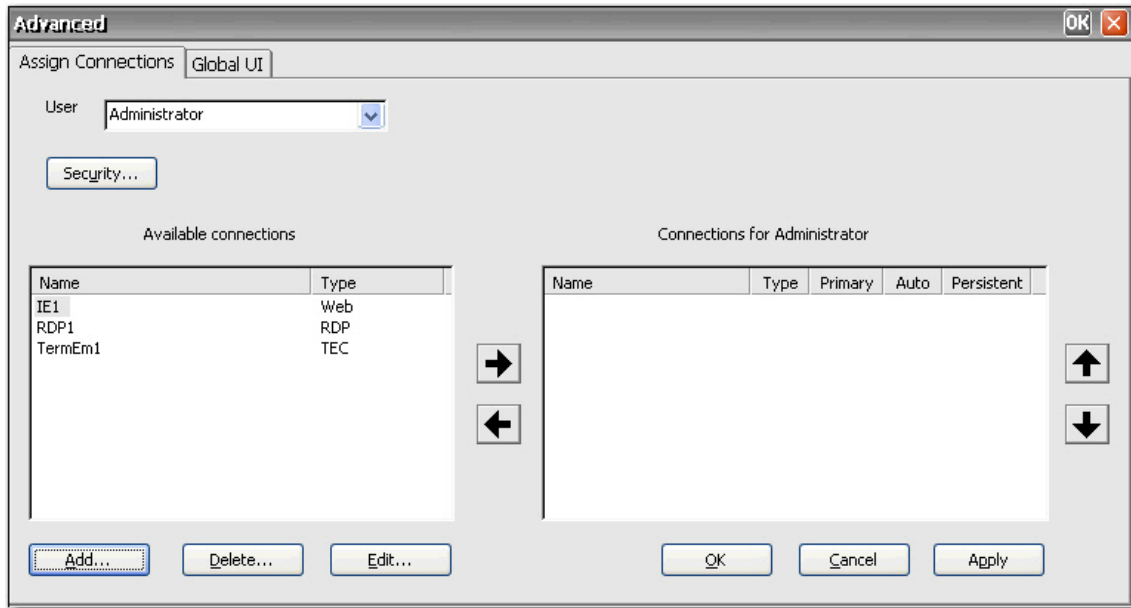

## Creating User Accounts

You can set up terminal operator user accounts in the Security window, which you can access either from the ThinConnect Advanced window or from Control Panel.

The system comes with three default accounts:

- Administrator
- Guest
- User

You can use the default accounts as templates for new accounts. You can modify the default Guest and User accounts.


The Users tab lists all operator accounts and shows which accounts are set up with Administrator security permissions and which accounts are enabled.

To create a new user account:


1. In HP ThinConnect, click **Advanced**.
2. On the **Assign Connections** tab, click **Security**. This takes you to the Control Panel Security window.



3. Select the **Users** tab, and then click **Add** to create a new user account.

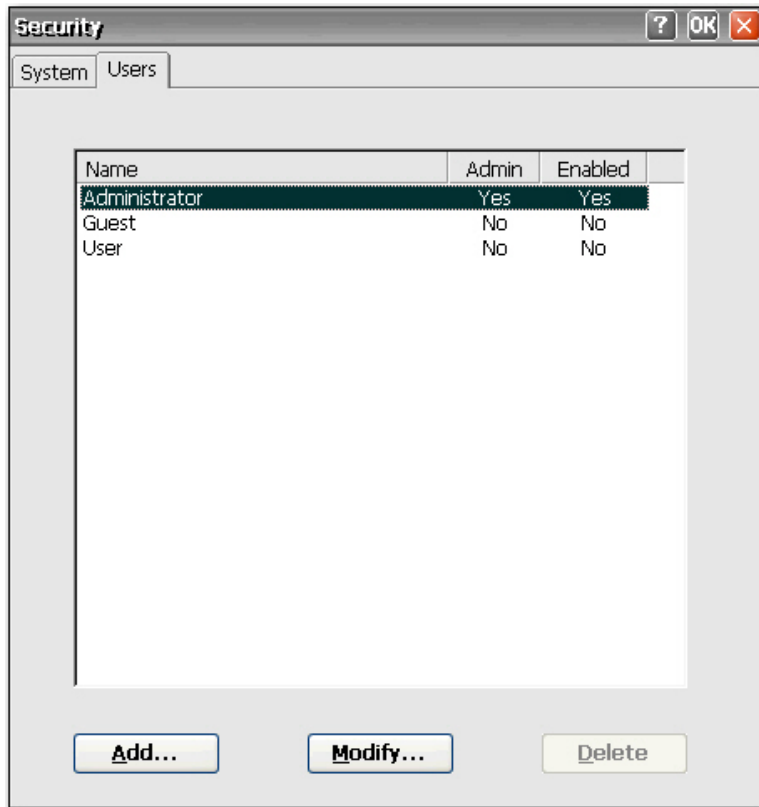


4. On the **General** tab, type a name for the new user account in the **Name** box. Valid characters for the **Name** box include: A - Z, a - z, 0 - 9. (.)&^%\$#!~{}\_-. Maximum length is 20 characters.

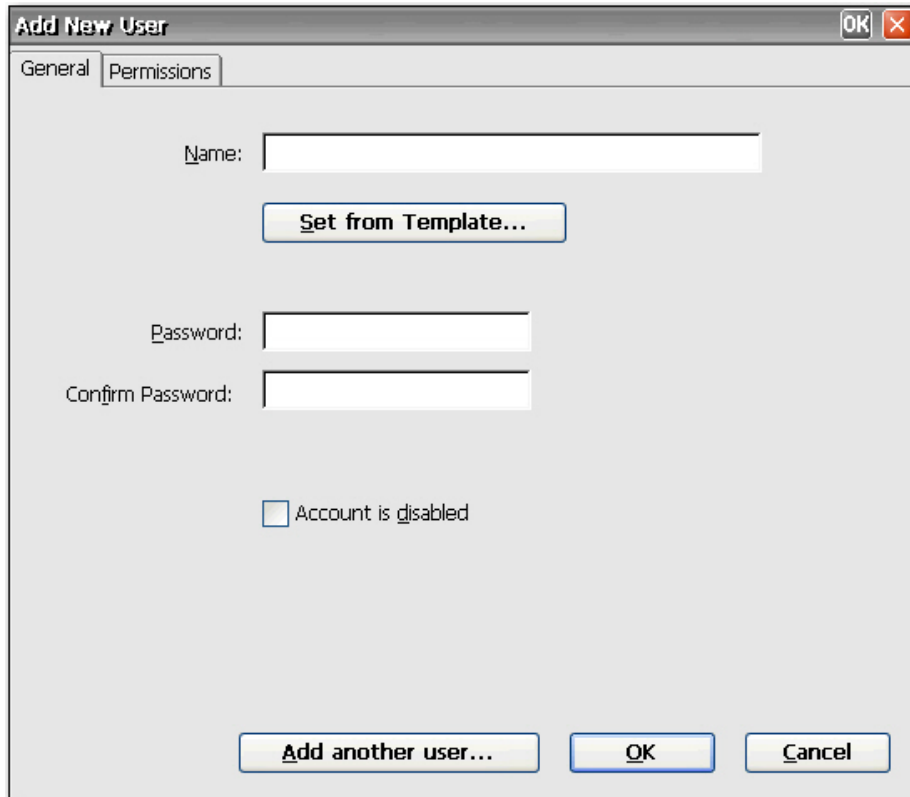


The screenshot shows the 'Add New User' dialog box with the 'General' tab selected. The dialog has a title bar with 'Add New User' and 'OK' and 'X' buttons. Below the title bar are two tabs: 'General' and 'Permissions'. The 'General' tab contains the following elements:

- A text input field labeled 'Name:'.
- A button labeled 'Set from Template...'.
- A text input field labeled 'Password:'.
- A text input field labeled 'Confirm Password:'.
- A checkbox labeled 'Account is disabled'.
- At the bottom, three buttons: 'Add another user...', 'OK', and 'Cancel'.

5. Type a password for the new user in the **Password** box.
6. Retype the password in the **Confirm Password** box.
7. To enable the user account, clear the **Account is disabled** check box.
8. To assign the same permissions to the new account that are assigned to an existing account, click **Set from Template**.

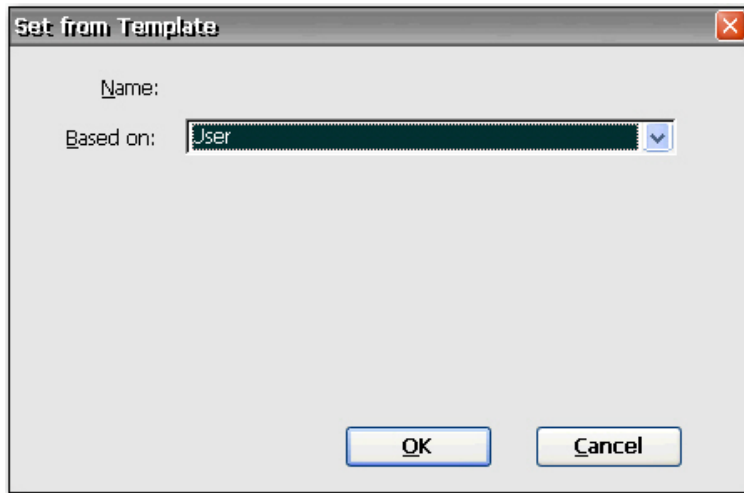

- a. In the **Based on** list, select the account to use as a template.
  - b. Click **OK** to save your settings and return to the Add New User window.
  - c. To add another user, click **Add another user**. This option allows you to quickly add new users.
9. To select permissions for the new account, select the **Permissions** tab on the Add New User window.

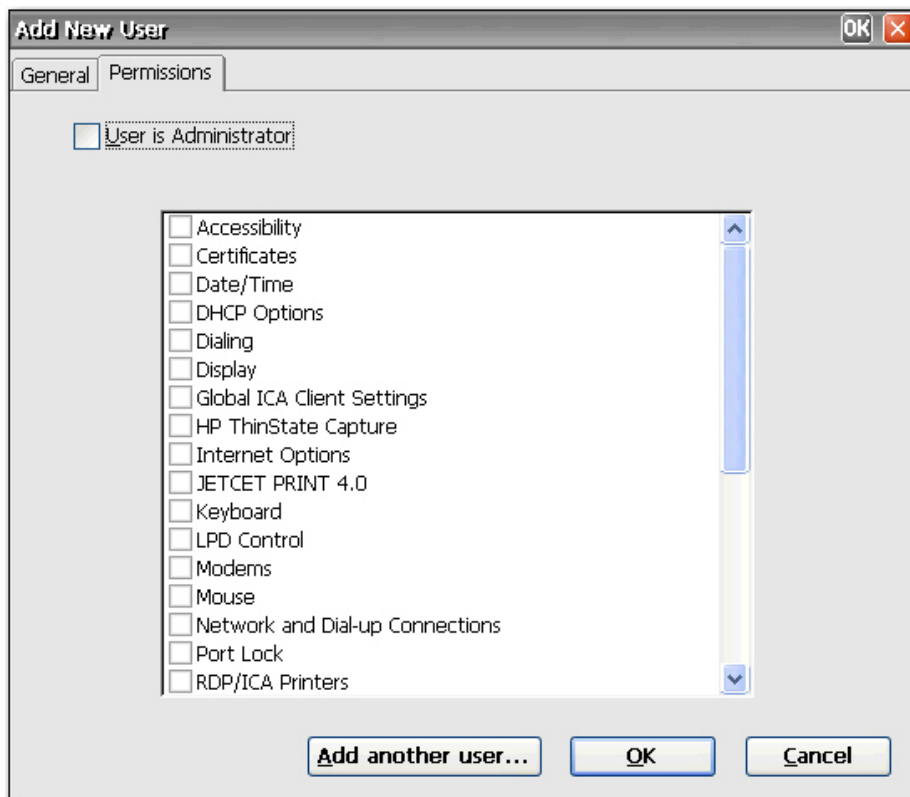

- a. Select the items in the permissions list that you want to allow the user to access. If the user is an Administrator, select **User is Administrator** to provide full access. If you select **User is Administrator**, you cannot select or clear items in the list.
- b. To save your settings and add another user, click **Add another user**.

or

Click **OK** to save your settings.

10. Click **OK** when you are finished adding users.
11. If you want to modify or delete user accounts, select the account, and then click **Modify** or **Delete**.
12. Click **OK** at the top of the window when you are done adding or modify user accounts.

## Connections


You can add, edit, or delete connections in HP ThinConnect and in the Advanced window. Add connections as follows:

- Use HP ThinConnect to create and assign connections to the user currently logged on to the terminal.
- Use the Advanced window to assign the connection to other users.

## Adding Connections


To add a connection in HP ThinConnect:

1. In HP ThinConnect, click **Add**.

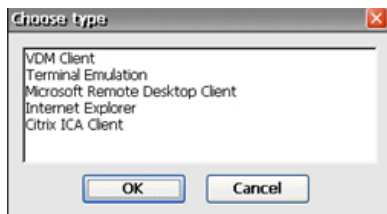

2. In the **Choose type** dialog box, select the type of connection you want to create, and then click **OK**. A Wizard or setup dialog for the connection type is displayed.
3. Follow the on-screen instructions in the Wizard or setup dialog to add the connection to the user's connections list and to the list of available connections that you can assign to other users in the Advanced window.

---

 **NOTE:** If you create a connection in HP Connections for Citrix Software, the connection is also displayed in HP ThinConnect. Similarly, connections created in HP ThinConnect are also displayed in HP Connections for Citrix Software.


---

## Editing Connections


To edit a connection in HP ThinConnect:


- ▲ Select the connection, and then click **Edit**. Make the appropriate changes in the Wizard or setup dialog.

---

 **NOTE:** The following image illustrates the Edit Connection window for an RDP connection. The screen varies based upon the type of connection you edit.

---

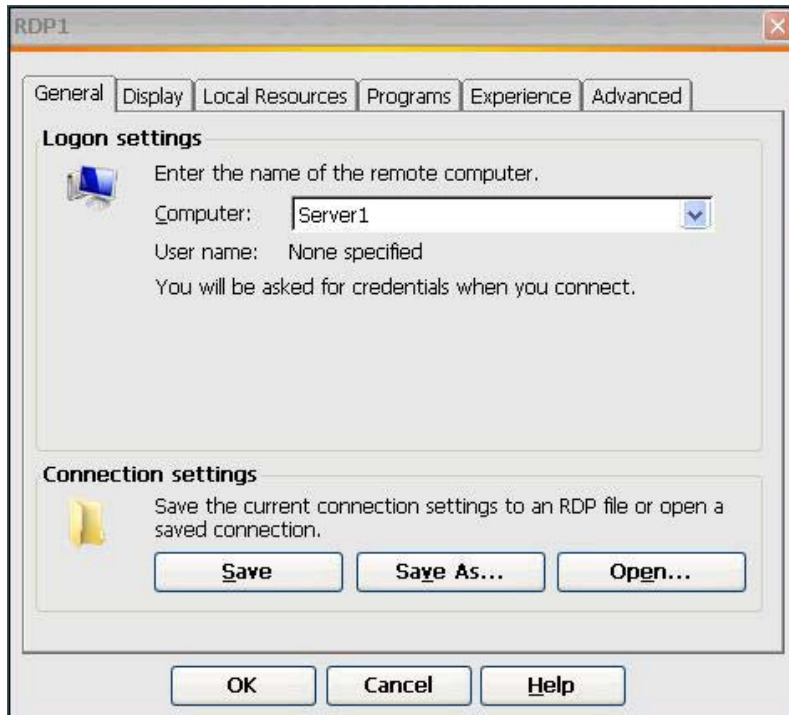

 **NOTE:** Renaming a connection effectively deletes it from *all* user accounts.

## Deleting Connections

To delete a connection in HP ThinConnect:


- ▲ Select the connection, and then click **Delete**. The connection is deleted from all user connection lists.

## Assigning Connections to Users

Assign and configure connections for users in the Advanced window of HP ThinConnect.

### Assign Connections Tab

The **Assign Connections** tab allows you to assign connections to users. This tab contains the following features:

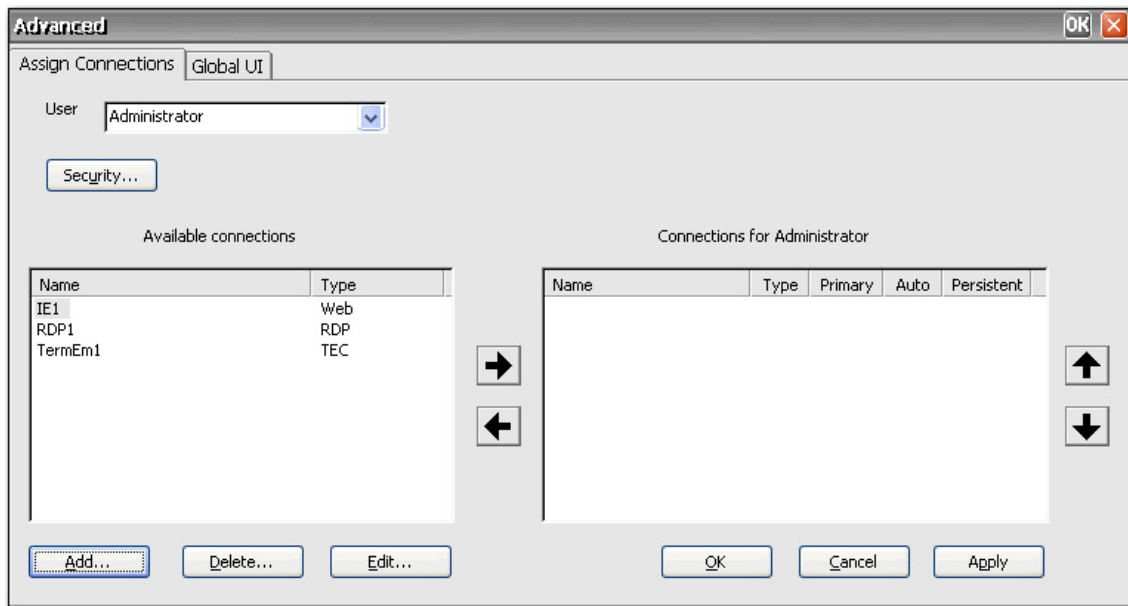

- **User:** This list includes all users accounts associated with the system. To configure connections for a user, select the user from the list.
- **Security:** Allows you to access the Security window, where you can create and configure user accounts. This button opens the same window as selecting Security from Control Panel.
- **Available connections:** On the left side of the window, this panel shows all available connections that you can assign to users. The columns in this panel include:
  - **Name:** Shows the name of the connection assigned when the connection was created.
  - **Type:** Shows the type of connection.
- **Add:** Click to create a new connection and add it to the **Available connections** list. When you click this button, a connection type list is displayed. When you select a connection type to add and click **OK**, a wizard opens that allows you to configure connections.
- **Delete:** Select a connection in the **Available connections** list, and then click this button to delete the connection. Deleting a connection here also deletes the connection from the list of connections assigned to all users.
- **Edit:** Select a connection in the **Available connections** list, and then click this button to edit the connection.
- **Connections for [user]:** On the right side of the window, this panel shows the connections assigned to the user displayed in the **User** box.
  - **Name:** Shows the name of the connection assigned to the user.
  - **Type:** Shows the type of connection.
  - **Primary:** Designates a connection as either primary or secondary. **Yes** indicates a primary connection. Click on the column value to change the setting. You cannot change the first connection in the list to secondary.
  - **Auto:** Determines whether the system automatically connects when HP ThinConnect starts up. **Yes** indicates the system will automatically connect. Click on the column value to change the setting. NOTE: You must configure HP ThinConnect to auto start for this setting to function


properly. To configure HP ThinConnect to automatically start up, see [Auto Starting HP ThinConnect on page 17](#).

- **Persistent:** Determines whether the system will attempt to reconnect when a connection fails. **Yes** indicates the system will automatically attempt to reconnect. Click on the column value to change the setting.
- **OK:** Click to save changes and exit the Advanced window.
- **Cancel:** Click to cancel unsaved changes and exit the Advanced window.
- **Apply:** Click to save changes.

## Assigning Connections

Once you have created a connection, you can assign it to users in the Advanced window.

1. In HP ThinConnect, click **Advanced**.
2. On the **Assign Connections** tab, select the appropriate user from the **User** list.

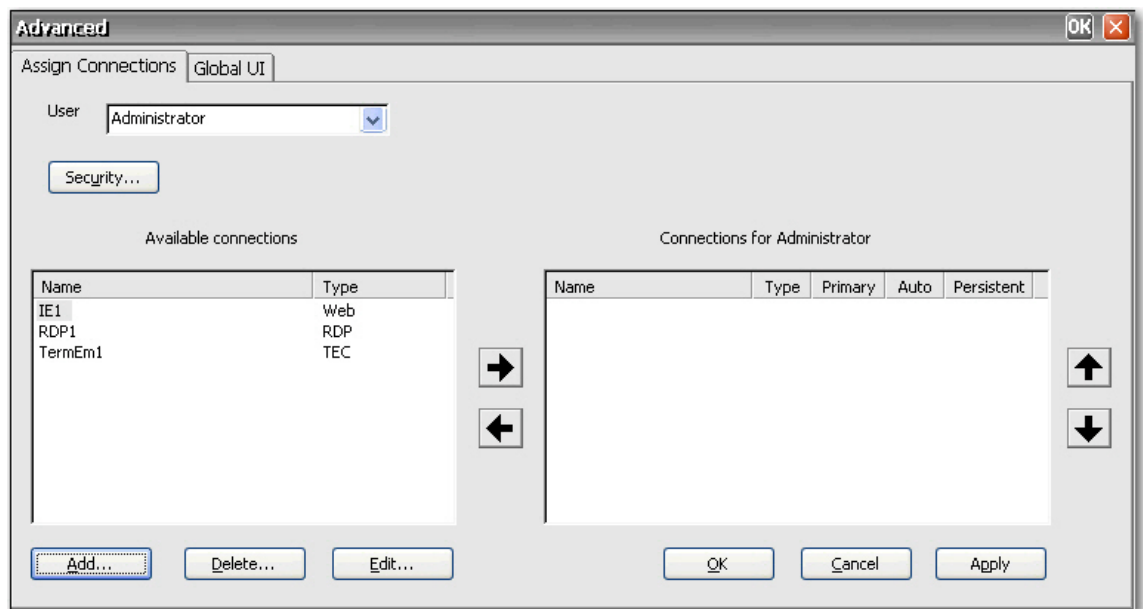


3. Double-click the connection in the **Available connections** list, or select the connection and click the right arrow. The connection is copied to the **Connections for [user]** list.
4. Click **Apply** to save the updated list of connections for the user.

## Designating Connections as Primary or Secondary

You can designate connections as primary or secondary in the Advanced window. A primary connection is the first attempted in a group of connections. If a primary connection fails, the system attempts failover secondary connections in the order they are listed. You can configure more than one primary connection, each of which can have several secondary connections associated with it. Secondary connections are optional.

To designate a connection as primary or secondary:

1. In the HP ThinConnect window, click **Advanced**.
2. On the **Assign Connections** tab, select the appropriate user from the **User** list.
3. Select the connection from the user's connection list that you want to make primary.
4. In the **Primary** column, click on the column value to change it. **Yes** means the connection is a primary connection. The first entry in the list must be primary.
5. If you want to assign a secondary connection, select the connection and change the value in the **Primary** column to **No**. The connection becomes secondary to the first primary connection directly above it in the list.
6. To arrange the order of connections, select a connection and click the up and down arrows.
7. Click **Apply**.


 **NOTE:** Every secondary connection must have a primary connection listed above it.

## Enabling Automatic Connection and Reconnection

In the Advanced window, you can set up primary connections assigned to users to automatically connect at boot up and to reconnect if disconnected. Automatic connection requires that you configure HP ThinConnect to start automatically. For more information, see [Auto Starting HP ThinConnect on page 17](#).


To enable automatic connection and reconnection:

1. In the HP ThinConnect window, click **Advanced**.
2. On the **Assign Connections** tab, select the appropriate user from the **User** list.
3. Select the primary connection in the user's connection list that you want to automatically connect.

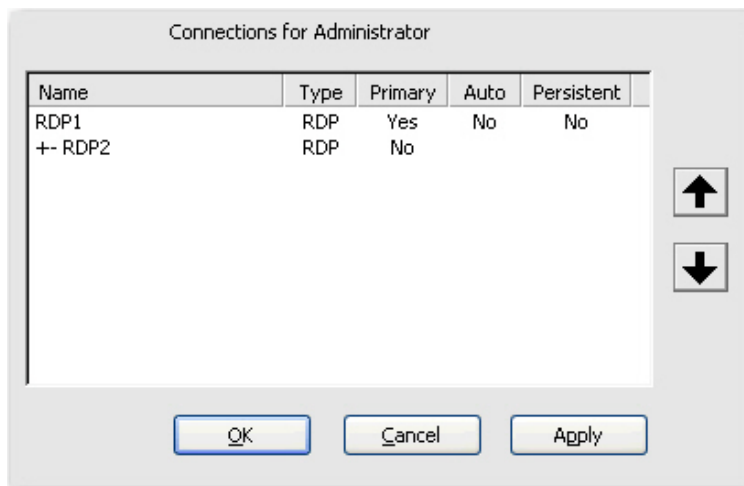


4. In the **Auto** column, if the entry for the selected connection is **No**, click on **No** to change it to **Yes**.
5. Select the connection in the user's connection list that you want to make automatically reconnect.



 **NOTE:** You can set only primary connections to automatically reconnect.

6. In the **Persistent** column, if the entry for the selected connection is **No**, click on **No** to change it to **Yes**.
7. To arrange the order of connections, select a connection and click the up and down arrows. Secondary connections are associated with the first primary connection above them in the list.
8. Click **Apply** to save your changes.

 **NOTE:** You can set only primary connections to automatically connect when HP ThinConnect is launched.

## Configuring the User Interface


The **Global UI** tab on the Advanced window allows you to configure HP ThinConnect to start automatically and allows you to set up Kiosk mode.

### Auto Starting HP ThinConnect

You can enable automatic log on, which causes HP ThinConnect to start automatically when the user logs in to Windows.

To auto start HP ThinConnect:


1. In the HP ThinConnect window, click **Advanced**.
2. Click the **Global UI** tab.

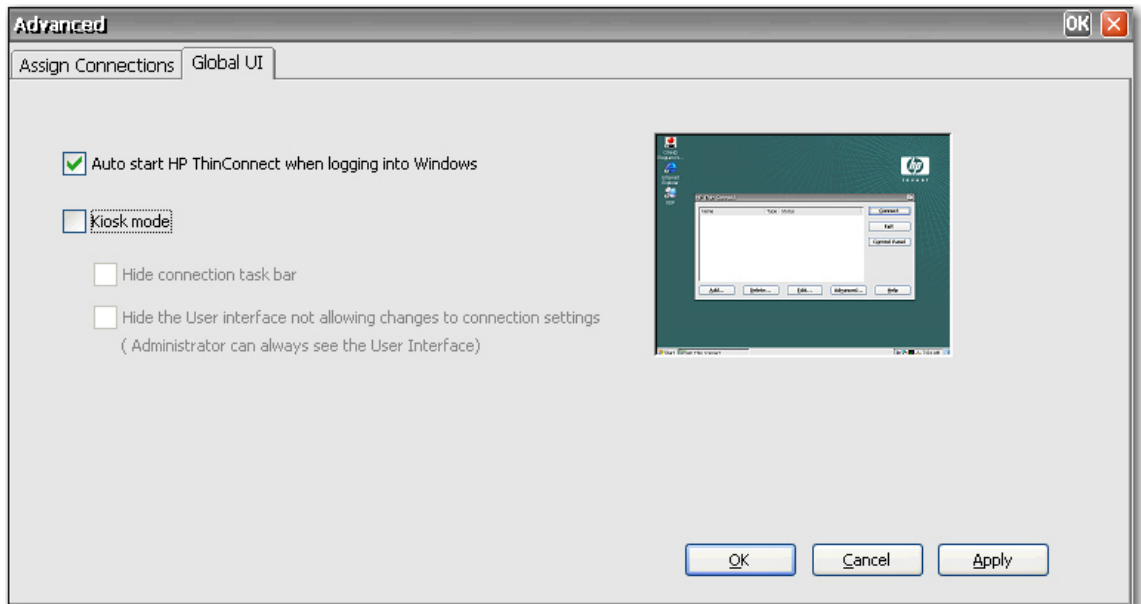

3. Select **Auto start HP ThinConnect when logging into Windows**.
4. Click **Apply** to save changes.

## Setting the Terminal to Kiosk Mode


Kiosk mode limits the terminal's functionality by hiding the desktop icons and limiting the Start menu to **Shut Down** only. There are also Kiosk mode options for hiding the task bar and hiding HP ThinConnect.

 **NOTE:** Before setting a terminal to run in Kiosk mode, you must define a user and create a connection. For more information, refer to “Creating user accounts” and “Connections”.


The preview display on the right side of the screen shows you how the user interface will appear when you select the various check boxes on the left side of the tab.

To set the terminal to run in Kiosk mode:


1. Create the necessary connection.
2. On the HP ThinConnect window, click **Advanced**.
3. Click the **Global UI** tab.
4. Select the **Auto start HP ThinConnect when logging into Windows** check box. This makes the Kiosk mode option available.
5. Select **Kiosk mode**. Two more check boxes become available as options.

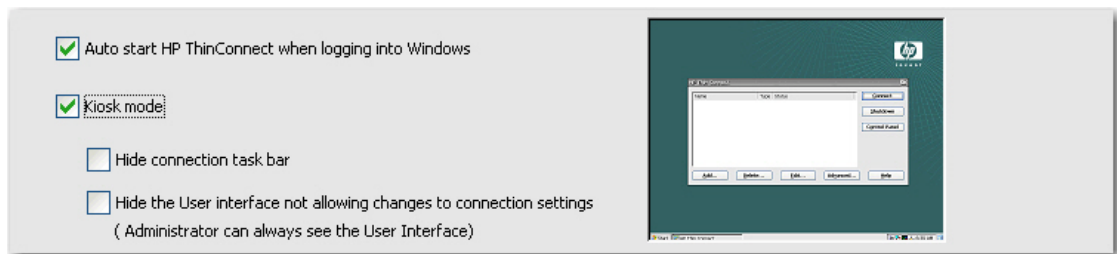

6. To further lock down the terminal in Kiosk mode by hiding the task bar at the bottom of the desktop, select the **Hide connection task bar** check box. You must select the automatic logon feature to gain access to this feature.

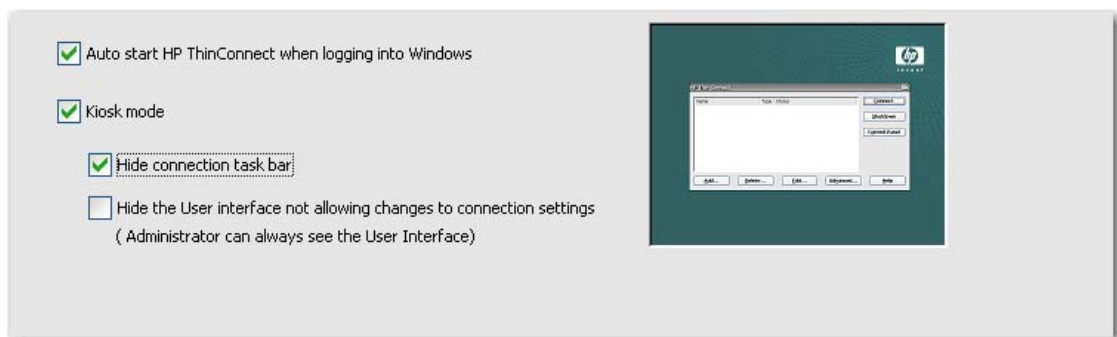

- To further lock down the terminal in Kiosk mode by hiding the user interface to connection settings, select **Hide the User interface not allowing changes to connection settings**. You must select the automatic logon feature to gain access to this feature.

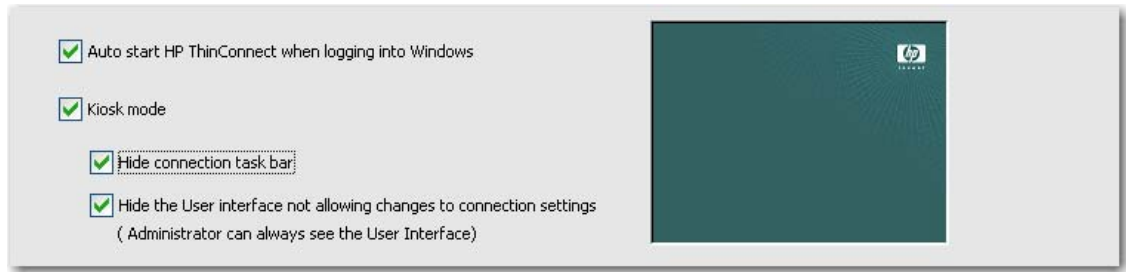


- Click **Apply** to save your changes, or click **OK** to save your changes and exit the Advanced window.
- Log off the user for all changes to take effect.

## Enabling Automatic Log On and Keyboard Functions

The Security window in Control Panel allows you to enable automatic log on which bypasses a user's password requirement when logging on to the system.

To enable automatic log on:

- On the HP ThinConnect window, click **Advanced**.
- Click **Security**. The **System Statistics** area shows information about system users and connections.

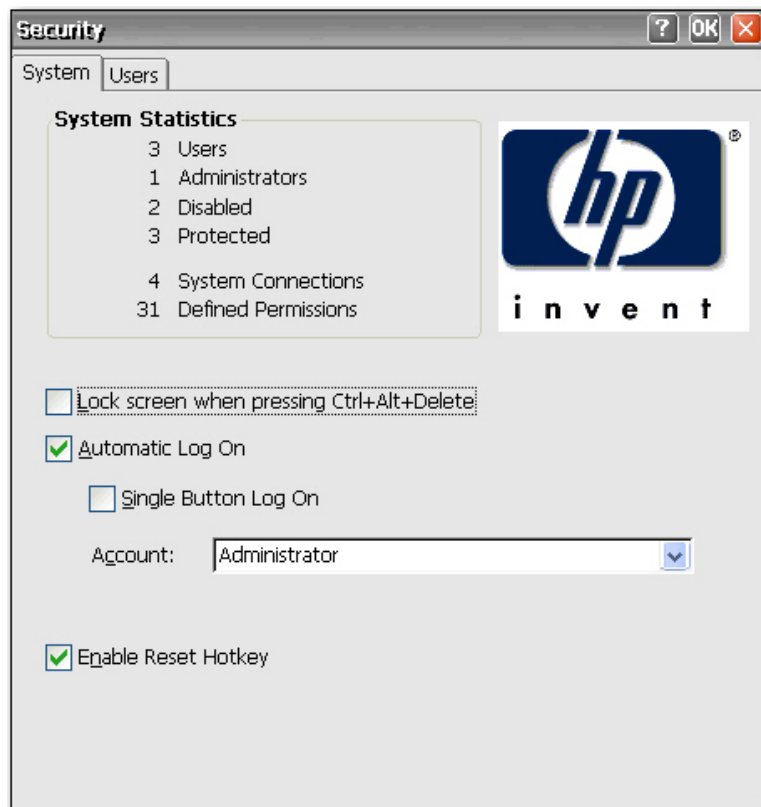

3. On the **System** tab, select **Automatic Log On** so the user does not have to enter a password to log in to the local machine. You can set up automatic log on for one user per terminal. The default is no password. You must select **Automatic Log On** to gain access to the **Single Button Log On** check box and the **Account** list.
  4. If you want to lock the terminal when pressing **Ctrl+Alt+Delete**, select **Lock screen when pressing Ctrl+Alt+Delete**. This feature allows users to quickly lock their terminal and prevent unauthorized access. When the terminal is locked, press **Ctrl+Alt+Delete** again to type your password to regain access to the terminal.
  5. If you want to activate the single button connect feature, select **Single Button Log On**. This feature invokes a dialog box that requires the terminal operator to press **Enter** or click the **Logon** button on the dialog box to log in. If someone other than the auto logon user wants to log onto the terminal, press **Esc** or **Alt+F4**.
  6. From the **Account** list, select the account that the system will use to log on the terminal operator.
  7. Select **Enable Reset Hotkey** to allow the terminal to be reset to factory defaults (registry and shortcuts) by pressing and holding **F9** key during boot.
- 
- △ **CAUTION:** If you disable the F9 reset function and then change monitors or change display settings resulting in your monitor becoming unable to display, the only way to recover the client will be to reflash it.
- 
8. Click **OK** at the top of the window to save your changes.

## Switching to a Different User

To switch to a different user when booting:

1. Press the power button to start the system.
2. Press **Esc** or **Alt+F4** before the automatic logon countdown completes.
3. Log on as the user of your choice.

---


# 4 Control Panel

This chapter provides an overview of the programs in the Control Panel and provides step-by-step instructions to perform certain tasks. You can use many of the programs for local administration, while you use others, such as DHCP Options and SNMP, for remote administration.

To open the Control Panel:

- From the desktop, select **Start > Settings > Control Panel**.
- or
- From the HP ThinConnect window, click the **Control Panel** button.


---

 **NOTE:** The LPD Control program is available only on terminals equipped with a serial port.

---

## Accessibility


The Accessibility dialog box allows you to configure the terminal with 508 Accessibility features. Accessibility options are available for the keyboard, sound, display, and mouse.

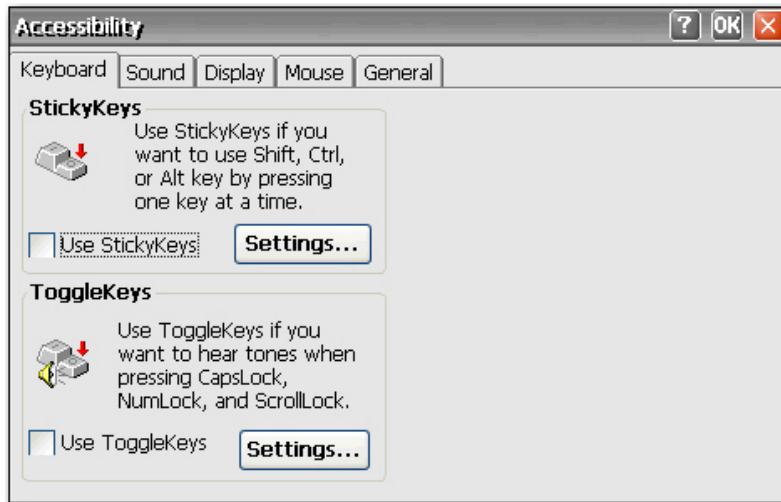

- **Keyboard:** Allows you to enable StickyKeys, which lets you use the [Shift](#), [Ctrl](#), and [Alt](#) keys pressing one key at a time rather than holding them all down simultaneously. You can also enable ToggleKeys to hear tones when pressing the [Caps Lock](#), [Num Lock](#), and [Scroll Lock](#) keys.
- **Sound:** Allows you to enable SoundSentry, which causes Windows to generate visual warnings when the system makes a sound.
- **Display:** Allows you to enable High Contrast, which causes Windows to use colors and fonts designed for easy reading.
- **Mouse:** Allows you to enable MouseKeys, which lets you control the pointer with the numeric keypad on the keyboard.
- **General:** Allows you to automatically turn off accessibility features after a set amount of idle time. You can also enable the notification feature, which causes Windows to make a sound when you turn a feature on or off.


## Boot Settings

The Boot Settings dialog box allows you to configure the thin client boot order.

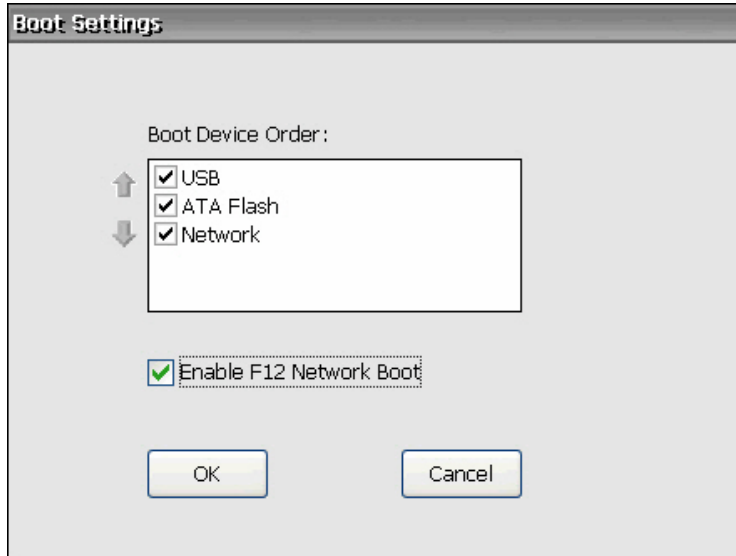

**Boot Device Order:** Select to enable the device to which the thin client boots. Use the up and down arrows to the left of the list to change the position of a selected device.

---


 **NOTE:** You cannot clear (disable) **ATA Flash**.

---

**Enable F12 Network Boot:** Select to enable the ability to boot the client using a network drive.

## Certificates

The Certificates dialog box allows you to import, store, and view security certificates. Certificates and certificate authorities ensure that an SSL connection is made to the intended secure server. Certificate information is exchanged between the terminal browser and the secure server when establishing a connection. If a trusted certificate authority can authenticate the certificate, the secure page is automatically displayed. A private key is also used to encrypt data over an SSL connection.

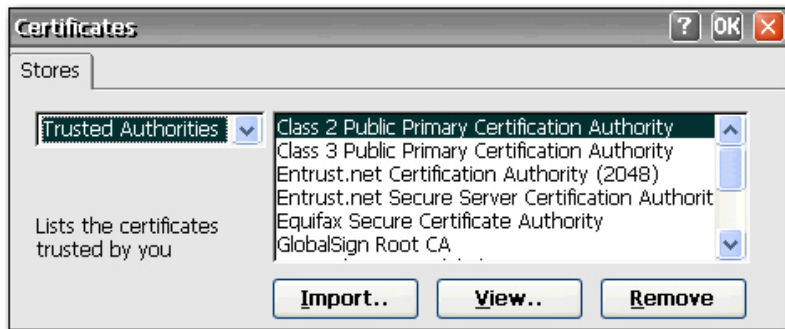


To import a certificate or private key:

1. Select the type of certificate you would like to import from the drop-down list.
  - Trusted Authorities are digital certificates issued by certification authorities. The Windows CE browser comes with a pre-defined list of trusted certification authorities that include Equifax, Thwarte, Entrust, GlobalSign, GTE, and others.
  - My Certificates are your personal digital certificates.
  - Other Authorities are intermediate certificate authorities. No intermediate authorities are loaded by default.
2. Click **Import**, select the location source of the certificate or key, and then click **OK**.
  - **From a File** allows you to import a certificate or key from any mapped drive. Browse to the certificate or key and select it, or select the **Type** and type the name of the certificate or key in the **Name** box.
  - **From a Smart Card** allows you to import a certificate from a Smart Card. Make sure the Smart Card is inserted and select a **Reader** from the list. The radio button is active only if a smart card is inserted.
  - **Friendly name** allows you to rename a certificate that you import.
3. Click **OK**.



## Date/Time

The Date/Time Properties dialog box allows you to set the date and current time, select the appropriate time zone, and enable automatic clock adjustment for daylight savings time for the terminal.

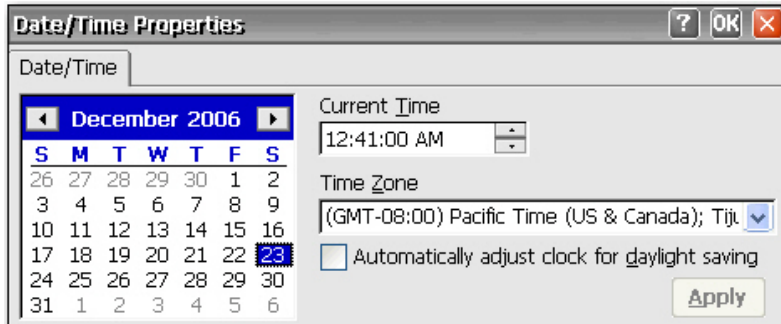


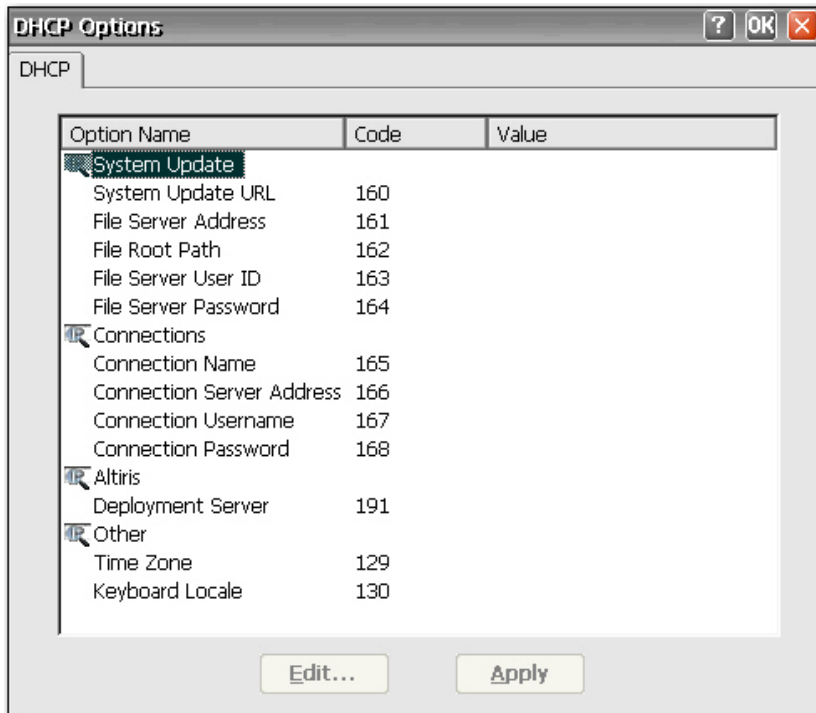
▲ Select the appropriate date and time information, and then click **Apply**.

## DHCP Options

The DHCP Options page allows you to configure the thin client with tags (see the Codes column in the illustration below) that identify the FTP location of the update image that the client retrieves from the FTP server. If you set these tags, the Value column will be populated automatically with the FTP server location. Each time the system boots, it will check these fields for a file server (or FTP server) and will look for system updates. Use the Power Settings utility to schedule wakeup and shutdown times to make sure the system is updated regularly.



**NOTE:** For information about resetting thin client settings to factory defaults, see the  [System](#) [on page 65](#) section later in this chapter.




To change tag codes:

1. Double-click on the name of the option to change. A dialog box will be displayed with a list of all valid options.
2. Select the appropriate value from the list, and then click **OK**.

## Dialing

The Dialing Properties dialog box allows you to:

- Add or select a dialing location.
- Configure dial-up settings for the selected location. Local settings include the area code, county/region code, and tone or pulse dialing.
- Disable call waiting.
- Set up dialing patterns for local, long distance, and international calls.

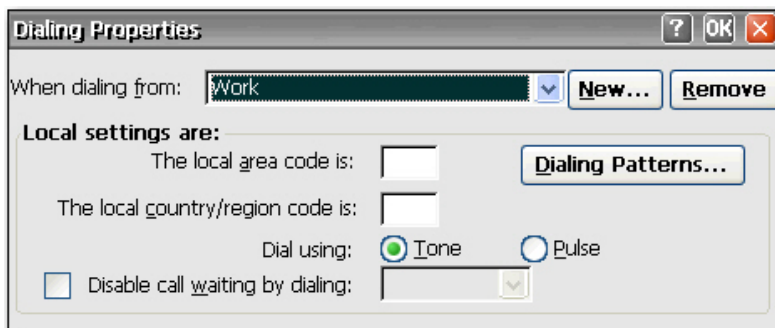


To add a dialing location:

1. Select or add a **When dialing from location** and type the local settings for the location.
2. Click **OK** after entering the information.

To configure the system to use an area code for local calls:


1. Click **Dialing Patterns**.

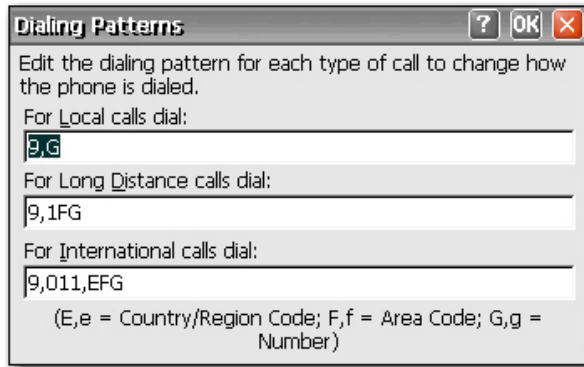


2. In the **For Local calls** dial box, add an **F** before the **G**. For example, **F,G** will dial the area code, then 7-digit phone number.

## Display

The Display Properties dialog box allows you to configure the background image, appearance scheme, screen resolution, color quality, refresh frequency, and screen saver.

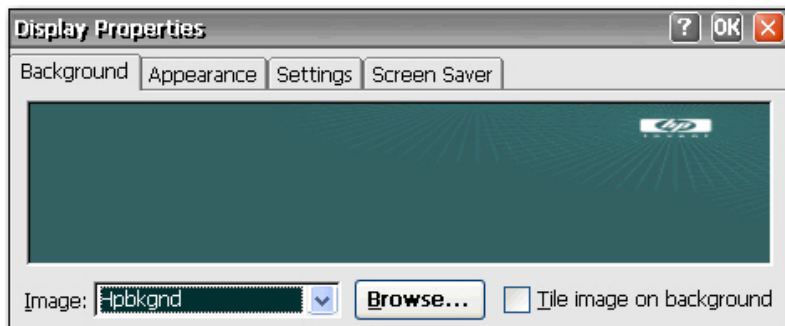

 **NOTE:** You can also access the Display Properties dialog box by right-clicking on the desktop and selecting Properties.

Reboot the terminal for display property changes to take effect.

The Background tab allows you to set the background image that appears on your monitor. You can use a background image that is any of the following formats:

- bmp
- gif
- jpeg

Save background image files in the **Hard Drive** folder to assure the client can find them after a reboot.

The **Appearance** tab allows you to set the Windows CE color scheme.

The **Settings** tab includes a **Test** button that you can use to test the resolution and refresh settings. If you select settings your monitor does not support and you do not test updated settings, the next time you reboot, your display will not work and you must press **F9** to reset to defaults.


In the **Screen Saver** tab you can set up password protection as well as configure the following screen saver options:

- no screen saver
- turn off monitor
- floating image
- tiled image

The following table lists the available screen resolutions, color quality settings, and refresh frequencies. The default is 800x600x16 @ 60Hz.


Resolution/Color	Wide Screen	60Hz	75Hz	85Hz
800x480x16	X	X		
800x480x32	X	X		
800x600x16		X	X	X
800x600x32		X	X	X
1024x768x16		X	X	X
1024x768x32		X	X	X
1280x720x16	X	X		
1280x720x32	X	X		
1280x768x16	X	X		
1280x768x32	X	X		
1280x1024x16		X	X	X
1280x1024x32		X	X	X
1360x768x16	X	X		
1360x768x32	X	X		
1366x768x16	X			
1366x768x32	X			
1400x1050x16		X		
1400x1050x32		X		
1440x900x16	X	X		
1440x900x32	X	X		
1600x1200x16		X	X	X

Resolution/Color	Wide Screen	60Hz	75Hz	85Hz
1600x1200x32		X		
1680x1050x16	X	X	X	X
1680x1050x32	X	X	X	X
1920x1200x16	X	X		
1920x1200x32	X	X		
1920x1440x16		X		
1920x1440x32		X		
2048x1536x16				
2048x1536x32				

 **NOTE:** If you set the display settings out of range, you must reset the terminal to factory defaults by rebooting the terminal and holding down the **F9** key until you see a window that says “Loading...” at the bottom. Resetting the terminal to factory defaults erases all configuration settings and connections.

# ica Global ICA Client Settings

The Global ICA Client Settings dialog box allows you to configure ICA default client settings.

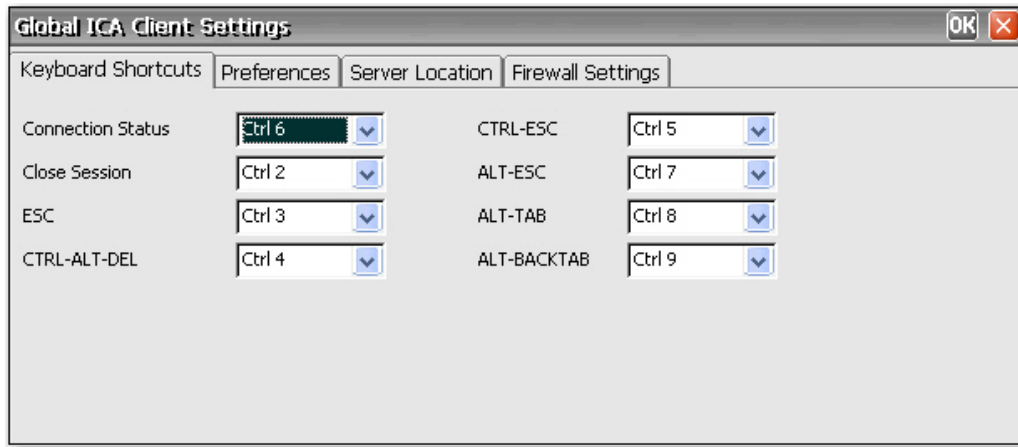


## Keyboard Shortcuts

The **Keyboard Shortcuts** tab allows you to configure hot key combinations that you can use during active ICA sessions. You can assign the hot keys used to perform a function by selecting the hot key combinations from the list next to each function.

- **Connection Status** invokes a message about the status of the connection.
- **Close Session** disconnects the terminal from the server but does not actually close the session on the server. The session will continue to run on the server until the terminal operator logs off.
- **ESC** performs the same function as the [Esc](#) key.
- **CTRL+ALT+DEL** invokes the terminal Security dialog box.
- **CTRL+ESC** calls up the Remote Task list on WinFrame servers, or opens the Start menu on MetaFrame servers.
- **ALT+ESC** cycles the focus through the minimized icons.
- **ALT+TAB** cycles through open applications in sequential order.
- **ALT+BACKTAB** also cycles through open applications sequentially, but in the opposite direction.

## Preferences

The **Preferences** tab allows you to set color preferences during an ICA session.

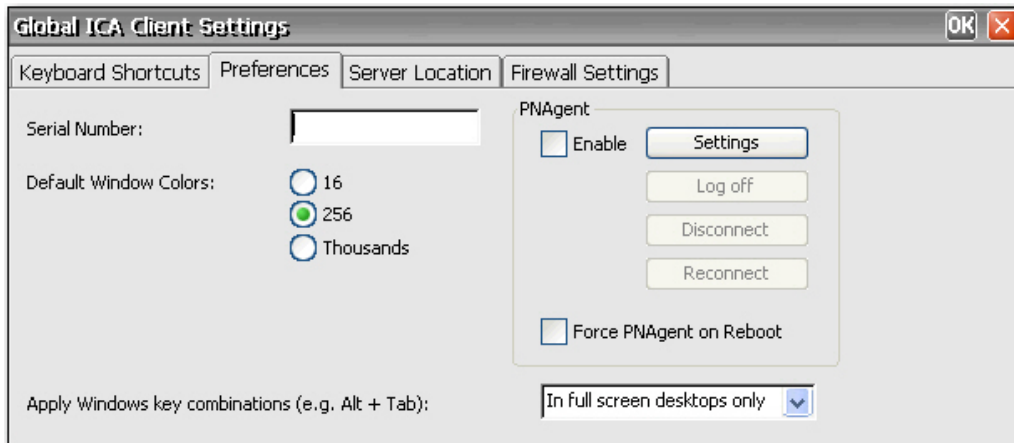


The **Preferences** tab contains the following:

- **Serial Number:** Type the serial number of the ICA Client software exactly as it appears on the serial number card. This is necessary when using the ICA Windows CE Client with certain products, such as WinFrame Host/Terminal. It is not necessary for MetaFrame servers.
- **Default Window Colors:** Select the color option for the ICA client. If the ICA server does not support the selected color option, then it defaults to 16-bit color.
- **PNAgent:** Select to enable PNAgent.
  - **Settings:** Click to display a dialog box that allows you to type the URL of the PNAgent server. You can use this server to remotely configure PNAgent settings. You can configure ICA seamless settings in these screens.
  - **Force PNAgent on Reboot:** Select to cause PNAgent to prompt you to log in every time you reboot.
- **Apply Windows key combinations:** Select the option in which you want key combinations to function.
  - **In full screen desktops only** and **On the remote desktop** apply to the ICA session.
  - **On the local desktop** applies to the local client.

## Server Location

The **Server Location** tab allows you to view/add Citrix servers on the network that have ICA connections configured.

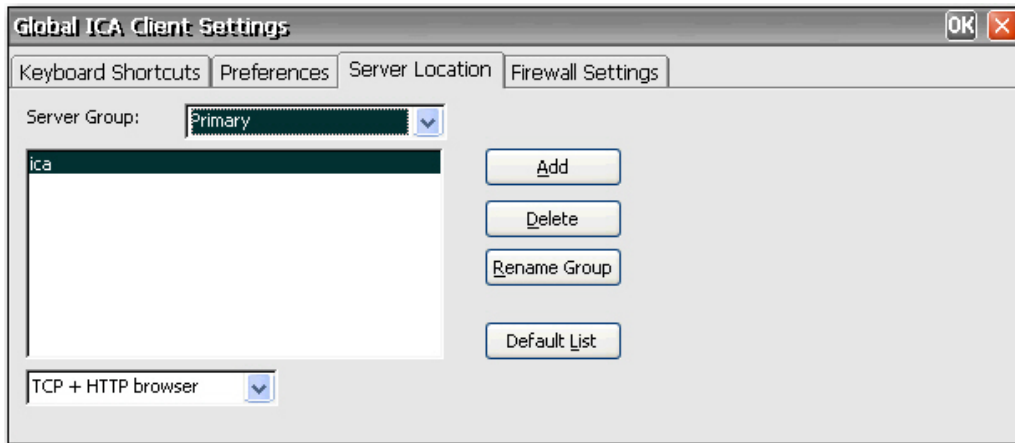


The **Server Location** tab contains the following:

- **Server Group:** Select whether the servers in the server address list belong to your Primary, Backup 1, or Backup 2 group.
- **Server address list:** Lists the entered server locations.
- **Add:** Click to add a server address.
- **Delete:** Click to delete a server address.
- **Rename Group:** Click to rename the selected server group.
- **Default List:** Click to recall the previous server address list.

## Firewall Settings

The **Firewall Settings** tab allows you to set up a firewall by placing a proxy server between a server and a client.

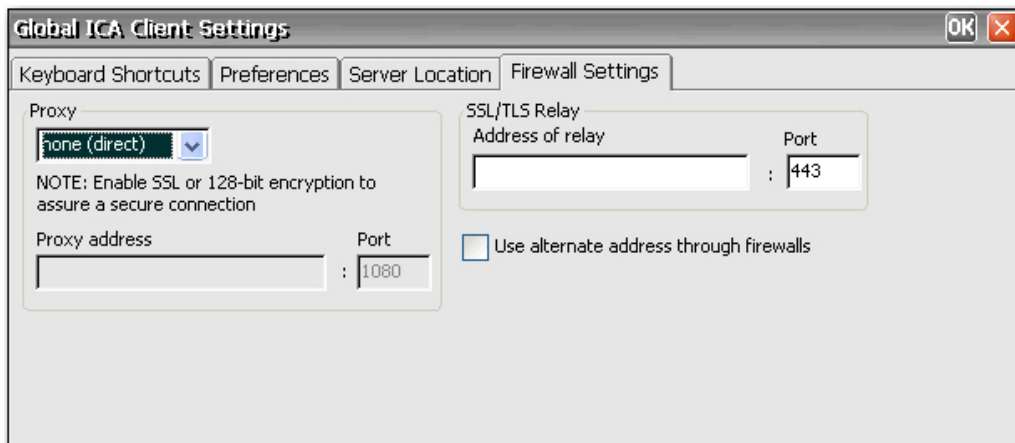

In the **Proxy** section, select a protocol from the list, and then type the proxy address and port.



In the **SSL/TLS Relay** section, type the relay address and port for the Socket Security Layer (SSL) or Transport Layer Security (TLS) protocol.

If the firewall uses address remapping, you must configure the client to use the alternate address returned by the data collector by selecting **Use alternate address through firewalls**. This is necessary whether or not you are using a SOCKS or secure proxy server.




## HP Easy Config

HP Easy Config allows the administrator to easily configure the thin client for one of 4 different pre-configured modes. In general HP Easy Config will configure three groups of settings: a connection, an additional user and kiosk mode for the user interface selected.

Configuration modes:

- Default Desktop
- VMware View Appliance
- Citrix Desktop Appliance
- Web Appliance

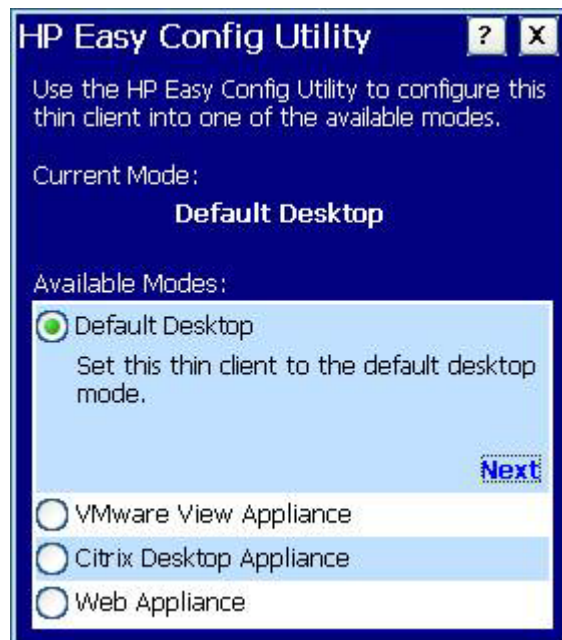



Default Desktop is the default mode of the thin client. In this mode, the client boots in standard desktop mode without making any default connections.

**NOTE:** To log out of the selected appliance mode, press **Ctrl + Alt** + the up arrow and a log off button will appear in the bottom right corner. Press **Ctrl + Alt** + the down arrow to make the log off button disappear.


To return to the Default Desktop mode, log out of the selected Appliance mode. During the Automatic Log On screen, press **Esc** and the Administrator login screen will appear. Log in as Administrator and use Easy Config to switch back to Default Desktop mode.

## VMWare View Appliance

1. To see the VMware settings, click **VMware View Appliance** and click **Next**.

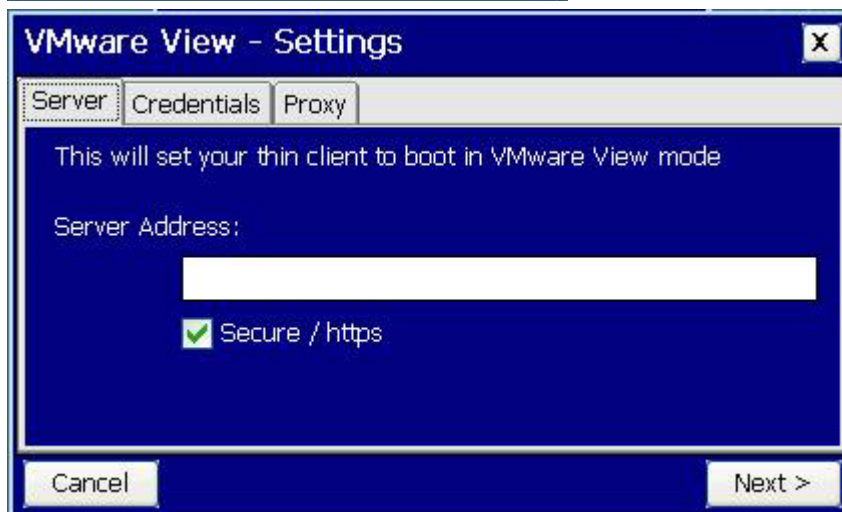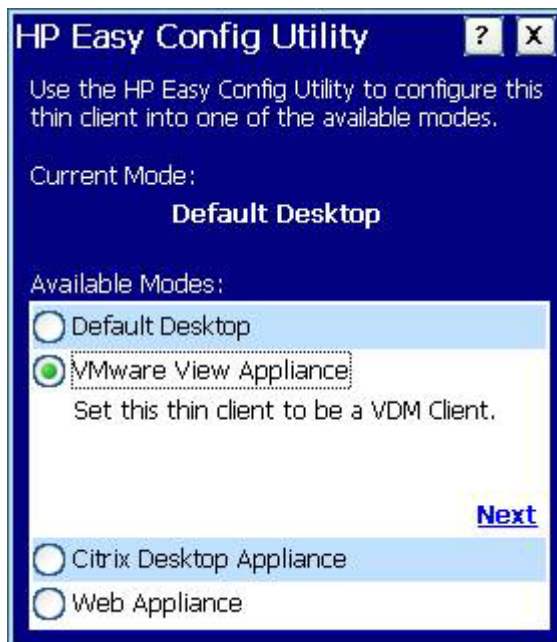


2. Type the server address in the field and then click **Next**.

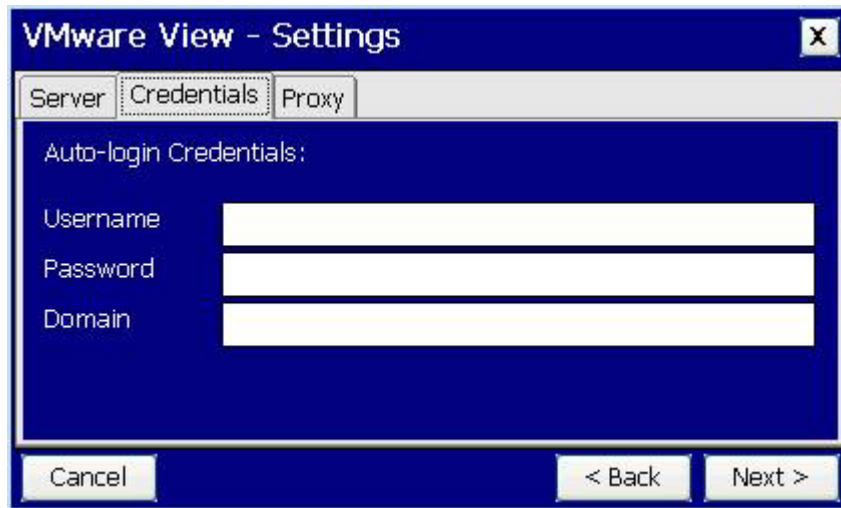

The screenshot shows the 'VMware View - Settings' dialog box with the 'Credentials' tab selected. The 'Server' tab is also visible. The 'Auto-login Credentials' section contains three text input fields labeled 'Username', 'Password', and 'Domain'. At the bottom, there are three buttons: 'Cancel', '< Back', and 'Next >'.

3. Type the credentials in the **Username**, **Password**, and **Domain** fields and then click **Next**.


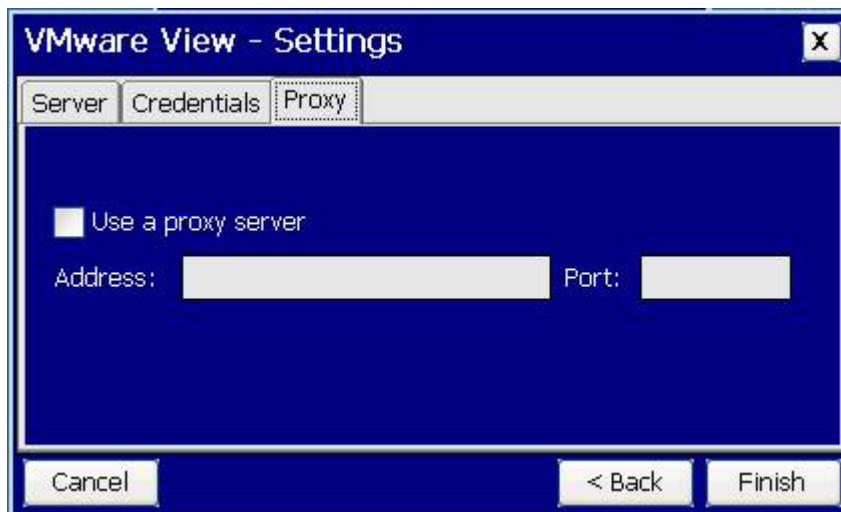


The screenshot shows the 'VMware View - Settings' dialog box with the 'Proxy' tab selected. The 'Server' and 'Credentials' tabs are also visible. The 'Use a proxy server' checkbox is unchecked. Below it are two text input fields labeled 'Address:' and 'Port:'. At the bottom, there are three buttons: 'Cancel', '< Back', and 'Finish'.


4. Select **Use a proxy server** and type the server address and port in the fields. Click **Finish**.  
The next time the thin client is started up, it will boot into VMware Appliance mode.

## Citrix Desktop Appliance

1. To see the Citrix XenDesktop settings, click **Citrix Desktop Appliance** and then click **Next**.

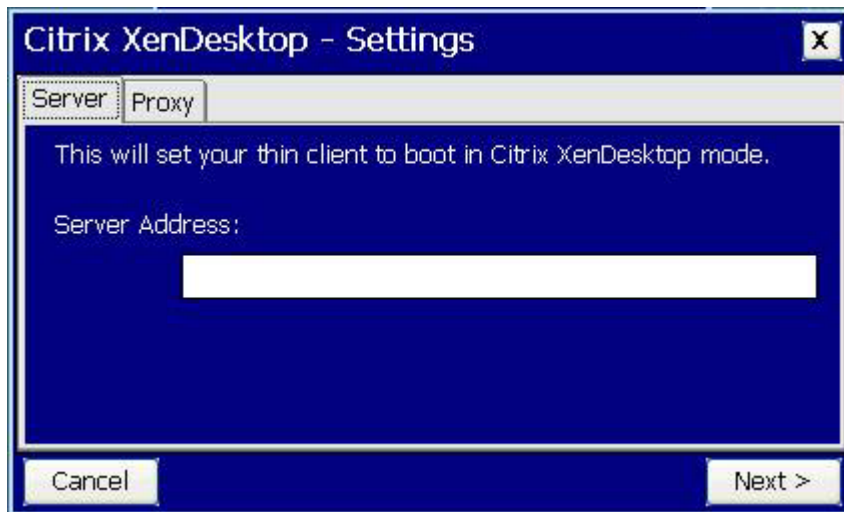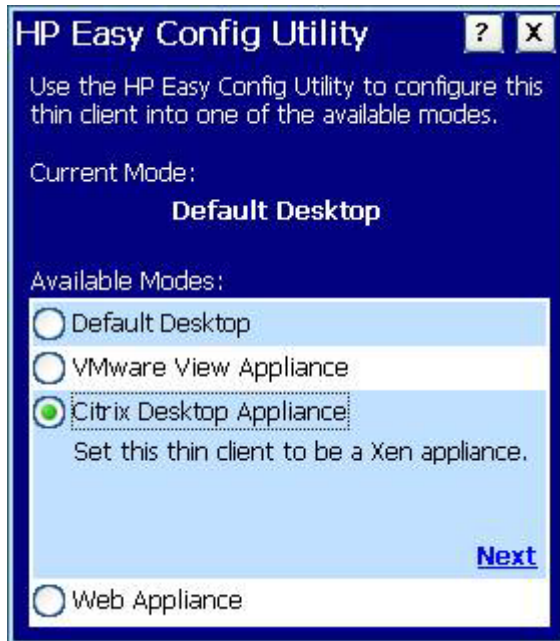



2. Type the server address in the field and then click **Next**.

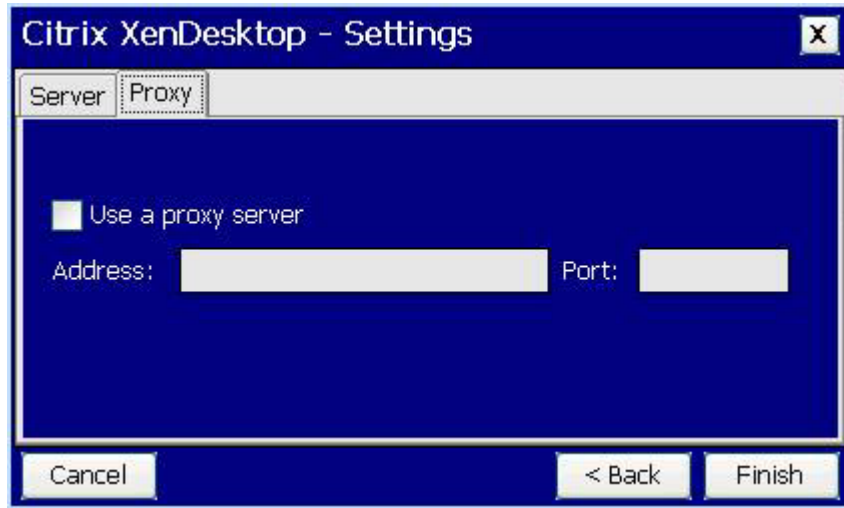


3. Select **Use a proxy server** and type the server address and port in the fields. Click **Finish**.  
The next time the thin client is started up, it will boot into Citrix Desktop Appliance mode.

## Web Appliance

1. To see the Web Appliance settings, click **Web Appliance** and then click **Next**.

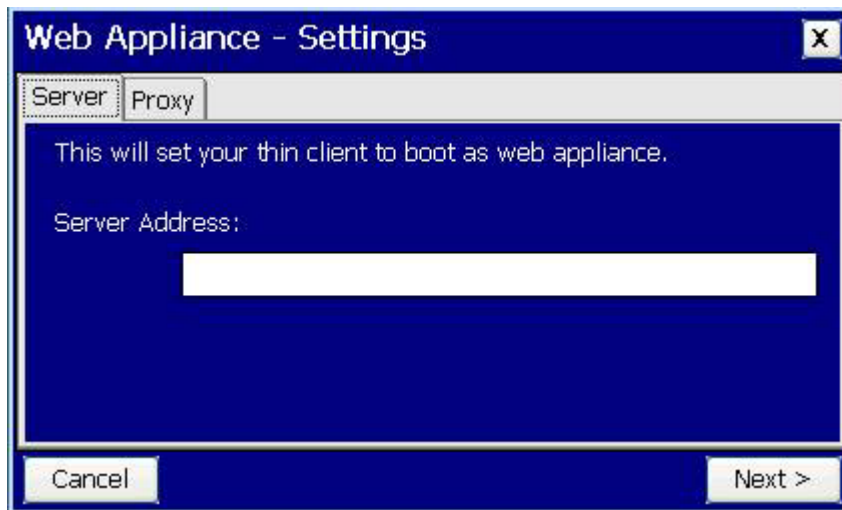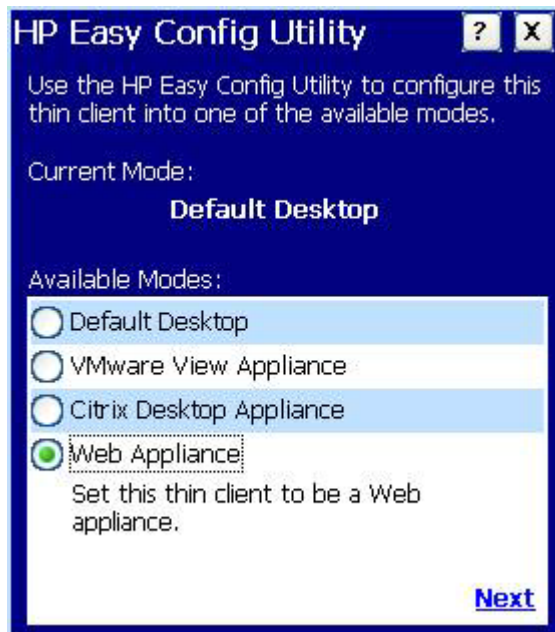

2. Type the server address in the field and then click **Next**.

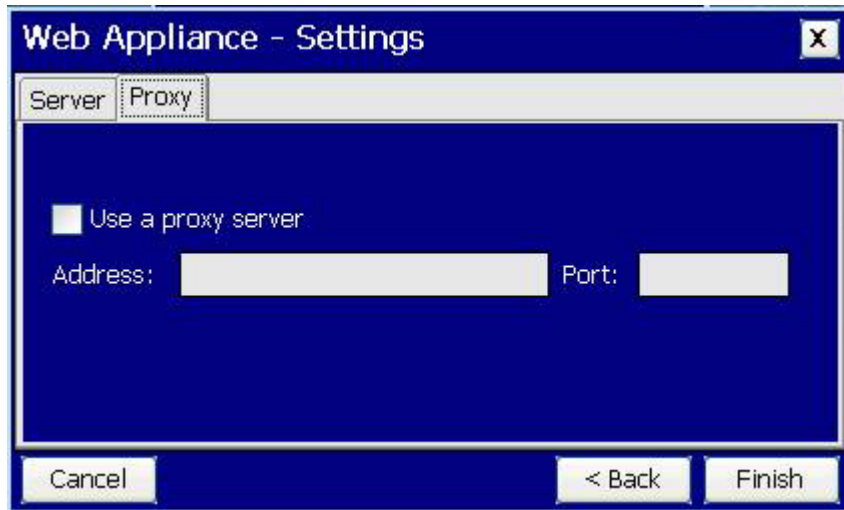

3. Select **Use a proxy server** and type the server address and port in the fields. Click **Finish**.  
The next time the thin client is started up, it will boot into Web Appliance mode.






# HP Easy Update

HP Easy Update allows the administrator to greatly reduce the number of steps required to update the thin client software image and/or Add-ons.

To update the thin client software image:


1. Launch Easy Update from the control panel. Easy Update will go to the Web to get the latest available updates.

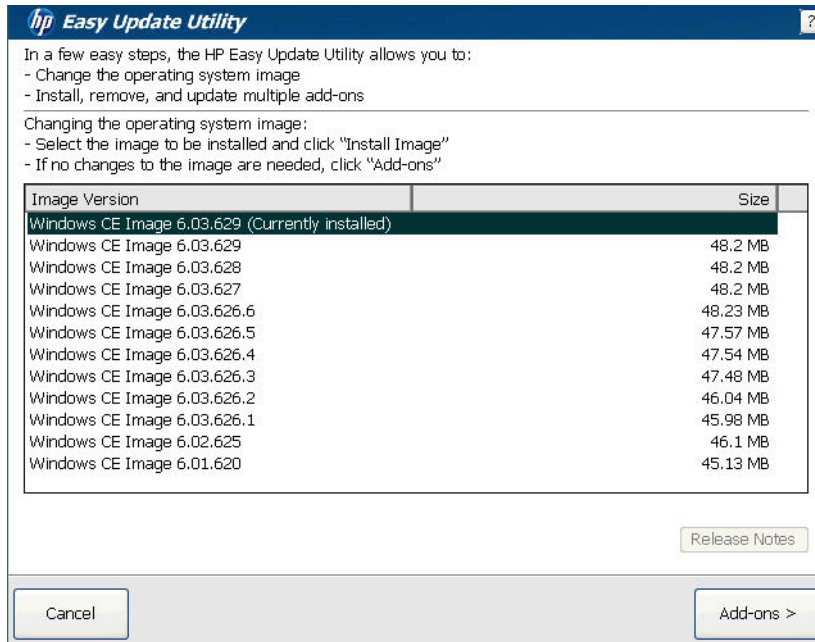

The administrator will be presented with the current version of images installed and all the images available for that particular thin client model number. This makes it easy for the administrator to compare versions and release notes.

2. Select an image version. The **Add-on** button will change to **Install Image** button. Press **Install Image** and the HP Easy Update application will automatically download and install the selected image version.

Release notes can be viewed by selecting an image version and then clicking **Release Notes**.

 **NOTE:** The **Release notes** window must be closed to continue with the install process.


3. Click **Finish** when complete.

HP Easy Update will close and the selected changes are complete.



To install Add-ons to the thin client software image:

1. Open the HP Easy Update Application and click **Add-on**. If an image update is not required, click **Add-on** to continue.

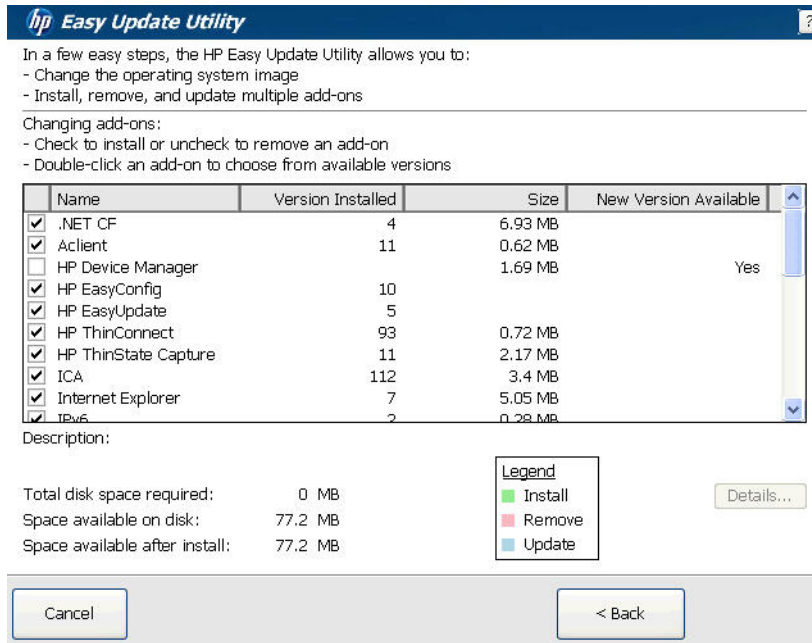

The Administrator can select multiple Add-ons to install, update, or uninstall. The Add-ons listed are all the Add-ons available for update or install. If a newer version is available than the one preinstalled in the image, a version number will be listed in the New Version Available column. If no version is listed, no updates are available.

2. Clear a box to remove an Add-on. Select a box to install or update an Add-on.
3. Click **Next**, then accept the HP License Agreement to continue.

Easy Update will install selected new Add-ons, update selected Add-ons, and uninstall selected Add-ons all in a single process. A reboot is not required.

4. Click **Finish** when done.

HP Easy Update will close and the selected changes are complete.

## HP Device Manager

HP Device Manager is enterprise-class thin client management software that allows customers to view their thin client assets remotely and to manipulate those thin clients to meet the required business need.

Thin Client Management features include:

- Asset and inventory management
- Thin client settings and connection cloning
- Software updates
- Patch and client updates
- Remote control
- Remote power management




For more detailed information, please see the *HP Device Manager User Manual* or the *HP Device Manager Worldwide QuickSpec* at <http://www.hp.com>.

## HP ThinState Capture

HP ThinState capture and deploy allows you to capture a full thin client image or system settings and deploy them to other thin clients of the same model.

### HP ThinState Capture

 **NOTE:** The HP ThinState Capture tool is not a standalone tool and can only be accessed by the administrator from within the thin client image.

Save all data on the USB flash drive on some other device prior to performing this procedure. The USB flash drive will be formatted and all data will be lost.


**ATTENTION:** When deploying an image or settings from a “source” or “master” thin client to a “target” thin client, please make sure that source/master and target thin clients have identical hardware. This is applicable regardless of deployment method being used: HP ThinState Tools, Altiris Deployment Solution, HP OpenView Client Configuration Manager, or any other deployment solution being used.

The HP ThinState Capture tool is a simple wizard-based tool that you can use to capture an HP thin client image or system settings that you can then deploy to another HP thin client of identical model and hardware.

What do you need to have?

- An HP-approved USB drive key.
- An HP thin client CE unit that contains the latest HP provided image is optional.

Once you launch the ThinState Capture tool from within the Control Panel, you are presented with the following screen.

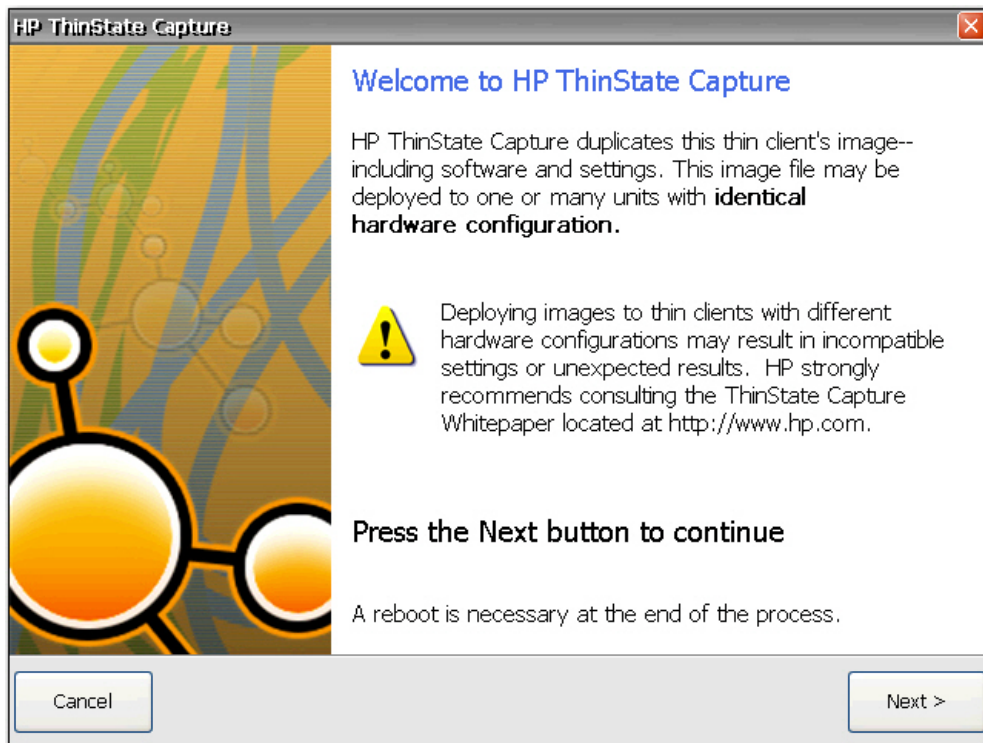

1. Click **Next**.
2. Connect a USB flash drive to the unit. The USB flash drive letter and size are displayed. The USB flash drive must be greater in size than the on-board flash disk.
3. Choose whether you want to capture a full image or system settings. Click **Capture**.
4. Click **Yes** on the warning screen. The ThinState Capture tool formats and makes the USB flash drive bootable. ThinState Capture reboots the system.
5. Follow the on-screen instructions.

You can now use the USB flash drive to deploy the captured image or system settings to another HP thin client of the exact same model and hardware.

## HP ThinState Deploy

To perform a ThinState deployment:


1. Set the boot order in the F10 System BIOS to USB boot (if necessary).
2. Attach the USB flash drive to the thin client unit you wish to deploy the captured image or system settings to, and then power on the unit.
3. Follow the on-screen instructions. You can deploy the captured image or settings in one of the following ways:
  - Upload to an FTP server or Windows file share
  - Save to a USB flash drive
  - Have the thin client host the settings or full image for other units to pick up using System Update (If you are using this option, you do not need the USB flash drive.)



After you remove the USB flash drive and cycle power to the system, the image unbundles. Do not interrupt or cycle power to the unit during this process.

You may use the captured image (flash.dd) found in the USB flash drive in combination with Altiris Deployment Solution to remotely image multiple thin client units.

---

 **NOTE:** You must use flash.ibr in conjunction with the HP ThinState Deploy utility (e.g., ibr.exe). Flash.dd is not compatible with the Altiris rdeploy.exe or rdeployt.exe utilities. Please consult the HP Compaq Thin Client Imaging Tool at: <http://h20000.www2.hp.com/bc/docs/support/SupportManual/c00485307/c00485307.pdf>.

---

For more information about Altiris, see <http://www.altiris.com/>.

## Internet Options


The Internet Settings dialog box allows you to configure Internet browser settings on the terminal.



The Internet Settings dialog box includes the following tabs:

- **General:** Allows you to enter start and search pages, identify the Web browser type to determine how Web pages are displayed, set the cache size, and clear cache and history.
- **Connection:** Allows you to select LAN or autodial connections and to configure proxy server settings.
- **Security:** Allows you to specify Web sites that are trusted, restricted, and so on. Also allows you configure ActiveX, scripting, and other advanced-type internet options.
- **Privacy:** Allows you to configure how the browser handles cookies.
- **Advanced:** Allows you to configure multiple internet options, including options for accessibility, browsing, multimedia, and security.
- **Popups:** Allows you to configure how the browser handles pop-ups, including blocking, notification when pop-ups are blocked, and exceptions that allow popups from specific sites.
- **Other Options:** Allows you to enable browser window resizing, enable favorites, and set the font size.


---

 **NOTE:** Due to CE architecture, proxy exceptions are not available.

---

## Keyboard

The Keyboard Properties dialog box allows you to configure your keyboard.

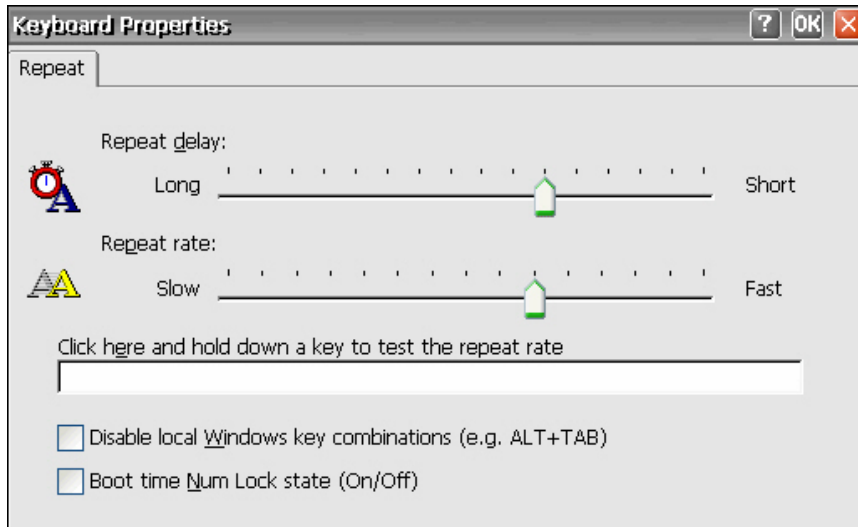

**Repeat delay** determines how long you must hold down a key before its character starts repeating.

**Repeat rate** determines how quickly a character repeatedly is displayed on screen when the key is held down.


If you are a legacy user, see  [Regional Settings on page 56](#) to change keyboard settings.

Select **Disable local Windows key combinations (e.g. ALT+TAB)** to disable the passing of hot keys to the terminal service server.

Select **Boot time Num Lock state (On/Off)** to enable Num Lock on the client.


## LPD Control

The LPD Control dialog box allows you to set the terminal up as a line printer (print server).

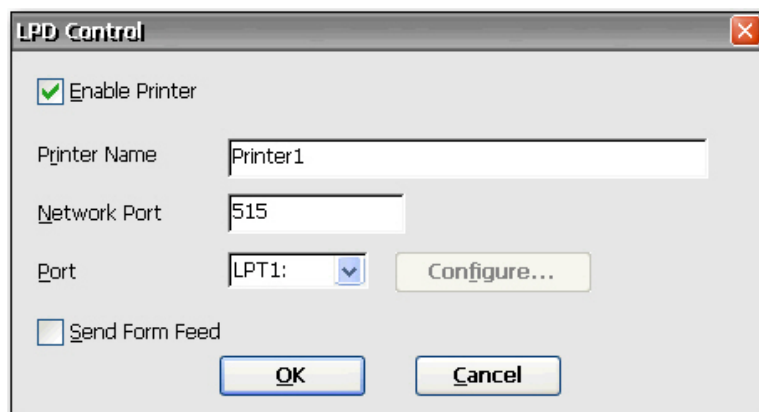


To set the terminal up as a print server:

1. Select **Enable Printer**.
2. Type the **Printer Name** and **Network Port**.
3. Select the appropriate printer port from the list. If you select a COM port, you have the option of configuring the serial port by clicking **Configure** and typing the appropriate parameters.
4. Select **Send Form Feed** if form feeds are necessary. Form feeds are primarily used with older printer technology.

 **NOTE:** Verify the terminal serial port is enabled in BIOS and in the Control Panel Port Lock window. You must also set up the application server for LPD printing.

## Modems

The Modem Settings dialog box allows you to access and modify settings for external modems.

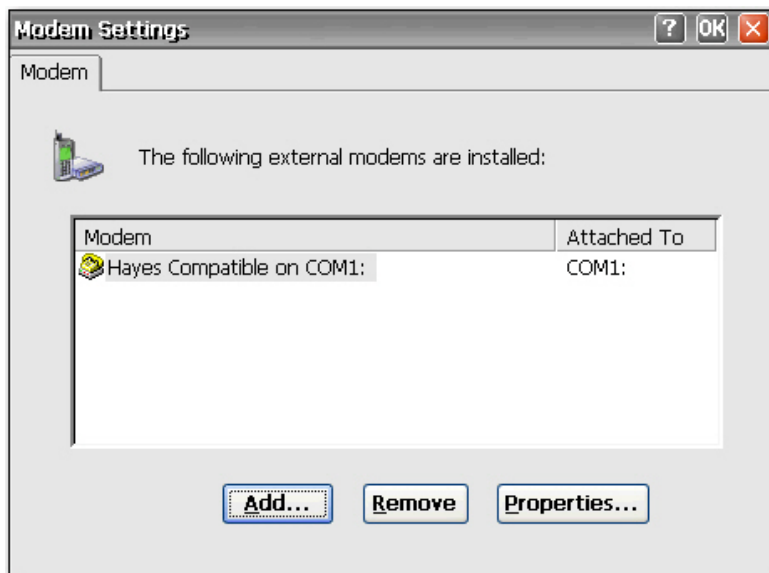


Refer to the device instructions that shipped with the modem, or located on the manufacturer Web site, for listings of modem “AT” commands available for the modem.

## Mouse

The Mouse Properties dialog box allows you to set the mouse double-click sensitivity for speed and physical distance between clicks.



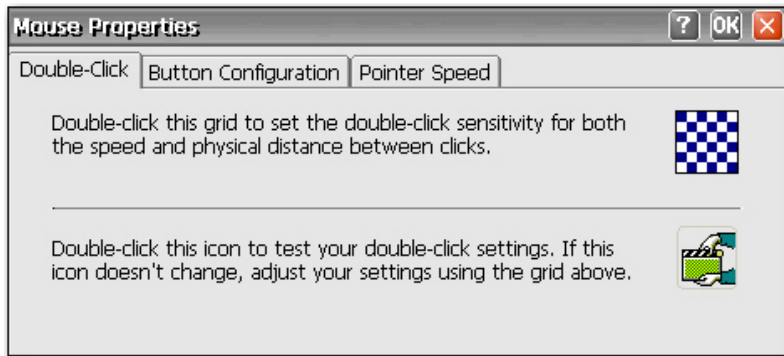

- Use the **Double-Click** tab to set the double-click sensitivity by double-clicking the grid icon, then test the setting by double-clicking the test icon.
- Use the **Button Configuration** tab to configure for left-handed use.
- Use the **Pointer Speed** tab to configure how fast the mouse pointer moves on the screen based on how the users moves the mouse.

## Network and Dial-up Connections

The Network and Dial-up Connections window allows you to configure connectivity between the terminal and the Internet, a network, or a computer.



To make a new connection, double-click the **Make New Connection** icon, select the type of connection you want to make, and then configure the connection.

Choose from the following connection types:


- Dial-up Connection
- Direct Connection
- VPN (PPTP)
- VPN (L2TP)
- Ethernet (PPPoE)

### Dial-up Connection

You can use a dial-up modem with the thin client to access a dial-up server. This method provides two ways to access the enterprise intranet:

- An enterprise dial-up server connects directly to the enterprise intranet.
- An Internet Service Provider (ISP) dial-up server provides access to the Internet, from which the thin client must access an enterprise Point-to-Point Tunneling Protocol (PPTP) Virtual Private Network (VPN) server that connects to the enterprise intranet.


---

 **NOTE:** The dial-up server must be a Microsoft Remote Access Server or another server that supports industry-standard protocols.

---

## Direct Connection

This type of connection allows you to connect directly to another computer through the serial port on the terminal.

 **NOTE:** This option is available only to thin clients with serial ports.

---

## Virtual Private Network (PPTP) Connection

Point-to-Point Tunneling Protocol (PPTP) is a network protocol that enables the secure transfer of data between a remote client (in this case the thin client) and an enterprise server environment by creating a VPN across TCP/IP-based data networks such as the Internet. It provides a password-protected path through the enterprise firewall to the enterprise server environment in which the network and session services required by the thin client reside.

Access to the internet requires an Internet Service Provider (ISP). You may use any of the standard means of connecting to the ISP, such as a dial-up modem, cable modem, or DSL modem.

You must first establish the connection to the ISP, before contacting the enterprise PPTP VPN server. This includes dial-up access as well as direct access through the cable modem and DSL modem paths.

## Virtual Private Network (L2TP) Connection

Layer Two Tunneling Protocol (L2TP) merges the Microsoft PPTP protocol with the Cisco Layer Two Forwarding (L2F) protocol. L2TP is basically the same as PPTP; the primary difference is that L2TP supports encryption.

## PPP Over Ethernet (PPPoE) Connection


This is a connection from the thin client Ethernet port directly to the enterprise intranet. No additional hardware is required.

In this configuration all network services may be used, including the enterprise DHCP server. A DHCP server on the network may provide not only the terminal's IP address, but also the location of the file server containing the software updates.



## Port Lock


The Port Lock dialog box allows you to enable or disable COM 1 ports, LPT ports, and USB mass storage devices.

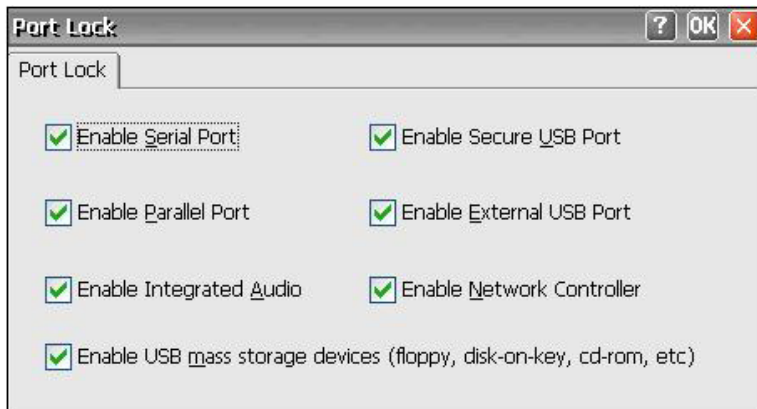

To enable a port, select the appropriate check box, and then click **OK**.

## Power Settings

The Power Settings dialog box allows you to configure settings such as BIOS wake-up, shutdown, power state after power failure, and alarm settings.

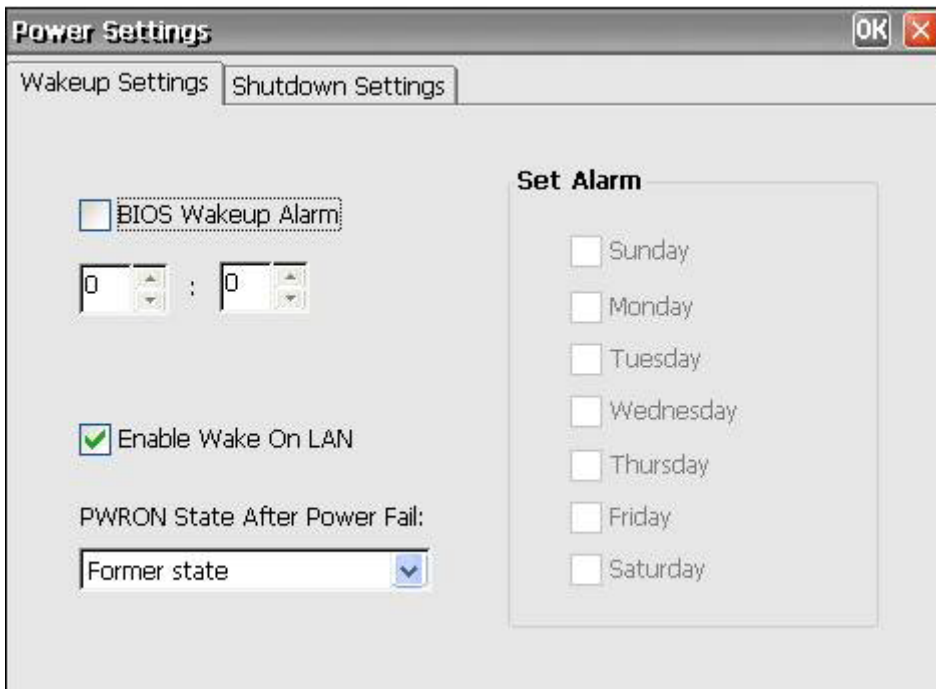


**BIOS Wakeup Alarm:** Set the time of day the thin client wakes up. You must first reboot and then shut down the unit for this feature to work.

**Enable Wake On LAN:** Select to enable the power in the client to be turned on by the network.

**PWRON State After Power Fail:** Select whether power is to be on/off or defaults to its former state after a power failure.

**Set Alarm:** Select the day(s) that the thin client wakes up. You must first reboot and then shut down the unit for this feature to take affect.

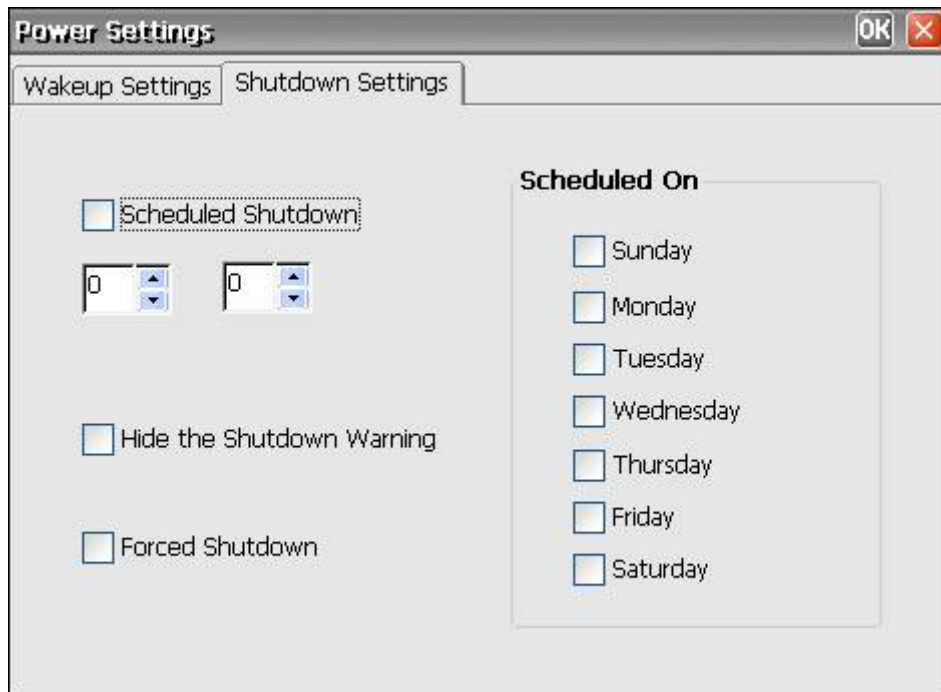


**Shutdown settings:** Set the time of day the thin client is to shut down.

## Printers

### Printers

The Printers dialog box allows you to add local and network printer configurations and modify existing printer configurations. This configuration enables the terminal to print from a server session to a local printer.

---

 **NOTE:** Windows CE is best suited for printing smaller documents.


---



The Printers dialog box contains an **Add Network Printer** icon, an **Add Local Printer** icon, and an icon for each configured printer.

You can use Internet Printing Protocol (IPP) to print to network printers. IPP defines a standard protocol for printing as well as managing print jobs.

---

 **NOTE:** To avoid port conflicts, HP recommends using COM2 for IPP printing.

---


## Adding a Printer

To add a printer configuration from the Printers dialog box:


1. Double-click the **Add Network Printer** or **Add Local Printer** icon to invoke the Printer Wizard, which allows you to configure a new printer.



2. In the first panel of the wizard, select the port that you want the printer to use, and then click **Next**.

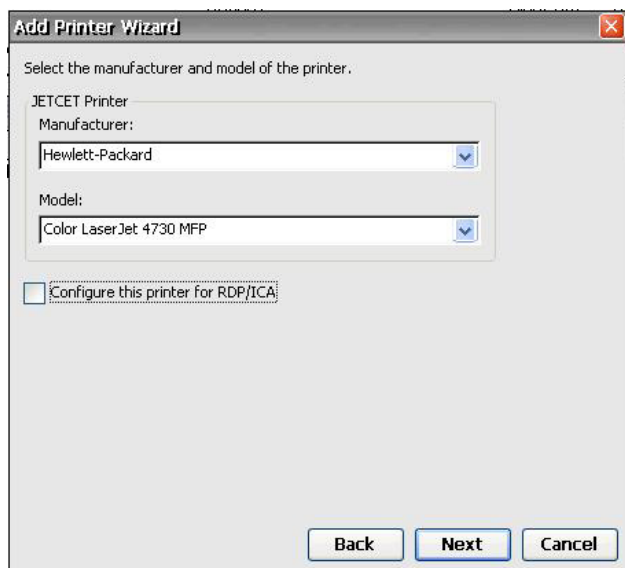


3. In the next wizard panel, select the printer manufacturer and model, and then click **Next**.

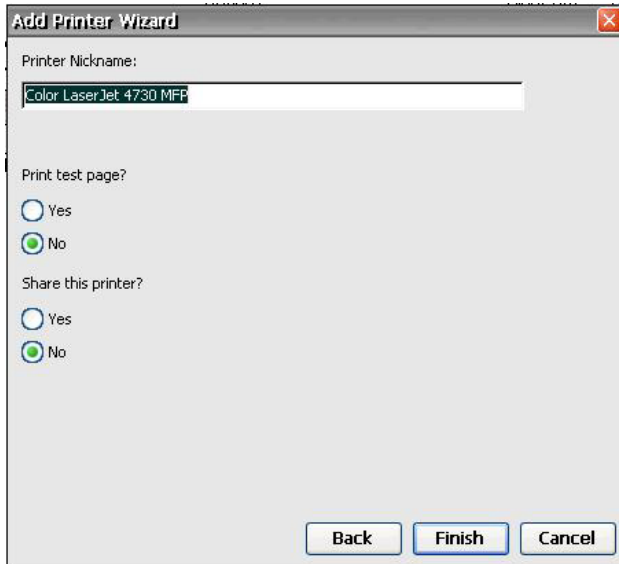

△ **CAUTION:** It is critical that the model name entered in step 3 match EXACTLY the name of the driver installed on the terminal server. If it does not, printing will fail.

4. Click **Yes** to print test page and share this printer, if desired, and then click **Finish**.

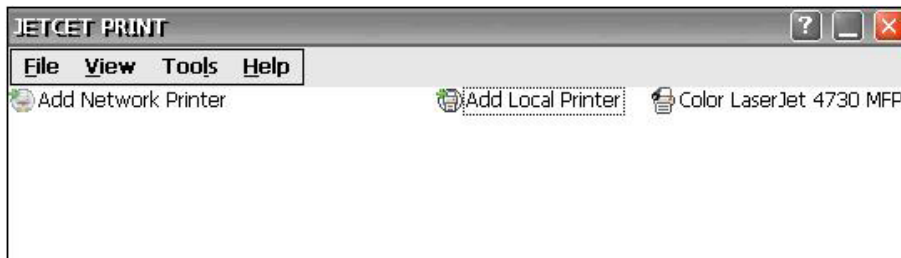

The configured printer now appears in the printer window.

## Setting up a Network Printer

1. Select **Add Network Printer** in the printer window.

**Add Printer Wizard**

Connected directly to the network with an IP address, or to the internet with a URL.

Printer IP Address or Domain Name:  
Ex. 192.168.1.1 or printer.westtek.com

Connected to a Network Domain Server or Workgroup with a Share Name.

Back Next Cancel

2. Type the IP address or domain name in the field, and then click **Next**.

**Add Printer Wizard**

Select the manufacturer and model of the printer.

JETCET Printer


Manufacturer:  
Hewlett-Packard

Model:  
Color LaserJet 4730 MFP

Configure this printer for RDP/ICA

Back Next Cancel

3. Select the printer manufacturer and model, and then click **Next**.

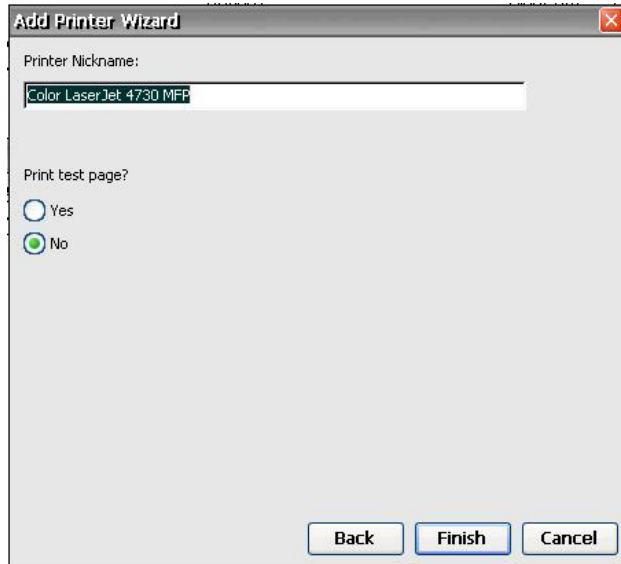

4. Click **Yes** to print test page, if desired.


## Modifying an Existing Printer Configuration

To modify an existing printer configuration in the Printers dialog box:

1. Double-click the desired printer icon or select the icon and click **Properties**. The Printer Properties dialog box is displayed.
2. Make any necessary modifications, and then click **OK** to save.

## Regional Settings

The Regional and Language Settings dialog box allows you to customize regional settings for the terminal. You can change the way Windows CE displays numbers, currency amounts, times, and dates.

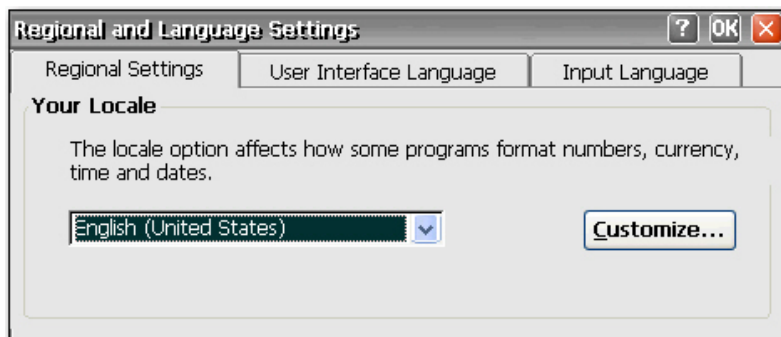

The Regional Settings Properties dialog box includes the following tabs:

- **Regional Settings:** Allows you to select an input locale, which determines how some programs format numbers, currency, time, and dates. The options available on the other tabs are determined by the selected region.




Click **Customize** to configure the way Windows displays the following:

- Numbers
- Currency
- Time
- Date
- **User Interface Language:** Allows you to determine the language used for the menus, dialogs and alerts. Only English is supported.
- **Input Language:** Allows you to select the keyboard language. You can select multiple languages. You can toggle between languages by clicking on the language system tray icon.

## Security

The Security dialog box allows you to control various terminal functions related to security and terminal operator accounts.

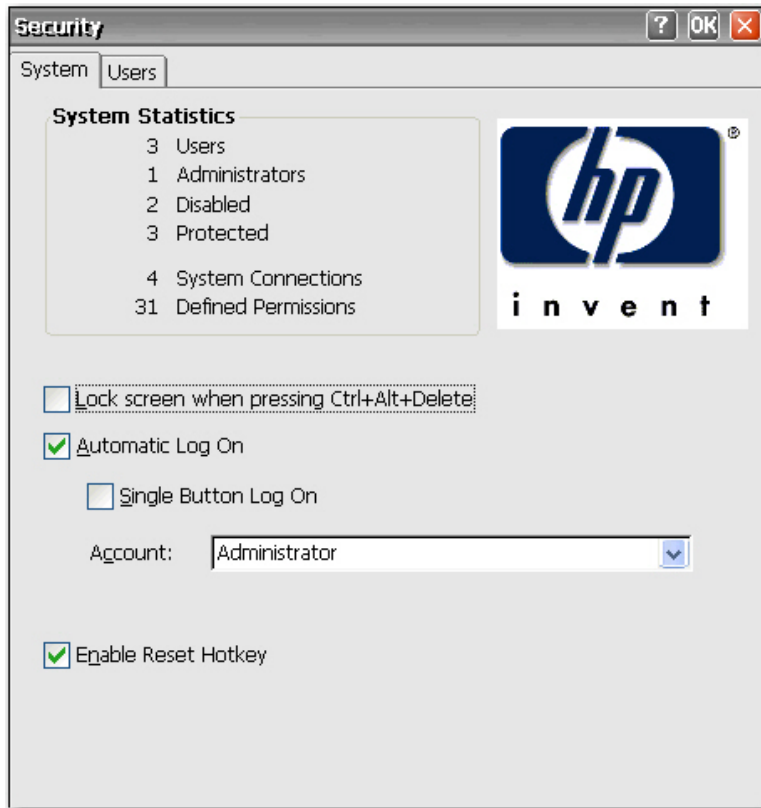

## Enabling Security

System security is enabled by default, which forces users to log in if the automatic login feature is not enabled.

- Select **Lock screen when pressing Ctrl+Alt+Delete** to allow users to lock the terminal through the [Ctrl+Alt+Delete](#) keyboard command.
- Select **Automatic Log On** to bypass the need for the user to enter a password to log in. This also activates the **Single Button Log On** check box and **Account** list.
  - Select **Single Button Log On** to enable the single button connect feature, which invokes a dialog box that requires the terminal operator to press a keyboard key or click the **Logon** button on the dialog box to log in.
  - In the **Account** list, select the account that the terminal will use to log in user. For information about creating a new account, see [Creating a User Account on page 59](#).

Select **Enable Reset Hotkey** if you want to allow users to reset the terminal to factory defaults (registry and shortcuts) by pressing and holding the [F9](#) key during boot.

## Creating a User Account

To create a new security account for a terminal operator, select the **Users** tab on the Security dialog box. This tab lists all the operator accounts and shows which accounts are set up with Administrator security privileges and which accounts are enabled.

For more information about creating user accounts, see [Creating User Accounts on page 8](#) in Chapter 3.



You can manage the terminal through standard third-party simple network management protocol (SNMP) tools. The SNMP Network Administration dialog box allows you to enter parameters required for SNMP management.

A screenshot of the 'SNMP Network Administration' dialog box. The window has a title bar with 'SNMP Network Administration' and 'OK' and 'X' buttons. There are two tabs: 'Agent' and 'Security', with 'Security' selected. The 'Location' field contains 'Your Location Here' and the 'Contact' field contains 'Your System Contact H'. Below these is a 'Traps' section with a 'Community Name' dropdown menu showing 'public', and buttons for 'Add Community...', 'Remove Community', 'Add...', 'Edit...', and 'Remove'.

SNMP agents run in network elements and respond to Network Management Station (NMS) queries (GETs). SNMP provides a means to query all terminals assigned to a specific community. Each community should have a unique name, and all members of a community have the same access privileges. You can assign a single terminal to multiple communities.


Agents send unsolicited reports (traps) back to a specified IP address when a particular network activity occurs. The following traps are supported: cold start, warm start, authentication failure, link down, and link up.

To add a new community:

1. Click the **Agent** tab.
2. In the **Traps** section, click **Add Community**.
3. Type the new community name, and then click **OK**.

To add and assign rights to an accepted community:


1. Click the **Security** tab.

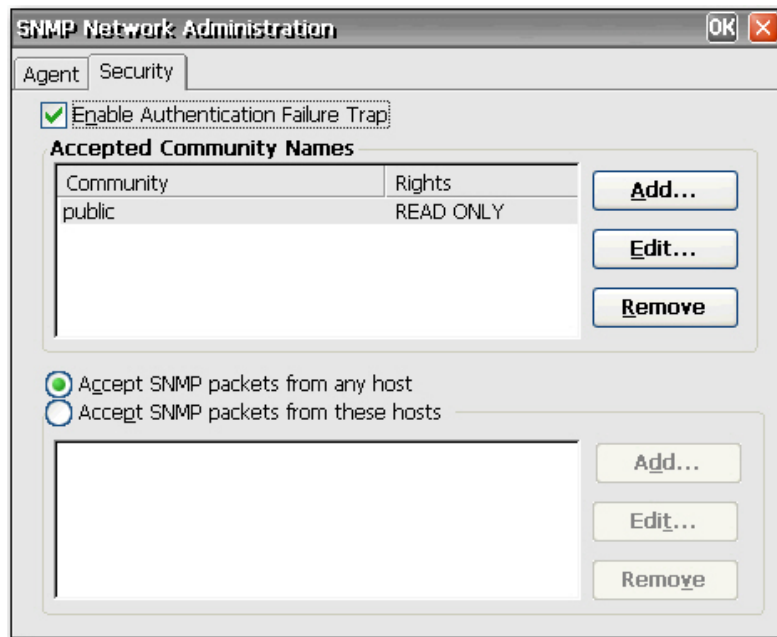

2. Click **Add** in the **Accepted Community Names** section. The Community Configuration dialog is displayed.
3. Type the name of the community in the **Community Name** box.
4. Select the rights to the community in the **Rights** list, and then click **OK**.

To add SNMP packets:


1. Click the **Security** tab.

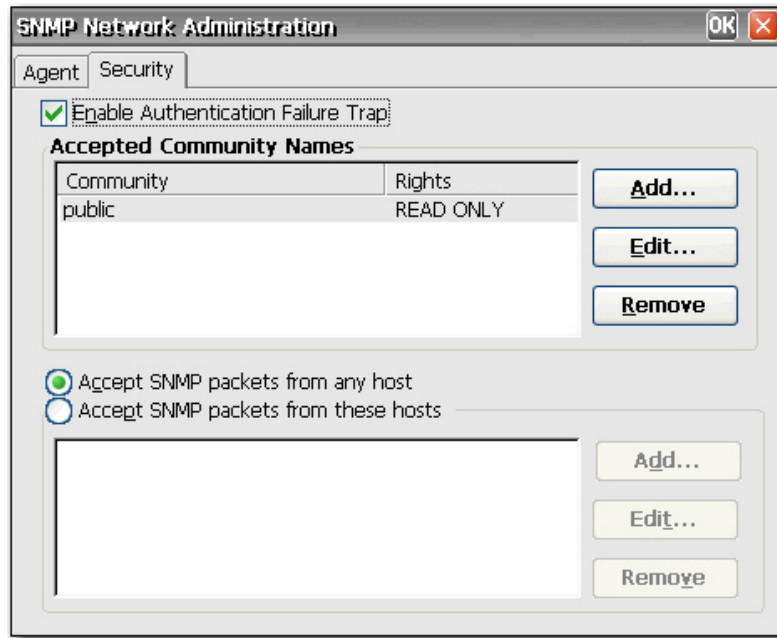

2. Select **Accept SNMP Packets** from these hosts.
3. Click **Add** in the **SNMP packets section**. The SNMP Configuration dialog is displayed.
4. Type the host name or IP address, and then click **OK**.
5. Repeat steps 1 and 2 to add more hosts.


To configure SNMP:

1. On the **Agent** tab, type the physical location of the terminal in the **Location** box.

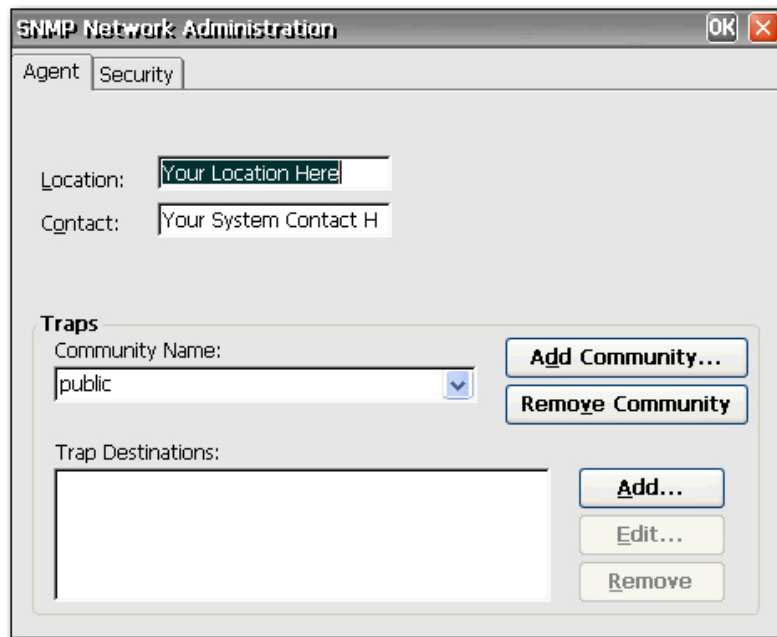

2. Type the name of the contact person responsible for the terminal in the **Contact** box.
3. Assign the terminal to a community by selecting a community from the **Community Name** list.
4. To add a trap destination:
  - a. In the **Trap Destinations** section, click **Add**. The SNMP Configuration dialog is displayed.
  - b. Type the host name or IP address of the NMS trap server, and then click **OK**.


5. If you want to add or change SNMP security settings, click the **Security** tab.

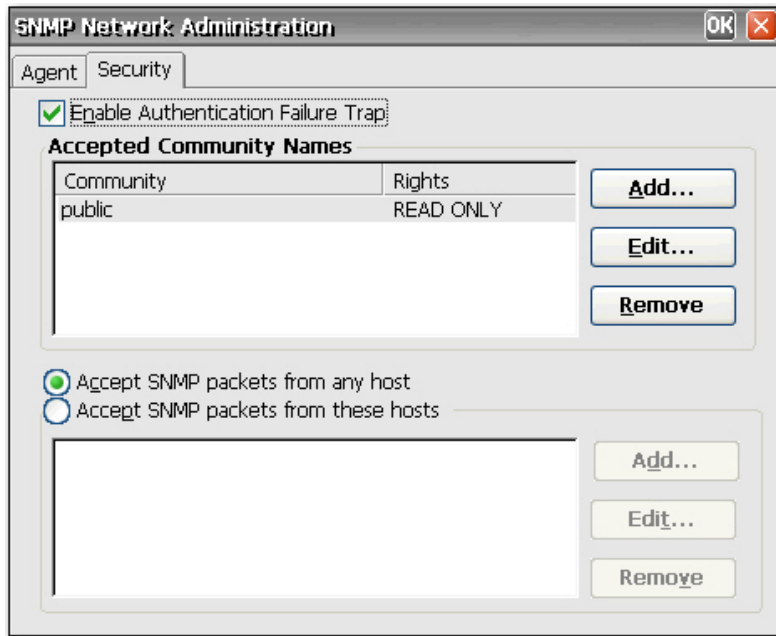

6. To enable an authentication failure trap, select **Enable Authentication Failure Trap**.
7. Select the hosts from which SNMP packets may be accepted. Choose either **Accept SNMP packets from any host** or **Accept SNMP packets from these hosts**.
8. Click **OK** after entering all the necessary SNMP information.

## SNTP Client

The SNTP dialog box allows administrators to synchronize the clocks on all thin clients. Administrators can set thin clients to automatically synchronize with an Internet time server or with a boot server.

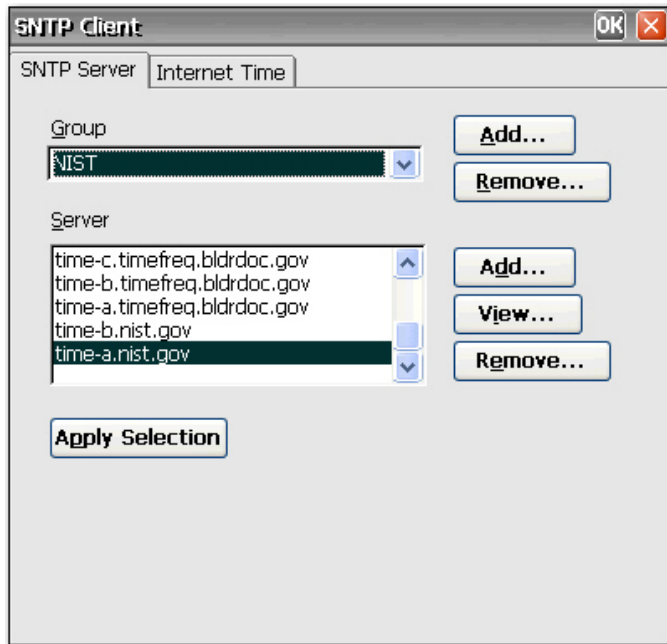

Synchronization can occur only when your computer is connected to the Internet.


 **NOTE:** This feature can generate significant network traffic.

---



## System

The System Properties dialog box allows you to view manufacturer and product information, network settings, and copyright information. You can also reset the terminal to default factory settings, adjust the memory allocated for storage and running programs, assign a device name for network identification purposes, and configure the network card.

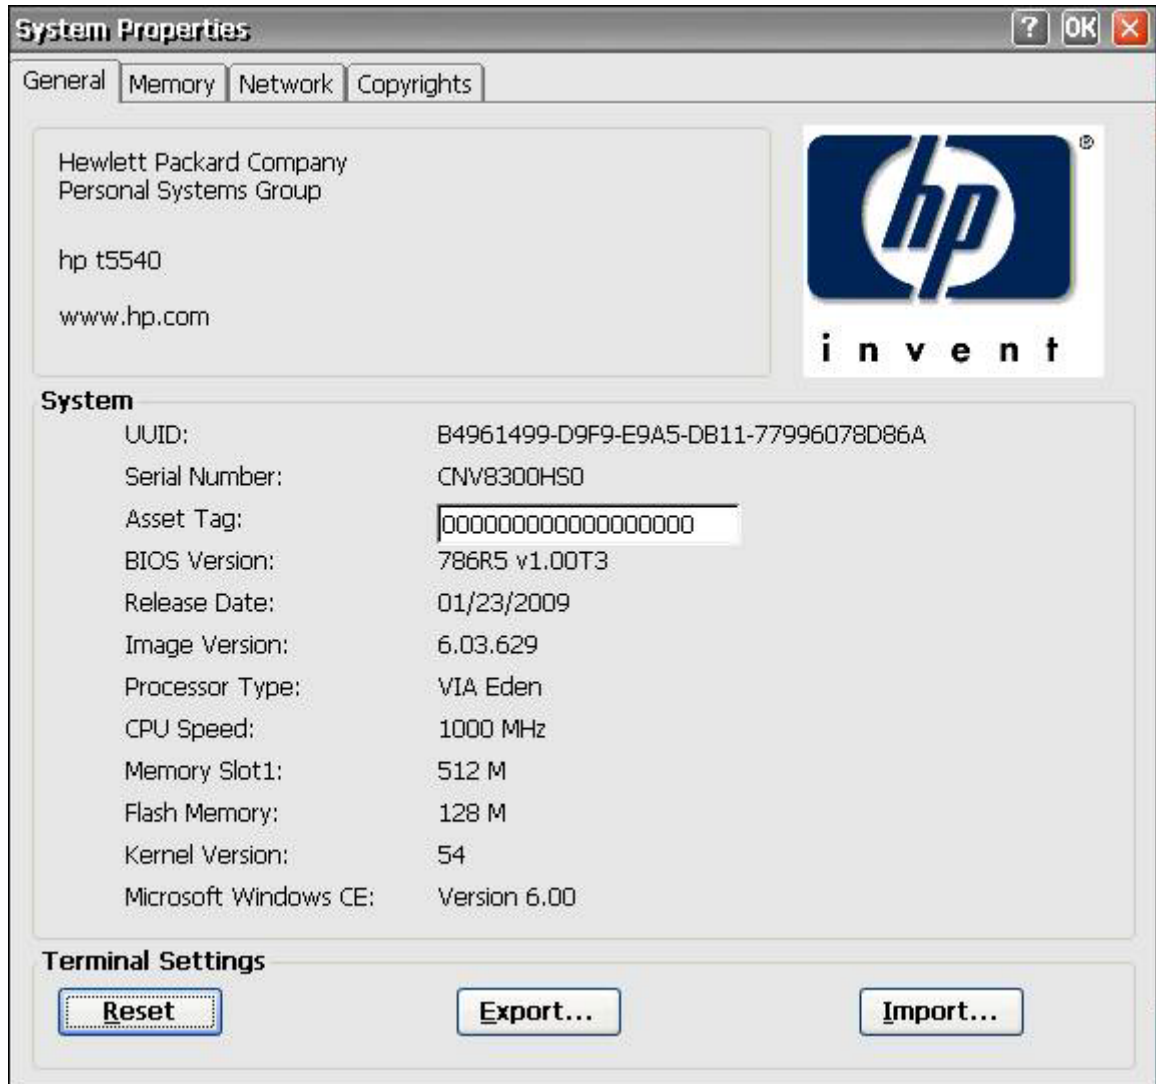

The System Properties dialog box includes the following tabs:

- **General:** Shows manufacturer and product information for the terminal. Includes a **Reset** button that you can use to reset the terminal to factory default property settings. It also includes **Export** and **Import** buttons for easy registry import/export. For more information, see [Copying Registry Settings on page 66](#).
- **Memory:** Allows you to adjust memory allocation between memory for storage room and memory needed to run programs.
- **Network:** Allows you to designate a device name and description that identifies the terminal across the network. You can type a name or accept the name provided by the DHCP server. The default

device name is “HP” followed by the MAC address. If the device is reset to factory defaults, the device name reverts to the factory default name.

This tab also shows network settings and provides a **Configure Network Card** button that allows you to adjust the speed/duplex for the card.

The **Renew** button renews the terminal IP address.

- **Copyrights:** Shows copyright information for the terminal.

## Resetting Settings to Factory Defaults

To reset all thin client settings to factory defaults:

1. Click the **General** tab.
2. In the **Terminal Settings** section, click **Reset**.
3. Click **Yes** to reset the terminal to factory settings. The terminal restarts.
  - The default for **File Server** is 161.
  - The default for **Path and Filename** is 162.

## Copying Registry Settings


You can copy and transfer the registry settings from one thin client to another. Also known as “ARP”, this feature allows you to configure a thin client and then transfer that configuration to multiple other thin clients. To clone an entire thin client image, you must first update the image, and then transfer the registry files.

You can transfer registry settings on only “like-to-like” clients, meaning that the thin client you transfer to must have the same of the following list as the thin client you transfer from.

- model number
- build number
- add-ons

To transfer registry settings to one thin client:


---

 **NOTE:** You can use Altiris or FTP to transfer registry settings to multiple thin clients.

---

1. Configure a thin client to your specifications.
2. In **Control Panel > System > General** tab, in the **Terminal Settings** section, click **Export**.
3. Navigate to where you want to save the settings file. You can save the file to the hard drive, a network drive, a USB drive key, etc. After you give the file and name and click **OK** to save the file, it can take up to five minutes for the file to save.
4. After exporting the registry settings file, from the thin client to update, go to **Control Panel > System > General** tab, and in the **Terminal Settings** section, click **Import**.
5. Navigate to where you exported the settings file, select the file, and then click **OK**. You must restart the client for the new settings to take effect.

---

 **NOTE:** The registry settings file does not include desktop shortcuts.

---


For more information about exporting registry settings, see Chapter 6, [Registry Import/Export on page 84](#).


## System Update

The System Update dialog box allows you to define the means by which you update the terminal image. The feature updates only the operating system, the BIOS is not updated. You can update the image:

This tab allows you to automatically update the image by having the DHCP server provide the location of the file server on which the upgrade files are located. This feature provides an alternative to Altiris for image deployment.

- Directly from HP by manually entering HP FTP file server information for the server that contains the update.
- By allowing the DHCP server to locate the FTP file server that contains the update.


 **NOTE:** For more information on setting DHCP values, refer to the “DHCP Options” section in this chapter.

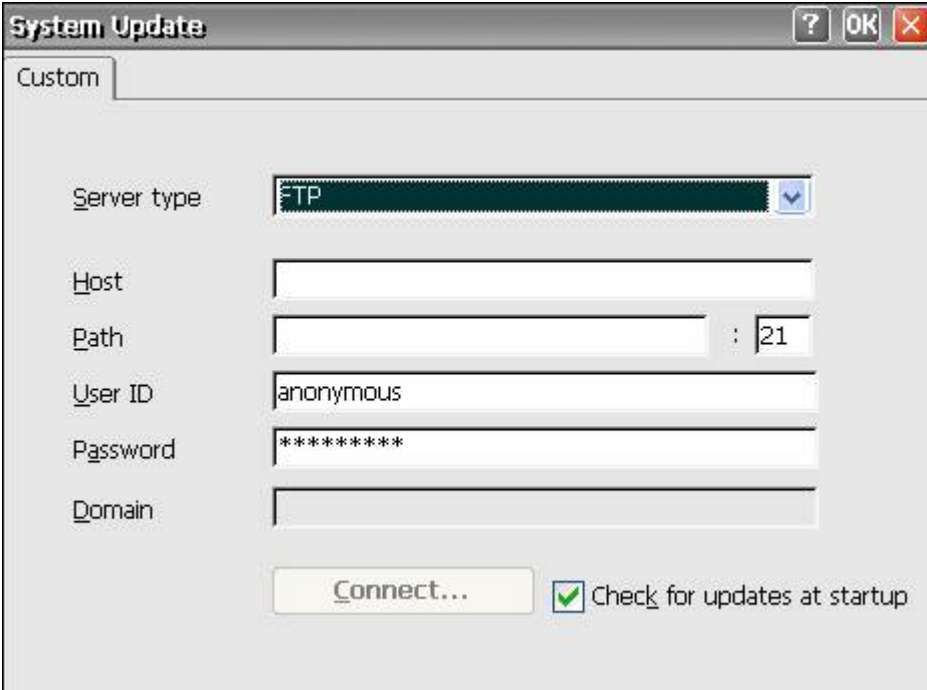

The screenshot shows the 'System Update' dialog box with the 'Custom' tab selected. The 'Server type' dropdown is set to 'FTP'. The 'Host' field is empty. The 'Path' field is empty, and the port is set to '21'. The 'User ID' field contains 'anonymous'. The 'Password' field is masked with asterisks. The 'Domain' field is empty. At the bottom, there is a 'Connect...' button and a checked checkbox labeled 'Check for updates at startup'.

You may want to update your image because of the following:

- You receive a new client, perform updates to the client image, and decide you want to revert to the “good, known” image.
- An image gets corrupted and the client requires re-imaging.
- Your client image is old and you want the newest available stable image.

 **CAUTION:** Turning off the power before the update is complete may corrupt the flash memory on the terminal.

For information about automatically updating your client, see the related white paper at: <http://h20000.www2.hp.com/bc/docs/support/SupportManual/c00448549/c00448549.pdf>.

To update the image using the DHCP server:

1. From the **Server type** list, select either **FTP** or **Network Share**.
2. In the **Host** box, type the name of the host box.
3. In the **Path** box, type the path. If you selected **FTP** from the **Server type** list, you must also type the port number in the box to the right of the **Path** box.
4. In the **User ID** and **Password** boxes, type the user ID and password required by the FTP file server.
5. If you selected **Network Share** from the **Server type** list, in the **Domain** box, type the network location.
6. Select **Check for updates at startup** to cause the unit to check the entered FTP site for software updates.
7. Click **Connect** to connect to the server you configured in the previous steps. The **Connect** button is not available until you enter valid information for the server.
8. Select **Use Values from DHCP Server**.
9. In the **Server Name/IP** box, type the FTP Server Name/IP.
10. In the **Path and Filename** box, type the path and file name of the image.
11. In the **Server Port** box, type the FTP server port.
12. In the **User ID** and **Password** boxes, type the user ID and password required by the FTP file server.
13. To automatically update the image each time the terminal is restarted, select **Automatically check for updates on startup**. This feature allows you to place a single, updated image on an FTP site and have clients automatically check that site at boot-up and update with the new image.
14. Click **Update** to begin the update process.


The DHCP Options dialog allows you to set the DHCP tags that identify the FTP location of the update image.

To change the FTP option IDs, type over the entry in the **Server Port** box, and then click **OK**. The value must match what is set up on the DHCP server.



## Terminal Server Client Licenses

The Terminal Server Client Licenses dialog box allows you to view stored licenses. You can use this window to delete or save licenses.

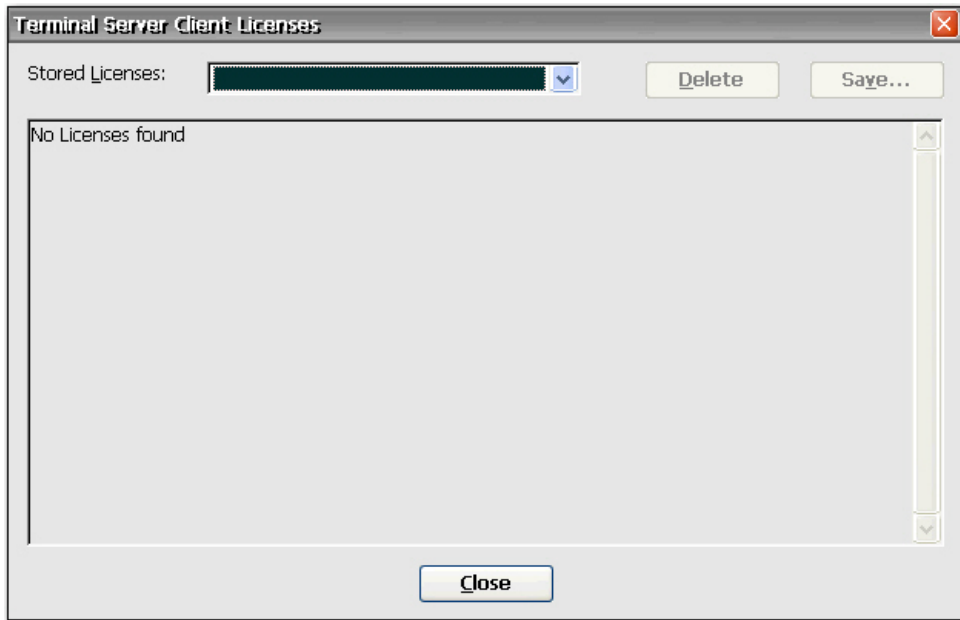


## ThinPrint

ThinPrint can be used for ICA/RDP sessions, provided a TCP/IP connection exists between server and client. For more information, see [ThinPrint on page 73](#).

## View or Remove Programs


The View or Remove Programs dialog box allows you to view or remove software programs currently installed on the terminal.

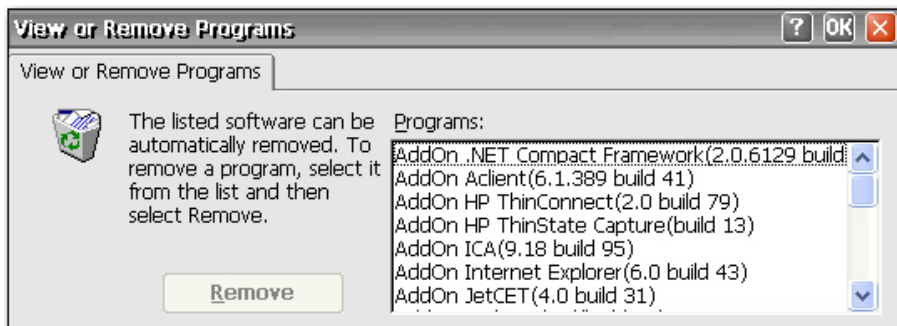

To remove a program, select the program from the list and click **Remove**.

# Vnc VNC Server


Virtual Network Computing (VNC) is a remote control program that allows you to view and interact with one computer (the “server”) using a simple program (the “viewer”) on another computer anywhere on the Internet. The VNC Server runs as a service and therefore is available even when the user is logged off the thin client.

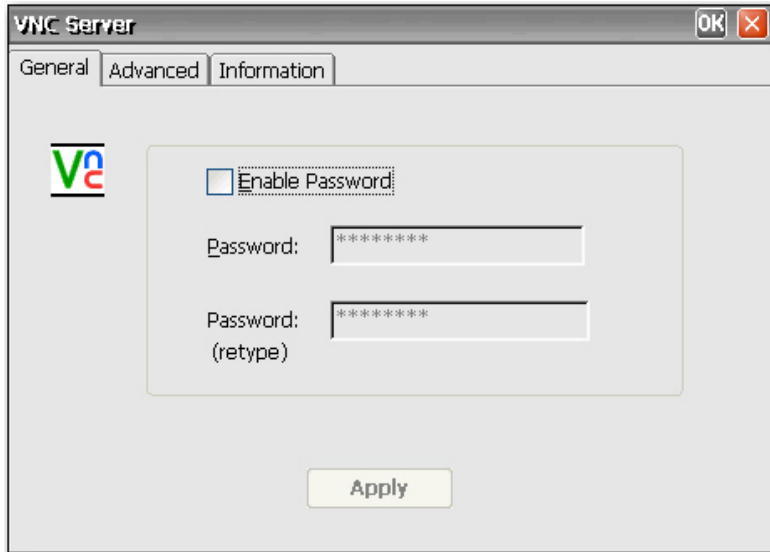

## Settings for VNC Server

Configure VNC Server on your thin client by selecting the following:


Check Box	Explanation
Prompt local user to accept incoming connections	The default should be ENABLED and <b>Auto Accept</b> should be ENABLED
Enable Viewer Cursor	This setting allows the viewer to show its cursor on the screen while moving the mouse. The viewer shows a small dot that points to the actual location of the “hot spot” of the remote cursor location. Enabling this setting will show the local cursor of the viewer; however, the remote dot will lag behind the local viewer cursor as it tries to synchronize the local viewer cursor.
Accept input events from clients	Enabling this setting will allow the viewer to control the keyboard and mouse of the unit remotely.
Autoport Select	This setting will be devalued, leaving only the “Accept connections on port” and “Allow HTTP connections on port”.
Accept connections on port	Defaults to the standard VNC port of 5900.
Allow HTTP connections on port	Defaults to the standard VNC port of 5800 for JVM (Java)-enabled Web Browser Viewers.

 **NOTE:** Windows CE does not support Java.

You can find additional information about VNC Server features at: <http://www.realvnc.com/documentation.html>.

## Volume and Sounds

The Volume & Sounds Properties dialog box allows you to adjust the volume setting and enable sounds for various events and conditions. You can also create custom sound schemes for various events.

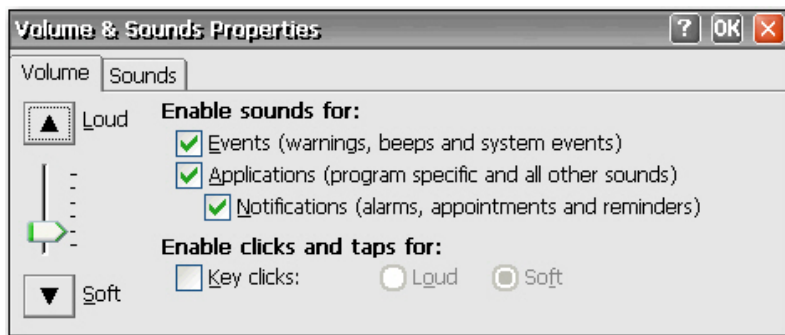

## 5 Programs and Add-ons

This chapter provides detailed information about programs and add-on programs for the CE 5.0 image. You can download add-ons from the HP Support Web site.

Add-ons are programs that you can add and remove from a thin client. Add-ons consist of both programs that come with the default thin client image, and programs that you can add.

The following table provides a list of Add-ons and whether they are included in the image:

Add-On	In Factory Image	CE 6.0	Add-On	In Factory Image	CE 6.0
Acient for CE 6.0	Y	Y	TEC 5.0	Y	Y
HP Easy Config	Y	Y	HP ThinConnect	Y	Y
HP Easy Update	Y	Y	ThinPrint	Y	Y
ICA 10.x	Y	Y	HP ThinState	Y	Y
Internet Explorer 6.0 for 6.00	Y	Y	TxtPad	Y	Y
JetCet 5.0 for 6.00	Y	Y	Universal SC Reader	Y	Y
Keyboard Intl	Y	Y	USB Mass Storage 6.0	Y	Y
Media Player 9.0 for 6.00	Y	Y	USB Parallel Port for 6.0	Y	Y
RDP 6.0	Y	Y	USB Wireless for 6.0 (VIA)		Y
Setup Wizard	Y	Y	VNC Server	Y	Y
SNTP Client 6.0	Y	Y	Win Explorer	Y	Y




# Programs

## ThinPrint


The following steps illustrate how to set up ThinPrint over TCP/IP. ThinPrint can also be used for ICA/RDP sessions, provided a TCP/IP connection exists between server and client. You must set up ThinPrint on the server before attempting any ThinPrint jobs. For more information about how to set up the server, see <http://www.thinprint.com>.

### ThinPrint over TCP/IP

1. Connect a local printer to the thin client.

 **NOTE:** Windows CE assigns LPT1 to the parallel port and LPT2 to the USB port.


2. Open ThinPrint by selecting the icon on the Windows task bar or by clicking **Start > Programs > ThinPrint**.

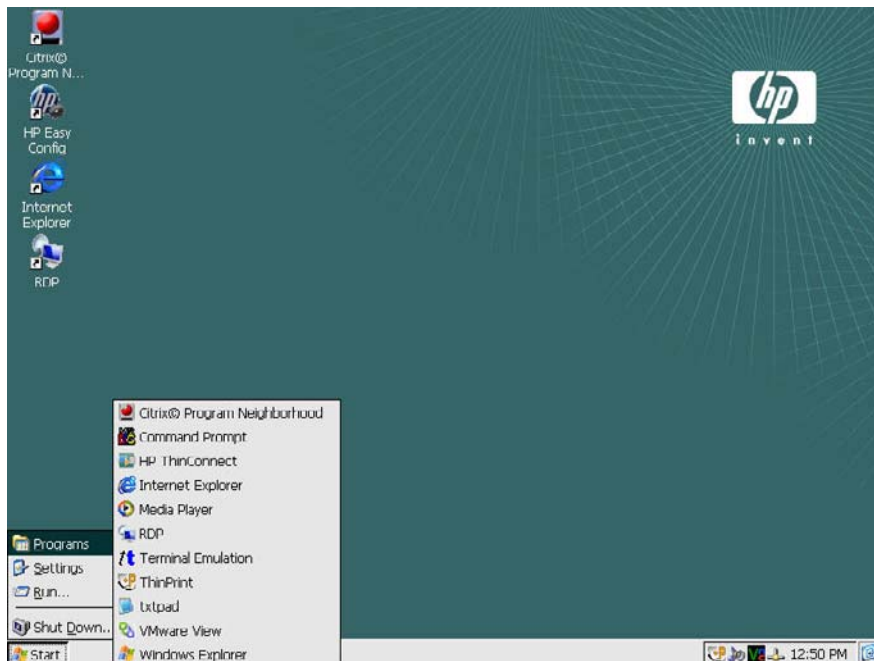


3. Click the **Assignment** tab to set up the printer. The default printer name and port appear as LPT1:LPT1.



4. Click **Add local port** to enter a new printer name and port; for example, HP\_LaserJet\_1150. You can change the printer name by selecting the printer and clicking the **Edit entry** button.

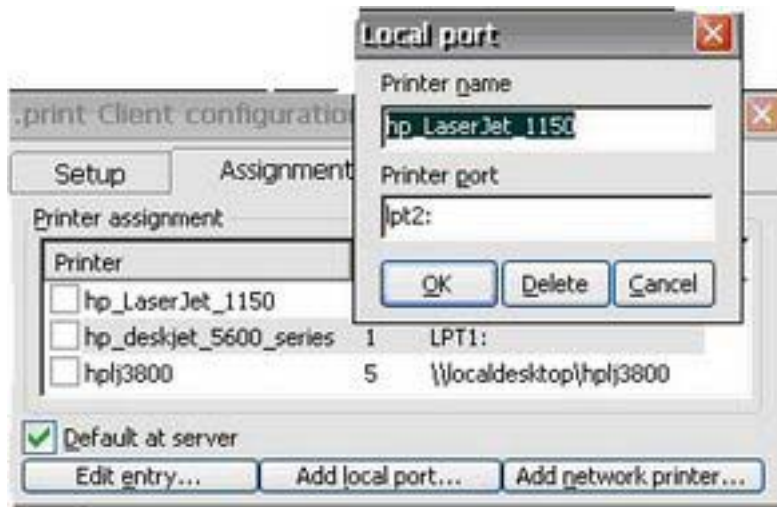

5. Select the printer you just created.

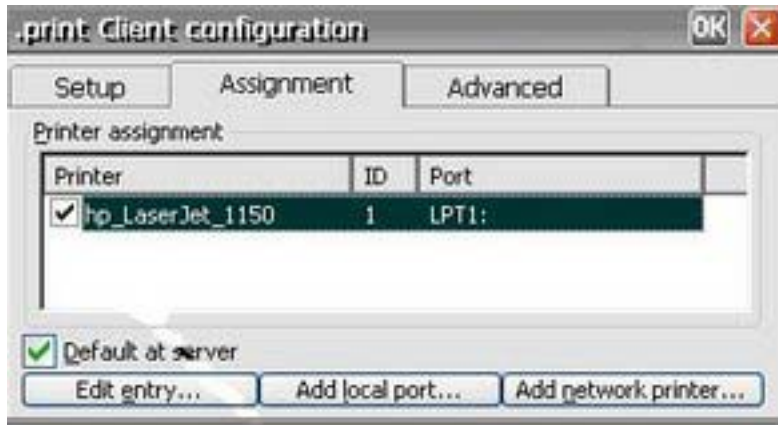


6. Click **OK** to close the ThinPrint screen.
7. Reopen ThinPrint.
8. Select the printer you created from the **Current printer** list.




9. Click **OK** to save settings.
10. Create an ICA or RDP connection in HP ThinConnect.
11. Double-click on the connection you just created.

12. Log in to the server.

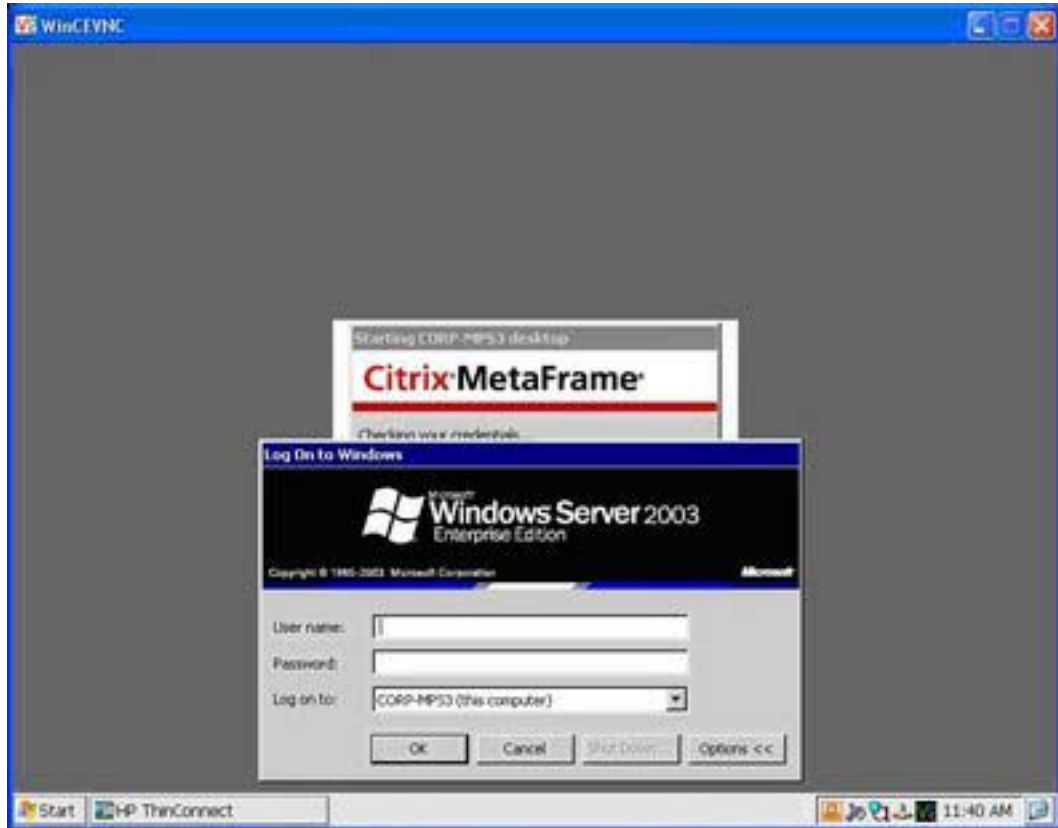

13. Open a any Word document and click **File > Print**.

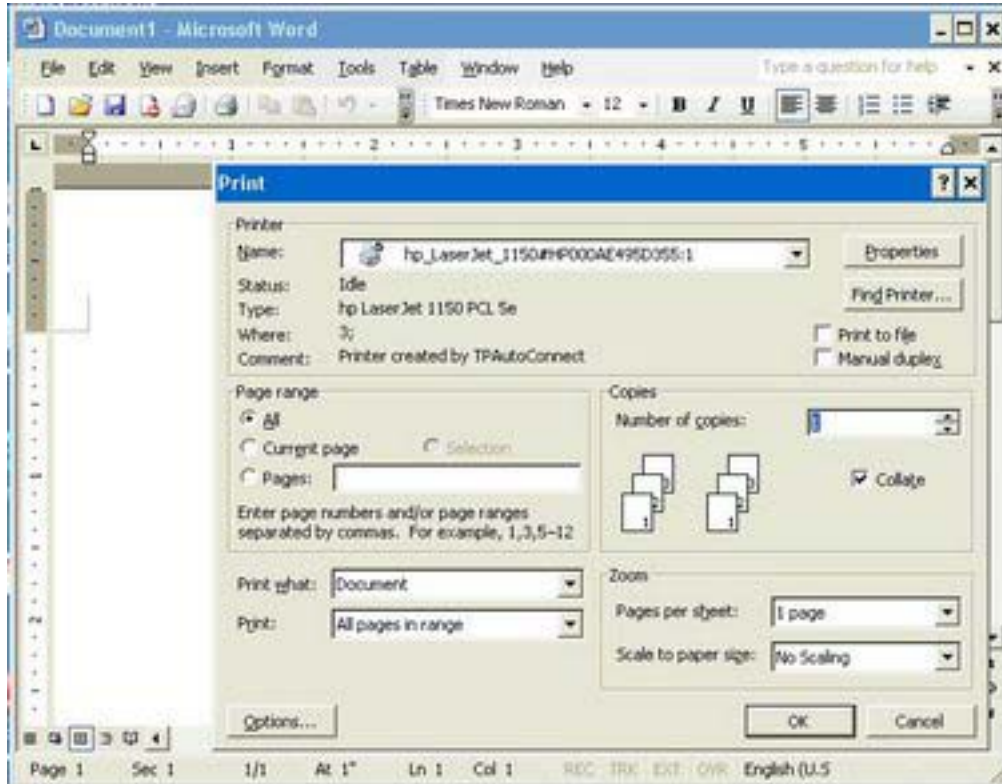

14. Select the printer from the list. The display format is printer name#computer name. (For example, hp\_LaserJet\_1150#HP000AE495D355:1)
15. Click **OK** to print the document.


### ThinPrint Network Printer

1. Open ThinPrint.
2. Click the **Assignment** tab, and then click the **Add Network Printer** button.
3. If configuring a shared printer:
  - a. Select **Shared printer**.
  - b. Type the **Printer name**.
  - c. Type the **Network path**, **User name**, and **Password**.



 **NOTE:** The printer name must match the printer name set up on the server.


4. If configuring an LPD Printer:
  - a. Select **LPD Printer**.
  - b. Type the **Printer name**.
  - c. Type the printer's IP address in the **Printer address** field.

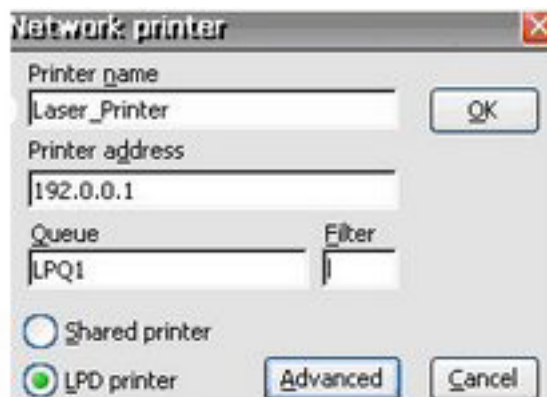

 **NOTE:** The printer name must match the printer name set up on the server.

5. Click **OK** to save settings and close the Network Printer window.
6. On the **Assignment** tab, select the check box next to the printer you just set up.
7. Click **OK** to save settings and close ThinPrint.

8. Open ThinPrint and select the printer you just added from the drop-down list.

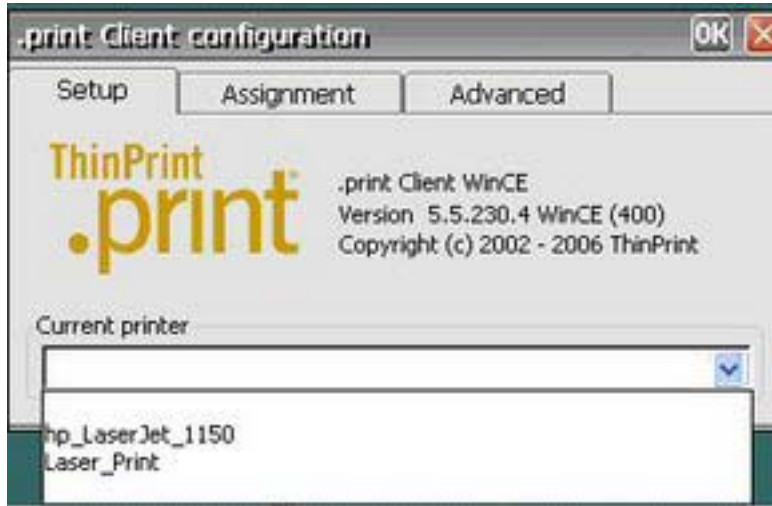


9. Log in to ICA or RDP.
10. Open any Word document. and then select **Print**.
11. Select the printer from the list.
12. Select **OK** to print the document.

## HP Connections for Citrix Software

The HP Connections for Citrix Software window provides a quick and easy means of creating new ICA connections. You can also delete and edit connections, as well as create desktop shortcuts for connections.

---

 **NOTE:** Any ICA connection created will appear in both the HP ThinConnect window and the HP Connections for Citrix Software window. For more information about HP ThinConnect , see Chapter 3, [HP ThinConnecton page 6](#).

---

You can access the HP Connections for Citrix Software window from:

- **Start > Programs > HP Connections for Citrix Software.**
- The shortcut icon on the desktop.

## Creating a New ICA connection

The upper section of the window contains the ICA connection.

To create a new connection:

1. Double-click the icon in the top section.  
or
2. From the **File** menu, highlight **New Connection** and select the type of connection you want to make. Follow the instructions in the Wizard or dialog.

## Deleting a Connection

To delete an established connection:


1. Right-click on the connection and select **Delete Connection**.

or

Select the connection and press the **Delete** key.

2. Click **Yes** to delete the connection.

---

 **NOTE:** Deleting a connection through HP Connections for Citrix Software also deletes the connection from HP ThinConnect.

---

## Editing a Connection

To edit an established connection:

1. Right-click on the connection and select **Edit Connection**.
2. Modify the connection.

## Creating a Desktop Shortcut to a Connection

You can create a shortcut to a connection on the desktop through HP Connections for Citrix Software. You cannot create shortcuts through HP ThinConnect.

To create a shortcut, right-click on the connection and select **Send to Desktop**.

## RDP 6.0


Remote Desktop Protocol (RDP) 6.0 replaces RDP 5.5 and provides the following functionality:

- Unicode compatibility, which enables you to send Unicode values of characters as virtual key codes to the keyboard input.
- RDP supports operation in any environment that allows network localization, automatic disconnect, and remote configuration.
- Variable bandwidth allocation through client-side bitmap caching and optional compression for low-bandwidth connections, significantly improving performance over low-bandwidth connections.
- Multichannel-capable protocol that permits separate virtual channels for carrying presentation data, serial-device communication, licensing information, and heavily encrypted data.
- Remote control which lets the support staff view and control a Terminal Services session. Sharing input and display graphics between two Terminal Services sessions lets support staff diagnose and resolve problems remotely.
- Network Load Balancing (NLB), available in Windows 2000 Advanced Server and Datacenter Server.
- High color 16-bit, 24-bit, and 32-bit graphics are supported if they are also supported in the graphics driver.
- Custom high resolution supports wide screen monitors.



- Clipboard sharing, also known as clipboard redirection. The local clipboard becomes a part of the clipboard viewer chain in the remote session, allowing the user to copy and paste between applications running in both the remote session and on the local client.
- Local-printer redirection so server applications can print locally to the client device.
- Local audio playback so server applications can direct audio to the client device or play at the Terminal Server.
- Local-port redirection so server applications can use parallel and COM ports of the client device.
- Local drive redirection so server applications can use the file system (including ATA) of the client device.
- File redirection filter that permits exposing only specific directories. If you specify that only external storage, such as Compact Flash or USB storage, be exposed through the redirected drive, information is saved only to the redirected drive.
- TS CAL maintenance tool. This control panel window is available in any OS design that supports Control Panel programs, such as the Enterprise Web Pad. It requires that RDP client be in the run-time image.
- Server authentication verifies that you are connecting to the correct remote computer or server to help prevent unintentionally exposing confidential information.
- Transport Layer Security (TLS)/Secure Sockets Layer (SSL) protects users from rogue servers.
- Network level authentication requires user level authentication prior to establishing full RDP connection. This may remove the need for the HP Single Login Button, as this feature allows you to leave the thin client on the RDP logon screen indefinitely without taking server resources.

RDP runs in Graphics, Windowing, and Events Subsystem (GWES) rather than in its own process space. This provides faster display updates by reducing the protected server library (PSL) and kernel overhead. RDP running in GWES can improve performance up to 30%.


 **NOTE:** If you configured RDP to run in GWES, you cannot run RDP inside a Web browser. Optionally, you can configure RDP to run in Microsoft ActiveX Control.

## Terminal Emulation Connection

Terminal Emulation Connection (TEC) allows you to create a terminal emulation session for a terminal. You can create two different types of TECs, a one-time connection, or a connection associated with a user account.

To create a one-time connection:

1. Click **Start > Programs > Terminal Emulation**.

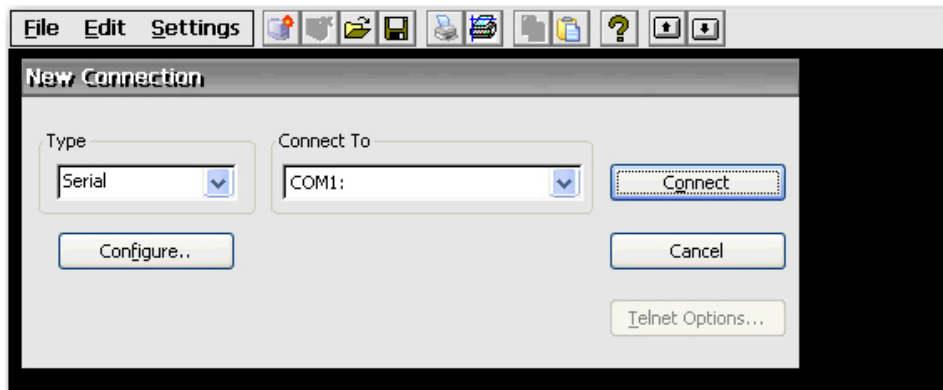


2. In the **Type** box select the connection type.
3. Click **Configure** to configure settings for the connection type you selected.
4. If you selected **TCP/IP** in the **Connect** box, click **Telnet Options** to further configure the connection.
5. In the **Connect To** box select the port to which to connect.
6. Click **Connect** to establish the connection. The **Connect** button is not available until the connection is properly configured.

To associate a TEC with a user account:

1. **Start > Programs > HP ThinConnect**.
2. Click **Add**.

3. Select **Terminal Emulation**, and then click **OK**.

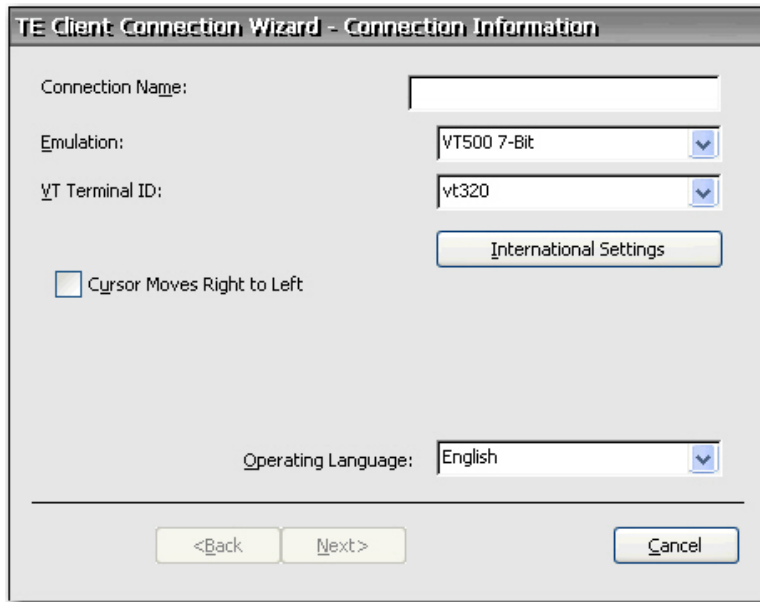


4. Follow the wizard to configure the connection.

## TxtPad

TxtPad is a simple text editor in the Windows CE the image. TxtPad associates with the following file extensions: .txt, .ini, .log, and .arp.

---

 **NOTE:** The maximum character limit is 5-MB of ASCII data.

---

TxtPad is available from a shortcut in the **Start > Programs** menu.

## Add-ons

The following section provides information about add-ons that can be added to your CE-based thin client image.

### ELO Touch Screen

The ELO Touch Screen applet allows you to enable or disable the touch screen. You can also calibrate the touch screen by clicking the Align button.

---

## 6 Registry Import/Export

**ATTENTION:** When deploying an image and settings from a “source” or “master” thin client to a “target” thin client, please make sure that source/master and target thin clients have identical hardware. This is applicable regardless of deployment method being used: HP ThinState Tools, Altiris Deployment Solution, HP OpenView Client Configuration Manager, or any other deployment solution being used.

This chapter explains how to import/export a thin client registry using Altiris Deployment Server. For more information about Altiris, see <http://www.altiris.com/>.

For information about installing an Altiris BootWorks partition, see <http://h20000.www2.hp.com/bc/docs/support/SupportManual/c00215445/c00215445.pdf>.

The Registry Import/Export tool is an HP-engineered software technology that makes it significantly easier and more cost efficient to manage HP thin clients. Registry Import/Export allows thin client devices to inherit properties of other thin client devices. Extracting the settings of one device and redeploying the same settings to other devices reduces network congestion. Registry settings can be 100 to 10,000 times smaller than the entire image.

Please note the following about the Registry Import/Export tool:

- The tool requires extensive knowledge of Altiris Deployment Server.
- The source and target machine must have the same image with the same quantity of software add-ons, and the software add-ons must be of the same revision. The Registry Import/Export Tool cannot upgrade or downgrade application versions.
- The import/export process may take approximately two minutes to complete.

---

△ **CAUTION:** Currently, Registry Import/Export between the HP t5510 thin client and the HP t53x0 and t5500 thin clients is not supported.

---

### Clearing the Destination Registry

Before importing a new registry to a thin client, you must clear the destination machine registry. To clear the registry, drag and drop **CE\_RegReset** from the Job window to the Destination Computer. Completion of this process takes two to three minutes.

## Exporting and Importing a Registry

To export a registry:

1. Open the Deployment Server Console.
2. Select **CE\_RegExport** from the Job window and drag and drop the Job to the source unit under the Computers window. This copies the source computer's registry and prepares it for import.
3. Select **CE\_RegImport** from the Job window and drag and drop the job to the destination computer under the Computers window. This imports the settings from the source computer to the destination computer.

### Importing a Registry to Multiple Units

You can import a single registry to multiple units. To import a registry to multiple units:

1. Select **CE\_RegExport** from the Job window and drag and drop the Job to the source unit under the Computers window. This copies the source computer's registry and prepares it for import.
2. Select **CE\_RegImport** from the Job window and drag and drop the job to "All Computers" under the Computers window. This imports the settings from the source computer to the network.

### Exporting Registries from Multiple Units

While it is possible to export registries from multiple thin clients, it is important to ensure the registry files have different names. The export process saves a time stamp as part of the name for the saved file (for example, 051306840.reg, which is May 13, 2006 at 8:40). If you export multiple units at the same time, the registry file names will be identical. To create distinct file names for each registry, HP recommends that you capture each registry a minute apart.

---

# Index

## Symbols/Numerics

508 Accessibility features 22

## A

Accessibility 22  
accounts  
    default 8  
    user 8  
add-ons 72, 83  
adding  
    connections 7  
    permissions 11  
    printers 52  
    rights to community 60  
    shortcut 80  
    SNMP packets 61  
    user accounts 8  
Advanced window 6  
Altiris BootWorks Web site 84  
Altiris Deployment Server 84  
Altiris Web site 46, 84  
appearance scheme 27  
area code 26  
ARP 65  
Assign Connections tab 13  
assigning connections to  
    users 13  
associating  
    TEC with user account 82  
Auto column 14  
auto starting  
    HP ThinConnect 15  
auto updating clients white  
    paper 68  
automatic log on  
    enabling 19

## B

background image 27  
Based on box 11

Boot Settings 23  
bypass auto logon 20

## C

call waiting 26  
capturing images 44  
Certificates 24  
changing display settings 4  
Citrix 5  
Citrix Desktop appliance 37  
clearing the registry 84  
color quality 27  
configuring  
    dialing patterns 27  
    display properties 4  
    mouse 48  
    SNMP 62  
    user interface 17  
connections  
    adding 7  
    adding ICA 79  
    assigning 13, 15  
    automatic 16  
    deleting 7  
    deleting ICA 80  
    dial-up 49  
    direct 50  
    editing 7  
    editing ICA 80  
    primary 14  
    primary or secondary 15  
Control Panel 21  
copying registry settings 65  
country code 26  
creating  
    desktop shortcut 80  
    new ICA connection 79  
    one-time TEC 82  
    user account 8  
    user accounts 58

## D

Date/Time 25  
default accounts 8  
deleting  
    connections 7  
    ICA connection 80  
    user accounts 12  
deploying images 45  
designating connections 15  
desktop 3  
desktop icons 5  
Device Manager 43  
device name 66  
DHCP Options 25  
dial-up connection 49  
Dialing 26  
dialing patterns 27  
direct connection 50  
Display 4  
display settings 4  
documentation 2

## E

Easy Config  
    Citrix Desktop appliance 37  
    VMWare View appliance 35  
    Web appliance 39  
Easy Update 41  
editing  
    connections 7  
    ICA connection 80  
ELO touch screen 83  
Enable Reset Hotkey check  
    box 20  
enabling  
    automatic connection 16  
    security 58  
export 67  
exporting a registry 85

## F

factory defaults 66  
features 1  
firewall settings, ICA 32  
form feeds 48  
frequency 28  
FTP server 25

## G

GETs 59  
Global ICA Client Settings 30  
GWES 81

## H

hidden  
    Start menu 3  
    taskbar 3  
High Contrast display 22  
HP Compaq Thin Client Imaging  
    Tool Web site 46  
HP Connections for Citrix  
    Software 5  
HP Device Manager 43  
HP Easy Config 34  
HP Easy Update 41  
HP ThinConnect  
    auto starting 15  
HP ThinState 44  
HP ThinState Capture 44  
HP ThinState deploy 45

## I

ICA  
    connection 79  
    firewall settings 32  
    keyboard shortcuts 30  
    preferences 31  
    seamless 31  
    serial number 31  
    server location 32  
icons 5  
image 2, 67  
Imaging Tool Web site 46  
import 67  
importing a registry 85  
Internet Options 46  
Internet Printing Protocol 52  
IPP 52

## J

Java 71

## K

Keyboard 47  
keyboard shortcuts, ICA 30  
Kiosk mode 18

## L

L2TP 50  
LPD Control 21, 47

## M

memory allocation 65  
Modems 48  
modifying  
    printers 52, 56  
    user accounts 12  
Mouse 48  
MouseKeys 22  
My Certificates 24

## N

name 66  
Network and Dial-up  
    Connections 49  
network device name 66  
Network Management Station  
    query 59  
network printer, setting up 55  
NMS 59

## O

Other Authorities 24

## P

permissions 11  
Persistent column 15  
PNAgent 31  
Port Lock 50  
power settings 51  
PPPoE 50  
PPTP 50  
preferences, ICA 31  
primary connections 15  
printer  
    adding 53  
    modifying 56  
printer, network, setting up 55  
Printers 52  
printers 52  
printing 47, 52  
programs 73  
pulse dialing 26

## R

RDP (6.0) 80  
reconnection 16  
refresh frequency 27  
region code 26  
Regional Settings 47  
registry  
    clearing 84  
    importing and exporting 85  
    settings 65  
registry import/export tool 67  
Remote Desktop Protocol 80  
repeat delay 47  
repeat rate 47  
resetting settings 66  
resolution 28

## S

screen resolution 27  
screen saver 27, 28  
screen settings 28  
seamless 31  
secondary connections 15  
Security 58  
serial number 31  
Set from Template button 10  
setting  
    Kiosk mode 18  
    permissions 11  
settings  
    power 51  
    VNC server 71  
Setup Wizard 2  
shortcuts 5, 80  
Single Button Log On check  
    box 20  
SNMP 59  
SNTP Client 64  
sounds 71  
SoundSentry 22  
SSL 24  
SSL/TLS Relay 33  
Start menu 3, 5  
StickyKeys 22  
support documentation 2  
switching users 20  
System 25  
System Update 67

## T

- taskbar 3, 4
- TCP/IP, ThinPrint 73
- TEC 81
- Terminal Emulation
  - Connection 81
- Terminal Server Client
  - Licenses 68
- ThinConnect
  - Advanced window 6
  - auto starting 15
- ThinPrint
  - Network Printer 77
  - TCP/IP 73
- ThinState 44
- ThinState Capture 44
- ThinState capture 44
- ThinState deploy 45
- time 25
- tone dialing 26
- touch screen 83
- traps 59
- Trusted Authorities 24
- TxtPad 83

VNC 71

- white paper for Altiris BootWorks
  - partition 84
- white paper for auto updating
  - clients 68

## U

- updating your system 67
- user accounts 8, 58
- user interface 17
- users
  - assigning connections to 13
  - switching 20

## V

- View or Remove Programs 69
- Virtual Network Computing 70
- Virtual Private Network 50
- VMWare View appliance 35
- VNC Server 70
- VNC Web site 71
- Volume and Sounds 71
- VPN 50

## W

- Web appliance 39
- Web sites
  - Altiris 46, 84
  - HP Compaq Thin Client Imaging
    - Tool 46
  - latest image 2
  - support documentation 2