



# HP Mini 110 and Compaq Mini CQ10

Maintenance and Service Guide

© Copyright 2010 Hewlett-Packard  
Development Company, L.P.

Intel is a trademark of Intel Corporation in  
the U.S. and other countries. Microsoft,  
Windows, and Windows Vista are U.S.  
registered trademarks of Microsoft  
Corporation.

The information contained herein is subject  
to change without notice. The only  
warranties for HP products and services are  
set forth in the express warranty statements  
accompanying such products and services.  
Nothing herein should be construed as  
constituting an additional warranty. HP shall  
not be liable for technical or editorial errors  
or omissions contained herein.

First Edition: August 2010

Document Part Number: 605295-001

## MSG revision history

Revision	Publication Date	Description
<b>A</b>	August 2010	Updated spare parts throughout MSG.



## Safety warning notice

---

- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-



---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 External component identification .....</b>	<b>5</b>
Identifying the hardware .....	5
Top components .....	6
TouchPad .....	6
Lights .....	7
Keys .....	8
Front components .....	8
Right-side components .....	10
Left-side components .....	11
Display components .....	12
Bottom components .....	13
<b>3 Illustrated parts catalog .....</b>	<b>14</b>
Service tag .....	14
Computer major components .....	15
Display assembly components .....	22
Mass storage devices .....	24
Miscellaneous parts .....	25
Sequential part number listing .....	26
<b>4 Removal and replacement procedures .....</b>	<b>31</b>
Preliminary replacement requirements .....	31
Tools required .....	31
Service considerations .....	31
Plastic parts .....	31
Cables and connectors .....	32
Drive handling .....	32
Grounding guidelines .....	33
Electrostatic discharge damage .....	33
Packaging and transporting guidelines .....	34
Workstation guidelines .....	34

Equipment guidelines .....	35
Component replacement procedures .....	36
Service tag .....	36
Computer feet .....	37
Battery .....	38
SIM .....	39
Service cover .....	40
Hard drive .....	41
WWAN module .....	43
WLAN module .....	46
Memory module .....	51
RTC battery .....	53
Keyboard .....	54
Top cover .....	57
Speakers .....	60
TouchPad .....	62
Display assembly .....	64
System board .....	68
Fan/heat sink assembly .....	71
Power connector cable .....	73
<b>5 Setup Utility .....</b>	<b>75</b>
Starting Setup Utility .....	75
Using Setup Utility .....	75
Changing the language of Setup Utility .....	75
Navigating and selecting in Setup Utility .....	76
Displaying system information .....	76
Restoring default settings in Setup Utility .....	76
Exiting Setup Utility .....	77
Setup Utility Menus .....	77
Main Menu .....	77
Security Menu .....	77
System Configuration Menu .....	78
Diagnostics Menu .....	78
<b>6 Backup and recovery .....</b>	<b>79</b>
Windows 7 .....	79
Backing up and recovering using Roxio BackOnTrack .....	79
Creating a copy of the hard drive .....	80
Performing a recovery .....	80
Using the Disaster Recovery utility .....	80
Downloading and extracting the Disaster Recovery utility .....	81
Restoring your hard drive image .....	81

Using the Instant Restore utility .....	82
Using the Instant Restore utility when the operating system is functioning .....	82
Using the Instant Restore utility when the operating system is not functioning ....	82
Using Windows Backup and Restore .....	82
Using system restore points .....	83
When to create restore points .....	83
Creating a system restore point .....	83
Restoring to a previous date and time .....	83
Backing up and recovering using HP Recovery Manager .....	84
Backing up your information .....	84
Creating a set of recovery discs .....	85
Performing a recovery .....	86
Recovering using the recovery discs .....	86
Recovering using the partition on the hard drive (select models only) .....	86
Windows XP .....	87
Backing up your information .....	87
Creating a copy of the hard drive .....	88
Performing a recovery .....	88
Using the Disaster Recovery Utility .....	89
Downloading and extracting the Disaster Recovery utility .....	89
Restoring your hard drive image .....	89
Using the Instant Restore utility .....	90
Using the Instant Restore utility when the operating system is functioning .....	90
Using the Instant Restore utility when the operating system is not functioning .....	90
<b>7 Connector pin assignments .....</b>	<b>91</b>
Audio-in (microphone) .....	91
Audio-out (headphone) .....	91
External monitor .....	92
RJ-45 (network) .....	93
Universal Serial Bus .....	93
<b>8 Power cord set requirements .....</b>	<b>94</b>
Requirements for all countries .....	94
Requirements for specific countries and regions .....	95
<b>9 Recycling .....</b>	<b>96</b>
Battery .....	96
Display .....	96
<b>Index .....</b>	<b>102</b>



# 1 Product description

Category	Description	HP Mini 110	Compaq Mini CQ10
<b>Product Name</b>	HP Mini 110	√	
	Compaq Mini CQ10		√
<b>Processor</b>	Intel® Atom™ N475 1.83-GHz processor, 512-KB level 2 cache, 667-MHz front-side bus (FSB). 6.5W TDP	√	√
	Intel® Atom™ N470 1.83-GHz processor, 512-KB level 2 cache, 667-MHz front-side bus (FSB). 6.5W TDP		
	Intel® Atom™ N455 1.66-GHz processor, 512-KB level 2 cache, 667-MHz front-side bus (FSB).		
	Intel® Atom™ N450 1.66-GHz processor, 512-KB level 2 cache, 667-MHz front-side bus (FSB)		
	Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module		
	Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5W TDP without WWAN module		
	Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module		
	Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP without WWAN module		
<b>Chipset</b>	Intel NM10 Express	√	√
<b>Graphics</b>	Intel Graphics Media Accelerator 3150 universal memory architecture (UMA) graphics subsystem with Broadcom Crystal HD Enhanced Video Accelerator hardware decoder card	√	√
<b>Panels</b>	All display assemblies include 1 webcam, 1 microphone, 1 speaker box, and 2 wireless local-area network (WLAN) antenna transceivers/cables; wireless wide-area network (WWAN) is optional	√	√
	Wide aspect 16:9 ratio panels, typical brightness: 200nits	√	√
	10.1-inch high-definition (HD), AntiGlare, flush glass (1024 × 600) LED	√	√

Category	Description	HP Mini 110	Compaq Mini CQ10
	10.1-inch standard-definition (SD), WSVGA, AntiGlare (1024 × 600) LED	√	√
<b>Memory</b>	One customer-accessible/upgradable memory module slot	√	√
	PC2-4200, 667-MHz, DDR2	√	√
	Supports the following configurations:	√	√
	<ul style="list-style-type: none"> <li>2048-MB total system memory (2048 × 1)</li> </ul> <p><b>NOTE:</b> Supported on computers with Windows® XP and Windows 7.</p> <ul style="list-style-type: none"> <li>1024-MB total system memory (1024 × 1)</li> </ul> <p><b>NOTE:</b> Supported only on computers with Windows 7.</p>		
<b>Hard drives</b>	Supports the following <b>9.5-mm</b> (0.37-in) × <b>6.35-cm</b> (2.50-inch), parallel SATA, 5400-rpm hard drives:	√	√
	<ul style="list-style-type: none"> <li>250-GB</li> </ul> <p><b>NOTE:</b> Supported only on computers with Windows 7.</p> <ul style="list-style-type: none"> <li>320-GB</li> </ul> <p><b>NOTE:</b> Supported only on computers with Windows 7.</p>		
<b>Optical drive</b>	Supports external USB optical drives only	√	√
<b>Diskette drive</b>	Supports external USB diskette drives only	√	√
<b>Audio/Visual</b>	HD audio	√	√
	Supports BEATS audio driver	√	√
	Integrated 1.5-w speakers (2)	√	√
	Fixed integrated, digital microphone	√	√
	Fixed Integrated VGA webcam, 640 × 480 resolution, up to 30 frames per second	√	√
<b>Modem</b>	Supports external USB modems only	√	√
<b>Ethernet</b>	Integrated Realtek RTL8703EL 10/100 network interface card (NIC)	√	√
<b>Wireless</b>	Integrated WLAN by way of:	√	√
	<ul style="list-style-type: none"> <li>Atheros 9285G 802.11b/g/n 1×1 WiFi Adapter module</li> <li>Broadcom 4312G 802.11b/g WiFi Adapter module</li> </ul>		
	2 WLAN antennas built into display assembly	√	√

Category	Description	HP Mini 110	Compaq Mini CQ10
	Integrated WWAN by way of HP un2400 Mobile Broadband Module (optional)	√	√
<b>External media cards</b>	Digital Media Slot (consumer models) or Media Card Reader (commercial models) with push-push technology supporting: <ul style="list-style-type: none"> <li>• Memory Stick (MS)</li> <li>• MS/Pro</li> <li>• MultiMediaCard (MMC)</li> <li>• Secure Digital High Capacity (SDHC) Memory Card (standard and large size)</li> <li>• xD-Picture</li> </ul>	√	√
<b>Internal media cards</b>	Two Mini Card slots: <ul style="list-style-type: none"> <li>• Full-size Mini Card slot</li> <li>• Half-size Mini Card slot</li> </ul>	√	√
<b>Ports</b>	Audio-in/out combo, supporting jack detection	√	√
	RJ-45 (Ethernet, includes link and activity lights)	√	√
	USB (2–3)	√	√
	VGA, supporting up to 1600 x 900 external resolution @ 60Hz, hot plug /unplug, and auto detection for correct output to wide-aspect vs. standard aspect video	√	√
	3-pin AC power	√	√
<b>Keyboard/ pointing device</b>	93% flat-style keyboard	√	√
	HP Clickpad TouchPad with multi-touch/gesture support	√	√
	No numeric pad supported.		
	TouchPad with 2 TouchPad buttons and 2-way scrolling (taps enabled and some gestures enabled by default)		
	TouchPad on/off button with LED indicator		
<b>Power requirements</b>	30-W UMA AC adapter (non-Smart) with localized cable plug support and stepped plug	√	√
	AC adapter connector on cable	√	√
	<b>1.0-m</b> (3.28-ft) power cord	√	√
	3-cell Lithium-ion(Li-ion) battery (2.55-Ah, 28-Wh)	√	√
	6-cell Lithium-ion(Li-ion) battery (2.80-Ah, 62-Wh)	√	√
<b>Security</b>	Supports Kensington security lock	√	√

<b>Category</b>	<b>Description</b>	<b>HP Mini 110</b>	<b>Compaq Mini CQ10</b>
<b>Operating system</b>	Windows 7 Home Basic 32	√	
	Windows 7 Starter 32	√	√
	Windows XP Home SP3, ultra low-cost personal computer (ULCPC) edition	√	√
	Support for HP QuickWeb	√	√
	FreeDOS	√	
<b>Serviceability</b>	<b>End-user replaceable parts:</b>		
	AC adapter	√	√
	Battery (system)	√	√
	Hard drive	√	√
	Memory module	√	√
	WLAN module	√	√
	WWAN module	√	√

---

## 2 External component identification

### Identifying the hardware

Components included with the computer may vary by region and model. The illustrations in this chapter identify the standard features on most computer models.

To see a list of hardware installed in the computer in Windows, follow these steps:

1. Select **Start > My Computer**.
2. In the left pane of the System Tasks window, select **View system information**.
3. Select **Hardware tab > Device Manager**.

You can also add hardware or modify computer configurations using Device Manager.

# Top components

## TouchPad




Item	Component	Description
(1)	TouchPad zone	Moves the pointer and selects or activates items on the screen.
(2)	Left TouchPad button*	Functions like the left button on an external mouse.
(3)	Right TouchPad button*	Functions like the right button on an external mouse.

## Lights



Item	Component	Description
(1)	Caps lock light	On: Caps lock is on.
(2)	Mute light	On: Speaker sound is off.
(3)	Wireless light	<ul style="list-style-type: none"><li>White: An integrated wireless device, such as a wireless local area network (WLAN) device and/ or a Bluetooth device, is on.</li></ul> <p><b>NOTE:</b> Wireless devices are enabled at the factory.</p> <ul style="list-style-type: none"><li>Off: All wireless devices are off.</li></ul>

## Keys

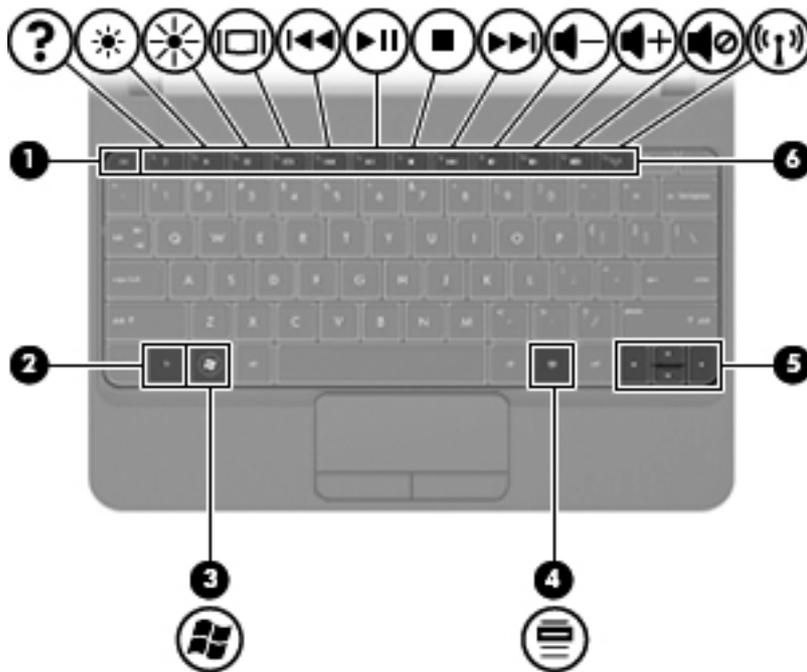


Item	Component	Description
(1)	esc key	Displays system information when pressed in combination with the <b>fn</b> key.
(2)	fn key	Executes frequently used system functions when pressed in combination with a function key or the <b>esc</b> key.
(3)	Windows logo key	Displays the Windows Start menu on computers using the Windows operating system.
(4)	Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5)	Arrow keys	Scroll the page up or down, or when pressed in combination with the <b>fn</b> key, move to the beginning or end of the document.
(6)	Action keys	Execute frequently used system functions.

## Front components



Item	Component	Description
(1)	Vents (2)	Enable airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	Speaker	Produces sound.

## Right-side components

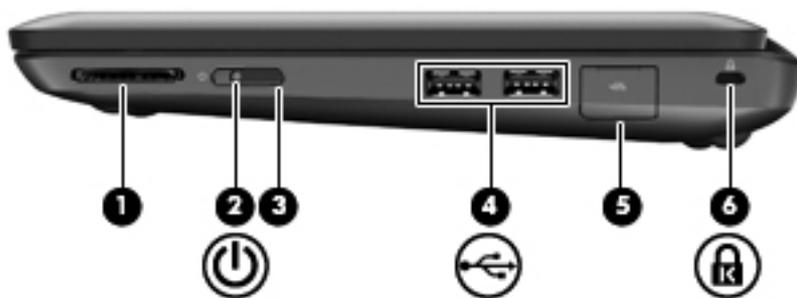


item	Component	Description
(1)	Digital Media Slot	Supports the following optional digital card formats: <ul style="list-style-type: none"><li>• MultiMediaCard (MMC)</li><li>• Secure Digital (SD) Memory Card</li><li>• Secure Digital Extended Capacity (SDxC) Memory Card</li><li>• Secure Digital High Capacity (SDHC) Memory Card</li></ul>
(2)	Power light	<ul style="list-style-type: none"><li>• White: The computer is on.</li><li>• Blinking white: The computer is in the Sleep state.</li><li>• Off: The computer is off or in Hibernation.</li></ul>
(3)	Power switch	<ul style="list-style-type: none"><li>• When the computer is off, slide the switch to turn on the computer.</li><li>• When the computer is on, briefly slide the switch to initiate Sleep.</li><li>• When the computer is in the Sleep state, briefly slide the switch to exit Sleep.</li><li>• When the computer is in Hibernation, slide the switch briefly to exit Hibernation.</li></ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, slide and hold the power switch for at least 4 seconds to turn off the computer.</p> <p>To learn more about your power settings in Windows, select <b>Start &gt; Control Panel &gt; System and Security &gt; Power Options</b>, or refer to the <i>HP Notebook Reference Guide</i>.</p>
(4)	USB ports (2)	Connect optional USB devices.

item	Component	Description
(5)	RJ-45 (network) jack and cover	Connects a network cable.
(6)	Security cable slot	Attaches an optional security cable to the computer.


**NOTE:** The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

## Left-side components

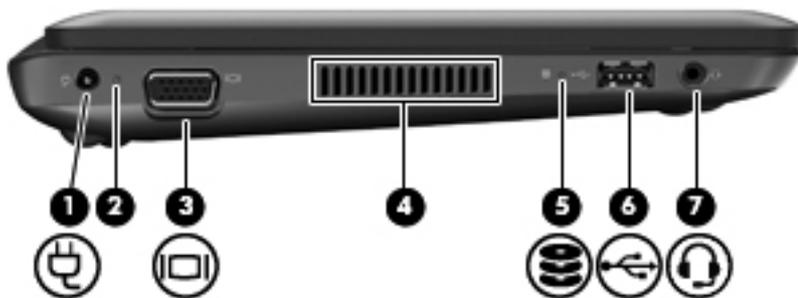

item	Component	Description
(1)	Power connector	Connects an AC adapter.
(2)	AC adaptor light	<ul style="list-style-type: none"> <li>White: The computer is connected to external power and the battery is fully charged.</li> <li>Amber: The computer is connected to external power and the battery is charging.</li> <li>Off: The computer is not connected to external power.</li> </ul>
(3)	External monitor port	Connects an external VGA monitor or projector.
(4)	Vent	Enables airflow to cool internal components.
		<b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5)	Drive light	Blinking white: The hard drive is being accessed.
(6)	USB port	Connects an optional USB device.
(7)	Audio-out (headphone) jack/Audio-in (microphone) jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or television audio. Also connects an optional headset microphone.
		<b>WARNING!</b> When a device is connected to the jack, the computer speakers are disabled.
		<b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.


## Display components

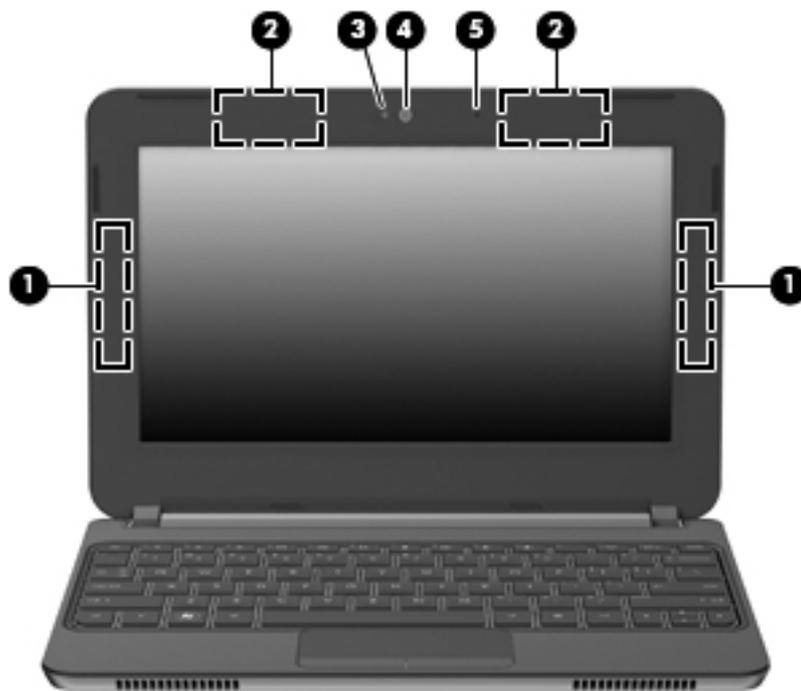

item	Component	Description
(1)	WWAN antennas* (2) (select models only)	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(2)	WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).
(3)	Webcam light	On: The webcam is in use.
(4)	Webcam	Records video and captures still photographs.  To use the webcam in Windows, select <b>Start &gt; HP &gt; HP MediaSmart &gt; HP MediaSmart Webcam</b> .
(5)	Internal microphone	Records sound.

\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the area immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

## Bottom components

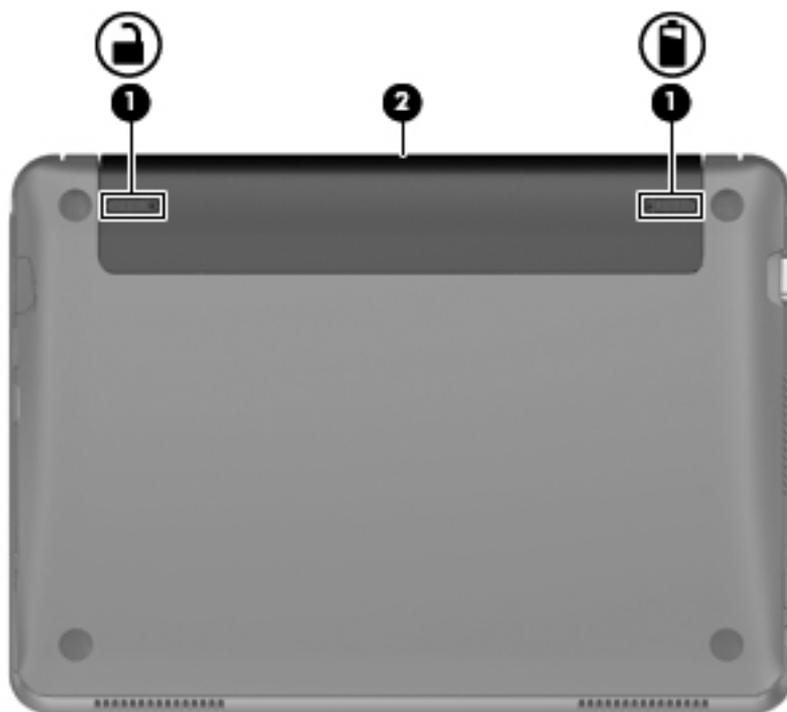

item	Component	Description
(1)	Battery release latches (2)	Release the battery from the battery bay.
(2)	Battery bay	Holds the battery.


# 3 Illustrated parts catalog

## Service tag


When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag:

 **NOTE:** The computer battery must be removed to access the service tag.

- (1) Product name: This is the product name affixed to the front of the device.
- (2) Serial number (s/n): This is an alphanumeric identifier that is unique to each product.
- (3) Part number/Product number (p/n): This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- (4) Warranty period: This number describes the duration of the warranty period for the device.
- (5) Model description (select models only): This is the alphanumeric identifier used to locate documents, drivers, and support for the device.

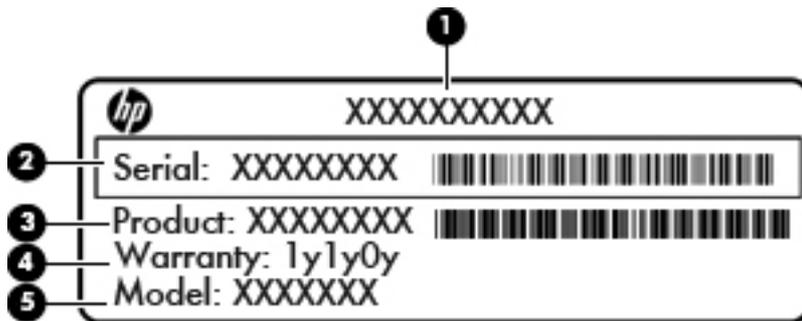

# Computer major components

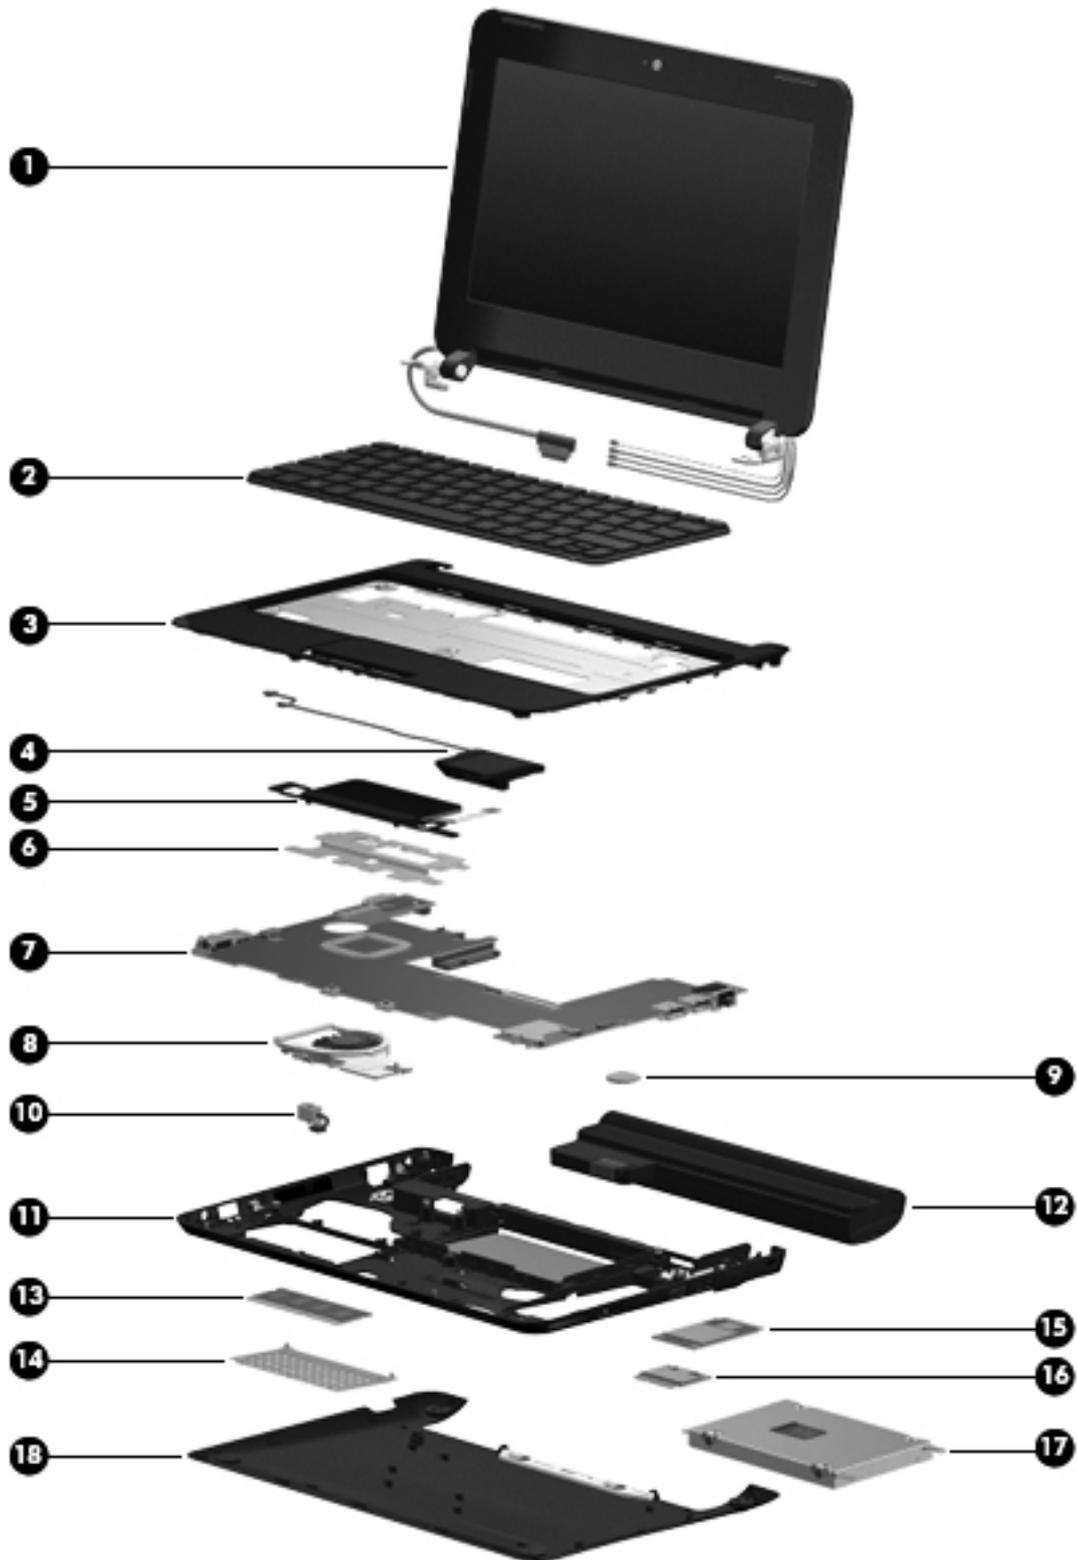

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>
<b>(1)</b>	<b>10.1-in display assembly</b> (includes display panel cable, 2 WLAN transceivers and cables, 2 WWAN transceivers and cables, and webcam/microphone module and cable):	
	• 10.1-in, WSVGA, AntiGlare, standard display assembly in black	607744-001
	• 10.1-in, WSVGA, AntiGlare, standard display assembly in white	607745-001
	• 10.1-in, WSVGA, standard display assembly in black	619469-001
	• 10.1-in, WSVGA, standard display assembly in black	619470-001
	• 10.1-in, WSVGA, Anti-Glare, standard display assembly in black	607746-001
	• 10.1-in, WSVGA, Anti-Glare, standard display assembly in black	618875-001
	• 10.1-in, WSVGA, AntiGlare display panel non-PMMA in red	622656-001
	• 10.1-in, WSVGA, AntiGlare display panel non-PMMA in blue	622657-001
	• 10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in blue	622659-001
	• 10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in red	622658-001
<b>(2)</b>	<b>Keyboard</b> (includes cable)	
	With textured surface:	
	• For use in Japan	608769-291
	• For use in Taiwan	608769-AB1
	• For use in South Korea	608769-AD1
	• For use in Thailand	608769-281
	• For use in Slovenia	608769-BA1
	• For use in the Czech Republic	608769-221
	• For use in Turkey	608769-141
	• For use in Hungary	608769-211
	• For use in Switzerland	608769-BG1
	• For use in Russia	608769-251
	• For use in Israel	608769-BB1
	• For use in Greece	608769-DJ1
	• For use in Belgium	608769-A41
	• For use in Saudi Arabia	608769-171
	• For use in Portugal	608769-131
	• For use in Denmark, Finland, and Norway	608769-DH1
	• For use in Spain	608769-071
	• For use in Italy	608769-061
	• For use in France	608769-051

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>
	<ul style="list-style-type: none"> <li>For use in Germany</li> </ul>	608769-041
	<ul style="list-style-type: none"> <li>For use in the United Kingdom</li> </ul>	608769-031
	<ul style="list-style-type: none"> <li>For use in the Netherlands</li> </ul>	608769-B31
	<ul style="list-style-type: none"> <li>For use in Latin America</li> </ul>	608769-161
	<ul style="list-style-type: none"> <li>For use in French Canada</li> </ul>	608769-121
	<ul style="list-style-type: none"> <li>For use in the United States</li> </ul>	608769-001
	<ul style="list-style-type: none"> <li>For use in Brazil</li> </ul>	608769-201
<b>(3)</b>	<b>Top cover:</b>	
	<ul style="list-style-type: none"> <li>For HP and CPQ</li> </ul>	607766-001
<b>(4)</b>	<b>Speakers</b> (includes cable)	608770-001
<b>(5) &amp; (6)</b>	<b>TouchPad</b> (includes cable and bracket <b>(6)</b> ):	
	<ul style="list-style-type: none"> <li>For HP and CPQ</li> </ul>	607766-001
<b>(7)</b>	<b>System board :</b>	
	Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB	607740-001
	Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5W TDP	607741-001
	Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB	618873-001
	Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP	618874-001
	Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module	621300-001
	Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5W TDP without WWAN module	621301-001
	Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module	621302-001
	Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP without WWAN module	621303-001
<b>(8)</b>	<b>Fan/heat sink assembly</b> (includes replacement thermal material)	608772-001
<b>(9)</b>	<b>RTC battery</b>	608771-001
<b>(10)</b>	<b>Power connector cable</b>	607755-001
<b>(11)</b>	<b>Base enclosure</b> (includes 4 rubber feet and power connector bracket)	607765-001
	<b>Rubber Kit</b> (not illustrated, includes 4 rubber feet and RJ-45 cover)	607756-001
<b>(12)</b>	<b>Battery</b>	
	3-cell, 27-WHr (includes 2 release latches)	607762-001
	6-cell, 55-WHr (includes 2 release latches and 2 rubber feet)	607763-001


Item	Description	Spare part number
<b>(13)</b>	<b>Memory module</b> (667-MHz, DDR2):	
	1024-MB	616749-001
	2048-MB	616750-001
<b>(14)</b>	<b>Memory shield</b> (included with the service cover kit)	607768-001
<b>(15)</b>	<b>HP Mobile Broadband WWAN modules</b>	
	HP un2400 Mobile Broadband WWAN module	531993-001
	HP Mobile Broadband WWAN module	592625-161
	HP Mobile Broadband WWAN module	607212-001
	HP F3307 Pris 850 Mobile Broadband WWAN module	612599-001
	HP F3307 Pris 900 Mobile Broadband WWAN module	612600-001
<b>(16)</b>	<b>WLAN modules</b>	
	<ul style="list-style-type: none"> <li>For use in Canada, the Cayman Islands, Guam, Puerto Rico, the U.S. Virgin Islands, and the United States</li> </ul>	607742-001
	<ul style="list-style-type: none"> <li>For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</li> </ul>	617551-001

Item	Description	Spare part number
•	<p>For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	593836-001
•	<p>For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	600370-001

Item	Description	Spare part number
•	For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	602992-001
•	For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	605560-005
<b>(17)</b>	<b>Hard drive</b> (includes cable adapter, 4 rubber isolators, and hard drive bracket)	

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>
	Hard drive:	
	• 250-GB, 5400-rpm	608763-001
	• 320-GB, 5400-rpm	608764-001
<b>(18)</b>	<b>Service cover</b>	
	• In Black	607750-001
	• In White	607751-001
	• In Black (for use only with Compaq Mini CQ10 computer models, hinge caps attached)	607753-001
	• In Red	622660-001
	• In Blue	622661-001

## Display assembly components

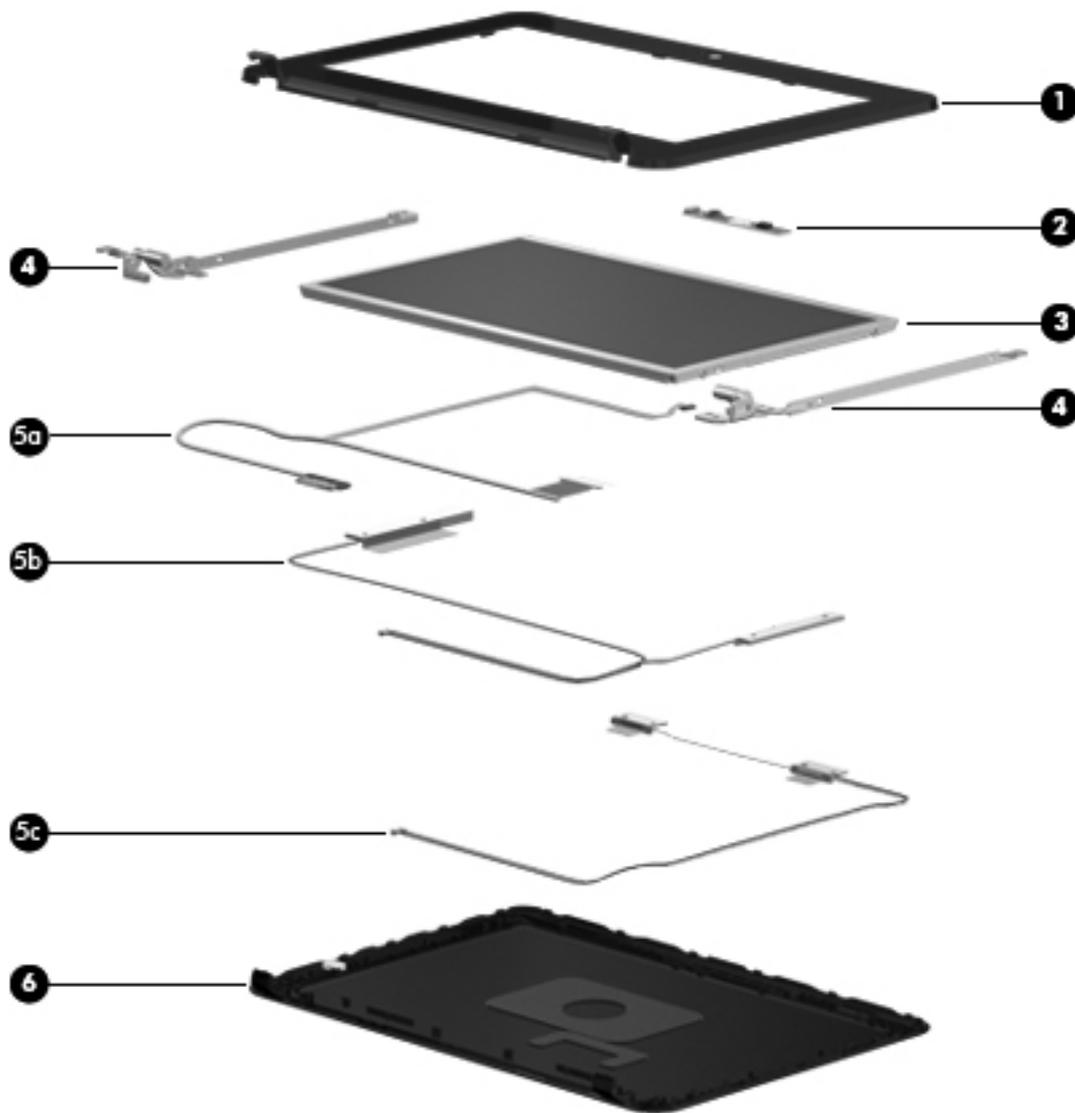

**NOTE:** Display assembly subcomponents are available only for standard display assemblies. Flush glass display assemblies are available only as hinge-up assemblies.

Item	Description	Spare part number
<b>(1)</b>	<b>Display bezel</b> (includes WLAN antenna transceivers and cables and WWAN antenna transceivers and cables):	
	For use only with HP Mini 110 computer models	607749-001
	For use only with Compaq Mini CQ10 computer models	607752-001
<b>(2)</b>	<b>Webcam/microphone module</b>	607748-001
<b>(3)</b>	<b>Display panel:</b>	
	10.1-in, WSVGA, AntiGlare, standard display assembly in black	607744-001
	10.1-in, WSVGA, AntiGlare, standard display assembly in white	607745-001

<b>Item</b>	<b>Description</b>	<b>Spare part number</b>
	10.1-in, WSVGA, Anti-Glare, standard display assembly in black	607746-001
	10.1-in, WSVGA, standard display assembly in black	619469-001
	10.1-in, WSVGA, standard display assembly in white	619470-001
	10.1-in, WSVGA, Anti-Glare, standard display assembly in black	618875-001
	10.1-in, AntiGlare display panel non PMMA	607747-001
	10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN	620902-001
	10.1-in, WSVGA, AntiGlare display panel non-PMMA in red	622656-001
	10.1-in, WSVGA, AntiGlare display panel non-PMMA in blue	622657-001
	10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in blue	622659-001
	10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in red	622658-001
<b>(4)</b>	<b>Display Hinge Kit</b> (includes left and right display hinges)	609907-001
<b>(5a)</b>	<b>Display panel cable</b> (includes webcam/microphone module cable)	607755-001
<b>(5b)</b>	<b>WWAN antenna cables</b> (included in Display cable kit)	607755-001
<b>(5c)</b>	<b>WLAN antenna cables</b> (included in Display cable kit)	607755-001
<b>(6)</b>	<b>Display enclosure</b> (includes WLAN antenna transceivers and cables and WWAN antenna transceivers and cables)	
	<b>Display Screw Kit</b> (not illustrated)	607754-001

## Mass storage devices



 **NOTE:** Each hard drive spare part kit includes a cable adapter, bracket, and 4 isolators.

Item	Description	Spare part number
(1)	<b>Hard drive:</b>	
	250-GB, 5400-RPM	608763-001
	320-GB, 5400-RPM	608764-001

## Miscellaneous parts

<b>Description</b>	<b>Spare part number</b>
<b>30-W UMA AC adapter</b>	496813-001
<b>Power cord:</b>	
For use in Argentina	490371-D01
For use in Australia	490371-011
For use in Brazil	490371-201
For use in Denmark	490371-081
For use in Europe, Middle East, and Africa	490371-021
For use in Israel	490371-BB1
For use in Italy	490371-061
For use in Japan	490371-291
For use in the People's Republic of China	490371-AA1
For use in Singapore and the United Kingdom	490371-031
For use in South Africa	490371-AR1
For use in South Korea	490371-AD1
For use in Switzerland	490371-111
For use in Taiwan	490371-AB1
For use in India	490371-D61
For use in North America	490371-001
<b>Rubber Kit</b> (includes 4 rubber feet and power connector bracket)	607756-001

## Sequential part number listing

Spare part number	Description
490371-001	Power cord for use in North America
490371-011	Power cord for use in Australia
490371-021	Power cord for use in Europe, the Middle East, and Africa
490371-031	Power cord for use in Singapore and the United Kingdom
490371-061	Power cord for use in Italy
490371-081	Power cord for use in Denmark
490371-111	Power cord for use in Switzerland
490371-201	Power cord for use in Brazil
490371-291	Power cord for use in Japan
490371-AA1	Power cord for use in the People's Republic of China
490371-AB1	Power cord for use in Taiwan
490371-AD1	Power cord for use in South Korea
490371-AR1	Power cord for use in South Africa
490371-BB1	Power cord for use in Israel
490371-D01	Power cord for use in Argentina
490371-D61	Power cord for use in India
496813-001	30-W UMA AC adapter
531993-001	HP un2400 Mobile Broadband WWAN module
574248-001	HP F3607 SDG 850 Mobile Broadband WWAN module
592625-161	HP Telefonica Mobile Broadband WWAN module
593836-001	HP 802.11 b/g/n Shiraz WLAN module
597588-001	Optical Mobile Mouse
600370-001	HP 802.11 b/g/n + Bluetooth 2.1+ EDR Combo Adapter WLAN module
602992-001	HP 802.11 b/g/n (1x1) + Bluetooth 2.1+ EDR Combo Adapter WLAN module
605560-005	HP 802.11 b/g/n WLAN module
607212-001	HP Rogers Mobile Broadband WWAN module
607740-001	System board with Digital Media Card Reader (includes Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB):
607741-001	System board with Digital Media Card Reader (includes Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB):
607742-001	Atheros 9285G 802.11b/g/n 1x1 WiFi Adapter module:
607744-001	10.1-in, WSVGA, AntiGlare, standard display assembly in black

<b>Spare part number</b>	<b>Description</b>
607745-001	10.1-in, WSVGA, AntiGlare, standard display assembly in white
607746-001	10.1-in, WSVGA, AntiGlare, standard display assembly in black (IMR)
607747-001	10.1-in, AntiGlare display panel non PMMA
607748-001	Webcam/microphone module
607749-001	Display bezel for use with HP models (includes WLAN antenna transceivers and cables and WWAN antenna transceivers and cables):
607750-001	Service cover (black)
607751-001	Service cover (white)
607752-001	Display bezel for use with CPQ models (includes WLAN antenna transceivers and cables and WWAN antenna transceivers and cables):
607753-001	For use only with Compaq Mini CQ10 computer models (black, hinge caps attached)
607754-001	Display Screw Kit
607755-001	Power connector cable (part of the cable kit that includes display panel cable, webcam/microphone module cable)
607756-001	Rubber Kit (includes 4 rubber feet and RJ-45 cover)
607762-001	3-cell, 27-WHr (includes 2 release latches)
607763-001	6-cell, 55-WHr (includes 2 release latches and 2 rubber feet)
607765-001	Base enclosure (includes 4 rubber feet and power connector bracket)
607766-001	Top cover (for HP and CPQ)
607768-001	Service cover (kit includes memory shield)
608763-001	Hard drive: 250-GB, 5400-rpm
608764-001	Hard drive: 320-GB, 5400-rpm
608769-001	Keyboard with textured finish for use only in the United States (includes cable)
608769-031	Keyboard with textured finish for use only in the United Kingdom (includes cable)
608769-041	Keyboard with textured finish for use only in Germany (includes cable)
608769-051	Keyboard with textured finish for use only in France (includes cable)
608769-061	Keyboard with textured finish for use only in Italy (includes cable)
608769-071	Keyboard with textured finish for use only in Spain (includes cable)
608769-121	Keyboard with textured finish for use only in French Canada (includes cable)
608769-131	Keyboard with textured finish for use only in Portugal (includes cable)
608769-141	Keyboard with textured finish for use only in Turkey (includes cable)
608769-161	Keyboard with textured finish for use only in Latin America (includes cable)
608769-171	Keyboard with textured finish for use only in Saudi Arabia (includes cable)
608769-201	Keyboard with textured finish for use only in Brazil (includes cable)

<b>Spare part number</b>	<b>Description</b>
608769-211	Keyboard with textured finish for use only in Hungary (includes cable)
608769-221	Keyboard with textured finish for use only in the Czech Republic (includes cable)
608769-251	Keyboard with textured finish for use only in Russia (includes cable)
608769-281	Keyboard with textured finish for use only in Thailand (includes cable)
608769-291	Keyboard with textured finish for use only in Japan (includes cable)
608769-A41	Keyboard with textured finish for use only in Belgium (includes cable)
608769-AB1	Keyboard with textured finish for use only in Taiwan (includes cable)
608769-AD1	Keyboard with textured finish for use only in South Korea (includes cable)
608769-B31	Keyboard with textured finish for use only in the Netherlands (includes cable)
608769-BA1	Keyboard with textured finish for use only in Slovenia (includes cable)
608769-BB1	Keyboard with textured finish for use only in Israel (includes cable)
608769-BG1	Keyboard with textured finish for use only in Switzerland (includes cable)
608769-DH1	Keyboard with textured finish for use only in Denmark, Finland, and Norway (includes cable)
608769-DJ1	Keyboard with textured finish for use only in Greece (includes cable)
608770-001	Speakers (includes cable)
608771-001	RTC battery
608772-001	Fan/heat sink assembly (includes replacement thermal material)
609907-001	Display Hinge Kit (includes left and right display hinges)
612599-001	HP F3307 Pris 850 Mobile Broadband WWAN module
612600-001	HP F3307 Pris 900 Mobile Broadband WWAN module
616749-001	Memory module: 1024-MB (667-MHz, DDR2):
616750-001	Memory module: 2048-MB (667-MHz, DDR2):

<b>Spare part number</b>	<b>Description</b>
617551-001	Atheros 9285G 802.11b/g/n 1x1 WiFi Adapter module:  For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
618873-001	Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB
618874-001	Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP
618875-001	10.1-in, WSVGA, Anti-Glare, standard display assembly in black
619469-001	10.1-in, WSVGA, standard display assembly in black
619470-001	10.1-in, WSVGA, standard display assembly in black
620902-001	10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN
621300-001	Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module
621301-001	Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5W TDP without WWAN module
621302-001	Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module
621303-001	Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP without WWAN module
622656-001	10.1-in, WSVGA, AntiGlare display panel non-PMMA in red
622657-001	10.1-in, WSVGA, AntiGlare display panel non-PMMA in blue
622658-001	10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in red
622659-001	10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in blue
622660-001	Service cover (red)

<b>Spare part number</b>	<b>Description</b>
622661-001	Service cover (blue)
629234-001	Case sleeve

---

# 4 Removal and replacement procedures

## Preliminary replacement requirements

### Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

### Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

---

 **NOTE:** As you remove each subassembly from the device, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

### Plastic parts

---

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

---

## Cables and connectors

- 
- △ **CAUTION:** When servicing the device, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the device.
- 

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

- 
- △ **CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the device, damage to a drive, or loss of information, observe these precautions:
- 

Before removing or inserting a hard drive, shut down the device. If you are unsure whether the device is off or in Hibernation, turn the device on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing a hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

---

# Grounding guidelines

## Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

△ **CAUTION:** To prevent damage to the device when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Use nonmagnetic tools.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

△ **CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive strips must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials


The following table lists the shielding protection provided by antistatic bags and floor mats.

<b>Material</b>	<b>Use</b>	<b>Voltage protection level</b>
Antistatic plastic	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V



## Computer feet

The computer feet are adhesive-backed rubber pads. The feet are included in the Rubber Feet Kit, spare part number 607756-001. There are 4 rubber feet that attach to the base enclosure in the locations shown in the following illustration.

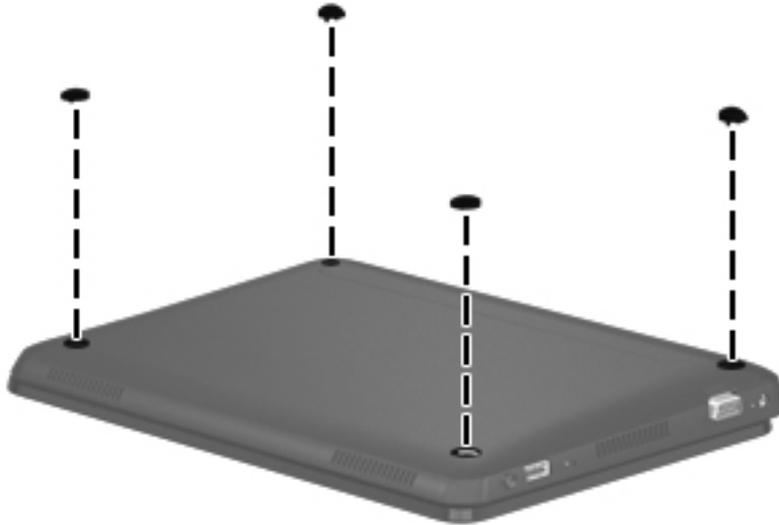

## Battery


Description	Spare part number
6-cell, 55-WHr (includes 2 release latches and 2 rubber feet)	607763-001
3-cell, 27-WHr (includes 2 release latches)	607762-001

Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the battery:

1. Turn the computer upside-down on a flat surface, with the battery bay toward you.
2. Slide battery lock latch **(1)** to the unlock position.
3. Then, firmly slide battery release latch **(2)** until the battery is released.
4. Remove the battery **(3)**.

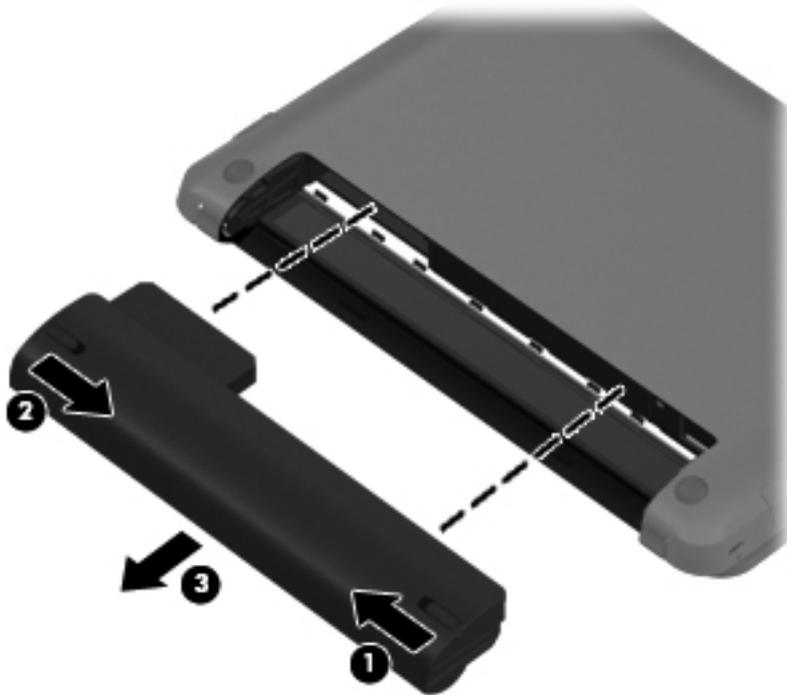

Reverse this procedure to install a battery.

 **NOTE:** After replacing the battery, slide the manual release latch to the lock position.

## SIM

Before removing the SIM, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).

Remove the SIM:

1. Press in on the SIM **(1)** to release it from the SIM slot.
2. Remove the SIM **(2)** from the SIM slot.



Install the SIM by inserting it into the SIM slot until you hear a click.

## Service cover

Description	Spare part number
Service cover	
In Black	607750-001
In White	607751-001
In Red	622660-001
In Blue	622661-001


Before removing the service cover, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).

Remove the service cover:

1. Press in and slide latch **(1)** and release the right side of the service cover until the service cover tabs disconnect from the computer.
2. Lift up and remove the cover **(2)**.

 **NOTE:** Small tabs hold the cover in place. Firmly pull up on the cover to release the tabs.

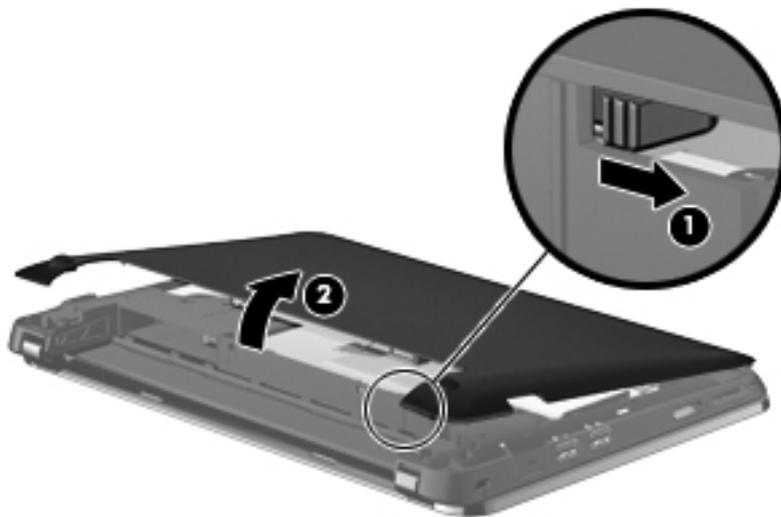

Reverse this procedure to insert the service cover.

## Hard drive

 **NOTE:** Each hard drive spare part kit includes a cable adapter, bracket, and four rubber isolators.

Description	Spare part number
Hard drive:	
250-GB, 5400-RPM	608763-001
320-GB, 5400-RPM	608764-001

Before removing a hard drive, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Battery on page 38](#)).

Remove the hard drive:


1. Lift up the vinyl cover to expose the hard drive.



2. Using a small Phillips screwdriver, remove the 4 hard drive mounting screws.

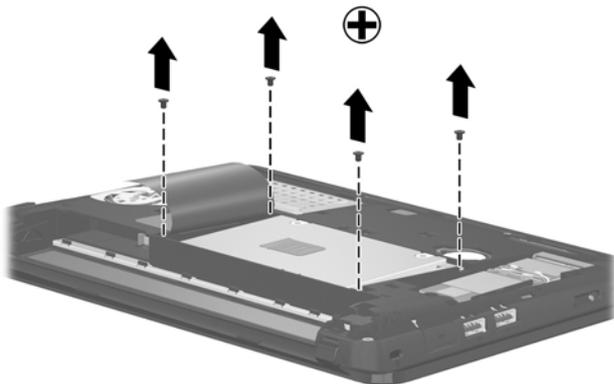

3. Slide the tab **(1)** to disconnect the hard drive from the computer, and then lift the hard drive **(2)** out of the bay.

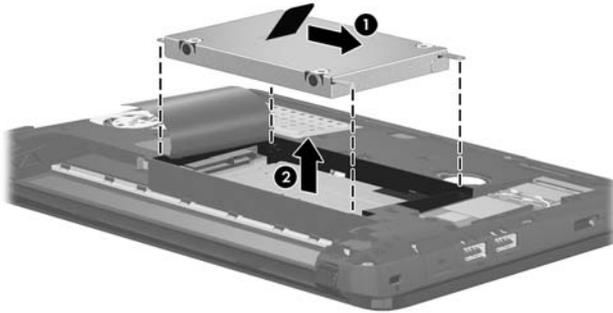

Reverse this procedure to reassemble and install the hard drive.

## WWAN module

Description	Spare part number
HP un2400 Mobile Broadband WWAN module	531993-001
HP F3607 SDG 850 Mobile Broadband WWAN module	574248-001
HP Mobile Broadband WWAN module	592625-161
HP Mobile Broadband WWAN module	607212-001
HP F3307 Pris 850 Mobile Broadband WWAN module	612599-001
HP F3307 Pris 900 Mobile Broadband WWAN module	612600-001

△ **CAUTION:** The WWAN module and the WLAN module are not interchangeable.


To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WWAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).


Remove the WWAN module:

1. Disconnect the WWAN antenna cables from the terminals on the WWAN module.

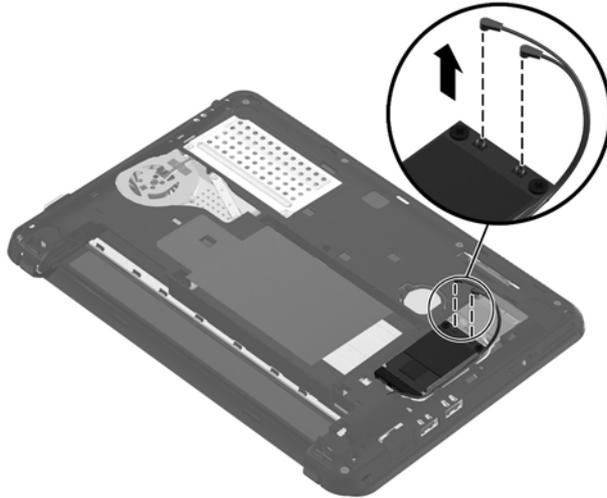


 **NOTE:** The number of WWAN cables varies, depending on the model. Note the labeling and position of the cables. Pull the antenna cables up and off the terminals.

2. Using a small Phillips screwdriver, remove the 2 module screws. This releases the module and allows it to tilt up at a slight angle.

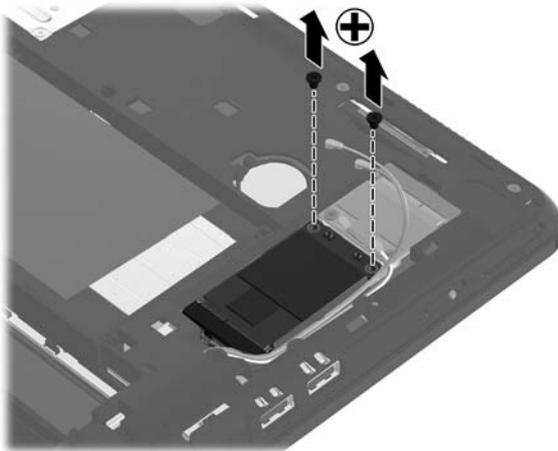

3. Remove the WWAN module.

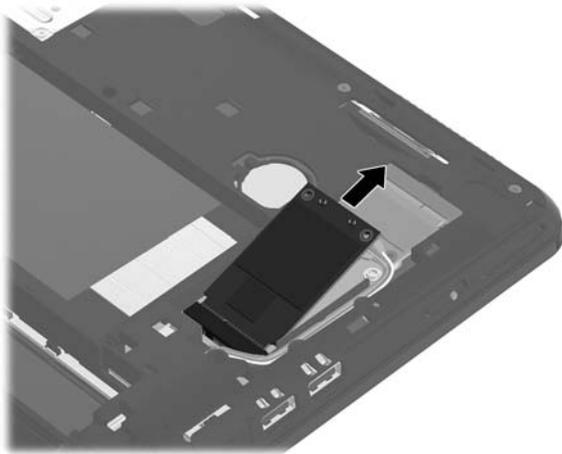


Reverse this procedure to install the WWAN module.

---

 **NOTE:** When replacing the WWAN module, press the antenna cables firmly down onto the terminals until securely connected. Route the cables carefully to prevent potential damage when the service cover is replaced, as shown in the illustration below.

---

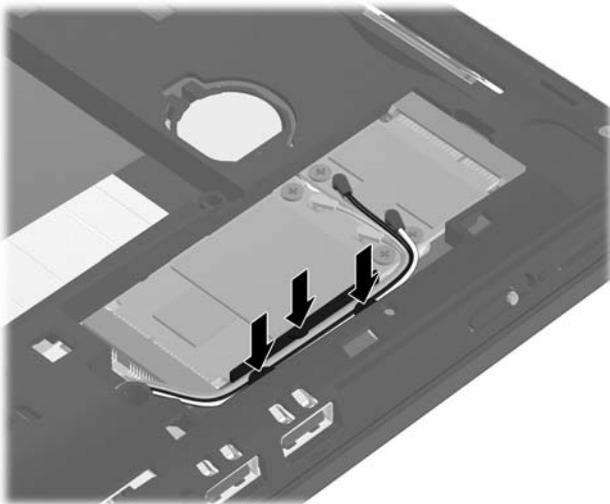

## WLAN module

Description	Spare part number
For use in Canada, the Cayman Islands, Guam, Puerto Rico, the U.S. Virgin Islands, and the United States	607742-001
For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	617551-001
For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	602992-001

Description	Spare part number
<p>For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	605560-005

Description	Spare part number
<p>For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	593836-001
<p>For use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, the Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cameroon, Cape Verde, the Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Ireland, Israel, Italy, the Ivory Coast, Jamaica, Jordan, Kazakhstan, Kenya, Kiribati, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, the Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	600370-001

△ **CAUTION:** The WWAN module and the WLAN module are not interchangeable.


To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the device by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).


Remove the WLAN module:

1. Disconnect the WLAN antenna cables

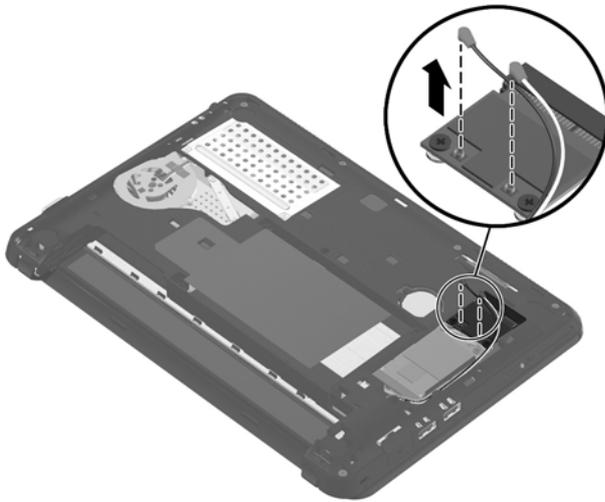

**NOTE:** The number of WLAN cables varies, depending on model. Note the labeling and position of the cables. Disconnect the antenna cables by pulling the cables off the terminals.

2. Using a small Phillips screwdriver, remove the 2 WLAN module screws. This releases the module to tilt up at a slight angle

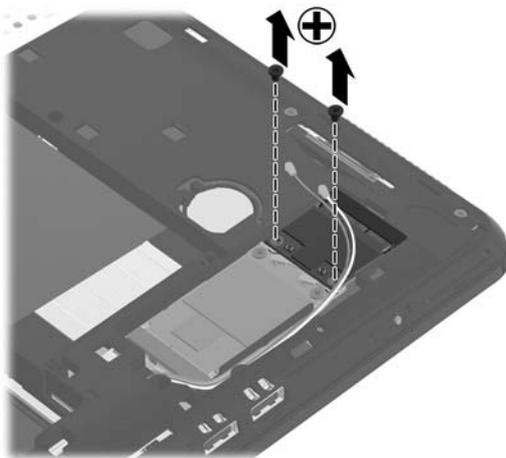


3. Lift up and remove the WLAN module at an angle.



Reverse this procedure to install the WLAN module.

- 
-  **NOTE:** When replacing, press the antenna cables firmly down onto the terminals until securely connected. Route the cables carefully to prevent potential damage when the service cover is replaced, as shown in the illustration below.
- 

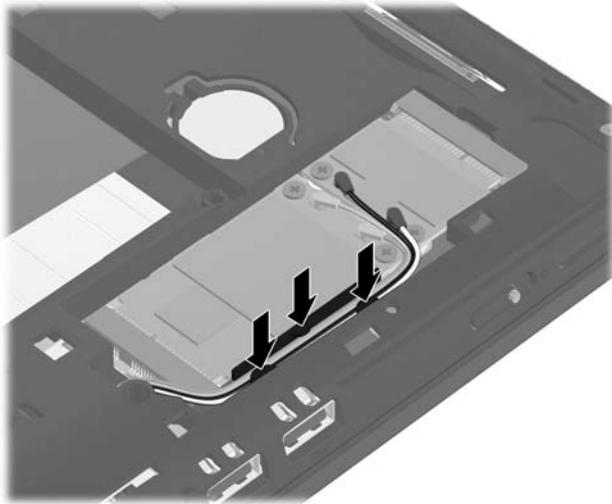

## Memory module


Description	Spare part number
2048-MB memory module (667-MHz, DDR2)	616750-001
1024-MB memory module (667-MHz, DDR2)	616749-001

Before removing the memory module, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).

Remove the memory module:


1. Using a small Phillips screwdriver, loosen the 2 memory module shield screws.

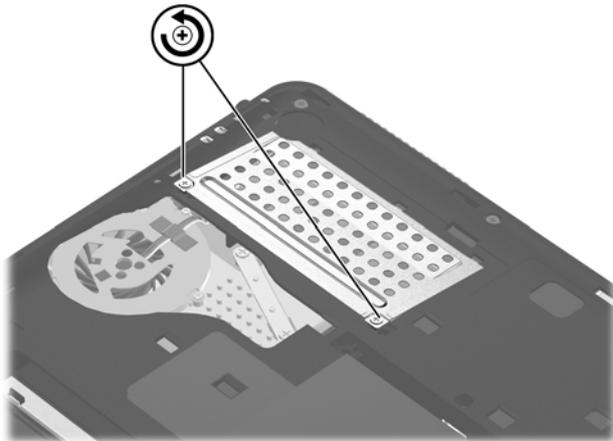

2. Lift up and remove the memory shield.

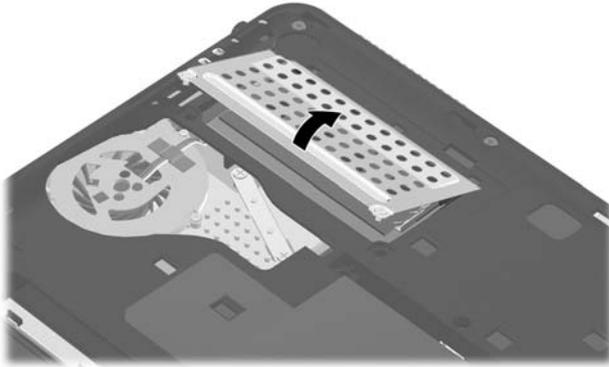

3. Using your fingers, spread the 2 retention clips outward until the memory module tilts up at a 45-degree angle.

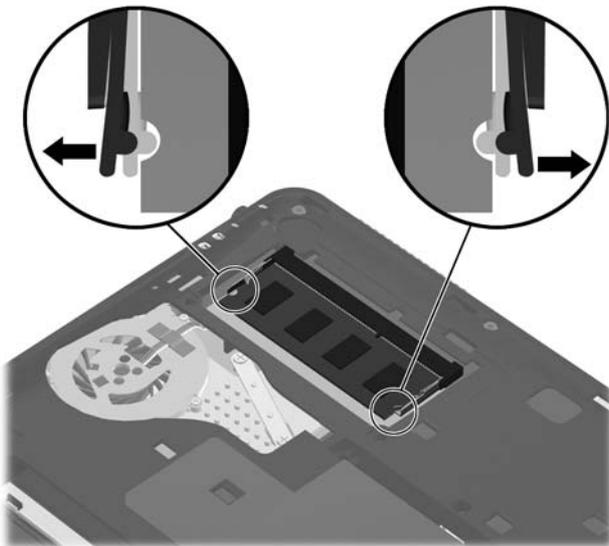

4. Remove the memory expansion module from the computer.

Reverse this procedure to install the memory module.

## RTC battery

Description	Spare part number
RTC battery	608771-001

Before removing the real-time clock (RTC) battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).

Remove the RTC battery:

- ▲ Remove the RTC battery from the socket on the system board.



Reverse this procedure to install the RTC battery. When installing the RTC battery, make sure the “+” sign faces up.

## Keyboard

 **NOTE:** The keyboard spare part kit includes a keyboard cable.


<b>For use in:</b>	<b>Spare part number</b>	<b>For use in:</b>	<b>Spare part number</b>
With textured finish:			
Belgium	608759-A41	The Netherlands	608759-B31
Brazil	608759-201	Portugal	608759-131
The Czech Republic	608759-221	Russia	608759-251
Denmark, Finland, and Norway	608759-DH1	Saudi Arabia	608759-171
France	608759-051	Slovenia	608759-BA1
French Canada	608759-121	South Korea	608759-AD1
Germany	608759-041	Spain	608759-071
Greece	608759-DJ1	Switzerland	608759-BG1
Hungary	608759-211	Taiwan	608759-AB1
Israel	608759-BB1	Thailand	608759-281
Italy	608759-061	Turkey	608759-141
Japan	608759-291	The United Kingdom	608759-031
Latin America	608759-161	The United States	608759-001

Before removing the keyboard, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).

Remove the keyboard:

1. Remove the three Phillips PM2.0×6.0 screws that secure the keyboard to the computer.

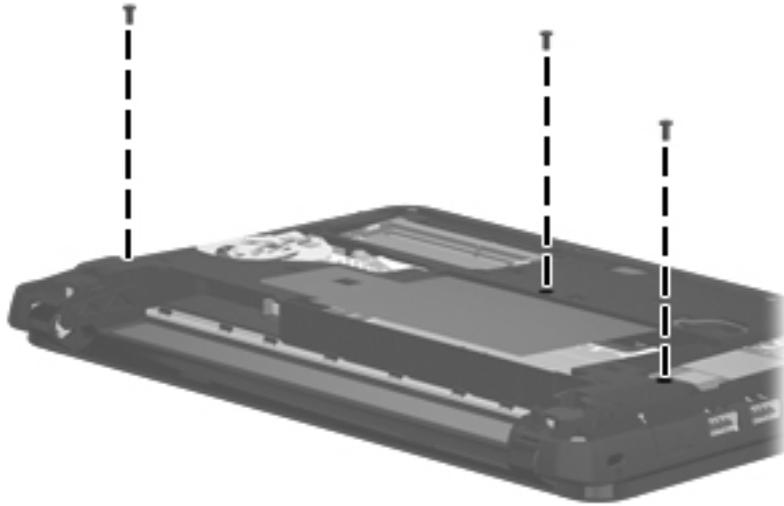

2. Turn the computer right-side up, with the front toward you.
3. Open the computer as far as it will open.
4. Lift the rear edge of the keyboard **(1)** until it rests at an angle.
5. Slide the keyboard **(2)** back until the keyboard cable and connector are accessible.

6. Release the zero insertion force (ZIF) connector **(3)** to which the keyboard cable is attached, and then disconnect the keyboard cable **(4)** from the system board.



7. Remove the keyboard.

Reverse this procedure to install the keyboard.

## Top cover


Description	Spare part number
In black (for HP and CPQ)	607766-001

Before removing the top cover, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).
6. Remove the keyboard (see [Keyboard on page 54](#)).


Remove the top cover.

1. Turn the computer upside down, with the front toward you.
2. Remove the six Phillips PM2.0×6.0 screws **(1)** and the Phillips PM2.5×4.0 screw **(2)** that secure the top cover to the base enclosure.

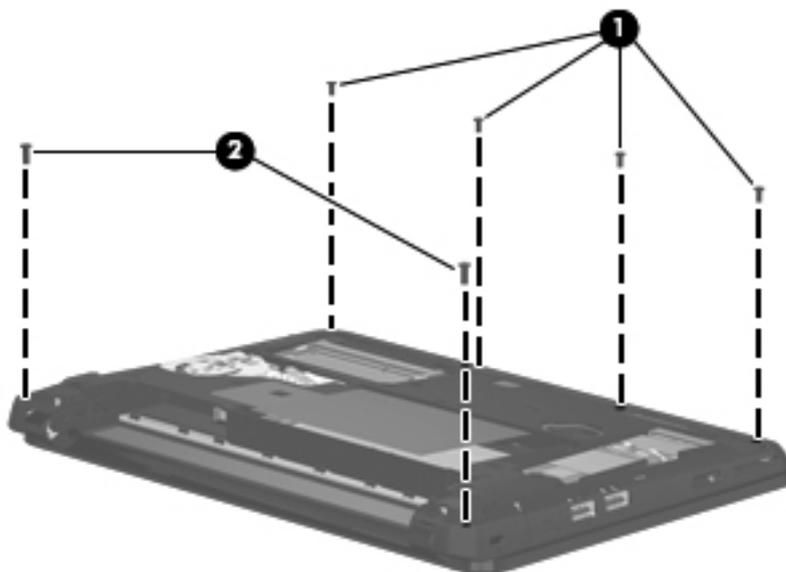


3. Turn the computer right-side up, with the front toward you.
4. Open the computer as far as it will open.
5. Disconnect the speaker cable **(1)** from the system board.


6. Release the ZIF connector **(2)** to which the TouchPad cable is connected, and then disconnect the TouchPad cable **(3)** from the system board.

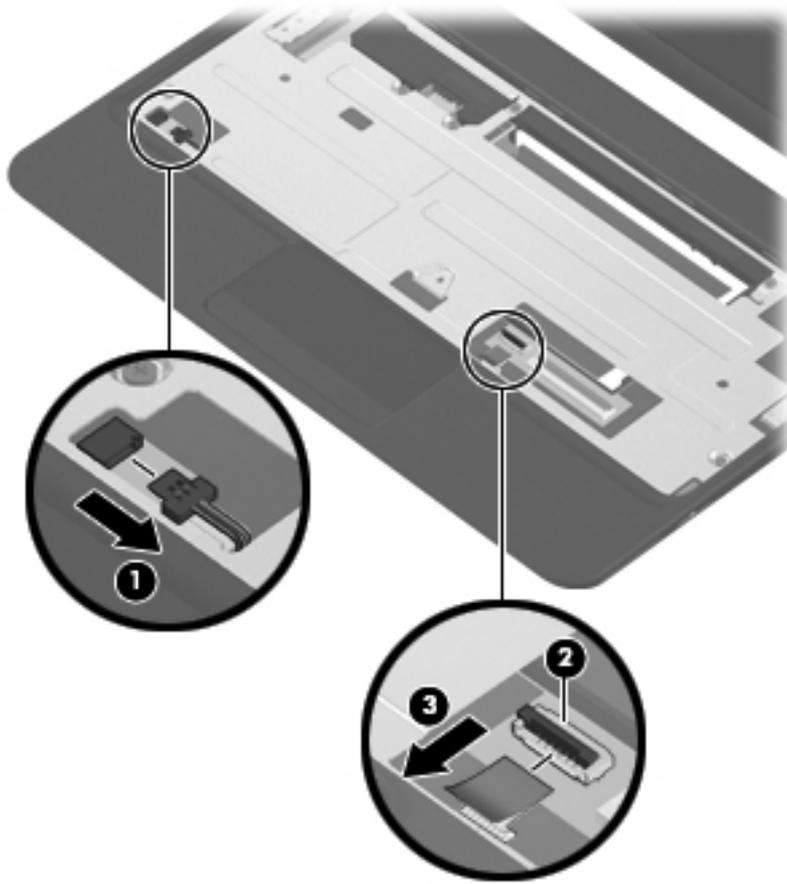

7. Remove the five Phillips PM2.0×6.0 screws that secure the top cover to the base enclosure.

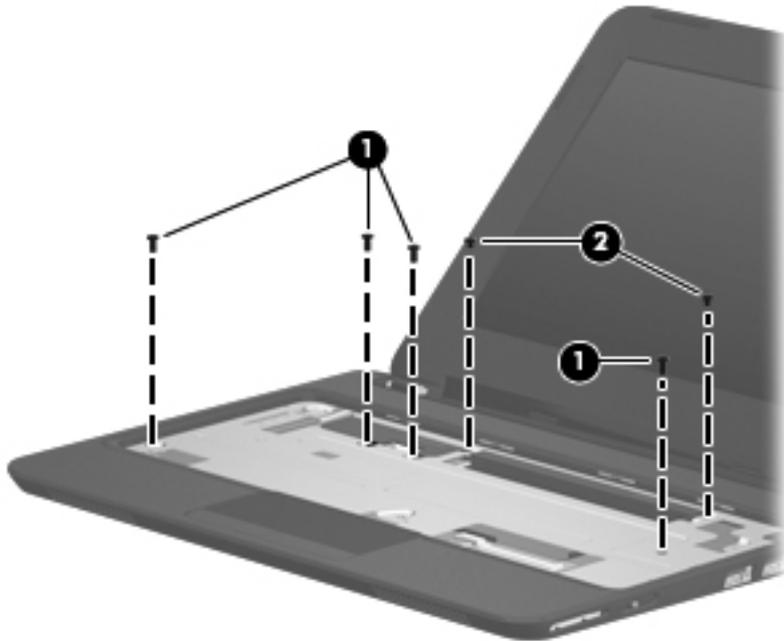

8. Release the top cover **(1)** by lifting the rear edge until it disengages from the base enclosure.
9. Remove the top cover **(2)** by lifting it straight up.

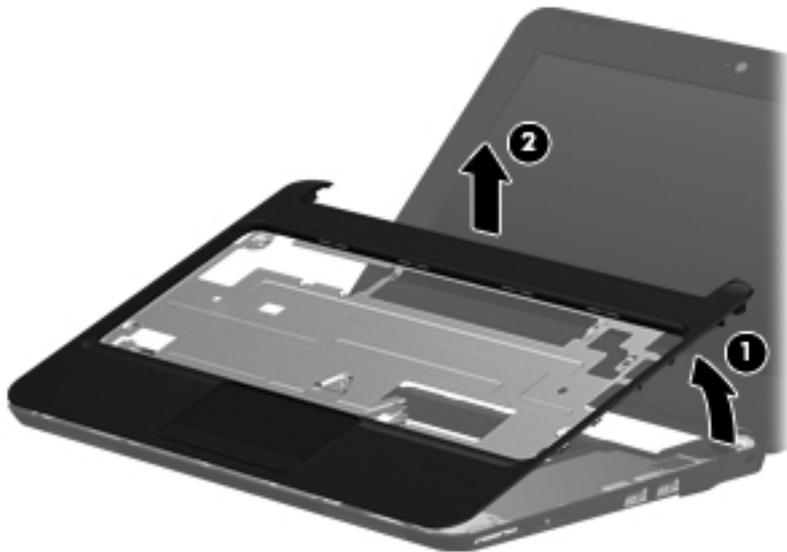

Reverse this procedure to install the top cover.

# Speakers

Description	Spare part number
Speakers (include cables)	608770-001


Before removing the speakers, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC Adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the following components:
  - a. Service cover (see [Service cover on page 40](#)).
  - b. Keyboard (see [Keyboard on page 54](#)).
  - c. Top cover (see [Top cover on page 57](#)).

Remove the speakers:

1. Turn the top cover upside down, with the front toward you.
2. Release the TouchPad cable **(1)** from the top cover. (The TouchPad cable is attached to the top cover with double-sided adhesive).
3. Release the speaker cable from the clips **(2)** built into the TouchPad bracket.
4. Remove the two Phillips PM2.0×4.0 screws **(3)** that secure the speakers to the top cover.

5. Remove the speakers (4).

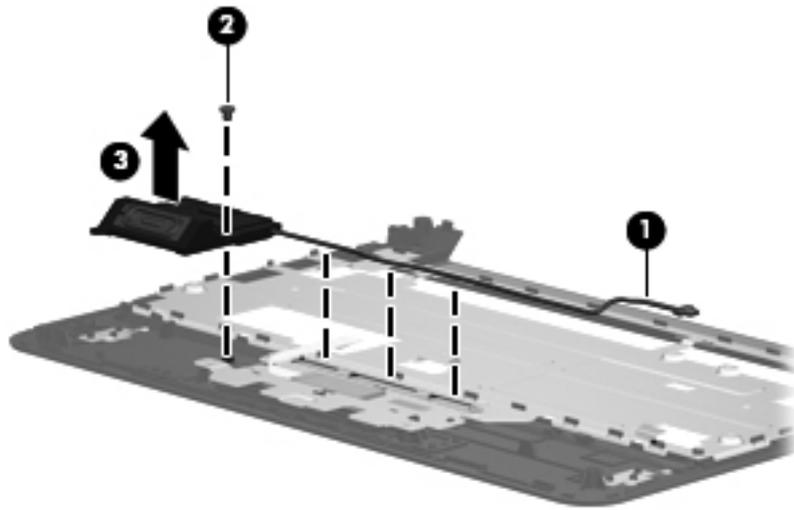

Reverse this procedure to install the speakers.

## TouchPad

Description	Spare part number
For use only with a black top cover	607766-001


Before removing the TouchPad, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the following components:
  - a. Service cover (see [Service cover on page 40](#)).
  - b. Keyboard (see [Keyboard on page 54](#)).
  - c. Top cover (see [Top cover on page 57](#)).
  - d. Speakers (see [Speakers on page 60](#)).

Remove the TouchPad:

1. Turn the top cover upside down, with the front toward you.
2. Release the TouchPad cable **(1)** from the top cover. (The TouchPad cable is attached to the top cover with double-sided adhesive).
3. Remove the two Phillips PM2.0×4.0 screws **(2)** that secure the TouchPad bracket to the top cover.
4. Remove the TouchPad bracket **(3)**.
5. Release the TouchPad **(4)** by lifting the front edge until it rests at an angle.

6. Remove the TouchPad **(5)** by sliding it forward.

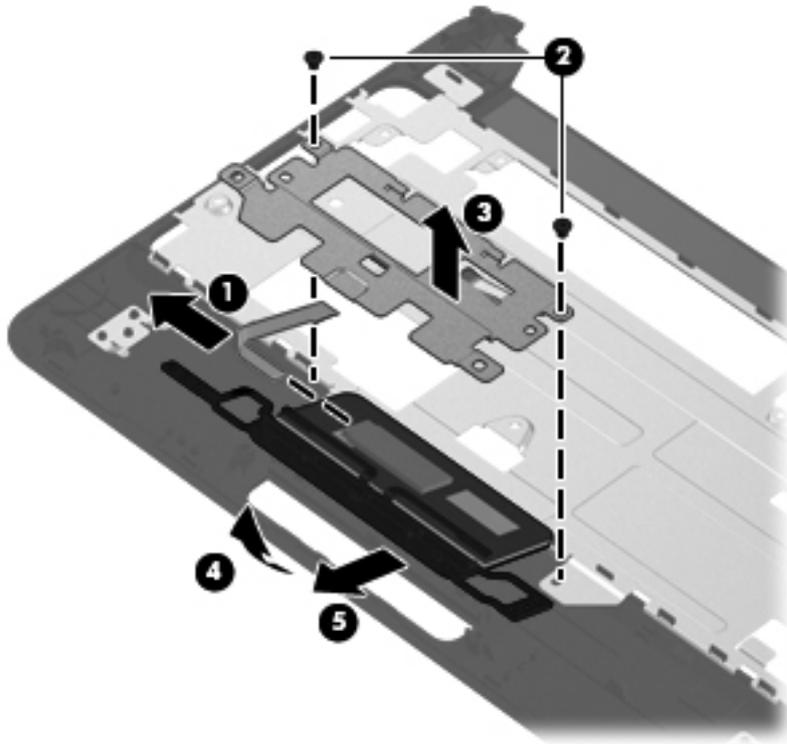

Reverse this procedure to install the TouchPad.

## Display assembly

Description	Spare part number
10.1-in display assembly (includes display panel cable, 2 WLAN transceivers and cables, 2 WWAN transceivers and cables, and webcam/microphone module and cable):	
• 10.1-in, WSVGA, AntiGlare, standard display assembly in black	607744-001
• 10.1-in, WSVGA, AntiGlare, standard display assembly in white	607745-001
• 10.1-in, WSVGA, Anti-Glare, standard display assembly in black	607746-001
• 10.1-in, WSVGA, standard display assembly in black	619469-001
• 10.1-in, WSVGA, standard display assembly in black	619470-001
• 10.1-in, WSVGA, Anti-Glare, standard display assembly in black	618875-001
• 10.1-in, WSVGA, AntiGlare display panel non-PMMA in red	622656-001
• 10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in blue	622657-001
• 10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in red	622658-001
• 10.1-in, WSVGA, AntiGlare display panel non-PMMA with WWAN, in blue	622559-001


Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).
6. Disconnect the WWAN antenna cables from the WWAN module (see [WWAN module on page 43](#)).
7. Disconnect the WLAN antenna cables from the WLAN module (see [WLAN module on page 46](#)).
8. Remove the keyboard (see [Keyboard on page 54](#)).
9. Remove the top cover (see [Top cover on page 57](#)).

Remove the display assembly:


1. Close the computer.
2. Turn the computer upside down, with the front toward you.

3. Release the WLAN antenna cables **(1)** from the clips built into the base enclosure **(2)**.

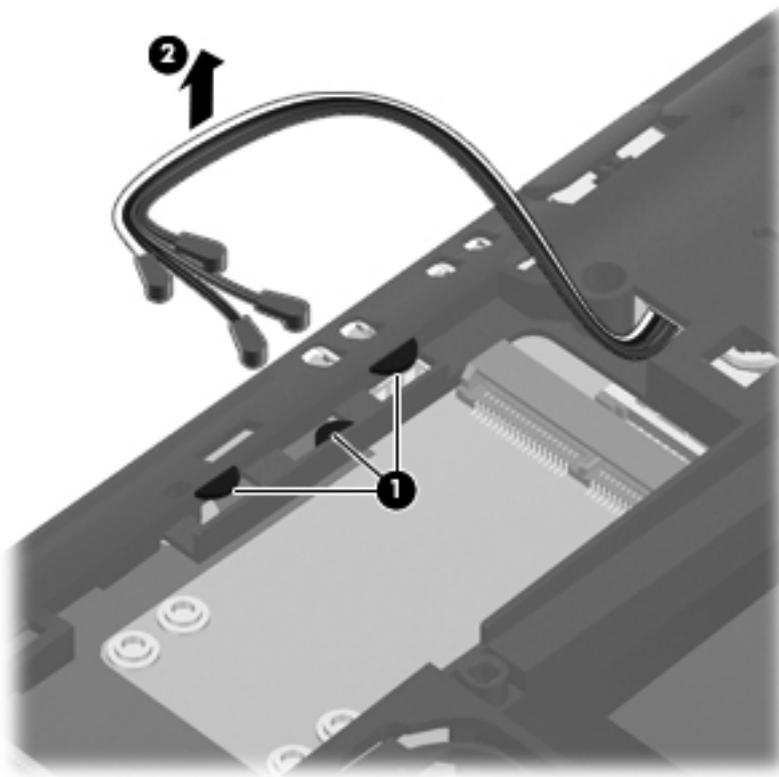

4. Turn the computer right-side up, with the front toward you.
5. Open the computer as far as it will open.
6. Disconnect the display panel cable **(1)** from the system board.

7. Release the wireless antenna cables **(2)** from the clip built into the base enclosure.

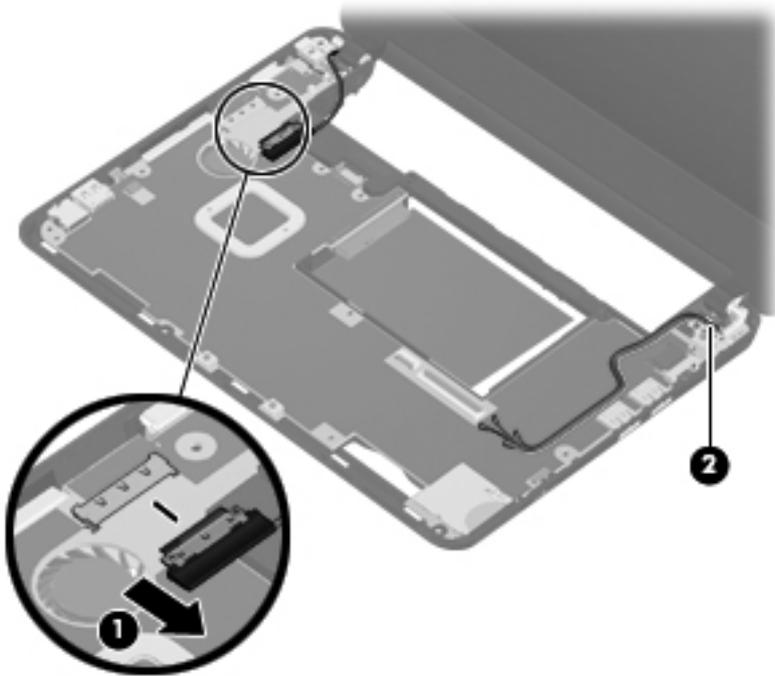


---

△ **CAUTION:** Support the display assembly when removing the following screws. Failure to support the display assembly can result in damage to the display assembly and other device components.

---

8. Remove the two Phillips PM2.0×4.0 screws **(1)** that secure the display assembly to the base enclosure.

9. Remove the display assembly **(2)**.

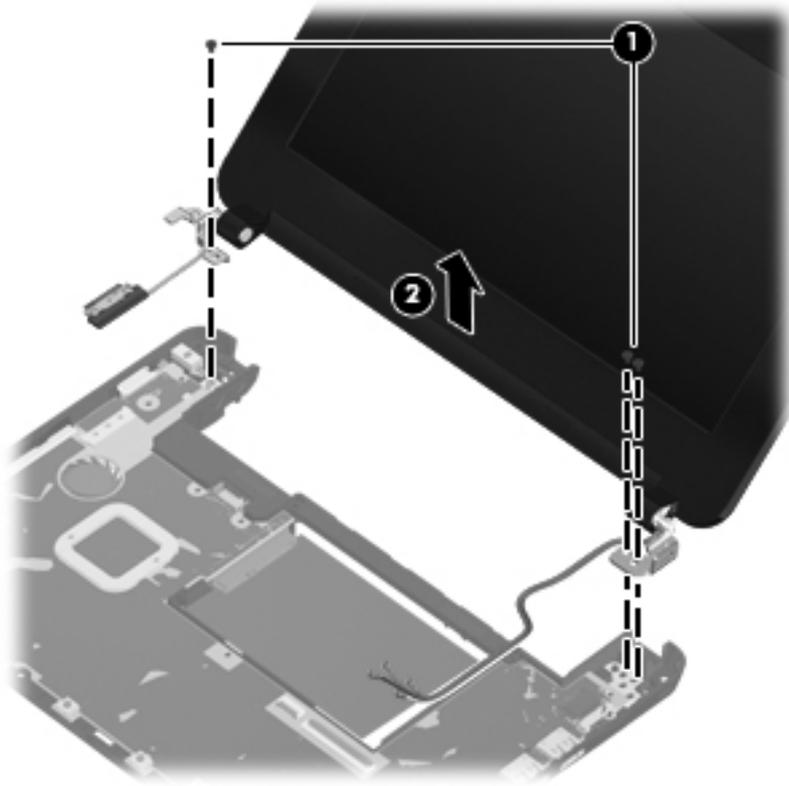

Reverse this procedure to reassemble and install the display assembly.

## System board

 **NOTE:** The system board spare part kit includes replacement thermal material.

Description	Spare part number
Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB	607740-001
Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5W TDP	607741-001
Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB	618873-001
Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP	618874-001
Intel Atom™ N450 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module	621300-001
Intel Atom™ N470 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5W TDP without WWAN module	621301-001
Intel Atom™ N455 1.66-GHz processor with 512-KB level 2 cache, 667-MHz FSB without WWAN module	621302-001
Intel Atom™ N475 1.83-GHz processor with 512-KB level 2 cache, 667-MHz FSB, 6.5 TDP without WWAN module	621303-001

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).
6. Disconnect the hard drive cable from the system board (see [Hard drive on page 41](#)).
7. Disconnect the WWAN antenna cables from the WWAN module (see [WWAN module on page 43](#)).
8. Disconnect the WLAN antenna cables from the WLAN module (see [WLAN module on page 46](#)).
9. Remove the keyboard (see [Keyboard on page 54](#)).
10. Remove the top cover (see [Top cover on page 57](#)).


When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- SIM (see [SIM on page 39](#))
- WWAN module (see [WWAN module on page 43](#))

- WLAN module (see [WLAN module on page 46](#))
- Memory module (see [Memory module on page 51](#))
- RTC battery (see [RTC battery on page 53](#))
- Fan/heat sink assembly (see [Fan/heat sink assembly on page 71](#))


Remove the system board:

1. Disconnect the display panel cable from the system board.
2. Disconnect the power connector cable from the system board.

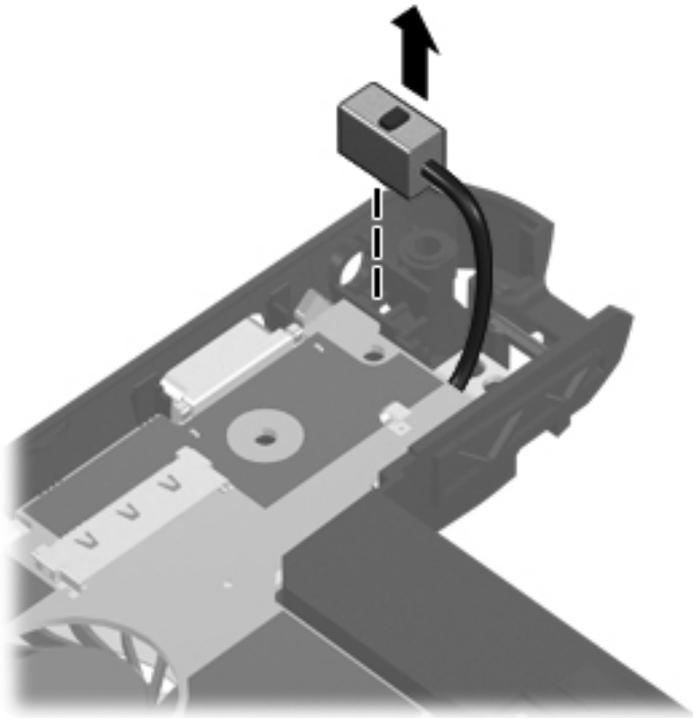

3. Remove the Phillips PM2.0×4.0 screw **(1)** that secures the system board to the base enclosure.
4. Lift the right side of the system board **(2)** until it rests at an angle.

5. Remove the system board **(3)** by sliding it up and away from the base enclosure.

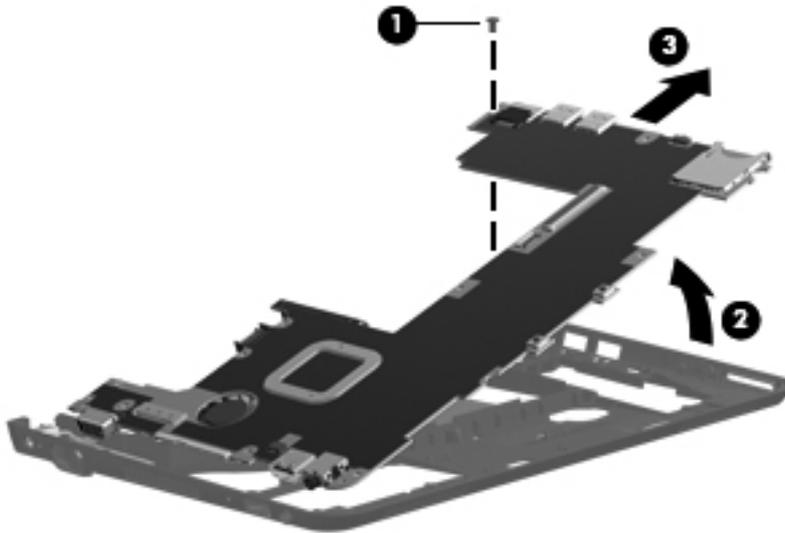

Reverse the procedure to install the system board.

 **NOTE:** When reinstalling the system board, the base enclosure actuator needs to be aligned properly with the power switch so that the parts are not damaged in the installation process.

## Fan/heat sink assembly

Description	Spare part number
Fan/heat sink assembly (includes replacement thermal material)	608772-001

 **NOTE:** To properly ventilate the computer, allow at least a 7.6-cm (3-inch) clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Before removing the fan/heat sink assembly, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).
6. Disconnect the hard drive cable from the system board (see [Hard drive on page 41](#)).
7. Disconnect the WWAN antenna cables from the WWAN module (see [WWAN module on page 43](#)).
8. Disconnect the WLAN antenna cables from the WLAN module (see [WLAN module on page 46](#)).
9. Remove the following components:
  - a. Keyboard (see [Keyboard on page 54](#)).
  - b. Top cover (see [Top cover on page 57](#)).
  - c. System board (see [System board on page 68](#)).

Remove the fan/heat sink assembly:


1. Turn the system board upside down, with the front toward you.
2. Disconnect the fan cable **(1)** from the system board.
3. Following the 1, 2, 3 sequence stamped into the fan/heat sink assembly, loosen the three Phillips PM2.0×4.0 captive screws **(2)** that secure the fan/heat sink assembly to the system board.

4. Remove the fan/heat sink assembly **(3)**.

 **NOTE:** Due to the adhesive quality of the thermal material located between the fan/heat sink assembly and system board components, it may be necessary to move the fan/heat sink assembly from side to side to detach it from the system board.

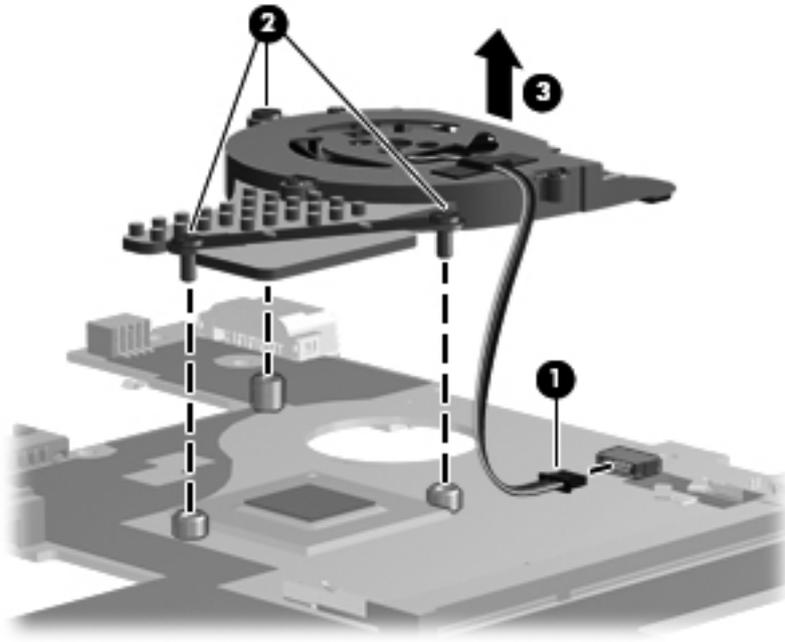

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the fan/heat sink assembly and the system board each time the fan/heat sink assembly is removed: Thermal paste is used on the processor **(1)** and the fan/heat sink assembly section **(2)** that services it.

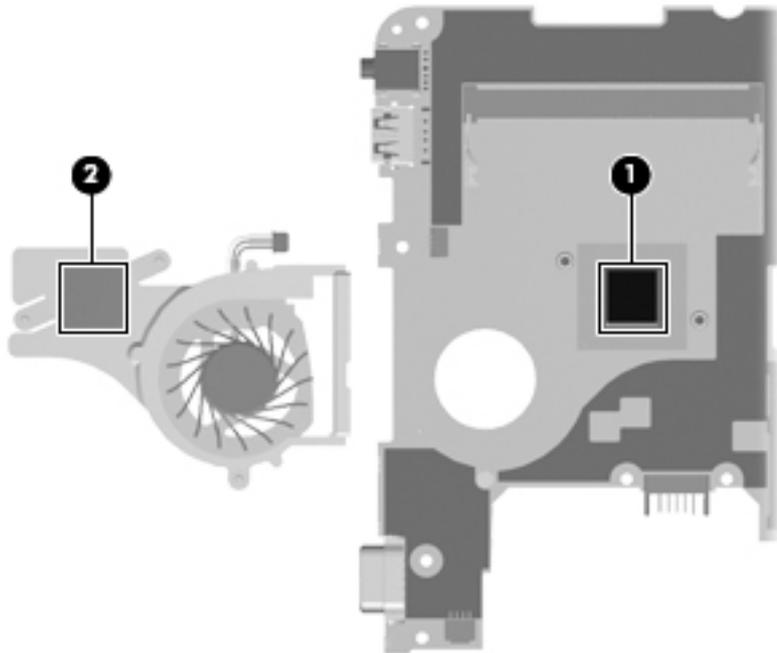

Reverse this procedure to install the fan/heat sink assembly.

## Power connector cable

Description	Spare part number
Power connector cable	607755-001

Before removing the power connector cable, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 38](#)).
5. Remove the service cover (see [Service cover on page 40](#)).
6. Disconnect the hard drive cable from the system board (see [Hard drive on page 41](#)).
7. Disconnect the WWAN antenna cables from the WWAN module (see [WWAN module on page 43](#)).
8. Disconnect the WLAN antenna cables from the WLAN module (see [WLAN module on page 46](#)).
9. Remove the following components:
  - a. Keyboard (see [Keyboard on page 54](#)).
  - b. Top cover (see [Top cover on page 57](#)).
  - c. Display assembly (see [Display assembly on page 64](#)).
  - d. System board (see [System board on page 68](#)).

Remove the power connector cable:

1. Remove the Phillips PM2.0×4.0 screw that secures the power connector and bracket to the base enclosure.
2. Remove the power connector bracket .

 **NOTE:** The power connector bracket is included in the base enclosure spare part kit, spare part number 607765-001.

3. Remove the power connector cable .

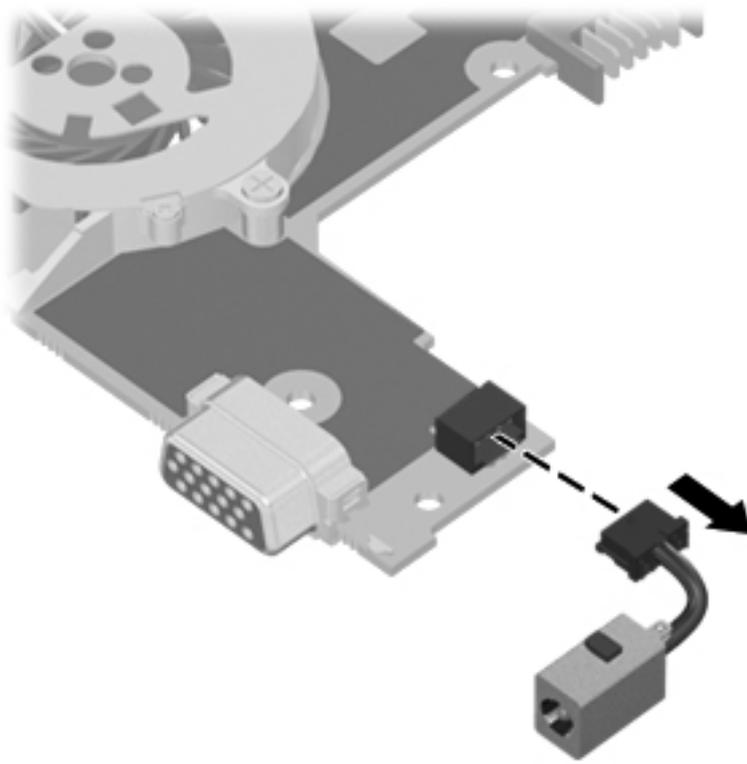

Reverse this procedure to install the power connector cable.

---

# 5 Setup Utility

## Starting Setup Utility

Setup Utility is a ROM-based information and customization utility that can be used even when your Windows operating system is not working.

The utility reports information about the computer and provides settings for startup, security, and other preferences.

To start Setup Utility:

- ▲ Open Setup Utility by turning on or restarting the computer, and then pressing **f10** while the “F10 = BIOS Setup Options” message is displayed in the lower-left corner of the screen.

## Using Setup Utility

### Changing the language of Setup Utility

The following procedure explains how to change the language of Setup Utility. If Setup Utility is not already running, begin at step 1. If Setup Utility is already running, begin at step 2.

1. Open Setup Utility by turning on or restarting the computer, and then pressing **f10** while the “F10 = BIOS Setup Options” message is displayed in the lower-left corner of the screen.
2. Use the arrow keys to select **System Configuration > Language**, and then press **enter**.
3. Use the arrow keys to select a language, and then press **enter**.
4. When a confirmation prompt with your language selected is displayed, press **enter**.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**. Your change goes into effect immediately.

Your change goes into effect immediately.

## Navigating and selecting in Setup Utility

Because Setup Utility is not Windows based, it does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a list or to toggle a field, for example an Enable/Disable field, use either the arrow keys or **f5** or **f6**.
- To select an item, press **enter**.
- To close a text box or return to the menu display, press **esc**.
- To display additional navigation and selection information while Setup Utility is open, press **f1**.

## Displaying system information

The following procedure explains how to display system information in Setup Utility. If Setup Utility is not open, begin at step 1. If Setup Utility is open, begin at step 2.

1. Open Setup Utility by turning on or restarting the computer, and then pressing **f10** while the “F10 = BIOS Setup Options” message is displayed in the lower-left corner of the screen.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

## Restoring default settings in Setup Utility

The following procedure explains how to restore the Setup Utility default settings. If Setup Utility is not already running, begin at step 1. If Setup Utility is already running, begin at step 2.

1. Open Setup Utility by turning on or restarting the computer, and then pressing **f10** while the “F10 = BIOS Setup Options” message is displayed in the lower-left corner of the screen.
2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press **enter**.
3. When the Setup Confirmation is displayed, press **enter**.
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.

The Setup Utility default settings go into effect when the computer restarts.

---

 **NOTE:** Your password, security, and language settings are not changed when you restore the factory default settings.

---

# Exiting Setup Utility

You can exit Setup Utility with or without saving changes.

- To exit Setup Utility and save your changes from the current session:  
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.
- To exit Setup Utility without saving your changes from the current session:  
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**. After either choice, the computer restarts in Windows.

## Setup Utility Menus

### Main Menu

The menu tables in this section provide an overview of the Setup Utility options

 **NOTE:** Some of the Setup Utility menu items listed in this chapter may not be supported by your computer.

Select	To do this
System information	<ul style="list-style-type: none"><li>• View and change the system time and date.</li><li>• View identification information about the computer.</li><li>• View specification information about the processor, memory size, and system BIOS.</li></ul>

### Security Menu

Select	To do this
Administrator password	Enter, change, or delete an administrator password.
Power-On password	Enter, change, or delete a power-on password.

## System Configuration Menu

Select	To do this
Language Support	Change the Setup Utility language.
Processor C4 State	Enable/disable the processor C4 standby state.
Boot Options	<p>Set the following boot options:</p> <ul style="list-style-type: none"><li>• <b>f10</b> and <b>f12</b> Delay (sec.)—Set the delay for the <b>f10</b> and <b>f12</b> functions of Setup Utility in intervals of 5 seconds each (0, 5, 10, 15, 20).</li><li>• HP QuickWeb—Enable/disable the QuickWeb Boot menu in Setup Utility.</li><li>• Internal Network Adapter boot—Enable/disable boot from Internal Network Adapter.</li><li>• Boot Device Priority—Set the boot device priority for:<ul style="list-style-type: none"><li>◦ Internal hard drive (select models only)</li><li>◦ USB Floppy</li><li>◦ USB CD/DVD ROM Drive</li><li>◦ USB flash drive</li><li>◦ USB Hard drive</li><li>◦ USB Card Reader</li><li>◦ Network adapter</li></ul></li></ul> <p><b>NOTE:</b> Only the devices attached to the system will appear in the boot order menu.</p>

## Diagnostics Menu

Select	To do this
Hard Disk Self Test (select models only)	Run a comprehensive self-test on the hard drive.
Memory Test	Run a diagnostic test on the system memory.

---

# 6 Backup and recovery

## Windows 7

To protect your information, back up your files and folders. In case of system failure, you can use the backup files to restore your computer.

- 
- △ **CAUTION:** In the event of a hard drive failure, you cannot use your computer to access the Disaster Recovery utility. Therefore, HP recommends that you download the Disaster Recovery utility SoftPaq, and then extract it to a USB flash drive as soon as possible after software setup. For details, refer to “Downloading and extracting the Disaster Recovery utility” later in this section.
- 

Depending on your computer model, you may have one of the following backup and recovery solutions:

- Roxio BackOnTrack
- HP Recovery Manager

- 
- 📝 **NOTE:** For detailed information, perform a search for these topics in Help and Support.
- 

## Backing up and recovering using Roxio BackOnTrack

Successful recovery after a system failure depends on whether you have completely backed up your files. If Roxio BackOnTrack is preinstalled on your computer, it allows you to create a backup of your computer image. You should create the initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Note the following guidelines when backing up your information:

- Store personal files in the Documents library and back up this folder regularly.
- Back up templates stored in their associated programs.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To copy the screen and paste it into a word-processing document, follow these steps:

1. Display the screen.
2. Copy the screen: To copy the active window, press **alt+prt sc**. To copy the entire screen, press **prt sc**.

3. Open a word-processing document, click **Edit**, and then click **Paste**.
4. Save the document.

## Creating a copy of the hard drive

The *back up drive* function of BackOnTrack creates a Disaster Recovery Set that is an exact image of your hard drive data. You can back up the image to an external hard drive (purchased separately).

To create a Disaster Recovery Set using BackOnTrack, follow these steps:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---

1. Click **Start**, click **All Programs**, and then click **Roxio**.
2. Click **BackOnTrack**, click **BackOnTrack Home**, and then click **Disaster Recovery**.
3. Click **Backup drive**.
4. Select a drive to back up.
5. Add a comment to describe the backup.

---

 **NOTE:** Comments are optional, but adding comments can help you remember the purpose of the backup. The date and list of drives being backed up are automatically included in the description.

---

6. Select a destination for the Disaster Recovery Set.

---

 **NOTE:** The destination cannot be a network drive.

---

7. Click the action button at the bottom-right of the computer screen.
8. Follow the on-screen instructions.

## Performing a recovery

In case of system failure or instability, the computer provides the following ways to recover your files:

- BackOnTrack Disaster Recovery utility: You can use Disaster Recovery to recover your hard drive image (including your files, programs, and operating system) after a hard drive failure.
- BackOnTrack Instant Restore utility: You can use Instant Restore to quickly restore your computer to a working state if a software-related problem occurs. The Instant Restore utility automatically creates working states periodically. You can also define a working state by saving the current computer state manually.

For more information about computer system states, refer to the BackOnTrack software Help.

## Using the Disaster Recovery utility

---

 **NOTE:** To perform a recovery with Disaster Recovery, you need a USB flash drive (purchased separately). For optimum performance, the capacity of the drive should be no larger than 2 GB.

---

Disaster Recovery recovers data from a Disaster Recovery Set that you previously created with Roxio BackOnTrack. Disaster Recovery is available from the HP Web site in a compressed file called a SoftPaq.

---

 **NOTE:** Running the SoftPaq makes the USB drive bootable.

---

Before performing a disaster recovery, you must download the Disaster Recovery utility and extract it to a USB flash drive.

### Downloading and extracting the Disaster Recovery utility

To download and extract Disaster Recovery, follow these steps:

1. Connect a bootable USB flash drive or external drive to a USB port on your computer.
2. Open your Web browser, go to <http://www.hp.com/support>, and select your country or region.
3. Enter the SoftPaq number SP42226 in the **Search** box, press **enter**, and then follow the on-screen instructions.
4. Click **Download only** to save the file to your computer.
5. When prompted, click **Save**, and then select the external drive from the list of storage locations.
6. After the file is downloaded, navigate to the USB flash drive or external drive, and then double-click the SoftPaq file to format the USB flash drive and extract the Disaster Recovery files.
7. If prompted to do so, restart your computer after the installation is complete.

### Restoring your hard drive image

To restore your hard drive image using Disaster Recovery, follow these steps:

1. Connect the external hard drive containing the Disaster Recovery Set to your computer.
2. Connect the bootable USB flash drive containing the extracted Disaster Recovery utility to a USB port on your computer.
3. Change the boot device order by turning on or restarting the computer, and then pressing **f9**.
4. Use the arrow keys to select the USB flash drive, and then press **enter**.
5. At the Roxio BackOnTrack Disaster Recovery screen, select **Disaster Recovery**, and then click **Next**.
6. Browse to the external hard drive containing the Disaster Recovery Set, and then click **Next**.
7. Click **Next** to proceed with the recovery.

---

 **NOTE:** This process may take several minutes.

---

8. After a message on the screen reports a successful recovery, click **Finish**.

## Using the Instant Restore utility

You can restore your computer from Windows when the operating system is functioning. If the operating system is not functioning, you can also access the utility by restarting your computer.

---

 **NOTE:** For more information about the Instant Restore utility, refer to the BackOnTrack software Help.

---

### Using the Instant Restore utility when the operating system is functioning

To recover information when the operating system is functioning properly, follow these steps:

1. Save and close all open documents and close any open programs.
2. Click **Start**, click **All Programs**, and then click **Roxio**.
3. Click **BackOnTrack**, click **BackOnTrack Home**, and then click **Instant Restore**.
4. Click **Restore State**, and then select a restore state.
5. Click the action button in the bottom-right corner of the computer screen.
6. Click **Yes** to confirm your selected restore state.

When the restore process is complete, the computer restarts and a notification message is displayed.

### Using the Instant Restore utility when the operating system is not functioning

To recover information when the operating system is not functioning, follow these steps:

1. Restart the computer.

---

 **NOTE:** If the operating system has stopped responding and the computer screen is blue, restart the computer by turning the power switch off and then on.

---

2. When the computer logo is displayed on the screen, press **f6** repeatedly until the Windows status bar is displayed.
3. When the Roxio BackOnTrack screen is displayed, follow the on-screen instructions.

## Using Windows Backup and Restore

To create a backup using Windows Backup and Restore, follow these steps:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---

**NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---

1. Click **Start**, click **All Programs**, click **Maintenance**, and then click **Backup and Restore**.
2. Follow the on-screen instructions to set up and create a backup.

---

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---

## Using system restore points

When you back up your system, you are creating a system restore point. A system restore point allows you to save and name a snapshot of your hard drive at a specific point in time. You can then revert back to that point if you want to reverse subsequent changes made to your system.

 **NOTE:** Recovering to an earlier restore point does not affect data files saved or e-mails created since the last restore point.

---

You also can create additional restore points to provide increased protection for your system files and settings.

## When to create restore points

- Before you add or extensively modify software or hardware.
- Periodically, whenever the system is performing optimally.

 **NOTE:** If you revert to a restore point and then change your mind, you can reverse the restoration.

---

## Creating a system restore point

1. Click **Start**, click **Control Panel**, click **System and Security**, and then click **System**.
2. In the left pane, click **System protection**.
3. Click the **System Protection** tab.
4. Under **Protection Settings**, select the disk for which you want to create a restore point.
5. Click **Create**.
6. Follow the on-screen instructions.

## Restoring to a previous date and time

To revert to a restore point (created at a previous date and time) when the computer was functioning optimally, follow these steps:

1. Click **Start**, click **Control Panel**, click **System and Security**, and then click **System**.
2. In the left pane, click **System protection**.
3. Click the **System Protection** tab.
4. Click **System Restore**.
5. Follow the on-screen instructions.

## Backing up and recovering using HP Recovery Manager

If your computer includes HP Recovery Manager, tools provided by the operating system and by HP Recovery Manager software are designed to help you with the following tasks for safeguarding your information and restoring it in case of a system failure:

- Backing up your information
- Creating a set of recovery discs
- Creating system restore points
- Recovering a program or driver
- Performing a full system recovery

### Backing up your information

As you add new software and data files, you should back up your system on a regular basis to maintain a reasonably current backup. Back up your system at the following times:

- At regularly scheduled times

---

 **NOTE:** Set reminders to back up your information periodically.

---

- Before the computer is repaired or restored
- Before you add or modify hardware or software

Note the following when backing up:

- Create system restore points using the Windows System Restore feature, and periodically copy them to a disc.
- Store personal files in the Documents library, and periodically back up this folder.
- Back up templates stored in their associated programs.
- Save the customized settings in a window, toolbar, or menu bar by taking a screen shot of the settings. The screen shot can be a time-saver if you have to reset your preferences.

To copy the screen and paste the image into a word-processing document:

1. Display the screen.
2. Copy the screen:

To copy only the active window, press **alt+prt sc**.

To copy the entire screen, press **prt sc**.

3. Open a word-processing document, click **Edit**, and then click **Paste**.
  4. Save the document.
    - You can back up your information to an optional external hard drive, a network drive, or discs.
    - When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD-R, or DVD±RW. The discs you use depend on the type of optical drive you are using.
- 
-  **NOTE:** The external optical drive must be connected to the USB port *on the computer*, not to a USB port on another external device, such as a hub or docking station.
- NOTE:** DVDs store more information than CDs, so using them for backup reduces the number of recovery discs required.
- 
- When backing up to discs, number each disc before inserting it into an optical drive.

## Creating a set of recovery discs

HP recommends that you create recovery discs to be sure that you can restore your system to its original factory state if you experience serious system failure or instability. Create these discs after setting up the computer for the first time.

---

 **NOTE:** This task will require an optional external optical drive. The external optical drive must be connected to the USB port *on the computer*, not to a USB port on another external device, such as a hub or docking station.

---

Handle these discs carefully and keep them in a safe place. The software allows the creation of only one set of recovery discs.

Note the following guidelines before creating recovery discs:

- You will need high-quality DVD-R, DVD+R, BD-R (writable Blu-ray), or CD-R discs. All these discs are purchased separately. DVDs have a larger storage capacity than CDs. If you use CDs, up to 20 discs may be required, whereas only a few DVDs are required.

---

 **NOTE:** Double-layer discs and read-write discs—such as CD-RW, DVD±RW, and BD-RE (rewritable Blu-ray) discs—are not compatible with the Recovery Manager software.

---

- ■ The computer must be connected to AC power during this process.
- ■ Only one set of recovery discs can be created per computer.
- ■ Number each disc before inserting it into an optical drive.
- If necessary, you can exit the program before you have finished creating the recovery discs. The next time you open Recovery Manager, you will be prompted to continue the disc creation process.

To create a set of recovery discs:

1. Click **Start**, click **All Programs**, click **Recovery Manager**, and then click **Recovery Disc Creation**.
2. Follow the on-screen instructions.

## Performing a recovery

 **NOTE:** You can recover only files that you have previously backed up. HP recommends that you use Recovery Manager to create a set of recovery discs (entire drive backup) as soon as you set up your computer.

---

Recovery Manager software allows you to repair or restore the system if you experience system failure or instability. Recovery Manager works from recovery discs that you create or from a dedicated recovery partition (select models only) on the hard drive. However, computers that include a solid-state drive (SSD) may not have a recovery partition. If that is the case, recovery discs have been included with your computer. Use these discs to recover your operating system and software.

 **NOTE:** Windows has its own built-in repair features, such as System Restore. If you have not already tried these features, try them before using Recovery Manager. For more information on these built-in repair features, click **Start**, and then click **Help and Support**.

**NOTE:** Recovery Manager recovers only the software that was preinstalled at the factory. Software not provided with this computer must be downloaded from the manufacturer's Web site or reinstalled from the disc provided by the manufacturer.

---

## Recovering using the recovery discs

To restore the system files from the recovery discs:

1. Back up all personal files.
2. Insert the first recovery disc into an optional optical drive, and restart the computer.

 **NOTE:** The external optical drive must be connected to the USB port *on the computer*, not to a USB port on another external device, such as a hub or docking station.

---

3. Follow the on-screen instructions.

## Recovering using the partition on the hard drive (select models only)

On some models, you can perform a recovery from the partition on the hard drive, which is accessed by pressing either the Start button or **F11**. This restores the computer to its factory condition.

 **NOTE:** This method of recovery is also an HP Recovery Manager solution.

**NOTE:** Computers with an SSD may not have a recovery partition. If the computer does not have a recovery partition, you will not be able to recover using this procedure. Recovery discs have been included for computers that do not have a partition. Use these discs to recover your operating system and software.

---

To restore the system from the partition, follow these steps:

1. Access Recovery Manager in either of the following ways:
  - Click **Start**, click **All Programs**, click **Recovery Manager**, and then click **Recovery Manager**.

– or –

- a. Turn on or restart the computer.
- b. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.

---

 **NOTE:** It may take several minutes for Recovery Manager to load.

---

2. In the Recovery Manager window, click **System Recovery**.
3. Follow the on-screen instructions.

## Windows XP

To protect your information, back up your files and folders. In case of system failure, you can use the backup files to restore your computer.

△ **CAUTION:** In the event of a hard drive failure, you cannot use your computer to access the Disaster Recovery utility. Therefore, HP recommends that you download the Disaster Recovery utility SoftPaq, and then extract it to a USB flash drive as soon as possible after software setup. For details, refer to “Downloading and extracting the Disaster Recovery utility” later in this section.

 **NOTE:** For detailed information, perform a search for these topics in Help and Support.

---

## Backing up your information

Successful recovery after a system failure depends on whether you have completely backed up your files. If Roxio BackOnTrack is preinstalled on your computer, it allows you to create a backup of your computer image. You should create the initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Note the following guidelines when backing up your information:

- Store personal files in the My Documents folder and back up this folder regularly.
- Back up templates stored in their associated programs.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To copy the screen and paste it into a word-processing document, follow these steps:

1. Display the screen.

2. Copy the screen:

To copy the active window, press **alt+prt sc**.

To copy the entire screen, press **prt sc**.

3. Open a word-processing document, click **Edit**, and then click **Paste**.

4. Save the document.

## Creating a copy of the hard drive

The *back up drive* function of BackOnTrack creates a Disaster Recovery Set that is an exact image of your hard drive data. You can back up the image to an external hard drive (purchased separately).

To create a Disaster Recovery Set using BackOnTrack, follow these steps:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---

1. Click **Start**, click **All Programs**, and then click **Roxio**.
2. Click **BackOnTrack**, click **BackOnTrack Home**, and then click **Disaster Recovery**.
3. Click **Backup drive**.
4. Select a drive to back up.
5. Add a comment to describe the backup.

---

 **NOTE:** Comments are optional, but adding comments can help you remember the purpose of the backup. The date and list of drives being backed up are automatically included in the description.

---

6. Select a destination for the Disaster Recovery Set.

---

 **NOTE:** The destination cannot be a network drive.

---

7. Click the action button at the bottom-right of the computer screen.
8. Follow the on-screen instructions.

## Performing a recovery

In case of system failure or instability, the computer provides the following ways to recover your files:

- BackOnTrack Disaster Recovery utility: You can use Disaster Recovery to recover your hard drive image (including your files, programs, and operating system) after a hard drive failure.
- BackOnTrack Instant Restore utility: You can use Instant Restore to quickly restore your computer to a working state if a software-related problem occurs. The Instant Restore utility automatically creates working states periodically. You can also define a working state by saving the current computer state manually.

For more information about computer system states, refer to the BackOnTrack software Help.

## Using the Disaster Recovery Utility

 **NOTE:** To perform a recovery with Disaster Recovery, you need a USB flash drive (purchased separately). For optimum performance, the capacity of the drive should be no larger than 2 GB.

Disaster Recovery recovers data from a Disaster Recovery Set that you previously created with Roxio BackOnTrack. Disaster Recovery is available from the HP Web site in a compressed file called a *SoftPaq*.

 **NOTE:** Running the SoftPaq makes the USB drive bootable.

Before performing a disaster recovery, you must download the Disaster Recovery utility and extract it to a USB flash drive.

### Downloading and extracting the Disaster Recovery utility

To download and extract Disaster Recovery, follow these steps:

1. Connect a bootable USB flash drive or external drive to a USB port on your computer.
2. Open your Web browser, go to <http://www.hp.com/support>, and select your country or region.
3. Enter the SoftPaq number SP42226 in the Search box, press **enter**, and then follow the on-screen instructions.
4. Click **Download only** to save the file to your computer.
5. When prompted, click **Save**, and then select the external drive from the list of storage locations.
6. After the file is downloaded, navigate to the USB flash drive or external drive, and then double-click the SoftPaq file to format the USB flash drive and extract the Disaster Recovery files.
7. If prompted to do so, restart your computer after the installation is complete.

### Restoring your hard drive image

To restore your hard drive image using Disaster Recovery, follow these steps:

1. Connect the external hard drive containing the Disaster Recovery Set to your computer.
2. Connect the bootable USB flash drive containing the extracted Disaster Recovery utility to a USB port on your computer.
3. Change the boot device order by turning on or restarting the computer, and then pressing **f9**.
4. Use the arrow keys to select the USB flash drive, and then press **enter**.
5. At the Roxio BackOnTrack Disaster Recovery screen, select **Disaster Recovery**, and then click **Next**.
6. Browse to the external hard drive containing the Disaster Recovery Set, and then click **Next**.
7. Click **Next** to proceed with the recovery.

This process may take several minutes.

8. After a message on the screen reports a successful recovery, click **Finish**.

## Using the Instant Restore utility

You can restore your computer from Windows when the operating system is functioning. If the operating system is not functioning, you can also access the utility by restarting your computer.

 **NOTE:** For more information about the Instant Restore utility, refer to the BackOnTrack software Help.

### Using the Instant Restore utility when the operating system is functioning

To recover information when the operating system is functioning properly, follow these steps:

1. Save and close all open documents and close any open programs.
2. Click **Start**, click **All Programs**, and then click **Roxio**.
3. Click **BackOnTrack**, click **BackOnTrack Home**, and then click **Instant Restore**.
4. Click **Restore State**, and then select a restore state.
5. Click the action button in the bottom-right corner of the computer screen.
6. Click **Yes** to confirm your selected restore state.

When the restore process is complete, the computer restarts and a notification message is displayed.

### Using the Instant Restore utility when the operating system is not functioning

To recover information when the operating system is not functioning, follow these steps:


1. Restart the computer.

 **NOTE:** If the operating system has stopped responding and the computer screen is blue, restart the computer by turning the power switch off and then on.

2. When the computer logo is displayed on the screen, press **f6** repeatedly until the Windows status bar is displayed.
3. When the Roxio BackOnTrack screen is displayed, follow the on-screen instructions.


# 7 Connector pin assignments

## Audio-in (microphone)

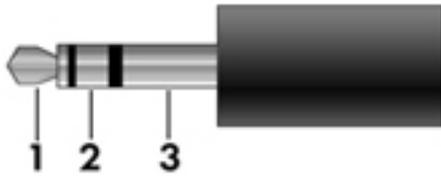


Pin	Signal
1	Audio signal in
2	Audio signal in
3	Ground

## Audio-out (headphone)

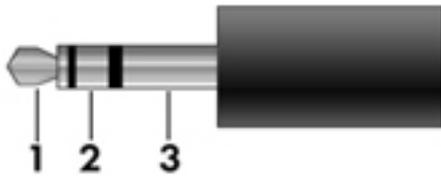


Pin	Signal
1	Audio out, left channel
2	Audio out, right channel
3	Ground

## External monitor

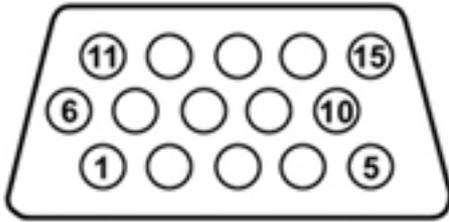


Pin	Signal
1	Red analog
2	Green analog
3	Blue analog
4	Not connected
5	Ground
6	Ground analog
7	Ground analog
8	Ground analog
9	+5 VDC
10	Ground
11	Monitor detect
12	DDC 2B data
13	Horizontal sync
14	Vertical sync
15	DDC 2B clock

## RJ-45 (network)

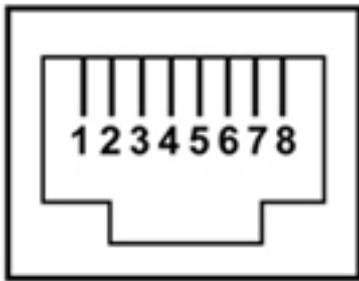

Pin	Signal
1	Transmit +
2	Transmit -
3	Receive +
4	Unused
5	Unused
6	Receive -
7	Unused
8	Unused

## Universal Serial Bus

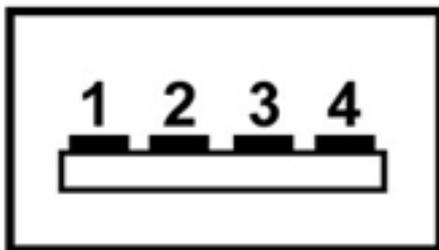

Pin	Signal
1	+5 VDC
2	Data
3	Data +
4	Ground

---

## 8 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

### Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.5 m** (5.0 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

## Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

---

# 9 Recycling

## Battery

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

## Display

- ⚠ **WARNING!** The backlight contains mercury. Caution must be exercised when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.
- ⚠ **CAUTION:** The procedures in this chapter can result in damage to display components. The only components intended for recycling purposes are the liquid crystal display (LCD) panel and the backlight. When you remove these components, handle them carefully.
- 📄 **NOTE:** Materials Disposal. This HP product contains mercury in the backlight in the display assembly that might require special handling at end-of-life. Disposal of mercury may be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities, or see the Electronic Industries Alliance (EIA) Web site at <http://www.eiai.org>.


This section provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight **(1)** and the liquid crystal display (LCD) panel **(2)**.




- 📄 **NOTE:** The procedures provided in this chapter are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.

Perform the following steps:


1. Remove all screw covers **(1)** and screws **(2)** that secure the display bezel to the display assembly.

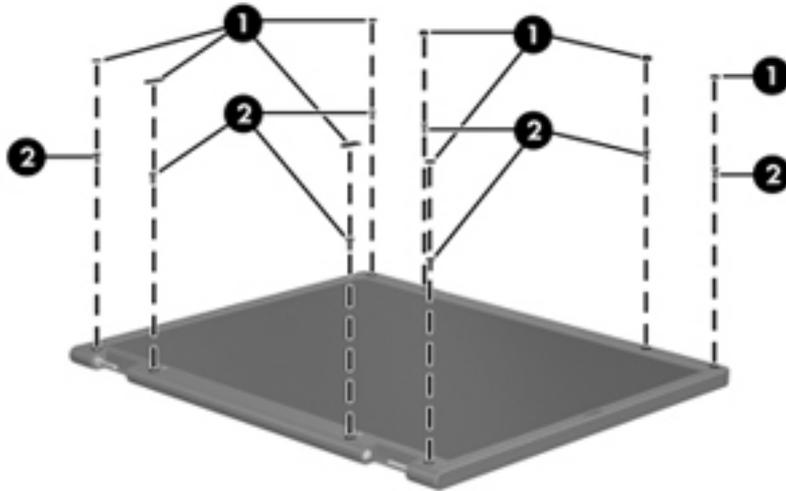


2. Lift up and out on the left and right inside edges **(1)** and the top and bottom inside edges **(2)** of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel 3.

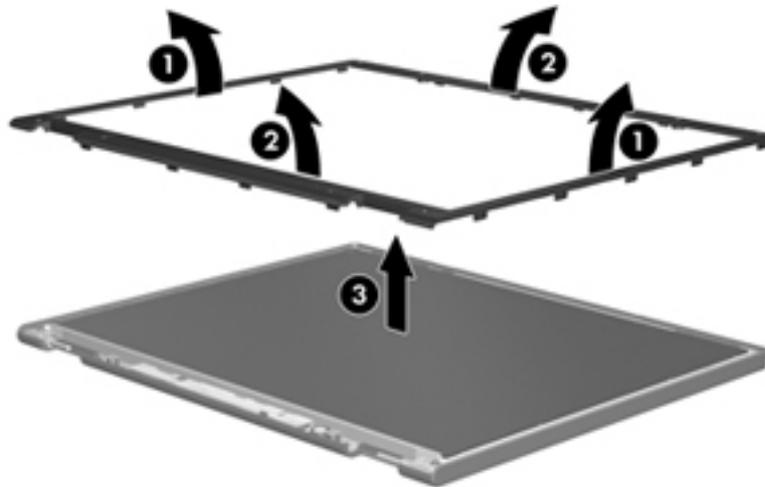


4. Disconnect all display panel cables (1) from the display inverter and remove the inverter 2.

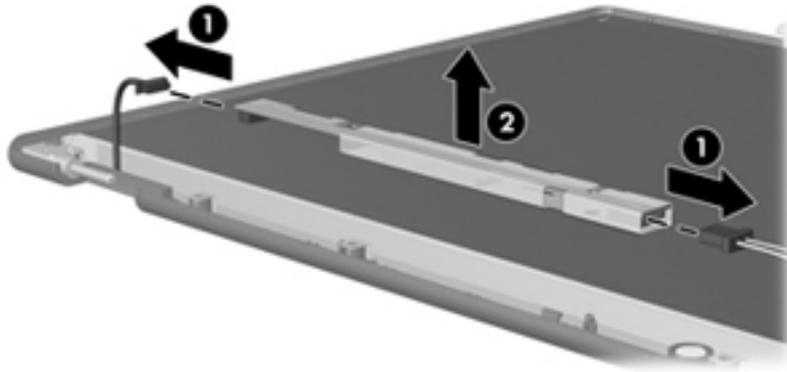

5. Remove all screws (1) that secure the display panel assembly to the display enclosure.
6. Remove the display panel assembly (2) from the display enclosure.

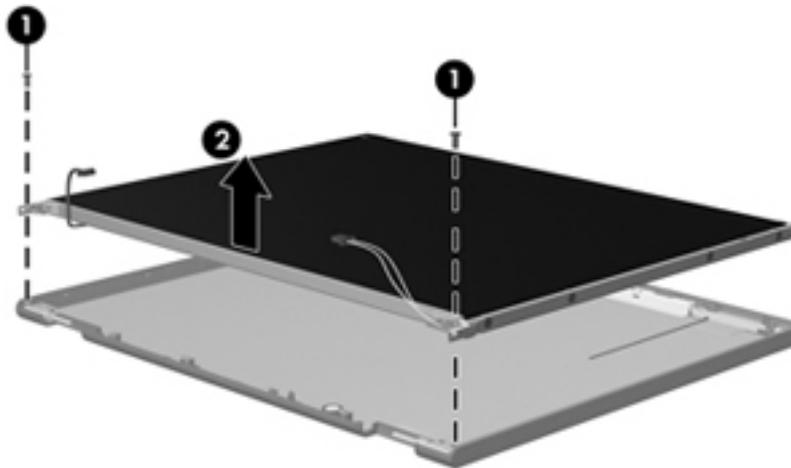


7. Turn the display panel assembly upside down.
8. Remove all screws that secure the display panel frame to the display panel.

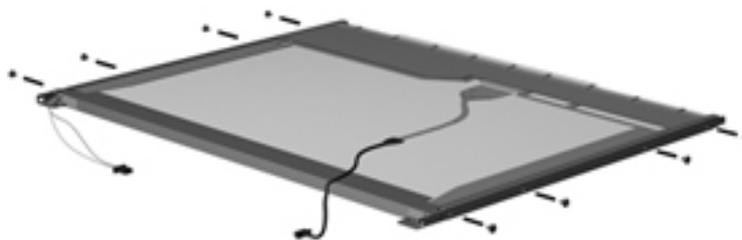


9. Use a sharp-edged tool to cut the tape (1) that secures the sides of the display panel to the display panel frame.

- 10.** Remove the display panel frame **(2)** from the display panel.

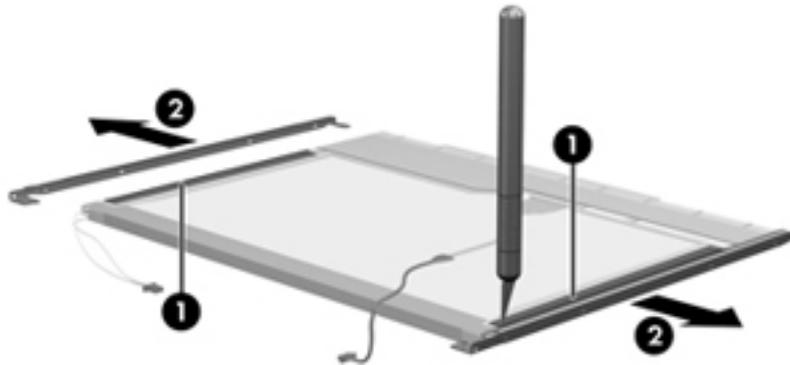

- 11.** Remove the screws **(1)** that secure the backlight cover to the display panel.


- 12.** Lift the top edge of the backlight cover **(2)** and swing it outward.

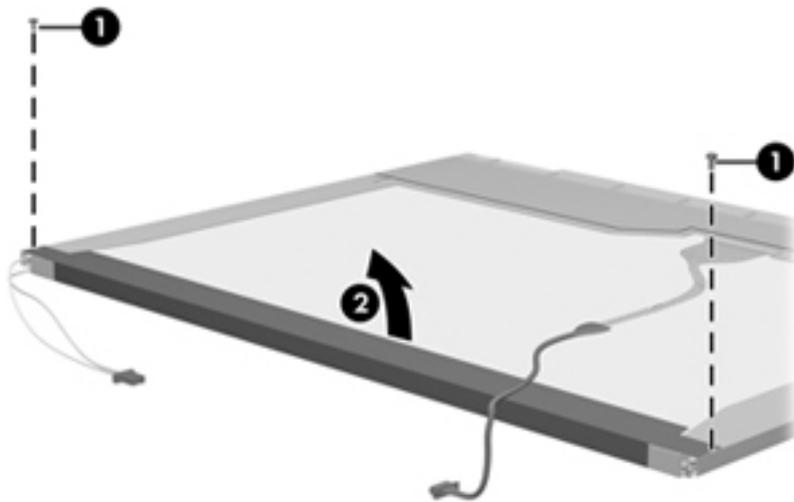


- 13.** Remove the backlight cover.

- 14.** Turn the display panel right-side up.

15. Remove the backlight cables (1) from the clip (2) in the display panel.

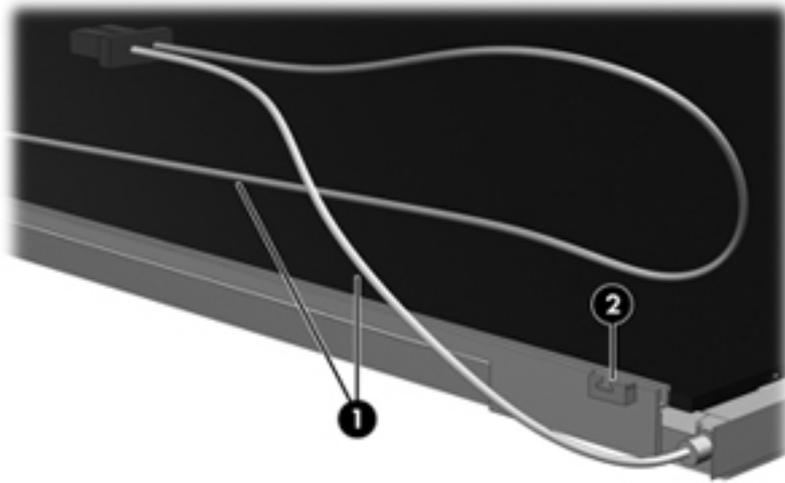


16. Turn the display panel upside down.
17. Remove the backlight frame from the display panel.

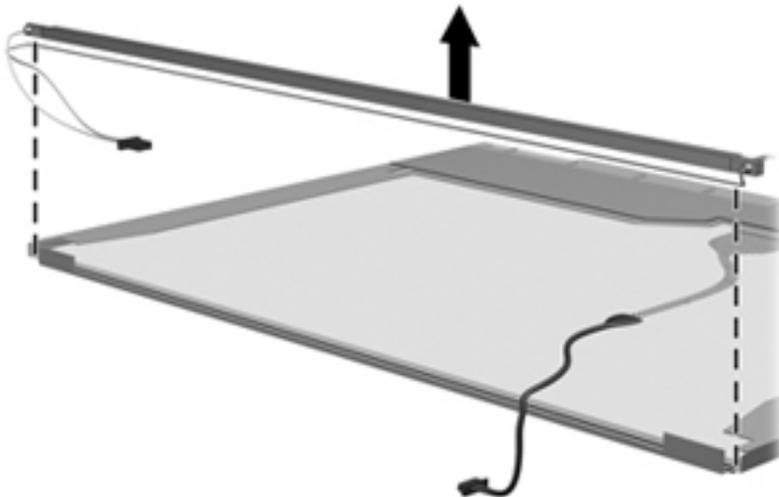

**⚠ WARNING!** The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

**18.** Remove the backlight from the backlight frame.

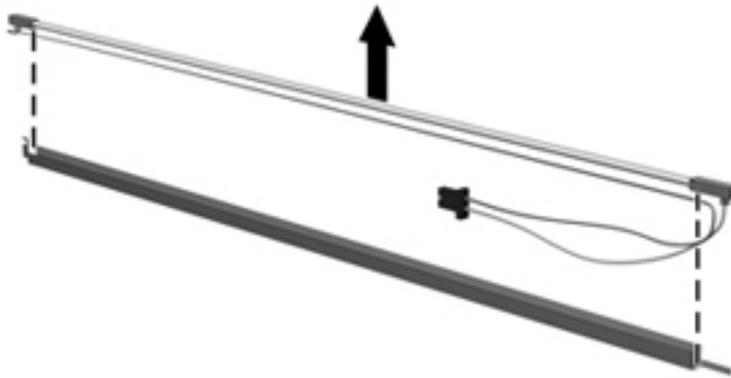


**19.** Disconnect the display cable **(1)** from the LCD panel.


**20.** Remove the screws **(2)** that secure the LCD panel to the display rear panel.

**21.** Release the LCD panel **(3)** from the display rear panel.

**22.** Release the tape **(4)** that secures the LCD panel to the display rear panel.

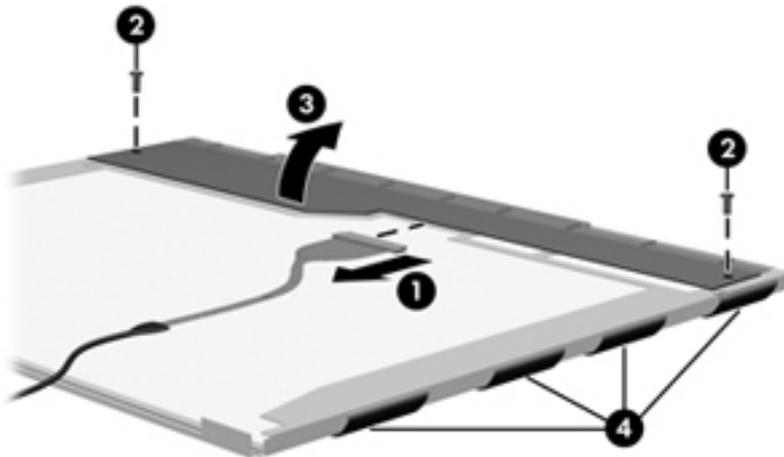

**23.** Remove the LCD panel.

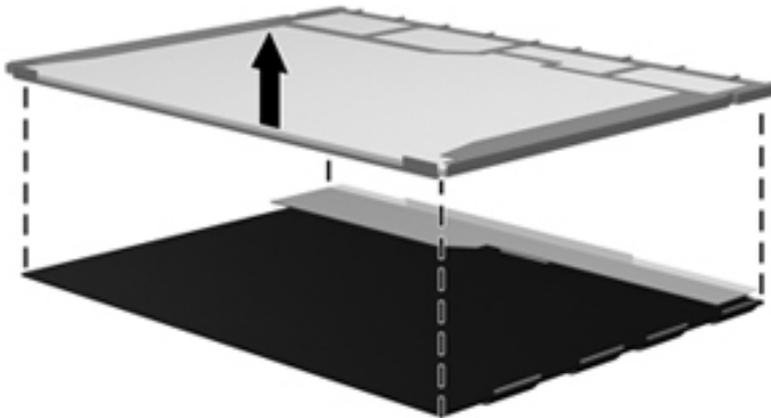

**24.** Recycle the LCD panel and backlight.

# Index

- A**
    - AC adapter
      - spare part number 25, 26
    - AC adaptor light 11
    - action keys 8
    - audio, product description 2
    - audio-in jack
      - connector pinout 91
      - location 11
    - audio-out jack
      - connector pinout 91
      - location 11
  - B**
    - back cover
      - spare part number 27
    - base access door
      - spare part number 27
    - base enclosure, spare part number 17, 27
    - battery
      - removal 38
      - spare part number 27
      - spare part numbers 17, 38
    - battery bay 13
    - battery release latches 13
    - boot options 78
    - buttons
      - TouchPad 6
  - C**
    - cables, service considerations 32
    - caps lock light 7
    - changing the language of Setup Utility 75
    - chipset, product description 1
    - components
      - bottom 13
      - display 12
      - front 8
      - left-side 11
      - pointing device 6
      - right-side 10
      - TouchPad 6
    - computer feet
      - locations 37
      - spare part number 37
    - connector pinout
      - audio-in jack 91
      - audio-out jack 91
      - external monitor port 92
      - headphone 91
      - microphone 91
      - monitor port 92
      - network jack 93
      - RJ-45 jack 93
      - Universal Serial Bus (USB) port 93
    - connectors, service considerations 32
  - D**
    - Diagnostics Menu, Setup Utility 78
    - Digital Media Slot 10
    - diskette drive
      - precautions 32
      - product description 2
    - display assembly
      - removal 64
      - spare part numbers 16, 26, 27, 64
    - display bezel, spare part numbers 22, 27
    - display enclosure, spare part numbers 23
    - Display Hinge Kit, spare part number 23, 28
  - display panel cable, spare part number 23
  - display panel, spare part numbers 22
  - Display Screw Kit, spare part number 23, 27
  - drive light 11
  - drives, preventing damage 32
- E**
    - electrostatic discharge 33
    - Ethernet, product description 2
    - exiting Setup Utility 77
    - external media cards, product description 3
    - external monitor port
      - connector pinout 92
      - location 11
  - F**
    - fan/heat sink assembly
      - removal 69
      - spare part number 17, 28, 69
    - feet
      - locations 37
      - spare part number 37
    - fn key 8
  - G**
    - graphics, product description 1
    - grounding equipment and methods 35
  - H**
    - hard drive
      - precautions 32
      - product description 2
      - removal 41

- self test 78
- spare part
  - numbers 20, 21, 24, 27, 41
- headphone jack
  - connector pinout 91
  - location 11
- hinge, spare part number 23, 28

**I**  
internal media cards, product description 3

**J**  
jacks

- audio-in 11
- audio-out 11
- headphone 11
- microphone 11
- network 11
- RJ-45 11

**K**  
keyboard

- product description 3
- removal 54
- spare part
  - numbers 16, 27, 28, 54

  
keys

- action 8
- fn 8
- Windows applications 8
- Windows logo 8

**L**  
language support 78  
lights

- AC adaptor 11
- caps lock 7
- drive 11
- mute 7
- power 10
- webcam 12
- wireless 7

**M**  
Main Menu, Setup Utility 77  
memory module

- product description 2
- removal 51
- spare part
  - numbers 18, 28, 51

- memory test 78
- microphone 12
- microphone jack
  - connector pinout 91
  - location 11
- model name 1
- modem, product description 2
- monitor port
  - connector pinout 92
  - location 11
- mute light 7

**N**  
navigating in Setup Utility 76  
network jack

- connector pinout 93
- location 11

**O**  
operating system, product description 4  
optical drive

- product description 2

**P**  
packing guidelines 34  
panels, product description 1  
passwords 77  
plastic parts 31  
pointing device

- components 6
- product description 3

  
ports

- external monitor 11
- monitor 11
- product description 3
- Universal Serial Bus (USB) 10, 11

  
power connector 11  
power connector cable

- removal 73
- spare part number 17, 27, 73

  
power cord

- set requirements 94
- spare part numbers 25, 26

  
power light 10  
power requirements, product description 3  
power switch 10  
processor C4 state 78  
processor, product description 1

- product description
  - audio 2
  - chipset 1
  - diskette drive 2
  - Ethernet 2
  - external media cards 3
  - graphics 1
  - hard drive 2
  - internal media cards 3
  - keyboard 3
  - memory module 2
  - modem 2
  - operating system 4
  - optical drive 2
  - panels 1
  - pointing device 3
  - ports 3
  - power requirements 3
  - processors 1
  - product name 1
  - security 3
  - serviceability 4
  - video 2
  - wireless 2
- product name 1

**R**  
removal/replacement

- preliminaries 31
- procedures 36

  
restoring default settings in Setup Utility 76  
RJ-45 jack

- connector pinout 93
- location 11

  
RTC battery

- removal 53
- spare part number 17, 28, 53

  
Rubber Kit, spare part number 17, 25, 27

**S**  
security cable slot 11  
Security Menu, Setup Utility 77  
security, product description 3  
selecting in Setup Utility 76  
serial number 14  
service considerations 31  
Service cover

- spare part number 29

- service cover
  - removal 40
  - spare part number 21, 27, 40
- service tag 14, 36
- serviceability, product description 4
- Setup Utility
  - changing the language 75
  - Diagnostics Menu 78
  - exiting 77
  - Main Menu 77
  - menus 77
  - navigating 76
  - restoring default settings 76
  - Security Menu 77
  - selecting 76
  - starting 75
  - System Configuration Menu 78
  - using 75
- Setup Utility menus 77
- SIM, removal 39
- speakers
  - location 9
  - removal 60
  - spare part number 17, 28, 60
- starting Setup Utility 75
- static-shielding materials 35
- system board
  - removal 68
  - spare part numbers 17, 26, 68
- System Configuration Menu, Setup Utility 78
- system information 76, 77

## T

- tools required 31
- top cover
  - removal 57
  - spare part number 27
  - spare part numbers 17, 57
- TouchPad
  - removal 62
  - spare part numbers 17, 62
  - zone 6
- TouchPad button 6
- transporting guidelines 34

## U

- Universal Serial Bus (USB) port
  - connector pinout 93
  - location 10, 11
  - using Setup Utility 75

## V

- vent 11
- vents
  - location 9
- video, product description 2

## W

- webcam 12
- webcam light 12
- webcam/microphone module,
  - spare part number 22, 27
- Windows applications key 8
- Windows logo key 8
- wireless light 7
- wireless module, product description 2
- WLAN module
  - removal 46
  - spare part numbers 18, 26, 46
- workstation guidelines 34
- WWAN antennas 12
- WWAN module
  - removal 43
  - spare part number 18, 26, 43

