

HP Pavilion dv6 Entertainment PC

Maintenance and Service Guide

© Copyright 2010 Hewlett-Packard
Development Company, L.P.

ATI Mobility Radeon is a registered
trademark of Advanced Micro Devices, Inc.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-
Packard Company under license. Intel,
Celeron, Core, and Pentium are trademarks
of Intel Corporation in the U.S. and
other countries. Microsoft, Windows, and
Windows Vista are U.S. registered
trademarks of Microsoft Corporation.
SD Logo is a trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: July 2010

Document Part Number: 597854-001

MSG revision history

Revision	Publication date	Description
A	August 2010	<ul style="list-style-type: none">• Updated commodities in the following location: Product description on page 1.• Added newly supported processors to spare parts listings in the following locations: Computer major components on page 18, Sequential part number listing on page 35, and Processor on page 98.• Removed obsolete processors from spare parts listings in the following locations: Computer major components on page 18, Sequential part number listing on page 35, and Processor on page 98.• Added newly supported system boards to spare parts listings in the following locations: Computer major components on page 18, Sequential part number listing on page 35, and System board on page 91.• Removed obsolete system boards from spare parts listings in the following locations: Computer major components on page 18, Sequential part number listing on page 35, and System board on page 91.• Added newly supported hard drives to spare parts listings in the following locations: Computer major components on page 18, Mass storage devices on page 32, Sequential part number listing on page 35, and Hard drive on page 55.• Added newly supported WLAN modules to spare parts listings in the following locations: Computer major components on page 18, Sequential part number listing on page 35, and WLAN module on page 57.• Added newly supported keyboards to spare parts listings in the following locations: Computer major components on page 18 and Sequential part number listing on page 35.• Updated miscellaneous parts to spare parts listings in the following locations: Miscellaneous parts on page 34 and Sequential part number listing on page 35.• Updated hard drive specifications in the following location: Hard drive specifications on page 107.

-
- Updated commodities in the following location: [Product description on page 1](#).
 - Added newly supported processors to spare parts listings in the following locations: [Computer major components on page 18](#), [Sequential part number listing on page 35](#), and [Processor on page 98](#).
 - Added newly supported Thermal Pad Kit to spare parts listings in the following locations: [Miscellaneous parts on page 34](#) and [Sequential part number listing on page 35](#).
 - Added newly supported system boards to spare parts listings in the following locations: [Computer major components on page 18](#), [Sequential part number listing on page 35](#), and [System board on page 91](#).
 - Added newly supported display assemblies and removed obsolete display assemblies from spare parts listings in the following locations: [Computer major components on page 18](#), [Sequential part number listing on page 35](#), and [BrightView display assembly on page 77](#).
 - Added newly supported hard drives and removed obsolete hard drives from spare parts listings in the following locations: [Computer major components on page 18](#), [Mass storage devices on page 32](#), [Sequential part number listing on page 35](#), and [Hard drive on page 55](#).
 - Added newly supported optical drives to spare parts listings in the following locations: [Computer major components on page 18](#), [Sequential part number listing on page 35](#), and [Optical drive on page 63](#).
 - Added newly supported keyboards to spare parts listings in the following locations: [Computer major components on page 18](#) and [Sequential part number listing on page 35](#).
 - Added newly supported top covers to spare parts listings in the following locations: [Computer major components on page 18](#), [Sequential part number listing on page 35](#), and [Top cover on page 67](#).
 - Added newly supported fan/heat sink assembly to spare parts listings in the following locations: [Computer major components on page 18](#), [Sequential part number listing on page 35](#), and [Fan/heat sink assembly on page 95](#).
 - Updated miscellaneous parts to spare parts listings in the following locations: [Miscellaneous parts on page 34](#) and [Sequential part number listing on page 35](#).
 - Updated optical disc specifications in the following location: [Blu-ray Writer with DVD±R/RW SuperMulti DL Drive on page 110](#).
-
-

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Product description	1
2 External component identification	6
Top components	6
TouchPad	6
TouchPad buttons	7
Lights	8
Buttons and Fingerprint Reader (select models only)	9
Keys	10
Front components	11
Right-side components	11
Left-side components	12
Bottom components	13
Display components	14
Wireless antennas	15
3 Illustrated parts catalog	16
Service tag	16
Computer major components	18
Display assembly components	28
Touchscreen display assembly spare parts	29
BrightView display assembly spare parts	30
Mass storage devices	32
Plastics Kit	33
Miscellaneous parts	34
Sequential part number listing	35
4 Removal and replacement procedures	45
Preliminary replacement requirements	45
Tools required	45
Service considerations	45

Plastic parts	45
Cables and connectors	46
Drive handling	46
Grounding guidelines	47
Electrostatic discharge damage	47
Packaging and transporting guidelines	48
Workstation guidelines	48
Equipment guidelines	49
Component replacement procedures	50
Service tag	50
Computer feet	52
Battery	53
Hard drive cover	54
Hard drive	55
WLAN module	57
Memory module	60
RTC battery	62
Optical drive	63
Keyboard	65
Top cover	67
Power button board	70
Touchscreen display assembly	72
BrightView display assembly	77
Webcam/microphone module	82
Bluetooth module	83
Speaker assembly	85
USB board	87
Power connector	89
System board	91
Fan/heat sink assembly	95
Processor	98
5 Setup Utility (BIOS)	100
Starting Setup Utility	100
Using Setup Utility	100
Changing the language of Setup Utility	100
Navigating and selecting in Setup Utility	101
Displaying system information	101
Restoring default settings in Setup Utility	102
Exiting Setup Utility	102
Setup Utility menus	103

Main menu	103
Security menu	103
System Configuration menu	103
Diagnostics menu	104
6 Specifications	105
Computer specifications	105
39.6-cm (15.6-inch) display specifications	106
Hard drive specifications	107
LightScribe DVD±R/RW SuperMulti DL Drive specifications	108
Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive specifications	109
Blu-ray Writer with DVD±R/RW SuperMulti DL Drive	110
System DMA specifications	111
UMA system interrupt specifications	112
Discrete system interrupt specifications	113
Switchable graphics system interrupt specifications	114
Switchable graphics system I/O address specifications	115
UMA system I/O address specifications	118
Discrete system I/O address specifications	120
System memory map specifications	123
7 Backup and Recovery	124
Recovering system information	124
Creating recovery discs	125
Backing up your information	126
When to back up	126
Backup suggestions	126
Using system restore points	126
When to create restore points	127
Create a system restore point	127
Restore to a previous date and time	127
Performing a recovery	128
Recovering from the recovery discs	128
Recovering from the dedicated recovery partition (select models only)	128
8 Connector pin assignments	130
Audio-in (microphone)	130
Audio-out (headphone)	130
External monitor	131
HDMI	132

RJ-11 (modem)	133
Universal Serial Bus	133
9 Power cord set requirements	134
Requirements for all countries or regions	134
Requirements for specific countries or regions	135
10 Recycling	136
Battery	136
Display	136
Index	140

1 Product description

Category	Description
Product Name	HP Pavilion dv6 Entertainment PC
Processors	Intel® Core™ 2 Quad Intel Core i7 Processors
	Intel Core i7-840QM processor with 1.86 GHz, SC turbo up to 3.2 GHz, Quad 45 W
	Intel Core i7-820QM processor with 1.73 GHz, SC turbo up to 3.06GHz, Quad 45 W
	Intel Core i7-740QM processor with 1.73 GHz, SC turbo up to 2.93 GHz, Quad 45 W
	Intel Core i7-720QM processor with 1.6 GHz, SC turbo up to 2.8 GHz, Quad 45 W
	Intel Core 2 Duo Intel Core i5 Processors
	Intel Core i5-580M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W
	Intel Core i5-560M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W
	Intel Core i5-540M processor with 2.53 GHz, SC turbo up to 3.06 GHz, Dual 35 W
	Intel Core i5-520M processor with 2.4 GHz, SC turbo up to 2.93 GHz, Dual 35 W
	Intel Core i5-480M processor with 2.66 GHz, SC turbo up to 2.93 GHz, Dual 35 W
	Intel Core i5-460M processor with 2.53 GHz, SC turbo up to 2.8 GHz, Dual 35 W
	Intel Core i5-450M processor with 2.4 GHz, SC turbo up to 2.66 GHz, Dual 35 W
	Intel Core i5-430M processor with 2.26 GHz, SC turbo up to 2.53 GHz, Dual 35 W
	Intel Core i3 Processors
	Intel Core i3-390M processor with 2.66 GHz, Dual 35 W
	Intel Core i3-380M processor with 2.53 GHz, Dual 35 W
	Intel Core i3-370M processor with 2.4 GHz, Dual 35 W
	Intel Core i3-350M processor with 2.26 GHz, Dual 35 W
	Intel Pentium P6 Processors
	Intel Pentium P6300 processor with 2.26 GHz
	Intel Pentium P6200 processor with 2.13 GHz
	Intel Pentium P6100 processor with 2.00 GHz
	Intel Pentium P6000 processor with 1.86 GHz

Category	Description
Chipset	Intel HM55 Express Chipset
Graphics	Intel HD graphics
	Switchable discrete graphics
	ATI Capilano Pro (ATI Mobility Radeon™ HD 6550) graphics with 1024-MB of dedicated video memory (64MB x 16 DDR3 @ 800 MHz x 8 pcs) and 128-MB of sideport video memory
	ATI Robson XT (ATI Mobility Radeon HD 6370) graphics with 512-MB of dedicated video memory (64MB x 16 DDR3 @ 800 MHz x 4 pcs) and 128-MB of sideport video memory
	ATI Madison Pro (ATI Mobility Radeon HD 5650) graphics with 1024-MB of dedicated video memory (64MB x 16 DDR3 @ 800 MHz x 8 pcs) and 128-MB of sideport video memory
	ATI Park XT (ATI Mobility Radeon HD 5470) graphics with 512-MB of dedicated video memory (64MB x 16 DDR3 @ 800 MHz x 4 pcs) and 128-MB of sideport video memory
	Supports Blu-ray and/or HD-DVD playback with HD Decode, DX11 support and HDMI support
Panels	39.6-cm (15.6-inch) SVA HD LED BrightView (1366x768) (5.5 mm max)
	39.6-cm (15.6-inch) HD+ LED Touchscreen
	Supports lighted logo on top bezel
Memory	Two customer-accessible/upgradeable SODIMM slots
	DDR3 PC3-10600 1333-MHz memory
	Supports dual channel
	DDR3/1333-MHz and DDR3/1066-MHz (only computer models equipped with the Intel Core i7-840QM 1.86 GHz processor, the Intel Core i7-820QM 1.73GHz processor, the Intel Core i7-740QM 1.73 GHz processor, and the Intel Core i7-720QM 1.6 GHz processor run at DDR3/1333-MHz; all other computer models run at DDR3/1066-MHz)
	Supports up to 8 GB system memory in the following configurations:
	1024-MB total system memory (1024 MB x 1)
	2048-MB total system memory (1024 MB x 2, dual-channel)
	2048-MB total system memory (2048 MB x 1)
	3072-MB total system memory (1024 MB x 1 + 2048 MB x 1)
	4096-MB total system memory (2048 MB x 2, dual-channel)
	6144-MB total system memory (2048 MB x 1 + 4096 MB x 1)
	8192-MB total system memory (4096 MB x 2, dual-channel)
Hard drives	Supports 6.35-cm (2.5-in) hard drives (HD), 12.7-mm (.50-in), and 9.5-mm (.37-in) thicknesses
	Supports one hard drive
	Supports solid state drives (SSD)

Category	Description
	Supports Accelerometer Hard Drive Protection
	Single hard drive configurations:
	160-GB SSD
	250 GB (7200 rpm, 9.5 mm)
	320 GB (7200 rpm, 9.5 mm)
	500 GB (7200 rpm, 9.5 mm)
	640 GB (5400 rpm and 7200 rpm, 9.5 mm)
	750 GB (5400 rpm and 7200 rpm, 9.5 mm)
	1 TB (5400 rpm, 12.7 mm)
Optical drives	12.7-mm tray load
	Serial ATA (SATA)
	Fixed (removal of one screw required)
	Supports the following optical drives:
	LightScribe DVD±R/RW SuperMulti DL Drive
	DVD±R/RW SuperMulti DL Drive
	Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive
	Blu-ray ROM with DVD±R/RW SuperMulti DL Drive
	Blu-ray Writer with DVD±R/RW SuperMulti DL Drive
Webcam	Low-light VGA camera
	Fixed (no tilt)
	Activity LED
	640 × 480 by 24 frames per second
Microphone	2 omnidirectional microphones, dual-array with appropriate software (supports beam forming, echo cancellation, and noise suppression)
Audio	HD Audio
	Dolby advance audio
	Integrated subwoofer
	Supports Microsoft® Premium Requirements
	Pavilion-branded Altec Lansing speakers
Ethernet	Integrated 10/100/1000 network interface card (NIC)
Wireless	Integrated wireless local area network (WLAN) options by way of wireless module:
	Atheros AR9285 802.11b/g/n 1x1 WLAN module

Category	Description
	Ralink RT3090BC4 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter
	Intel® Centrino® Advanced-N + WiMAX 6250 WLAN module
	Intel Centrino Wireless-N 1000 802.11b/g/n 1x2
	Broadcom 4313 802.11b/g/n 1x1 WLAN module
	Broadcom 4313 802.11b/g/n 1x1 WiFi and 2070 Bluetooth 2.1+EDR Combo Adapter
	Broadcom 43225 802.11b/g/n WLAN module
	Broadcom 43224 802.11a/b/g/n 2x2 WLAN module
	Broadcom 43224 802.11a/b/g/n 2x2 WLAN module
TV tuner	DVB-T TV tuner module (select models only)
	DVB-T TV tuner antenna (select models only)
	Remote control (full-function with teletext) (select models only)
External media card	5-n-1 Digital Media Reader
	Digital Media Slot supports Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Secure Digital High Capacity (SDHC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD)
	Supports mini versions with adapter (adapter not included)
Internal card expansion	One half-size mini-card slot for WLAN
Ports	VGA, 15-pin supporting 1920 × 1200 resolution at 75 Hz
	VGA, 15-pin supporting 1600 × 1200 resolution at 75 Hz
	Hot Plug/Unplug and auto detect for correct output to wide-aspect versus standard aspect video
	High-Definition Multimedia Interface (HDMI) v1.3 supporting 1080p and 1920 × 1080 at 60 Hz and 1920 × 1200 at 60 Hz DVI Mode
	eSATA port combo with fourth USB port
	USB 2.0 (three ports)
	RJ-45 Ethernet
	Headphone/line out
	Microphone input (audio-in)
	AC Smart Pin adapter plug
Keyboard/pointing devices	38.1-cm (15-inch) full-size keyboard
	Dura-coat, island-style
	Backlit dura-coat, island-style (select models only)
	Mylar clickpad cover

Category	Description
	Clickpad
	Multitouch gestures enabled as default
	Taps enabled as default
Power requirements	6-cell, 55-Wh, 2.55-Ah Li-ion battery
	6-cell, 62-Wh, 2.8-Ah Li-ion battery
	9-cell, 93-Wh, 2.8-Ah Li-ion battery
	65-W AC adapter
	90-W AC adapter
	120-W AC adapter
	65-W slim travel adapter (smart-pin)
Security	Security cable slot
	Fingerprint reader with Digital Persona software support (select models only)
Operating system	Preinstalled:
	Windows® 7 Professional (32 and 64 bit)
	Windows 7 Home Premium (32 and 64 bit)
	Windows 7 Home Basic (32 and 64 bit)
	FreeDOS
Serviceability	AC adapter
	Battery (system)
	Hard drive
	Memory module
	Optical drive
	Mini Card components

2 External component identification

Top components

TouchPad




Component	Function
TouchPad	Moves the pointer and selects or activates items on the screen.

To view or change the pointing device preferences:

1. Select **Start > Devices and Printers**.
2. Right-click the device representing the computer.
3. Select **Mouse settings**.

TouchPad buttons

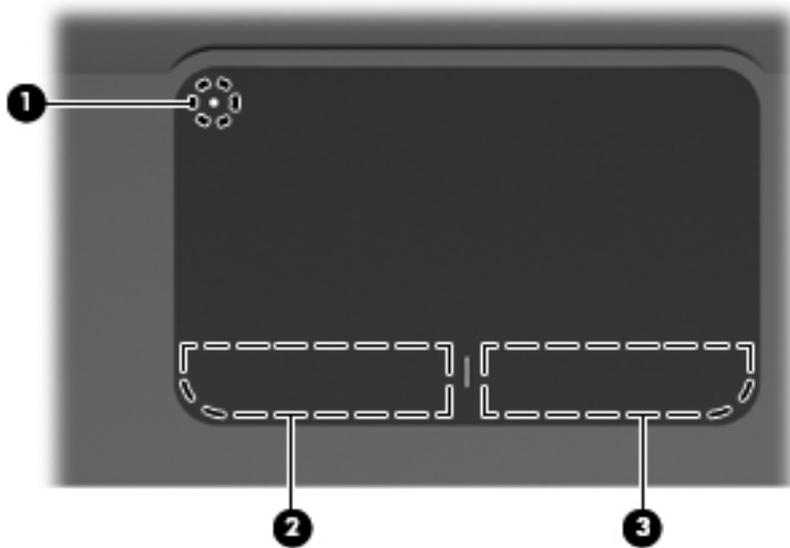


Item	Description	Function
(1)	 TouchPad On/Off button	Turns the TouchPad on and off. Quickly double-tap to turn the TouchPad on and off.
(2)	Left TouchPad button	Functions like the left button on an external mouse.
(3)	Right TouchPad button	Functions like the right button on an external mouse.

To view or change pointing device preferences:

1. Select **Start > Devices and Printers**.
2. Right-click the device representing your computer.
3. Select **Mouse settings**.

Lights

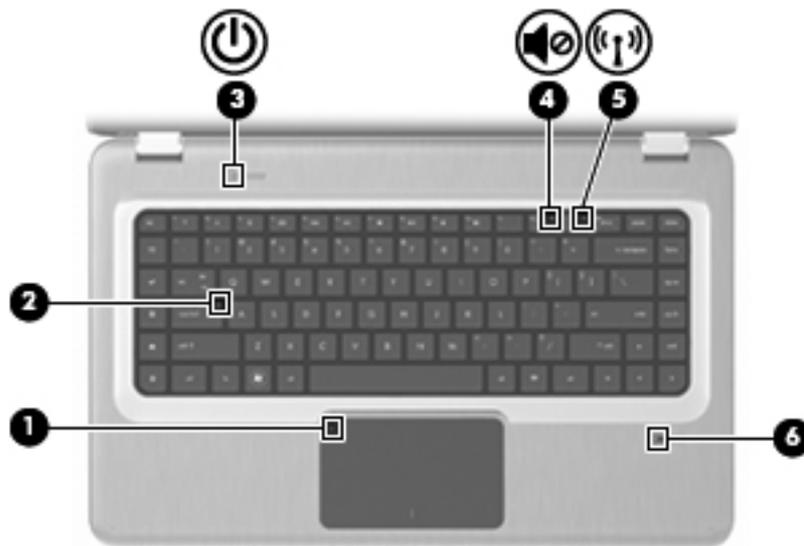

Item	Description	Function
(1)	TouchPad light	Amber—The TouchPad is disabled.
(2)	Caps Lock light	On—The Caps Lock is on.
(3)	Power light	<ul style="list-style-type: none">• On—The computer is on.• Flashing—The computer is in Sleep.• Off—The computer is off or in Hibernation.
(4)	Volume Mute light	Amber—The computer sound is off.
(5)	Wireless light	<ul style="list-style-type: none">• White—An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is detected.• Amber—No wireless devices are detected.
(6)	Fingerprint Reader light	<ul style="list-style-type: none">• White—The fingerprint was read.• Amber—The fingerprint was not read.


Buttons and Fingerprint Reader (select models only)



Item	Description	Function
(1)	Power button	<p>Press the Power button to:</p> <ul style="list-style-type: none">• Turn on the computer.• Initiate Sleep.• Exit Sleep.• Exit Hibernation. <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the Power button for at least five seconds to shut down the computer.</p> <p>For more information about the power settings, select Start > Control Panel > System and Security > Power Options.</p>
(2)	Fingerprint Reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

For information about changing the factory settings, see Help and Support.

Keys

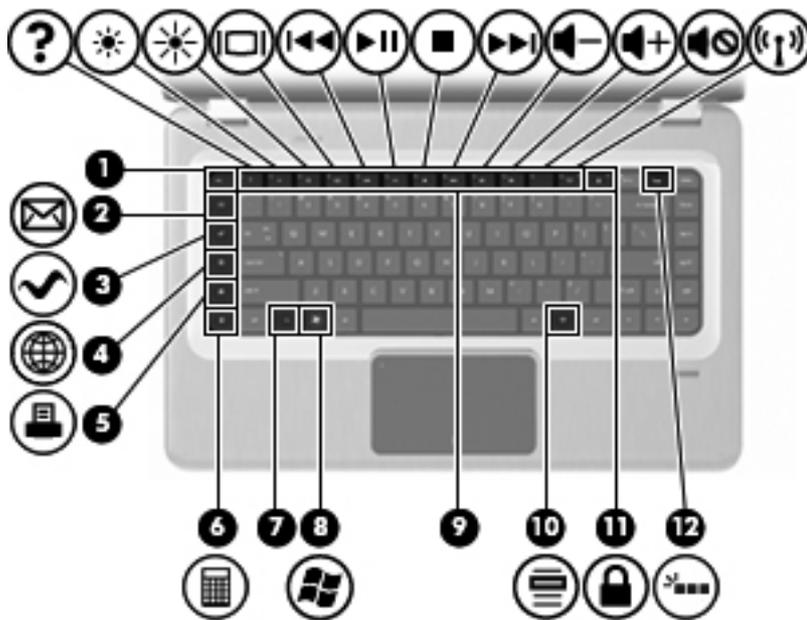


Item	Description	Function
(1)	<code>esc</code> key	Press the <code>esc</code> and <code>fn</code> keys at the same time to display system information.
(2)	E-mail key	Opens a new e-mail in the default e-mail client.
(3)	Media Application key	Launches the MediaSmart application.
(4)	Web Browser key	Launches the default web browser.
(5)	Print key	Sends the currently-active document to the default printer.
(6)	Calculator key	Launches the Calculator application.
(7)	<code>fn</code> key	Press the <code>fn</code> key at the same time as a function key or the <code>esc</code> key to execute frequently used system functions.
(8)	Windows Logo key	Displays the Windows Start menu.
(9)	Function keys	Press a function key and the <code>fn</code> key at the same time to execute frequently used system functions.
(10)	Windows Application key	Displays a shortcut menu for items beneath the pointer.
(11)	QuickLock key	Initiates QuickLock.
(12)	Backlight key	Turns the backlit keyboard on or off.

Front components




Description	Function
Speakers	Produce sound.

Right-side components

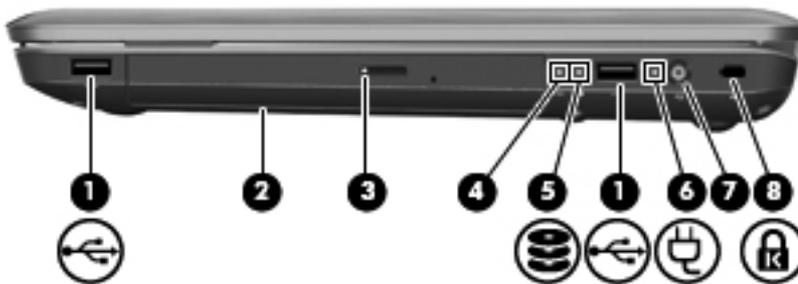


Item	Description	Function
(1)	USB ports (2)	Connect optional USB devices.
(2)	Optical drive	Reads optical discs and, on select models, writes to optical discs.
(3)	Optical Drive light	Flashing—Accessing the optical drive.
(4)	Hibernate light	White—The computer is in Hibernate.
(5)	Hard Disk Drive light	<ul style="list-style-type: none"> White—The hard disk drive is active. Amber—The hard disk drive is parked.
(6)	AC Adapter light	<ul style="list-style-type: none"> On—The computer is connected to external power. Off—The computer is not connected to external power.
(7)	Power connector	Connects an AC adapter.
(8)	Security cable slot	Connects an optional security cable. The security cable is designed to act as a deterrent, but might not prevent the computer from being mishandled or stolen.

Left-side components

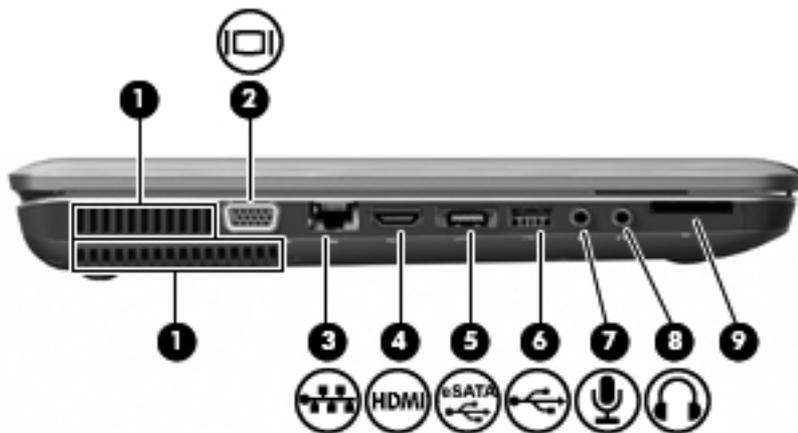

Item	Description	Function
(1)	Vents (2)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	External Monitor port	Connects an external VGA monitor or projector.
(3)	RJ-45 (network) jack	Connects a network cable.
(4)	HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(5)	eSATA/USB port (select models only)	Connects an optional high-performance eSATA component, such as an eSATA external hard drive, or connects an optional USB device. NOTE: Depending on the computer model, the computer might include only a USB port.
(6)	USB port	Connects an optional USB device.
(7)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, monaural microphone.
(8)	Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(9)	SD card reader	Reads SD cards that are inserted into the reader.

Bottom components

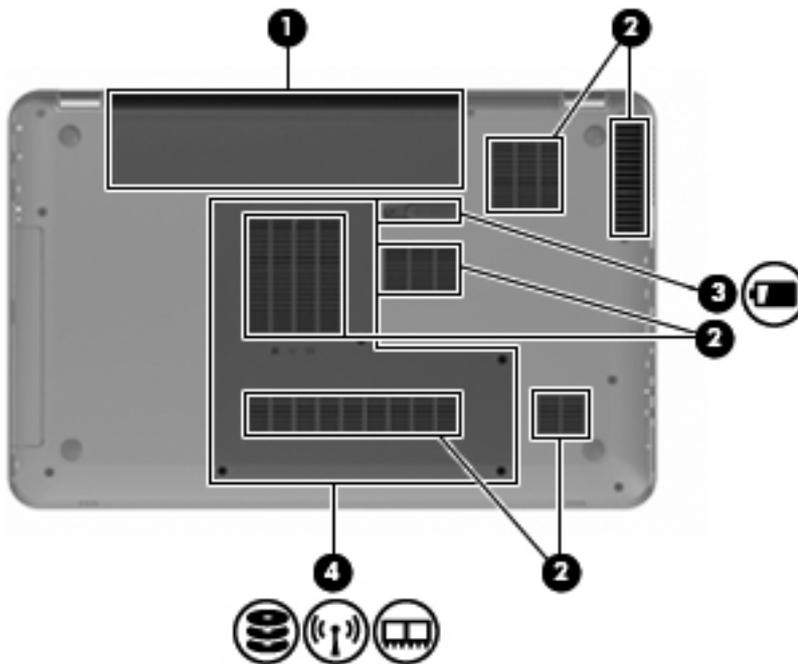

Item	Description	Function
(1)	Battery bay	Holds the battery.
(2)	Vents (6)	Enable airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)	Battery Release latch	Releases the battery from the battery bay.
(4)	Primary Hard Drive bay	Holds the primary hard drive, the memory module slots, and the WLAN module (select models only).
		CAUTION: To prevent an unresponsive system, replace the wireless module with a wireless module authorized for use by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

Display components



Item	Description	Function
(1)	Internal microphones (2)	Record sound.
(2)	Webcam light	On—The webcam is in use.
(3)	Webcam	Records video and captures still photographs.

Wireless antennas

Two antennas send and receive signals from one or more wireless devices. These antennas are not visible from the outside of the computer.

 **NOTE:** For optimal transmission, keep the areas immediately around the antennas free from obstructions.


To review wireless regulatory notices, see the country-specific section of the Regulatory, Safety and Environmental Notices chapter in Help and Support.



3 Illustrated parts catalog


Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

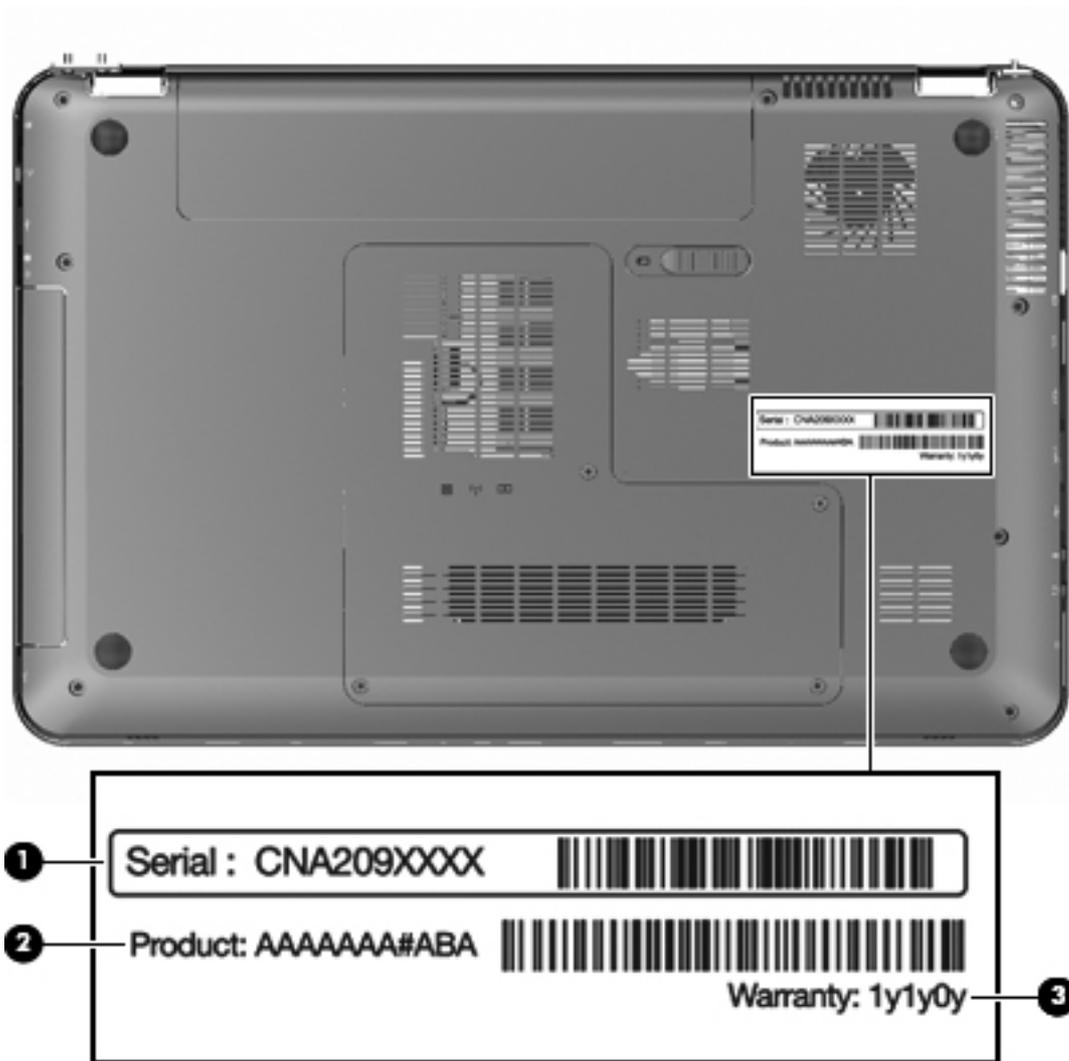

Item	Description	Function
(1)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(2)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(3)	Warranty period	This number describes the duration of the warranty period for the computer.

Computer major components

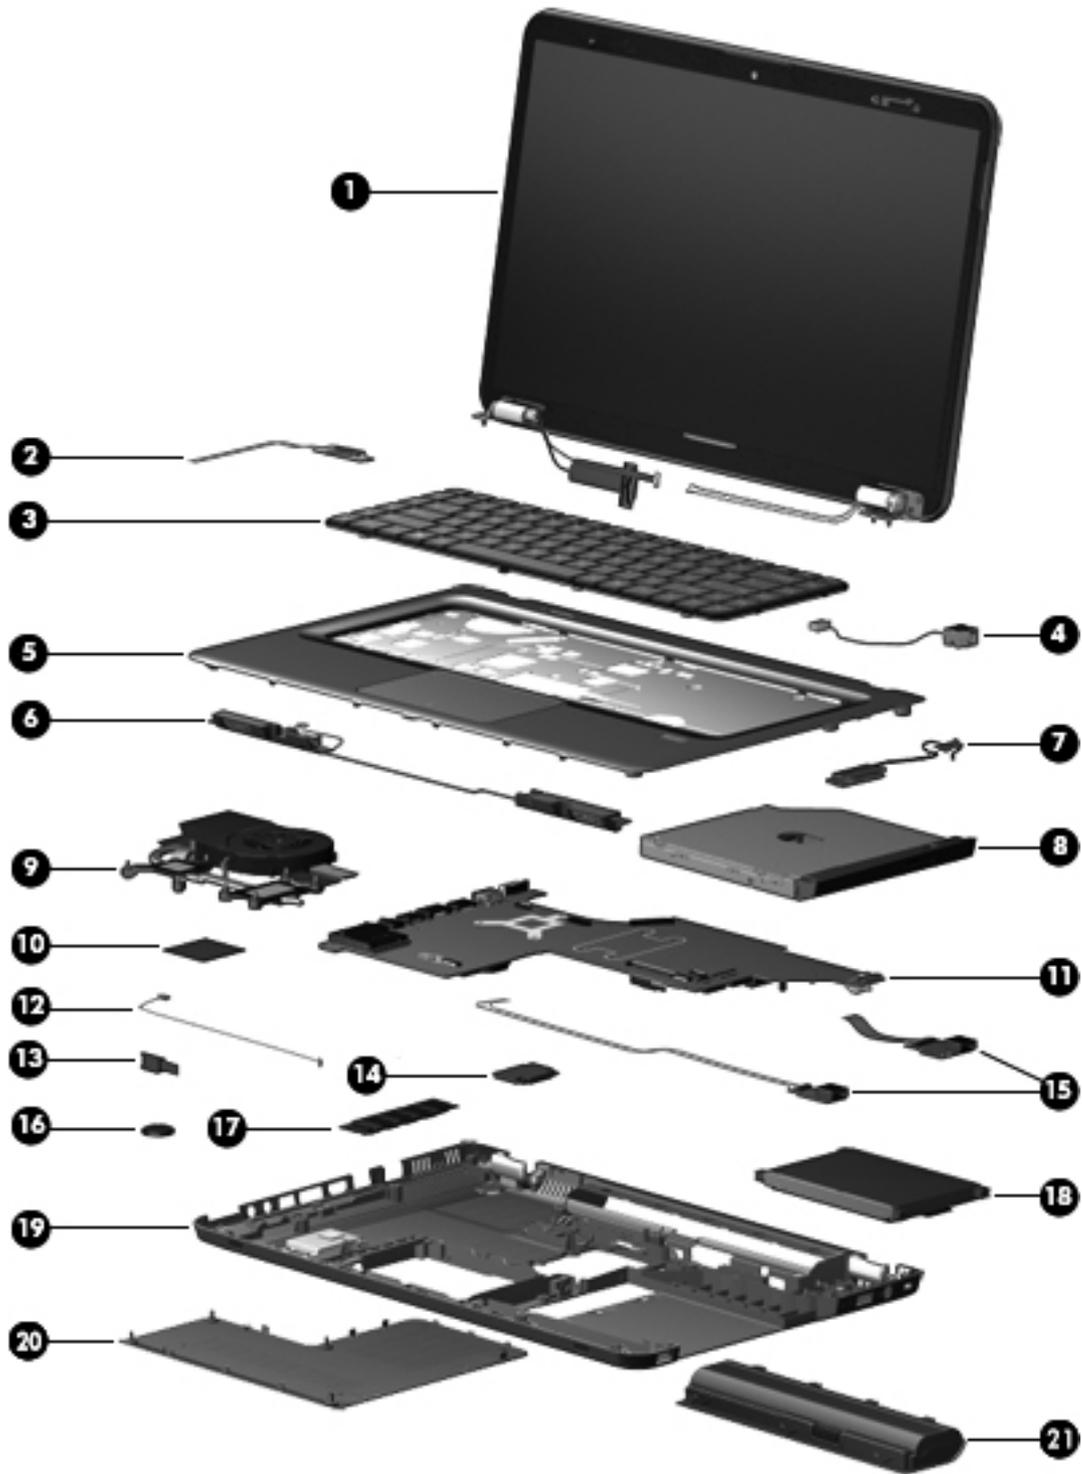

Item	Description	Spare part number
(1)	39.6-cm (15.6-in), high definition (HD) display assembly with low light VGA webcam and two microphones (includes wireless antenna transceivers and cables) for use in:	
	BrightView, black computer models	603647-001
	BrightView, white computer models	603648-001
	BrightView, red computer models	603649-001
	BrightView, chrome computer models	603650-001
	BrightView, midnight blue computer models	615932-001
	BrightView, black computer models with WiMAX	629279-001
	BrightView, etched computer models with WiMAX	629280-001
	BrightView, Rossignol Special Edition AT (Attraxion) computer models	635372-001
	BrightView, Rossignol Special Edition KP (Koopman) computer models	635373-001
	BrightView, etched computer models	595131-001
	Touchscreen computer models	631019-001
	NOTE: For more information about display assembly spare part numbers, see Display assembly components on page 28 .	
(2)	Power button board (includes cable)	603682-001
(3)	Keyboard —Dura-coat, island-style keyboard (includes keyboard cable) for use in:	
	Adriatic Region	597635-BA1
	Belgium	597635-A41
	Brazil	597635-201
	Czech Republic	597635-221
	Czech Republic Rossignol Special Edition AT (Attraxion)	635376-221
	France	597635-051
	France Rossignol Special Edition AT (Attraxion)	635376-051
	French Canada	597635-121
	Germany	597635-041
	Germany Rossignol Special Edition AT (Attraxion)	635376-041
	Greece	597635-DJ1
	Hungary	597635-211
	Israel	597635-BB1
	International use	597635-B31
	International use Rossignol Special Edition AT (Attraxion)	635376-B31
	Italy	597635-061

Item	Description	Spare part number
	Italy Rossignol Special Edition AT (Attraxion)	635376-061
	Japan	597635-291
	Latin America	597635-161
	Korea	597635-AD1
	Norway	597635-DH1
	Norway Rossignol Special Edition AT (Attraxion)	635376-DH1
	Portugal	597635-131
	Russia	597635-251
	Saudi Arabia	597635-171
	Spain	597635-071
	Spain Rossignol Special Edition AT (Attraxion)	635376-071
	Switzerland	597635-BG1
	Switzerland Rossignol Special Edition AT (Attraxion)	635376-BG1
	Taiwan	597635-AB1
	Thailand	597635-281
	Turkey	597635-141
	United Kingdom	597635-031
	United Kingdom Rossignol Special Edition AT (Attraxion)	635376-031
	United States	597635-001
	Backlit keyboard —Dura-coat, island-style keyboard (includes keyboard cable) for use in:	
	Adriatic Region	597630-BA1
	Belgium	597630-A41
	Brazil	597630-201
	Czech Republic	597630-221
	France	597630-051
	French Canada	597630-121
	Germany	597630-041
	Greece	597630-DJ1
	Hungary	597630-211
	Israel	597630-BB1
	International use	597630-B31
	Italy	597630-061

Item	Description	Spare part number
	Latin America	597630-161
	Norway	597630-DH1
	Portugal	597630-131
	Russia	597630-251
	Saudi Arabia	597630-171
	Spain	597630-071
	Switzerland	597630-BG1
	Turkey	597630-141
	United Kingdom	597630-031
	United States	597630-001
(4)	Power connector	603692-001
(5)	Top cover (includes TouchPad) for use with:	
	Etched computer models equipped with a fingerprint reader	603684-001
	Black computer models not equipped with a fingerprint reader	603685-001
	White computer models not equipped with a fingerprint reader	603686-001
	Red computer models not equipped with a fingerprint reader	603687-001
	Midnight blue computer models not equipped with a fingerprint reader	615934-001
	Chrome computer models not equipped with a fingerprint reader	603688-001
	Rossignol Special Edition AT (Attraxion) computer models not equipped with a fingerprint reader	635378-001
	Rossignol Special Edition KP (Koopman) computer models not equipped with a fingerprint reader	635379-001
(6)	Speaker assembly	603694-001
(7)	Optical drive cable	603680-001
(8)	Optical drive (includes bezel and bracket)	
	LightScribe DVD±R/RW SuperMulti DL Drive	603677-001
	Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive	603678-001
	Blu-ray ROM with DVD±R/RW SuperMulti DL Drive	614333-001
	Blu-ray Writer with DVD±R/RW SuperMulti DL Drive	614332-001
(9)	Fan/heat sink assembly (includes replacement thermal material) for use with:	
	UMA graphics memory	603690-001
	UMA graphics memory with a processor	633384-001
	Discrete graphics memory and a 45 W processor	604787-001

Item	Description	Spare part number
	Discrete graphics memory and a 35 W processor	603691-001
(10)	Processor (includes replacement thermal material)	
	Intel Core i7-840QM processor with 1.86 GHz, SC turbo up to 3.2GHz, Quad 45 W	612260-001
	Intel Core i7-820QM processor with 1.73 GHz, SC turbo up to 3.06GHz, Quad 45 W	583053-001
	Intel Core i7-740QM processor with 1.73 GHz, SC turbo up to 2.93 GHz, Quad 45 W	612259-001
	Intel Core i7-720QM processor with 1.6 GHz, SC turbo up to 2.8 GHz, Quad 45 W	586170-001
	Intel Core i5-580M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W	625825-001
	Intel Core i5-560M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W	625824-001
	Intel Core i5-540M processor with 2.53 GHz, SC turbo up to 3.06 GHz, Dual 35 W	594188-001
	Intel Core i5-520M processor with 2.4 GHz, SC turbo up to 2.93 GHz, Dual 35 W	594187-001
	Intel Core i5-480M processor with 2.66 GHz, SC turbo up to 2.93 GHz, Dual 35 W	634693-001
	Intel Core i5-460M processor with 2.53 GHz, SC turbo up to 2.8 GHz, Dual 35 W	626039-001
	Intel Core i5-450M processor with 2.4 GHz, SC turbo up to 2.66 GHz, Dual 35 W	613585-001
	Intel Core i5-430M processor with 2.26 GHz, SC turbo up to 2.53 GHz, Dual 35 W	597624-001
	Intel Core i3-390M processor with 2.66 GHz, Dual 35 W	634692-001
	Intel Core i3-380M processor with 2.53 GHz, Dual 35 W	625823-001
	Intel Core i3-370M processor with 2.4 GHz, Dual 35 W	613584-001
	Intel Core i3-350M processor with 2.26 GHz, Dual 35 W	597623-001
	Intel Pentium P6300 processor with 2.26 GHz	635500-001
	Intel Pentium P6200 processor with 2.13 GHz	625831-001
	Intel Pentium P6100 processor with 2.00 GHz	613587-001
	Intel Pentium P6000 processor with 1.86 GHz	613586-001
(11)	System board (includes replacement thermal material) for use with:	
	ATI Mobility Radeon HD 6550 graphics, 1024-MB dedicated memory, and a dual-core processor	631044-001
	ATI Mobility Radeon HD 6370 graphics, 512-MB dedicated memory, and a dual-core processor	631042-001
	ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a quad-core processor with WiMAX (Worldwide Interoperability for Microwave Access)	630278-001
	ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a quad-core processor	615278-001
	ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a dual-core processor with WiMAX	630279-001

Item	Description	Spare part number
	ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a dual-core processor	615279-001
	ATI Mobility Radeon HD 5470 graphics, 512-MB dedicated memory, and a dual-core processor with WiMAX	630280-001
	ATI Mobility Radeon HD 5470 graphics, 512-MB dedicated memory, and a dual-core processor	615280-001
	Intel HM55 UMA graphics and shared memory with Intel Core i3-370M processors	637212-001
	Intel HM55 UMA graphics and shared memory with Intel Core i3-350M processors	633383-001
	Intel HM55 UMA graphics and shared memory with WiMAX	630281-001
	Intel HM55 UMA graphics and shared memory	615281-001
(12)	Bluetooth module cable	603645-001
(13)	Bluetooth module	537921-001
(14)	WLAN module (Bluetooth supported)	
	Intel® Centrino® Advanced-N + WiMAX 6250 WLAN module for use in the United States	619997-001
	Atheros AR9285 802.11b/g/n 1x1 WLAN module for use with computer models in all countries and regions	605560-005
	Ralink RT3090BC4 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, Puerto Rico, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the US Virgin Islands, the United States, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	602992-001

Item	Description	Spare part number
	Broadcom 4313 802.11b/g/n 1x1 WiFi and 2070 Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, Philippines, Poland, Portugal, Puerto Rico, Qatar, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, the United States, Uruguay, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	600370-001

Item	Description	Spare part number
	Broadcom 43225 802.11b/g/n WLAN module for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, Philippines, Poland, Portugal, Puerto Rico, Qatar, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, the United States, Uruguay, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	593837-001
	Broadcom 4313 802.11b/g/n 1x1 WLAN module for use with computer models in all countries and regions	593836-001
	Intel Centrino Wireless-N 1000 802.11b/g/n 1x2 for use with computer models in all countries and regions except Russia	593530-001
	Broadcom 43224 802.11a/b/g/n 2x2 WLAN module for use only with computer models in Canada, the Cayman Islands, Guam, Puerto Rico, the U.S. Virgin Islands, and the United States	582564-001


Item	Description	Spare part number
	Broadcom 43224 802.11a/b/g/n 2x2 WLAN module for use only with computer models in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Barbados, Belgium, Belize, Benin, Bermuda, Bhutan, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Italy, the Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Korea-South, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Thailand, Timor (East), Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	582564-002
(15)	USB board (includes cable)	603683-001
(16)	RTC battery	599516-001
(17)	Memory module (DDR3 PC3-10600 1333-MHz)	
	4096-MB	599092-001
	2048-MB	598856-001
	1024-MB	598859-001
(18)	Hard drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)	
	250 GB, 7200 rpm	603667-001
	320 GB, 7200 rpm	603668-001
	500 GB, 7200 rpm	634921-001
	640 GB, 5400 rpm	603785-001
	640 GB, 7200 rpm	621046-001
	750 GB, 5400 rpm	603787-001
	750 GB, 7200 rpm	633252-001
	1 TB, 5400 rpm	603788-001
	160-GB solid state drive (SSD)	603673-001

Item	Description	Spare part number
	Hard Drive Hardware Kit (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators) (not illustrated)	603676-001
(19)	Base enclosure (includes four rubber feet)	603689-001
	Rubber feet (includes four base enclosure rubber feet) (not illustrated)	603696-001
(20)	Plastics Kit (includes hard drive bay cover)	603679-001
	NOTE: For more information, see Plastics Kit on page 33 .	
(21)	Battery	
	6-cell, 55-Whr, 2.55-Ah Li-ion battery for use with all computer models	593554-001
	6-cell, 62-Whr, 2.8-Ah Li-ion battery for use with all computer models	593562-001
	9-cell, 93-Whr, 2.8-Ah Li-ion battery for use with all computer models	593550-001

Display assembly components


The HP Pavilion dv6 Entertainment PC offers two types of display assemblies. Component spare parts are listed in this section for Touchscreen and BrightView display assemblies.

Touchscreen display assembly spare parts

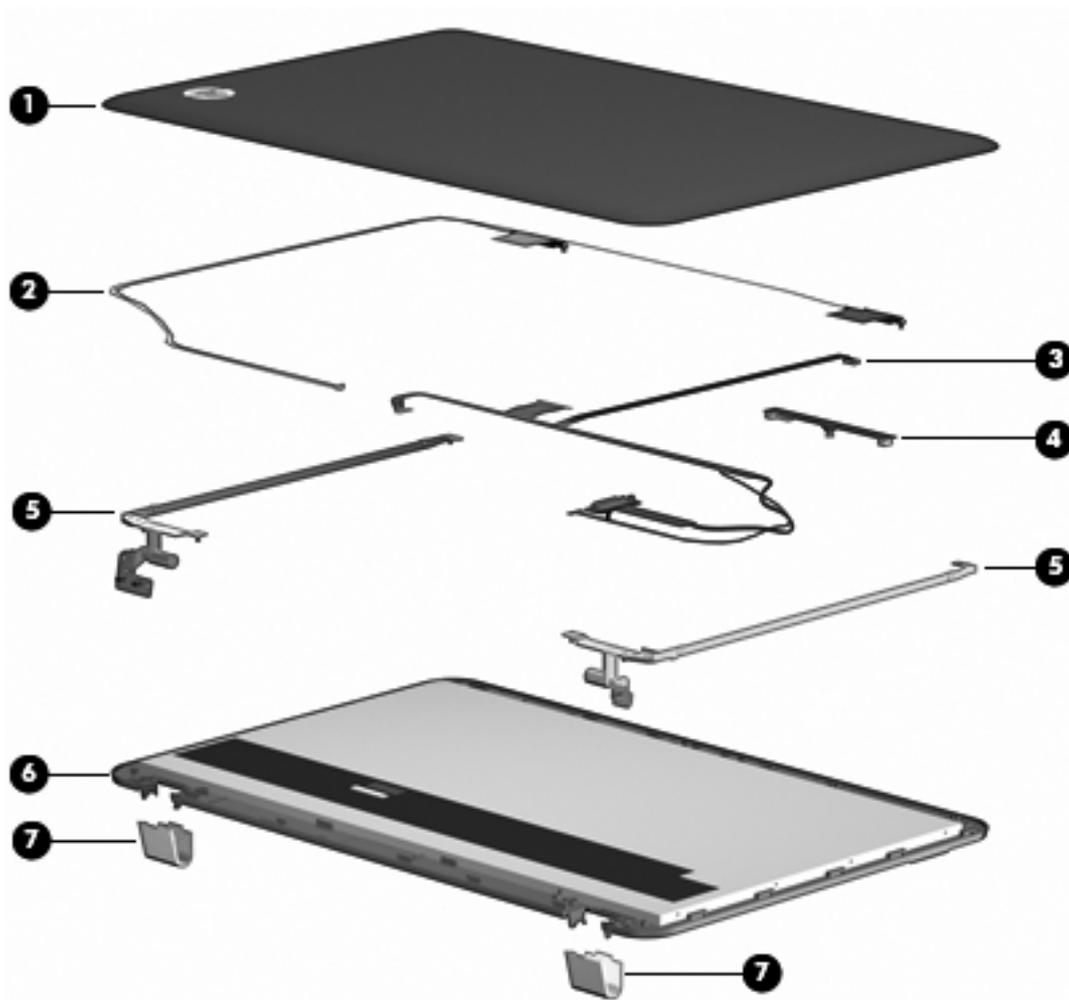

Item	Description	Spare part number
(1)	Etched display enclosure (includes wireless antenna transceivers and cables and logo LED board and cable)	603663-001
(2)	Wireless antenna transceivers and cables	Included with the display enclosure
(3)	Display Cable Kit	603665-001
(4)	Webcam/microphone module (includes cable)	603660-001
(5)	Display Hinge Kit (includes left and right hinges)	603664-001
(6)	Touchscreen display panel	Included with the display assembly
(7)	Display hinge covers (includes left and right covers)	603666-001
	Display Rubber Kit (includes display bezel rubber screw covers) (not illustrated)	603659-001
	Display Screw Kit (not illustrated)	603658-001


BrightView display assembly spare parts

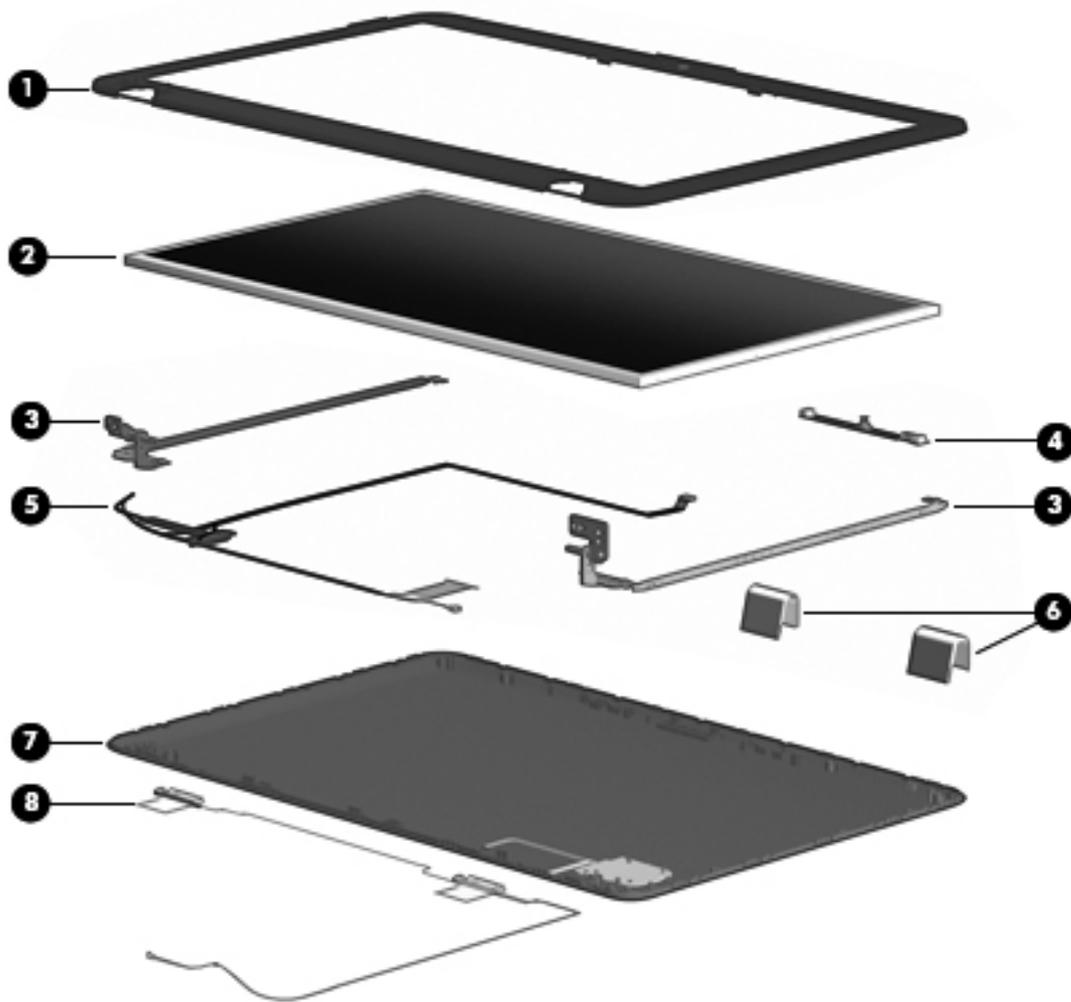

Item	Description	Spare part number
(1)	Display bezel	603651-001
	Display bezel (Rossignol Special Edition AT (Attraxion))	638394-001
(2)	BrightView display panel	595130-001
(3)	Display Hinge Kit (includes left and right hinges)	603656-001
(4)	Webcam/microphone module (includes cable)	603660-001
(5)	Display Cable Kit	603657-001
	Display Cable Kit with WiMAX	629284-001
(6)	Display hinge covers	603661-001
(7)	Display enclosure (includes wireless antenna transceivers and cables and logo LED board and cable)	
	Midnight blue	615933-001


Item	Description	Spare part number
	Black with WiMAX	629282-001
	Black	603652-001
	White	603653-001
	Red	603654-001
	Chrome	603655-001
	Etched with WiMAX	629283-001
	Etched	604804-001
	Rossignol Special Edition AT (Attraxion)	635374-001
	Rossignol Special Edition KP (Koopman)	635375-001
(8)	Wireless antenna transceivers and cables	Included with the display enclosure
	Display Rubber Kit (includes display bezel rubber screw covers) (not illustrated)	603659-001
	Display Screw Kit (not illustrated)	603658-001
	Rossignol Special Edition AT (Attraxion) Miscellaneous Display Kit (not illustrated)	638395-001

Mass storage devices

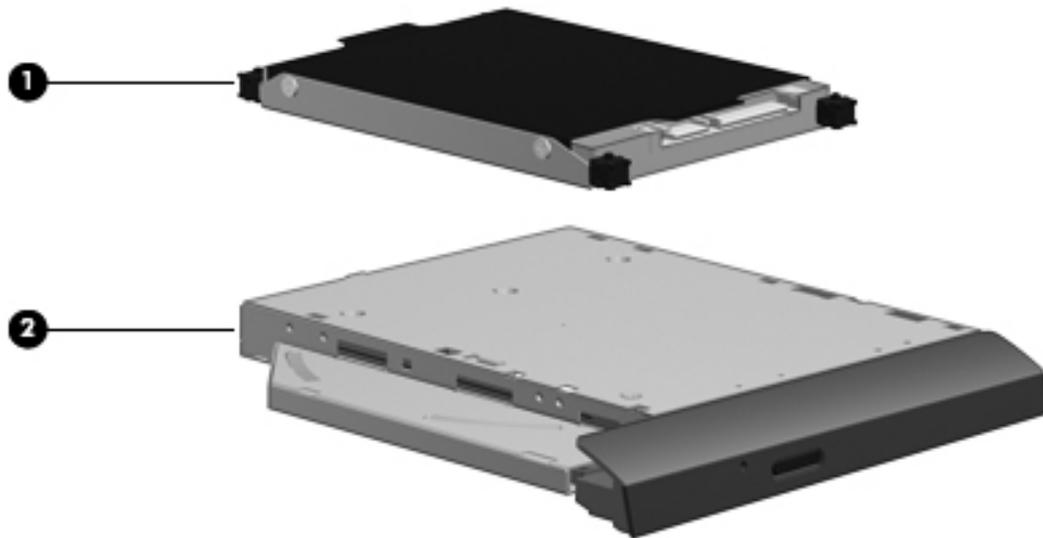

Item	Description	Spare part number
(1)	Hard drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)	
	250 GB, 7200 rpm	603667-001
	320 GB, 7200 rpm	603668-001
	500 GB, 7200 rpm	634921-001
	640 GB, 5400 rpm	603785-001
	640 GB, 7200 rpm	621046-001
	750 GB, 5400 rpm	603787-001
	750 GB, 7200 rpm	633252-001
	1 TB, 5400 rpm	603788-001
	160-GB solid state drive (SSD)	603673-001
	Hard Drive Hardware Kit (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators) (not illustrated)	603676-001
(2)	Optical drive (includes bezel and bracket)	
	LightScribe DVD±R/RW SuperMulti DL Drive	603677-001
	Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive	603678-001
	Blu-ray ROM with DVD±R/RW SuperMulti DL Drive	614333-001
	Blu-ray Writer with DVD±R/RW SuperMulti DL Drive	614332-001

Plastics Kit

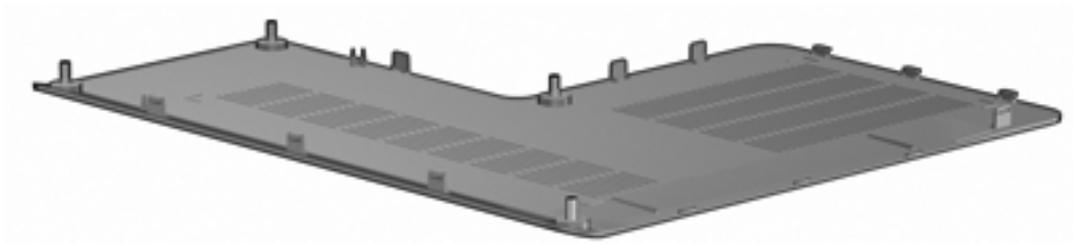

Description	Spare part number
Hard drive bay cover (includes four captive screws)	603679-001

Miscellaneous parts

Description	Spare part number
AC adapters	
65-W AC smart adapter	613152-001
90-W AC smart adapter PFC	613153-001
65-W AC smart adapter PFC	613161-001
90-W AC smart adapter PFC	613160-001
120-W AC smart adapter PFC	613154-001
Power cords, Black for use in:	
Argentina	490371-D01
Australia and New Zealand	490371-011
Belgium, Europe, Finland, France, Germany, Greece, the Netherlands, Norway, Portugal, Spain, and Sweden	490371-021
Thailand	490371-201
Brazil	490371-202
Canada, French Canada, Latin America, and the United States	490371-001
Denmark	490371-081
India	490371-D61
Israel	490371-BB1
Italy	490371-061
Japan	490371-291
The People's Republic of China	490371-AA1
South Africa	490371-AR1
South Korea	490371-AD1
Switzerland	490371-111
Taiwan	490371-AB1
The United Kingdom and Hong Kong	490371-031
DVB-T TV tuner (select models only)	581222-001
DVB-T TV tuner antenna (select models only)	581223-001
Remote control (full-function with teletext) (select models only)	465541-004
Screw Kit	
Phillips PM2.5×3.0 screw	
Phillips PM2.5×5.0 captive screw	

Description	Spare part number
Phillips PM2.5x6.5 screw	
Thermal Pad Kit	634434-001
Notebook Sleeve (Rossignol Special Edition AT (Attraxion))	636174-001
Notebook Sleeve (Rossignol Special Edition KP (Koopman))	636175-001
Cable housing	603697-001

Sequential part number listing

Spare part number	Description
465541-004	Remote control (full-function with teletext)
490371-001	Power cord for use in Canada, French Canada, Latin America, and the United States
490371-011	Power cord for use in Australia and New Zealand
490371-021	Power cord for use in Belgium, Europe, Finland, France, Germany, Greece, the Netherlands, Norway, Portugal, Spain, and Sweden
490371-031	Power cord for use in the United Kingdom and Hong Kong
490371-061	Power cord for use in Italy
490371-081	Power cord for use in Denmark
490371-111	Power cord for use in Switzerland
490371-201	Power cord for use in Thailand
490371-202	Power cord for use in Brazil
490371-291	Power cord for use in Japan
490371-AA1	Power cord for use in the People's Republic of China
490371-AB1	Power cord for use in Taiwan
490371-AD1	Power cord for use in South Korea
490371-AR1	Power cord for use in South Africa
490371-BB1	Power cord for use in Israel
490371-D01	Power cord for use in Argentina
490371-D61	Power cord for use in India
537921-001	Bluetooth module
581222-001	DVB-T TV tuner (select models only)
581223-001	DVB-T TV tuner antenna (select models only)

Spare part number	Description
582564-001	Broadcom 43224 802.11a/b/g/n 2x2 WLAN module for use only with computer models in Canada, the Cayman Islands, Guam, Puerto Rico, the U.S. Virgin Islands, and the United States
582564-002	Broadcom 43224 802.11a/b/g/n 2x2 WLAN module for use only with computer models in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Barbados, Belgium, Belize, Benin, Bermuda, Bhutan, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Italy, the Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Korea-South, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Thailand, Timor (East), Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
583053-001	Intel Core i7-820QM processor with 1.73 GHz, SC turbo up to 3.06GHz, Quad 45 W
586170-001	Intel Core i7-720QM processor with 1.6 GHz, SC turbo up to 2.8 GHz, Quad 45 W
593530-001	Intel Centrino Wireless-N 1000 802.11b/g/n 1x2 WLAN module
593550-001	9-cell, 93-Whr, 2.8-Ah Li-ion battery for use with all computer models
593554-001	6-cell, 55-Whr, 2.55-Ah Li-ion battery for use with all computer models
593562-001	6-cell, 62-Whr, 2.8-Ah Li-ion battery for use with all computer models
593836-001	Broadcom 4313 802.11b/g/n 1x1 WLAN module

Spare part number	Description
593837-001	Broadcom 43225 802.11b/g/n WLAN module for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, Philippines, Poland, Portugal, Puerto Rico, Qatar, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, the United States, Uruguay, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
594187-001	Intel Core i5-520M processor with 2.4 GHz, SC turbo up to 2.93 GHz, Dual 35 W
594188-001	Intel Core i5-540M processor with 2.53 GHz, SC turbo up to 3.06 GHz, Dual 35 W
595130-001	BrightView display panel (includes display panel cable)
595131-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Etched)
597623-001	Intel Core i3-350M processor with 2.26 GHz, Dual 35 W
597624-001	Intel Core i5-430M processor with 2.26 GHz, SC turbo up to 2.53 GHz, Dual 35 W
597630-001	Backlit keyboard for use in the United States
597630-031	Backlit keyboard for use in the United Kingdom
597630-041	Backlit keyboard for use in Germany
597630-051	Backlit keyboard for use in France
597630-061	Backlit keyboard for use in Italy
597630-071	Backlit keyboard for use in Spain
597630-121	Backlit keyboard for use in French Canada
597630-131	Backlit keyboard for use in Portugal
597630-141	Backlit keyboard for use in Turkey
597630-161	Backlit keyboard for use in Latin America
597630-171	Backlit keyboard for use in Saudi Arabia

Spare part number	Description
597630-201	Backlit keyboard for use in Brazil
597630-211	Backlit keyboard for use in Hungary
597630-221	Backlit keyboard for use in the Czech Republic
597630-251	Backlit keyboard for use in Russia
597630-A41	Backlit keyboard for use in Belgium
597630-B31	Backlit keyboard for International use
597630-BA1	Backlit keyboard for use in the Adriatic Region
597630-BB1	Backlit keyboard for use in Israel
597630-BG1	Backlit keyboard for use in Switzerland
597630-DH1	Backlit keyboard for use in Norway
597630-DJ1	Backlit keyboard for use in Greece
597635-001	Keyboard for use in the United States
597635-031	Keyboard for use in the United Kingdom
597635-041	Keyboard for use in Germany
597635-051	Keyboard for use in France
597635-061	Keyboard for use in Italy
597635-071	Keyboard for use in Spain
597635-121	Keyboard for use in French Canada
597635-131	Keyboard for use in Portugal
597635-141	Keyboard for use in Turkey
597635-161	Keyboard for use in Latin America
597635-171	Keyboard for use in Saudi Arabia
597635-201	Keyboard for use in Brazil
597635-211	Keyboard for use in Hungary
597635-221	Keyboard for use in the Czech Republic
597635-251	Keyboard for use in Russia
597635-281	Keyboard for use in Thailand
597635-291	Keyboard for use in Japan
597635-A41	Keyboard for use in Belgium
597635-AB1	Keyboard for use in Taiwan
597635-AD1	Keyboard for use in Korea
597635-B31	Keyboard for international use

Spare part number	Description
597635-BA1	Keyboard for use in the Adriatic Region
597635-BB1	Keyboard for use in Israel
597635-BG1	Keyboard for use in Switzerland
597635-DH1	Keyboard for use in Norway
597635-DJ1	Keyboard for use in Greece
598856-001	2048-MB memory module (DDR3 PC3-10600 1333-MHz)
598859-001	1024-MB memory module (DDR3 PC3-10600 1333-MHz)
599092-001	4096-MB memory module (DDR3 PC3-10600 1333-MHz)
599516-001	RTC battery
600370-001	Broadcom 4313 802.11b/g/n 1x1 WiFi and 2070 Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, Philippines, Poland, Portugal, Puerto Rico, Qatar, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, the United States, Uruguay, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe

Spare part number	Description
602992-001	Ralink RT3090BC4 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, Puerto Rico, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the US Virgin Islands, the United States, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
603645-001	Bluetooth module cable and rubber kit
603647-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones, Black (includes wireless antenna transceivers and cables)
603648-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones, White (includes wireless antenna transceivers and cables)
603649-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones, Red (includes wireless antenna transceivers and cables)
603650-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones, Chrome (includes wireless antenna transceivers and cables)
603651-001	BrightView display bezel
603652-001	Black display enclosure (includes wireless antenna transceivers and cables and LED board and cable)
603653-001	White display enclosure (includes wireless antenna transceivers and cables and LED board and cable)
603654-001	Red display enclosure (includes wireless antenna transceivers and cables and LED board and cable)
603655-001	Chrome display enclosure (includes wireless antenna transceivers and cables and LED board and cable)
603656-001	BrightView Display Hinge Kit (includes left and right hinges)
603657-001	BrightView Display Cable Kit (includes display panel cable)
603658-001	Display Screw Kit
603659-001	Display Rubber Kit (includes display bezel rubber screw covers)
603660-001	Webcam/microphone module (includes cable)

Spare part number	Description
603661-001	BrightView display hinge covers
603663-001	Touchscreen display enclosure (includes wireless antenna transceivers and cables LED board and cable)
603664-001	Touchscreen Display Hinge Kit
603665-001	Touchscreen Display Cable Kit
603666-001	Touchscreen display hinge covers
603667-001	250-GB, 7200 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
603668-001	320-GB, 7200 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
603673-001	160-GB solid state drive (SSD) (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
603676-001	Hard Drive Hardware Kit (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
603677-001	LightScribe DVD±R/RW SuperMulti DL Drive
603678-001	Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive
603679-001	Plastics Kit
603680-001	Optical drive cable
603681-001	Screw Kit
603682-001	Power button board (includes cable)
603683-001	USB board (includes cable)
603684-001	Top cover for use only with etched computer models equipped with a fingerprint reader
603685-001	Top cover for use only with black computer models not equipped with a fingerprint reader
603686-001	Top cover for use only with white computer models not equipped with a fingerprint reader
603687-001	Top cover for use only with red computer models not equipped with a fingerprint reader
603688-001	Top cover for use only with chrome computer models not equipped with a fingerprint reader
603689-001	Base enclosure (includes rubber feet)
603690-001	Fan/heat sink assembly for use only with computer models equipped with UMA graphics memory
603691-001	Fan/heat sink assembly for use only with computer models equipped with discrete graphics memory and a 35 W processor
603692-001	Power connector and cable
603694-001	Speaker assembly
603696-001	Rubber feet
603697-001	Cable housing

Spare part number	Description
603785-001	640-GB, 5400 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
603787-001	750-GB, 5400 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
604787-001	Fan/heat sink assembly for use only with computer models equipped with discrete graphics memory and a 45 W processor
603788-001	1-TB, 5400 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
604804-001	Etched display enclosure (includes wireless antenna transceivers and LED board and cable)
605560-005	Atheros AR9285 802.11b/g/n 1x1 WLAN module for use with computer models in all countries and regions
612259-001	Intel Core i7-740QM processor with 1.73 GHz, SC turbo up to 2.93 GHz, Quad 45 W
612260-001	Intel Core i7-840QM processor with 1.86 GHz, SC turbo up to 3.2 GHz, Quad 45 W
613152-001	65-W AC smart adapter
613153-001	90-W AC smart adapter, PFC
613154-001	120-W AC smart adapter, PFC
613160-001	90-W AC smart adapter PFC
613161-001	65-W AC smart adapter PFC
613584-001	Intel Core i3-370M processor with 2.4 GHz, Dual 35 W
613585-001	Intel Core i5-450M processor with 2.4 GHz, SC turbo up to 2.66 GHz, Dual 35 W
613586-001	Intel Pentium P6000 processor with 1.86 GHz
613587-001	Intel Pentium P6100 processor with 2.00 GHz
614332-001	Blu-ray Writer with DVD±R/RW SuperMulti DL Drive
614333-001	Blu-ray ROM with DVD±R/RW SuperMulti DL Drive
615278-001	System board for use with computer models equipped with ATI Mobility Radeon HD5650 graphics, 1024-MB dedicated memory, and a quad-core processor
615279-001	System board for use with computer models equipped with ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a dual-core processor
615280-001	System board for use with computer models equipped with ATI Mobility Radeon HD 5470 graphics, 512-MB dedicated memory, and a dual-core processor
615281-001	System board for use with computer models equipped with Intel HM55 UMA graphics and shared memory
615932-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Midnight blue)
615933-001	Midnight blue display enclosure (includes wireless antenna transceivers and cables and LED board and cable)

Spare part number	Description
615934-001	Top cover for use only with midnight blue computer models not equipped with a fingerprint reader
619997-001	Intel® Centrino® Advanced-N + WiMAX 6250 WLAN module for use in the United States
621046-001	640-GB, 7200 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
625823-001	Intel Core i3-380M processor with 2.53 GHz, Dual 35 W
625824-001	Intel Core i5-560M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W
625825-001	Intel Core i5-580M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W
625831-001	Intel Pentium P6200 processor with 2.13 GHz
626039-001	Intel Core i5-460M processor with 2.53 GHz, SC turbo up to 2.8 GHz, Dual 35 W
629279-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Black) with WiMAX
629280-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Etched) with WiMAX
629282-001	Black display enclosure (includes wireless antenna transceivers and cables and LED board and cable) with WiMAX
629283-001	Etched display enclosure (includes wireless antenna transceivers and cables and LED board and cable) with WiMAX
629284-001	BrightView Display Cable Kit with WiMAX (includes display panel cable)
630278-001	System board for use with computer models equipped with ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a quad-core processor with WiMAX
630279-001	System board for use with computer models equipped with ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a dual-core processor with WiMAX
630280-001	System board for use with computer models equipped with ATI Mobility Radeon HD 5470 graphics, 512-MB dedicated memory, and a dual-core processor with WiMAX
630281-001	System board for use with computer models equipped with Intel HM55 UMA graphics and shared memory with WiMAX
631019-001	39.6-cm (15.6-inch) HD Touchscreen display assembly with low light VGA webcam and two microphones (Etched)
631042-001	System board for use with computer models equipped with ATI Mobility Radeon HD 6370 graphics, 512-MB dedicated memory, and a dual-core processor
631044-001	System board for use with computer models equipped with ATI Mobility Radeon HD 6550 graphics, 1024-MB dedicated memory, and a dual-core processor
633252-001	750-GB, 7200 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
633383-001	System board for use with computer models equipped with Intel HM55 UMA graphics and shared memory with Intel Core i3-350M processors
633384-001	Fan/heat sink assembly for use only with computer models equipped with UMA graphics memory and a processor

Spare part number	Description
634434-001	Thermal Pad Kit
634692-001	Intel Core i3-390M processor with 2.66 GHz, Dual 35 W
634693-001	Intel Core i5-480M processor with 2.66 GHz, SC turbo up to 2.93 GHz, Dual 35 W
634921-001	500-GB, 7200 RPM hard disk drive (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)
635372-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Rossignol Special Edition AT (Attraxion))
635373-001	39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Rossignol Special Edition KP (Koopman))
635374-001	Rossignol Special Edition AT (Attraxion) display enclosure (includes wireless antenna transceivers and cables and LED board and cable)
635375-001	Rossignol Special Edition KP (Koopman) display enclosure (includes wireless antenna transceivers and cables and LED board and cable)
635376-031	Keyboard for use in the United Kingdom (Rossignol Special Edition AT (Attraxion))
635376-041	Keyboard for use in Germany (Rossignol Special Edition AT (Attraxion))
635376-051	Keyboard for use in France (Rossignol Special Edition AT (Attraxion))
635376-061	Keyboard for use in Italy (Rossignol Special Edition AT (Attraxion))
635376-071	Keyboard for use in Spain (Rossignol Special Edition AT (Attraxion))
635376-221	Keyboard for use in the Czech Republic (Rossignol Special Edition AT (Attraxion))
635376-B31	Keyboard for international use (Rossignol Special Edition AT (Attraxion))
635376-BG1	Keyboard for use in Switzerland (Rossignol Special Edition AT (Attraxion))
635376-DH1	Keyboard for use in Norway (Rossignol Special Edition AT (Attraxion))
635378-001	Top cover for use only with Rossignol Special Edition AT (Attraxion) computer models not equipped with a fingerprint reader
635379-001	For use only with Rossignol Special Edition KP (Koopman) computer models not equipped with a fingerprint reader
635500-001	Intel Pentium P6300 processor with 2.26 GHz
636174-001	Notebook Sleeve (Rossignol Special Edition AT (Attraxion))
636175-001	Notebook Sleeve (Rossignol Special Edition KP (Koopman))
637212-001	System board for use with computer models equipped with Intel HM55 UMA graphics and shared memory with Intel Core i3-370M processors
638394-001	BrightView display bezel (Rossignol Special Edition AT (Attraxion))
638395-001	Rossignol Special Edition AT (Attraxion) Miscellaneous Display Kit

4 Removal and replacement procedures

Preliminary replacement requirements

Tools required

Use the following tools to complete the removal and replacement procedures:

- Non-magnetic screwdriver
- Phillips P0 and P1 screwdrivers
- Flat-bladed screwdriver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

△ **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

-
- △ **CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.
-

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

-
- △ **CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:
-

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing a hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage might have occurred.

An electronic device exposed to ESD might not be affected at all and can work perfectly throughout a normal cycle. Or the device might function normally for a while, then degrade in the internal layers, reducing its life expectancy.

△ **CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Use nonmagnetic tools.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

△ **CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels

Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Shut down power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive strips must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastic	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 90 screws, in ten different sizes, that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.




Item	Description	Function
(1)	Serial number (s/n)	An alphanumeric identifier that is unique to each product.

Item	Description	Function
(2)	Part number/Product number (p/n)	Provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(3)	Warranty period	Describes the duration of the warranty period for the computer.

Computer feet

The computer feet are adhesive-backed rubber pads (spare part numbers 603696-001). There are four rubber feet that attach to the base enclosure.

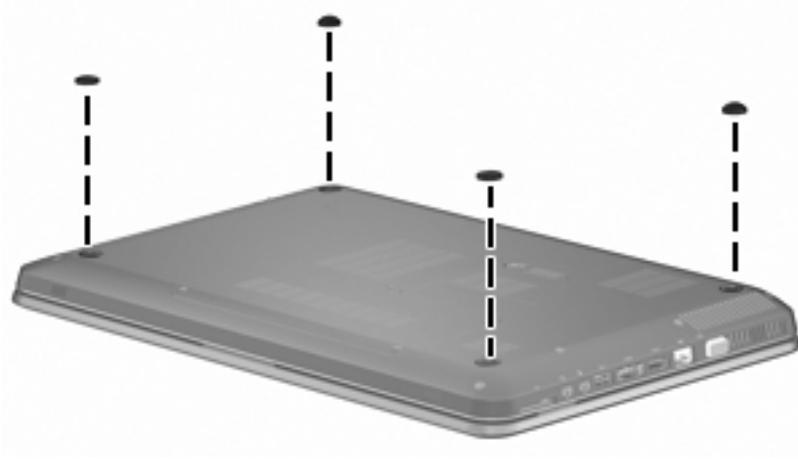

Battery


Description	Spare part number
6-cell, 55-Wh, 2.55-Ah Li-ion battery for use with all computer models	593554-001
6-cell, 62-Wh, 2.8-Ah Li-ion battery for use with all computer models	593562-001
9-cell, 93-Wh, 2.8-Ah Li-ion battery for use with all computer models	593550-001

Before disassembling the computer:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.

To remove the battery:

1. Turn the computer upside down on a flat surface.
2. Slide the battery release latch (1) to release the battery.
3. Pivot the battery (2) upward and remove it from the computer (3).

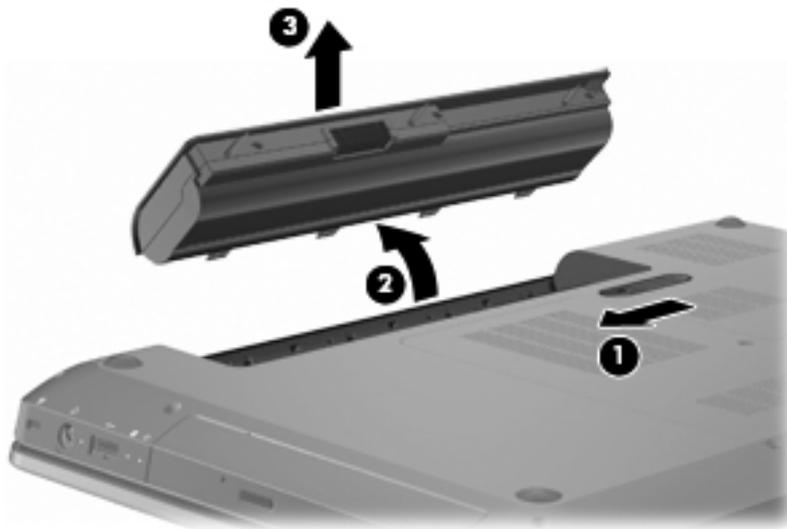

To insert the battery, insert the rear edge of the battery into the battery bay and pivot the front edge of the battery downward until it is seated. The battery release latch automatically locks the battery into place.

Hard drive cover


Description	Spare part number
Hard drive cover (included in the Plastics Kit)	603679-001

Before removing the hard drive cover:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the [Battery on page 53](#).

To remove the hard drive cover:

1. Loosen the four captive screws (1) that secure the hard drive cover to the computer.
2. Lift the hard drive cover (2) away from the computer.

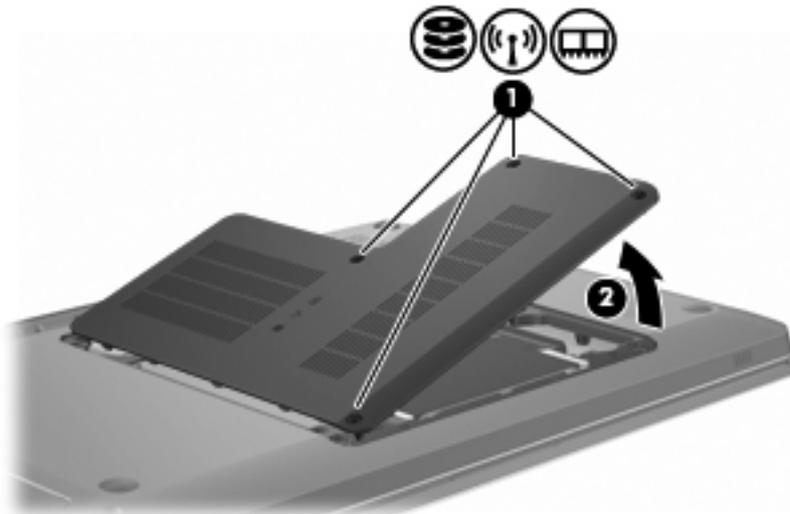

Reverse this procedure to install the hard drive cover.

Hard drive

 **NOTE:** The hard drive spare part kit includes left and right bracket rails, a connector cable, Mylar cover with tab, and four rubber isolators.

Description	Spare part number
250 GB, 7200 rpm	603667-001
320 GB, 7200 rpm	603668-001
500 GB, 7200 rpm	634921-001
640 GB, 5400 rpm	603785-001
640 GB, 7200 rpm	621046-001
750 GB, 5400 rpm	603787-001
750 GB, 7200 rpm	633252-001
1 TB, 5400 rpm	603788-001
160-GB solid state drive (SSD)	603673-001
Hard Drive Hardware Kit (includes left and right bracket rails, connector cable, Mylar cover with tab, and four rubber isolators)	603676-001


Before removing the hard drive:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the [Battery on page 53](#).
5. Remove the [Hard drive cover on page 54](#).


To remove the hard drive:

1. Position the computer with the front toward you.
2. Disconnect the hard drive cable (1) from the system board.

3. Use the Mylar tab to lift the hard drive up (2), and then slide it to the right (3) to release it from the hard drive bay.

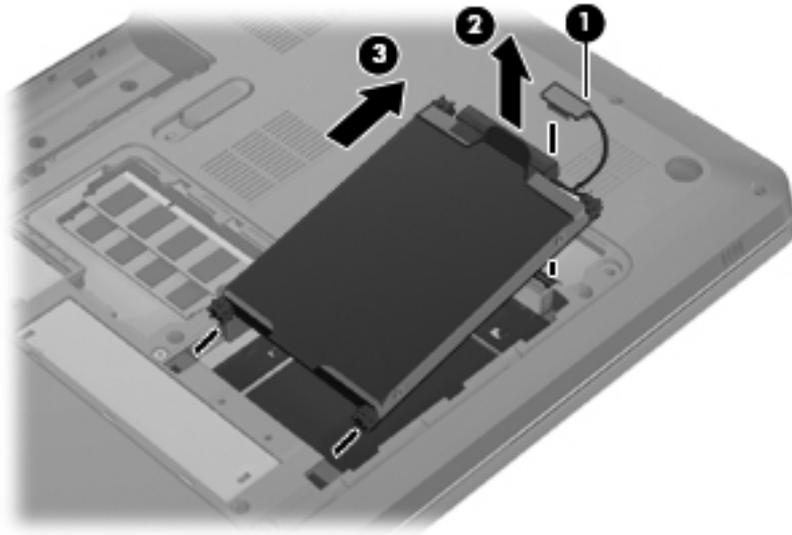

4. Remove the hard drive from the hard drive bay.
5. To replace the hard drive bracket or any of the hard drive bracket components, remove the following:
 - Hard drive connector cable (1)
 - Four rubber isolators (2)
 - Four screws (3) that secure the hard drive bracket rails and Mylar cover to the hard drive
 - Left and right hard drive bracket rails with mylar cover tabs (4)

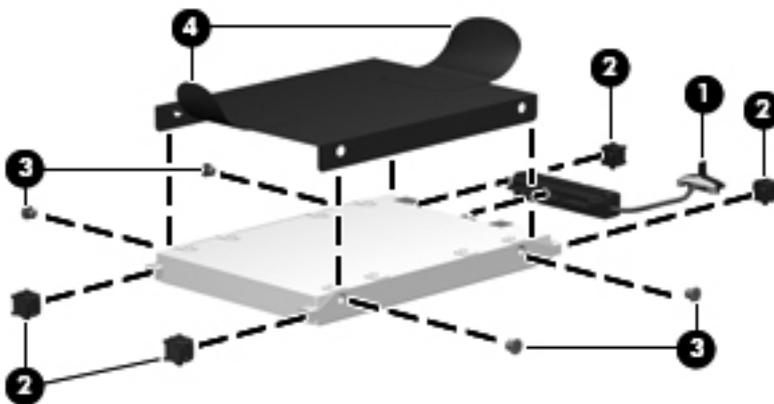

Reverse this procedure to reassemble and install the hard drive.

WLAN module

Description	Spare part number
Intel® Centrino® Advanced-N + WiMAX 6250 WLAN module for use in the United States	619997-001
Atheros AR9285 802.11b/g/n 1x1 WLAN module for use with computer models in all countries and regions	605560-005
Ralink RT3090BC4 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, the Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, Puerto Rico, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the US Virgin Islands, the United States, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	602992-001
Broadcom 4313 802.11b/g/n 1x1 WiFi and 2070 Bluetooth 2.1+EDR Combo Adapter	600370-001

Description	Spare part number
Broadcom 43225 802.11b/g/n WLAN module for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, Cayman Islands, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Peru, Philippines, Poland, Portugal, Puerto Rico, Qatar, the Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, the United States, Uruguay, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	593837-001
Broadcom 4313 802.11b/g/n 1x1 WLAN module	593836-001
Intel Centrino Wireless-N 1000 802.11b/g/n 1x2	593530-001
Broadcom 43224 802.11a/b/g/n 2x2 WLAN module for use only with computer models in Canada, the Cayman Islands, Guam, Puerto Rico, the U.S. Virgin Islands, and the United States	582564-001
Broadcom 43224 802.11a/b/g/n 2x2 WLAN module for use only with computer models in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Barbados, Belgium, Belize, Benin, Bermuda, Bhutan, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, Central African Republic, Chad, Chile, the People's Republic of China, Colombia, Comoros, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Italy, the Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Korea-South, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Palau, Panama, Papua New Guinea, Paraguay, Peru, the Philippines, Poland, Portugal, the Republic of Moldova, Romania, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, the Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, the Solomon Islands, Somalia, South Africa, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Taiwan, Tajikistan, Tanzania, Thailand, Timor (East), Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, the United Arab Emirates, the United Kingdom, Uruguay, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	582564-002

Before removing the WLAN module:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the [Battery on page 53](#).
5. Remove the [Hard drive cover on page 54](#).

To remove the WLAN module:


△ **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

1. Disconnect the WLAN antenna cables (1) from the WLAN module.

 **NOTE:** The black WLAN antenna cable is connected to the WLAN module “Main” terminal. The white WLAN antenna cable is connected to the WLAN module “Aux” terminal.

2. Remove the two screws (2) that secure the WLAN module to the computer. The edge of the module opposite the slot rises away from the computer.
3. Remove the WLAN module (3) by pulling it away from the slot at an angle.

 **NOTE:** WLAN modules are designed with a notch (4) to prevent incorrect insertion into the WLAN module slot.

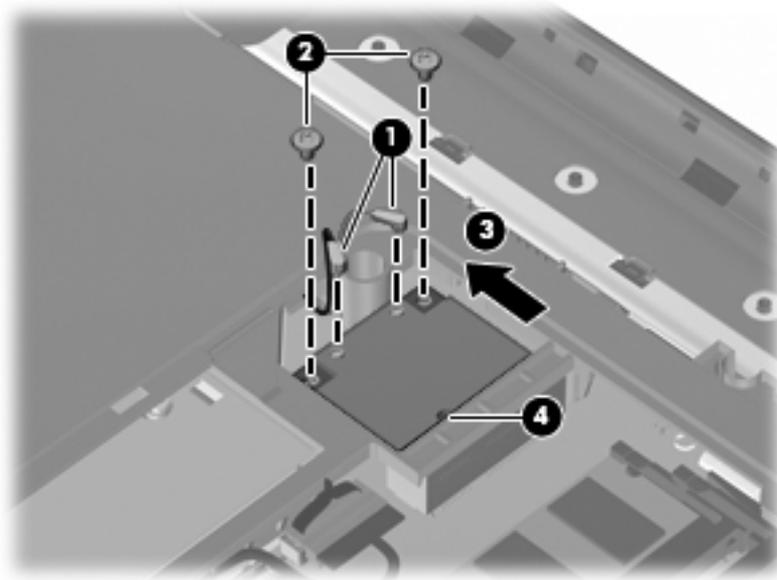

Reverse this procedure to install a WLAN module.

Memory module

Description	Spare part number
4096-MB memory module (DDR3 PC3-10600 1333-MHz)	599092-001
2048-MB memory module (DDR3 PC3-10600 1333-MHz)	598856-001
1024-MB memory module (DDR3 PC3-10600 1333-MHz)	598859-001

Before removing the memory module:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the [Battery on page 53](#).
5. Remove the [Hard drive cover on page 54](#).

To remove the memory module:


1. Position the computer with the front toward you.
2. Spread the retaining tabs (1) on each side of the memory module slot to release the memory module. The edge of the module opposite the slot rises away from the computer.



NOTE: If necessary, use a non-conductive pointed tool to spread the retaining tabs.

3. Remove the module (2) by pulling it away from the slot at an angle.

 **NOTE:** Memory modules are designed with a notch to prevent incorrect insertion into the memory module slot.

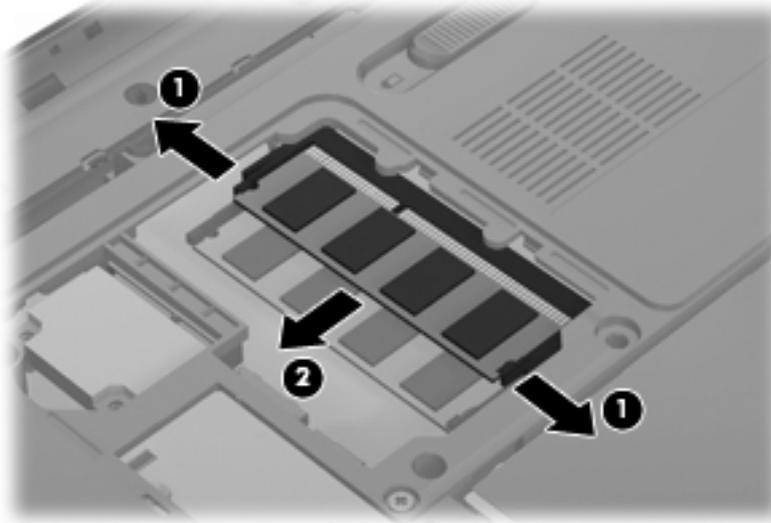

Reverse this procedure to install a memory module.


RTC battery

Description	Spare part number
RTC battery	599516-001

Before removing the RTC battery:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the [Battery on page 53](#).
5. Remove the [Hard drive cover on page 54](#).

To remove the RTC battery, use a non-conductive pointed tool to pry the RTC battery from the socket on the system board.

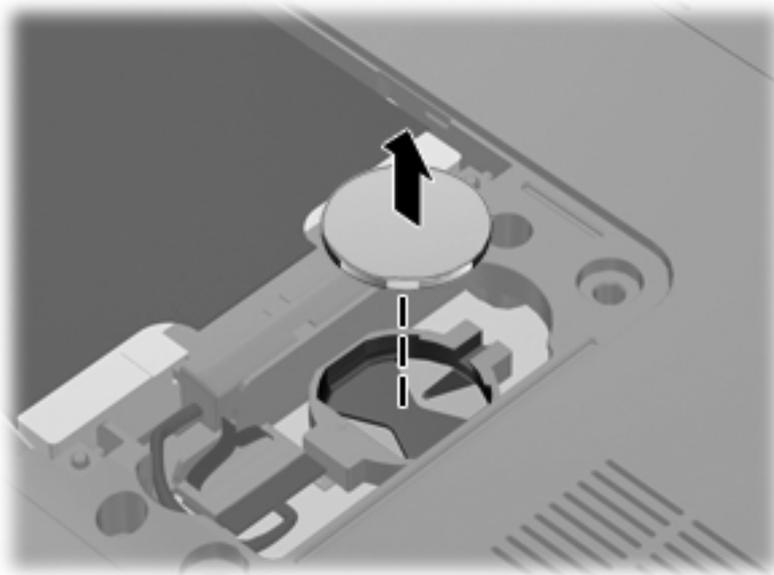

Reverse this procedure to install the RTC battery. Be sure that the RTC battery is installed with the “+” sign facing up.

Optical drive

 **NOTE:** The optical drive spare part kit includes an optical drive bezel and bracket.


Description	Spare part number
LightScribe DVD±R/RW SuperMulti DL Drive	603677-001
Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive	603678-001
Blu-ray ROM with DVD±R/RW SuperMulti DL Drive	614333-001
Blu-ray Writer with DVD±R/RW SuperMulti DL Drive	614332-001

Before removing the optical drive:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the [Battery on page 53](#).
5. Remove the [Hard drive cover on page 54](#).

To remove the optical drive:

1. Position the computer with the front toward you.
2. Remove the screw (1) that secures the optical drive to the computer.
3. Remove the optical drive (2).

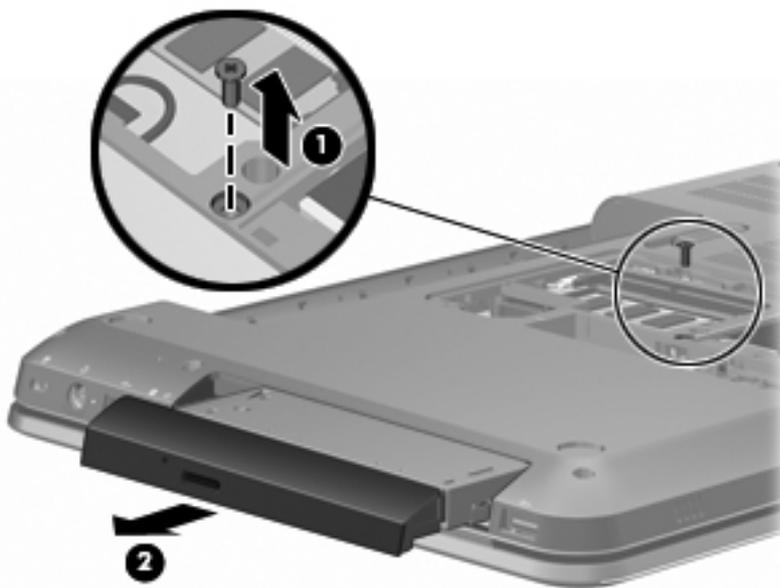

Reverse this procedure to install the optical drive.

Keyboard


For a list of keyboards available for your country or region and their spare part number, see [Computer major components on page 18](#).

Before removing the keyboard:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)

To remove the keyboard:


1. Position the computer upside down with the front toward you.
2. Remove the following screws (1):
 - Two screws that are under the hard drive cover
 - Three screws that are inside the battery bay
3. Slide the keyboard release switch (2) in the battery bay to the right.

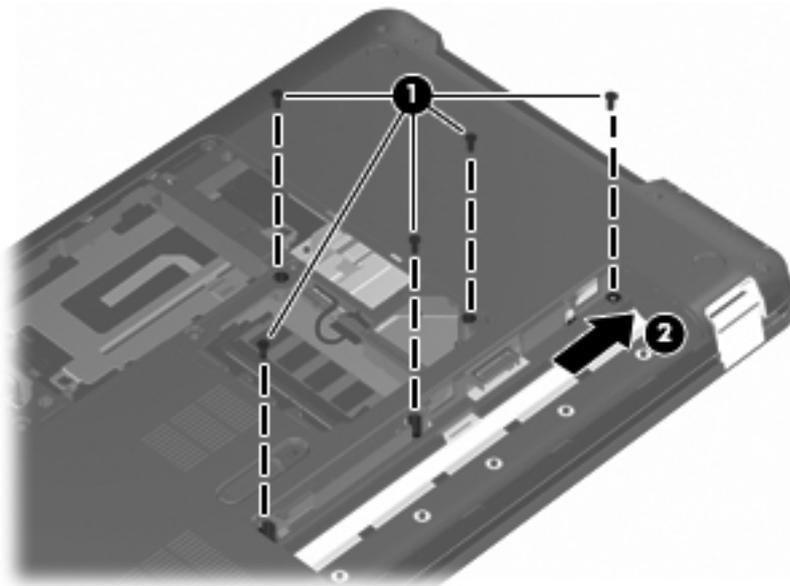

4. Turn the computer display-side up, with the front toward you, and open the computer as far as possible.
5. Lift (1) and release (2) the keyboard until the keyboard connector on the system board is accessible.



6. Release the zero insertion force (ZIF) connector (1) to which the keyboard cable is connected and disconnect the cable (2) from the system board.

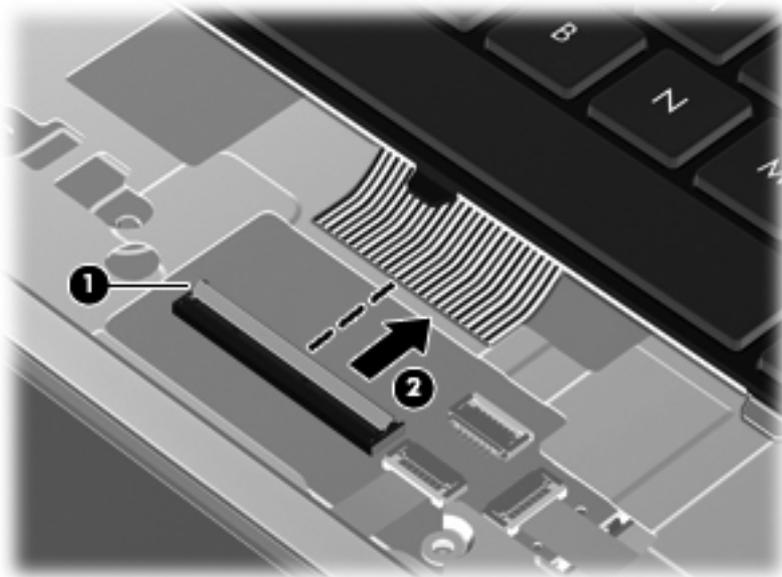

Reverse this procedure to install the switch cover and keyboard.

Top cover

 **NOTE:** The top cover spare part kit includes the TouchPad.

Description	Spare part number
For use only with etched computer models equipped with a fingerprint reader	603684-001
For use only with black computer models not equipped with a fingerprint reader	603685-001
For use only with white computer models not equipped with a fingerprint reader	603686-001
For use only with red computer models not equipped with a fingerprint reader	603687-001
For use only with chrome computer models not equipped with a fingerprint reader	603688-001
For use only with midnight blue computer models not equipped with a fingerprint reader	615934-001
For use only with Rossignol Special Edition AT (Attraxion) computer models not equipped with a fingerprint reader	635378-001
For use only with Rossignol Special Edition KP (Koopman) computer models not equipped with a fingerprint reader	635379-001


Before removing the top cover:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)


To remove the top cover:

1. Turn the computer upside down, with the front toward you.
2. Remove the following screws from the bottom of the computer:
 - Three screws from the left side
 - Four screws from the right side
 - One screw from the rear

- Two screws from the front
- One screw from near the RTC battery

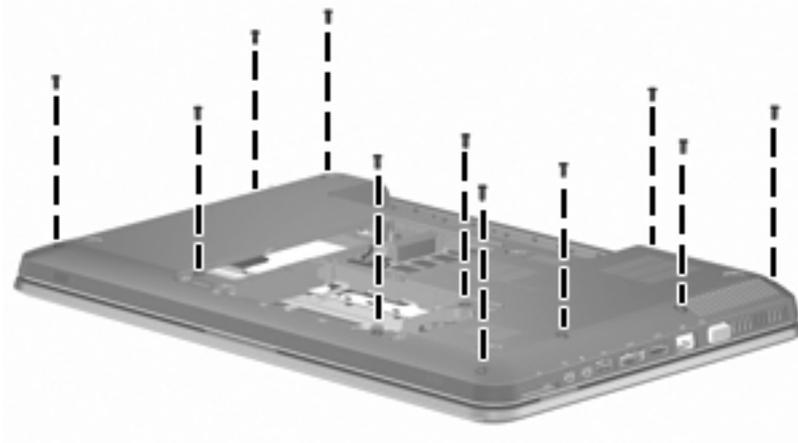

3. Turn the computer right-side up, with the front toward you.
4. Disconnect the following cables from the system board:
 - Fingerprint reader board cable (1)
 - TouchPad cable (2)
 - Power button cable (3)

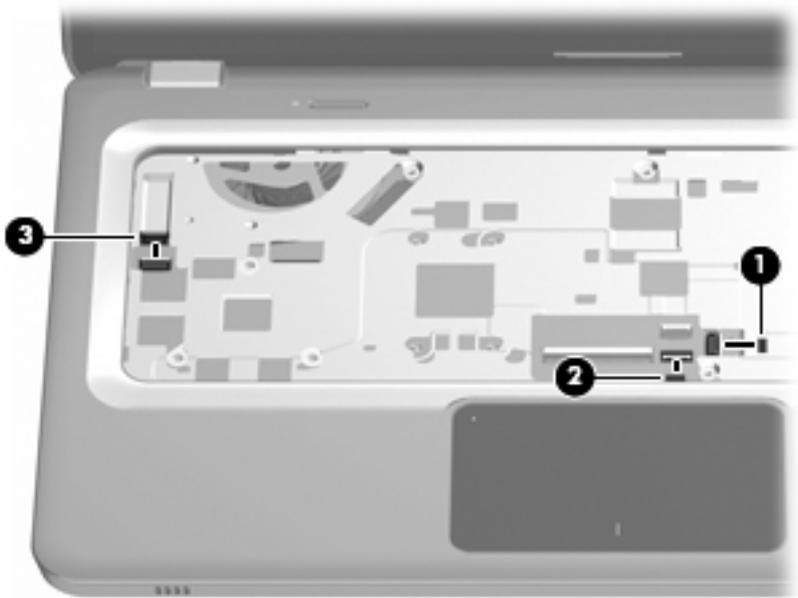

5. Lift (1) and then remove the top cover (2).



Reverse this procedure to install the top cover.

Power button board

Description	Spare part number
Power button board (includes cable)	603682-001


Before removing the power button board:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)

To remove the power button board:

1. Turn the top cover upside down with the front toward you.
2. Remove the two screws (1) that secure the power button board to the top cover.

3. Remove the power button board (2) and cable.

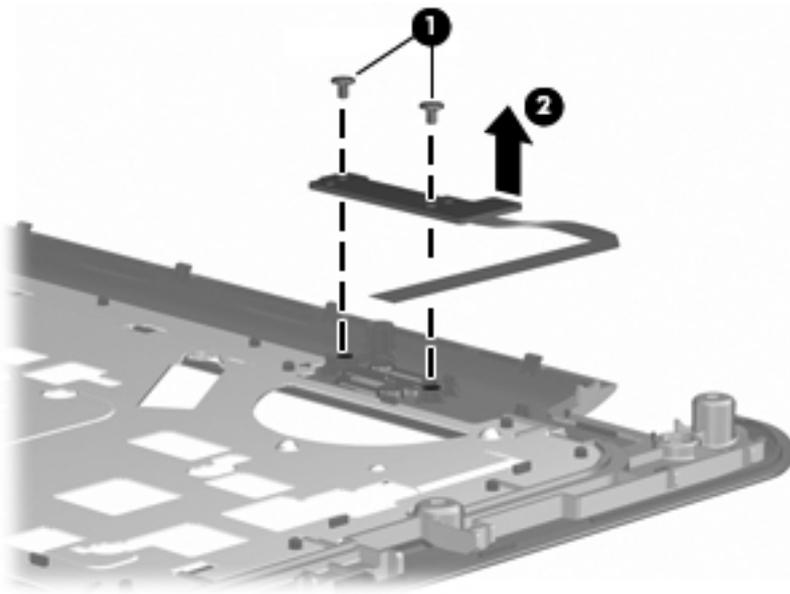

Reverse this procedure to install the power button board.

Touchscreen display assembly

 **NOTE:** The display assembly includes a webcam, two microphones, and two wireless antenna transceivers and cables.

Description	Spare part number
39.6-cm (15.6-inch) HD Touchscreen display assembly with low light VGA webcam and two microphones (Etched)	631019-001


Before removing the display assembly:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [WLAN module on page 57](#)
 - e. [Optical drive on page 63](#)
 - f. [Keyboard on page 65](#)
 - g. [Top cover on page 67](#)

To remove the Touchscreen display assembly:


1. Remove the WLAN cables (1) from under the system board.
2. Disconnect the display panel cable (2) from the system board.

3. Disconnect the touchscreen cable (3) from the system board.

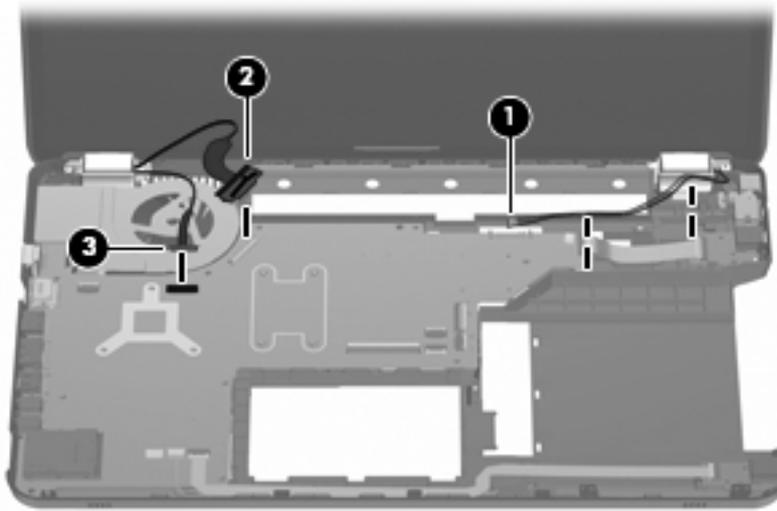


△ **CAUTION:** Support the display assembly when removing the following screws. Failure to support the display assembly might result in damage to the display assembly and other computer components.


4. Remove the three screws (1) that secure the display assembly to the computer.
5. Remove the Touchscreen display assembly (2).

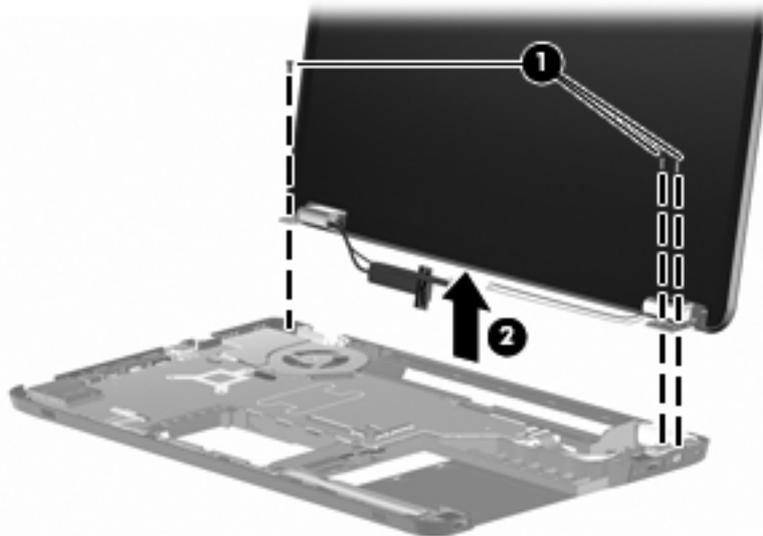

6. To replace the display enclosure or any of the display assembly internal components, remove the following:
 - Two rubber screw covers on the display bezel bottom edge (1). The display rubber screw covers are included in the Display Rubber Kit, spare part number 603659-001.
 - Two screws (2).

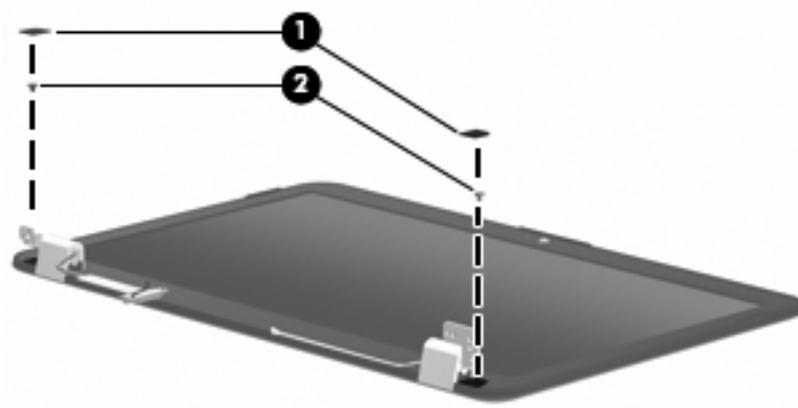


7. To remove the hinge covers, pop off the cover from each hinge.

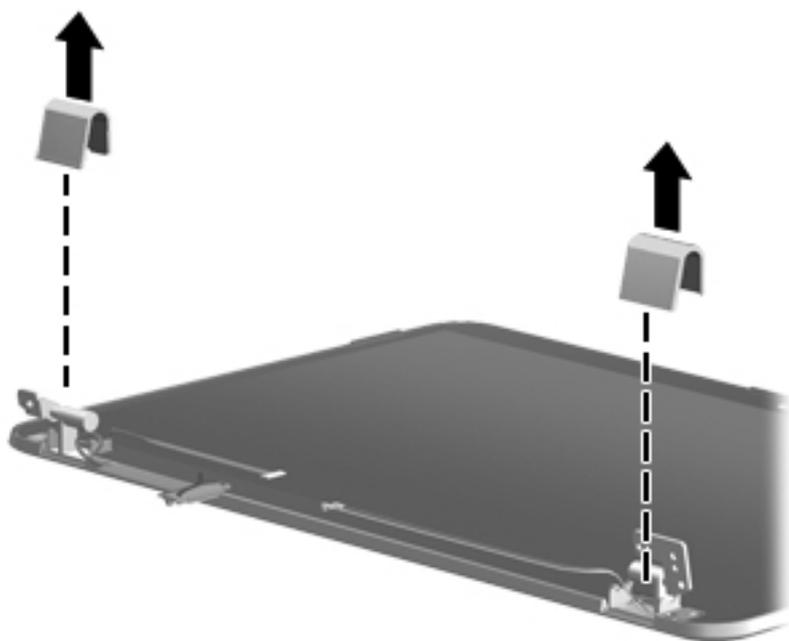


8. Pry the display panel from the display enclosure (1) by working your way around the perimeter of the panel using a flat head screwdriver.
9. Separate the display panel from the display enclosure (2).
10. Disconnect the display logo cable (3) from the display panel cable.


11. Remove the display enclosure. The Touchscreen display enclosure spare part number is 603663-001.

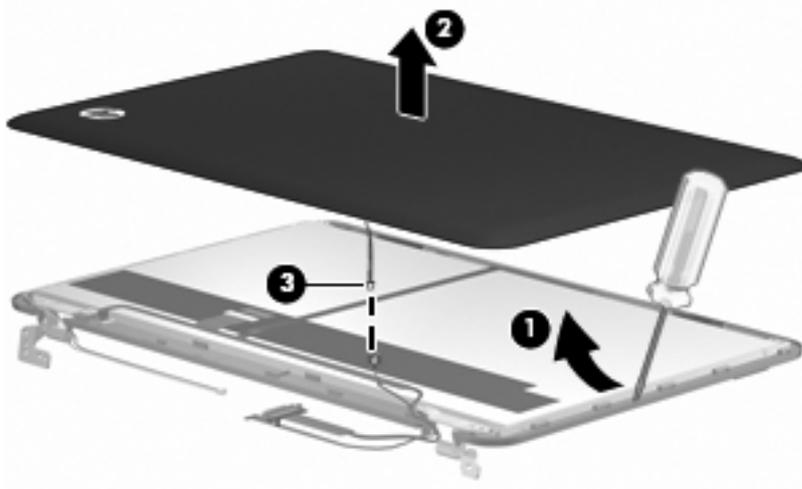

12. To replace the display hinges, remove the six screws (1) that secure the display hinges to the top of the display panel.
13. Remove the three screws (2) on the side of each display hinge.
14. Remove the display hinge (3). The display hinge is available in the Display Hinge Kit, spare part number 603664-001.

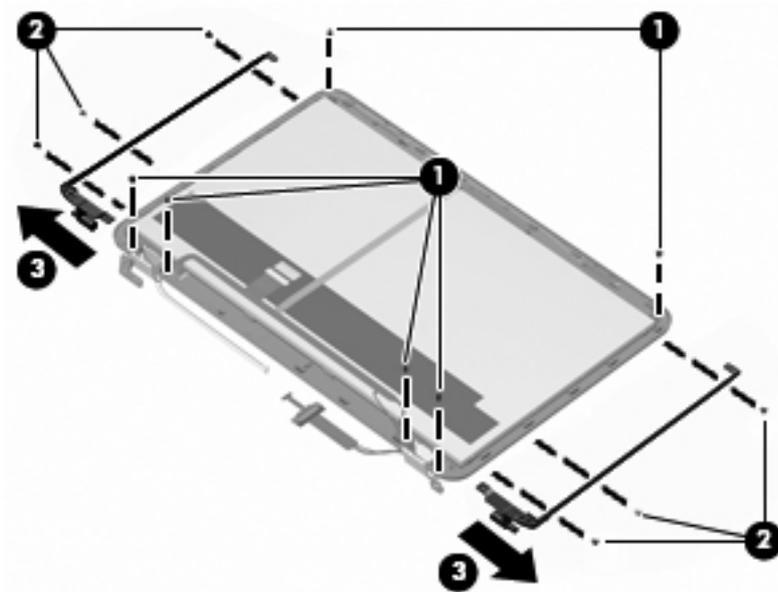

- 15.** To remove the display panel cable, remove the adhesive plastic strip (1) from the display panel cable, and then disconnect the cable (2). Lift and remove the cable (3). The Touchscreen Display Cable Kit is spare part number 603655-001.

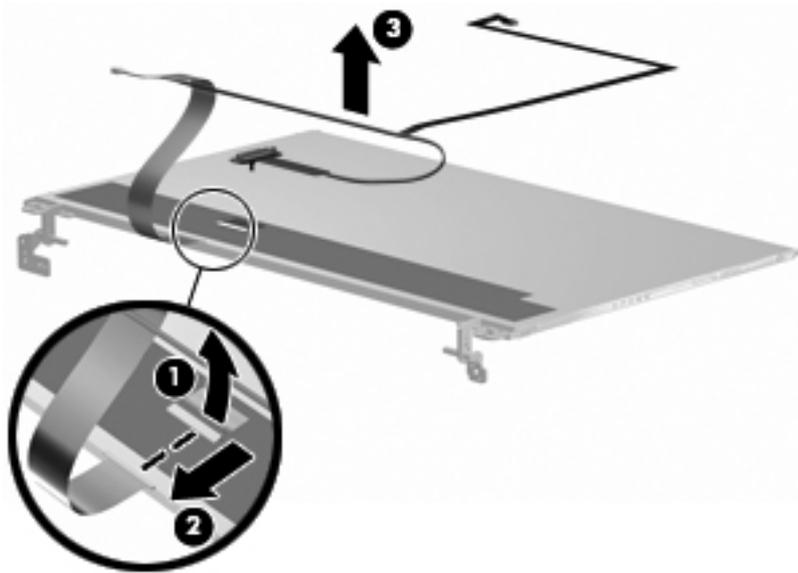

Reverse this procedure to reassemble and install the display assembly.

BrightView display assembly

 **NOTE:** The display assembly includes two wireless antenna transceivers and cables.

Description	Spare part number
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Black)	603647-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (White)	603648-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Red)	603649-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Chrome)	603650-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Midnight blue)	615932-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Black) with WiMAX	629279-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Etched) with WiMAX	629280-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Rossignol Special Edition AT (Attraxion))	635372-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Rossignol Special Edition KP (Koopman))	635373-001
39.6-cm (15.6-inch) HD BrightView display assembly with low light VGA webcam and two microphones (Etched)	595131-001

Before removing the BrightView display assembly:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [WLAN module on page 57](#)
 - e. [Optical drive on page 63](#)


f. [Keyboard on page 65](#)

g. [Top cover on page 67](#)


To remove the BrightView display assembly:

1. Remove the WLAN cables (1) from under the system board.
2. Disconnect the display panel cable (2) from the system board.


△ **CAUTION:** Support the display assembly when removing the following screws. Failure to support the display assembly might result in damage to the display assembly and other computer components.

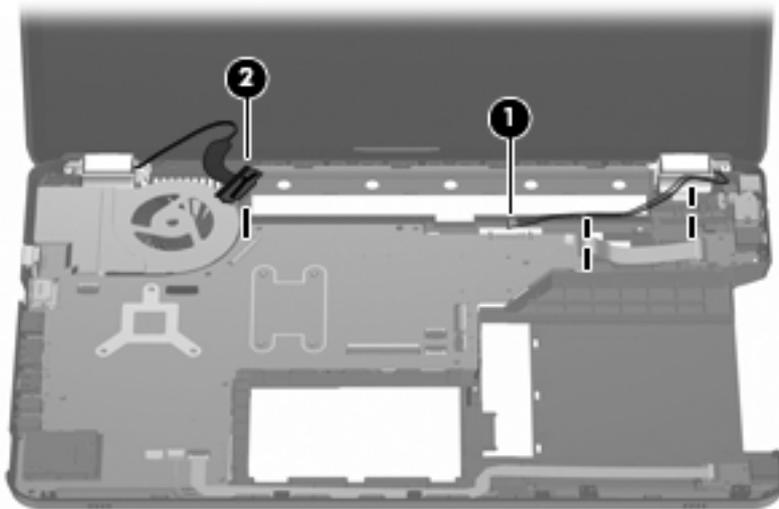


3. Remove the three screws (1) that secure the display assembly to the computer.
4. Remove the BrightView display assembly (2).

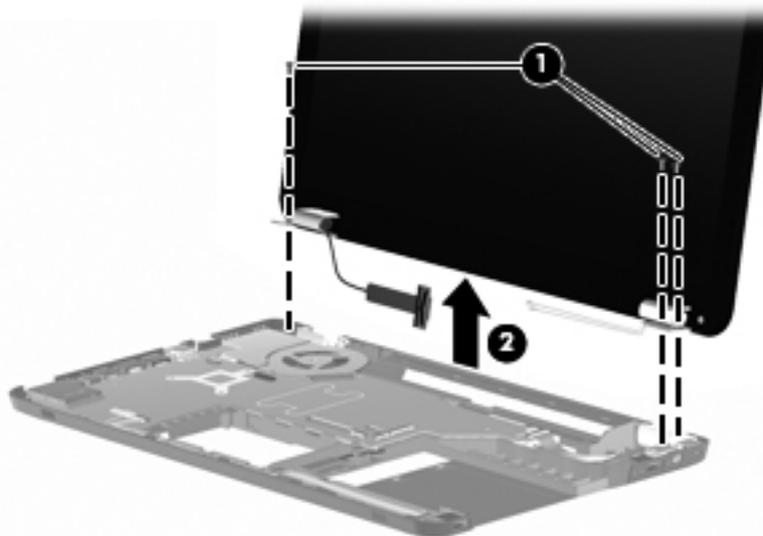

5. To replace the display bezel or any of the display assembly internal components, remove the following:
- Two rubber screw covers on the display bezel bottom edge (1).
 - Two screws (2). The display rubber screw covers are included in the Display Rubber Kit, spare part number 603659-001.

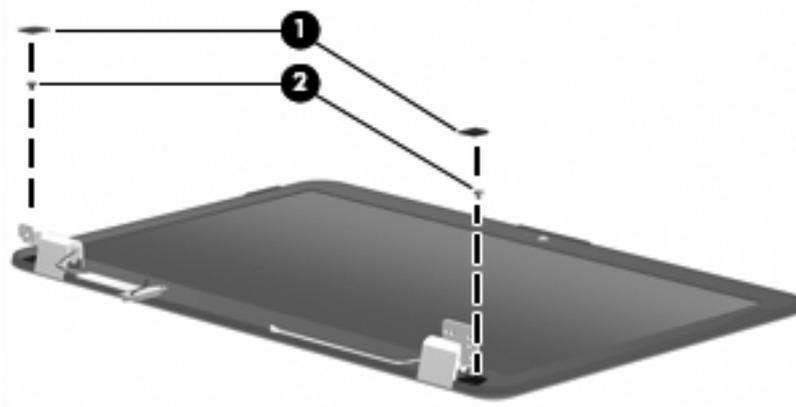


6. Remove the hinge covers by popping off the cover from each hinge.

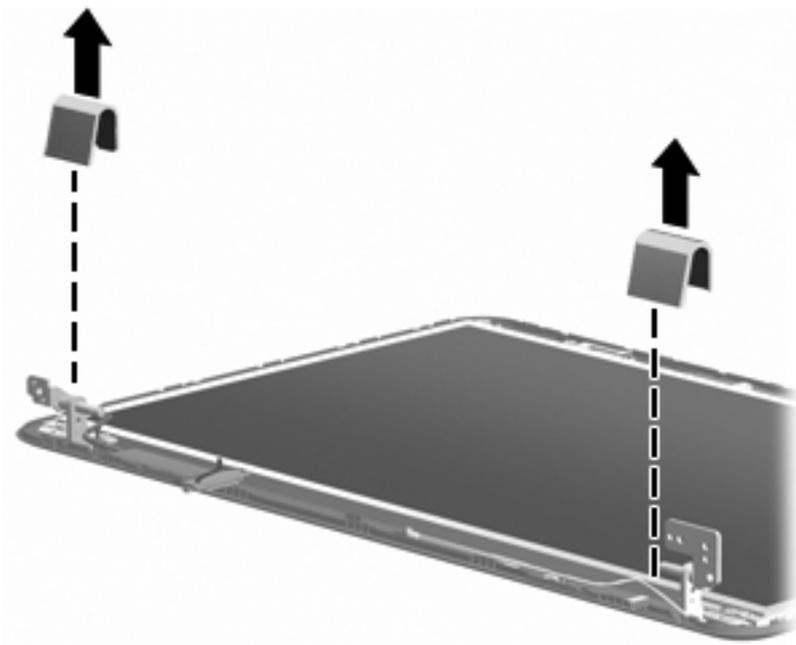


7. Flex the inside edges of the top edge (1), the left and right sides (2), and the bottom edge (3) of the display bezel until the bezel disengages from the display enclosure.

8. Remove the display bezel (4). The display bezel is available using spare part number 603651-001 or 638394-001 (Rossignol Special Edition AT (Attraxion)).

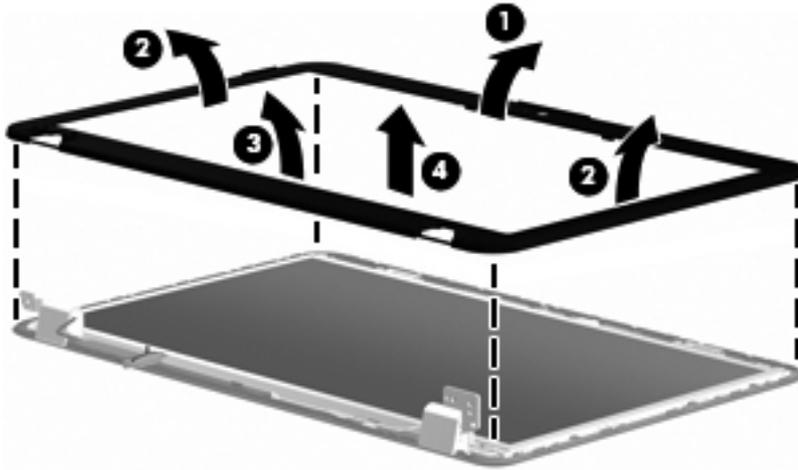


9. To replace the display panel, remove the six screws (1) from the display hinges.
10. Separate the display panel from the display enclosure (2), and then disconnect the display LED cable (3) from the display panel cable. The display panel spare part number is 559130-001.

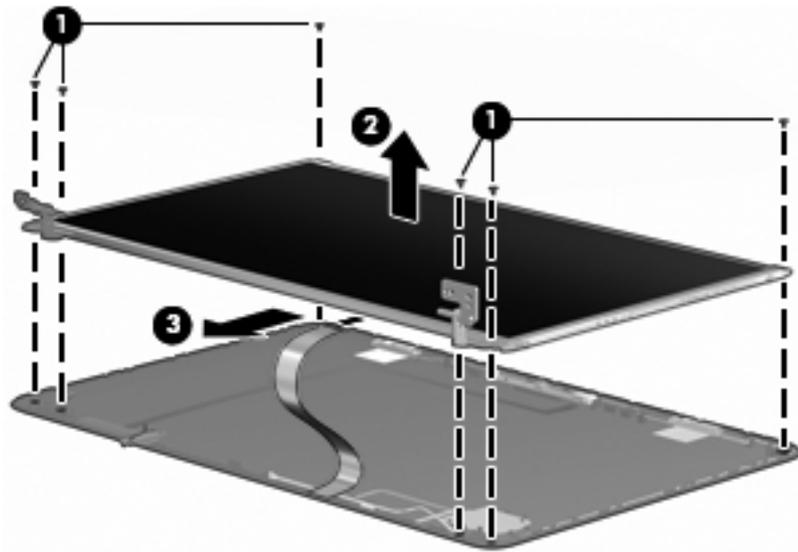


11. To replace the display hinges, remove the three screws (1) that secure each display hinge to the display panel.

- 12.** Remove the display hinges (2). The display hinges are available in the BrightView Display Hinge Kit, spare part 603656-001. The display hinge screws are available in the Display Screw Kit, spare part number 603658-001.

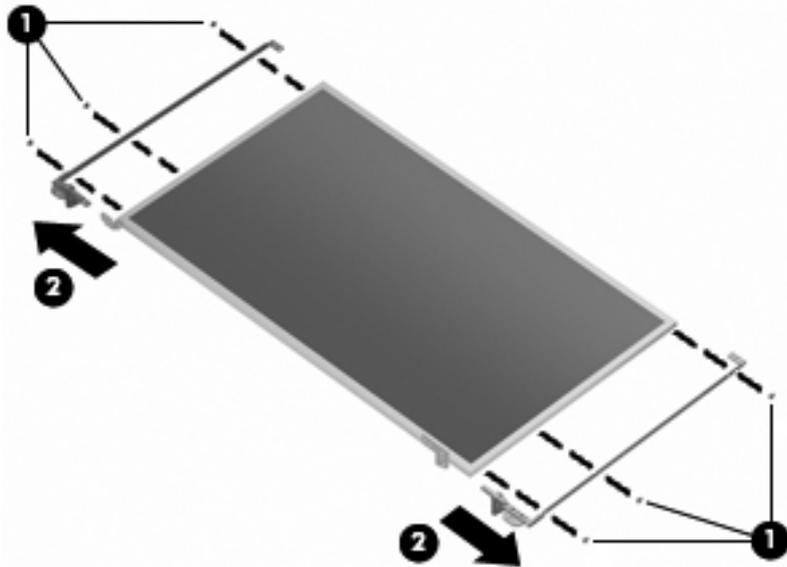

- 13.** To remove the display panel cable, remove the adhesive plastic strip (1) from the display panel cable, and then disconnect the cable (2). Lift and remove the cable (3). The BrightView Display Cable Kit is spare part number 603657-001. The BrightView Display Cable Kit with WiMAX is spare part number 629284-001.

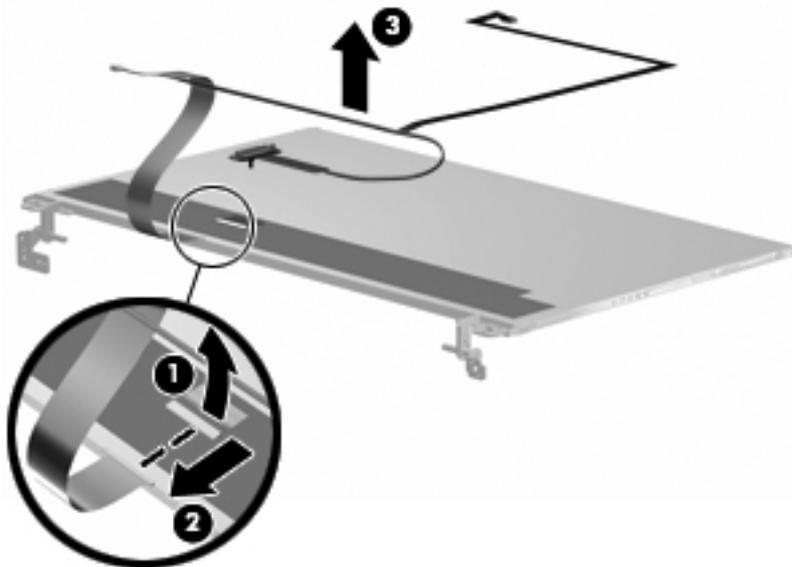

Webcam/microphone module

Description	Spare part number
Webcam/microphone module (includes cable)	603660-001

Before removing the webcam/microphone module:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.

To access the BrightView webcam/microphone module, remove the display bezel. For instructions, see [BrightView display assembly on page 77](#).

To access the Touchscreen webcam/microphone module, remove the display panel from the display enclosure. For instructions, see [Touchscreen display assembly on page 72](#).

To replace the webcam/microphone module:

1. Disconnect the webcam/microphone module cable (1) from the webcam/microphone module.
2. Remove the screw securing the webcam/microphone module to the display enclosure (2).
3. Release the webcam/microphone module from the display enclosure (3).

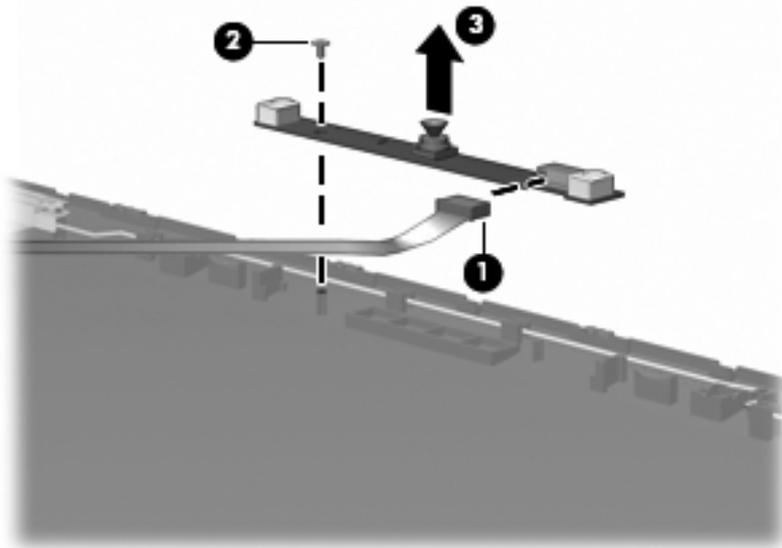

Reverse this procedure to install the webcam/microphone module.

Bluetooth module

 **NOTE:** The Bluetooth module spare part kit does not include a Bluetooth module cable. The Bluetooth module cable spare part number is 603645-001.

Description	Spare part number
Bluetooth module	537921-001


Before removing the Bluetooth module:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)

To remove the Bluetooth module:

1. Disconnect the Bluetooth module cable (1) from the system board.

2. Slide the Bluetooth module out of the slot and remove the module (2) from the computer.

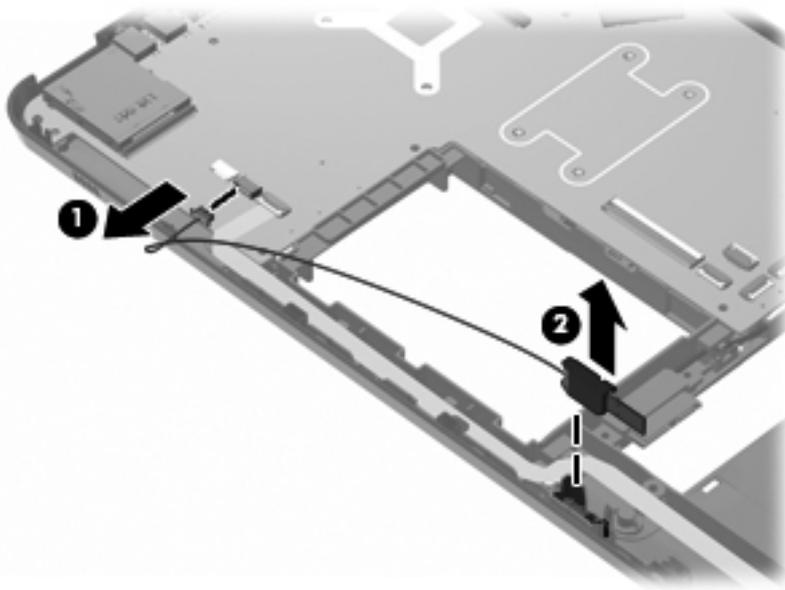

Reverse this procedure to install the Bluetooth module.

Speaker assembly

Description	Spare part number
Speaker assembly	603694-001


Before removing the speaker assembly:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)

To remove the speaker assembly:

1. Remove the three screws (1) securing the speaker assembly to the base enclosure.
2. Disconnect the speaker assembly cable (2) from the system board.

3. Remove the speaker assembly (3).

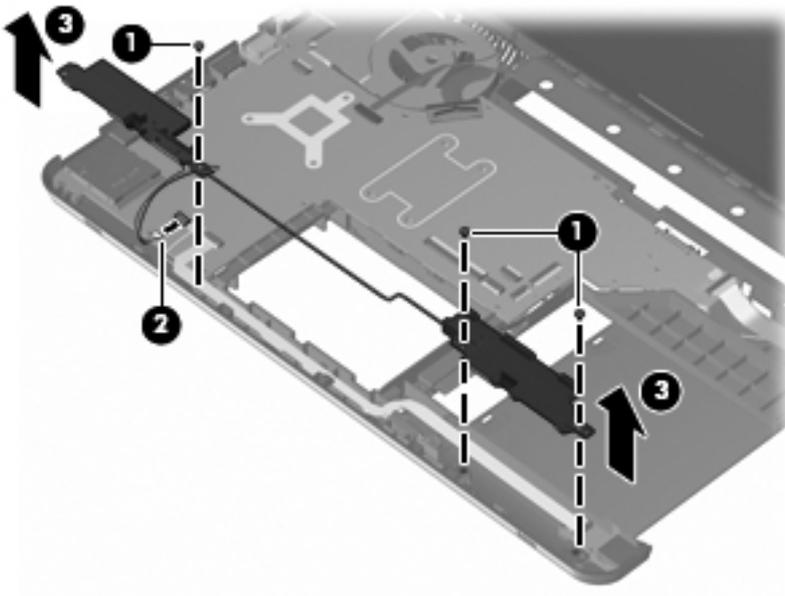

Reverse this procedure to install the speaker assembly.

USB board

Description	Spare part number
USB board (includes cable)	603683-001


Before removing the USB board:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)

To remove the USB board (right-side):


1. Disconnect the USB board cable (1) from the LIF connector on the system board.
2. Remove the screws (2) that secures the USB board to the base enclosure.

3. Remove the USB board (3) from the base enclosure.

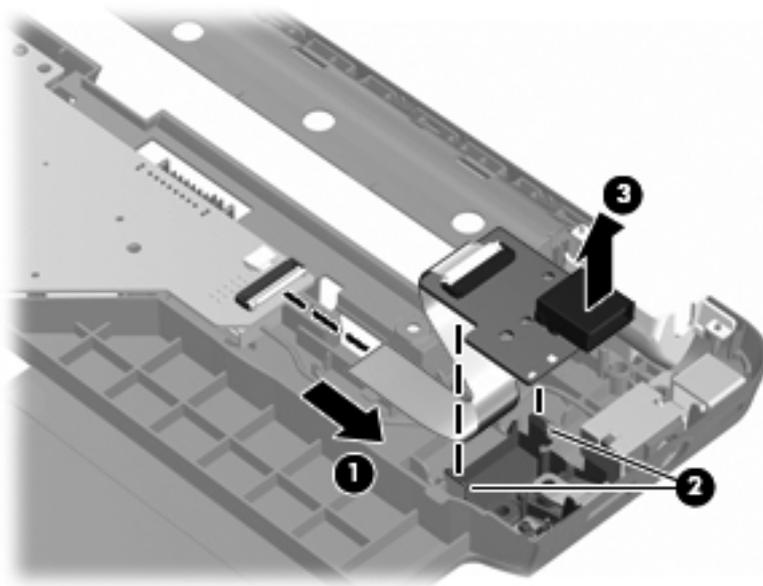

To remove the USB board (left-side):

1. Disconnect the USB board cable (1) from the LIF connector on the system board
2. Remove the USB cable from the clips (2) attaching the cable to the base enclosure.
3. Remove the USB board from the base enclosure (3).

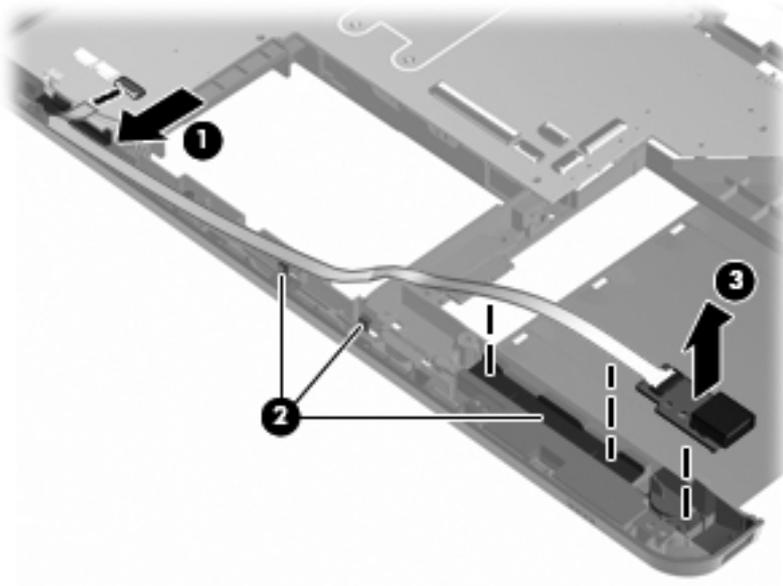

Reverse this procedure to install the USB board.

Power connector

Description	Spare part number
Power connector	603692-001


Before removing the power connector cable:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)
 - h. [USB board on page 87](#)


To remove the power connector cable:

1. Remove the two screws (1) that secures the power connector and bracket to the base enclosure.

2. Remove the bracket that secures the power connector and security cable slot (2).

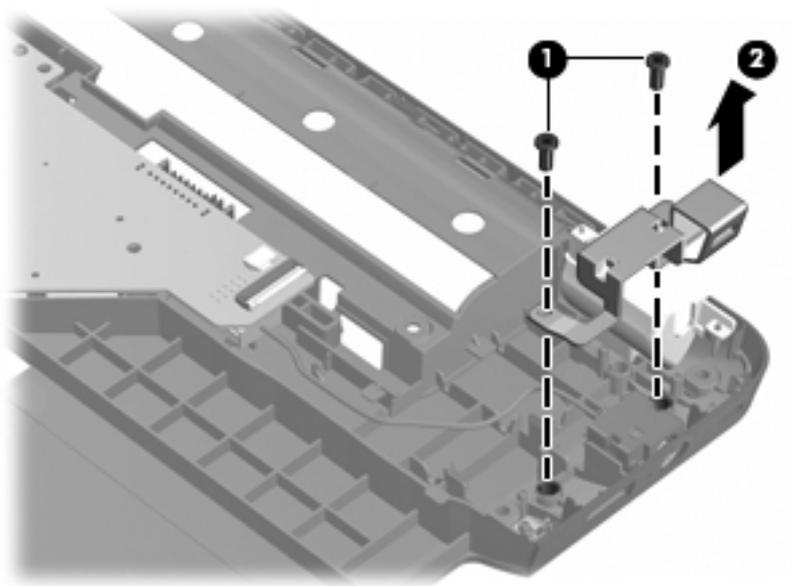

3. Remove the power connector.

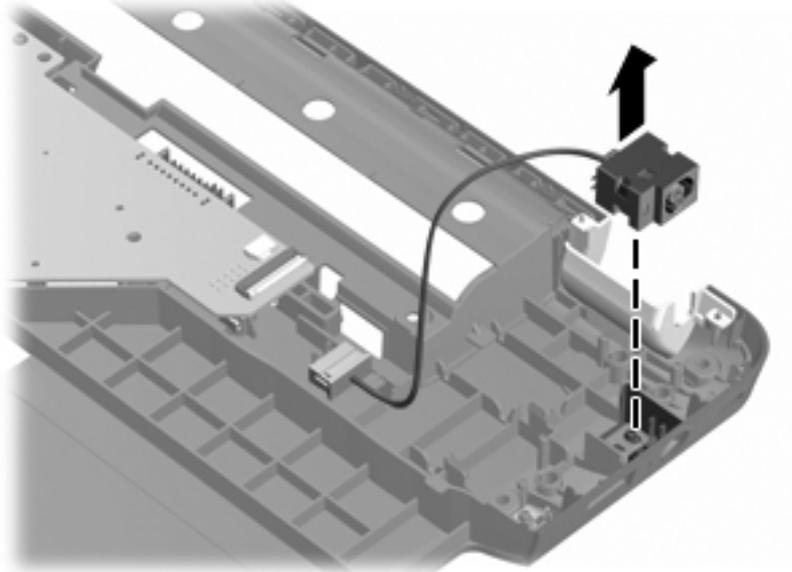

Reverse this procedure to install the power connector cable.

System board

 **NOTE:** The system board spare kit includes replacement thermal material.

Description	Spare part number
ATI Mobility Radeon HD 6550 graphics, 1024-MB dedicated memory, and a dual-core processor	631044-001
ATI Mobility Radeon HD 6370 graphics, 512-MB dedicated memory, and a dual-core processor	631042-001
ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a quad-core processor with WiMAX	630278-001
ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a quad-core processor	615278-001
ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a dual-core processor with WiMAX	630279-001
ATI Mobility Radeon HD 5650 graphics, 1024-MB dedicated memory, and a dual-core processor	615279-001
ATI Mobility Radeon HD 5470 graphics, 512-MB dedicated memory, and a dual-core processor with WiMAX	630280-001
ATI Mobility Radeon HD 5470 graphics, 512-MB dedicated memory, and a dual-core processor	615280-001
Intel HM55 UMA graphics and shared memory with Intel Core i3-370M processors	637212-001
Intel HM55 UMA graphics and shared memory with Intel Core i3-350M processors	633383-001
Intel HM55 UMA graphics and shared memory with WiMAX	630281-001
Intel HM55 UMA graphics and shared memory	615281-001

Before removing the system board:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)

When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:


- [RTC battery on page 62](#)
- [Memory module on page 60](#)
- [WLAN module on page 57](#)
- [Fan/heat sink assembly on page 95](#)
- [Processor on page 98](#)

To remove the system board:


1. Disconnect the following cables from the system board:
 - Left-side USB board cable (1)
 - Bluetooth cable (2)
 - Speaker cable (3)

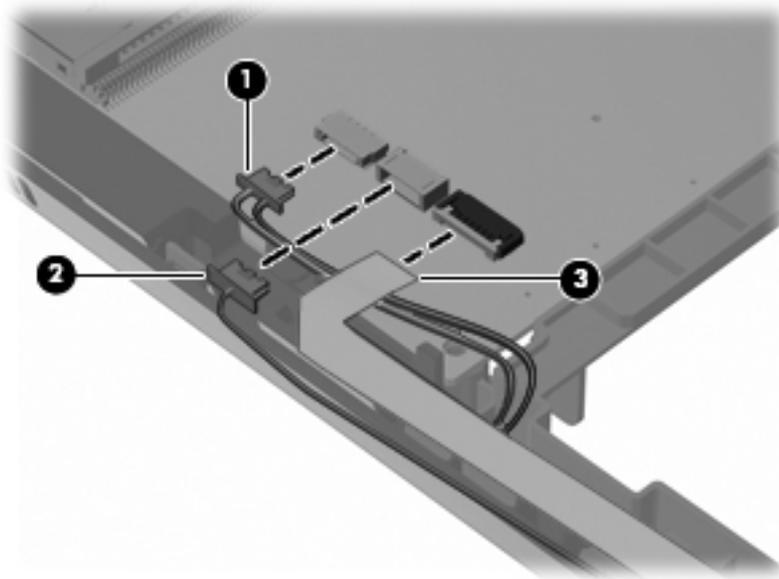

- Right-side USB board cable (1)
- Power connector cable (2)

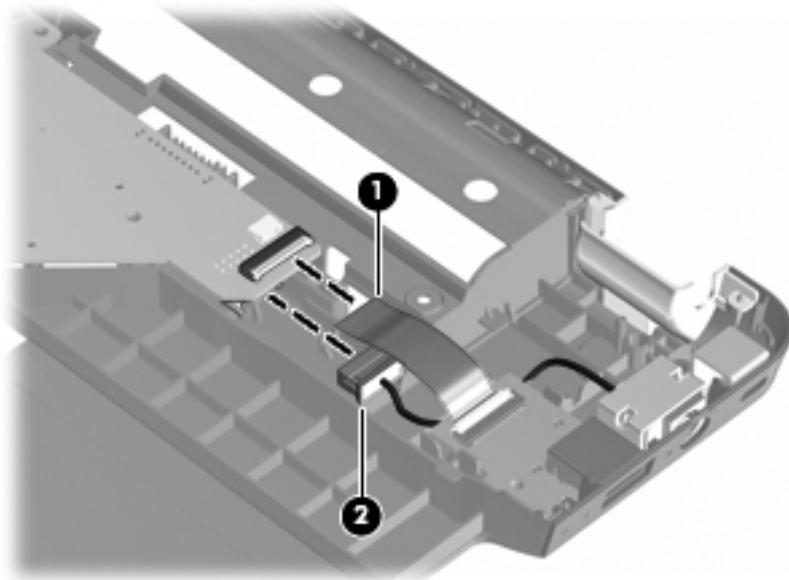


- Optical drive cable

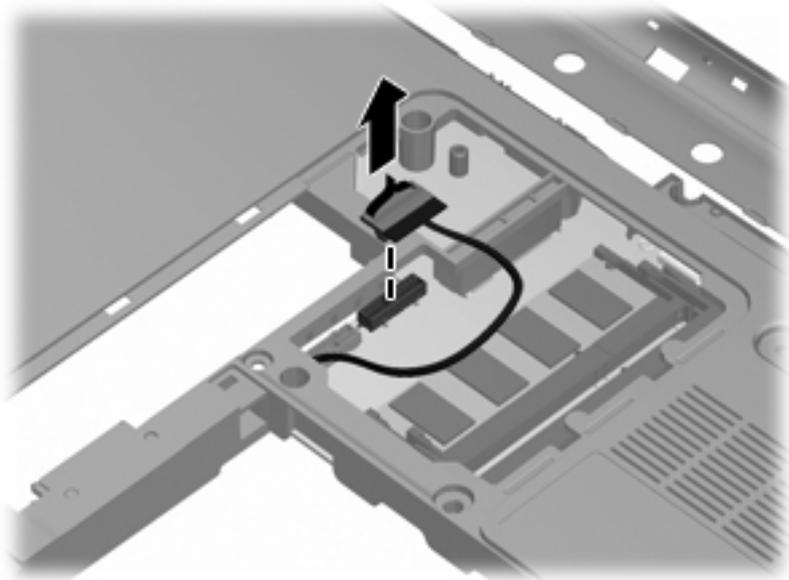

2. Lift up on the right side of the system board until it is at approximately a 45-degree angle (1).

3. Lift the system board to the right and up and out of the base enclosure (2).

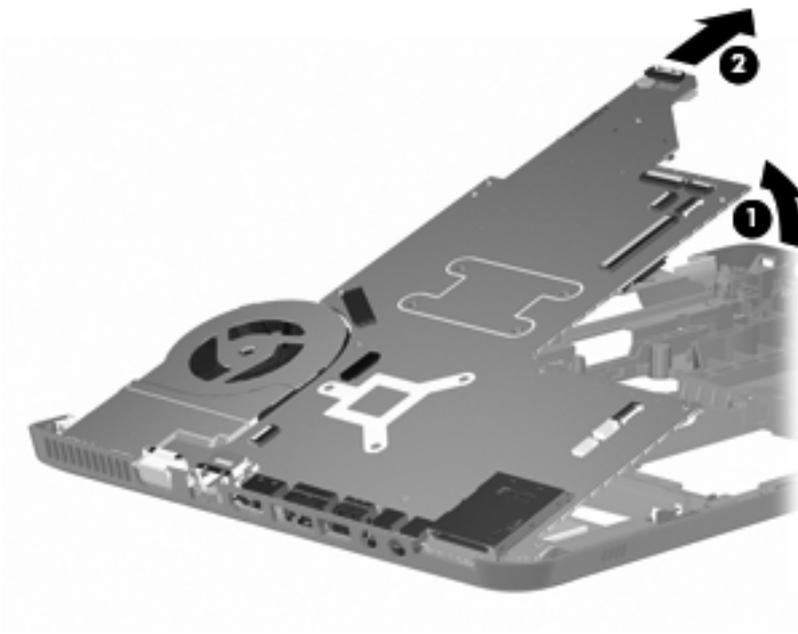

Reverse this procedure to install the system board.

Fan/heat sink assembly

 **NOTE:** The fan/heat sink assembly spare kit includes replacement thermal material.

Description	Spare part number
For use only with computer models equipped with UMA graphics memory	603690-001
For use only with computer models equipped with UMA graphics memory and a processor	633384-001
For use only with computer models equipped with discrete graphics memory and a 45 W processor	604787-001
For use only with computer models equipped with discrete graphics memory and a 35 W processor	603691-001

 **NOTE:** To properly ventilate the computer, allow at least a 7.6-cm (3-inch) clearance on the right side and rear panel of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.


Before removing the fan/heat sink assembly:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)
 - h. [USB board on page 87](#)
 - i. [System board on page 91](#)


To remove the fan/heat sink assembly:

1. Turn the system board upside down, with the expansion port three and the external monitor port toward you.
2. Loosen the seven captive screws (1) that secure the fan/heat sink assembly to the system board.
3. Remove the fan/heat sink assembly (2). Disconnect the fan cable (3) from the system board.

 **NOTE:** Due to the adhesive quality of the thermal material located between the fan/heat sink assembly and system board components, it might be necessary to move the fan/heat sink assembly from side to side to detach the assembly.

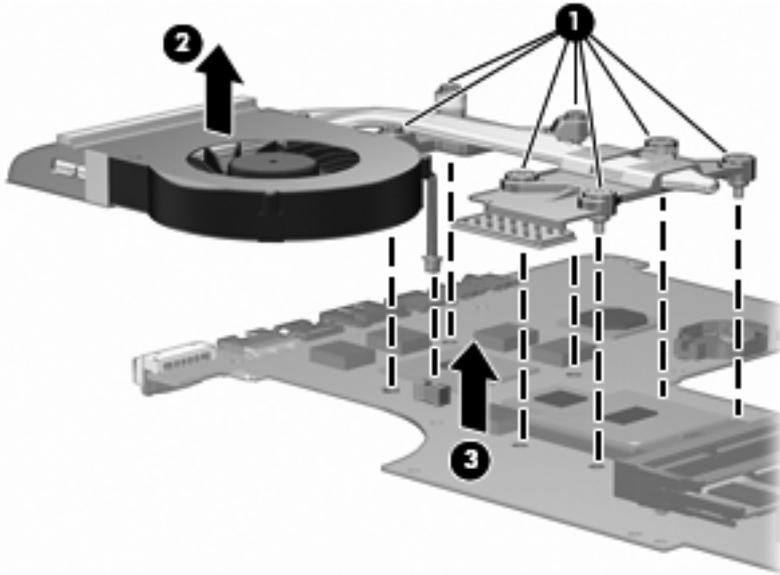

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the fan/heat sink assembly and the system board each time the fan/heat sink assembly is removed. Thermal paste is applied to the fan/heat sink assembly to correspond with components on the system board as follows: the processor (1) and (2), the Northbridge chip (3) and (4), the graphics subsystem chip (5) and (6), and three capacitors (7) and (8). Replacement thermal material is included with all fan/heat sink assembly, system board, and processor spare part kits.

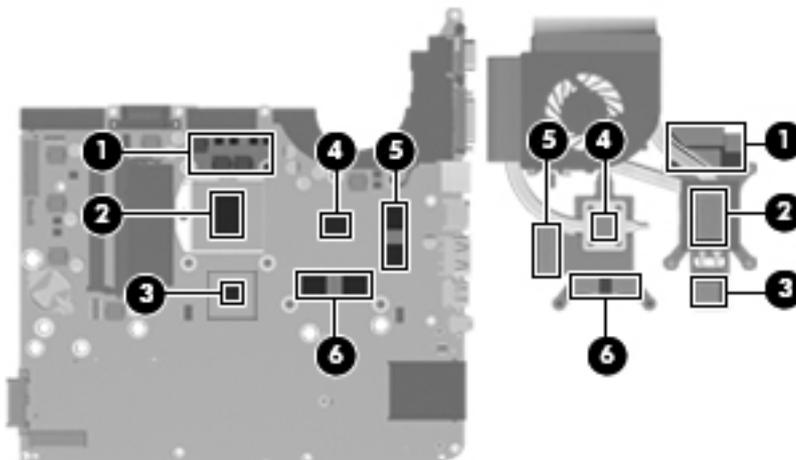

Reverse this procedure to install the fan/heat sink assembly.

Processor

 **NOTE:** The processor spare part kit includes thermal material.

Description	Spare part number
Intel Core i7-840QM processor with 1.86 GHz, SC turbo up to 3.2 GHz, Quad 45 W	612260-001
Intel Core i7-820QM processor with 1.73 GHz, SC turbo up to 3.06 GHz, Quad 45 W	583053-001
Intel Core i7-740QM processor with 1.73 GHz, SC turbo up to 2.93 GHz, Quad 45 W	612259-001
Intel Core i7-720QM processor with 1.6 GHz, SC turbo up to 2.8 GHz, Quad 45 W	586170-001
Intel Core i5-580M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W	625825-001
Intel Core i5-560M processor with 2.66 GHz, SC turbo up to 3.33 GHz, Dual 35 W	625824-001
Intel Core i5-540M processor with 2.53 GHz, SC turbo up to 3.06 GHz, Dual 35 W	594188-001
Intel Core i5-520M processor with 2.4 GHz, SC turbo up to 2.93 GHz, Dual 35 W	594187-001
Intel Core i5-480M processor with 2.66 GHz, SC turbo up to 2.93 GHz, Dual 35 W	634693-001
Intel Core i5-460M processor with 2.53 GHz, SC turbo up to 2.8 GHz, Dual 35 W	626039-001
Intel Core i5-450M processor with 2.4 GHz, SC turbo up to 2.66 GHz, Dual 35 W	613585-001
Intel Core i5-430M processor with 2.26 GHz, SC turbo up to 2.53 GHz, Dual 35 W	597624-001
Intel Core i3-390M processor with 2.66 GHz, Dual 35 W	634692-001
Intel Core i3-380M processor with 2.53 GHz, Dual 35 W	625823-001
Intel Core i3-370M processor with 2.4 GHz, Dual 35 W	613584-001
Intel Core i3-350M processor with 2.26 GHz, Dual 35 W	597623-001
Intel Pentium P6300 processor with 2.26 GHz	635500-001
Intel Pentium P6200 processor with 2.13 GHz	625831-001
Intel Pentium P6100 processor with 2.00 GHz	613587-001
Intel Pentium P6000 processor with 1.86 GHz	613586-001

Before removing the processor:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.

3. Disconnect the power from the computer by first disconnecting the power cord from the AC outlet and then disconnecting the AC adapter from the computer.
4. Remove the following components:
 - a. [Battery on page 53](#)
 - b. [Hard drive cover on page 54](#)
 - c. [Hard drive on page 55](#)
 - d. [Optical drive on page 63](#)
 - e. [Keyboard on page 65](#)
 - f. [Top cover on page 67](#)
 - g. [Touchscreen display assembly on page 72](#) or [BrightView display assembly on page 77](#)
 - h. [USB board on page 87](#)
 - i. [System board on page 91](#)
 - j. [Fan/heat sink assembly on page 95](#)

To replace the processor:

1. Turn the processor locking screw (1) one-half turn counterclockwise until you hear a click.
2. Lift the processor (2) straight up and remove it.

 **NOTE:** The gold triangle (3) on the processor must be aligned with the triangle icon (4) embossed on the processor socket when installing the processor.

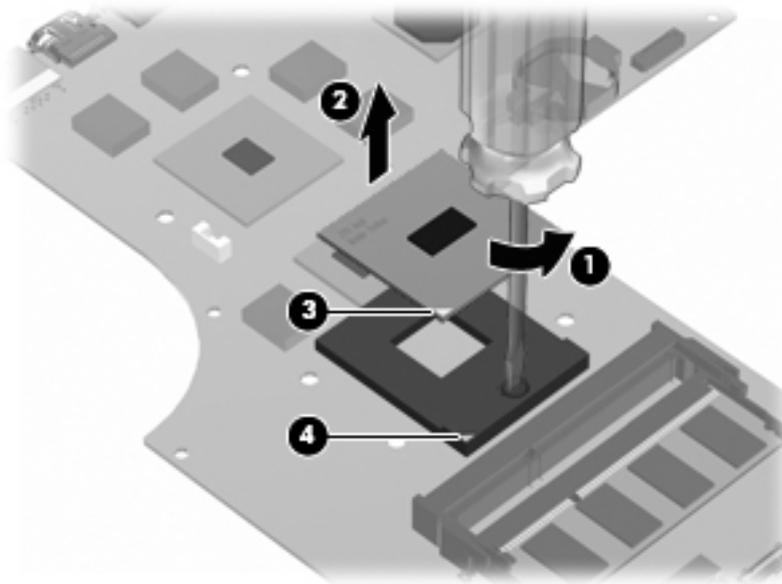

Reverse this procedure to install the processor.

5 Setup Utility (BIOS)

Starting Setup Utility

Setup Utility is a ROM-based information and customization utility is used even when the Windows operating system is not working.

 **NOTE:** The Fingerprint Reader (select models only) cannot be used to access Setup Utility.

The utility reports information about the computer and provides settings for startup, security, and other preferences.

To start Setup Utility:

1. Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **f10** key.

– or –

Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **esc** key.

2. When the Startup Menu appears, press the **f10** key.

Using Setup Utility

Changing the language of Setup Utility

To change the language of Setup Utility:

 **NOTE:** If Setup Utility is not running, begin at step 1. If Setup Utility is running, begin at step 2.

1. Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **f10** key.

– or –

Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **esc** key. When the Startup Menu appears, press the **f10** key.

2. Use the arrow keys to select **System Configuration > Language**, and then press the **enter** key.
3. Use the arrow keys to select a language, and then press the **enter** key.
4. When a confirmation prompt with your language selected is displayed, press the **enter** key.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press the **enter** key.

Changes goes into effect immediately.

Navigating and selecting in Setup Utility

Because Setup Utility is not Windows-based, it does not support the TouchPad. Navigation and selection are by keystroke.

To navigate Setup Utility:

- Use the arrow keys to choose a menu or a menu item.
- Use either the arrow keys or the **f5** or **f6** keys to choose an item in a list or to toggle a field, for example an Enable/Disable field.
- Press the **enter** key to select an item.
- Press the **esc** key to close a text box or return to the menu display.
- Press the **f1** key to display additional navigation and selection information.

Displaying system information

Use Setup Utility to view the system time and date and information that identifies the computer.

To display the system information using Setup Utility:

 **NOTE:** If Setup Utility is running, begin at step 1. If Setup Utility is not running, begin at step 2.

1. Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **f10** key.

– or –

Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **esc** key. When the Startup Menu appears, press the **f10** key.

2. Select the **Main** menu.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press the **enter** key.

Restoring default settings in Setup Utility

To restore Setup Utility default settings:

 **NOTE:** If Setup Utility is not running, begin at step 1. If Setup Utility is running, begin at step 2.

1. Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **f10** key.

– or –

Open Setup Utility by turning on or restarting the computer. When the Press the ESC key for Startup Menu screen appears, press the **esc** key. When the Startup Menu appears, press the **f10** key.

2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press the **enter** key.
3. When the Setup Confirmation screen appears, press the **enter** key.
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press the **enter** key.

Setup Utility default settings go into effect when the computer restarts.

 **NOTE:** Your password, security, and language settings are not changed when you restore the factory default settings.

Exiting Setup Utility

Exit Setup Utility with or without saving changes.

- To exit Setup Utility and save your changes from the current session:

If the Setup Utility menus are not visible, press the **esc** key to return to the menu display. Use the arrow keys to select **Exit > Exit Saving Changes**, and then press the **enter** key.

- To exit Setup Utility without saving your changes from the current session:

If the Setup Utility menus are not visible, press the **esc** key to return to the menu display. Use the arrow keys to select **Exit > Exit Discarding Changes**, and then press the **enter** key.

After either choice, the computer restarts in Windows.

Setup Utility menus

The menu tables provide an overview of Setup Utility options.

 **NOTE:** Some Setup Utility menu items might not be supported by the computer.

Main menu

Select	Function
System information	<ul style="list-style-type: none">• View and change the system time and date.• View identification information about the computer.• View specification information about the processor, memory size, system BIOS, and keyboard controller version (select models only).

Security menu

Select	Function
Administrator password	Enter, change, or delete an administrator password.
Power-On Password	Enter, change, or delete a power-on password.

System Configuration menu

Select	Function
Language Support	Change the language of Setup Utility.
Virtualization Technology (select models only)	Enable/disable the processor Virtualization Technology.
LAN Power Saving (select models only)	Enable/disable LAN Power Saving. When enabled, saves power when the computer is in DC mode.
Fan Always On	Enabled/disable Fan Always On. When enabled, the computer fan is always on.

Select	Function
Action Keys Mode	Enable/disable the Action Keys.
Boot Options	<ul style="list-style-type: none"> • POST (power-on self test) f10 and f12 Delay (sec.)—Set the delay for the f10 and f12 functions of Setup Utility in intervals of 5 seconds each (0, 5, 10, 15, 20). • HP QuickWeb— <ul style="list-style-type: none"> ◦ Enable/disable the HP QuickWeb Boot Menu during POST. ◦ Delay to boot Windows—Set the delay for the HP QuickWeb Boot Menu to 2, 3, 5, 10, 15, or 30 seconds. • CD-ROM Boot—Enable/disable boot from CD-ROM. • Floppy Boot—Enable/disable boot from diskette. • Internal Network Adapter Boot—Enable/disable boot from the internal network adapter. • Boot Order—Set the boot order for: <ul style="list-style-type: none"> ◦ Hard Drive ◦ Internal CD/DVD ROM Drive ◦ USB Diskette on Key/USB Hard Drive ◦ USB CD/DVD ROM Drive ◦ USB Floppy ◦ Network Adapter

Diagnostics menu

Select	Function
Primary Hard Disk Self Test	Run a comprehensive self-test on the hard drive.
Secondary Hard Disk Self Test (select models only)	Run a comprehensive self-test on a secondary hard drive.
Memory Test	Run a diagnostic test on the system memory.

6 Specifications

Computer specifications

	Metric	U.S.
Dimensions		
Width	37.8 cm	14.9 in
Depth	24.5 cm	9.6 in
Height (front to back)	3.2 to 3.5 cm	1.3 to 1.4 in
Diagonal	39.6 cm	15.6 in
Weight (with optical drive, hard drive, and battery)	2.5 g to 2.9 kg	5.5 lbs to 6.5 lbs
Input power		
Operating voltage	18.5 V dc @ 3.5 A - 65 W	
Operating current	3.5 A or 4.74 A	
Temperature		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.		

39.6-cm (15.6-inch) display specifications

Number of colors	Up to 262,114
Contrast ratio	500:1 (typical)
Brightness	220 nits (typical)
Pitch	0.252 × 0.252 mm
Format	1366 × 768
Configuration	RGB vertical stripe
Backlight	Edge lit
Character display	80 × 25
Total power consumption	4.7 W
Viewing angle	±45° horizontal, ±15° upper vertical, ±35° lower vertical (typical)

Hard drive specifications

	1-TB*	750-GB**	640-GB*	500-GB**	320-GB**	250-GB**	160-GB**
Dimensions							
Height	12.7 mm	9.5 mm	9.5 mm	9.5 mm	9.5 mm	9.5 mm	9.5 mm
Length	100.2 mm	100.2 mm	100.2 mm	100.35 mm	100.35 mm	100.35 mm	100.35 mm
Width	69.85 mm	69.85 mm	69.85 mm	69.85 mm	69.85 mm	69.85 mm	69.85 mm
Weight	152 g	152 g	98 g	110 g	110 g	105 g	105 g
Interface type	SATA(3 GB/sec)	SATA (3 GB/sec)	SATA (3 GB/sec)	SATA	SATA	SATA	SATA
Transfer rate							
Synchronous (maximum)	97 MB/sec	97 MB/sec	106 MB/sec	1.1 GB/sec (internal)	1.1 GB/sec (internal)	1.1 GB/sec (internal)	1.1 GB/sec (internal)
Security	ATA security	ATA security	ATA security	ATA security	ATA security	ATA security	ATA security
Seek times (typical read, including setting)							
Single track	2 ms	2 ms	1.5 ms	1.5 ms	1.5 ms	1.5 ms	1.5 ms
Average (read/write)	12/16 ms	12/16 ms	12/13 ms	11/13 ms	11/13 ms	11/13 ms	11/13 ms
Maximum	21 ms	21 ms	24 ms	22 ms	22 ms	22 ms	22 ms
Logical blocks	1,953,525,168	1,465,149,168	1,250,263,728	976,773,168	625,142,448	488,397,168	312,581,808
Disc rotational speed	5400-rpm	5400-rpm and 7200-rpm	5400-rpm and 7200-rpm	7200-rpm	7200-rpm	7200-rpm	7200-rpm
Operating temperature	0°C to 60°C (32°F to 140°F)						
*1 TB = 1 trillion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.							
**1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.							
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.							

LightScribe DVD±R/RW SuperMulti DL Drive specifications

Applicable disc	Read:	Write:
	CD-DA, CD+(E)G, CD-MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CDR, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM	CD-R and CD-RW DVD+R, DVD+RW, DVD-R, DVD-RW, DVD-RAM
Access time	CD	DVD
Random	<175 ms	<230 ms
Full stroke	< 285 ms	< 335 ms
Cache buffer	2 MB	
Data transfer rate		
24X CD-ROM	3,600 KB/sec	
8X DVD	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
8X DVD+R	10,800 KB/sec	
4X DVD+RW	5,400 KB/sec	
8X DVD-R	10,800 KB/sec	
4X DVD-RW	5,400 KB/sec	
2.4X DVD+R(9)	2,700 KB/sec	
5X DVD-RAM	6,750 KB/sec	
Transfer mode	Multiword DMA Mode	

Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive specifications

Applicable disc	Read:	Write:
	BD-ROM, BD-ROM-DL, BD-R, BD-R-DL, BD-RE, BD-RE-DL, DVD-ROM, DVD+R, DVD+R-DL, DVD+RW, DVD-R, DVD-R-DL, DVD-RW, DVD-RAM (Ver.2), CD-DA, CD-ROM (Mode 1 and mode 2), CD-ROM XA (Mode 2, form 1 and form 2), Photo CD (Single and multiple sessions), CD EXTRA, CD-R, CD-RW, CD-TEXT	DVD-RAM (Ver.2), DVD+R, DVD-R, CD-R, CD-RW
Access time	BD	DVD
Random	< 230 ms	< 180 ms
Cache buffer	8 MB	
Data transfer rate		
24X CD-ROM	3,600 KB/sec	
8X DVD	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
16X CD-RW	2,400 KB/sec	
8X DVD+R	10,800 KB/sec	
4X DVD+RW	5,400 KB/sec	
8X DVD-R	10,800 KB/sec	
4X DVD-RW	5,400 KB/sec	
2.4X DVD+R(9)	2,700 KB/sec	
5X DVD-RAM	6,750 KB/sec	
1X BD-ROM	4,500 KB/sec	
1X BD-R read	4,500 KB/sec	
1X BD-RE read	4,500 KB/sec	
Transfer mode	Multiword DMA Mode	

Blu-ray Writer with DVD±R/RW SuperMulti DL Drive

Applicable disc	Read:	Write:
	BD-ROM, BD-ROM-DL, BD-R, BD-R-DL, BD-RE, BD-RE-DL, DVD-ROM (DVD-5, DVD-9, DVD-10, and DVD-18), DVD+R, DVD+R-DL, DVD+RW, DVD-R, DVD-R-DL, DVD-RW, DVD-RAM, CD-DA, CD-ROM, CD-ROM XA, Mixed Mode CD, CD-I, CD-I Bridge (Photo CD and Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, and CD-RW), CD-R, CD-RW, CD-TEXT	BD-RE, BD-R, DVD-RAM, DVD-RW, DVD+R, DVD+R-DL, DVD-R, DVD-R-DL, CD-R, CD-RW
Access time	BD	DVD
Random	< 205 ms	< 185 ms
Cache buffer	8 MB	
Data transfer rate		
24X CD-ROM	3,600 KB/sec	
8X DVD	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
16X CD-RW	2,400 KB/sec	
8X DVD+R	10,800 KB/sec	
8X DVD+RW	10,800 KB/sec	
8X DVD-R	10,800 KB/sec	
6X DVD-RW	8,100 KB/sec	
6X DVD+R DL	8,100 KB/sec	
6X DVD-R DL	8,100 KB/sec	
5X DVD-RAM	6,750 KB/sec	
6X BD-ROM	27,000 KB/sec	
6X BD-R	27,000 KB/sec	
2X BD-RE	9,000 KB/sec	
Interface	Gen 1 SATA	

System DMA specifications

Hardware DMA	System function
DMA0	Not applicable
DMA1	Not applicable
DMA2	Not applicable
DMA3	Not applicable
DMA4	Direct memory access controller

UMA system interrupt specifications

Hardware IRQ	System function
IRQ0	System timer
IRQ1	Standard PS/2 keyboard
IRQ4	ENE CIR receiver
IRQ8	System CMOS/real-time clock
IRQ10	Intel 5 series/3400 chipset family SMBus controller — 3B30
IRQ12	Synaptics PS/2 TouchPad
IRQ13	Numeric data processor
IRQ16	Intel 5 series/3400 chipset family USB enhanced host controller — 3B3C Intel 5 series/3400 chipset family PCI express root port 2 — 3B44 Intel management engine interface
IRQ17	Intel 5 series/3400 chipset family PCI express root port 1 — 3B42
IRQ19	Intel 5 series 4 port SATA AHCI controller Intel turbo boost technology driver
IRQ21	Intel 5 series/3400 chipset family USB enhanced host controller — 3B34
IRQ22	High definition audio controller
IRQ23	HP mobile data protection sensor
IRQ81–190	Microsoft ACPI-compliant system
IRQ-2	Intel graphics media accelerator HD

Discrete system interrupt specifications

Hardware IRQ	System function
IRQ0	System timer
IRQ1	Standard PS/2 keyboard
IRQ4	ENE CIR receiver
IRQ8	System CMOS/real-time clock
IRQ10	Intel 5 series/3400 chipset family SMBus controller — 3B30
IRQ12	Synaptics PS/2 TouchPad
IRQ13	Numeric data processor
IRQ16	Intel 5 series/3400 chipset family USB enhanced host controller — 3B3C
	Intel 5 series/3400 chipset family PCI express root port 2 — 3B44
	Intel management engine interface
	Intel processor PCI express root port 1 — D138
IRQ17	High definition audio controller
	Intel 5 series/3400 chipset family PCI express root port 1 — 3B42
IRQ19	Intel 5 series 4 port SASTA AHCI controller
IRQ21	Intel 5 series/3400 chipset family USB enhanced host controller — 3B34
IRQ22	High definition audio controller
IRQ23	HP mobile data protection sensor
IRQ81–190	Microsoft ACPI-compliant system
IRQ-2	EG MADISON

Switchable graphics system interrupt specifications

Hardware IRQ	System function
IRQ0	System timer
IRQ1	Standard PS/2 keyboard
IRQ4	ENE CIR receiver
IRQ8	System CMOS/real-time clock
IRQ10	Intel 5 series/3400 chipset family SMBus controller — 3B30
IRQ12	Synaptics PS/2 TouchPad
IRQ13	Numeric data processor
IRQ16	Intel 5 series/3400 chipset family USB enhanced host controller — 3B3C
	Intel 5 series/3400 chipset family PCI express root port 2 — 3B44
	Intel management engine interface
	Intel Graphics Media Accelerator HD
	Intel processor PCI express root port 1 — 0045
IRQ17	High definition audio controller
	Intel 5 series/3400 chipset family PCI express root port 1 — 3B42
IRQ19	Intel 5 series 4 port SASTA AHCI controller
	Intel Turbo Boost technology drive
IRQ21	Intel 5 series/3400 chipset family USB enhanced host controller — 3B34
IRQ22	High definition audio controller
IRQ23	HP mobile data protection sensor
IRQ81–190	Microsoft ACPI-compliant system
IRQ-3	ATI Mobility Radeon HD 5470
IRQ-2	Intel Wifi Link 1000 BGN

Switchable graphics system I/O address specifications

I/O address (hex)	System function (shipping configuration)
00 - 1F	DMA controller
00 - 1F	PCI bus
20 - 21	Programmable interrupt controller
24 - 25	Programmable interrupt controller
28 - 29	Programmable interrupt controller
2C - 2D	Programmable interrupt controller
2E - 2F	Motherboard resources
30 - 31	Programmable interrupt controller
34 - 35	Programmable interrupt controller
38 - 39	Programmable interrupt controller
3C - 3D	Programmable interrupt controller
40 - 43	System Timer
4E - 4F	Motherboard resources
50 - 53	System timer
60	Standard PS/2 keyboard
61	Motherboard resources
62	Microsoft ACPI-compliant embedded controller
63	Motherboard resources
64	Standard PS/2 keyboard
65	Motherboard resources
66	Microsoft ACPI-compliant embedded controller
67	Motherboard resources
70 - 77	System CMOS/real time clock
70 - 77	Motherboard resources
80	Motherboard resources
81 - 91	DMA controller
92	Motherboard resources
93 - 9F	DMA controller
A0 - A1	Programmable interrupt controller

I/O address (hex)	System function (shipping configuration)
A4 - A5	Programmable interrupt controller
A8 - A9	Programmable interrupt controller
AC - AD	Programmable interrupt controller
B0 - B1	Programmable interrupt controller)
B2 - B3	Motherboard resources
B4 - B5	Programmable interrupt controller
B8 - B9	Programmable interrupt controller
BC - BD	Programmable interrupt controller
C0 - DF	DMA controller
F0	Numeric data processor
380 - 38E	Motherboard resources
3B0 - 3BB	Intel Graphics Media Accelerator HD
3C0 - 3DF	Intel Graphics Media Accelerator HD
400 - 47F	Motherboard resources
4D0 - 4D1	Programmable interrupt controller
500 - 57F	Motherboard resources
680 - 69F	Motherboard resources
800 - 80F	Motherboard resources
D00 - FFFF	PCI bus
164E - 164F	Motherboard resources
2000 - 2FFF	Intel 5 Series/3400 Series Chipset Family PCI Express Root Port 2 - 3B44
3000 - 3FFF	Intel 5 Series/3400 Series Chipset Family PCI Express Root Port 2 - 3B42
4000 - 4FFF	Intel processor PCI Express Root Port - 0045
4F00 - 4FFF	ATI Mobility Radeon HD 5470
5000 - 501F	Intel 5 Series/3400 Series Chipset Family SMBus Controller - 3B42
5020 - 503F	Intel 5 Series 8 Port SATA AHCI controller
5040 - 5047	Intel 5 Series 6 Port SATA AHCI controller
5048 - 504F	Intel 5 Series 4 Port SATA AHCI controller
5050 - 5057	Intel Graphics Media Accelerator HD
5058 - 505B	Intel 5 Series 7 Port SATA AHCI controller
505C - 505F	Intel 5 Series 5 Port SATA AHCI controller

I/O address (hex)	System function (shipping configuration)
FFFF - FFFF	Motherboard resources
FFFF - FFFF	Motherboard resources

UMA system I/O address specifications

I/O address (hex)	System function (shipping configuration)
00 - 1F	DMA controller
00 - 1F	PCI bus
20 - 21	Programmable interrupt controller
24 - 25	Programmable interrupt controller
28 - 29	Programmable interrupt controller
2C - 2D	Programmable interrupt controller
2E - 2F	Motherboard resources
30 - 31	Programmable interrupt controller
34 - 35	Programmable interrupt controller
38 - 39	Programmable interrupt controller
3C - 3D	Programmable interrupt controller
40 - 43	System Timer
4E - 4F	Motherboard resources
50 - 53	System timer
60	Standard PS/2 keyboard
61	Motherboard resources
62	Microsoft ACPI-compliant embedded controller
63	Motherboard resources
64	Standard PS/2 keyboard
65	Motherboard resources
66	Microsoft ACPI-compliant embedded controller
67	Motherboard resources
70 - 77	System CMOS/real time clock
70 - 77	Motherboard resources
80	Motherboard resources
81 - 91	DMA controller
92	Motherboard resources
93 - 9F	DMA controller
A0 - A1	Programmable interrupt controller
A4 - A5	Programmable interrupt controller

I/O address (hex)	System function (shipping configuration)
A8 - A9	Programmable interrupt controller
AC - AD	Programmable interrupt controller
B0 - B1	Programmable interrupt controller
B2 - B3	Motherboard resources
B4 - B5	Programmable interrupt controller
B8 - B9	Programmable interrupt controller
BC - BD	Programmable interrupt controller
C0 - DF	DMA controller
F0	Numeric data processor
380 - 38E	Motherboard resources
3B0 - 3BB	Intel Graphics Media Accelerator HD
3C0 - 3DF	Intel Graphics Media Accelerator HD
400 - 47F	Motherboard resources
4D0 - 4D1	Programmable interrupt controller
500 - 57F	Motherboard resources
680 - 69F	Motherboard resources
800 - 80F	Motherboard resources
D00 - FFFF	PCI bus
164E - 164F	Motherboard resources
2000 - 2FFF	Intel 5 Series/3400 Series Chipset Family PCI Express Root Port 2 - 3B44
3000 - 3FFF	Intel 5 Series/3400 Series Chipset Family PCI Express Root Port 2 - 3B42
4000 - 401F	Intel 5 Series/3400 Series Chipset Family SMBus Controller - 3B30
4020 - 403F	Intel 5 Series 8 Port SATA AHCI controller
4040 - 4047	Intel 5 Series 6 Port SATA AHCI controller
4048 - 404F	Intel 5 Series 4 Port SATA AHCI controller
4050 - 4057	Intel Graphics Media Accelerator HD
4058 - 405B	Intel 5 Series 7 Port SATA AHCI controller
405C - 405F	Intel 5 Series 5 Port SATA AHCI controller
FFFF - FFFF	Motherboard resources
FFFF - FFFF	Motherboard resources

Discrete system I/O address specifications

I/O address (hex)	System function (shipping configuration)
00 - 1F	DMA controller
00 - 1F	PCI bus
20 - 21	Programmable interrupt controller
24 - 25	Programmable interrupt controller
28 - 29	Programmable interrupt controller
2C - 2D	Programmable interrupt controller
2E - 2F	Motherboard resources
30 - 31	Programmable interrupt controller
34 - 35	Programmable interrupt controller
38 - 39	Programmable interrupt controller
3C - 3D	Programmable interrupt controller
40 - 43	System Timer
4E - 4F	Motherboard resources
50 - 53	System timer
60	Standard PS/2 keyboard
61	Motherboard resources
62	Microsoft ACPI-compliant embedded controller
63	Motherboard resources
64	Standard PS/2 keyboard
65	Motherboard resources
66	Microsoft ACPI-compliant embedded controller
67	Motherboard resources
70 - 77	System CMOS/real time clock
70 - 77	Motherboard resources
80	Motherboard resources
81 - 91	DMA controller
92	Motherboard resources
93 - 9F	DMA controller
A0 - A1	Programmable interrupt controller
A4 - A5	Programmable interrupt controller

I/O address (hex)	System function (shipping configuration)
A8 - A9	Programmable interrupt controller
AC - AD	Programmable interrupt controller
B0 - B1	Programmable interrupt controller)
B2 - B3	Motherboard resources
B4 - B5	Programmable interrupt controller
B8 - B9	Programmable interrupt controller
BC - BD	Programmable interrupt controller
C0 - DF	DMA controller
F0	Numeric data processor
380 - 38E	Motherboard resources
3B0 - 3BB	ATI Mobility Radeon HD 5650
3B0 - 3BB	Intel processor PCI Express Root Port 1 - D138
3C0 - 3DF	ATI Mobility Radeon HD 5650
3C0 - 3DF	Intel processor PCI Express Root Port 1 - D138
400 - 47F	Motherboard resources
4D0 - 4D1	Programmable interrupt controller
500 - 57F	Motherboard resources
680 - 69F	Motherboard resources
800 - 80F	Motherboard resources
D00 - FFFF	PCI bus
164E - 164F	Motherboard resources
2000 - 2FFF	Intel 5 Series/3400 Series Chipset Family PCI Express Root Port 2 - 3B44
3000 - 3FFF	Intel 5 Series/3400 Series Chipset Family PCI Express Root Port 2 - 3B42
4000 - 40FF	ATI Mobility Radeon HD 5650
4000 - 40FF	Intel Processor PCI Express Root Port 1 - D138
5000 - 501F	Intel 5 Series/3400 Series Chipset Family SMBus controller - 3B30
5020 - 503F	Intel 5 Series 4 Port SATA AHCI controller
5040 - 5047	Intel 5 Series 4 Port SATA AHCI controller
5048 - 504F	Intel 5 Series 4 Port SATA AHCI controller
5050 - 5053	Intel 5 Series 4 Port SATA AHCI controller
5054 - 5057	Intel 5 Series 4 Port SATA AHCI controller

I/O address (hex)	System function (shipping configuration)
FFFF - FFFF	Motherboard resources
FFFF - FFFF	Motherboard resources

System memory map specifications

Size	Memory address	System function
640 KB	00000000-0009FFFF	Base memory
128 KB	000A0000-000BFFFF	Video memory
64 KB	000C0000-000CFFFF	Video BIOS
96 KB	000D0000-000E7FFF	Unused
96 KB	000E8000-000FFFFFF	System BIOS
15 MB	00100000-00FFFFFF	Extended memory
58 MB	04800000-07FFFFFF	Super extended memory
58 MB	04800000-07FFFFFF	Unused
2 MB	08000000-080FFFFFF	Video memory (direct access)
4 GB	08200000-FFFFFF	Unused
64 KB	FFFF0000-FFFFFFFF	System BIOS

7 Backup and Recovery

Recovering system information

Recovery after a system failure is as complete as the most current backup. HP recommends creating recovery discs immediately after software setup. As you add new software and data files, continue to back up your system on a regular basis to maintain a reasonably current backup.

Tools provided by the operating system and HP Recovery Manager software are designed to help you with the following tasks for safeguarding your information and restoring it in case of a system failure:

- Creating a set of recovery discs (Recovery Manager software feature). Recovery discs are used to start up (boot) the computer and restore the operating system and software programs to factory settings in case of system failure or instability.
- Backing up your information regularly to protect your important system files.
- Creating system restore points (operating system feature). System restore points allow you to reverse undesirable changes to the computer by restoring the computer to an earlier state.
- Recovering a program or driver (Recovery Manager software feature). This feature helps you reinstall a program or driver without performing a full system recovery.
- Performing a full system recovery (Recovery Manager software feature). With Recovery Manager, you can recover the full factory image if you experience system failure or instability. Recovery Manager works from a dedicated recovery partition (select models only) on the hard drive or from recovery discs you create.

 **NOTE:** If the computer includes a solid-state drive (SSD), you might not have a recovery partition. Recovery discs are included for computers that do not have a partition. Use these discs to recover the operating system and software. To check for the presence of a recovery partition, select **Start > Computer**. If the partition is present, an HP Recovery drive is listed in the Hard Disk Drives section of the window.

Creating recovery discs

 **NOTE:** HP recommends creating recovery discs to be sure that you can restore the system to its original factory state if you experience serious system failure or instability. Create these discs after setting up the computer for the first time.

NOTE: Handle these discs carefully and keep them in a safe place. The software allows the creation of only one set of recovery discs.

NOTE: If the computer does not include an internal optical drive, use an optional external optical drive (purchased separately) to create recovery discs, or purchase the recovery discs for the computer from the HP Website.

Note the following guidelines before creating recovery discs:

- Use high-quality DVD-R, double-layer DVD-R, DVD+R, double-layer DVD+R, or CD-R discs. All these discs are purchased separately. DVDs have a much higher capacity than CDs. If using CDs, up to 20 discs might be required, whereas only a few DVDs are required.

 **NOTE:** Writable Blu-ray (BD-R) discs or read-write discs, such as CD-RW, DVD±RW, double-layer DVD±RW, and BD-RE (rewritable Blu-ray) discs, are not compatible with the Recovery Manager software.

- The computer must be connected to AC power during this process.
- Only one set of recovery discs can be created per computer.
- Number each disc before inserting it into the optical drive.
- If necessary, you can exit the program before you have finished creating the recovery discs. The next time you open Recovery Manager, you are prompted to continue the disc creation process.

To create a set of recovery discs:

1. Select **Start > All Programs > Recovery Manager > Recovery Manager**.

Recovery Manager opens.

2. Click **Advanced Options**.

 **NOTE:** If you are operating the computer on battery power, you are prompted to connect to AC power before you can go to the next step.

3. Click **Recovery disc creation**, and then click **Next**.
4. Follow the on-screen instructions.

Backing up your information

When to back up

- On a regularly scheduled basis



NOTE: Set reminders to back up your information periodically.

- Before the computer is repaired or restored
- Before adding or modifying hardware or software

Backup suggestions

- Create a set of recovery discs using Recovery Manager.
- Create system restore points using the Windows System Restore feature, and periodically copy them to disc.
- Store personal files in the Documents folder and back up this folder periodically.
- Back up templates stored in their associated programs.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot is a time-saver if you have to reset your preferences.

To copy the screen and paste it into a word-processing document:

- a. Display the screen.
- b. Copy the screen:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.

- c. Open a word-processing document, and then select **Edit > Paste**.

Using system restore points

When backing up the system, you are creating a system restore point. A system restore point allows you to save and name a snapshot of the hard drive at a specific point in time. You can then recover back to that point if you want to reverse subsequent changes made to the system.



NOTE: Recovering to an earlier restore point does not affect data files saved or e-mails created since the last restore point.

Create additional restore points to provide increased protection for the system files and settings.

When to create restore points

- Before adding or extensively modifying software or hardware
- Periodically, whenever the system is performing optimally

 **NOTE:** If you revert to a restore point and then change your mind, you can reverse the restoration.

Create a system restore point

1. Select **Start > Control Panel > System and Maintenance > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Under **Automatic restore points**, select the disk for which you want to create a restore point.
5. Click **Create**.

The System Protection window opens.

6. Follow the on-screen instructions.

Restore to a previous date and time

To revert to a restore point (created at a previous date and time), when the computer was functioning optimally:

1. Select **Start > Control Panel > System and Maintenance > System**.
2. In the left pane, click **System protection**.
3. Click the **System Protection** tab.
4. Click the **System Restore** button, and then click **Next**.

The System Restore window opens.

5. Follow the on-screen instructions.

Performing a recovery

 **NOTE:** You can recover only files that you have previously backed up. HP recommends using Recovery Manager to create an entire drive backup as soon as you set up the computer.

Recovery Manager software allows you to repair or restore the system if you experience system failure or instability. Recovery Manager works from recovery discs or from a dedicated recovery partition (select models only) on the hard drive. However, if the computer includes a solid-state drive (SSD), you might not have a recovery partition. If that is the case, recovery discs are included with the computer. Use these discs to recover the operating system and software.

 **NOTE:** Windows has its own built-in repair features, such as System Restore and driver roll-back capabilities. Try these features before using Recovery Manager.

NOTE: Recovery Manager recovers only software that was preinstalled at the factory. Software not provided with this computer must be downloaded from the manufacturer's Website or reinstalled from the disc provided by the manufacturer.

Recovering from the recovery discs

To restore the system from the recovery discs:

1. Back up all personal files.
2. Insert the first recovery disc into the optical drive and restart the computer.
3. Follow the on-screen instructions.

Recovering from the dedicated recovery partition (select models only)

 **NOTE:** If the computer includes an SSD, you might not have a recovery partition. You cannot recover using this procedure. Recovery discs are included for computers that do not have a partition. Use these discs to recover the operating system and software.

On some models, you can perform a recovery from the partition on the hard drive from either the Start button or **f11**. This restores the computer to its factory condition.

To restore the system from the partition:

1. Access Recovery Manager in either of the following ways:
 - Select **Start > All Programs > Recovery Manager > Recovery Manager**.
 - or–
 - Restart the computer and press **f11** while the “Press <F11> for recovery” message appears on the screen, and then select **Recovery Manager**.


Recovery Manager opens.

2. Click **Advanced Options**.

3. Click **System recovery**, and then click **Next**.
4. Follow the on-screen instructions.


8 Connector pin assignments

Audio-in (microphone)

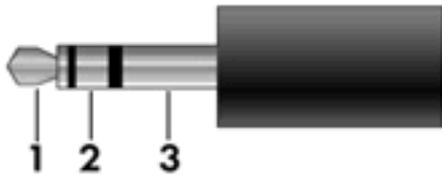


Pin	Signal
1	Audio signal in
2	Audio signal in
3	Ground

Audio-out (headphone)

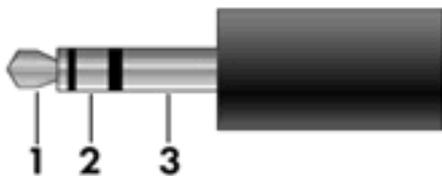


Pin	Signal
1	Audio out, left channel
2	Audio out, right channel
3	Ground

External monitor

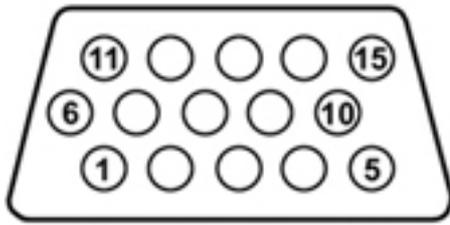


Pin	Signal
1	Red analog
2	Green analog
3	Blue analog
4	Not connected
5	Ground
6	Ground analog
7	Ground analog
8	Ground analog
9	+5 VDC
10	Ground
11	Monitor detect
12	DDC 2B data
13	Horizontal sync
14	Vertical sync
15	DDC 2B clock

HDMI

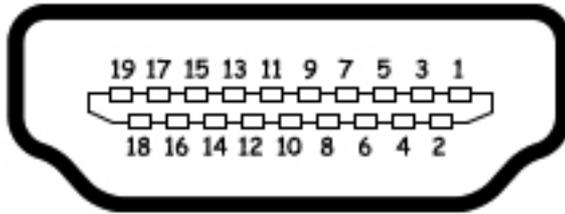


Pin	Signal
1	Transition minimized differential signal (TMDS) data 2+
2	TMDS data 2 shield
3	TMDS data 2-
4	TMDS data 1+
5	TMDS data 1 shield
6	TMDS data 1-
7	TMDS data 0+
8	TMDS data 0 shield
9	TMDS data 0-
10	TMDS clock+
11	TMDS clock shield
12	TMDS clock-
13	Consumer electric control (CEC)
14	Not connected
15	DDC clock
16	DDC data
17	Ground
18	+5V power
19	Hot plug detect

RJ-11 (modem)

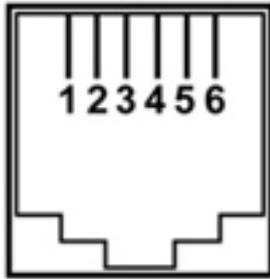

Pin	Signal
1	Unused
2	Tip
3	Ring
4	Unused
5	Unused
6	Unused

Universal Serial Bus

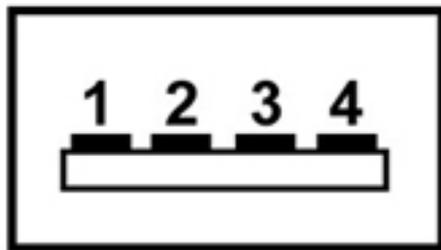

Pin	Signal
1	+5 VDC
2	Data -
3	Data +
4	Ground

9 Power cord set requirements

The wide range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries or regions

The requirements listed below are applicable to all countries or regions:

- The length of the power cord set must be at least 1.5 m (5.0 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries or regions

Country or region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	CCC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

10 Recycling

Battery

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

Display

-
- ⚠ **WARNING!** The backlight contains mercury. Caution must be exercised when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.
 - ⚠ **CAUTION:** The procedures in this chapter can result in damage to display components. The only components intended for recycling purposes are the liquid crystal display (LCD) panel and the backlight. When you remove these components, handle them carefully.
 - 📄 **NOTE: Materials Disposal.** This HP product contains mercury in the backlight in the display assembly that might require special handling at end-of-life. Disposal of mercury might be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities, or see the Electronic Industries Alliance (EIA) Website at <http://www.eiae.org>.
-


This section provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight (1) and the liquid crystal display (LCD) panel (2).




-
- 📄 **NOTE:** The procedures provided in this chapter are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.
-

Perform the following steps to disassemble the display assembly:

1. Remove all screw covers (1) and screws (2) that secure the display bezel to the display assembly.

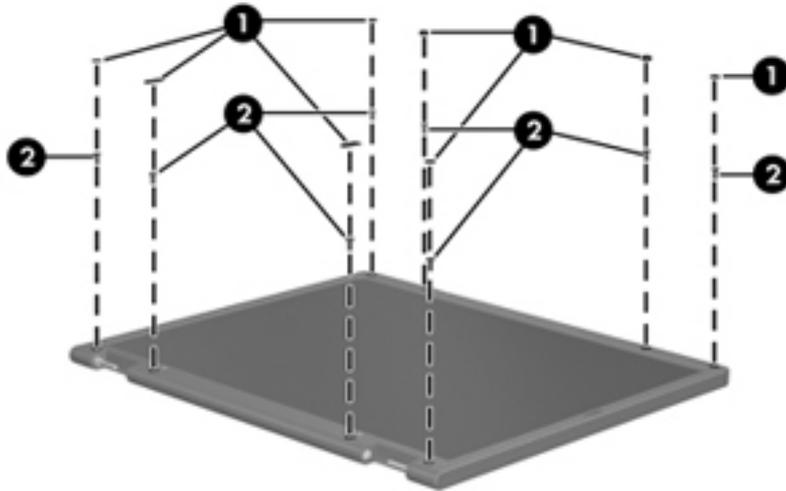


2. Lift up and out on the left and right inside edges (1) and the top and bottom inside edges (2) of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel (3).

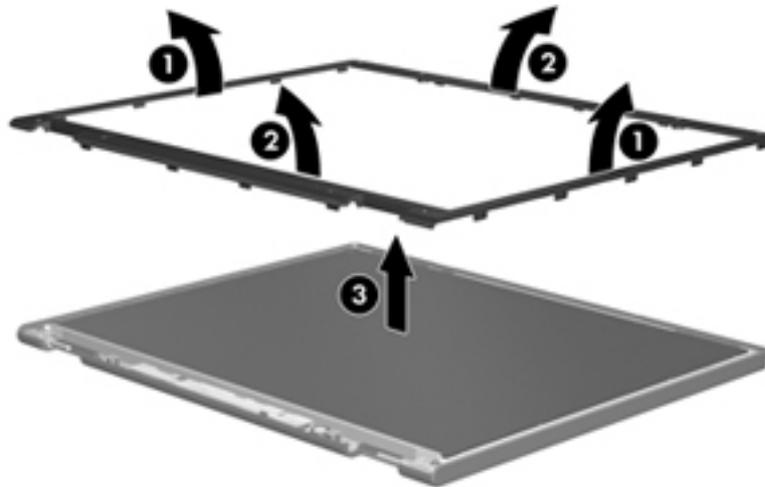


4. Remove all screws (1) that secure the display panel assembly to the display enclosure.


5. Remove the display panel assembly (2) from the display enclosure.

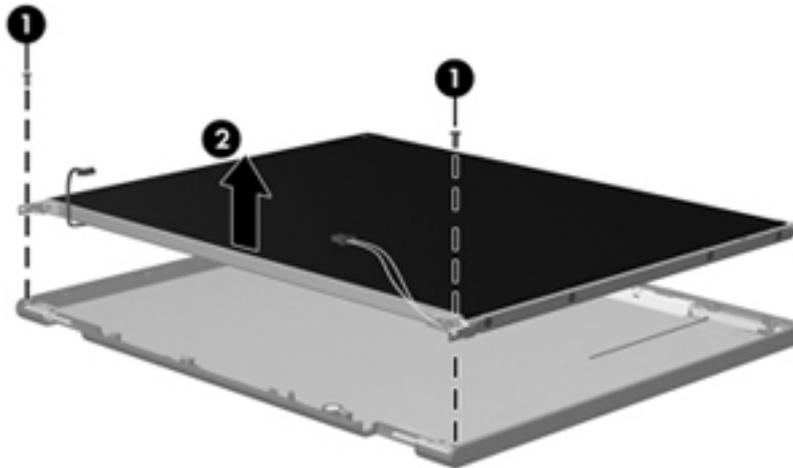

6. Turn the display panel assembly upside down.
7. Remove all screws that secure the display panel frame to the display panel.

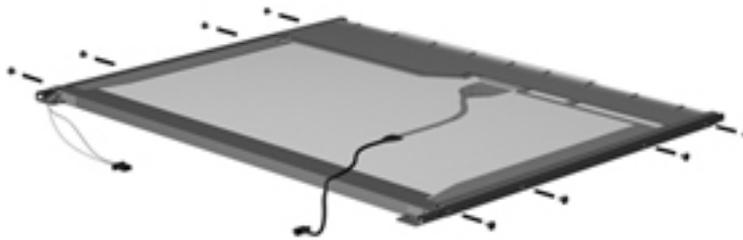


8. Use a sharp-edged tool to cut the tape (1) that secures the sides of the display panel to the display panel frame.
9. Remove the display panel frame (2) from the display panel.

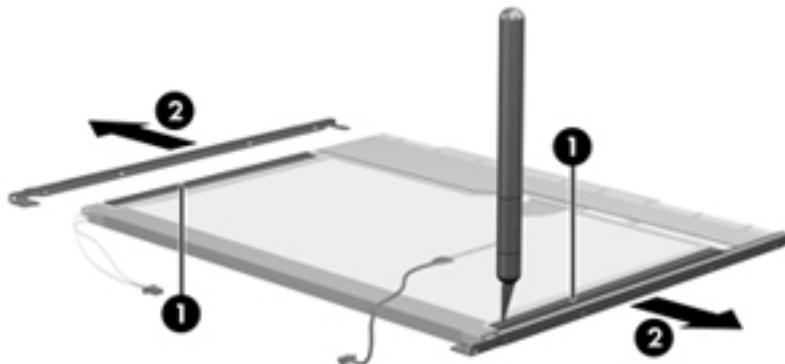


10. Disconnect the display cable (1) from the LCD panel.
11. Remove the screws (2) that secure the LCD panel to the display rear panel.
12. Release the LCD panel (3) from the display rear panel.

13. Release the tape (4) that secures the LCD panel to the display rear panel.

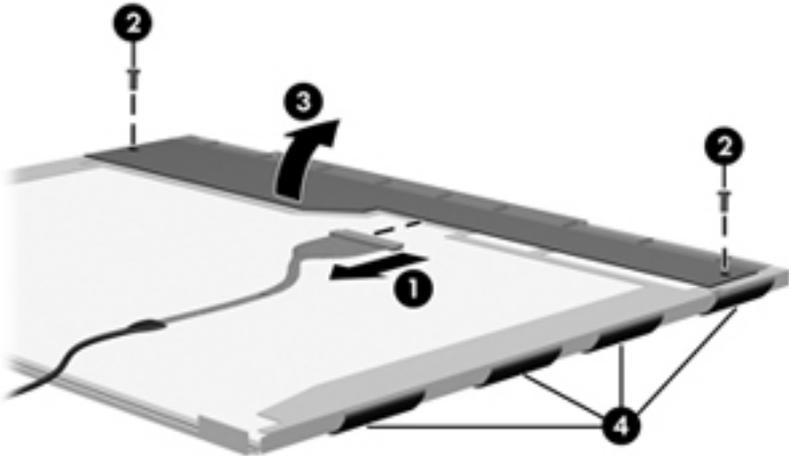

14. Remove the LCD panel.

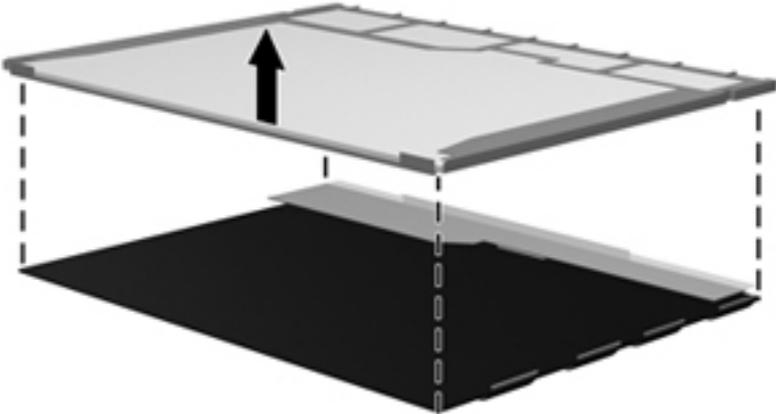

15. Recycle the LCD panel and backlight.

Index

- A**
- AC adapter
 - spare part numbers 34, 42
- administrator password 103
- antennas 15
- applications key, Windows 10
- audio, product description 3
- audio-in (microphone) jack
 - pin assignments 130
- audio-out (headphone) jack
 - pin assignments 130
- B**
- backing up
 - customized window, toolbar, and menu bar settings 126
 - personal files 126
 - templates 126
- backup 124
- backup suggestions 126
- base enclosure
 - illustrated 27
 - spare part numbers 27, 41
- battery
 - illustrated 27
 - removal 53
 - spare part numbers 27, 36, 53
- battery bay, identifying 13
- battery release latch 13
- bays
 - battery 13
 - primary hard drive 13
- Blu-ray Disc ROM Drive, precautions 46
- Blu-ray ROM DVD \pm R/RW SuperMulti DL Drive
 - spare part number 21, 32, 41, 42, 63
- Blu-ray ROM with DVD \pm R/RW SuperMulti DL Drive
 - removal 63
- Blu-ray ROM with LightScribe DVD \pm R/RW SuperMulti DL Drive
 - removal 63
 - specifications 109
- Blu-ray Writer with DVD \pm R/RW SuperMulti DL Drive
 - removal 63
 - spare part number 21, 32, 42, 63
 - specifications 110
- Bluetooth module
 - illustrated 23
 - removal 83
 - spare part numbers 23, 35, 83
- Bluetooth module cable
 - illustrated 23
 - spare part numbers 23, 40, 83
- boot options 104
- boot order 104
- BrightView display components, illustrated 30
- buttons
 - left TouchPad 7
 - power 9
 - right TouchPad 7
 - TouchPad On/Off 7
- C**
- cable housing, spare part numbers 35, 41
- cables, service considerations 46
- caps lock light, identifying 8
- changing the language of Setup Utility 100
- chipset, product description 2
- compartments, memory module 13
- components
 - bottom 13
 - display 14
 - front 11
 - left-side 12
 - right-side 11
 - top 6
- computer feet
 - locations 52
 - spare part numbers 27, 41, 52
- computer specifications 105
- connectors, power 11
- connectors, service considerations 46
- D**
- Diagnostics menu 104
- diskette drive, precautions 46
- display assembly
 - black spare part numbers 19, 40, 43, 77
 - BrightView removal 77
 - chrome spare part numbers 19, 40, 77
 - etched spare part numbers 19, 37, 43, 77
 - illustrated 19
 - midnight blue spare part numbers 19, 42, 77
 - red spare part numbers 19, 40, 77
 - Rossignol Special Edition spare part numbers 19, 44, 77
 - Touchscreen removal 72

- Touchscreen spare part numbers 19, 43, 72
- white spare part numbers 19, 40, 77
- display bezel
 - BrightView spare part numbers 40
 - illustrated 30
 - release 82
 - Rossignol Special Edition spare part numbers 44
 - spare part numbers 30, 80
- Display Cable Kit
 - BrightView illustrated 30
 - BrightView spare part numbers 30, 40
 - Touchscreen illustrated 29
 - Touchscreen spare part numbers 29, 41
- Display Cable Kit with WiMAX
 - BrightView spare part numbers 43
- display components
 - illustrated 28
 - recycling 136
- display enclosure
 - black spare part numbers 31, 40, 43
 - BrightView illustrated 30
 - chrome spare part numbers 31, 40
 - etched spare part numbers 31, 42, 43
 - midnight blue spare part numbers 30, 42
 - red spare part numbers 31, 40
 - removal 73
 - Rossignol Special Edition spare part numbers 31, 44
 - Touchscreen illustrated 29
 - Touchscreen spare part numbers 29, 41
 - white spare part numbers 31, 40
- display hinge
 - removal 75, 80
 - spare part number 75, 81
- display hinge covers
 - BrightView illustrated 30
- BrightView spare part numbers 30, 41
- Touchscreen illustrated 29
- Touchscreen spare part numbers 29, 41
- Display Hinge Kit
 - BrightView illustrated 30
 - BrightView spare part numbers 30, 40
 - Touchscreen illustrated 29
 - Touchscreen spare part numbers 29, 41
- Display Hinge Kit, spare part number 75, 81
- display panel
 - BrightView illustrated 30
 - BrightView spare part numbers 30, 37
 - product description 2
 - removal 80
 - spare part number 80
 - Touchscreen illustrated 29
- Display Rubber Kit, spare part numbers 29, 31, 40
- Display Screw Kit, spare part numbers 29, 31, 40
- display specifications 106
- displaying system information 101
- drive recovery 124
- drives
 - boot order 104
 - preventing damage 46
- DVD±RW and CD-RW Combo Drive
 - precautions 46
- E**
 - electrostatic discharge 47
 - eSATA/USB port, identifying 12
 - esc key, identifying 10
 - Ethernet, product description 3
 - exiting Setup Utility 102
 - external media cards, product description 4
 - external monitor port
 - pin assignments 131
- F**
 - f11 128
 - fan always on 103
 - fan/heat sink assembly
 - illustrated 21
 - removal 95
 - spare part numbers 21, 41, 42, 43, 95
 - feet
 - locations 52
 - spare part numbers 27, 41, 52
 - fingerprint reader, identifying 9
 - fn key, identifying 10
 - full system recovery 124
 - function keys, identifying 10
- G**
 - graphics, product description 2
 - grounding equipment and methods 49
- H**
 - hard drive
 - illustrated 26, 32
 - precautions 46
 - product description 2
 - removal 55
 - spare part numbers 26, 32, 41, 42, 43, 44, 55
 - specifications 107
 - hard drive bay cover
 - illustrated 33
 - hard drive cover
 - removal 54
 - Hard Drive Hardware Kit
 - spare part number 27, 32, 41, 55
 - hard drive self test 104
 - HDMI port
 - pin assignments 132
 - headphone (audio-out) jack
 - pin assignments 130
 - hinge
 - removal 75, 80
 - spare part number 75, 81
 - hinge covers
 - BrightView removing 79
 - Touchscreen removing 74
 - HP QuickWeb, Setup Utility 104

- I**
- I/O address specifications
 - discrete 120
 - switchable graphics 115
 - UMA 118
- integrated webcam light, identifying 14
- internal microphones, identifying 14
- interrupt specifications
 - discrete 113
 - switchable graphics 114
 - UMA 112
- J**
- jacks
 - RJ-45 (network) 12
- K**
- keyboard
 - illustrated 19
 - product description 4
 - removal 65
 - Rossignol Special Edition spare part numbers 44
 - spare part numbers 19, 38, 39
- keyboard, backlit
 - spare part numbers 20, 37, 38
- keys
 - esc 10
 - fn 10
 - function 10
 - Windows applications 10
 - Windows logo 10
- L**
- LAN Power Saving 103
- language support 103
- latch
 - battery release 13
- lights
 - caps lock 8
 - mute 8
 - power 8
 - TouchPad 8
 - volume mute 8
 - webcam 14
 - wireless 8
- LightScribe DVD±R/RW SuperMulti DL Drive
 - removal 63
 - spare part number 21, 32, 41, 63
 - specifications 108
- M**
- Main menu 103
- mass storage devices 0 , 0
- memory map specifications 123
- memory module
 - illustrated 26
 - product description 2
 - removal 60
 - spare part numbers 26, 39, 60
- memory module compartment, identifying 13
- memory test 104
- microphone
 - product description 3
- microphone (audio-in jack)
 - pin assignments 130
- Miscellaneous Display Kit
 - Rossignol Special Edition spare part numbers 44
- Miscellaneous Display Kit, spare part numbers 31
- model name 1
- modem jack
 - pin assignments 133
- monitor port, external 12
- mute light, identifying 8
- N**
- navigating in Setup Utility 101
- notebook sleeve
 - Rossignol Special Edition spare part numbers 44
- notebook sleeve, spare part numbers 35
- O**
- operating system, product description 5
- optical drive
 - illustrated 21, 32
 - precautions 46
 - product description 3
 - removal 63
 - spare part numbers 21, 32, 63
 - specifications 108, 109, 110
- optical drive cable, spare part numbers 21, 41
- P**
- packing guidelines 48
- passwords 103
- performing a system recovery 128
- pin assignments
 - audio-in 130
 - audio-out 130
 - external monitor 131
 - HDMI 132
 - headphone 130
 - microphone 130
 - modem 133
 - monitor 131
 - RJ-11 133
 - Universal Serial Bus (USB) 133
- plastic parts, precautions 45
- Plastics Kit
 - contents 33
 - spare part numbers 27, 33, 41
- pointing device
 - product description 4
- ports
 - eSATA/USB 12
 - external monitor 12
 - HDMI 12
 - product description 4
 - USB 11, 12
- power button board
 - illustrated 19
 - removal 70
 - spare part number 19, 41, 70
- power button, identifying 9
- power connector
 - illustrated 21
 - removal 89
 - removing 90
 - spare part number 21, 41, 89
- power connector, identifying 11
- power cord
 - set requirements 134
 - spare part numbers 34, 35
- power lights, identifying 8

- power requirements, product description 5
- power-on password 103
- primary hard drive bay, identifying 13
- processor
 - illustrated 22
 - product description 1
 - removal 98
 - spare part numbers 22, 36, 37, 42, 43, 44, 98
- product description
 - audio 3
 - chipset 2
 - display panel 2
 - Ethernet 3
 - external media cards 4
 - graphics 2
 - hard drives 2
 - keyboard 4
 - memory module 2
 - microphone 3
 - operating system 5
 - optical drives 3
 - pointing device 4
 - ports 4
 - power requirements 5
 - processors 1
 - product name 1
 - security 5
 - serviceability 5
 - TV tuner 4
 - webcam 3
 - wireless 3
- product name 1
- program recovery 124

R

- recovery
 - discs 124
 - from the recovery discs 128
 - from the recovery partition 128
 - partition 124
 - system 124
- recovery discs 128
- Recovery Manager 124
- recovery, system 124
- remote control, spare part numbers 34, 35

- removal/replacement
 - preliminaries 45
- restore points 126
- restoring default settings 102
- RJ-11 (modem) jack
 - pin assignments 133
- RJ-45 (network) jack, identifying 12
- RTC battery
 - illustrated 26
 - removal 62
 - spare part number 26, 39, 62
- rubber feet
 - locations 52
 - spare part numbers 27, 41, 52

S

- Screw Kit, spare part number 34, 41
- secondary hard drive self test 104
- security cable slot bracket
 - removing 90
- security cable slot, identifying 11
- Security menu 103
- security, product description 5
- selecting in Setup Utility 101
- service considerations 45
- service tag 16, 50
- serviceability, product description 5
- Setup Utility, using 100
- slots
 - security cable 11
- solid-state drive (SSD) 124, 128
- speaker assembly
 - illustrated 21
 - removal 85
 - spare part number 21, 41, 85
- speakers 11
- specifications
 - Blu-ray ROM with LightScribe DVD±R/RW SuperMulti DL Drive 109
 - Blu-ray Writer with DVD±R/RW SuperMulti DL Drive 110
 - computer 105
 - discrete I/O addresses 120
 - display 106
 - hard drive 107

- interrupt 113, 114
- interrupts 112
- LightScribe DVD±R/RW SuperMulti DL Drive 108
- memory map 123
- optical drive 108, 109, 110
- switchable graphics I/O
 - addresses 115
 - system DMA 111
 - UMA I/O addresses 118
- starting Setup Utility 100
- static-shielding materials 49
- supported discs 125
- system
 - DMA 111
 - failure or instability 124
 - information 103
 - memory map 123
 - recovery 124
 - restore points 124
- system board
 - illustrated 22
 - removal 91
 - spare part numbers 22, 42, 43, 44, 91
- System Configuration menu 103

T

- thermal material, replacement 96
- Thermal Pad Kit, spare part numbers 35, 44
- tools required 45
- top cover
 - black spare part numbers 21, 41, 67
 - chrome spare part numbers 21, 41, 67
 - etched spare part numbers 21, 41, 67
 - illustrated 21
 - midnight blue spare part numbers 21, 43, 67
 - red spare part numbers 21, 41, 67
 - removal 67
 - Rossignol Special Edition spare part numbers 21, 44, 67
 - white spare part numbers 21, 41, 67

- TouchPad
 - buttons 7
 - identifying 6
- TouchPad light, identifying 8
- TouchPad On/Off button 7
- Touchscreen display components, illustrated 29
- transporting guidelines 48
- TV tuner antenna, spare part numbers 34, 35
- TV tuner, product description 4
- TV tuner, spare part numbers 34, 35

U

- Universal Serial Bus (USB) port
 - pin assignments 133
- USB board
 - illustrated 26
 - removal 87
 - spare part number 26, 41, 87
- USB ports, identifying 11, 12
- using system restore points 126

V

- vents, identifying 13
- Virtualization Technology 103
- volume mute light, identifying 8

W

- webcam
 - product description 3
- webcam, identifying 14
- webcam/microphone module
 - illustrated 29, 30
 - removal 82
 - spare part number 29, 30, 40, 82
- Windows applications key, identifying 10
- Windows logo key, identifying 10
- wireless antenna transceivers
 - illustrated 29, 31
- wireless antennas 15
- wireless light, identifying 8
- wireless, product description 3
- WLAN module
 - illustrated 23

- removal 57
- spare part numbers 23, 36, 37, 39, 42, 43, 57
- workstation guidelines 48

