



# HP EliteBook 2560p Notebook PC

Maintenance and Service Guide

© Copyright 2011 Hewlett-Packard  
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel, Core, and Centrino are trademarks of Intel Corporation in the U.S. and other countries. Microsoft, Windows, and Windows Vista are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.


Second Edition: August 2011

First Edition: May 2011

Document Part Number: 642160-002

## Safety warning notice

---

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---





---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 External component identification .....</b>	<b>6</b>
Top .....	6
TouchPad .....	6
Lights .....	7
Buttons and fingerprint reader (select models only) .....	8
Keys .....	10
Front .....	11
Right .....	12
Left .....	13
Display .....	14
Rear .....	15
Bottom .....	16
<b>3 Illustrated parts catalog .....</b>	<b>18</b>
Serial number location .....	18
Computer major components .....	19
Display components .....	24
Mass storage .....	26
Plastics Kit .....	27
Miscellaneous parts .....	28
Sequential part number listing .....	29
<b>4 Removal and replacement procedures .....</b>	<b>34</b>
Preliminary replacement requirements .....	34
Tools required .....	34
Service considerations .....	34
Plastic parts .....	34
Cables and connectors .....	35
Drive handling .....	35
Grounding guidelines .....	36
Electrostatic discharge damage .....	36
Packaging and transporting guidelines .....	37
Workstation guidelines .....	37
Equipment guidelines .....	38

Component replacement procedures .....	39
Service tag .....	39
Computer feet .....	40
Battery .....	41
Service access cover .....	42
SIM .....	43
Fan and heat sink .....	44
Processor .....	46
Memory module .....	48
Bluetooth module .....	50
Speaker .....	52
Optical drive .....	53
Modem module .....	55
WWAN module .....	56
WLAN module .....	58
Hard drive or solid-state drive .....	60
Keyboard .....	62
RTC battery .....	65
Base enclosure .....	66
System board .....	69
Top cover .....	71
Power button board .....	73
Function button board .....	74
Fingerprint reader board .....	75
Smart card reader .....	76
Display panel .....	77
Display components .....	80
<b>5 Computer Setup .....</b>	<b>82</b>
Starting Computer Setup .....	82
Using Computer Setup .....	82
Navigating and selecting in Computer Setup .....	82
Restoring factory settings in Computer Setup .....	83
Computer Setup menus .....	84
File menu .....	84
Security menu .....	85
System Configuration menu .....	86
<b>6 Specifications .....</b>	<b>90</b>
Computer specifications .....	90
31.75 cm (12.50 in) display specifications .....	91

Hard drive specifications .....	92
DVD±RW and CD-RW SuperMulti Double-Layer Drive specifications .....	93
DVD-ROM Drive specifications .....	94
<b>7 Backup and recovery .....</b>	<b>95</b>
Windows 7 .....	95
Backing up your information .....	96
Performing a recovery .....	97
Using the Windows recovery tools .....	97
Using f11 recovery tools .....	98
Using a Windows 7 operating system DVD (purchased separately) .....	99
Windows Vista .....	99
Backing up your information .....	100
Performing a recovery .....	101
Using the Windows recovery tools .....	101
Using f11 recovery tools .....	102
Using a Windows Vista operating system DVD (purchased separately) .....	102
<b>8 Power cord set requirements .....</b>	<b>104</b>
Requirements for all countries .....	104
Requirements for specific countries and regions .....	105
<b>9 Recycling .....</b>	<b>106</b>
Battery .....	106
Display .....	106
<b>Index .....</b>	<b>112</b>



# 1 Product description

Category	Description
<b>Product Name</b>	HP EliteBook 2560p Notebook PC
<b>Processors</b>	<p>Intel® Core™ i7 processor (supports Intel Turbo Boost Technology):</p> <ul style="list-style-type: none"><li>• Intel Core i7-2620M 2.70 GHz processor, (turbo up to 3.40 GHz), 4 MB L3 cache, 4 threads, standard-voltage (35-W)</li></ul> <p>Intel® Core™ i5 processors (support Intel Turbo Boost Technology):</p> <ul style="list-style-type: none"><li>• Intel Core i5-2540M 2.60 GHz processor, (turbo up to 3.30 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li><li>• Intel Core i5-2520M 2.50 GHz processor, (turbo up to 3.20 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li><li>• Intel Core i5-2430M, 2.40GHz, (turbo up to 2.90GHz) 3MB L3 Cache, 4 threads 35W</li><li>• Intel Core i5-2410M 2.30 GHz processor, (turbo up to 2.90 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li></ul>
<b>Chipset</b>	Mobile Intel QM67 chipset
<b>Graphics</b>	<p>Intel® HD Graphics 3000</p> <p>Supports two simultaneous displays</p>
<b>Panel</b>	<p><b>31.75 cm</b> (12.50 in) high definition (HD), light-emitting diode (LED), AntiGlare (AG) SVA</p> <p>Supports privacy filter</p> <p>Supports 16:9 resolution</p> <p>Supports 1366x768 resolution</p>
<b>Memory</b>	<p>2 customer-accessible/upgradable memory module slots—DDR3 PC3-10600 (1333MHz) SODIMM</p> <p>Supports up to 16 GB of system RAM in the following configurations:</p> <ul style="list-style-type: none"><li>• 2048 MB total system memory (2048×1)</li><li>• 3072 MB total system memory (2048+1024)</li><li>• 4096 MB total system memory (4096×1)</li><li>• 4096-MB total system memory (2048 × 2)</li><li>• 6144 MB total system memory (4096+2048)</li><li>• 8192 MB total system memory (8192×1)</li><li>• 8192 MB total system memory (4096×2)</li><li>• 12288MB total system memory (8192MB + 4096MB)</li><li>• 16384MB total system memory (8192MB x 2)</li></ul>

Category	Description
<b>Internal storage</b>	<p>Supports the following <b>6.35 cm</b> (2.5 in) storage devices:</p> <ul style="list-style-type: none"> <li>• 750 GB hard drive (7200-rpm, SATA)</li> <li>• 500 GB hard drive (7200-rpm, SATA)</li> <li>• 320 GB hard drive (7200-rpm, SATA)</li> <li>• 320 GB Self-Encrypting Drive (SED) hard drive (7200-rpm, SATA)</li> <li>• 250 GB hard drive (7200-rpm, SATA)</li> </ul> <p>– or –</p> <ul style="list-style-type: none"> <li>• 160 GB solid-state drive</li> <li>• 128 GB solid-state drive</li> </ul>
<b>Optical drives</b>	<p>Customer-accessible</p> <p>Serial ATA 9.5 mm tray load</p> <p>Supports the following drives:</p> <ul style="list-style-type: none"> <li>• DVD±RW and CD-RW SuperMulti Double-Layer Drive</li> <li>• DVD-ROM Drive</li> </ul>
<b>Audio and video</b>	<p>Integrated dual-array microphones</p> <p>2 stereo speakers</p> <p>Integrated 720p HD webcam</p> <p>Supports “no webcam” option</p>
<b>Modem</b>	<p>56k v.92 MDC data/fax modem</p> <p>Supports “no modem” option</p> <p>Modem cable not included</p>
<b>Ethernet</b>	<p>Intel 82579-LM 10/100/1000 GB network interface card (NIC) with iAMT 7.0 support</p> <p>S3/S4/S5 wake on LAN</p> <p>NIC power-down technology</p> <p>Ethernet cable not included</p>
<b>Wireless</b>	<p><b>Integrated wireless local area network (WLAN) options by way of wireless module</b></p> <p>Three WLAN antennas</p> <p>Support for “no WLAN” option</p> <p>Support for the following WLAN formats:</p> <ul style="list-style-type: none"> <li>• Broadcom 43224AGN 802.11a/b/g/n WLAN module</li> <li>• Broadcom 4313AGN 802.11a/b/g/n WLAN module</li> <li>• Intel Centrino Advanced N 6205, 2x2 a/b/g/n WiFi Adapter</li> <li>• Intel Centrino Ultimate-N 6300, 3x3 a/g/n WiFi Adapter</li> </ul> <p><b>Integrated wireless wide area network (WWAN) options by way of wireless module</b></p> <p>Two WWAN antennas built into display assembly (world-wide, 5-band)</p>

Category	Description
	Support for "no WWAN" option
	Security provided by subscriber identify module (SIM) located inside battery bay
	Support for the following WWAN formats: <ul style="list-style-type: none"> <li>• HP un2430 EV-DO/HSPA Mobile Broadband Module</li> <li>• HP hs2340 HSPA+ Mobile Broadband Module</li> </ul>
	<b>Integrated personal area network (PAN) options by way of Bluetooth® module:</b>
	HP Integrated Module with Bluetooth 2.1 Wireless Technology
	Support for "no WPAN" option
<b>External media card</b>	One ExpressCard/34 slot, supporting USB and PCIe ExpressCard modules
	One Digital Media Reader, supporting MultiMediaCard (MMC) and Secure Digital (SD) Memory Card
<b>Ports</b>	<ul style="list-style-type: none"> <li>• eSATA/USB 2.0 Combo Port</li> <li>• USB 2.0 Port</li> <li>• USB 2.0 charging port</li> <li>• 3-pin AC power</li> <li>• Headphone/microphone combo audio</li> <li>• DisplayPort</li> <li>• Docking connector</li> <li>• RJ-11 (modem)</li> <li>• RJ-45 (Ethernet, includes link and activity lights)</li> <li>• VGA (Dsub 15-pin) supporting 1920 × 1200 external resolution at 75-Hz (hot plug/unplug with auto-detect)</li> </ul>
<b>Docking</b>	HP 2560 Docking Station
<b>Keyboard/pointing devices</b>	Full-size keyboard with Dura-Keys
	Dual point (pointing stick and TouchPad with scroll zone)
	Spill-resistant keyboard with HP drainage system
	TouchPad covered by glass, with a chemically etched surface
<b>Power requirements</b>	65-W HP Smart AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector)
	Supports HP Fast charge technology (select batteries only)
	Supports the following batteries: <ul style="list-style-type: none"> <li>• 9 cell, 3.00 Ah (100 Wh) Li-ion battery (does not support Fast Charge)</li> <li>• 6 cell, 2.80 Ah (62 Wh) Li-ion battery</li> <li>• 6 cell, 2.80 Ah (55 Wh) Li-ion long-life battery</li> <li>• 3 cell, 2.80 Ah (31 Wh) Li-ion battery</li> </ul>

Category	Description
<b>Security</b>	<p>Integrated fingerprint reader (select models only)</p> <p>Supports "No Fingerprint Reader" option</p> <p>Integrated smart card reader (active)</p> <p>Preboot Authentication (password, smart card)</p> <p>Full-volume encryption</p> <p>Security cable slot</p> <p>Trusted Platform Module (TPM) v.1.2</p>
<b>Operating system</b>	<p><b>Preinstalled operating systems:</b></p> <ul style="list-style-type: none"> <li>• Microsoft® Windows® 7 Home Premium 32/64</li> <li>• Windows 7 Professional 32/64</li> <li>• FreeDOS</li> </ul> <hr/> <p><b>Preinstalled operating systems, plus Microsoft® Office:</b></p> <ul style="list-style-type: none"> <li>• Windows 7 Home Basic 32 with Office 2010 Starter</li> <li>• Windows 7 Home Premium 32/64 with Office 2010 Starter</li> <li>• Windows 7 Home Premium 32/64 with Office 2010 Personal</li> <li>• Windows 7 Home Premium 32/64 with Office 2010 Home &amp; Business</li> <li>• Windows 7 Home Premium 32/64 with Office 2010 Professional</li> <li>• Windows 7 Professional 32/64 with Office 2010 Starter</li> <li>• Windows 7 Professional 32/64 Office 2010 Personal</li> <li>• Windows 7 Professional 32/64 Office 2010 Home &amp; Business</li> <li>• Windows 7 Professional 32/64 Office 2010 Professional</li> </ul> <hr/> <p><b>Restore media (OSDVD):</b></p> <ul style="list-style-type: none"> <li>• Windows 7 Home Basic 32</li> <li>• Windows 7 Home Premium 32/64</li> <li>• Windows 7 Professional 32/64</li> </ul> <hr/> <p><b>Certified:</b></p> <ul style="list-style-type: none"> <li>• Microsoft WHQL</li> <li>• SUSE Linux</li> <li>• Novell</li> </ul> <hr/> <p><b>DRDVD (Device driver and Application DVD) for Windows 7</b></p>



---


Category	Description
	<b>Web-only support:</b>
	<ul style="list-style-type: none"><li data-bbox="507 270 823 294">• Windows 7 Enterprise 32/64</li><li data-bbox="507 312 804 336">• Windows 7 Ultimate 32/64</li><li data-bbox="507 354 847 378">• Windows Vista Business 32/64</li><li data-bbox="507 396 858 420">• Windows Vista Enterprise 32/64</li><li data-bbox="507 438 831 462">• Windows XP Professional 32</li></ul>
<b>Serviceability</b>	End-user replaceable parts:
	<ul style="list-style-type: none"><li data-bbox="507 548 663 571">• AC adapter</li><li data-bbox="507 590 624 613">• Battery</li><li data-bbox="507 632 708 655">• Memory module</li><li data-bbox="507 674 655 697">• Hard drive</li><li data-bbox="507 716 676 739">• Optical drive</li><li data-bbox="507 758 692 781">• WLAN module</li><li data-bbox="507 800 703 823">• WWAN module</li></ul>

---

## 2 External component identification


### Top





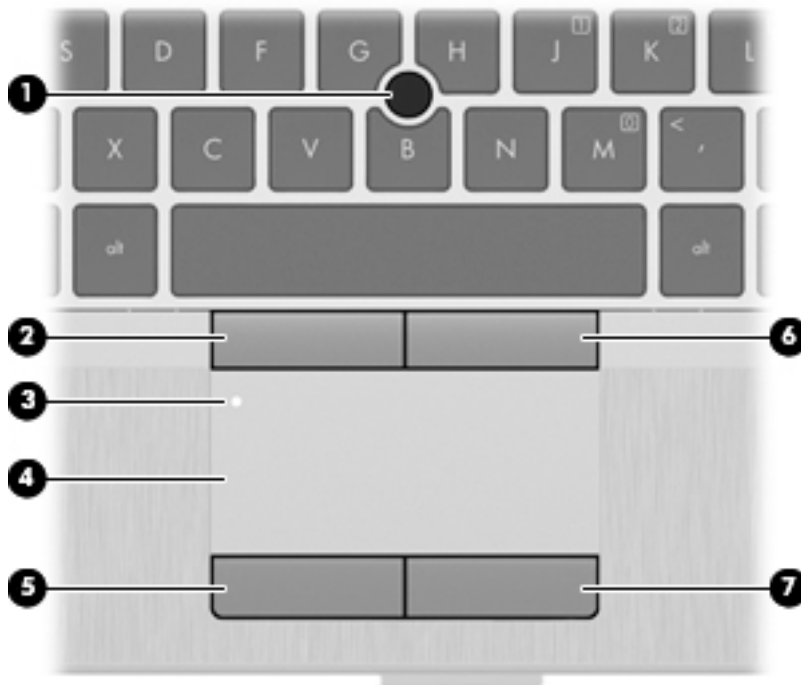
#### TouchPad




Component	Description
(1)	Pointing stick Moves the pointer and selects or activates items on the screen.
(2)	Left pointing stick button Functions like the left button on an external mouse.
(3)	TouchPad on/off button Turns the TouchPad on and off.
(4)	TouchPad zone Moves the pointer and selects or activates items on the screen.
(5)	Left TouchPad button Functions like the left button on an external mouse.
(6)	Right pointing stick button Functions like the right button on an external mouse.
(7)	Right TouchPad button Functions like the right button on an external mouse.

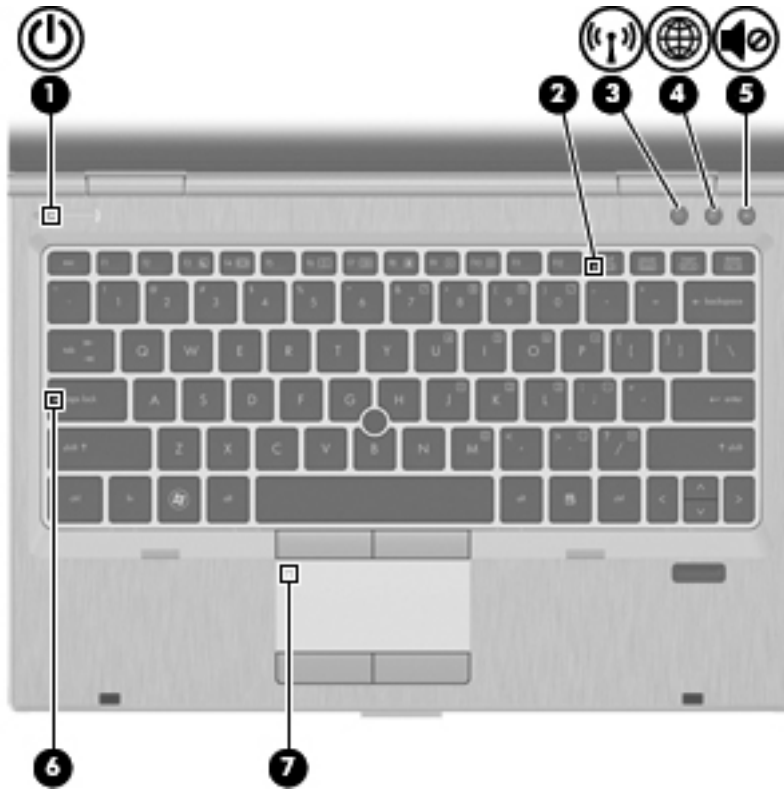

## Lights



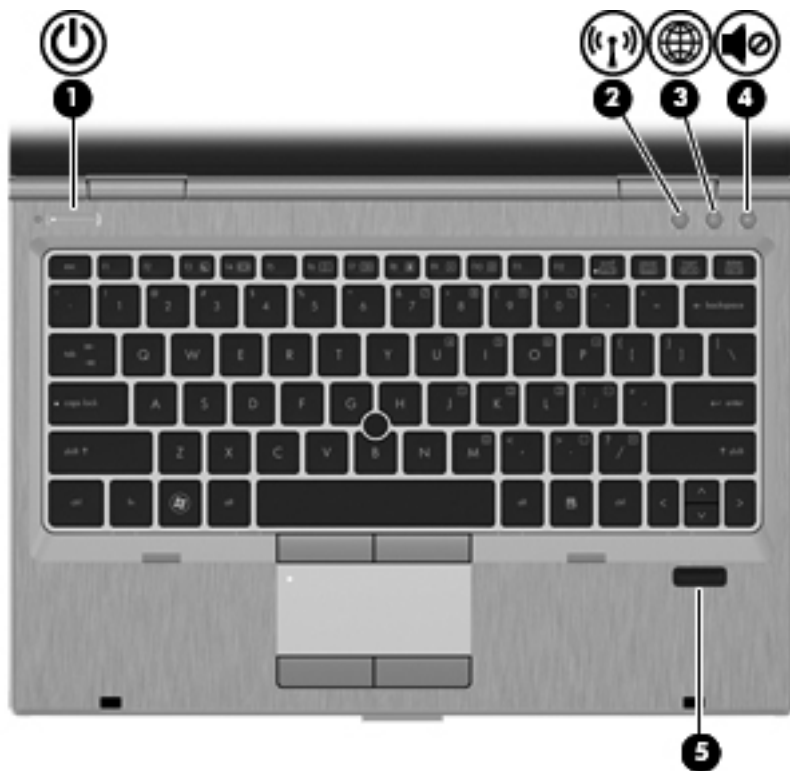

Component	Description
(1)  Power light	<ul style="list-style-type: none"> <li>• White: The computer is on.</li> <li>• Blinking: The computer is in the Sleep state.</li> <li>• Off: The computer is off or in Hibernation.</li> </ul>
(2) Num lock light	White: Num lock is on.
(3)  Wireless light	<ul style="list-style-type: none"> <li>• White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li> <li>• Amber: All wireless devices are off.</li> </ul>
(4)  HP QuickWeb light	<ul style="list-style-type: none"> <li>• White: The computer is on.</li> <li>• Off: The computer is off or in Hibernation mode.</li> </ul> <p><b>NOTE:</b> For more information, refer to “HP QuickWeb” in this guide and to the HP QuickWeb software Help.</p>
(5)  Mute light	<ul style="list-style-type: none"> <li>• White: Computer sound is on.</li> <li>• Amber: Computer sound is muted.</li> </ul>
(6) Caps lock light	White: Caps lock is on.
(7)  TouchPad on/off light	<ul style="list-style-type: none"> <li>• Amber: The TouchPad is off.</li> <li>• Off: The TouchPad is on.</li> </ul>


## Buttons and fingerprint reader (select models only)





Component	Description
<p>(1)  Power button</p>	<ul style="list-style-type: none"> <li>• When the computer is off, press the power button to turn on the computer.</li> <li>• When the computer is on, press the power button briefly to initiate Sleep.</li> <li>• When the computer is in the Sleep state, press the power button briefly to exit Sleep.</li> <li>• When the computer is in Hibernation, press the power button briefly to exit Hibernation.</li> </ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings:</p> <ul style="list-style-type: none"> <li>• <b>Windows 7</b>—Select <b>Start &gt; Control Panel &gt; System and Security &gt; Power Options</b>.</li> <li>• <b>Windows Vista®</b>—Select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b></li> <li>• Or refer to the <i>HP Notebook Reference Guide</i>.</li> </ul>
<p>(2)  Wireless button</p>	<p>Turns the wireless feature on or off, but does not establish a wireless connection.</p>


Component	Description
(3)  QuickWeb button	<ul style="list-style-type: none"><li>• When the computer is off or in Hibernation mode, press the button to open HP QuickWeb.</li><li>• When the computer is in Microsoft Windows, press the button to open the default Web browser.</li><li>• When the computer is in HP QuickWeb, press the button to open the default Web browser.</li></ul> <p><b>NOTE:</b> For more information, refer to “HP QuickWeb” in this guide and to the HP QuickWeb software Help. If your computer does not have HP QuickWeb software, the button does not perform any action or function.</p>
(4)  Volume mute button	Mutes and restores speaker sound.
(5) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.
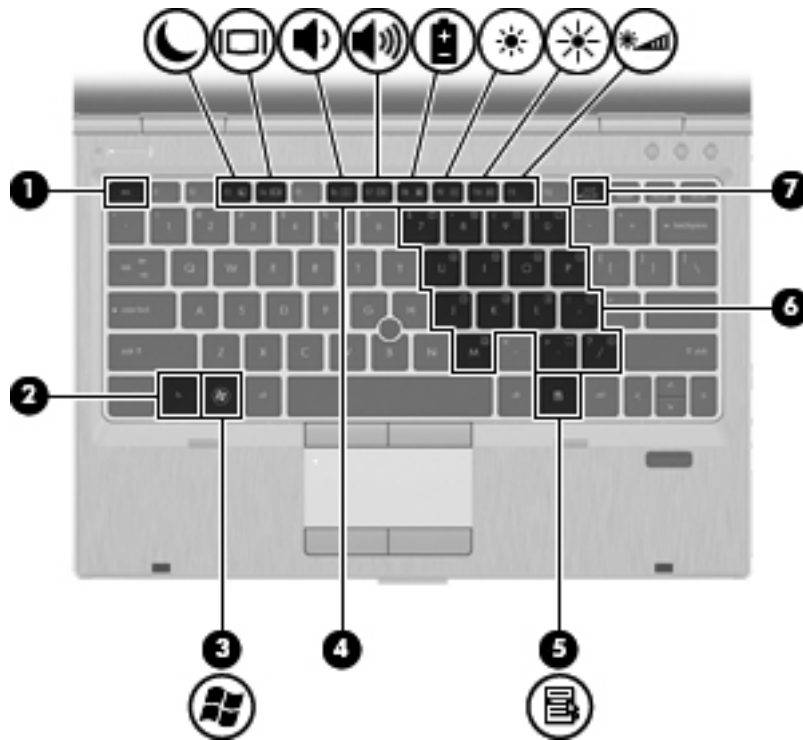
## Keys




Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key, the <code>num lk</code> key, or the <code>esc</code> key.
(3)  Windows logo key	Displays the Windows Start menu.
(4) Function keys (f3 through f11)	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.
(5)  Windows applications key	Displays a shortcut menu for items beneath the pointer.
(6) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad when pressed in combination with the <code>fn</code> and <code>num lk</code> keys.
(7) <code>num lk</code> key	Enables/disables the embedded numeric keypad when pressed in combination with the <code>fn</code> key.



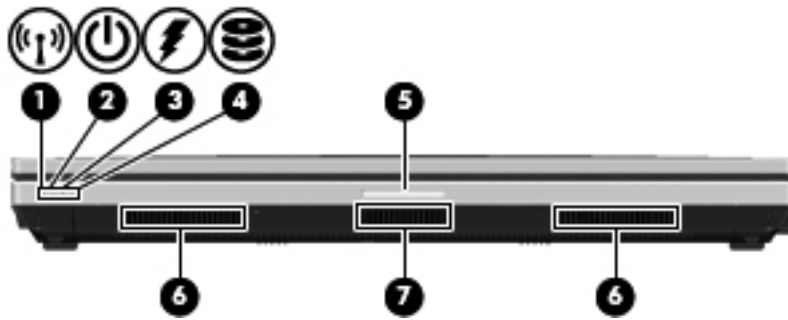

## Front

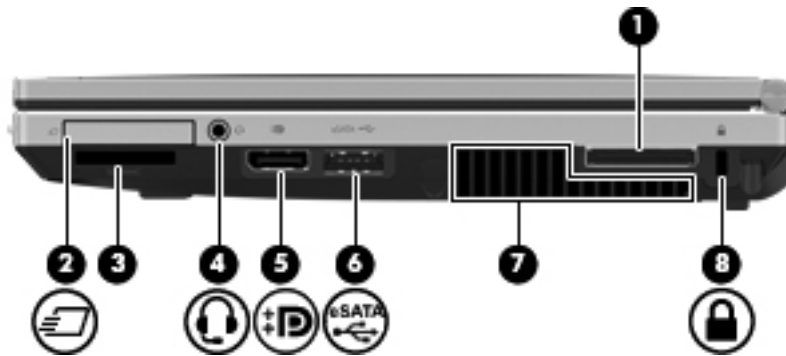

Component	Description
(1) Wireless light	<ul style="list-style-type: none"> <li>White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li> <li>Amber: All wireless devices are off.</li> </ul>
(2) Power light	<ul style="list-style-type: none"> <li>White: Power is on.</li> <li>Blinking white: The computer is in the Sleep state.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(3) Battery light	<ul style="list-style-type: none"> <li>White: A battery is close to full charge capacity.</li> <li>Amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.</li> <li>Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</li> </ul>
(4) Drive light	<ul style="list-style-type: none"> <li>White: The hard drive or optical drive is being accessed.</li> <li>Amber: HP 3D DriveGuard has temporarily parked the hard drive.</li> </ul>
(5) Display release button	Opens the computer.
(6) Vents (2)	Enable airflow to cool internal components. <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(7) Speaker	Produces sound.


## Right





Component	Description
(1)	Docking connector Connects an optional docking device.
(2)	ExpressCard slot Supports optional 34mm ExpressCards.
(3)	Media Card Reader Supports the following digital card formats: <ul style="list-style-type: none"> <li>MultiMediaCard</li> <li>Secure Digital (SD) Card</li> </ul>
(4) 	Audio-out (headphone) jack/Audio in (microphone) jack Connects optional powered stereo speakers, headphones, earbuds, a headset, or television audio. Also connects an optional headset microphone. <b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> . <b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled. <b>NOTE:</b> A 4-conductor audio jack plug headphone with microphone is needed in order to use the microphone function.
(5) 	DisplayPort Connects an optional digital display device, such as a high-performance monitor or projector.
(6) 	eSATA/USB port Connects a high-performance eSATA component, such as an eSATA external hard drive, or connects an optional USB device.
(7)	Vent Enables airflow to cool internal components. <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(8) 	Security cable slot Attaches an optional security cable to the computer. <b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

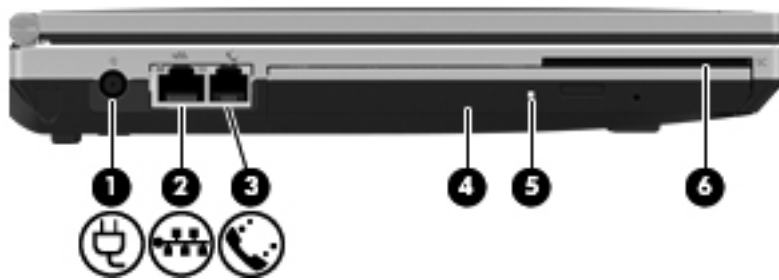


# Left



Component	Description
(1)  Power connector	Connects an AC adapter
(2)  RJ-45 (network) jack	Connects a network cable. The RJ-45 jack has two activity indicator lights. <ul style="list-style-type: none"><li>• Amber: The RJ-45 jack is active.</li><li>• Green: The RJ-45 jack is on.</li></ul>
(3) RJ-11 (modem) jack (select models only)	Connects a modem cable.
(4) Optical drive	Reads and writes (select models only) to an optical disc.
(5) Optical drive light	<ul style="list-style-type: none"><li>• On: The optical drive is being accessed.</li><li>• Off: The optical drive is idle.</li></ul>
(6) Smart card reader	Supports optional smart cards.

## Display

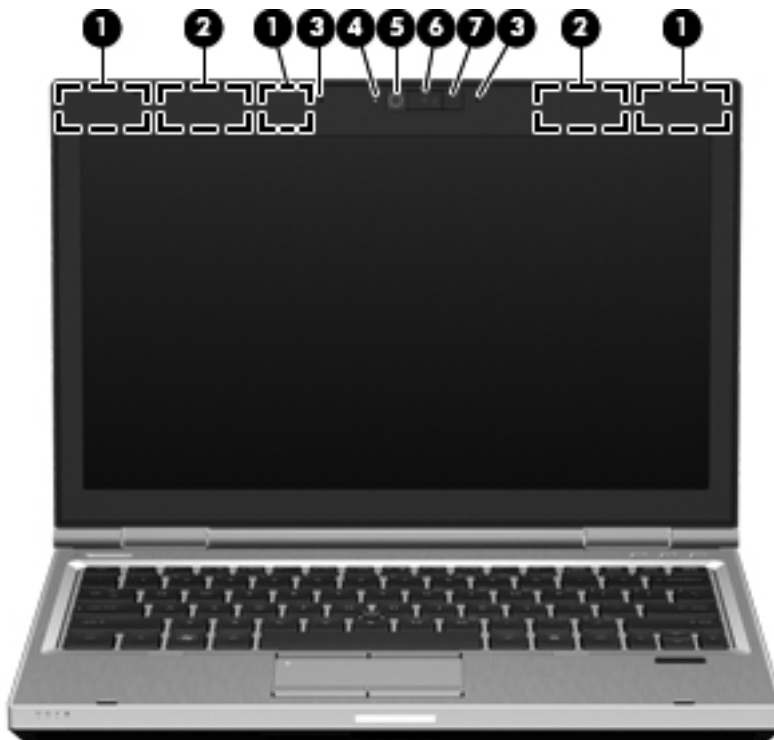




Component	Description
(1) WLAN antennas (3)*	Send and receive wireless signals to communicate with wireless local-area networks (WLAN).
(2) WWAN antennas (2)*	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(3) Internal microphone (2)	Records sound.
(4) Webcam light (select models only)	White: The webcam is in use.
(5) Webcam (select models only)	Records video and captures still photographs.  To use the webcam, select <b>Start &gt; All Programs &gt; HP &gt; HP Webcam</b> .
(6) Keyboard light button and ambient light sensor	Turns on the keyboard light and automatically adjusts the display brightness based on the lighting conditions in your environment.
(7) Keyboard light	Provides light for the keyboard.


\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.


## Rear






Component	Description
(1)  External monitor port	Connects an external VGA monitor or projector.
(2)  USB port	Connects an optional USB device.
(3)  USB 2.0 charging port	Connects an optional USB device.

# Bottom

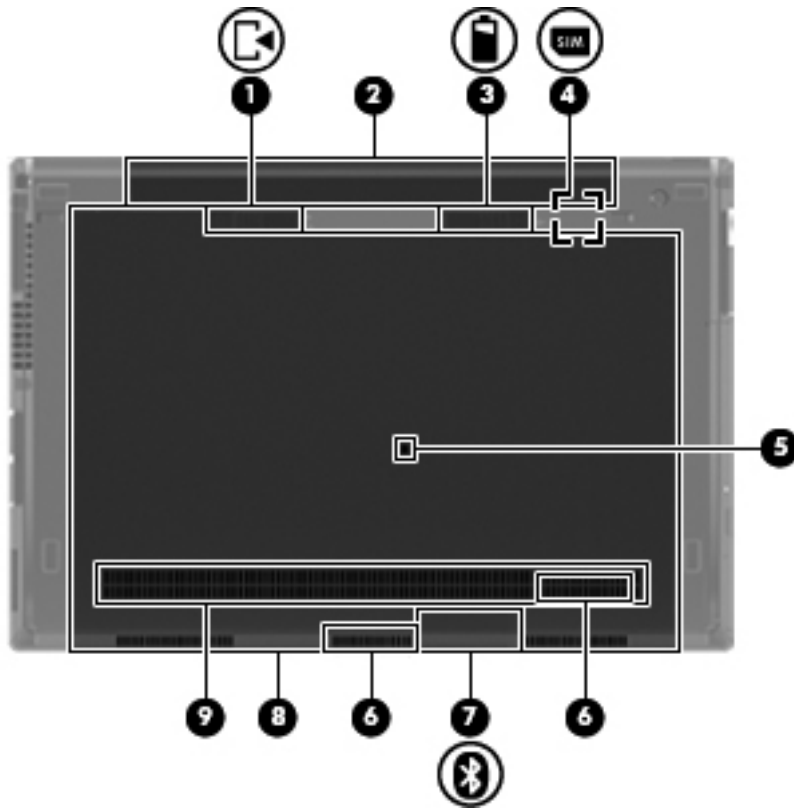

Component		Description
(1)	Service access cover latch	Releases the service access cover so that it can be removed.
(2)	Battery bay	Holds the battery.
(3)	 Battery release latch	Releases the battery from the battery bay.
(4)	SIM slot	Supports a wireless subscriber identity module (SIM) card. The SIM card slot is located inside the battery bay.
(5)	Drain hole	A bottom case drain helps prevent damage caused by minor accidental spills on the keyboard.
(6)	Speakers (2)	Produce sound.
(7)	Bluetooth compartment	Holds the Bluetooth device.


Component	Description
<p>(8)  Hard drive bay and wireless and memory module compartments</p> <p></p> <p></p>	<p>Contains the hard drive, the wireless LAN module slot, the WWAN module slot, and the memory module slots.</p> <p><b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.</p>
<p>(9) Vents (4)</p>	<p>Enable airflow to cool internal components.</p> <p><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

---

## 3 Illustrated parts catalog

### Serial number location

The service tag, affixed to the bottom of the computer, provides information that may be needed when troubleshooting system problems.

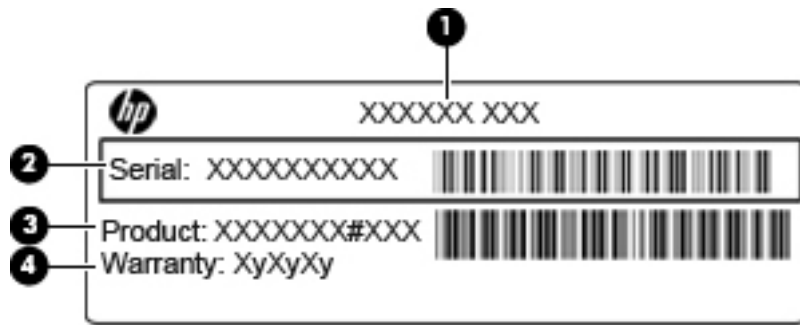

(1) Product name: This is the product name affixed to the front of the computer.


(2) Serial number: This alphanumeric identifier is unique to each product.

(3) Product part number: This identifier provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.

(4) Warranty: This number describes the duration (in years) of the warranty period for the computer.

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

# Computer major components

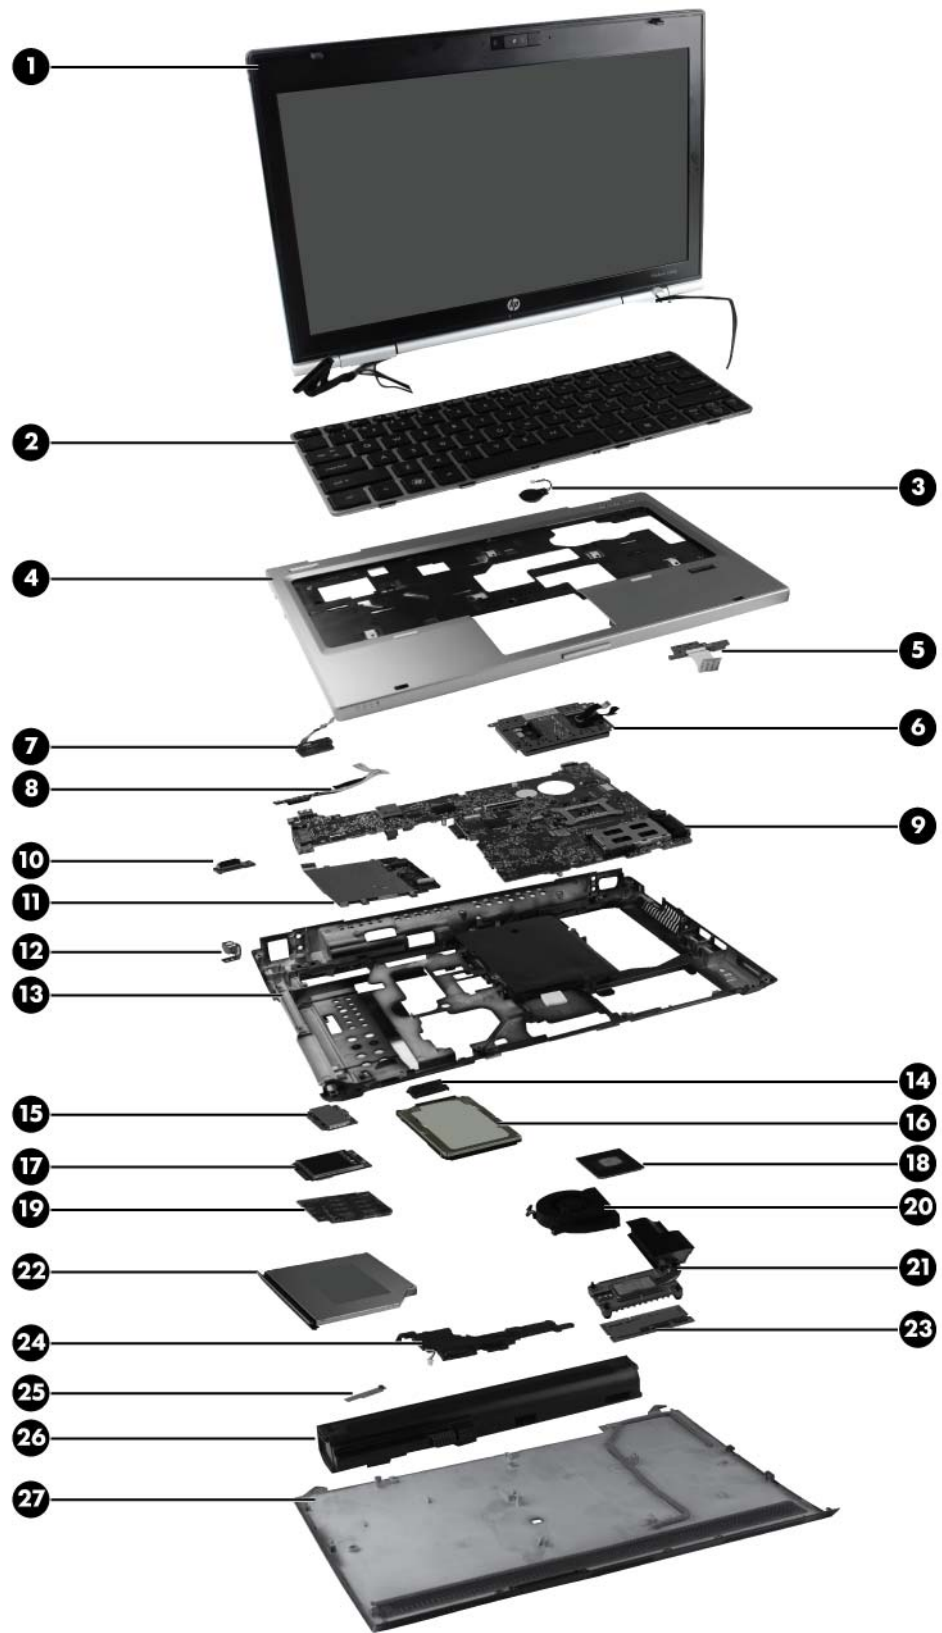

Item	Description	Spare part number
(1)	<b>31.75 cm (12.50 in) high definition (HD), light-emitting diode (LED), AntiGlare (AG) SVA display panel</b>	638553-001
(2)	<b>Keyboard with pointing stick</b> (includes keyboard cable and pointing stick cable):	
	• For use in Belgium	651390-A41
	• For use in Brazil	651390-201
	• For use in Bulgaria	651390-261
	• For use in the Czech Republic and Slovakia	651390-A81
	• For use in Denmark	651390-081
	• For use in Finland and Sweden	651390-B71
	• For use in France	651390-051
	• For use in French Canada	651390-121
	• For use in Germany	651390-041
	• For use in Greece	651390-DJ1
	• For use in Hungary	651390-211
	• For use in Iceland	651390-DD1
	• For use in Israel	651390-BB1
	• For use in Italy	651390-061
	• For use in Japan	651390-291
	• For use in Latin America	651390-161
	• For international use	651390-B31
	• For use in Africa—French/Arabic	651390-DW1
	• For use in Norway	651390-091
	• For use in Portugal	651390-131
	• For use in Russia	651390-251
	• For use in Saudi Arabia	651390-171
	• For use in Slovenia	651390-BA1
	• For use in South Korea	651390-AD1
	• For use in Spain	651390-071
	• For use in Switzerland	651390-BG1
	• For use in Taiwan	651390-AB1
	• For use in Thailand	651390-281
	• For use in Turkey	651390-141
	• For use in the United Kingdom	651390-031
	• For use in the United States	651390-001




Item	Description	Spare part number
(3)	<b>RTC battery</b>	651948-001
(4)	<b>Top cover</b>	
	With TouchPad and fingerprint reader	651375-001
	With TouchPad only	651374-001
(5)	<b>Function button board</b>	651361-001
(6)	<b>TouchPad button board</b> (included with top cover, spare part number 651374-001 and 651375-001)	
(7)	<b>Power button board</b>	651360-001
(8)	<b>Fingerprint reader board</b>	651364-001
(9)	<b>System board</b> (includes processor, replacement thermal material, and replacement thermal material cleaning kit):	
	For use in all countries and regions except the People's Republic of China and Russia	651358-001
	For use only in the People's Republic of China and Russia	651359-001
(10)	<b>Function LED board</b>	651362-001
(11)	<b>Smart card reader board and cable</b>	651363-001
(12)	Security cable slot (included with base enclosure)	
(13)	<b>Base enclosure</b>	651372-001
(14)	Hard drive connector (included with the hard drive spare part kit)	
(15)	<b>WLAN module</b>	
	Broadcom 43224AGN 802.11a/b/g/n WLAN module for use in Antigua and Barbuda, Barbados, Belize, Canada, Guam, and the United States	582564-001
	Broadcom 43224AGN 802.11a/b/g/n WLAN module for use in Albania, Algeria, Angola, Argentina, Aruba, Australia, Austria, the Bahamas, Bahrain, Bangladesh, Belgium, Benin, Bolivia, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, the Cayman Islands, the Central African Republic, Chad, Chile, Colombia, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic and Slovakia, Denmark, Djibouti, the Dominican Republic, Ecuador, Egypt, El Salvador, Equatorial Guinea, Estonia, Finland, France, French Guiana, Gabon, Gambia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, the Ivory Coast, Japan, Jordan, Kazakhstan, Kenya, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Liechtenstein, Lithuania, Luxembourg, Madagascar, Malaysia, the Maldives, Mali, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Morocco, Mozambique, Namibia, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Panama, the People's Republic of China, Peru, the Philippines, Poland, Portugal, Puerto Rico, Qatar, Romania, Russia, Rwanda, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Sierra Leone, Slovenia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Vincent and the Grenadines, Suriname, Sweden, Switzerland, Taiwan, Tanzania, Thailand, Togo, Tunisia, Turkey, Ukraine, the United Arab Emirates, the United Kingdom, the United States Virgin Islands, Uruguay, Uzbekistan, Venezuela, Vietnam, Yemen, Zimbabwe	582564-002
	Broadcom 4313AGN 802.11a/b/g/n WLAN module	593836-001
	Intel Centrino Advanced N 6205, 2x2 a/b/g/n WiFi Adapter	631954-001
	Intel Centrino Ultimate-N 6300, 3x3 a/g/n WiFi Adapter	572511-001

Item	Description	Spare part number
<b>(16)</b>	<b>Hard drive or solid-state drive</b> (bracket included)	
	<b>6.35 cm</b> (2.50 in) hard drive:	
	<ul style="list-style-type: none"> <li>750 GB, 7200-rpm hard drive</li> </ul>	633252-001
	<ul style="list-style-type: none"> <li>500 GB, 7200-rpm hard drive</li> </ul>	634925-001
	<ul style="list-style-type: none"> <li>320 GB, 7200-rpm hard drive</li> </ul>	641672-001
	<ul style="list-style-type: none"> <li>320 GB, 7200-rpm Self-Encrypting Drive (SED) hard drive</li> </ul>	626978-001
	<ul style="list-style-type: none"> <li>250 GB, 7200-rpm hard drive</li> </ul>	635225-001
	<b>6.35 cm</b> (2.50 in) solid-state drive:	
	<ul style="list-style-type: none"> <li>160 GB, solid-state drive</li> </ul>	651389-001
	<ul style="list-style-type: none"> <li>128 GB, solid-state drive</li> </ul>	651388-001
<b>(17)</b>	<b>WWAN module</b>	
	HP un2430 EV-DO/HSPA Mobile Broadband Module (all countries and regions except the People's Republic of China)	634400-001
	HP hs2340 HSPA+ Mobile Broadband Module	632155-001
<b>(18)</b>	<b>Processor</b>	
	Intel® Core™ i7 processor (supports Intel Turbo Boost Technology):	
	<ul style="list-style-type: none"> <li>Intel Core i7-2620M 2.70 GHz processor, (turbo up to 3.40 GHz), 4 MB L3 cache, 4 threads, standard-voltage (35-W)</li> </ul>	631252-001
	Intel® Core™ i5 processors (support Intel Turbo Boost Technology):	
	<ul style="list-style-type: none"> <li>Intel Core i5-2540M 2.60 GHz processor, (turbo up to 3.30 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li> </ul>	631255-001
	<ul style="list-style-type: none"> <li>Intel Core i5-2520M 2.50 GHz processor, (turbo up to 3.20 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li> </ul>	631253-001
	<ul style="list-style-type: none"> <li>Intel Core i5-2430M 2.30 GHz processor, (turbo up to 2.90 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li> </ul>	653341-001
	<ul style="list-style-type: none"> <li>Intel Core i5-2410M 2.30 GHz processor, (turbo up to 2.90 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)</li> </ul>	638039-001
<b>(19)</b>	Modem module (56k v.92 MDC data/fax modem)	628824-001
<b>(20)</b>	<b>Fan</b>	651378-001
<b>(21)</b>	<b>Heat sink</b>	651379-001
<b>(22)</b>	<b>Optical drive</b> (includes bezel and bracket):	
	DVD±RW and CD-RW SuperMulti Double-Layer Drive	651387-001
	DVD-ROM Drive	651386-001
<b>(23)</b>	<b>Memory modules</b> (PC3-10600, 1333 MHz, DDR3):	
	8 GB	634091-001
	4 GB	621569-001
	2 GB	621565-001

Item	Description	Spare part number
(24)	<b>Speakers</b>	651377-001
(25)	<b>HP Integrated Module with Bluetooth 2.1 Wireless Technology</b> <b>NOTE:</b> The Bluetooth module spare part kit does not include a Bluetooth module cable. The Bluetooth module cable is included in the Cable Kit, spare part number 651384-001.	593836-001
(26)	<b>Battery</b>	
	9 cell, 100 Wh, 3.0 Ah, Li-ion battery	632423-001
	6 cell, 62 Wh, 2.8 Ah, Li-ion battery	632421-001
	6 cell, 55 Wh, 2.8 Ah, Li-ion long life battery	632419-001
	3 cell, 31 Wh, 2.8 Ah, Li-ion battery	632417-001
(27)	<b>Service access cover</b>	651373-001
	<b>Rubber Kit</b> (not shown)—includes bumpers for the outside of the base enclosure	651382-001

# Display components

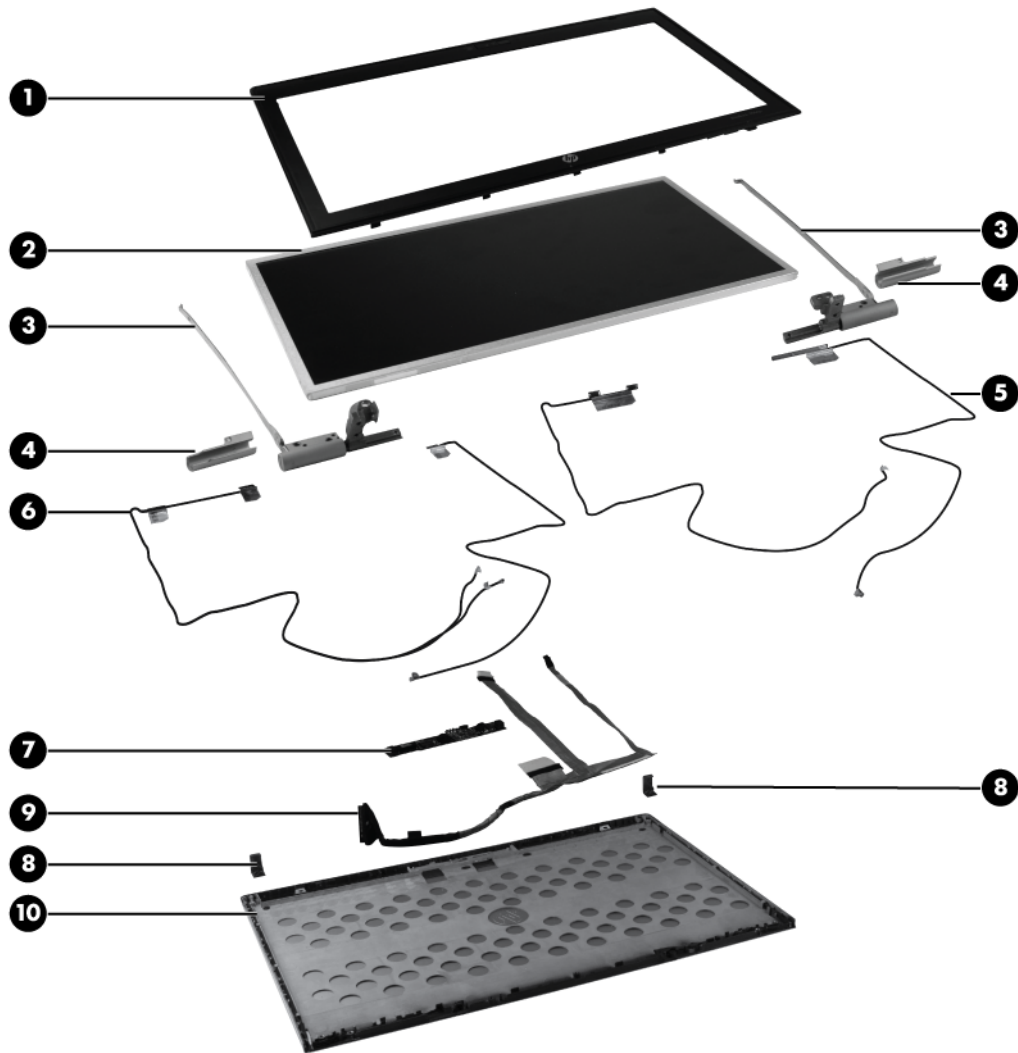

Item	Description	Spare part number
(1)	<b>Display bezel</b>	
	For use with computer models equipped with a webcam	651366-001
	For use with computer models not equipped with a webcam	651365-001
(2)	<b>31.75 cm (12.50 in) high definition (HD), light-emitting diode (LED), AntiGlare (AG) SVA display panel</b>	638553-001
(3)	<b>Display Hinge Kit</b> (includes left hinge and bracket, and right hinge and bracket)	651369-001
(4)	<b>Hinge covers</b>	651370-001
(5)	WWAN cable (included in Antenna Kit, spare part number 651371-001)	
(6)	WLAN cable (included in Antenna Kit, spare part number 651371-001)	
(7)	<b>Webcam module</b> (select models only), includes microphone and keyboard light	642796-001
(8)	Top cover brackets	651381-001


<b>Item</b>	<b>Description</b>	<b>Spare part number</b>
<b>(9)</b>	<b>Display cable (includes webcam cable and light sensor cable)</b>	651368-001
<b>(10)</b>	<b>Display enclosure</b>	651367-001
	<b>Ambient light sensor board</b> (not shown)	656622-001
	<b>Internal microphone module</b> (not shown)	642798-001
	<b>Display Screw Kit</b> (not shown)	655022-001
	<b>Display Miscellaneous Kit</b> includes foil shield for camera	656623-001
	<b>Display Panel Support Kit</b> (not shown)—includes display enclosure and antenna	658267-001

## Mass storage



Item	Description	Spare part number
(1)	<b>6.35-cm (2.50-in) hard drive</b> (includes bracket):	
	• 750-GB, 7200-rpm hard drive	633252-001
	• 500-GB, 7200-rpm hard drive	634925-001
	• 320-GB, 7200-rpm hard drive	641672-001
	• 320-GB, 7200-rpm Self-Encrypting Drive (SED) hard drive	626978-001
	• 250-GB, 7200-rpm hard drive	635225-001
(2)	<b>6.35-cm (2.50-in) solid-state drive</b> (includes bracket):	
	• 160-GB, solid-state drive	651389-001
	• 128-GB, solid-state drive	651388-001
(3)	<b>Optical drive</b> (includes bezel and bracket):	
	• DVD-ROM Drive	651386-001
	• DVD±RW and CD-RW SuperMulti Double-Layer Drive	651387-001
(4)	<b>Optical drive bracket</b> (included with optical drive)	
(5)	<b>Brackets for hard drive and solid-state drive</b> (included with hard drive and solid-state drive)	
	<b>Hard Drive Hardware Kit</b> (not shown)—includes hard drive connector, hard drive, hard drive bracket, screws, and spacers	651380-001

## Plastics Kit

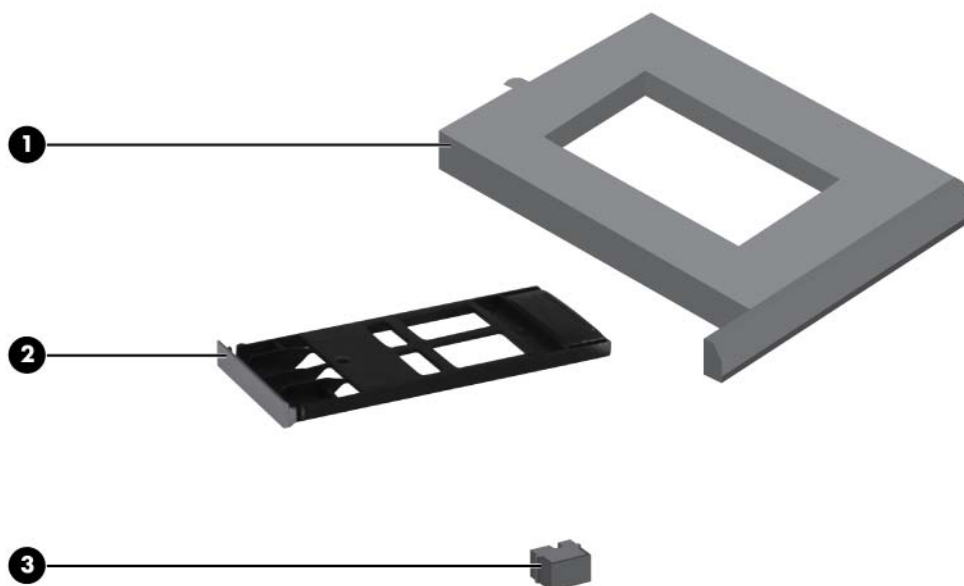

Item	Description	Spare part number
	<b>Plastics Kit:</b>	651376-001
(1)	Optical drive weight saver	
(2)	ExpressCard blank	
(3)	RJ-11 jack cover	

## Miscellaneous parts

Description	Spare part number
<b>AC adapter</b>	
65-W Smart AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector)	609939-001
65-W Smart AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector) for use in Australia, Bangladesh, Brunei, Cambodia, China, Hong Kong, India, Indonesia, Japan, South Korea, Laos, Malaysia, Nepal, New Zealand, Pakistan, Philippines, Singapore, Sri Lanka, Taiwan, Thailand, Vietnam	609948-001
<b>Ambient light sensor board</b>	656622-001
Bracket Kit	651381-001
<b>Cable Kit</b> (includes Bluetooth module cable and cable)	651384-001
<b>Fingerprint reader board</b>	651364-001
<b>HP 2560 Series Docking Station</b>	651385-001
<b>Internal microphone module</b>	642798-001
<b>Power button board</b>	651360-001
<b>Power cords</b>	
For use in Argentina	490371-D01
For use in Australia and New Zealand	490371-011
For use in Brazil	490371-202
For use in Canada and the United States	490371-001
For use in Denmark	490371-081
For use in Europe, the Middle East, and Africa	490371-021
For use in India	490371-D61
For use in Israel	490371-BB1
For use in Italy	490371-061
For use in Japan	490371-291
For use in the People's Republic of China	490371-AA1
For use in South Africa	490371-AR1
For use in South Korea	490371-AD1
For use in Switzerland	490371-111
For use in Taiwan	490371-AB1
For use in Thailand	490371-201
For use in Singapore and the United Kingdom	490371-031
<b>Screw Kit</b>	651383-001



## Sequential part number listing

Spare part number	Description
490371-001	Power cord for use in Canada and the United States
490371-011	Power cord for use in Australia and New Zealand
490371-021	Power cord for use in Europe, the Middle East, and Africa
490371-031	Power cord for use in Singapore and the United Kingdom
490371-061	Power cord for use in Italy
490371-081	Power cord for use in Denmark
490371-111	Power cord for use in Switzerland
490371-201	Power cord for use in Thailand
490371-202	Power cord for use in Brazil
490371-291	Power cord for use in Japan
490371-AA1	Power cord for use in the People's Republic of China
490371-AB1	Power cord for use in Taiwan
490371-AD1	Power cord for use in South Korea
490371-AR1	Power cord for use in South Africa
490371-BB1	Power cord for use in Israel
490371-D01	Power cord for use in Argentina
490371-D61	Power cord for use in India
537921-001	HP Integrated Module with Bluetooth 2.1 Wireless Technology  <b>NOTE:</b> The Bluetooth module spare part kit does not include a Bluetooth module cable. The Bluetooth module cable is included in the Cable Kit, spare part number 651384-001.
572511-001	Intel Centrino Ultimate-N 6300, 3x3 a/g/n WiFi Adapter
582564-001	Broadcom 43224AGN 802.11a/b/g/n WLAN module for use in Antigua and Barbuda, Barbados, Belize, Canada, Guam, and the United States
582564-002	Broadcom 43224AGN 802.11a/b/g/n WLAN module for use in Albania, Algeria, Angola, Argentina, Aruba, Australia, Austria, the Bahamas, Bahrain, Bangladesh, Belgium, Benin, Bolivia, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, the Cayman Islands, the Central African Republic, Chad, Chile, Colombia, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic and Slovakia, Denmark, Djibouti, the Dominican Republic, Ecuador, Egypt, El Salvador, Equatorial Guinea, Estonia, Finland, France, French Guiana, Gabon, Gambia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea- Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, the Ivory Coast, Japan, Jordan, Kazakhstan, Kenya, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Liechtenstein, Lithuania, Luxembourg, Madagascar, Malaysia, the Maldives, Mali, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Morocco, Mozambique, Namibia, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Panama, the People's Republic of China, Peru, the Philippines, Poland, Portugal, Puerto Rico, Qatar, Romania, Russia, Rwanda, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Sierra Leone, Slovenia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Vincent and the Grenadines, Suriname, Sweden, Switzerland, Taiwan, Tanzania, Thailand, Togo, Tunisia, Turkey, Ukraine, the United Arab Emirates, the United Kingdom, the United States Virgin Islands, Uruguay, Uzbekistan, Venezuela, Vietnam, Yemen, Zimbabwe

Spare part number	Description
593836-001	Broadcom 4313AGN 802.11a/b/g/n WLAN module
609939-001	AC adapter, 65-W Smart AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector)
609948-001	65-W Smart AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector) for use in Australia, Bangladesh, Brunei, Cambodia, China, Hong Kong, India, Indonesia, Japan, South Korea, Laos, Malaysia, Nepal, New Zealand, Pakistan, Philippines, Singapore, Sri Lanka, Taiwan, Thailand, Vietnam
621565-001	Memory module, 2 GB (PC3-10600, 1333 MHz, DDR3)
621569-001	Memory module, 4 GB (PC3-10600, 1333 MHz, DDR3)
626978-001	Hard drive, 2.50 in, 320 GB, 7200-rpm Self-Encrypting Drive (SED) hard drive (includes bracket)
628824-001	Modem module (56k v.92 MDC data/fax modem)
631252-001	Processor, Intel Dual Core i7-2620M 2.70 GHz processor, (turbo up to 3.40 GHz), 4 MB L3 cache, 4 threads, standard-voltage (35-W)
631253-001	Processor, Intel Dual Core i5-2520M 2.50 GHz processor, (turbo up to 3.20 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)
631255-001	Processor, Intel Dual Core i5-2540M 2.60 GHz processor, (turbo up to 3.30 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)
631954-001	Intel Centrino Advanced N 6205, 2x2 a/b/g/n WiFi Adapter
632155-001	HP hs2340 HSPA+ Mobile Broadband Module
632417-001	Battery, 3 cell, 31 Wh, 2.8 Ah, Li-ion battery
632419-001	Battery, 6 cell, 55 Wh, 2.8 Ah, Li-ion battery
632421-001	Battery, 6 cell, 62 Wh, 2.8 Ah, Li-ion battery
632423-001	Battery, 9 cell, 100 Wh, 3.0 Ah, Li-ion battery
633252-001	750 GB, 7200-rpm 9.50 mm, <b>6.35 cm</b> (2.50 in) SATA hard drive (includes bracket)
634091-001	8 GB memory module (PC3-10600, 1333 MHz, DDR3)
634400-001	HP un2430 EV-DO/HSPA Mobile Broadband Module
634925-001	500 GB, 7200-rpm 9.50 mm, <b>6.35 cm</b> (2.50 in) SATA hard drive (includes bracket)
635225-001	250 GB, 7200-rpm 9.50 mm, <b>6.35 cm</b> (2.50 in) SATA hard drive (includes bracket)
638039-001	Intel Dual Core i5-2410M 2.30 GHz processor, (turbo up to 2.90 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)
638553-001	<b>31.75 cm</b> (12.50 in) high definition (HD), light-emitting diode (LED), AntiGlare (AG) SVA display panel
641672-001	Hard drive, 320 GB, 7200-rpm 9.50 mm, <b>6.35 cm</b> (2.50 in) SATA hard drive (includes bracket)
642796-001	Webcam module (select models only), includes microphone and keyboard light
642798-001	Internal microphone module
651358-001	System board for use in all countries and regions except the People's Republic of China and Russia
651359-001	System board for use in only the People's Republic of China and Russia
651360-001	Power button board

Spare part number	Description
651361-001	Function button board
651362-001	Function LED board
651363-001	Smart card reader board and cable
651364-001	Fingerprint reader board and cable
651365-001	Display bezel for use only with computer models not equipped with a webcam
651366-001	Display bezel for use only with computer models equipped with a webcam
651367-001	Display enclosure
651368-001	Display panel cable (includes webcam module cable and ambient light sensor board cable)
651369-001	Display Hinge Kit (includes left and right display hinges and left and right hinge covers)
651370-001	Display hinge covers
651371-001	Antenna Kit (includes WWAN cables, WLAN cables, and MIMO cable)
651372-001	Base enclosure
651373-001	Service access cover
651374-001	Top cover for use only with computer models not equipped with a fingerprint reader (includes fingerprint reader board and cable, TouchPad board and cable, TouchPad button board and cable, and TouchPad bracket)
651375-001	Top cover for use only with computer models equipped with a fingerprint reader (includes fingerprint reader board and cable, TouchPad board and cable, TouchPad button board and cable, and TouchPad bracket)
651376-001	Plastics Kit <b>NOTE:</b> See <a href="#">Plastics Kit on page 27</a> for more Plastics Kit spare part information.
651377-001	Speakers
651378-001	Fan
651379-001	Heat sink (includes replacement thermal material and replacement thermal material cleaning kit)
651380-001	Hard Drive Hardware Kit (includes hard drive connector, hard drive, hard drive bracket, screws, and spacers)
651381-001	Bracket Kit
651382-001	Rubber Kit (includes bumpers for the outside of the base enclosure)
651383-001	Screw Kit
651384-001	Cable Kit (includes Bluetooth module cable and cable)
651385-001	HP 2560 Series Docking Station
651386-001	DVD-ROM Drive (includes bezel and bracket)
651387-001	DVD±RW and CD-RW Super Multi Double-Layer Drive (includes bezel and bracket)
651388-001	<b>6.35 cm</b> (2.50 in) 128 GB solid-state drive (includes bracket)
651389-001	<b>6.35 cm</b> (2.50 in) 160 GB solid-state drive (includes bracket)
651390-001	Keyboard for use in the United States (includes cable)

<b>Spare part number</b>	<b>Description</b>
651390-031	Keyboard for use in the United Kingdom (includes cable)
651390-041	Keyboard for use in Germany (includes cable)
651390-051	Keyboard for use in France (includes cable)
651390-061	Keyboard for use in Italy (includes cable)
651390-071	Keyboard for use in Spain (includes cable)
651390-081	Keyboard for use in Denmark (includes cable)
651390-091	Keyboard for use in Norway (includes cable)
651390-121	Keyboard for use in French Canada (includes cable)
651390-131	Keyboard for use in Portugal (includes cable)
651390-141	Keyboard for use in Turkey (includes cable)
651390-161	Keyboard for use in Latin America (includes cable)
651390-171	Keyboard for use in Saudi Arabia (includes cable)
651390-201	Keyboard for use in Brazil (includes cable)
651390-211	Keyboard for use in Hungary (includes cable)
651390-251	Keyboard for use in Russia (includes cable)
651390-261	Keyboard for use in Bulgaria (includes cable)
651390-281	Keyboard for use in Thailand (includes cable)
651390-291	Keyboard for use in Japan (includes cable)
651390-A41	Keyboard for use in Belgium (includes cable)
651390-A81	Keyboard for use in the Czech Republic and Slovakia (includes cable)
651390-AB1	Keyboard for use in Taiwan (includes cable)
651390-AD1	Keyboard for use in South Korea (includes cable)
651390-B31	Keyboard for international use (includes cable)
651390-B71	Keyboard for use in Finland and Sweden (includes cable)
651390-BA1	Keyboard for use in Slovenia (includes cable)
651390-BB1	Keyboard for use in Israel (includes cable)
651390-BG1	Keyboard for use in Switzerland (includes cable)
651390-DD1	Keyboard for use in Iceland (includes cable)
651390-DJ1	Keyboard for use in Greece (includes cable)
651390-DW1	Keyboard for use in Africa—French/Arabic (includes cable)
651948-001	RTC battery
655022-001	Display Screw Kit
656622-001	Ambient light sensor board

---

<b>Spare part number</b>	<b>Description</b>
656623-001	Display Miscellaneous Kit
658267-001	Display Panel Support Kit (includes display enclosure and antenna)

---

---

# 4 Removal and replacement procedures

## Preliminary replacement requirements

### Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers
- Torx 8 screwdriver

### Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



**NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

### Plastic parts



**CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

---

## Cables and connectors

---

**⚠ CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

---

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

---

**⚠ CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

---

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

---

## Grounding guidelines

### Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

**⚠ CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

**⚠ CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V



## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastic	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


# Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 72 screws that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

## Service tag


When you order parts or request information, provide the computer serial number and model number provided on the service tag, located inside the battery bay.

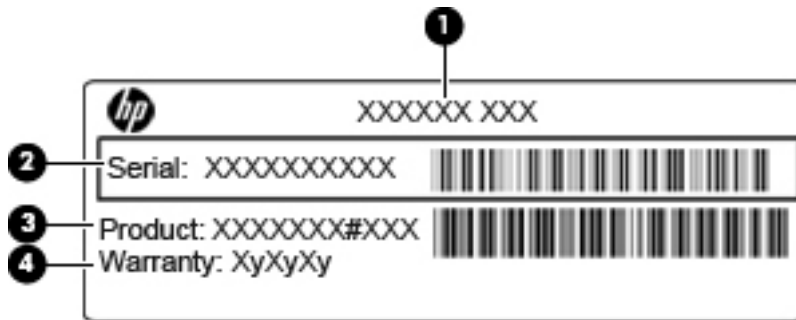

	Component	Description
(1)	Product name	The product name affixed to the front of the computer.
(2)	Serial number	An alphanumeric identifier that is unique to each product.
(3)	Product part number	The identifier that provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(4)	Warranty	The duration of the warranty period for this computer.

## Computer feet

The computer feet are hot-melted to the base enclosure in the locations illustrated below.

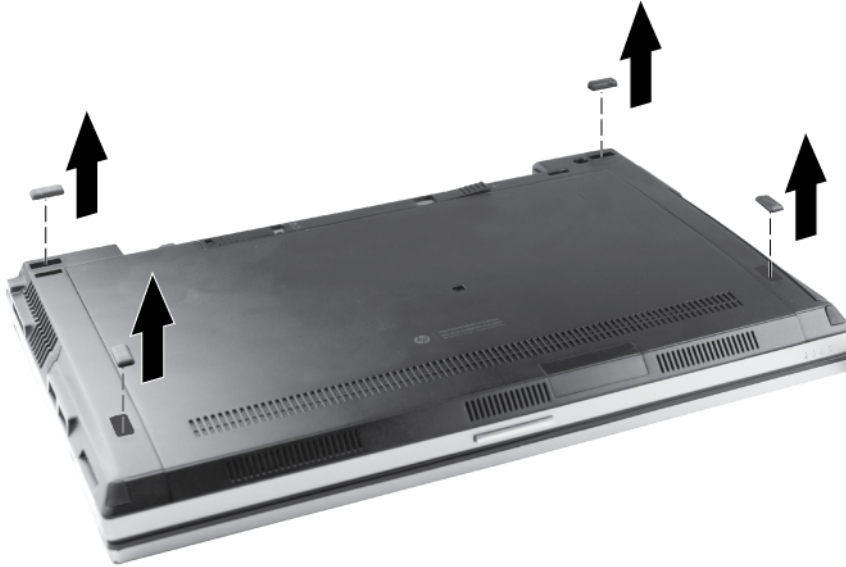

## Battery


Description	Spare part number
9 cell, 100 Wh, 3.0 Ah Li-ion battery	632423-001
6 cell, 62 Wh, 2.8 Ah Li-ion battery	632421-001
6 cell, 55 Wh, 2.8 Ah Li-ion long life battery	632419-001
3 cell, 31 Wh, 2.8 Ah Li-ion battery	632417-001

Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the battery:

1. Turn the computer upside down on a flat surface, with the battery bay toward you.
2. Slide the battery release latch **(1)** to release the battery.
3. Remove the battery **(2)** from the computer.

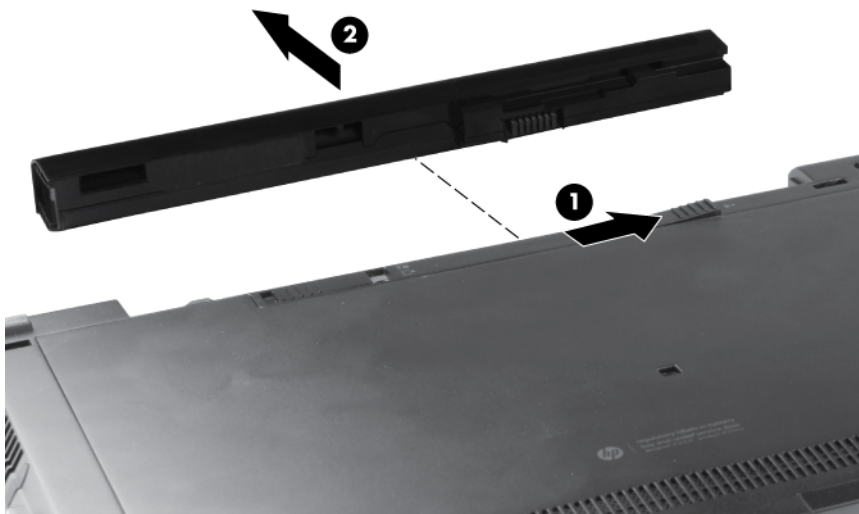

Install the battery by inserting it into the battery bay until you hear a click.

## Service access cover


Description	Spare part number
Service access cover	651373-001

Before disassembling the computer, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).


Remove the service access cover:

1. Position the computer with the battery bay toward you.
2. Slide the release latch (1), and then slide the cover toward the front of the computer (2).
3. Remove the cover (3).

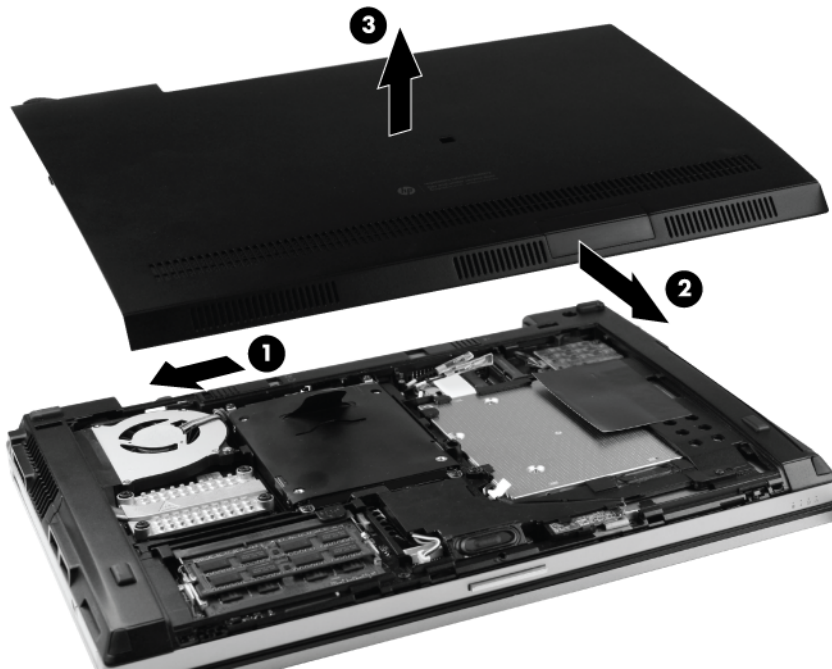

## SIM

 **NOTE:** This section applies only to computer models with WWAN capability.


 **NOTE:** If there is a SIM inserted in the SIM slot, it must be removed before disassembling the computer. Be sure that the SIM is reinserted in the SIM slot after reassembling the computer.

Before removing the SIM, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).

Remove the SIM:

1. Press in on the SIM **(1)**. (The module partially ejects from the SIM slot.)
2. Remove the SIM **(2)** from the slot.

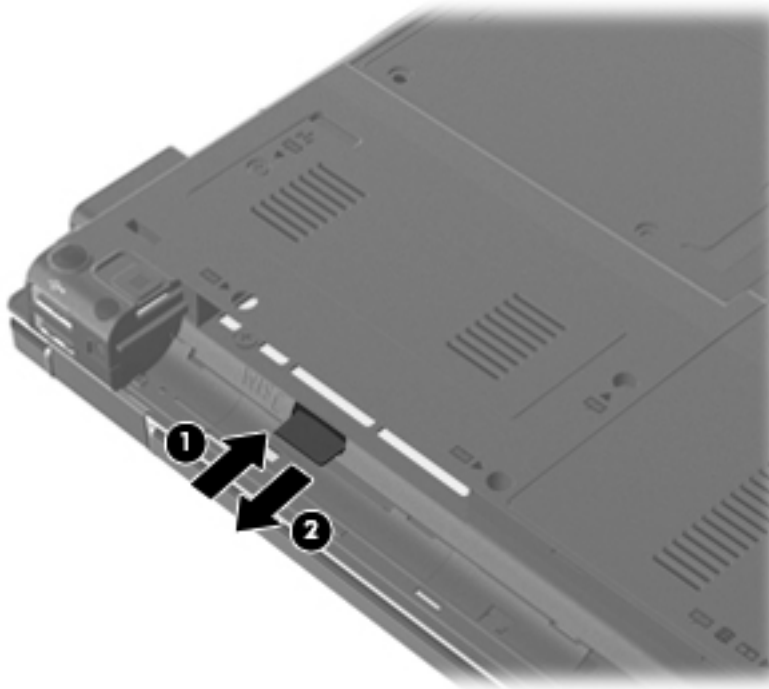

Reverse this procedure to insert the SIM.

## Fan and heat sink


Description	Spare part number
Fan	651378-001
Heat sink	651379-001


Before removing the fan and heat sink, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).

Remove the fan and heat sink:


1. Position the computer upside down, with the battery bay toward you.
2. Disconnect the fan cable (1) from the system board.
3. Loosen the two Phillips M2.0x4.0 captive screws (2) that secure the fan to the system board.
4. Remove the fan (3).

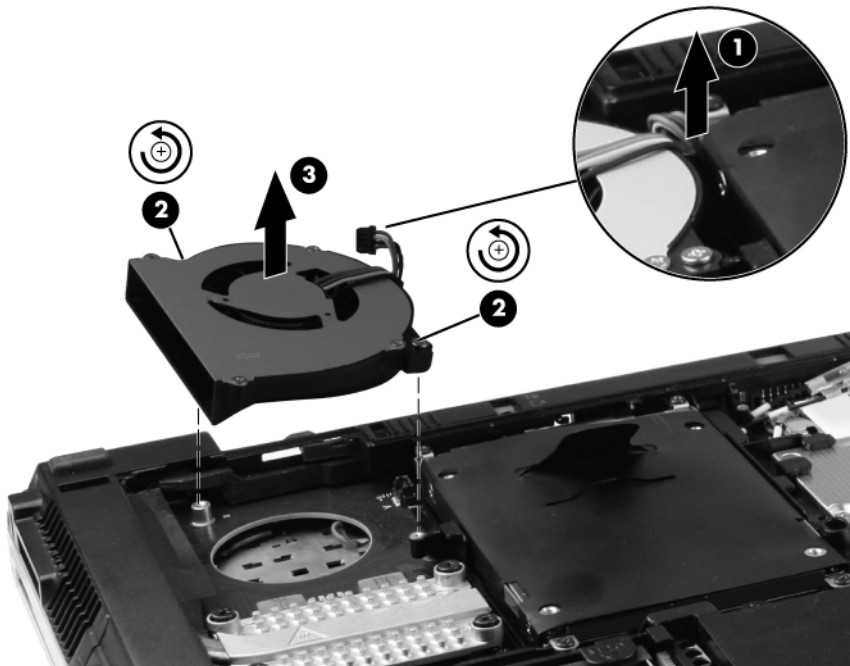


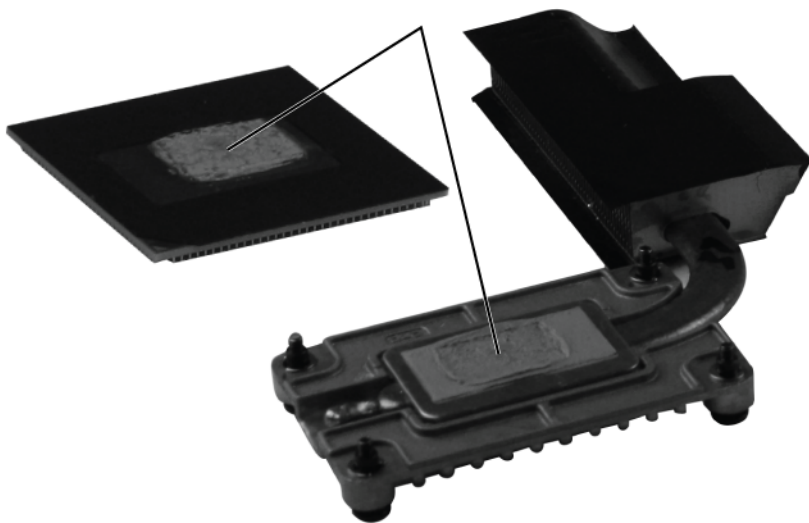
 **NOTE:** When you replace the fan, be sure to route the cable correctly so that it is not pinched by the hard drive.



5. Following the 1, 2, 3, 4 sequence stamped into the heat sink, loosen the four captive screws (1) that secure the heat sink to the system board.
6. Slide the heat sink to the left until it clears the base enclosure (2).
7. Remove the heat sink (3).

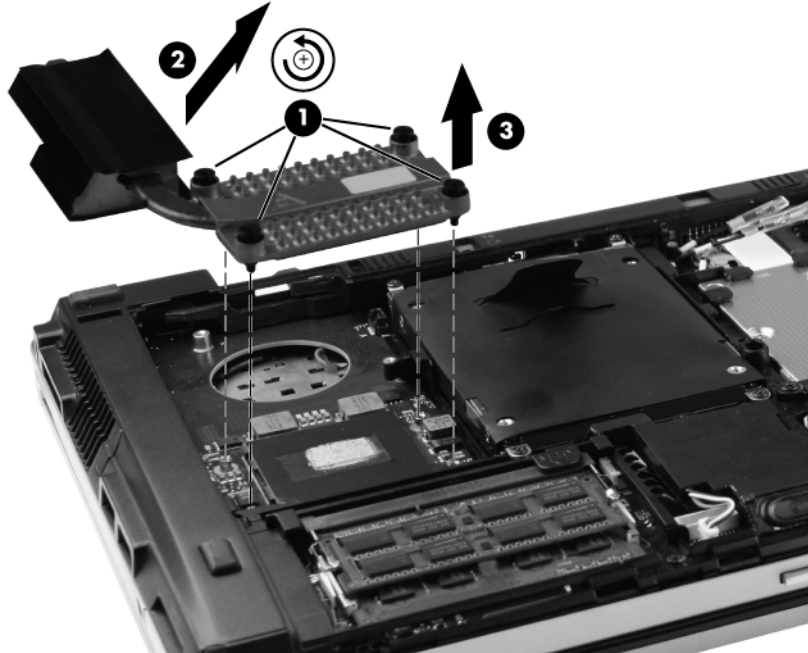

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the heat sink and processor each time the heat sink is removed. Replacement thermal material is included with heat sink, processor, and system board spare part kits.



Reverse this procedure to install the fan and heat sink.

## Processor

Description	Spare part number
Intel Core i7-2620M 2.70 GHz processor, (turbo up to 3.40 GHz), 4 MB L3 cache, 4 threads, standard-voltage (35-W)	631252-001
Intel Core i5-2540M 2.60 GHz processor, (turbo up to 3.30 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)	631255-001
Intel Core i5-2520M 2.50 GHz processor, (turbo up to 3.20 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)	631253-001
Intel Core i5-2430M 2.30 GHz processor, (turbo up to 2.90 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)	653341-001
Intel Core i5-2410M 2.30 GHz processor, (turbo up to 2.90 GHz), 3 MB L3 cache, 4 threads, standard-voltage (35-W)	638039-001


Before removing the processor, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).
6. Remove the fan and heat sink (see [Fan and heat sink on page 44](#)).

Remove the processor:

1. Loosen the captive screw one-half turn **(1)**.

2. Lift the processor (2) straight up and remove it.

 **NOTE:** The gold triangle (3) on the processor must be aligned with the triangle embossed on the processor slot when you install the processor.

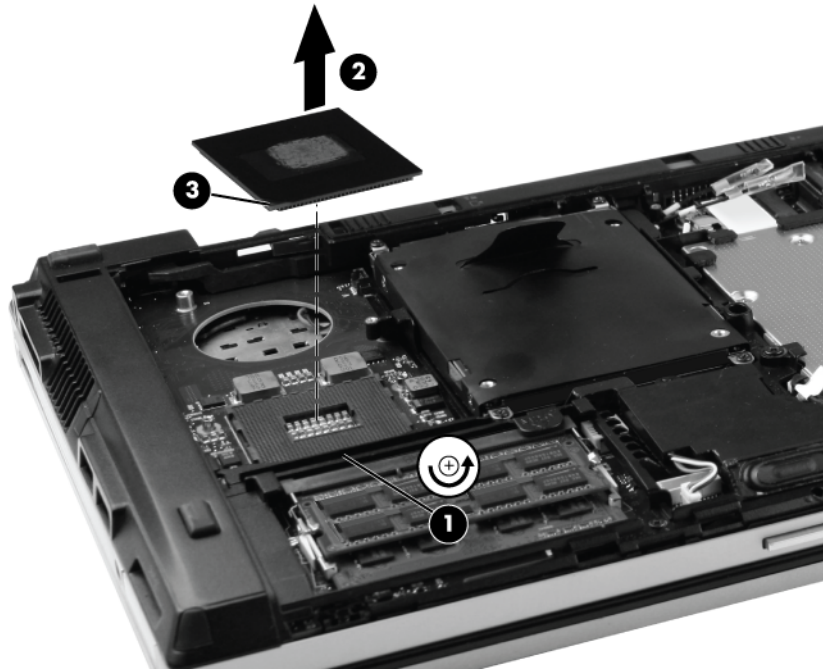

Reverse this procedure to install the processor.

## Memory module



**NOTE:** There are two memory module slots, one above the other. Use the same removal procedure for both slots.

Description	Spare part number
8 GB memory module (PC3-10600, 1333 mHz, DDR3)	634091-001
4 GB memory module (PC3-10600, 1333 mHz, DDR3)	621569-001
2 GB memory module (PC3-10600, 1333 mHz, DDR3)	621565-001

### Update BIOS before adding memory modules

Before adding new memory, make sure you update the computer to the latest BIOS.



**CAUTION:** Failure to update the computer to the latest BIOS prior to installing new memory may result in various system problems.

To update BIOS:

1. Navigate to [www.hp.com](http://www.hp.com).
2. Click **Support & Drivers** > click **Drivers & Software**.
3. In the **Enter a product name/number** box, type the computer model information, and then click **Search**.
4. Click the link for the computer model.
5. Select the operating system, and then click **Next**.
6. Under **Step 2: Select a Download**, click the **BIOS** link.
7. Click the link for the most recent BIOS.
8. Click the **Download** button, and then follow the on-screen instructions.


Before removing a memory module, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).

Remove the memory module:

1. Position the computer with the front toward you.
2. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. The edge **(2)** of the module opposite the slot rises away from the computer.

3. Remove the memory module (3) by pulling the module away from the slot at an angle.

 **NOTE:** The memory module is designed with a notch (4) to prevent incorrect insertion into the memory module slot.

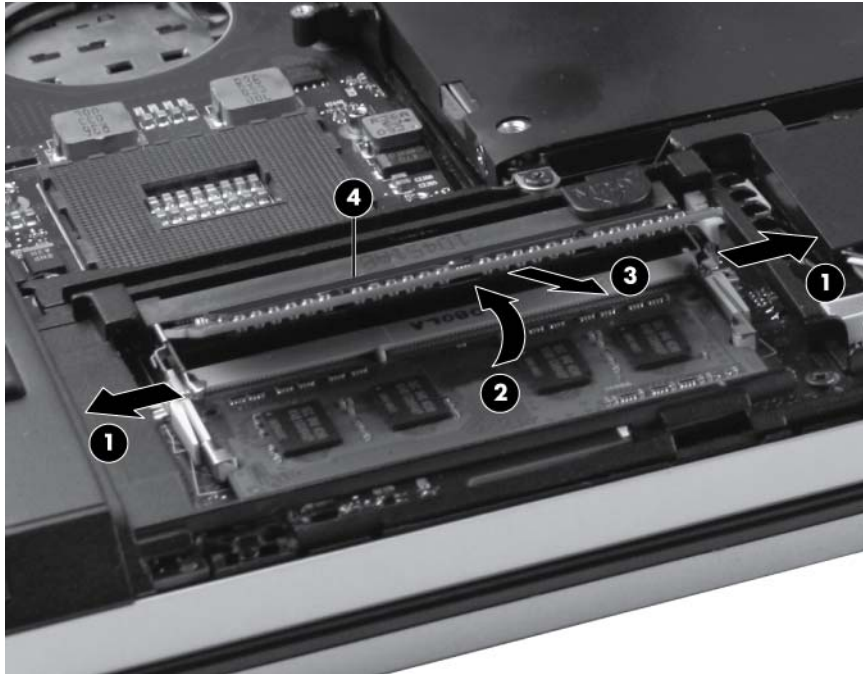

Reverse this procedure to install the memory module.

## Bluetooth module

Description	Spare part number
HP Integrated Module with Bluetooth 2.1 Wireless Technology	537921-001


**NOTE:** The Bluetooth module spare part kit does not include a Bluetooth module cable. The Bluetooth module cable is included in the Cable Kit, spare part number 651384-001.

Before removing the Bluetooth module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).


Remove the Bluetooth module:

1. Disconnect the Bluetooth module cable **(1)** from the system board.
2. Slide the cable **(2)** out of the clip and away from the routing channel.

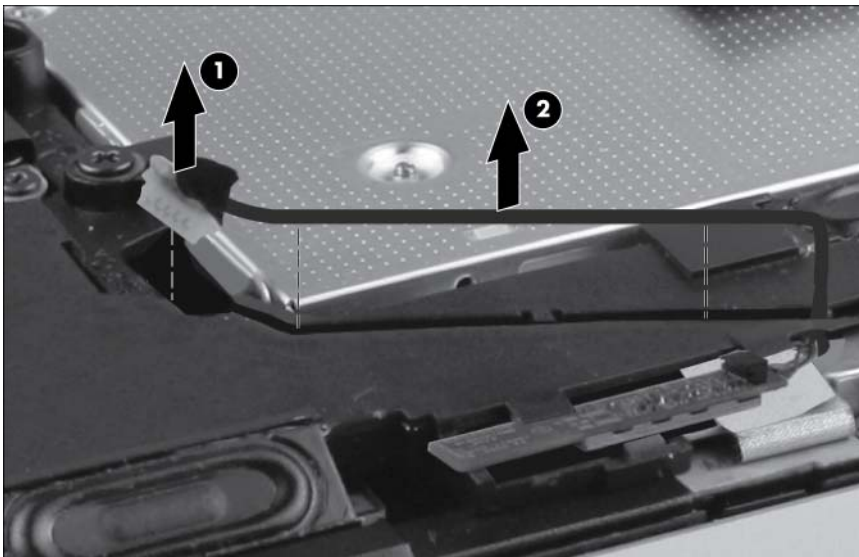


3. Using a thin tool, gently pry the outer edge **(1)** of the module away from the base enclosure.
4. Rotate the module **(2)** away from the base enclosure.

5. Remove the module (3).

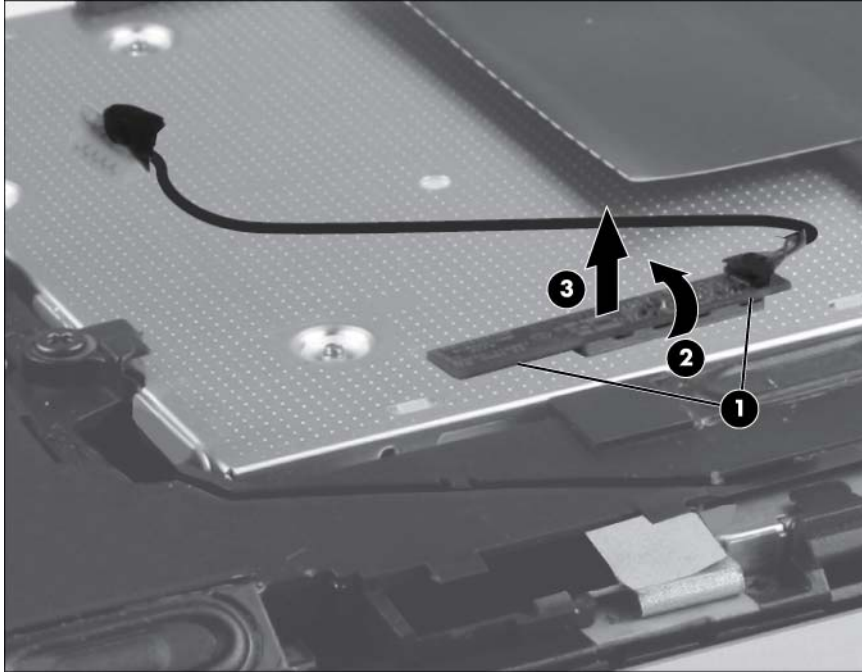

6. If the Bluetooth module cable must be replaced, disconnect the cable from the Bluetooth module.

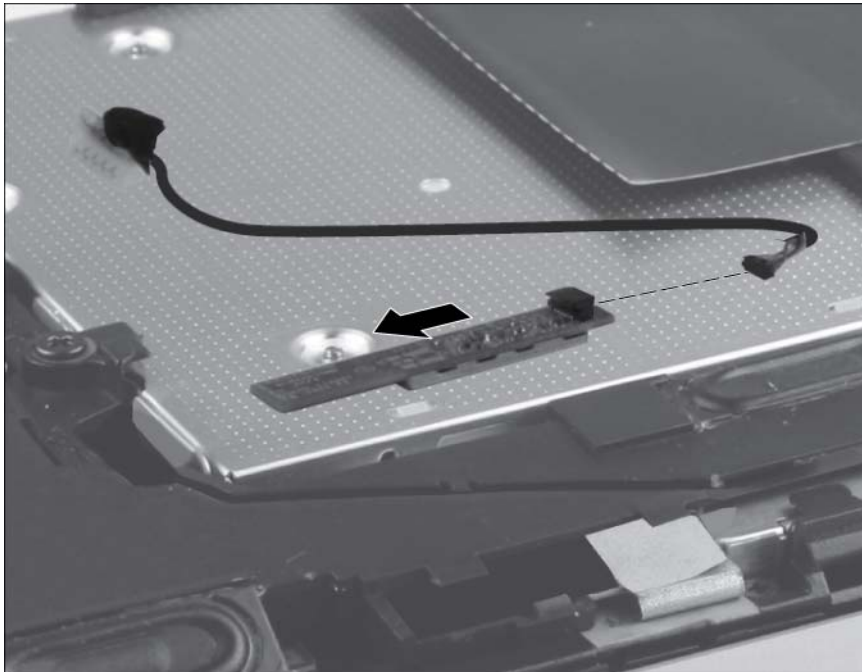

Reverse the above procedure to install the Bluetooth module.



## Speaker


Description	Spare part number
Speaker	651377-001

Before removing the speaker, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).
6. Remove the Bluetooth module (see [Bluetooth module on page 50](#)).

Remove the speaker:

1. Disconnect the speaker cable (1) from the system board.
2. Remove the Phillips M2.0×3.0 screw (2) and the two Phillips M2.0×7.0 screws (3) that secure the speaker to the base enclosure.
3. Remove the speaker (4) from the base enclosure.

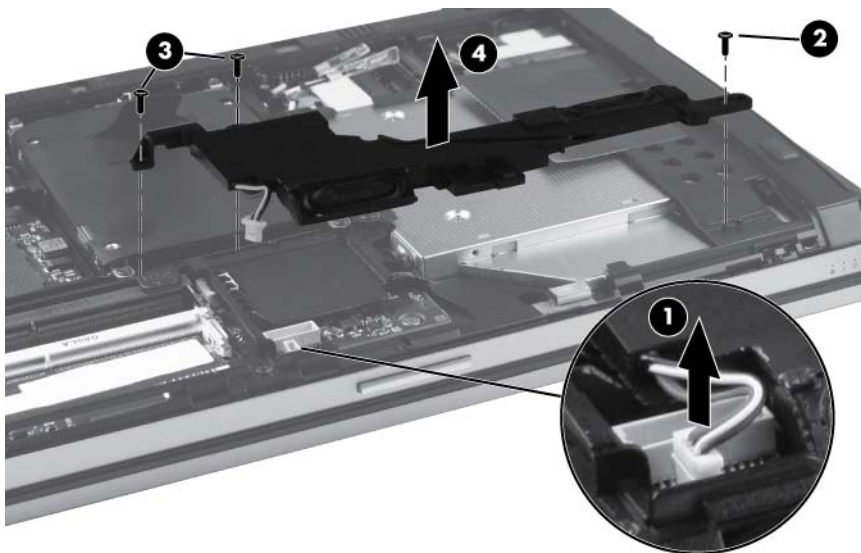

Reverse this procedure to install the speaker.



## Optical drive

Description	Spare part number
DVD±RW and CD-RW SuperMulti Double-Layer Drive	651387-001
DVD-ROM Drive	651386-001

Before removing the optical drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).

Remove the optical drive:

1. Position the computer with the right side toward you.
2. Loosen the Phillips M2.5x8.0 captive screw (1) that secures the optical drive to the computer.
3. Apply outward pressure to the back of the optical drive, and then slide the drive (2) out of the computer.




4. If it is necessary to replace the optical drive bracket, position the optical drive with the rear toward you.
5. Remove the two Phillips M2.0x3.0 screws (1) that secure the optical drive bracket to the optical drive.

6. Remove the optical drive bracket (2).



Reverse this procedure to reassemble and install the optical drive.

## Modem module

 **NOTE:** The modem module spare part kit does not include a modem module cable. The cable is included in the Cable Kit, spare part number 651384-001.


Description	Spare part number
Modem module (56k v.92 MDC data/fax modem)	628824-001

Before removing the modem module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).

Remove the modem module :


1. Remove the Phillips M2.0×3.0 screw (1) that secures the modem module to the system board.
2. Lift the modem module (2) straight up to remove it from the system board.
3. Disconnect the modem module cable (3) from the modem module.

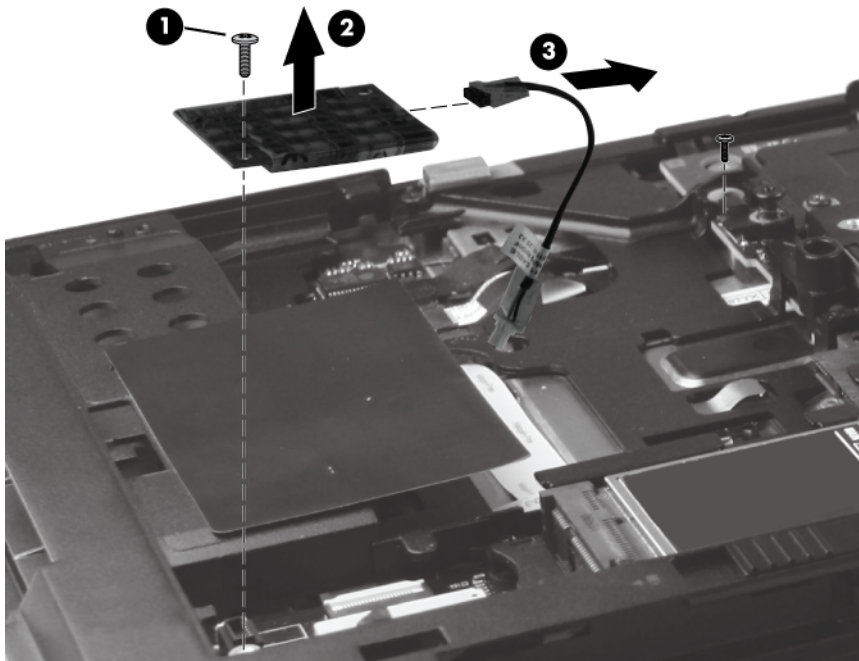

Reverse this procedure to install the modem module.

## WWAN module

Description	Spare part number
HP hs2340 HSPA+ Mobile Broadband Module	632155-001
HP un2430 EV-DO/HSPA Mobile Broadband Module (all countries and regions except the People's Republic of China)	634400-001

 **CAUTION:** The WWAN module and the WLAN module are not interchangeable.

**CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

Before removing the WWAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove service access cover (see [Service access cover on page 42](#)).

Remove the WWAN module:


1. Disconnect the WWAN antenna cables **(1)** from the terminals on the WWLAN module.




**NOTE:** The black WWAN antenna cable is connected to the WWAN module “Main” terminal. The white WWAN antenna cable is connected to the WWAN module “Aux” terminal.

2. Remove the two Phillips M2.0×3.0 screws **(2)** that secure the WWAN module to the computer.

3. Pull the module **(3)** away from the slot at an angle.


 **NOTE:** WWAN modules are designed with a notch **(4)** to prevent incorrect insertion.

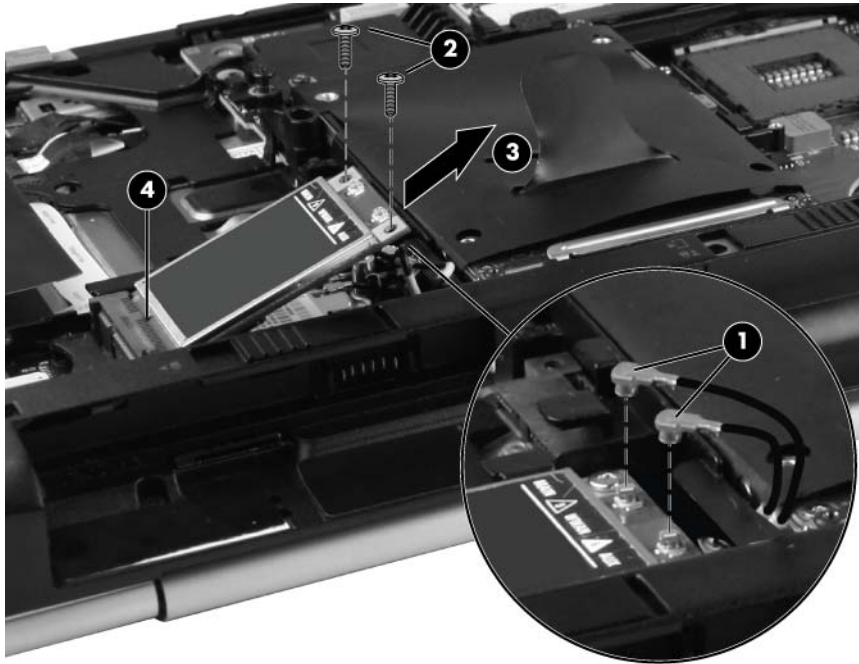

Reverse this procedure to install the WWAN module.

## WLAN module

Description	Spare part number
Broadcom 43224AGN 802.11a/b/g/n WLAN module for use in Antigua and Barbuda, Barbados, Belize, Canada, Guam, and the United States	582564-001
Broadcom 43224AGN 802.11a/b/g/n WLAN module for use in Albania, Algeria, Angola, Argentina, Aruba, Australia, Austria, the Bahamas, Bahrain, Bangladesh, Belgium, Benin, Bolivia, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Cape Verde, the Cayman Islands, the Central African Republic, Chad, Chile, Colombia, the Congo, Costa Rica, Croatia, Cyprus, the Czech Republic and Slovakia, Denmark, Djibouti, the Dominican Republic, Ecuador, Egypt, El Salvador, Equatorial Guinea, Estonia, Finland, France, French Guiana, Gabon, Gambia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, the Ivory Coast, Japan, Jordan, Kazakhstan, Kenya, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Liechtenstein, Lithuania, Luxembourg, Madagascar, Malaysia, the Maldives, Mali, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Morocco, Mozambique, Namibia, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Panama, the People's Republic of China, Peru, the Philippines, Poland, Portugal, Puerto Rico, Qatar, Romania, Russia, Rwanda, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Sierra Leone, Slovenia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Vincent and the Grenadines, Suriname, Sweden, Switzerland, Taiwan, Tanzania, Thailand, Togo, Tunisia, Turkey, Ukraine, the United Arab Emirates, the United Kingdom, the United States Virgin Islands, Uruguay, Uzbekistan, Venezuela, Vietnam, Yemen, Zimbabwe	582564-002
Broadcom 4313AGN 802.11a/b/g/n WLAN module	593836-001
Intel Centrino Ultimate-N 6300, 3x3 a/g/n WiFi Adapter	572511-001
Intel Centrino Advanced N 6205, 2x2 a/b/g/n WiFi Adapter	631954-001

 **CAUTION:** The WWAN module and the WLAN module are not interchangeable.


**CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

Before removing the WLAN module, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)) and the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. WWAN module (see [WWAN module on page 56](#).)


Remove the WLAN module:

1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.

 **NOTE:** The red WLAN antenna cable is connected to the WLAN module “Main” terminal. The blue WLAN antenna cable is connected to the WLAN module “Aux” terminal.

2. Remove the two Phillips M2.5×6.0 screws that secure the WLAN module to the computer **(2)**. (The edge of the module opposite the socket rises.)
3. Pull the module **(3)** away from the slot at an angle.

 **NOTE:** WLAN modules are designed with a notch **(4)** to prevent incorrect insertion.

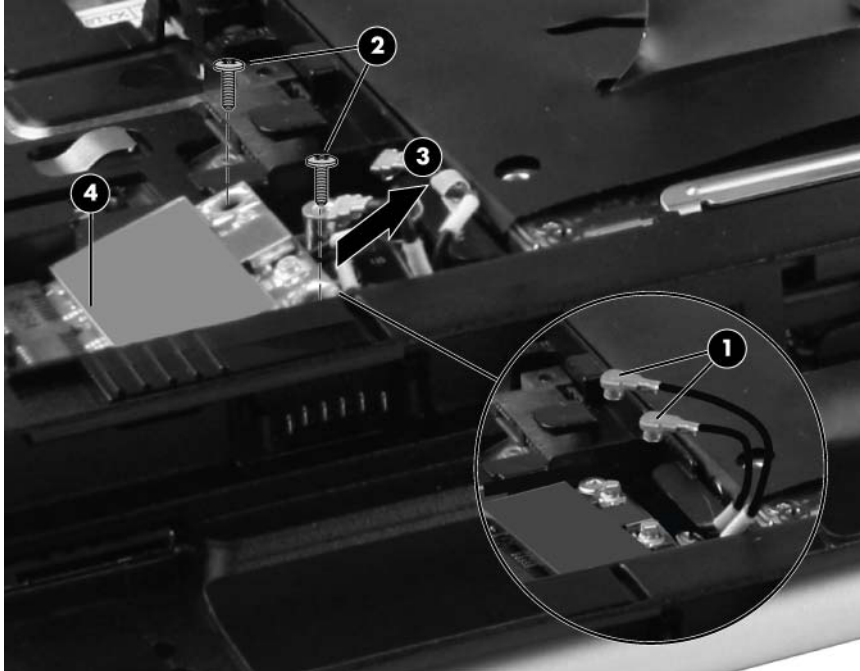

Reverse this procedure to install the WLAN module.

## Hard drive or solid-state drive

Description	Spare part number
Supports the following 9.50 mm, 6.35 cm (2.50 in) SATA hard drives and solid-state drives:	
750 GB, 7200-rpm hard drive	633252-001
500 GB, 7200-rpm hard drive	634925-001
320 GB, 7200-rpm hard drive	641672-001
320 GB, 7200-rpm Self-Encrypting Drive (SED) hard drive	626978-001
250 GB, 7200-rpm hard drive	635225-001
160 GB, solid-state drive	651389-001
128 GB, solid-state drive	651388-001

Before removing the hard drive or solid-state drive, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).
5. Remove the service access cover (see [Service access cover on page 42](#)).

Remove the hard drive or solid-state drive:


1. Position the computer with the front toward you.
2. Loosen the 4 Phillips M2.0x5.0 captive screws **(1)** that secure the drive to the computer.
3. Pull up on the tab **(2)** to remove the drive.



4. If it is necessary to replace the drive connector, remove the connector (3) from the drive.

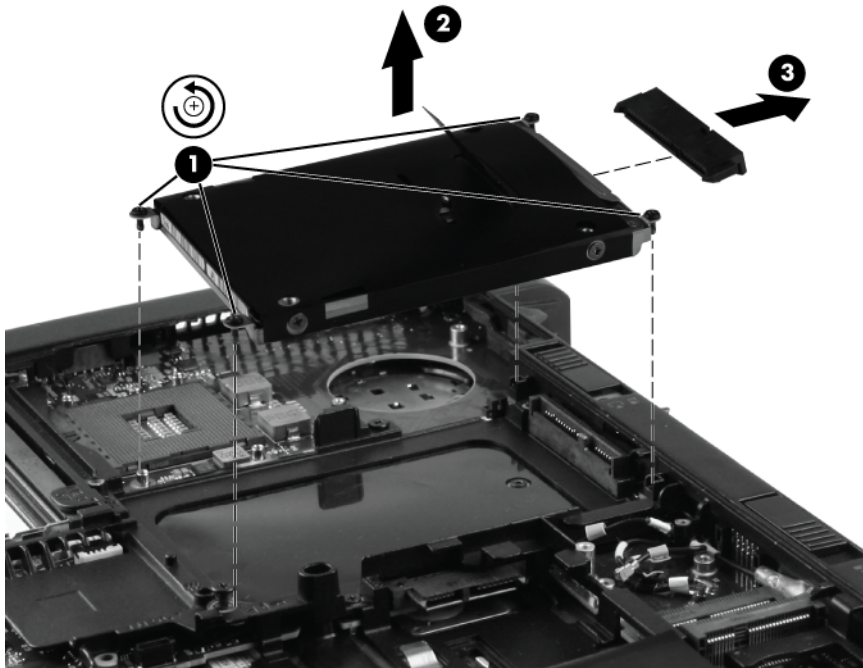

5. If it is necessary to replace the drive bracket, remove the two Phillips M3.0x3.0 screws (1) on each side of the drive, and then lift the bracket (2) away from the drive.

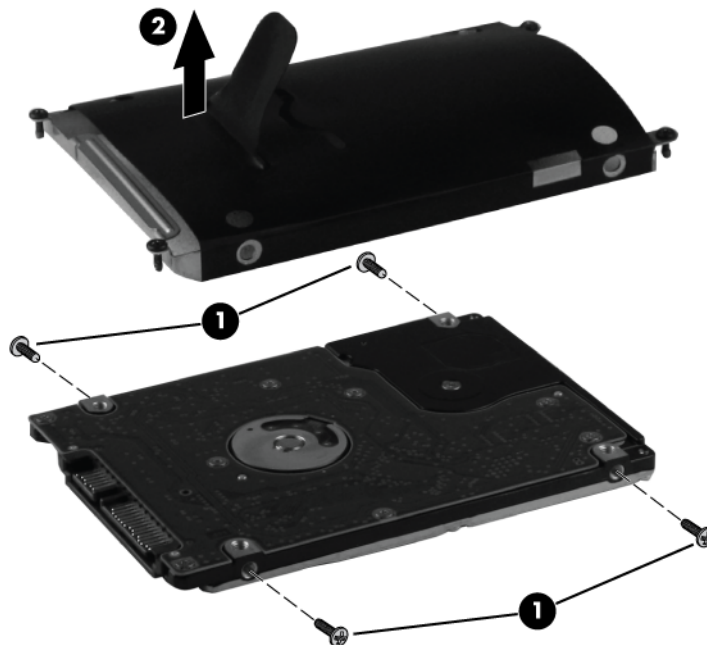

Reverse this procedure to reassemble and install the drive.

## Keyboard


Country/region	Spare part number	Country/region	Spare part number
Belgium	651380-A41	Northwest Africa	651390-001
Brazil	651380-201	Norway	651380-091
Bulgaria	651380-261	Portugal	651380-131
The Czech Republic	651380-A81	Russia	651380-251
Denmark	651380-081	Saudi Arabia	651380-171
France	651380-051	Slovakia	651380-A81
French Canada	651380-121	Slovenia	651380-BA1
Germany	651380-041	South Korea	651380-AD
Greece	651380-DJ	Spain	651380-071
Hungary	651380-211	Sweden and Finland	651380-B71
Iceland	651380-DD1	Switzerland	651380-BG1
Israel	651380-BB1	Taiwan	651380-AB1
Italy	651380-061	Thailand	651380-281
Japan	651380-291	Turkey	651380-141
Latin America	651380-161	The United Kingdom and Singapore	651380-031
The Netherlands	651380-B31	The United States	651380-001

Before removing the keyboard, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)) and the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Fan (see [Fan and heat sink on page 44](#).)

Remove the keyboard:

1. Loosen the three Phillips M2.0x8.0 captive screws that secure the keyboard to the computer.

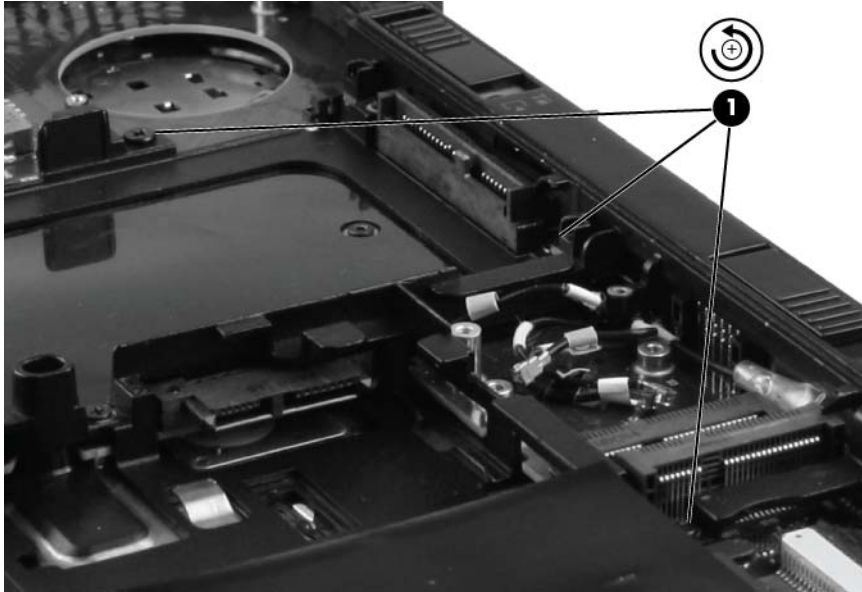

2. Turn the computer right-side up, and then open the display.
3. Carefully position the open computer on its left side, and then press on the keyboard through the opening where the fan was removed.



4. Carefully turn the computer right-side up, with the front toward you.
5. Rotate the keyboard forward until it rests upside down on the palm rest **(1)**.
6. Disconnect the mouse cable **(2)** from the system board.
7. Open the ZIF connector **(3)** for the keyboard cable, and then remove the cable **(4)**.

8. Remove the keyboard (5).



Reverse this procedure to install the keyboard.

## RTC battery


Description	Spare part number
RTC battery	481089-001

Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)) and the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Keyboard (see [Keyboard on page 62](#).)

Remove the RTC battery:

1. Disconnect the RTC cable (1) from the system board.
2. Remove the RTC battery (2) from the socket.

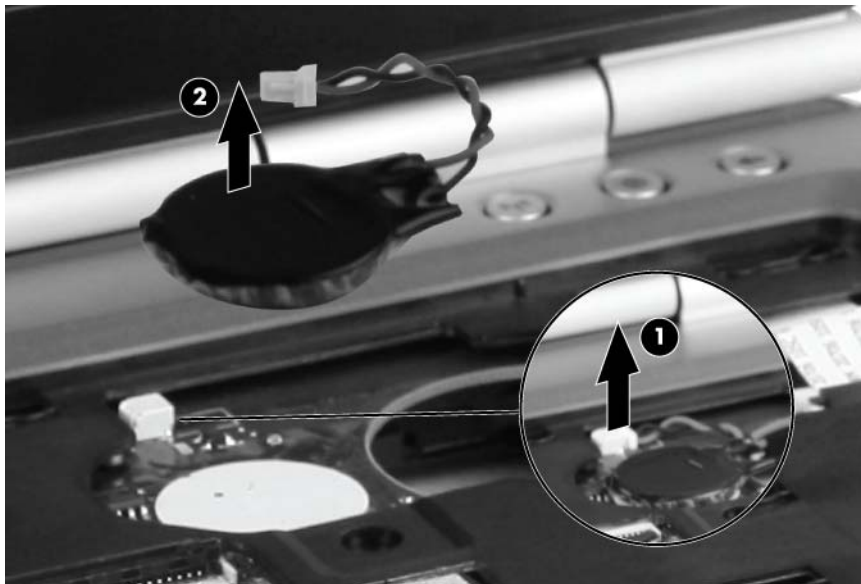

Reverse this procedure to install the RTC battery.

## Base enclosure

Description	Spare part number
Base enclosure	651372-001


Before removing the base enclosure, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer, and remove any media cards from the ExpressCard slot and the Media Card Reader.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
  - a. Battery (see [Battery on page 41.](#))
  - b. Service access cover (see [Service access cover on page 42.](#))
  - c. SIM (see [SIM on page 43.](#))
  - d. Fan and heat sink (see [Fan and heat sink on page 44.](#))
  - e. Bluetooth module (see [Bluetooth module on page 50.](#))
  - f. Speaker (see [Speaker on page 52.](#))
  - g. Optical drive (see [Optical drive on page 53.](#))
  - h. Hard drive or solid-state drive (see [Hard drive or solid-state drive on page 60.](#))
  - i. WWAN (see [WWAN module on page 56.](#))
  - j. WLAN (see [WLAN module on page 58.](#))
  - k. Modem module (see [Modem module on page 55.](#))
  - l. Keyboard (see [Keyboard on page 62.](#))

Remove the base enclosure:

1. Position the computer right-side up, with the front toward you.
2. Open the ZIF connector for the power button cable **(1)**, and remove the cable **(2)**.
3. Open the ZIF connector for the fingerprint reader cable **(3)**, and remove the cable **(4)**.


4. Open the ZIF connector for the function board cable (5), and remove the cable (6).

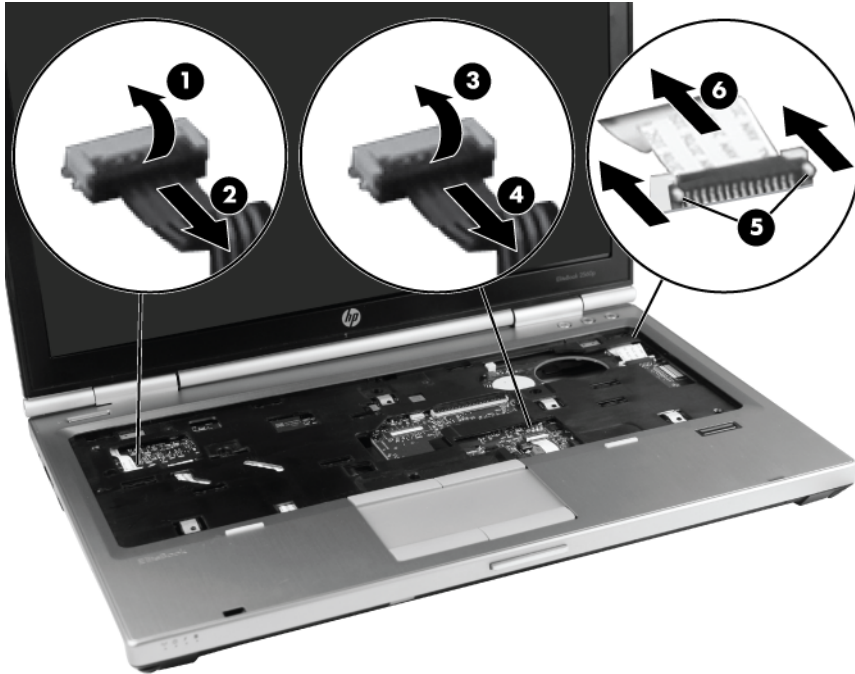

5. Close the display, and position the computer upside down, with the rear toward you.
6. Remove the four Torx 8 2.5x7.0 screws from the hinges.




7. Position the computer with the front toward you. Remove the three Phillips M2.0x7.0 screws (1) at the front of the computer and the three Phillips M2.0x3.0 screws (2) in the optical drive bay.
8. Remove the three screw covers (3) and the five Torx 8 2.5x7.0 screws (4) along the outside edges.
9. Remove the three Phillips M2.0x3.0 screws (5) and the two Phillips M1.6 pan-head screws (6) from the battery bay.

 **NOTE:** Remove the two pan-head screws with a Phillips #0 screwdriver, using a torque of 1.5 kg/cm.



10. Remove the base enclosure (7).

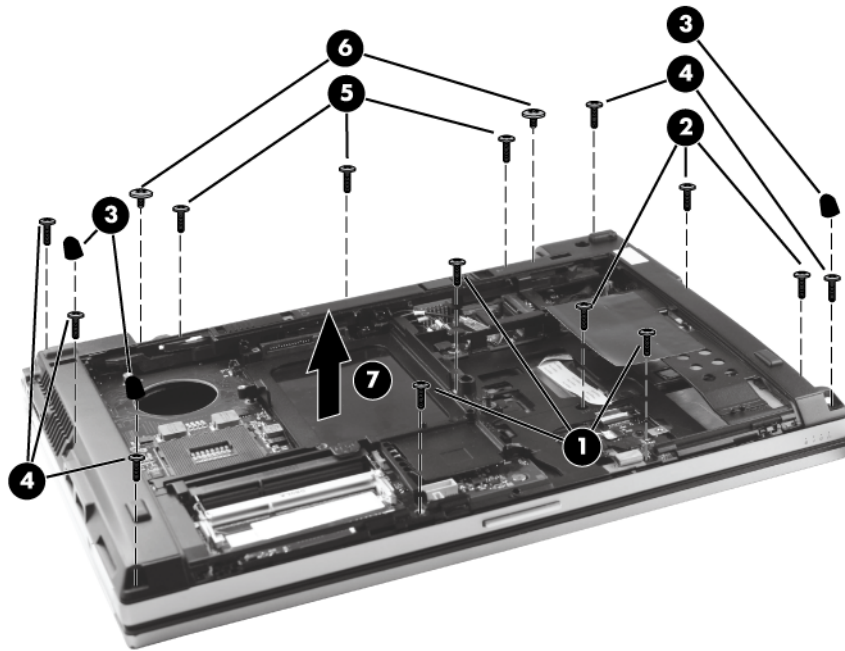



## System board



**NOTE:** The system board spare part kit includes replacement thermal material and a replacement thermal material cleaning kit.

Description	Spare part number
For use in all countries and regions except the People's Republic of China and Russia	651358-001
For use only in the People's Republic of China and Russia	651359-001

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)) and the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Keyboard (see [Keyboard on page 62](#).)
  - c. Base enclosure (see [Base enclosure on page 66](#).)


When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory modules (see [Memory module on page 48](#).)
- WWAN module (see [WWAN module on page 56](#).)
- WLAN module (see [WLAN module on page 58](#).)
- Modem module (see [Modem module on page 55](#).)
- Fan/heat sink assembly (see [Fan and heat sink on page 44](#).)
- Processor (see [Processor on page 46](#).)


Remove the system board:

1. Position the computer upside down, with the battery bay toward you.
2. Remove the ExpressCard blank **(1)** from the card reader, if you have not already done so .
3. Open the ZIF connector for the smart card reader cable **(2)**, and then remove the cable **(3)**.
4. Remove the tape **(4)** from the display cable, and then disconnect the cable **(5)**.

5. Pull the wireless cables (6) away from system board.

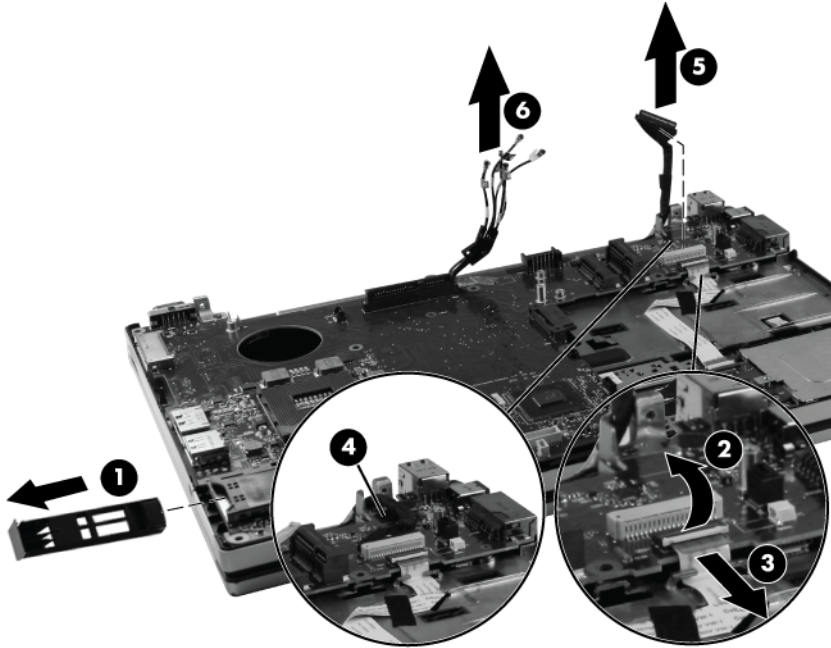

6. Remove the Phillips M2.0x4.0 screw (1) that secures the system board to the top cover. Use the optical drive connector (2) to lift the left side of the system board until it rests at an angle, and then remove the system board (3).

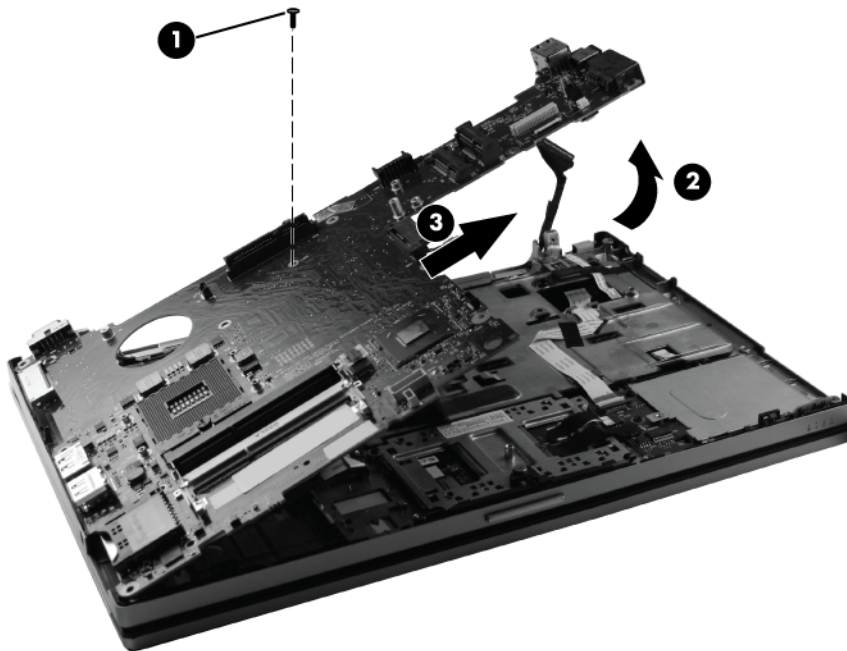

Reverse this procedure to install the system board.

## Top cover



**NOTE:** The top cover spare part kit includes the TouchPad board and cable, TouchPad button board and cable, and TouchPad bracket.

Description	Spare part number
For use only on computer models equipped with a fingerprint reader (includes fingerprint reader and cable)	651375-001
For use only on computer models not equipped with a fingerprint reader	651374-001


Before removing the top cover, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)), and then remove the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Base enclosure (see [Base enclosure on page 66](#).)
  - c. System board (see [System board on page 69](#).)


Remove the top cover:

1. Turn the computer upside down, with the front toward you.
2. Remove the wireless cables from the routing channels **(1)**. Remove WLAN 1 and WWAN 5 from the left channel **(2)**. **Remove** WLAN 2 and WWAN 3 and 6 from the right channel **(3)**.
3. Remove the two Phillips M2.0x7.0 screws **(4)** from the hinges.

4. Slide the top cover toward you and then lift the cover **(5)** up to remove it.

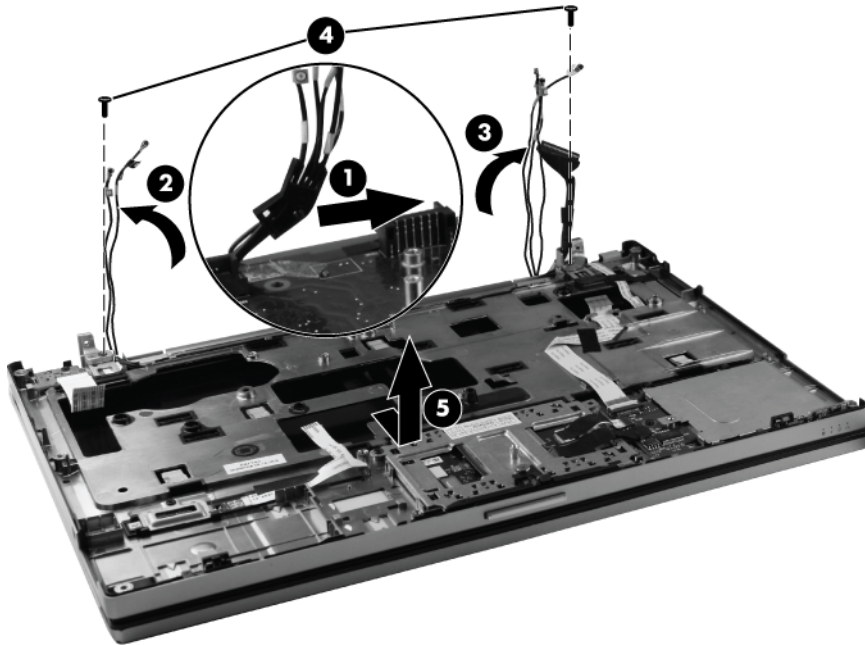

5. If it is necessary to replace the TouchPad, remove the two Phillips M2.0x3.0 screws **(1)** that secure the TouchPad to the top cover.
6. Slide the TouchPad away from you until the front edge **(2)** clears the lip of the top cover. Then lift the TouchPad **(3)** up.
7. Release the TouchPad cable **(4)** from the ZIF connector **(5)**, and then remove the cable **(6)**.

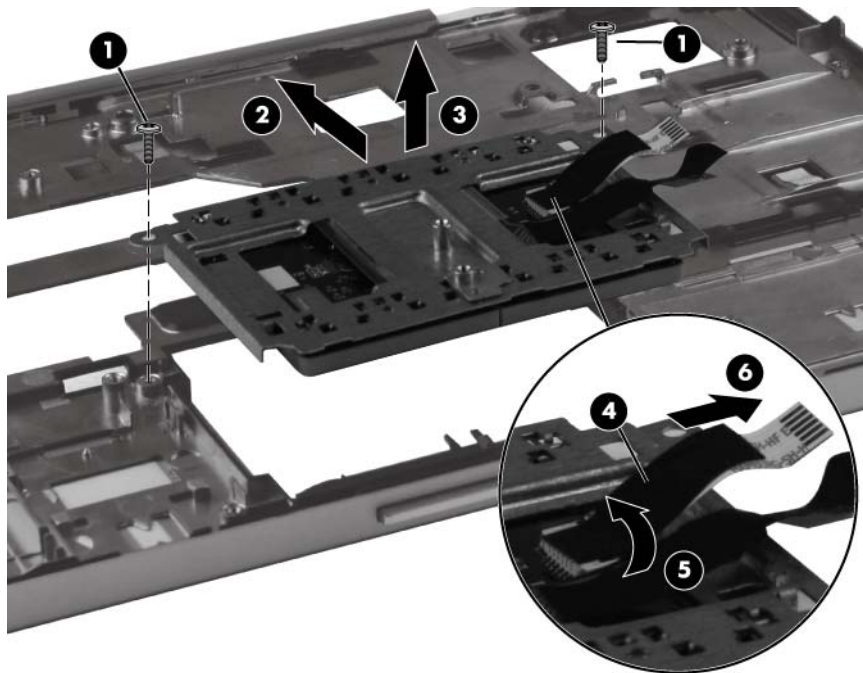

Reverse this procedure to install the TouchPad and the top cover.

## Power button board


Description	Spare part number
Power button board	651360-001

Before removing the power button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)), and then remove the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Keyboard (see [Keyboard on page 62](#).)
  - c. Base enclosure (see [Base enclosure on page 66](#).)
  - d. Top cover (see [Top cover on page 71](#).)

Remove the power button board:

1. Remove the tape (1) from the power button cable.
2. Remove the Phillips M2.0x3.0 screw (2) that secures the power button board to the top cover.
3. Slide the board and cable (3) out of the plastic clips.

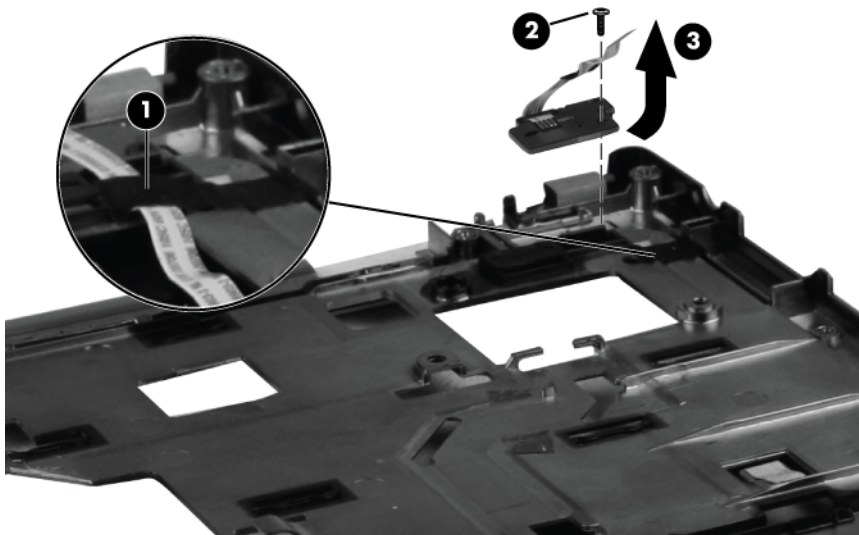

## Function button board


Description	Spare part number
Function button board	651361-001

Before removing the function button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)), and then remove the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Keyboard (see [Keyboard on page 62](#).)
  - c. Base enclosure (see [Base enclosure on page 66](#).)
  - d. Top cover (see [Top cover on page 71](#).)

Remove the function button board:

1. Press down on the plastic clip (1) to release the metal bracket. Remove the bracket (2).
2. Remove the Phillips M2.0x3.0 screw (3) that secures the function button board to the top cover.
3. Remove the function button board (4).

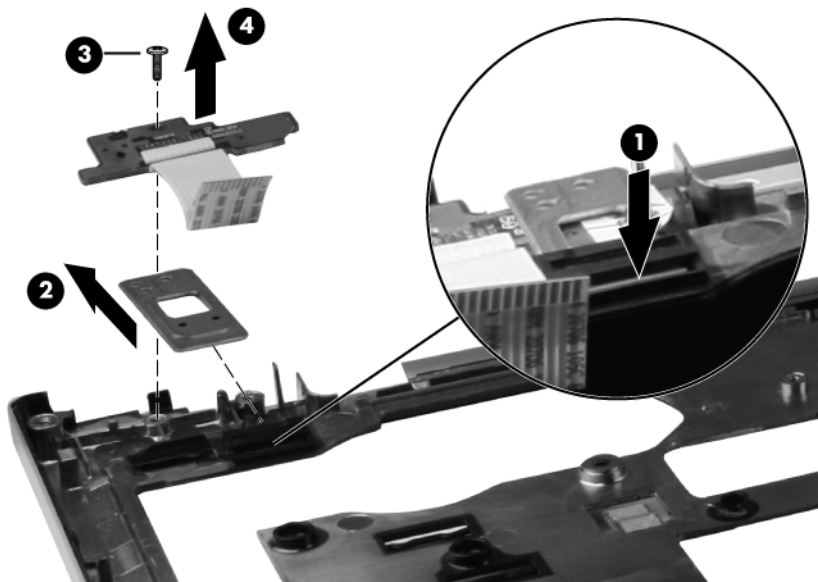

Reverse this procedure to install the function button board.



## Fingerprint reader board


Description	Spare part number
Fingerprint reader board	651364-001

Before removing the fingerprint reader board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)), and then remove the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Keyboard (see [Keyboard on page 62](#).)
  - c. Base enclosure (see [Base enclosure on page 66](#).)
  - d. Top cover (see [Top cover on page 71](#).)

Remove the fingerprint board:

1. Remove the Phillips M2.0x3.0 screw (1) from fingerprint reader frame, and then remove the frame (2).
2. Remove the tape (3) from fingerprint reader cable, and then remove the board and cable (4) from the top cover.

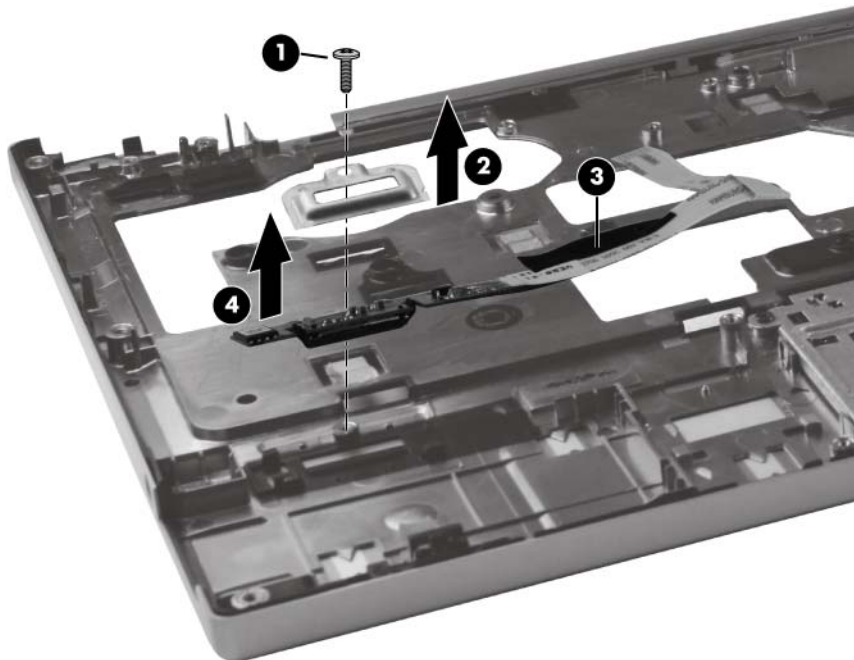

Reverse this procedure to install the fingerprint reader board.

## Smart card reader


Description	Spare part number
Smart card reader (includes cable)	651363-001
Smart card reader bracket	598767-001

Before removing the card reader board and bracket, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)), and then remove the following components:
  - a. Service access cover (see [Service access cover on page 42](#).)
  - b. Keyboard (see [Keyboard on page 62](#).)
  - c. Base enclosure (see [Base enclosure on page 66](#).)
  - d. Top cover (see [Top cover on page 71](#).)

Remove the smart card reader board and bracket:

1. Open the ZIF connector (1) for the smart card cable, and remove the cable (2).
2. Disconnect the cables (3) and (4) from the TouchPad.
3. Remove the Philips M2.0x3.0 screw (5) that secures the smart card reader board to the top cover, and then remove the smart card reader board (6).

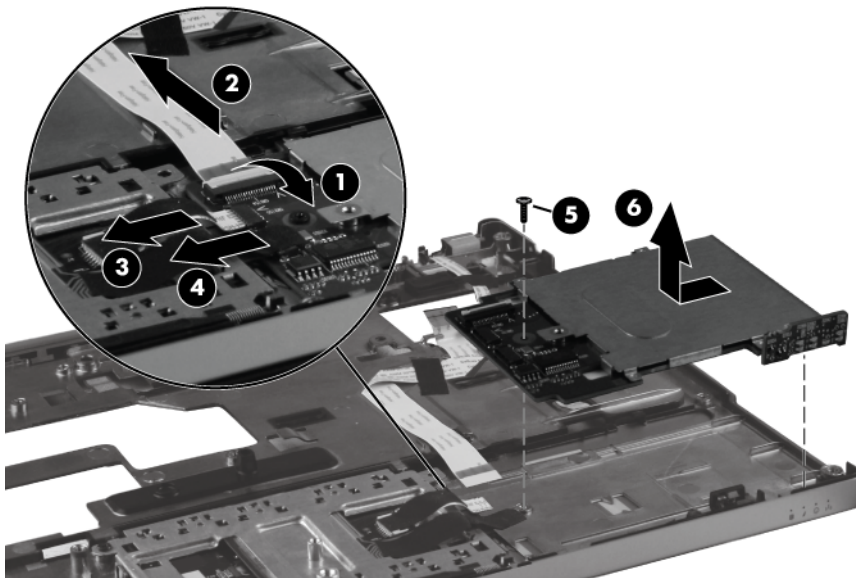

Reverse this procedure to install the smart card reader board, cable, and bracket.



## Display panel



**NOTE:** If it is necessary to replace only the display panel, follow the procedure in this section. To replace internal display components, follow the procedures in this section and then see [Display components on page 80](#).

Description	Spare part number
Display bezel for use with computer models equipped with a webcam	651366-001
Display bezel for use with computer models not equipped with a webcam	651365-001
31.75 cm (12.50 in) high definition (HD), light-emitting diode (LED), AntiGlare (AG) SVA display panel	638553-001


Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)).

Remove the display panel:

1. Turn the computer right-side up, with the front away from you.
2. Open the display as far as possible.
3. Flex the inside edges of the top **(1)**, the left and right sides **(2)**, and the bottom **(3)** of the display bezel until the bezel disengages from the display enclosure.

4. Remove the display bezel (4). The display bezel is available using spare part number 651366-001 (for use only with computer models equipped with a webcam) and 651365-001 (for use only with computer models not equipped with a webcam).

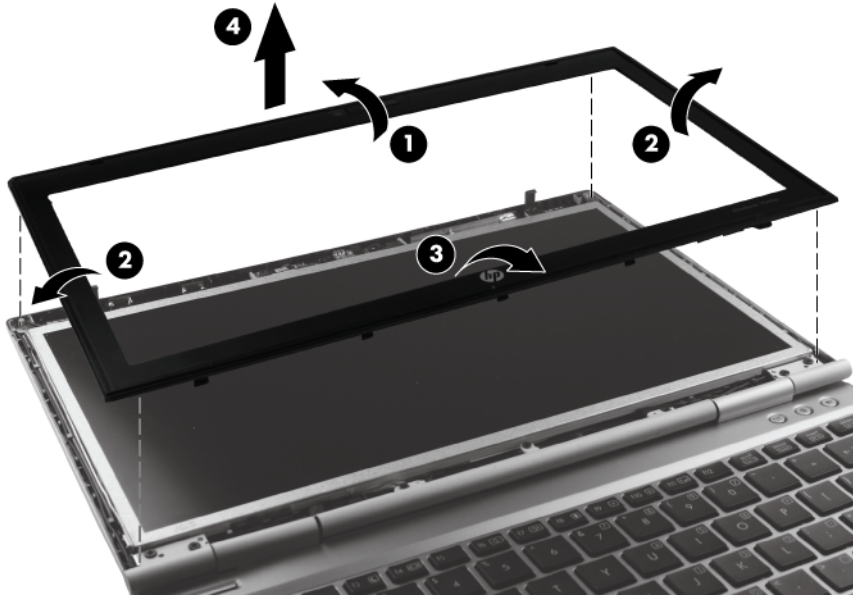


**CAUTION:** The display enclosure will be unsupported when the screws are removed. To prevent damage to the display enclosure, support it before removing the screws in the next step.

5. Remove the four Phillips M2.5x4.0 screws (1) that secure the display hinge covers and the bottom bracket to the computer.
6. Remove the two Phillips M2.0x2.0 screws (2) at the top corners of the display enclosure.



7. Carefully close the display (1).

8. Gently lift the display enclosure (2) away from display panel, which rests on the keyboard.
9. Lift the tape (3) that secures the display cable to the back of the display panel.
10. Remove the cable from the display panel (4).

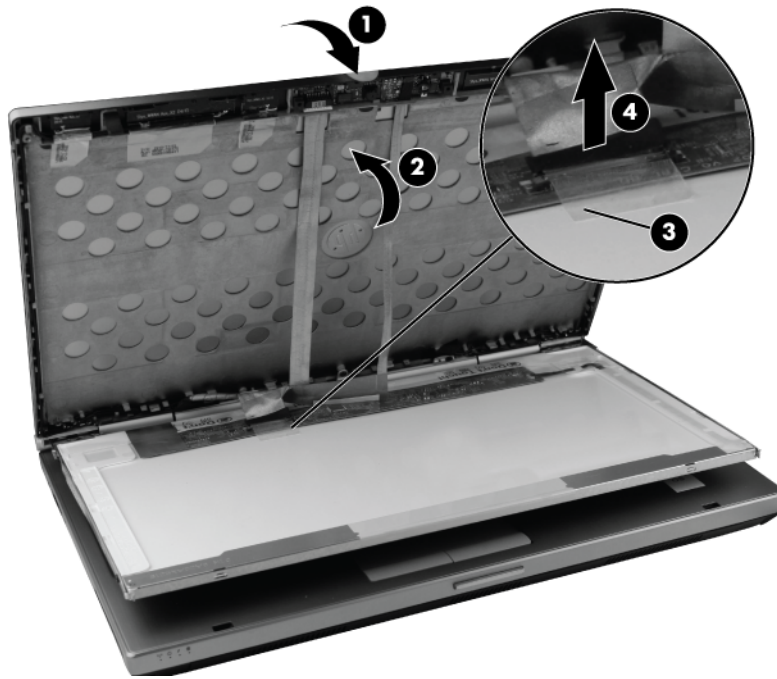

11. Remove the two Phillips M3.0x2.0 screws (1) from each display bracket.
12. Lift the display panel (2) away from the brackets.



## Display components



**NOTE:** For removal of the display panel alone, see [Display panel on page 77](#)). To remove internal display components, remove the display panel, and then continue with the procedures in this section.

Description	Spare part number
Webcam module (select models only), includes microphone and keyboard light	642796-001
Hinge covers	651370-001
Display Hinge Kit (includes left hinge and bracket, and right hinge and bracket)	651369-001


Before removing the internal display components, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 41](#)), and then remove the following components:
  - a. Display panel (see [Display panel on page 77](#).)
  - b. Service access cover (see [Service access cover on page 42](#).)
  - c. Keyboard (see [Keyboard on page 62](#).)
  - d. Base enclosure (see [Base enclosure on page 66](#).)

To replace the webcam module, follow these steps:


1. Disconnect the webcam module cable **(1)** from the webcam module.
2. Gently pry the outside edge **(2)** of the module away from the display enclosure.

3. Remove the webcam module (3).

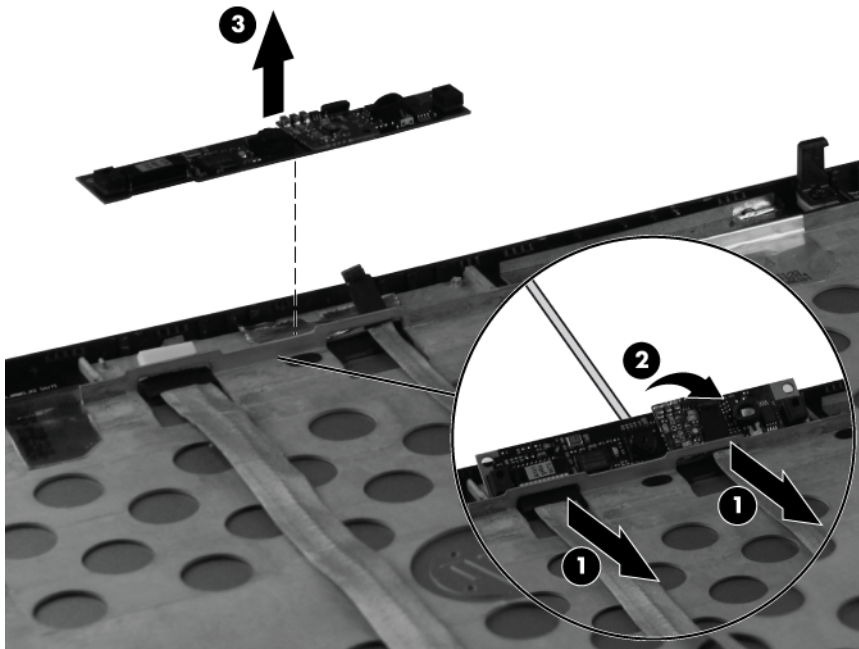

To replace the outer hinge covers, the inner hinge covers, or the hinges and brackets, follow these steps:

1. Pull the display brackets (1) toward the outside edges of the display enclosure, and remove the brackets (2).
2. Slide the inside hinge covers (3) toward the inside of the brackets. Slide the outside hinge covers (4) toward the outside of the brackets.

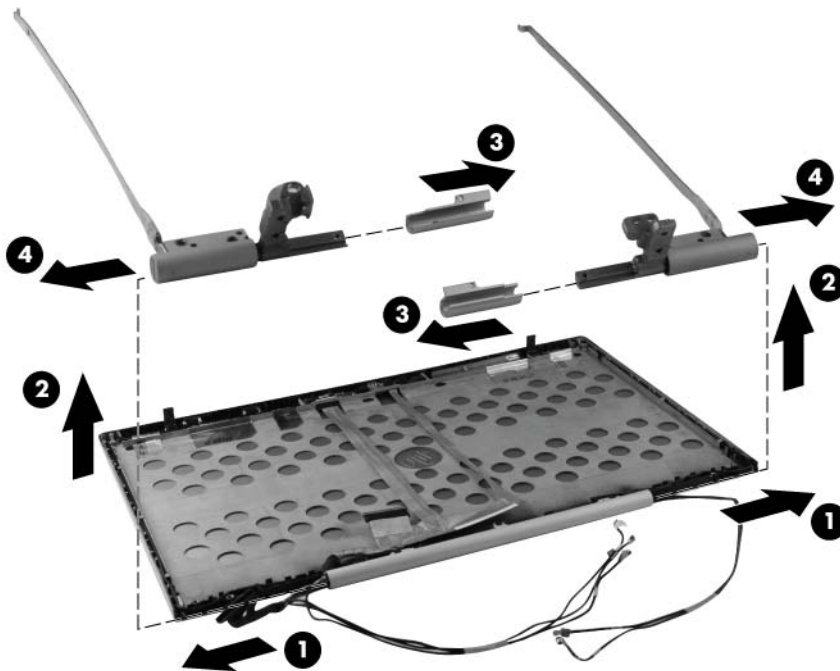

Reverse this procedure to reassemble the display components.


---


# 5 Computer Setup

## Starting Computer Setup

Computer Setup is a preinstalled, ROM-based utility that can be used even when the operating system is not working or will not load.

---

 **NOTE:** Some of the Computer Setup menu items listed in this guide may not be supported by your computer.

 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

---

To start Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press **f10** to enter BIOS Setup.

## Using Computer Setup


### Navigating and selecting in Computer Setup

The information and settings in Computer Setup are accessed from the File, Security, Diagnostics, and System Configuration menus.

To navigate and select in Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
  - To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to click the item.
  - To scroll up and down, click the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key.
  - To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

---

 **NOTE:** You can use either a pointing device (TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make selections in Computer Setup.

---

2. Press **f10** to enter BIOS Setup.
3. Select the **File**, **Security**, or **System Configuration** menu.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –


Use the **tab** key and the arrow keys to select **File > Ignore changes and exit**, and then press **enter**.

- or –
- To save your changes and exit Computer Setup menus, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.
- or –
- Use the **tab** key and the arrow keys to select **File > Save changes and exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

## Restoring factory settings in Computer Setup

---

 **NOTE:** Restoring defaults will not change the hard drive mode.

---

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:


1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press **f10** to enter BIOS Setup.
3. Use a pointing device or the arrow keys to select **File > Restore defaults**.
4. Follow the on-screen instructions.
5. To save your changes and exit, click the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.

– or –

Use the arrow keys to select **File > Save changes and exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

---

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

---

# Computer Setup menus

The menu tables in this section provide an overview of Computer Setup options.



**NOTE:** Some of the Computer Setup menu items listed in this chapter may not be supported by your computer.

## File menu

Select	To do this
System Information	<ul style="list-style-type: none"><li>• View identification information for the computer and the batteries in the system.</li><li>• View specification information for the processor, cache and memory size, system ROM, video revision, and keyboard controller version.</li></ul>
Set System Date and Time	Set or change the date and time on the computer.
System Diagnostics	Displays the following information: <ul style="list-style-type: none"><li>• System Information<ul style="list-style-type: none"><li>◦ Identification information for the computer and the batteries in the system.</li><li>◦ Specification information for the processor, cache and memory size, system ROM, video revision, and keyboard controller version.</li></ul></li><li>• Start-up Test–Verifies the system components needed for starting the computer.</li><li>• Run in Test–Runs a comprehensive check on system memory.</li><li>• Hard Disk Test–Runs a comprehensive self-test on any hard drive in the system.</li><li>• Memory Test–Runs a comprehensive test on any memory installed in the computer.</li><li>• Battery Test–Runs a comprehensive test on any batteries installed in the computer.</li><li>• Error Log–Displays a log file if any errors have occurred.</li></ul>
Restore defaults	Replace the configuration settings in Computer Setup with the original factory settings. (Hard drive mode, password settings, and security settings are not changed when you restore the factory settings.)
Reset BIOS security to factory default	Restore the BIOS security settings to the factory default.
Ignore changes and exit	Cancel any changes entered during the current session. Then exit and restart the computer.
Save changes and exit	Save any changes entered during the current session. Then exit and restart the computer. Your changes go into effect when the computer restarts.



## Security menu



**NOTE:** Some of the menu items listed in this section may not be supported by your computer.

Select	To do this
<b>Administrator Tools</b>	
Setup BIOS Administrator Password	Set up a BIOS administrator password
<b>User Management (requires a BIOS administrator password)</b>	
Create New BIOS User Account	<ul style="list-style-type: none"> <li>Select from a list of BIOS users.</li> <li>Select from a list of ProtectTools users.</li> </ul>
Password Policy (requires a BIOS administrator password)	Revise password policy criteria.
HP SpareKey	Enable/disable HP SpareKey (enabled by default).
Always Prompt for HP SpareKey Enrollment	Enable/disable HP SpareKey enrollment (enabled by default).
Fingerprint Reset on Reboot (If Present)	Reset/clear the fingerprint reader ownership (select models only; disabled by default).
<b>User Tools</b>	
Change Password	Enter, change, or delete a BIOS administrator password.
HP SpareKey Enrollment	Enroll or reset HP SpareKey, which is a set of security questions and answers used if you forget your password.
<b>Anti Theft</b>	
AT-P	Enable/disable Anti-Theft Protection.
DriveLock Passwords	<ul style="list-style-type: none"> <li>Enable/disable DriveLock on any computer hard drive (enabled by default).</li> <li>Change a DriveLock user password or master password.</li> </ul> <p><b>NOTE:</b> DriveLock settings are accessible only when you enter Computer Setup by turning on (not restarting) the computer.</p>
Automatic DriveLock	Enable/disable Automatic DriveLock support.
TPM Embedded Security	<p>Enable/disable support for Trusted Platform Module (TPM) Embedded Security, which protects the computer from unauthorized access to owner functions available in Embedded Security for ProtectTools. For more information, refer to the ProtectTools software</p> <p><b>NOTE:</b> You must have a setup password to change this setting.</p>
Disk Sanitizer	<p>Run Disk Sanitizer to destroy all existing data on the hard drive or the standard-voltage hard drive in the Upgrade bay.</p> <p><b>CAUTION:</b> If you run Disk Sanitizer, the data on the selected drive is destroyed permanently.</p>
System IDs	Enter a user-defined computer asset tracking number and ownership tag.

## System Configuration menu



**NOTE:** Some of the menu items listed in this section may not be supported by your computer.

Select	To do this
Language	Change the Computer Setup language.
Boot Options	<ul style="list-style-type: none"><li>• Set a Startup Menu delay (in seconds).</li><li>• Set the MultiBoot Express Boot Popup delay in seconds.</li><li>• Enable/disable Custom Logo (disabled by default).</li><li>• Enable/disable Display Diagnostic URL (enabled by default).</li><li>• Enable/disable CD-ROM boot (disabled by default).</li><li>• Enable/disable SD Card boot (enabled by default).</li><li>• Enable/disable floppy boot (enabled by default).</li><li>• Enable/disable PXE Internal NIC boot (enabled by default).</li><li>• Enable/disable Unified Extensible Firmware Interface (UEFI) Boot Mode (disabled by default).</li><li>• Set the Legacy Boot Order.</li></ul>
Device Configurations	<ul style="list-style-type: none"><li>• Enable/disable USB legacy support (enabled by default). When enabled, USB legacy support allows the following:<ul style="list-style-type: none"><li>◦ Use of a USB keyboard in Computer Setup even when a Windows operating system is not running</li><li>◦ Startup from bootable USB devices, including a hard drive, diskette drive, or optical drive connected by a USB port to the computer</li></ul></li><li>• Select a parallel port mode: ECP (Enhanced Capabilities Port), standard, bidirectional, or EPP (Enhanced Parallel Port).</li><li>• Enable/disable fan always on while connected to an AC outlet (enabled by default).</li><li>• Enable/disable Data Execution Prevention (select models only). When enabled, the processor can disable some virus code execution, which helps to improve computer security (disabled by default).</li><li>• SATA (Serial Advanced Technology Attachment) device mode. The following options are available:<ul style="list-style-type: none"><li>◦ AHCI (Advanced Host Controller Interface)</li><li>◦ IDE (Integrated Drive Electronics)</li><li>◦ RAID (select models only)</li></ul></li></ul>

---

Select	To do this
Device Configurations ( <i>continued</i> )	<p data-bbox="879 222 1417 275"><b>NOTE:</b> Availability of these options varies by computer model.</p> <ul data-bbox="879 296 1465 926" style="list-style-type: none"><li data-bbox="879 296 1465 348">• Enable/disable secondary battery fast charge (enabled by default).</li><li data-bbox="879 369 1465 392">• Enable/disable HP QuickLook (enabled by default).</li><li data-bbox="879 413 1465 466">• Enable/disable Preboot Authentication on HP QuickLook Boot (enabled by default).</li><li data-bbox="879 487 1465 510">• Enable/disable HP QuickWeb (enabled by default).</li><li data-bbox="879 531 1465 583">• Enable/disable HP QuickWeb Write Protect (disabled by default).</li><li data-bbox="879 604 1465 657">• Enable/disable Virtualization Technology (select models only; disabled by default).</li><li data-bbox="879 678 1465 730">• Enable/disable TXT (Intel Trusted Execution Technology) (select models only; disabled by default).</li><li data-bbox="879 751 1465 774">• Multi Core CPU (enabled by default).</li><li data-bbox="879 795 1465 819">• Intel HT Technology (enabled by default).</li><li data-bbox="879 840 1465 863">• Enable/disable Wake on USB (enabled by default).</li><li data-bbox="879 884 1465 936">• Enable/disable Num lock state at boot (disabled by default).</li></ul>

---

Select	To do this
Built in Device Options	<ul style="list-style-type: none"> <li>• Enable/disable the wireless button state (enabled by default).</li> <li>• Enable/disable embedded WLAN device radio (select models only; enabled by default).</li> <li>• Enable/disable the embedded Bluetooth device radio (enabled by default).</li> <li>• Enable/disable the Network Interface Controller (LAN) (enabled by default).</li> <li>• Enable/disable LAN/WLAN switching (disabled by default).</li> <li>• Set the wake on LAN state. Options include the following: <ul style="list-style-type: none"> <li>◦ Disabled</li> <li>◦ Boot to Network</li> <li>◦ Follow Boot Order</li> </ul> </li> <li>• Enable/disable the Ambient Light Sensor.</li> <li>• Enable/disable the Notebook Upgrade bay device (enabled by default).</li> <li>• Enable/disable the fingerprint device (enabled by default).</li> <li>• Enable/disable the integrated camera (enabled by default).</li> <li>• Enable/disable the Power Monitor Circuit (enabled by default).</li> <li>• Enable/disable the audio device (enabled by default).</li> <li>• Enable/disable a modem device (enabled by default).</li> <li>• Enable/disable the microphone (enabled by default).</li> <li>• Enable/disable the internal speakers (enabled by default).</li> </ul>
Port Options	<p><b>NOTE:</b> NOTE: All port options are enabled by default.</p> <ul style="list-style-type: none"> <li>• Enable/disable the serial port.</li> <li>• Enable/disable the parallel port.</li> <li>• Enable/disable the flash media reader.</li> <li>• Enable/disable the USB port. <p><b>CAUTION:</b> Disabling the USB port also disables MultiBay devices and ExpressCard devices on the advanced port replicator.</p> </li> <li>• Enable/disable the 1394 port.</li> <li>• Enable/disable the ExpressCard slot.</li> <li>• Enable/disable the Smart Card slot.</li> <li>• Enable/disable the eSATA/USB port.</li> </ul>

Select	To do this
AMT Options	<ul style="list-style-type: none"> <li>• Enable/disable Firmware Verbosity.</li> <li>• Enable/disable AMT Setup Prompt (Ctrl-P).</li> <li>• Enable/disable USB Key Provisioning Support.</li> <li>• Enable/disable Unconfigure AMT on next boot.</li> <li>• Select Terminal Emulation Mode.               <ul style="list-style-type: none"> <li>◦ ANSI</li> <li>◦ VT100</li> </ul> </li> <li>• Enable/disable Firmware Progress Event Support.</li> <li>• Enable/disable Initiate Intel CIRA.</li> </ul>
Set Security Level	Change, view, or hide security levels for all BIOS menu items.
Restore Security Defaults	Restore the default security settings.

# 6 Specifications

## Computer specifications

	Metric	U.S.
<b>Dimensions</b>		
Depth	20.90 cm	8.23 in
Width	30.52 cm	12.02 in
Height (front to back)	2.74 cm to 3.28 cm	1.08 in to 1.30 in
<b>Weight</b>		
	1.67 kg	3.68 lbs
<b>Input power</b>		
Operating voltage	19.0 V dc @ 3.5 A – 65 W	
Operating current	3.5 A	
<b>Temperature</b>		
Operating	5°C to 35°C	41°F to 95°F
<b>Relative humidity</b>		
Operating	10% to 90%	
Nonoperating	5% to 90%	
<b>Maximum altitude</b> (unpressurized)		
<b>Shock</b>		
Operating	125 g, 2 ms, half-sine	
Nonoperating	200 g, 2 ms, half-sine	
<b>Random vibration</b>		
Operating	0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate	
Nonoperating	1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate	
<b>NOTE:</b> Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.		

## 31.75 cm (12.50 in) display specifications

	<b>Metric</b>	<b>U.S.</b>
<b>Dimensions</b>		
Width	<b>16.9 cm</b>	6.7 in
Depth	<b>26.2 cm</b>	10.3 in
Diagonal	<b>30.8 cm</b>	12.1 in
<b>Number of colors</b>	Up to 16.8 million	
<b>Contrast ratio</b>	250:1 (typical)	
<b>Brightness</b>	180 nits (typical)	
<b>Backlight</b>	LED	
<b>Character display</b>	80 × 25	
<b>Total power consumption</b>	4.0 W	
<b>Viewing angle</b>	+/-40° horizontal, +20°/-40° vertical (typical)	

## Hard drive specifications

	750 GB*	500 GB*	320 GB*	250 GB*
<b>Dimensions</b>				
Height	9.5 mm	9.5 mm	9.5 mm	9.5 mm
Width	70 mm	70 mm	70 mm	70 mm
Weight	115 g	101 g	101 g	101 g
<b>Interface type</b>	SATA	SATA	SATA	SATA
<b>Transfer rate</b>	300 MB/sec	100 MB/sec	100 MB/sec	100 MB/sec
<b>Security</b>	ATA security	ATA security	ATA security	ATA security
<b>Seek times</b> (typical read, including setting)				
Single track	1.5 ms	3 ms	3 ms	3 ms
Average	11 ms	13 ms	13 ms	13 ms
Maximum	22 ms	24 ms	24 ms	24 ms
<b>Logical blocks</b>	1,465,149,168	976,752,240	625,121,433	488,376,120
<b>Disk rotational speed</b>	7200 rpm	7200 rpm	7200 rpm	7200 rpm
<b>Operating temperature</b>	<b>5°C to 55°C (41°F to 131°F)</b>			
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.				
<b>NOTE:</b> Certain restrictions and exclusions apply. Contact technical support for details.				



# DVD±RW and CD-RW SuperMulti Double-Layer Drive specifications

<b>Applicable disc</b>	<b>Read:</b>	<b>Write:</b>
	CD-DA, CD+(E)G, CD mIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo cD, Video CD), Multisession CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM	CD-R and CD-RW DVD+R, DVD+RW, DVD-R, DVD-RW, DVD-RAM
<b>Access time</b>	<b>CD</b>	<b>DVD</b>
Random	< 175 ms	< 230 ms
<b>Cache buffer</b>	2.5 MB	
<b>Data transfer rate</b>		
24X CD-ROM	3,600 KB/sec	
8X DVD	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
16X CD-RW	2,400 KB/sec	
8X DVD+R	10,800 KB/sec	
4X DVD+RW	5,400 KB/sec	
8X DVD-R	10,800 KB/sec	
4X DVD-RW	5,400 KB/sec	
2.4X DVD+R(9)	2,700 KB/sec	
5X DVD-RAM	6,750 KB/sec	
<b>Transfer mode</b>	Multiword DMA Mode	

## DVD-ROM Drive specifications

Applicable disc	Read:	Write:
	CD-DA, CD+(E)G, CD MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo cD, Video CD), Multisession CD (Photo cD, CDEXTRA, Portfolio, CD-R, CD-RW), CDR, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM	CD-R and CD-RW
Access time	CD	DVD
Random	< 110 ms	< 130 ms
Cache buffer	2 MB	
Data transfer rate		
24X CD-ROM	3,600 KB/sec	
8X DVD	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
16X CD-RW	3,600 KB/sec	

---

# 7 Backup and recovery


## Windows 7


To protect your information, use Windows Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), create system repair discs (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

Windows Backup and Restore provides the following options:

- Creating a system repair disc (select models only)
- Backing up individual files and folders
- Creating a system image (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

 **NOTE:** In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

---

## Backing up your information

Recovery after a system failure is as complete as your most current backup. You should create system repair discs (select models only) and your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. The system repair discs (select models only) are used to start up (boot) the computer and repair the operating system in case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents library, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To create a screen shot:

1. Display the screen you want to save.

2. Copy the screen image:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.


3. Open a word-processing document, and then select **Edit > Paste**.

The screen image is added to the document.

4. Save the document.

- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer.

---


 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

---


- When backing up to discs, number each disc before inserting it into the optical drive of the computer.

To create a backup using Backup and Restore, follow these steps:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---


 **NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---

1. Select **Start > All Programs > Maintenance > Backup and Restore**.

2. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create a system repair disc (select models only).

---

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.


---

## Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. For additional information, refer to the “Using a Windows 7 operating system DVD (purchased separately)” section in this guide.


---

## Using the Windows recovery tools

To recover information you previously backed up, follow these steps:


1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your system settings, your computer (select models only), or your files.

---

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---

To recover your information using Startup Repair, follow these steps:

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.


---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition or the HP Recovery partition.

To check for the Windows partition, select **Start > Computer**.

To check for the HP Recovery partition, click **Start**, right click **Computer**, click **Manage**, and then click **Disk Management**.


---

 **NOTE:** If the Windows partition or the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows 7 operating system DVD (purchased separately)” section.

---

3. If the Windows partition and the HP Recovery partition are listed, restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Startup Repair**.
5. Follow the on-screen instructions.


---

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using f11 recovery tools

---


 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled. Personal files must be restored from a backup.

---

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: click **Start**, right click **Computer**, click **Manage**, and then click **Disk Management**.

---

 **NOTE:** If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows 7 operating system DVD (purchased separately)” section.


---

3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows 7 operating system DVD (purchased separately)

If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. Be sure that your most recent backup (stored on discs or on an external drive) is easily accessible. To order a Windows 7 operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the Worldwide Telephone Numbers booklet included with the computer.


---

 **CAUTION:** Using a Windows 7 operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows 7 operating system DVD, follow these steps:

---

 **NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 7 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.


## Windows Vista

To protect your information, use the Backup and Restore Center to back up individual files and folders, back up your entire hard drive (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.


The Backup and Restore Center provides the following options:

- Backing up individual files and folders
- Backing up the entire hard drive (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

---

 **NOTE:** In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

---

## Backing up your information

Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents folder, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To create a screen shot:

1. Display the screen you want to save.
2. Copy the screen image:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.

3. Open a word-processing document, and then select **Edit > Paste**.

The screen image is added to the document.

4. Save the document.

- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer.



---

**NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

---

- When backing up to discs, number each disc before inserting it into the optical drive of the computer.



---

**NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---



---

**NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---

1. Select **Start > All Programs > Maintenance > Backup and Restore Center**.
2. Follow the on-screen instructions to back up your entire computer (select models only) or your files.



---

**NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---




## Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use the Backup and Restore Center to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer, you must purchase a Windows Vista operating system DVD to reboot the computer and repair the operating system. For additional information, refer to the “Using a Windows Vista operating system DVD (purchased separately)” section in this guide.


---

## Using the Windows recovery tools

To recover information you previously backed up, follow these steps:


1. Select **Start > All Programs > Maintenance > Backup and Restore Center**.
2. Follow the on-screen instructions to recover your entire computer (select models only) or your files.

---

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---


To recover your information using Startup Repair, follow these steps:

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition or the HP Recovery partition. To find the partitions, select **Start > Computer**.


---

 **NOTE:** If the Windows partition and the HP Recovery partition have been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows Vista operating system DVD (purchased separately)” section.

---

3. Restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Repair your computer**.
5. Follow the on-screen instructions.


---


 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using f11 recovery tools

---


 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled. Personal files must be restored from a backup.

 **NOTE:** If your computer includes a solid-state drive (SSD), you may not have a recovery partition. Recovery discs have been included for computers that do not have a partition. Use these discs to recover your operating system and software. To check for the presence of a recovery partition, select **Start > Computer**. If the partition is present, an HP Recovery drive is listed in the **Hard Disk Drives** section of the window.

---

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition. To find the partition, select **Start > Computer**.

 **NOTE:** If the HP Recovery partition has been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to the “Using a Windows Vista operating system DVD (purchased separately)” section.


---

3. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows Vista operating system DVD (purchased separately)


If you are unable to boot (start up) your computer, you must purchase a Windows Vista operating system DVD to reboot the computer and repair the operating system. Be sure that your most recent backup (stored on discs or on an external drive) is easily accessible. To order a Windows Vista operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the Worldwide Telephone Numbers booklet included with the computer.

---

 **CAUTION:** Using a Windows Vista operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows Vista operating system DVD, follow these steps:

 **NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows Vista operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.

6. Select **Repair your computer**.
7. Follow the on-screen instructions.

---

## 8 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC

The 3 conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

### Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.5 m** (5.0 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

## Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3 conductor, 1.0 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3 conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3 conductor, 1.00 mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3 conductor, 0.75 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3 conductor, 0.75 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

---

# 9 Recycling

## Battery

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

## Display

---

**⚠ WARNING!** The backlight contains mercury. Caution must be exercised when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

**⚠ CAUTION:** The procedures in this chapter can result in damage to display components. The only components intended for recycling purposes are the liquid crystal display (LCD) panel and the backlight. When you remove these components, handle them carefully.

**📄 NOTE:** Materials Disposal. This HP product contains mercury in the backlight in the display assembly that might require special handling at end-of-life. Disposal of mercury may be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities, or see the Electronic Industries Alliance (EIA) Web site at <http://www.eiai.org>.

---

This section provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight **(1)** and the liquid crystal display (LCD) panel **(2)**.




---

**📄 NOTE:** The procedures provided in this chapter are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.


---

Perform the following steps:


1. Remove all screw covers (1) and screws (2) that secure the display bezel to the display assembly.

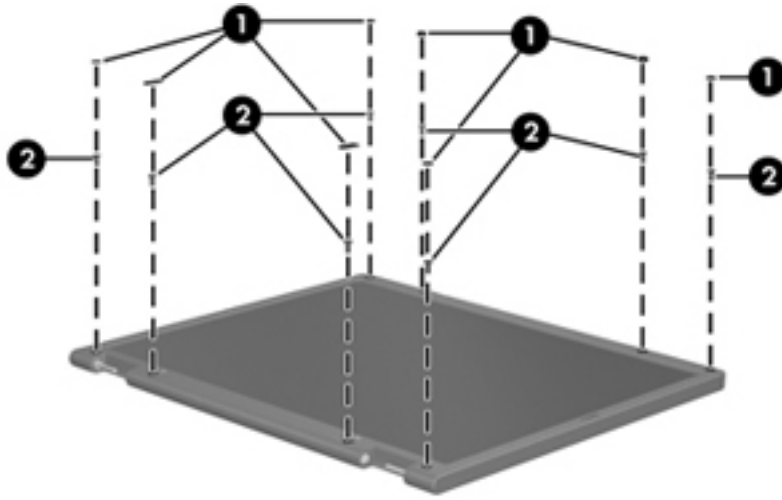


2. Lift up and out on the left and right inside edges (1) and the top and bottom inside edges (2) of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel 3.

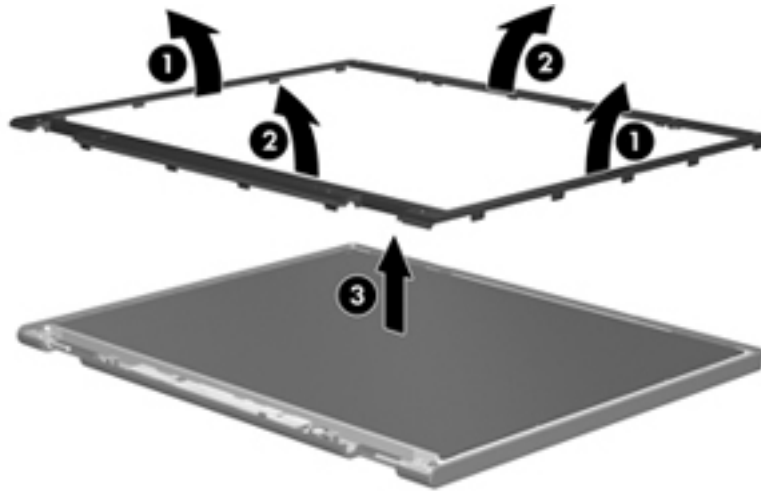


4. Disconnect all display panel cables (1) from the display inverter and remove the inverter 2.

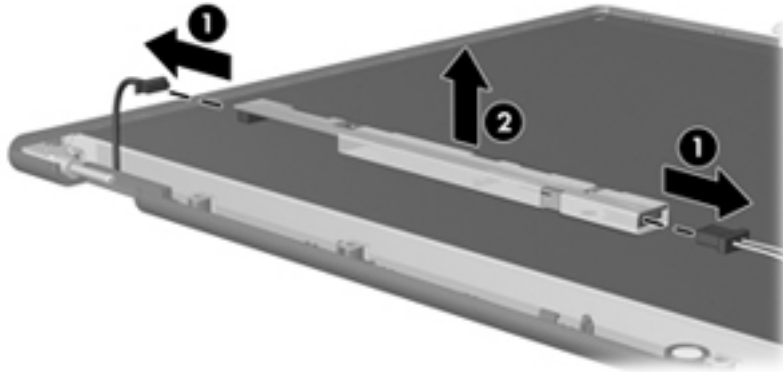

5. Remove all screws (1) that secure the display panel assembly to the display enclosure.
6. Remove the display panel assembly (2) from the display enclosure.

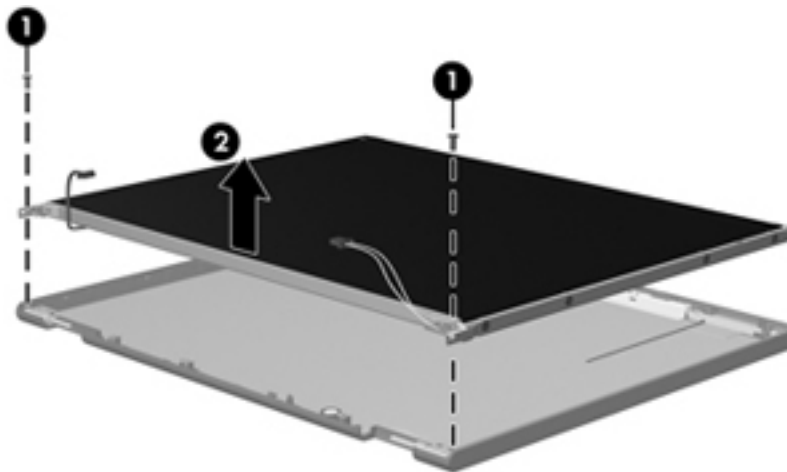


7. Turn the display panel assembly upside down.
8. Remove all screws that secure the display panel frame to the display panel.

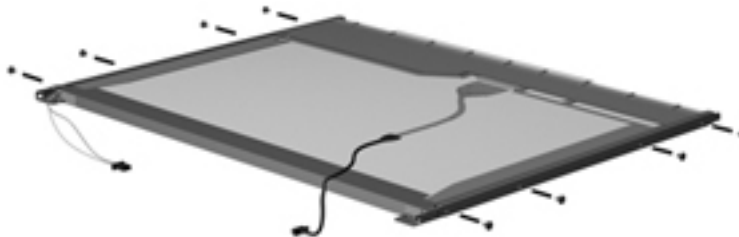

9. Use a sharp-edged tool to cut the tape (1) that secures the sides of the display panel to the display panel frame.




10. Remove the display panel frame (2) from the display panel.

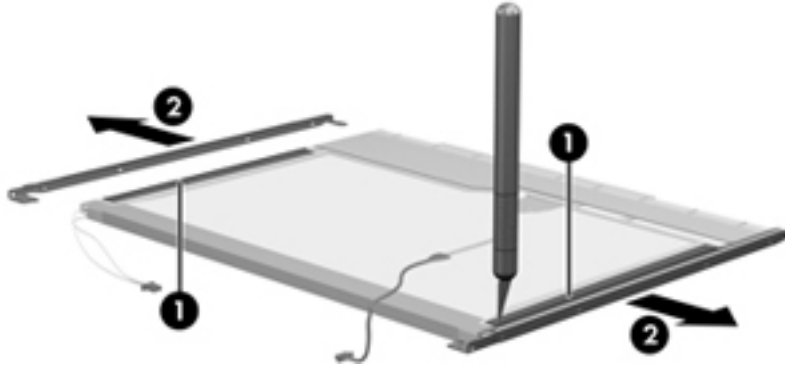

11. Remove the screws (1) that secure the backlight cover to the display panel.


12. Lift the top edge of the backlight cover (2) and swing it outward.

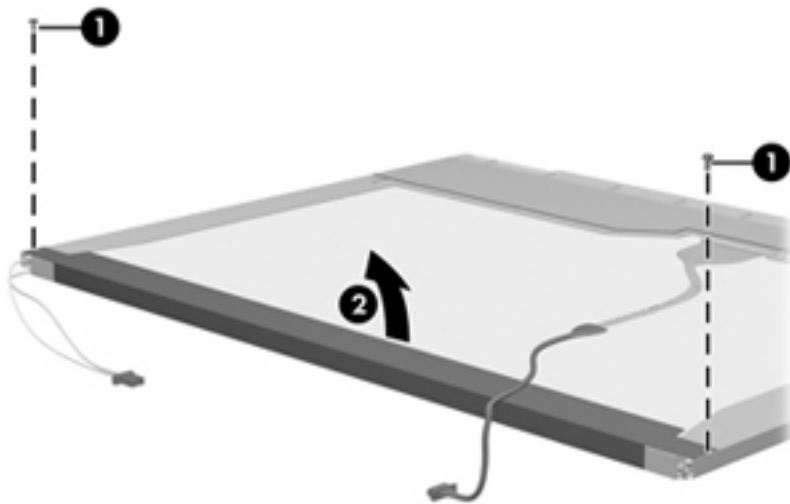


13. Remove the backlight cover.

14. Turn the display panel right-side up.

15. Remove the backlight cables (1) from the clip (2) in the display panel.

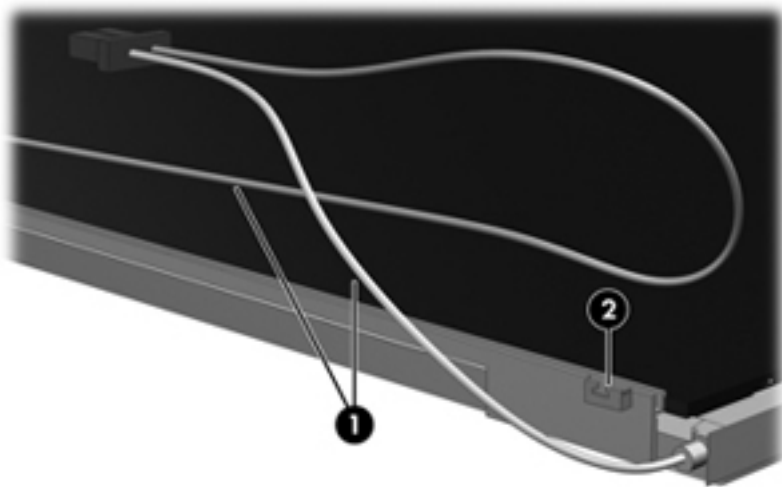


16. Turn the display panel upside down.
17. Remove the backlight frame from the display panel.

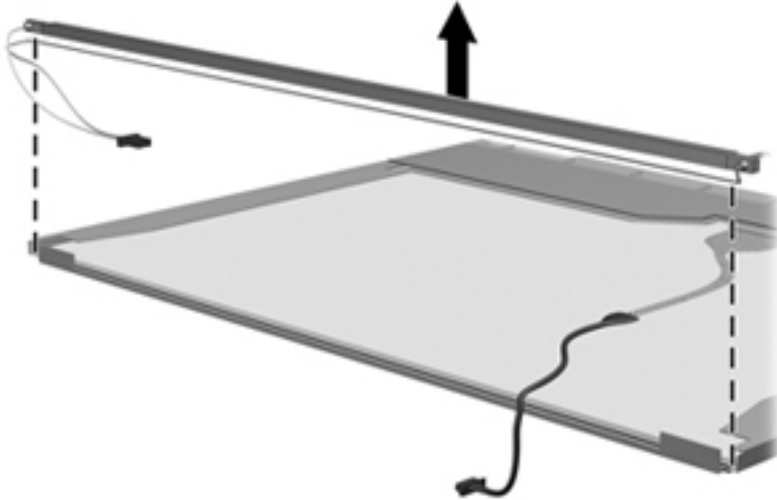


**⚠ WARNING!** The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

18. Remove the backlight from the backlight frame.

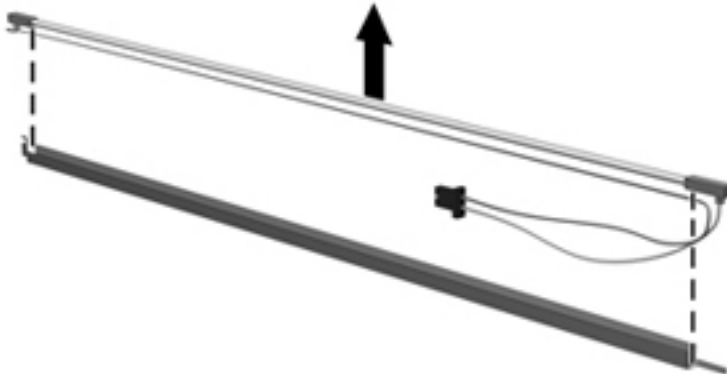


19. Disconnect the display cable (1) from the LCD panel.
20. Remove the screws (2) that secure the LCD panel to the display rear panel.
21. Release the LCD panel (3) from the display rear panel.

22. Release the tape (4) that secures the LCD panel to the display rear panel.

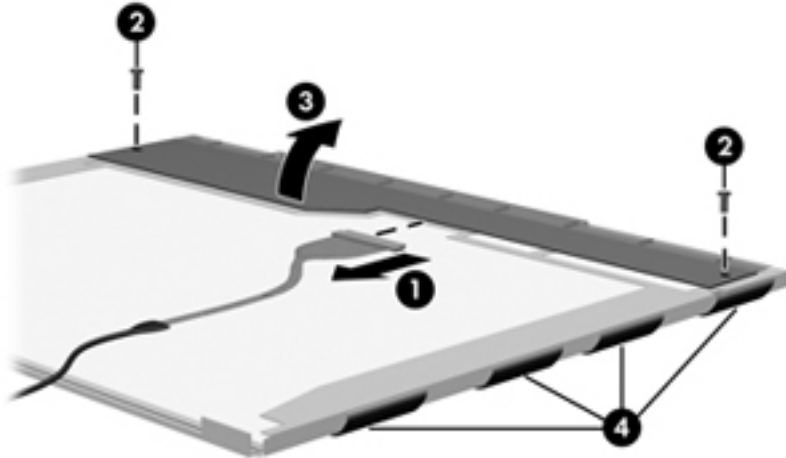

23. Remove the LCD panel.

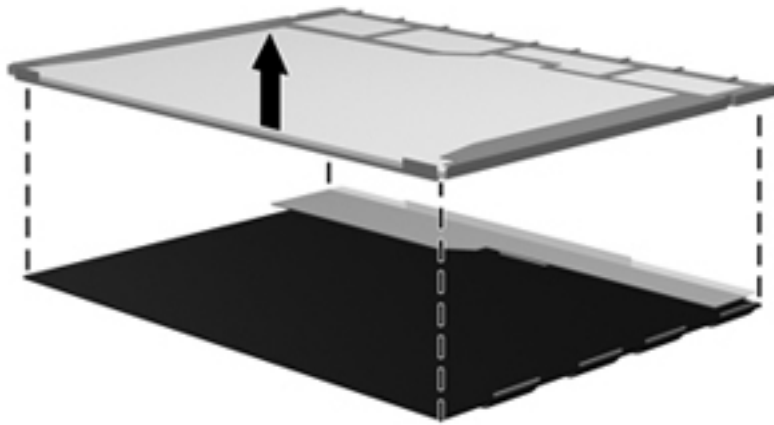

24. Recycle the LCD panel and backlight.

---

# Index

- A**
- AC adapter, spare part number 28, 30
  - ambient light sensor board, spare part number 25
  - ambient light sensor, identifying 14
  - antennas
    - disconnecting 56, 59
    - spare part number 31
  - audio in (microphone) jack, identifying 12
  - audio, product description 2
  - audio-out (headphone) jack, identifying 12
- B**
- base enclosure
    - removal 66
    - spare part number 66
  - base enclosure, spare part number 21, 31
  - battery
    - removal 41
    - spare part number 23, 30, 41
  - battery bay 16
  - battery light 11
  - battery release latch 16
  - Bluetooth module
    - removal 50
    - spare part number 23, 29, 50
  - Bluetooth, identifying compartment 16
  - Bracket Kit, spare part number 28, 31
  - buttons
    - display release 11
    - left TouchPad 6
    - power 8
    - QuickLook 9
    - right TouchPad 6
    - TouchPad 6
    - wireless 8
- C**
- Cable Kit, spare part number 28, 31
  - cables, service considerations 35
  - caps lock light, identifying 7
  - chipset, product description 1
  - components
    - bottom 16
    - display 14
    - front 11
    - left side 13
    - rear 15
    - right side 12
    - top 6
  - computer feet
    - locations 40
    - spare part number 40
  - computer specifications 90
  - connector, power 13
  - connectors, service considerations 35
- D**
- diskette drive, precautions 35
  - display assembly
    - removal 80
    - spare part number 80
  - display enclosure
    - spare part number 31
  - display enclosure, spare part number 25
  - Display Hinge Kit, spare part number 24, 31
  - display panel
    - product description 1
    - removal 77
    - spare part number 20, 24, 30, 77
  - display panel cable, spare part number 25, 31
  - display port; identifying 12
  - display specifications 91
  - docking connector; identifying 12
  - docking station, spare part number 28, 31
  - docking support, product description 3
  - drain hole, identifying 16
  - drive light 11
  - drives, preventing damage 35
  - DVD-ROM Drive
    - precautions 35
    - removal 53
    - spare part number 22, 31, 53
    - specifications 94
  - DVD±RW and CD-RW SuperMulti Double-Layer Drive
    - precautions 35
    - removal 53
    - spare part number 22, 31, 53
    - specifications 93
- E**
- electrostatic discharge 36
  - embedded numeric keypad, identifying 10
  - eSATA port, identifying 12
  - esc key, identifying 10
  - Ethernet, product description 2
  - ExpressCard slot; identifying 12
  - external media cards, product description 3
  - external monitor port 15
- F**
- fan
    - removal 44
    - spare part number 22, 31, 44
  - feet
    - locations 40
    - spare part number 40
  - fingerprint reader board
    - removal 75
    - spare part number 75
  - fingerprint reader board, spare part number 31
  - fingerprint reader, identifying 9
  - fn key, identifying 10

- function button board
  - removal 74
  - spare part number 74
- function button board, spare part number 21, 31
- function keys, identifying 10
- function LED board, spare part number 31

## G

- graphics, product description 1
- grounding equipment and methods 38

## H

- hard drive
  - precautions 35
  - product description 2
  - removal 60
  - spare part number 22, 30, 60
  - specifications 92
- headphone (audio-out) jack 12
- heat sink
  - removal 44
  - spare part number 31, 44
- hinge covers, spare part number 31
- hinge, spare part number 24, 31
- HP QuickWeb light 7

## I

- integrated webcam light, identifying 14
- internal microphones, identifying 14
- internal storage, product description 2

## J

- jacks 13
  - audio in (microphone) 12
  - audio-out (headphone) 12
  - RJ-11 (modem) 13

## K

- keyboard
  - product description 3
  - removal 62
  - spare part number 20, 31, 32, 62

- keyboard light button
  - identifying 14
- keyboard light, identifying 14
- keypad, embedded numeric 10
- keys
  - applications 10
  - esc 10
  - fn 10
  - function 10
  - num lk 10
  - Windows logo 10

## L

- lights
  - battery 11
  - caps lock 7
  - drive 11
  - HP QuickWeb 7
  - mute 7
  - num lock 7
  - power 7, 11
  - TouchPad 7
  - webcam 14
  - wireless 7, 11

## M

- mass storage device
  - removal 60
  - spare part number 22, 60
- Media Card Reader, identifying 12
- memory module
  - product description 1
  - removal 48
  - spare part number 22, 30, 48
- Menu key, identifying 10
- microphone (audio in) jack, identifying 12
- microphone, product description 2
- model name 1
- modem module
  - removal 55
  - spare part number 22, 55
- modem, product description 2
- mute light, identifying 7

## N

- num lk key, identifying 10
- num lock light 7

## O

- operating system, product description 4
- optical drive
  - precautions 35
  - product description 2
  - removal 53
  - spare part number 22, 31, 53
  - specifications 93, 94
- optical drive light, identifying 13
- optical drive, identifying 13

## P

- packing guidelines 37
- plastic parts 34
- Plastics Kit
  - contents 27
  - spare part number 27, 31
- pointing device, product description 3
- pointing stick 6
  - left button 6
  - right button 6
- ports
  - eSATA 12
  - external monitor 15
  - product description 3
  - USB 12, 15
- power button board
  - removal 73
  - spare part number 73
- power button board, spare part number 30
- power button, identifying 8
- power connector, identifying 13
- power cord
  - set requirements 104
  - spare part number 28, 29
- power light, identifying 7, 11
- power requirements, product description 3
- processor
  - product description 1
  - removal 46
  - spare part number 30, 46
- product description
  - audio 2
  - chipset 1
  - display panel 1
  - docking support 3

- Ethernet 2
  - external media cards 3
  - graphics 1
  - hard drives 2
  - internal storage 2
  - keyboard 3
  - memory module 1
  - microphone 2
  - modem 2
  - operating system 4
  - optical drives 2
  - pointing devices 3
  - ports 3
  - power requirements 3
  - processors 1
  - product name 1
  - security 4
  - solid-state drive 2
  - video 2
  - wireless 2
  - product name 1
- Q**
- QuickWeb button, identifying 9
- R**
- removal/replacement
    - preliminaries 34
    - procedures 39
  - RJ-11 (modem) jack, identifying 13
  - RJ-45 (network) jack, identifying 13
  - RTC battery
    - removal 65
    - spare part number 21, 32, 65
  - Rubber Kit, spare part number 23, 31
- S**
- Screw Kit, spare part number 28, 31
  - security cable slot, identifying 12
  - security, product description 4
  - serial number 18
  - service access cover
    - removal 42
    - spare part number 31, 42
  - service access cover latch, identifying 16
  - service considerations 34
  - service tag 39
  - SIM
    - removal 43
    - spare part number 43
  - SIM slot, identifying 16
  - smart card reader
    - identifying 13
    - removal 76
    - spare part number 76
  - smart card reader board bracket
    - removal 76
    - spare part number 76
  - smart card reader board, spare part number 21, 31
  - solid state drive
    - spare part number 31
  - solid-state drive
    - product description 2
    - removal 60
    - spare part number 22, 31, 60
  - spare part number
    - fan 44
    - heat sink 44
  - speaker
    - removal 52
    - spare part number 23, 31, 52
  - speaker hole, identifying 11, 16
  - specifications
    - computer 90
    - display 91
    - DVD-ROM Drive 94
    - DVD±RW and CD-RW SuperMulti Double-Layer Drive 93
    - hard drive 92
    - optical drive 93, 94
  - Start key, identifying 10
  - static-shielding materials 38
  - system board
    - removal 69
    - spare part number 21, 30, 69
- T**
- thermal material, replacement 45
  - tools required 34
  - top cover
    - removal 71
    - spare part number 21, 31, 71
  - TouchPad buttons, identifying 6
  - TouchPad light, identifying 7
  - TouchPad zone, identifying 6
  - transporting guidelines 37
- U**
- USB port, identifying 12, 15
- V**
- vents, identifying 11, 12, 17
  - video, product description 2
  - volume keys, identifying
    - mute button 9
- W**
- webcam light, identifying 14
  - webcam module, spare part number 24
  - webcam, identifying 14
  - wireless antennas
    - disconnecting 56, 59
    - identifying 14
  - wireless button, identifying 8
  - wireless light 7, 11
  - wireless, product description 2
  - WLAN antennas
    - disconnecting 56, 59
    - identifying 14
  - WLAN module
    - removal 58
    - spare part number 21, 58
  - workstation guidelines 37
  - WWAN antennas
    - identifying 14
  - WWAN module
    - removal 56
    - spare part number 22, 30, 56