



HP Pavilion 15 Sleekbook, HP Pavilion 15 Ultrabook, and HP Pavilion TouchSmart 15 Sleekbook

Maintenance and Service Guide

SUMMARY

CAUTION: Your computer has user-replaceable parts and *non-user-replaceable parts that should only be replaced by an authorized service provider*. Accessing some internal parts can damage the computer or void your warranty. Go to [Removal and replacement procedures on page 36](#) for details.

© Copyright 2012, 2013 Hewlett-Packard Development Company, L.P.

AMD is a trademark of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel, Intel Centrino, Intel Core, and Pentium are trademarks of Intel Corporation in the U.S. and other countries. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: March 2013

First Edition: November 2012

Document Part Number: 708191-002

Safety warning notice

⚠ WARNING! To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Product description	1
2 External component identification	9
Right side	9
Left side	10
Display	11
Top	13
TouchPad	13
Lights	14
Buttons and speakers	15
Keys	16
Bottom	17
3 Illustrated parts catalog	19
Service label	19
Computer major components	20
Display assembly subcomponents	27
Miscellaneous parts	28
Sequential part number listing	29
4 Removal and replacement procedures	36
Preliminary replacement requirements	36
Tools required	36
Service considerations	36
Plastic parts	36
Cables and connectors	36
Drive handling	37
Grounding guidelines	37
Electrostatic discharge damage	37
Packaging and transporting guidelines	39
Component replacement procedures	40
Service label	41
Battery	42
Computer feet	44
Display panel	44
Keyboard	47

Top cover	51
Power button board	54
Hard drive	56
USB board/Audio jack	59
WLAN module	60
System board	63
Memory module	69
RTC battery	72
mSATA solid-state drive	74
PCH heat sink	76
Heat sink	77
Fan	80
Speaker assembly	81
RJ-45 cover	82
Display Assembly	83
Display assembly components	84
Power connector	87

5 Using Windows 8 Setup Utility (BIOS) and System Diagnostics 89

Starting Setup Utility (BIOS)	89
Updating the BIOS	89
Determining the BIOS version	89
Downloading a BIOS update	90
Using System Diagnostics	91

6 Using Ubuntu Linux Setup Utility (BIOS) and System Diagnostics 92

Starting Setup Utility	92
Using Setup Utility	92
Changing the language of Setup Utility	92
Navigating and selecting in Setup Utility	92
Displaying system information	93
Restoring factory default settings in Setup Utility	93
Exiting Setup Utility	93
Updating the BIOS	93
Determining the BIOS version	94
Downloading a BIOS update	94
Using System Diagnostics	95

7 Specifications 96

Computer specifications	96
-------------------------------	----

39.6 (15.6 in), TouchSmart display specifications	97
39.6 (15.6 in), BrightView display specifications	98
Hard drive specifications	98
8 Windows 8 Backing up, restoring, and recovering	100
Creating recovery media and backups	100
Creating HP Recovery media	101
Restore and recovery	102
Using Windows Refresh for quick and easy recovery	104
Remove everything and reinstall Windows	104
Recovering using HP Recovery Manager	105
What you need to know	105
Using the HP Recovery partition to recover a minimized image	105
Using HP Recovery media to recover	106
Changing the computer boot order	106
Removing the HP Recovery partition	106
9 Ubuntu Linux Backing up, restoring, and recovering	108
Performing a system recovery	108
Creating the restore DVDs	108
Creating a restore image on a USB device	108
Performing recovery using the restore DVD	109
Backing up your information	109
10 Power cord set requirements	111
Requirements for all countries	111
Requirements for specific countries and regions	112
11 Recycling	114
Index	115

1 Product description

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
Product Name	HP Pavilion Sleekbook 15	√	√	√		
	HP Pavilion 15 Ultrabook		√	√		
	HP Pavilion TouchSmart 15 Sleekbook				√	√
Mosaic ID	Ruby red with modern mesh pattern	√	√	√		
	Sparkling Black	√	√	√	√	√
	Winter Blue with modern mesh pattern	√	√	√		
Processors	3rd Generation Intel® Core™ i5 processors:					
	Intel Core i5-3317U (1.7 GHz, turbo up to 2.6 GHz, 1600 MHz/3 MB L3 cache, dual core, 17 W)		√	√		
	Intel Core i5-3337U (1.8 GHz, turbo up to 2.7 GHz, 1600 MHz/3 MB L3 cache, dual core, 17 W)		√	√	√	√
Processors	3rd Generation Intel Core i3 processors:					
	Intel Core i3-3217U (1.8 GHz, 1600 MHz/3 MB L3 cache, dual core, 17 W)		√	√		
	Intel Core i3-3227U (1.9 GHz 1600 MHz/3 MB L3 cache, dual core 17 W)		√	√	√	√
	Intel Core i3-2377M (1.5 GHz 1333 MHz/3 MB L3 cache, dual core 17 W)		√	√	√	
	Intel Core i3-2375M (1.5 GHz, 1333 MHz/3 MB L3 cache, dual core, 17 W)		√	√	√	
Processors	3rd Generation Intel Pentium ULV processors:					
	Pentium 2117U (1.8GHz, 2MB L3 Cache), Dual 17W	√				

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
2nd Generation Intel Core i3 processors:						
	Pentium 987 (1.5 GHz, 1333 MHz/2 MB L3 cache, dual core, 17 W)	√				
	Pentium 997 (1.6 GHz, 1333 MHz/2 MB L3 cache, dual core, 17 W)	√				
Chipsets	Intel HM77 Express chipset for use with computer models with Intel Core processors		√	√	√	√
	Intel HM70 Express chipset for use with computer models with Pentium or Celeron processors	√				
Graphics	Supports HD Decode, DX11, and HDMI	√	√	√	√	√
	Supports Optimus (for use with computer models with switchable discrete graphics)	√	√	√	√	√
Internal graphics (UMA) for use with computer models with Intel processors:						
	<ul style="list-style-type: none"> Intel HD Graphics 4000 for use with computer models with 3rd Generation Intel Core processors 		√	√	√	√
	<ul style="list-style-type: none"> Intel HD Graphics 3000 for use with computer models with 2nd Generation Intel Core processors 	√	√	√	√	
	<ul style="list-style-type: none"> Intel HD Graphics for use with computer models with Pentium or Celeron processors 	√				
Switchable discrete graphics:						
	<ul style="list-style-type: none"> GeForce GT630M with 2 GB of dedicated video memory (256 MB × 16 DDR3 @ 900 MHz × 4 PCs); 64 bit, (no support for Linux Ubuntu) 		√			√
	<ul style="list-style-type: none"> GeForce GT630M with 1 GB of dedicated video memory (128 MB × 16 DDR3 @ 900 MHz × 4 PCs); 64 bit (no support for Linux Ubuntu) 		√			√

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
Display panel	39.6 cm (15.6 in), high-definition (HD), white light-emitting diode (WLED), SVA BrightView (1366x768) display: <ul style="list-style-type: none"> • Typical brightness: 200 cd/m² (nits) • All display assemblies include two wireless local area network (WLAN) antenna cables • Supports 16:9 ultra-wide aspect ratio 	√	√	√	√	√
	39.6 cm (15.6 in), high-definition (HD), white light-emitting diode (WLED), SVA BrightView (1366x768) display: <ul style="list-style-type: none"> • Touchscreen n, multitouch enabled • Typical brightness: 200 cd/m² (nits) • All display assemblies include two wireless local area network (WLAN) antenna cables • Supports 16:9 ultra-wide aspect ratio 				√	√
Memory	Two SODIMM memory module slots	√	√	√	√	√
	DDR3-1600 MHz Dual Channel support for use with computer models with 3rd Generation Intel Core processors		√	√	√	√
	DDR3L-1600 MHz Dual Channel support for use with computer models with 3rd Generation Intel Core processors		√	√	√	√
DDR3-1333 MHz support (DDR3-1600/DDR3L-1600 downgrade to DDR3-1333), for use with computer models with 2nd Generation Intel Core, Pentium, or Celeron processors, or with AMD E2-1800 processors	√	√	√	√	√	√

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
	Supports up to 8 GB of system RAM in the following configurations: <ul style="list-style-type: none"> 8192 MB total system memory (4096 MB × 2) (no support for 32 bit operating systems) 6144 MB total system memory (4096 MB × 1 + 2048 MB × 1) (no support for 32 bit operating systems) 4096 MB total system memory (4096 MB × 1 or 2048 × 2) 2048 MB total system memory (2048 MB × 1) 	✓	✓	✓	✓	✓
Hard drives	Supports 6.35 cm (2.5 in) hard drives in 9.5 mm (.37 in) and 7.0 mm (.28 in) thicknesses	✓	✓	✓	✓	✓
	Serial (mSATA)		✓	✓		
	HP 3D Drive Guard support	✓	✓	✓	✓	✓
	Intel Smart Response Technology support for use with computer models with Intel Core processors		✓	✓		
	Supports the following single hard drive configurations:					
	• 1 TB, 5400 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 750 GB, 7200 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 750 GB, 5400 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 640 GB, 5400 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 500 GB, 7200 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 500 GB, 5400 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 500 GB, 5400 rpm, 7.0 mm	✓	✓	✓	✓	✓
	• 320 GB, 5400 rpm, 9.5 mm	✓	✓	✓	✓	✓
	• 320 GB, 5400 rpm, 7.0 mm	✓	✓	✓	✓	✓

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
	Supports 32 GB and 24 GB mSATA for use with computer models with Intel Core processors, with system memory up to 8 GB,					
Audio and video	One digital microphone	√	√	√	√	√
	HD audio	√	√	√	√	√
	Supports Dolby Advanced Audio	√	√	√	√	√
	Two Altec Lansing speakers	√	√	√	√	√
	Supports Microsoft® Premium requirements	√	√	√	√	√
	HP TrueVision HD camera (fixed, no tilt) with activity LED, USB 2.0, M-JPEG, 1280 x 720 by 30 frames per second	√	√	√	√	√
Ethernet	Integrated 10/100 network interface card (NIC)	√	√	√	√	√
Wireless	Integrated wireless local area network (WLAN) options by way of wireless module	√	√	√	√	√
	Two WLAN antennas built into display assembly	√	√	√	√	√
	Support for Intel Wireless Display	√	√	√	√	√
	Support for the following WLAN formats:					
	<ul style="list-style-type: none"> [Author note:]jackson peak 1 Intel Centrino® Wireless-N 2230 802.11 b/g/n 2x2 WiFi and Bluetooth 4.0 Combination Adapter 	√	√	√	√	√
<ul style="list-style-type: none"> [Author note:]marilyn Qualcomm Atheros AR9485 802.11 b/g/n 1x1 WiFi Adapter 	√	√	√	√	√	


Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
	<ul style="list-style-type: none"> [Author note:]mango Qualcomm Atheros AR9565 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter, not supported on Ubuntu Linux, (select models only) 	√	√	√	√	√
	<ul style="list-style-type: none"> [Author note:]Roma Ralink RT3290LE 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter (select models only) 	√	√	√	√	√
	<ul style="list-style-type: none"> [Author note:]flamingo2 Ralink RT5390R 802.11 b/g/n 1x1 WiFi (select models only) 	√	√	√	√	√
External media card	<p>HP Multi-Format Digital Media Reader slot with push-push technology, supporting the following digital card formats:</p> <ul style="list-style-type: none"> Secure Digital (SD) Memory Card Secure Digital High Capacity (SDHC) Memory Card Secure Digital Extended Capacity (SDXC) Memory Card MultiMediaCard (MMC) 	√	√	√	√	√
Internal media cards	<ul style="list-style-type: none"> One half-size Mini Card slot for WLAN One full-size mini-card slot for mSATA cache, for use with computer models with Intel Core processors and system memory up to 8 GB 	√	√	√	√	√
Ports	<ul style="list-style-type: none"> Audio-in/Audio-out (combination headphone/microphone) HDMI version 1.4 supporting up to 1920x1200 @ 60Hz HP AC power adapter 	√	√	√	√	√

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
	<ul style="list-style-type: none"> RJ-45 (Ethernet, includes link and activity lights) 	√	√	√	√	√
	<ul style="list-style-type: none"> USB 3.0 (2 ports) 	√	√	√	√	√
	<ul style="list-style-type: none"> USB 2.0 (1 port) 	√	√	√	√	√
Keyboard /pointing devices	Island-style keyboard with numeric keypad	√	√	√	√	√
	1.5 mm travel distance					
	TouchPad with two buttons:	√	√	√	√	√
	<ul style="list-style-type: none"> Multitouch gesture support enabled as default Taps enabled by default Supports edge-swipe gestures 					
Power requirements	AC adapter	√	√	√	√	√
	65 W RC V AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector) 1 m length					
	Battery	√	√	√	√	√
	4 cell, 37 Whr, 2.55 Ah, Li-ion battery Supports fast charge					
Security	Security cable slot	√	√	√	√	√
	Intel AT-p Ready support		√	√	√	√
Operating system	Preinstalled:					
	<ul style="list-style-type: none"> Windows 8 Professional 64 bit 	√	√	√	√	√
	<ul style="list-style-type: none"> Windows 8 Standard 64 bit 	√	√	√	√	√
	<ul style="list-style-type: none"> FreeDOS 1.0 	√	√	√		

Category	Description	Intel HM70 UMA	Intel HM77 UMA	Intel HM77 Discrete	Internal graphics (UMA) computer model with TouchSmart	Switchable discrete graphics computer model with TouchSmart
	<ul style="list-style-type: none"> • Ubuntu Linux 	√	√	√		
Serviceability	End-user replaceable parts: <ul style="list-style-type: none"> • Keyboard • AC Adapter • Battery 	√	√	√	√	√

2 External component identification


Right side

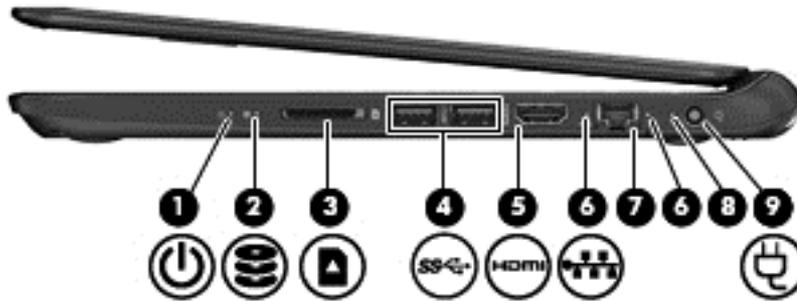

Component	Description
(1)  Power light	<ul style="list-style-type: none"> White: The computer is on. Blinking white: The computer is in the Sleep state, which is an energy-saving mode. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is an energy-saving mode that uses the least amount of power. <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity.</p>
(2)  Hard drive light	<ul style="list-style-type: none"> Blinking white: The hard drive is being accessed. [Author note:] Delete the second bullet if HP 3D DriveGuard is not supported. Is HP 3D really still supported? <p>Amber: HP 3D DriveGuard has temporarily parked the hard drive.</p>
(3)  Digital Media Slot	Reads data from and writes data to digital memory card such as Secure Digital (SD).
(4)  USB 3.0 ports (2)	Connect optional USB 3.0 devices and provide enhanced USB power performance.
(5)  HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio device.

Component	Description
<p>(6)</p> <p>RJ-45 (network) jack lights</p> <p>[Author note:]Is this how the lights work?</p>	<ul style="list-style-type: none"> • White—Computer is connected to a network. • Blinking amber—Data is being transferred. <p>NOTE: When both lights are off the computer is not connected to a network.</p>
<p>(7)</p>  <p>RJ-45 (network) jack</p>	Connects a network cable.
<p>(8)</p> <p>AC adapter light</p>	<ul style="list-style-type: none"> • White: The AC adapter is connected and the battery is charged. • Blinking white: The battery has reached a low battery level. • Amber: The AC adapter is connected and the battery is charging. • Off: The computer is using DC power.
<p>(9)</p>  <p>Power connector</p>	Connects an AC adapter.


Left side

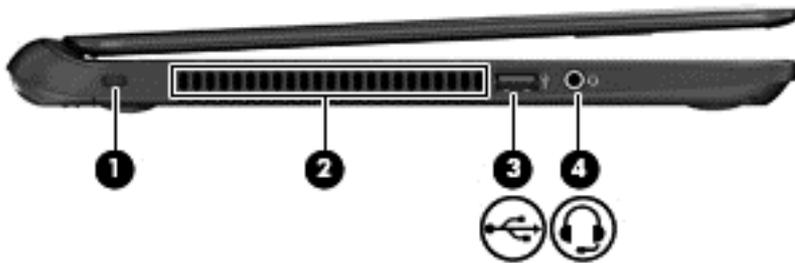

Component	Description
<p>(1)</p> <p>Security cable slot</p>	<p>Attaches an optional security cable to the computer.</p> <p>NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>
<p>(2)</p> <p>Vent</p>	<p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

Component	Description
(3)  USB 2.0 port	Connects an optional USB 2.0 device.
(4)  Audio-out (headphone) jack/Audio-in (microphone) jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. The jack does not support optional microphone-only devices.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i>.</p> <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> <p>NOTE: Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p>

Display

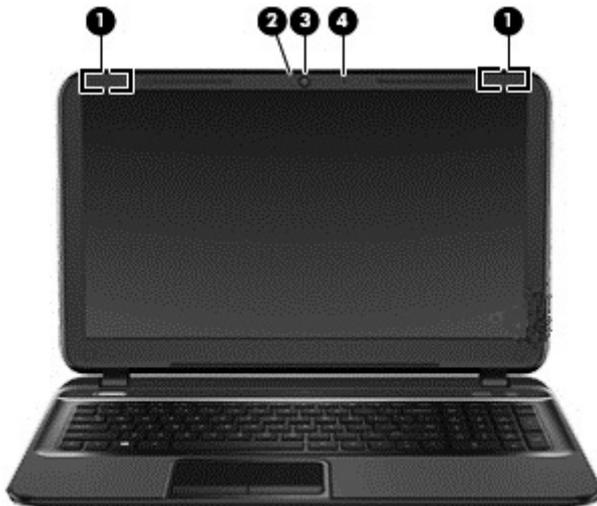

Component	Description
(1) WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) Webcam light	On: The webcam is in use.
(3) HP TrueVision HD Webcam	Records video, captures still photographs, and allows you to video conference and chat online using streaming video.


Component	Description
(4) Internal microphone	Records sound.

[Author note:] Does this platform have proximity sensors or IR emitters?.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region.


Top

TouchPad

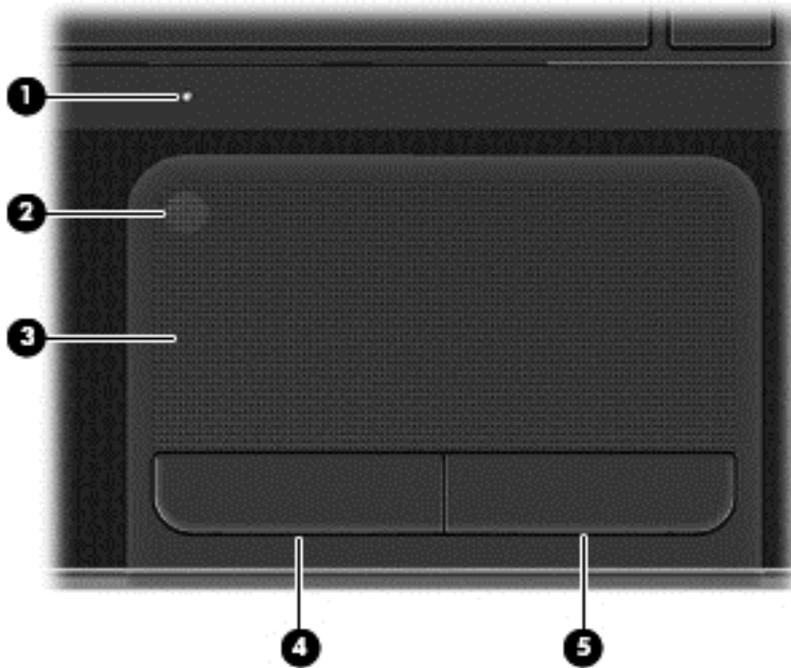


Component	Description
(1) TouchPad light (not supported on Ubuntu Linux)	<ul style="list-style-type: none">• Amber: The TouchPad is off.• Off: The TouchPad is on.
(2) TouchPad on/off button (not supported on Ubuntu Linux)	Turns the TouchPad on or off.
(3) TouchPad zone	Moves the on-screen pointer and selects or activates items on the screen.
(4) Left TouchPad button	Functions like the left button on an external mouse.
(5) Right TouchPad button	Functions like the right button on an external mouse.

Lights

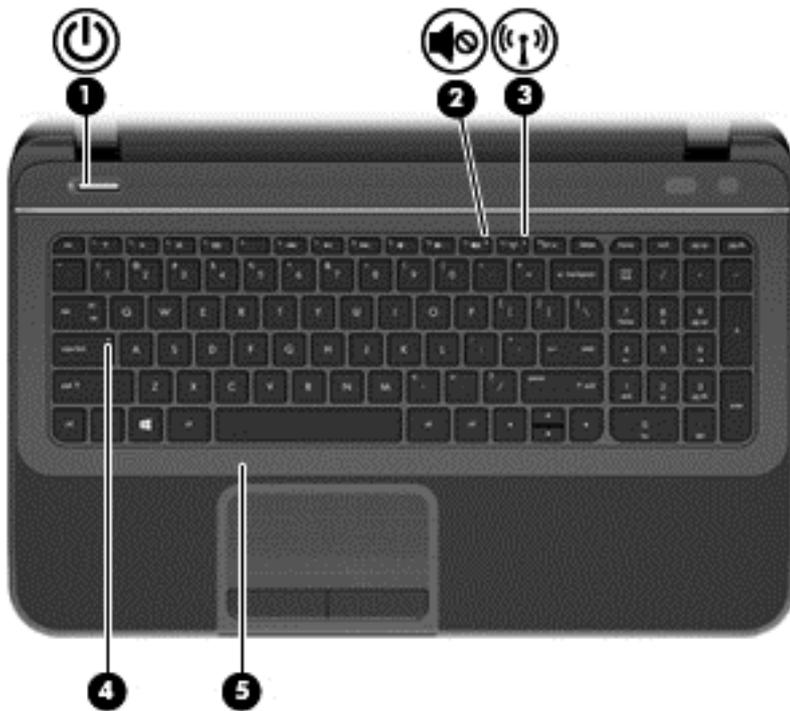


Component	Description
(1)  Power light	<ul style="list-style-type: none">• White: The computer is on.• Blinking white: The computer is in the Sleep state, which is an energy-saving mode. The computer shuts off power to the display and other unneeded components.• Off: The computer is off or in Hibernation. Hibernation is an energy-saving mode that uses the least amount of power.
(2)  Mute light	<ul style="list-style-type: none">• Amber: Computer sound is off.• Off: Computer sound is on.
(3)  Wireless light	<ul style="list-style-type: none">• White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.• Amber: All wireless devices are off.
(4) Caps lock light	White: Caps lock is on, which switches the keys to all capital letters.
(5) TouchPad light	<ul style="list-style-type: none">• Amber: The TouchPad is off.• Off: The TouchPad is on.

Buttons and speakers

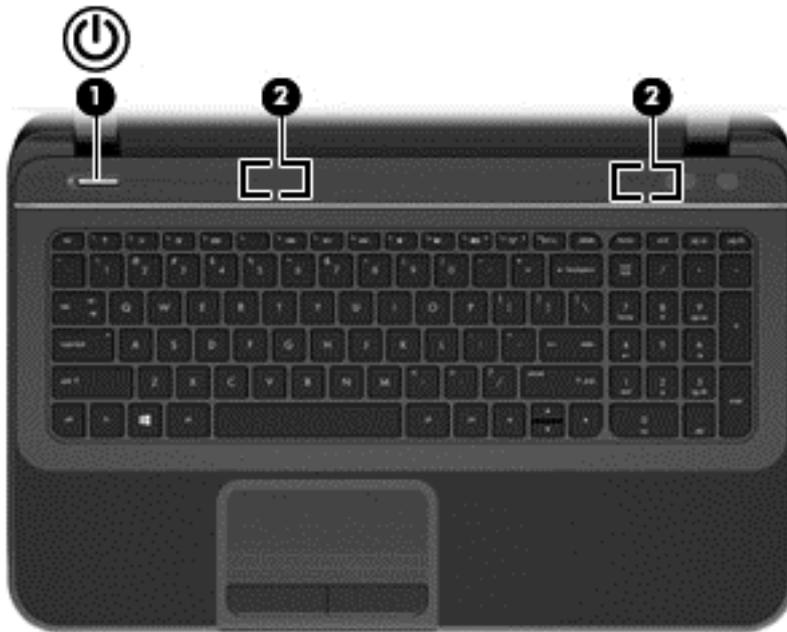

Component	Description
(1)  Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Microsoft Windows shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>NOTE: For select models, the Intel Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity.</p>
(2) [Author note:] Verify the number of speakers. Speakers (2)	Produce sound.


Keys

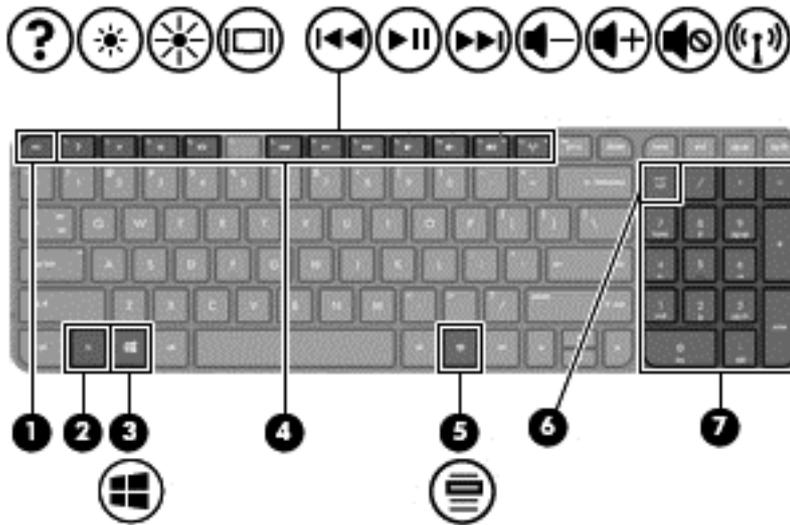

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key (for Windows computer models).
(2) <code>fn</code> key	<p>[Author note:]Is this still true?</p> <p>Displays system information when pressed in combination with the <code>esc</code> key (for Windows computer models).</p> <p>[Author note:]have no information on this key combo yet</p>
(3)  Operating system key	<p>For Windows computer models, returns you to the Start screen from an open app or the Desktop.</p> <p>NOTE: Pressing the operating system logo key again will return you to the previous screen.</p> <p>For Linux systems, displays the operating system menu.</p>
(4) Action keys	Execute frequently-used system functions.
(5)  Applications key	Displays a shortcut menu for items beneath the cursor.

Component	Description
(6) num lock key	Controls the function of the integrated numeric keypad. Press the key to alternate between the standard numeric function of an external keypad (selected the factory) and the navigational function (indicated by the directional arrows on the keys). NOTE: The keypad function that is active when the computer is turned off is reinstated when the computer is turned back on.
(7) Integrated numeric keypad	Set at the factory to function like an external numeric keypad. To alternate between this numeric function and the navigational function (indicated by the directional arrows on the keys), press the num lock key.

Bottom

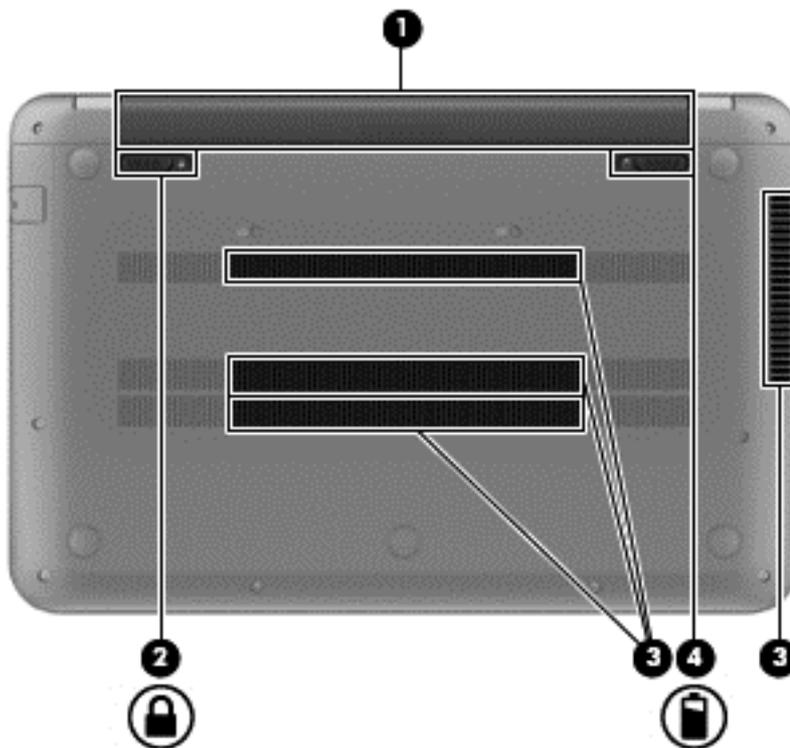

Component	Description
(1) Battery bay	Holds the battery.
(2)  Battery lock	Locks and unlocks the battery.


Component	Description
<p>(3) [Author note:]Verify the number of vents.</p> <p>Vents (4)</p>	<p>Enable airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
<p>(4)  Battery release latch</p>	<p>Releases the battery from the battery bay.</p>

3 Illustrated parts catalog

Service label


When ordering parts or requesting information, provide the computer serial number and model description provided on the service label. The service label is located on the bottom of the computer.

 **NOTE:** Your label may look slightly different from the illustration in this section.

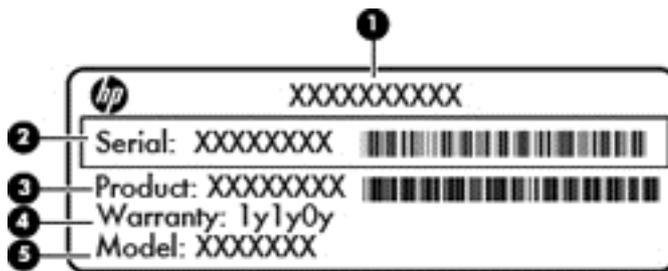

Item	Description	Function
(1)	Product name	This is the model name for the computer.
(2)	Serial number	This is an alphanumeric identifier that is unique to each product.
(3)	Product part number	This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description (select models only)	This is the alphanumeric identifier needed to locate documents, drivers, and support for the computer.

Computer major components

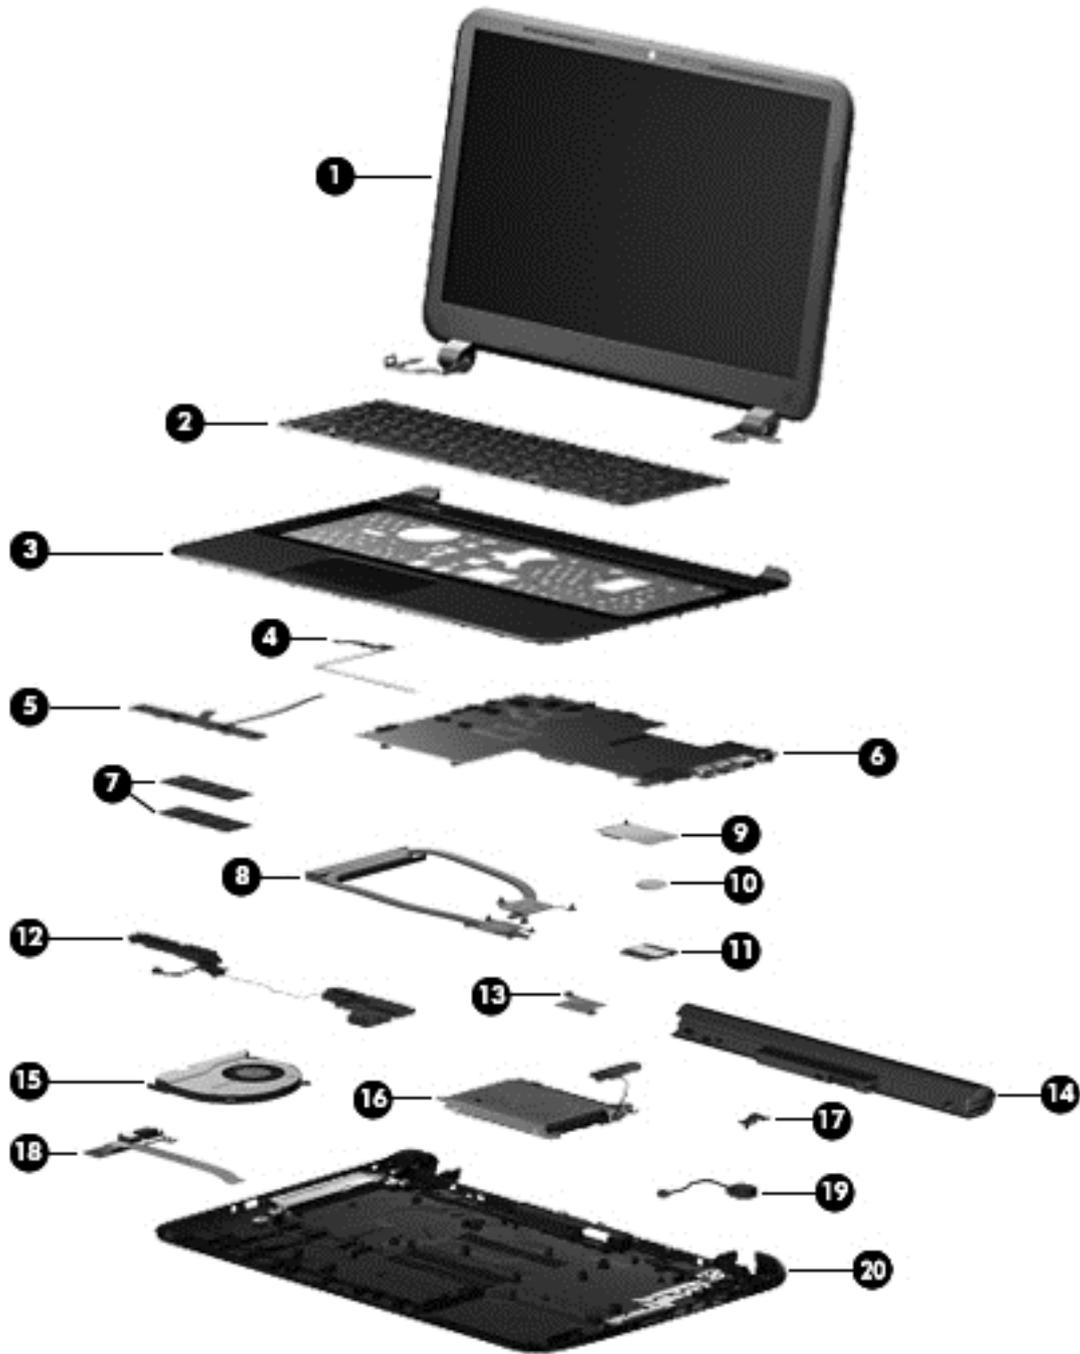

Item	Component	Spare part number
(1)	39.6 cm (15.0 in), high definition (HD), WLED, SVA BrightView TouchSmart slim display assembly	709171-001

Item	Component	Spare part number
	39.6 cm (15.0 in), high definition (HD), WLED, SVA BrightView display assembly. The display assembly is spared at the subcomponent level only.	
	NOTE: For a full list of display spare parts, see Display assembly subcomponents on page 27 .	
(2)	Keyboard , black finish (includes keyboard cable):	
	• For use in Canada	701684-DB1
	• For use in France	701684-051
	• For use in Germany	701684-041
	• For use internationally	701684-B31
	• For use in Israel	701684-BB1
	• For use in Latin America	701684-161
	• For use in the Nordic Regions	701684-DH1
	• For use in Portugal	701684-131
	• For use in Saudi Arabia	701684-171
	• For use in South Korea	701684-AD1
	• For use in Spain	701684-071
	• For use in Taiwan	701684-AB1
	• For use in Thailand	701684-281
	• For use in Turkey	701684-141
	• For use in the United Kingdom	701684-031
	• For use in the United States	701684-001
	• For use in Italy	701684-061
	• For use in Greece	701684-151
	• For use in Hungary	701684-211
	• For use in Russia	701684-251
	• For use in Bulgaria	701684-261
	• For use in Romania	701684-271
	• For use in Belgium	701684-A41
	• For use in Slovenia	701684-BA1
	• For use in Switzerland	701684-BG1
	• For use in the Czech Republic	701684-FL1
	• For use in Japan	701684-291
(3)	Top cover (includes TouchPad):	

Item	Component	Spare part number
	<ul style="list-style-type: none"> Ruby red (select models only) 	701703-001
	<ul style="list-style-type: none"> Winter blue (select models only) 	709177-001
	<ul style="list-style-type: none"> Sparkling black 	701704-001
	<ul style="list-style-type: none"> Sparkling black (for use with TouchSmart models) 	723303-001
(4)	Power button board (includes cable)	701686-001
(5)	TouchPad button board	701685-001
(6)	System board (includes replacement thermal material):	
	For use with computer models with Intel processors and UMA graphics:	
	For use with computer models with HM77 chipsets and i5-3317U processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701694-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	701694-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701694-001
	For use with computer models with HM77 chipsets and i3-3217U processors for use with TouchSmart models:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701696-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	701696-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701696-001
	For use with computer models with HM77 chipsets and i3-3227U processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	712795-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	712795-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	712795-001
	For use with computer models with HM77 chipsets and i3-2377M processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701697-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	701697-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701697-001
	For use with computer models with HM70 chipsets and Pentium 2117U processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	712793-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	712793-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	712793-001
	For use with computer models with HM70 chipsets and Pentium 987 processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701691-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	701691-501


Item	Component	Spare part number
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701691-001
	For use with computer models with HM70 chipsets and Pentium 997 processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	703714-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	703714-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	703714-001
	For use with computer models with HM77 chipsets and i5-3337U processors:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	712794-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	712794-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	712794-001
	For use with computer models with HM77 chipsets and i5-3337U processors for use with TouchSmart models	
	<ul style="list-style-type: none"> For Windows 8 Professional 	725067-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	725067-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	725067-001
	For use with computer models with HM77 chipsets, i3-2375M processors, and 1 GB of dedicated video memory	
	<ul style="list-style-type: none"> For Windows 8 Professional 	718970-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	718970-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	718970-001
	For use with computer models with HM77 chipsets and i3-3227U processors for use with TouchSmart models:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	725068-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	725068-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	725068-001
	For use with computer models with HM77 chipsets and i3-2375M processors for use with TouchSmart models:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	725071-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	725071-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	725071-001
	For use with computer models with Intel processors and discrete switchable graphics :	
	For use with computer models with HM77 chipsets, i5-3317U processors and 2 GB of dedicated video memory:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701702-601

Item	Component	Spare part number
	<ul style="list-style-type: none"> For Windows 8 Standard 	701702-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701702-001
	For use with computer models with HM77 chipsets. i3-3217U processors, and 1 GB of dedicated video memory:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701699-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	701699-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701699-001
	For use with computer models with HM77 chipsets. i3-2377M processors, and 1 GB of dedicated video memory:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	701700-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	701700-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	701700-001
	For use with computer models with HM77 chipsets. i5-3337U processors, and 2 GB of dedicated video memory:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	712799-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	712799-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	712799-001
	For use with computer models with HM77 chipsets. i3-3227U processors, and 1 GB of dedicated video memory	
	<ul style="list-style-type: none"> For Windows 8 Professional 	712798-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	712798-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	712798-001
	For use with computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory	
	<ul style="list-style-type: none"> For Windows 8 Professional 	718971-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	718971-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	718971-001
	For use with computer models with HM77 chipsets. i3-3227U processors, and 1 GB of dedicated video memory for use with TouchSmart models:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	725069-601
	<ul style="list-style-type: none"> For Windows 8 Standard 	725069-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	725069-001
	For use with computer models with HM77 chipsets. i5-3337U processors, and 1 GB of dedicated video memory for use with TouchSmart models:	
	<ul style="list-style-type: none"> For Windows 8 Professional 	725070-601

Item	Component	Spare part number
	<ul style="list-style-type: none"> For Windows 8 Standard 	725070-501
	<ul style="list-style-type: none"> For FreeDOS 1.0 or Ubuntu Linux 	725070-001
(7)	Memory modules (two, DDR3-1600 MHz, PC3-12800):	
	<ul style="list-style-type: none"> 8 GB 	693374-005
	<ul style="list-style-type: none"> 4 GB 	641369-005
	<ul style="list-style-type: none"> 2 GB 	652972-005
(8)	Heat sink (includes replacement thermal material):	
	<ul style="list-style-type: none"> Heat sink for computer models with switchable discrete graphics 	697916-001
	<ul style="list-style-type: none"> Heat sink for computer models with UMA graphics, not illustrated 	697915-001
(9)	mSATA solid-state drive, 32 GB (for computer models with Intel Core processors, not supported on Ubuntu Linux)	698524-001
	mSATA solid-state drive, 24 GB (for computer models with Intel Core processors, not supported on Ubuntu Linux)	717579-001
(10)	RTC battery	697917-001
(11)	Hard drive SATA, (does not include hard drive bumpers, bracket, or cable):	
	9.5 mm (0.37 in) x 6.35 cm (2.50 in):	
	<ul style="list-style-type: none"> 1 TB, 5400 rpm 	676521-005
	<ul style="list-style-type: none"> 750 GB, 7200 rpm 	633252-005
	<ul style="list-style-type: none"> 750 GB, 5400 rpm 	634250-005
	<ul style="list-style-type: none"> 640 GB, 5400 rpm 	669300-005
	<ul style="list-style-type: none"> 500 GB, 7200 rpm 	634925-005
	9.5 mm (0.37 in) x 6.35 cm (2.50 in):	
	<ul style="list-style-type: none"> 500 GB, 5400 rpm 	669299-005
	<ul style="list-style-type: none"> 300 GB, 5400 rpm 	622643-005
	Hard Drive Hardware Kit , not illustrated, (includes hard drive bracket and bracket screws, cable, and 2 bumpers)	701945-001
(12)	WLAN module:	
	<ul style="list-style-type: none"> [Author note:]Jackson Peak 1 Intel Centrino Wireless-N 2230 802.11 b/g/n 2x2 WiFi and Bluetooth 4.0 Combination Adapter, for use with computers with Intel processors 	670290-005
	<ul style="list-style-type: none"> [Author note:]marilyn Qualcomm Atheros AR9485 802.11 b/g/n 1x1 WiFi Adapter 	675794-005

Item	Component	Spare part number
	<ul style="list-style-type: none"> • [Author note:]mango Qualcomm Atheros AR9565 802.11 b/g/n 1×1 WiFi and Bluetooth 4.0 Combo Adapter for use with computers with Intel processors, not supported on Ubuntu Linux, (select models only) 	690019-005
	<ul style="list-style-type: none"> • [Author note:]Roma Ralink RT3290LE 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter (select models only) 	690020-005
	<ul style="list-style-type: none"> • [Author note:]Flamingo2 Ralink RT5390R 802.11 b/g/n 1×1 WiFi (select models only) 	691415-005
(13)	Platform Controller Hub (PCH) heat sink	699248-001
(14)	Speaker assembly (includes left and right speakers and cable)	701690-001
(15)	Battery , 4 cell. 37 Whr, (2.55 Ah)	695192-001
(16)	Fan	697914-001
(17)	RJ-45 cover	703075-001
(18)	Power connector	701682-001
(19)	USB board (includes cable and audio-out/audio-in jack)	701687-001
(20)	Base enclosure	718660-001
	Base enclosure (For use with TouchSmart models)	723305-001
	Rubber Feet Kit , not illustrated, (includes 4 rubber feet)	697906-001

Display assembly subcomponents

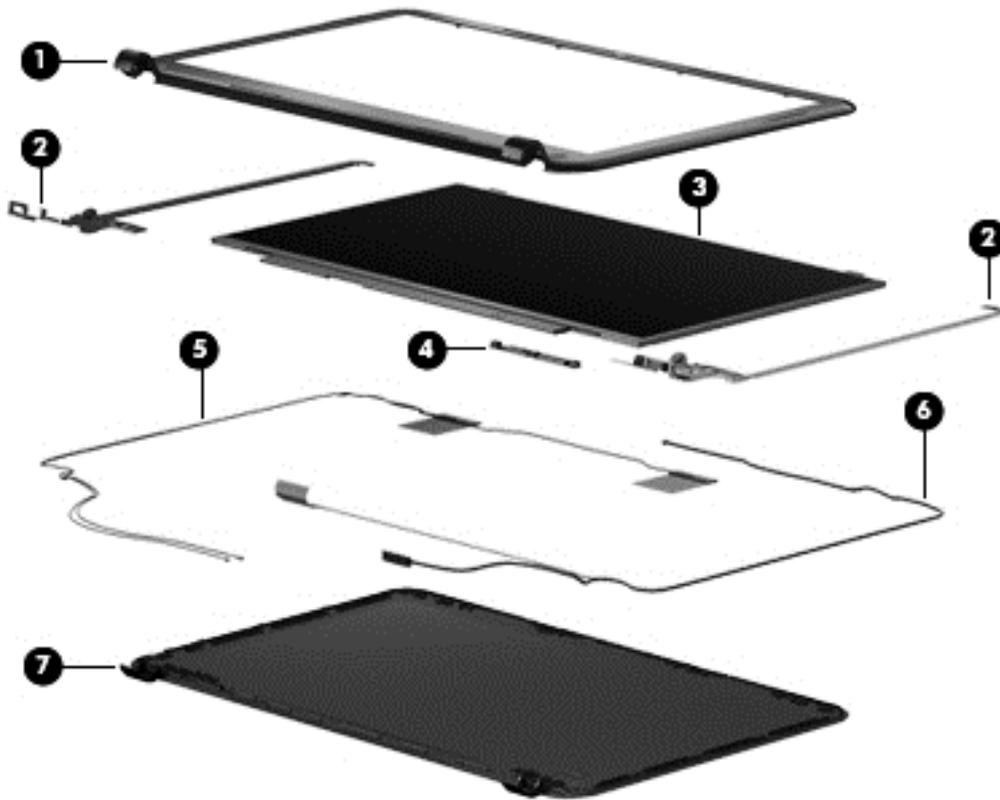

Item	Component	Spare part number
(1)	Display bezel	701680-001
(2)	Display Hinge Kit (includes left and right display hinges and brackets)	701683-001
(3)	35.6 cm (15.6 in), HD, WLED, SVA BrightView display panel	701688-001
(4)	Webcam/microphone module	707767-001
(5)	Antenna Kit (includes left and right wireless antenna cables and transceivers)	701676-001
(6)	Display Panel Cable Kit (includes display panel cable and webcam/microphone module cable)	701681-001
(7)	Display enclosure back cover:	
	• Ruby red	701677-001
	• Sparkling black	701678-001
	• Winter blue	709169-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
• 65 W RC V AC adapter	693715-001
• 65 W RC non-smart AC adapter (For use in China and India)	707750-001
Power cord (3-pin, black, 1.83 m):	
• For use in Australia	490371-011
• For use in Europe	490371-021
• For use in India	490371-D61
• For use in North America	490371-001
• For use in the People's Republic of China	490371-AA1
• For use in South Korea	490371-AD1
• For use in Taiwan	490371-AB1
• For use in Thailand	490371-201
• For use in Japan	490371-291
• For use in the United Kingdom and Singapore	490371-031
• For use in Denmark	490371-081
• For use in Switzerland	490371-111
• For use in Africa	490371-AR1
• For use in South Africa	490371-BB1
• For use in Italy	490371-061
Optional external optical drive , not illustrated, (includes bezel and bracket). (select models only)	
• DVD±RW Super Multi Double-Layer Combination Drive	659940-001
• Blu-ray DVD±RW Super Multi Double-Layer Combination external drive	659941-001
Screw Kit (not illustrated)	701689-001
Thermal Material Kit (not illustrated). For use with HP TouchSmart models.	680571-001
Counterweight , not illustrated, for use on TouchSmart models	717149-001
Hardware kit , not illustrated	701945-001
Speaker kit, not illustrated	701690-001

Sequential part number listing

Spare part number	Description
490371-001	Power cord for use in North America (black, 3-pin, 1.83 m)
490371-011	Power cord for use in Australia (black, 3-pin, 1.83 m)
490371-021	Power cord for use in Europe (black, 3-pin, 1.83 m)
490371-031	Power cord for use in the United Kingdom and Singapore (black, 3-pin, 1.83 m)
490371-061	Power cord for use in Italy (black, 3-pin, 1.83 m)
490371-081	Power cord for use in Denmark (black, 3-pin, 1.83 m)
490371-111	Power cord for use in Switzerland (black, 3-pin, 1.83 m)
490371-201	Power cord for use in Thailand (black, 3-pin, 1.83 m)
490371-291	Power cord for use in Japan (black, 3-pin, 1.83 m)
490371-AA1	Power cord for use in the People's Republic of China (black, 3-pin, 1.83 m)
490371-AB1	Power cord for use in Taiwan (black, 3-pin, 1.83 m)
490371-AD1	Power cord for use in South Korea (black, 3-pin, 1.83 m)
490371-AR1	Power cord for use in South Africa (black, 3-pin, 1.83 m)
490371-BB1	Power cord for use in Israel (black, 3-pin, 1.83 m)
490371-D61	Power cord for use in India (black, 3-pin, 1.83 m)
622643-005	320 GB, 5400 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)
633252-005	750 GB, 7200 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)
634250-005	750 GB, 5400 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)
634925-005	500 GB, 7200 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)
641369-005	4 GB memory module (DDR3-1600 MHz, PC3-12800)
652972-005	2 GB memory module (DDR3-1600 MHz, PC3-12800)
659940-001	Optical drive, external optional DVD±RW Super Multi Double-Layer Combination
659941-001	BlueRay optical drive, external optional DVD±RW Double-Layer Combination
669299-005	500 GB, 5400 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)
669300-005	640 GB, 5400 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)

Spare part number	Description
670290-005	[Author note:]jackson peak 1 Intel Centrino Wireless-N 2230 802.11 b/g/n 2x2 WiFi and Bluetooth 4.0 combination adapter, for use with computer models with Intel processors
675794-005	[Author note:]marilyn Qualcomm Atheros AR9485 802.11 b/g/n 1x1 WiFi Adapter
676521-005	1 TB, 5400 rpm hard drive (9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA, does not include hard drive bumpers, bracket, or cable)
680571-001	Thermal Material Kit (includes replacement thermal paste and pads)
690019-005	[Author note:]mango Qualcomm Atheros AR9565 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter for use with computers with Intel processors, not supported on Ubuntu Linux, (select models only)
690020-005	[Author note:]ROMA Ralink RT3290LE 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter (select models only)
691415-005	[Author note:]flamingo 2 Ralink RT5390R 802.11 b/g/n 1x1 WiFi Adapter (select models only)
693374-005	8 GB memory PC3L 12800 1600Mhz SHARED
693715-001	65 W RC V AC adapter
695192-001	4 cell, 37 Whr, 2.55 Ah Li-ion battery
697906-001	Rubber Feet Kit (includes 4 rubber feet)
697914-001	Fan
697915-001	Heat sink for use with computer models with a graphics subsystem with UMA video memory (includes replacement thermal material)
697916-001	Heat sink for use with computer models with a graphics subsystem with switchable discrete graphics (includes replacement thermal material)
697917-001	RTC battery
698524-001	mSATA solid-state drive, 32 GB (for use with computer models Intel Core processors, not supported on Ubuntu Linux)
699248-001	PCH heat sink
701676-001	Antenna Kit (includes left and right wireless antenna cables and transceivers)
701677-001	Display panel back cover, ruby red
701678-001	Display panel back cover, sparkling black
701680-001	Display bezel
701681-001	Display Panel Cable Kit (includes display panel cable and webcam/microphone module cable)
701682-001	Power connector
701683-001	Display Hinge Kit (includes left and right display hinges and brackets)

Spare part number	Description
701684-001	Keyboard with black finish for use in the United States (includes cable)
701684-031	Keyboard with black finish for use in the United Kingdom (includes cable)
701684-041	Keyboard with black finish for use in Germany (includes cable)
701684-051	Keyboard with black finish for use in France (includes cable)
701684-061	Keyboard with black finish for use in Italy (includes cable)
701684-071	Keyboard with black finish for use in Spain (includes cable)
701684-131	Keyboard with black finish for use in Portugal (includes cable)
701684-141	Keyboard with black finish for use in Turkey (includes cable)
701684-151	Keyboard with black finish for use in Greece (includes cable)
701684-161	Keyboard with black finish for use in Latin America (includes cable)
701684-171	Keyboard with black finish for use in Saudi Arabia (includes cable)
701684-211	Keyboard with black finish for use in Hungary (includes cable)
701684-251	Keyboard with black finish for use in Russia (includes cable)
701684-261	Keyboard with black finish for use in Bulgaria (includes cable)
701684-271	Keyboard with black finish for use in Romania (includes cable)
701684-281	Keyboard with black finish for use in Thailand (includes cable)
701684-291	Keyboard with black finish for use in Japan (includes cable)
701684-A41	Keyboard with black finish for use in Belgium (includes cable)
701684-AB1	Keyboard with black finish for use in Taiwan (includes cable)
701684-AD1	Keyboard with black finish for use in South Korea (includes cable)
701684-B31	Keyboard with black finish for use internationally (includes cable)
701684-BA1	Keyboard with black finish for use in Slovenia (includes cable)
701684-BB1	Keyboard with black finish for use in Israel (includes cable)
701684-BG1	Keyboard with black finish for use in Switzerland (includes cable)
701684-DB1	Keyboard with black finish for use in Canada (includes cable)
701684-DH1	Keyboard with black finish for use in the Nordic Region (includes cable)
701684-FL1	Keyboard with black finish for use in the Czech Republic (includes cable)
701685-001	TouchPad button board
701686-001	Power button board (includes cable)
701687-001	USB board (includes cable and audio-out/audio-in jack)
701688-001	39.6 cm (15.0 in), HD, WLED, SVA BrightView display panel
701689-001	Screw Kit

Spare part number	Description
701690-001	Speaker assembly (includes left and right speakers and cable)
701691-001	For use only with computer models equipped with UMA memory, HM70 chipset, a Pentium 987 processor and or FreeDOS 1.0
701691-501	For use only with computer models equipped with UMA memory, HM70 chipset, a Pentium 987 processor, and Windows 8 Standard
701691-601	For use only with computer models equipped with UMA memory, HM70 chipset, a Pentium 987 processor, and Windows 8 Professional
701694-001	System board for use only with computer models equipped with UMA memory, an HM77 chipset, an i5-3317U processor, and Ubuntu Linux or FreeDos 1.0
701694-501	System board for use only with computer models equipped with UMA memory, an HM77 chipset, an i5-3317U processor, and Windows 8 Standard
701694-601	System board for use only with computer models equipped with UMA memory, an HM77 chipset, an i5-3317U processor, and Windows 8 Professional
701696-001	For use only with computer models equipped with UMA memory, an HM77 chipset, an i3-3217U processor for FreeDos 1.0
701696-501	For use only with computer models equipped with UMA memory, an HM77 chipset, an i3-3217U processor, and Windows 8 Standard
701696-601	For use only with computer models equipped with UMA memory, an HM77 chipset, an i3-3217U processor, and Windows 8 Professional
701697-001	For use only with computer models equipped with UMA memory, an HM77 chipset, an i3-2377M processor for FreeDOS 1.0
701697-501	For use only with computer models equipped with UMA memory, an HM77 chipset, an i3-2377M processor, and Windows 8 Standard
701697-601	For use only with computer models equipped with UMA memory, an HM77 chipset, an i3-2377M processor, and Windows 8 Professional
701699-001	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i3-3217U processor, 1 GB of dedicated video memory, and FreeDOS 1.0
701699-501	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i3-3217U processor, 1 GB of dedicated video memory, and Windows 8 Standard
701699-601	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i3-3217U processor, 1 GB of dedicated video memory, and Windows 8 Professional
701700-001	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i3-2377M processor, 1 GB of dedicated video memory, and FreeDOS 1.0
701700-501	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i3-2377M processor, 1 GB of dedicated video memory, and Windows 8 Standard
701700-601	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i3-2377M processor, 1 GB of dedicated video memory, and Windows 8 Professional
701702-001	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i5-3317U processor, 2 GB of dedicated video memory, and FreeDOS 1.0
701702-501	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i5-3317U processor, 2 GB of dedicated video memory, and Windows 8 Standard

Spare part number	Description
701702-601	For use only with computer models equipped with Discrete Graphics video memory, an HM77 chipset, an i5-3317U processor, 2 GB of dedicated video memory, and Windows 8 Professional
701703-001	Top cover, ruby red (includes TouchPad)
701704-001	Top cover, sparkling black (includes TouchPad)
701945-001	Hard Drive Hardware Kit (includes hard drive bracket and bracket screws, cable, and 2 bumpers)
703075-001	RJ45 cover
703714-001	For use with computer models with HM70 chipsets and Pentium 997 processors for Windows 8 Professional
703714-501	For use with computer models with HM70 chipsets and Pentium 997 processors for Windows 8 Standard
703714-601	For use with computer models with HM70 chipsets and Pentium 997 processors for FreeDOS 1.0 or Ubuntu Linux
707750-001	AC Adapter (for use in China and India)
707767-001	Webcam/microphone module
709169-001	Display back cover, winter blue
709171-001	Display 15.6 in. for touch screen
709177-001	Top cover TouchPad, winter blue
712793-001	Processor for use with computer models with HM70 chipsets and Pentium 2117U for FreeDOS 1.0 or Ubuntu Linux
712793-501	Processor for use with computer models with HM70 chipsets and Pentium 2117U for use with Windows 8 Standard
712793-601	Processor for use with computer models with HM70 chipsets and Pentium 2117U for use with Windows 8 Professional
712794-001	Processor for use with computer models with HM77 chipsets and i5-3337U for FreeDOS 1.0 or Ubuntu Linux
712794-501	Processor for use with computer models with HM77 chipsets and i5-3337U for use with Windows 8 Standard
712794-601	Processor for use with computer models with HM77 chipsets and i5-3337U for use with Windows 8 Professional
712795-001	Processor for use with computer models with HM77 chipsets and i3-3277M for FreeDOS 1.0 or Ubuntu Linux
712795-501	Processor for use with computer models with HM77 chipsets and i3-3277M for use with Windows 8 Standard
712795-601	Processor for use with computer models with HM77 chipsets and i3-3277M for use with Windows 8 Professional
712798-001	Processor for use with computer models with HM77 chipsets. i3-3227U for FreeDOS 1.0 or Ubuntu Linux
712798-501	Processor for use with computer models with HM77 chipsets and i3-3227U for use with Windows 8 Standard

Spare part number	Description
712798-601	Processor for use with computer models with HM77 chipsets. i3-2327U for use with Windows 8 Professional
712799-001	Processor for use with computer models with HM77 chipsets. i5-3337U processors, and 2 GB of dedicated video memory for FreeDOS 1.0 or Ubuntu Linux
712799-501	Processor for use with computer models with HM77 chipsets. i5-3337U processors, and 2 GB of dedicated video memory for Windows 8 Standard
712799-601	Processor for use with computer models with HM77 chipsets. i5-3337U processors, and 2 GB of dedicated video memory for Windows 8 Professional
717149-001	Counterweight, for use with TouchSmart computer models
717579-001	mSATA solid-state drive, 24 GB (for computer models with Intel Core processors, not supported on Ubuntu Linux)
718660-001	Base enclosure (for use in Japan)
718970-001	Processor for use with UMA computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory for FreeDOS 1.0 or Ubuntu Linux
718970-501	Processor for use with UMA computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory for Windows 8 Standard
718970-601	Processor for use with UMA computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory for Windows 8 Professional
718971-001	Processor for use with discrete computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory for FreeDOS 1.0 or Ubuntu Linux
718971-501	Processor for use with discrete computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory for Windows 8 Standard
718971-601	Processor for use with discrete computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory for Windows 8 Professional
723303-001	Top cover with TouchPad for TouchSmart models
723305-001	Base enclosure for TouchSmart models
752067-001	Processor for use with UMA touch screen computer models with HM77 chipsets I5-3337U processors, and 1 GB of dedicated video memory
752067-501	Processor for use with UMA touch screen computer models with HM77 chipsets I5-3337U processors, and 1 GB of dedicated video memory for Windows 8 Standard
752067-601	Processor for use with UMA touch screen computer models with HM77 chipsets I5-3337U processors, and 1 GB of dedicated video memory for Windows 8 Professional
752068-001	Processor for use with UMA touch screen computer models with HM77 chipsets I3-3227U processors, and 1 GB of dedicated video memory
752068-501	Processor for use with UMA touch screen computer models with HM77 chipsets I3-3227U processors, and 1 GB of dedicated video memory for Windows 8 Standard
752068-601	Processor for use with UMA touch screen computer models with 630M chipsets I3-3227U processors, and 1 GB of dedicated video memory for Windows 8 Professional
725069-001	Processor for use with UMA touch screen computer models with 630M chipsets I5-3227U processors, and 1 GB of dedicated video memory

Spare part number	Description
725069-501	Processor for use with UMA touch screen computer models with 630M chipsets I3-3227U processors, and 1 GB of dedicated video memory for Windows 8 Standard
725069-601	Processor for use with UMA touch screen computer models with 630M chipsets I3-3227U processors, and 1 GB of dedicated video memory for Windows 8 Professional
725070-001	Processor for use with discrete touch screen computer models with 630M chipsets I5-3337U processors, and 1 GB of dedicated video memory
725070-501	Processor for use with discrete touch screen computer models with 630M chipsets I3-3337U processors, and 1 GB of dedicated video memory for Windows 8 Standard
725070-601	Processor for use with discrete touch screen computer models with 630M chipsets I3-3337U processors, and 1 GB of dedicated video memory for Windows 8 Professional
725071-001	Processor for use with UMA touch screen computer models with HM77 chipsets I5-2375M processors, and 1 GB of dedicated video memory
725071-501	Processor for use with UMA touch screen computer models with HM77 chipsets I5-2375M processors, and 1 GB of dedicated video memory for Windows 8 Standard
725071-601	Processor for use with UMA touch screen computer models with HM77 chipsets I5-2375M processors, and 1 GB of dedicated video memory for Windows 8 Professional

4 Removal and replacement procedures

 **CAUTION:** The user-replaceable parts for this computer are:

AC adapter

Battery

Keyboard

For all parts that are **not** user-replaceable, only HP authorized service providers should perform the removal and replacement procedures described here. Accessing the internal part could damage the computer or void the warranty.

Preliminary replacement requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

 **CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

Component replacement procedures


This chapter provides removal and replacement procedures.

There may be as many as 67 screws that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw and screw lock size and location during removal and replacement.

Service label

When ordering parts or requesting information, provide the computer serial number and model number provided on the service label. The service label is located on the bottom of the computer.

 **NOTE:** Your label may look slightly different from the illustration in this section.

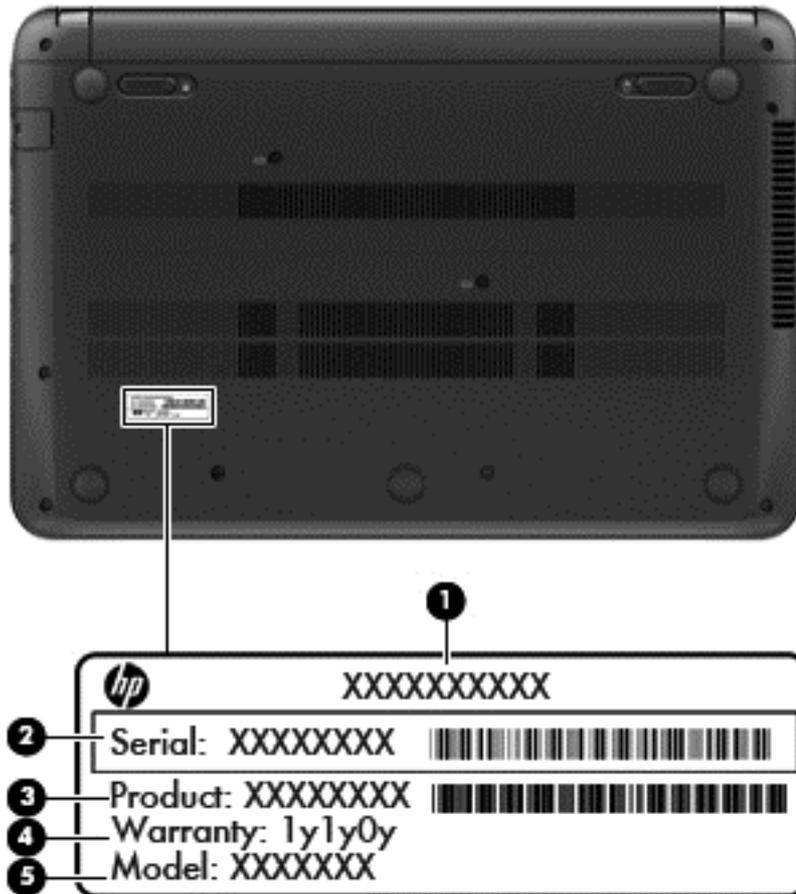

Item	Description	Function
(1)	Product name	The name affixed to the front of the computer.
(2)	Serial number	This is an alphanumeric identifier that is unique to each product.
(3)	Product part number	This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description (select models only)	This is the alphanumeric identifier needed to locate documents, drivers, and support for the computer.

Battery

Description	Spare part number
4 cell, 37 Whr, 2.55 Ah Li-ion battery	695192-001

Before disassembling the computer, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the battery:

1. Turn the computer upside down on a flat surface.
2. Slide the battery release lock **(1)** far enough that it rests in the unlocked position.
3. Slide the battery release latch **(2)** to release the battery.
4. Slide the battery **(3)** from the middle to remove it from the computer.



To insert the battery reverse these procedures.

 **NOTE:** The battery release latch will automatically lock into place.

Reset the battery release lock to the locked position.


Remove the battery:

To insert the battery, follow these steps:

 **CAUTION:** Do not slant the battery as you insert it.

1. Holding the battery in the middle, slide the battery **(1)** straight into the computer until the battery release latch locks into place.


2. Reset the battery release lock **(2)** to the locked position.

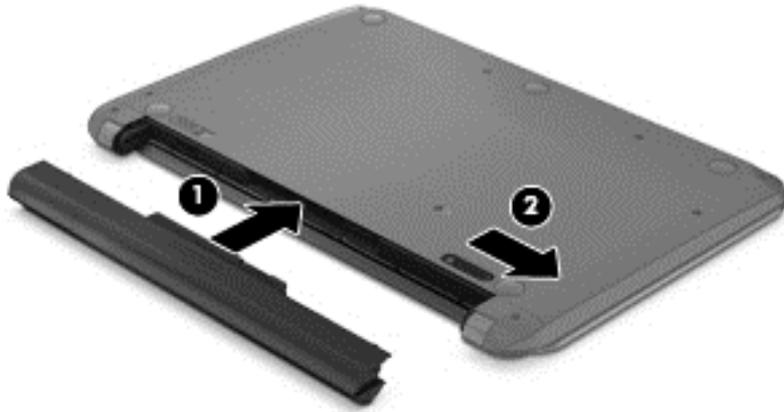

Computer feet

Description	Spare part number
Rubber Feet Kit	697906-001

The computer feet are adhesive-backed rubber pads. There are 5 rubber feet that attach to the base enclosure in the locations illustrated below.

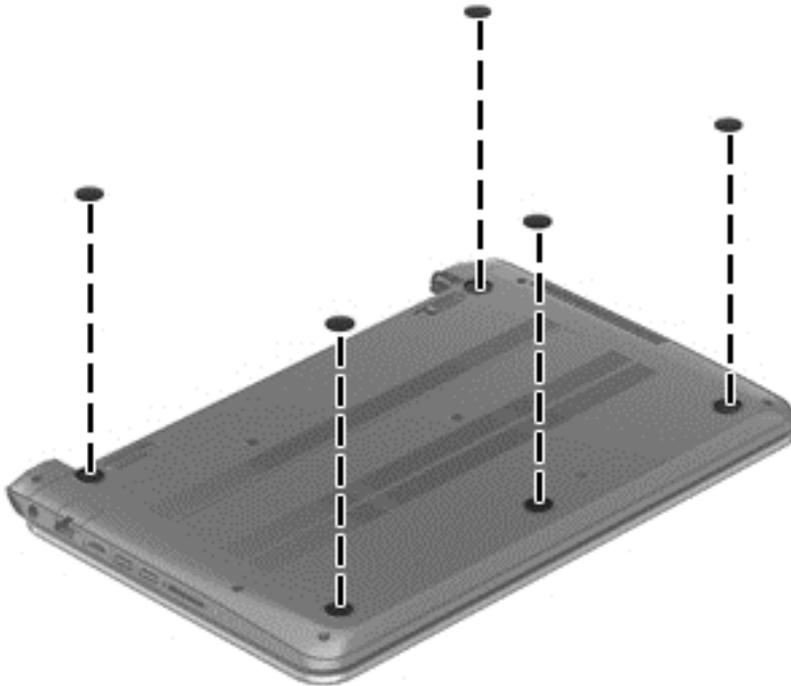

Display panel

 **NOTE:** These procedures are for replacing the display panel for HP Pavilion Sleekbook and HP Pavilion Ultrabook models.

Description	Spare part number
Display bezel	701680-001
39.6 cm (15.0 in), HD, WLED, SVA BrightView flat display panel	701688-001
Display cable	701681-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.


Before removing the display panel, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).

 **NOTE:** To replace the entire display assembly, additional steps are required (see [Display Assembly on page 83](#)).


Remove the panel:

1. Remove the plastic screw covers **(1)** and the two Phillips screws **(2)** that secure the display bezel to the display assembly.

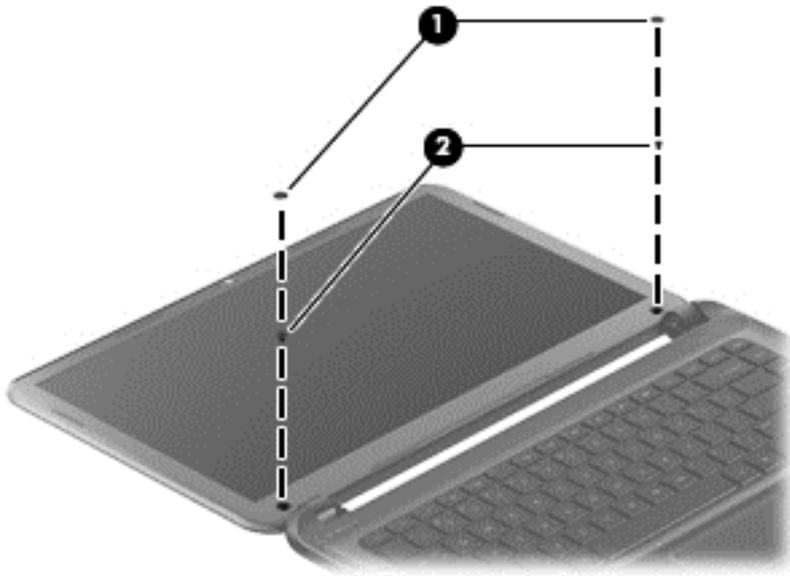


2. Flex the inside edges of the bottom edge **(1)**, the left and right sides **(2)**, and the top edge **(3)** of the display bezel until the bezel disengages from the display enclosure.

3. Remove the display bezel **(4)**.

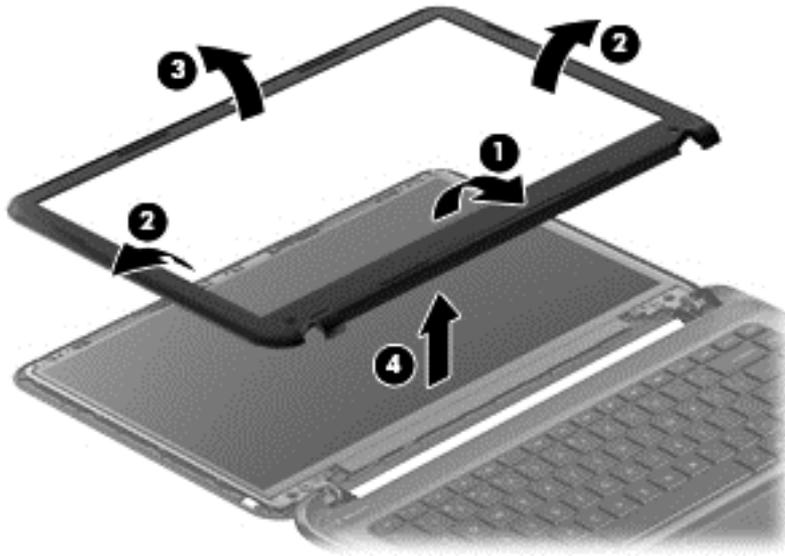

4. Remove the four Phillips screws for the display panel.

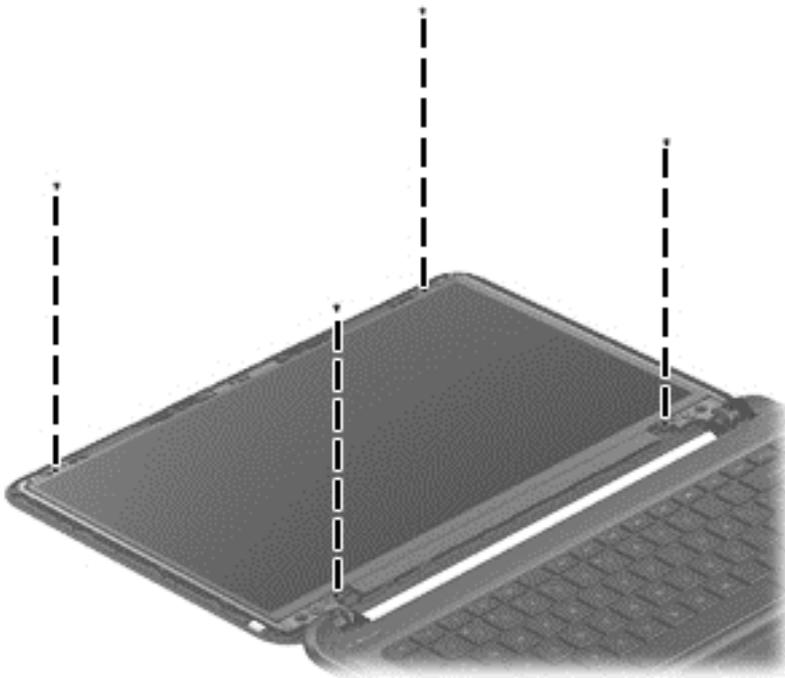

5. Move the panel toward the keyboard **(1)**.

 **NOTE:** Support the display panel as you lean the panel forward.

6. Release the adhesive support strip **(2)** that secures the display panel cable connector to the display panel.

7. Disconnect the display panel cable (3) from the display panel, and then remove the panel (4).



Reverse this procedure to replace the panel.

Keyboard

 **NOTE:** The keyboard spare part kit includes a keyboard cable.

Description	Spare part number
Black keyboard:	
• For use in Canada	701684-DB1
• For use in France	701684-051
• For use in Germany	701684-041
• For use internationally	701684-B31
• For use in Israel	701684-BB1
• For use in Japan	701684-291
• For use in Latin America	701684-161
• For use in Nordic countries	701684-DH1
• For use in Portugal	701684-131
• For use in Saudi Arabia	701684-171
• For use in Spain	701684-071
• For use in South Korea	701684-AD1
• For use in Taiwan	701684-AB1

Description	Spare part number
• For use in Thailand	701684-281
• For use in Turkey	701684-141
• For use in the United Kingdom	701684-031
• For use in the United States	701684-001
• For use in Italy	701684-061
• For use in Greece	701684-151
• For use in Hungary	701684-211
• For use in Russia	701684-251
• For use in Bulgaria	701684-261
• For use in Romania	701684-271
• For use in Belgium	701684-A41
• For use in Slovenia	701684-BA1
• For use in Switzerland	701684-BG1
• For use in the Czech Republic	701684-FL1


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the keyboard, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).

Remove the keyboard:

1. Remove the two Phillips screws that secure the keyboard to the computer.

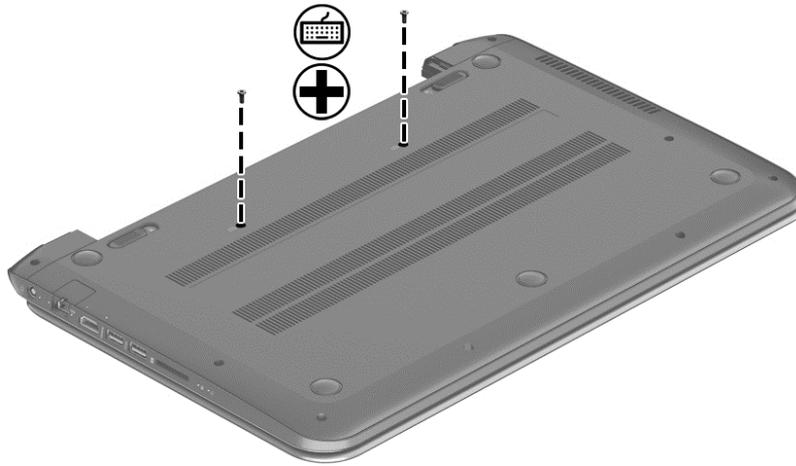


2. Turn the computer right-side up with the front toward you. Open the display and stand the computer on its right side. Insert a thin tool through the keyboard access hole. (The keyboard icon indicates the keyboard access hole.) Push firmly on the bottom of the keyboard until it disengages from the computer.

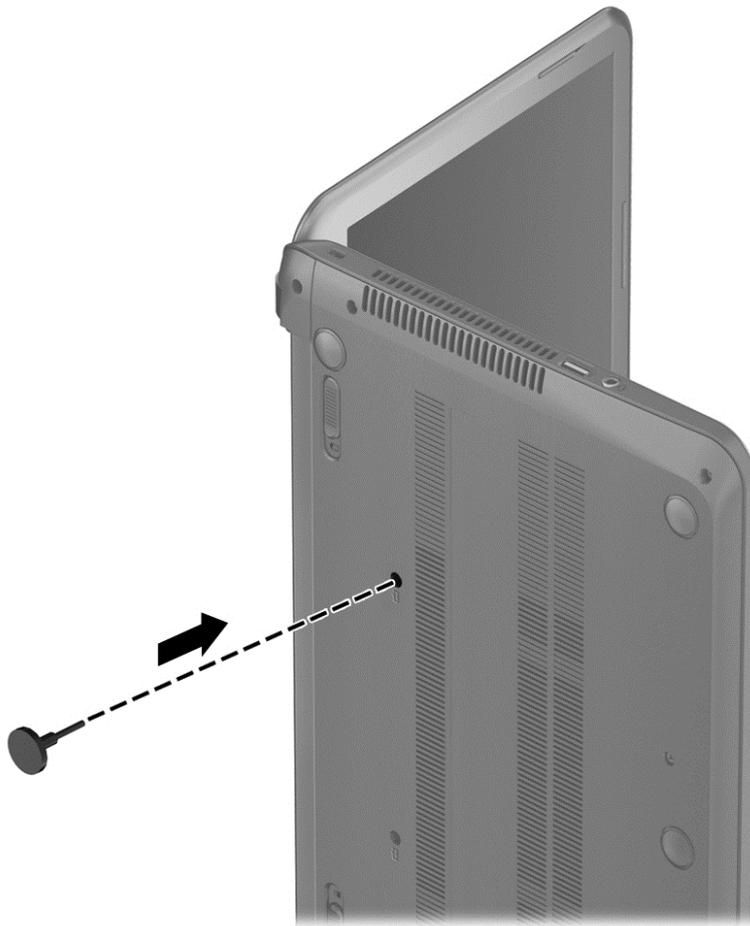

3. Turn the computer right-side up with the front toward you and open the display.
4. Gently slide your finger along the top edge of the keyboard to release the keyboard clips. Lift up on the rear of the keyboard.



5. Tilt the keyboard forward **(1)** onto the palm rest. Release the zero insertion force (ZIF) connector **(2)** to which the keyboard cable is attached, and then disconnect the keyboard cable **(3)** from the system board.

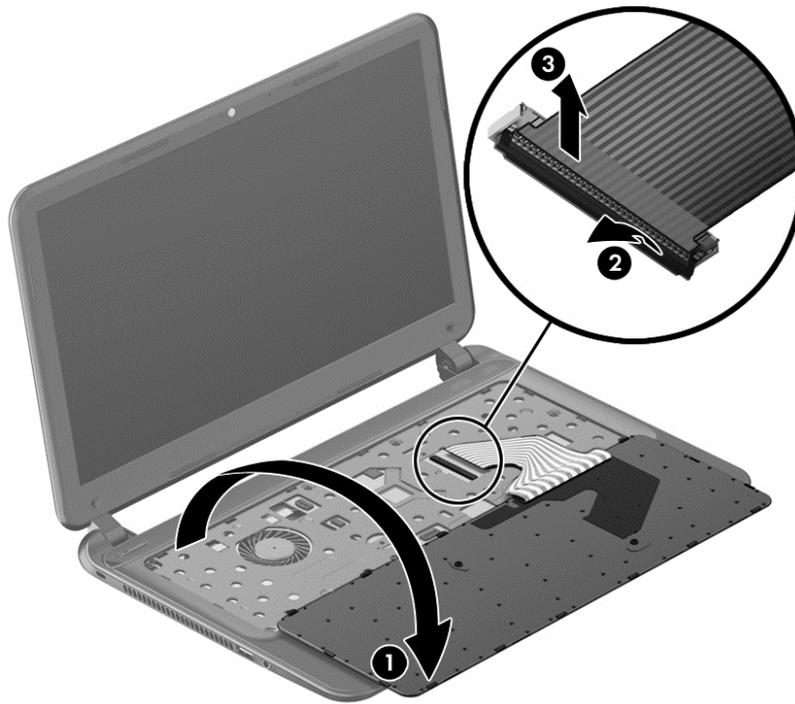

6. Remove the keyboard.
Reverse this procedure to install the keyboard.

Top cover

 **NOTE:** The top cover spare part kit includes the TouchPad support, TouchPad board and TouchPad cable.

Description	Spare part number
Ruby red top cover	701703-001
Sparkling black top cover	701704-001
Sparkling black top cover for TouchSmart models	723303-001
Winter Blue top cover	709177-001
TouchPad button board	701685-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the top cover, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).

Remove the top cover:


1. Remove the five Phillips screws that secure the top cover to the base enclosure.

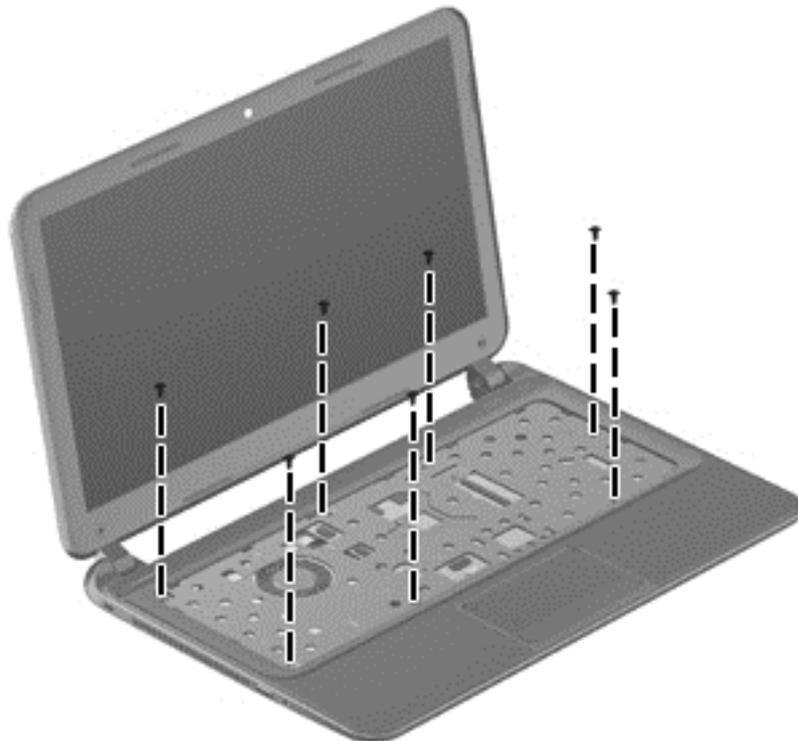

2. Disconnect the power button cable **(1)** and the TouchPad cable **(2)**.

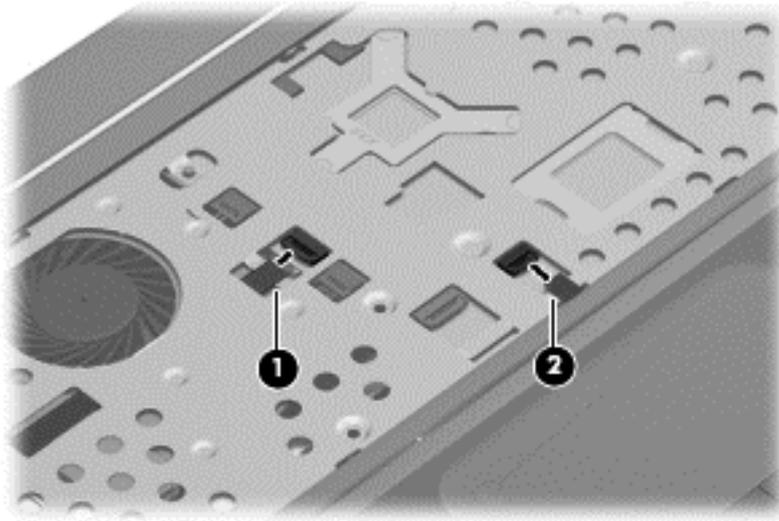


3. Close the display and turn the computer upside down.
4. Remove the eight Phillips screws from the bottom of the computer.

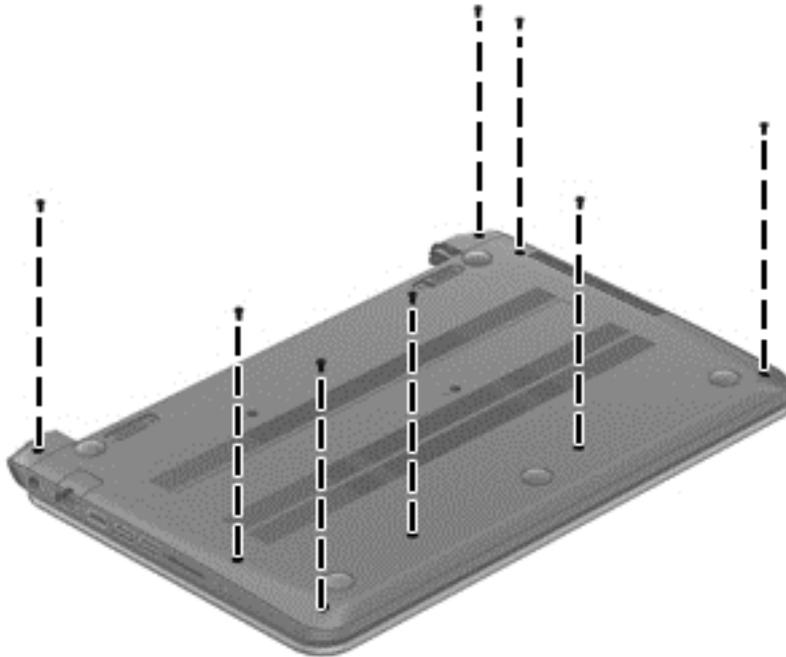

5. Turn the computer over and open the display.

6. Gently lift around the edges of the top cover **(1)** and lift to remove the top cover **(2)**.

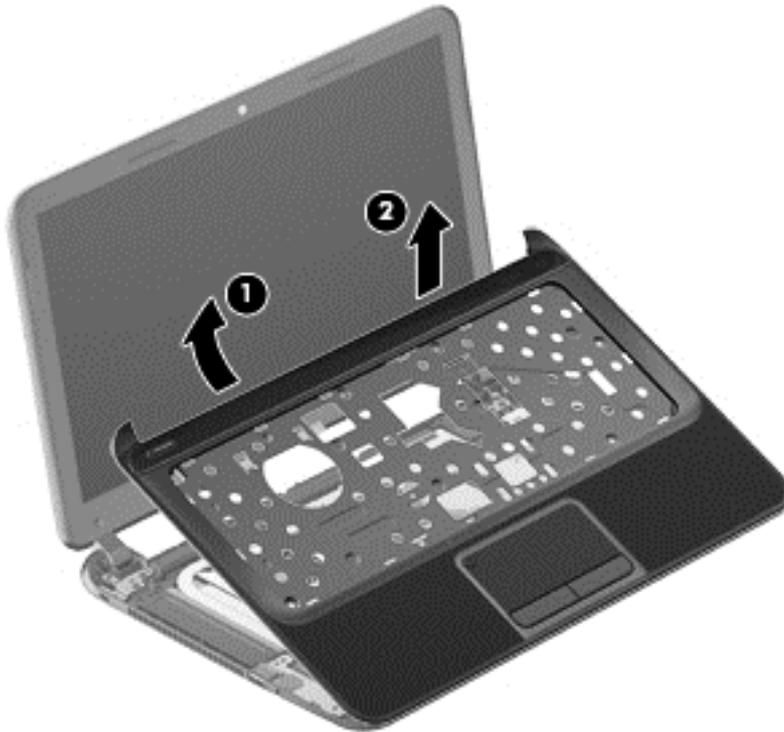

When replacing the top cover, be sure that the Power button board and cable (see [Power button board on page 54](#)). are removed from the defective top cover and installed on the replacement top cover.

Reverse this procedure to install the top cover.

Power button board

Description	Spare part number
Power button board (includes cable)	701686-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the power button board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).

Remove the power button board:

1. Turn the top cover upside down, with the front toward you.
2. Remove the Phillips screw **(1)** and tape that secure the power button board to the top cover.
3. Release the clips, lift the power button board **(2)**, and carefully slide the power button cable out from the guides **(3)** to remove the power button board.

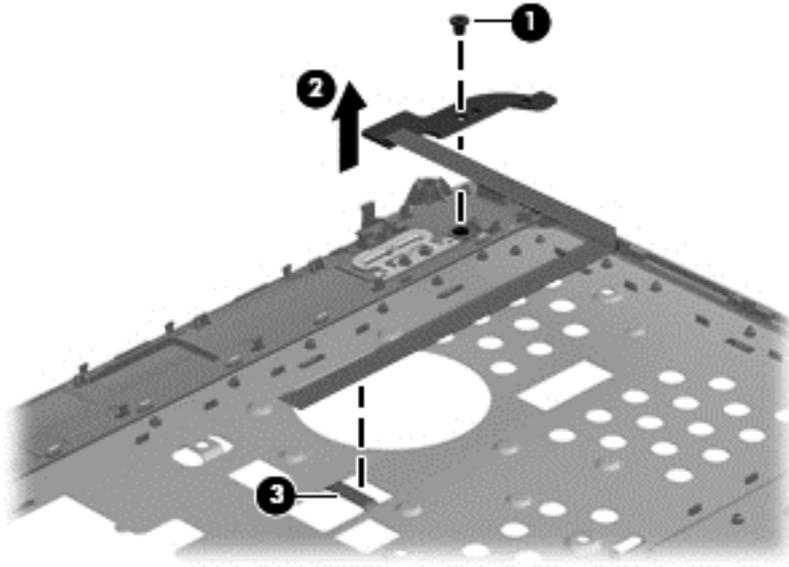

Reverse this procedure to install the power button board.

Hard drive

 **NOTE:** The hard drive spare part kit does not include the hard drive cable, or hard drive bracket and screws.

Description	Spare part number
9.5 mm (0.37 in) × 6.35 cm (2.50 in) SATA	
1 TB, 5400 rpm	676521-005
750 GB, 7200 rpm	633252-005
750 GB, 5400 rpm	634250-005
640 GB, 5400 rpm	669300-005
500 GB, 7200 rpm	634925-005
500 GB, 5400 rpm	669299-005
320 GB, 5400 rpm	622643-005
Hard Drive Hardware Kit (includes hard drive cable, and hard drive bracket and screws)	701945-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the hard drive, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).


Remove the hard drive:

1. Disconnect the USB cable on top of the hard drive from the computer.

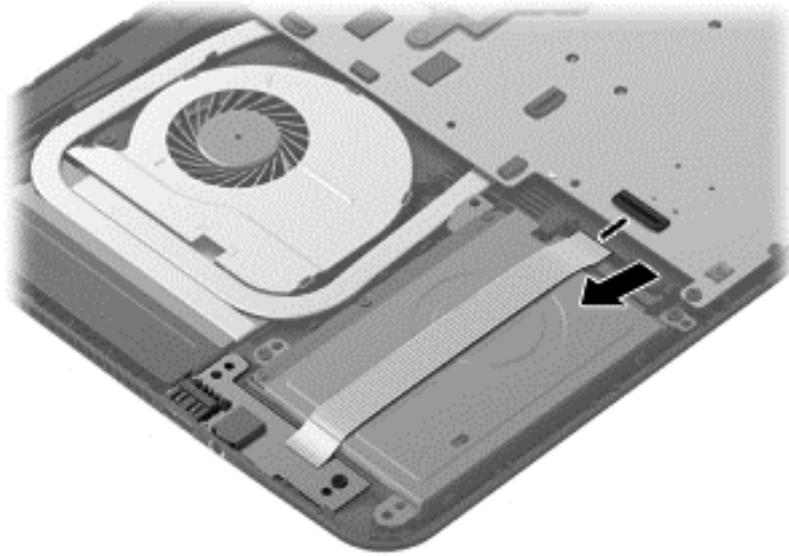


 **NOTE:** If it is necessary to replace the hard drive cable, see [System board on page 63](#).

2. Remove the two Phillips screws **(1)**. Lift the hard drive **(2)** to remove and disconnect the hard drive cable **(3)**.

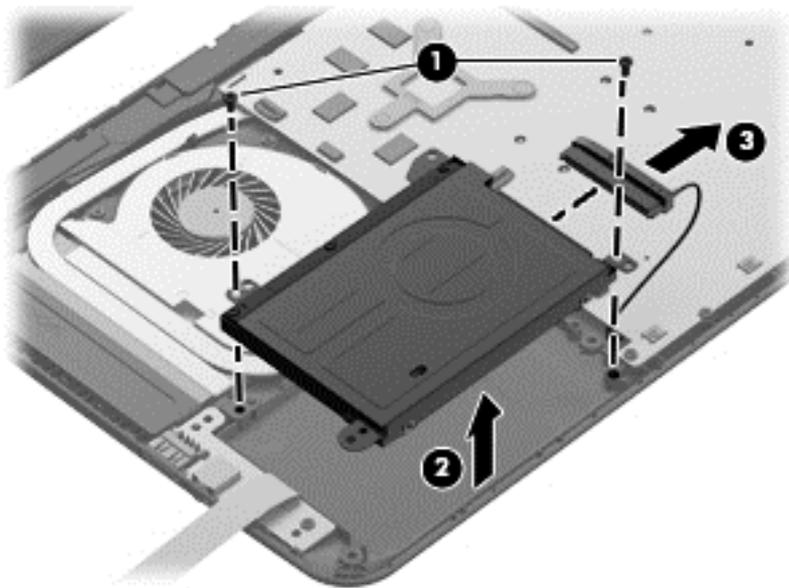

3. Remove the four Phillips screws **(1)**, and then remove the bracket **(2)** from the hard drive.

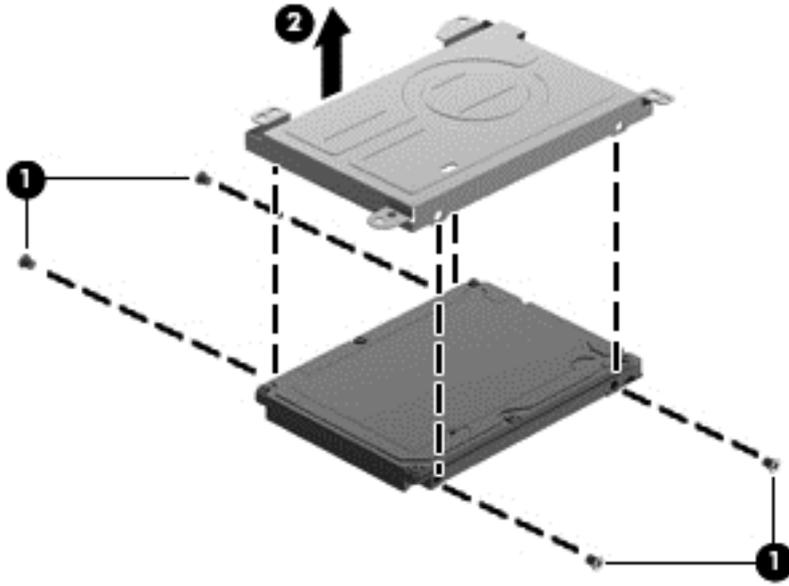

To install a hard drive, reverse the removal procedure.

USB board/Audio jack

Description	Spare part number
USB board (includes cable and audio-out/audio-in jack)	701687-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.


Before removing the USB board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).

Remove the USB board:

 **NOTE:** One side of the USB cable lays across the hard drive. It is disconnected during the hard drive removal process.

1. Remove the screw **(1)** and gently lift the USB board **(2)** up.
2. Slide the USB board **(3)** out to remove it.

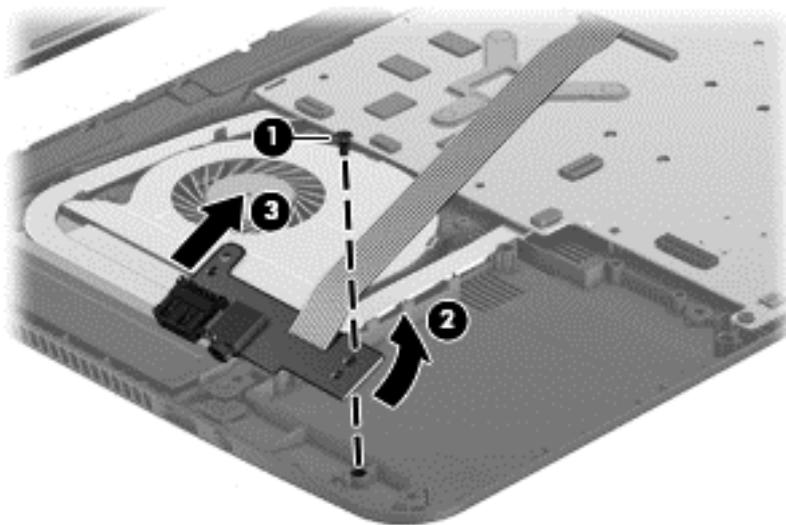

Reverse this procedure to install the USB board.

WLAN module

Description	Spare part number
Intel Centrino Wireless-N 2230 802.11 b/g/n 2x2 WiFi and Bluetooth 4.0 combination adapter, for use with computers with Intel processors	670290-005
Qualcomm Atheros AR9485 802.11 b/g/n 1x1 WiFi Adapter	675794-005
[Author note:]mango	690019-005
Qualcomm Atheros AR9565 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter for use with computers with Intel processors, not supported on Ubuntu Linux, (select models only)	
[Author note:]ROMA	690020-005
Ralink RT3290LE 802.11 b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter (select models only)	
[Author note:]flamingo2	691415-005
Ralink RT5390R 802.11 b/g/n 1x1 WiFi Adapter (select models only)	



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement.



CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WLAN module, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).


Remove the WLAN module:

1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.

 **NOTE:** The 1/black WLAN antenna cable is connected to the WLAN module 1/Main terminal. The 2/white WLAN antenna cable is connected to the WLAN module 2/Aux terminal.

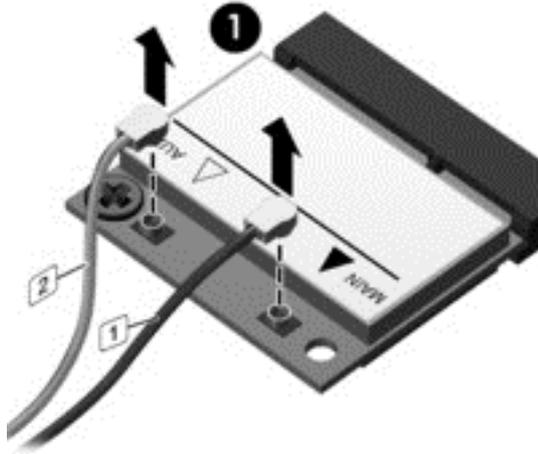


2. Remove the Phillips screw **(2)** that secures the WLAN module to the system board. (The WLAN module tilts up.)

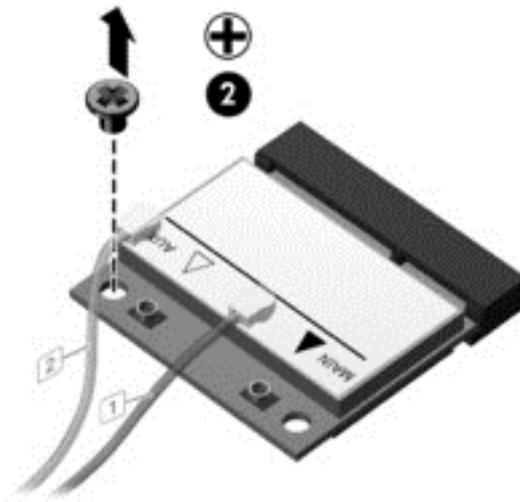

3. Remove the WLAN module by pulling the module away from the slot at an angle **(3)**.

 **NOTE:** The WLAN module is designed with a notch to prevent incorrect installation into the WLAN module socket.

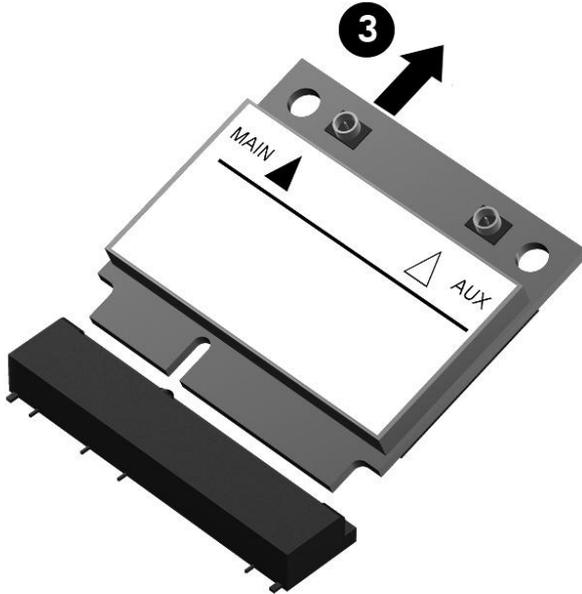

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves should be installed on the antenna connectors, as shown in the following illustration.



Reverse this procedure to install the WLAN module.

System board



NOTE: The system board Thermal Material Kit, part number 680571-001, includes replacement thermal paste and pads.

Description	Spare part number
For use with computer models with Intel processors and UMA graphics:	
For use with computer models with HM77 chipsets and i5-3317U processors:	
• For Windows 8 Professional	701694-601
• For Windows 8 Standard	701694-501
• For FreeDOS 1.0 or Ubuntu Linux	701694-001
For use with computer models with HM77 chipsets and i5-3337U processors for use with TouchSmart models:	
• For Windows 8 Professional	725067-601
• For Windows 8 Standard	725067-501
• For FreeDOS 1.0 or Ubuntu Linux	725067-001
For use with computer models with HM77 chipsets and i3-2375U processors for use with TouchSmart models:	
• For Windows 8 Professional	725071-601
• For Windows 8 Standard	725071-501
• For FreeDOS 1.0 or Ubuntu Linux	725071-001
For use with computer models with HM77 chipsets and i3-2375M processors:	
• For Windows 8 Professional	718970-601
• For Windows 8 Standard	718970-501
• For FreeDOS 1.0 or Ubuntu Linux	718970-001
For use with computer models with HM77 chipsets and i3-3217U processors:	
• For Windows 8 Professional	701696-601
• For Windows 8 Standard	701696-501
• For FreeDOS 1.0 or Ubuntu Linux	701696-001
For use with computer models with HM77 chipsets and i3-3277U processors for TouchSmart models:	
• For Windows 8 Professional	725068-601
• For Windows 8 Standard	725068-501
• For FreeDOS 1.0 or Ubuntu Linux	725068-001
For use with computer models with HM77 chipsets and i3-3277U processors:	
• For Windows 8 Professional	712795-601
• For Windows 8 Standard	712795-501

Description	Spare part number
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	712795-001
For use with computer models with HM77 chipsets and i3-2377M processors:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	701697-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	701697-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	701697-001
For use with computer models with HM70 chipsets and Pentium 2117U processors:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	712793-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	712793-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	712793-001
For use with computer models with HM70 chipsets and Pentium 987 processors:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	701691-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	701691-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	701691-001
For use with computer models with HM70 chipsets and Pentium 997 processors:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	703714-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	703714-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	703714-001
For use with computer models with HM77 chipsets and i5-3337U processors:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	712794-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	712794-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	712794-001
For use with computer models with Intel processors and discrete switchable graphics :	
For use with computer models with HM77 chipsets, i5-3317U processors and 2 GB of dedicated video memory:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	701702-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	701702-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	701702-001
For use with computer models with HM77 chipsets, i3-3337U processors, and 2GB of dedicated video memory for use with TouchSmart models:	
<ul style="list-style-type: none"> • For Windows 8 Professional 	725070-601
<ul style="list-style-type: none"> • For Windows 8 Standard 	725070-501
<ul style="list-style-type: none"> • For FreeDOS 1.0 or Ubuntu Linux 	725070-001

Description	Spare part number
For use with computer models with HM77 chipsets. i3-3217U processors, and 1 GB of dedicated video memory:	
• For Windows 8 Professional	701699-601
• For Windows 8 Standard	701699-501
• For FreeDOS 1.0 or Ubuntu Linux	701699-001
For use with computer models with HM77 chipsets. i3-3227U processors, and 1 GB of dedicated video memory:	
• For Windows 8 Professional	712798-601
• For Windows 8 Standard	712798-501
• For FreeDOS 1.0 or Ubuntu Linux	712798-001
For use with computer models with HM77 chipsets. i3-3227U processors, and 1 GB of dedicated video memory for use with TouchSmart models:	
• For Windows 8 Professional	725069-601
• For Windows 8 Standard	725069-501
• For FreeDOS 1.0 or Ubuntu Linux	725069-001
For use with computer models with HM77 chipsets. i5-3337U processors, and 2 GB of dedicated video memory:	
• For Windows 8 Professional	712799-601
• For Windows 8 Standard	712799-501
• For FreeDOS 1.0 or Ubuntu Linux	712799-001
For use with computer models with HM77 chipsets. i3-2375M processors, and 1 GB of dedicated video memory	
• For Windows 8 Professional	718971-601
• For Windows 8 Standard	718971-501
• For FreeDOS 1.0 or Ubuntu Linux	718971-001
For use with computer models with HM77 chipsets. i3-2377M processors, and 1 GB of dedicated video memory	
• For Windows 8 Professional	701700-601
• For Windows 8 Standard	701700-501
• For FreeDOS 1.0 or Ubuntu Linux	701700-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the system board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).


After removing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory module (see [Memory module on page 69](#))
- RTC battery (see [RTC battery on page 72](#))
- Heat sink (see [Heat sink on page 77](#))
- PCH heat sink (see [PCH heat sink on page 76](#))
- mSATA solid-state drive (see [mSATA solid-state drive on page 74](#))


Remove the system board:

 **NOTE:** The heat sink on your system board may appear different from the heat sink shown.

1. Disconnect the following cables from the system board:
 - (1) Display panel cable
 - (2) Speaker cable
 - (3) Fan power connector

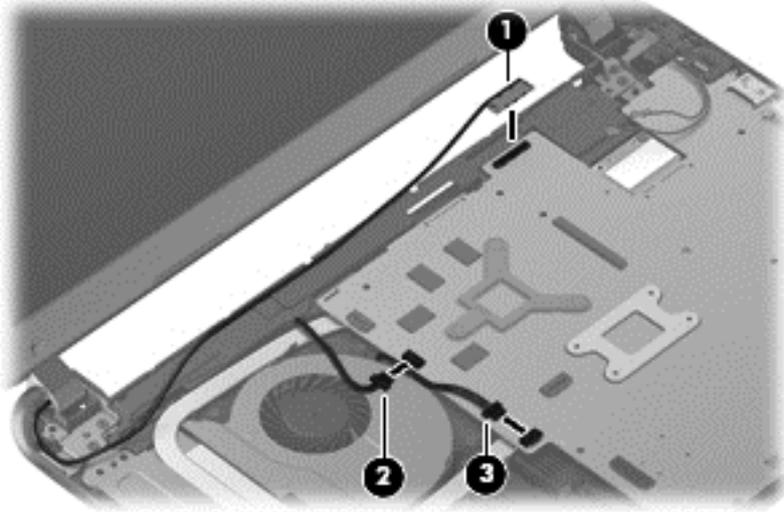


2. Remove the power connector bracket Phillips screw (1) and remove the power connector bracket (2).
3. Remove the two Phillips screws (3) that secure the system board to the base enclosure.

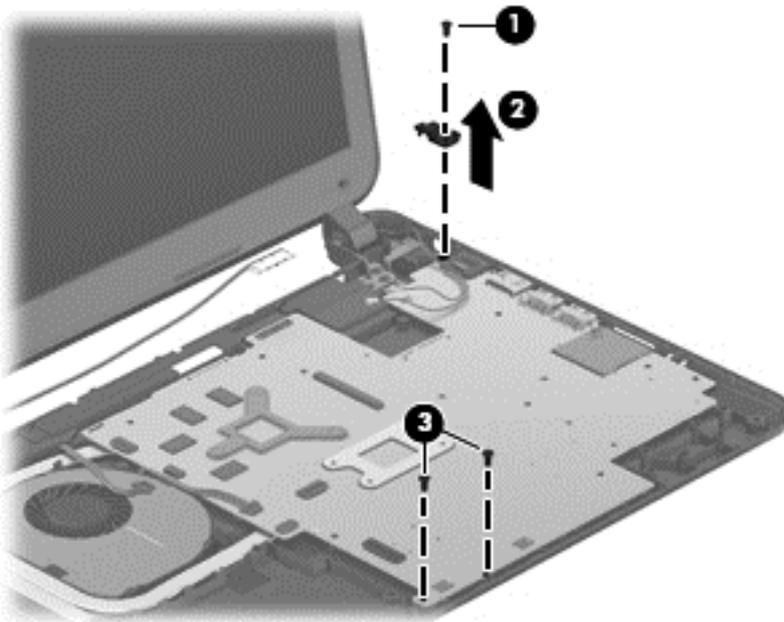


4. Lift the left side of the system board (1) until it rests at an angle.

5. Remove the system board by sliding it up and to the left at an angle **(2)**.
6. Disconnect the power connector cable **(3)**.

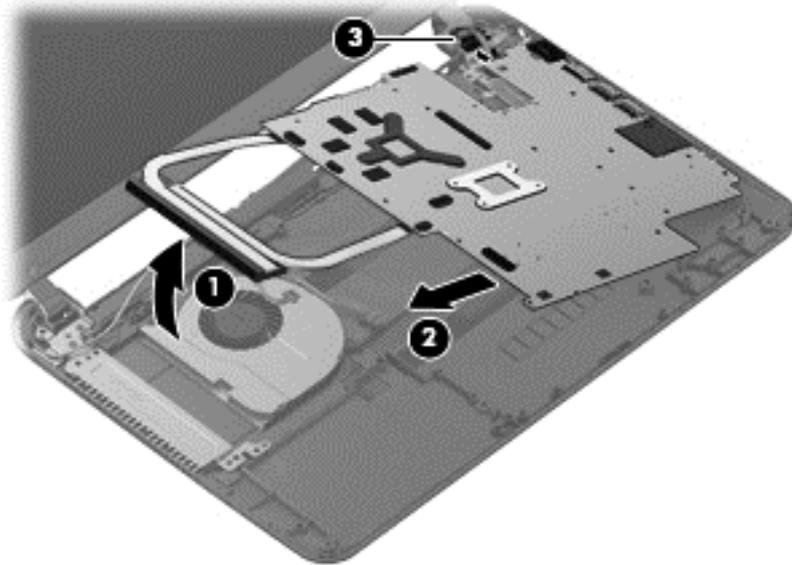

7. Remove the hard drive cable:
 - a. Turn the system board upside down, with the front toward you.
 - b. Disconnect the hard drive cable from the system board.

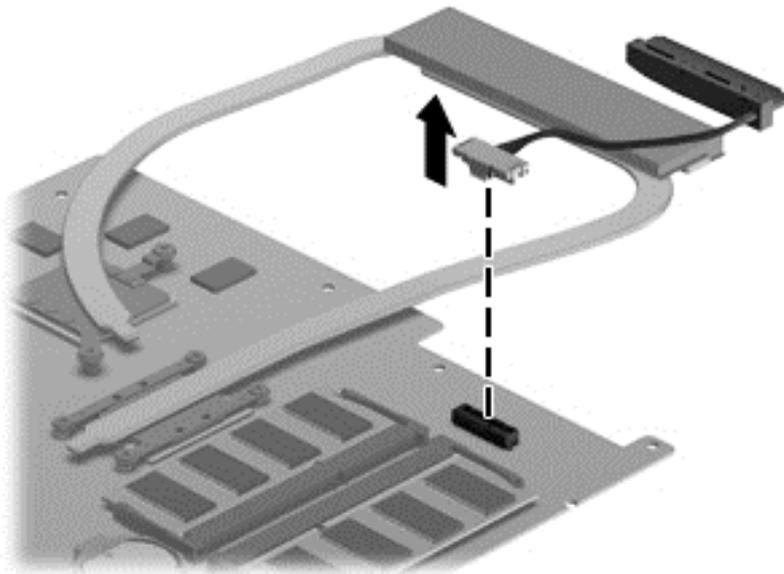

Reverse this procedure to install the system board.

Memory module

 **WARNING!** To reduce the risk of electric shock and damage to the equipment, unplug the power cord and remove all batteries before installing a memory module.

 **CAUTION:** Electrostatic discharge (ESD) can damage electronic components. Before beginning any procedure, ensure that you are discharged of static electricity by touching a grounded metal object.

Description	Spare part number
4 GB (DDR3-1600 MHz, PC3-12800)	641369-005
2 GB (DDR3-1600 MHz, PC3-12800)	652972-005
8 GB (DDR3-1600 MHz, PC3-12800)	693374-005

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing a memory module, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

To add or replace a memory module:

1. Turn the system board upside down to access the memory module.
2. Spread the retention clips **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)

3. Remove the memory module **(2)** by pulling it away from the slot at an angle.

⚠ CAUTION: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

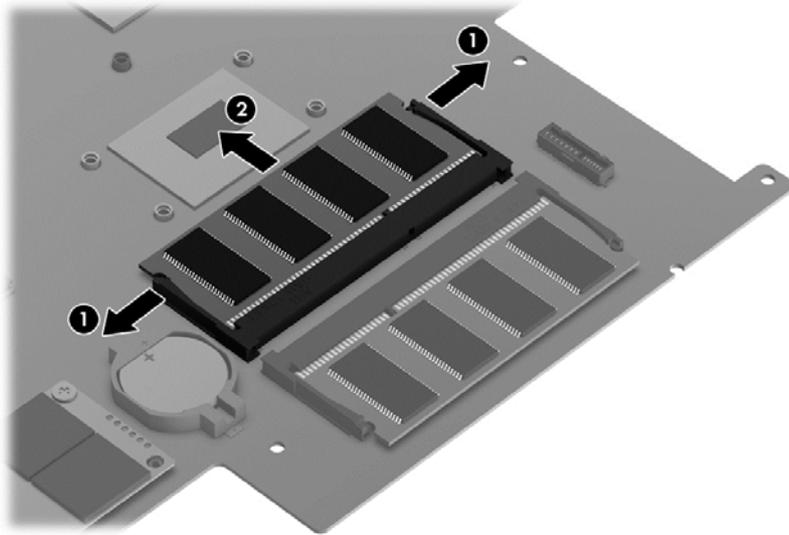


⚠ CAUTION: To protect a memory module after removal, place it in an electrostatic-safe container.

To replace the memory module:

1. Align the notched edge of the replacement memory module with the tab in the memory module slot, and then press the module **(1)** into the slot at a 45-degree angle until it is firmly seated.

2. Press down on the left and right sides of the memory module **(2)** until the side retention clips snap back into place.

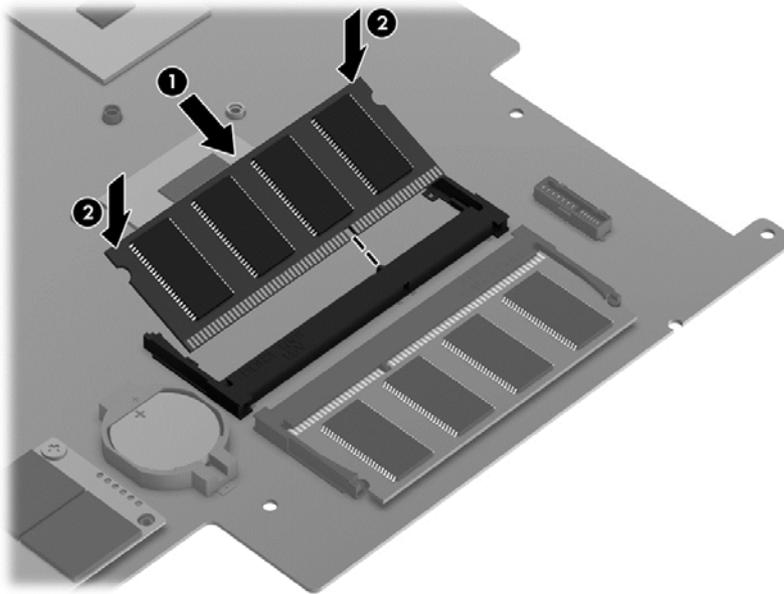

3. Reverse the previous removal steps to replace the following items:
 - System board
 - WLAN
 - USB board
 - Hard drive
 - Top cover
 - Keyboard
 - Battery
 - Any external devices and the AC adapter

RTC battery

Description	Spare part number
RTC battery	697917-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the RTC battery, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

Remove the RTC battery:

1. Turn the system board upside down, with the front toward you.
2. Remove the RTC battery **(1)** by pressing down with a thin plastic tool or your finger. The battery is spring loaded and will pop up. Lift and remove the RTC battery **(2)**.

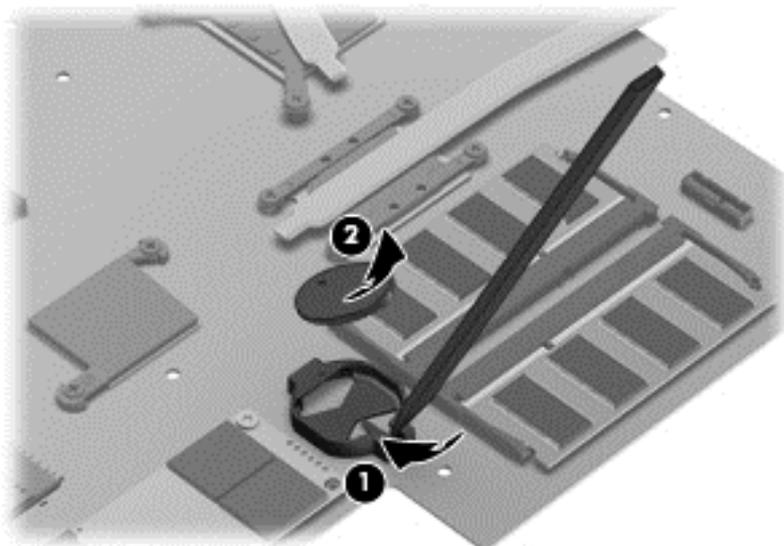

Reverse this procedure to install the RTC battery.

mSATA solid-state drive

Description	Spare part number
mSATA solid-state drive, 32 GB drive (for use with computers with Intel Core processors, not supported on Ubuntu Linux)	698524-001
mSATA solid-state drive, 24 GB drive (for use with computers with Intel Core processors, not supported on Ubuntu Linux)	717579-001



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the mSATA solid state drive, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

Remove the mSATA drive:

1. Turn the system board upside down, with the front toward you.

2. Remove the Phillips screw **(1)** and slide out the mSATA solid-state drive **(2)**.

 **NOTE:** The drive tilts up to remove. The drive also has a notch that you line up to ensure it is installed correctly.

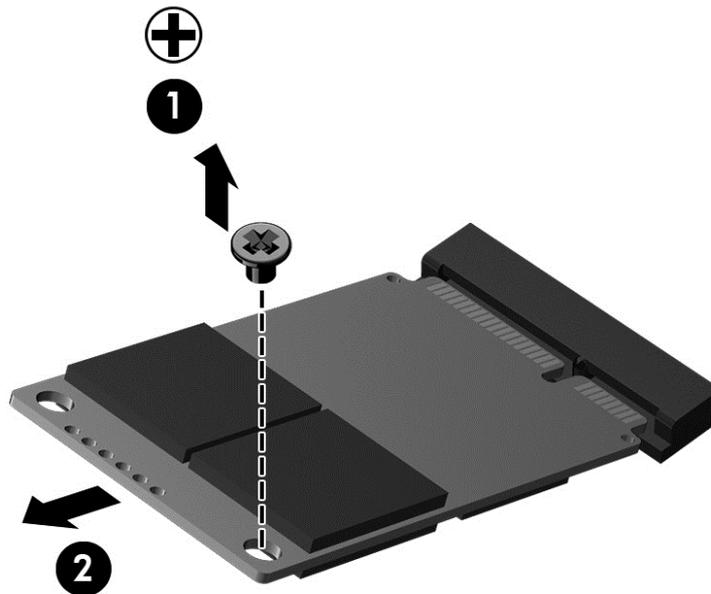

Reverse this procedure to install the mSATA drive onto a replacement system board.

PCH heat sink

Description	Spare part number
PCH heat sink	699248-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the PCH heat sink, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

Remove the PCH heat sink:

1. Turn the system board upside down, with the front toward you.
2. Remove the two Phillips screws **(1)** and lift off the PCH heat sink **(2)**.

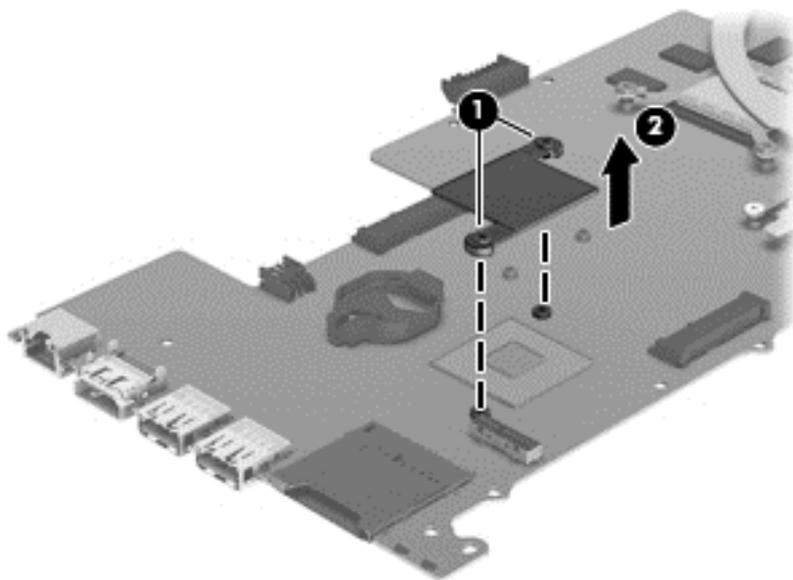

Reverse this procedure to install the PCH heat sink onto a replacement system board.

Heat sink

Description	Spare part number
UMA graphics heat sink	697915-001
Switchable discrete graphics heat sink	697916-001
Thermal material	680571-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the heat sink, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).



Remove the heat sink:

1. Turn the system board upside down, with the front toward you.


 **NOTE:** Computer models with UMA graphics and switchable discrete graphics have different types of heat sinks depending on the computer model.

2. Remove the heat sink. If you have an UMA graphics heat sink, go to step c.
 - a. Loosen all of the captive screws (1) and (2) and then lift the switchable discrete graphics heat sink (3) from the system board.


⚠ CAUTION: To prevent damage to the cooling tubes, do not lift the assembly by the cooling tubes. The tubes bend easily.

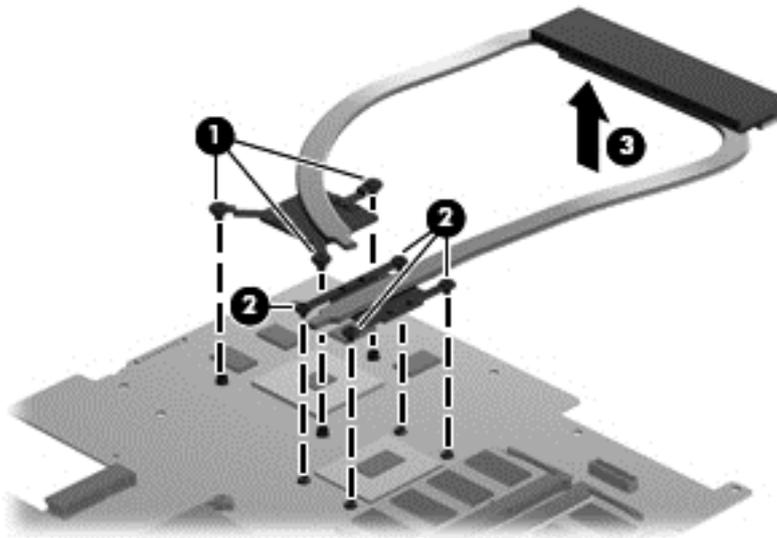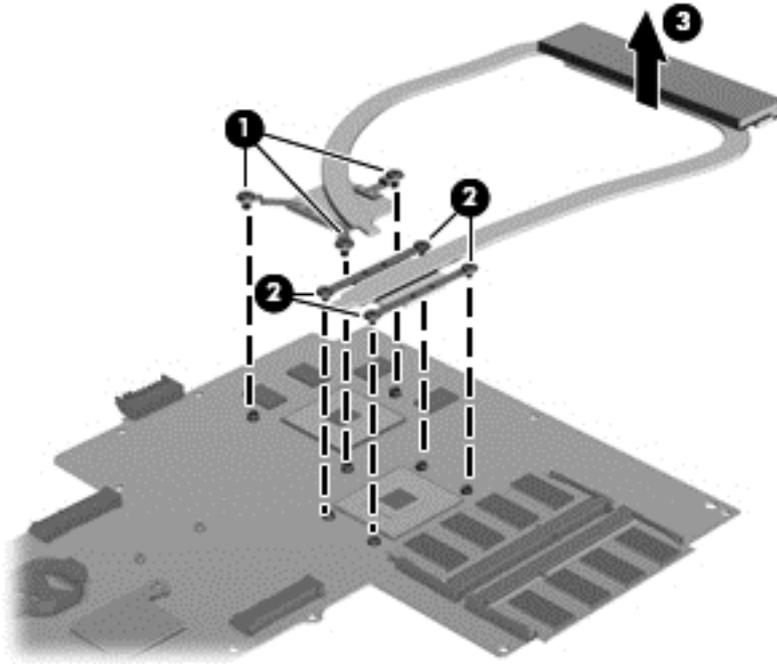


- b. Thoroughly clean the thermal connections **(1)**, **(3)** on the system board and the heat sink **(2)**, **(4)** before replacing a heat sink onto a system board. Continue to step 3.

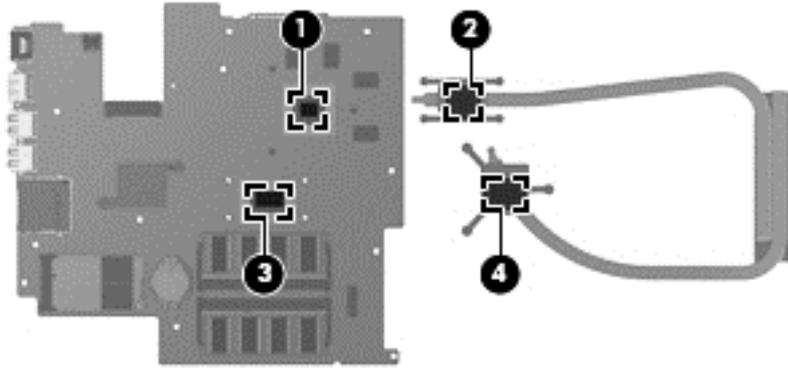

- c. Loosen the captive screws **(1)** and lift the UMA graphics heat sink **(2)** from the system board.

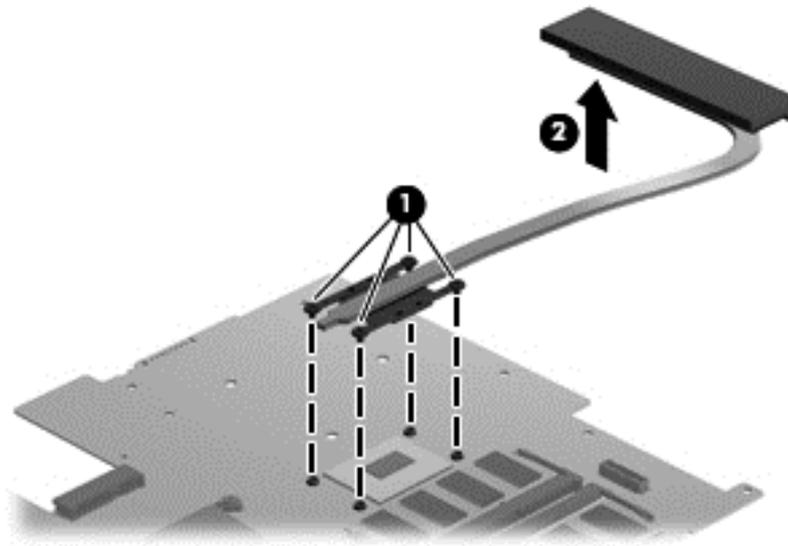

- d. Thoroughly clean the thermal connections **(1)** on the system board and the heat sink **(2)** before replacing a heat sink onto a system board.

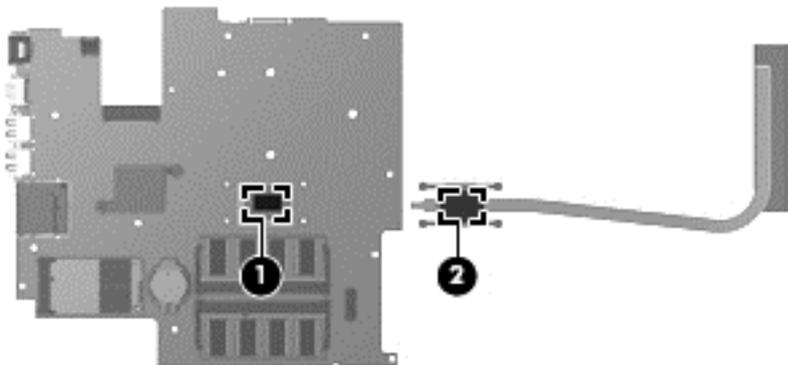

3. Reverse this procedure to replace the heat sink. Replace the thermal material that ships with the replacement heat sink.

Fan

Description	Spare part number
Fan	697914-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the fan, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

To remove the fan from the base enclosure:

1. Disconnect the fan cable.
2. Remove the three Phillips screws (**1**) from the fan (**2**) and lift up to remove the fan.

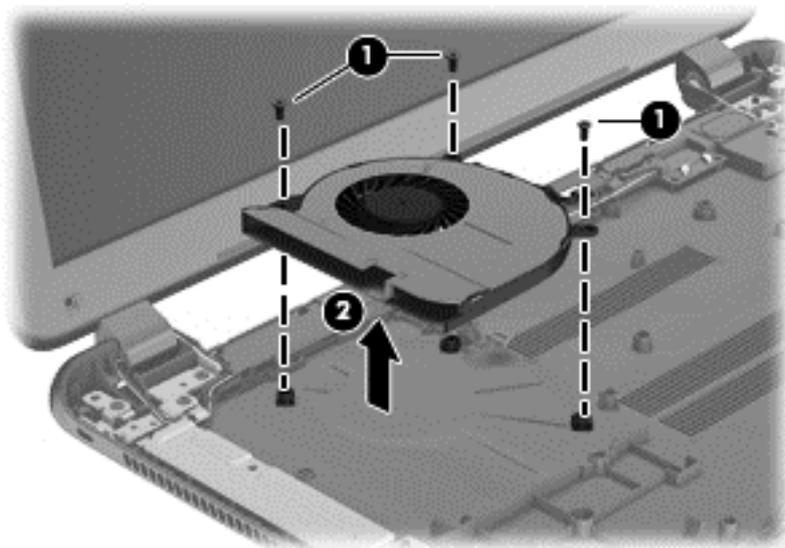

Reverse this procedure to install the cooling fan in the base enclosure.

Speaker assembly

Description	Spare part number
Speaker assembly	701690-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.


Before removing the speaker assembly, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

Remove the speaker assembly:

 **NOTE:** The speaker screws were removed during the process to remove the top cover.

- ▲ Gently release the wires **(1)** routed along the top of the base enclosure and lift both pieces of the speaker assembly **(2)**.

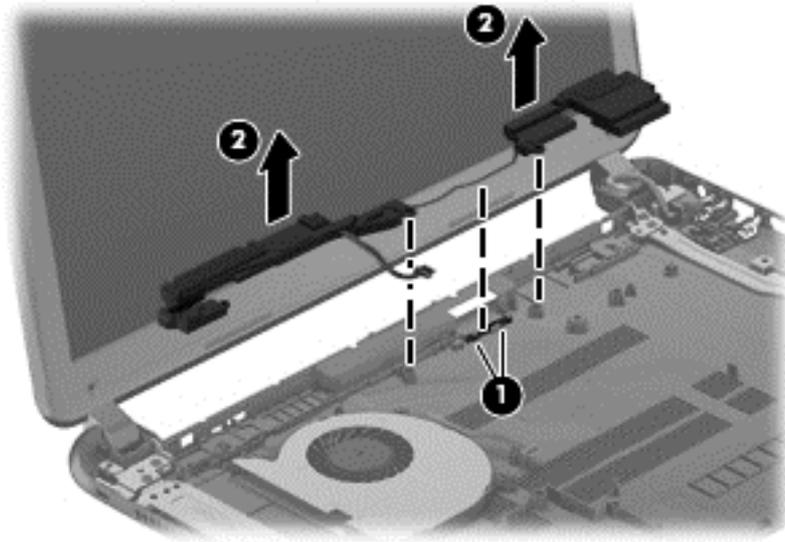

Reverse this procedure to install the speaker assembly on the base enclosure.

RJ-45 cover

Description	Spare part number
RJ-45 cover	703075-001


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the RJ-45 cover, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).
10. Remove the system board (see [System board on page 63](#)).

Remove the RJ-45 cover:

1. Remove the Phillips M screw **(1)** for the RJ-45 cover.
2. Lift the RJ-45 assembly **(2)** to remove it from the base enclosure.

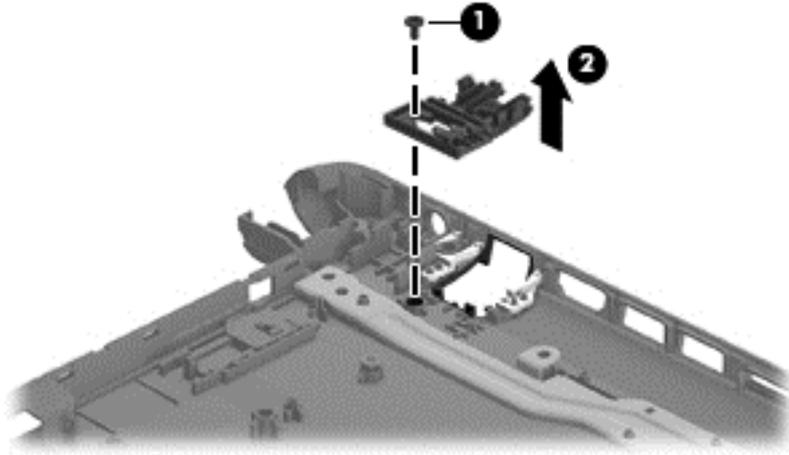

Reverse these procedures to replace the RJ-45 assembly.

Display Assembly

Description	Spare part number
39.6 cm (15.0 in), high definition (HD), WLED, SVA BrightView TouchSmart slim display assembly	701688-001
Display bezel	701680-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the display assembly, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the display panel (see [Display panel on page 44](#)).
6. Remove the keyboard (see [Keyboard on page 47](#)).
7. Remove the top cover (see [Top cover on page 51](#)).
8. Remove the hard drive (see [Hard drive on page 56](#)).
9. Remove the USB board (see [USB board/Audio jack on page 59](#)).

10. Remove the WLAN (see [WLAN module on page 60](#)).
11. Remove the system board (see [System board on page 63](#)).

Remove the display assembly.

CAUTION: Support the display assembly when removing the following screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.

- ▲ Remove the four Phillips screws from the display hinges **(1)** and lift the display assembly **(2)**.

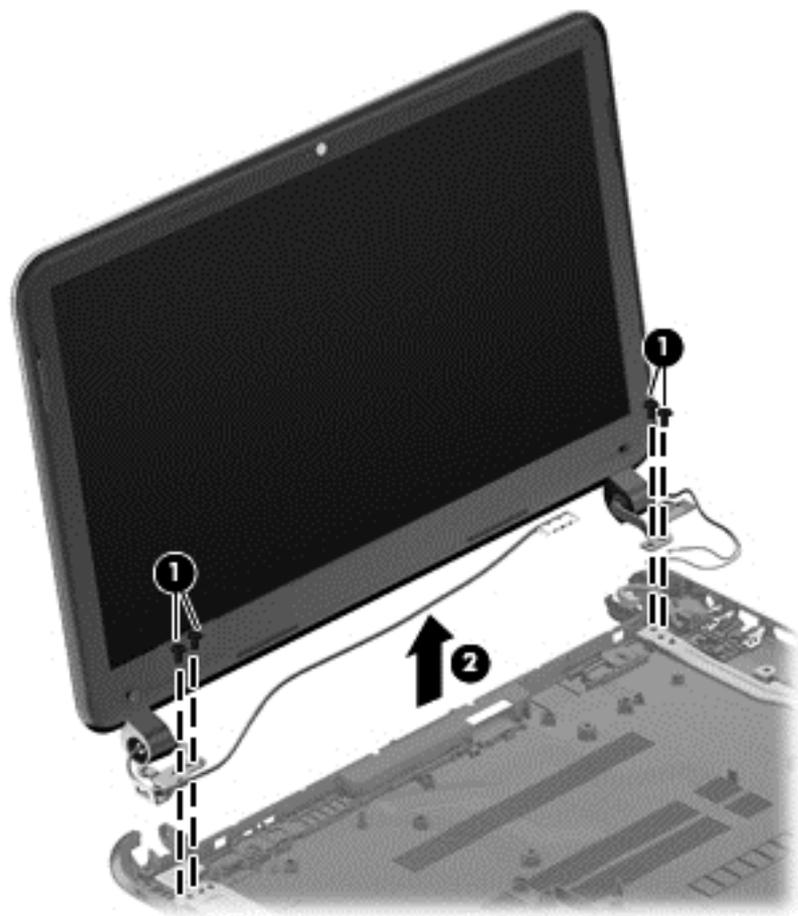

Reverse this procedure to reinstall the display assembly.


For instructions on removing the display assembly components for a TouchSmart Display, continue to the next section.

Display assembly components


Description	Spare part number
Antenna Kit (includes left and right wireless antenna cables and transceivers)	701676-001
Display Panel Cable Kit (includes display panel cable and webcam/microphone module cable)	701681-001
Display back cover enclosure:	

Description	Spare part number
<ul style="list-style-type: none"> Ruby red 	701677-001
<ul style="list-style-type: none"> Sparkling black 	701678-001
<ul style="list-style-type: none"> Winter blue 	709169-001
Display Hinge Kit (includes left and right display hinges and brackets)	701683-001
Webcam/microphone module	707767-001


1. If it is necessary to replace the webcam/microphone module:
 - a. Detach and release the webcam/microphone module as far as the webcam/microphone module cable allows. (The webcam/microphone module is attached to the display enclosure with double-sided tape.)
 - b. Disconnect the webcam/microphone cable **(1)** from the webcam/microphone module.
 - c. Remove the webcam/microphone module **(2)**.

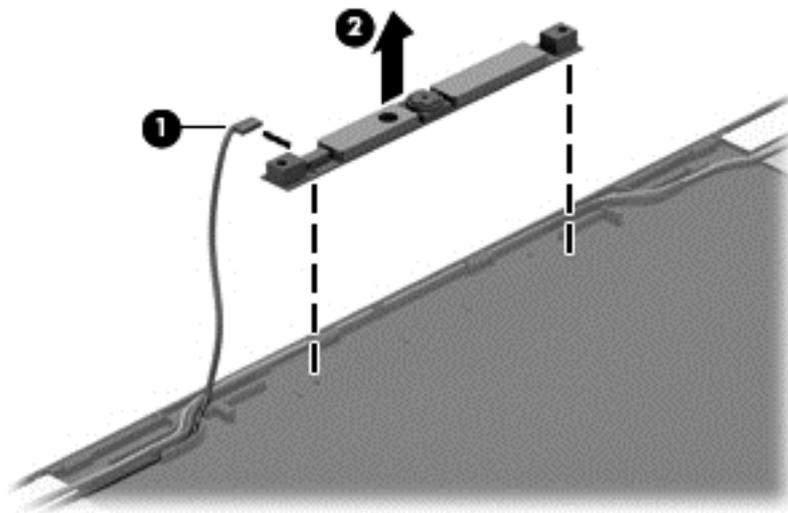


2. Remove the two top screws **(1)** and two bottom screws **(2)** from the display bracket and lift the display brackets **(3)** to remove them.

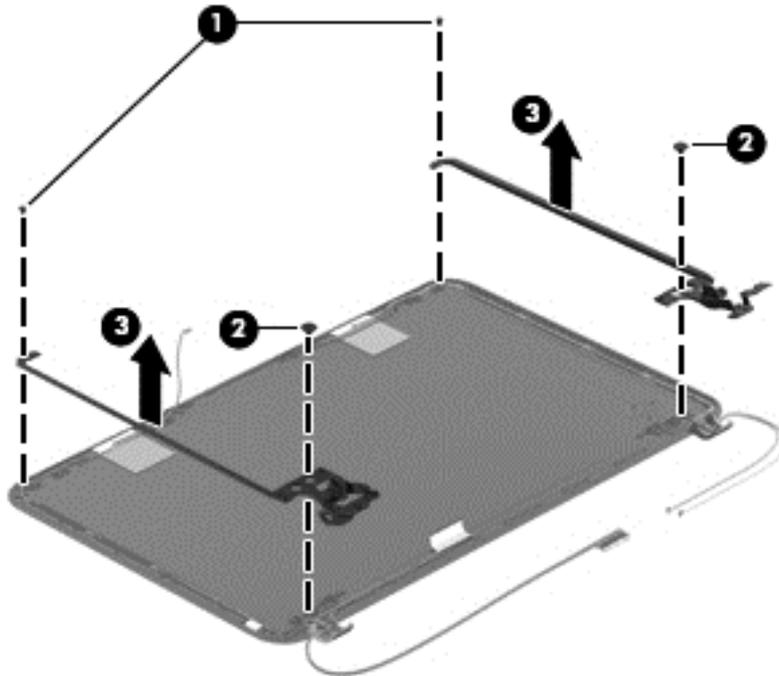

3. If it is necessary to replace the display panel cable:
 - a. Gently remove the cable from the routing clips **(1)**.
 - b. Detach and release the WLAN module (the WLAN module is attached to the display enclosure with double-sided tape), and remove the cables **(2)**.

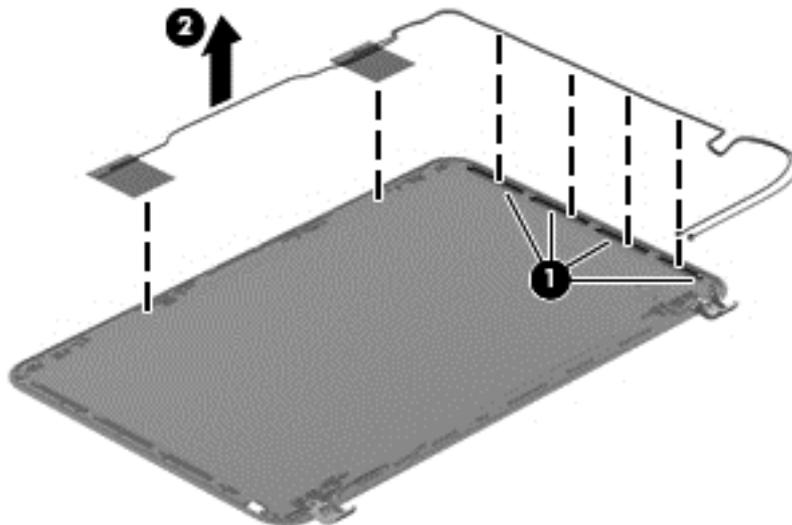

4. If it is necessary to replace the wireless antenna cables and transceivers:
 - a. Release the wireless antenna cables from the clips **(1)** built into the display enclosure.
 - b. Release the wireless antenna transceivers **(2)** from the display enclosure. (The wireless antenna transceivers are attached to the display enclosure with double-sided tape.)
 - c. Remove the wireless antenna cables and transceivers.

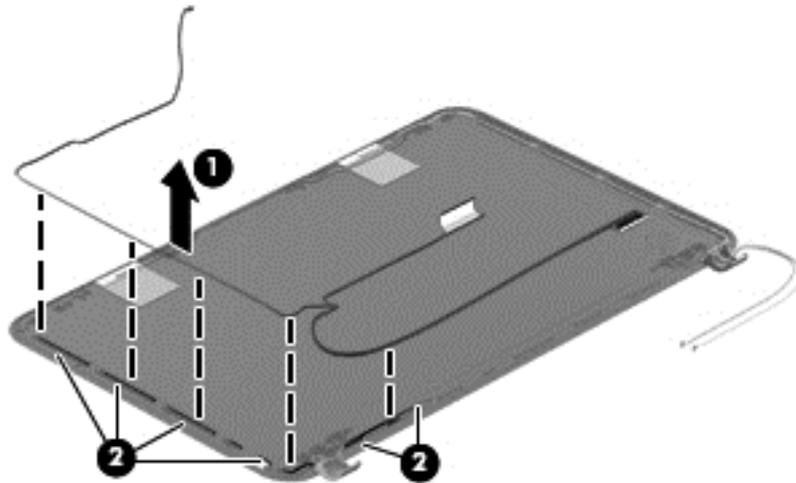

Reverse this procedure to reassemble and install the display assembly.

Power connector

Description	Spare part number
Power connector	701682-001

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.

Before removing the power connector, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 42](#)).
5. Remove the keyboard (see [Keyboard on page 47](#)).
6. Remove the top cover (see [Top cover on page 51](#)).
7. Remove the hard drive (see [Hard drive on page 56](#)).
8. Remove the USB board (see [USB board/Audio jack on page 59](#)).
9. Remove the WLAN (see [WLAN module on page 60](#)).

10. Remove the system board (see [System board on page 63](#)).


11. Remove the display assembly (see [Display panel on page 44](#)).

Remove the power connector:

 **NOTE:** The power connector screw and bracket were removed during the process to remove the system board.

1. Release the power connector **(1)**.

2. Lift out the power connector **(2)** to remove it from the base enclosure.

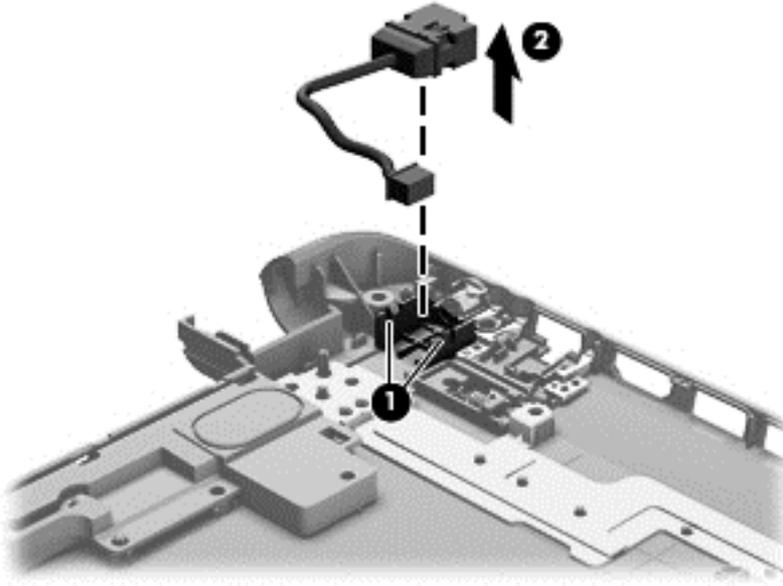

Reverse these procedures to replace the power connector.

5 Using Windows 8 Setup Utility (BIOS) and System Diagnostics

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.

Information about how to navigate in Setup Utility (BIOS) is located at the bottom of the screen.

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn** + **esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep (Suspend).

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, select the **HP Support Assistant** app.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. From the Start screen, type *e*, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly.

To start System Diagnostics:

1. Turn on or restart the computer, quickly press **esc**, and then press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostic test while it is running, press **esc**.

6 Using Ubuntu Linux Setup Utility (BIOS) and System Diagnostics

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

Starting Setup Utility

- ▲ Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press `esc`. When the Startup Menu is displayed, press `f10`.

Using Setup Utility

Changing the language of Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **System Configuration > Language**, and then press `enter`.
3. Use the arrow keys to select a language, and then press `enter`.
4. When a confirmation prompt with your language selected is displayed, press `enter`.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press `enter`.

Your change takes effect immediately.

Navigating and selecting in Setup Utility

Setup Utility does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a list or to toggle a field—for example an Enable/Disable field—use either the arrow keys or `f5` and `f6`.
- To select an item, press `enter`.

- To close a text box or return to the menu display, press **esc**.
- To display additional navigation and selection information while Setup Utility is open, press **f1**.

Displaying system information

1. Start Setup Utility.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Restoring factory default settings in Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press **enter**.
3. When the Setup Confirmation is displayed, press **enter**.
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.

The Setup Utility factory settings take effect when the computer restarts.

 **NOTE:** Your password, security, and language settings are not changed when you restore the factory settings.

Exiting Setup Utility

- To exit Setup Utility and save your changes from the current session:
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.
- To exit Setup Utility without saving your changes from the current session:
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by using Setup Utility.

1. Start Setup Utility.
2. If the system information is not displayed, use the arrow keys to select the **Main** menu.
BIOS and other system information is displayed.
3. To exit Setup Utility, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Suspend or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Access the page on the HP website that provides software for your computer.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
 - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly.

To start System Diagnostics:

1. Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostics test while it is running, press **esc**.

7 Specifications

Computer specifications

	Metric	U.S.
Dimensions:		
Width	38.57 cm	15.18 in
Depth	25.9 cm	10.19 in
Height (front to back)	.207 cm to .207 cm	.081 in to .081 in
Weight:		
	2.08 kg	4.6 lbs
Input power		
Operating voltage and current	19.5 V dc @ 3.33 A – 65 W	
Temperature		
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	-15 m to 12,192 m	-50 ft to 40,000 ft
Shock		
Operating	125 g, 2 ms, half-sine	
Nonoperating	200 g, 2 ms, half-sine	
Random vibration		
Operating	0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate	
Nonoperating	1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate	
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.		

39.6 (15.6 in), TouchSmart display specifications

	Metric	U.S.
Dimensions		
Width	38.5 cm	15.18 in
Height	21 cm	7.72 in
Diagonal	39.8 cm	15.67 in
Number of colors	Up to 16.8 million	
Contrast ratio	200:1 (typical)	
Brightness	200 nits (typical)	
Backlight	WLED	
Total power consumption	3.46 W (max)	
Viewing angle	±65° horizontal, +50° vertical (typical)	

39.6 (15.6 in), BrightView display specifications

[Author note:]need verification that TouchSmart display specs are the same.

	Metric	U.S.
Dimensions		
Width	38.5 cm	15.18 in
Height	21 cm	7.72 in
Diagonal	39.8 cm	15.67 in
Number of colors	262K (6 bit)	
Contrast ratio	500:1 (typical)	
Brightness	200 cd/m ² (nits) (typical)	
Backlight	WLED	
Total power consumption	3.2 W (max)	
Viewing angle	±45° horizontal, +15° up & -35° down vertical (typical)	

Hard drive specifications

	1 TB*	750 GB*	640 GB*	500 GB*	320 GB*
Dimensions					
Height	9.5 mm	9.5 mm	9.5 mm	9.5 mm and 7.0 mm	9.5 mm and 7.0 mm
Width	70 mm	70 mm	70 mm	70 mm	70 mm
Weight	107 g max	107 g max	107 g max	107 g max	107 g max
Interface type	SATA	SATA	SATA	SATA	SATA
Transfer rate	300 MB/sec	300 MB/sec	300 MB/sec	300 MB/sec	300 MB/sec
Security	ATA security	ATA security	ATA security	ATA security	ATA security
Seek times (typical read, including setting)					
Single track	1.5 ms	1.0 ms	1.0 ms	1.5 ms	2.0 ms
Average	11.0 ms	14.0 ms	14.0 ms	12.0 ms	12.0 ms
Maximum	22.0 ms	24.0 ms	22.0 ms	22.0 ms	22.0 ms
Logical blocks	1,953,525,168	1,465,128,359	1,250,242,867	976,752,240	625,121,433

	1 TB*	750 GB*	640 GB*	500 GB*	320 GB*
Disk rotational speed	5400 rpm	7200 and 5400 rpm	5400 rpm	7200 and 5400 rpm	5400 rpm
Operating temperature	5°C to 55°C (41°F to 131°F)				
*Size refers to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.					
NOTE: Certain restrictions and exclusions apply. Contact support for details.					

8 Windows 8 Backing up, restoring, and recovering

Your computer includes tools provided by HP and the operating system to help you safeguard your information and retrieve it if you ever need to. These tools will help you return your computer to a proper working state or even back to the original factory state, all with simple steps.

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

 **NOTE:** This guide describes an overview of backing up, restoring and recovering options. For more details about the tools provided, see Help and Support. From the Start screen, type [h](#), and then select **Help and Support**.

Creating recovery media and backups

Recovery after a system failure is only as good as your most recent backup.

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- System Recovery—Reinstalls the original operating system and the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media on page 101](#).

2. As you add hardware and software programs, create system restore points. A system restore point is a snapshot of certain hard drive contents saved by Windows System Restore at a specific time. A system restore point contains information that Windows uses, such as registry settings. Windows creates a system restore point for you automatically during a Windows update and during other system maintenance (such as a software update, security scanning, or system diagnostics). You can also manually create a system restore point at any time. For more information and steps for creating specific system restore points, see Windows Help and Support. From the Start screen, type **h**, and then select **Help and Support**.
3. As you add photos, video, music, and other personal files, create a backup of your personal information. Windows File History can be set to regularly and automatically back up files from libraries, desktop, contacts, and favorites. If files are accidentally deleted from the hard drive and they can no longer be restored from the Recycle Bin, or if files become corrupted, you can restore the files that you backed up using File History. Restoring files is also useful if you ever choose to reset the computer by reinstalling Windows or choose to recover using HP Recovery Manager.



NOTE: File History is not enabled by default, so you must turn it on.

For more information and steps for enabling Windows File History, see Windows Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or aid in the replacement of a hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.

- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and follow the on-screen instructions to continue.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 105](#).

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- If you need to restore your personal files and data, you can use Windows File History to restore your information from the backups you created. For more information and steps for using File History, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, and then select **Drivers and Applications Reinstall**, and follow the on-screen instructions.

- If you want to restore the system to a previous state without losing any personal information, Windows System Restore is an option. System Restore allows you to restore without the requirements of Windows Refresh or a reinstallation. Windows creates system restore points automatically during a Windows update and other system maintenance events. Even if you did not manually create a restore point, you can choose to restore to a previous point, automatically created. For more information and steps for using Windows System Restore, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.
- If you want a quick and easy way to recover the system without losing your personal information, settings, or apps that came preinstalled on your computer or were purchased from the Windows Store, consider using Windows Refresh. This option does not require backing up data to another drive. See [Using Windows Refresh for quick and easy recovery on page 104](#).
- If you want to reset your computer to its original state, Windows provides an easy way to remove all personal data, apps, and settings, and reinstall Windows.

For more information, see [Remove everything and reinstall Windows on page 104](#).

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 105](#).

- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 105](#).
- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 105](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition on page 106](#).

Using Windows Refresh for quick and easy recovery

When your computer is not working properly and you need to regain system stability, the Windows Refresh option allows you to start fresh and keep what is important to you.

 **IMPORTANT:** Refresh removes any traditional applications that were not originally installed on the system at the factory.

 **NOTE:** During Refresh, a list of removed traditional applications will be saved so that you have a quick way to see what you might need to reinstall. See Help and Support for instructions on reinstalling traditional applications. From the Start screen, type **h**, and then select **Help and Support**.

 **NOTE:** You may be prompted for your permission or password when using Refresh. See Windows Help and Support for more information. From the Start screen, type **h**, and then select **Help and Support**.

To start Refresh:

1. On the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Refresh your PC without affecting your files**, select **Get started**, and follow the on-screen instructions.

Remove everything and reinstall Windows

Sometimes you want to perform detailed reformatting of your computer, or you want to remove personal information before you give away or recycle your computer. The process described in this section provides a speedy, simple way to return the computer to its original state. This option removes all personal data, apps, and settings from your computer, and reinstalls Windows.

 **IMPORTANT:** This option does not provide backups of your information. Before using this option, back up any personal information you wish to retain.

You can initiate this option by using the **f11** key or from the Start screen.

To use the **f11** key:

1. Press **f11** while the computer boots.
– or –
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Reset your PC**, and follow the on-screen instructions.

To use the Start screen:

1. On the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Remove everything and reinstall Windows**, select **Get started**, and follow the on-screen instructions.

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state. Using the HP Recovery media you created, you can choose from one of the following recovery options:

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition allows Minimized Image Recovery.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails.
- To use the Factory Reset or System Recovery options, you must use HP Recovery media.
- If the HP Recovery media do not work, you can obtain recovery media for your system from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html.

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

Using the HP Recovery partition to recover a minimized image

The HP Recovery partition allows you to perform a minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Press **f11** while the computer boots.
– or –
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **HP Recovery Manager**, and follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the first HP Recovery disc you created into the optical drive on your computer or into an optional external optical drive, and then restart the computer.

– or –

Insert the HP Recovery USB flash drive you created into a USB port on your computer, and then restart the computer.



NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 106](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer.
3. Press and hold **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the optical drive or USB flash drive you want to boot from.
5. Follow the on-screen instructions.

Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** Removing the HP Recovery partition means you can no longer use Windows Refresh, the Windows Remove everything and reinstall Windows option, or the HP Recovery Manager option for minimized image recovery. Create HP Recovery media before removing the Recovery partition to ensure you have recovery options; see [Creating HP Recovery media on page 101](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and follow the on-screen instructions to continue.

9 Ubuntu Linux Backing up, restoring, and recovering

Recovery after a system failure is as good as your most recent backup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Performing a system recovery

The Deja Dup Restore Tool allows you to repair or restore the computer to its original factory state. You can create an image restore DVD using a DVD±RW optical drive. You can also create a restore image on a USB storage device.

 **CAUTION:** Using Restore completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery tool reinstalls the original operating system and programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be manually reinstalled. Personal files must be restored from a backup.

 **NOTE:** HP recommends that you create the image restore in the event of a system failure.

Creating the restore DVDs

The restore creation software creates a set of system restore discs using blank, writable DVDs (DVD-R or DVD+R). HP recommends using blank DVD+R discs from a manufacturer you trust, because these recovery DVDs are so important. You need approximately 3 blank DVD+R discs. The program states how many discs are needed at the beginning of the process.

To create restore DVDs:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select the DVD from the drop-down list.
3. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.
4. Follow the on-screen instructions.

Creating a restore image on a USB device

 **NOTE:** Be sure AC power is connected to the computer you begin.

Verify the exact amount of free space on your storage device before you begin the creation process. For most models, you will need at least 8 GB of free space on the storage device. However, depending

on the drivers and software installed on your computer, you may need slightly more than 8 GB of space. **HP recommends that you use a 16 GB device or above for best results.**

 **IMPORTANT:** Remember to insert your USB device into the USB port on the computer before starting this procedure.

To create the restore image:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup location**, and select the USB device from the drop-down list.

 **NOTE:** If the USB device is not listed in the drop-down list for Backup Location, select **Local Folder**, and then click the **Choose Folder** button. Select the USB device from the panel on the left side of the Choose Folder window, and click **OK**.

3. Select **Overview** from the panel on the left side of the window, and then click **Backup Now**.
4. Follow the on-screen instructions.

Performing recovery using the restore DVD

 **NOTE:** The following procedure uses the F11 BIOS Recovery feature to perform the recovery.

1. If possible, back up all personal files.
2. Shut down the computer.
3. Be sure the restore DVD or USB device is connected to the computer.
4. Restart the computer.
5. Using the arrow keys, select **Recovery**, and then press **enter**.
6. Follow the on-screen instructions.

 **NOTE:** If you are unable to boot (start up) your computer, and you did not create a system recovery disc, you must purchase an *Ubuntu Operating System DVD* to reinstall the operating system. For additional information, refer to the *Worldwide Telephone Numbers* booklet.

Backing up your information

You should back up your computer files on a regular schedule to maintain a current backup. You can manually back up your information to an optional external drive, a network drive, discs, or the Ubuntu One website. Back up your system at the following times:

- At regularly scheduled times
- Before the computer is repaired or restored
- Before you add or modify hardware or software

To back up your home directory files to the Ubuntu One website using the Deja Dup Backup Tool:



NOTE: Before you back up your information, be sure you have designated a location to save the backup files.

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Select **Folders** from the panel on the left side of the window, and beneath **Folders to back up**, select the folders to back up.
3. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select **Ubuntu One** from the drop-down list.
4. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.



NOTE: The first time you back up your files to Ubuntu One, you will need to create an account to sign into Ubuntu One. Enter your email address and password into the account sign-in boxes and follow the on-screen instructions to complete the sign-in process.

To restore backup files:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Click **Restore**, select the location of the backup files and the folder name, and then click **Forward**.
3. Under **Restore from When?**, select the date of the files to be restored, and then click **Forward**.
4. Select the location and folder where the files are to be restored, and then click **Forward**.
5. Follow the instructions on the screen.
6. Click **Restore** to start restoring the files, or click **Cancel** to cancel the operation.



NOTE: You may also back up to cloud storage services provided by various companies. For a small fee, they will keep your backup for you. A cloud service is recommended, since it is an easy way to keep your backups off-site and safe.

10 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 V ac, or from 220 to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	ISI	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1

Country/region	Accredited agency	Applicable note number
The United States	UL	2
<ol style="list-style-type: none"> 1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used. 2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element. 3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration. 4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark. 5. The flexible cord must be Type HO5VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label. 6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark. 7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type HO5VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks. 		

11 Recycling

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal. HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries.

For more information about recycling programs, see the HP website at www.hp.com/recycle.

Index

A

- AC adapter 10
 - spare part number 28, 30, 33
- action keys
 - identifying 16
- antenna
 - removal 87
 - spare part number 27, 30, 87
- Antenna Kit
 - spare part number 27, 84, 87
- audio, product description 5
- audio-in (microphone) jack 11
 - removal 59
- audio-out (headphone) jack 11
 - removal 59

B

- back cover
 - spare part numbers 30, 33
- back up
 - personal files 101
- backups 100, 108
- base enclosure
 - spare part number 26
 - spare part numbers 34
- battery
 - removal 42
 - spare part number 26, 30, 42
- battery bay 17
- battery lock, identifying 17
- battery release latch 18
- BIOS
 - determining version 89, 94
 - downloading an update 90, 94
 - updating 89, 93
- Blu-ray ROM DVD±R/RW Super Multi Double-Layer Drive
 - precautions 37
- boot order
 - changing HP Recovery Manager 106
- buttons
 - left TouchPad 13
 - power 15

- right TouchPad 13
- TouchPad on/off 13

C

- cables, service considerations 36
- caps lock light, identifying 14
- chipset, product description 2
- components
 - bottom 17
 - display 11
 - left side 10
 - right side 9
 - top 13
- computer feet
 - locations 44
 - spare part number 26, 30, 44
- computer major components 20
- computer reset 104
- computer specifications 96
- connector, power 10
- connectors, service considerations 36
- counterweight
 - spare part number 28, 34

D

- default settings, restoring 93
- deleted files
 - restoring 102
- Digital Media Slot, identifying 9
- display assembly
 - removal 83
 - spare part numbers 21, 83
 - subcomponents 27
- display bezel
 - spare part number 27, 30, 44, 46
- display enclosure
 - spare part numbers 27, 84
- Display Hinge Kit, spare part number 27, 30, 85
- display panel
 - product description 3
 - removal 44
 - spare part number 27, 44

- Display Panel Cable Kit
 - spare part number 27, 30, 84
- display specifications 97, 98
- drives, preventing damage 37
- DVD±RW and CD-RW Super Multi Double-Layer Combination Drive
 - precautions 37
- DVD±RW Super Multi Double-Layer Combination Drive
 - spare part number 28, 29

E

- electrostatic discharge 37
- equipment guidelines 40
- esc key, identifying 16
- Ethernet, product description 5
- external media cards, product description 6

F

- factory settings, restoring 93
- fan
 - removal 80
 - spare part number 26, 30, 80
- feet
 - locations 44
 - spare part number 26, 30, 44
- fn key, identifying 16

G

- graphics, product description 2
- grounding guidelines 37
- guidelines
 - equipment 40
 - grounding 37
 - packaging 39
 - transporting 39
 - workstation 39

H

- hard drive
 - precautions 37
 - product description 4
 - removal 56

- spare part numbers 25, 29, 30, 56
- specifications 98
- hard drive cable
 - removal 68
- Hard Drive Hardware Kit
 - spare part number 25, 33, 56
- hard drive light 9
- HDMI port, identifying 9
- heat sink
 - removal 77
 - spare part numbers 25, 30, 77
- hinge
 - spare part number 27, 30, 85
- HP Recovery Manager 105
 - correcting boot problems 106
 - starting 106
- HP Recovery media
 - creating 101
 - recovery 106
- HP Recovery partition 106
 - recovery 105
 - removing 106

I

- integrated numeric keypad, identifying 17
- integrated webcam light, identifying 11
- internal media card, product description 6
- internal microphone, identifying 12

J

- jack
 - audio-in (microphone) 11
 - audio-out (headphone) 11
 - network 10
 - RJ-45 (network) 10
 - RJ-45 (network) lights 10

K

- keyboard
 - product description 7
 - removal 47
 - spare part numbers 21, 31, 47
- keypad, integrated numeric 17

- keys
 - action 16
 - esc 16
 - fn 16
 - num lock 17
 - operating system 16
 - Windows 16
 - Windows applications 16

L

- latch, battery release 18
- lights
 - AC adapter 10
 - caps lock 14
 - hard drive 9
 - mute 14
 - power 9, 14
 - TouchPad 13, 14
 - webcam 11
 - wireless 14

M

- mass storage device
 - precautions 37
 - removal 56
 - spare part numbers 56
- memory module
 - product description 3
 - removal 69
 - spare part numbers 25, 29, 30, 69
- microphone
 - product description 5
- minimized image
 - creating 105
- minimized image recovery 105
- model name 1
- mSATA solid-state drive
 - removal 74
 - spare part number 30, 74
 - spare part numbers 34
- mute light, identifying 14

N

- network jack, identifying 10
- num lock key, identifying 17

O

- operating system key, identifying 16

- operating system, product description 7
- optical drive
 - precautions 37
 - spare part numbers 28
- original system recovery 105

P

- packaging guidelines 39
- PCH heat sink
 - removal 76
 - spare part number 26, 30, 76
- plastic parts, service considerations 36
- pointing device, product description 7
- ports
 - HDMI 9
 - USB 2.0 11
 - USB 3.0 9
- ports, product description 6
- power button board
 - removal 54
 - spare part number 22, 31, 54
- power button, identifying 15
- power connector
 - removal 87
 - spare part number 26, 30
 - spare part numbers 87
- power connector, identifying 10
- power cord
 - requirements for all countries 111
 - requirements for specific countries and regions 112
 - set requirements 111
 - spare part numbers 28, 29
- power lights, identifying 9, 14
- power requirements, product description 7
- processors, product description 1
- product description
 - audio 5
 - chipset 2
 - display panel 3
 - drives 4
 - Ethernet 5
 - external media cards 6
 - graphics 2
 - internal media card 6

- keyboard 7
- memory module 3
- microphone 5
- operating system 7
- pointing device 7
- ports 6
- power requirements 7
- processors 1
- product name 1
- security 7
- serviceability 8
- video 5
- wireless 5
- product name 1
- R**
- recovery 102, 104
 - discs 101, 106
 - HP Recovery Manager 105
 - media 106
 - starting 106
 - supported discs 101
 - system 105
 - USB flash drive 106
 - using HP Recovery media 102
- recovery media
 - creating 101
 - creating using HP Recovery Manager 102
- recovery partition 105
- removing 106
- recycle
 - computer 102, 104
- recycling 114
- refresh 104
 - computer 102
- removal/replacement
 - preliminaries 36
 - procedures 40
- remove everything and reinstall Windows 104
- reset
 - computer 102, 104
 - steps 104
- restore
 - Windows File History 102
- RJ-45 (network) jack, identifying 10
- RJ-45 cover
 - removal 82
 - spare part number 26, 33, 82
- RTC battery
 - removal 72
 - spare part number 25, 30, 72
- Rubber Feet Kit
 - spare part number 26
- Rubber Feet Kit, spare part number 30, 44
- S**
- Screw Kit,
 - spare part number 31
- Screw Kit, spare part number 28
- security cable slot, identifying 10
- security, product description 7
- service considerations
 - cables 36
 - connectors 36
 - plastic parts 36
- service label 19, 41
- serviceability, product description 8
- Setup Utility
 - changing the language 92
 - displaying system information 93
 - exiting 93
 - navigating 92
 - restoring default settings 93
 - selecting 92
 - starting 92
- slots
 - Digital Media 9
 - security cable 10
- Speaker assembly
 - spare part number 26, 32
- speaker assembly
 - removal 81
 - spare part number 81
- Speaker Kit
 - spare part number 26, 81
- Speaker Kit, spare part number 32
- speakers
 - spare part number 26, 32
- speakers, identifying 15
- specifications
 - computer 96
 - display 97, 98
 - hard drive 98
- supported discs
 - recovery 101
- system board
 - removal 63
 - spare part numbers 22, 32, 33, 34, 35, 63
- system information, displaying 93
- system recovery 105
- system restore point
 - creating 101
 - restoring 102
- T**
- Thermal Material Kit
 - spare part number 30
- Thermal Material Kit, spare part number 28
- tools required 36
- top cover
 - removal 51
 - spare part numbers 21, 33, 51
- TouchPad
 - buttons 13
- TouchPad button board
 - spare part number 22
- TouchPad light 13
- TouchPad on/off button 13
- TouchPad reader light 14
- TouchPad zone, identifying 13
- transporting guidelines 39
- U**
- USB 2.0 ports, identifying 11
- USB 3.0 ports, identifying 9
- USB board
 - removal 59
 - spare part number 26, 31
- V**
- vents, identifying 10, 18
- video, product description 5
- W**
- webcam light, identifying 11
- webcam, identifying 11

- webcam/microphone module
 - removal 85
 - spare part number 27, 33, 85
- Windows
 - backup 101
 - File History 101, 102
 - Refresh 102, 104
 - reinstall 102, 104
 - remove everything and reinstall option 104
 - reset 104
 - restoring files 102
 - system restore point 101, 102
- Windows applications key, identifying 16
- Windows key, identifying 16
- wireless antenna
 - removal 87
 - spare part number 27, 30, 87
- wireless light 14
- wireless, product description 5
- WLAN antennas, identifying 11
- WLAN module
 - removal 60, 86
 - spare part numbers 25, 26, 30, 60
- workstation guidelines 39