

HP Sprocket App

Use the sprocket app with your sprocket printer for creative, one-of-a-kind prints!

The content in this user guide is applicable to the sprocket family of photo printers. If content is not applicable to all products, it will be indicated. As the app is continually evolving, screenshots might not reflect the latest design or can vary by operating system.

Install the App

Launch the sprocket app

Permissions

Opt-in to Reveal

Navigating the App

Home Screen

Browse Photo Galleries

Take or Select a Photo

Set up Social Media Sources

Using the Main Menu

“sprocket” Menu: Printer Settings

“sprocket” Menu: App Settings

Image Preview

Edit a Photo

Print a Photo

Share a Photo

Enable Printing from other Apps

Updating Printer Firmware

Sprocket App Features

Using the Camera

Photobooth Mode

Use Reveal to Relive Memories

Tile Printing

Quick Action Edits

Create Custom Stickers

Using the Print Queue

Shared Print Queue

Sprocket Shared Event

Inbox Messages and Notifications

Personalize your Printer

Photo ID

Photo Collage

Glanceable Print Queue

Special App Content (HP Sprocket Select only)

Tag for Print

Install the App

To use your HP Sprocket printer with your mobile device, you must download the companion HP sprocket app from the App Store or on Google Play™ (or from your local app store). To download the sprocket app, visit hpsprocket.com/start. There, you will be directed to the appropriate app store for your device.

- The sprocket app is supported by Android™ devices using OS v5.0 and above
- Made for iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8, iPhone 8 Plus, iPhone 7, iPhone 7 Plus, iPhone SE, iPhone 6s, iPhone 6s Plus, iPhone 6, iPhone 6 Plus, iPhone 5s, iPhone 5c, iPhone 5, iPad Pro 12.9-inch (1st, 2nd and 3rd generation), iPad Pro 11-inch, iPad (4th, 5th, and 6th generation), iPad Pro 10.5-inch, iPad Pro 9.7-inch, iPad Air 2, iPad Air, iPad mini (2, 3, and 4), iPod touch (6th generation)
- You must install the companion sprocket app to operate HP Sprocket printers with your mobile device.



Launch the sprocket app

When you open the sprocket app for the first time, you will see a landing screen with different options to get started.

my sprocket	Learn how to connect your sprocket printer and create your first print. This setup wizard walks you through how to: <ul style="list-style-type: none">• load paper• use the Print Quality Card (not applicable for HP Sprocket Studio)• charge and power on• scan prints Use this in conjunction with the in-box instructions to set up. You can view the setup instructions again in the “Help & How To” menu.
my friend’s sprocket	Connect with your friends and print to sprocket. Choose “my friend’s sprocket” to edit a photo and print!
sprocket reveal	If you want to scan a sprocket print, use Reveal. This will take you to the sprocket camera. Watch your prints come to life and reveal extra content.

Permissions

When you launch the app for the first time, you will see a few permission screens. These allow you to have the fullest experience with your sprocket printer. Allow the sprocket app access for basic and advanced features.

Enable the full sprocket experience by sharing:

- Camera and microphone access: Take photos, videos, and scan sprocket prints
- Photo gallery: Select from and save photos to your gallery
- Location: This lets us locate printers to add to your app (required for Android). Remember where a photo was taken and allow us to pull up content from the same location with our Reveal feature.

We use your location to discover the printer and deliver Reveal experiences.

Opt-in to Reveal

We embed information on your prints that you can scan and reveal fun features. When we add this content, you might notice that it slightly changes the look of your prints. Experiment with turning it on or off, depending on what experience you want to have with your prints. Opt-in during setup and give it a try it! Access the feature in “App Settings” anytime to turn it on/off.


- Receive Notifications: Get cool updates, tips, and project ideas for your printer

Prints with Reveal can show:

- Augmented Reality (AR): Watch prints come to life, print a frame from a video and watch it replay, or view your Print Queue in AR (HP Sprocket 200 and HP Sprocket Studio only), and many more!
- Relevant Content: When Reveal is turned on, we add location and date data to your print to view photos from the same day and location.
- 3rd party Experiences: View related content from Wikipedia™, Google Street View™, and more.

Navigating the Sprocket App

Home Screen

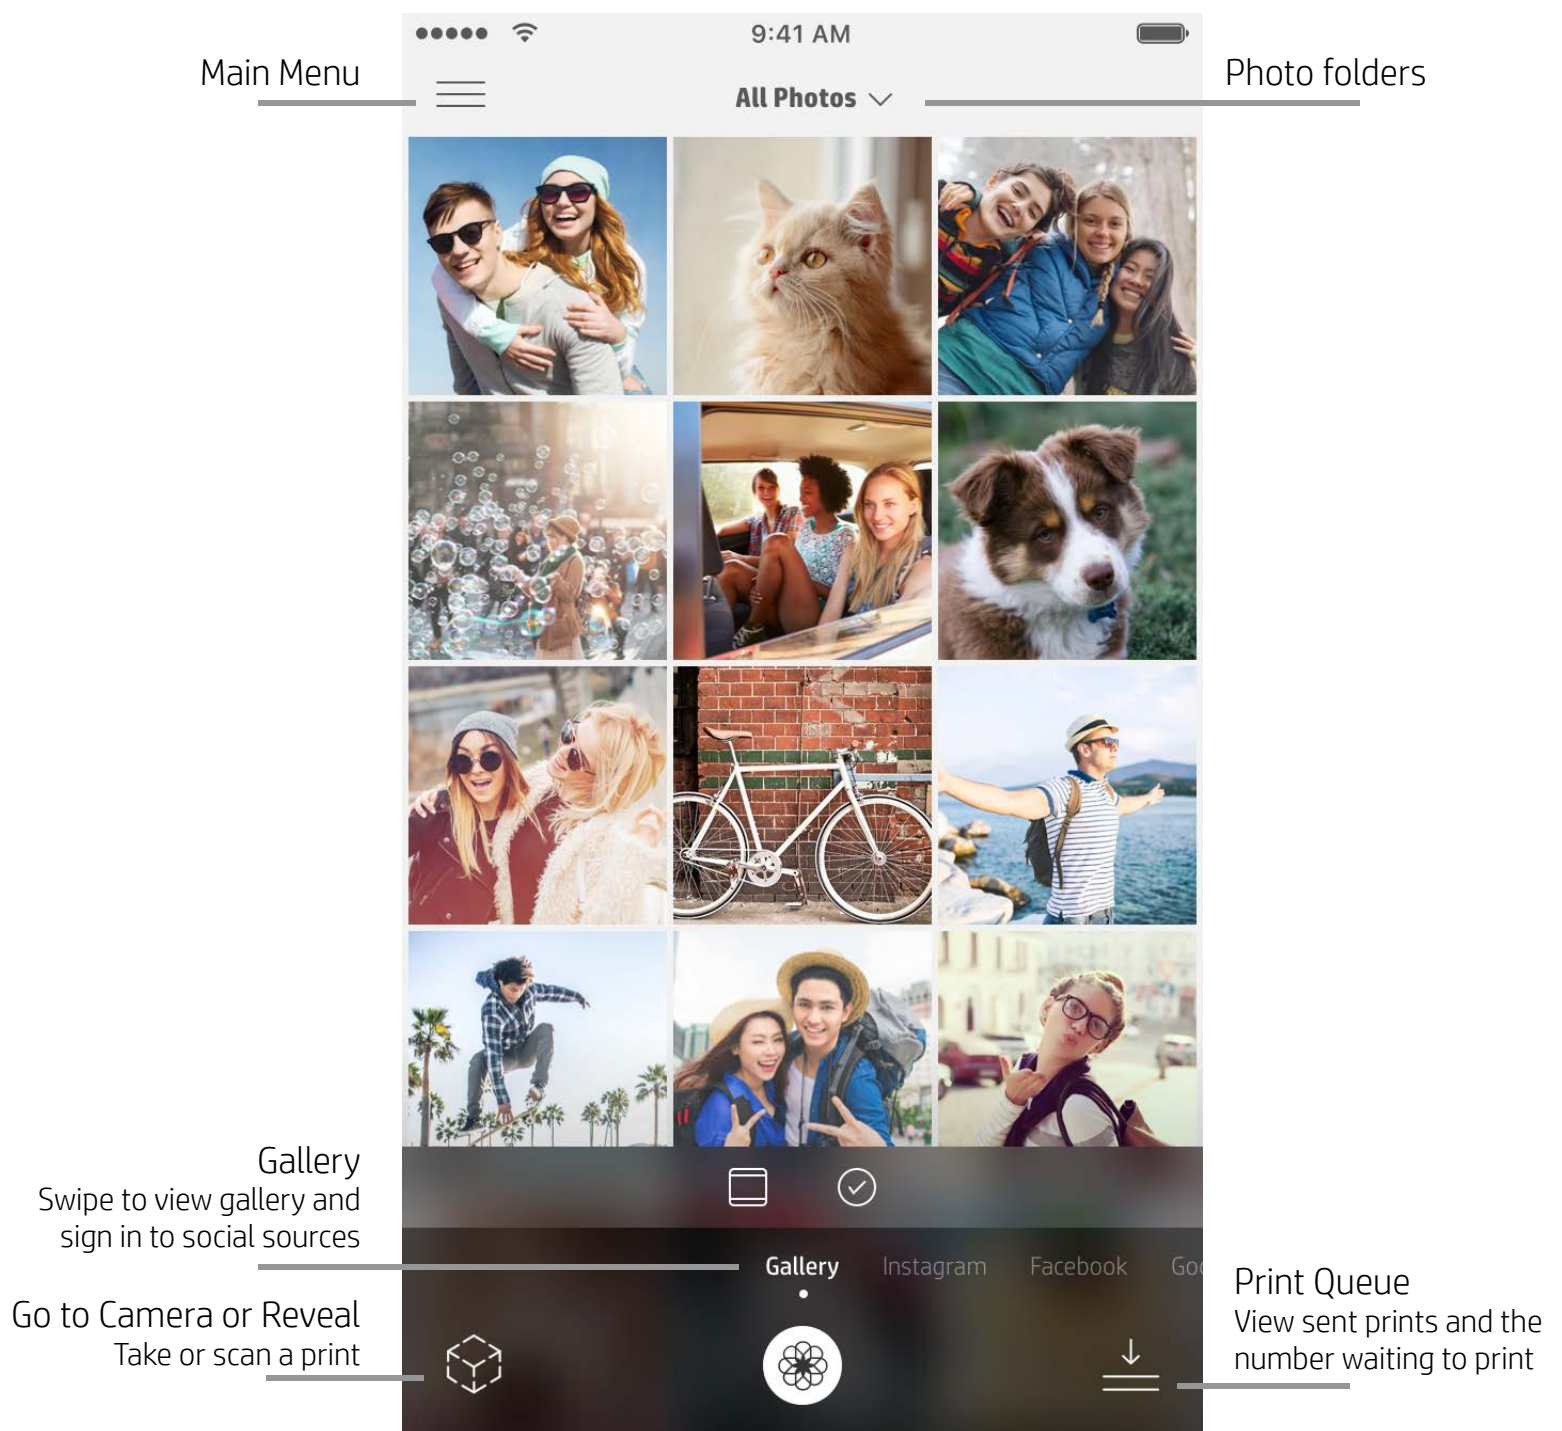

Browse Photo Galleries

1. From the Home Screen, swipe to view supported social sources or the camera photo gallery.
2. Once a photo source is selected, swipe left or right on the screen to browse all the galleries.
3. For each social media source, a sign in screen will display until you enter your credentials and allow the sprocket app to access your photos.

• See “Set up Social Media Sources” for information on accessing social media account photos.

Take or Select a Photo

1. Launch the sprocket app.
2. On the Home Screen, tap the Camera/Reveal icon to open the camera (bottom left corner). You can also select a photo from your device or a social source.
3. If you choose to take a photo, your camera will open. Use the camera settings to adjust as needed.
4. Once you’ve taken or selected a photo, you can Edit, Print, or Share your creation!

Set up Social Media Sources

1. Sign in for each of the social media sources to allow the sprocket app to gather photos from your various accounts. Swipe/tap from the Home Screen to view social media sources and sign in.
2. You will be redirected to the app login page. Enter your credentials to allow sprocket access to your photo galleries.
3. Select a photo to edit, print, or share! You will be able to browse your social media photos within the sprocket app.

Using the Main Menu

- Tap “sprocket” to view Printer Settings and paired printer information. See “Printer Settings: ‘sprocket’ menu” below for more information.
- Tap “Inbox” to get messages and notifications from the sprocket team
- View “Print Queue” to see images in line to print
- Purchase HP Sprocket Photo Paper
- Access help and printer support

“sprocket” Menu: Printer Settings


- Check the power bank status, Device State, and change the Auto Off and Sleep Timer settings for the device.
- View the Mac Address and Hardware Version and check and update the Firmware Version. These will be necessary if contacting HP Sprocket Support. You can also view Technical Information in your app.
- Set a custom name and custom Status LED color for your printer (HP Sprocket 200, HP Sprocket Studio, & HP Sprocket Select)

“sprocket” Menu: App Settings

- Review or change app permissions in the App Settings menu.
- Toggle the HP Sprocket Reveal feature on/off, depending on how you want to interact with your prints.
- Display App Hints again in the app. Hints will display once when enabled.

Image Preview

Edit, print, or share your photo from the Preview Screen.


- Exit Image Preview by tapping the back arrow.
- Tap  to personalize and edit your image.
- Tap the printer icon to print.
- Double-tap your photo to change from “Fit to screen” and “Fill screen” views.
- Use a two finger pinching motion on the screen to zoom, rotate, and resize your photo.
- You can also share and save your photo from Image Preview, use Tile Printing, or print multiple copies!

Edit a Photo

Use Edit to adjust the photo’s appearance, add text or stickers, and apply filters. Be sure to save your creation when editing is complete by tapping the checkmark in the upper right corner.




Autofix



Filters



Quick Action Edits




Frames



Stickers




Brush




Adjustments




Blur




Text




Crop/Rotate



Brightness



Contrast




Saturation

Note: User experience navigating the sprocket app might vary based on your operating system. Stylistic differences provide slight variation in features and experience. Similarly, available social sources might vary based on region.

Print a Photo

1. Tap the print icon to send your photo to your printer.
 2. A confirmation message will display. If you turned on Reveal, a special animation will also play to show we are embedding extra content on your prints from various digital sources. Learn more in “Use Reveal to Relive Memories”
 3. The Status Indicator LED Light will flash three times, the device will make a light humming noise, and the image will begin printing. If it is the first print from a freshly loaded paper pack, the Print Quality Card will eject before the print (not applicable for HP Sprocket Studio).
 4. Now that you’ve printed your photo, use it to decorate as is or remove the back liner from the photo sheet by gently peeling back on a corner. Stick it on a folder, binder, or in a scrapbook!
- If you receive an error message that you are not connected to your printer when you press print, be sure the printer is still powered on and re-pair your mobile device with the printer to try printing again
 - Before printing, make sure no items are blocking the Paper Output Slot
 - HP Sprocket Studio prints cannot be used as stickers

Share a Photo

1. Tap the share icon () to post your photo to social media and send to other apps.
2. After tapping the icon, you can send your photo via SMS message, email, cloud storage, or to a social media source. When you select your desired sharing source, it will load in the appropriate application for that media outlet.

Note: The available Share options will vary based on the operating system and the applications installed on the mobile device.

Enable Printing from other Apps

You can enable printing to your HP Sprocket from most other photo apps too.

For iPhone or iPad:

1. From the Preview Screen, tap the Share icon in the lower left corner.
2. Select the More icon—it has three dots.
3. Turn on “Print to sprocket”. You can also drag “Print to sprocket” to the top of your activity list for easy access.

For Android™:

1. From the Preview Screen, tap the Share icon in the lower left corner.
2. Select “sprocket” to enable printing.

Updating Printer Firmware

Keep your sprocket happy and enjoy the latest features by updating your printer firmware from the sprocket app. Updating your firmware lets you access new features, the latest color corrections for your prints, improved connectivity, and can fix unexpected behaviors.

To update the printer firmware, make sure:

- Mobile device is connected to the Internet or mobile data
- Sprocket App is open
- Printer is powered on and connected to your mobile device
- Make sure the Sprocket Studio printer is connected to wall outlet to update HP Sprocket Studio firmware

If there is a firmware update available, you will be automatically prompted in the sprocket app. Follow the on-screen prompts to complete the update. We highly recommend updating when available to enjoy the best experience!

You can also check for a printer firmware update manually by opening the sprocket app, tapping the Main Menu, then selecting “sprocket”. Next, tap “Your Device Name”. Swipe down. Here you will be prompted with a pop-up or a line of blue text telling you to update your firmware, if available. If you do not receive a prompt, make sure you follow all the instructions here correctly. If you still don’t receive a prompt, your printer is already updated with the latest firmware--enjoy!

Sprocket App Features

Using the Camera

1. Open the sprocket app camera.
2. Swipe left or right to view the sprocket app camera modes. These include: Camera, Video, Reveal, and Photobooth.
3. For each mode, a second row of setting options will appear above the list of icons. These can include camera orientation, flash, and others. Make your desired selections for your photo, print, or video.

Camera Modes	
Reveal	Use to scan printed sprocket prints to reveal embedded content. For HP Sprocket 200 and Sprocket studio, you can also scan the top of your printer. Learn more in “Use Reveal to Relive Memories”
Camera	Use to take pictures directly from the sprocket app.
Photobooth	Take a series of four photos for one sprocket print. Learn more in “Photobooth” Mode.
Photo ID	Take a passport or ID photo with the sprocket app. Learn more in “Photo ID” Mode.
Video	Use to take videos directly from the sprocket app.



Make adjustments to the mode here in the top bar

Swipe left or right to view the sprocket app camera modes

Photobooth Mode

1. Open the sprocket app camera.
2. Swipe right until you land on “Photobooth”.
3. When you tap the shutter icon, the camera will take four photos in a row, with a delay between each. Watch the on-screen countdown to know when to begin posing. Watch the smiley face to know how long to hold your pose.
4. Your four captured images will appear tiled in the Preview Screen, on the same print.
 - Press the shutter icon again to stop the timed photos while the pictures are being taken.

Use Reveal to Relive Memories

Make your sprocket app prints come to life! Reveal mode allows you to use the app camera to scan printed sprocket photos to relive memories through more images and videos from that day or location, augmented reality (AR) experiences, and online content.

When you scan with the sprocket app Reveal mode, we magically trigger experiences that are tied to your photo--we embed that content when it prints out for you to scan and enjoy later!

For printed photos, Reveal mode only works on photos printed from the sprocket app (not from the HP Sprocket 2-in-1 Instant Camera). Additionally, it only works on images printed after you turn on Reveal in the app. When the feature is turned on, all prints will be automatically tagged to work with Reveal.

To Scan:

1. From the sprocket camera, swipe to “Reveal” mode
2. Center your sprocket print in the camera window. An animation will play to let you know the scan is happening.
 - Make sure the photo is well-lit to avoid a scanning error.
 - If you tap the shutter button, Reveal mode will be reset to start fresh.

Note: If you did not turn on Reveal during printer setup, tap “sprocket” in the Main Menu, then “App Settings”. From there, toggle “Reveal” on or off as desired.



Videos and Reveal

Print out a video-frame using the sprocket app and playback the video when it's scanned! All videos from any social source or gallery, as well as Apple Live Photos™ will work. Videos on social media will only playback for 24-48 hours.


1. Open the video in Image Preview, tap the “Frames” mode to choose a frame, and then tap the print icon.
2. Use Reveal mode to scan the image once it finished printing and rewatch your video--right from the printed photo. Share it with a friend too!

Magic Frames and Reveal

Add a Magic Frame to a photo and watch it reveal hidden treasures when scanned in Reveal mode. Select a Magic Frame from the Frame section of the photo Editor. Choose from everyday frames, as well as seasonal and thematic options. Scan with Reveal and watch the frame come to life!


Tile Printing

1. From the Preview Screen, tap “Tiles”.
2. In the Tiles section, select your desired pattern. Tiled photos can print out in 2 x 2 or 3 x 3 prints.



3. Assemble your printed photos to create a large tiled mosaic print!
 - Tap the notification message that appears after you print to view the Print Queue.

Quick Action Edits


Quick Action Edits should be your go-to if you are in a hurry and want to have an awesome print in one easy step! With one tap, you can apply a series of edits, filters, and embellishments to your sprocket photo before printing. In the Edit menu, tap  to view pre-assembled frames and photo decorations. These are updated in the same way as the stickers and frames--check back often for new Quick Action Edits.

Quick Action Edits also lets you quickly pick a frame, sticker, and add text or tweak the curated designs to fit your needs.

Light Touch Cards and Tags (HP Sprocket Studio only)

Similar to Quick Action Edits, you can easily create and print a card or gift tag using our Light Touch feature. Select from the pre-curated designs with frames and stickers. Add a note or your name to the design, tap “Print” and you’re ready to make someone’s day with a special photo card.

Create Custom Stickers

1. Create your own drawing or doodle to add to a sprocket print.
2. In the Edit menu, select  to enter the Sticker Gallery.
3. In the bottom-left corner, select the plus sign icon.
4. Fill the frame with your drawing and tap the screen.
 - Your custom stickers will save to the Custom Sticker Gallery, located next to the plus icon in the Sticker Gallery.
 - Long-tap on a sticker to delete it from the Custom Sticker Gallery.
 - Long-tap on the Custom Sticker Gallery to delete the entire folder.

Using the Print Queue

Print Queue allows you to save photos to print later and send consecutive prints to your device. For HP Sprocket, HP Sprocket 2-in-1, and HP Sprocket Plus, view your photos in the **Printer Queue**.

For HP Sprocket 200 and HP Sprocket Studio, there are two queues for your photos to hang out in before being printed! First, print-ready photos are sent to the **App Queue**. In the App Queue, images collect to be sent to the printer (even if you aren’t connected at the time); this is their processing station! Once we have a Bluetooth connection to a printer, your prints transfer into the **Printer Queue** to print. If you are already connected to a sprocket printer when you send the print, your prints will land in the App Queue and transfer to the Printer Queue.

In the sprocket app, you can view both the App Queue and the Printer Queue by tapping the Print Queue icon in the sprocket app navigation bar or the Print icon on the Preview screen when photos are in the Print Queue.

- Queue photos offline for future printing! Send prints to your HP Sprocket while on the go. When you’re ready to print, connect to a sprocket printer and open the Print Queue. The prints in the queue will start printing when a connection is re-established and you tap the “play” button.
- Send multiple and consecutive prints! The prints will appear in the queue in the order they were sent. You can rearrange the App Queue image order before a photo prints by slowly swiping right on the listed photo. This will move it to the top.
- Delete a print from the App Queue by slowly swiping left on it in the queue list.
- View the Print Queue by selecting the print queue icon from the main menu. The App also navigates there after sending multiple print jobs.
- Once connected to a printer, you can Host or Join a Shared Queue. See “Shared Print Queue” to learn more.
- 10 photos can be in the Printer Queue at a time, and up to 16 photos can be in the App Queue.
- Tap the Stopwatch icon to reprint the last 5 photos.

At a glance...

The App Queue lists your photos waiting to be sent to the printer next. These are in the sprocket app, waiting to be transferred to the printer. The App Queue can hold prints when you aren't connected to your sprocket.

The Printer Queue lists your photos that have been transferred to the printer when you are connected. They are next in line to print!

Shared Print Queue (HP Sprocket 200, HP Sprocket Studio, & HP Sprocket Select)

With Shared Print Queue, multiple people can send images to one printer at the same time. Scan the printer lid with Reveal mode to see an AR view of the photos that will be printing soon (See Glanceable Print Queue for more details). With Reveal mode, you can also see an AR view of connected users.

While your friends are printing, you will see a color listed in the Print Queue for each photo sent to print. The circle is assigned a color as each person prints to the shared queue. The printer lights up this color when their photos print. Up to 3 users can connect at the same time.

Sprocket Shared Event

With the sprocket app, easily curate your party photos while connected to your sprocket printer by creating a Sprocket Shared Event and invite your friends to get in on the fun. Everyone who joins the album and prints with an HP sprocket during the party will have their photos archived with Google Photo. It is a simple way to make sure that all attendees get every awesome shot!

In the Google Photos gallery, tap the icon to the right of the center circle. As a first time user, you will be prompted to create a Sprocket Shared Event and start your Google Shared Album. As a returning user, you will be prompted right away to name your event.

Name your event, set the duration time, and invite guests to print and contribute to the shared album. After the event, revisit the photos that were printed by opening the Google Photos social source in the sprocket app and finding the event folder.

Inbox Messages and Notifications

The sprocket app is continuously adding fun features! Keep up to date on sprocket experiences by reading our sprocket app inbox messages and app notifications. Enable notifications in the sprocket app for updates, tips, and highlights on new features.

- On the Home Screen, look for the blue dot on the sprocket app icon to indicate you have a new message waiting!

Personalize your Printer (HP Sprocket 200, HP Sprocket Studio, & HP Sprocket Select)

For your HP Sprocket 200 and HP Sprocket Studio, you have the freedom to personalize your printer. You can change the LED color that displays when your photos print or your printer is idle and give your printer a custom name (You can even use emojis!). This can be done when you set up your device with the app wizard or in the sprocket app Device Settings menu.

Photo ID

Use the sprocket app to take a photo ID or passport picture. Open the sprocket camera and swipe to "Photo ID" mode. Follow the on-screen prompts for selecting a background, removing accessories, and centering your face or your friend's face. Be aware that some photo dimensions can only be printed on certain sprocket printers. Choose the correct dimensions for your desired photo.

Sprocket Photo ID mode provides tips to take a formal photo. We don't guarantee that the photo will be accepted by all entities that require an official photo. You will need to confirm that the photo meets the applicable requirements.

Photo Collage

Create and print a collage from your sprocket. From your galleries, select photos for your collage. Select a grid pattern for your images and tap Print. HP Sprocket Studio can print collages of 5+ photos. All other sprocket printers can print up to 4 photos in a collage.

Glanceable Print Queue (HP Sprocket 200, HP Sprocket Studio, & HP Sprocket Select)

Scan the top of your HP Sprocket 200 and HP Sprocket Studio with the app to view a glanceable AR printer queue. In this queue, you can see what prints are in line to be printed, view the assigned color of who sent the print, and how many people are connected to the printer. You can also view information on power bank status, and any device status messaging (like an error message, printing status, etc.).

Scan the top of your device, just like you would a printed photo to reveal hidden content.

1. Open the sprocket app Camera from your Gallery view
2. Open Reveal in the sprocket app camera (It will default to this when opened)
3. Check the lighting conditions in your environment. It should be bright and without glare or strong shadows for the feature to work best!
4. Hover your mobile device directly over and parallel to the pattern on the printer top cover, about 6 inches above your sprocket printer. Keep your phone steady until you see an animation play on the screen.
5. Once the animation appears, you can move and tilt your phone slightly to view the objects at a different angle.

Note: Make sure to remove any protective film from the top of your printer before scanning.

Special App Content (HP Sprocket Select only)

Connect to an HP Sprocket Select printer for access to special stickers, frames, and other app content only available for that printer. If you add this exclusive content to a photo and then change to a different printer, the content will disappear from your photo.

Tag for Print

When signed in to Instagram or Facebook with the sprocket app, you can filter your Instagram and Facebook galleries for previously tagged photos. Post your images on Facebook or Instagram and tag with a hashtag, determined by you. When you're ready to print, open the sprocket app and sign into your Facebook or Instagram account, if you haven't already.

Tap the tag icon in the social media gallery in the entry field, type the hashtag used on the photos you want to filter for. The sprocket app will load the tagged pictures for you to easily view, edit, and print.

Trademarks

iPad, iPad Air, iPad Pro, iPad mini, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Android and Google Play are trademarks of Google Inc. Google and Google Logo are registered trademarks of Google Inc.