



HP Photosmart 5510 series

Contents

1	HP Photosmart 5510 series Help	3
2	Get to know the HP Photosmart	
	Printer parts	5
	Control panel features	6
3	How do I?	7
4	Print	
	Print photos from a memory card	9
	Print from anywhere	11
	Manage apps	12
	Tips for print success	13
5	Copy and scan	
	Copy text or mixed documents	15
	Scan to a computer or memory card	17
	Tips for copy and scan success	18
6	Work with cartridges	
	Check the estimated ink levels	19
	Clean printhead automatically	19
	Clean ink smear	19
	Replace the cartridges	20
	Align printer	21
	Order ink supplies	22
	Cartridge warranty information	22
	Tips for working with cartridges	23
7	Connectivity	
	Add the HP Photosmart to a network	25
	Change from a USB connection to a wireless network	26
	Connect a new printer	27
	Change network settings	27
	Tips for setting up and using a networked printer	27
	Advanced printer management tools (for networked printers)	28
8	Solve a problem	
	Get more help	29
	Register your printer	29
	Clear paper jam	29
	Solve print problem	30
	Solve copy and scan problem	31
	Solve networking problem	31
	HP support by phone	31
9	Technical information	
	Notice	37
	Cartridge chip information	37
	Specifications	38
	Environmental product stewardship program	39
	Regulatory notices	44
	Regulatory wireless statements	47
	Index	49

1 HP Photosmart 5510 series Help

For information about the HP Photosmart, see:


- [Get to know the HP Photosmart on page 5](#)
- [How do I? on page 7](#)
- [Print on page 9](#)
- [Copy and scan on page 15](#)
- [Work with cartridges on page 19](#)
- [Connectivity on page 25](#)
- [Technical information on page 37](#)
- [Solve a problem on page 29](#)

2 Get to know the HP Photosmart

- [Printer parts](#)
- [Control panel features](#)

Printer parts

- Front and top views of the HP Photosmart

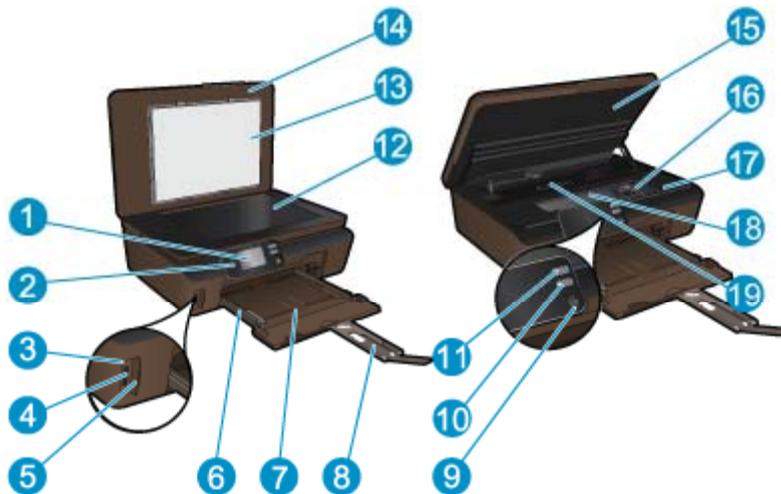

1	Color graphics display (also referred to as the display)
2	Control panel
3	Photo light
4	Memory card slot
5	Memory card door
6	Paper-width guide
7	Paper tray
8	Paper tray extender (also referred to as the tray extender)
9	On button
10	ePrint button
11	Wireless button
12	Glass
13	Lid-backing
14	Lid
15	Cartridge access door
16	Printhead assembly
17	Model number location
18	Cartridge access area
19	Paper path cover

- Rear view of the HP Photosmart




20	Rear USB port
21	Power connection. Use only the power cord supplied by HP.

Control panel features

Touch the directional keys to navigate between two home screens.

Control panel features

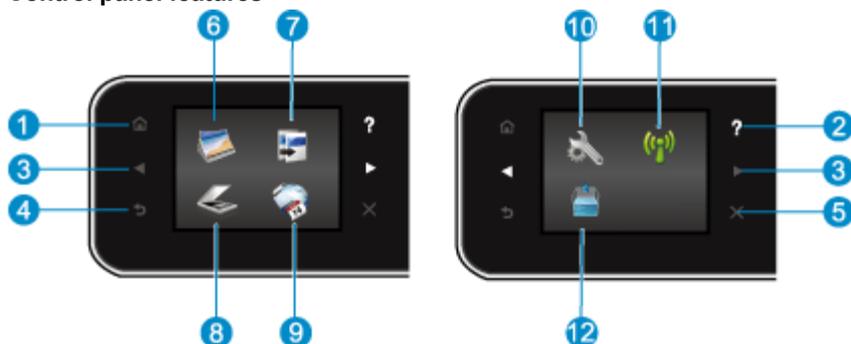

1	Home: Returns to the Home screen, the screen that is displayed when you first turn on the printer.
2	Help: On the Home screen, shows all Help topics. On another screen, shows information or animation on the display to assist in the current operation.
3	Directional Keys: Allow you to navigate through two home screens, photos and apps.
4	Back: Returns to the previous screen.
5	Cancel: Stops the current operation.
6	Photo: Opens the Photo Menu where you can view and print photos, or reprint a printed photo.
7	Copy: Opens the Copy menu where you can select a copy type or change the copy settings.
8	Scan: Opens the Scan menu where you can select a destination for your scan.
9	Apps: Provide a quick and easy way to access and print information from the Web, such as coupons, coloring pages, puzzles, and more.
10	Setup: Opens the Setup menu where you can change preferences and use tools to perform maintenance functions.
11	Wireless: Opens the Wireless Settings menu, where you can check wireless status and change wireless settings. You can also print a wireless test report, helping diagnose network connection issues.
12	Ink: Shows estimated ink levels by cartridge. Displays a warning symbol if the ink level is less than the minimum expected ink level.

3 How do I?

This section contains links to commonly performed tasks, such as managing apps, scanning, and making copies.

- [Load media on page 10](#)
- [Replace the cartridges on page 20](#)
- [Manage apps on page 12](#)
- [How to get started with ePrint on page 12](#)
- [Clear paper jam on page 29](#)
- [Copy text or mixed documents on page 15](#)
- [Scan to a computer or memory card on page 17](#)
- [Solve a problem on page 29](#)

4 Print



[Print photos from a memory card on page 9](#)



[Print from anywhere on page 11](#)



[Manage apps on page 12](#)

Related topics

- [Load media on page 10](#)
[Tips for print success on page 13](#)

Print photos from a memory card

To print photos from a memory card

1. Load photo paper into the paper tray.
2. Make sure the paper tray extender is open.
3. Insert a memory card into the memory card slot.



4. From the Home screen, touch **Photo** to display the **Photo** menu.
5. On the **Photo** menu, touch **View & Print** to display photos.
6. Touch a photo that you want to print.
7. Touch the up or down arrow to specify the number of photos to print.
8. Touch **Edit** to select options to edit the selected photos. You can rotate, crop a photo, or turn **Photo Fix** on and off.
9. Touch **Preview** to preview the selected photo. If you wish to adjust layout, paper type, red eye removal, or date stamp, touch **Settings**, and then touch your selection. You can also save any new settings as defaults.
10. Touch **Print** to begin printing.

Related topics

- [Load media on page 10](#)
[Tips for print success on page 13](#)

Load media

- ▲ Do one of the following:

Load small-size paper

- a. Pull out the paper tray, slide the paper-width guides outward, and then remove any other media previously loaded.



- b. Load paper.


- Insert a stack of photo paper into the paper tray with short edge forward and print side down.



- Slide photo paper forward until it stops.

 **NOTE:** If the photo paper you are using has perforated tabs, load photo paper so that tabs are closest to you.

- Slide paper-width guides inward until they touch the paper.

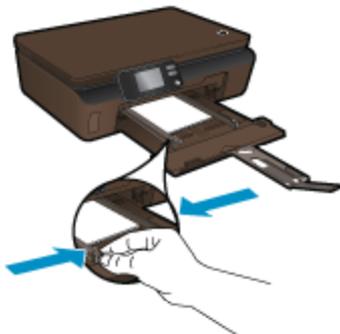

- Close the paper tray, and then open the paper tray extender.


Load full-size paper

- a. Slide the paper-width guides outward, and then remove any other media previously loaded.




b. Load paper.

- Insert a stack of paper into paper tray with short edge forward and print side down.

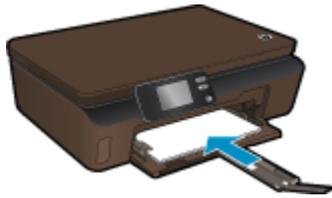

- Slide paper forward until it stops.
- Slide paper-width guides inward until they stop at the edges of paper.

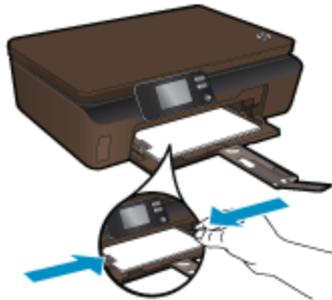

- Open the paper tray extender.

Print from anywhere

HP's free **ePrint** service provides an easy way to print from email, anywhere and anytime. Just forward an email to your printer's email address from your computer or mobile device, and both the email message and recognized attachments will print.

- Your printer needs to have a wireless network connection to the Internet. You won't be able to use **ePrint** via a USB connection to a computer.
- Attachments might print differently from the way they appear in the software program that created them, depending on the original fonts and layout options used.
- Free product updates are provided with **ePrint**. Some updates might be required to enable certain functionality.

Related topics

- [Your printer is protected on page 12](#)
- [How to get started with ePrint on page 12](#)
- [Use the HP ePrintCenter website on page 12](#)

Your printer is protected

To help prevent unauthorized email, HP assigns a random email address to your printer and never publicizes this address. **ePrint** also provides industry-standard spam filtering and transforms email and attachments to a print-only format to reduce the threat of virus or other harmful content. However, the **ePrint** service does not filter emails based on content, so it cannot prevent objectionable or copyrighted material from being printed.

Go to the **HP ePrintCenter** website for more information and specific terms and conditions: www.hp.com/go/ePrintCenter.

How to get started with ePrint

To use ePrint, make sure your printer is connected to a wireless network with Internet access and web services enabled.

To get started with ePrint

1. Turn on wireless radio to connect to a wireless network.
 - a. Touch the **Wireless** button on the control panel to check the wireless status. If it shows **Connected**, and details like IP address and network name appears, the printer has connected wirelessly to the network.
 - b. If it shows **Wireless Off**, touch **Turn On**, and then the printer will try to connect wirelessly to a network. If you haven't set up the wireless network connection before, follow the prompts on the screen to set up wireless network connection.
2. Enable Web services.
 - a. Touch **ePrint** on the control panel to check the web services status. If ePrint email address appears, **ePrint Status** shows **Connected**, and **ePrint Feature** shows **On**, web services are enabled and ready for use.
 - b. If the **Web Services** screen is prompted, touch **Yes** to enable web services. If the **Server Connection Error** screen is prompted, touch **Retry** or **Enter Proxy** to configure Web proxy settings.
3. Touch **ePrint** on the control panel. From the **Web Services Summary** screen, get your printer's email address.
4. Compose and send email to your printer's email address from your computer or mobile device, anywhere and anytime. Both the email message and recognized attachments will print.

Use the HP ePrintCenter website

Use HP's free ePrintCenter website to set up increased security for **ePrint** and specify the email addresses that are allowed to send email to your printer. You can also get Product Updates, more **Apps**, and other free services.

Go to the **HP ePrintCenter** website for more information and specific terms and conditions: www.hp.com/go/ePrintCenter.

Manage apps

Print pages from the web, without using a computer, by setting up **Apps**, a free service from HP. You can print coloring pages, calendars, puzzles, recipes, maps, and more, depending on the apps available in your country/region.

Touch the **Get More** icon on the **Apps** screen to connect to the Internet and add more. You need to have web services enabled in order to use apps.

To manage apps

1. Add apps
 - a. From the Home screen, touch **Apps**, and then touch the **Get More** icon.
 - b. Touch an app icon that you want to add.
 - c. Touch **Add** to confirm.
2. Remove apps
 - a. From the Home screen, touch **Apps**, and then touch the **Get More** icon.
 - b. Touch one or more apps icons to select the apps that you want to remove.
 - c. Touch **Yes** to confirm.

Go to the **HP ePrintCenter** website for more information and specific terms and conditions: www.hp.com/go/ePrintCenter.

Tips for print success

Use the following tips to print successfully.

Tips for printing from computer

If you want to print documents, photos, or envelopes from computer, click the following links. They will direct you to online instructions according to the operating system you are using.

- Learn how to print documents from computer. [Click here to go online for more information.](#)
- Learn how to print photos saved on your computer. Learn information about print resolution and how to enable maximum dpi resolution. [Click here to go online for more information.](#)
- Learn how to print envelopes from computer. [Click here to go online for more information.](#)

Tips for ink and paper

- Use genuine HP cartridges. Genuine HP cartridges are designed for and tested with HP printers to help you produce great results, time after time.
- Make sure the cartridges have sufficient ink. To view the estimated ink levels, touch the **Ink** icon from the Home screen.
- To learn more tips about working with cartridges, see [Tips for working with cartridges on page 23](#) for more information.
- Load a stack of paper, not just one page. Use clean and flat paper of the same size. Make sure only one type of paper is loaded at a time.
- Adjust the paper-width guides in the paper tray to fit snugly against all paper. Make sure the paper-width guides do not bend the paper in the paper tray.
- Set the print quality and paper size settings according to the type and size of paper loaded in the paper tray.
- To clear paper jam, see [Clear paper jam on page 29](#) for more information.

Tips for printing apps and using ePrint

- Learn how to share your photos online and order prints. [Click here to go online for more information.](#)
- Learn about apps for printing recipes, coupons, and other content from the web, simply and easily. [Click here to go online for more information.](#)
- Learn how to print from anywhere by sending an email and attachments to your printer. [Click here to go online for more information.](#)
- If you have enabled **Auto Power-Off**, you should disable **Auto Power-Off** to use ePrint. See [Auto Power-Off on page 44](#) for more information.

5 Copy and scan

- [Copy text or mixed documents](#)
- [Scan to a computer or memory card](#)
- [Tips for copy and scan success](#)

Copy text or mixed documents

- ▲ Do one of the following:

Make a black and white copy

- a. Load paper.
 - Load full-size paper in the paper tray.



- Make sure the paper tray extender is open.
- b. Load original.
 - Lift lid on the product.



 **TIP:** To make copies of thick originals, such as books, you can remove the lid.

- Load original print side down on the right front corner of glass.



- Close lid.
- c. Specify number of copies and settings.
 - From the Home screen, touch **Copy**, and then touch **Black**.
 - Touch **Settings** to specify paper size, paper type, quality, or other settings.
 - Touch directional buttons to change the number of copies.
- d. Start copy.
 - Touch **Start**.

Make a color copy

- a. Load paper.
 - Load full-size paper in the paper tray.




- Make sure the paper tray extender is open.
- b. Load original.
 - Lift lid on the product.



 **TIP:** To make copies of thick originals, such as books, you can remove the lid.

- Load original print side down on the right front corner of glass.

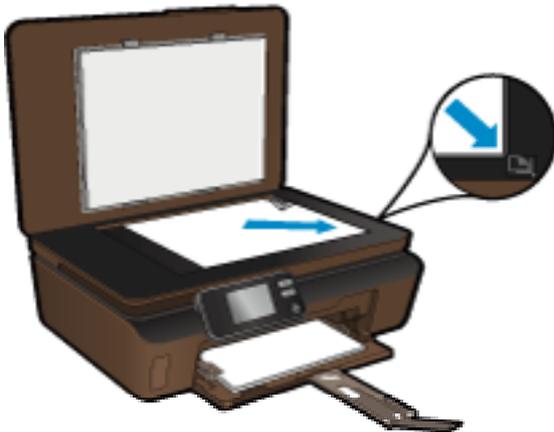

- Close lid.
- c. Select **Copy**.
 - From the Home screen, touch **Copy**, and then touch **Color**.
 - Touch **Settings** to specify paper size, paper type, quality, or other settings.
 - Touch directional buttons to change the number of copies.
- d. Start copy.
 - Touch **Start**.

Related topics

- [Tips for copy and scan success on page 18](#)

Scan to a computer or memory card

You can start a scan to a computer either from the printer display or from the printer software on your computer. Starting a scan from the printer display is quick. Starting a scan from the software gives you more options.

Before starting scan to a computer from the printer display, make sure the printer is connected to your computer either on a wireless network or through a USB cable.

If the printer is connected to the computer through a USB cable, you can start scan immediately from the printer display.

If the printer is connected to a Windows computer on a wireless network, you need to enable wireless scan in the software first. From the **Start** menu on your computer, click **All Programs**, and then click **HP**. Under **HP Photosmart 5510 series**, click **HP Photosmart 5510 series**, click **Scanner Actions**, and then click **Manage Scan to Computer**.


 **NOTE:** You can choose to keep the **Scan to Computer** option always active, and then you will not need to enable wireless scan again next time you start a scan from the printer display.

To scan to a computer or memory card from the printer display

1. Load original.
 - a. Lift lid on the product.



- b. Load original print side down on the right front corner of glass.

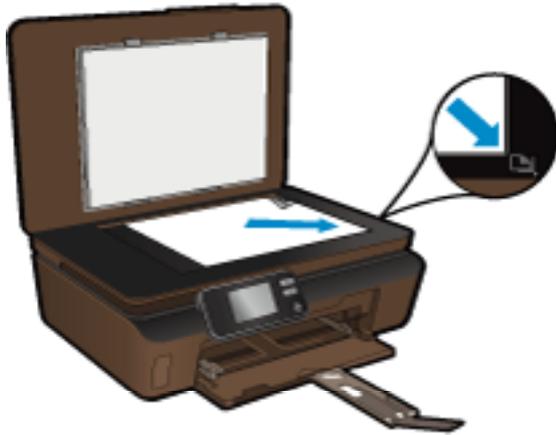

- c. Close lid.
2. To scan to a memory card, insert a memory card in the memory card slot.
If you want to scan to a computer, make sure the printer is connected to your computer on a wireless network or through a USB cable.
3. Start scan.
 - a. From the Home screen, touch **Scan**.
 - b. Select the destination by touching either **Computer** or **Memory Card**.
To scan to a computer, select the computer, and then select a scan type to start the scan. If your computer is not listed, touch **Not listed** for further information.

Related topics

- [Tips for copy and scan success on page 18](#)

Tips for copy and scan success

Use the following tips to copy and scan successfully:

- Keep the glass and the back of the lid clean. The scanner interprets anything it detects on the glass as part of the image.
- Load your original, print side down, on the right front corner of the glass.
- To copy or scan a book or other thick originals, remove the lid.
- To make a large copy of a small original, scan the original into the computer, resize the image in the scanning software, and then print a copy of the enlarged image.
- If you want to adjust scan size, output type, scan resolution, or file type, and so on, start scan from the printer software.
- To avoid incorrect or missing scanned text, make sure the brightness is set appropriately in the software.

6 Work with cartridges

- [Check the estimated ink levels](#)
- [Clean printhead automatically](#)
- [Clean ink smear](#)
- [Replace the cartridges](#)
- [Align printer](#)
- [Order ink supplies](#)
- [Cartridge warranty information](#)
- [Tips for working with cartridges](#)

Check the estimated ink levels

From the Home screen, touch the right directional key, and then touch the **Ink** icon to display the estimated ink levels.

 **NOTE: 1** If you have installed a refilled or remanufactured cartridge, or a cartridge that has been used in another printer, the ink level indicator might be inaccurate or unavailable.

NOTE: 2 Ink level warnings and indicators provide estimates for planning purposes only. When you receive a low-ink warning message, consider having a replacement cartridge available to avoid possible printing delays. You do not have to replace the cartridges until the print quality is unacceptable.

NOTE: 3 Ink from the cartridges is used in the printing process in a number of different ways, including in the initialization process, which prepares the product and cartridges for printing, and in printhead servicing, which keeps print nozzles clear and ink flowing smoothly. In addition, some residual ink is left in the cartridge after it is used. For more information, see www.hp.com/go/inkusage.

Related topics

- [Order ink supplies on page 22](#)
[Tips for working with cartridges on page 23](#)

Clean printhead automatically

If print quality is unacceptable, and the problem is not low ink levels or non-HP ink, try cleaning the printhead from the printer display. Full-size paper needs to be loaded and an information page will be printed out at the end.

To clean printhead from the printer display

1. From the Home screen, touch the right directional key. Touch the **Setup** icon, and then touch **Tools**.
2. On the **Tools** menu, touch the down arrow to scroll through the options, and then touch **Clean Printhead**.

Related topics

- [Order ink supplies on page 22](#)
[Tips for working with cartridges on page 23](#)

Clean ink smear

If printouts shows smears of ink, try cleaning ink smear from the printer display. This process takes several minutes to complete. Full-size plain paper needs to be loaded and will be moved back and forth during the cleaning. Mechanical noises are normal at this time.

To clean ink smear from the printer display

1. From the Home screen, touch the right directional key. Touch the **Setup** icon, and then touch **Tools**.
2. On the **Tools** menu, touch the down arrow to scroll through the options, and then touch **Clean Ink Smear**.

Related topics

- [Order ink supplies on page 22](#)
- [Tips for working with cartridges on page 23](#)

Replace the cartridges



To replace the cartridges

1. Check that power is on.
2. Remove cartridge.
 - a. Open the cartridge access door.




Wait for print carriage to move to the ink label part of the product.


- b. Press tab on cartridge, then remove it from slot.

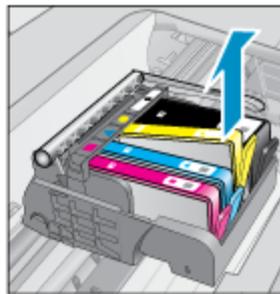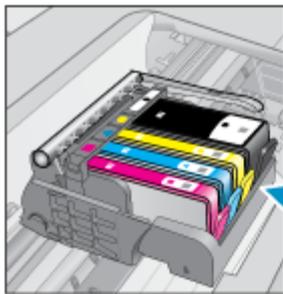


3. Insert new cartridge.
 - a. Remove cartridge from packaging.

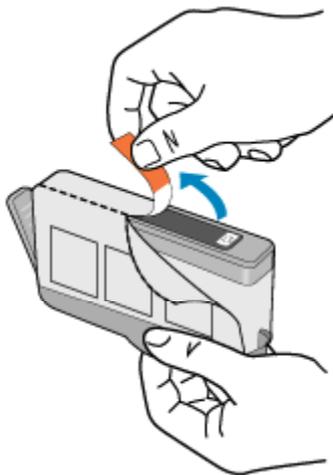


- b. Twist orange cap to snap it off. A forceful twist may be required to remove cap.

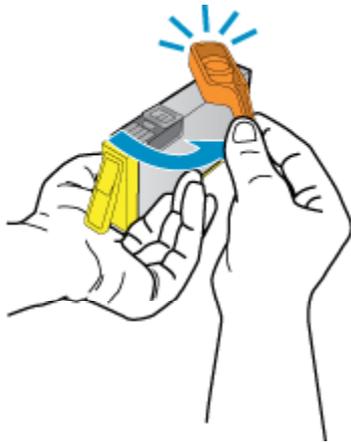

- c. Match color icons, then slide cartridge into slot until it clicks into place.

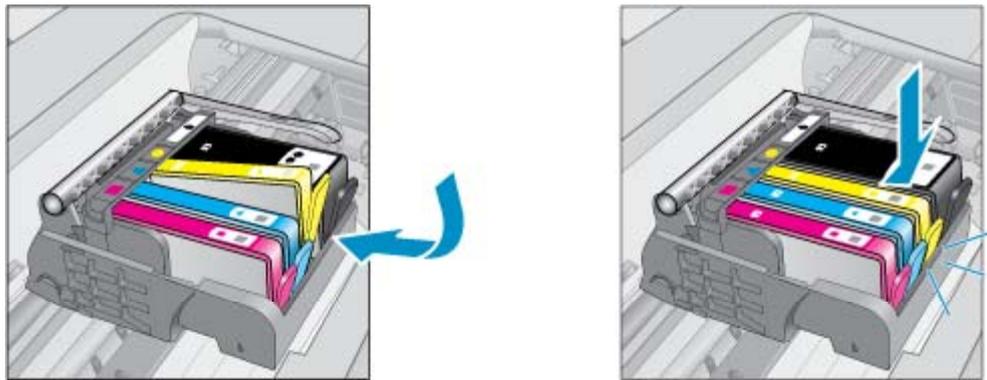

- d. Close the cartridge access door.

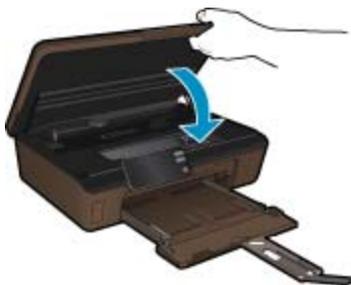

Related topics

- [Order ink supplies on page 22](#)
- [Tips for working with cartridges on page 23](#)

Align printer

After you insert new cartridges, align the printer for best print quality. You can align printer either from the printer display or from the printer software.

To align printer from the printer display

1. From the Home screen, touch the right directional key. Touch the **Setup** icon, and then touch **Tools**.
2. On the **Tools** menu, touch the down arrow to scroll through the options, and then touch **Align Printer**.
3. Follow the instruction on the screen.

To align printer from the printer software

Do one of the following according to the operating system you are using.


1. On Windows:
 - a. From the **Start** menu on your computer, click **All Programs**, click **HP**.
 - b. Click the **HP Photosmart 5510 series** folder, click **HP Photosmart 5510 series**.
 - c. Double-click **Printer Preferences**, and then double-click **Maintenance Tasks**.
 - d. Click the **Device Services** tab, and then click the **Align Ink Cartridges** button.
2. On Mac:
 - ▲ Open **HP Utility**, click **Align**, and then click **Align** again.

Related topics

- [Order ink supplies on page 22](#)
- [Tips for working with cartridges on page 23](#)

Order ink supplies

To find the correct model number for replacement cartridges, open the printer cartridge access door and check the label.

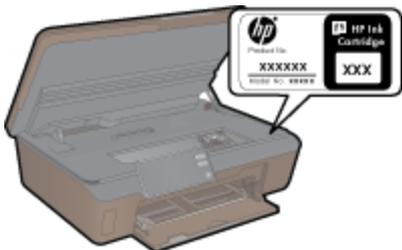


Cartridge information and links to online shopping also appear on ink alert messages. In addition, you can find cartridge information and order online by visiting www.hp.com/buy/supplies.

 **NOTE:** Ordering cartridges online is not supported in all countries/regions. If it is not supported in your country/region, contact a local HP reseller for information about purchasing cartridges.

Cartridge warranty information

The HP cartridge warranty is applicable when the product is used in its designated HP printing device. This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with.

During the warranty period the product is covered as long as the HP ink is not depleted and the end of warranty date has not been reached. The end of warranty date, in YYYY/MM format, may be found on the product as indicated:

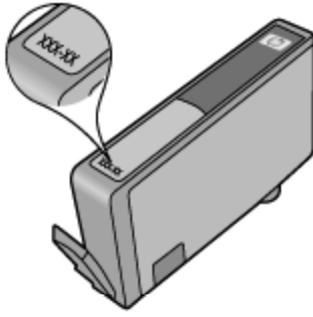

For a copy of the HP Limited Warranty Statement, see the printed documentation that came with the product.

Tips for working with cartridges

Use the following tips to work with cartridges:

- Use the correct cartridges for your printer. For a list of compatible cartridges, see the printed documentation that came with the printer.
- Insert the cartridges into the correct slots. Match the color and icon of each cartridge to the color and icon for each slot. Make sure all cartridges snap down into place.
- After you insert new cartridges, align the printer for best print quality. See [Align printer on page 21](#) for more information.
- Make sure the printhead is clean. See [Clean printhead automatically on page 19](#) for more information.
- When you receive a low ink alert message, consider getting replacement cartridges. This avoids possible printing delays. You do not need to replace the cartridges until print quality becomes unacceptable. See [Replace the cartridges on page 20](#) for more information.
- If you receive a carriage stalled error, try clearing carriage jam. See [Clear carriage jam on page 30](#) for more information.

7 Connectivity

- [Add the HP Photosmart to a network](#)
- [Change from a USB connection to a wireless network](#)
- [Connect a new printer](#)
- [Change network settings](#)
- [Tips for setting up and using a networked printer](#)
- [Advanced printer management tools \(for networked printers\)](#)

Add the HP Photosmart to a network

- [WiFi Protected Setup \(WPS\) on page 25](#)
- [Wireless with a router \(infrastructure network\) on page 26](#)

WiFi Protected Setup (WPS)

To connect the HP Photosmart to a wireless network using WiFi Protected Setup (WPS), you will need the following:

- A wireless 802.11b/g/n network that includes a WPS-enabled wireless router or access point.

 **NOTE:** 802.11n will only support 2.4Ghz.
- A desktop computer or laptop with either wireless networking support, or a network interface card (NIC). The computer must be connected to the wireless network that you intend to install the HP Photosmart on.

To connect the HP Photosmart using WiFi Protected Setup (WPS)

- ▲ Do one of the following:

Use Push Button Configuration (PBC) method

- Select setup method. Make sure your WPS-enabled wireless router supports PBC method.
 - From the Home screen, touch the right directional key, and then touch the **Wireless** icon.
 - Touch **WiFi Protected Setup**.
 - Touch **Push Button Setup**.
- Set up wireless connection.
 - Turn on wireless radio if it is off.
 - Touch **Start**.
 - Press and hold the button on WPS-enabled router or other networking device to activate WPS.



 **NOTE:** The product begins a timer for approximately two minutes in which the corresponding button on the networking device needs to be pressed.

- Touch **OK**.
- c. Install software.

Use PIN method

- a. Select setup method. Make sure your WPS-enabled wireless router supports PIN method.
 - From the Home screen, touch the right directional key, and then touch the **Wireless** icon.
 - Touch **WiFi Protected Setup**.
 - Touch **PIN Setup**.
- b. Set up wireless connection.
 - Touch **Start**.
 - Turn on wireless radio if it is off.

 **NOTE:** The product begins a timer for approximately five minutes in which the PIN needs to be entered on the networking device.

- Touch **OK**.
- c. Install software.

Related topics

- [Tips for setting up and using a networked printer on page 27](#)

Wireless with a router (infrastructure network)

To connect the HP Photosmart to an integrated wireless WLAN 802.11 network, you will need the following:

- A wireless 802.11b/g/n network that includes a wireless router or access point.

 **NOTE:** 802.11n will only support 2.4Ghz.

- A desktop computer or laptop with either wireless networking support, or a network interface card (NIC). The computer must be connected to the wireless network that you intend to install the HP Photosmart on.
- Broadband Internet access (recommended) such as cable or DSL.
If you connect the HP Photosmart on a wireless network that has Internet access, HP recommends that you use a wireless router (access point or base station) that uses Dynamic Host Configuration Protocol (DHCP).
- Network name (SSID).
- WEP key or WPA Passphrase (if needed).

To connect the product with the Wireless Setup Wizard

1. Write down your network name (SSID) and WEP key or WPA passphrase.
2. Start Wireless Setup Wizard.
 - a. From the Home screen, touch the right directional key, and then touch the **Wireless** icon.
 - b. Touch **Wireless Setup Wizard**.
3. Connect to wireless network.
 - ▲ Select your network from the list of detected networks.
4. Follow prompts.
5. Install software.

Related topics

- [Tips for setting up and using a networked printer on page 27](#)

Change from a USB connection to a wireless network

If you first setup your printer and installed the software with a USB cable, directly connecting the printer to your computer, you can easily change to a wireless network connection. You will need a wireless 802.11b/g/n network that includes a wireless router or access point.

 **NOTE:** 802.11n will only support 2.4Ghz.

To change from a USB connection to a wireless network

Do one of the following according to your operating system.

1. On Windows:
 - a. From the **Start** menu on your computer, click **All Programs**, and then click **HP**.
 - b. Click **HP Photosmart 5510 series**, click **Printer Setup & Software Selection**, and then click **Convert a USB connected printer to wireless**.
 - c. Follow the instructions on the screen.
2. On Mac:
 - a. From the Home screen on the printer display, touch the right directional key.
 - b. Touch the **Wireless** icon, and then touch **Wireless Setup Wizard**.
 - c. Follow the instructions on the screen to connect the printer.
 - d. Use **HP Setup Assistant** in Applications/Hewlett-Packard/Device Utilities to change the software connection to this printer to wireless.

Connect a new printer

To connect a new printer from the printer software

If you haven't finished connecting the printer to your computer, you need to connect it from the printer software. If you want to connect another new printer of the same model to your computer, you don't need to install the printer software once again. Do one of following according to your operating system:

1. On Windows:
 - a. From the **Start** menu on your computer, click **All Programs**, and then click **HP**.
 - b. Click **HP Photosmart 5510 series**, click **Printer Connections and Software**, and then click **Connect a new printer**
 - c. Follow the instructions on the screen.
2. On Mac:
 - a. From the Home screen on the printer display, touch the right directional key.
 - b. Touch the **Wireless** icon, and then touch **Wireless Setup Wizard**.
 - c. Follow the instructions on the screen to connect the printer.
 - d. Use **HP Setup Assistant** in Applications/Hewlett-Packard/Device Utilities to change the software connection to this printer to wireless.

Change network settings

If you want to change the wireless settings that you previously configured to a network, you need to run the Wireless Setup Wizard from the printer display.

To run Wireless Setup Wizard to change network settings

1. From the Home screen on the printer display, touch the right directional key, and then touch the **Wireless** icon.
2. On the wireless menu, touch **Wireless Setup Wizard**.
3. Follow the instructions on the screen to change the network settings.

Tips for setting up and using a networked printer

Use the following tips to set up and use a networked printer:

- When setting up the wireless networked printer, make sure your wireless router is powered on. The printer searches for wireless routers, then lists the detected network names on the display.
- To verify the wireless connection, touch the **Wireless** button on the control panel. If it shows **Wireless Off**, touch **Turn On**.

- If your computer is connected to a Virtual Private Network (VPN), you need to disconnect from the VPN before you can access any other device on your network, including the printer.
- Learn more about configuring your network and the printer for wireless printing. [Click here to go online for more information.](#)
- Learn how to find your network security settings. [Click here to go online for more information.](#)
- Learn about the Network Diagnostic Utility (Windows only) and other troubleshooting tips. [Click here to go online for more information.](#)
- Learn how to change from a USB to wireless connection. See [Change from a USB connection to a wireless network on page 26](#) for more information.
- Learn how to work with your firewall and anti-virus programs during printer setup. [Click here to go online for more information.](#)

Advanced printer management tools (for networked printers)

When the printer is connected to a network, you can use the embedded Web server to view status information, change settings, and manage the printer from your computer.

 **NOTE:** To view or change some settings, you might need a password.

You can open and use the embedded Web server without being connected to the Internet. However, some features are not available.

- [To open the embedded Web server](#)
- [About cookies](#)

To open the embedded Web server

 **NOTE:** The printer must be on a network and must have an IP address. The IP address for the printer can be found by touching the **Wireless** button on the control panel or by printing a network configuration page.

In a supported Web browser on your computer, type the IP address or hostname that has been assigned to the printer.

For example, if the IP address is 192.168.0.12, type the following address into a Web browser such as Internet Explorer: `http://192.168.0.12`.

About cookies

The embedded Web server (EWS) places very small text files (cookies) on your hard drive when you are browsing. These files let the EWS recognize your computer the next time you visit. For example, if you have configured the EWS language, a cookie helps remember which language you have selected so that the next time you access the EWS, the pages are displayed in that language. Though some cookies are cleared at the end of each session (such as the cookie that stores the selected language), others (such as the cookie that stores customer-specific preferences) are stored on the computer until you clear them manually.

You can configure your browser to accept all cookies, or you can configure it to alert you every time a cookie is offered, which allows you to decide which cookies to accept or refuse. You can also use your browser to remove unwanted cookies.

 **NOTE:** Depending on your printer, if you disable cookies, you also disable one or more of the following features:

- Starting where you left the application (especially useful when using setup wizards).
- Remembering the EWS browser language setting.
- Personalizing the EWS Home page.

For information about how to change your privacy and cookie settings and how to view or delete cookies, see the documentation available with your Web browser.

8 Solve a problem

- [Get more help](#)
- [Register your printer](#)
- [Clear paper jam](#)
- [Solve print problem](#)
- [Solve copy and scan problem](#)
- [Solve networking problem](#)
- [HP support by phone](#)

Get more help

You can find more information and help about your HP Photosmart by entering a keyword in the **Search** field in the top left of the help viewer. Titles of related topics -- for both local and online topics -- will be listed.



[Click here to go online for more information.](#)

Register your printer

By taking just a few minutes to register your printer, you can enjoy quicker service, more efficient support, and product support alerts. If you did not register your printer while installing the software, you can register now at <http://www.register.hp.com>.

Clear paper jam

To clear a paper jam

1. Open the cartridge access door.



2. Open the paper path cover.



3. Remove jammed paper.
4. Close the paper path cover.



5. Close the cartridge access door.



6. Try printing again.

If the above solutions do not resolve the problem, [click here for more online troubleshooting](#).

Clear carriage jam

Remove any objects, such as paper, that are blocking the print carriage.

 **NOTE:** Do not use any tools or other devices to remove jammed paper. Always use caution when removing jammed paper from inside the printer.

To get help from the print display, touch **Help** from the Home screen. Touch directional key to navigate through help topics, touch **Troubleshoot and Support**, and then touch **Clear Carriage Jam**.



[Click here to go online for more information.](#)

Solve print problem

Make sure that the printer is turned on and that there is paper in the paper tray. If you are still unable to print, HP provides a Print Diagnostic Utility (Windows only) that can help solve many common “Unable to Print” issues. From the **Start** menu on your computer, click **All Programs**, and then click **HP**. Under **HP Photosmart 5510 series**, click **HP Photosmart 5510 series**, double-click **Print Actions**, and then double-click **HP Print Diagnostic Utility**.



[Click here to go online for more information.](#)

If print quality is not acceptable, try the following to improve print quality:

- Use printer status and print quality report to diagnose printer and print quality issues. From the Home screen, touch the right directional key, touch **Setup**, and then touch **Tools**. Touch the down arrow to scroll through options, and then touch **Printer Status Report** or **Print Quality Report**. [Click here to go online for more information](#)
- If printouts show misaligned colors or lines, try aligning printer. See [Align printer on page 21](#) for more information.
- If ink smears on the printouts, try clearing ink smear from the print display. See [Clean ink smear on page 19](#) for more information.

Solve copy and scan problem

HP provides a Scan Diagnostic Utility (Windows only) that can help solve many common “Unable to scan” issues. From the **Start** menu on your computer, click **All Programs**, and then click **HP**. Under **HP Photosmart 5510 series**, click **HP Photosmart 5510 series**, double-click **Scan Actions**, and then double-click **HP Scan Diagnostic Utility**.

Learn more about how to solve scan issues. [Click here to go online for more information](#)

Learn how to solve copy issues. [Click here to go online for more information](#).

Solve networking problem

Check network configuration or print wireless test report to assist in diagnosing network connection issues.

To check network configuration or print wireless test report

1. From the Home screen, touch the right directional key, and then touch the **Wireless** icon.
2. On the **Wireless Settings** menu, use the down arrow to scroll through options, and then touch **Display Network Configuration** or **Print Wireless Test Report**.

Click the links below to find more online information to solve networking issues.

- Learn more about wireless printing. [Click here to go online for more information](#).
- Learn how to find your network security settings. [Click here to go online for more information](#).
- Learn about the Network Diagnostic Utility (Windows only) and other troubleshooting tips. [Click here to go online for more information](#).
- Learn how to work with your firewall and anti-virus programs during printer setup. [Click here to go online for more information](#).

HP support by phone

Phone support options and availability vary by product, country/region, and language.

This section contains the following topics:

- [Phone support period](#)
- [Placing a call](#)
- [After the phone support period](#)

Phone support period

One year of phone support is available in North America, Asia Pacific, and Latin America (including Mexico). To determine the duration of phone support in Europe, the Middle East, and Africa, go to www.hp.com/support. Standard phone company charges apply.

Placing a call

Call HP support while you are in front of the computer and the product. Be prepared to provide the following information:

- Product name (HP Photosmart 5510 series)
- Serial number (located on the back or bottom of the product)
- Messages that appear when the situation occurs
- Answers to these questions:
 - Has this situation happened before?
 - Can you re-create it?
 - Did you add any new hardware or software to your computer at about the time that this situation began?
 - Did anything else occur prior to this situation (such as a thunderstorm, product was moved, etc.)?

For the list of support phone numbers, visit www.hp.com/support.

After the phone support period

After the phone support period, help is available from HP at an additional cost. Help may also be available at the HP online support Web site: www.hp.com/support. Contact your HP dealer or call the support phone number for your country/region to learn more about support options.

Additional warranty options

Extended service plans are available for the HP Photosmart at additional costs. Go to www.hp.com/support, select your country/region and language, then explore the services and warranty area for information about the extended service plans.

Cartridge supply upgrade

If the supply upgrade is not successful, try getting your printer to recognize the supply upgrade cartridge.

To get the printer to recognize the supply upgrade cartridge:

1. Remove the supply upgrade cartridge.
2. Insert the original cartridge in the carriage.
3. Close the cartridge access door, then wait until the carriage stops moving.
4. Remove the original cartridge, then replace with the supply upgrade cartridge.
5. Close the cartridge access door, then wait until the carriage stops moving.

If you still receive a supply upgrade problem error message, contact HP support for help.



[Click here to go online for more information.](#)

Prepare printer

If you are not satisfied with the print quality, try cleaning the cartridges from the control panel. See [Clean printhead automatically on page 19](#) for more information.

To maintain the cartridges, use the printer's Auto Power-Off feature to manage the printer's power use. See [Auto Power-Off on page 44](#) for more information.

Check cartridge access door

The cartridge access door should be closed for printing.



[Click here to go online for more information.](#)

Printhead failure

The printhead in this product has failed. Contact HP support for help.



[Click here to go online for more information.](#)

Printer failure

If you have already turned the printer off and then on, and this does not solve your problem, contact HP support for help.



[Click here to go online for more information.](#)

Ink cartridge problem

To solve ink cartridge problem

1. Try removing and reinserting the cartridges. Make sure the cartridges are in the correct slots.
2. If reinserting the cartridges does not work, try cleaning cartridge contacts.

To clean cartridge contacts


△ **CAUTION:** The cleaning procedure should take only a few minutes. Make sure that the ink cartridges are reinstalled in the product as soon as possible. It is not recommended to leave the ink cartridges outside of the product longer than 30 minutes. This could result in damage to both the printhead and the ink cartridges.

- a. Check that power is on.
- b. Open the cartridge access door.




Wait for the print carriage to move to the ink label part of the product.

- c. Press tab on the cartridge indicated in the error message, then remove it from slot.

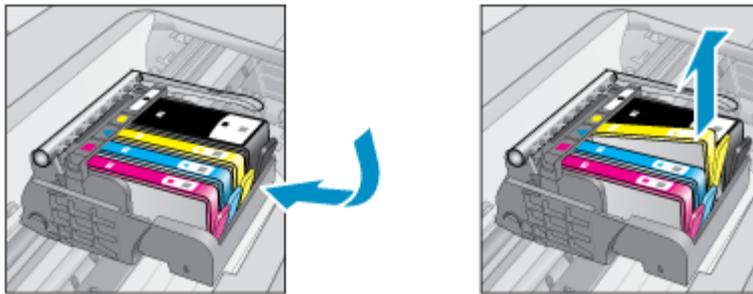

- d. Hold the ink cartridge by its sides with the bottom pointing up and locate the electrical contacts on the ink cartridge. The electrical contacts are four small rectangles of copper or gold-colored metal on the bottom of the ink cartridge.

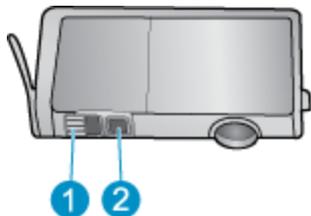


1	Ink window
2	Electrical contacts

- e. Wipe only the contacts with a dry swab or lint-free cloth.

△ **CAUTION:** Be careful to touch only the contacts, and do not smear any of the ink or other debris elsewhere on the cartridge.

- f. On the inside of the product, locate the contacts in the printhead. The contacts look like a set of four copper or gold-colored pins positioned to meet the contacts on the ink cartridge.

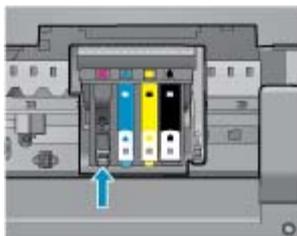

- g. Use a dry swab or lint-free cloth to wipe the contacts.
 h. Reinstall the ink cartridge.
 i. Close the access door, and check if the error message has gone away.
 j. If you still receive the error message, turn the product off, and then on again.
3. If your problem is still not resolved, try replacing cartridges. See [Replace the cartridges on page 20](#) for more information.




[Click here to go online for more information.](#)

SETUP cartridges

When you first set up the printer, you must install the cartridges that shipped in the box with the printer. These cartridges are labeled SETUP, and they calibrate your printer before the first print job. Failure to install the SETUP cartridges during the initial product setup causes an error.

If you installed a set of regular cartridges, remove them and install the SETUP cartridges to complete printer setup. After printer setup is complete, the printer can use regular cartridges.

⚠ WARNING! You must replace the orange caps on the regular cartridges you remove, or they will quickly dry out. Some ink will still evaporate, but less than if the cartridges are uncapped. You can use the orange caps from the SETUP cartridges if necessary.

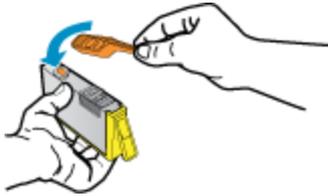

If you still receive the error message, contact HP support for help.



[Click here to go online for more information.](#)

Older generation cartridges

You will need to use a newer version of this cartridge. To identify a newer version of the cartridge, look at the exterior of the cartridge package and find the Warranty Ends date.



If it says 'v1' several spaces to the right of the date, then the cartridge is the updated newer version. If it is an older generation cartridge, contact HP support for help or replacement.



[Click here to go online for more information.](#)

9 Technical information

The technical specifications and international regulatory information for the HP Photosmart are provided in this section.

For additional specifications, see the printed documentation that came with the HP Photosmart.

This section contains the following topics:

- [Notice](#)
- [Cartridge chip information](#)
- [Specifications](#)
- [Environmental product stewardship program](#)
- [Regulatory notices](#)
- [Regulatory wireless statements](#)

Notice

Hewlett-Packard Company notices

The information contained in this document is subject to change without notice.

All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

© 2011 Hewlett-Packard Development Company, L.P.

Microsoft, Windows, Windows XP, and Windows Vista are U.S. registered trademarks of Microsoft Corporation.

Windows 7 is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Intel and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Adobe® is a trademark of Adobe Systems Incorporated.

Cartridge chip information

The HP cartridges used with this product contain a memory chip that assists in the operation of the product. In addition, this memory chip collects a limited set of information about the usage of the product, which might include the following: the date when the cartridge was first installed, the date when the cartridge was last used, the number of pages printed using the cartridge, the page coverage, the printing modes used, any printing errors that might have occurred, and the product model. This information helps HP design future products to meet our customers printing needs.

The data collected from the cartridge memory chip does not contain information that can be used to identify a customer or user of the cartridge or their product.

HP collects a sampling of the memory chips from cartridges returned to HP's free return and recycling program (HP Planet Partners: www.hp.com/hpinfo/globalcitizenship/environment/recycle/). The memory chips from this sampling are read and studied in order to improve future HP products. HP partners who assist in recycling this cartridge might have access to this data, as well.

Any third party possessing the cartridge might have access to the anonymous information on the memory chip. If you prefer to not allow access to this information, you can render the chip inoperable. However, after you render the memory chip inoperable, the cartridge cannot be used in an HP product.

If you are concerned about providing this anonymous information, you can make this information inaccessible by turning off the memory chip's ability to collect the product's usage information.

To disable the usage information function

1. From the Home screen, touch the right directional key, and then touch the **Setup** icon.



2. Touch **Preferences**.
3. Touch **Cartridge Chip Info**, and then touch **OK**.

 **NOTE: 1** To re-enable the usage information function, restore the factory defaults.

NOTE: 2 You can continue to use the cartridge in the HP product if you turn off the memory chip's ability to collect the product's usage information.

Specifications

Technical specifications for the HP Photosmart are provided in this section. For complete product specifications, see the Product Data Sheet at www.hp.com/support.

System requirements

Software and system requirements are located in the Readme file.

For information about future operating system releases and support, visit the HP online support Web site at www.hp.com/support.

Environmental specifications

- Recommended operating temperature range: 15 °C to 32 °C (59 °F to 90 °F)
- Allowable operating temperature range: 5 °C to 40 °C (41 °F to 104 °F)
- Humidity: 20% to 80% RH non-condensing (recommended); 25 °C maximum dewpoint
- Non-operating (Storage) temperature range: -40 °C to 60 °C (-40 °F to 140 °F)
- In the presence of high electromagnetic fields, it is possible the output from the HP Photosmart may be slightly distorted
- HP recommends using a USB cable less than or equal to 3 m (10 feet) in length to minimize injected noise due to potential high electromagnetic fields

Print specifications

- Print speeds vary according to the complexity of the document
- Panorama-size printing
- Method: drop-on-demand thermal inkjet
- Language: PCL3 GUI

Scan specifications

- Image editor included
- Resolution: up to 1200 x 2400 ppi optical; 19200 ppi enhanced (software)
For more information about ppi resolution, see the scanner software.
- Color: 48-bit color, 8-bit grayscale (256 levels of gray)
- Maximum scan size from glass: 21.6 x 29.7 cm (8.5 x 11.7 inches)

Copy specifications

- Digital image processing
- Maximum number of copies varies by model
- Copy speeds vary according to the complexity of the document and model
- Maximum copy enlargement ranging from 200-400% (depends on model)
- Maximum copy reduction ranging from 25-50% (depends on model)

Cartridge yield

Visit www.hp.com/go/learnaboutesupplies for more information on estimated cartridge yields.

Print resolution

To find out about the printer resolution, see the printer software.

Environmental product stewardship program

Hewlett-Packard is committed to providing quality products in an environmentally sound manner. Design for recycling has been incorporated into this product. The number of materials has been kept to a minimum while ensuring proper functionality and reliability. Dissimilar materials have been designed to separate easily. Fasteners and other connections are easy to locate, access, and remove using common tools. High priority parts have been designed to access quickly for efficient disassembly and repair.

For more information, visit HP's Commitment to the Environment Web site at:

www.hp.com/hpinfo/globalcitizenship/environment/index.html.

This section contains the following topics:

- [Eco-Tips](#)
- [Paper use](#)
- [Plastics](#)
- [Material safety data sheets](#)
- [Recycling program](#)
- [HP inkjet supplies recycling program](#)
- [Power consumption](#)
- [Disposal of waste equipment by users in private households in the European Union](#)
- [Chemical Substances](#)
- [Battery disposal in the Netherlands](#)
- [Battery disposal in Taiwan](#)
- [Attention California users](#)
- [EU battery directive](#)
- [Set the Energy Save mode](#)
- [Auto Power-Off](#)
- [Sleep mode](#)

Eco-Tips

HP is committed to helping customers reduce their environmental footprint. HP has provided the Eco-Tips below to help you focus on ways to assess and reduce the impact of your printing choices. In addition to specific features in this product, please visit the HP Eco Solutions web site for more information on HP's environmental initiatives.

www.hp.com/hpinfo/globalcitizenship/environment/

Your product's Eco features

- **Energy Savings information:** To determine the ENERGY STAR® qualification status for this product, see [Power consumption on page 40](#).
- **Recycled Materials:** For more information regarding recycling of HP products, please visit: www.hp.com/hpinfo/globalcitizenship/environment/recycle/

Paper use

This product is suited for the use of recycled paper according to DIN 19309 and EN 12281:2002.

Plastics

Plastic parts over 25 grams are marked according to international standards that enhance the ability to identify plastics for recycling purposes at the end of product life.

Material safety data sheets

Material safety data sheets (MSDS) can be obtained from the HP Web site at:

www.hp.com/go/msds

Recycling program

HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit:

www.hp.com/hpinfo/globalcitizenship/environment/recycle/

HP inkjet supplies recycling program

HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge. For more information, go to the following Web site:

www.hp.com/hpinfo/globalcitizenship/environment/rcycle/

Power consumption

Hewlett-Packard printing and imaging equipment marked with the ENERGY STAR® logo is qualified to the U.S. Environmental Protection Agency's ENERGY STAR specifications for imaging equipment. The following mark will appear on ENERGY STAR qualified imaging products:



Additional ENERGY STAR qualified imaging product model information is listed at: www.hp.com/go/energystar

Disposal of waste equipment by users in private households in the European Union



English	<p>Disposal of Waste Equipment by Users in Private Households in the European Union This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.</p>
Francia	<p>Évacuation des équipements usagés par les utilisateurs dans les foyers privés au sein de l'Union européenne La présence de ce symbole sur le produit ou sur son emballage indique que vous ne pouvez pas vous débarrasser de ce produit de la même façon que vos déchets courants. Au contraire, vous êtes responsable de l'évacuation de vos équipements usagés et, à cet effet, vous êtes tenu de les remettre à un point de collecte agréé pour le recyclage des équipements électriques et électroniques usagés. Le tri, l'évacuation et le recyclage séparés de vos équipements usagés permettent de préserver les ressources naturelles et de s'assurer que ces équipements sont recyclés dans le respect de la santé humaine et de l'environnement. Pour plus d'informations sur les lieux de collecte des équipements usagés, veuillez contacter votre mairie, votre service de traitement des déchets ménagers ou le magasin où vous avez acheté le produit.</p>
Czech	<p>Entsorgung von Elektrogeräten durch Benutzer in privaten Haushalten in der EU Dieses Symbol auf dem Produkt oder dessen Verpackung gibt an, dass das Produkt nicht zusammen mit dem Restmüll entsorgt werden darf. Es obliegt daher Ihrer Verantwortung, das Gerät an einer entsprechenden Stelle für die Entsorgung oder Wiederverwertung von Elektrogeräten aller Art abzugeben (z.B. ein Wertstoffhof). Die separate Sammlung und das Recyceln Ihrer alten Elektrogeräte zum Zeitpunkt Ihrer Entsorgung trägt zum Schutz der Umwelt bei und gewährleistet, dass sie auf eine Art und Weise recycelt werden, die keine Gefährdung für die Gesundheit des Menschen und der Umwelt darstellt. Weitere Informationen darüber, wo Sie alte Elektrogeräte zum Recyceln abgeben können, erhalten Sie bei den örtlichen Behörden, Wertstoffhöfen oder dort, wo Sie das Gerät erworben haben.</p>
Italiano	<p>Smaltimento di apparecchiature da rottamare da parte di privati nell'Unione Europea Questo simbolo che appare sul prodotto o sulla confezione indica che il prodotto non deve essere smaltito assieme agli altri rifiuti domestici. Gli utenti devono provvedere allo smaltimento delle apparecchiature da rottamare portandole al luogo di raccolta indicato per il riciclaggio delle apparecchiature elettriche ed elettroniche. La raccolta e il riciclaggio separati delle apparecchiature da rottamare in fase di smaltimento favoriscono la conservazione delle risorse naturali e garantiscono che tali apparecchiature vengano rottamate nel rispetto dell'ambiente e della tutela della salute. Per ulteriori informazioni sui punti di raccolta delle apparecchiature da rottamare, contattare il proprio comune di residenza, il servizio di smaltimento dei rifiuti locale o il negozio presso il quale è stato acquistato il prodotto.</p>
Español	<p>Eliminación de residuos de aparatos eléctricos y electrónicos por parte de usuarios domésticos en la Unión Europea Este símbolo en el producto o en el embalaje indica que no se puede deschar el producto junto con los residuos domésticos. Por el contrario, sí debe eliminarse este tipo de residuo, es responsabilidad del usuario entregarlo en un punto de recogida designado de reciclado de aparatos electrónicos y eléctricos. El reciclaje y la recogida por separado de estos residuos en el momento de la eliminación ayudan a preservar recursos naturales y a garantizar que el reciclaje proteja la salud y el medio ambiente. Si desea información adicional sobre los lugares donde puede dejar estos residuos para su reciclado, póngase en contacto con las autoridades locales de su ciudad, con el servicio de gestión de residuos domésticos o con la tienda donde adquirió el producto.</p>
Česky	<p>Likvidace vysloužilého zařízení uživateli v domácnosti v zemích EU Tato značka na produktu nebo na jeho obalu označuje, že tento produkt nesmí být likvidován prostým vyhozením do běžného domovního odpadu. Odpovědná za to, že vysloužilé zařízení bude předáno k likvidaci do stanovených sběrných míst určených k recyklaci vysloužilých elektrických a elektronických zařízení. Likvidace vysloužilého zařízení samostatným sběrem a recyklací napomáhá zachování přírodních zdrojů a zajišťuje, že recyklační proces nezpůsobí žádné škodlivé účinky na lidské zdraví a životní prostředí. Další informace o tom, kam můžete vysloužilé zařízení předat k recyklaci, můžete získat od úřadů místní samosprávy, od společnosti provádějící svoz a likvidaci domovního odpadu nebo v obchodě, kde jste produkt zakoupili.</p>
Dansk	<p>Bortskaffelse af affaldsudstyr for brugere i private husholdninger i EU Dette symbol på produktet eller på dets emballage indikerer, at produktet ikke må bortskaffes sammen med andet husholdningsaffald. I stedet er det dit ansvar at bortskaffe affaldsudstyr ved at aflevere det på det/best beregnede indsamlingssted med henblik på genbrug af elektrisk og elektronisk affaldsudstyr. Den separate indsamling og genbrug af dit affaldsudstyr på tidspunktet for bortskaffelse er med til at bevare naturlige ressourcer og sikre, at genbrug finder sted på en måde, der beskytter menneskers helbred samt miljøet. Hvis du vil vide mere om, hvor du kan aflevere dit affaldsudstyr til genbrug, kan du kontakte kommunen, det lokale renovationsvesen eller den foretning, hvor du købte produktet.</p>
Nederlands	<p>Afvoer van afgedankte apparatuur door gebruikers in particuliere huishoudens in de Europese Unie Dit symbool op het product of de verpakking geeft aan dat dit product niet mag worden afgevoerd met het huishoudelijk afval. Het is uw verantwoordelijkheid uw afgedankte apparatuur af te leveren op een aangewezen inzamelpunt voor de verwerking van afgedankte elektrische en elektronische apparatuur. De gescheiden inzameling en verwerking van uw afgedankte apparatuur draagt bij tot het sparen van natuurlijke bronnen en tot het hergebruik van materiaal op een wijze die de volksgezondheid en het milieu beschermt. Voor meer informatie over waar u uw afgedankte apparatuur kunt inleveren voor recycling kunt u contact opnemen met het gemeentebestuur, de reinigingsdienst of de winkel waar u het product hebt aangekocht.</p>
Eesti	<p>Eramajapidamistes kasutatud elektroandmete ja elektroonikaseadmete kõrvaldamine Euroopa Liidus Kui tootel või toote pakendil on see sümbol, ei tohi seda toodet visata olmejäätmete hulka. Teie kohus on vältida tarbetuks muutunud seade selleks ettenähtud elektri- ja elektroonikaseadmete utiliseerimiskohta. Utiliseeritava seadmete eraldi kogumine ja käitlemine aitab säästa loodusvarasid ning tagada, et käitlemine toimub inimeste tervisele ja keskkonnale ohutult. Lisateavet selle kohta, kuhu saate utiliseeritava seadme käitlemiseks viia, saate küsida kohalikul omavalitsusel, olmejäätmete utiliseerimispunkti või kauplust, kust te seadme ostsite.</p>
Suomi	<p>Hävitettävien laitteiden käsittely kotitalouksissa Euroopan unionin alueella Tämä tuoteesta tai sen pakkausksessa oleva merkki osoittaa, että tuotetta ei saa hävittää talousjätteen mukana. Käyttäjän velvollisuus on huolehtia siitä, että hävitettävä laite toimitetaan sähkö- ja elektronikkalaiteromun keräyspisteeseen. Hävitettävien laitteiden erillinen keräys ja kierritys säästää luonnonvaroja. Näin toimimalla varmistetaan myös, että kierritys tapahtuu tavalla, joka suojelee ihmisten terveyttä ja ympäristöä. Saat tarvittaessa lisätietoja jätteiden kierrityspolkuista paikallisilta viranomaisilta, jätteenjyöistä tai tuotteen jälleenmyyjältä.</p>
Dáilyd	<p>Απορριψη άχρηστων συσκευών στην Ευρωπαϊκή Ένωση Το παρόν σύμβολο στον εξοπλισμό ή στη συσκευασία του υποδεικνύει ότι το προϊόν αυτό δεν πρέπει να πεταχτεί μαζί με άλλα οικιακά απορρίμματα. Αντίθετα, ευθύνη σας είναι να απορρίψετε τις άχρηστες συσκευές σε μια καθορισμένη μονάδα συλλογής απορριμμάτων για την ανακύκλωση άχρηστων ηλεκτρικών και ηλεκτρονικών εξοπλισμών. Η χωριστή συλλογή και ανακύκλωση των άχρηστων συσκευών θα συμβάλει στη διατήρηση των φυσικών πόρων και στη διασφάλιση ότι θα ανακυκλωθούν με τέτοιο τρόπο, ώστε να προστατευτεί η υγεία των ανθρώπων και το περιβάλλον. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να απορρίψετε τις άχρηστες συσκευές για ανακύκλωση, επικοινωνήστε με τις κατά τόπους αρμόδιες αρχές ή με το κατάστημα από το οποίο αγοράσατε το προϊόν.</p>
Magyar	<p>A hulladékhanyagok kezelése a magánháztartásokban az Európai Unióban Ez a szimbólum, amely a termék vagy annak csomagolásán van feltüntetve, azt jelzi, hogy a termék nem kezelhető együtt az egyéb háztartási hulladékkal. Az Ön feladata, hogy a készülték hulladékhanyagait eljuttassa olyan kijelölt gyűjtőhelyre, amely az elektronikus hulladékhanyagok és az elektronikus berendezések újrahasznosításával foglalkozik. A hulladékhanyagok elkülönített gyűjtése és újrahasznosítása hozzájárul a természeti erőforrások megőrzéséhez, egyúttal az is biztosítja, hogy a hulladék újrahasznosítása az egészségre és a környezetre nem ártalmas módon történjen. Ha tájékoztatást szeretne kapni azokról a helyekről, ahol leadhatja újrahasznosításra a hulladékhanyagokat, forduljon a helyi önkormányzathoz, a háztartási hulladék begyűjtésével foglalkozó vállalatokhoz vagy a termék forgalmazójához.</p>
Latvian	<p>Ietilgotāju atbrīvošanās no nederīgām ierīcēm Eiropas Savienības privātajās mājāsniecībās Šis simbols uz ierīces vai tās iepakojuma norāda, ka šo ierīci nedrīkst iznest kopā ar pārējām mājāsniecības atkritumiem. Jūs esat atbildīgs par atbrīvošanos no nederīgās ierīces, to nododot norādītajā savākšanas vietā, lai tīktu veikta noderīga elektriskā un elektroniskā aprīkojuma atbilstoša pārstrāde. Speciāla nederīgās ierīces savākšana un atbilstoša pārstrāde palīdz taupīt dabas resursus un nodrošina tādā atbilstoši pārstrādē, kas sargā cilvēku veselību un apkārtni vidi. Lai iegūtu papildu informāciju par to, kur atnest ierīci pārstrādei, lūdz, sazināties ar vietējo pašvaldību, mājāsniecības atkritumu savākšanas dienestu vai veikalu, kurš iegādājāties šo ierīci.</p>
Ukrainian	<p>Європейського Союзу користувачів приватних і підприємств Цей символ на продукті або на його упаковці означає, що цей виріб не можна викинути разом з рештою побутових відходів. Замість цього ви повинні доставити виріб до спеціального пункту збору електричного та електронного обладнання для його переробки. Це допоможе зберегти природні ресурси та гарантує, що переробка буде здійснюватися таким чином, який не шкодить здоров'ю людини та навколишньому середовищу. Для отримання додаткової інформації про те, куди можна доставити виріб для переробки, зверніться до місцевої влади, до підприємства, яке здійснює збір та переробку відходів, або до магазину, де ви купили виріб.</p>
Lithuanian	<p>Užtvarkytų prietaisų atliekų šalinimas namuose Europos Sąjungoje Šis simbolis yra ant produkto ar jo pakuotimo ir rodo, kad produktas negali būti išmestas kartu su kitomis namų ūkio atliekomis. Jūs privalote išmesti savo atliekamą įrangą atskirai, kad ji būtų tinkamai perdirbta ir išnaudota. Atskiras atliekamų įrenginių surinkimas ir perdirbimas, bus išsaugomi natūralūs išteklių ir užtikrinama, kad įranga yra perdirbta žmogaus sveikatai ir gamtą tausojančiu būdu. Dėl informacijos apie tai, kur galite išmesti atliekamą perdirbti skirtą įrangą kreipkitės į atitinkamą vietos tarnybą, namų ūkio atliekų išvežimo tarnybą arba į parduotuvę, kurioje perkote produktą.</p>
Polish	<p>Utylizacja zużytego sprzętu przez użytkowników domowych w Unii Europejskiej Symbol ten umieszczony na produkcie lub opakowaniu oznacza, że tego produktu nie należy wyrzucać razem z innymi odpadami domowymi. Użytkownik jest odpowiedzialny za dostarczenie zużytego sprzętu do wyznaczonego punktu gromadzenia zużytych urządzeń elektrycznych i elektronicznych. Gromadzenie osobno i recykling tego typu odpadów przyczynia się do ochrony zasobów naturalnych i jest bezpieczny dla zdrowia i środowiska naturalnego. Dalsze informacje na temat sposobu utylizacji zużytych urządzeń można uzyskać u odpowiedzialnych władz lokalnych, w przedsiębiorstwie zajmującym się usuwaniem odpadów lub w miejscu zakupu produktu.</p>
Portuguese	<p>Descarte de equipamentos por usuários em residências da União Europeia Este símbolo no produto ou na embalagem indica que o produto não pode ser descartado junto com o lixo doméstico. No entanto, é sua responsabilidade levar os equipamentos a serem descartados a um ponto de coleta designado para a reciclagem de equipamentos eletro-eletrônicos. A coleta separada e a reciclagem dos equipamentos no momento do descarte ajudam na conservação dos recursos naturais e garantem que os equipamentos serão reciclados de forma a proteger a saúde das pessoas e o meio ambiente. Para obter mais informações sobre onde descartar equipamentos para reciclagem, entre em contato com o escritório local de sua cidade, o serviço de limpeza pública de seu bairro ou a loja em que adquiriu o produto.</p>
Slovenian	<p>Postup poravnavečev v krajinskih Europske unije pri vyhadzovanju zariadenja v domácnosti používaní do odpadu Tento symbol na produkte alebo na jeho obale znamená, že nesmie byť vyhadzovaný s inými komunálnymi odpadmi. Namesto toho máte povinnos odvzdať toto zariadenie na zbernom mieste, kde sa zabezpečuje recyklácia elektrických a elektronických zariadení. Separovaný zber a recyklácia zariadenia určného na odpad pomôže chráni prírodné zdroje a zabezpečí taký spôsob recyklácie, ktorý bude chráni ľudské zdravie a životné prostredie. Ďalšie informácie o separovanom zbere a recyklácii získate na miestnom obecnom úrade, vo firme zabezpečujúcej zber vášho komunálneho odpadu alebo v predajni, kde ste produkt kúpili.</p>
Slovak	<p>Ravnanje z odpadno opremo v gospodinjstvih znanj Evropske unije Ta znak na izdelku ali embalaži izdelka pomeni, da izdelka ne smete odlagati skupaj z drugimi gospodinjstvenimi odpadki. Odpadno opremo ste dolžni oddati na določenem zbirnem mestu za recyklacijo odpadne elektrike in elektronske opreme. Z ločenim zbiranjem in recikliranjem odpadne opreme ob odlaganju boste pomagali ohraniti naravne vire in zagotovili, da bo odpadna oprema reciklirana tako, da se varuje zdravje ljudi in okolje. Več informacij o mestih, kjer lahko oddate odpadno opremo za recikliranje, lahko dobite na občini, v komunalnem podjetju ali trgovini, kjer ste izdelek kupili.</p>
Svenska	<p>Kassering av förbrukningsmaterial, för hem- och privatvårdare i EU Produkter eller produktförpackningar med den här symbolen får inte kasseras med vanligt hushållsaffall. I stället har du ansvar för att produkten lämnas till en behörig återvinningstation för hantering av el- och elektronprodukter. Genom att lämna kasserade produkter till återvinning hjälper du till att bevara våra gemensamma naturresurser. Dessutom skyddas både människor och miljön när produkter återvinns på rätt sätt. Kommunala myndigheter, sophanteringsföretag eller butiken där varen köptes kan ge mer information om var du lämnar kasserade produkter för återvinning.</p>

Chemical Substances

HP is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (*Regulation EC No 1907/2006 of the European Parliament and the Council*). A chemical information report for this product can be found at: www.hp.com/go/reach.

Battery disposal in the Netherlands



Dit HP Product bevat een lithium-mangane-dioxide batterij. Deze bevindt zich op de hoofdprintplaat. Wanneer deze batterij leeg is, moet deze volgens de geldende regels worden afgevoerd.

Battery disposal in Taiwan



廢電池請回收

Please recycle waste batteries.

Attention California users

The battery supplied with this product may contain perchlorate material. Special handling may apply. For more information, go to the following Web site:

www.dtsc.ca.gov/hazardouswaste/perchlorate

EU battery directive



English	<p>European Union Battery Directive This product contains a battery that is used to maintain data integrity of real time clock or product settings and is designed to last the life of the product. Any attempt to service or replace this battery should be performed by a qualified service technician.</p>
Français	<p>Directive sur les batteries de l'Union Européenne Ce produit contient une batterie qui permet de maintenir l'intégrité des données pour les paramètres du produit ou l'horloge en temps réel et qui a été conçue pour durer aussi longtemps que le produit. Toute tentative de réparation ou de remplacement de cette batterie doit être effectuée par un technicien qualifié.</p>
Dutch	<p>Batterierichtlijn der Europese Unie Dit product bevat een batterij die wordt gebruikt voor een juiste tijdsaanduiding van de klok en het behoud van de productinstellingen. Bovendien is deze ontworpen om gedurende de levensduur van het product mee te gaan. Het onderhoud of de vervanging van deze batterij moet door een gekwalificeerde onderhoudstechnicus worden uitgevoerd.</p>
Italiano	<p>Direttiva dell'Unione Europea relativa alla raccolta, al trattamento e allo smaltimento di batterie e accumulatori Questo prodotto contiene una batteria utilizzata per preservare l'integrità dei dati dell'orologio in tempo reale o delle impostazioni del prodotto e la sua durata si intende pari a quella del prodotto. Eventuali interventi di riparazione o sostituzione della batteria devono essere eseguiti da un tecnico dell'assistenza qualificato.</p>
Español	<p>Directiva sobre baterías de la Unión Europea Este producto contiene una batería que se utiliza para conservar la integridad de los datos del reloj de tiempo real o la configuración del producto y está diseñada para durar toda la vida útil del producto. El mantenimiento o la sustitución de dicha batería deberá realizarla un técnico de mantenimiento cualificado.</p>
Czech	<p>Směrnice Evropské unie pro nakládání s bateriemi Tento výrobek obsahuje baterii, která slouží k uchování správných dat hodin reálného času nebo nastavení výrobku. Baterie je navržena tak, aby vydržela celou životnost výrobku. Jákýkoliv pokus o opravu nebo výměnu baterie by měl provést kvalifikovaný servisní technik.</p>
Dansk	<p>EU's batteridirektiv Produktet indeholder et batteri, som bruges til at vedligeholde dataintegriteten for realtids- eller produktindstillinger og er beregnet til at holde i hele produktets levetid. Service på batteriet eller udsifting af det foretages af en uddannet servicetekniker.</p>
Nederlands	<p>Richtlijn batterijen voor de Europese Unie Dit product bevat een batterij die wordt gebruikt voor een juiste tijdsaanduiding van de klok en het behoud van de productinstellingen. Bovendien is deze ontworpen om gedurende de levensduur van het product mee te gaan. Het onderhoud of de vervanging van deze batterij moet door een gekwalificeerde onderhoudstechnicus worden uitgevoerd.</p>
Eesti	<p>Europa Liidu aku direktiiv Toode sisaldab akut, mida kasutatakse reaajaja keela andmeühitsuse või toote sätete säilitamiseks. Aku on valmistatud kestma terve toote kasutusaja. Akut tohib hooldada või vahetada ainult kvalifitseeritud hooldustehnik.</p>
Slovenščina	<p>Evropska unija direktiva o baterijah in akumulatorjih Toda naprava vsebuje baterijo, ki zagotavlja natančnost podatkov ure in realnem času ali nastavitev izdelka v celotni življenjski dobi izdelka. Kakršno koli popravilo ali zamenjavo te baterije lahko izvede le pooblaščen tehnik.</p>
Ελληνικά	<p>Οδηγία της Ευρωπαϊκής Ένωσης για τις ηλεκτρικές στήλες Αυτό το προϊόν περιλαμβάνει μια μπαταρία, η οποία χρησιμοποιείται για τη διατήρηση της ακριβείας των δεδομένων ρολογιού πραγματικού χρόνου ή των ρυθμίσεων προϊόντος και έχει σχεδιαστεί έτσι ώστε να διαρκέσει όσο και το προϊόν. Τυχόν απόπειρες επιδιόρθωσης ή αντικατάστασης αυτής της μπαταρίας θα πρέπει να πραγματοποιούνται από κατάλληλα εκπαιδευμένο τεχνικό.</p>
Magyar	<p>Az Európai unió telepek és akkumulátorok direktívája A termék tartalmaz egy elemet, melynek feladata az, hogy biztosítsa a valós idejű óra vagy a termék beállításainak adatintegritását. Az elem úgy van tervezve, hogy végig kitartson a termék használatá során. Az elem bármilyen javítását vagy cseréjét csak képzett szakember végezheti el.</p>
Latvian	<p>Eiropas Savienības Bateriju direktīva Produktam ir baterija, ko izmanto reālā laika pulksteņa vai produkta iestatījumu datu integritātes saglabāšanai, un tā ir paredzēta visam produkta dzīves ciklam. Jebkura apkope vai baterijas nomaiņa ir jāveic atbilstoši kvalificētam darbiniekam.</p>
Polish	<p>Europejs Sąjungos baterijų ir akumuliatorių direktyva Šiame gaminyje yra baterija, kuri naudojama, kad būtų galima prižiūrėti realaus laiko laikrodžio veikimą arba gaminio nuostatą; ji skirta veikti visą gaminio eksploatavimo laiką. Bet kokius šios baterijos aptarnavimo arba kelimo darbus turi atlikti kvalifikuotas aptarnavimo technikas.</p>
Portuguese	<p>Direktiva Unii Europenice privind bateriile și acumulatorii Produsul conține o baterie care este utilizată pentru a menține integritatea datelor ceasului de timp real sau setărilor produsului și care este proiectată să funcționeze pe întreaga durată de viață a produsului. Orice lucrare de service sau de înlocuire a acestei baterii trebuie efectuată de un tehnician de service calificat.</p>
Russian	<p>Директива за батерии на Европейския съюз Този продукт съдържа батерия, която се използва за поддържане на целостта на данните на часовника в реално време или настройките за продукта, създадена на издръжливост през целия живот на продукта. Сервизът или замяната на батерията трябва да се извършва от квалифициран техник.</p>
Romanian	<p>Directiva Uniunii Europene referitoare la baterii Acest produs conține o baterie care este utilizată pentru a menține integritatea datelor ceasului de timp real sau setărilor produsului și care este proiectată să funcționeze pe întreaga durată de viață a produsului. Orice lucrare de service sau de înlocuire a acestei baterii trebuie efectuată de un tehnician de service calificat.</p>

Set the Energy Save mode

When you turn off the HP Photosmart product, it goes into the Energy Save mode by default. This makes the product more energy efficient, but also means it can take longer than expected to turn the product on. Additionally, when turned off the Energy Save mode, the HP Photosmart product might not be able to complete some automated maintenance tasks. If you routinely see messages on the display about a real-time clock failure or if you want to reduce the start-up time, you can turn off the Energy Save mode.



NOTE: This feature is on by default.

To set the Energy Save mode time or turn off the Energy Save mode

1. From the Home screen, touch the right directional key, and then touch the **Setup** icon.



2. Touch **Preferences**.
3. Touch the down arrow to scroll through the options, and then touch **Energy Save Mode**.
4. Touch **After 5 minutes** or **Off**.

Auto Power-Off

Auto Power-Off is automatically enabled by default when you turn on the printer. When Auto Power-Off is enabled, the printer will automatically turn off after two hours of inactivity to help reduce energy use. Auto Power-Off is automatically disabled when the printer establishes a wireless or Ethernet (if supported) network connection. You can change the Auto Power-Off setting from the control panel. Once you change the setting, the printer will maintain the setting that you choose. **Auto Power-Off turns the printer off completely, so you must use the power button to turn the printer back on.**

To enable or disable Auto Power-Off

1. From the Home screen, touch the right directional key, and then touch the **Setup** icon.



2. Touch **Preferences**.
3. Touch the down arrow to scroll through the options, and then touch **Auto-off Settings**.
4. Touch **Enabled** or **Disabled**.

 **TIP:** If you are printing through a wireless or Ethernet connection over a network, Auto Power-Off should be disabled to ensure that print jobs do not get lost. Even when Auto Power-Off is disabled, the printer enters a Sleep mode after five minutes of inactivity to help reduce energy use.

Sleep mode

- Power usage is reduced while in Sleep mode.
- After initial setup of printer, the printer will enter Sleep mode after five minutes of inactivity.
- The time to Sleep mode cannot be changed.

Regulatory notices

The HP Photosmart meets product requirements from regulatory agencies in your country/region.

This section contains the following topics:

- [Regulatory model identification number](#)
- [FCC statement](#)
- [VCCI \(Class B\) compliance statement for users in Japan](#)
- [Notice to users in Japan about the power cord](#)
- [Notice to users in Korea](#)
- [European Union Regulatory Notice](#)

Regulatory model identification number

For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is SNPRH-1001. This regulatory number should not be confused with the marketing name (**HP Photosmart 5510 e-All-in-One Printer**, etc.) or product numbers (CQ176A, etc.).

FCC statement

FCC statement

The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For further information, contact:

Manager of Corporate Product Regulations
Hewlett-Packard Company
3000 Hanover Street
Palo Alto, Ca 94304
(650) 857-1501

Modifications (part 15.21)

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by HP may void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

VCCI (Class B) compliance statement for users in Japan

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

Notice to users in Japan about the power cord

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Notice to users in Korea

B 급 기기
(가정용 방송통신기기)

이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

European Union Regulatory Notice

Products bearing the CE marking comply with the following EU Directives:

- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC
- Ecodesign Directive 2009/125/EC, where applicable

CE compliance of this product is valid only if powered with the correct CE-marked AC adapter provided by HP.

If this product has telecommunications functionality, it also complies with the essential requirements of the following EU Directive:

- R&TTE Directive 1999/5/EC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) that are listed in the EU Declaration of Conformity issued by HP for this product or product family and available (in English only) either within the product documentation or at the following web site: www.hp.com/go/certificates (type the product number in the search field).

The compliance is indicated by one of the following conformity markings placed on the product:

	<p>For non-telecommunications products and for EU harmonized telecommunications products, such as Bluetooth® within power class below 10mW.</p>
	<p>For EU non-harmonized telecommunications products (If applicable, a 4-digit notified body number is inserted between CE and !).</p>

Please refer to the regulatory label provided on the product.

The telecommunications functionality of this product may be used in the following EU and EFTA countries: Austria, Belgium, Bulgaria, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Liechtenstein, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovak Republic, Slovenia, Spain, Sweden, Switzerland, and United Kingdom.

The telephone connector (not available for all products) is intended for connection to analogue telephone networks.

Products with wireless LAN devices

- Some countries may have specific obligations or special requirements about the operation of Wireless LAN networks such as indoor use only or restrictions of the channels available. Please make sure that the country settings of the wireless network are correct.

France

- For 2.4-GHz Wireless LAN operation of this product, certain restrictions apply: This product may be used indoors for the entire 2400-MHz to 2483.5-MHz frequency band (channels 1 to 13). For outdoor use, only the 2400-MHz to 2454-MHz frequency band (channels 1 to 7) may be used. For the latest requirements, see www.arcep.fr.

The point of contact for regulatory matters is:

Hewlett-Packard GmbH, Dept./MS: HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, GERMANY

Regulatory wireless statements

This section contains the following regulatory information pertaining to wireless products:

- [Exposure to radio frequency radiation](#)
- [Notice to users in Brazil](#)
- [Notice to users in Canada](#)
- [Notice to users in Taiwan](#)

Exposure to radio frequency radiation

Exposure to radio frequency radiation



Caution The radiated output power of this device is far below the FCC radio frequency exposure limits. Nevertheless, the device shall be used in such a manner that the potential for human contact during normal operation is minimized. This product and any attached external antenna, if supported, shall be placed in such a manner to minimize the potential for human contact during normal operation. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

Notice to users in Brazil

Aviso aos usuários no Brasil

Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário. (Res. ANATEL 282/2001).

Notice to users in Canada

Notice to users in Canada/Note à l'attention des utilisateurs canadiens

For Indoor Use. This digital apparatus does not exceed the Class B limits for radio noise emissions from the digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. The internal wireless radio complies with RSS 210 and RSS GEN of Industry Canada.

Utiliser à l'intérieur. Le présent appareil numérique n'émet pas de bruit radioélectrique dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada. Le composant RF interne est conforme à la norme RSS-210 and RSS GEN d'Industrie Canada.

Notice to users in Taiwan

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫藥用電波輻射性電機設備之干擾。

Index

A

after the support period 32

B

buttons, control panel 6

C

control panel

buttons 6

features 6

copy

specifications 38

customer support

warranty 32

E

environment

Environmental product stewardship
program 39

environmental specifications 38

I

interface card 25, 26

N

network

interface card 25, 26

P

phone support 31

phone support period

period for support 31

print

specifications 38

R

recycle

ink cartridges 40

regulatory notices

regulatory model identification

number 44

wireless statements 47

S

scan

scan specifications 38

system requirements 38

T

technical information

copy specifications 38

environmental specifications 38

print specifications 38

scan specifications 38

system requirements 38

W

warranty 32

