



Printed in [English]
© 2011 Hewlett-Packard Development Company, L.P.



CQ809-90047

Web Services

Your new HP printer supports the following web services. To use Web Services, your printer needs a wireless network connection to the Internet.

ePrint

Use HP's free ePrint service to print email and attachments. If you can email it, you can print it. To register for ePrint, visit www.eprintcenter.com.

eFax

Send and receive faxes with eFax – without a phone line – using a web-based faxing service. This service is free when you send up to 20 pages and receive up to 20 pages per month. To register for eFax, visit www.eFax.com.

Note: eFax may not be available in all countries/regions.

Print Apps

Print web content without using a computer. Select Apps on the printer's Home screen to print pages for the whole family. Print coupons, recipes, maps, news, coloring pages, and more.



Power On Troubleshooting

If your printer does not turn on, try these steps:

1. Unplug the power cord.
2. Plug the power cord back in, and then press the button.

Take care to press the button only once.



Network Troubleshooting

Run a Wireless Network Test to check that your printer is on the network.

1. On the printer display, touch the **Wireless** icon to open the **Wireless** menu.
2. Touch **Settings**, then select **Wireless Network Test**. A Wireless Network Test report prints when the test completes.

If your printer is not connected to the network:

1. Touch the **Wireless** icon to open the **Wireless** menu.
2. Select **Settings**, then **Wireless Setup Wizard**.
3. Follow the instructions on the screen.

For more information, go to the HP Wireless Printing Center website (www.hp.com/go/wirelessprinting).

Auto Wireless Connect

Auto Wireless Connect automatically configures the printer with your wireless network settings. Follow the instructions on the printer display to set up the printer, and then insert the printer software CD. The software guides you through the software installation.


Advanced printer controls on your mobile device

Download an HP mobile app to bring premium print controls to your mobile device—print, scan, copy and more:

- Access advanced printer controls on your mobile device.
- Scan directly to social network sites.
- Scan directly to an email account.

For supported devices and functionality, see www.hp.com/go/mobile-printing-solutions.


Home Screen

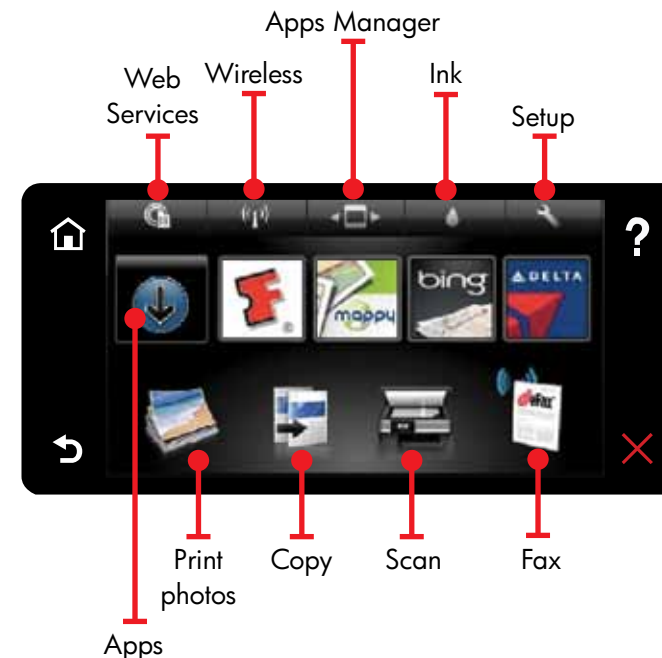

Touch a button or icon to activate. Swipe left or right to scroll through the Apps.

Note: eFax may not be available in all countries/regions.

Get to Know

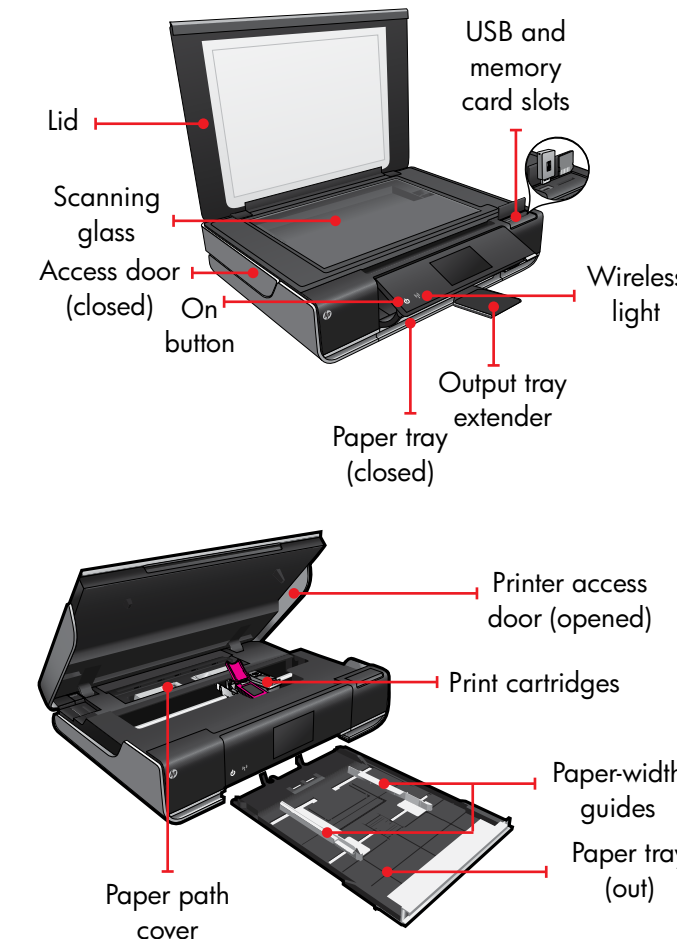


ENVY¹¹⁰ Series




ENVY 110 Series

Snelle referentieids

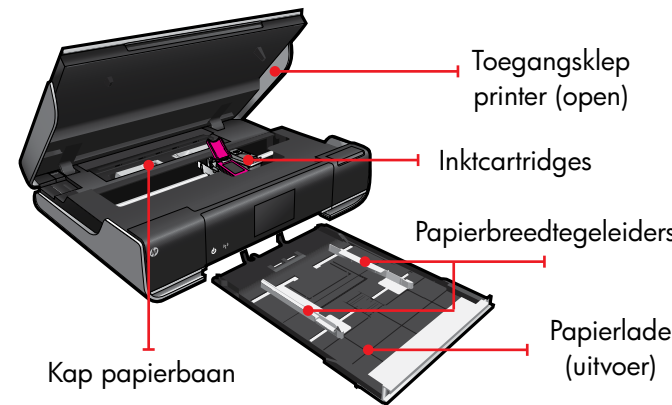

Startscherm

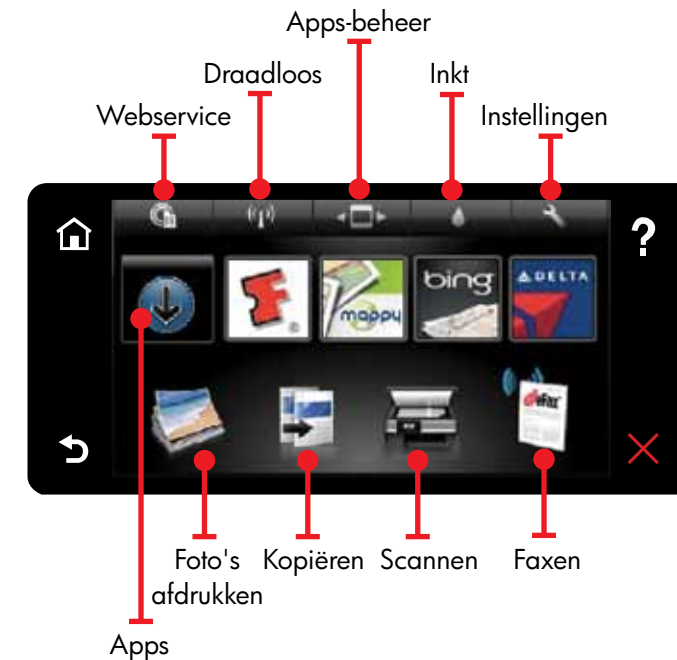

Raak een knop of pictogram aan om te activeren. Beweeg uw vingertop naar links of rechts om door de Apps te bladeren.

Opmerking: eFax is mogelijk niet in alle landen/regio's beschikbaar.

Automat. draadloze verbinding

Automat. draadloze verbinding configureert uw printer automatisch met uw draadloze netwerkinstellingen. Volg de instructies op het printerscherm om de printer in te stellen en plaats vervolgens de software-cd van de printer. De softwaregidsen leiden u door de software-installatie.

Geavanceerde printerbesturing op uw mobiel apparaat

Download een HP-mobiele app voor premium printerbesturing op uw mobiel apparaat - afdrukken, scannen, kopiëren en meer:

- Toegang tot geavanceerde printerbesturing op uw mobiel apparaat.
- Rechtstreeks scannen naar sociale netwerksites.
- Rechtstreeks scannen naar een e-mailaccount.

Voor ondersteunde apparaten en functionaliteit, zie www.hp.com/go/mobile-printing-solutions.



Problemen oplossen met het inschakelen

Volg deze stappen als de printer niet wordt ingeschakeld:

1. Koppel het netsnoer los.
2. Sluit het netsnoer achteraan aan en druk op de ©-knop.

Let erop om de knop © slechts 1 keer in te drukken.



Problemen oplossen met het netwerk

Voer een Test Draadloos netwerk uit om na te gaan of uw printer in het netwerk wordt herkend.

1. Raak op het printerbeeldscherm het pictogram **Draadloos** aan om het menu **Draadloos** te openen.
2. Raak **Instellingen** aan en kies dan **Test draadloos netwerk**.

Een rapport Test Draadloos netwerk wordt afgedrukt na het voltooien van de test.

De printer is niet verbonden met een netwerk:

1. Raak het pictogram **Draadloos** aan om het menu **Draadloos** te openen.
2. Selecteer **Instellingen** en dan **Wizard Draadloos instellen**.
3. Volg de aanwijzingen op het scherm.

Ga voor meer informatie naar de HP-website centrum voor draadloos afdrukken (www.hp.com/go/wirelessprinting).

Webservices

Uw nieuwe HP-printer ondersteunt volgende webservices. Om de Webservices te gebruiken moet uw printer draadloos met internet zijn verbonden.

ePrint

Gebruik HP's gratis ePrint service om e-mail en bijlagen af te drukken. Als u het kunt mailen, kunt u het afdrukken. Surft voor registratie voor ePrint naar www.eprintcenter.com.

eFax

Faxen versturen en ontvangen en eFax – zonder telefoonlijn – met een webgebaseerde faxdienst. Deze service is gratis wanneer u tot 20 pagina's per maand verstuurt en ontvangt. Surf voor registratie voor eFax naar www.eFax.com.

Opmerking: eFax is mogelijk niet in alle landen/regio's beschikbaar.

Apps afdrukken

Webinhoud afdrukken zonder een computer. Selecteer Apps op het startscherm van de printer om pagina's af te drukken voor het hele gezin. Druk bonnen, recepten, kaarten, nieuws, kleurplaten af en nog veel meer.



Printed in [English]
© 2011 Hewlett-Packard Development Company, L.P.



CQ809-90047