


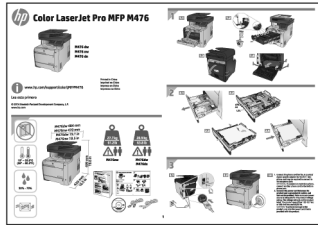

Color LaserJet Pro MFP M476 Getting Started Guide

! IMPORTANT:

Follow **Steps 1 - 3** on the printer hardware setup poster, then continue with step 4 to the right.



www.hp.com/support/colorljMFPM476

www.register.hp.com

4. Initial setup on the control panel


After turning on the printer, wait for it to initialize. Follow the prompts on the control panel to configure these settings:

- Language
- Location
- Default Settings

Under **Default Settings** select one of these options:

- Self-managed: Optimized default settings for a guided experience on setups, configurations, and updates.
- IT-managed: Optimized default settings for fleet manageability with enhanced security.

Settings are fully customizable after initial setup.

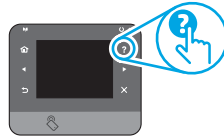

NOTE: Select **Print Information Page** to print a page that instructs how to change the default settings.

NOTE: Touch the Help ? button on the printer control panel to access help topics.

5. Select a Connection Method and Prepare for Software installation

USB connection directly between the printer and the computer

Use an A-to-B type USB cable.

Windows

1. For Windows, except Windows 8, 8.1, or RT, do not connect the USB cable before installing the software. If the cable is already connected, disconnect it before continuing. The installation process prompts to connect the cable at the appropriate time.
2. Continue with "Locate or download the software installation files."

NOTE: During software installation, select the option to "Directly connect this computer using a USB cable."

Mac

1. For Mac, connect the USB cable between the computer and the printer before installing the software.
2. Continue with "Locate or download the software installation files."

Built-in wireless network connection (nw and dw models only)

1. To connect the printer to a wireless (Wi-Fi) network, on the printer control panel, touch the Wireless button.
2. Touch **Wireless Menu**, and then touch **Wireless Setup Wizard**. Select the network name from the SSID list, or enter the network name if it is not listed.
3. Use the keyboard to enter the passphrase, and then touch the **OK** button.
4. Wait while the printer establishes a network connection.
5. On the printer control panel, touch the Network button. If an IP address is listed, the network connection has been established. If not, wait a few more minutes and try again. Note the IP address for use during software installation. **Example IP address:** 192.168.0.1
6. To print from a computer, continue with "Locate or download the software installation files." To print from a phone or tablet only, continue with "Mobile and wireless printing."

NOTE: During software installation, select the option to "Connect through a network."

Wired (Ethernet) network connection

Use a standard network cable.

1. Connect the network cable to the printer and to the network. Wait a few minutes for the printer to acquire a network address.
2. On the printer control panel, touch the Network button. If an IP address is listed, the network connection has been established. If not, wait a few more minutes and try again. Note the IP address for use during software installation. **Example IP address:** 192.168.0.1

To manually configure the IP address, see "Manually configure the IP address."

3. Continue with "Locate or download the software installation files."

NOTE: During software installation, select the option to "Connect through a network."

Manually configure the IP address

See the printer User Guide for information on how to manually configure the IP address www.hp.com/support/colorljMFPM476.

6. Locate or download the software installation files



Install from the printer CD

For Windows, the software installation files are provided on the CD that came with the printer.

For OS X, the installer file on the CD includes a link to download the files from the Web.

Install Notes

For more details about the software for the printer, see the Install Notes file on the printer CD.



Download from the Web

1. Go to www.hp.com/support/colorijMFP476.
2. Under **Download** options, click **Drivers**, and then click **Software & Firmware**.
3. Select the printer model from the list.
4. Select the operating system.
5. Determine which software option to use, and then click the **Download** button next to it.

7. Install the software

Windows full solution

1. Insert the printer CD into the computer, or launch the software installation file downloaded from the Web.
2. The software installer detects the language of the operating system, and then it displays the main menu of the installation program in the same language. When installing from the CD, if the installer program does not start after 30 seconds, browse the CD drive on the computer and launch the file named SETUP.EXE.
3. The **Software Selection** screen details the software to be installed.
 - The recommended software installation includes the print driver and software for all available printer features.
 - To customize the software installed, click the **Customizable software selections** link. When finished, click the **Next** button.
4. Follow the on-screen instructions to install the software.
5. When prompted to select a connection type, select the appropriate option for the type of connection:



NOTE: When connecting through a network, the easiest way to detect the printer is to select **Automatically find my printer on the network**.

6. (Optional) For printers on a network, at the end of the software installation process, set up fax and scan features by using the **Fax Setup Wizard**, **Scan to E-mail Wizard**, and the **Scan to Network Folder Wizard**. This is a convenient way to configure these features. See ["Set up scan features for printers on a network"](#) for more information.

OS X full solution

1. Launch the software installation .dmg file that you downloaded from the Web.
2. The software installer detects the language of the operating system, and then it displays the main menu of the installation program in the same language.
3. The **Installation Options** screen details the software to be installed.
 - For a standard installation, click the **Install** button now.
 - For a custom installation, click the **Customize** button. On the screen that opens, select the components to install, and then click the **Install** button.
4. Follow the on-screen instructions to install the software.
5. At the end of the software installation process, use the **HP Utility Setup Assistant** to configure printer options.

OS X basic installation

To install basic print and fax drivers without running the HP full solution software from CD or hp.com download, follow these steps:

1. Connect the printer to the computer or network.
2. From **System Preferences**, click **Printers and Scanners**, then the plus button on the bottom left, and select **M476** using the driver named either AirPrint or HP Printer.

Readiris Pro for HP

Download this free software to enable extra scanning features, including Optical Character Recognition (OCR). During software installation, click the **More Options** item in the left pane, and then select **Web Support** to download this software.

To download the software from the Web, go to www.hp.com/support/colorijMFP476, select **Drivers**, and then click **Software & Firmware**.



8. Mobile and wireless printing (nw and dw models only - optional)

To print from a phone or tablet, connect the device to the same wireless network as the printer.

Apple iOS devices (AirPrint): Open the item to print, and select the **Action** icon. Select **Print**, select the printer, and then select **Print**.

Newer Android devices (4.4 or newer): Open the item to print, and select the **Menu** button. Select **Print**, select the printer, and select **Print**.

Some devices require downloading the HP Print Service plugin app from the Google Play store.

Older Android Devices (4.3 or older): Download the HP ePrint app from the Google Play store.

Windows Phone: Download the HP AiO Remote app from the Windows Store.

Learn More About Mobile Printing

To learn more about other mobile printing options, including additional ePrint solutions, scan the QR code, or see the "Mobile printing" section of the user guide.



HP Wireless Direct

HP Wireless Direct enables close-proximity printing from a wireless mobile device directly to an HP Wireless Direct-enabled printer without requiring a connection to a network or the Internet.

Enable HP Wireless Direct

1. On the printer control panel, touch the Wireless button. Touch **Wireless Menu**, and then touch **Wireless Direct**.
2. Touch **On/Off**, and then touch **On**.
3. For secure printing, touch **Security**, and then touch **On**. Note the passphrase that displays. Use this passphrase to allow access to the mobile devices. To allow unsecured printing, touch **Security**, and then touch **Off**.

For more information on wireless printing and wireless setup, go to www.hp.com/go/wirelessprinting.




9. Set up HP ePrint via email (optional)

Use HP ePrint via email to print documents by sending them as an email attachment to the printer's email address from any email enabled device, even from devices that are not on the same network.

To use HP ePrint via email, the printer must meet these requirements:

- The printer must be connected to a wired or wireless network and have Internet access.
- HP Web Services must be enabled on the printer, and the printer must be registered with HP Connected.

Enable HP Web Services

1. From the Home screen on the printer control panel, touch the Web Services  button.
2. Touch the **Enable Web Services** button. The printer enables Web Services, and then prints an information page. The information page contains a printer code necessary to register the HP printer at HP Connected.
3. Go to www.hpconnected.com to create an HP ePrint account and complete the setup process.



10. Set up scan features for printers on a network (optional)

The printer includes **Scan to E-mail** and **Scan to Network Folder** features that scan files and send them as an email attachment or save them in a folder on the network. The printer must be connected to a wired or wireless network. To configure these options, first obtain the following information:

- For the **Scan to Email** feature, obtain the SMTP server name, SMTP port number, and authentication information. Contact the email/Internet service provider or system administrator for this information. SMTP server names and port names are typically easy to find by doing an Internet search. For example, search for terms like "gmail smtp server name" or "yahoo smtp server name."
- For the **Scan to Network Folder** feature, confirm that a shared network folder with proper permissions is set up, and know the path to that folder on the network.




NOTE: For more help on setting up **Scan to Email** and **Scan to Network Folder**, see the User Guide, or go to www.hp.com/support/colorijMFPM476 and search using keywords "scan to email" or "scan to network folder."

Windows

Some HP products include driver installation from a software CD. At the end of this installation is an option to **Setup Scan to Folder and Email**. The setup wizards include the options for basic configuration.

Scan to Email Setup Wizard

1. Click **Start**, and then click **Programs**.
2. Click **HP**, click the name of the product, and then click **Scan to E-mail Wizard**.
3. In the **Outgoing Email Profiles** dialog, click the **New** button. The **Scan to Email Setup** dialog opens.
4. On the **1. Start** page, enter the **Email Address** and **Display Name**, and then click **Next**. Creating a security PIN is optional.
5. On the **2. Authenticate** page, enter the **SMTP Server** and **Port Number**.

 **NOTE:** In most cases, the default port number does not need to be changed.

6. If you are using Google™ Gmail for email service, select the **Always use secure connection (SSL/TLS)** check box.
7. If the SMTP server requires authentication to send an email, select the **Email Log-in Authentication** check box, and then enter the user ID and password. Click **Next**.
8. On the **4. Finish** page, verify all the settings are correct, and click **Finish**.

Scan to Network Folder Setup Wizard

1. Click **Start**, and then click **Programs**.
2. Click **HP**, click the name of the product, and then click **Scan to Network Folder Wizard**.
3. In the **Network Folder Profiles** dialog, click the **New** button. The **Scan to Network Folder Setup** dialog opens.
4. On the **1. Start** page, enter the **Display Name** and **Destination Folder**, and then click **Next**.

TIP: Click the **Browse** button to locate the folder.


5. To create a shortcut to the network folder on the computer desktop, select the **Create a Desktop shortcut to the network folder** check box, and click **Next**. Creating a security PIN is optional.
6. On the **2. Authenticate** page, enter the Windows® User name and Password, and click **Next**.
7. On the **3. Configure** page, make sure that the default scan settings are correct, and then enter a filename prefix in the **Filename Prefix** field, and click **Next**.
8. On the **4. Finish** page, verify all the settings are correct, and click **Save and Test**.
9. Click **Finish** to complete the configuration.

OS X

Open the HP Utility by clicking the HP Utility icon on the Dock, or click the **Go** menu, and then double-click **HP Utility**.

Scan to Email

1. Click the **System** tab, then click the **Administration** link, and set the Scan to **Email** option to **On**.
2. Click the **Scan** tab, then click the **Outgoing E-mail Profiles** link, and click the **New** button.
3. In the **E-mail Address** area, fill in the required fields.
4. In the **SMTP Server Settings** area, fill in the required fields.

 **NOTE:** In most cases, the default port number does not need to be changed.

5. If the SMTP server requires authentication to send an email, fill in the required fields in the **SMTP Authentication** area. Creating a security PIN is optional.
6. Configure email preferences in the **E-mail Message Preferences** area.
7. Review all the information, and then click **Save and Test**.

Scan to Network Folder

1. Click the **System** tab, then click the **Administration** link, and set the **Scan to Network Folder** option to **On**.
2. Click the **Scan** tab, make sure the **Network Folder Setup** link is highlighted.
3. On the **Network Folder Configuration** page, click the **New** button.
4. In the **Network Folder Configuration** area, fill in the required fields. Creating a security PIN is optional.
5. In the **Scan Settings** area, fill in the required fields.
6. Review all the information, and then click **Save and Test**.




11. Set up fax (optional)

11.1 Connect the printer

The printer is an analog device. HP recommends using the printer on a dedicated analog telephone line.


NOTE: Some countries/regions might require an adapter for the phone cord that came with the printer.

Connect the phone cord that came with the printer to the Fax port on the printer and to the telephone jack on the wall.

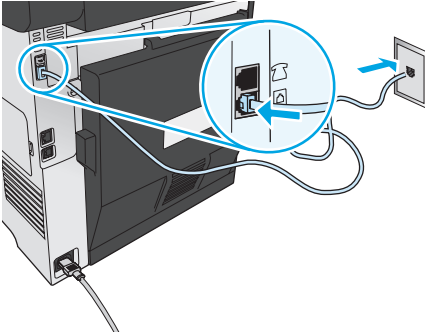

i How do I connect an answering machine or extension phone?

1. Remove the plug from the phone port.
2. Disconnect the answering machine phone cord from the phone jack, and then connect it to the phone port on the printer.
3. Connect the phone cord that came with the printer to the fax port on the printer and to the telephone jack on the wall.

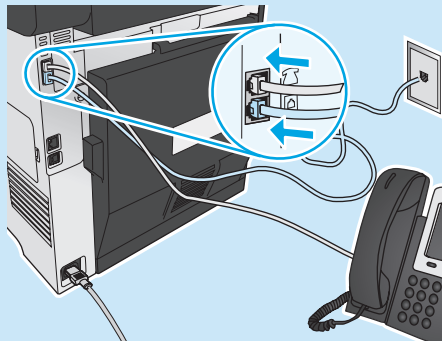

i How do I set up HP printers in digital phone environments?

HP printers are designed specifically for use with traditional analog phone services. For a digital phone environment (such as DSL/ADSL, PBX, ISDN, or FoIP), digital-to-analog filters or converters might be necessary when setting up the printer for fax.

Note: Depending on the phone company, the printer might not be compatible with all digital service lines or providers, in all digital environments, or with all digital-to-analog converters. Contact the phone company to determine which setup options are best.

Note: When setting up ring pattern detection in a PBX phone system that has different ring patterns for internal and external calls, make sure to dial the printer fax number using an external number for recording the ring pattern.

11.2 Configure the printer

Configuring the fax time, date, and header settings is required to use the fax feature. The easiest method is to use the **Fax Set-Up Utility**. Alternately, configure these and other basic fax settings in the **Basic Setup** menu.

Fax Set-Up Utility

1. From the Home screen on the printer control panel, touch the Setup button.
2. Select **Fax Setup**, and then select **Fax Set-Up Utility**.
3. Follow the on-screen prompts to configure the essential fax settings.

Basic Setup menu

1. From the Home screen on the printer control panel, touch the Setup button.
2. Select **Fax Setup**, and then select **Basic Setup**.
3. Select **Time/Date**.
4. Select the 12-hour clock or 24-hour clock.
5. Use the keypad to enter the current time, and then touch the **OK** button.
6. Select the date format.
7. Use the keypad to enter the current date, and then touch the **OK** button.
8. Select **Fax Header**.
9. Use the keypad to enter the fax number, and then touch the **OK** button.

NOTE: The maximum number of characters for the fax number is 20.

10. Use the keypad to enter your company name or header, and then touch the **OK** button.
To enter special characters that are not on the standard keypad, touch the **@#*** button to open a keypad that contains special characters.

NOTE: The maximum number of characters for the fax header is 40.

i Learn more!

For more information about other ways to send faxes, such as scheduling a fax to be sent later or sending faxes from a computer, see the user guide www.hp.com/support/colorijMFPM476.

For information about configuring the printer as a stand-alone fax machine, or for use with an answering machine or extension phone, see the user guide on the printer CD.

Troubleshooting

User guide

The user guide includes printer usage and troubleshooting information. It is available on the printer CD and on the Web:

1. Go to www.hp.com/support/colorjMFPM476.
2. Click **Manuals**.

For Windows, the user guide is copied to the computer during the recommended software installation.


Windows® XP, Windows Vista®, and Windows® 7:

Click **Start**, select **Programs** or **All Programs**, select **HP**, select the folder for the HP printer, and then select **Help**.

Windows® 8:


On the **Start** screen, right-click an empty area on the screen, click **All Apps** on the app bar, click the icon with the printer's name, and then select **Help**.

Check for firmware updates

1. From the Home screen on the printer control panel, touch the Setup  button.
2. Scroll to and open the **Service** menu.
3. Select **LaserJet Update**.
4. Select **Check for Updates Now**.

Control panel help

Touch the Help  button on the printer control panel to access help topics.

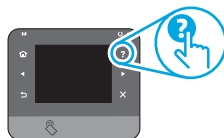

Additional support resources

For more information about setting up the printer scan the QR code.

For HP's all-inclusive help for the printer, go to www.hp.com/support/colorjMFPM476:

- Solve problems
- Find advanced configuration instructions
- Download software updates
- Join support forums
- Find warranty and regulatory information
- Mobile printing resources


Wired (Ethernet) network connection

- Verify that the printer is attached to the correct network port using a cable of the correct length.
- Verify the lights next to the network port are lit.
- Verify the print driver is installed on the computer.
- Test the network connection by pinging the network:
 - Windows:** Click **Start** > **Run**. Type **cmd**, and press **Enter**. Type **ping**, type a space, type the printer IP address, and then press **Enter**.
Example IP address: 192.168.0.1
 - OS X:** Open the Network Utility, and type the IP address in the **ping** pane. Press **Enter**. **Example IP address:** 192.168.0.1
- If the window displays round-trip times, the network is working.
- If the ping does not work, try restarting the printer and recheck all of the connection steps.

Wireless network connection (nw and dw only)



- Verify that the network cable is not connected. The printer cannot connect to a wireless network when a network cable is connected.
- Verify that the printer and wireless router are turned on and have power. Also make sure the wireless switch is turned on.
- Verify that the printer is within the range of the wireless network. For most networks, the printer must be within 30 m (100 ft) of the wireless access point (wireless router).
- Verify the print driver is installed on the computer.
- Verify that the computer and printer connect to the same wireless network.
- For Mac, verify that the wireless router supports Bonjour.
- Restart the wireless router.

Perform the wireless diagnostic test

1. From the Home screen on the printer control panel, touch the Setup  button.
2. Select **Self Diagnostics**, and then select **Run Wireless Test**.

Fax troubleshooting


Verify the physical connection

- Verify that the phone cord is connected to the fax  port on the back of the printer and to the wall jack.
- For an extension phone or other additional device, verify the phone cord is connected to the telephone  port on the back of the printer and to the device.
- If outgoing phone calls fail because no dial tone is detected or the line is busy, connect to a different phone line.
- For Fax over IP Service, reduce the fax speed and turn off **Error Correction Mode** from the **Fax Settings** menu on the printer control panel.

Verify the printer fax settings

- To use a voice-mail service from the phone company or service provider, make sure that the printer **Rings to Answer** setting is set to be fewer rings than the telephone answering machine.
- If multiple phone numbers are assigned to the same physical phone line and the line is shared by multiple devices, make sure that the printer is set to the correct distinctive ring setting. Use a setting in which the printer answers faxes and ignores other ring types.
- Configuring the Fax Speed setting to Medium (V.17) or Slow (V.29) can also improve your ability to send a fax.

Perform the fax diagnostic test


1. From the Home screen on the printer control panel, touch the Setup  button.
2. Select **Self Diagnostics**, and then select **Run Fax Test**.



מדריך תחילת העבודה של Color LaserJet Pro MFP M476

חשוב!

בצע את שלבים 1 - 3 בפוסטר הגדורת החומרה של המדפסת, ולאחר מכן המשך לשלב 4 מימין.

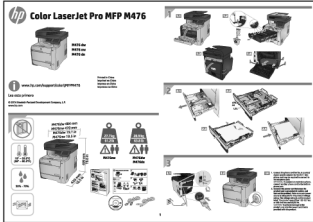

www.hp.com/support/colorljm476



www.register.hp.com

4. התקנה התחלתית בלוח הבקרה


לאחר הפעלת המדפסת, המתן לאתחול המדפסת. מלא אחר ההנחיות בלוח הבקרה כדי לקבוע את התצורה של ההגדרות הבאות:

- שפה
- מיקום
- הגדרות ברירת מחדל

- תחת **Default Settings** (הגדרות ברירת המחדל) בחר אחת מהאפשרויות הבאות:
- ניהול עצמי: הגדרות ברירת מחדל ממוטבות לחוויה מונחית בהתקנות, בהגדרות ובעדכונים.
- ניהול IT: הגדרות ברירת מחדל ממוטבות ליכולת ניהול של צי כלים עם אבטחה משופרת.

ההגדרות ניתנות להתאמה אישית לאחר ההתקנה ההתחלתית.

הערה: בחר באפשרות **Print Information Page** (הדפס דף מידע) כדי להדפיס את הדף המנחה אותך כיצד לשנות את הגדרות ברירת המחדל.

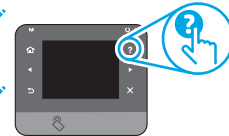

הערה: כדי לגשת לנושאי העזרה, גע בלחצן **Help** (עזרה) בלוח הבקרה של המדפסת.

5. בחירה של שיטת חיבור והכנה לקראת התקנת התוכנה

חיבור רשת אלחוטית מוכלל (דגמי nw ו-dw בלבד)

1. כדי לחבר את המדפסת לרשת אלחוטית (Wi-Fi), בלוח הבקרה של המדפסת, גע בלחצן **Wireless** (אלחוט).
2. גע ב-**Wireless Menu** (תפריט אלחוט), ולאחר מכן גע ב-**Wireless Setup Wizard** (אשף התקנה אלחוטית). בחר את שם הרשת מרשימת SSID, או הזן את שם הרשת אם הוא אינו מופיע ברשימה.
3. השתמש בלוח המקשים כדי להזין את הכתובת, ולאחר מכן גע בלחצן **OK**.
4. המתן בזמן שהמדפסת יוצרת חיבור רשת.
5. בלוח הבקרה של המדפסת, גע בלחצן **Network** (רשת). אם מופיעה כתובת IP, נוצר חיבור רשת. אם לא, המתן עוד כמה דקות ונסה שוב. שים לב לכתובת ה-IP שבה יש להשתמש במהלך התקנת התוכנה. **כתובת IP לדוגמה:** 192.168.0.1
6. כדי להדפיס ממחשב, המשך עם "אתר או הורד את קובצי התקנת התוכנה". כדי להדפיס מטלפון או ממחשב לוח בלבד, המשך עם "הדפסה ניידת ואלחוטית".

הערה: במהלך התקנת התוכנה, בחר את האפשרות "חיבור באמצעות רשת".

חיבור USB ישיר בין המדפסת למחשב

השתמש בכבל USB מסוג A ל-B.

Windows

1. עבור Windows, למעט Windows 8, 8.1, או RT, אל תחבר את כבל ה-USB לפני התקנת התוכנה. אם הכבל מחובר כבר, בתק אותו לפני שתמשיך. תהליך ההתקנה מנחה את המשתמש לחבר את הכבל ברוגע המתאים.
2. המשך עם "אתר או הורד את קובצי התקנת התוכנה".

הערה: במהלך התקנת התוכנה, בחר את האפשרות "התחברות ישירות למחשב זה באמצעות כבל USB".

Mac

1. עבור Mac, חבר את כבל ה-USB בין המחשב למדפסת לפני התקנת התוכנה.
2. המשך עם "אתר או הורד את קובצי התקנת התוכנה".

חיבור רשת קווית (Ethernet)

השתמש בכבל רשת וגיל.

1. חבר את כבל הרשת למדפסת ולרשת. המתן כמה דקות עד שהמדפסת תקבל כתובת רשת.
2. בלוח הבקרה של המדפסת, גע בלחצן **Network** (רשת). אם מופיעה כתובת IP, נוצר חיבור רשת. אם לא, המתן עוד כמה דקות ונסה שוב. שים לב לכתובת ה-IP שבה יש להשתמש במהלך התקנת התוכנה. **כתובת IP לדוגמה:** 192.168.0.1
3. כדי לקבוע באופן ידני את התצורה של כתובת ה-IP, ראה "קביעת תצורה ידנית של כתובת ה-IP".

המשך עם "אתר או הורד את קובצי התקנת התוכנה". **הערה:** במהלך התקנת התוכנה, בחר את האפשרות "חיבור באמצעות רשת".

קביעת תצורה ידנית של כתובת ה-IP

עיון במדריך למשתמש של המדפסת לקבלת מידע כיצד לקבוע תצורה ידנית של כתובת ה-IP www.hp.com/support/colorljm476

6. אתר או הורד את קובצי התקנת התוכנה

הורדה מהאינטרנט

1. עבור אל www.hp.com/support/colorljMFP476.

2. תחת **Download options** (אפשרויות ההורדה), לחץ על **Drivers** (מנהלי התקן), ולאחר מכן לחץ על **Software & Firmware** (תוכנה וקושחה).

3. בחר את דגם המדפסת מן הרשימה.

4. בחר את מערכת ההפעלה.

5. החלט באיזו אפשרות תוכנה ברצונך להשתמש, ולאחר מכן לחץ על לחצן **Download** (הורד) הסמוך.

התקנה מתקליטור המדפסת

עבור Windows, קובצי התקנת התוכנה כלולים בתקליטור המצורף למדפסת.

עבור OS X, קובץ תוכנית ההתקנה שבתקליטור כולל קישור להורדת הקבצים מהאינטרנט.

הערות התקנה

לקבלת פרטים נוספים אודות התוכנה עבור המדפסת, עיין בקובץ "הערות התקנה" בתקליטור המדפסת.

7. התקנת התוכנה

פתרון מלא עבור Windows

1. הכנס את תקליטור המדפסת לתוך המחשב, או הפעל את קובץ התקנת התוכנה שהורדת מהאינטרנט.

2. תוכנית ההתקנה של התוכנה מזהה את שפת מערכת ההפעלה, ולאחר מכן מציגה את התפריט הראשי של תוכנית ההתקנה באותה השפה. בזמן התקנת התקליטור, אם תוכנית ההתקנה אינה מתחילה לפעול לאחר 30 שניות, נווט אל כונן התקליטור במחשב והפעל את הקובץ ששמו **SETUP.EXE**.

3. המסך **Software Selection** (בחירת תוכנה) מפרט את התוכנה שיש להתקין.

• התקנת התוכנה המומלצת כוללת את מנהל ההדפסה ואת התוכנה לכל מאפייני המדפסת הזמינים.

• כדי להתאים אישית את התוכנה המותקנת, לחץ על הקישור **Customizable software selections** (התאמה אישית של בחירות תוכנה). עם סיום ההתקנה, לחץ על לחצן **Next** (הבא).

4. התקן את התוכנה בהתאם להוראות המופיעות על המסך.

5. כאשר תתבקש לבחור סוג חיבור, בחר את האפשרות המתאימה עבור סוג החיבור.

• **התחברות ישירות למחשב זה באמצעות כבל USB**

• **חיבור באמצעות רשת**

הערה: בזמן החיבור לרשת, הדרך הקלה ביותר לזהות את המדפסת היא לבחור באפשרות **Automatically find my printer on the network** (חפש באופן אוטומטי את המדפסת שלי ברשת).

6. (אופציונלי) עבור מדפסות ברשת, עם סיום תהליך התקנת התוכנה, הגדר מאפייני פקס וסריקה באמצעות **Fax Setup Wizard** (אשף התקנת הפקס), **Scan to E-mail Wizard** (אשף סריקה לדוא"ל), ו-**Scan to Network Folder Wizard** (אשף סריקה לתיקיית רשת). זוהי דרך נוחה להגדיר מאפיינים אלה. ראה "הגדרת מאפייני סריקה למדפסות ברשת" לקבלת מידע נוסף.

התקנה בסיסית של OS X

כדי להתקין מנהלי התקן בסיסיים של הדפסה ופקס מבלי להפעיל את תוכנת הפתרון המלא של HP מתקליטור או מהורדה של **hp.com**, בצע את השלבים הבאים:

1. חבר את המדפסת למחשב או לרשת.

2. ב-**System Preferences** (העדפות מערכת), לחץ על **Printers and Scanners** (מדפסות וסורקים), ולאחר מכן על לחצן סימן החיבור בחלק

השמאלי התחתון, ובחר **M476** באמצעות מנהל ההתקן המכונה **AirPrint HP Printer**.

Readiris Pro for HP

הורד תוכנה זו, המוצעת ללא תשלום, כדי להפעיל מאפייני סריקה נוספים, לרבות זיהוי תווים אופטי (OCR). בזמן התקנת התוכנה, לחץ על הפריט **More Options** (אפשרויות נוספות) בחלון השמאלי, ולאחר מכן בחר את האפשרות **Web Support** (תמיכה באינטרנט) כדי להוריד תוכנה זו.

כדי להוריד את התוכנה מהאינטרנט, עבור אל

www.hp.com/support/colorljMFP476, בחר את האפשרות **Drivers** (מנהלי התקן), ולאחר מכן לחץ על **Software & Firmware** (תוכנה וקושחה).

8. הדפסה ניידת ואלחוטית (דגמי nw ו-dw בלבד - אופציונלי)

HP Wireless Direct

HP Wireless Direct מאפשר הדפסה קרובה ממכשיר נייד אלחוטית ישירות במדפסת התומכת ב-Wi-Fi Direct, מבלי לחייב חיבור לרשת או לאינטרנט.

הפעלה של HP Wireless Direct

- בלוח הבקרה של המדפסת, גע בלחצן **Wireless** (אלחוט). גע ב-HP Wireless Direct, ולאחר מכן גע ב-Settings (הגדרות).
- גע ב-**On/Off** (מופעל/כבוי) ולאחר מכן גע ב-**On** (מופעל).
- להדפסה מאובטחת, גע ב-**Security** (אבטחה), ולאחר מכן גע ב-**On** (מופעל). שים לב לכתובת שמופיעה. השתמש בכתובת זו כדי לאפשר גישה למכשירים הניידים. כדי לאפשר הדפסה לא מאובטחת, גע ב-**Security** (אבטחה), ולאחר מכן גע ב-**Off** (כבוי).

למידע נוסף על הדפסה אלחוטית והתקנה אלחוטית, עבור אל

www.hp.com/go/wirelessprinting

כדי להדפיס מטלפון או ממחשב לוח, חבר את ההתקן לרשת האלחוטית של המדפסת.

התקני iOS (AirPrint): פתח את הפריט להדפסה ובחר בסמל **Action** (פעולה). בחר באפשרות **Print** (הדפסה), בחר את המדפסת ולאחר מכן בחר באפשרות **Print** (הדפס).

התקני Android חדשים יותר (4.4 ואילך): פתח את הפריט להדפסה ובחר בלחצן **Menu** (תפריט). בחר באפשרות **Print** (הדפסה), בחר את המדפסת ובחר באפשרות **Print** (הדפס).

חלק מההתקנים מחייבים הורדה של יישום HP Print Service Plug-in מחנות Google Play.

התקני Android ישנים יותר (4.3 ומטה): הורד את היישום HP ePrint מחנות Google Play.

Windows Phone: הורד את היישום HP AiO Remote מחנות Windows.

מידע נוסף על הדפסה ניידת

כדי ללמוד עוד על אפשרויות אחרות להדפסה ניידת, לרבות פתרונות ePrint נוספים, סרוק את QR או עיין בסעיף "הדפסה ניידת" במדריך למשתמש.





השתמש ב-HP ePrint דרך דוא"ל כדי להדפיס מסמכים על-ידי שליחתם כקובץ מצורף לדוא"ל אל כתובת הדוא"ל של המדפסת, מכל התקן התומך בדוא"ל, אפילו מהתקנים שאינם מחוברים לאותה רשת.

הפיכת שירותי האינטרנט של HP לזמינים

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן Web Services (שירותי אינטרנט).
2. גע בלחצן **Enable Web Services** (הפוך שירותי אינטרנט לזמינים). המדפסת הופכת את שירותי האינטרנט לזמינים, ולאחר מכן מדפיסה דף מידע. דף המידע מכיל קוד מדפסת שהנו נחוץ כדי לרשום את המדפסת של HP שברשותך ב-HP Connected.
3. עבור אל www.hpconnected.com כדי ליצור חשבון HP ePrint ולהשלים את תהליך ההתקנה.

- כדי להשתמש ב-HP ePrint דרך דוא"ל, על המדפסת לעמוד בדרישות הבאות:
- המדפסת צריכה להיות מחוברת לרשת קווית או אלחוטית ודרושה לה גישה לאינטרנט.
 - יש לוודא כי HP Web Services זמין במדפסת, ויש לרשום את המדפסת באמצעות HP Connected.

10. הגדרת מאפייני סריקה למדפסת ברשת (אופציונלי)

המדפסת כוללת **מאפייני Scan to E-mail** (סריקה לדוא"ל) ו-**Scan to Network Folder** (סריקה לתיקיית רשת) הסרוקים קבצים ושולחים אותם כקובץ מצורף לדוא"ל או שומרים אותם בתיקייה ברשת. יש לחבר את המוצר לרשת קווית או אלחוטית. כדי להגדיר אפשרויות אלה, השג תחילה את המידע הבא:

- עבור **המאפייני Scan to Email (סריקה לדוא"ל)**, השג את שם השרת של SMTP, מספר היציאה של SMTP ופרטי האימות. כדי לקבל מידע זה, פנה לספק הדוא"ל/שירות האינטרנט או למנהל המערכת. בדרך כלל קל למצוא שמות שרתים ושמות יציאות של SMTP באמצעות חיפוש באינטרנט. לדוגמה, חפש מונחים כגון "gmail smtp server name" או "yahoo smtp server name".
 - עבור **המאפייני Scan to Network Folder** (סריקה לתיקיית רשת), אשר כי הוגדרה תיקיית רשת משותפת עם הרשאות מתאימות, ודע את הנתבי לתיקייה זו ברשת.
- הערה:** לקבלת עזרה נוספת על הגדרת המאפיינים **Scan to Email** (סריקה לדוא"ל) ו-**Scan to Network Folder** (סריקה לתיקיית רשת), עיין במדריך למשתמש, או עבור אל www.hp.com/support/colorijMFP476 ובצע חיפוש באמצעות מילות המפתח "scan to email" או "scan to network folder".

Windows

מוצרים מסוימים של HP כוללים התקנת מנהל התקן מתקליטור תוכנה. בסיומה של התקנה זו תופיע אפשרות לבצע **Setup Scan to Folder and Email** (הגדרת סריקה לתיקייה ולדוא"ל). אשפי ההגדרה כוללים את האפשרויות לקביעת תצורה בסיסית.

אשף הגדרת סריקה לדוא"ל:

1. לחץ על **Start** (התחל), ולאחר מכן לחץ על **Programs** (תוכניות).
 2. לחץ על **HP**, לחץ על שם המוצר ולאחר מכן לחץ על **Scan to E-mail Wizard** (אשף סריקה לדוא"ל).
 3. בתיבת הדו-שיח **Outgoing Email Profiles** (פרופילי דוא"ל יוצא), לחץ על לחצן **New** (חדש). תיבת הדו-שיח **Scan to Email Setup** (הגדרת סריקה לדוא"ל) נפתחת.
 4. בדף **1. Start** (1. התחלה), הזן את **Email Address** (כתובת הדוא"ל) ואת **Display Name** (שם התצוגה), ולאחר מכן לחץ על **Next** (הבא). קיימת אופציה ליצור קוד PIN לאבטחה.
 5. בדף **2. Authenticate** (2. אימות), הזן את **SMTP Server** (שרת SMTP) ואת **Port Number** (מספר יציאה).
- הערה:** ברוב המקרים, אין צורך לשנות את מספר היציאה המוגדר כברירת מחדל.
6. אם אתה משתמש בשירות הדואר האלקטרוני Google™ Gmail, בחר בתיבת הסימון **Always use secure connection (SSL/TLS)** (השתמש תמיד בתיבת מאובטח - SSL/TLS).
 7. **אם שרת ה-SMTP דורש אימות כדי לשלוח דוא"ל**, בחר את תיבת הסימון **Email Log-in Authentication** (אימות כניסה לדוא"ל) ולאחר מכן הזן את מזהה המשתמש והסיסמה. לחץ על **Next** (הבא).
 8. בדף **4. Finish** (סיום), ודא שכל ההגדרות נכונות, ולחץ על **Finish** (סיום).

אשף הגדרת הסריקה לתיקיית רשת

1. לחץ על **Start** (התחל), ולאחר מכן לחץ על **Programs** (תוכניות).
 2. לחץ על **HP**, לחץ על שם המוצר, ולאחר מכן לחץ על **Scan to Network Folder Wizard** (אשף סריקה לתיקיית רשת).
 3. בתיבת הדו-שיח **Network Folder Profiles** (פרופילי תיקיית רשת), לחץ על לחצן **New** (חדש). תיבת הדו-שיח **Scan to Network Folder Setup** (הגדרת סריקה לתיקיית רשת) נפתחת.
 4. בדף **1. Start** (התחל), הזן את **Display Name** (שם התצוגה) ואת **Destination Folder** (תיקיית היעד), ולאחר מכן לחץ על **Next** (הבא).
- עצה:** לחץ על לחצן **Browse** (עיון) כדי לאתר את התיקייה.
5. כדי ליצור קיצור דרך לתיקיית הרשת בשולחן העבודה של המחשב, בחר את **תיבת הסימון Create a Desktop shortcut to the network folder** (יצור קיצור דרך בשולחן העבודה לתיקיית הרשת) ולחץ על **Next** (הבא). קיימת אופציה ליצור קוד PIN לאבטחה.
 6. בדף **2. Authenticate** (2. אימות), הזן את שם המשתמש והסיסמה של Windows® ולחץ על **Next** (הבא).
 7. בדף **3. Configure** (3. קביעת תצורה), ודא שהגדרות הסריקה המוגדרות כברירת המחדל נכונות, ולאחר מכן הזן קידומת שם קובץ בשדה **Filename Prefix** (קידומת שם קובץ) ולחץ על **Next** (הבא).
 8. בדף **4. Finish** (4. סיום), ודא שכל ההגדרות נכונות, ולחץ על **Save and Test** (שמור ובדוק).
 9. לחץ על **Finish** (סיום) כדי להשלים את קביעת התצורה.

OS X

פתח את HP Utility על-ידי לחיצה על סמל HP Utility בתחנת העגינה, או לחץ על התפריט **Go** (בצע), ולאחר מכן לחץ פעמיים על **HP Utility**.

סריקה לדוא"ל

1. לחץ על הכרטיסיה **System** (מערכת), לאחר מכן לחץ על הקישור **Administration** (ניהול), והגדר את האפשרות **Scan to Email** (סריקה לדוא"ל) ל-**On** (מופעל).
 2. לחץ על הכרטיסיה **Scan** (סריקה), לאחר מכן לחץ על הקישור **Outgoing E-mail Profiles** (פרופילי דוא"ל יוצא), ולחץ על לחצן **New** (חדש).
 3. באזור **E-mail Address** (כתובת דוא"ל), מלא את השדות הנדרשים.
 4. באזור **SMTP Server Settings** (הגדרות שרת SMTP), מלא את השדות הנדרשים.
- הערה:** ברוב המקרים, אין צורך לשנות את מספר היציאה המוגדר כברירת מחדל.
5. אם שרת ה-SMTP דורש אימות כדי לשלוח דוא"ל, מלא את השדות הנדרשים באזור **SMTP Authentication** (אימות SMTP). קיימת אופציה ליצור קוד PIN לאבטחה.
 6. הגדר העדפות דוא"ל באזור **E-mail Message Preferences** (העדפות של ההודעות דוא"ל).
 7. עיין בכל המידע, ולאחר מכן לחץ על **Save and Test** (שמור ובדוק).

סריקה לתיקיית רשת

1. לחץ על הכרטיסיה **System** (מערכת), לאחר מכן לחץ על הקישור **Administration** (ניהול), והגדר את האפשרות **Scan to Network Folder** (סריקה לתיקיית רשת) ל-**On** (מופעל).
2. לחץ על הכרטיסיה **Scan** (סריקה), ודא שהקישור **Network Folder Setup** (הגדרת תיקיית רשת) מסומן.
3. בדף **Network Folder Configuration** (תצורת תיקיית רשת), לחץ על לחצן **New** (חדש).
4. באזור **Network Folder Configuration** (תצורת תיקיית רשת), מלא את השדות הנדרשים. קיימת אופציה ליצור קוד PIN לאבטחה.
5. באזור **Scan Settings** (הגדרות סריקה), מלא את השדות הנדרשים.
6. עיין בכל המידע, ולאחר מכן לחץ על **Save and Test** (שמור ובדוק).




11. התקנת פקס (אופציונלי)

11.1 חיבור המדפסת

המדפסת היא התקן אבולוגי HP ממליצה להשתמש במדפסת באמצעות קו טלפון אבולוגי ייעודי.


הערה: בארצות/אזורים מסוימים דרוש מתאם לחוט הטלפון שסופק עם המדפסת.

חבר את חוט הטלפון שסופק עם המדפסת ליציאת הפקס במדפסת ולשקע הטלפון שבקיר.

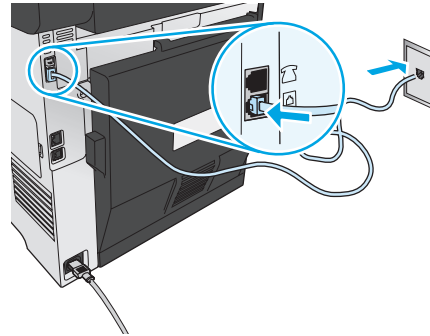

1 כיצד לחבר משיבון או שלוחת טלפון?

1. הסר את התקע מיציאת הטלפון.
2. בתק את חוט הטלפון של המשיבון משקע הטלפון ולאחר מכן חבר אותו ליציאת הטלפון במדפסת.
3. חבר את חוט הטלפון שסופק עם המדפסת ליציאת הפקס במדפסת ולשקע הטלפון שבקיר.

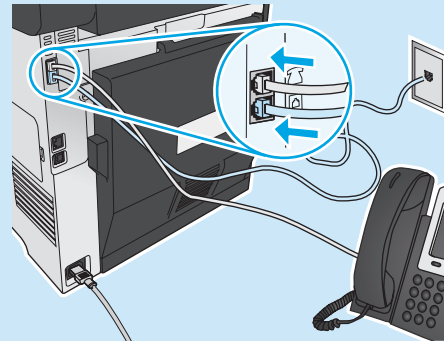

1 כיצד להתקין מדפסות HP בסביבות של טלפון דיגיטלי?

מדפסות HP תוכננו במיוחד לשימוש עם שירותי טלפון אבולוגיים מהסוג המקובל. לסביבה של טלפון דיגיטלי (כגון DSL/ADSL, PBX, ISDN או FoIP), ייתכן שיהיה צורך במסכנים או בהתקנים הממירים מדיגיטלי-לאבולוגי בעת הגדרת המדפסת לפקס.

הערה: בהתאם לחברת הטלפון, ייתכן שהמדפסת לא תהיה תואמת לכל קווי השירות הדיגיטלי או לכל הספקים, בכל הסביבות הדיגיטליות, או לכל ההתקנים הממירים מדיגיטלי-לאבולוגי. פנה לחברת הטלפון כדי לקבוע אילו אפשרויות הגדרה הן הטובות ביותר.

הערה: בעת הגדרה של זיהוי דפוס צלצול במערכת טלפונים מסוג PBX הכוללת דפוס צלצול שונים לשיחות פנימיות ולשיחות חיצוניות, הקפד לחייג את מספר הפקס של המדפסת באמצעות מספר חיצוני לתיעוד דפוס הצלצול.

11.2 קביעת תצורה של המדפסת

יש לקבוע את תצורת השעה, התאריך ואת הגדרות הכותרת בפקס כדי להשתמש במאפיין הפקס. השיטה הקלה ביותר היא להשתמש ב-Fax Set-Up Utility (כלי שירות להגדרת פקס). לחלופין, קבע הגדרות אלה והגדרות פקס בסיסיות אחרות בתפריט Basic Setup (הגדרה בסיסית).

כלי שירות להגדרת פקס

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן Setup (הגדרה).
2. בחר באפשרות Fax Setup (הגדרת פקס), ולאחר מכן בחר באפשרות Fax Set-Up Utility (כלי שירות להגדרת פקס).
3. לקביעת התצורה של הגדרות הפקס החיוניות, פעל בהתאם להנחיות שמופיעות במסך.

תפריט Basic Setup (הגדרה בסיסית)

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן Setup (הגדרה).
2. בחר באפשרות Fax Setup (הגדרת פקס), ולאחר מכן בחר באפשרות Basic Setup (הגדרה בסיסית).
3. בחר באפשרות Time/Date (תאריך/שעה).
4. בחר בשעון של 12 שעות או בשעון של 24 שעות.
5. השתמש בלוח המקשים כדי להזין את השעה הנוכחית, ולאחר מכן גע בלחצן OK.
6. בחר את תבנית התאריך.
7. השתמש בלוח המקשים כדי להזין את התאריך הנוכחי, ולאחר מכן גע בלחצן OK.
8. בחר באפשרות Fax Header (כותרת פקס).
9. השתמש בלוח המקשים כדי להזין את מספר הפקס, ולאחר מכן גע בלחצן OK.

הערה: מספר הפקס יכול להכיל 20 תווים לכל היותר.

10. השתמש בלוח המקשים כדי להזין את שם החברה שלך או כותרת, ולאחר מכן גע בלחצן OK.

כדי להזין תווים מיוחדים שאינם כלולים בלוח המקשים הרגיל, גע בלחצן @\$# כדי לפתוח לוח מקשים שמכיל תווים מיוחדים.

הערה: כותרת הפקס יכולה להכיל 40 תווים לכל היותר.


1 קבל מידע נוסף!

לקבלת מידע נוסף על דרכים אחרות לשליחת פקסים, כגון תזמון שליחת פקס במועד מאוחר יותר או שליחת פקסים ממחשב, עיין במדריך למשתמש www.hp.com/support/colorijMFPM476.

לקבלת מידע על קביעת תצורה של המדפסת כמכשיר פקס עצמאי, או על שימוש בו עם משיבון או שלוחת טלפון, עיין במדריך למשתמש בתקליטור המדפסת.

עזרה של לוח הבקרה

כדי לגשת לנושאי העזרה, גע בלחצן Help (עזרה) בלוח הבקרה של המדפסת.

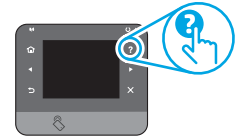

משאבי תמיכה נוספים

לקבלת מידע נוסף על הגדרה של סריקת המדפסת סרוק את קוד ה-QR. לקבלת עזרה כוללת של HP עבור המדפסת, עבור אל www.hp.com/support/colorljMFPM476

- פתור בעיות
- חפש הוראות לתצורה מתקדמת
- הודו עדכוני תוכנה
- הצטרף לפורומי תמיכה
- חפש מידע על אחריות ותקינה
- משאבי הדפסה ביידת

מדריך למשתמש

המדריך למשתמש כולל פרטים אודות השימוש במדפסת ופתרון בעיות. הוא זמין בתקליטור המדפסת ובאינטרנט:

1. עבור אל www.hp.com/support/colorljMFPM476.

2. לחץ על **Manuals (מדריכים למשתמש)**.

עבור Windows, המדריך למשתמש מועתק אל המחשב במהלך התקנת התוכנה המומלצת.

Windows® XP, Windows Vista® 7:

לחץ על **Start** (התחל), בחר **Programs** (תוכניות) או **All Programs** (כל התוכניות), בחר **HP**, בחר את התיקייה עבור מדפסת HP שברשותך, ולאחר מכן בחר באפשרות **Help** (עזרה).

Windows® 8:

במסך **Start** (התחל), לחץ לחיצה ימנית על אזור ריק במסך, לחץ על **All Apps** (כל היישומים) בסרגל היישומים, לחץ על הסמל עם שם המדפסת, ולאחר מכן בחר באפשרות **Help** (עזרה).

בדיקה של עדכוני קושחה

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן Setup (הגדרה).
2. גלול אל התפריט **Service** (שירות) ופתח אותו.
3. בחר באפשרות **LaserJet Update** (עדכון LaserJet).
4. בחר באפשרות **Check for Updates Now** (בדוק עדכונים כעת).

חיבור רשת אלחוטית (דגמי nw ו-dw בלבד)

- ודא שכבל הרשת אינו מחובר. המדפסת אינה יכולה להתחבר לרשת אלחוטית כאשר מחובר כבל רשת.
- ודא שהמדפסת והנתב האלחוטי פועלים ומחוברים לאספקת חשמל. ודא גם שהמתג האלחוטי פועל.
- ודא שהמדפסת נמצאת בטווח הקליטה של הרשת האלחוטית. במרבית הרשתות, על המדפסת להימצא בטווח של 30 מטר (100 רגל) מנקודת הגישה האלחוטית (הנתב האלחוטי).
- ודא שמנהל ההדפסה מותקן במחשב.
- ודא שהמחשב והמדפסת מחוברים לאותה רשת אלחוטית.
- עבור Mac, ודא כי הנתב האלחוטי תומך ב-Bonjour.
- הפעל מחש את הנתב האלחוטי.

ביצוע בדיקת אבחון אלחוט

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן Setup (הגדרה).
2. בחר **Self Diagnostics** (אבחון עצמי), ולאחר מכן בחר **Run Wireless Test** (הפעל בדיקת אלחוט).

חיבור רשת קווית (Ethernet)

- ודא שהמוצא מחובר ליציאת הרשת הנכונה בעזרת כבל באורך הנכון.
- ודא שהנורות לצד יציאת הרשת דולקות.
- ודא שמנהל ההדפסה מותקן במחשב.
- בדוק את החיבור לרשת על-ידי פעולת Ping (איתות) ברשת: **Windows:** לחץ על **Start** (התחל) < **Run** (הפעל). הקלד **cmd**, והקש **Enter**. הקלד **ping**, והקלד רוח, הקלד את כתובת ה-IP של המדפסת, ולאחר מכן הקש **Enter**. כתובת IP לדוגמה: 192.168.0.1
- **OS X:** פתח את כלי השירות של הרשת, והקלד את כתובת ה-IP בחלונת **ping**. הקש **Enter**. כתובת IP לדוגמה: 192.168.0.1
- אם החלון מציג זמני מעבר הלון ושוב, הרשת פועלת.
- אם פעולת ה-ping אינה פועלת, נסה להפעיל מחדש את המדפסת ולבדוק מחדש את כל שלבי החיבור.

פתרון בעיות פקס

אימות החיבור הפיזי

- ודא כי חוט הטלפון מחובר ליציאת הפקס בחלק האחורי של המדפסת ולשקע שבקיר.
- לשלוח טלפון או למכשיר נוסף אחר, ודא כי חוט הטלפון מחובר ליציאת הטלפון בחלק האחורי של המדפסת ולמכשיר.
- אם שיחות טלפון יוצאות נכשלות משום שלא זוהה צליל חיוג או משום שהקו תפוס, התחבר לקו טלפון אחר.
- לשירות Fax over IP, האט את מהירות הפקס וכבה את **Error Correction Mode** (מצב תיקון שגיאה) מתפריט **Fax Settings** (הגדרות פקס) בלוח הבקרה של המדפסת.

אימות הגדרות הפקס של המדפסת

- כדי להשתמש בשירות דואר קולי מחברת טלפון או ספק שירות, ודא שהגדרת המדפסת **Rings to Answer** (צלצולים למענה) מוגדרת למספר קטן יותר של צלצולים מאשר המשיבון של הטלפון.
- אם הוקצו כמה מספרי טלפון לאותו קו טלפון פיזי, והקו הנו משותף לכמה מכשירים, ודא שהמדפסת מוגדרת להגדרת הצלצול המיוחד הנכון. השתמש בהגדרה שבה המדפסת משיבה לפקסים ומתעלמת מסוגי צלצולים אחרים.
- קביעת תצורה של הגדרות מהירות הפקס ל'בינונית' (V.17) או 'איטית' (V.29) עשויה אף היא לשפר את היכולת שלך לשלוח פקס.

ביצוע בדיקת אבחון פקס

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן Setup (הגדרה).
2. בחר באפשרות **Self Diagnostics** (אבחון עצמי), ולאחר מכן בחר באפשרות **Run Fax Test** (הפעל בדיקת פקס).

© 2014 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademark Credits

Windows® is a U.S. registered trademark of Microsoft Corporation.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademark Credits

Windows® is a U.S. registered trademark of Microsoft Corporation.

FCC Regulations

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio-frequency energy. If this equipment is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect equipment to an outlet on a circuit different from that to which the receiver is located.
- Consult your dealer or an experienced radio/TV technician.

Any changes or modifications to the product that are not expressly approved by HP could void the user's authority to operate this equipment. Use of a shielded interface cable is required to comply with the Class B limits of Part 15 of FCC rules. For more regulatory information, see the electronic user guide. Hewlett-Packard shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.



CF385-90988

