



Color LaserJet Pro MFP M274 Getting Started Guide

2

English..... 1

תירבע 5



IMPORTANT:

Follow **Steps 1 - 3** on the printer hardware setup poster, then continue with **Step 4** to the right.



www.hp.com/support/colorljm274MFP



www.register.hp.com

4. Initial setup on the control panel


After turning on the printer, wait for it to initialize. To navigate the touchscreen control panel, use touch, swipe, and scroll gestures. Follow the prompts on the control panel to configure these settings:

- Language
- Location
- Default Settings

Under **Default Settings** select one of these options:

- Self-managed: Optimized default settings for a guided experience on setups, configurations, and updates.
- IT-managed: Optimized default settings for fleet manageability with enhanced security.

Settings are fully customizable after initial setup.

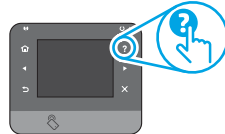

NOTE: Select **Print Information Page** to print a page that instructs how to change the default settings.



NOTE: Touch the Help ? button on the printer control panel to access help topics.

5. Select a connection method and prepare for software installation



USB connection directly between the printer and the computer

Use an A-to-B type USB cable.

Windows

1. For Windows 7 or lower, do not connect the USB cable before installing the software. The installation process prompts to connect the cable at the appropriate time. If the cable is already connected, restart the printer when installation prompts to connect the cable.
2. Continue with **"6. Locate or download the software installation files."**



NOTE: During software installation, select the option to **Directly connect this computer using a USB cable**.

Mac

1. For Mac, connect the USB cable between the computer and the printer before installing the software.
2. Continue with **"6. Locate or download the software installation files."**



Wired (Ethernet) network connection

Use a standard network cable.

1. Connect the network cable to the printer and to the network. Wait a few minutes for the printer to acquire a network address.
2. On the printer control panel, touch the Network button. If an IP address is listed, the network connection has been established. If not, wait a few more minutes and try again. Note the IP address for use during software installation. **Example IP address:** 192.168.0.1
To manually configure the IP address, see **"Manually configure the IP address."**
3. Continue with **"6. Locate or download the software installation files."**



NOTE: During software installation, select the option to **Connect through a network**.

Manually configure the IP address

For information on how to manually configure the IP address, see the printer User Guide www.hp.com/support/colorljm274MFP.



M6D61-90916

6. Locate or download the software installation files



Method 1: Download from HP Easy Start

1. Go to 123.hp.com/laserjet, and click **Download**.
2. Follow the onscreen instructions and prompts to save the file to the computer.
3. Launch the software file from the folder where the file was saved, and continue with "7. Install the software."



Method 2: Download from printer support Web site

1. Go to www.hp.com/support/colorIJM274MFP.
2. Select **Software** and **drivers**.
3. Download the software for your printer model and operating system.
4. Launch the installation file by clicking on the .exe or .zip file as necessary.



Method 3: Install from the printer CD

For Windows, the software installation files are provided on the CD that came with the printer.

For OS X, the installer file on the CD includes a link to download the files from the Web.

1. Insert the printer CD into the computer.
2. Continue with "7. Install the software."

7. Install the software

Windows full solution

1. Insert the printer CD into the computer, or launch the software installation file downloaded from the Web.
2. The software installer detects the language of the operating system, and then it displays the main menu of the installation program in the same language. When installing from the CD, if the installer program does not start after 30 seconds, browse the CD drive on the computer and launch the file named SETUP.EXE.
3. The **Software Selection** screen details the software to be installed.
 - The recommended software installation includes the print driver and software for all available printer features.
 - To customize the software installed, click the **Customizable software selections** link. When finished, click the **Next** button.
4. Follow the on-screen instructions to install the software.
5. When prompted to select a connection type, select the appropriate option for the type of connection:
 - **Directly connect this computer using a USB cable**
 - **Connect through a network**



NOTE: When connecting through a network, the easiest way to detect the printer is to select **Automatically find my printer on the network**.

6. (Optional) For printers on a network, at the end of the software installation process, set up fax and scan features by using the **Fax Setup Wizard**, **Scan to Email Wizard**, and the **Scan to Network Folder Wizard**. This is a convenient way to configure these features. See "10. Set up scan features for printers on a network" for more information.

OS X full solution

1. Launch the software installer that you downloaded from the Web.
2. The software installer detects the language of the operating system, and then it displays the main menu of the installation program in the same language.
3. The **Installation Options** screen details the software to be installed.
 - For a standard installation, click the **Install** button now.
 - For a custom installation, click the **Customize** button. On the screen that opens, select the components to install, and then click the **Install** button.
4. Follow the on-screen instructions to install the software.
5. At the end of the software installation process, use the **HP Utility Setup Assistant** to configure printer options.

OS X basic installation

To install basic print and fax drivers without running the HP full solution software from CD or **hp.com** download, follow these steps:

1. Connect the printer to the computer or network.
2. From **System Preferences**, click **Printers and Scanners**, then the plus button on the bottom left, and select **M274** using the driver named either AirPrint or HP Printer.

8. Mobile and wireless printing (dw models only - optional)

Connect the device to the wireless network

To print from a phone or tablet, connect the device to the same network as the printer.

Apple iOS devices (AirPrint):

Open the item to print, and select the Action icon. Select **Print**, select the printer, and then select **Print**.

Newer Android devices (4.4 or newer):

Open the item to print, and select the **Menu** button. Select **Print**, select the printer, and select **Print**.

Some devices require downloading the HP Print Service plugin app from the Google Play store.

Older Android Devices (4.3 or older):

Download the HP ePrint app from the Google Play store.

Windows Phone:

Download the HP AiO Remote app from the Windows Store.

-  For more information on wireless printing and wireless setup, go to www.hp.com/go/wirelessprinting.



NOTE: Printing from a wireless device requires a wireless network connection.

Learn More About Mobile Printing

To learn more about other mobile printing options, including additional ePrint solutions, scan the QR code, or see the "Mobile printing" section of the User Guide.



9. Set up HP ePrint via email (optional)

Use HP ePrint via email to print documents by sending them as an email attachment to the printer's email address from any email enabled device, even from devices that are not on the same network.

To use HP ePrint via email, the printer must meet these requirements:

- The printer must be connected to a wired or wireless network and have Internet access.
- HP Web Services must be enabled on the printer, and the printer must be registered with HP Connected.

Enable HP Web Services

1. Open the HP Embedded Web Server (EWS):
 - a. **2-line control panels:** Press the **OK** button. Open the **Network Setup** menu. Select the **Show IP Address** item to show the IP Address.
 - Touchscreen control panels:** From the Home screen on the printer control panel, touch the **Connection Information**  button, and then touch **Wi-Fi ON** to display the IP address or host name.

b. Open a Web browser, and in the address line, type the IP address or host name exactly as it displays on the printer control panel. Press the **Enter** key on the computer keyboard. The EWS opens.

 **NOTE:** If the Web browser displays a **There is a problem with this website's security certificate** message when attempting to open the EWS, click **Continue to this website (not recommended)**. Choosing **Continue to this website (not recommended)** will not harm the computer while navigating within the EWS for the HP printer.

2. Click the **HP Web Services** tab.
3. Select the option to enable Web Services.

 **NOTE:** Enabling Web Services might take several minutes.

4. Go to www.hpconnected.com or www.hp.com/go/eprintcenter to create an HP ePrint account and complete the setup process.

10. Set up scan features for printers on a network (optional)

The printer includes Scan to Email and Scan to Network Folder features that scan files and send them as an email attachment or save them in a folder on the network. The printer must be connected to a wired or wireless network.

- For the **Scan to Email** feature, obtain the SMTP server name, SMTP port number, and authentication information. Contact the email/Internet service provider or system administrator for this information. SMTP server names and port names are typically easy to find by doing an Internet search. For example, search for terms like "gmail smtp server name" or "yahoo smtp server name."

For the **Scan to Network Folder** feature, confirm that a shared network folder with proper permissions is set up, and know the path to that folder on the network.

 **NOTE:** For more help on setting up **Scan to Email** and **Scan to Network Folder**, see the user guide, or go to www.hp.com/support/colorijM477MEP and search using keywords "scan to email" or "scan to network folder."

Windows

The set up wizards for Windows 7, Windows 8.1, and Windows 10 include the options for basic configuration

Set up Scan to Network Folder

1. Start the Scan to Network Folder Wizard.
 - Windows 7**
 - a. Click **Start**, and then click **Programs**.
 - b. Click **HP**, click the name of the printer, and then click **Scan to Network Folder Wizard**.
 - c. In the **Network Folder Profiles** dialog, click the **New** button. The **Scan to Network Folder Setup** dialog opens.
 - Windows 8.1, Windows 10**
 - a. From the computer Start screen, either type "HP AIO Remote" and then select the HP AIO Remote app in the search results, or click the existing HP AIO Remote icon.
 - b. Scroll or swipe to the right. In the **Toolbox** section, select **Set Preferences**.
 - c. In the **Scan** section, select **Scan to Network Folder**.
2. Follow the onscreen instructions and enter the necessary information that you noted earlier to complete the process.
3. On the **Finish** page or screen, select **Finish** or **Save** to finish the setup process.

Set up Scan to Email

1. Start the Scan to Email Wizard.
 - Windows 7**
 - a. Click **Start**, and then click **Programs**.
 - b. Click **HP**, click the name of the printer, and then click **Scan to Email Wizard**.
 - c. In the **Outgoing Email Profiles** dialog, click the **New** button. The **Scan to Email Setup** dialog opens.
 - Windows 8.1, Windows 10**
 - a. From the computer Start screen, either type "HP AIO Remote" and then select the HP AIO Remote app in the search results, or click the existing HP AIO Remote icon.
 - b. Scroll or swipe to the right. In the **Toolbox** section, select **Set Preferences**.
 - c. In the **Scan** section, select **Scan to Email**.
 - d. Confirm or change the system settings, and then select **Save**. The **Configure Email** screen opens.
2. Follow the onscreen instructions and enter the necessary information that you noted earlier to complete the process.

 **NOTE:** In the **2. Authenticate** page (Windows 7) or the **SMTP Settings** screen (Windows 8.1, 10), if you are using Google™ Gmail for email service, select the check box that ensures that you use an SSL/TLS secure connection.
3. On the **Finish** page or screen, select **Finish** or **Save** to finish the setup process.

OS X

To set up the scan features in OS X, open HP Utility. HP Utility is located in the Applications/HP folder.

Set up Scan to Email

1. In HP Utility, click the **Scan to E-mail** icon.
2. Click **Begin Scan to E-mail Setup** to open the HP Embedded Web Server (EWS).
3. In the EWS, click the **System** tab, click the **Administration** link, and then set the **Scan to Email** option to **On**.
4. Click the **Scan** tab, click the **Outgoing E-mail Profiles** link, and then click the **New** button.
5. In the **E-mail Address** area, fill in the required fields.
6. In the **SMTP Server Settings** area, fill in the required fields.

 **NOTE:** In most cases, the default port number does not need to be changed.

7. Review all the information, and then click **Save and Test**.

Set up Scan to Network Folder

1. In HP Utility, click the **Scan to Network Folder** icon.
2. Click **Register My Shared Folder** to open the HP Embedded Web Server (EWS).
3. In the EWS, click the **System** tab, click the **Administration** link, and then set the **Scan to Network Folder** option to **On**.
4. Click the **Scan** tab, and then make sure that the **Network Folder Setup** link is highlighted.
5. On the **Network Folder Configuration** page, click the **New** button.
6. In the **Network Folder Configuration** area, fill in the required fields. Creating a security PIN is optional.
7. In the **Scan Settings** area, fill in the required fields.
8. Review all the information, and then click **Save and Test**.

Troubleshooting

User Guide

The User Guide includes printer usage and troubleshooting information. It is available on the printer CD and on the Web:

User Guide on the Web

1. Go to www.hp.com/support/colorljm274MFP.
2. Click **Manuals**.

User Guide from the printer CD

For Windows, the User Guide is copied to the computer during the recommended software installation.

Windows® XP, Windows Vista®, and Windows® 7

Click **Start**, select **Programs** or **All Programs**, select **HP**, select the folder for the HP printer, and then select **Help**.

Windows® 8


On the **Start** screen, right-click an empty area on the screen, click **All Apps** on the app bar, click the icon with the printer's name, and then select **Help**.

Check for firmware updates

1. From the Home screen on the printer control panel, touch the Setup  button.
2. Scroll to and open the **Service** menu.
3. Select **LaserJet Update**.
4. Select **Check for Updates Now**.

Control panel help

Touch the Help  button on the printer control panel to access help topics.

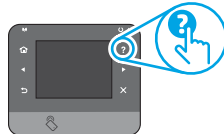

Additional support resources

For HP's all-inclusive help for the printer, go to www.hp.com/support/colorljm274MFP:

- Solve problems
- Find advanced configuration instructions
- Download software updates
- Join support forums
- Find warranty and regulatory information
- Mobile printing resources



Wired (Ethernet) network connection

- Verify that the printer is attached to the correct network port using a cable of the correct length.
- Verify the lights next to the network port are lit.
- Verify the print driver is installed on the computer.
- Test the network connection by pinging the network:

Windows

Click **Start** > **Run**. Type **cmd**, and press **Enter**. Type **ping**, type a space, type the printer IP address, and then press **Enter**.
Example IP address: 192.168.0.1

OS X

Open the Network Utility, and type the IP address in the **ping** pane. Press **Enter**. **Example IP address:** 192.168.0.1

- If the window displays round-trip times, the network is working.
- If the ping does not work, try restarting the printer and recheck all of the connection steps.

Color LaserJet Pro MFP M274

מדריך תחילת העבודה



English..... 1

5 תיובע



www.hp.com/support/colorljm274MFP



www.register.hp.com

4. הגדרה התחלתית בלוח הבקרה

לאחר הפעלת המדפסת, המתן לאתחול המדפסת. כדי לנווט בלוח הבקרה של מסך המגע, השתמש במחוות מגע, החלקה מהירה וגלילה. מלא אתר ההנחיות בלוח הבקרה כדי לקבוע את התצורה של ההגדרות הבאות:

- Language (שפה)
- Location (מיקום)
- Default Settings (הגדרות ברירת מחדל)


תחת **Default Settings** (הגדרות ברירת מחדל) בחר אחת מהאפשרויות הבאות:

- Self-managed (ניהול עצמי): הגדרות ברירת מחדל ממוטבות לחוויה מונחית בהתקנות, בהגדרות ובעדכונים.
- IT-managed (ניהול IT): הגדרות ברירת מחדל ממוטבות ליכולת ניהול של צי כלים עם אבטחה משופרת.

ההגדרות ניתנות להתאמה אישית מלאה לאחר ההגדרה הראשונית.

הערה: בחר באפשרות **Print Information Page** (הדפס דף מידע) כדי להדפיס את הדף המנחה אותך כיצד לשנות את הגדרות ברירת המחדל.

הערה: גע בלחצן העזרה? בלוח הבקרה של המדפסת כדי לגשת אל נושאי העזרה.

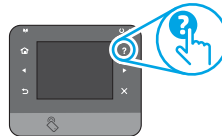

חשוב:

בצע את **שלבים 1 - 3** בפוסטר הגדרת החומרה של המדפסת, ולאחר מכן המשך לשלב 4 מימין.

5. בחירה של שיטת חיבור והכנה לקראת התקנת התוכנה

חיבור רשת (Ethernet) קווית

השתמש בכבל רשת רגיל.

1. חבר את כבל הרשת למדפסת ולרשת. המתן כמה דקות עד שהמדפסת תקבל כתובת רשת.
2. בלוח הבקרה של המדפסת, גע בלחצן Network (רשת). אם מופיעה כתובת IP, נוצר חיבור רשת. אם לא, המתן עוד כמה דקות ונסה שוב. שים לב לכתובת ה-IP שבה יש להשתמש במהלך התקנת התוכנה.
כתובת IP לדוגמה: 192.168.0.1
3. המשך לשלב "6. אתר או הורד את קובצי התקנת התוכנה".
הערה: במהלך התקנת התוכנה, בחר את האפשרות **חיבור באמצעות רשת**.

חיבור USB ישיר בין המדפסת למחשב

השתמש בכבל USB מסוג A-B.

Windows

1. ב-Windows 7 או בגרסה ישנה יותר, אל תחבר את כבל ה-USB לפני התקנת התוכנה. תהליך ההתקנה מנחה את המשתמש לחבר את הכבל ברגע המתאים. אם הכבל כבר מחובר, הפעל את המדפסת מחדש כשתוכנית ההתקנה תציג הנחיה לחבר את הכבל.
 2. המשך לשלב "6. אתר או הורד את קובצי התקנת התוכנה".
- הערה:** במהלך התקנת התוכנה, בחר את האפשרות **התחברות ישירות למחשב זה באמצעות כבל USB**.

Mac

1. עבור Mac, חבר את כבל ה-USB בין המחשב למדפסת לפני התקנת התוכנה.
2. המשך לשלב "6. אתר או הורד את קובצי התקנת התוכנה".

הגדרה ידנית של כתובת IP

לקבלת מידע בנוגע לאופן קביעת התצורה הידנית של כתובת ה-IP, עיין במדריך למשתמש של המדפסת www.hp.com/support/colorljm274MFP.

6. אתר או הורד את קובצי התקנת התוכנה

שיטה 1: הורדה מ-HP Easy Start

1. בקר בכתובת 123.hp.com/laserjet, ולחץ על הורדה (Download).
2. פעל בהתאם להוראות ולהצעות המופיעות על-גבי המסך כדי לשמור את הקובץ במחשב.
3. הפעל את קובץ התוכנה מהתיקיה שבה הקובץ נשמר והמשך לשלב "7. התקנת התוכנה".

שיטה 2: הורדה מאתר האינטרנט לתמיכה במדפסת

1. עבור אל www.hp.com/support/colorljetM274MFP.
2. בחירת תוכנית ומנהלי התקן.
3. הורד את התוכנה עבור דגם המדפסת ומערכת ההפעלה שברשותך.
4. כדי להפעיל את קובץ ההתקנה, לחץ על קובץ ה-exe או ה-zip, לפי הצורך.

שיטה 3: התקנה מתקליטור המדפסת

- עבור Windows, קובצי התקנת התוכנה כלולים בתקליטור המצורף למדפסת.
- עבור OS X, קובץ תוכנית ההתקנה שבתקליטור כולל קישור להורדת הקבצים מהאינטרנט.
1. הכנס את תקליטור המדפסת למחשב.
 2. המשך לשלב "7. התקנת התוכנה".

7. התקן את התוכנה

פתרון מלא עבור Windows

1. הכנס את תקליטור המדפסת לתוך המחשב, או הפעל את קובץ התקנת התוכנה שהורדת מהאינטרנט.
 2. תוכנית ההתקנה של התוכנה מזהה את שפת מערכת ההפעלה, ולאחר מכן מציגה את התפריט הראשי של תוכנית ההתקנה באותה השפה. בזמן ההתקנה מהתקליטור, אם תוכנית ההתקנה אינה מתחילה לפעול לאחר 30 שניות, נוטס אל כונן התקליטור במחשב והפעל את הקובץ ששמו SETUP.EXE.
 3. המסך **Software Selection** (בחירת תוכנה) מפרט את התוכנה שיש להתקין.
 - התקנת התוכנה המומלצת כוללת את מנהל ההדפסה ואת התוכנה לכל מאפייני המדפסת הדמיים.
 - כדי להתאים אישית את התוכנה המתקנת, לחץ על הקישור **Customizable software selections** (התאמה אישית של בחירות תוכנה). עם סיום ההתקנה, לחץ על הלחצן **Next** (הבא).
 4. התקן את התוכנה בהתאם להוראות המופיעות על המסך.
 5. כאשר תתבקש לבחור סוג חיבור, בחר את האפשרות המתאימה עבור סוג החיבור:
 - **Directly connect this computer using a USB cable** (התחברות ישירות למחשב זה באמצעות כבל USB)
 - **Connect through a network** (חיבור באמצעות רשת)
- הערה:** בזמן החיבור לרשת, הדרך הקלה ביותר לזהות את המדפסת היא לבחור באפשרות **Automatically find my printer on the network** (חפש באופן אוטומטי את המדפסת שלי ברשת).
6. (אופציונלי) עבור מדפסות ברשת, עם סיום תהליך התקנת התוכנה, הגדר מאפייני פקס וסריקה באמצעות **Fax Setup Wizard** (אשף התקנת הפקס), **Scan to E-mail Wizard** (אשף סריקה לדוא"ל), ו-**Scan to Network** (אשף סריקה לתיקית רשת). זוהי דרך נוחה להגדיר מאפיינים אלה. עיין בסעיף "10. הגדרת מאפייני סריקה למדפסות ברשת" לקבלת מידע נוסף.

פתרון מלא עבור OS X

1. הפעל את תוכנית ההתקנה של התוכנה שהורדת מהאינטרנט.
2. תוכנית ההתקנה של התוכנה מזהה את שפת מערכת ההפעלה, ולאחר מכן מציגה את התפריט הראשי של תוכנית ההתקנה באותה השפה.
3. המסך **Installation Options** (אפשרויות התקנה) מפרט את התוכנה שיש להתקין.
 - להתקנה רגילה, לחץ על לחצן **Install** (התקן) כעת.
 - להתקנה מותאמת אישית, לחץ על הלחצן **Customize** (התאמה אישית). במסך שנפתח, בחר את הרכיבים להתקנה, ולאחר מכן לחץ על הלחצן **Install** (התקן).
4. התקן את התוכנה בהתאם להוראות המופיעות על המסך.
5. עם סיום תהליך התקנת התוכנה, השתמש ב-**HP Utility Setup Assistant** כדי להגדיר אפשרויות מדפסת.

התקנה בסיסית של OS X

- כדי להתקין מנהלי התקן בסיסיים של הדפסה ופקס מבלי להפעיל את תוכנת הפתרון המלא של HP מתקליטור או באמצעות הורדה מ-hp.com, בצע את השלבים הבאים:
1. חבר את המדפסת למחשב או לרשת.
 2. ב-**System Preferences** (העדפות מערכת), לחץ על **Printers and Scanners** (מדפסות וסורקים), ולאחר מכן על לחצן סימן החיבור בחלק השמאלי התחתון, ובחר **M274** באמצעות מנהל ההתקן המכונה AirPrint או HP Printer.

8. הדפסה אלחוטית וניידת (אופציונלי)

חיבור ההתקן לרשת האלחוטית

להדפסה מטלפון או מטאבלט, חבר את ההתקן לאותה רשת שאליה מחוברת המדפסת.

התקני iOS של Apple (AirPrint):

פתח את הפריט להדפסה, ובחר את הסמל פעולה. בחר באפשרות **Print** (הדפסה), בחר את המדפסת ולאחר מכן בחר באפשרות **Print** (הדפסה).

גרסאות חדשות יותר של התקני Android (4.4 ומעלה):

פתח את הפריט להדפסה ובחר בלחצן **Menu** (תפריט). בחר באפשרות **Print** (הדפסה), בחר את המדפסת ובחר באפשרות **Print** (הדפסה).

התקנים מסוימים דורשים התקנה של יישום ה-Plugin של HP Print Service מחנות האפליקציות Google Play.

גרסאות ישנות יותר של התקני Android (4.3 ומטה):

הורד את האפליקציה ePrint של HP מחנות האפליקציות Google Play.

Windows Phone:

הורד את האפליקציה HP AiO Remote מחנות Windows.

למידע נוסף על הדפסה אלחוטית והתקנה אלחוטית, עבור אל www.hp.com/go/wirelessprinting.

הערה: הדפסה מהתקן אלחוטי מחייבת חיבור רשת אלחוטי.

מידע נוסף על הדפסה ניידת

כדי ללמוד עוד על אפשרויות אחרות להדפסה ניידת, לרבות פתרונות ePrint בוספים, סרוק את קוד ה-QR או עיין בסעיף "הדפסה ניידת" במדריך למשתמש.



9. הגדרת HP ePrint דרך דוא"ל (אופציונלי)



- הערה:** אם דפדפן האינטרנט מציג את ההודעה **ישנה בעיה באישור האבטחה של אתר זה** בעת הניסיון לפתוח את שרת האינטרנט המשובץ של HP, לחץ על **המשך לאתר אינטרנט זה (לא מומלץ)**. בחירה באפשרות **המשך לאתר אינטרנט זה (לא מומלץ)** לא תדיק למחשב בזמן הניווט בתוך שרת האינטרנט המשובץ של HP עבור המדפסת של HP.
- לחץ על הכרטיסייה **HP Web Services**.
 - בחר באפשרות להפעלת שירותי אינטרנט.



הערה: הפעלת שירותי אינטרנט עשויה להימשך כמה דקות.

- בקר בכתובת www.hpconnected.com or www.hp.com/go/eprintcenter כדי ליצור חשבון HP ePrint ולהשלים את תהליך ההתקנה.

השתמש ב-HP ePrint דרך דוא"ל כדי להדפיס מסמכים על-ידי שליחתם כקובץ מצורף לדוא"ל אל כתובת הדוא"ל של המדפסת, מכל התקן התומך בדוא"ל, אפילו מהתקנים שאינם מחוברים לאותה רשת.

כדי להשתמש ב-HP ePrint דרך דוא"ל, על המדפסת לעמוד בדרישות הבאות:

- המדפסת צריכה להיות מחוברת לרשת קווית או אלחוטית ודרושה לה גישה לאינטרנט.
- יש לוודא כי HP Web Services זמין במדפסת, ויש לרשום את המדפסת באמצעות HP Connected.

הפעלת HP Web Services

- פתיחת שרת האינטרנט המשובץ (EWS) של HP:

א. לוחות בקרה עם שתי שורות: לחץ על הלחצן **OK**. פתח את התפריט **Network Setup** (הגדרת רשת). סמן את הפריט **IP כדי להציג את כתובת ה-IP**.

לוחות בקרה עם מסך מגע: במסך הפתיחה בלוח הבקרה של המדפסת, גע בלחצן **מידע על החיבור**.

ב. פתח דפדפן אינטרנט והקלד בשורת הכתובת את כתובת ה-IP או את שם המארז בדיוק כפי שהם מופיעים בלוח הבקרה של המדפסת. הקש על המקש **Enter** במקלדת המחשב. שרת האינטרנט המשובץ של HP נפתח.

10. הגדרת מאפייני סריקה למדפסות ברשת (אופציונלי)

המדפסת כוללת מאפייני Scan to Email (סריקה לדוא"ל) ו-Scan to Network Folder (סריקה לתיקיית רשת) אשר סורקים קבצים ושולחים אותם כקובץ מצורף לדוא"ל או שומרים אותם בתיקייה ברשת. יש לחבר את המוצר לרשת קווית או אלחוטית.

- עבור **המאפיין Scan to Email** (סריקה לדוא"ל), השג את שם השרת של SMTP, מספר היציאה של SMTP ופרטי האימות. כדי לקבל מידע זה, פנה לספק הדוא"ל/שירות האינטרנט או למנהל המערכת. בדף כלל קל למצוא שמות שרתים ושמות יציאות של SMTP באמצעות חיפוש באינטרנט.

- לדוגמה, חפש מונחים כגון "gmail smtp server name" או "yahoo smtp server name".
- עבור **המאפיין Scan to Network Folder** (סריקה לתיקיית רשת), אשר כי הוגדרה תיקיית רשת משותפת עם הרשאות מתאימות, ודע את הכתיב לתיקיית זו ברשת.

הערה: לקבלת עזרה נוספת בהגדרת המאפיינים **Scan to Email** (סריקה לדוא"ל) ו-**Scan to Network Folder** (סריקה לתיקיית רשת), עיין במדריך למשתמש, או עבור לכתובת www.hp.com/support/colorljM477MF ובצע חיפוש באמצעות מילות המפתח "scan to email" או "scan to network folder".



הגדרת סריקה לדואר אלקטרוני

- הפעל את אשף סריקה לדוא"ל.

Windows 7

- לחץ על **התחל** ולאחר מכן על **תוכניות**.
 - לחץ על **HP**, לחץ על שם המדפסת ולאחר מכן לחץ על **Scan to Email Wizard** (אשף סריקה לדוא"ל).
 - בתיבת הדו-שיח **Outgoing Email Profiles** (פרופילי דואר יוצא), לחץ על הלחצן **New** (חדש). תיבת הדו שיח **Scan to Email Setup** (הגדרת סריקה לדוא"ל) נפתחת.
- #### Windows 10, Windows 8.1
- ממסך "התחל" במחשב, הקלד HP AIO Remote ולאחר מכן בחר באפליקציה HP AIO Remote בתוצאות החיפוש, או לחץ על הסמל הקיים של HP AIO Remote. גלול או החלק ימינה. בקטע **Toolbox** (ארגז הכלים), בחר **Set Preferences** (הגדר העדפות).
 - במקטע **Scan** (סריקה), בחר באפשרות **Scan to Email** (סריקה לדוא"ל). אשר או שנה את הגדרות המערכת, ולאחר מכן בחר באפשרות **Save** (שמור). המסך **Configure Email** (הגדרת דוא"ל) נפתח.
- בצע את ההוראות שעל המסך והוון את המידע הדרוש שרשמת לעצמך קודם לכן, כדי להשלים את התהליך.

Windows
אשף ההגדרה עבור Windows 7, Windows 8.1 ו-Windows 10 כולל את האפשרויות להגדרה בסיסית

הגדרת סריקה לתיקיית רשת

- הפעל את אשף סריקה לתיקיית רשת.

Windows 7

- לחץ על **התחל** ולאחר מכן על **תוכניות**.
- לחץ על **HP**, לחץ על שם המדפסת, ולאחר מכן לחץ על **Scan to Network Folder Wizard** (אשף סריקה לתיקיית רשת).
- בתיבת הדו-שיח **Network Folder Profiles** (פרופילי תיקיית רשת), לחץ על הלחצן **New** (חדש). תיבת הדו-שיח **Scan to Network Folder Setup** (הגדרת סריקה לתיקיית רשת) נפתחת.

Windows 10, Windows 8.1

- ממסך "התחל" במחשב, הקלד HP AIO Remote ולאחר מכן בחר באפליקציה HP AIO Remote בתוצאות החיפוש, או לחץ על הסמל הקיים של HP AIO Remote. גלול או החלק ימינה. בקטע **Toolbox** (ארגז הכלים), בחר **Set Preferences** (הגדר העדפות).
 - במקטע **Scan** (סריקה), בחר באפשרות **Scan to Network Folder** (סריקה לתיקיית רשת).
- בצע את ההוראות שעל המסך והוון את המידע הדרוש שרשמת לעצמך קודם לכן, כדי להשלים את התהליך.
 - בדף או במסך **Finish** (סיום), בחר **Finish** (סיום) או **Save** (שמור) כדי לסיים את תהליך ההגדרה.

הגדרת סריקה לתיקיית רשת

- ב-HP Utility, לחץ על הסמל **Scan to Network Folder** (סריקה לתיקיית רשת).
- לחץ על **Register My Shared Folder** (רשום את התיקייה המשותפת שלי) כדי לפתוח את שרת האינטרנט המשובץ של HP (EWS).
- בשרת האינטרנט המשובץ, לחץ על הכרטיסייה **System** (מערכת), לחץ על הקישור **Administration** (ניהול), ולאחר מכן הגדר את האפשרות **Scan to Network Folder** (סריקה לתיקיית רשת) כ-**On** (פועלת).
- לחץ על הכרטיסייה **Scan** (סריקה), ודא שהקישור **Network Folder Setup** (הגדרת תיקיית רשת) מסומן.
- בדף **Network Folder Configuration** (תצורת תיקיית רשת), לחץ על הלחצן **New** (חדש).
- באזור **Network Folder Configuration** (תצורת תיקיית רשת), מלא את השדות הנדרשים. קיימת אופציה ליצור קוד PIN לאבטחה.
- באזור **Scan Settings** (הגדרות סריקה), מלא את השדות הנדרשים. עיין בכל המידע, ולאחר מכן לחץ על **Save and Test** (שמור ובדוק).
-

OS X

כדי להגדיר את תכונות הסריקה ב-OS X, פתח את HP Utility (תוכנית שירות של HP). HP Utility זמין בתיקיית Applications/HP.

הגדרת סריקה לדואר אלקטרוני

- ב-HP Utility, לחץ על הסמל **Scan to E-mail** (סריקה לדואר אלקטרוני).
- לחץ על **Begin Scan to E-mail Setup** (התחל את הגדרת הסריקה לדואר אלקטרוני) כדי לפתוח את שרת האינטרנט המשובץ של HP (EWS).
- בשרת האינטרנט המשובץ, לחץ על הכרטיסייה **System** (מערכת), לחץ על הקישור **Administration** (ניהול), ולאחר מכן הגדר את האפשרות **Scan to E-mail** (סריקה לדואר אלקטרוני) כ-**On** (פועלת).
- לחץ על הכרטיסייה **Scan** (סריקה), לחץ על הקישור **Outgoing E-mail Profiles** (פרופילי דוא"ל יוצא), ולאחר מכן לחץ על הלחצן **New** (חדש).
- באזור **E-mail Address** (כתובת דוא"ל), מלא את השדות הנדרשים.
- באזור **SMTP Server Settings** (הגדרות שרת SMTP), מלא את השדות הנדרשים.



הערה: ברוב המקרים, אין צורך לשנות את מספר היציאה המוגדר כברירת מחדל. עיין בכל המידע, ולאחר מכן לחץ על **Save and Test** (שמור ובדוק).

מדריך למשתמש

המדריך למשתמש כולל פרטים אודות השימוש במדפסת ופתרון בעיות. הוא זמין בתקליטור המדפסת ובאינטרנט:

עיין במדריך למשתמש באינטרנט

1. עבור אל www.hp.com/support/colorijM274MFP.
2. לחץ על **Manuals** (מדריכים למשתמש).

מדריך למשתמש מתקליטור ה-CD של המדפסת

עבור Windows, המדריך למשתמש מועתק אל המחשב במהלך התקנת התוכנה המומלצת.

Windows® XP, Windows Vista®, ו-7 Windows®

לחץ על **התחל**, בחר באפשרויות **תוכניות** או **כל התוכניות**, בחר ב-**HP**, בחר את התיקיה עבור המדפסת של HP ולאחר מכן בחר ב**בעזרה**.

Windows® 8


במסך **התחל**, לחץ לחיצה ימנית על אזור ריק במסך, לחץ על **All Apps** (כל היישומים) בסרגל היישומים, לחץ על הסמל עם שם המדפסת ולאחר מכן בחר באפשרויות **Help** (עזרה).

בדיקה של עדכוני קושחה

1. מהמסך הראשי בלוח הבקרה של המדפסת, גע בלחצן **Setup** (הגדרה).
2. גולל אל התפריט **Service** (שירות) ופתח אותו.
3. בחר באפשרויות **LaserJet Update** (עדכון LaserJet).
4. בחר באפשרויות **Check for Updates Now** (בדוק עדכונים כעת).

עזרה בלוח הבקרה

גע בלחצן העזרה? בלוח הבקרה של המדפסת כדי לגשת אל נושאי עזרה.

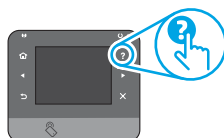

משאבי תמיכה נוספים

לקבלת עזרה כוללת של HP עבור המדפסת, עבור אל www.hp.com/support/colorijM274MFP:

- פתור בעיות
- חפש הוראות לתצורה מתקדמת
- הורד עדכוני תוכנה
- הצטרף לפורומי תמיכה
- חפש מידע על אחריות ותקינה
- משאבי הדפסה ניידת

Windows

לחץ על **התחל** > **הפעל**. הקלד **cmd** והקש על **Enter**. הקלד **ping**, הקלד רווח, הקלד את כתובת ה-IP של המדפסת ולאחר מכן הקש על **Enter**.
כתובת IP לדוגמה: 192.168.0.1

OS X

פתח את כלי השירות של הרשת, והקלד את כתובת ה-IP בחלונית **ping**. הקש על **Enter**.
כתובת IP לדוגמה: 192.168.0.1

- אם החלון מציג זמני מעבר הלון ושוב, הרשת פועלת.
- אם פעולת ה-ping אינה פועלת, נסה להפעיל מחדש את המדפסת ולבדוק מחדש את כל שלבי החיבור.

חיבור רשת (Ethernet) קווית



- ודא שהמוצר מחובר ליציאת הרשת הנכונה באמצעות כבל באורך הנכון.
- ודא שהנווות לצד יציאת הרשת דולקות.
- ודא שמנהל ההדפסה מותקן במחשב.
- בדוק את החיבור לרשת על-ידי פעולת Ping (איתות) ברשת:

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademark Credits

Windows® is a U.S. registered trademark of Microsoft Corporation.

FCC Regulations

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio-frequency energy. If this equipment is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect equipment to an outlet on a circuit different from that to which the receiver is located.
- Consult your dealer or an experienced radio/TV technician.

Any changes or modifications to the product that are not expressly approved by HP could void the user's authority to operate this equipment. Use of a shielded interface cable is required to comply with the Class B limits of Part 15 of FCC rules. For more regulatory information, see the electronic user guide. HP shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

