



HP OfficeJet Pro 9020 series

מדריך עזר

פעל בהתאם להוראות שבכרזה כדי להתחיל בהתקנת המדפסת.
הערה: אם נתקלת בבעיות בחיבור המדפסת לרשת האלחוטית, נסה לכבות את המדפסת ולאחר מכן להפעיל אותה מחדש כדי לאפשר את גילוי המדפסת.


הגדר חיבור אלחוטי

ניתן לחבר בהצלחה את המדפסת לרשת האלחוטית על-ידי ביצוע ההוראות בלוח הבקרה של המדפסת והתקנת תוכנת המדפסת של HP או של אפליקציית HP Smart.

לקבלת מידע נוסף, בקר במרכז ההדפסה האלחוטית של HP (www.hp.com/go/wirelessprinting).

פתרון בעיות ברשת האלחוטית

כאשר «ף» (בורית האלוט) נשארת דלוקה, המדפסת מחוברת בהצלחה לרשת האלחוטית. אם לא, נסה את הפתרונות הבאים.

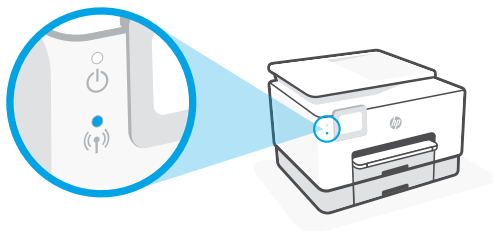

תיאור	סיבה אפשרית	פתרון
<p>הנורית הכחולה מהבהבת</p>	המדפסת לא מחוברת לרשת.	<p>הגדרת האלוט:</p> <ol style="list-style-type: none"> 1. פתח את לוח המחוונים או את לוח הבקרה של המדפסת. 2. גע ב-«ף» (אלחוט) < (הגדרות) < < הגדרות אלחוט. 3. גע באשף הגדרת אלחוט, ולאחר מכן פעל על-פי ההוראות שעל-גבי המסך.
<p>הנורית הכחולה כבויה</p>	האלחוט כבוי.	<p>הפעלת האלוט:</p> <ol style="list-style-type: none"> 1. פתח את לוח המחוונים או את לוח הבקרה של המדפסת. 2. גע ב-«ף» (אלחוט) < (הגדרות) < < הגדרות אלחוט. 3. גע באלחוט כדי להפעיל אותו.

המר מחיבור USB לחיבור אלחוטי

מידע נוסף: www.hp.com/go/usbtowifi

השתמש במדפסת באופן אלחוטי ללא רשת (Wi-Fi Direct)

בעזרת Wi-Fi Direct ניתן לחבר באופן אלחוטי את המחשב או ההתקן הנייד (כגון טלפון חכם או מחשב הלוח) ישירות למדפסת—מבלי להתחבר לרשת אלחוטית קיימת.

הערה: כדי להשתמש ב-Wi-Fi Direct, ייתכן שתצטרך להתקין את התוכנה של HP במחשב או בהתקן הנייד שלך. לקבלת מידע נוסף, בקר בכתובת www.hp.com.

עצה: לקבלת מידע נוסף על אופן ההדפסה בעזרת Wi-Fi Direct, בקר באתר האינטרנט בנושא 'הדפסה עם Wi-Fi Direct' (www.hp.com/go/wifidirectprinting).

הגדרת הפקס

הגדר פקס מלוח הבקרה של המדפסת. לקבלת מידע נוסף, בקר בכתובת www.hp.com/support.

מידע נוסף



הדפסה מהתקנים ניידים של HP
www.hp.com/go/mobileprinting



תמיכה במוצר
www.hp.com/support

קבל עזרה נוספת ומצא הודעות, מידע אודות תקינה ואיכות הסביבה (לרבות הודעת התקינה של האיחוד האירופי והצהרות בנוגע לתאימות) בסעיף "מידע טכני" של המדריך למשתמש: www.hp.com/support .	עזרה
מחסניות: הקפד להשתמש במחסניות שסופקו עם המדפסת לצורך ההגדרה. אחסון מידע אנונימי אודות השימוש: המחסניות של HP המשמשות מדפסת זו מכילות שבו זיכרון המסייע לפעולת המדפסת ולאחסון כמות מוגבלת של מידע אנונימי אודות השימוש במדפסת. ניתן להשתמש במידע זה לשיפור המדפסות של HP בעתיד. עיין במדריך למשתמש בכתובת www.hp.com/support .	מחסנית דיו
השתמש רק בכבל המתח ובמתאם המסופקים על-ידי HP (אם הם מצורפים).	בטיחות

אחריות מוגבלת

אחריות מוגבלת של HP למשך שנה אחת עבור חומרה. להצגת כל התנאים וההגבלות, בקר בכתובת: www.hp.com/go/orderdocuments.

Reference Guide

Follow the instructions in the poster to begin printer setup.


Note: If you have problems connecting the printer to your wireless network, try turning the printer off and then on again to enable the printer to be detected.






Set up a wireless connection

By following the instructions on the printer control panel and installing the HP printer software or the HP Smart app, you should have successfully connected the printer to the wireless network. For more information, visit the HP Wireless Printing Center (www.hp.com/go/wirelessprinting).

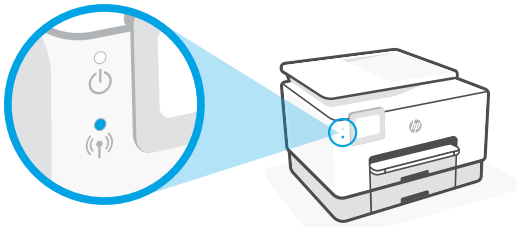Solve wireless problems

When the ((P)) (Wireless light) remains lit, the printer has successfully connected to your wireless network. If not, please check the following solutions.



Description	Possible cause	Solution
Blue light blinking   	The printer is not connected to a network.	Set up wireless: <ol style="list-style-type: none"> 1. Open the Dashboard on the printer control panel. 2. Touch ((P)) (Wireless) > ⚙️ (Settings) > Wireless Settings. 3. Touch Wireless Setup Wizard, and then follow the on-screen instructions.
Blue light off  	Wireless is turned off.	Turn on wireless: <ol style="list-style-type: none"> 1. Open the Dashboard on the printer control panel. 2. Touch ((P)) (Wireless) > ⚙️ (Settings) > Wireless Settings. 3. Touch Wireless to turn it on.

Convert from a USB connection to a wireless connection

Learn more: www.hp.com/go/usbtowifi

Use the printer wirelessly without a Wi-Fi network (Wi-Fi Direct)

With Wi-Fi Direct, you can connect your computer or mobile device (such as smartphone or tablet) directly to a printer wirelessly—without connecting to an existing wireless network.

Note: To use Wi-Fi Direct, you might need HP software installed on your computer or mobile device. For more information, visit 123.hp.com.

Tip: To learn about printing with Wi-Fi Direct, visit the Wi-Fi Direct Printing website (www.hp.com/go/wifidirectprinting).

Set up fax

Set up fax from the printer control panel. For more information, visit www.hp.com/support.

Learn more



Product support
www.hp.com/support



HP mobile printing
www.hp.com/go/mobileprinting

Help	Get additional help and find notices, environmental, and regulatory information (including the European Union Regulatory Notice and compliance statements) in the “Technical Information” section of the user guide: www.hp.com/support .
Ink cartridge	Cartridges: Make sure you use the cartridges provided with the printer for setup. Anonymous usage information storage: HP cartridges used with this printer contain a memory chip that assists in the operation of the printer and stores a limited set of anonymous information about the usage of the printer. This information might be used to improve future HP printers. Refer to the user guide on www.hp.com/support .
Safety	Use only with the power cord and power adapter (if provided) supplied by HP.

Limited warranty

HP one year hardware limited warranty.

For full terms and conditions, visit: www.hp.com/go/orderdocuments.



1MR70-90014

HE EN

Printed in Thailand Impreso en Tailandia 泰国印刷
Imprimé en Thaïlande Impresso na Tailândia 태국에서 인쇄

© Copyright 2019 HP Development Company, L.P.

The information contained herein is subject to change without notice.