HP Fax 1020 Series Front Panel & Menu Layout

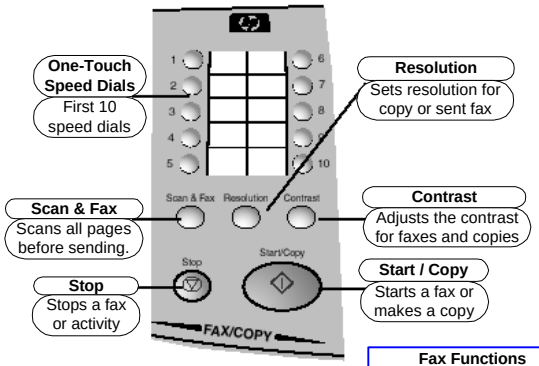

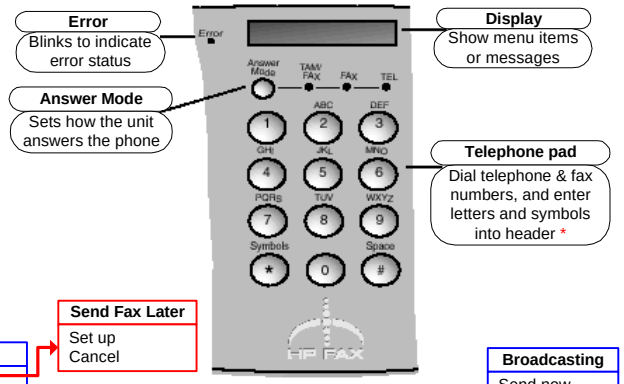

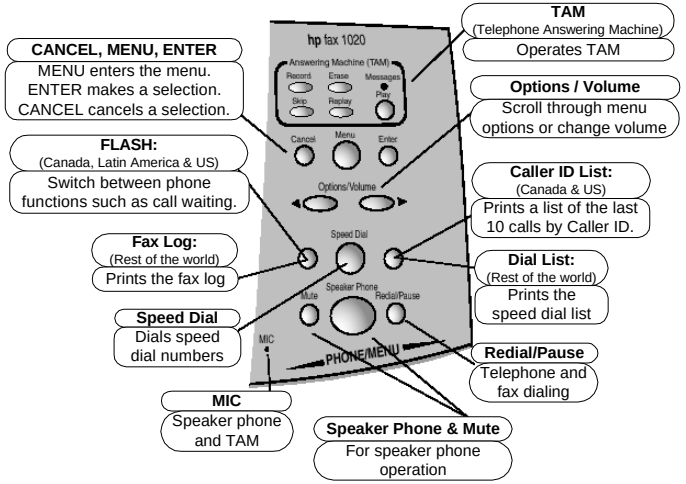

***** Entering Text:
Press the keypad number corresponding to the letter you want to cycle through the lower case, then the upper case of each letter.

Menu

- 1: Fax Functions
- 2: Print Report
- 3: Set Speed Dial
- 4: Basic Setup
- 5: Rings & Volume
- 6: TAM Setup
- 7: Advanced Setup

Fax Functions
1: Send Fax Later
2: Broadcasting
3: Fax Forwarding
4: Poll Receive

Send Fax Later
Set up
Cancel

Broadcasting
Send now
Cancel

Fax Forwarding
Set up
Cancel

Print Report
1: Last Transaction
2: Fax Log
3: Speed Dials
4: Broadcast List
5: Menu Settings
6: Self Test
7: Reprint Faxes
8: Usage Report
9: Caller ID List *

Auto Reports
Send only
Send and Error
Every error
Off

Set Speed Dial
1: Speed Dial
2: Broadcast List
3: Delete Entry
4: Print List

Basic Setup
1: Date & Time
2: Fax Header
3: Auto Reports
4: Resolution
5: Copy Reduction
6: Copy Collation
7: Paper Size

Resolution
Fine
Photo
Standard

Copy Reduction
100%
50%
72%
87%
92%

Copy Collation
Off
On

Paper Size
Letter
A4
Legal

Rings & Volume
1: TAM / FAX Ring
2: FAX Ring
3: Answer Pattern
4: Ring Volume
5: beep Sounds

TAM / FAX Ring
Toll saver
1
2
3
4
5
6

FAX Ring
On
Silent

Fax Ring Count
1
2
3
4
5
6

Answer Pattern
All rings
Single rings
Double rings
Triple rings
Double & Triple

Ring Volume
Soft
Loud
Off

Beep Sounds
On
Off

TAM Setup
1: Message Length
2: Call Screening
3: PIN Code

Message Length
30 seconds
60 seconds
90 seconds
120 seconds

Call Screening
On
Off

Advanced Setup
1: Scan & Fax
2: FAX Reduction
3: Silent Detect
4: ECM
5: Reset Defaults
6: Clean Cartridge
7: Country & Language
8: Caller ID (U.S. and Canada Only)

Scan & Fax
On
Off

Fax Reduction
50%
72%
87%
92%
100%

Silent Detect
Off
5 - 15 seconds

ECM
On
Off

Caller ID
On
Off

Visit our Web Site at
www.hp.com

VP 5/15/01