HP OfficeJet Pro 8020 series

מדריך עזר

פעל בהתאם להוראות שבכרזה כדי להתחיל בהתקנת המדפסת.

הגדר חיבור אלחוטי

ניתן לחבר בהצלחה את המדפסת לרשת האלחוטית על-ידי ביצוע ההוראות בלוח הבקרה של המדפסת והתקנת תוכנת המדפסת של HP או של אפליקציית HP Smart.

לקבלת מידע נוסף, בקר במרכז ההדפסה האלחוטית של HP (**www.hp.com/go/wirelessprinting**).

פתרון בעיות ברשת האלחוטית

כאשר (נורית האלחוט) נשארת דלוקה, המדפסת מחוברת בהצלחה לרשת האלחוטית. אם לא, נסה את הפתרונות הבאים.

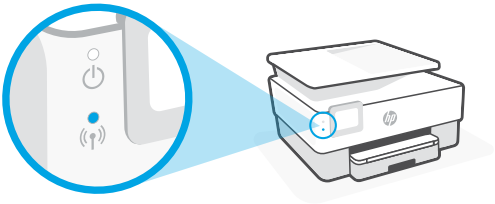

תיאור	סיבה אפשרית	פתרון
הנורית הכחולה מהבהבת	המדפסת לא מחוברת לרשת.	הגדרת האלחוט: **1.** פתח את לוח המחוונים או את לוח הבקרה של המדפסת. **2.** גע ב- (אלחוט) > (הגדרות) > **הגדרות אלחוט**. **3.** גע ב**אשף הגדרת אלחוט**, ולאחר מכן פעל על-פי ההוראות שעל-גבי המסך.
הנורית הכחולה כבויה	האלחוט כבוי.	הפעלת האלחוט: **1.** פתח את לוח המחוונים או את לוח הבקרה של המדפסת. **2.** גע ב- (אלחוט) > (הגדרות) > **הגדרות אלחוט**. **3.** גע ב**אלחוט** כדי להפעיל אותו.

Impresso na Tailândia Printed in Thailand
泰国印刷 Imprimé en Thaïlande
태국에서 인쇄 Impreso en Tailandia

© Copyright 2019 HP Development Company, L.P.
המידע המובא כאן כפוף לשינויים ללא הודעה מוקדמת.

EN HE

1KR64-90014

המר מחיבור USB לחיבור אלחוטי

מידע נוסף: **www.hp.com/go/usbtowifi**

השתמש במדפסת באופן אלחוטי ללא רשת Wi-Fi (Wi-Fi Direct)

בעזרת Wi-Fi Direct ניתן לחבר באופן אלחוטי את המחשב או ההתקן הנייד (כגון טלפון חכם או מחשב הלוח) ישירות למדפסת – מבלי להתחבר לרשת אלחוטית קיימת.

הערה: כדי להשתמש ב-Wi-Fi Direct, עליך להתקין את התוכנה של HP במחשב או בהתקן הנייד שלך. לקבלת מידע נוסף, בקר בכתובת **123.hp.com**.

עצה: לקבלת מידע נוסף על אופן ההדפסה בעזרת Wi-Fi Direct, בקר באתר האינטרנט בנושא 'הדפסה עם Wi-Fi Direct' (**www.hp.com/go/wifidirectprinting**).

הגדרת הפקס

הגדר פקס מלוח הבקרה של המדפסת. לקבלת מידע נוסף, בקר בכתובת **www.hp.com/support**.

מידע נוסף

תמיכה במוצר
www.hp.com/support

הדפסה מהתקנים ניידים של HP
www.hp.com/go/mobileprinting

עזרה	קבל עזרה נוספת ומצא הודעות, מידע אודות תקינה ואיכות הסביבה (לרבות הודעת התקינה של האיחוד האירופי והצהרות בנוגע לתאימות) בסעיף "מידע טכני" של המדריך למשתמש: **www.hp.com/support**.
מחסנית דיו	**מחסניות:** הקפד להשתמש במחסניות שסופקו עם המדפסת לצורך ההגדרה. **אחסון מידע אנונימי אודות השימוש:** המחסניות של HP המשמשות מדפסת זו מכילות שבב זיכרון המסייע לפעולת המדפסת ולאחסון כמות מוגבלת של מידע אנונימי אודות השימוש במדפסת. ניתן להשתמש במידע זה לשיפור המדפסות של HP בעתיד. לקבלת מידע נוסף או כדי להשבית תכונה זו עיין במדריך שבכתובת **www.hp.com/support**.
בטיחות	השתמש רק בכבל המתח ובמתאם המתח המסופקים על-ידי HP (אם הם מצורפים).

אחריות מוגבלת

אחריות מוגבלת של HP למשך שנה אחת עבור חומרה.

להצגת כל התנאים וההגבלות, בקר בכתובת: **www.hp.com/go/orderdocuments**.

HP OfficeJet Pro 8020 series

Reference Guide

Follow the instructions in the poster to begin printer setup.

Set up a wireless connection

By following the instructions on the printer control panel and installing the HP printer software or the HP Smart app, you should have successfully connected the printer to the wireless network.

For more information, visit the HP Wireless Printing Center (**www.hp.com/go/wirelessprinting**).

Solve wireless problems

When the (Wireless light) remains lit, the printer has successfully connected to your wireless network. If not, please check the following solutions.

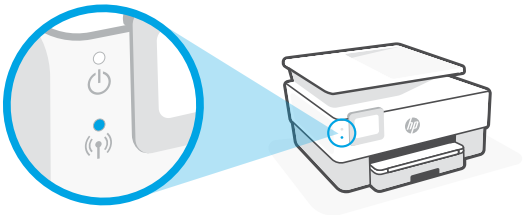

Description	Possible cause	Solution
Blue light blinking	The printer is not connected to a network.	Set up wireless: 1. Open the Dashboard on the printer control panel. 2. Touch (Wireless) > (Settings) > **Wireless Settings**. 3. Touch **Wireless Setup Wizard**, and then follow the onscreen instructions.
Blue light off	Wireless is turned off.	Turn on wireless: 1. Open the Dashboard on the printer control panel. 2. Touch (Wireless) > (Settings) > **Wireless Settings**. 3. Touch **Wireless** to turn it on.

Convert from a USB connection to a wireless connection

Learn more: **www.hp.com/go/usbtowifi**

English

Use the printer wirelessly without a Wi-Fi network (Wi-Fi Direct)

With Wi-Fi Direct, you can connect your computer or mobile device (such as smartphone or tablet) directly to a printer wirelessly—without connecting to an existing wireless network.

Note: To use Wi-Fi Direct, you need HP software installed on your computer or mobile device. For more information, visit **123.hp.com**.

Tip: To learn about printing with Wi-Fi Direct, visit the Wi-Fi Direct Printing website (**www.hp.com/go/wifidirectprinting**).

Set up fax

Set up fax from the printer control panel. For more information, visit **www.hp.com/support**.

English

Learn more

Product support
www.hp.com/support

HP mobile printing
www.hp.com/go/mobileprinting

Help	Get additional help and find notices, environmental, and regulatory information (including the European Union Regulatory Notice and compliance statements) in the "Technical Information" section of the user guide: **www.hp.com/support**.
Ink cartridge	**Cartridges:** Make sure you use the cartridges provided with the printer for setup. **Anonymous usage information storage:** HP cartridges used with this printer contain a memory chip that assists in the operation of the printer and stores a limited set of anonymous information about the usage of the printer. This information might be used to improve future HP printers. To find out more or to disable this feature, refer to the user guide on **www.hp.com/support**.
Safety	Use only with the power cord and power adapter (if provided) supplied by HP.

Limited warranty

HP one year hardware limited warranty.

For full terms and conditions, visit: **www.hp.com/go/orderdocuments**.

The information contained herein is subject to change without notice.