

# Presario 5000

System/Processor Boards	Assembly	Spare Part	System
System Board, Processor	320460-102	320756-001	5010, 15ED, 20, 23, 30, 34ES, 35, 37
System Board, Processor	320460-001	320725-001	5010, 20, 30, 50, 55ES, 70, 72, 75
System Board		108846-001	5070
System Board, w/o AMD Processor		386021-001	5060 (EMEA only)
Processor Board, 4 MB N+FP	320446-101	320645-001	5050, 60, 62, 70, 75
Processor, w/ M Chip	320460-105	381338-001	5050, 57
Processor, w/ M Chip, w/o NIC, w/o FP, 4 MB	320460-106	330641-001	5050
Processor, w/ FP w/ NIC	320460-103	329089-001	5050
Processor, w/ FP, w/o NIC	320458-102	329090-001	5056

## Configuration Jumper Settings (Models 5010 - 5020)

Jumper	Pins	Function
P1 - P4 Processor Frequency Select for 66 MHz Bus Frequency	1,2	233 MHz Processor Frequency
	3	266 MHz Processor Frequency
	1,3	300 MHz Processor Frequency
	2,4	333 MHz Processor Frequency
P22 CMOS Clear	1-2*	Secure CMOS Power
	Open	Remove jumper for 10 sec, reinstall to clear CMOS

\* Default

## Configuration Jumper Settings (Models 5030 - 5075)

Jumper	Pins	Function
P1 - P4 Processor Frequency Select for 66 MHz Bus Frequency	2	200** MHz Processor Frequency
	1,2	233** MHz Processor Frequency
	3	266 MHz Processor Frequency
	1,3	300 MHz Processor Frequency
	2,3	333 MHz Processor Frequency
P1-P4 Processor Frequency 2 Select with 100 MHz Bus Frequency	2	300** MHz Processor Frequency
	1,2	350 MHz Processor Frequency
	3	400 MHz Processor Frequency
	1,3	450 MHz Processor Frequency
	2,3	500** MHz Processor Frequency
P22 CMOS Clear	1-2*	Secure CMOS Power
	Open	Remove jumper for 10 sec, reinstall to clear CMOS

\* Default

\*\* Not shipped in these configurations.

# Presario 5000

## Jumper Settings, 66 MHz

Frequency (MHz)	200	233	266	300	333
JP1	OFF	ON	OFF	ON	OFF
JP2	ON	ON	OFF	OFF	ON
JP3	OFF	OFF	ON	ON	ON
JP4	OFF	OFF	OFF	OFF	OFF

## Jumper Settings, 100 MHz

Frequency (MHz)	300	350	400	450	500
JP1	OFF	ON	OFF	ON	OFF
JP2	ON	ON	OFF	OFF	ON
JP3	OFF	OFF	ON	ON	ON
JP4	OFF	OFF	OFF	OFF	OFF

Memory SIMMs	Assembly	Spare Part	System
48 MB Memory Module	278030-002	320673-001	5010, 15ED, 15, 20, 23, 30, 34ES, 50, 55ES
48 MB Memory Module	278030-002	278066-001	5050, 60, 62, 70
64 MB Memory Module	278031-002	179190-001	5010, 20, 30, 70

Memory DIMMs	Assembly	Spare Part	System
16 MB, 100 MHz	178923-001	166969-001	5056
16 MB, 66 MHz	286547-001	278066-001	5050, 57
32 MB, 66 MHz	286548-101	341717-001	5050, 57
32 MB, 100 MHz	320767-101	319326-001	5034ES, 56
32 MB, 100 MHz	323029-001	337372-001	5070
64 MB, 66 MHz	320747-101	320669-001	5020, 30, 32, 35, 37, 38, 50, 70, 72, 75
64 MB, 100 MHz	320768-101	320670-001	5010, 20, 30, 60, 70

Microprocessor	Assembly	Spare Part	System
Pentium-II/266	332811-001	332858-001	5020
Pentium-II/300	270848-007	328413-001	5030, 32, 34ES, 35, 37, 38
C2/300		341718-001	5020, 5023
C2/266		341719-001	5010, 5015
300	320471-002	320647-001	5070
333 MHz CII	316356-002	330648-001	5050, 56, 57
333 MHz K6II	320471-003	337364-001	5050, 55ES, 60, 62, 70, 75
350	278309-001	327583-001	5060
350, K6-2	330631-002	388241-001	5070

# Presario 5000

Configuration Code	Assembly	System Board Spare Part	Model
BSV6	320460-102	320756-001	5015ED
BX23	320460-101 320446-101	320725-001 320645-001	5075
BX24	320460-101 320446-101	320725-001 320645-001	5070
BX26	320460-101	320725-001	5072
BX27	320460-101 320446-101	320725-001 320645-001	5070
BX28	320460-101 320446-101	320725-001 320645-001	5070
BX29	320460-101 320446-101	320725-001 320645-001	5070
BX2C	320460-101 320446-101	320725-001 320645-001	5070
BXV2	320460-102 320460-101	320756-001 320725-001	5010
BXV3	320460-102 320460-101	320756-001 320725-001	5010
BXV4	320460-102 320460-101	320756-001 320725-001	5010
BXV5	320460-102 320460-101	320756-001 320725-001	5010
BXV7	320460-102 320460-101	320756-001 320725-001	5010
BXVB	320460-102 320460-101	320756-001 320725-001	5010
BXVC	320460-102	320756-001	5015
BXZ2	320460-101 320446-101	320725-001 320645-001	5050
BXZ2	320446-101	320645-001	5062
BXZ3	320460-101 320446-101	320725-001 320645-001 380621-001	5050, 60
BXZ4	320460-101 320446-101	320725-001 320645-001	5050, 60
BXZ5	320460-101 320446-101	320725-001 320645-001	5050
BXZ6	320460-101 320446-101	320725-001 320645-001	5050, 60
BXZ7	320460-101	320725-001	5055ES
BXZC	320460-101 320446-101	320725-001 320645-001	5050
BY3B	320460-102 320460-101	320756-001 320725-001	5030
BY3C	320460-102 320460-101	320756-001 320725-001	5030
BY3G	320460-102 320460-101	320756-001 320725-001	5030
BY3H	320460-102	320756-001	5034ES
BY3K	320460-102	320756-001	5034ES
BYF2	320460-101 320446-101	320725-001 320645-001	5050
BYF4	320460-101 320446-101	320725-001 320645-001	5050
BYF5	320458-102	329090-001	5056

Continued

# Presario 5000

Configuration Code	Assembly	System Board Spare Part	Model
BY3Q	320460-101	320725-001	5032
BY3X	320460-101	320725-001	5032
BY32	320460-102 320460-101	320756-001 320725-001	5030
BY33	320460-102 320460-101	320756-001 320725-001	5030
BY34	320460-102	320756-001	5035
BY35	320460-102 320460-101	320756-001 320725-001	5030
BY37	320460-102 320460-101	320756-001 320725-001	5030
BY37	320460-101	320725-001	5032
BY38	320460-102 320460-101	320756-001 320725-001	5030
CCH2	320460-102 320460-101	320756-001 320725-001	5020
CCH3	320460-102 320460-101	320756-001 320725-001	5020
CCH4	320460-102 320460-101	320756-001 320725-001	5020
CCH5	320460-102 320460-101	320756-001 320725-001	5020
CCH6	320460-102 320460-101	320756-001 320725-001	5020
CCH7	320460-102 320460-101	320756-001 320725-001	5020
CCH8	320460-102 320460-101	320756-001 320725-001	5020
CCH9	320460-102 320460-101	320756-001 320725-001	5020
CMN2		108846-001	5070
CNM7		108846-001	5070

Hard Drives	Assembly	Spare Part	System
3.2 GB, IDE	286114-001	286538-001	5010, 20
4 GB, IDE	286119-001	320648-001	5010, 15ED, 20, 30, 50, 60
4 GB, IDE		337379-001	5070
6.0 GB, IDE	286556-001	271127-001	5010, 15, 20, 23, 30, 34ES, 37, 50, 55ES, 60, 62, 70
6.0 GB, IDE	286556-001	298463-001	5056
8.0 GB, IDE	286123-001	298464-001	5035, 50, 57, 60, 62, 70
12.0 GB, IDE	286466-405	298465-001	5075

CD-ROM Drives	Assembly	Spare Part	System
CD-ROM, IDE, 32X	298520-005	317212-001	All except 5055ES, 70, 72, 75
CD-ROM, IDE, 32X	298520-006	317212-001	5050, 60, 62
CD-ROM, IDE, 32X	310185-001	317212-001	5056, 70
DVD2	286466-405	317213-001	
DVD3	320716-401	327446-001	5050, 55ES, 60, 70, 72, 75

# Presario 5000

Diskette Drives	Assembly	Spare Part	System
1.44 MB	141087-406 304337-001	304235-001	All
1.44 MB		239612-401	5070
Zip	270988-002	270946-001	5030, 32, 35, 72

## 56K Modem

Country	Assembly	Spare Part	Cable	System
			Spare Part	
APD	292256-003	292269-003	165224-001	5010, 20, 30, 50
APD	007201-003	317296-001		5060
Brazil	292256-003	292269-003		5020
Canada	292256-003	292269-003		5030, 35, 50
Caribbean	292256-003	292269-003		5020, 50
EMEA	007201-003	317296-001		5060
Italy	165224-062	165224-062		5060
Japan	292256-003	292269-003		5010, 15ED, 20, 30, 50, 70
Latin America	292256-003	292269-003	165224-001	5020, 50
New Zealand	165224-033	165224-033		5060
Portugal	292256-003	292269-003	165224-131	5030, 50
Portugal	112666-005		165224-131	5060
Spain	292256-003	292269-003	304398-071	5020, 30
Spain	112666-005		304398-071	5060
Taiwan	292256-003	292269-003		5010, 30
United Kingdom	165227-033	165224-033		5060
United States	292256-003	292269-003		5015ED, 30, 34ES, 35, 50, 72

## Z-56K Modem

Country	Assembly	Spare Part	Cable	System
			Spare Part	
Australia	007201-003	317296-001	165224-012	5010, 15ED, 20, 30, 50, 60, 70
Belgium	007201-003	317296-001	304398-181	5010, 20, 30, 50, 56, 60, 70
Brazil	292256-003	317297-001		5010, 20, 50
Canada	292256-003	317297-001		5010, 30, 35, 37
Canada	337550-001	337559-001		5057
Caribbean	292256-003	317297-001		5010, 20, 23, 50
Denmark	007201-003	317296-001	304398-081	5010, 20, 30, 50, 60, 70
Finland	007201-003	317296-001	304398-351	5010, 30, 50, 60, 70
France	007201-003	317296-001	304398-051	5010, 20, 30, 50, 60, 70
Germany	007201-003	317296-001	290663-001	5020, 30, 60
Italy	007201-003	317296-001	165224-062	5010, 20, 30, 50, 60, 70
Japan	292256-003	292269-003		5010, 20, 30, 50, 70
Japan	337550-001	337559-001		5050
Korea	007201-003	317296-001		5010, 30, 60
Latin America	292256-003	317297-001	165224-001	5010, 20, 23, 50
Latin America/Brazil mfg.	292256-003	317297-001		5010, 20, 23, 50

Continued

# Presario 5000

## Z-56K Modem

Country	Assembly	Spare Part	Cable Spare Part	System
Netherlands	007201-003	317296-001	304398-331	5010, 20, 30, 50, 60, 70
New Zealand	007201-003	317296-001	165224-033	5010, 20, 30, 50, 60, 70
Norway	007201-003	317296-001	304398-091	5010, 20, 30, 50, 60, 70
Portugal	292256-003	317297-001	165224-131	5030, 50, 70
Puerto Rico	292256-003	317297-001	165224-012	5010, 50
Spain	292256-003	317297-001	304398-071	5020, 30, 50, 70
Sweden	007201-003	317296-001	304398-101	5010, 20, 30, 50, 60, 70
Switzerland	007201-003	317296-001	304398-111	5010, 20, 30, 50, 60, 70
Taiwan	292256-003	317297-002		5010, 20, 30
U Kingdom	007201-003	317296-001	165224-033	5010, 20, 30, 50, 60, 70
United States - Education	292256-002	292269-002		5015ED, 34ES
United States - Retail	337550-001	337559-001		5057, 70
United States - Retail	292256-002	292269-002		5010, 15, 30, 35, 50, 72, 75

Cable Information	Assembly	Spare Part
Modem Cable - POR	112666-005	165224-131
Modem Cable - SPAIN	112666-005	304398-101
Modem Cable - PR	165224-012	165224-012
Modem Cable - NZ	165224-033	165224-033
Modem Cable - UK	165227-033	165224-033
Modem Cable - NA	112666-003	137256-001
Modem Cable - ITALY	165227-062	165224-062
Modem Cable Adapter- Aus/NZ	112666-005	304398-011
Modem Cable Adapter- BEL	112666-005	304398-181
Modem Cable Adapter- FR	112666-005	304398-051
Modem Cable Adapter- DK	112666-005	304398-081
Modem Cable Adapter- NOR	112666-005	304398-091
Modem Cable Adapter- SWE	112666-005	304398-101
Modem Cable Adapter- SWI	112666-005	304398-111
Modem Cable Adapter- NL	112666-005	304398-331
Modem Cable Adapter- FIN	112666-005	304398-351
Modem Cable Adapter- IT	112666-005	304398-061
Cable Kit	320560-001	320663-001
	310187-001	
	320561-001	
	310188-002	
	298486-001	
	320558-001	
Cable Kit (5056)	320560-001	170720-001
	310187-001	
	320561-001	
	310188-002	
	298486-001	
	320558-001	

# Presario 5000

<b>Miscellaneous</b>	<b>Assembly</b>	<b>Spare Part</b>
Keyboard, US	340740-003	340869-003
Keyboard, US Education	286220-003	304242-001
Mouse, Ivory	149998-006	199181-401
Mouse, Ivory (5070)	141649-008	337416-001
Button Board w/ Bracket	308882-002	320664-001
Chassis Fan (5070)	298582-003	298474-001


<b>Controller Boards</b>	<b>Assembly</b>	<b>Spare Part</b>
PCI, 10/100	317607-001	317606-001
PCI, 10/100, w/ TX (5070)	122849-001	123494-001

<b>Power Supply/Battery</b>	<b>Assembly</b>	<b>Spare Part</b>
Power Supply, 110W (model 5050, 56, 57, 60, 62, 70)	319239-002	319235-001
Battery (5070)		234556-001


# Presario 5000

## Memory Upgrade Chart

PROCESSOR BOARD  
320460-001

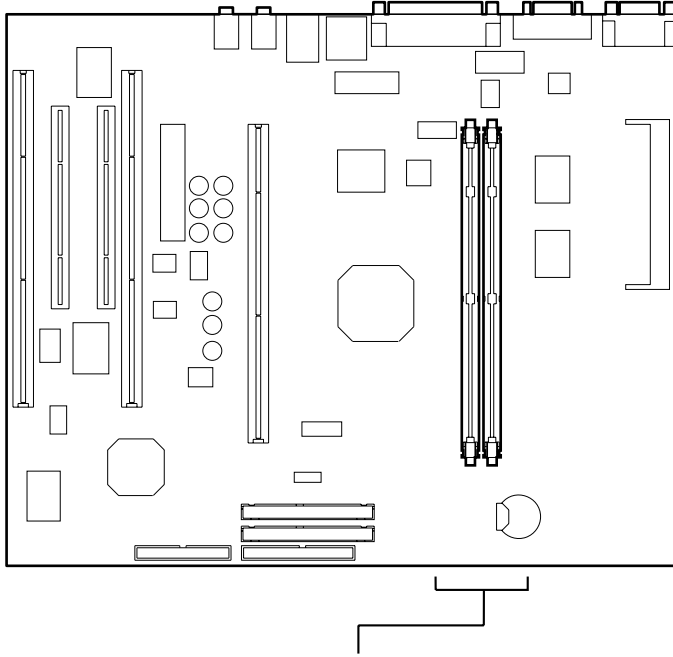

A MAXIMUM OF 256 MB TOTAL MEMORY



MEMORY OPTIONS ARE NOT AVAILABE  
FOR THE PRESARIO 5000 SERIES




# Presario 5000


## Presario 5070

### Memory Upgrade Chart

SYSTEM BOARD  
108846-001

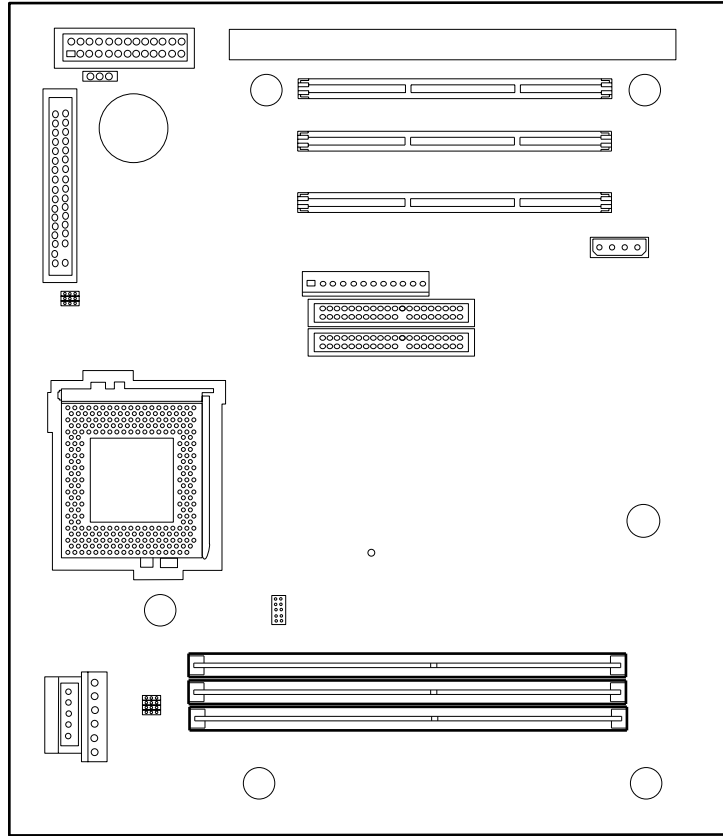

MAXIMUM MEMORY 384MB



NO MEMORY OPTIONS AVAILABLE