

Notebook User Guide

© Copyright 2011 Hewlett-Packard Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2011

Document Part Number: 649590-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

To obtain the latest information in this guide, go to the HP Web site at <http://www.hp.com/support>.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or for requesting a full refund of the computer, please contact your local point of sale (the seller).

Safety warning notice

-
- △ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Welcome	1
Finding information	2
2 Getting to know your computer	3
Top	3
TouchPad	3
Lights	4
Buttons	5
Keys	6
Right	7
Left	8
Display	10
Bottom	11
3 Networking	12
Using an Internet service provider (ISP)	12
Identifying wireless and network status icons	13
Creating a wireless connection	13
Turning wireless devices on and off	13
Using the wireless key	13
Using the operating system controls	13
Using a WLAN	13
Connecting to an existing WLAN	14
Setting up a new WLAN	14
Protecting your WLAN	15
Roaming to another network	15
Using Bluetooth wireless devices (select models only)	15
Connecting to a wired network	16
Connecting to a local area network (LAN) (select models only)	16
4 Keyboard and pointing devices	17
Using the keyboard	17
Using the action keys	17

Using the TouchPad	18
Setting pointing device preferences	18
Turning the TouchPad off and on	19
Using TouchPad gestures (select models only)	19
Scrolling	20
Pinching/Zooming	20
5 Multimedia	21
Using the media activity keys	21
Using the audio features	22
Adjusting the volume	22
Checking your audio functions	22
Using the webcam (select models only)	23
Using video devices	23
VGA	23
Connecting an HDMI device (select models only)	24
Configuring audio for HDMI (select models only)	25
6 Power management	26
Shutting down the computer	26
Setting power options	27
Using power-saving states	27
Initiating and exiting Suspend	27
Initiating and exiting Hibernation	27
Using the Power icon	28
Using power management	28
Viewing the current power management settings	28
Changing the current power management settings	28
Using battery power	28
Displaying the remaining battery charge	29
Inserting or removing the battery	29
Charging a battery	30
Maximizing battery life	31
Managing low battery levels	31
Identifying low battery levels	31
Resolving a low battery level	31
Resolving a low battery level when external power is available	31
Resolving a low battery level when a charged battery is available ...	31
Resolving a low battery level when no power source is available	32
Resolving a low battery level when the computer cannot exit	
Hibernation	32
Conserving battery power	32
Storing a battery	32

Disposing of a used battery	32
Replacing the battery	32
Using external AC power	33
Testing an AC adapter	34
7 Drives	35
Handling drives	35
Replacing or upgrading the hard drive	36
Removing the hard drive	36
Installing a hard drive	37
Using optical drives (select models only)	39
Identifying the installed optical drive	39
Inserting an optical disc	39
Removing an optical disc	40
8 External cards and devices	41
Using Digital Media Slot cards (select models only)	41
Inserting a digital card	41
Removing a digital card	42
Using a USB device	42
Connecting a USB device	43
Removing a USB device	43
Using optional external devices	44
Using optional external drives	44
9 Memory modules	45
10 Security	49
Protecting the computer	49
Using passwords	50
Setting passwords in the operating system	50
Setting passwords in Setup Utility	50
Managing an administrator password	51
Entering an administrator password	51
Managing a power-on password	52
Entering a power-on password	52
Using firewall software	53
Installing an optional security cable	54
11 Backup and recovery	55
Performing a system recovery	55
Backing up your information	56

12 Setup Utility (BIOS)	57
Starting Setup Utility	57
Using Setup Utility	57
Changing the language of Setup Utility	57
Navigating and selecting in Setup Utility	58
Displaying system information	58
Restoring factory default settings in Setup Utility	58
Exiting Setup Utility	58
Updating the BIOS	58
Determining the BIOS version	59
Downloading a BIOS update	59
Appendix A Troubleshooting and support	60
Troubleshooting	60
The computer is unable to start up	60
The computer screen is blank	60
Software is functioning abnormally	61
The computer is on but not responding	61
The computer is unusually warm	61
An external device is not working	61
The wireless network connection is not working	62
The optical disc tray does not open for removal of a CD or DVD	62
The computer does not detect the optical drive	63
A disc does not play	63
A movie is not visible on an external display	63
The process of burning a disc does not begin, or it stops before completion	64
Contacting customer support	64
Labels	65
Appendix B Cleaning your computer	66
Cleaning products	66
Appendix C Specifications	67
Input power	67
Operating environment	68
Appendix D Electrostatic discharge	69
Index	70


1 Welcome

The following section is included in this chapter:

- [Finding information](#)

After you set up and register the computer, take the following steps:

- **Connect to the Internet**—Set up your wired or wireless network so that you can connect to the Internet. For more information, refer to [Networking on page 12](#).
- **Get to know your computer**—Learn about your computer features. Refer to [Getting to know your computer on page 3](#) and [Keyboard and pointing devices on page 17](#) for additional information.
- **Find installed software**—Access a list of the software preinstalled on the computer. Select **Computer > More Applications**. The list of preinstalled software is displayed.

 **NOTE:** For details about using the software included with the computer, select **Computer > Help**. You can also refer to the software manufacturer's instructions, which may be provided with the software or on the manufacturer's Web site.

- **Update programs and drivers**—Update your programs and drivers with the latest versions on a regular basis. When your computer is registered, it will automatically be updated with the latest versions. When you register, you can choose to receive automatic notifications when updates become available. The automatic notifications for operating system updates are available for 90 days. You can also go to <http://www.hp.com/support> to download updates from HP.

Finding information

The computer comes with several resources to help you perform various tasks.

Resources	For information about
<i>Start Here</i> poster	<ul style="list-style-type: none">• Setting up the computer• Identifying computer components
Linux Help To access the Linux Help, select Computer > Help .	<ul style="list-style-type: none">• Computer software• Computer settings• Connecting to the Internet• Computer utilities
<i>Regulatory, Safety and Environmental Notices</i> To access the notices, click the HP Documents icon located on the desktop.	<ul style="list-style-type: none">• Regulatory and safety information• Battery disposal information
<i>Safety & Comfort Guide</i> To access this guide: Click the HP Documents icon located on the desktop. – or – Go to http://www.hp.com/ergo .	<ul style="list-style-type: none">• Proper workstation setup, posture, health, and work habits• Electrical and mechanical safety information
<i>Worldwide Telephone Numbers</i> booklet This booklet is provided with your computer.	HP support telephone numbers
HP Web site To access this Web site, go to http://www.hp.com/support .	<ul style="list-style-type: none">• Support information• Ordering parts and finding additional help• Software, driver, and BIOS updates• Accessories available for the device
<i>Limited Warranty*</i> To access the warranty: Click the HP Documents icon located on the desktop. – or – Go to http://www.hp.com/go/orderdocuments .	Warranty information

*You may find the expressly provided HP Limited Warranty applicable to your product located with the electronic guides on your computer and/or on the CD/DVD provided in the box. Some countries/regions may provide a printed HP Limited Warranty in the box. In countries/regions where the warranty is not provided in printed format, you may request a printed copy at <http://www.hp.com/go/orderdocuments> or write to:

- **North America:** Hewlett-Packard, MS POD, 11311 Chinden Blvd, Boise, ID 83714, USA
- **Europe, Middle East, Africa:** Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy
- **Asia Pacific:** Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507

Please include your product number, warranty period (found on your serial number label), name and postal address.


2 Getting to know your computer

The following sections are included in this chapter:

- [Top](#)
- [Right](#)
- [Left](#)
- [Display](#)
- [Bottom](#)

Top


TouchPad

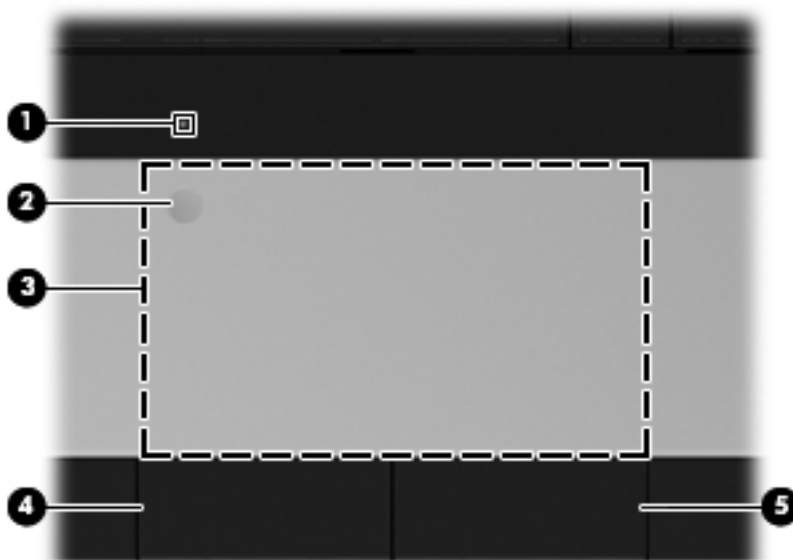



Component	Description
(1) TouchPad light	<ul style="list-style-type: none">• Off: The TouchPad is on.• Amber: The TouchPad is off.
(2) TouchPad on/off button	Turns the TouchPad on and off.

Component	Description
(3) TouchPad zone	Moves the pointer and selects or activates items on the screen.
(4) Left TouchPad button	Functions like the left button on an external mouse.
(5) Right TouchPad button	Functions like the right button on an external mouse.

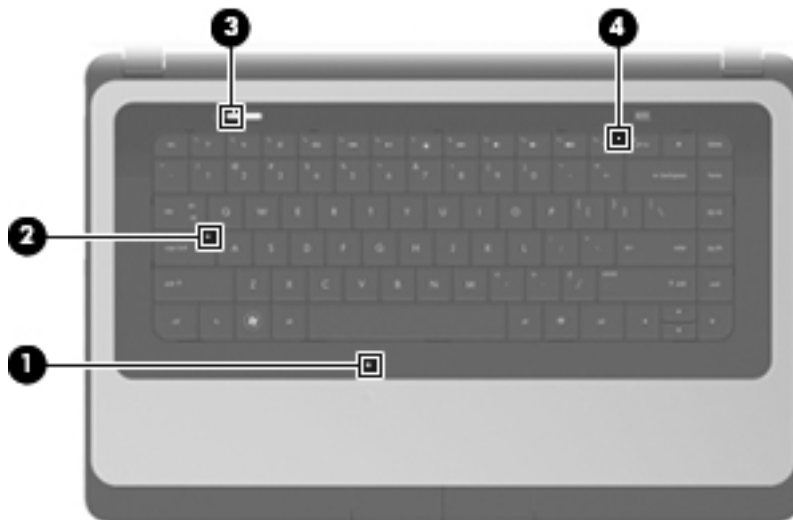
Lights




Component	Description
(1) TouchPad light	<ul style="list-style-type: none"> Off: The TouchPad is on. Amber: The TouchPad is off.
(2) Caps lock light	On: Caps lock is on.
(3)  Power light	<ul style="list-style-type: none"> White: The computer is on. Blinking white: The computer is in the Suspend state. Off: The computer is off or in Hibernation.
(4)  Wireless light	<ul style="list-style-type: none"> White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on. Amber: All wireless devices are off.



Buttons



Component	Description
 Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Suspend.• When the computer is in the Suspend state, press the button briefly to exit Suspend.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and operating system shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Computer > Control Center > Power Management.</p>

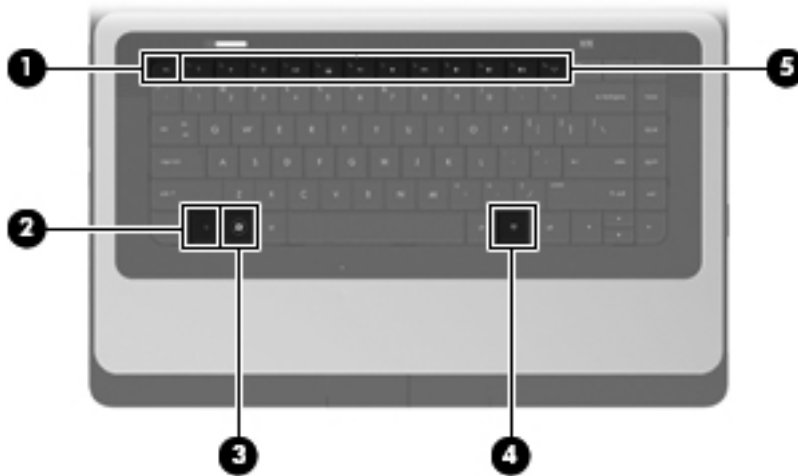


Keys




Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Displays system information when pressed in combination with the <code>esc</code> key.
(3)  Operating system logo key	Displays the operating system menu.
(4)  Operating system applications key	Displays a shortcut menu for items beneath the pointer.
(5) Action keys	Execute frequently used system functions.







Right

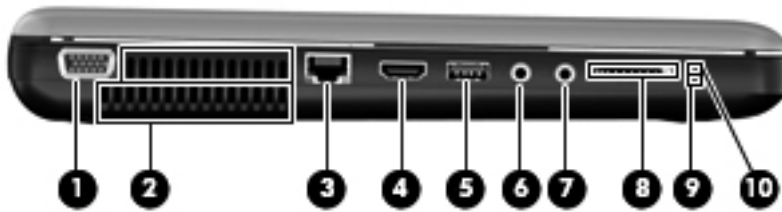



Component	Description
(1) Optical drive	Reads and writes (select models only) to an optical disc.
(2) Optical drive light	<ul style="list-style-type: none">On: The optical drive is being accessed.Off: The optical drive is idle.
(3)  USB ports (2)	Connect optional USB devices.
(4)  Power connector	Connects an AC adapter.
(5) Battery/AC adapter light	<ul style="list-style-type: none">White: The computer is connected to external power and the battery is fully charged.Amber: A battery is charging.
(6)  Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

Left



Component	Description
(1) 	External monitor port Connects an external VGA monitor or projector.
(2)	Vents (2) Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3) 	RJ-45 (network) jack Connects a network cable.
(4) 	HDMI port (select models only) Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(5) 	USB port Connects an optional USB device.
(6) 	Audio-in (microphone) jack Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(7) 	Audio-out (headphone) jack Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety and Environmental Notices</i> . NOTE: When a device is connected to the headphone jack, the computer speakers are disabled.
(8)	Digital Media Slot Supports the following digital card formats: <ul style="list-style-type: none"> Secure Digital (SD) Memory Card Secure Digital Extended Capacity (SDxC) Memory Card Secure Digital High Capacity (SDHC) Memory Card MultiMediaCard (MMC)

Component		Hard drive light	Description
(9)			<ul style="list-style-type: none"><li data-bbox="1031 226 1445 275">• Blinking white: The hard drive is being accessed.<li data-bbox="1031 302 1326 327">• Off: The hard drive is idle.
(10)		Power light	<ul style="list-style-type: none"><li data-bbox="1031 352 1337 375">• White: The computer is on.<li data-bbox="1031 403 1437 451">• Blinking white: The computer is in the Suspend state.<li data-bbox="1031 478 1358 527">• Off: The computer is off or in Hibernation.


Display






Component	Description
(1) WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN). NOTE: Select computer models only have one WLAN antenna.
(2) Webcam light	On: The webcam is in use.
(3) Webcam	Records video and captures still photographs.
(4) Internal microphone	Records sound.
(5) Internal display switch	Turns off the display and initiates Suspend if the display is closed while the power is on. NOTE: The internal display switch is not visible from the outside of the computer.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

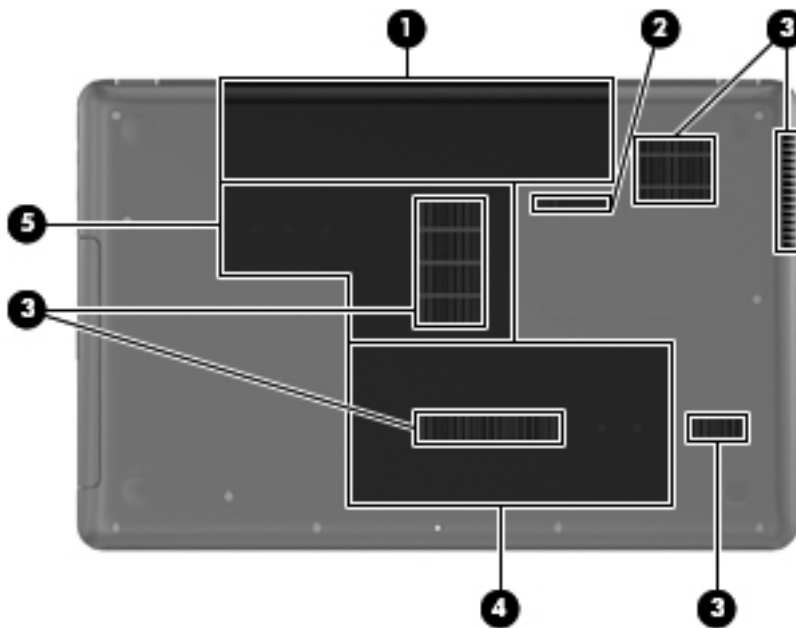Bottom



Component	Description
(1)	Battery bay Holds the battery.
(2) 	Battery release latch Releases the battery from the battery bay.
(3)	Vents (5) Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4) 	Hard drive bay Holds the hard drive.
(5) 	Memory module compartment Contains the memory module slots.


3 Networking

The following sections are included in this chapter:

- [Using an Internet service provider \(ISP\)](#)
- [Identifying wireless and network status icons](#)
- [Creating a wireless connection](#)
- [Using a WLAN](#)
- [Using Bluetooth wireless devices \(select models only\)](#)
- [Connecting to a wired network](#)


Your computer may support one or both of the following types of Internet access:

- **Wireless**—For mobile Internet access, you can use a wireless connection. Refer to [Connecting to an existing WLAN on page 14](#) or [Setting up a new WLAN on page 14](#).
- **Wired**—You can access the Internet by connecting to a wired network. For information on connecting to a wired network, refer to [Connecting to a wired network on page 16](#).




 **NOTE:** Internet hardware and software features vary depending on computer model and your location.

Using an Internet service provider (ISP)

Before you can connect to the Internet, you must establish an ISP account. Contact a local ISP to purchase Internet service and a modem. The ISP will help set up the modem, install a network cable to connect your wireless computer to the modem, and test the Internet service.

 **NOTE:** Your ISP will give you a user ID and password to access the Internet. Record this information and store it in a safe place.

Identifying wireless and network status icons

Icon	Name	Description
	Wireless (connected)	Indicates that one or more wireless devices are on.
	Network Connection (connected)	Indicates that the wired network is connected and active. If both wired and wireless connections are active, the operating system uses the wired connection because it is faster.
	Network Connection (disconnected)	Indicates that wired and wireless networks are not connected.

Creating a wireless connection


Your computer may be equipped with one or more of the following wireless devices:

- Wireless local-area network (WLAN) device
- Bluetooth® device

Turning wireless devices on and off

Using the wireless key

Use the wireless key to turn both the wireless network controller and the Bluetooth controller off or on simultaneously. They can be controlled individually through Control Center or Computer Setup.

 **NOTE:** Refer to [Using the action keys on page 17](#) for information on identifying the location of the wireless key on your computer.

Using the operating system controls

To enable or disable a wireless or wired network device:


1. Right-click the **Network Connection** icon in the notification area, at the far right of the taskbar.
2. To enable or disable one of the following devices, select or clear one of the following options:
 - **Enable Networking** (all network devices)
 - **Enable Wireless**

Using a WLAN

A wireless connection connects the computer to Wi-Fi networks, or WLANs. A WLAN is composed of other computers and accessories that are linked by a wireless router or a wireless access point.

Connecting to an existing WLAN

1. Turn on the computer.
2. Be sure that the WLAN device is on.


 **NOTE:** Refer to [Using the action keys on page 17](#) for information on identifying the location of the wireless key on your computer.

3. Click the **Network Connection** icon in the notification area, at the far right of the taskbar.

Available wireless networks are listed under **Wireless Networks**.

4. Click the desired wireless network.

If the network is a security-enabled WLAN, you are prompted to enter a network security code. Type the code, and then click **OK** to complete the connection.

 **NOTE:** To connect to a network that is not automatically detected, click the **Network Connection** icon and select **Connect to Hidden Wireless Network**. Enter the ESSID information, and set encryption parameters.

NOTE: If no WLANs are listed, and your network is not hidden, you are out of range of a wireless router or access point.


If you do not see the network you want to connect to, right-click the **Network Connection** icon in the notification area, at the far right of the taskbar, and click **Edit Connections**.


Setting up a new WLAN

Required equipment:

- A broadband modem (either DSL or cable) **(1)** and high-speed Internet service purchased from an Internet service provider (ISP)
- A wireless router (purchased separately) **(2)**
- The wireless computer **(3)**

The illustration below shows an example of a wireless network installation that is connected to the Internet.

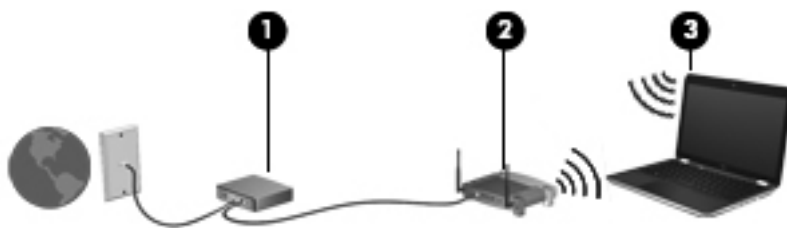

 **NOTE:** Some cable modems include a built-in router. Check with your ISP to see if you need a separate router.

NOTE: When setting up a wireless connection, be sure that your computer and wireless router are synchronized. To synchronize your computer and wireless router, turn your computer and wireless router off and then back on.

As your network grows, additional wireless and wired computers can be connected to the network to access the Internet.

For help in setting up your WLAN, refer to the information provided by your router manufacturer or your ISP.

Protecting your WLAN

When you set up a WLAN or access an existing WLAN, always enable security features to protect your network from unauthorized access. WLANs in public areas (hotspots) like coffee shops and airports may not provide any security. If you are concerned about the security of your computer in a hotspot, limit your network activities to e-mail that is not confidential and basic Internet surfing.

Wireless radio signals travel outside the network, so other WLAN devices can pick up unprotected signals. You can use the following precautions to protect your WLAN:

- **Use a firewall**—Checks both data and requests for data that are sent to your network, and discards any suspicious items. Firewalls are available in both software and hardware. Some networks use a combination of both types.
- **Encrypt your data**—Wi-Fi Protected Access (WPA and WPA2) encrypts and decrypts data transmitted over the network. WPA uses Temporal Key Integrity Protocol (TKIP) to dynamically generate a new key for every packet. It also generates different sets of keys for each computer on the network. Wired Equivalent Privacy (WEP) encrypts data before it is transmitted using a WEP key. Without the correct key, others will not be able to use the WLAN.

Roaming to another network

When you move your computer within range of another WLAN, the operating system attempts to connect to that network. If the attempt is successful, your computer is automatically connected to the new network. If the operating system does not recognize the new network, follow the same procedure you used initially to connect to your WLAN.

Using Bluetooth wireless devices (select models only)

A Bluetooth device provides short-range wireless communications that replace the physical cable connections that traditionally link electronic devices such as the following:

- Computers
- Phones
- Audio devices

The strength of Bluetooth is in synchronizing information transfers between your computer and wireless devices. The inability to consistently connect two or more computers to share the Internet through Bluetooth is a limitation of Bluetooth and the operating system.

Bluetooth devices provide peer-to-peer capability that allows you to set up a personal area network (PAN) of Bluetooth devices. For information on configuring and using Bluetooth devices, refer to the Bluetooth software Help.

Connecting to a wired network


Connecting to a local area network (LAN) (select models only)

Connecting to a local area network (LAN) requires an 8-pin, RJ-45 network cable (purchased separately). If the network cable contains noise suppression circuitry **(1)**, which prevents interference from TV and radio reception, orient the circuitry end of the cable **(2)** toward the computer.



To connect the network cable:

1. Plug the network cable into the network jack **(1)** on the computer.
2. Plug the other end of the cable into a network wall jack **(2)**.

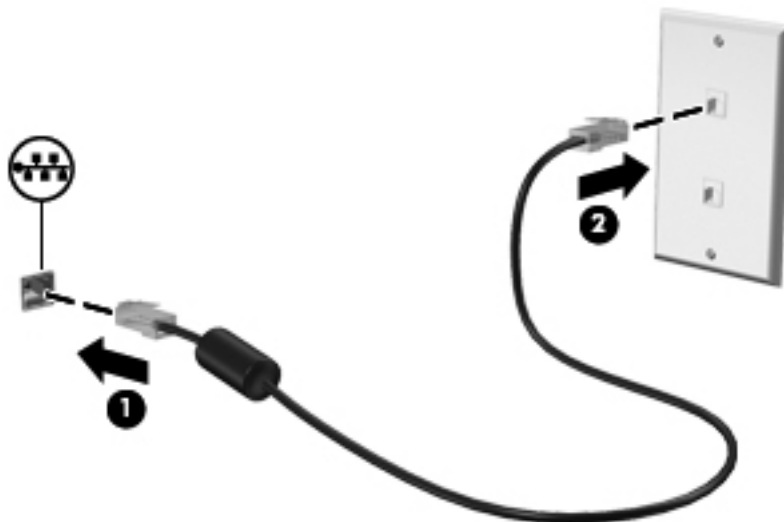

⚠ WARNING! To reduce the risk of electric shock, fire, or damage to the equipment, do not plug a modem or telephone cable into the RJ-45 (network) jack.

4 Keyboard and pointing devices

The following sections are included in this chapter:


- [Using the keyboard](#)
- [Using the TouchPad](#)


Using the keyboard

Using the action keys




Action keys are customized actions that are assigned to specific keys at the top of the keyboard. The icons on the **f1** through **f12** keys represent the action key functions.










To use an action key, press and hold this key to activate the assigned function.

 **NOTE:** The action key feature is enabled at the factory. You can disable this feature in Setup Utility (BIOS) and revert back to standard settings by pressing the **fn** key and one of the function keys to activate the assigned function. Refer to [Setup Utility \(BIOS\) on page 57](#) for instructions.

 **CAUTION:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.



Icon	Action	Description
	Help	Opens Help. Help provides tutorials, answers to questions, and product updates.
	Screen brightness down	Decreases the screen brightness level.
	Screen brightness up	Increases the screen brightness level.

Icon	Action	Description
	Switch screen image	Switches the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, this key alternates the screen image from computer display to monitor display to simultaneous display on both the computer and the monitor. Most external monitors receive video information from the computer using the external VGA video standard. The switch screen image key can also alternate images among other devices that are receiving video information from the computer.
	Previous	Plays the previous track of an audio CD or the previous section of a DVD or a BD.
	Play/Pause	Plays, pauses, or resumes an audio CD, a DVD, or a BD.
	Internet and Web	Opens a Web browser.
	Next	Plays the next track of an audio CD or the next section of a DVD or a BD.
	Volume down	Decreases speaker volume.
	Volume up	Increases speaker volume.
	Mute	Mutes or restores speaker sound.
	Wireless	Turns the wireless feature on or off. NOTE: This key does not establish a wireless connection. To establish a wireless connection, a wireless network must be set up.

Using the TouchPad


To move the pointer, slide one finger across the TouchPad in the direction you want the pointer to go. Use the left and right TouchPad buttons like the buttons on an external mouse.

Setting pointing device preferences

To customize settings for pointing devices, such as button configuration, click speed, and pointer options, select **Computer > Control Center > Mouse**.


Turning the TouchPad off and on

To turn the TouchPad off and on, quickly double-tap the TouchPad on/off button.

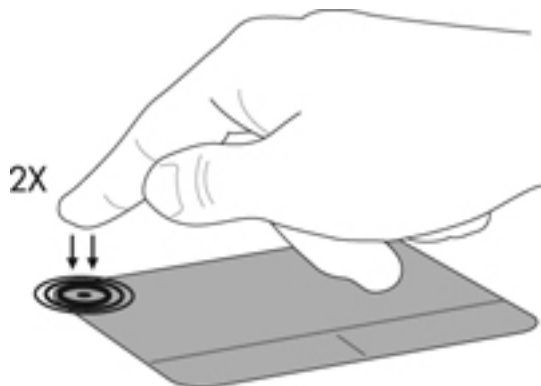


Using TouchPad gestures (select models only)

The TouchPad supports a variety of gestures. To use TouchPad gestures, place two fingers on the TouchPad at the same time.

 **NOTE:** TouchPad gestures are not supported in all programs.


To turn the gestures on and off:

1. Select **Computer > Control Center > TouchPad**, and then click the **Settings** button.
2. Select the gesture that you want to turn on or off.
3. Click **Apply**, and then click **OK**.


 **NOTE:** The computer also supports additional TouchPad features. To view and turn on these features, select **Computer > Control Center > TouchPad**, and then click the **Settings** button.

Scrolling

Scrolling is useful for moving up, down, or sideways on a page or image. To scroll, place two fingers slightly apart on the TouchPad, and then drag them across the TouchPad in an up, down, left, or right motion.

 **NOTE:** Scrolling speed is controlled by finger speed.


NOTE: Two-finger scrolling is enabled at the factory.

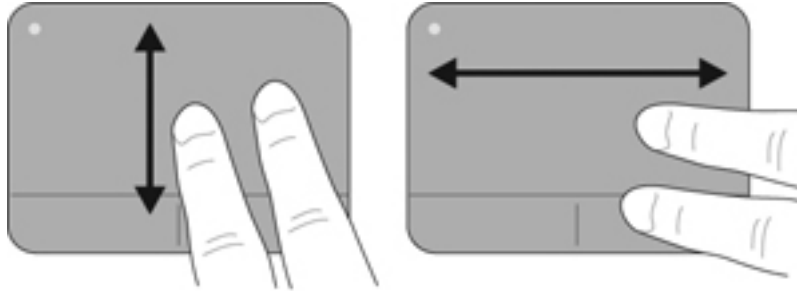


Pinching/Zooming

Pinching allows you to zoom in or out on images or text.

- Zoom in by placing two fingers together on the TouchPad, and then moving them apart.
- Zoom out by placing two fingers apart on the TouchPad, and then moving them together.

 **NOTE:** Pinching/zooming is enabled at the factory.

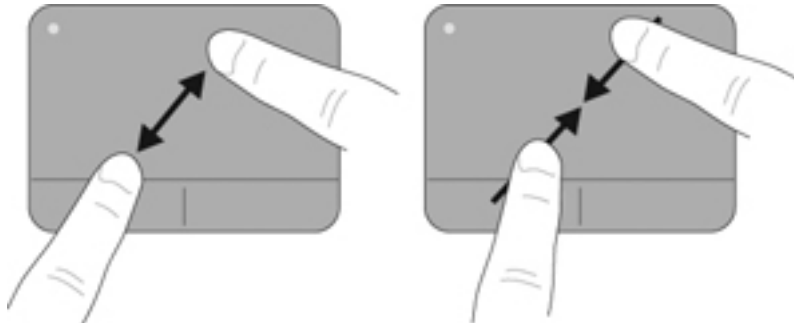

5 Multimedia

The following sections are included in this chapter:

- [Using the media activity keys](#)
- [Using the audio features](#)
- [Using the webcam \(select models only\)](#)
- [Using video devices](#)


Your computer may include the following:

- Integrated speakers
- Integrated microphones
- Integrated webcam
- Preinstalled multimedia software
- Multimedia buttons or keys

Using the media activity keys

Depending on your computer model, you may have the following media activity controls that allow you to play, pause, fast forward, or rewind a media file:

- Media buttons
- Media hotkeys (specific keys pressed in combination with the **fn** key)
- Media action keys

 **NOTE:** Refer to [Getting to know your computer on page 3](#) and [Keyboard and pointing devices on page 17](#) for information about your computer's media activity controls.

Using the audio features


Your computer enables you to use a variety of audio features:

- Play music.
- Record sound.
- Download music from the Internet.
- Create multimedia presentations.
- Transmit sound and images with instant messaging programs.
- Stream radio programs (select models only).
- Create (burn) audio CDs using the installed optical drive (select models only) or on an optional external optical drive (purchased separately).

Adjusting the volume

Depending on your computer model, you can adjust the volume using the following:

- Volume buttons
- Volume hotkeys
- Volume keys

 **WARNING!** To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the *Regulatory, Safety and Environmental Notices*.

 **NOTE:** Volume can also be controlled through the operating system and some programs.

NOTE: Refer to [Getting to know your computer on page 3](#) and [Keyboard and pointing devices on page 17](#) for information on what type of volume controls your computer has.


Checking your audio functions

To check the system sound on your computer, follow these steps:

1. Select **Computer > Control Center > Sound**.
2. Click the **Devices** tab, and then click the **Test** button in order to test each sound.

To check the recording functions of the computer, follow these steps:

1. Select **Computer > Control Center > Sound**.
2. Click the **Devices** tab, and then click the **Test** button next to **Sound capture**.

 **NOTE:** For best results when recording, speak directly into the microphone and record sound in a setting free of background noise.

To confirm or change the audio settings on your computer, right-click the **Sound** icon in the notification area, at the far right of the taskbar.

Using the webcam (select models only)

Some computers include an integrated webcam, located at the top of the display. With the preinstalled software, Cheese, you can use the webcam to take a photo or record a video. You can preview and save the photo or video recording.

The webcam software enables you to experiment with the following features:

- Capturing and sharing video
- Streaming video with instant message software
- Taking still photos

 **NOTE:** For details about using your webcam, click the **Help** menu in the Cheese software.

Using video devices


Your computer may have one or more of the following external video ports:


- VGA
- HDMI

VGA

The external monitor port, or VGA port, is an analog display interface that connects an external VGA display device such as an external VGA monitor or a VGA projector to the computer.


- ▲ To connect a VGA display device, connect the device cable to the external monitor port.

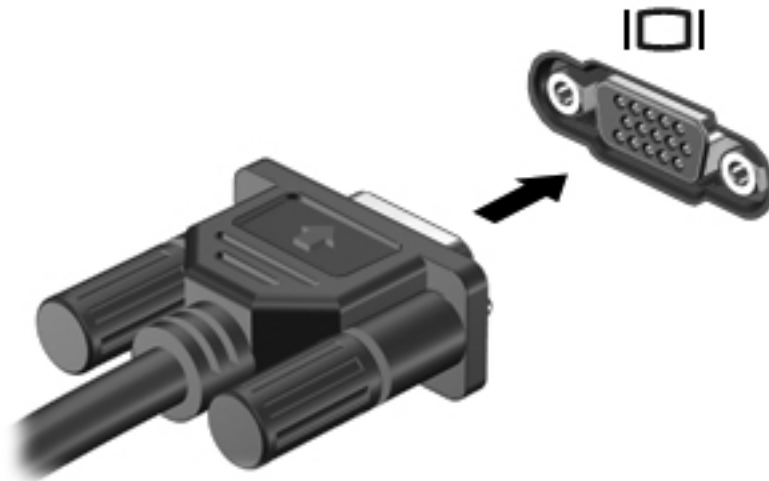

 **NOTE:** Press **f4** to switch the image between the display devices connected to the computer.

Connecting an HDMI device (select models only)


The HDMI (High Definition Multimedia Interface) port connects the computer to an optional video or audio device, such as a high-definition television, or to any compatible digital or audio component.

 **NOTE:** To transmit video signals through the HDMI port, you need an HDMI cable (purchased separately).


One HDMI device can be connected to the HDMI port on the computer. The information displayed on the computer screen can be simultaneously displayed on the HDMI device.

To connect a video or audio device to the HDMI port:

1. Connect one end of the HDMI cable to the HDMI port on the computer.

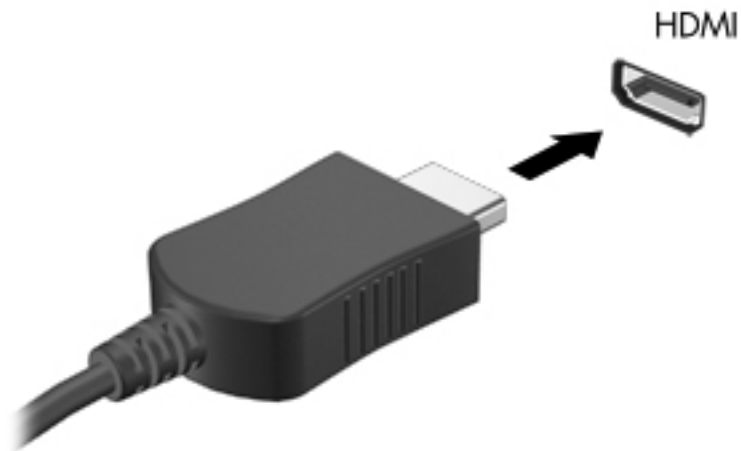

2. Connect the other end of the cable to the video device, and then refer to the device manufacturer's instructions for additional information.

 **NOTE:** Press **f4** to switch the image between the display devices connected to the computer.

Configuring audio for HDMI (select models only)

To configure HDMI audio, first connect an audio or video device, such as a high-definition TV, to the HDMI port on your computer. Then configure the default audio playback device as follows:

1. Right-click the **Speakers** icon in the notification area, at the far right of the taskbar, and then click **Open Volume Control**.
2. On the **Output Devices** tab, click the HDMI audio device.
3. Click the down arrow, and then click **Default**.

To return audio to the computer speakers, follow these steps:

1. Right-click the **Speakers** icon in the notification area, at the far right of the taskbar, and then click **Open Volume Control**.
2. On the **Output Devices** tab, click **Analog audio device**.
3. Click the down arrow, and then click **Default**.



NOTE: You can also right-click the audio device listed in the dialog box, and then click **Default**.

6 Power management

The following sections are included in this chapter:

- [Shutting down the computer](#)
- [Setting power options](#)
- [Using battery power](#)
- [Using external AC power](#)

Shutting down the computer


△ **CAUTION:** Unsaved information will be lost when the computer is shut down.

The shutdown command closes all open programs, including the operating system, and then turns off the display and computer.

Shut down the computer under any of the following conditions:

- When you need to replace the battery or access components inside the computer
- When you are connecting an external hardware device that does not connect to a USB port
- When the computer will be unused and disconnected from external power for an extended period

To shut down the computer, follow these steps:

 **NOTE:** If the computer is in the Suspend state or in Hibernation, you must first exit Suspend or Hibernation before shutdown is possible.

1. Save your work and close all open programs.
2. Select **Computer > Shutdown > Shut Down**.

If the computer is unresponsive and you are unable to use the preceding shutdown procedure, try the following emergency procedures in the sequence provided:

- Press and hold the power button for at least 5 seconds.
- Disconnect the computer from external power, and then remove the battery.

Setting power options

Using power-saving states

The computer has two power-saving states enabled at the factory: Suspend and Hibernation.

When Suspend is initiated, the power lights blink and the screen clears. Your work is saved to memory, letting you exit the Suspend state faster than exiting Hibernation. If the computer is in the Suspend state for an extended period or if the battery reaches a critical battery level while in the Suspend state, the computer initiates Hibernation.

When Hibernation is initiated, your work is saved to a hibernation file on the hard drive and the computer turns off.

△ **CAUTION:** To prevent possible audio and video degradation, loss of audio or video playback functionality, or loss of information, do not initiate Suspend or Hibernation while reading from or writing to a disc or an external media card.

📝 **NOTE:** You cannot initiate any type of networking connection or perform any computer functions while the computer is in the Suspend state or in Hibernation.

Initiating and exiting Suspend

The system is set at the factory to initiate Suspend after a period of inactivity when running on battery power or on external power.

Power settings and timeouts can be changed using Power Management in Control Center.

With the computer on, you can initiate Suspend in any of the following ways:

- Briefly press the power button.
- Close the display.

📝 **NOTE:** This only works when the computer is running on battery power.

- Select **Computer > Shutdown > Suspend**.
- Click the **Power** icon, located on the far right of the taskbar, and then click **Suspend**.

To exit Suspend:

- ▲ Briefly press the power button.

When the computer exits Suspend, the power lights turn on and your work returns to the screen where you stopped working.

Initiating and exiting Hibernation

The system is set at the factory to initiate Hibernation after a period of inactivity when running on battery power or on external power, or when the battery reaches a critical battery level.

Power settings and timeouts can be changed using Power Management in Control Center.

With the computer on, you can initiate Hibernation in any of the following ways:

- Briefly press the power button.
- Select **Computer > Shutdown > Hibernate**.
- Click the **Power** icon, located on the far right of the taskbar, and then click **Hibernate**.

To exit Hibernation:

- ▲ Briefly press the power button.

When the computer exits Hibernation, the power lights turn on and your work returns to the screen where you stopped working.

Using the Power icon

The **Power** icon is located in the notification area, at the far right of the taskbar. The **Power** icon allows you to quickly access power settings, view remaining battery charge, and select a different power plan.

- To display the percentage of remaining battery charge, click the **Power** icon, and then click **Information**.
- To access Power Management Preferences, click the **Power** icon, and then click **Preferences**.

Using power management

Power management is a collection of system settings that manages how the computer uses power. Power management can help you conserve power or maximize performance.

You can customize power management settings.

Viewing the current power management settings

- ▲ Right-click the **Power** icon in the notification area, at the far right of the taskbar, and then click **Preferences**.


Changing the current power management settings

1. Right-click the **Power** icon in the notification area, at the far right of the taskbar, and then click **Preferences**.
2. Change the settings on the **On AC Power** tab, **On Battery Power** tab, and **General** tab, as needed.


Using battery power

When a charged battery is in the computer and the computer is not plugged into external power, the computer runs on battery power. When a charged battery is in the computer and the computer is plugged into external AC power, the computer runs on AC power.

If the computer contains a charged battery and is running on external AC power supplied through the AC adapter, the computer switches to battery power if the AC adapter is disconnected from the computer.

 **NOTE:** When you disconnect AC power, the display brightness is automatically decreased to save battery life. For information on increasing or decreasing display brightness, refer to [Keyboard and pointing devices on page 17](#).

You can keep a battery in the computer or in storage, depending on how you work. Keeping the battery in the computer whenever the computer is plugged into AC power charges the battery and also protects your work in case of a power outage. However, a battery in the computer slowly discharges when the computer is off and unplugged from external power.


 **WARNING!** To reduce potential safety issues, use only the battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.

Computer battery life varies, depending on power management settings, programs running on the computer, display brightness, external devices connected to the computer, and other factors.

Displaying the remaining battery charge

- ▲ Move the pointer over the **Power** icon in the notification area, at the far right of the taskbar.

Inserting or removing the battery

 **NOTE:** For additional information on using the battery, refer to the *HP Notebook Reference Guide*.

To insert the battery:

- ▲ Insert the battery (1) into the battery bay, and then pivot the battery (2) downward until it is seated.



To remove the battery:

△ **CAUTION:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work and initiate Hibernation or shut down the computer before removing the battery.

1. Slide the battery release latch (1) to release the battery.
2. Tilt the battery (2) to remove it, and then lift it out of the battery bay (3).



Charging a battery

△ **WARNING!** Do not charge the computer battery while you are onboard aircraft.

The battery charges whenever the computer is plugged into external power through an AC adapter or an optional power adapter.

The battery charges whether the computer is off or in use, but it charges faster when the computer is off.

Charging may take longer if a battery is new, has been unused for 2 weeks or more, or is much warmer or cooler than room temperature.

To prolong battery life and optimize the accuracy of battery charge displays, follow these recommendations:

- If you are charging a new battery, charge it fully before turning on the computer.

📖 **NOTE:** If the computer is on while the battery is charging, the battery meter in the notification area may show 100 percent charge before the battery is fully charged.

- Allow the battery to discharge below 5 percent of a full charge through normal use before charging it.
- If the battery has been unused for one month or more, calibrate the battery instead of simply charging it.

Maximizing battery life

To maximize battery life:

1. Select **Computer > Control Center > Power Management**.
2. On the **On Battery Power** tab:
 - Adjust the slider to the right of **Put computer to sleep when inactive for** to 30 minutes.
 - Select the **Suspend** or **Hibernate** option to the right of **When laptop lid is closed**.
 - Select the **Hibernate** or **Shutdown** option to the right of **When battery power is critically low**.
3. Adjust the slider to the right of **Put display to sleep when inactive for** to 15 minutes, and select the check box next to **Reduce backlight brightness**.
4. Click **Close**.

Managing low battery levels

The information in this section describes the alerts and system responses set at the factory. Some low-battery alerts and system responses can be changed using Power Management in Control Center. Preferences set using Power Management do not affect lights.

Identifying low battery levels

When a battery that is the sole power source for the computer reaches a low or critical battery level, the following behavior occurs:

- If Hibernation is enabled and the computer is on or in Suspend, the computer initiates Hibernation.
- If Hibernation is disabled and the computer is on or in Suspend, the computer remains briefly in Suspend, and then shuts down and loses any unsaved information.

Resolving a low battery level

Resolving a low battery level when external power is available

- ▲ Connect one of the following devices:
 - AC adapter
 - Optional docking or expansion device
 - Optional power adapter purchased as an accessory from HP

Resolving a low battery level when a charged battery is available

1. Turn off the computer or initiate Hibernation.
2. Replace the discharged battery with a charged battery.
3. Turn on the computer.

Resolving a low battery level when no power source is available

- Initiate Hibernation.
- Save your work and shut down the computer.

Resolving a low battery level when the computer cannot exit Hibernation

When the computer lacks sufficient power to exit Hibernation, follow these steps:

1. Replace the discharged battery with a charged battery, or connect the AC adapter to the computer and to external power.
2. Exit Hibernation by briefly pressing the power button.

Conserving battery power

- Turn off wireless and local area network (LAN) connections and exit modem applications when you are not using them.
- Disconnect unused external devices that are not plugged into an external power source.
- Stop, disable, or remove any external media cards that you are not using.
- Decrease brightness.
- Initiate Suspend or Hibernation, or shut down when you are not using the computer.

Storing a battery

△ **CAUTION:** To reduce the risk of damage to a battery, do not expose it to high temperatures for extended periods of time.

If a computer will be unused and unplugged from external power for more than 2 weeks, remove the battery and store it separately.

To prolong the charge of a stored battery, place it in a cool, dry place.

📅 **NOTE:** A stored battery should be checked every 6 months. If the capacity is less than 50 percent, recharge the battery before returning it to storage.

Calibrate a battery before using it if it has been stored for one month or more.

Disposing of a used battery


△ **WARNING!** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.

Refer to the *Regulatory, Safety and Environmental Notices* for battery disposal information.


Replacing the battery

Computer battery life varies, depending on power management settings, programs running on the computer, display brightness, external devices connected to the computer, and other factors.


You can find details about the battery and device information by clicking the **Battery** icon in the notification area, at the far right of the taskbar, and then clicking **Laptop Battery**.

 **NOTE:** To ensure that you always have battery power when you need it, HP recommends purchasing a new battery when the storage capacity indicator turns green-yellow.


Using external AC power

 **NOTE:** For information on connecting to AC power, refer to the *Start Here* poster provided in the computer box.

External AC power is supplied through an approved AC adapter or an optional docking or expansion device.

 **WARNING!** To reduce potential safety issues, use only the AC adapter provided with the computer, a replacement AC adapter provided by HP, or a compatible AC adapter purchased from HP.

Connect the computer to external AC power under any of the following conditions:

 **WARNING!** Do not charge the battery while you are onboard aircraft.

- When you are charging or calibrating a battery
- When you are installing or modifying system software
- When writing information to a CD or DVD

When you connect the computer to external AC power, the following events occur:

- The battery begins to charge.
- If the computer is turned on, the Battery icon in the notification area changes appearance.

When you disconnect external AC power, the following events occur:

- The computer switches to battery power.
- The display brightness is automatically decreased to save battery life.

Testing an AC adapter

Test the AC adapter if the computer exhibits any of the following symptoms when it is connected to AC power:

- The computer does not turn on.
- The display does not turn on.
- The power lights are off.

To test the AC adapter:

1. Shut down the computer.
2. Remove the battery from the computer.
3. Connect the AC adapter to the computer, and then plug it into an AC outlet.
4. Turn on the computer.
 - If the power lights turn **on**, the AC adapter is functioning properly.
 - If the power lights remain **off**, the AC adapter is not functioning and should be replaced.

Contact technical support for information on obtaining a replacement AC power adapter.

7 Drives

The following sections are included in this chapter:

- [Handling drives](#)
- [Replacing or upgrading the hard drive](#)
- [Using optical drives \(select models only\)](#)

Handling drives

Drives are fragile computer components that must be handled with care. Refer to the following cautions before handling drives. Additional cautions are included with the procedures to which they apply.

Observe these precautions:

- Before you move a computer that is connected to an external hard drive, initiate Suspend and allow the screen to clear, or properly disconnect the external hard drive.
- Before handling a drive, discharge static electricity by touching the unpainted metal surface of the drive.
- Do not touch the connector pins on a removable drive or on the computer.
- Handle a drive carefully; do not drop a drive or place items on it.
- Before removing or inserting a drive, shut down the computer. If you are unsure whether the computer is off, in Suspend, or in Hibernation, turn the computer on, and then shut it down through the operating system.
- Do not use excessive force when inserting a drive into a drive bay.
- Do not type on the keyboard or move the computer while an optical drive is writing to a disc. The write process is sensitive to vibration.
- When the battery is the only source of power, be sure that the battery is sufficiently charged before writing to media.
- Avoid exposing a drive to temperature or humidity extremes.
- Avoid exposing a drive to liquids. Do not spray the drive with cleaning products.
- Remove media from a drive before removing the drive from the drive bay, or traveling with, shipping, or storing a drive.

- If a drive must be mailed, place the drive in a bubble-pack mailer or other suitable protective packaging and label the package “FRAGILE.”
- Avoid exposing a drive to magnetic fields. Security devices with magnetic fields include airport walk-through devices and security wands. Airport conveyer belts and similar security devices that check carry-on baggage use X-rays instead of magnetism and do not damage drives.

Replacing or upgrading the hard drive

The following sections are included in this chapter:

- [Removing the hard drive](#)
- [Installing a hard drive](#)


△ **CAUTION:** To prevent information loss or an unresponsive system:

Shut down the computer before removing the hard drive from the hard drive bay. Do not remove the hard drive while the computer is on, in Suspend, or in Hibernation.


If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system.

Removing the hard drive

1. Save your work and shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Unplug the power cord from the AC outlet and remove the battery.
4. Loosen the hard drive cover screw (1).
5. Remove the hard drive cover (2).

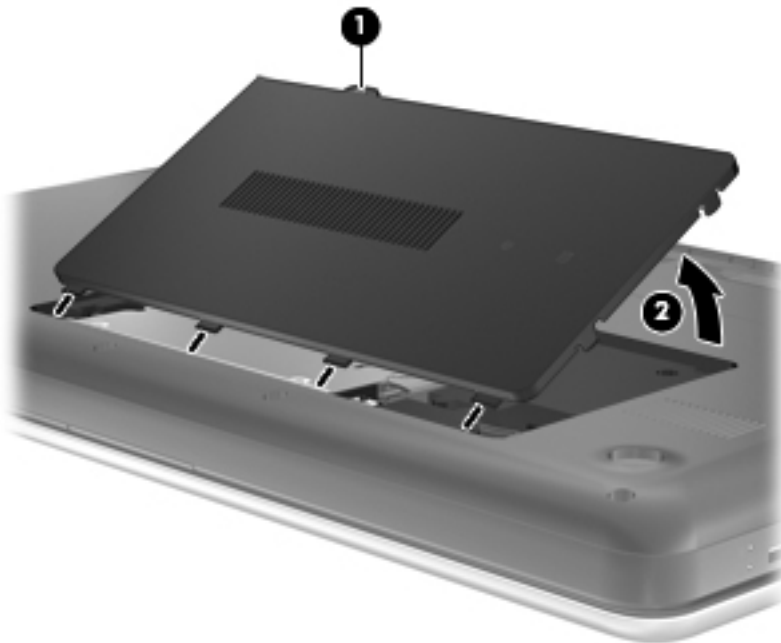


6. Disconnect the hard drive cable (1) from the computer.
7. Remove the 4 hard drive screws (2).
8. Lift the hard drive (3) out of the hard drive bay.

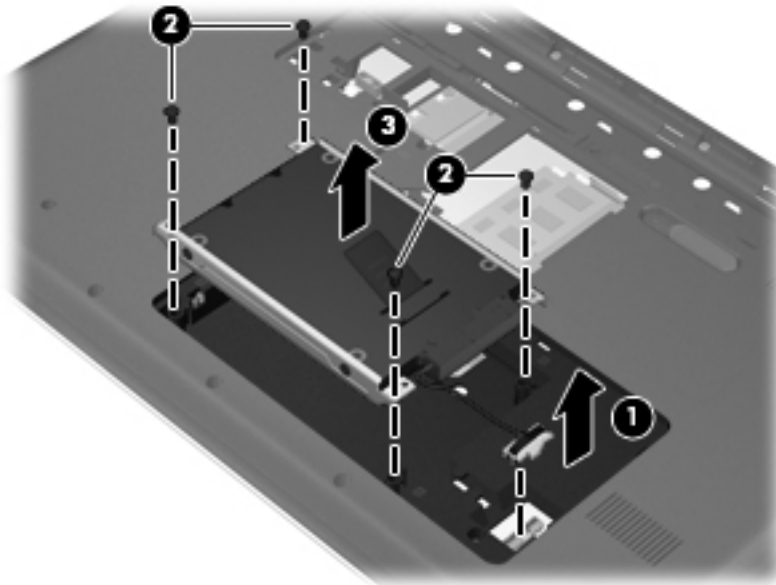


Installing a hard drive

1. Insert the hard drive (1) into the hard drive bay.
2. Replace the 4 hard drive screws (2).
3. Connect the hard drive cable (3) to the computer.

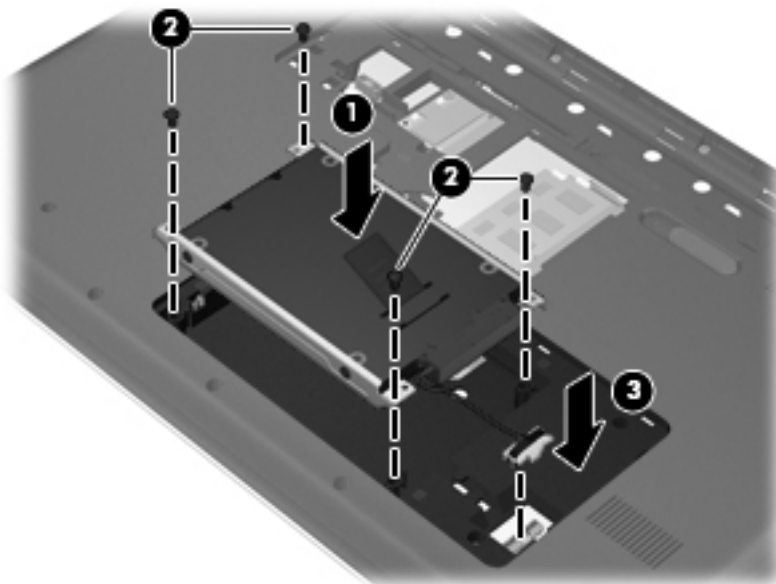

4. Align the tabs on the hard drive cover (1) with the notches on the computer.

5. Close the cover (2).
6. Tighten the hard drive cover screw (3).

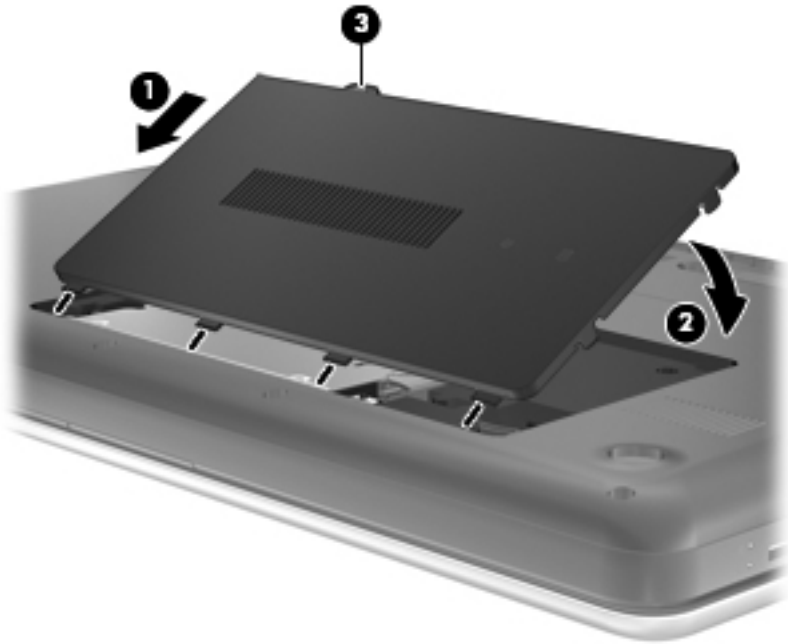

7. Replace the battery.
8. Reconnect external power and external devices.
9. Turn on the computer.

Using optical drives (select models only)


Identifying the installed optical drive

- ▲ Select **Computer > YaST > Hardware Information**.


A list of all the devices installed in your computer, including your optical drive, is displayed.

Inserting an optical disc


1. Turn on the computer.
2. Press the release button (1) on the drive bezel to release the disc tray.
3. Pull out the tray (2).
4. Hold the disc by the edges to avoid touching the flat surfaces and position the disc label-side up over the tray spindle.

 **NOTE:** If the tray is not fully accessible, tilt the disc carefully to position it over the spindle.

5. Gently press the disc (3) down onto the tray spindle until the disc snaps into place.

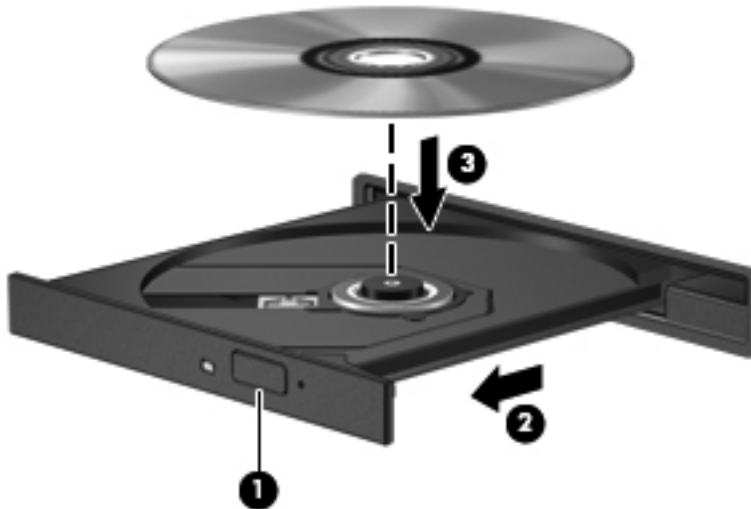


6. Close the disc tray.


 **NOTE:** After you insert a disc, a short pause is normal. If you have not selected a media player, an AutoPlay dialog box opens. It prompts you to select how you want to use the media content.

Removing an optical disc

To remove a disc:

1. Press the release button **(1)** on the drive bezel to release the disc tray, and then gently pull out the tray **(2)** until it stops.
2. Remove the disc **(3)** from the tray by gently pressing down on the spindle while lifting the outer edges of the disc. Hold the disc by the edges and avoid touching the flat surfaces.

 **NOTE:** If the tray is not fully accessible, tilt the disc carefully as you remove it.

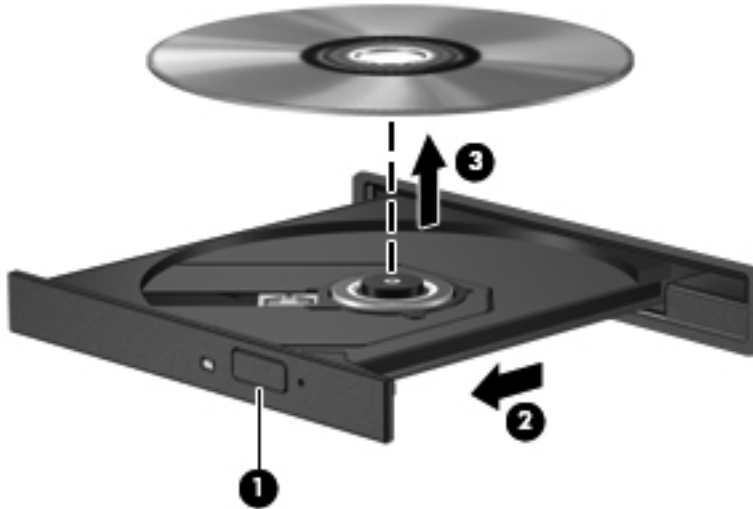

3. Close the disc tray and place the disc in a protective case.

8 External cards and devices

The following sections are included in this chapter:

- [Using Digital Media Slot cards \(select models only\)](#)
- [Using a USB device](#)
- [Using optional external devices](#)

Using Digital Media Slot cards (select models only)


Optional digital cards provide secure data storage and convenient data sharing. These cards are often used with digital media-equipped cameras and PDAs as well as with other computers.

To determine which digital card formats that are supported on your computer, refer to [Getting to know your computer on page 3](#).

Inserting a digital card

△ **CAUTION:** To reduce the risk of damage to the digital card connectors, use minimal force to insert a digital card.

1. Hold the digital card label-side up, with the connectors facing the computer.
2. Insert the card into the Digital Media Slot, and then push in on the card until it is firmly seated.

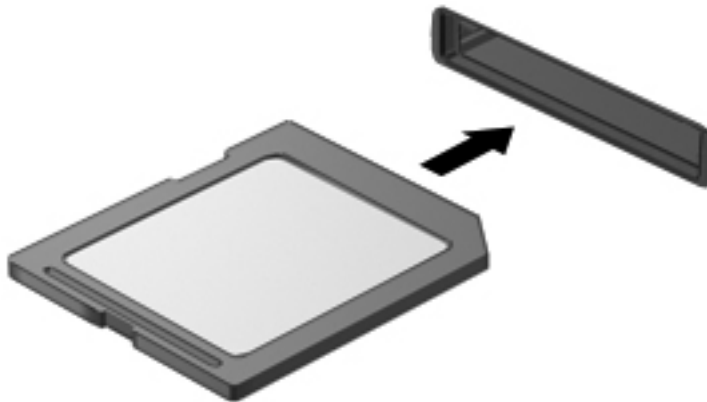

Removing a digital card

△ **CAUTION:** To reduce the risk of loss of data or an unresponsive system, use the following procedure to safely remove the digital card.


Save your information and close all programs associated with the digital card.

To remove a digital card:

1. Open File Browser by selecting **Computer > Nautilus**.
2. Click the **Eject** icon next to the name of the digital card in the Places list on the left pane of File Browser.


📝 **NOTE:** You are prompted that it is safe to remove the hardware device.

3. Press in on the card (1), and then remove it from the slot (2).

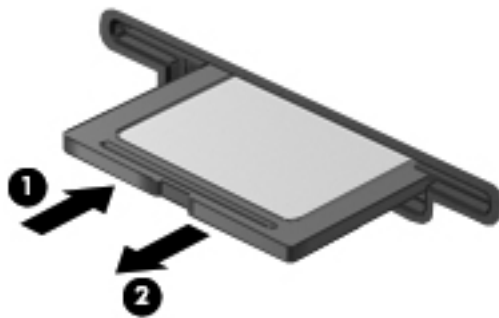

– or –

Pull the card out of the slot.

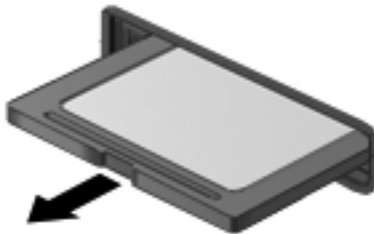

Using a USB device

Universal Serial Bus (USB) is a hardware interface that can be used to connect an optional external device, such as a USB keyboard, mouse, drive, printer, scanner, or hub. Devices can be connected to the system.

Some USB devices may require additional support software, which is usually included with the device. For more information about device-specific software, refer to the manufacturer's instructions.

The computer has 3 USB ports, which support USB 2.0 devices. An optional USB hub provides additional USB ports that can be used with the computer.

Connecting a USB device

△ **CAUTION:** To prevent damage to a USB connector, use minimal force to connect a USB device.

- ▲ To connect a USB device to the computer, connect the USB cable for the device to the USB port.



You will hear a sound when the device has been detected.

📄 **NOTE:** When you connect a USB device, you may see a message in the notification area to let you know that the device is recognized by the system.

Removing a USB device

△ **CAUTION:** To prevent damage to a USB connector, do not pull on the cable to remove the USB device.


CAUTION: To prevent loss of information or an unresponsive system, use the following procedure to safely remove a USB device.

To remove a USB device:


1. Open File Browser by selecting **Computer > Nautilus**.
2. Click the **Eject** icon next to the name of the device in the Places list on the left pane of File Browser.
3. Remove the device.

📄 **NOTE:** You can remove a USB mouse or USB keyboard by unplugging the device from the computer. USB storage devices must be disconnected from the computer using the above procedure.

Using optional external devices

 **NOTE:** For more information about required software and drivers, or to learn which computer port to use, refer to the manufacturer's instructions.

To connect an external device to the computer:

 **CAUTION:** To reduce the risk of damage to the equipment when connecting a powered device, be sure that the device is turned off and the AC power cord is unplugged.

1. Connect the device to the computer.
2. If you are connecting a powered device, plug the device power cord into a grounded AC outlet.
3. Turn on the device.

To disconnect an unpowered external device, turn off the device, and then disconnect it from the computer. To disconnect a powered external device, turn off the device, disconnect it from the computer, and then unplug the AC power cord.

Using optional external drives

Removable external drives expand your options for storing and accessing information. A USB drive can be added by connecting the drive to a USB port on the computer.

USB drives include the following types:

- 1.44-megabyte diskette drive
- External hard drive (a hard drive with an adapter attached)
- External optical drive (CD and DVD)
- MultiBay device

9 Memory modules

The computer has two memory module slots. The capacity of the computer can be upgraded by adding a memory module to the vacant expansion memory module slot or by upgrading the existing memory module in the primary memory module slot.

-
- ⚠ **WARNING!** To reduce the risk of electric shock and damage to the equipment, unplug the power cord and remove all batteries before installing a memory module.
 - ⚠ **CAUTION:** Electrostatic discharge (ESD) can damage electronic components. Before beginning any procedure, ensure that you are discharged of static electricity by touching a grounded metal object.
 - 📝 **NOTE:** To use a dual-channel configuration when adding a second memory module, be sure that both memory modules are identical.
-

To add or replace a memory module:


-
- ⚠ **CAUTION:** To prevent information loss or an unresponsive system:

Shut down the computer before adding or replacing memory modules. Do not remove a memory module while the computer is on, in the Suspend state, or in Hibernation.

If you are not sure whether the computer is off or in Hibernation, turn the computer on by pressing the power button. Then shut down the computer through the operating system.


1. Save your work and shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Unplug the power cord from the AC outlet and remove the battery.
4. Loosen the memory module compartment cover screw **(1)**.

5. Remove the memory module compartment cover (2).

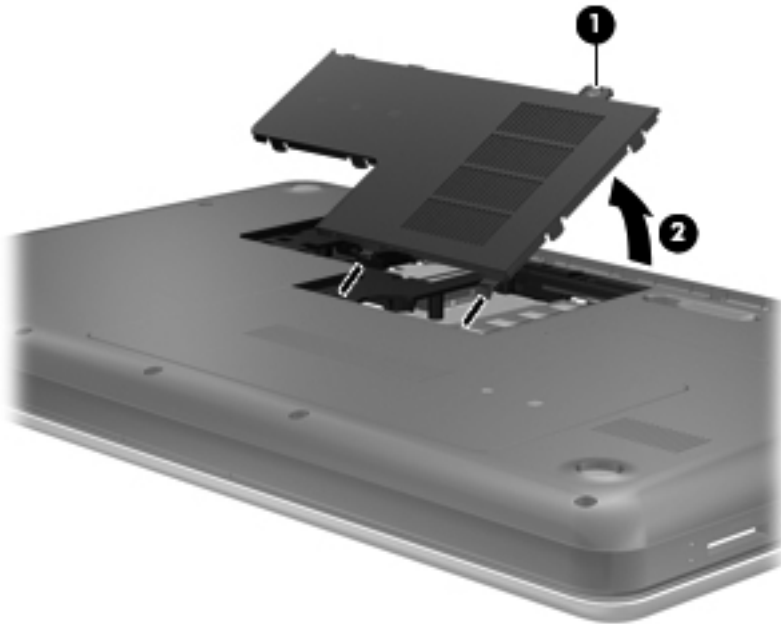

6. If you are replacing a memory module, remove the existing memory module:
 - a. Pull away the retention clips (1) on each side of the memory module.
The memory module tilts up.
 - b. Grasp the edge of the memory module (2), and then gently pull the memory module out of the memory module slot.

△ **CAUTION:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

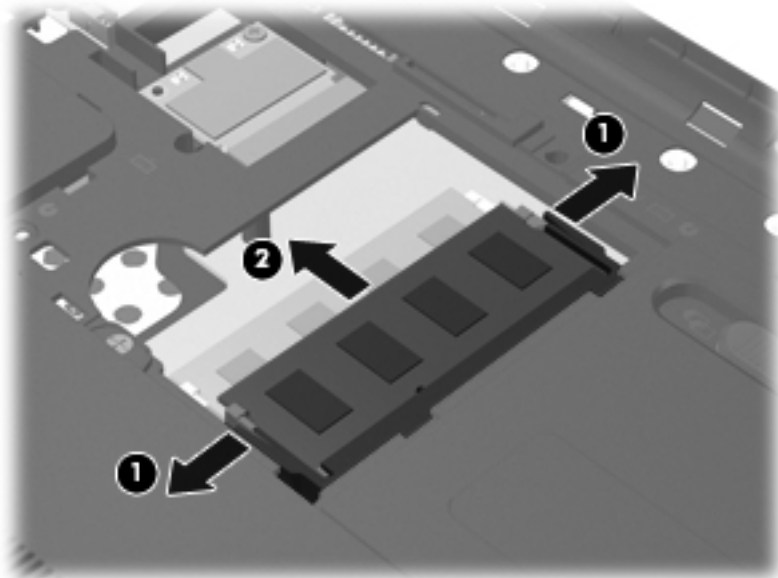


To protect a memory module after removal, place it in an electrostatic-safe container.

7. Insert a new memory module:

△ **CAUTION:** To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.


- a. Align the notched edge (1) of the memory module with the tab in the memory module slot.
- b. With the memory module at a 45-degree angle from the surface of the memory module compartment, press the module (2) into the memory module slot until it is seated.
- c. Gently press the memory module (3) down, applying pressure to both the left and right edges of the memory module, until the retention clips snap into place.

△ **CAUTION:** To prevent damage to the memory module, be sure that you do not bend the memory module.

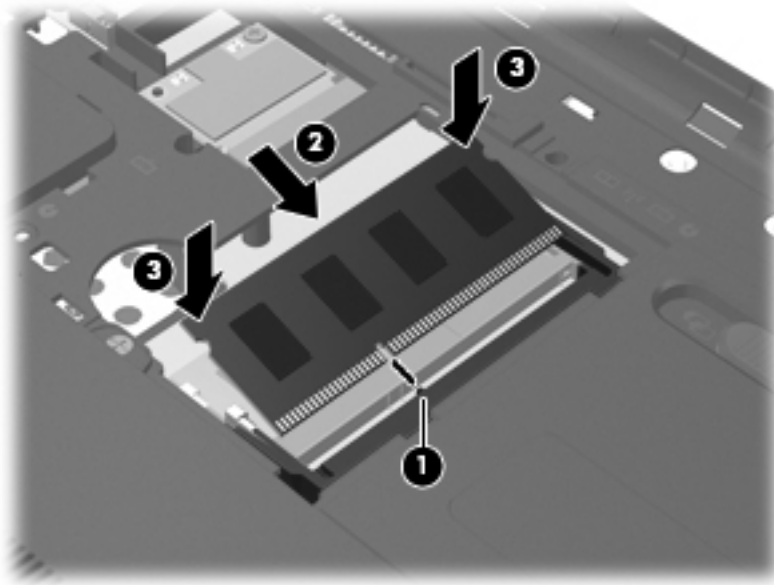

8. Align the tabs on the memory module compartment cover (1) with the notches on the computer.
9. Close the cover (2).

10. Tighten the memory module compartment cover screw (3).

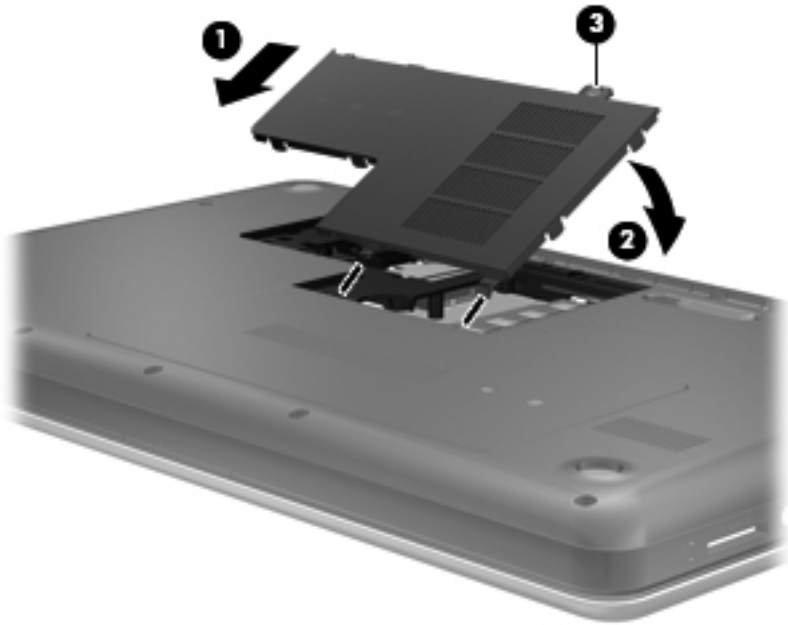


11. Replace the battery.
12. Reconnect external power and external devices.
13. Turn on the computer.

10 Security

The following sections are included in this chapter:

- [Protecting the computer](#)
- [Using passwords](#)
- [Using firewall software](#)
- [Installing an optional security cable](#)


Protecting the computer

 **NOTE:** Security solutions are designed to act as deterrents, but they may not deter software attacks or prevent the computer from being mishandled or stolen.

NOTE: Before you send your computer for service, back up and delete confidential files, and remove all password settings.

Security features provided with your computer can protect the computer, personal information, and data from a variety of risks. The way you use your computer will determine which security features you need to use.

The operating system offers certain security features. Additional security features are listed in the following table. Most of these additional security features can be configured in Setup Utility.

 **NOTE:** Some features listed in this chapter may not be available on your computer.


To protect against	Use this security feature
Unauthorized use of the computer	Power-on authentication using passwords
Unauthorized access to Setup Utility (f10)	Administrator password in Setup Utility*
Unauthorized access to the contents of a hard drive	DriveLock password in Setup Utility*
Unauthorized reset of Setup Utility (f10) passwords	Stringent security feature in Setup Utility*
Unauthorized startup from an optical drive, diskette drive, or internal network adapter	Boot options feature in Setup Utility*
Unauthorized access to data	<ul style="list-style-type: none">• Firewall software• Operating system updates
Unauthorized access to Setup Utility settings and other system identification information	Administrator password in Setup Utility*

To protect against	Use this security feature
Unauthorized removal of the computer	Security cable slot (used with an optional security cable)

*Setup Utility is a utility accessed by pressing **f10** when the computer is turned on or restarted. When using Setup Utility, you must use the keys on your computer to navigate and make selections.

Using passwords

A password is a group of characters that you choose to secure your computer information. Several types of passwords can be set, depending on how you want to control access to your information. Passwords can be set in the operating system or in Setup Utility, which is preinstalled on the computer.

 **NOTE:** To reduce the risk of being locked out of the computer, record each password and store it in a secure place.

Setting passwords in the operating system

Operating system passwords	Function
Root password	Protects access to an operating system root-level account.
User password	Protects access to an operating system user account.

Setting passwords in Setup Utility

Setup Utility passwords	Function
Administrator password*	<ul style="list-style-type: none"> Protects access to Setup Utility. After this password is set, it must be entered each time you access Setup Utility. <p>CAUTION: If you forget your administrator password, you cannot access Setup Utility.</p> <p>NOTE: The administrator password can be used in place of the power-on password.</p> <p>NOTE: Your administrator password is not displayed as it is set, entered, changed, or deleted.</p> <p>NOTE: If you enter the power-on password at the first password check before the "Press the ESC key for Startup Menu" message is displayed, you must enter the administrator password to access Setup Utility.</p>

Setup Utility passwords	Function
Power-on password*	<ul style="list-style-type: none"> Protects access to the computer contents. After this password is set, it must be entered each time you turn on or restart the computer, or exit Hibernation. <p>CAUTION: If you forget your power-on password, you cannot turn on or restart the computer, or exit Hibernation.</p> <p>NOTE: The administrator password can be used in place of the power-on password.</p> <p>NOTE: A power-on password is not displayed as it is set, entered, changed, or deleted.</p>

*For details about each of these passwords, refer to the following topics.

Managing an administrator password

To set, change, or delete this password, follow these steps:

- Open Setup Utility by turning on or restarting the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f10**.
- Use the arrow keys to select **Security > Set Administrator Password**, and then press **enter**.
 - To set an administrator password, type your password in the **Enter New Password** and **Confirm New Password** fields, and then press **enter**.
 - To change an administrator password, type your current password in the **Enter Current Password** field, type a new password in the **Enter New Password** and **Confirm New Password** fields, and then press **enter**.
 - To delete an administrator password, type your current password in the **Enter Password** field, and then press **enter** 4 times.
- To save your changes and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**.

Your changes take effect when the computer restarts.

Entering an administrator password

At the **Enter Password** prompt, type your administrator password, and then press **enter**. After 3 unsuccessful attempts to enter the administrator password, you must restart the computer and try again.

Managing a power-on password

To set, change, or delete this password, follow these steps:

1. Open Setup Utility by turning on or restarting the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f10**.
2. Use the arrow keys to select **Security > Set Power-On Password**, and then press **enter**.
 - To set a power-on password, type your password in the **Enter New Password** and **Confirm New Password** fields, and then press **enter**.
 - To change a power-on password, type your current password in the **Enter Current Password** field, type a new password in the **Enter New Password** and **Confirm New Password** fields, and then press **enter**.
 - To delete a power-on password, type your current password in the **Enter Current Password** field, and then press **enter** 4 times.
3. To save your changes and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**.

Your changes take effect when the computer restarts.

Entering a power-on password

At the **Enter Password** prompt, type your password, and then press **enter**. After 3 unsuccessful attempts to enter the password, you must restart the computer and try again.

Using firewall software


Firewalls are designed to prevent unauthorized access to a system or network. A firewall can be a software program you install on your computer and/or network, or it can be a solution made up of both hardware and software.

There are two types of firewalls to consider:


- Host-based firewalls—Software that protects only the computer it is installed on.
- Network-based firewalls—Installed between your DSL or cable modem and your home network to protect all the computers on the network.

When a firewall is installed on a system, all data sent to and from the system is monitored and compared with a set of user-defined security criteria. Any data that does not meet those criteria is blocked.

Your computer or networking equipment may already have a firewall installed. If not, firewall software solutions are available.


 **NOTE:** Under some circumstances a firewall can block access to Internet games, interfere with printer or file sharing on a network, or block authorized e-mail attachments. To temporarily resolve the problem, disable the firewall, perform the task that you want to perform, and then reenable the firewall. To permanently resolve the problem, reconfigure the firewall.

Installing an optional security cable

 **NOTE:** A security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

NOTE: The security cable slot on your computer may look different from the illustration in this section. Refer to [Getting to know your computer on page 3](#) for the location of the security cable slot on your computer.

1. Loop the security cable around a secured object.
2. Insert the key (1) into the cable lock (2).
3. Insert the cable lock into the security cable slot on the computer (3), and then lock the cable lock with the key.

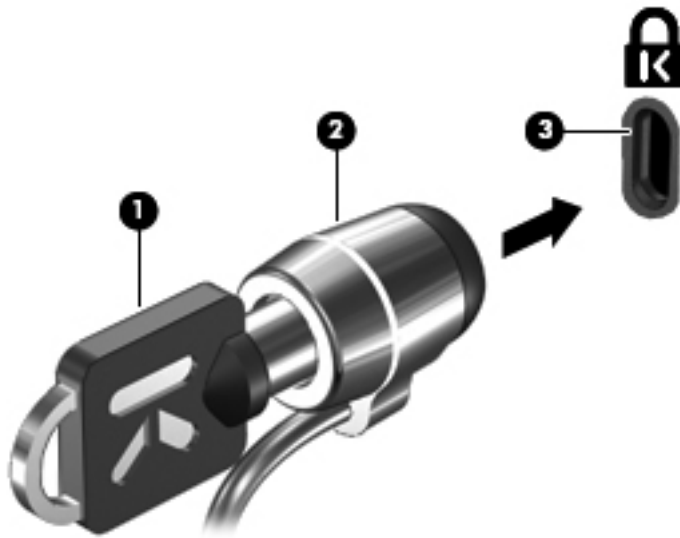

4. Remove the key and keep it in a safe place.

11 Backup and recovery

The following sections are included in this chapter:

- [Performing a system recovery](#)
- [Backing up your information](#)

Recovery after a system failure is as good as your most recent backup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Performing a system recovery

Recovery allows you to repair or restore the computer to its original factory state. Recovery works from a dedicated recovery partition on the hard drive. This type of recovery restores the computer to its factory condition without using recovery discs.

△ **CAUTION:** Using Recovery completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery tool reinstalls the original operating system and HP programs and drivers that were installed at the factory. Software, drivers, and updates not installed by HP must be manually reinstalled. Personal files must be restored from a backup.

To restore the computer from the partition, follow these steps:

1. If possible, back up all personal files.
2. Restart the computer.
3. Using the arrow keys, select **Recovery**, and then press [enter](#).
4. Follow the on-screen instructions.

📖 **NOTE:** If you are unable to boot (start up) your computer from the hard drive partition with the primary operating system or from the recovery partition, you must purchase a *SUSE Linux Enterprise Desktop Operating System* DVD to reinstall the operating system. For additional information, refer to the *Worldwide Telephone Numbers* booklet.

Backing up your information

You should back up your computer files on a regular schedule to maintain a current backup. You can manually back up your information to an optional external drive, a network drive, or discs. Back up your system at the following times:

- At regularly scheduled times
- Before the computer is repaired or restored
- Before you add or modify hardware or software

To back up your home directory files using Backup Manager Settings:

1. Select **Computer > More Applications > Backup Manager Settings**, and then click **Backup my home directory**.
2. Click the **Storage Destination Location** menu and select a location to back up your information.
3. Click the **Schedule** menu and select a time schedule to perform backups at a regularly scheduled time.

To immediately back up your information, select the **Backup Now** check box.



NOTE: Before you back up your information, be sure you have designated a location to save the backup files.

4. Click **Save and Backup** to start the backup and to save the backup settings.

To restore backup files:

1. Select **Computer > More Applications > Backup Manager Restore**.
2. Click the **Backup Source** menu and select the location of the backup files.
3. Click the **Restore Destination** menu and select the destination to restore the files.
4. To restore all files from the selected location, click **Restore all files**. To restore selected files only, click **Restore selected files**, click **Select Files**, and then select the files to be restored.
5. Under **Restore Point**, click the time and date of the backup.



NOTE: If multiple backups have been performed, click **Use the latest version** to restore the latest version.

6. Click **Restore** to start restoring the files, or click **Cancel** to cancel the operation.

12 Setup Utility (BIOS)

The following sections are included in this chapter:

- [Starting Setup Utility](#)
- [Using Setup Utility](#)
- [Updating the BIOS](#)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.

△ **CAUTION:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

Starting Setup Utility

- ▲ Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press [esc](#). When the Startup Menu is displayed, press [f10](#).

Using Setup Utility

Changing the language of Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **System Configuration > Language**, and then press [enter](#).
3. Use the arrow keys to select a language, and then press [enter](#).
4. When a confirmation prompt with your language selected is displayed, press [enter](#).
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press [enter](#).

Your change takes effect immediately.

Navigating and selecting in Setup Utility

Setup Utility does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a list or to toggle a field—for example an Enable/Disable field—use either the arrow keys or **f5** and **f6**.
- To select an item, press **enter**.
- To close a text box or return to the menu display, press **esc**.
- To display additional navigation and selection information while Setup Utility is open, press **f1**.


Displaying system information

1. Start Setup Utility.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Restoring factory default settings in Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press **enter**.
3. When the Setup Confirmation is displayed, press **enter**.
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.

The Setup Utility factory settings take effect when the computer restarts.

 **NOTE:** Your password, security, and language settings are not changed when you restore the factory settings.

Exiting Setup Utility

- To exit Setup Utility and save your changes from the current session:
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.
- To exit Setup Utility without saving your changes from the current session:
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Updating the BIOS

Updated versions of the BIOS may be available on the HP Web site.

Most BIOS updates on the HP Web site are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.


Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn+esc** or by using Setup Utility.

1. Start Setup Utility.
2. If the system information is not displayed, use the arrow keys to select the **Main** menu.
BIOS and other system information is displayed.
3. To exit Setup Utility, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Suspend or Hibernation.


Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Access the page on the HP Web site that provides software for your computer.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
 - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

A Troubleshooting and support

The following sections are included in this appendix:

- [Troubleshooting](#)
- [Contacting customer support](#)
- [Labels](#)


Troubleshooting

The following sections describe several common issues and solutions.

The computer is unable to start up

If the computer does not turn on when you press the power button, the following suggestions may help you determine why the computer does not start up:

- If the computer is plugged into an AC outlet, plug another electrical device into the outlet to be sure that the outlet is providing adequate power.

 **NOTE:** Use only the AC adapter provided with the computer or one approved by HP for this computer.

- If the computer is plugged into an external power source other than an AC outlet, plug the computer into an AC outlet using the AC adapter. Be sure that the power cord and AC adapter connections are secure.

The computer screen is blank

If the screen is blank but you have not turned off the computer, one or more of these settings may be the cause:

- The computer may be in the Suspend state or in Hibernation. To exit Suspend or Hibernation, briefly press the power button. Suspend and Hibernation are energy-saving features that turn off the display. Suspend and Hibernation can be initiated by the system while the computer is on but is not in use, or when the computer has reached a low battery level. To change these and other power settings, right-click the **Battery** icon in the notification area, at the far right of the taskbar, and then click **Preferences**.
- The computer may not be set to display the image on the computer screen. To transfer the image to the computer screen, press **f4**. On most models, when an optional external display, such as a monitor, is connected to the computer, the image can be displayed on the computer screen or the external display, or on both devices simultaneously. When you press **f4**

repeatedly, the image alternates among the computer display, one or more external displays, and simultaneous display on all devices.

Software is functioning abnormally

If the software is unresponsive or responds abnormally, restart the computer by selecting **Computer > Shutdown > Restart**. If you cannot restart the computer using this procedure, refer to the next section, [The computer is on but not responding on page 61](#).

The computer is on but not responding

If the computer is turned on but is not responding to software or keyboard commands, try the following emergency shutdown procedures, in the sequence provided, until shutdown occurs:

△ **CAUTION:** Emergency shutdown procedures result in the loss of unsaved information.

- Press and hold the power button for at least 5 seconds.
- Disconnect the computer from external power and remove the battery.

The computer is unusually warm

It is normal for the computer to feel warm to the touch while it is in use. But if the computer feels *unusually* warm, it may be overheating because a vent is blocked.

If you suspect that the computer is overheating, allow the computer to cool to room temperature. Be sure to keep all vents free from obstructions while you are using the computer.

△ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

📄 **NOTE:** The fan in the computer starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during operation.

An external device is not working

Follow these suggestions if an external device does not function as expected:

- Turn on the device according to the manufacturer's instructions.
- Be sure that all device connections are secure.
- Be sure that the device is receiving electrical power.
- Be sure that the device, especially if it is older, is compatible with the operating system.
- Be sure that the correct drivers are installed and updated.


The wireless network connection is not working


If a wireless network connection is not working as expected, follow these suggestions:

- To enable or disable a wireless or wired network device, right-click the **Network Connection** icon in the notification area, at the far right of the taskbar. To enable devices, select the check box from the menu options. To disable the device, clear the check box.
- Be sure that the wireless device is turned on.
- Be sure that the computer wireless antennas are free from obstructions.
- Be sure that the cable or DSL modem and its power cord are properly connected and that the lights are on.
- Be sure that the wireless router or access point is properly connected to its power adapter and to the cable or DSL modem, and that the lights are on.
- Disconnect and then reconnect all cables, and turn the power off and then back on.

The optical disc tray does not open for removal of a CD or DVD

1. Insert the end of a paper clip (**1**) into the release access in the front bezel of the drive.
2. Press in gently on the paper clip until the disc tray is released, and then pull out the tray (**2**) until it stops.
3. Remove the disc (**3**) from the tray by gently pressing down on the spindle while lifting the outer edges of the disc. Hold the disc by the edges and avoid touching the flat surfaces.

 **NOTE:** If the tray is not fully accessible, tilt the disc carefully as you remove it.

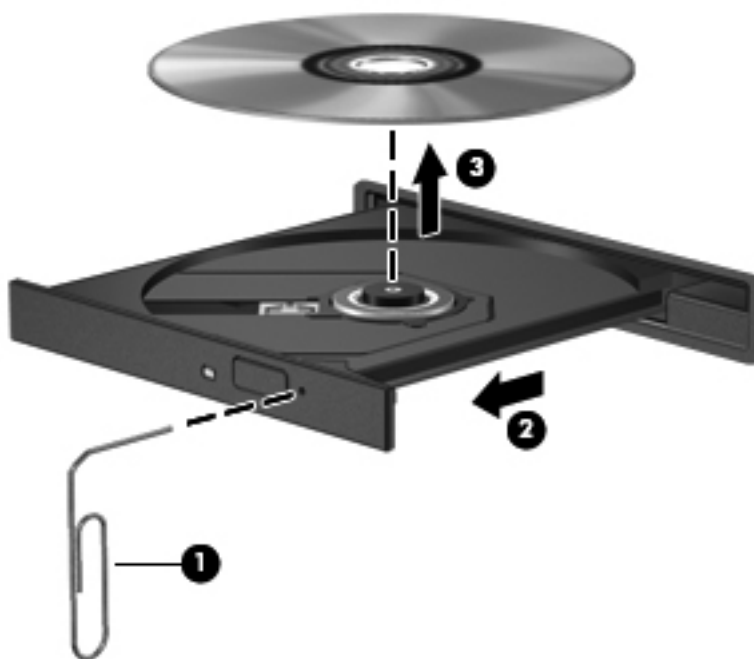

4. Close the disc tray and place the disc in a protective case.

The computer does not detect the optical drive

If your operating system does not detect an installed device, the device driver software may be missing or corrupted.

1. Remove any discs from the optical drive.
2. Click **Computer**, and then click **System Monitor**.
3. On the **Hardware** tab, identify the Storage Controller in the **Type** column.
4. Click the triangle next to the devices until you locate your optical drive. If the drive is listed, it should be functioning correctly.

A disc does not play


- Save your work and close all open programs before playing a CD or a DVD.
- Log off the Internet before playing a CD or a DVD.
- Be sure that you insert the disc properly.
- Be sure that the disc is clean. If necessary, clean the disc with filtered water and a lint-free cloth. Wipe from the center of the disc to the outer edge.
- Check the disc for scratches. If you find scratches, treat the disc with an optical disc repair kit available at many electronics stores.
- Disable Suspend mode before playing the disc.

Do not initiate Hibernation or Suspend while playing a disc. Otherwise, you may see a warning message asking if you want to continue. If this message is displayed, click **No**. After you click **No**, the computer may behave in either of the following ways:

- Playback may resume.
- or –
- The playback window in the multimedia program may close. To return to playing the disc, click the **Play** button in your multimedia program to restart the disc. In rare cases, you may need to exit the program and then restart it.

A movie is not visible on an external display

1. If both the computer display and an external display are turned on, press **f4** one or more times to switch between the 2 displays.
2. Configure the monitor settings to make the external display primary:
 - a. Right-click on a blank area of the computer desktop, and select **Screen resolution**.
 - b. Specify a primary display and a secondary display.

 **NOTE:** When using both displays, the DVD image will not appear on any display designated as the secondary display.


The process of burning a disc does not begin, or it stops before completion

- Be sure that all other programs are closed.
- Turn off Suspend mode and Hibernation.
- Be sure that you are using the right kind of disc for your drive.
- Be sure that the disc is inserted properly.
- Select a slower write speed and try again.
- If you are copying a disc, save the information on the source disc to your hard drive before trying to burn the contents to a new disc, and then burn from your hard drive.

Contacting customer support


If the information provided in this guide does not address your questions, you can contact HP Customer Support at:

<http://www.hp.com/go/contactHP>

 **NOTE:** For worldwide support, click **Contact HP worldwide** on the left side of the page, or go to http://welcome.hp.com/country/us/en/wwcontact_us.html.

Here you can:

- Chat online with an HP technician.


 **NOTE:** When technical support chat is not available in a particular language, it is available in English.

- E-mail HP Customer Support.
- Find HP Customer Support worldwide telephone numbers.
- Locate an HP service center.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer:

- Serial number label—Provides important information, including the following:

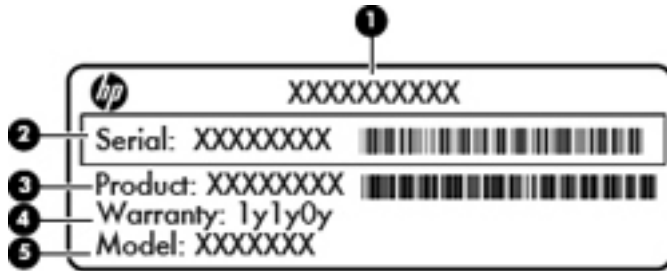

Component

(1)	Product name
(2)	Serial number (s/n)
(3)	Part number/product number (p/n)
(4)	Warranty period
(5)	Model description

Have this information available when you contact technical support. The serial number label is affixed to the bottom of the computer.

- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Wireless certification label or labels (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed to the bottom of the computer.

B Cleaning your computer

- [Cleaning products](#)

Cleaning products

Use the following products to safely clean and disinfect your computer:

- Dimethyl benzyl ammonium chloride 0.3 percent maximum concentration (For example: germicidal disposable wipes. These wipes come in a variety of brand names.)
- Alcohol-free glass cleaning fluid
- Water with mild soap solution
- Dry microfiber cleaning cloth or a chamois (static-free cloth without oil)
- Static-free cloth wipes

△ **CAUTION:** Avoid the following cleaning products:

Strong solvents, such as alcohol, acetone, ammonium chloride, methylene chloride, and hydrocarbons, which can permanently damage the surface of the computer.

Fibrous materials, such as paper towels, which can scratch the computer. Over time, dirt particles and cleaning agents can get trapped in the scratches.

C Specifications

The following sections are included in this appendix:

- [Input power](#)
- [Operating environment](#)


Input power

The power information in this section may be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within the following specifications.

Input power	Rating
Operating voltage and current	18.5 V dc @ 3.5 A – 65 W or 19 V dc @ 4.74 A – 90 W

 **NOTE:** This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

NOTE: [The computer operating voltage and current can be found on the system regulatory label.](#)

Operating environment

Factor	Metric	U.S.
Temperature		
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

D Electrostatic discharge

Electrostatic discharge is the release of static electricity when two objects come into contact—for example, the shock you receive when you walk across the carpet and touch a metal door knob.

A discharge of static electricity from fingers or other electrostatic conductors may damage electronic components. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- If removal or installation instructions direct you to unplug the computer, unplug it after being properly grounded and before removing a cover.
- Keep components in their electrostatic-safe containers until you are ready to install them.
- Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
- Use nonmagnetic tools.
- Before handling components, discharge static electricity by touching an unpainted metal surface of the component.
- If you remove a component, place it in an electrostatic-safe container.

If you need more information about static electricity or assistance with component removal or installation, contact Customer Support.

Index

- A**
 - action keys
 - adjusting volume 18
 - audio CD, DVD, or BD controls 18
 - decrease screen brightness 17
 - Help 17
 - identifying 6
 - increase screen brightness 17
 - muting speaker sound 18
 - switching screen image 18
 - volume 22
 - wireless 18
 - administrator password
 - creating 51
 - entering 51
 - managing 51
 - airport security devices 36
 - audio features 22
 - audio functions, checking 22
 - audio-in (microphone) jack 8
 - audio-out (headphone) jack 8
- B**
 - backup 55
 - battery
 - charging 30
 - conserving power 32
 - disposing 32
 - life 31
 - low battery levels 31
 - power 28
 - replacing 29
 - storing 32
 - temperature 32
 - battery bay 11, 65
 - battery release latch 11
 - battery/AC adapter light 7
- BIOS**
 - determining version 59
 - downloading an update 59
 - updating 58
- Bluetooth device 15
- Bluetooth label 65
- buttons
 - left TouchPad 4
 - power 5
 - right TouchPad 4
 - TouchPad on/off 3
 - volume 22
- C**
 - cables
 - LAN 16
 - USB 43
 - caps lock light, identifying 4
 - charging batteries 30
 - checking audio functions 22
 - cleaning your computer 66
 - components
 - bottom 11
 - display 10
 - left side 8
 - right side 7
 - top 3
 - connecting to a WLAN 14
 - connector, power 7
 - conservation, power 32
 - corporate WLAN connection 14
 - critical battery level 31
- D**
 - default settings, restoring 58
 - digital card
 - defined 41
 - inserting 41
 - removing 42
 - stopping 42
 - Digital Media Slot, identifying 8
 - display image, switching 18
 - display switch, internal 10
 - drive media 27
 - drives
 - external 44
 - handling 35
 - hard 44
 - optical 44
- E**
 - electrostatic discharge 69
 - entering a power-on password 52
 - entering an administrator password 51
 - esc key, identifying 6
 - external devices 44
 - external drive 44
 - external monitor port 8, 23
- F**
 - factory settings, restoring 58
 - firewall 15
 - fn key, identifying 6
- H**
 - hard drive
 - external 44
 - installing 37
 - removing 36
 - hard drive bay, identifying 11
 - hard drive light 9
 - HDMI 24
 - HDMI port, identifying 8
 - Help action key 17
 - Hibernation
 - exiting 27

- initiated during critical battery level 31
- initiating 27
- high-definition devices, connecting 24
- hubs 42

I

- icons
 - network 13
 - wired network 13
 - wireless 13
- input power 67
- integrated webcam light, identifying 10
- internal microphone, identifying 10
- Internet connection setup 14
- issues, resolving 60

J

- jacks
 - audio-in (microphone) 8
 - audio-out (headphone) 8
 - network 8
 - RJ-45 (network) 8

K

- keys
 - action 6
 - esc 6
 - fn 6
 - operating system
 - applications 6
 - operating system logo 6
 - volume 22

L

- labels
 - Bluetooth 65
 - regulatory 65
 - serial number 65
 - wireless certification 65
 - WLAN 65
- latch, battery release 11
- lights
 - battery/AC adapter 7
 - caps lock 4
 - hard drive 9
 - optical drive 7
 - power 4, 9

- webcam 10
 - wireless 4
- local area network (LAN)
 - cable required 16
 - connecting cable 16
- low battery level 31

M

- managing a power-on password 52
- managing an administrator password 51
- media controls 21
- media controls, keys 18
- memory module
 - inserting 47
 - removing 46
- memory module compartment
 - cover
 - removing 46
 - replacing 47
- memory module compartment, identifying 11
- mouse, external
 - setting preferences 18
- mute key, identifying 18

N

- network cable
 - connecting 16
 - noise suppression circuitry 16
- network connection icons 13
- network jack, identifying 8
- noise suppression circuitry
 - network cable 16

O

- operating environment 68
- operating system 26
- operating system applications key, identifying 6
- operating system logo key, identifying 6
- operating system, passwords set in 50
- optical disc
 - inserting 39
 - removing 40
- optical drive 44
- optical drive light, identifying 7
- optical drive, identifying 7

- optional external devices, using 44
- optional security cable 54

P

- passwords
 - set in operating system 50
 - set in Setup Utility 50
- pinching TouchPad gesture 20
- ports
 - external monitor 8, 23
 - HDMI 8, 24
 - USB 7, 8, 42
 - VGA 23
- power button, identifying 5
- power connector, identifying 7
- power light, identifying 4, 9
- power, conserving 32
- power-on password
 - creating 52
 - entering 52
 - managing 52
- product name and number, computer 65
- public WLAN connection 14

R

- readable media 27
- recovery 55
- regulatory information
 - regulatory label 65
 - wireless certification labels 65
- RJ-45 (network) jack, identifying 8

S

- screen brightness keys 17
- screen image, switching 18
- scrolling TouchPad gesture 20
- security cable 54
- security cable slot, identifying 7
- security, wireless 15
- serial number, computer 65
- setup of WLAN 14
- Setup Utility
 - changing the language 57
 - displaying system information 58
 - exiting 58
 - navigating 58
 - passwords set in 50

- restoring default settings 58
- selecting 58
- starting 57
- shutdown 26
- slots
 - Digital Media 8
 - security cable 7
- storing battery 32
- Suspend
 - exiting 27
 - initiating 27
- system information, displaying 58

T

- temperature 32
- TouchPad
 - buttons 4
 - identifying 18
 - setting preferences 18
- TouchPad gestures
 - pinching 20
 - scrolling 20
 - zooming 20
- TouchPad light 3
- TouchPad on/off button 3
- TouchPad zone, identifying 4
- traveling with the computer 32, 65
- troubleshooting
 - disc burning 64
 - disc play 63
 - external display 63
 - optical disc tray 62
 - optical drive detection 63
- turning off the computer 26

U

- unresponsive system 26
- USB cable, connecting 43
- USB devices
 - connecting 43
 - description 42
 - removing 43
- USB hubs 42
- USB ports, identifying 7, 8, 42

V

- vents, identifying 8, 11
- VGA port, connecting 23
- video, using 23

- volume
 - adjusting 22
 - buttons 22
 - keys 22
- volume keys, identifying 18

W

- webcam
 - identifying 10
 - using 23
- webcam light, identifying 10
- wireless certification label 65
- wireless devices, types 13
- wireless encryption 15
- wireless icon 13
- wireless key, identifying 18
- wireless key, using 13
- wireless light 4
- wireless network (WLAN)
 - connecting 14
 - corporate WLAN connection 14
 - described 13
 - equipment needed 14
 - public WLAN connection 14
 - security 15
- WLAN antennas, identifying 10
- WLAN device 65
- WLAN label 65
- writable media 27

Z

- zooming TouchPad gesture 20