



# Compaq Presario CQ58 and HP 2000 Notebook PC

Maintenance and Service Guide

**IMPORTANT!** This document is intended for HP  
authorized service providers only.

© Copyright 2012 Hewlett-Packard  
Development Company, L.P.

AMD, the AMD Arrow logo, and combinations thereof, are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel and Core are U.S. registered trademarks of Intel Corporation. Microsoft, Windows, and Windows Vista are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: November 2012

Document Part Number: 695856-001

## Safety warning notice

---

**⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---



---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 External component identification .....</b>	<b>7</b>
Finding your hardware and software information .....	7
Display .....	7
Button .....	9
Keys .....	10
Lights .....	11
TouchPad .....	12
Front .....	12
Left side .....	13
Right side .....	15
Bottom .....	16
<b>3 Illustrated parts catalog .....</b>	<b>17</b>
Service tag .....	18
Computer major components .....	19
Display assembly subcomponents .....	24
Mass storage devices .....	26
Miscellaneous parts .....	27
Sequential part number listing .....	28
<b>4 Removal and replacement procedures .....</b>	<b>33</b>
Preliminary replacement requirements .....	33
Tools required .....	33
Service considerations .....	33
Plastic parts .....	33
Cables and connectors .....	34
Drive handling .....	34
Grounding guidelines .....	35
Electrostatic discharge damage .....	35

Packaging and transporting guidelines .....	36
Component replacement procedures .....	38
Service tag .....	38
Computer feet .....	39
Battery .....	40
Memory module .....	41
WLAN module .....	42
Keyboard .....	45
Optical drive .....	49
Hard drive .....	51
RTC battery .....	54
Top cover .....	55
Power button board .....	59
TouchPad button board .....	60
Optical drive connector cable .....	63
Speakers .....	65
USB board .....	67
System board .....	69
Fan/heat sink assembly .....	71
Processor .....	73
Display assembly .....	76
Power connector cable .....	85
<b>5 Using Setup Utility (BIOS) and System Diagnostics .....</b>	<b>87</b>
Windows 8 .....	88
Starting Setup Utility (BIOS) .....	88
Updating the BIOS .....	88
Determining the BIOS version .....	88
Downloading a BIOS update .....	89
Using System Diagnostics .....	90
SUSE Linux .....	91
Starting Computer Setup .....	91
Using Computer Setup .....	91
Navigating and selecting in Computer Setup .....	91
Restoring factory settings in Computer Setup .....	92
Updating the BIOS .....	92
Determining the BIOS version .....	93
Downloading a BIOS update .....	93
Using Advanced System Diagnostics .....	94

<b>6 Specifications .....</b>	<b>95</b>
Computer specifications .....	95
15.6-in, SVA, display panel display specifications .....	96
Hard drive specifications .....	97
<b>7 Backup and recovery .....</b>	<b>98</b>
Windows 8 .....	99
Creating recovery media and backups .....	99
Creating HP Recovery media .....	100
Restore and recovery .....	101
Using Windows Refresh for quick and easy recovery .....	102
Remove everything and reinstall Windows .....	103
Recovering using HP Recovery Manager .....	103
What you need to know .....	104
Using the HP Recovery partition to recover a minimized image (select models only) .....	104
Using HP Recovery media to recover .....	105
Changing the computer boot order .....	105
Removing the HP Recovery partition .....	105
SUSE Linux .....	106
Creating backups .....	106
Backing up your information .....	106
Performing a system recovery .....	107
USB Recovery option (select models only) .....	108
Remove everything and reinstall SLED .....	109
<b>8 Power cord set requirements .....</b>	<b>110</b>
Requirements for all countries .....	110
Requirements for specific countries and regions .....	111
<b>9 Recycling .....</b>	<b>112</b>
<b>Index .....</b>	<b>113</b>





# 1 Product description

Category	Description	Compaq Presario CQ58	HP 2000 Notebook PC
<b>Product Name</b>	Compaq Presario CQ58	√	
	HP 2000 Notebook PC		√
<b>Processors</b>	<ul style="list-style-type: none"> <li>Intel® Dual Core® i5-3230M 2.60-GHz processor (SC turbo up to 3.20-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i5-3210M 2.50-GHz processor (SC turbo up to 3.10-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-3130M 2.60-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-3120M 2.50-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-2348M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-3110M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-2370M 2.40-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-2350M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-2330M 2.20-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> <li>Intel Dual Core i3-2328M 2.20-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)</li> </ul>	√	√

Category	Description	Compaq Presario CQ58	HP 2000 Notebook PC
<b>Processors</b> <i>(continued)</i>	<ul style="list-style-type: none"> <li data-bbox="564 275 1046 365">• Intel Pentium 2030M 2.50-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 386 1046 476">• Intel Pentium 2020M 2.40-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 497 1046 588">• Intel Pentium B980 TJ85 2.40-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 609 1046 699">• Intel Pentium B970 TJ85 2.30-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 720 1046 810">• Intel Pentium B960 TJ85 2.20-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 831 1046 921">• Intel Pentium B950 TJ85 2.10-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 942 1046 1033">• Intel Celeron DC 1000M 1.80-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 1054 1046 1144">• Intel Celeron DC B830 1.80-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> <li data-bbox="564 1165 1046 1255">• Intel Celeron DC B820 1.70-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)</li> </ul>	√	√
<b>Chipset</b>	<ul style="list-style-type: none"> <li data-bbox="564 1272 1046 1371">• Intel HM75 Express chipset (only on computer models equipped an Intel Core i5 or i3 processor)</li> <li data-bbox="564 1392 1046 1482">• Intel HM70 Express chipset (only on computer models equipped an Intel Pentium or Intel Celeron processor)</li> </ul>	√	√

Category	Description	Compaq Presario CQ58	HP 2000 Notebook PC
<b>Graphics</b>	<p><b>Internal graphics:</b></p> <ul style="list-style-type: none"> <li>• Universal memory architecture (UMA) with shared video memory</li> <li>• Intel HD Graphics 4000 (GT2) on computer models equipped with an Intel Core i5-3210M or Intel Core i3-3110M processor</li> <li>• Intel HD Graphics 3000 (GT2) on computer models equipped with an Intel Core i3-2370M, Intel Core i3-2350M, or i3-2330M processor</li> <li>• Intel HD Graphics (GT1) on computer models equipped with an Intel Pentium or Intel Celeron processor</li> </ul> <p>Supports HD decode, HDMI, and DX11 (DX11 not supported on computer models equipped with an Intel Core i3-2370M, i3-2350M, or i3-2330M processor)</p>	√	√
<b>Panel</b>	<p>15.6-in, light-emitting diode (LED), SVA, HD, BrightView (1366×768) display; typical brightness: 200 nits</p> <p>All display assemblies include one or two wireless local area network (WLAN) antenna cables</p> <p>Supports low voltage differential signalling (LVDS)</p>	√	√
<b>Memory</b>	<p>Two customer-accessible/upgradable memory module slots</p> <p>DDR3/1333-MHz dual-channel support (DDR3/1600-MHz downgrade to DDR3-1333)</p> <p>Supports 8192-MB of system RAM in the following configurations:</p> <ul style="list-style-type: none"> <li>• 8192-MB (4096-MB×2; not supported on computer models equipped with a 32-bit operating system)</li> <li>• 6144-MB (4096-MB+2048×1; not supported on computer models equipped with a 32-bit operating system)</li> <li>• 4086-MB (4096-MB×1 or 2048×2; not supported on computer models equipped with Windows 7, 32-bit operating system)</li> <li>• 2048-MB (2048×1; not supported on computer models equipped with Windows 7, 32-bit operating system)</li> </ul>	√	√

Category	Description	Compaq Presario CQ58	HP 2000 Notebook PC
<b>Hard drive</b>	<p>Supports 6.35-cm (2.5-in) hard drives in 9.5-mm (.37-in) and 7.0-mm (.28-in) thicknesses (all hard drives use the same bracket)</p> <p>Customer-accessible</p> <p>Serial ATA</p> <p>Supports the following hard drives:</p> <ul style="list-style-type: none"> <li>• 750-GB, 5400-rpm, 9.5-mm (not supported on computer models equipped with Windows 7 Starter, 32-bit operating system)</li> <li>• 640-GB, 5400-rpm, 9.5-mm (not supported on computer models equipped with Windows 7 Starter, 32-bit operating system)</li> <li>• 500-GB, 5400-rpm, 9.5-mm</li> <li>• 320-GB, 5400-rpm, 9.5-mm</li> </ul>	√	√
<b>Optical drive</b>	<p>Fixed</p> <p>Serial ATA</p> <p>12.7-mm tray load</p> <p>Supports DVD±RW Double-Layer with SuperMulti Drive</p> <p>Supports zero power optical drive</p>	√	√
<b>Audio and video</b>	Two Altec-Lansing speakers	√	√
	HD audio	√	√
	Supports Microsoft premium requirements	√	√
	VGA webcam (fixed, no tilt with activity LED; 640×480 by 24 frames per second)	√	√
	One digital microphone	√	√
<b>Ethernet</b>	Integrated 10/100 network interface card (NIC)	√	√
<b>Wireless</b>	Integrated wireless local area network (WLAN) options by way of wireless module	√	√
	One or two WLAN antennas built into display assembly, varying by computer model	√	√

Category	Description	Compaq Presario CQ58	HP 2000 Notebook PC
<b>Wireless</b> <i>(continued)</i>	Support for the following WLAN formats: <ul style="list-style-type: none"> <li>• Atheros AR9565 802.11b/g/n 1x1 WiFi + BT4.0 Combo Adapter</li> <li>• Atheros HB125 802.11b/g/n 1x1 WLAN module</li> <li>• Atheros 9485GN 802.11b/g/n 1x1 WiFi and 3012 Bluetooth 4.0 Combo Adapter</li> <li>• Broadcom 4313GN 802.11b/g/n 1x1 WiFi and 20702 Bluetooth 4.0 Combo Adapter</li> <li>• Ralink RT5390F 802.11b/g/n 1x1 WLAN module</li> <li>• Ralink RT5390R 802.11bg/n 1x1 WiFi Adapter</li> <li>• Ralink RT3290LE 802.11b/g/n 1x1 WiFi and Bluetooth 4.0 Combo Adapter</li> </ul>	√	√
<b>External media cards</b>	HP Multi-Format Digital Media reader with push-push technology, supporting: <ul style="list-style-type: none"> <li>• Secure Digital (SD) Memory Card</li> <li>• Secure Digital Extended Capacity (SDxC) Memory Card</li> <li>• Secure Digital High Capacity (SDHC) Memory Card</li> <li>• MultiMediaCard (MMC)</li> </ul>	√	√
<b>Ports</b>	<ul style="list-style-type: none"> <li>• Audio-in (mono microphone)</li> <li>• Audio-out (stereo headphone)</li> <li>• HDMI v1.4 supporting: up to 1920x1200 @ 60Hz</li> <li>• HP Smart AC adapter</li> <li>• RJ-45 (Ethernet Gigabit support with LED indicators)</li> <li>• USB 2.0 ports on computer: 3 (2 on one side, 1 on other; USB port allocation: 3 for the computer, 1 for camera 1 for MiniCard)</li> <li>• VGA (Dsub 15 pin) supporting: 2048x1536 external resolution @ 75 Hz, hot plug and unplug and autodetection for correct output to wide-aspect vs. standard aspect video</li> </ul>	√	√
<b>Keyboard/pointing devices</b>	Full-size (15.6-in.), textured, pocket keyboard, no numeric keypad	√	√

Category	Description	Compaq Presario CQ58	HP 2000 Notebook PC
<b>Keyboard/pointing devices</b> <i>(continued)</i>	Gesture support: MultiTouch gestures enabled, two-finger scrolling, and pinch-zoom as default	√	√
	Taps enabled by default	√	√
<b>Power requirements</b>	65W RC, V, EM, 3-wire HP Smart AC adapter with localized cable plug support (3-wire plug with ground pin, supports 3-pin DC connector)	√	√
	Supports the following batteries: <ul style="list-style-type: none"> <li>• 6-cell, 55-Wh, 2.55-Ah, Li-ion battery</li> <li>• 6-cell, 47-Wh, 2.20-Ah, Li-ion battery</li> </ul>	√	√
<b>Security</b>	Supports security cable lock	√	√
<b>Operating system</b>	<b>Preinstalled:</b>	√	√
	<ul style="list-style-type: none"> <li>• Windows® 8 Professional</li> <li>• Windows 8 Standard</li> <li>• SUSE Linux (only on computer models equipped with the Intel HM70 Express Chipset)</li> <li>• FreeDOS 2.0</li> </ul>		
<b>Serviceability</b>	End user replaceable parts:	√	√
	<ul style="list-style-type: none"> <li>• AC adapter</li> <li>• Battery</li> <li>• Hard drive</li> <li>• Memory module</li> <li>• Optical drive</li> <li>• WLAN module</li> </ul>		

## 2 External component identification

### Finding your hardware and software information

- ▲ Select **Start > Computer**.

A list displays all the devices installed in your computer, including hard drive, optical drives, solid-state drives (SSD), or a secondary hard drive.

To find out what software is included on your computer, select **Start > All Programs**.

### Display



Item	Component	Description
(1)	WLAN antennas (2)*	Send and receive wireless signals to communicate with WLANs.
(2)	Internal microphone	Records sound.

Item	Component	Description
(3)	Webcam	<p>Records video, captures still photographs, and allows video conferences and online chat by means of streaming video.</p> <p>To use the webcam, select <b>Start &gt; All Programs &gt; Communication and Chat &gt; CyberLink YouCam.</b></p>
(4)	Webcam light	On: The webcam is in use.

\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.




# Button



Component	Description
Power button	<ul style="list-style-type: none"><li>• When the computer is off, press the button to turn on the computer.</li><li>• When the computer is on, press the button briefly to initiate Sleep.</li><li>• When the computer is in the Sleep state, press the button briefly to exit Sleep.</li><li>• When the computer is in Hibernation, press the button briefly to exit Hibernation.</li></ul> <p><b>CAUTION:</b> Pressing and holding down the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Microsoft Windows shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select <b>Start &gt; Control Panel &gt; System and Security &gt; Power Options</b>.</p>

# Keys

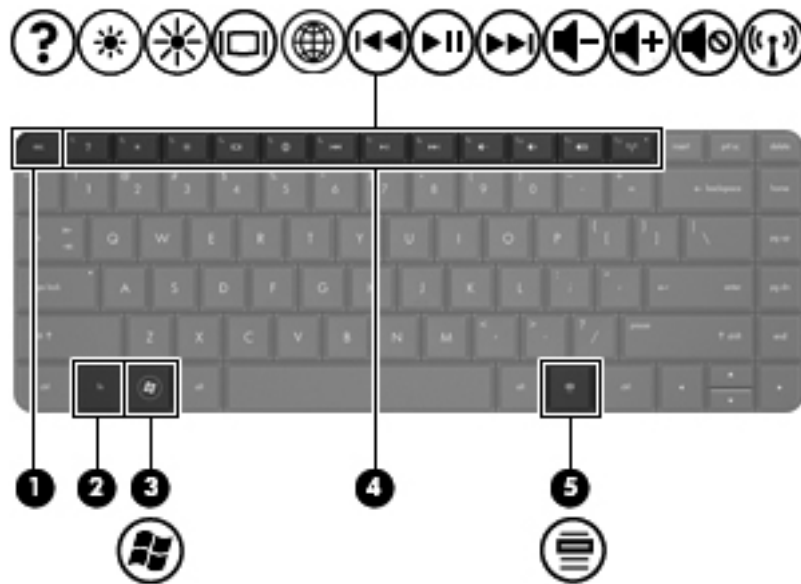

Item	Component	Description
(1)	esc key	Displays system information when pressed in combination with the <b>fn</b> key.
(2)	fn key	Used in conjunction with hotkeys.
(3)	Windows logo key	Displays the Windows Start menu.
(4)	Action keys	Execute frequently used system functions.
(5)	Windows applications key	Displays a shortcut menu for items beneath the pointer.

# Lights



Item	Component	Description
(1)	Caps lock light	On: Caps lock is on, which switches the keys to all capital letters.
(2)	Power light	<ul style="list-style-type: none"><li>• White: The computer is on.</li><li>• Blinking white: The computer is in the Sleep state, which is an energy-saving mode. The computer shuts off power to the display and other unneeded components.</li><li>• Off: The computer is off or in Hibernation. Hibernation is an energy-saving mode that uses the least amount of power.</li></ul>
(3)	Wireless light	<ul style="list-style-type: none"><li>• White: An integrated wireless device, such as a WLAN device and/or a Bluetooth device, is on.</li><li>• Amber: All wireless devices are off.</li></ul>

# TouchPad




Item	Component	Description
(1)	TouchPad on/off button	Turns the TouchPad on or off.
(2)	TouchPad light	<ul style="list-style-type: none"><li>• On: The TouchPad is off.</li><li>• Off: The TouchPad is on.</li></ul>
(3)	TouchPad zone	Moves the on-screen pointer and selects or activates items on the screen.
(4)	Left TouchPad button	Functions like the left button on an external mouse.
(5)	Right TouchPad button	Functions like the right button on an external mouse.

# Front



Component	Description
Speakers	Produce sound.


# Left side

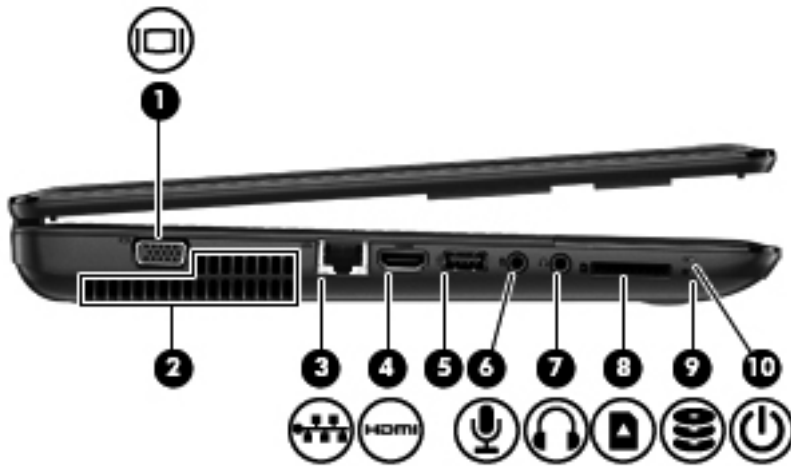

Item	Component	Description
(1)	External monitor port	Connects an external VGA monitor or projector.
(2)	Vents (2)	Enable airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)	RJ-45 (network) jack	Connects a network cable.
(4)	HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio device.
(5)	USB port	Connects an optional USB device.
(6)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(7)	Audio-out (headphone) jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable.  <b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> .  <b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.


<b>Item</b>	<b>Component</b>	<b>Description</b>
<b>(8)</b>	Digital Media slot	Supports the following digital card formats: <ul style="list-style-type: none"><li>• Secure Digital (SD) Memory Card</li><li>• Secure Digital Extended Capacity (SDxC) Memory Card</li><li>• Secure Digital High Capacity (SDHC) Memory Card</li><li>• MultiMediaCard (MMC)</li></ul>
<b>(9)</b>	Hard drive light	Blinking white: The hard drive is being accessed.
<b>(10)</b>	Power light	<ul style="list-style-type: none"><li>• White: The computer is on.</li><li>• Blinking white: The computer is in the Sleep state, which is an energy-saving mode. The computer shuts off power to the display and other unneeded components.</li></ul>

## Right side

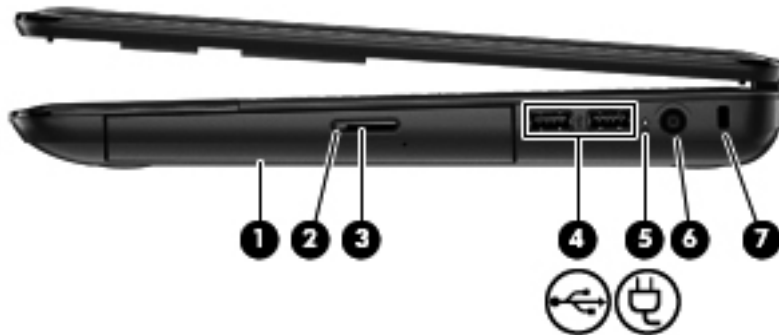

Item	Component	Description
(1)	Optical drive	Reads and writes (select models only) to an optical disk.
(2)	Optical drive light	<ul style="list-style-type: none"> <li>Green: The optical drive is being accessed.</li> <li>Off: The optical drive is idle.</li> </ul>
(3)	Optical drive eject button	Releases the disc tray.
(4)	USB port	<p>Connects an optional USB device.</p> <p><b>CAUTION:</b> While there are multiple USB ports on the same side, only one USB port will be able to support a high power device at a time.</p>
(5)	AC adapter light	<ul style="list-style-type: none"> <li>White: The AC adapter is connected and the battery is charged.</li> <li>Amber: The AC adapter is connected and the battery is charging.</li> <li>Off: The computer is using DC power.</li> </ul>
(6)	Power connector	Connects an AC adapter.
(7)	Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p><b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>

# Bottom

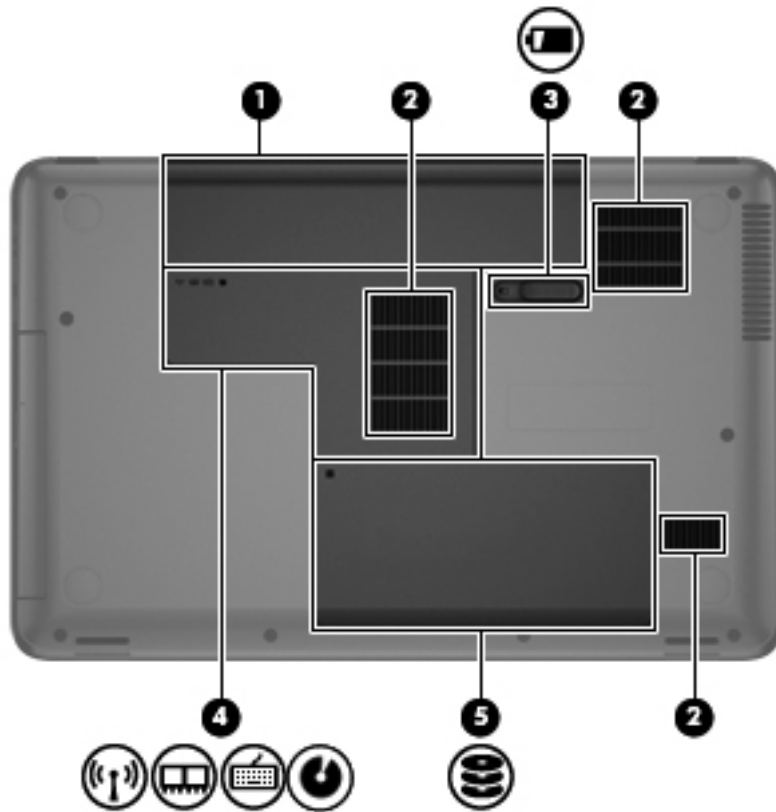

Item	Component	Description
(1)	Battery bay	Holds the battery.
(2)	Vents (3)	Enable airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)	Battery release latch	Releases the battery from the battery bay.
(4)	Memory module/wireless module compartment cover	The memory module/wireless module compartment cover provides access to the memory module compartment, wireless module compartment, keyboard retention screw, and optical drive bay.  <b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact customer support through Help and Support.
(5)	Hard drive compartment cover	The hard drive compartment cover provides access to the hard drive bay and the RTC battery.




---

## **3 Illustrated parts catalog**


# Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

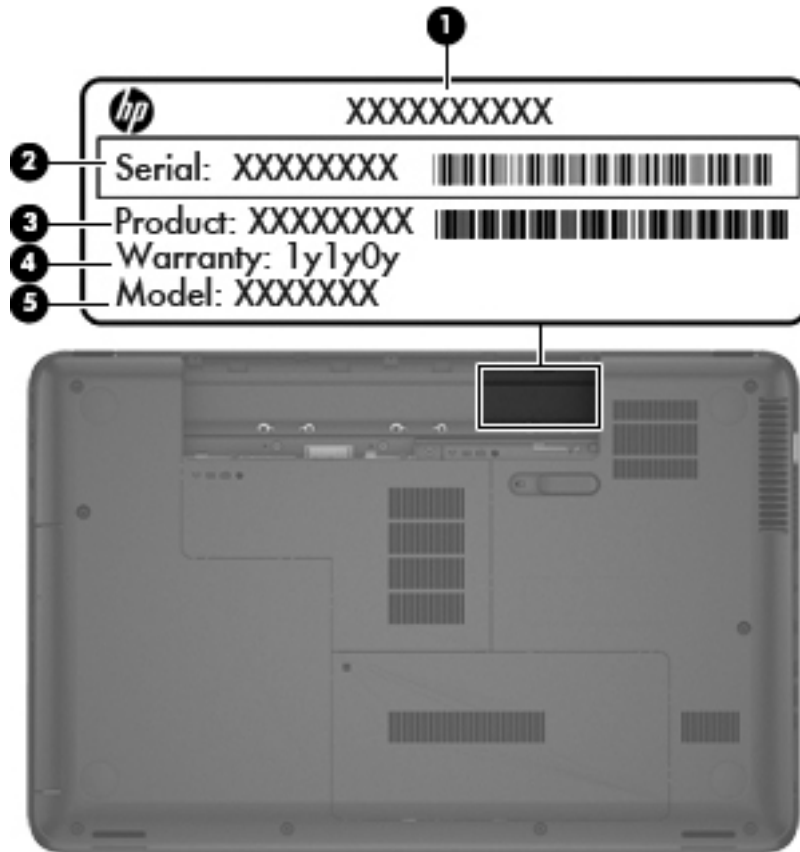

Item	Description	Function
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(3)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

# Computer major components

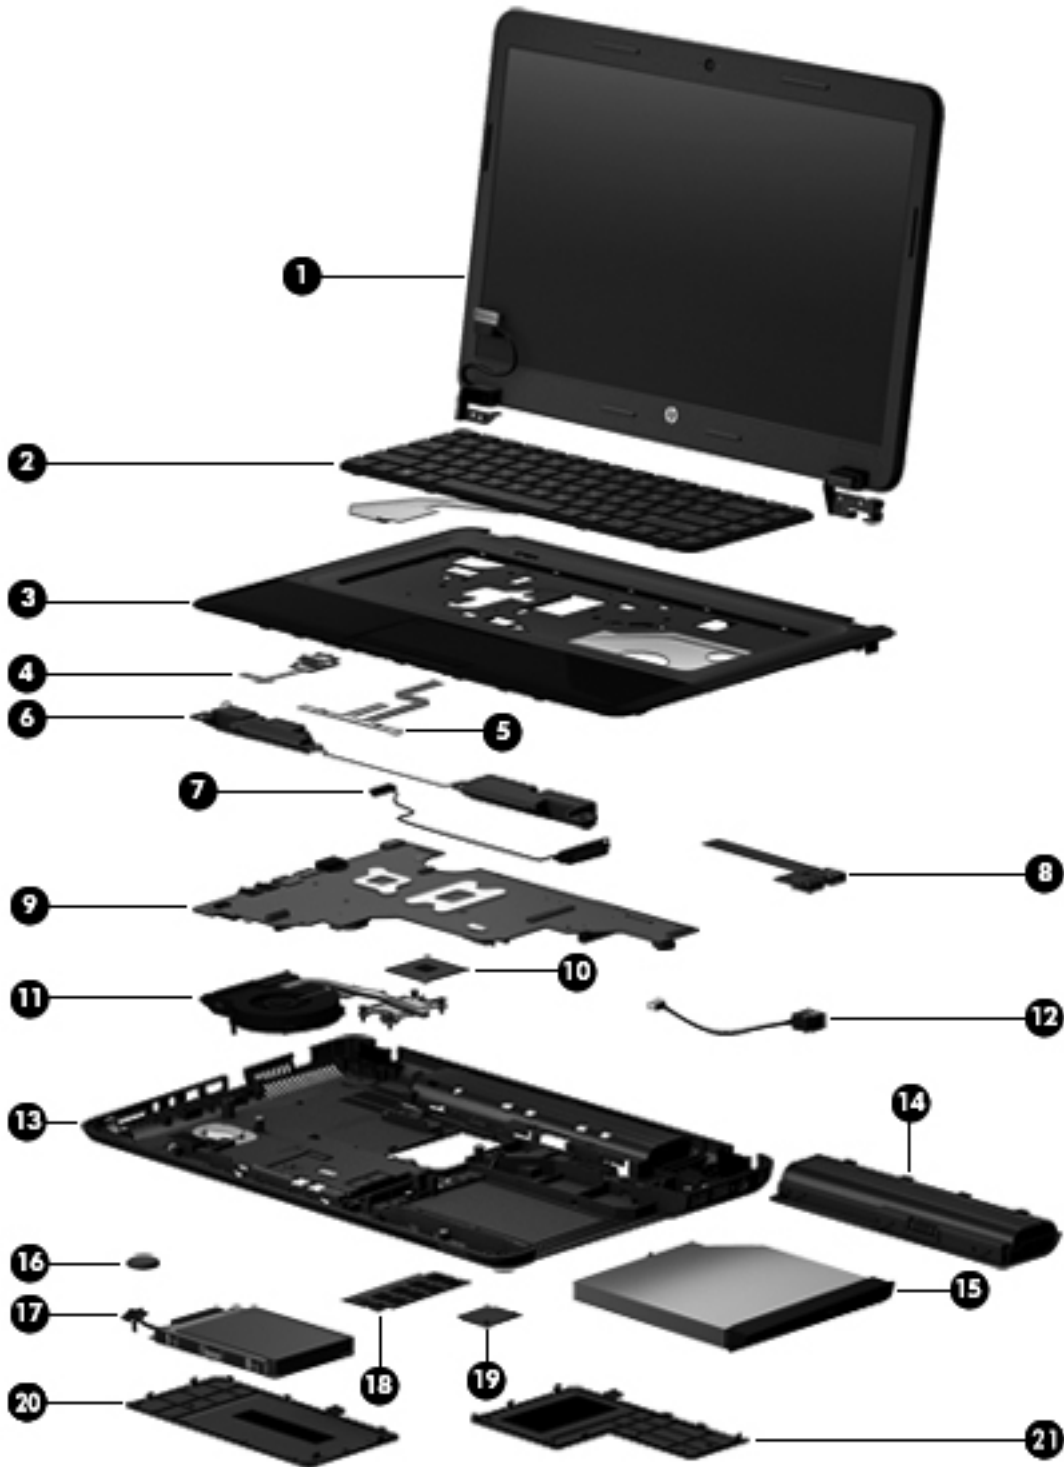

Item	Component	Spare part number
(1)	<b>Display assembly:</b> The display assembly is spared at the subcomponent level only. For more display assembly spare part information, see <a href="#">Display assembly subcomponents on page 24</a> .	


<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
<b>(2)</b>	<b>Keyboard</b> (includes keyboard cable):	
	For use in Belgium	698694-A41
	For use in Bulgaria	698694-261
	For use in the Czech Republic and Slovakia	698694-221
	For use in Denmark, Finland, and Norway	698694-DH1
	For use in France	698694-051
	For use in Germany	698694-041
	For use in Greece	698694-DJ1
	For use in Hungary	698694-211
	For use in Israel	698694-BB1
	For use in Italy	698694-061
	For use in the Netherlands	698694-B31
	For use in Portugal	698694-131
	For use in Romania	698694-271
	For use in Russia	698694-251
	For use in Saudi Arabia	698694-171
	For use in Slovenia	698694-BA1
	For use in South Korea	698694-AD1
	For use in Spain	698694-071
	For use in Switzerland	698694-BG1
	For use in Taiwan	698694-AB1
	For use in Thailand	698694-281
	For use in Turkey	698694-141
	For use in the United Kingdom	698694-031
	For use in the United States	698694-001
<b>(3)</b>	<b>Top cover</b> (includes the TouchPad board):	
	In black licorice finish for use on Compaq Presario CQ58 computer models	686283-001
	In black licorice finish for use on HP 2000 Notebook PC computer models	686282-001
	In winter blue finish for use on HP 2000 Notebook PC computer models	686284-001
<b>(4)</b>	<b>Power button board</b> (includes cable)	686270-001
<b>(5)</b>	<b>TouchPad button board</b> (includes bracket, TouchPad button board cable, and TouchPad cable)	686271-001
<b>(6)</b>	<b>Speakers</b> (include speaker cables)	686279-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
<b>(7)</b>	<b>Optical drive connector cable</b> (includes bracket)	686257-001
<b>(8)</b>	<b>USB board</b> (includes cable)	686269-001
<b>(9)</b>	<b>System board</b> (includes replacement thermal material):	
	Equipped with the Intel HM75 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Professional operating system	686280-601
	Equipped with the Intel HM75 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Standard operating system	686280-501
	Equipped with the Intel HM70 Express chipset, an Intel Pentium or Celeron processor, and the Windows 8 Professional operating system	688018-601
	Equipped with the Intel HM70 Express chipset, an Intel Pentium or Celeron processor, and the Windows 8 Standard operating system	688018-501
<b>(10)</b>	<b>Processor</b> (includes replacement thermal material):	
	Intel Dual Core i5-3230M 2.60-GHz processor (SC turbo up to 3.20-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W)	711903-001
	Intel Dual Core i5-3210M 2.50-GHz processor (SC turbo up to 3.10-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W)	680645-001
	Intel Dual Core i3-3130M 2.60-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	713163-001
	Intel Dual Core i3-3120M 2.50-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	700627-001
	Intel Dual Core i3-2348M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	713165-001
	Intel Dual Core i3-3110M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	682417-001
	Intel Dual Core i3-2370M 2.40-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	677152-001
	Intel Dual Core i3-2350M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	653340-001
	Intel Dual Core i3-2330M 2.20-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	653339-001
	Intel Dual Core i3-2328M 2.20-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	693542-001
	Intel Pentium 2030M 2.50-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	713164-001
	Intel Pentium 2020M 2.40-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	700628-001
	Intel Pentium B980 TJ85 2.40-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	692428-001
	Intel Pentium B970 TJ85 2.30-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	676785-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	Intel Pentium B960 TJ85 2.20-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	664662-001
	Intel Pentium B950 TJ85 2.10-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	653338-001
	Intel Celeron DC 1000M 1.80-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	713162-001
	Intel Celeron DC B830 1.80-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	699547-001
	Intel Celeron DC B820 1.70-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	690537-001
<b>(11)</b>	<b>Fan/heat sink assembly</b> (includes replacement thermal material)	686259-001
<b>(12)</b>	<b>Power connector cable</b> (includes bracket)	686258-001
<b>(13)</b>	<b>Base enclosure</b> (includes battery cover lock latch, battery cover release latch, power connector barrel, and RJ45 cover)	708523-001
	<b>Rubber Feet Kit</b> (not illustrated, includes front and rear rubber feet)	686276-001
<b>(14)</b>	<b>Battery:</b>	
	6-cell, 55-Wh, 2.55-Ah, Li-ion battery	593554-001
	6-cell, 47-Wh, 2.20-Ah, Li-ion battery	593553-001
<b>(15)</b>	<b>DVD±RW Double-Layer with SuperMulti Drive</b> (includes optical drive bezel and optical drive bracket)	686268-001
<b>(16)</b>	<b>RTC battery</b>	686274-001
<b>(17)</b>	<b>Hard drive</b> (does not include hard drive bracket, hard drive connector cable, or screws):	
	750-GB, 5400-rpm, 9.5-mm	634250-001
	640-GB, 5400-rpm, 9.5-mm	669300-001
	500-GB, 5400-rpm, 9.5-mm	669299-001
	320-GB, 5400-rpm, 9.5-mm	622643-001
	<b>Hard Drive Hardware Kit</b> (not illustrated, includes hard drive bracket, hard drive connector cable, and screws)	686261-001
<b>(18)</b>	<b>Memory module</b> (PC3, 12800, 1600-MHz):	
	4-GB memory module	652972-001
	2-GB memory module	641369-001
<b>(19)</b>	<b>WLAN module:</b>	
	Atheros AR9565 802.11b/g/n 1×1 WiFi + BT4.0 Combo Adapter	690019-001
	Atheros HB125 802.11b/g/n 1×1 WLAN module	675794-001
	Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter	655795-001

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter	657325-001
	Ralink RT5390F 802.11b/g/n 1×1 WLAN module	670691-001
	Ralink RT5390R 802.11bg/n 1×1 WiFi Adapter	691415-001
	Ralink RT3290LE 802.11b/g/n 1×1 WiFi and Bluetooth 4.0 Combo Adapter	690020-001
	<b>Cover Kit</b> , includes:	686272-001
<b>(20)</b>	Hard drive compartment cover (includes one captive screw, secured by a C-clip)	
<b>(21)</b>	Memory module/wireless module compartment cover (includes one captive screw, secured by a C-clip)	

## Display assembly subcomponents

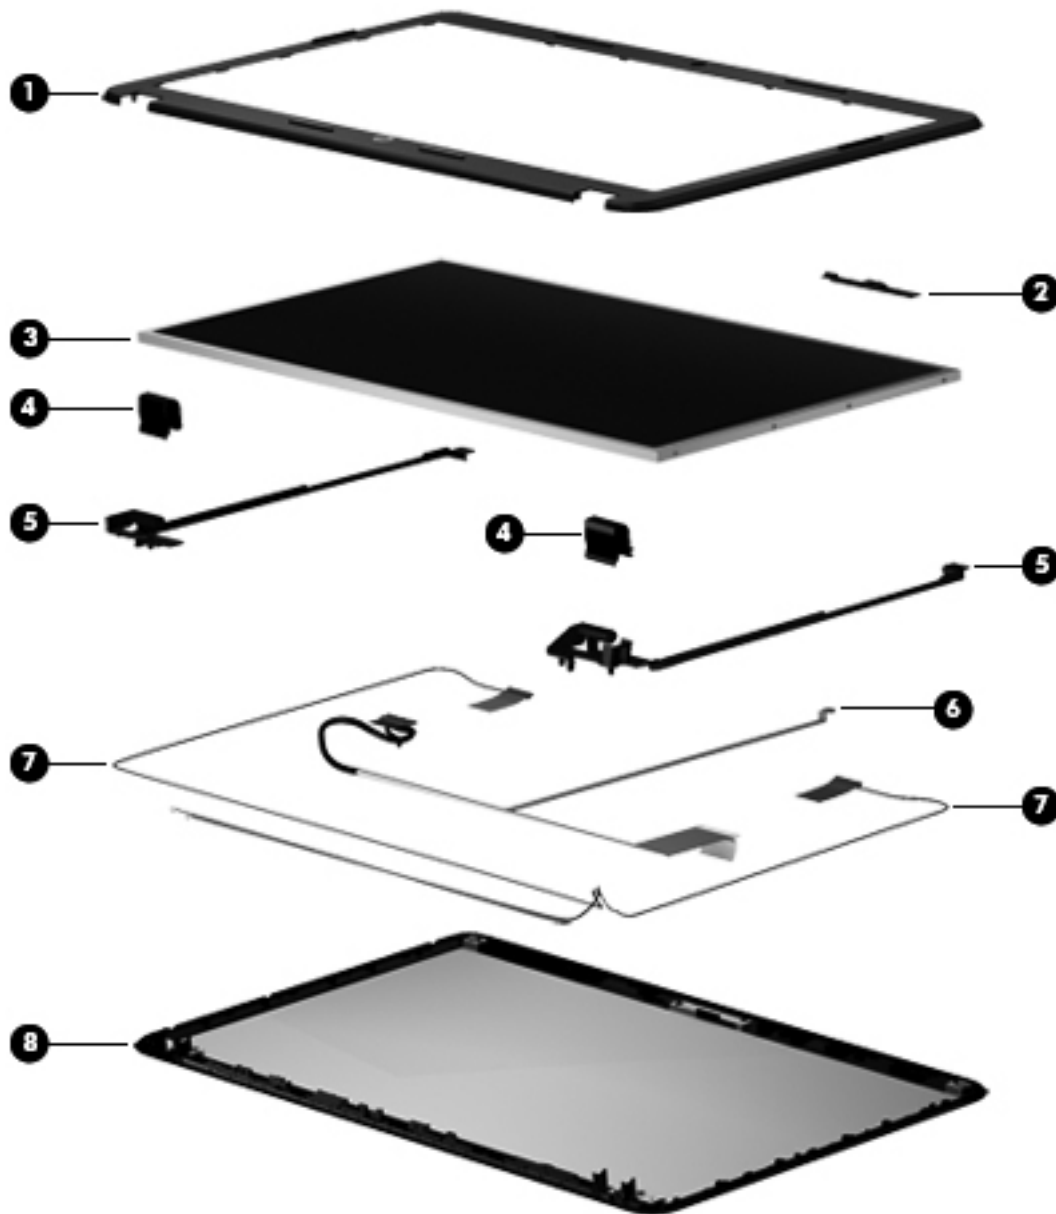


Item	Component	Spare part number
<b>(1)</b>	<b>Display bezel:</b>	
	For use on Compaq Presario CQ58 computer models	686255-001
	For use on HP 2000 Notebook PC computer models	686254-001
<b>(2)</b>	<b>Webcam/microphone module</b> (includes double-sided adhesive):	
	HD webcam/microphone module	703461-001
	Non-HD webcam/microphone module	686285-001



<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
<b>(3)</b>	<b>15.6-in, LED, SVA, HD, BrightView display panel</b>	686273-001
<b>(4)</b>	<b>Display Hinge Cover Kit</b> (includes left and right display hinge covers)	686260-001
<b>(5)</b>	<b>Display hinges</b> (includes vertical support brackets)	686262-001
<b>(6)</b>	<b>Display panel cable</b> (includes webcam/microphone module cable)	686256-001
<b>(7)</b>	<b>Antenna Kit</b> (includes wireless antenna left and right (main and auxiliary) cables and transceivers)	686249-001
<b>(8)</b>	<b>Display enclosure:</b>	
	In black licorice finish for use on Compaq Presario CQ58 computer models	686251-001
	In black licorice finish for use on HP 2000 Notebook PC computer models	686250-001
	In winter blue finish for use on HP 2000 Notebook PC computer models	686252-001
	<b>Display Rubber Kit</b> (not illustrated, includes display assembly rubber bumpers and screw covers)	686275-001

# Mass storage devices

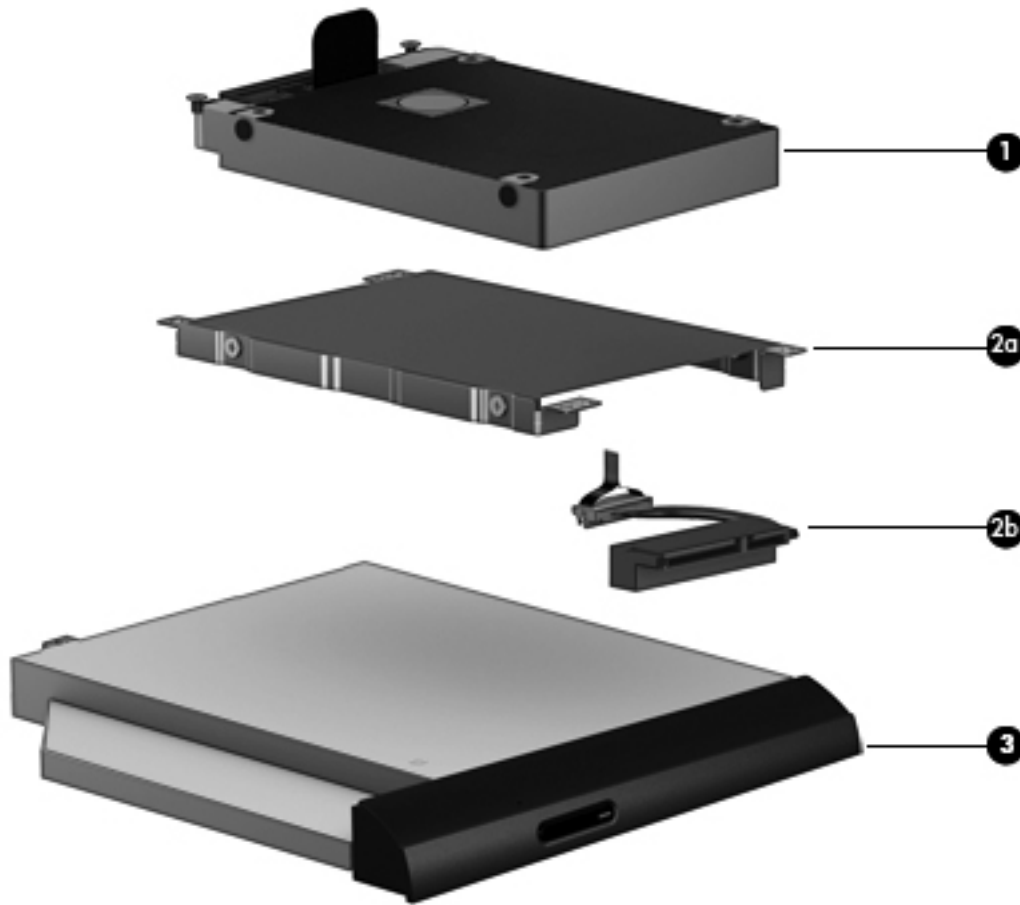

Item	Component	Spare part number
<b>(1)</b>	<b>Hard drive</b> (does not include hard drive bracket, hard drive connector cable, or screws):	
	750-GB, 5400-rpm, 9.5-mm	634250-001
	640-GB, 5400-rpm, 9.5-mm	669300-001
	500-GB, 5400-rpm, 9.5-mm	669299-001
	320-GB, 5400-rpm, 9.5-mm	622643-001
	<b>Hard Drive Hardware Kit</b> , includes:	686261-001
<b>(2a)</b>	Hard drive bracket	
<b>(2b)</b>	Hard drive connector cable	
	Hard drive bracket screws (not illustrated)	
<b>(3)</b>	<b>DVD±RW Double-Layer with SuperMulti Drive</b> (includes optical drive bezel and optical drive bracket)	686268-001

## Miscellaneous parts

Component	Spare part number
<b>AC adapter:</b>	
65-W HP Smart AC adapter (non-PFC, 3-wire)	693711-001
65-W HP Smart AC adapter (RC, V, EM, 3-wire)	693710-001
<b>Power cord</b> (3-pin, black, 1.83-m):	
For use in Australia	490371-011
For use in Denmark	490371-081
For use in Europe	490371-021
For use in India	490371-D61
For use in Israel	490371-BB1
For use in Italy	490371-061
For use in Japan	490371-291
For use in North America	490371-001
For use in South Africa	490371-AR1
For use in South Korea	490371-AD1
For use in Switzerland	490371-111
For use in Taiwan	490371-AB1
For use in the United Kingdom and Singapore	490371-031
<b>Screw Kit</b>	686278-001

# Sequential part number listing

Spare part number	Description
490371-001	Power cord for use in North America (3-pin, black, 1.83-m)
490371-011	Power cord for use in Australia (3-pin, black, 1.83-m)
490371-021	Power cord for use in Europe (3-pin, black, 1.83-m)
490371-031	Power cord for use in the United Kingdom and Singapore (3-pin, black, 1.83-m)
490371-061	Power cord for use in Italy (3-pin, black, 1.83-m)
490371-081	Power cord for use in Denmark (3-pin, black, 1.83-m)
490371-111	Power cord for use in Switzerland (3-pin, black, 1.83-m)
490371-291	Power cord for use in Japan (3-pin, black, 1.83-m)
490371-AB1	Power cord for use in Taiwan (3-pin, black, 1.83-m)
490371-AD1	Power cord for use in South Korea (3-pin, black, 1.83-m)
490371-AR1	Power cord for use in South Africa (3-pin, black, 1.83-m)
490371-BB1	Power cord for use in Israel (3-pin, black, 1.83-m)
490371-D61	Power cord for use in India (3-pin, black, 1.83-m)
593553-001	6-cell, 47-Wh, 2.20-Ah, Li-ion battery
593554-001	6-cell, 55-Wh, 2.55-Ah, Li-ion battery
622643-001	320-GB, 5400-rpm, 9.5-mm hard drive (does not include hard drive bracket, hard drive connector cable, or screws)  <b>NOTE:</b> The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686261-001.
634250-001	750-GB, 5400-rpm, 9.5-mm hard drive (does not include hard drive bracket, hard drive connector cable, or screws)  <b>NOTE:</b> The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686261-001.
641369-001	4-GB memory module (PC3, 12800, 1600-MHz)
652972-001	2-GB memory module (PC3, 12800, 1600-MHz)
653338-001	Intel Pentium B950 TJ85 2.10-GHz processor (2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
653339-001	Intel Core i3-2330M 2.20-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
653340-001	Intel Core i3-2350M 2.30-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
655795-001	Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter
657325-001	Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter

Spare part number	Description
664662-001	Intel Pentium B960 TJ85 2.20-GHz processor (1.333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
669299-001	500-GB, 5400-rpm, 9.5-mm hard drive (does not include hard drive bracket, hard drive connector cable, or screws)  <b>NOTE:</b> The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686261-001.
669300-001	640-GB, 5400-rpm, 9.5-mm hard drive (does not include hard drive bracket, hard drive connector cable, or screws)  <b>NOTE:</b> The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686261-001.
670691-001	Ralink RT5390F 802.11b/g/n 1×1 WLAN module
675794-001	Atheros HB125 802.11b/g/n 1×1 WLAN module
676785-001	Intel Pentium B970 TJ85 2.30-GHz processor (2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
677152-001	Intel Core i3-2370M 2.40-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
680645-001	Intel Core i5-3210M 2.50-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
682417-001	Intel Core i3-3110M 2.30-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
686249-001	Antenna Kit (includes wireless antenna left and right (main and auxiliary) cables and transceivers)
686250-001	Display enclosure in black licorice finish for use on HP 2000 Notebook PC computer models
686251-001	Display enclosure in black licorice finish for use on Compaq Presario CQ58 computer models
686252-001	Display enclosure in winter blue finish for use on HP 2000 Notebook PC computer models
686254-001	Display bezel for use on HP 2000 Notebook PC computer models
686255-001	Display bezel for use on Compaq Presario CQ58 computer models
686256-001	Display panel cable (includes webcam/microphone module cable)
686257-001	Optical drive connector cable (includes bracket)
686258-001	Power connector cable
686259-001	Fan/heat sink assembly (includes replacement thermal material)
686261-001	Hard Drive Hardware Kit (includes hard drive bracket, hard drive connector cable, and screws)
686262-001	Display hinges (includes vertical support brackets)
686268-001	DVD±RW Double-Layer with SuperMulti Drive (includes optical drive bezel and optical drive bracket)
686269-001	USB board (includes cable)
686270-001	Power button board (includes cable)
686271-001	TouchPad button board (includes bracket, TouchPad button board cable, and TouchPad cable)

<b>Spare part number</b>	<b>Description</b>
686272-001	Cover Kit (includes hard drive compartment cover and memory module/wireless module compartment cover)
686273-001	15.6-in, LED, SVA, HD, BrightView display panel
686274-001	RTC battery
686276-001	Rubber Feet Kit (includes front and rear rubber feet)
686278-001	Screw Kit
686279-001	Speakers (include speaker cables)
686280-501	System board for use on computer models equipped with the HM75 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Standard operating system (includes replacement thermal material)
686280-601	System board for use on computer models equipped with the HM75 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Professional operating system (includes replacement thermal material)
686282-001	Top cover in black licorice finish for use on HP 2000 Notebook PC computer models (includes the TouchPad board)
686283-001	Top cover in black licorice finish for use on Compaq Presario CQ58 computer models (includes the TouchPad board)
686284-001	Top cover in winter blue finish for use on HP 2000 Notebook PC computer models (includes the TouchPad board)
686285-001	Non-HD webcam/microphone module (includes double-sided adhesive)
688018-501	System board for use on computer models equipped with the HM70 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Standard operating system (includes replacement thermal material)
688018-601	System board for use on computer models equipped with the HM70 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Professional operating system (includes replacement thermal material)
690019-001	Atheros AR9565 802.11b/g/n 1×1 WiFi + Bluetooth 4.0 Combo Adapter
690020-001	Ralink RT3290LE 802.11b/g/n 1×1 WiFi and Bluetooth 4.0 Combo Adapter
690537-001	Intel Celeron DC B820 1.70-GHz processor (2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
691415-001	Ralink RT5390R 802.11bg/n 1×1 WiFi Adapter
692428-001	Intel Pentium B980 TJ85 2.40-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
693542-001	Intel Dual Core i3-2328M 2.20-GHz processor (1600-MHz FSB, 3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
693710-001	65-W HP Smart AC adapter (RC, V, EM, 3-wire)
693711-001	65-W HP Smart AC adapter (non-PFC, 3-wire)
698694-001	Keyboard for use in the United States (includes keyboard cable)
698694-031	Keyboard for use in the United Kingdom and Singapore (includes keyboard cable)

<b>Spare part number</b>	<b>Description</b>
698694-041	Keyboard for use in Germany (includes keyboard cable)
698694-051	Keyboard for use in France (includes keyboard cable)
698694-061	Keyboard for use in Italy (includes keyboard cable)
698694-071	Keyboard for use in Spain (includes keyboard cable)
698694-131	Keyboard for use in Portugal (includes keyboard cable)
698694-141	Keyboard for use in Turkey (includes keyboard cable)
698694-151	Keyboard for use in Greece (includes keyboard cable)
698694-171	Keyboard for use in Saudi Arabia (includes keyboard cable)
698694-211	Keyboard for use in Hungary (includes keyboard cable)
698694-251	Keyboard for use in Russia (includes keyboard cable)
698694-261	Keyboard for use in Bulgaria (includes keyboard cable)
698694-271	Keyboard for use in Romania (includes keyboard cable)
698694-281	Keyboard for use in Thailand (includes keyboard cable)
698694-A41	Keyboard for use in Belgium (includes keyboard cable)
698694-AB1	Keyboard for use in Taiwan (includes keyboard cable)
698694-AD1	Keyboard for use in South Korea (includes keyboard cable)
698694-B31	Keyboard for use in the Netherlands (includes keyboard cable)
698694-BA1	Keyboard for use in Slovenia (includes keyboard cable)
698694-BB1	Keyboard for use in Israel (includes keyboard cable)
698694-BG1	Keyboard for use in Switzerland (includes keyboard cable)
698694-DH1	Keyboard for use in Denmark, Finland, and Norway (includes keyboard cable)
698694-FL1	Keyboard for use in Greece (includes keyboard cable)
699547-001	Intel Celeron DC B830 1.80-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
700627-001	Intel Dual Core i3-3120M 2.50-GHz processor (3.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
700628-001	Intel Pentium 2020M 2.40-GHz processor (1600-MHz FSB, 2.0-L3 cache, dual core, 35 W; includes replacement thermal material)
703461-001	HD webcam/microphone module (includes double-sided adhesive)
708523-001	Base enclosure (includes battery cover lock latch, battery cover release latch, power connector barrel, and RJ45 cover)
711903-001	Intel Dual Core i5-3230M 2.60-GHz processor (SC turbo up to 3.20-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W; includes replacement thermal material)
713162-001	Intel Celeron DC 1000M 1.80-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W); includes replacement thermal material)

<b>Spare part number</b>	<b>Description</b>
713163-001	Intel Dual Core i3-3130M 2.60-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W; includes replacement thermal material)
713164-001	Intel Pentium 2030M 2.50-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W; includes replacement thermal material)
713165-001	Intel Dual Core i3-2348M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W; includes replacement thermal material)



---

# 4 Removal and replacement procedures

## Preliminary replacement requirements

### Tools required


You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

### Service considerations


The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

---

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

### Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

---

## Cables and connectors

---

**⚠ CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

---

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

---

**⚠ CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

---

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

---

# Grounding guidelines

## Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

**⚠ CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

**⚠ CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

<b>Material</b>	<b>Use</b>	<b>Voltage protection level</b>
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


# Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 72 screws that must be removed, replaced, and/or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

## Service tag

When ordering parts or requesting information, provide the computer serial number and model number provided on the service tag. It is necessary to remove the battery to obtain these numbers. See [Battery on page 40](#) for battery removal instructions.

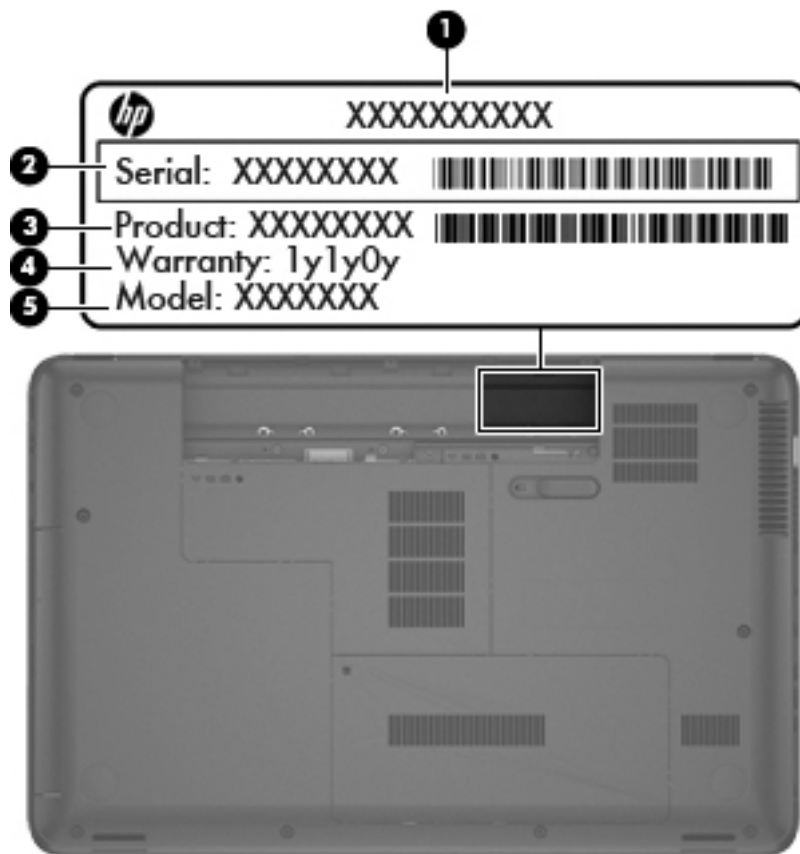


Item	Component	Description
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(3)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician determine what components and parts are needed.

Item	Component	Description
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.


## Computer feet

The computer feet are adhesive-backed rubber pads. There are 4 rubber feet that attach to the base enclosure, as indicated in the illustration below. These rubber feet are available in the Rubber Feet Kit, spare part number 686276-001.

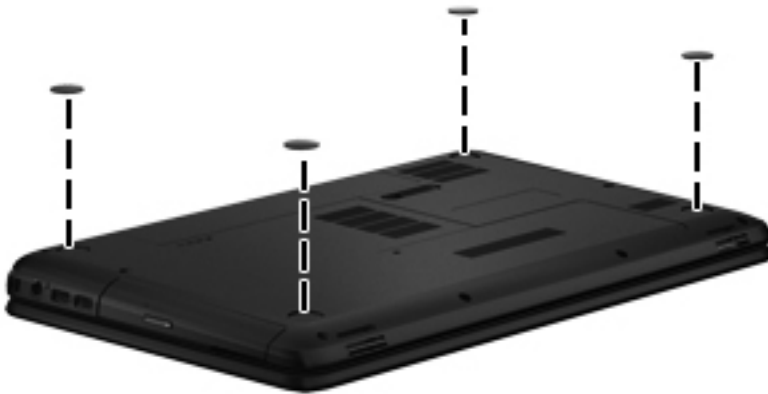

## Battery

Description	Spare part number
6-cell, 55-Wh, 2.55-Ah, Li-ion battery	593554-001
6-cell, 47-Wh, 2.20-Ah, Li-ion battery	593553-001


 **IMPORTANT:** The customer should not attempt to replace the computer battery, which is installed and sealed at the factory. A broken battery seal voids the computer and battery warranties. The computer has an internal rechargeable battery that can be replaced only by an authorized service provider.

Before disassembling the computer, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Remove the battery:

1. Turn the computer upside down on a flat surface.
2. Slide the battery release latch **(1)** to release the battery.
3. Pivot the front edge of the battery **(2)** up and back.
4. Remove the battery **(3)** from the computer.

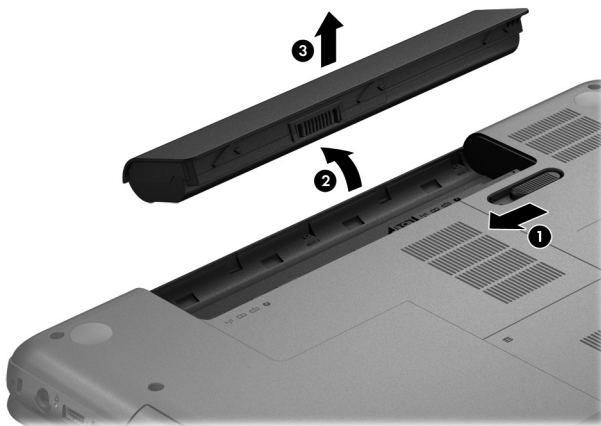

To insert the battery:

1. Align the tabs on the rear edge of the battery with the notches on the rear edge of the battery bay.
2. Pivot the front edge of the battery down into the battery bay until it is seated. (The battery release latch will automatically lock into place.)



## Memory module


Description	Spare part number
4-GB memory module (PC3, 12800, 1600-MHz)	652972-001
2-GB memory module (PC3, 12800, 1600-MHz)	641369-001

Before removing the memory module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).


Remove the memory module:

1. Loosen the captive screw **(1)** that secures the memory module/wireless module compartment cover to the computer.
2. Lift the rear edge of the memory module/wireless module compartment cover **(2)** up and forward until it rests at an angle.
3. Remove the memory module/wireless module compartment cover **(3)** by sliding it away from the computer at an angle. The memory module/wireless module compartment cover is available in the Cover Kit, spare part number 686272-001.

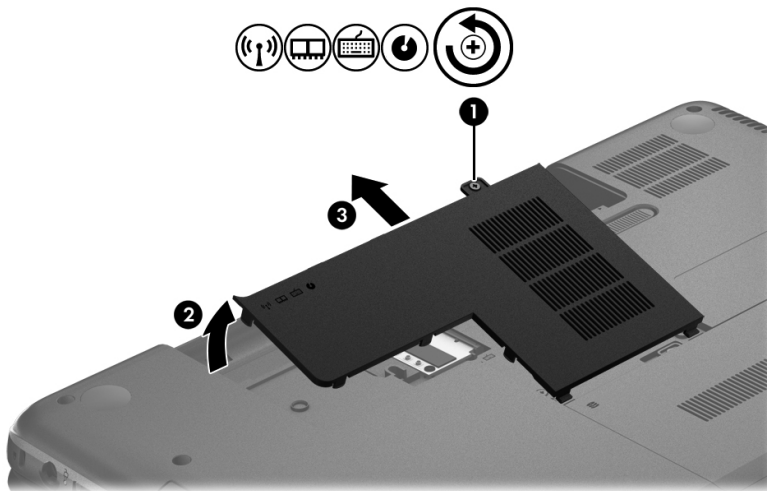

4. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)

5. Remove the memory module (2) by pulling it away from the slot at an angle.

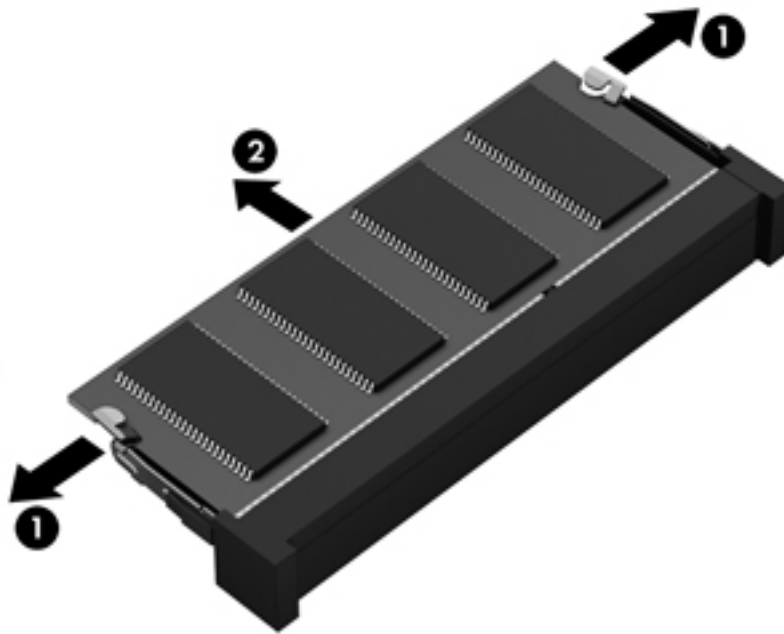

Reverse this procedure to install a memory module.

## WLAN module

Description	Spare part number
Atheros AR9565 802.11b/g/n 1×1 WiFi + BT4.0 Combo Adapter	690019-001
Atheros HB125 802.11b/g/n 1×1 WLAN module	675794-001
Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter	655795-001
Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter	657325-001
Ralink RT5390F 802.11b/g/n 1×1 WLAN module	670691-001
Ralink RT5390R 802.11bg/n 1×1 WiFi Adapter	691415-001
Ralink RT3290LE 802.11b/g/n 1×1 WiFi and Bluetooth 4.0 Combo Adapter	690020-001

**CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.

3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the memory module/wireless module compartment cover (see [Memory module on page 41](#)).

Remove the WLAN module:


1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.




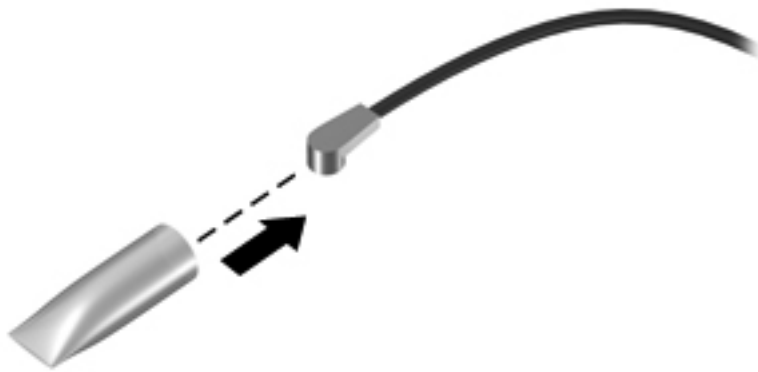
**NOTE:** The #1 WLAN antenna cable is connected to the WLAN module #1 terminal. The #2 WLAN antenna cable is connected to the WLAN module #2 terminal.

2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WLAN module to the system board. (The WLAN module tilts up.)

3. Remove the WLAN module by pulling the module away from the slot at an angle **(3)**.

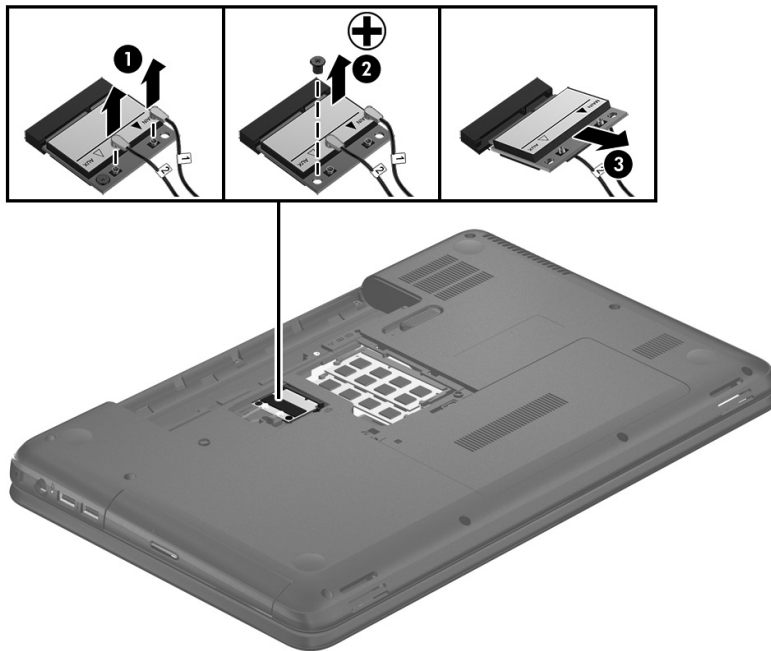

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.



Reverse this procedure to install the WLAN module.

# Keyboard



**NOTE:** The keyboard spare part kit includes the keyboard cable.


For use in country/region	Spare part number	For use in country/region	Spare part number
For use in Belgium	698694-A41	For use in Romania	698694-271
For use in Bulgaria	698694-261	For use in Russia	698694-251
For use in the Czech Republic and Slovakia	698694-FL1	For use in Saudi Arabia	698694-171
For use in Denmark, Finland, and Norway	698694-DH1	For use in Slovenia	698694-BA1
For use in France	698694-051	For use in South Korea	698694-AD1
For use in Germany	698694-041	For use in Spain	698694-071
For use in Greece	698694-151	For use in Switzerland	698694-BG1
For use in Hungary	698694-211	For use in Taiwan	698694-AB1
For use in Israel	698694-BB1	For use in Thailand	698694-281
For use in Italy	698694-061	For use in Turkey	698694-141
For use in the Netherlands	698694-B31	For use in the United Kingdom	698694-031
For use in Portugal	698694-131	For use in the United States	698694-001

Before removing the keyboard, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the memory module/wireless module compartment cover (see [Memory module on page 41](#)).


Remove the keyboard:

1. Remove the Phillips PM2.5×4.0 screw that secures the keyboard to the computer.

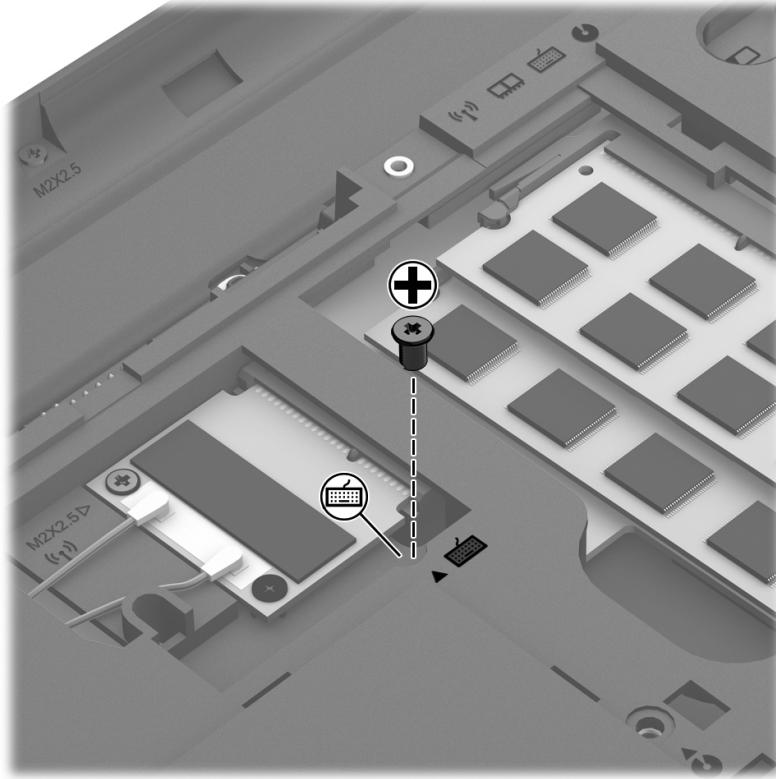

2. Rest and secure the computer on its left side.
3. Partially open the computer.

4. Insert a screw driver or similar thin tool into the keyboard release hole, and then press on the back of the keyboard until the keyboard disengages from the computer.

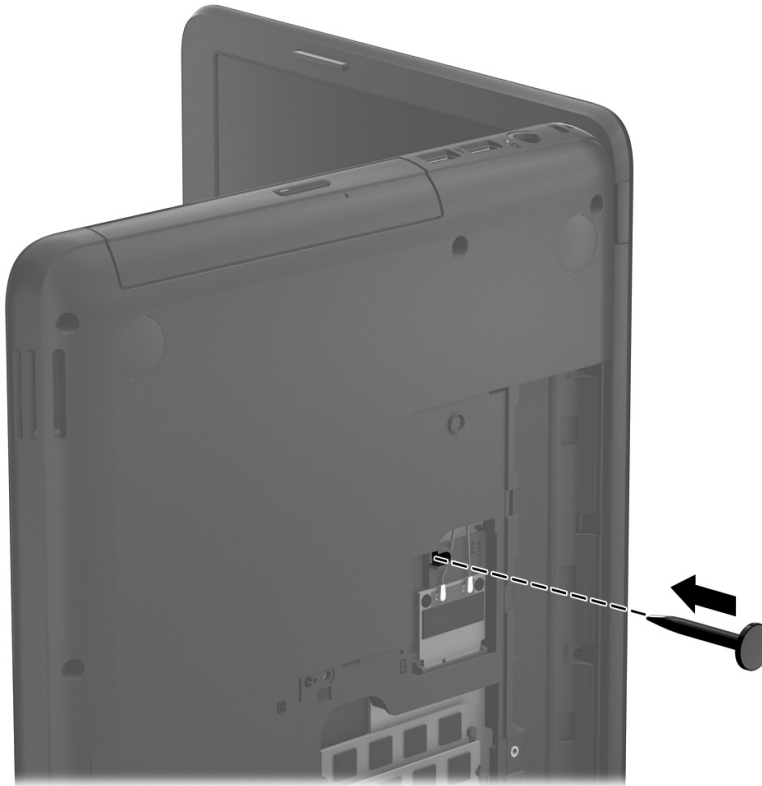

5. Turn the computer right-side up with the front toward you.
6. Lift the rear edge of the keyboard **(1)**, and then swing the keyboard up and forward **(2)** until it rests upside down on the palm rest.



7. Release the zero insertion force (ZIF) connector **(1)** to which the keyboard cable is attached, and then disconnect the keyboard cable **(2)** from the system board.
8. Remove the keyboard **(3)**.



Reverse this procedure to install the keyboard.



## Optical drive

Description	Spare part number
DVD±RW Double-Layer with SuperMulti Drive (includes optical drive bezel and optical drive bracket)	686268-001

Before removing the optical drive, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the memory module/wireless module compartment cover (see [Memory module on page 41](#)).

Remove the optical drive:


1. Remove the Phillips PM2.5×4.0 screw **(1)** that secures the optical drive to the computer.
2. Use a flat-blade screw driver or similar tool to press on the optical drive bracket tab **(2)** to release the optical drive.
3. Remove the optical drive **(3)** from the computer.



4. If it is necessary to replace the optical drive bezel, use a thin tool or an unbent paper clip **(1)** to release the optical drive tray.
5. Use a flat-blade screw driver or similar tool to press on the optical drive bezel tab **(2)** to release the optical drive bezel.
6. Release the left side of the optical drive bezel **(3)**.
7. Remove the optical drive bezel **(4)**.

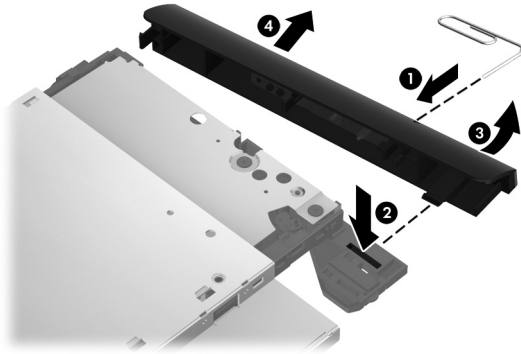

8. If it is necessary to replace the optical drive bracket, position the optical drive with the rear panel toward you.
9. Remove the two Phillips PM2.0×3.0 screws **(1)** that secure the optical drive bracket to the optical drive.
10. Remove the optical drive bracket **(2)**.

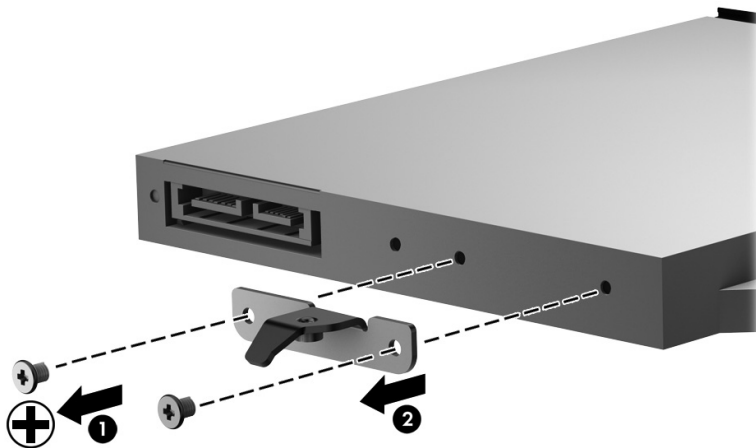

Reverse this procedure to install the optical drive.

## Hard drive



**NOTE:** The hard drive spare part kit does not include the hard drive bracket, hard drive connector cable, or screws.

Description	Spare part number
750-GB, 5400-rpm, 9.5-mm	634250-001
640-GB, 5400-rpm, 9.5-mm	669300-001
500-GB, 5400-rpm, 9.5-mm	669299-001
320-GB, 5400-rpm, 9.5-mm	622643-001
Hard Drive Hardware Kit (includes hard drive bracket, hard drive connector cable, and screws)	686261-001


Before removing the hard drive, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the memory module/wireless module compartment cover (see [Memory module on page 41](#)).


Remove the hard drive:

1. Loosen the captive screw **(1)** that secures the hard drive compartment cover to the computer.
2. Lift the rear edge of the hard drive compartment cover **(2)** up and forward until it rests at an angle.


3. Remove the hard drive compartment cover **(3)** by sliding it away from the computer at an angle. The hard drive compartment cover is available in the Cover Kit, spare part number 686272-001.

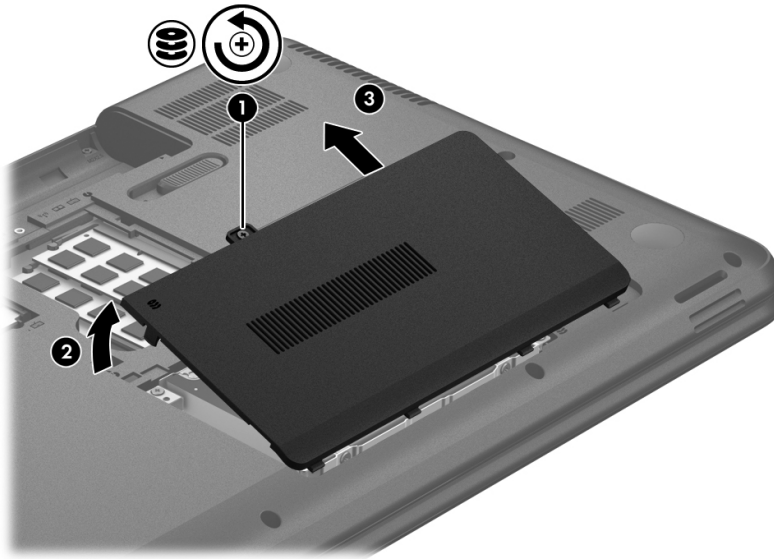

4. Disconnect the hard drive connector cable **(1)** from the system board, and then release the cable from the clip **(2)** built into the base enclosure.
5. Remove the four Phillips PM2.5×4.0 screws **(3)** that secure the hard drive to the computer.
6. Remove the hard drive **(4)** from the hard drive bay.

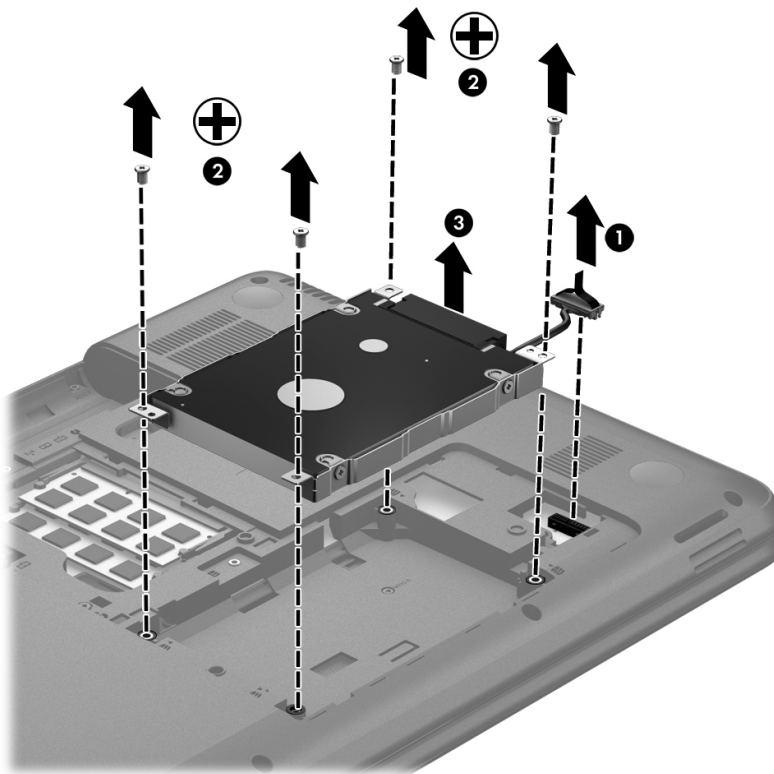

- 7.** If it is necessary to disassemble the hard drive, perform the following steps:
- a.** Remove the four Phillips PM3.0×3.0 screws **(1)** that secure the hard drive bracket to the hard drive.
  - b.** Remove the hard drive bracket **(2)** from the hard drive.
  - c.** Disconnect the hard drive connector cable **(3)** from the hard drive. The hard drive bracket, hard drive connector cable, and screws are available in the Hard Drive Hardware Kit, spare part number 686261-001.

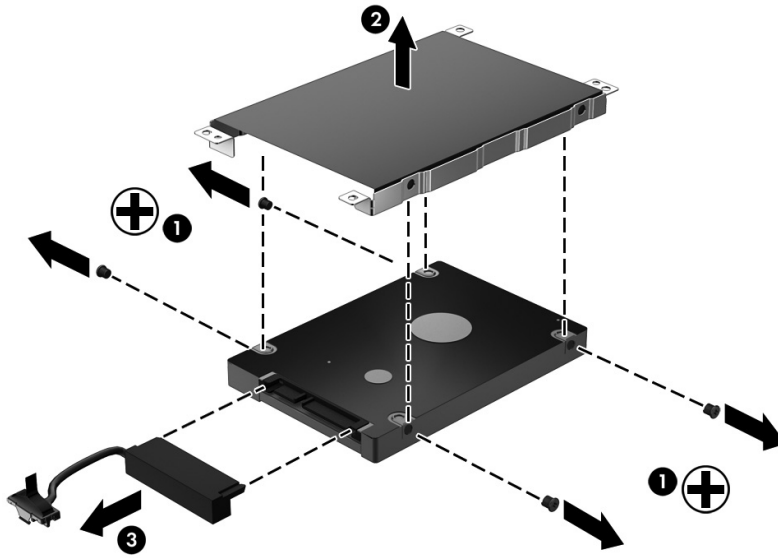

Reverse this procedure to reassemble and install the hard drive.

## RTC battery


Description	Spare part number
RTC battery	686274-001

Before removing the RTC battery, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Remove the memory module/wireless module compartment cover (see [Memory module on page 41](#)).
6. Remove the hard drive compartment cover (see [Hard drive on page 51](#)).


Remove the RTC battery:

1. Use a flat-bladed, non-metallic tool **(1)** to release the RTC battery from the socket on the system board.
2. Remove the RTC battery **(2)**.

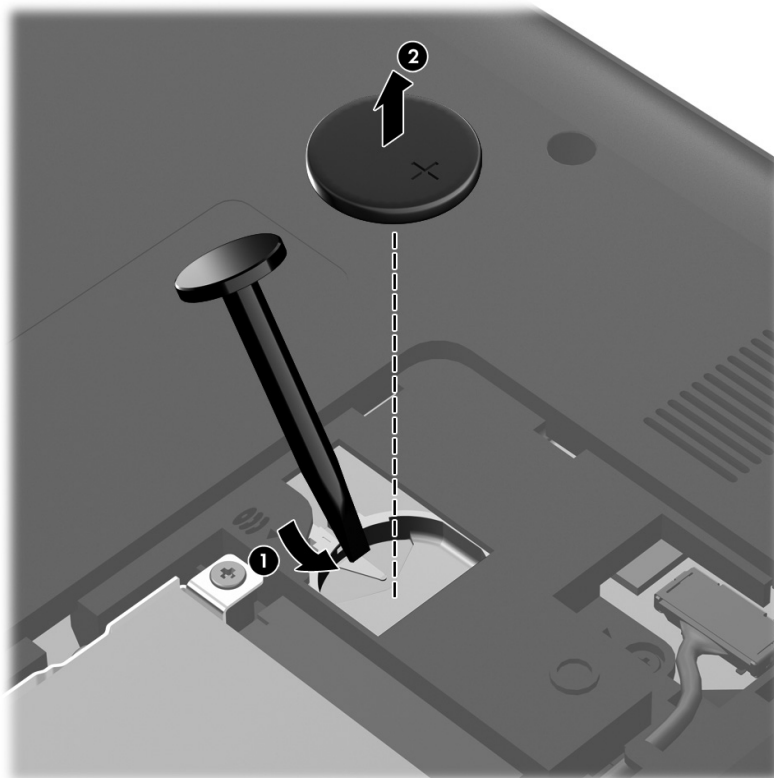

Reverse this procedure to install the RTC battery. When installing the RTC battery, make sure the “+” sign faces up.


## Top cover

 **NOTE:** The top cover spare part kit includes the TouchPad board.

Description	Spare part number
In black licorice finish for use on Compaq Presario CQ58 computer models	686283-001
In black licorice finish for use on HP 2000 Notebook PC computer models	686282-001
In winter blue finish for use on HP 2000 Notebook PC computer models	686284-001

Before removing the top cover, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))

 **NOTE:** When replacing the top cover, be sure to remove the following components from the defective top cover and install them on the replacement top cover:

- Power button board (see [Power button board on page 59](#))
- TouchPad button board (see [TouchPad button board on page 60](#))

Remove the top cover:

1. Remove the six Phillips PM2.5×6.5 screws **(1)** and the two Phillips PM2.5×10.0 screws **(2)** that secure the top cover to the computer.

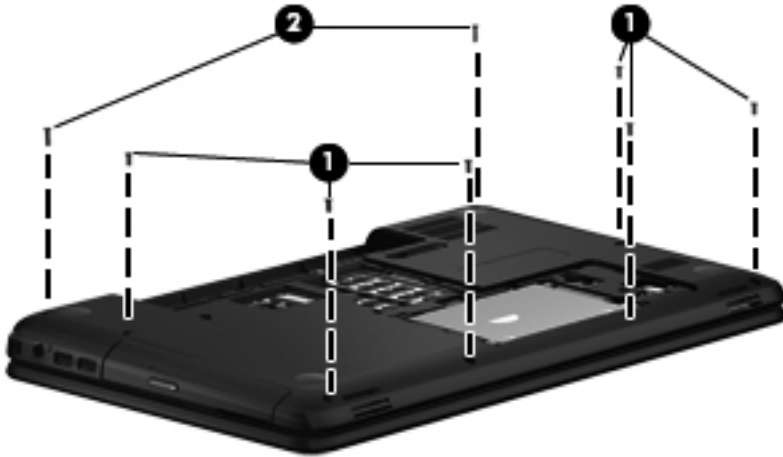

2. Remove the four Phillips PM2.0×2.5 screws on the rear edge of the battery bay and in the hard drive bay that secure the top cover to the computer.




3. Remove the four Phillips PM2.5×4.0 screws on the front edge of the battery bay and near the hard drive connector that secure the top cover to the computer.






4. Turn the computer right side up, with the front toward you.
5. Open the computer.
6. Release the ZIF connector to which the power button board cable is connected, and then disconnect the power button board cable **(1)** from the system board.
7. Release the ZIF connector to which the TouchPad button board cable is connected, and then disconnect the TouchPad button board cable **(2)** from the system board.

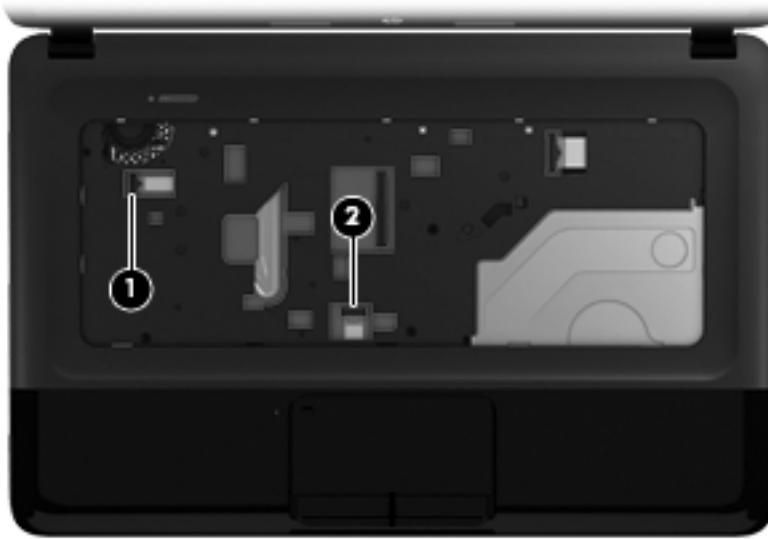

8. Remove the Phillips PM2.0×2.5 screw **(1)** and the three Phillips PM2.5×6.5 screws **(2)** that secure the top cover to the computer.

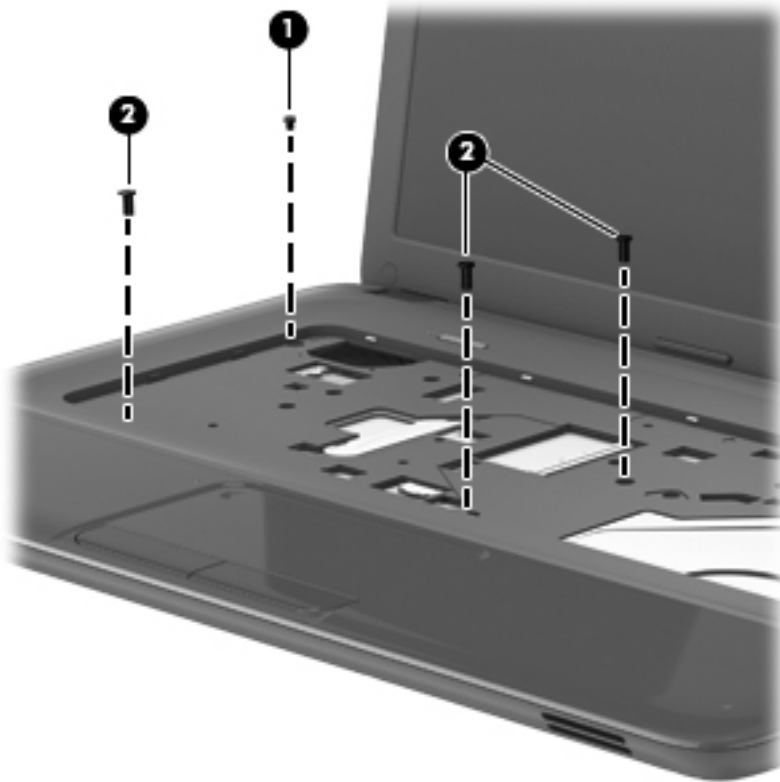

9. Lift the rear edge of the top cover **(1)** and swing it up and forward until the left and right sides of the top cover detach from the base enclosure.
10. Remove the top cover **(2)**.



Reverse this procedure to install the top cover.

## Power button board

Description	Spare part number
Power button board (includes cable)	686270-001


Before removing the power button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))

Remove the power button board:

1. Turn the top cover upside down, with the front toward you.
2. Remove the two Phillips PM2.0×3.0 screws **(1)** that secure the power button board to the top cover.

3. Remove the power button board (2).

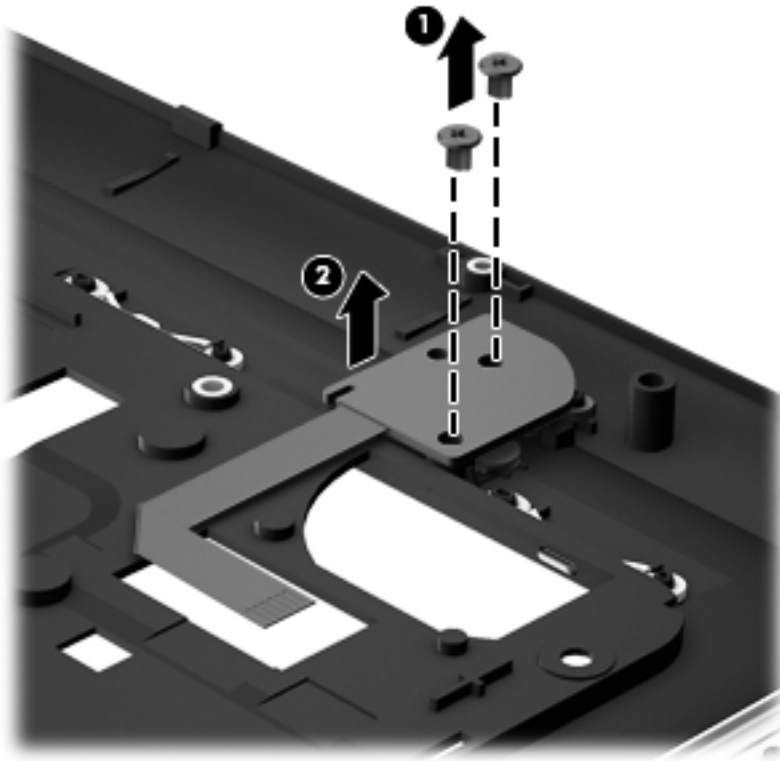

Reverse this procedure to install the power button board.

## TouchPad button board


Description	Spare part number
TouchPad button board (includes bracket, TouchPad button board cable, and TouchPad cable)	686271-001

Before removing the TouchPad button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))


Remove the TouchPad button board:

1. Turn the top cover upside down, with the front toward you.
2. Detach the TouchPad button board cable **(1)** from the TouchPad. (The TouchPad button board cable is attached to the TouchPad with double-sided tape).
3. Release the ZIF connector to which the TouchPad board cable is connected, and then disconnect the TouchPad board cable **(2)** from the TouchPad board.
4. Release the two pieces of shielding tape that cover the left and right sides of the TouchPad button board **(3)**.

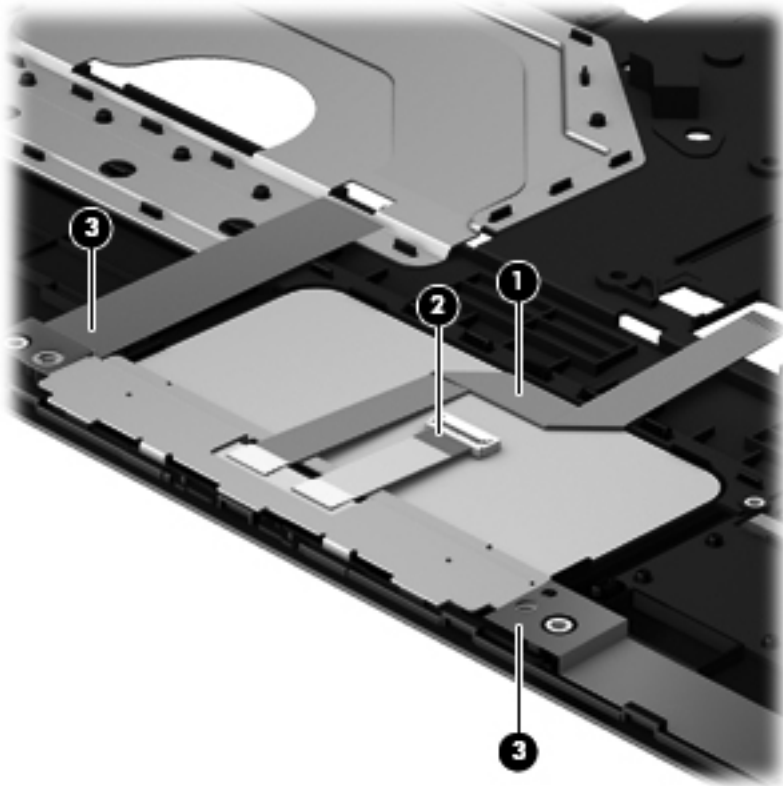

5. Remove the two Phillips PM2.5×4.0 screws **(1)** that secure the TouchPad button board to the top cover. Lift the rear edge of the TouchPad button board **(2)** until it rests at an angle.

6. Remove the TouchPad button board **(3)** by sliding it away from the top cover at an angle.

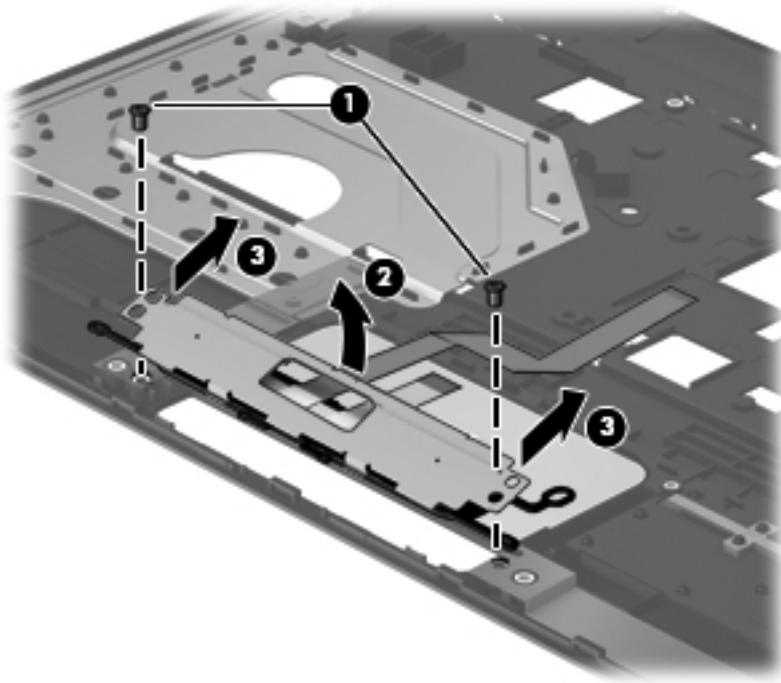

Reverse this procedure to install the TouchPad button board.

## Optical drive connector cable

Description	Spare part number
Optical drive connector cable	686257-001


Before removing the optical drive connector cable, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))

Remove the optical drive connector cable:

1. Disconnect the optical drive connector cable **(1)** from the system board.
2. Release the optical drive connector cable from the clips **(2)** and routing channel built into the base enclosure.
3. Remove the two Phillips PM2.0×4.5 screws **(3)** that secure the optical drive connector to the base enclosure.

4. Remove the optical drive connector cable (4).

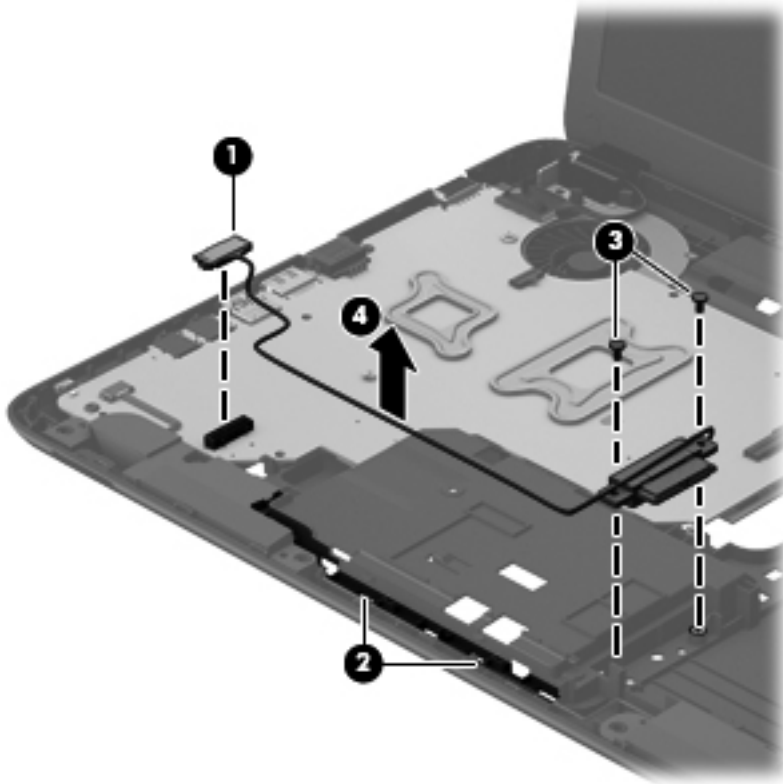

Reverse this procedure to install the optical drive connector cable.



## Speakers

Description	Spare part number
Speakers (include speaker cables)	686279-001


Before removing the speakers, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))

Remove the speakers:

1. Disconnect the speaker cable **(1)** from the system board.
2. Release the speaker cable from the clips **(2)** and routing channel built into the base enclosure.
3. Remove the two Phillips PM2.5×4.0 screws **(3)** that secure the speakers to the base enclosure.

4. Remove the speakers **(4)**.

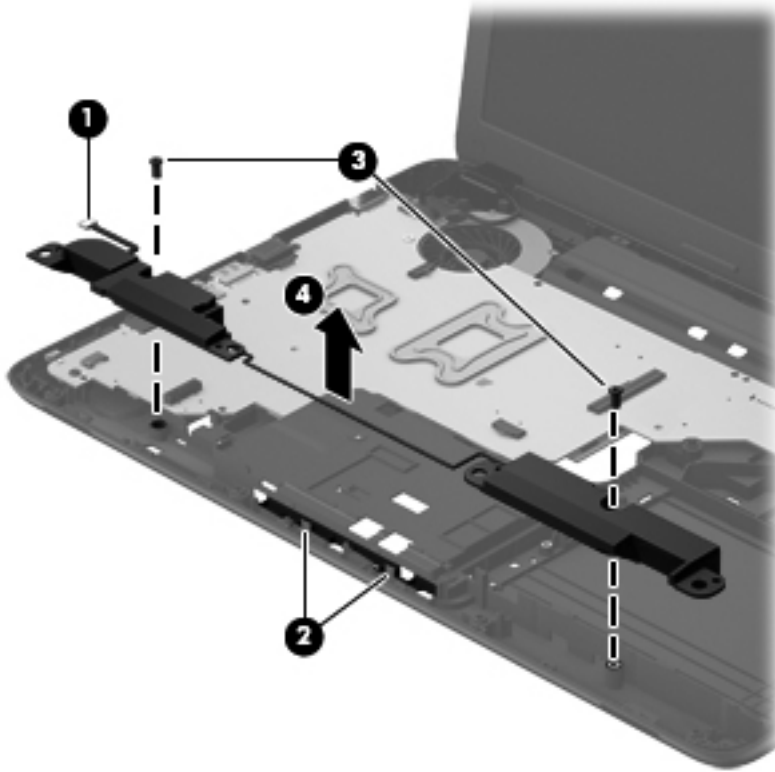

Reverse this procedure to install the speakers.

## USB board

Description	Spare part number
USB board (includes cable)	686269-001


Before removing the USB board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))

Remove the USB board:

1. Release the ZIF connector to which the USB board cable is connected, and then disconnect the USB board cable **(1)** from the system board.
2. Remove the Phillips PM2.5×6.0 screw **(2)** that secures the USB board to the base enclosure.

3. Remove the USB board **(3)**.

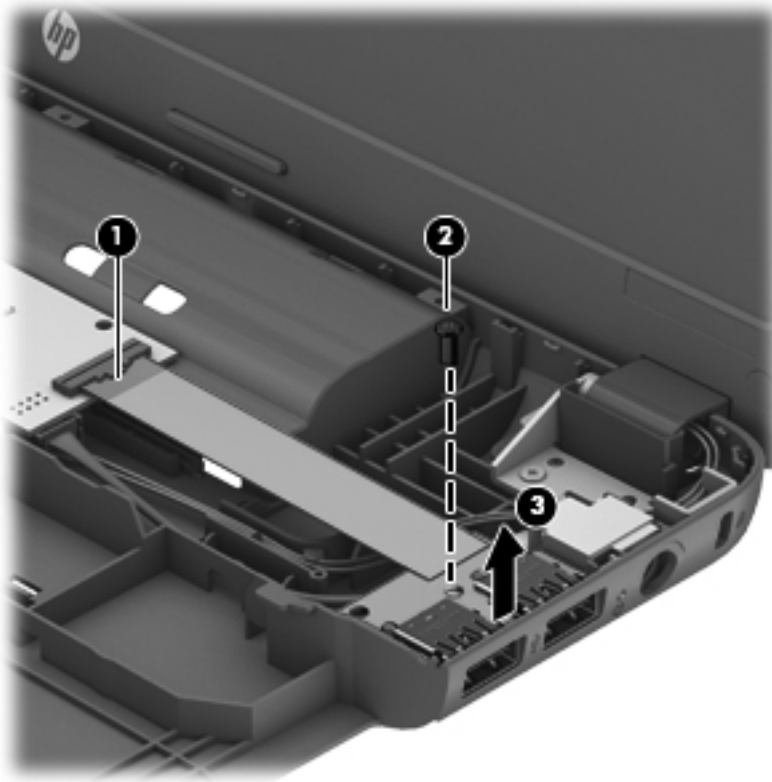

Reverse this procedure to install the USB board.

## System board



**NOTE:** The system board spare part kit includes replacement thermal material.

Description	Spare part number
Equipped with the Intel HM75 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Professional operating system	686280-601
Equipped with the Intel HM75 Express chipset, an Intel Dual Core i5 or i3 processor, and the Windows 8 Standard operating system	686280-501
Equipped with the Intel HM70 Express chipset, an Intel Pentium or Celeron processor, and the Windows 8 Professional operating system	688018-601
Equipped with the Intel HM70 Express chipset, an Intel Pentium or Celeron processor, and the Windows 8 Standard operating system	688018-501

Before removing the system board, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. WLAN module (see [WLAN module on page 42](#))
  - c. Keyboard (see [Keyboard on page 45](#))
  - d. Optical drive (see [Optical drive on page 49](#))
  - e. Hard drive (see [Hard drive on page 51](#))
  - f. Top cover (see [Top cover on page 55](#))

When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory module (see [Memory module on page 41](#))
- RTC battery (see [RTC battery on page 54](#))
- Fan/heat sink assembly (see [Fan/heat sink assembly on page 71](#))
- Processor (see [Processor on page 73](#))


Remove the system board:

1. Disconnect the following cables from the system board.
  - (1) Speaker cable
  - (2) Optical drive connector cable
  - (3) Display panel cable
  - (4) USB board cable
  - (5) Power connector cable

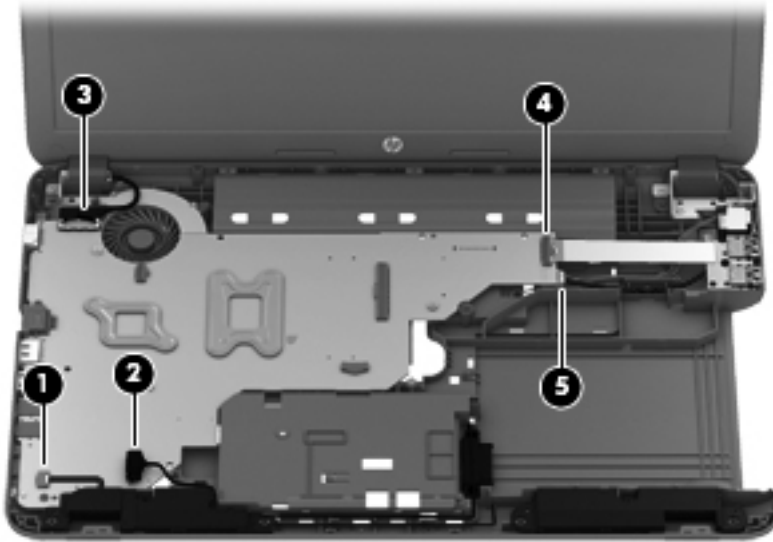

2. Remove the three Phillips PM2.5×6.0 screws **(1)** that secure the system board to the base enclosure.
3. Lift the right side of the system board **(2)** until it rests at an angle.

4. Remove the system board **(3)** by sliding it up and to the right at an angle.

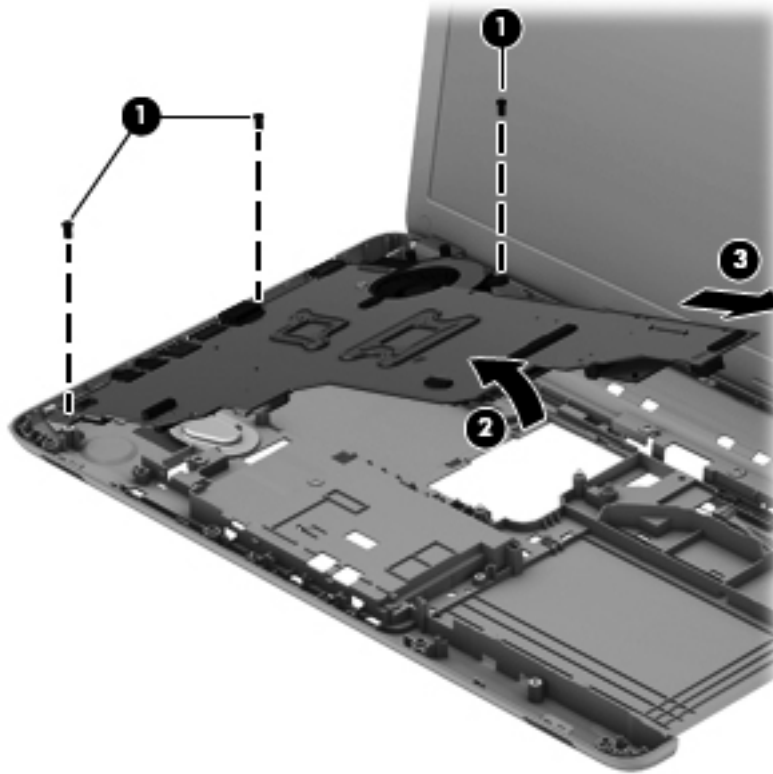

Reverse this procedure to install the system board.

## Fan/heat sink assembly

Description	Spare part number
Fan/heat assembly (includes replacement thermal material)	686259-001

Before removing the fan/heat sink assembly, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))

- d. Top cover (see [Top cover on page 55](#))
- e. System board (see [System board on page 69](#))


Remove the fan/heat sink assembly:

1. Turn the system board upside down, with the front toward you.
2. Disconnect the fan cable **(1)** from the system board.
3. Following the 1, 2, 3, 4 sequence stamped into the heat sink, loosen the four captive Phillips screws **(2)** that secure the fan/heat sink assembly to the system board.
4. Remove the fan/heat sink assembly **(3)**.

---


 **NOTE:** Due to the adhesive quality of the thermal material located between the processor heat sink and processor, it may be necessary to move the processor heat sink from side to side to detach it.

---

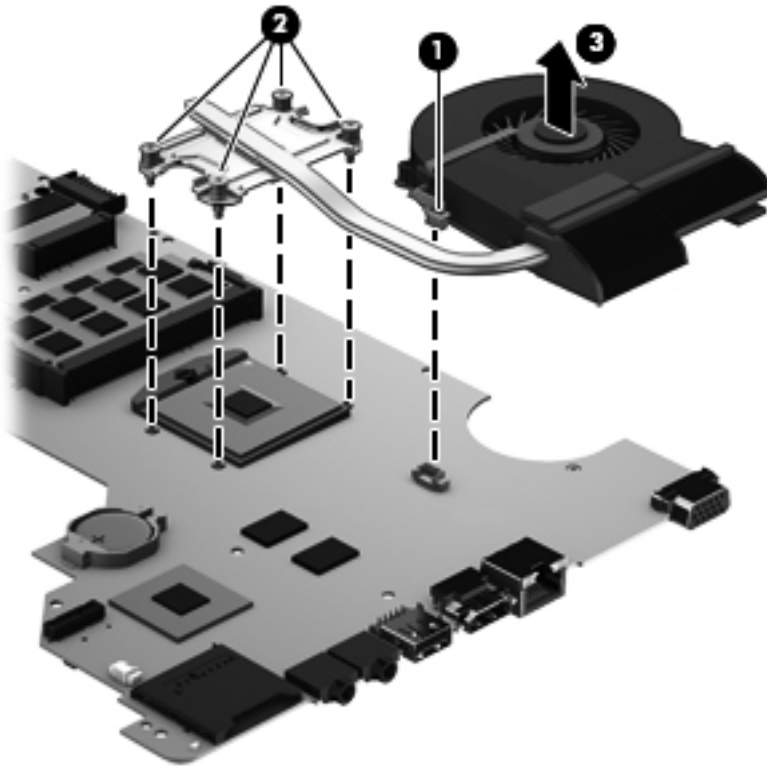


The thermal material must be thoroughly cleaned from the surfaces of the processor heat sink and the processor each time the processor heat sink is removed. Replacement thermal material is included with the processor heat sink and system board spare part kits.

---

 **NOTE:** The following illustration shows the replacement thermal material locations. Thermal paste is used on the processor **(1)** and the heat sink section **(2)** that services it.

---



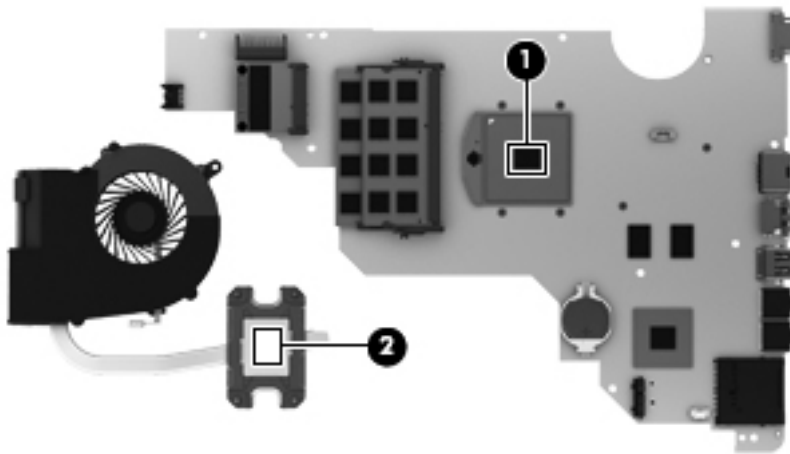

Reverse this procedure to install the fan/heat sink assembly.

## Processor

Description	Spare part number
Intel Dual Core i5-3230M 2.60-GHz processor (SC turbo up to 3.20-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W)	711903-001
Intel Dual Core i5-3210M 2.50-GHz processor (SC turbo up to 3.10-GHz; 1600-MHz FSB, 3.0-MB L3 cache, 35 W)	680645-001
Intel Dual Core i3-3130M 2.60-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	713163-001
Intel Dual Core i3-3120M 2.50-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	700627-001
Intel Dual Core i3-2348M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	713165-001
Intel Dual Core i3-3110M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	682417-001
Intel Dual Core i3-2370M 2.40-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	677152-001
Intel Dual Core i3-2350M 2.30-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	653340-001
Intel Dual Core i3-2330M 2.20-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	653339-001
Intel Dual Core i3-2328M 2.20-GHz processor (1333-MHz FSB, 3.0-MB L3 cache, 35 W)	693542-001
Intel Pentium 2030M 2.50-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	713164-001
Intel Pentium 2020M 2.40-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	700628-001
Intel Pentium B980 TJ85 2.40-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	692428-001
Intel Pentium B970 TJ85 2.30-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	676785-001
Intel Pentium B960 TJ85 2.20-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	664662-001
Intel Pentium B950 TJ85 2.10-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	653338-001

Description	Spare part number
Intel Celeron DC 1000M 1.80-GHz processor (1600-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	713162-001
Intel Celeron DC B830 1.80-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	699547-001
Intel Celeron DC B820 1.70-GHz processor (1333-MHz FSB, 2.0-MB L3 cache, dual core, 35 W)	690537-001


Before removing the processor, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))
  - e. System board (see [System board on page 69](#))

Remove the the processor:

1. Turn the system board upside down, with the front toward you.
2. Use a flat-bladed screw driver **(1)** to turn the processor locking screw one-half turn counterclockwise **(2)**, until you hear a click.

3. Remove the processor (3).

 **NOTE:** The gold triangle (4) on the processor must be aligned with the triangle icon embossed on the processor socket when you install the processor.

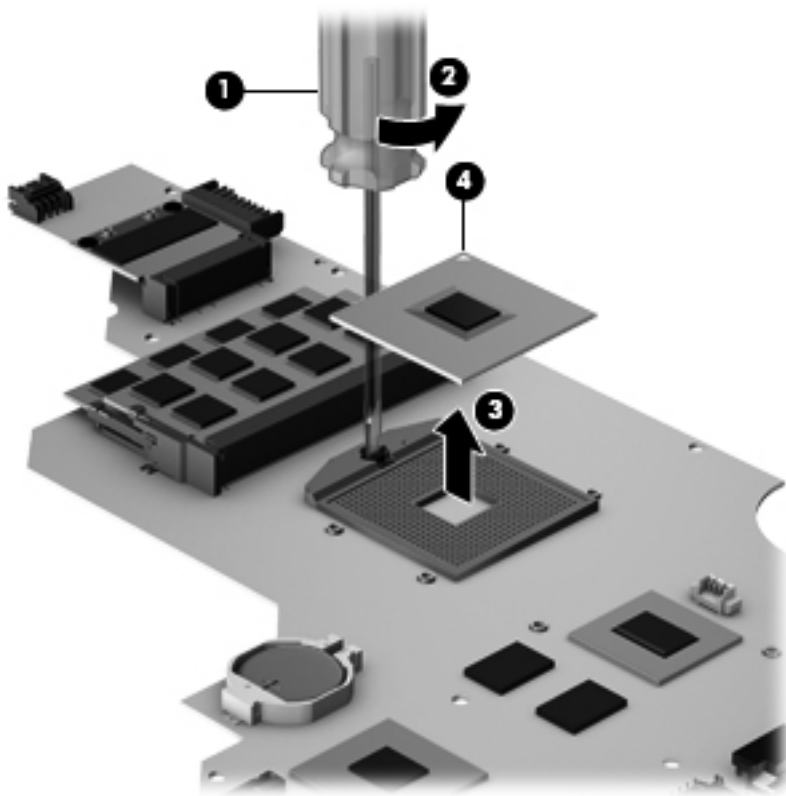

Reverse this procedure to install the processor.

## Display assembly



**NOTE:** The display assembly is spared at the subcomponent level only. For more display assembly spare part information, see the individual removal subsections.

---


Before removing the display assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)).
5. Disconnect the wireless antenna cables from the WLAN module (see [Memory module on page 41](#)).
6. Remove the following components:
  - a. Keyboard (see [Keyboard on page 45](#))
  - b. Hard drive (see [Hard drive on page 51](#))
  - c. Top cover (see [Top cover on page 55](#))

Remove the display assembly:

1. Disconnect the display panel cable **(1)** from the system board.

2. Release the wireless antenna cables **(2)** from the clips and routing channel built into the base enclosure.

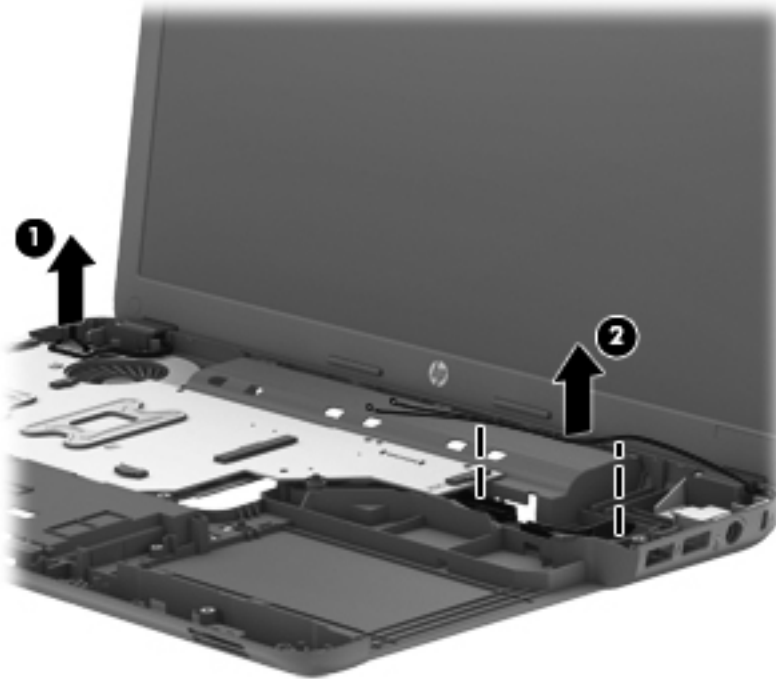


---

**⚠ CAUTION:** Support the display assembly when removing the following screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.


---

3. Remove the five Phillips PM2.5×6.5 screws **(1)** that secure the display assembly to the base enclosure.

4. Remove the display assembly **(2)**.

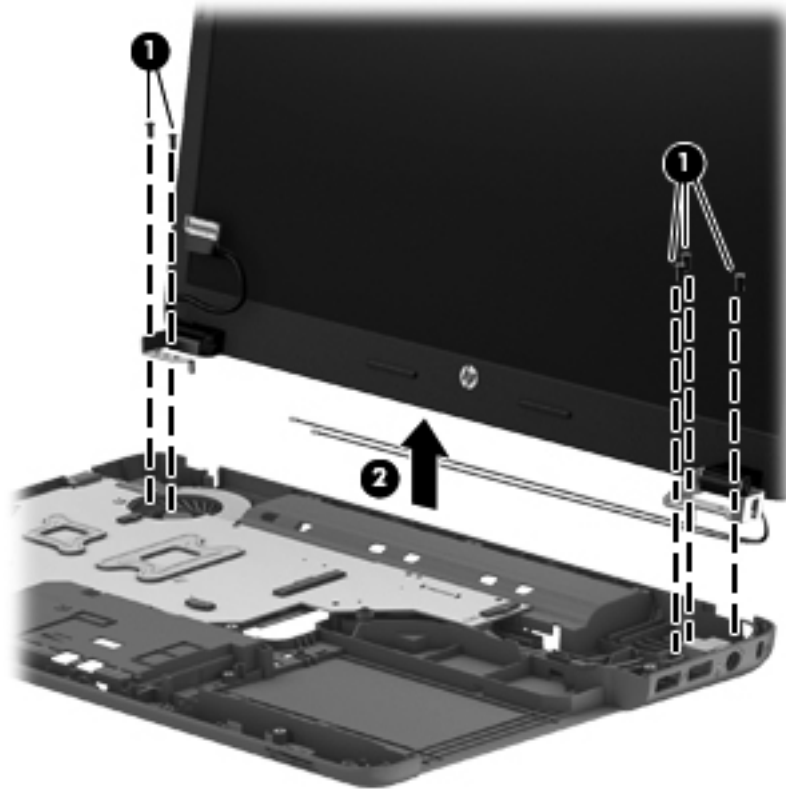


5. If it is necessary to replace the display bezel or any of the display assembly subcomponents:
  - a. Remove the two display bezel screw covers **(1)** and the two Phillips PM2.5×5.5 screws **(2)** that secure the display bezel to the display assembly.
  - b. Flex the inside edges of the bottom edge **(3)**, the left and right sides **(4)**, and the top edge **(5)** of the display bezel until the bezel disengages from the display enclosure.
  - c. Remove the display bezel **(6)**. The display bezel is available using the following spare part numbers:
    - 686255-001 — For use on Compaq Presario CQ58 computer models
    - 686254-001 — For use on HP 2000 Notebook PC computer models

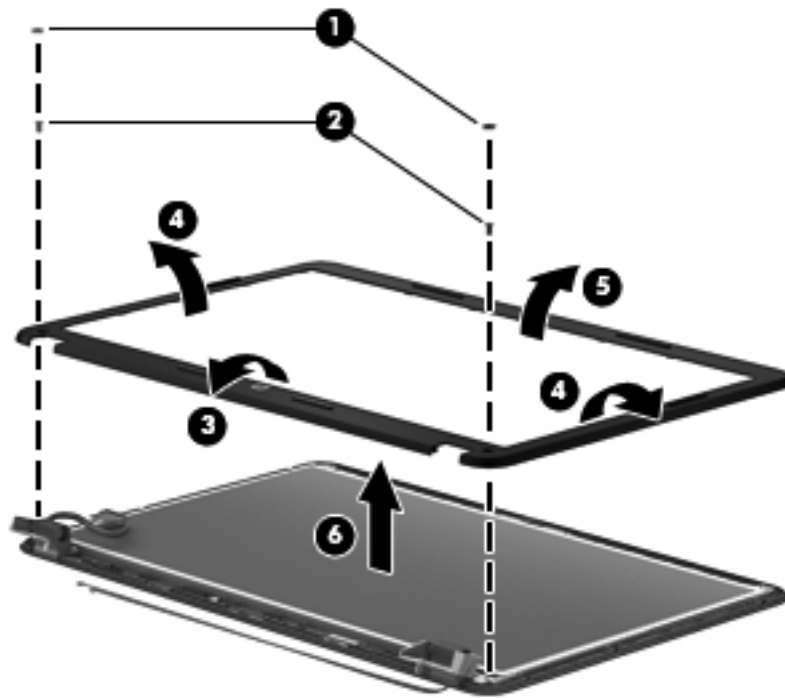


6. If it is necessary to replace the display hinge covers:

- a. Remove the two Phillips PM2.5×4.0 screws **(1)** that secure the display hinge covers to the display enclosure.
- b. Remove the display hinge covers **(2)**. The display hinge covers are available using spare part number 686260-001.

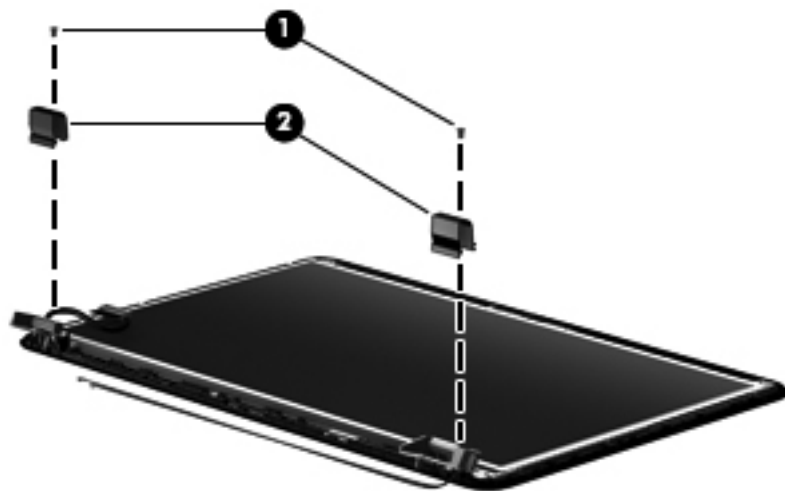


7. If it is necessary to replace the display panel:
- Release the display panel cable **(1)** from the clips built into the bottom edge of the display enclosure.
  - Remove the four Phillips PM2.5×4.0 screws **(2)** that secure the display panel to the display enclosure.
  - Lift the top edge of the display panel **(3)**, and then swing it up and forward until it rests upside down in front of the display enclosure.

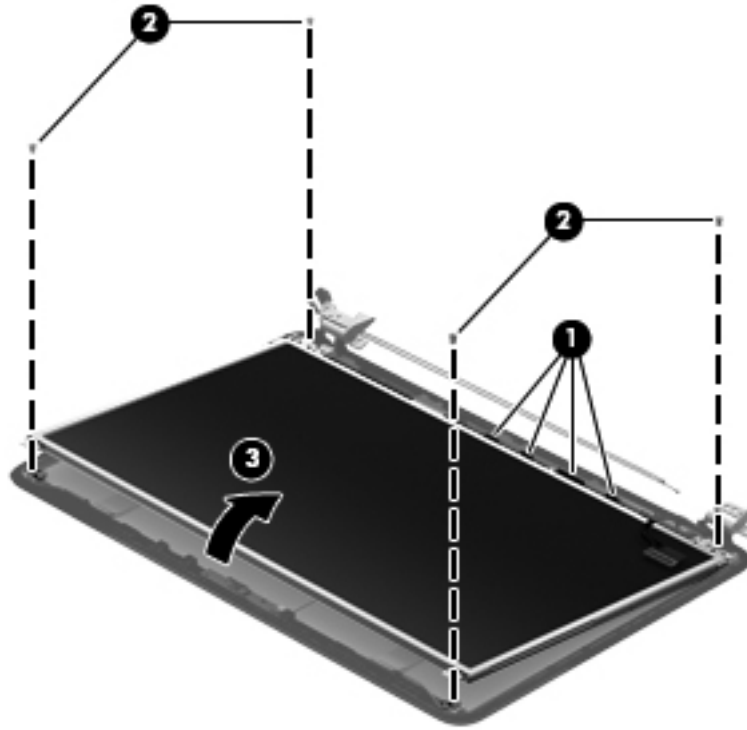

- Release the adhesive support strip **(1)** that secures the display panel cable to the display panel.
- Detach the display panel cable **(2)** from the display panel. (The display panel cable is attached to the display panel with double-sided tape.)




- f. Disconnect the display panel cable **(3)** from the display panel.

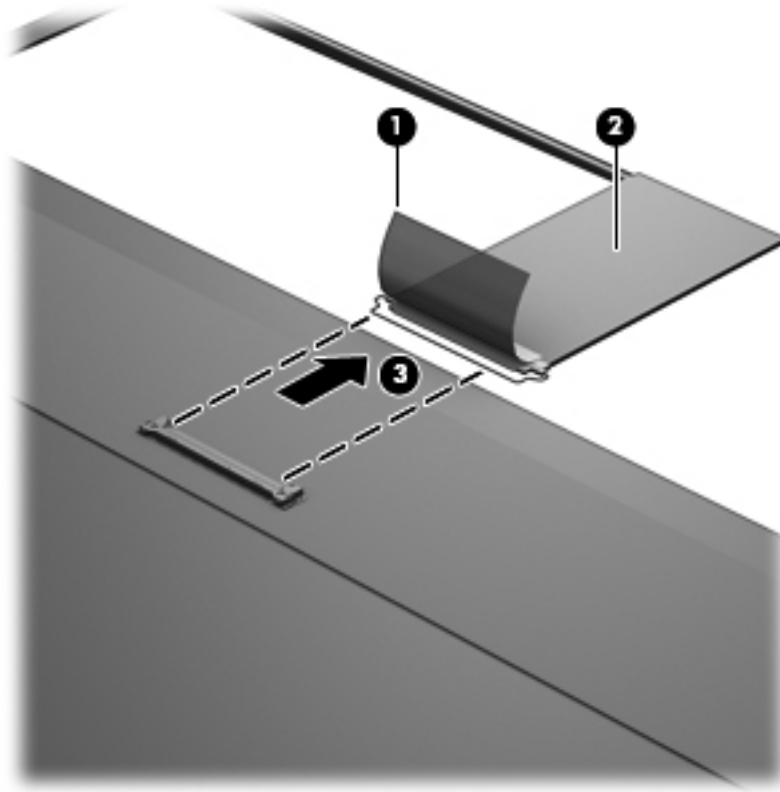


- g. Remove the display panel. The display panel is available using spare part number 686273-001.
- 8.** If it is necessary to replace the display hinges:
- a. Remove the six Phillips PM2.0×3.5 screws **(1)** that secure the display hinges to the display panel.

- b.** Remove the display hinges (**2**). The display hinges are available using spare part number 686262-001.

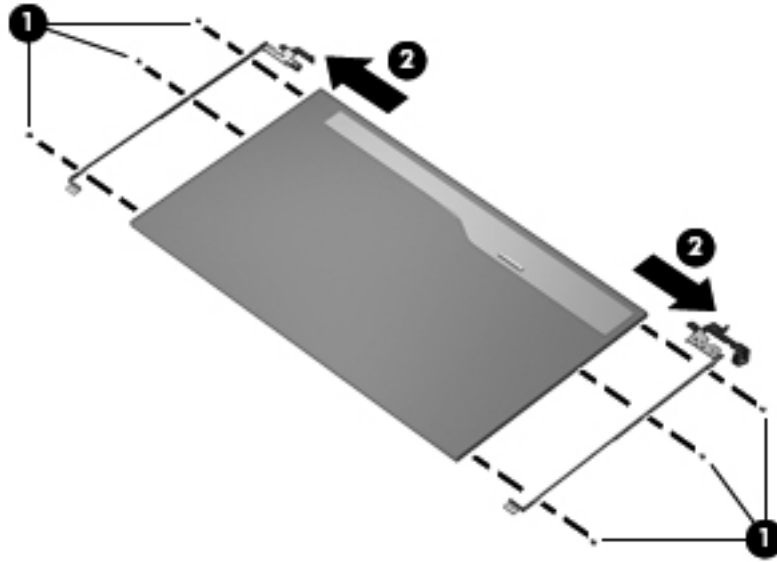

- 9.** If it is necessary to replace the display panel cable:
- a.** Detach the display panel cable (**1**) from the display enclosure. (The display panel cable is attached to the display enclosure with double-sided tape in multiple locations.)
  - b.** Disconnect the webcam/microphone cable (**2**) from the webcam/microphone module.

- c. Remove the display panel cable **(3)**. The display panel cable is available using spare part number 686256-001 and includes the webcam/microphone cable.

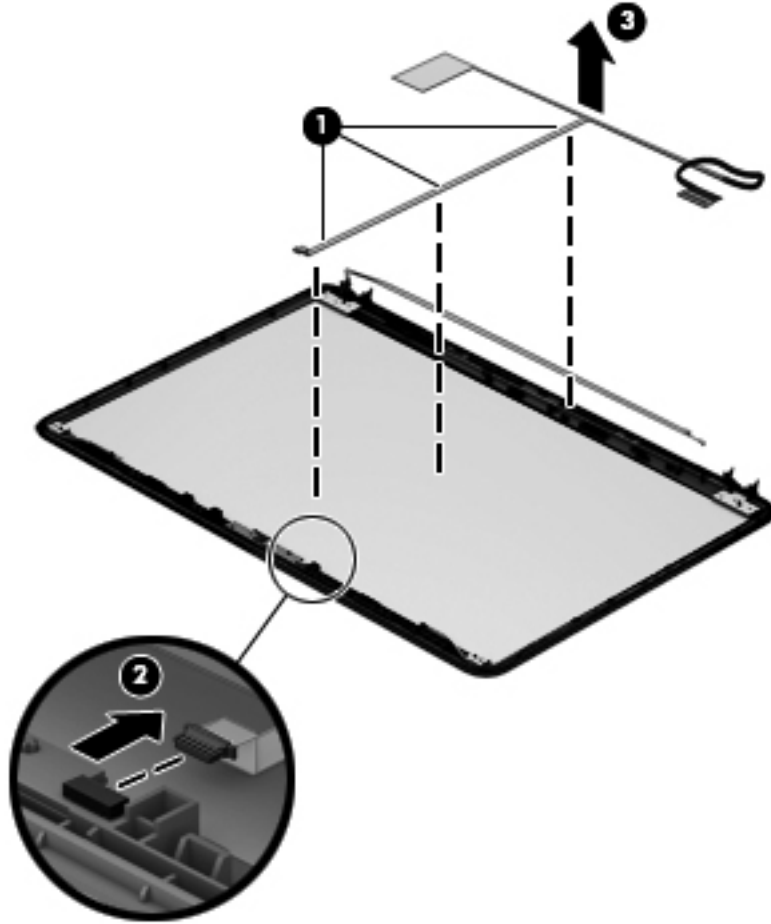


10. If it is necessary to replace the webcam/microphone module, gently detach the webcam/microphone module from the display enclosure. (The webcam/microphone module is attached to the display enclosure with double-sided tape.)

---

**CAUTION:** Due to the thin profile of the webcam/microphone module, it is easily damaged. Take extra precaution to ensure the webcam/microphone module is not damaged when removing and replacing the module.

---

The webcam/microphone module is available using spare part numbers 703461-001 (HD webcam/microphone module) and 686285-001 (non-HD webcam/microphone module).

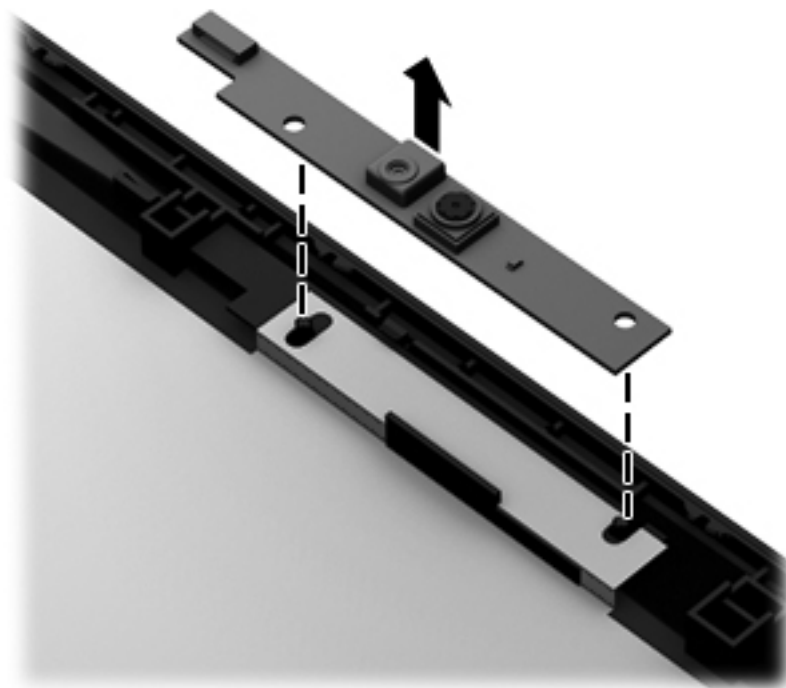


---

**NOTE:** Depending on computer model, some computer models may be equipped one or two sets of wireless antenna cables and transceivers.

---

11. If it is necessary to replace the wireless antenna cables and transceivers:
  - a. Detach the wireless antenna transceivers **(1)** from the display enclosure. (The wireless antenna transceivers are attached to the display enclosure with double-sided tape.)
  - b. Release the wireless antenna cables from the clips and routing channels along the left, right, and bottom edges of the display enclosure **(2)**.

- c. Remove the wireless antenna cables and transceivers **(3)**. The wireless antenna cables and transceivers are available using spare part number 686249-001.

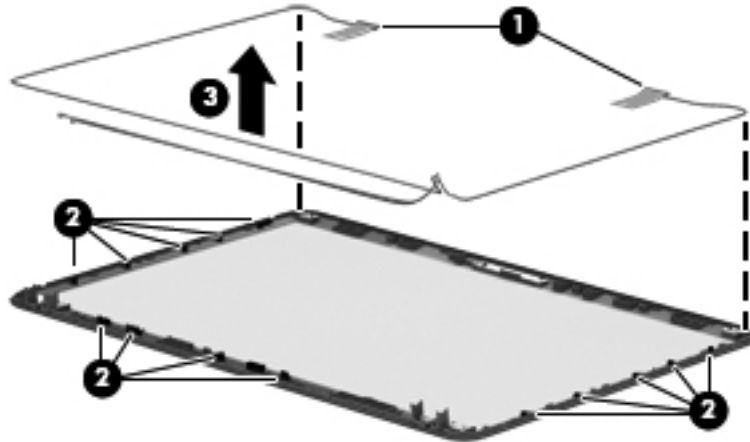

Reverse this procedure to install the display assembly.

## Power connector cable

Description	Spare part number
Power connector cable (includes bracket)	686258-001


Before removing the power connector cable, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 40](#)), and then remove the following components:
  - a. Memory module/wireless module compartment cover (see [Memory module on page 41](#))
  - b. Keyboard (see [Keyboard on page 45](#))
  - c. Hard drive (see [Hard drive on page 51](#))
  - d. Top cover (see [Top cover on page 55](#))
  - e. Display assembly (see [Display assembly on page 76](#))

Remove the power connector cable:

1. Disconnect the power connector cable **(1)** from the system board.
2. Remove the Phillips PM2.5x6.5 screw **(2)** that secures the power connector and bracket to the base enclosure.

3. Remove the power connector bracket **(3)**.
4. Remove the power connector cable **(4)**.

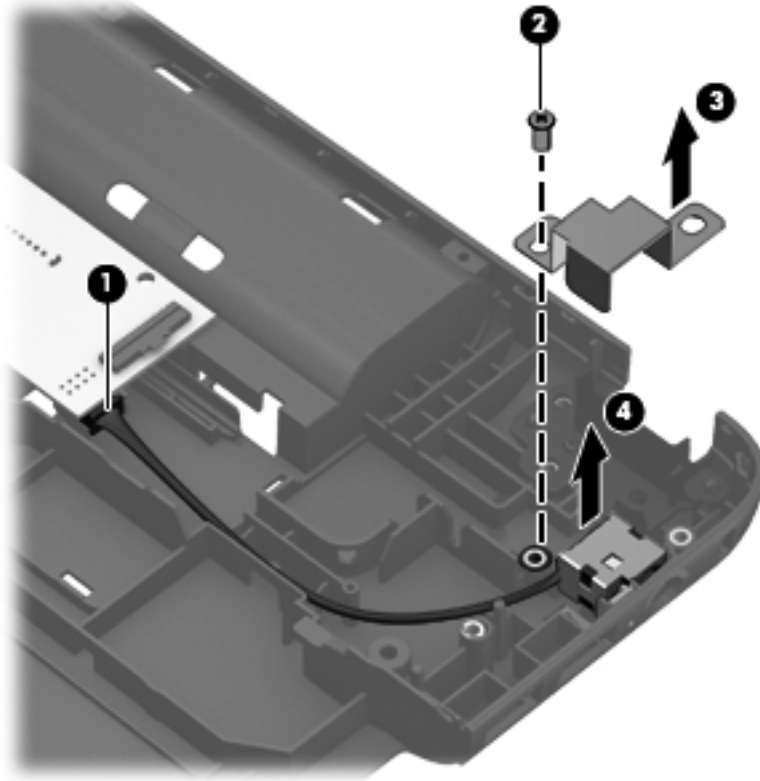

Reverse this procedure to install the power connector cable.

---

## **5 Using Setup Utility (BIOS) and System Diagnostics**

# Windows 8


Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

## Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press `esc`, and then press `f10`.

Information about how to navigate in Setup Utility (BIOS) is located at the bottom of the screen.

---

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

---

## Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called SoftPaqs.

Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.

## Determining the BIOS version


To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing `fn + esc` (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press `enter`.



## Downloading a BIOS update

 **CAUTION:** CAUTION: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, select the **HP Support Assistant** app.
2. Select **Updates and tune-ups**, and then select **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
  - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.


 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. From the Start screen, type *e*, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

## Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly.

To start System Diagnostics:

1. Turn on or restart the computer, quickly press `esc`, and then press `f2`.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.




**NOTE:** If you need to stop a diagnostic test while it is running, press `esc`.

---

# SUSE Linux

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.


---

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

---

## Starting Computer Setup

---

 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

---

To start Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press `f10` to enter Computer Setup.


## Using Computer Setup

### Navigating and selecting in Computer Setup

To navigate and select in Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
  - To select a menu or a menu item, use the `tab` key and the keyboard arrow keys and then press `enter`, or use a pointing device to click the item.
  - To scroll up and down, click the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key.
  - To close open dialog boxes and return to the main Computer Setup screen, press `esc`, and then follow the on-screen instructions.

---

 **NOTE:** You can use either a pointing device (TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make selections in Computer Setup.

---

2. Press `f10` to enter Computer Setup.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the [tab](#) key and the arrow keys to select **File > Ignore Changes and Exit**, and then press [enter](#).

– or –

- To save your changes and exit Computer Setup menus, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.


– or –

Use the [tab](#) key and the arrow keys to select **File > Ignore Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

## Restoring factory settings in Computer Setup

---

 **NOTE:** Restoring defaults will not change the hard drive mode.

---

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:


1. Turn on or restart the computer, and then press [esc](#) while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press [f10](#) to enter Computer Setup.
3. Use a pointing device or the arrow keys to select **File > Restore Defaults**.
4. Follow the on-screen instructions.
5. To save your changes and exit, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the arrow keys to select **File > Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

---

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

---

## Updating the BIOS

Updated versions of the BIOS may be available on the HP Web site.

Most BIOS updates on the HP Web site are packaged in compressed files called SoftPaqs.

Some download packages contain a file named Readme.txt, which contains information regarding installing and troubleshooting the file.

## Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.


BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed as follows:

1. Start Computer Setup.
2. Use a pointing device or the arrow keys to select **File > System Information**.
3. To exit Computer Setup without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –


Use the **tab** key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.

---

 **NOTE:** You can also determine the BIOS version by turning on or restarting the computer, pressing the **esc** key while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen, and then pressing the **f1** key. Follow the on-screen instructions to exit this screen.

---

## Downloading a BIOS update

 **CAUTION:** CAUTION: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Suspend or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

---

1. Open your web browser. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. Click the option for software and driver downloads, type your computer model number in the product box, and then press **enter**. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
4. Click your specific product from the models listed.
5. Click the appropriate operating system.
6. Go to the BIOS section and download the BIOS software package.
7. Follow the installation instructions as provided with the downloaded BIOS software package.

## Using Advanced System Diagnostics

Advanced System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly. The following diagnostic tests are available in Advanced System Diagnostics:

- **Start-up test**—This test analyzes the main computer components that are required to start the computer.
- **Run-in test**—This test repeats the start-up test and checks for intermittent problems that the start-up test does not detect.
- **Hard disk test**—This test analyzes the physical condition of the hard drive, and then checks all data in every sector of the hard drive. If the test detects a damaged sector, it attempts to move the data to a good sector.
- **Memory test**—This test analyzes the physical condition of the memory modules. If it reports an error, replace the memory modules immediately.
- **Battery test**—This test analyzes the condition of the battery and calibrates the battery if necessary. If the battery fails the test, contact support to report the issue and purchase a replacement battery.
- **System Tune-Up**—This group of additional tests checks your computer to make sure that the main components are functioning correctly. System Tune-Up runs longer and more comprehensive tests on memory modules, hard drive SMART attributes, the hard drive surface, the battery (and battery calibration), video memory, and the WLAN module status.

You can view system information and error logs in the Advanced System Diagnostics window.

To start Advanced System Diagnostics:

1. Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.



**NOTE:** If you need to stop a diagnostics test while it is running, press **esc**.

---

# 6 Specifications

## Computer specifications

	Metric	U.S.
<b>Dimensions</b>		
Width	<b>37.60 cm</b>	14.80 in
Depth	<b>24.70 cm</b>	9.72 in
Height (front to rear)	<b>3.05 to 3.58 cm</b>	1.20 to 1.41 in
<b>Weight</b>	<b>2.45 kg</b>	5.39 lb
<b>Input power</b>		
Operating voltage and current	18.5V/ 3.5A or 19.5V/ 3.33A – 65W 19V/ 4.74A or 19.5V/ 4.62A – 90W	
<b>Temperature</b>		
Operating	<b>5°C to 35°C</b>	41°F to 95°F
Nonoperating	<b>-20°C to 60°C</b>	-4°F to 140°F
<b>Relative humidity</b> (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
<b>Maximum altitude</b> (unpressurized)		
Operating	<b>-15 m to 3,048 m</b>	-50 ft to 10,000 ft
Nonoperating	<b>-15 m to 12,192 m</b>	-50 ft to 40,000 ft
<b>NOTE:</b> Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

## 15.6-in, SVA, display panel display specifications

	<b>Metric</b>	<b>U.S.</b>
<b>Dimensions</b>		
Height	<b>19.6 cm</b>	7.72 in
Width	<b>34.7 cm</b>	13.66 in
Diagonal	<b>39.8 cm</b>	15.67 in
<b>Number of colors</b>	Up to 16.8 million	
<b>Contrast ratio</b>	200:1 (typical)	
<b>Brightness</b>	250 nits (typical)	
<b>Pixel resolution</b>		
Pitch	<b>0.197 × 0.197 mm</b>	
Format	1366 × 768	
Configuration	RGB vertical stripe	
<b>Backlight</b>	LED	
<b>Character display</b>	80 × 25	
<b>Total power consumption</b>	3.46 W	
<b>Viewing angle</b>	±65° horizontal, +50° vertical (typical)	



## Hard drive specifications

	750-GB*	640-GB*	500-GB*	320-GB*
<b>Dimensions</b>				
Height	9.5 mm	9.5 mm	9.5 mm	9.5 mm
Length	100.4 mm	100.4 mm	100.4 mm	100.4 mm
Width	69.9 mm	69.9 mm	69.9 mm	69.9 mm
Weight	110 g	110 g	110 g	110 g
<b>Interface type</b>	SATA	SATA	SATA	SATA
<b>Transfer rate</b>				
Synchronous (maximum)	1.1 GB/sec	1.1 GB/sec	1.1 GB/sec	1.1 GB/sec
Security	ATA security	ATA security	ATA security	ATA security
<b>Seek times</b> (typical read, including setting)				
Single track	1.5 ms	1.5 ms	1.5 ms	1.5 ms
Average (read/write)	11/13 ms	11/13 ms	11/13 ms	11/13 ms
Maximum	22 ms	22 ms	22 ms	22 ms
<b>Logical blocks</b>	1,465,159,751	1,250,269,655	976,773,168	628,142,448
<b>Disk rotational speed</b>	5400 rpm	5400 rpm	5400 rpm	5400 rpm
<b>Operating temperature</b>	0°C to 60°C (32°F to 140°F)			
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.				
<b>NOTE:</b> Certain restrictions and exclusions apply. Contact technical support for details.				

---

# 7 Backup and recovery


# Windows 8

Your computer includes tools provided by HP and the operating system to help you safeguard your information and retrieve it if you ever need to. These tools will help you return your computer to a proper working state or even back to the original factory state, all with simple steps.

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

---

 **NOTE:** This guide describes an overview of backing up, restoring and recovering options. For more details about the tools provided, see Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

---

## Creating recovery media and backups

Recovery after a system failure is only as good as your most recent backup.

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- System Recovery—Reinstalls the original operating system and the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media on page 100](#).

2. As you add hardware and software programs, create system restore points. A system restore point is a snapshot of certain hard drive contents saved by Windows System Restore at a specific time. A system restore point contains information that Windows uses, such as registry settings. Windows creates a system restore point for you automatically during a Windows update and during other system maintenance (such as a software update, security scanning, or system diagnostics). You can also manually create a system restore point at any time. For more information and steps for creating specific system restore points, see Windows Help and Support. From the Start screen, type **h**, and then select **Help and Support**.
3. As you add photos, video, music, and other personal files, create a backup of your personal information. Windows File History can be set to regularly and automatically back up files from libraries, Desktop, contacts, and favorites. If files are accidentally deleted from the hard drive and they can no longer be restored from the Recycle Bin, or if files become corrupted, you can restore

the files that you backed up using File History. Restoring files is also useful if you ever choose to reset the computer by reinstalling Windows or choose to recover using HP Recovery Manager.



**NOTE:** File History is not enabled by default, so you must turn it on.

For more information and steps for enabling Windows File History, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.

## Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or aid in the replacement of a hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html). If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and follow the on-screen instructions to continue.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 103](#).

## Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- If you need to restore your personal files and data, you can use Windows File History to restore your information from the backups you created. For more information and steps for using File History, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, and then select **Drivers and Applications Reinstall**, and follow the on-screen instructions.

- If you want to restore the system to a previous state without losing any personal information, Windows System Restore is an option. System Restore allows you to restore without the requirements of Windows Refresh or a reinstallation. Windows creates system restore points automatically during a Windows update and other system maintenance events. Even if you did not manually create a restore point, you can choose to restore to a previous point, automatically created. For more information and steps for using Windows System Restore, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.
- If you want a quick and easy way to recover the system without losing your personal information, settings, or apps that came preinstalled on your computer or were purchased from the Windows Store, consider using Windows Refresh. This option does not require backing up data to another drive. See [Using Windows Refresh for quick and easy recovery on page 102](#).
- If you want to reset your computer to its original state, Windows provides an easy way to remove all personal data, apps, and settings, and reinstall Windows.

For more information, see [Remove everything and reinstall Windows on page 103](#).

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.


For more information, see [Recovering using HP Recovery Manager on page 103](#).


- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 103](#).
- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 103](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.


For more information, see [Removing the HP Recovery partition on page 105](#).

## Using Windows Refresh for quick and easy recovery

When your computer is not working properly and you need to regain system stability, the Windows Refresh option allows you to start fresh and keep what is important to you.

 **IMPORTANT:** Refresh removes any traditional applications that were not originally installed on the system at the factory.

 **NOTE:** During Refresh, a list of removed traditional applications will be saved so that you have a quick way to see what you might need to reinstall. See Help and Support for instructions on reinstalling traditional applications. From the Start screen, type **h**, and then select **Help and Support**.

 **NOTE:** You may be prompted for your permission or password when using Refresh. See Windows Help and Support for more information. From the Start screen, type **h**, and then select **Help and Support**.

To start Refresh:

1. On the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Refresh your PC without affecting your files**, select **Get started**, and follow the on-screen instructions.

## Remove everything and reinstall Windows

Sometimes you want to perform detailed reformatting of your computer, or you want to remove personal information before you give away or recycle your computer. The process described in this section provides a speedy, simple way to return the computer to its original state. This option removes all personal data, apps, and settings from your computer, and reinstalls Windows.



**IMPORTANT:** This option does not provide backups of your information. Before using this option, back up any personal information you wish to retain.

You can initiate this option by using the **f11** key or from the Start screen.

To use the **f11** key:

1. Press **f11** while the computer boots.  
– or –  
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Reset your PC**, and follow the on-screen instructions.

To use the Start screen:

1. On the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Remove everything and reinstall Windows**, select **Get started**, and follow the on-screen instructions.

## Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state. Using the HP Recovery media you created, you can choose from one of the following recovery options:

- **System Recovery**—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- **Minimized Image Recovery**—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows Minimized Image Recovery.

## What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails.
- To use the Factory Reset or System Recovery options, you must use HP Recovery media.
- If the HP Recovery media do not work, you can obtain recovery media for your system from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html).



**IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

---

## Using the HP Recovery partition to recover a minimized image (select models only)

The HP Recovery partition (select models only) allows you to perform a minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Press **f11** while the computer boots.  
– or –  
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **HP Recovery Manager**, and follow the on-screen instructions.



## Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the first HP Recovery disc you created into the optical drive on your computer or into an optional external optical drive, and then restart the computer.

– or –

Insert the HP Recovery USB flash drive you created into a USB port on your computer, and then restart the computer.

---

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 105](#).

---

3. Follow the on-screen instructions.

## Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.


To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer.
3. Press and hold **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the optical drive or USB flash drive you want to boot from.
5. Follow the on-screen instructions.

## Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

---

 **IMPORTANT:** Removing the HP Recovery partition means you can no longer use Windows Refresh, the Windows Remove everything and reinstall Windows option, or the HP Recovery Manager option for minimized image recovery. Create HP Recovery media before removing the Recovery partition to ensure you have recovery options; see [Creating HP Recovery media on page 100](#).

---

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and follow the on-screen instructions to continue.

# SUSE Linux

Recovery after a system failure is as good as your most recent backup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Your computer includes tools provided by HP to help you safeguard your information and retrieve it if ever needed.

## Creating backups

1. Create restore media immediately after you set up the computer. For more information, see the “Performing a system recovery” section.
2. As you add files, routinely create a backup of your system and personal information.

## Backing up your information

You should back up your computer files on a regular schedule to maintain a current backup. You can manually back up your information to an optional external drive, a network drive, or discs. Back up your system at the following times:

- At regularly scheduled times
- Before the computer is repaired or restored
- Before you add or modify hardware or software

To back up your home directory files using **Backup Manager Settings**:

1. Select **Computer > More Applications > Tools > Backup Manager Settings**, and click **Backup my home directory**.
2. Click **Storage Destination Location**, and then select a location to back up your information.
3. Click **Schedule**, and then select a time schedule to perform backups at a regularly scheduled time.

To immediately back up your information, click the **Backup Now** check box.



**NOTE:** Before you back up your information, be sure you have designated a location to save the backup files.


4. Click **Save and Backup** to start the backup and to save the backup settings.

To restore backup files:

1. Select **Computer > More Applications > Tools > Backup Manager Restore**.
2. Click **Backup Source**, and then select the location of the backup files.
3. Click **Restore Destination**, and then select the destination to restore the files.

4. To restore all files from the selected location, click **Restore all files**. To restore select files only, click **Restore selected files**, click **Select Files** and then select the files to be restored.
5. Under **Restore Point**, click the time and date of the backup.

---


 **NOTE:** If multiple backups have been performed, click **Use the latest version** to restore the latest version.

---

6. Click **Restore** to start restoring the files, or click **Cancel** to cancel the operation.


## Performing a system recovery

Recovery allows you to repair or restore the computer to its original factory state. You can create an HP Factory Image Restore DVD, using an installed or an external DVD±RW optical drive.

 **CAUTION:** CAUTION: Using Recovery completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery tool reinstalls the original operating system and HP programs and drivers that were installed at the factory. Software, drivers, and updates not installed by HP must be manually reinstalled. Personal files must be restored from a backup.

---

To restore the computer using the HP Factory Image Restore DVD, you must first create the recovery disc. To create the recovery disc:

 **NOTE:** HP recommends that you create the HP Factory Image Restore DVD in the event of a system failure.

---


1. Select **Computer > More Applications**.
2. In the left pane, click **Tools**, and then click **Create HP Factory Image Restore DVD** in the right pane.
3. Follow the on-screen instructions to create an image file to burn a recovery disc.


To restore the computer from the recovery disc, follow these steps:

1. If possible, back up all personal files.
2. Insert the HP Factory Image Restore DVD into the optical drive and restart the computer.
3. As the computer is restarting, press **f9** to open the Computer Setup boot option menu.
4. Press the down arrow to select **Restore SLED HP-BNB preload image** from the **Linux boot** menu, and then press **enter**.
5. Using the arrow keys, select **Yes** when prompted: **Do you want to start the System-Restore?**
6. Follow the on-screen instructions.

## USB Recovery option (select models only)


The USB Recovery Disk On Key (flash drive) option allows you to create a backup image of the SLED operating system installed on select HP Business Notebooks. This Disk On Key may be used to restore the system to the original factory state when the F11 recovery option is not available. This process should be done on first obtaining the computer.

 **CAUTION:** The USB recovery option does not preserve data present on the computer's hard drive or on the Disk On Key used for the recovery process. Back up any data on the Disk on Key or the notebook that will be recovered before starting.


 **NOTE:** HP recommends that you create the USB Recovery Disk in the event of a system failure. The Disk On Key used for this process should be 4 GB or larger.

Creating a USB Recovery Disk On Key


1. Connect the USB Disk On Key to a USB port on the computer.
2. Select **Computer > More applications > Tools > Create Recovery USB**.
3. Enter the root password when prompted.
4. Select **USB Disk On Key** from the list.
5. Click **OK**.
6. A question dialog will remind you that the data on the USB key will be destroyed. To continue, click **OK**. Otherwise, click **Cancel** and back up the contents of the Disk On Key on another computer.
7. The backup process will display a status dialog box while the backup is in progress.

 **NOTE:** A file browser window with the Disk On Key Contents displayed will pop up when the key is mounted. You may close the file browser window if desired. Once the USB Recovery Key has been created, the status dialog will close. The USB Recovery Key is ready for use.

Recovering from a USB Recovery Disk On Key

 **CAUTION:** Before starting the Recovery process, make sure any data on the system to be recovered has been backed up. The recovery process destroys all data on the system to be recovered.

1. Turn off the computer.
2. Connect the USB Disk On Key to a USB port on the computer.
3. Turn on the computer while holding down the **f9** key.
4. Once the system has booted, the **Boot Options** menu should appear.
5. Using the arrow keys, select **USB Disk On Key** and press **enter**.

 **NOTE:** The description may vary from one USB key to another. Any entry other than Optical Disk Drive, Notebook Hard Drive or Notebook Ethernet should be the USB Recovery Disk On Key.


6. Once the USB Recovery Disk On Key has been selected, press **enter**. The USB Recovery Disk On Key will boot.

7. Once the USB Recovery Disk On Key has booted, a dialog box will prompt, “Do you want to start the System-Restore?” If data on the computer has not been backed up, use the tab key and select No. The system will reboot. Back up the system data and repeat the previous steps. If no data should be saved from the computer, use the **tab** key to select **Yes**. Press **enter** to begin the recovery process.
8. After the files are copied to the system, follow the on-screen instructions.

## Remove everything and reinstall SLED

Sometimes you want to perform detailed reformatting of your computer, or you want to remove personal information before you give away or recycle your computer. The process described in this section provides a speedy, simple way to return the computer to its original state. This option removes all personal data, applications, and settings from your computer, and reinstalls the Linux operating system.

---

 **IMPORTANT:** This option does not provide backups of your information. Before using this option, back up any personal information you wish to retain.

---

You can initiate this option by using the **f11** key.

To use the **f11** key:

Press **f11** while the computer boots.

– or –

Press and hold **f11** as you press the power button.

The following options are available:

- **Cancel/Reboot**—Reboots the system. No recovery or restore activity is performed.
- **Recover/Repair System**—This option repairs a system that is not working properly and preserves user data.
- **Restore Factory System**—This option restores the system back to the original factory state. User data is not preserved.

Select an option and follow the on-screen instructions.

---

## 8 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

### Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

## Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

---

## 9 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.



---

# Index

## A

AC adapter light 15  
AC adapter, spare part numbers 27, 30  
Action keys 10  
antenna  
    locations 7  
    removal 84  
    spare part number 25, 29, 85  
Antenna Kit, spare part number 25, 29, 85  
audio, product description 4  
audio-in jack 13  
audio-out jack 13

## B

base enclosure, spare part number 22, 31  
battery  
    removal 40  
    spare part numbers 22, 28, 40  
battery bay 16  
battery release latch 16  
bottom components 16  
button component 9  
buttons  
    optical drive eject 15  
    power 9  
    TouchPad 12  
    TouchPad on/off 12

## C

cables, service considerations 34  
caps lock light 11  
chipset, product description 2  
components  
    bottom 16  
    button 9

display 7  
    front 12  
    keys 10  
    left-side 13  
    lights 11  
    right-side 15  
    TouchPad 12  
computer feet  
    locations 39  
    spare part number 22, 30  
computer major components 19  
computer part number 38  
computer specifications 95  
connectors, service considerations 34  
Cover Kit, spare part number 23, 30, 41, 52

## D

Digital Media slot 14  
display  
    components 7  
    specifications 96  
display assembly  
    removal 76  
    spare part number 76  
    subcomponents 24  
display bezel  
    removal 78  
    spare part numbers 24, 29, 78  
display enclosure, spare part numbers 25, 29  
display hinge  
    removal 81  
    spare part number 25, 29, 82  
display hinge cover  
    removal 79  
    spare part number 25, 79

Display Hinge Cover Kit, spare part number 25  
display panel  
    product description 3  
    removal 80  
    spare part number 25, 30, 81  
display panel cable  
    removal 82  
    spare part number 25, 29, 83  
drives, preventing damage 34  
DVD±RW Double-Layer with SuperMulti Drive  
    precautions 34  
    removal 49  
    spare part number 22, 26, 29, 49

## E

electrostatic discharge 35  
equipment guidelines 37  
esc key 10  
Ethernet, product description 4  
external monitor port 13

## F

fan/heat sink assembly  
    removal 71  
    spare part number 22, 29, 71  
feet  
    locations 39  
    spare part number 22, 30  
fn key 10  
front component 12

## G

graphics, product description 3  
grounding guidelines 35  
guidelines  
    equipment 37

- grounding 35
  - packaging 36
  - transporting 36
  - workstation 36
- H**
- hard drive
    - precautions 34
    - product description 4
    - removal 51
    - spare part numbers 22, 26, 28, 29, 51
    - specifications 97
  - hard drive bracket
    - illustrated 26
    - removal 53
  - hard drive compartment cover
    - location 16
    - removal 52
    - spare part number 30, 52
  - hard drive connector cable
    - illustrated 26
    - removal 53
  - Hard Drive Hardware Kit
    - contents 26
    - spare part number 22, 26, 29, 51
  - hard drive light 14
  - HDMI port 13
  - headphone jack 13
- J**
- jacks
    - audio-in 13
    - audio-out 13
    - headphone 13
    - microphone 13
    - network 13
    - RJ-45 13
- K**
- key components 10
  - keyboard
    - product description 5
    - removal 45
    - spare part numbers 20, 30, 31, 45
  - keys
    - Action 10
    - esc 10
    - fn 10
- Windows applications 10
- Windows logo 10
- L**
- left-side components 13
  - light components 11
  - lights
    - AC adapter 15
    - caps lock 11
    - hard drive 14
    - optical drive 15
    - power 11, 14
    - TouchPad 12
    - webcam 8
    - wireless 11
- M**
- mass storage device
    - illustrated 26
    - precautions 34
  - memory module
    - product description 3
    - removal 41
    - spare part numbers 22, 28, 41
  - memory module/wireless module
    - compartment cover
      - location 16
      - removal 41
      - spare part number 30, 41
    - microphone
      - location 7
      - product description 4
    - microphone jack 13
    - model description 39
    - model name 1
    - monitor port 13
- N**
- network jack 13
- O**
- operating system, product
    - description 6
  - optical drive
    - location 15
    - precautions 34
    - product description 4
    - removal 49
    - spare part number 22, 26, 29, 49
  - optical drive connector cable
    - removal 63
    - spare part number 21, 29, 63
  - optical drive eject button 15
  - optical drive light 15
- P**
- packaging guidelines 36
  - plastic parts, service
    - considerations 33
  - pointing device, product
    - description 5
  - ports
    - external monitor port 13
    - HDMI 13
    - monitor port 13
    - product description 5
    - USB 13, 15
  - power button 9
  - power button board
    - removal 59
    - spare part number 20, 29, 59
  - power connector 15
  - power connector cable
    - removal 85
    - spare part number 22, 29, 85
  - power cord
    - set requirements 110
    - spare part numbers 27, 28
  - power light 11, 14
  - power requirements, product
    - description 6
  - processor
    - product description 1
    - removal 73
    - spare part numbers 21, 28, 29, 30, 31, 32, 73
  - product description
    - audio 4
    - chipset 2
    - display panel 3
    - Ethernet 4
    - external media cards 5
    - graphics 3
    - hard drive 4
    - keyboard 5
    - memory module 3
    - microphone 4
    - operating system 6
    - optical drive 4

- pointing device 5
- ports 5
- power requirements 6
- processors 1
- product name 1
- security 6
- serviceability 6
- video 4
- wireless 4
- product name 1, 38
- product number 38

**R**

- removal/replacement
  - preliminaries 33
  - procedures 38
- right-side components 15
- RJ-45 jack 13
- RTC battery
  - removal 54
  - spare part number 22, 30, 54
- Rubber Feet Kit, spare part number 22, 30

**S**

- Screw Kit, spare part number 27, 30
- security cable slot 15
- security, product description 6
- serial number 38
- service considerations
  - cables 34
  - connectors 34
  - plastic parts 33
- service tag 18, 38
- serviceability, product description 6
- speakers
  - location 12
  - removal 65
  - spare part number 20, 30, 65
- specifications
  - computer 95
  - display 96
  - hard drive 97
- system board
  - removal 69
  - spare part numbers 21, 30, 69

**T**

- tools required 33
- top cover
  - removal 55
  - spare part numbers 20, 30, 55
- TouchPad button 12
- TouchPad button board
  - removal 60
  - spare part number 20, 29, 60
- TouchPad components 12
- TouchPad light 12
- TouchPad on/off button 12
- TouchPad zone 12
- transporting guidelines 36

**U**

- USB board
  - removal 67
  - spare part number 21, 29, 67
- USB port 13, 15

**V**

- vents 13, 16
- video, product description 4

**W**

- warranty period 39
- webcam 8
- webcam light 8
- webcam/microphone module
  - removal 84
  - spare part numbers 24, 30, 31, 84
- Windows applications key 10
- Windows logo key 10
- wireless antenna
  - locations 7
  - removal 84
  - spare part number 25, 29, 85
- wireless light 11
- wireless, product description 4
- WLAN module
  - removal 42
  - spare part numbers 22, 28, 29, 30, 42
- workstation guidelines 36

