



User Guide

© Copyright 2017 HP Development Company, L.P.

Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Product notice

This guide describes features that are common to most models. Some features may not be available on your product. To access the latest user guide, go to <http://www.hp.com/support>, and then follow the on-screen instructions to find your product.

First Edition: August 2017

Document Part Number: L01942-001

About This Guide

This guide provides information on monitor features, setting up the monitor, and technical specifications.

-
-  **WARNING!** Indicates a hazardous situation that, if not avoided, **could** result in death or serious injury.
 -  **CAUTION:** Indicates a hazardous situation that, if not avoided, **could** result in minor or moderate injury.
 -  **IMPORTANT:** Indicates information considered important but not hazard-related (for example, messages related to property damage). A notice alerts the user that failure to follow a procedure exactly as described could result in loss of data or in damage to hardware or software. Also contains essential information to explain a concept or to complete a task.
 -  **NOTE:** Contains additional information to emphasize or supplement important points of the main text.
 -  **TIP:** Provides helpful hints for completing a task.
-



Table of contents

1 Getting started	1
Important safety information	1
Product features and components	2
Features	2
Rear components	3
Setting up the monitor	4
Installing the monitor stand	4
Connecting the cables	6
Adjusting the monitor	9
Turning on the monitor	10
HP watermark and image retention policy	10
Removing the monitor stand	11
Mounting the monitor	12
Installing a security cable	15
2 Using the monitor	16
Software and utilities	16
The Information file	16
The Image Color Matching file	16
Using the on-screen display (OSD) menu	16
Assigning the Function buttons	17
Using Auto-Sleep Mode	18
Adjusting Low Blue Light Mode	18
3 Support and troubleshooting	19
Solving common problems	19
Using the auto-adjustment function (analog input)	20
Optimizing image performance (analog input)	21
Button lockouts	22
Product support	22
Preparing to call technical support	22
Locating the serial number and product number	23
4 Maintaining the monitor	24
Maintenance guidelines	24
Cleaning the monitor	24

Shipping the monitor 24

Appendix A Technical specifications 25

60.5 cm/23.8-inch 25

68.6 cm/27-inch 25

Preset display resolutions 26

Power adapter 26

Entering user modes 27

Energy saver feature 27

Appendix B Accessibility 28

Supported assistive technologies 28

Contacting support 28

1 Getting started

Important safety information

An AC power cord is included with the monitor. If another cord is used, use only a power source and connection appropriate for this monitor. For information on the correct power cord set to use with the monitor, refer to the *Product Notices* provided in your documentation kit.

 **WARNING!** To reduce the risk of electric shock or damage to the equipment:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the computer by unplugging the power cord from the AC outlet.
- If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.

For your safety, do not place anything on power cords or cables. Arrange them so that no one may accidentally step on or trip over them.

To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is located on the Web at <http://www.hp.com/ergo>.

 **IMPORTANT:** For the protection of the monitor, as well as the computer, connect all power cords for the computer and its peripheral devices (such as a monitor, printer, scanner) to some form of surge protection device such as a power strip or uninterruptible power supply (UPS). Not all power strips provide surge protection; the power strips must be specifically labeled as having this ability. Use a power strip whose manufacturer offers a Damage Replacement Policy so you can replace the equipment, if surge protection fails.

Use the appropriate and correctly sized furniture designed to properly support your HP LCD monitor.

 **WARNING!** LCD monitors that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, or carts may fall over and cause personal injury.

Care should be taken to route all cords and cables connected to the LCD monitor so that they cannot be pulled, grabbed, or tripped over.

Be sure that the total ampere rating of the products connected to the AC outlet does not exceed the current rating of the outlet, and that the total ampere rating of the products connected to the cord does not exceed the rating of the cord. Look on the power label to determine the ampere rating (AMPS or A) for each device.

Install the monitor near an AC outlet that you can easily reach. Disconnect the monitor by grasping the plug firmly and pulling it from the AC outlet. Never disconnect the monitor by pulling the cord.

Do not drop the monitor or place it on an unstable surface.

 **NOTE:** This product is suitable for entertainment purposes. Consider placing the monitor in a controlled luminous environment to avoid interference from surrounding light and bright surfaces that may cause disturbing reflections from the screen.

Product features and components

Features

- 60.5 cm (23.8–inch) diagonal viewable screen area with 1920 x 1080 Full HD resolution; includes custom scaling for maximum image size while preserving original aspect ratio
- 68.6 cm (27–inch) diagonal viewable screen area with 1920 x 1080 Full HD resolution; includes custom scaling for maximum image size while preserving original aspect ratio


The monitor features include the following:

- Nonglare panel with an LED backlight
- Wide viewing angle to allow viewing from a sitting or standing position, or when moving from side to side
- Tilt and height adjustment capabilities
- Removable stand for flexible monitor mounting solutions
- VGA video input (cable provided)
- HDMI (High-definition Multimedia Interface) video input
- Plug and Play capability if supported by your operating system
- Security cable slot provision on rear of monitor for optional security cable
- On-screen display (OSD) adjustments in several languages for easy setup and screen optimization
- HP Display Assistant software for adjusting monitor settings and enabling the theft deterrence features
- Energy saver feature to meet requirements for reduced power consumption
- Low Blue Light Mode settings to create a more relaxing and less stimulating image



NOTE: For safety and regulatory information, refer to the *Product Notices* provided in your documentation kit. To locate updates to the user guide for your product, go to <http://www.hp.com/support>, and then follow the on-screen instructions to find your product.

Rear components

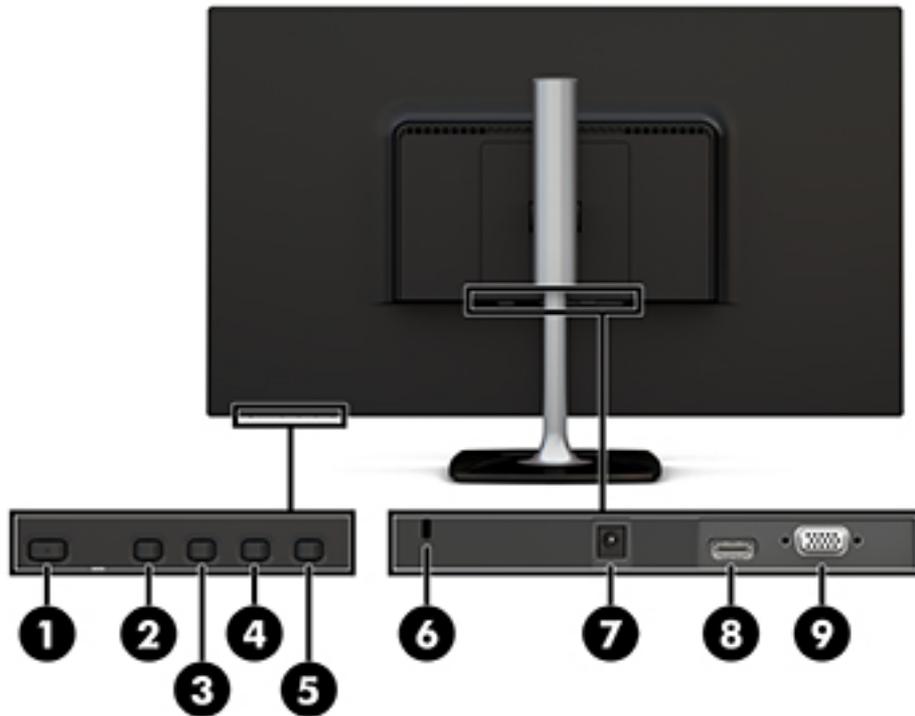

Component	Function
1 Power button	Turns the monitor on or off.
2 Next Input/Exit/Back button	If the OSD menu is open, exits OSD or goes back to upper level. If the OSD menu is closed, switches to the next video input port.*
3 Up/Increase/Viewing Modes button	If the OSD menu is open, navigates forward through the OSD menu and increases adjustment levels. If the OSD menu is closed, opens the Viewing Modes menu.*
4 Down/Decrease/Information/Auto adjust button	If the OSD menu is open, navigates forward through the OSD menu and decreases adjustment levels. If the OSD menu is closed, opens the Information menu if the video input is HDMI or opens the auto-adjustment utility if the video input is VGA.*
5 Menu/OK	If the OSD menu is open, confirms selection. If the OSD menu is closed, opens the OSD menu.
6 Security cable slot	Attaches an optional security cable to the monitor.
7 Power connector	Connects the AC adapter to the monitor.
8 HDMI port	Connects an HDMI cable to the source device.
9 VGA port	Connects the VGA cable to the source device.

NOTE: * Buttons 2–4 are function buttons that can be changed from their default settings in the OSD menu to a different menu selection that you most commonly use and want to quickly access. See [Assigning the Function buttons on page 17](#) for more information.



NOTE: To view an OSD simulator, visit the HP Customer Self Repair Services Media Library at <http://www.hp.com/go/sml>.

Setting up the monitor

Installing the monitor stand




CAUTION: Do not touch the surface of the LCD panel. Pressure on the panel may cause nonuniformity of color or disorientation of the liquid crystals. If this occurs, the screen will not recover to its normal condition.

1. Attach the base to the stand by aligning the screw on the base with the screw hole on the stand, and then tightening the screw.



2. Position the monitor facedown on a flat surface covered by a clean, dry cloth.
3. Insert the top edge of the mounting plate under the upper lip (1) of the recess in the back of the monitor.

4. Lower the bottom of the stand mounting plate into the recess (2) until it snaps into place and the latch on the lower edge of the mounting plate pops up.

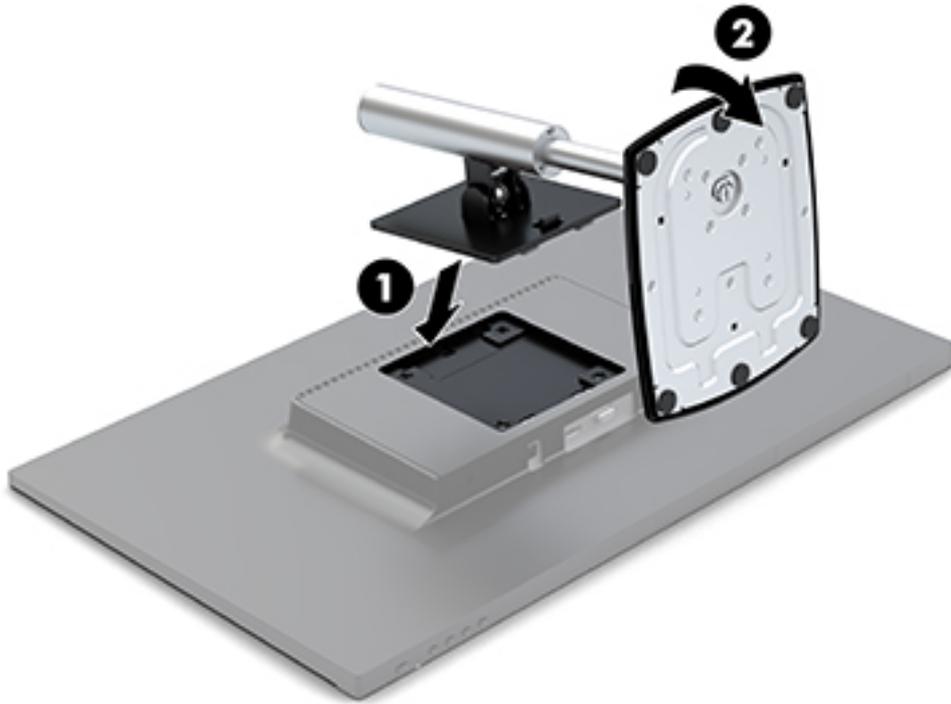


Connecting the cables

 **NOTE:** The monitor ships with select cables. Not all cables shown in this section are included with the monitor.


1. Place the monitor in a convenient, well-ventilated location near the computer.
2. Connect a video cable to the video input port.

 **NOTE:** The monitor automatically determines which inputs have valid video signals. The inputs can be selected by pressing the **Menu** button under the right side of the bezel to access the on-screen display (OSD) menu and selecting **Input Control**.


- Connect one end of the VGA cable to the VGA port on the rear of the monitor and the other end to the source device.

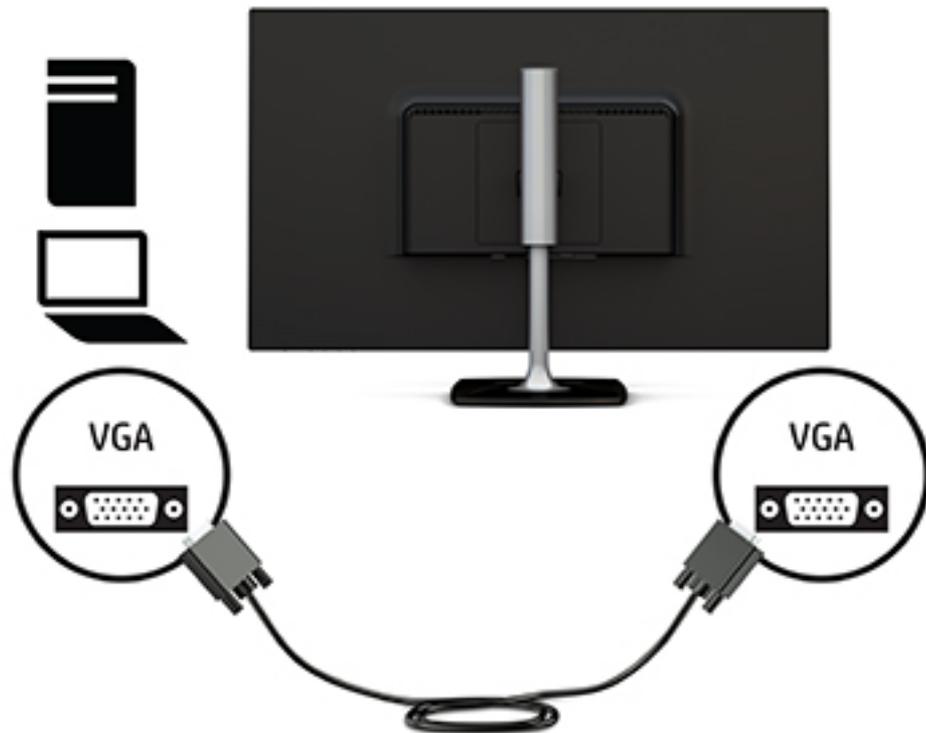

- Connect one end of an HDMI cable to the HDMI port on the rear of the monitor and the other end to the source device.

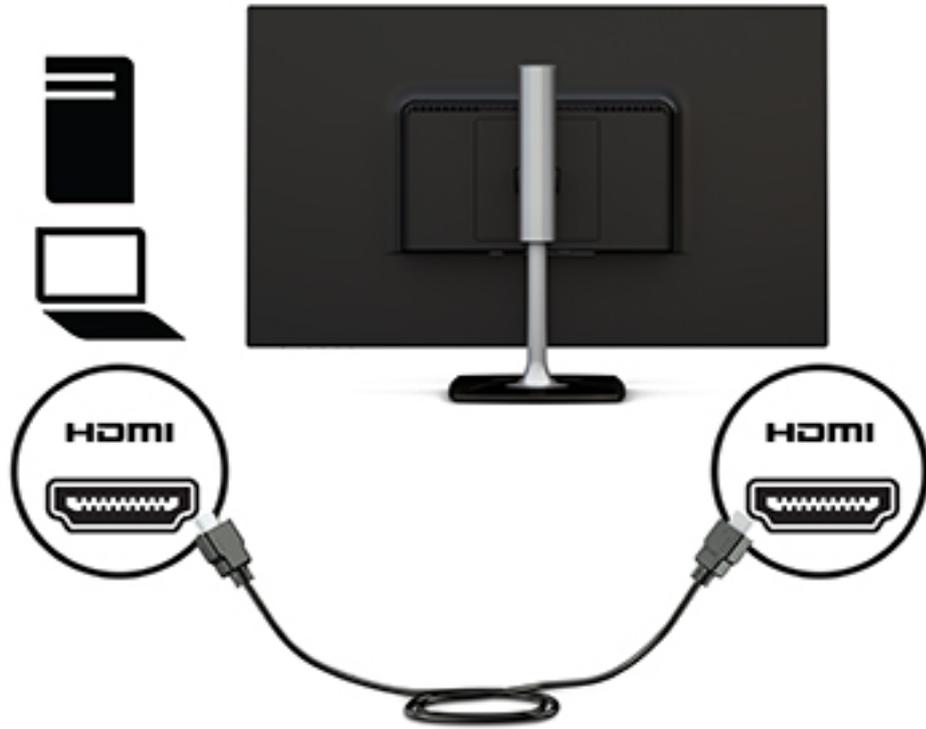

3. Connect one end of the power cord to the AC adapter (1), and the other end of the power cord to a grounded AC outlet (2). Then, connect the AC adapter to the monitor (3).

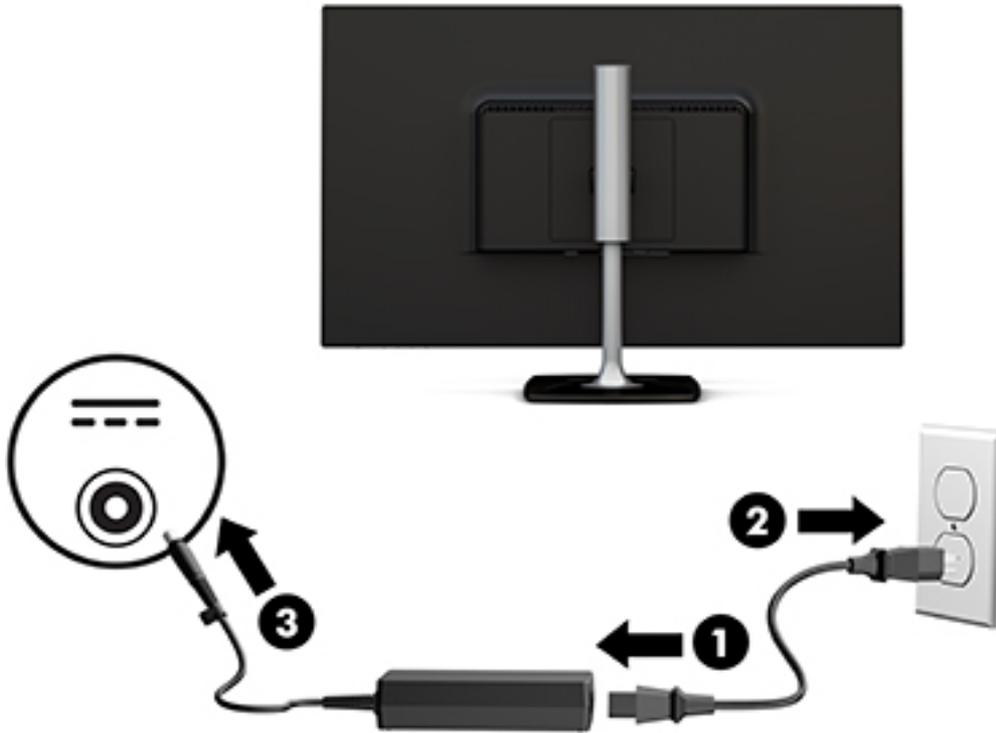

⚠ WARNING! To reduce the risk of electric shock or damage to the equipment:

Do not disable the power cord grounding plug. The grounding plug is an important safety feature.

Plug the power cord into a grounded (earthed) AC outlet that is easily accessible at all times.

Disconnect power from the equipment by unplugging the power cord from the AC outlet.


For your safety, do not place anything on power cords or cables. Arrange them so that no one may accidentally step on or trip over them. Do not pull on a cord or cable. When unplugging the power cord from the AC outlet, grasp the cord by the plug.

Adjusting the monitor

1. Tilt the monitor forward or backward to set it to a comfortable eye level.



2. Grasp the monitor on both sides and raise or lower it to a comfortable eye level.

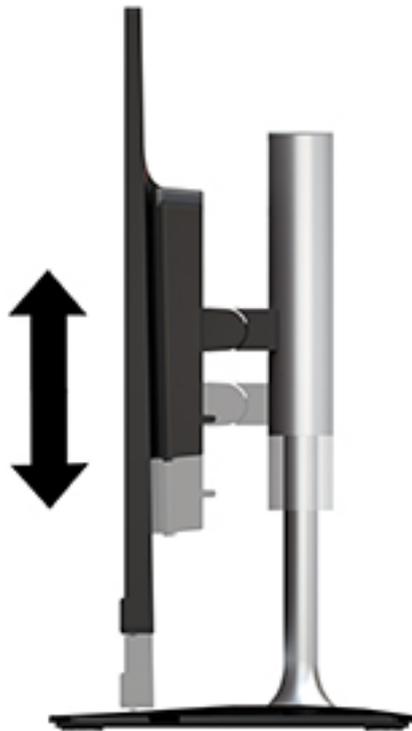

Turning on the monitor

1. Press the power button on the computer to turn it on.
2. Press the power button under the right side of the bezel on the monitor to turn it on.



CAUTION: Burn-in image damage may occur on monitors that display the same static image on the screen for 12 or more consecutive hours of nonuse. To avoid burn-in image damage on the monitor screen, you should always activate a screen saver application or turn off the monitor when it is not in use for a prolonged period of time. Image retention is a condition that may occur on all LCD screens. A burned-in image on the monitor is not covered under the HP warranty.

If pressing the power button has no effect, the Power Button Lockout feature may be enabled. To disable this feature, press and hold the monitor power button for 10 seconds.

NOTE: You can disable the power light by using the OSD menu. Press the **Menu** button under the right side of the bezel, select **Power Control**, select **Power LED**, and then select **Off**.

When the monitor is powered on, a Monitor Status message is displayed for five seconds. The message shows which input is the current active signal, the status of the auto-switch source setting (On or Off; default setting is On), the current preset screen resolution, and the recommended preset screen resolution.

The monitor automatically scans the signal inputs for an active input and uses that input for the screen.

HP watermark and image retention policy


The IPS monitor models are designed with IPS (In-Plane Switching) display technology which provides ultra-wide viewing angles and advanced image quality. IPS monitors are suitable for a wide variety of advanced image quality applications. This panel technology, however, is not suitable for applications that exhibit static, stationary, or fixed images for long periods of time without the use of screen savers. These types of applications may include camera surveillance, video games, marketing logos, and templates that are displayed on the screen for a prolonged period of time. Static images may cause image retention damage that could look like stains or watermarks on the monitor's screen.

Removing the monitor stand

You can remove the monitor from the stand to mount the monitor to a wall, a swing arm, or other mounting fixture.

⚠ CAUTION: Before beginning to disassemble the monitor, be sure that the monitor is turned off and all cables are disconnected.

1. Disconnect and remove all cables from the monitor.
2. Position the monitor facedown on a flat surface covered by a clean, dry cloth.
3. Push the release latch (1) toward the top of the monitor.
4. Lift the stand base up (2) to rotate the lower edge of the mounting plate out of the recess in the back of the monitor.
5. Slide the upper edge of the mounting plate out of the recess (3).

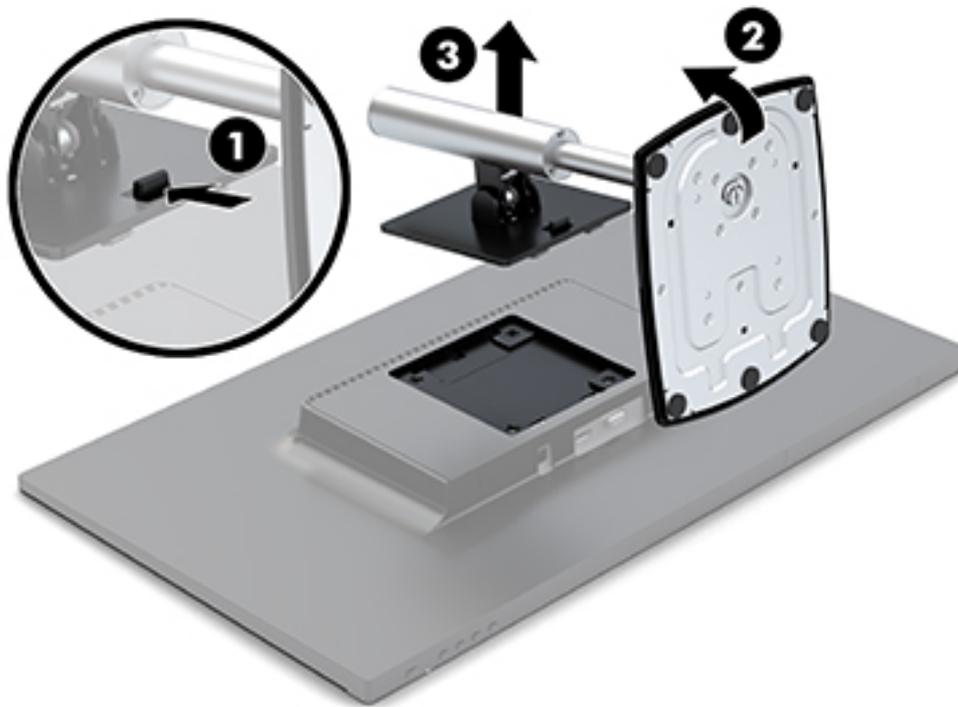

Mounting the monitor


The monitor can be attached to a swing arm, wall, or other mounting fixture.

This monitor incorporates four mounting points on the side of the unit. These mounting points follow the VESA (Video Electronics Standards Association) standard, which provides industry-standard mounting interfaces for Flat Displays (FDs), such as flat panel monitors, flat displays, and flat TVs.

⚠ CAUTION: This monitor supports the VESA industry standard 100 mm mounting holes. To attach a third-party mounting solution to the monitor, you must use the screws included with the monitor. Other screws may damage the monitor. It is important to verify that the manufacturer's mounting solution is compliant with the VESA standard and is rated to support the weight of the monitor. For best performance, it is important to use the power and video cables provided with the monitor.

To attach the monitor to a swing arm:

1. Remove the monitor from the stand. See [Removing the monitor stand on page 11](#).
2. Using the four screws included with the monitor, attach the monitor to the swing arm.

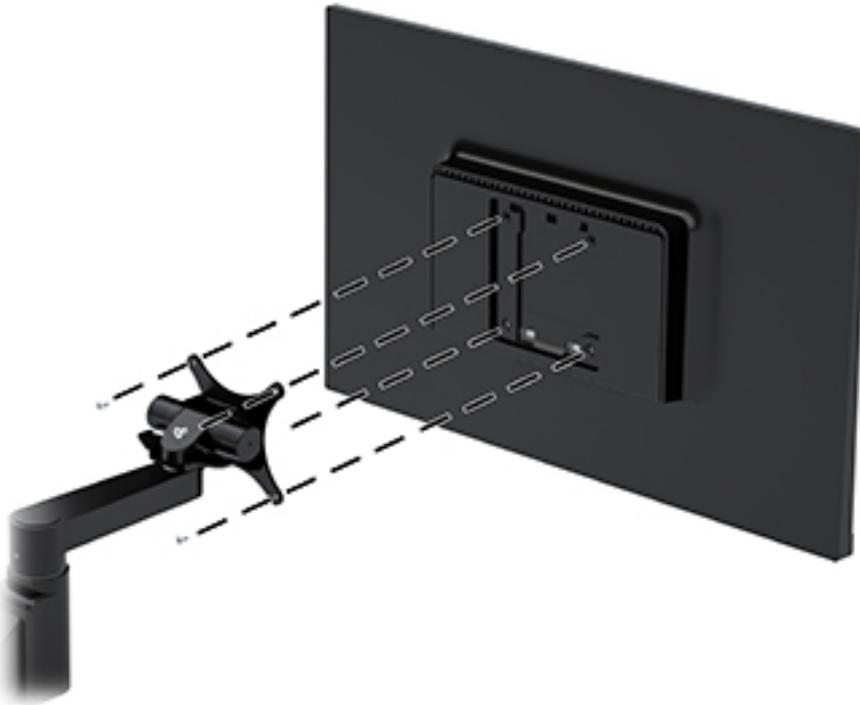


An optional HP Quick Release mounting bracket is available from HP for mounting the monitor. The HP Quick Release connects to the VESA-standard mounting points, allowing you to mount the monitor in a variety of orientations.




To mount the monitor using the HP Quick Release:


1. Remove the monitor from the stand. See [Removing the monitor stand on page 11](#).
2. Using the four screws included with the monitor, attach one side of the HP Quick Release to the monitor.

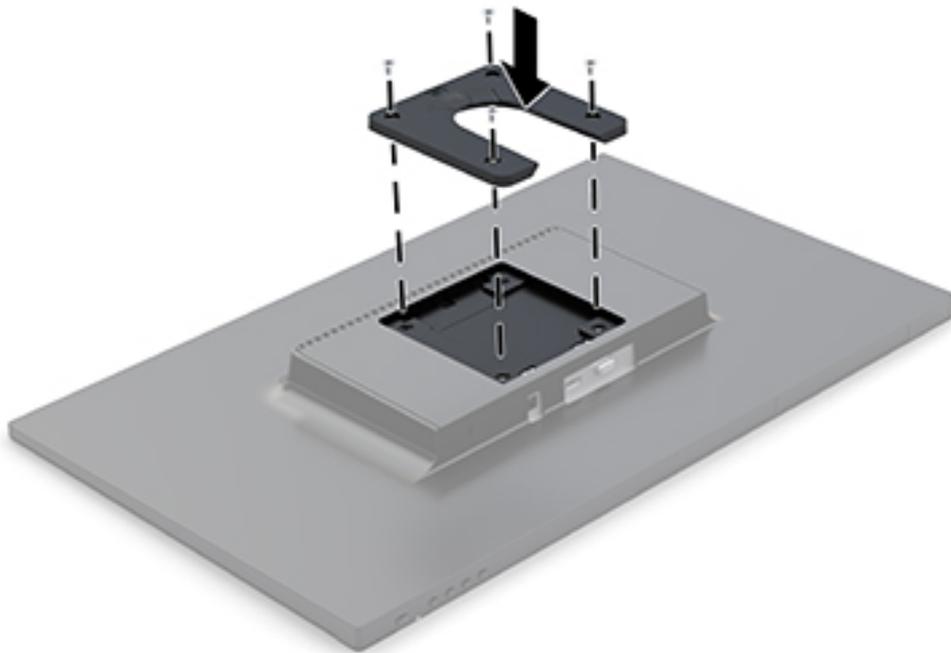

3. Using four screws included in the mounting device kit, attach the other side of the HP Quick Release to the device or surface to which you will mount the monitor. Make sure the release lever points upward.

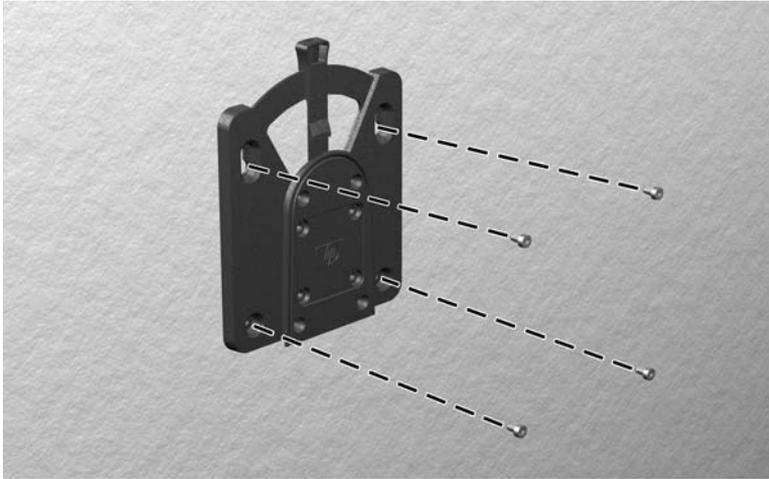

4. Slide the side of the mounting device attached to the monitor over the other side of the mounting device on the device or surface to which you want to mount the monitor. An audible click indicates a secure connection.

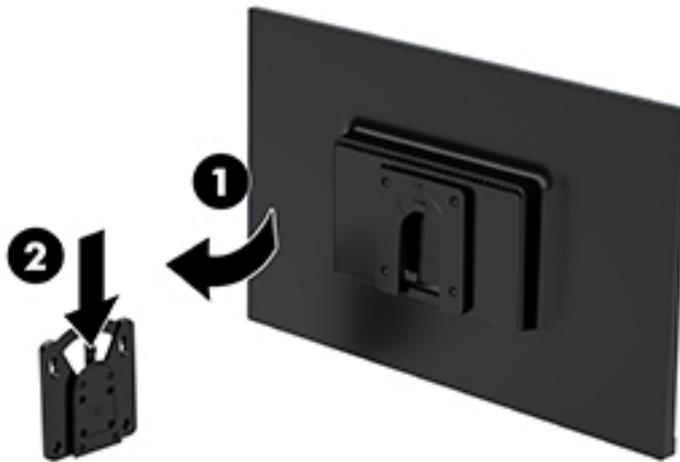

Installing a security cable

You can secure the monitor to a fixed object with an optional security cable available from HP.



2 Using the monitor

Software and utilities

You can download and install the following files onto your computer from <http://www.hp.com/support>:

- INF (Information) file
- ICM (Image Color Matching) files (one for each calibrated color space)

The Information file

The INF file defines monitor resources used by Windows® operating systems to ensure monitor compatibility with the computer's graphics adapter.

This monitor is Windows Plug and Play-compatible and the monitor will work correctly without installing the INF file. Monitor Plug and Play compatibility requires that the computer's graphic card is VESA DDC2-compliant and that the monitor connects directly to the graphics card. Plug and Play does not work through separate BNC-type connectors or through distribution buffers/boxes.

The Image Color Matching file

The ICM files are data files that are used in conjunction with graphics programs to provide consistent color matching from monitor screen to printer, or from scanner to monitor screen. This file is activated from within graphics programs that support this feature.



NOTE: The ICM color profile is written in accordance with the International Color Consortium (ICC) Profile Format specification.

Using the on-screen display (OSD) menu

Use the on-screen display (OSD) menu to adjust the monitor screen image based on your preferences. You can access and make adjustments in the OSD menu using the buttons under the right side of the bezel.

To access the OSD menu and make adjustments, do the following:

1. If the monitor is not already on, press the power button under the right side of the bezel to turn on the monitor.
2. Press the **Menu** button under the right side of the bezel to open the OSD.
3. Use the menu options to navigate, select, and adjust the menu choices. The options are variable depending on the menu or sub-menu that is active.

The following table lists the menu selections in the OSD menu.

Main Menu	Description
Brightness	Adjusts the brightness level of the screen.
Contrast	Adjusts the screen contrast.
Color Control	Selects and adjusts the screen color.
Input Control	Selects the video input signal.

Main Menu	Description
Image Control	Adjusts the screen image.
Power Control	Adjusts the power settings.
Menu Control	Opens and closes the OSD menu.
Management	Enables/disables DDC/CI support and returns all OSD menu settings to the factory default settings.
Language	Selects the language in which the OSD menu is displayed. The factory default is English.
Information	Displays important information about the monitor.
Exit	Exits the OSD menu screen.

Assigning the Function buttons

Pressing one of the four Function buttons activates the buttons and displays the icons on the left side of the buttons. The factory default button icons and functions are shown below.

	Button	Function
1	Menu	Opens the OSD (On-Screen Display) menu.
2	Next Input Assignable function button 2	Switches to the next input or next active video input port.
3	Viewing Modes Assignable function button 3	Opens the Viewing Modes menu.
4	Information/Auto Adjust Assignable function button 4	Opens the Information menu if the video input is HDMI or opens the auto-adjustment utility if the video input is VGA.

You can change the Function buttons from their default values so that when the buttons are activated you can quickly access commonly used menu items.

To assign the Function buttons:

1. Press one of the four Function buttons under the right bezel to activate the buttons, and then press the **Menu** button to open the OSD.
2. In the OSD menu, select **Menu Control**, select **Assign Buttons**, and then select one of the available options for the button you want to assign.



NOTE: You can only reassign three Function buttons. You can not reassign the **Menu** button or the power button.

Using Auto-Sleep Mode

The monitor supports an OSD (on-screen display) menu option called **Auto-Sleep Mode** that allows you to enable or disable a reduced power state for the monitor. When Auto-Sleep Mode is enabled (enabled by default), the monitor will enter a reduced power state when the host computer signals low power mode (absence of either horizontal or vertical sync signal).

Upon entering this reduced power state (sleep mode), the monitor screen is blanked, the backlight is turned off and the power light indicator turns amber. The monitor draws less than 0.5 W of power when in this reduced power state. The monitor will wake from the sleep mode when the host computer sends an active signal to the monitor (for example, if you activate the mouse or keyboard).

You can disable Auto-Sleep Mode in the OSD. Press one of the four bezel buttons under the right side of the bezel to activate the buttons, and then press the **Menu** button to open the OSD. In the OSD menu select **Power Control**, select **Auto-Sleep Mode**, and then select **Off**.

Adjusting Low Blue Light Mode

Decreasing the blue light emitted from the display reduces the blue light exposure to your eyes. HP monitors provide a setting to reduce blue light output and create a more relaxing and less stimulating image while you view content on the screen. To adjust your monitor to a comfortable viewing light, follow the steps below.

1. Press the **Viewing Modes** button under the right side of the bezel.
2. Choose one of the following TUV-certified settings:
 - Low Blue Light:** Reduces blue light for improved eye comfort
 - Reading:** Optimizes blue light and brightness for indoor viewing
 - Night:** Adjusts the monitor to the lowest blue light output and reduces the impact on sleep
3. Select **Save and Return** to save your setting and close the **Viewing Mode** menu. Select **Cancel** if you don't want to save the setting.
4. Select **Exit** from the Main menu.

3 Support and troubleshooting

Solving common problems

The following table lists possible problems, the possible cause of each problem, and the recommended solutions.

Problem	Possible Cause	Solution
Screen is blank or video is flashing.	Power cord is disconnected.	Connect the power cord.
	Monitor is off.	Press the power button under the right bezel. NOTE: If pressing the power button has no effect, press and hold the power button for 10 seconds to disable the Power Button Lockout feature.
	Video cable is improperly connected.	Connect the video cable properly. See Connecting the cables on page 6 for more information.
	System is in sleep mode.	Press any key on the keyboard or move the mouse to exit sleep mode.
	Video card is incompatible.	Open the OSD menu and select the Input Control menu. Set Auto-Switch Input to Off and manually select the input.
Image appears blurred, indistinct, or too dark.	Brightness setting is too low.	Open the OSD menu and select Brightness to adjust the brightness scale as needed.
Input Signal Not Found is displayed on screen.	Monitor video cable is disconnected.	Connect the appropriate video cable between the computer and monitor. Be sure that the computer power is off while you connect the video cable.
Input Signal Out of Range is displayed on screen.	Video resolution and/or refresh rate are set higher than what the monitor supports.	Change the settings to a supported setting. See Preset display resolutions on page 26 for more information.
The monitor is off but it did not seem to enter into sleep mode.	The monitor's power saving control is disabled.	Open the OSD menu, select Power Control , select Auto-Sleep Mode , and then set auto-sleep to On .
OSD Lockout is displayed.	The monitor's OSD Lockout function is enabled.	Press and hold the Menu button under the right bezel for 10 seconds to disable the OSD Lockout function.
Power Button Lockout is displayed.	The monitor's Power Button Lockout feature is enabled.	Press and hold the power button for 10 seconds to disable the Power Button Lockout feature.

Using the auto-adjustment function (analog input)

When you first set up the monitor, conduct a factory reset of the computer, or change the resolution of the monitor, the auto-adjustment feature automatically engages and attempts to optimize your screen for you.


You may also optimize the screen performance for the VGA (analog) input at any time from the Auto Adjustment menu in the OSD. You can also download the auto-adjustment pattern software utility from www.hp.com/support.

Do not use this procedure if the monitor is using an input other than VGA. If the monitor is using a VGA (analog) input, this procedure can correct the following image quality conditions:

- Fuzzy or unclear focus
- Ghosting, streaking, or shadowing effects
- Faint vertical bars
- Thin, horizontal scrolling lines
- An off-center picture

To use the auto-adjustment feature:

1. Allow the monitor to warm up for 20 minutes before adjusting.
2. Press the **Menu** button under the right bezel, select **Image Control**, and then select **Auto Adjustment** from the OSD menu. If the result is not satisfactory, continue with the procedure.
3. Select **Open Auto-Adjustment Utility**. (You can download this utility from www.hp.com/support.) The setup test pattern is displayed.

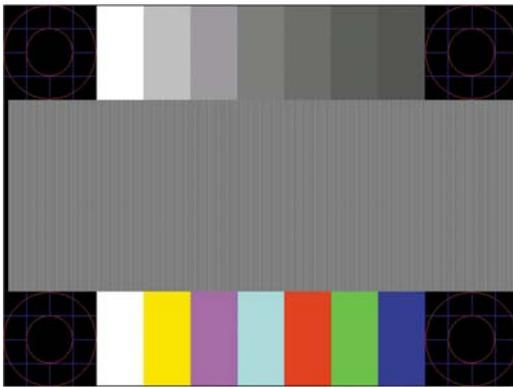

4. Press the **ESC** key or any other key on the keyboard to exit the test pattern.

Optimizing image performance (analog input)

Two controls in the on-screen display can be adjusted to improve image performance: Clock and Phase (available in the OSD menu).

 **NOTE:** The Clock and Phase controls are adjustable only when using an analog (VGA) input. These controls are not adjustable for digital inputs.

The Clock must first be set correctly since the Phase settings are dependent on the main Clock setting. Use these controls only when the auto-adjustment function does not provide a satisfactory image.


- **Clock**—Increases/decreases the value to minimize any vertical bars or stripes visible on the screen background.
- **Phase**—Increases/decreases the value to minimize video flickering or blurring.

 **NOTE:** When using the controls, you will obtain the best results by using the auto-adjustment pattern software utility.

When adjusting the Clock and Phase values, if the monitor images become distorted, continue adjusting the values until the distortion disappears. To restore the factory settings, select **Yes** from the **Factory Reset** menu in the on-screen display.

To eliminate vertical bars (Clock):


1. Press the **Menu** button under the right side of the bezel to open the OSD menu, select **Image Control**, and then select **Clock and Phase**.
2. Use the buttons on the monitor to eliminate vertical bars. Press the buttons slowly so that you do not miss the optimum adjustment point.

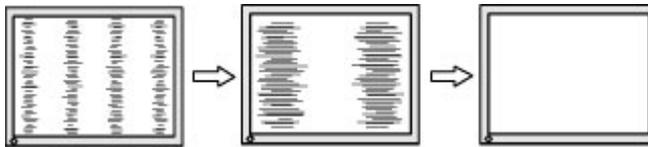

3. After adjusting the Clock, if blurring, flickering, or bars appear on the screen, proceed to adjust the Phase.

To remove flickering or blurring (Phase):


1. Press the **Menu** button under the right side of the bezel to open the OSD menu, select **Image Control**, and then select **Clock and Phase**.
2. Press the buttons on the monitor to eliminate flickering or blurring. Flickering or blurring may not be eliminated, depending on the computer or graphics controller card installed.

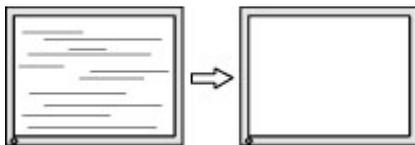

To correct screen position (Horizontal Position or Vertical Position):

1. Press the **Menu** button under the right side of the bezel to open the OSD menu, and then select **Image Position**.

2. Press the buttons on the monitor to properly adjust the position of the image in the display area of the monitor. The Horizontal Position shifts the image left or right; the Vertical Position shifts the image up and down.

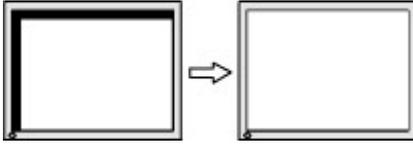

Button lockouts

Holding down the Power button or **Menu** button for ten seconds will lock out the functionality of that button. You can restore the functionality by holding the button down again for ten seconds. This functionality is only available when the monitor is powered on, displaying an active signal, and the OSD is not active.

Product support

For additional information on using your monitor, go to <http://www.hp.com/support>, and then follow the on-screen instructions to find your product.

Here you can:

- Chat online with an HP technician



NOTE: When support chat is not available in a particular language, it is available in English.

- Locate an HP service center

Preparing to call technical support

If you cannot solve a problem using the troubleshooting tips in this section, you may need to call technical support. Have the following information available when you call:

- Monitor product number
- Monitor serial number
- Purchase date on invoice
- Conditions under which the problem occurred
- Error messages received
- Hardware configuration
- Name and version of the hardware and software you are using

Locating the serial number and product number

The serial number and product number are located on labels on the under side of the monitor bezel. You may need these numbers when contacting HP about the monitor model.



4 Maintaining the monitor

Maintenance guidelines

- Do not open the monitor cabinet or attempt to service this product yourself. Adjust only those controls that are covered in the operating instructions. If the monitor is not operating properly or has been dropped or damaged, contact an authorized HP dealer, reseller, or service provider.
- Use only a power source and connection appropriate for this monitor, as indicated on the label/back plate of the monitor.
- Turn the monitor off when not in use. You can substantially increase the life expectancy of the monitor by using a screen saver program and turning off the monitor when not in use.



NOTE: A burned-in image on the monitor is not covered under the HP warranty.

- Slots and openings in the cabinet are provided for ventilation. These openings must not be blocked or covered. Never push objects of any kind into cabinet slots or other openings.
- Keep the monitor in a well-ventilated area, away from excessive light, heat, or moisture.
- When removing the monitor stand, you must lay the monitor facedown on a soft area to prevent it from getting scratched, defaced, or broken.

Cleaning the monitor

1. Turn off the monitor and disconnect power from the computer by unplugging the power cord from the AC outlet.
2. Dust the monitor by wiping the screen and the cabinet with a soft, clean antistatic cloth.
3. For more difficult cleaning situations, use a 50/50 mix of water and isopropyl alcohol.



CAUTION: Spray the cleaner onto a cloth and use the damp cloth to gently wipe the screen surface. Never spray the cleaner directly on the screen surface. It may run behind the bezel and damage the electronics.

CAUTION: Do not use cleaners that contain any petroleum-based materials such as benzene, thinner, or any volatile substance to clean the monitor screen or cabinet. These chemicals may damage the monitor.

Shipping the monitor

Keep the original packing box in a storage area. You may need it later if you move or ship the monitor.

A Technical specifications



NOTE: The product specifications provided in the user guide might have changed between the time of manufacturing and delivery of your product.

For the latest specifications or additional specifications on this product, go to <http://www.hp.com/go/quickspecs/> and search for your specific monitor model to find the model-specific QuickSpecs.

60.5 cm/23.8-inch

Display	60.5 cm wide screen	23.8 in wide screen
Type	IPS	
Viewable image size	60.5 cm diagonal	23.8 in diagonal
Maximum weight (unpacked)	4.2 kg	9.3 lb
Dimensions (include base)		
Height	46.98 cm	18.48 in
Depth	21.4 cm	8.42 in
Width	53.94 cm	21.22 in
Maximum graphic resolution	1920 x 1080	
Optimum graphic resolution	1920 x 1080	
Environmental requirements temperature		
Operating temperature	5 to 35° C	41 to 95° F
Storage temperature	-20 to 60° C	-4 to 140° F/5% to 95% RH
Power source	100–240 V ac 50/60 Hz	
Input terminal	One VGA port with cable included; one HDMI port	

68.6 cm/27-inch

Display	68.6 cm wide screen	27 in wide screen
Type	IPS	
Viewable image size	68.6 cm diagonal	27 in diagonal
Maximum weight (unpacked)	5.3 kg	11.7 lb
Dimensions (include base)		
Height	49.51 cm	19.48 in
Depth	21.4 cm	8.42 in
Width	62.09 cm	24.42 in

Maximum graphic resolution	1920 x 1080	
Optimum graphic resolution	1920 x 1080	
Environmental requirements temperature		
Operating temperature	5 to 35° C	41 to 95° F
Storage temperature	-20 to 60° C	-4 to 140° F/5% to 95% RH
Power source	100–240 V ac 50/60 Hz	
Input terminal	One VGA port with cable included; one HDMI port	

Preset display resolutions

Preset	Pixel Format	Horz Freq (kHz)	Vert Freq (Hz)
1	640 × 480	31.469	59.940
2	720 × 400	31.469	70.087
3	800 × 600	37.879	60.317
4	1024 × 768	48.363	60.004
5	1280 × 720	45.000	60.000
6	1280 × 800	49.702	59.810
7	1280 × 1024	63.981	60.020
8	1440 × 900	55.469	59.901
9	1600 × 900	60.000	60.000
10	1680 × 1050	65.290	59.954
11	1920 × 1080	67.500	60.000

Power adapter

Manufacturer	Model number	Power supply rating
Delta	ADP-40LD B	19 V dc/2.1A

Entering user modes

Under the following conditions, the video controller signal may occasionally call for a mode that is not preset:

- You are not using a standard graphics adapter.
- You are not using a preset mode.

If this occurs, you may need to readjust the parameters of the monitor screen by using the on-screen display. Your changes can be made to any or all of these modes and saved in memory. The monitor automatically stores the new setting and then recognizes the new mode just as it does a preset mode. In addition to the factory preset modes, there are at least 10 user modes that can be entered and stored.

Energy saver feature

The monitors support a reduced power state. The reduced power state will be initiated if the monitor detects the absence of either the horizontal sync signal or the vertical sync signal. Upon detecting the absence of these signals, the monitor screen is blanked, the backlight is turned off, and the power light turns amber. When the monitor is in the reduced power state, the monitor will utilize 0.5 watts of power. There is a brief warm-up period before the monitor returns to its normal operating mode.

Refer to the computer manual for instructions on setting energy saver features (sometimes called power management features).



NOTE: The energy saver feature only works when the monitor is connected to a computer that has energy saver features.

By selecting the settings in the monitor's Energy Saver utility, you can also program the monitor to initiate the reduced power state at a predetermined time. When the monitor's Energy Saver utility causes the monitor to initiate the reduced power state, the power light blinks amber.

B Accessibility

HP designs, produces, and markets products and services that can be used by everyone, including people with disabilities, either on a stand-alone basis or with appropriate assistive devices.

Supported assistive technologies

HP products support a wide variety of operating system assistive technologies and can be configured to work with additional assistive technologies. Use the Search feature on your source device that is connected to the monitor to locate more information about assistive features.



NOTE: For additional information about a particular assistive technology product, contact customer support for that product.

Contacting support

We are constantly refining the accessibility of our products and services and welcome feedback from users. If you have an issue with a product or would like to tell us about accessibility features that have helped you, please contact us at (888) 259-5707, Monday through Friday, 6 a.m. to 9 p.m. Mountain Time. If you are deaf or hard-of-hearing and use TRS/VRS/WebCapTel, contact us if you require technical support or have accessibility questions by calling (877) 656-7058, Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.