



Maintenance and Service Guide

OMEN X by HP 15 Laptop PC

© Copyright 2019 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Intel, Core, Optane, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. DisplayPort is a trademark owned by the Video Electronics Standards Association (VESA) in the United States and other countries. Miracast is a trademark of Wi-Fi Alliance. NVIDIA and GeForce are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: May 2019

Document Part Number: L64223-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. Go to <http://www.microsoft.com> for details.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **User Guides**.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Important Notice about Customer Self-Repair Parts



IMPORTANT: Your computer includes Customer Self-Repair parts and parts that should be accessed by only an authorized service provider. See Chapter 5, "Removal and replacement procedures for Customer Self-Repair parts," for details. Accessing parts described in Chapter 6, "Removal and replacement procedures for authorized service provider parts," can damage the computer or void your warranty.

Safety warning notice


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 Product description	1
2 Getting to know your computer	5
Right side	5
Left side	6
Display	7
Keyboard area	8
Touchpad	8
Lights	9
Power button and second screen	10
Special keys	11
Bottom	12
Labels	13
HP OMEN Command Center	14
Using the second screen	15
3 Illustrated parts catalog	16
Computer major components	16
Cables	18
Display assembly subcomponents	19
Miscellaneous parts	20
4 Removal and replacement procedures preliminary requirements	21
Tools required	21
Service considerations	21
Plastic parts	21
Cables and connectors	21
Drive handling	22
Workstation guidelines	22
Electrostatic discharge information	22
Generating static electricity	23
Preventing electrostatic damage to equipment	23
Personal grounding methods and equipment	24
Grounding the work area	24
Recommended materials and equipment	24
Packaging and transporting guidelines	25

5 Removal and replacement procedures for Customer Self-Repair parts	26
Component replacement procedures	26
Preparation for disassembly	26
Bottom cover	27
Solid-state drive and Optane Memory Module	29
Memory module	30
6 Removal and replacement procedures for authorized service provider parts	31
Component replacement procedures	31
Thermal material	31
Battery and speakers	32
Heat sink/fan assembly	35
Second display transfer board	38
Power connector cable	39
Power button board	40
System board	41
Network connector door	44
Thermal shield (CU plate)	45
IR sensor board	46
Touchpad cable	47
Second display panel	48
Display assembly	51
Keyboard/top cover	59
7 Using Setup Utility (BIOS)	60
Starting Setup Utility (BIOS)	60
Updating Setup Utility (BIOS)	60
Determining the BIOS version	60
Downloading a BIOS update	61
8 Using HP PC Hardware Diagnostics	62
Using HP PC Hardware Diagnostics Windows (select products only)	62
Downloading HP PC Hardware Diagnostics Windows	62
Downloading the latest HP PC Hardware Diagnostics Windows version	63
Downloading HP Hardware Diagnostics Windows by product name or number (select products only)	63
Installing HP PC Hardware Diagnostics Windows	63
Using HP PC Hardware Diagnostics UEFI	63
Starting HP PC Hardware Diagnostics UEFI	64
Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive	64

Downloading the latest HP PC Hardware Diagnostics UEFI version	64
Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)	64
Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)	65
Downloading Remote HP PC Hardware Diagnostics UEFI	65
Downloading the latest Remote HP PC Hardware Diagnostics UEFI version	65
Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number	65
Customizing Remote HP PC Hardware Diagnostics UEFI settings	65
9 Backing up, restoring, and recovering	67
Backing up information and creating recovery media	67
Using Windows tools	67
Using the HP Cloud Recovery Download Tool to create recovery media (select products only)	67
Restoring and recovery	68
Restoring, resetting, and refreshing using Windows tools	68
Recovering using HP Recovery media	68
Changing the computer boot order	68
10 Specifications	69
11 Power cord set requirements	70
Requirements for all countries	70
Requirements for specific countries and regions	71
12 Recycling	73
Index	74

1 Product description

Table 1-1 Product components and their descriptions

Category	Description
Product Name	OMEN X by HP 15 Laptop PC Model numbers: 15-dq0000 – 15-dq0999, 15t-dq000
Processor	Intel® Core™ i9-9880H (2.3 GHz, turbo up to 4.8 GHz, 2666 MHz FSB, 9 MB L3 cache, eight core, 45 W) Intel Core i7-9750H (2.6 GHz, turbo up to 4.5 GHz, 2666 MHz FSB, 9 MB L3 cache, six core, 45 W)
Graphics	Discrete graphics NVIDIA® GeForce® GTX 2080 with up to 8 GB of dedicated video memory NVIDIA GeForce GTX 2070 with up to 8 GB of dedicated video memory Supports HD decode, DX12, and HDMI 2.0a with HDCP 2.2 Supports FPS (GPU Performance Scaling) MR-certified Supports G-Sync (internal and external) Supports VR Supports second screen via DisplayPort™ output with HDCP 2.2 capability
Display panel	Primary display (16:9 Ultra Wide Aspect Ratio) 15.6 in., full high-definition (FHD) (1920 × 1080), WLED, UWVA, antiglare, uslim III-flat (2.6 mm), narrow bezel, 300 nits; G-Sync supportable <ul style="list-style-type: none">• 240 Hz display, sRGB, eDP 1.4 + PSR• 144 Hz display, eDP 1.4 + PSR2 15.6 in., ultra high definition (UHD) (3840 × 2160), WLED, UWVA, antiglare, uslim III-flat (2.6 mm), narrow bezel, 72% NTSC; HDR-400 <ul style="list-style-type: none">• 550 nits, eDP 1.4 +PSR• 340 nits, eDP 1.3 + PSR, 60 Hz Second display (9:16 Ultra Wide Aspect Ratio) 5.98 in, full high-definition (FHD) (1920 × 1080), WLED, UWVA, BrightView, ultraslim
Memory	Two SODIMM slots, customer accessible/upgradeable DDR4-2666 dual channel support; supports up to 32 GB maximum system memory in the following configurations: <ul style="list-style-type: none">• 32 GB (16 GB × 2)• 24 GB (16 GB × 1 + 8 GB × 1)• 16 GB (8 GB × 2)

Table 1-1 Product components and their descriptions (continued)

Category	Description
	DDR4-3200 XMP dual channel support; supports up to 32 GB maximum system memory in the following configurations:
	<ul style="list-style-type: none"> 32 GB (16 GB × 2) 16 GB (16 GB × 1)
Storage	Support for M.2 PCIe solid-state drive, customer accessible/upgradeable Multiple storage configurations 1 TB, PCIe, NVMe, TLC + 1 TB, PCIe, NVMe, TLC, RAID 0 512 GB, PCIe, NVMe, TLC + 512 GB, PCIe, NVMe, TLC, RAID 0 256 GB, PCIe, NVMe, TLC + 256 GB, PCIe, NVMe, TLC, RAID 0 PCIe-3 × 4, NVMe, TLC, M.2 solid-state drive 2 TB 1 TB 512 GB 256 GB Intel Optane™ Memory H10 with solid-state storage 32 GB Optane 3D Xpoint + 512 GB , PCIe-3 × 2 × 2
Audio	Audio brand: BANG & OLUFSEN Audio control panel: OMEN Audio Control Supports HP Audio Boost 2.0 (with discrete amplifier) Support DTS:X Ultra Stereo speakers
Video	HP Wide Vision FHD Camera: indicator LED, USB 2.0, HD BSI sensor, f2.2, WDR, 88° WFOV 1080p by 30 frames per second Dual array digital microphone with appropriate software - beam forming, echo cancellation, noise suppression
RJ-45 (network) jack	Integrated 10/100/1000 NIC Supports OMEN Network Prioritization
Wireless networking	Integrated wireless option with dual antennas Intel Wireless-AC 9560 802.11ac 2 × 2 Wi-Fi + Bluetooth® 5, MIPI + BRI (non-vPro) (MU-MIMO, Gigabit Wi-Fi speeds supported) Wi-Fi SAR enabled in BIOS Turbo WLAN SVTP Supports OMEN Network Prioritization Compatible with Miracast®-certified devices
Ports	HP Smart Plug AC adapter

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Audio-out (headphone), audio-in (microphone) combo jack
	Stereo microphone input
	RJ-45 (network) jack
	High-definition multimedia interface (HDMI) v.2.0 supporting up to 4096 × 2160 at 60 Hz
	Hot plug/unplug and auto detect for correct output to wide-aspect vs. standard aspect video (auto adjust panel resolution to fit embedded panel and external monitor connected)
	USB 3.1 Gen 1 Type A ports (3); two on left side, one on right side; supports HP Sleep & Charge
	USB 3.1 Gen 2 Type-C port with Thunderbolt™ Gen 3 technology (supports data transfer, power delivery, DisplayPort 1.4 out up to 4096 × 2304 [60 Hz] and HDMI 2.0 out through adapter; HDMI 2.0 out up to 3840 × 2160 (60 Hz) with HDCP 2.2; HP Sleep & Charge)
Internal card expansion	Two M.2 slots for solid-state drive
Keyboard/pointing devices	Keyboard
	Full-sized, backlit, Dura-coat, island-style, keyboard
	Supports RGB per key lighting adjustable via OMEN Command Center
	Supports All Key NKRO
	Touchpad requirements
	ClickPad with image sensor
	Multitouch gestures enabled
	Support for Precision Touchpad
	Support for modern trackpad gestures
	Taps enabled as default
Power requirements	Battery
	Supports a 6 cell, 72.9 Wh, 4.5 Ah, polymer battery
	Supports battery life enhancement
	Supports battery fast charge (30 minutes, 50% charged)
	Smart AC adapter (PRC, slim barrel, 7.4 mm)
	230 W
Security	Power cord (C13, 1 m, conventional)
	Trusted Platform Module (fTPM) 2.0, firmware based
	Universal 2nd Factor Authentication (U2F)
Operating system	Preinstalled
	Windows® 10 Home 64 Advanced
	Windows 10 Home 64 Advanced Single Language
	Windows 10 Home 64 Advanced Web/Kiosk
	Windows 10 Home 64 High-End Chinese Market CPPP

Table 1-1 Product components and their descriptions (continued)

Category	Description
	Windows 10 Home 64 Plus Single Language APAC EM PPP
	Win 10 Home 64 Plus Single Language Africa Market PPP
	Windows 10 Home 64 Plus Single Language India Market PPP
	Windows 10 Home 64 Plus Single Language Indonesia Market PPP
	Windows 10 Pro 64
	Windows 10 Pro 64 Web/Kiosk
	FreeDOS 3.0
Serviceability	End-user replaceable parts
	AC adapter
	Memory modules
	Solid-state drive

2 Getting to know your computer

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

 **NOTE:** Actual computer color, feature locations, and icon labels may vary from the images depicted.

Right side

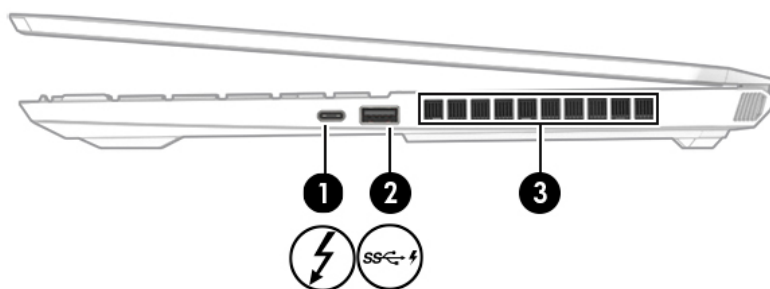

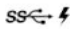


Table 2-1 Right-side components and their descriptions

Component	Description
(1) 	<p>USB Type-C power connector and Thunderbolt port with HP Sleep and Charge</p> <p>Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery.</p> <p>– and –</p> <p>Even when the computer is off, connects and charges most USB devices that have a Type-C connector, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.</p> <p>– and –</p> <p>Connects a display device that has a USB Type-C connector, providing DisplayPort output.</p> <p>NOTE: Your computer may also support a Thunderbolt docking station.</p> <p>NOTE: Cables and/or adapters (purchased separately) may be required.</p>
(2) 	<p>USB SuperSpeed port with HP Sleep and Charge</p> <p>Connects a USB device, provides high-speed data transfer, and even when the computer is off, charges most products such as a cell phone, camera, activity tracker, or smartwatch.</p>
(3)	<p>Vent</p> <p>Enables airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

Left side

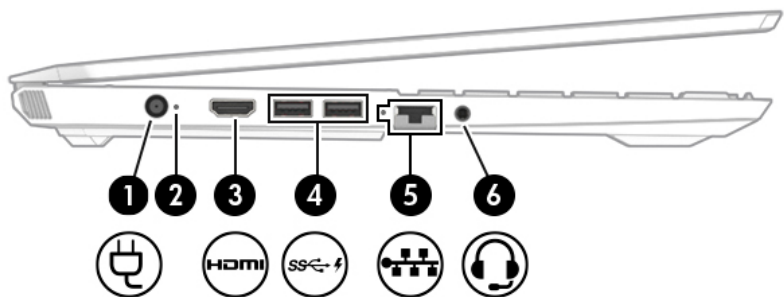







Table 2-2 Left-side components and their descriptions

Component		Description
(1)	 Power connector	Connects an AC adapter.
(2)	AC adapter and battery light	<ul style="list-style-type: none">• White: The AC adapter is connected and the battery is fully charged.• Blinking white: The AC adapter is disconnected and the battery has reached a low battery level.• Amber: The AC adapter is connected and the battery is charging.• Off: The battery is not charging.
(3)	 HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High-Definition Multimedia Interface (HDMI) device.
(4)	 USB SuperSpeed ports with HP Sleep and Charge (2)	Connect USB devices, provide high-speed data transfer, and even when the computer is off, charge most products such as a cell phone, camera, activity tracker, or smartwatch.
(5)	 RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none">• White: The network is connected.• Amber: Activity is occurring on the network.
(6)	 Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: ▲ Type <code>HP Documentation</code> in the taskbar search box, and then select HP Documentation . NOTE: When a device is connected to the jack, the computer speakers are disabled.

Display

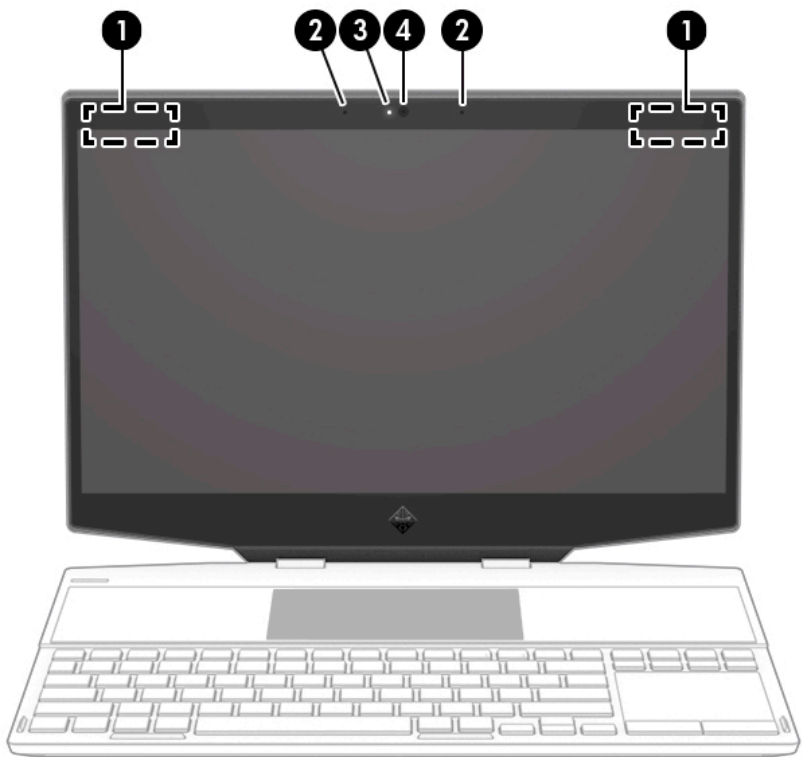


Table 2-3 Display components and their descriptions

Component	Description
(1) WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) Internal microphones (2)	Record sound.
(3) Camera light	On: The camera is in use.
(4) Camera	Allows you to video chat, record video, and record still images. Some cameras also allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

Type **HP Documentation** in the taskbar search box, and then select **HP Documentation**.

Keyboard area

Touchpad

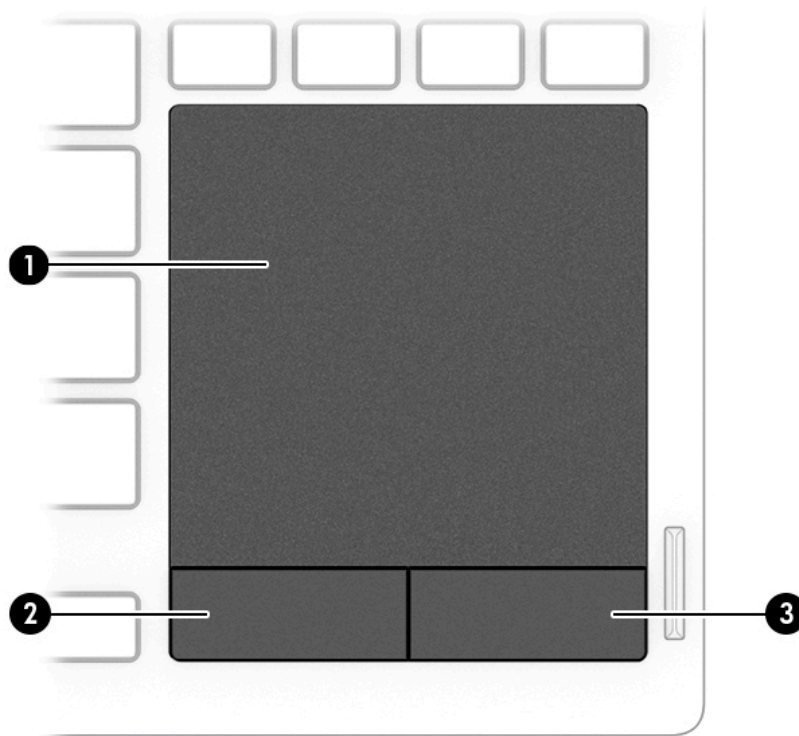


Table 2-4 Touchpad components and their descriptions

Component		Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left touchpad button	Functions like the left button on an external mouse.
(3)	Right touchpad button	Functions like the right button on an external mouse.

Lights

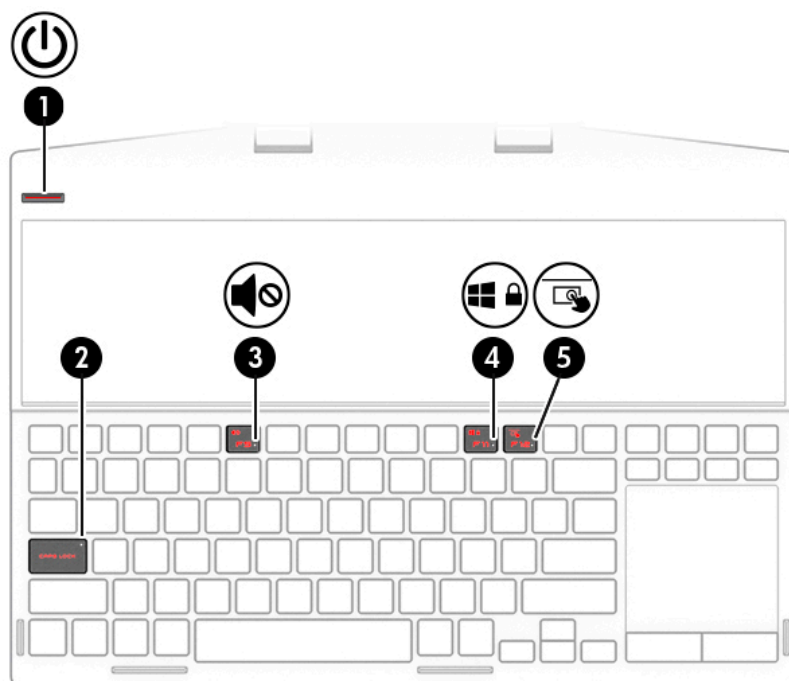






Table 2-5 Lights and their descriptions

Component	Description
(1)  Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2) Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(3)  Mute light	<ul style="list-style-type: none"> On: Computer sound is off. Off: Computer sound is on.
(4)  Windows lock key light	<ul style="list-style-type: none"> On: The Windows key is disabled. Off: The Windows key is enabled.
(5)  Second screen touch gestures light	<ul style="list-style-type: none"> On: The touch gestures on the second screen are off. Off: The touch gestures on the second screen are on.

Power button and second screen






Table 2-6 Power button and second screen and their descriptions

Component		Description
(1)	 Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only).• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>IMPORTANT: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options:</p> <p>▲ Right-click the Power icon , and then select Power Options.</p>
(2)	Second screen	<p>Offers multiple display scenarios that allow you to play multi-screen games, open applications, optimize performance with OMEN Command Center, play music, stream videos, and chat.</p> <p>For more information, see Using the second screen on page 15.</p>

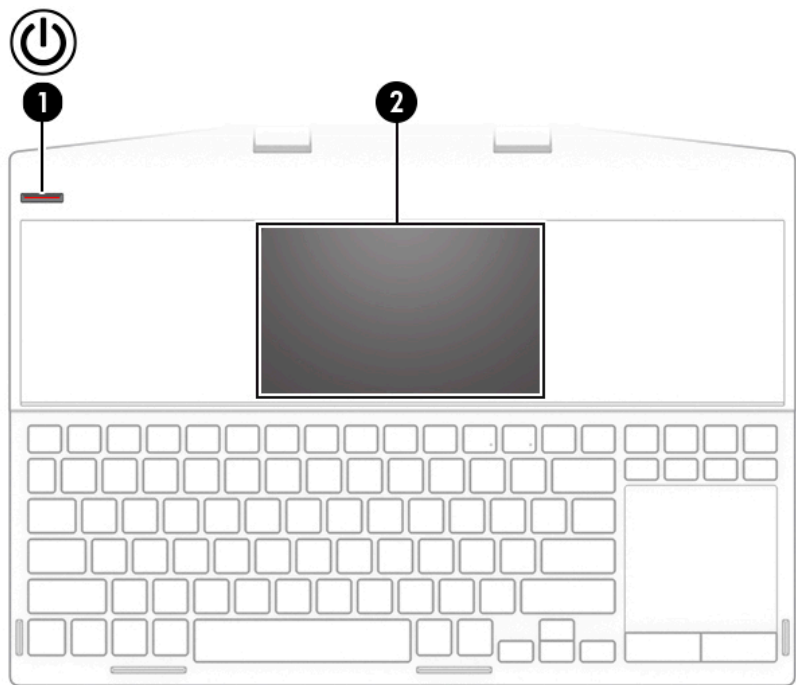Special keys

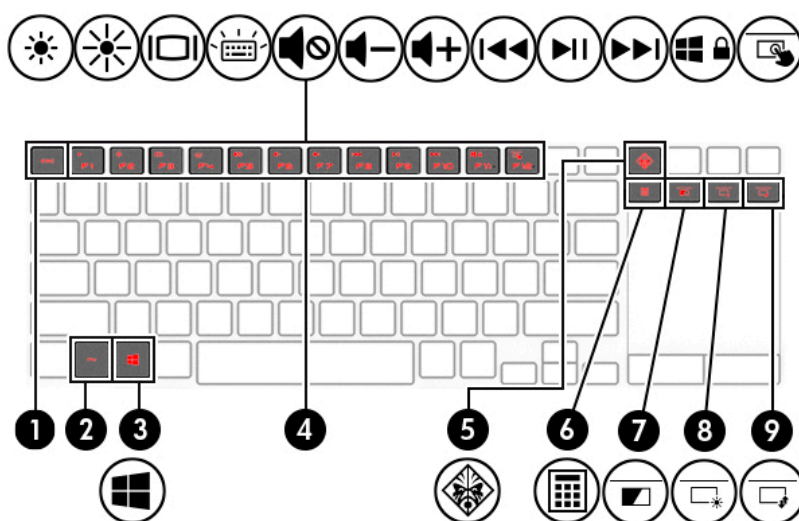








Table 2-7 Special keys and their descriptions

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes specific functions when pressed in combination with another key.
(3)  Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4) Action keys	Execute frequently used system functions when pressed in combination with the fn key.
(5)  OMEN key	Opens the OMEN Command Center software. See HP OMEN Command Center on page 14 for more information.
(6)  Virtual numeric keypad key	Displays a virtual numeric keypad on the second screen. The virtual numeric keypad can be used like an external numeric keypad. Press the key again to turn off the numeric keypad.
(7)  Second screen backlight key	Turns the second screen backlight on and off.
(8)  Second screen brightness control key	Increases and decreases the second screen brightness incrementally when you press the key.
(9)  Screen switch key	Moves a designated application window between the main screen and the second screen.

Bottom

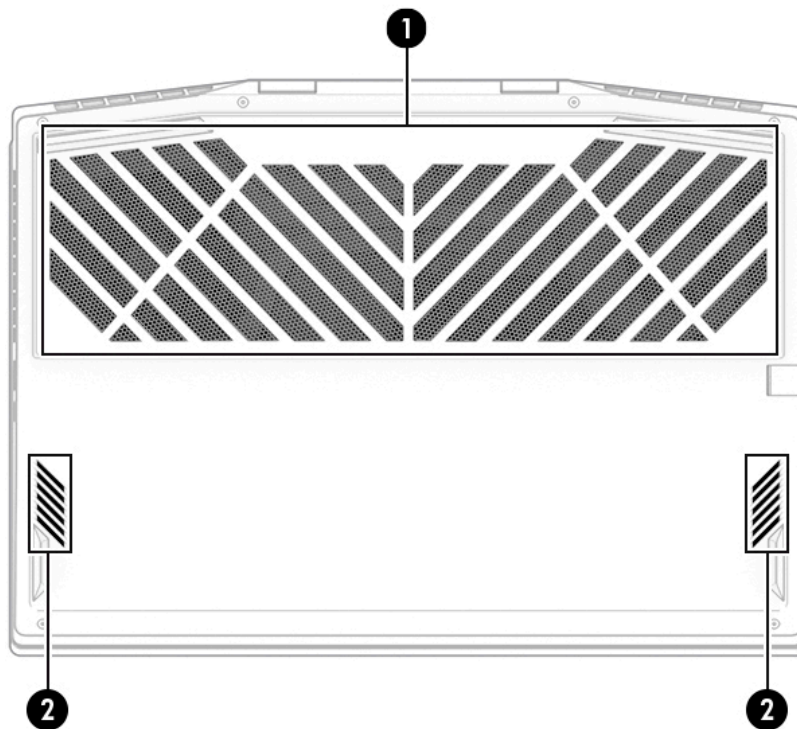



Table 2-8 Bottom components and their descriptions

Component		Description
(1)	Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	Speakers (2)	Produce sound.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer. Labels may be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- Service label—Provides important information to identify your computer. When contacting support, you may be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

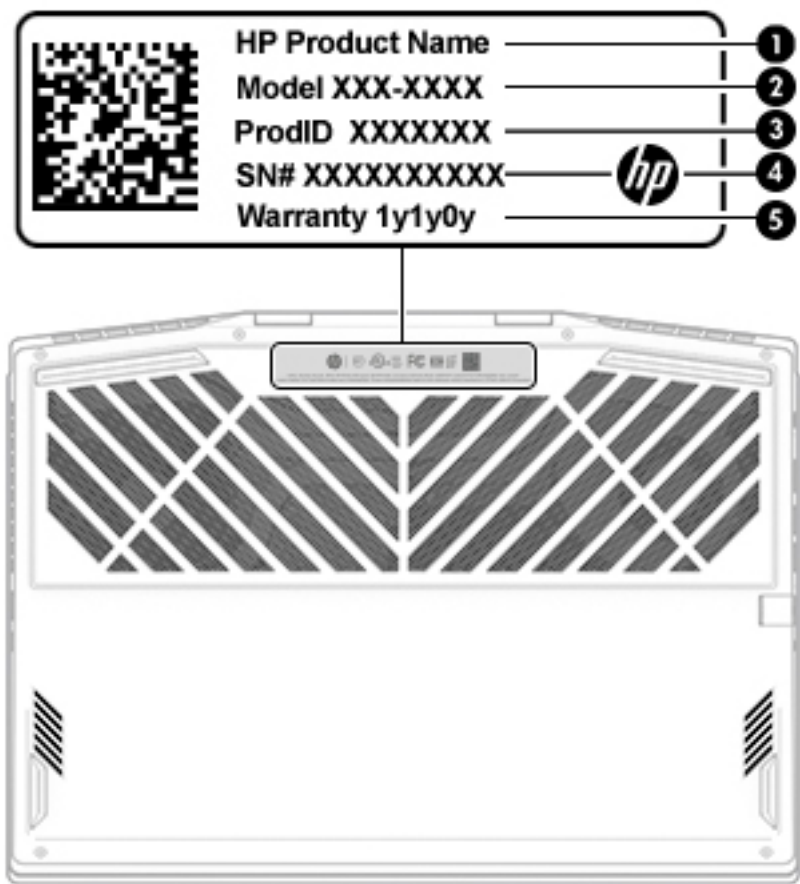


Table 2-9 Service label components

Component	
(1)	HP product name
(2)	Model number
(3)	Product ID

Table 2-9 Service label components (continued)

Component	
(4)	Serial number
(5)	Warranty period


- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

HP OMEN Command Center


HP OMEN Command Center allows you to customize your computer for your specific gaming needs.

- ▲ To open HP OMEN Command Center, select the **Start** button, select **OMEN Command Center**, and then follow the on-screen instructions.


– or –

Press the **OMEN**  key at the top right side of the keyboard.

OMEN Command Center can also be optimized on the second screen.

- ▲ To switch OMEN Command Center between the main screen and the second screen, press the screen switch  key on the right side of the keyboard.

The HP OMEN Command Center dashboard provides a central location to access and configure the following features:

 **NOTE:** Some features are available on select products only.

- **System Vitals:** Monitor the computer status and performance.
- **Overclocking:** Enhance your gaming performance with Memory Turbo Mode.
- **Lighting:** Customize the keyboard and OMEN logo lighting (select products only).
- **Real-time screen mirroring:** Display and interact with a portion of your game view on the second screen.
- **Network Booster:** View and adjust network priorities and settings.
- **Performance Control:** Optimize the performance of your computer for the task you are performing.
- **Settings:** Adjust the second screen functions and wallpaper settings.
- **Gaming Device Lighting and Macros:** Configure the lighting and Macro keys when an external supported gaming device is connected (select products only).
- **OMEN Game Stream:** Provide the ability to stream games to other devices.
- **Update:** Update the OMEN Command Center software.
- **Help:** Access “How to” information and frequently asked questions.

 **NOTE:** To minimize the dashboard, select the ◀ button at the top of the dashboard.

Using the second screen

Your computer includes a second touch screen located on the keyboard. The second screen allows you to perform multi-display scenarios that include the following features:

- Play multi-display games, including game playback and live stream game walkthroughs and tutorials.
- Play music, stream videos, and chat.
- Display OMEN Command Center and view system vitals and make changes.
- Open additional applications.
- View the virtual numeric keypad.

To navigate the second screen:

- ▲ Touch the second screen directly using touch gestures.



NOTE: To turn the second screen touch gestures off and on, press **fn+f12**.

To move content between the main screen and the second screen:

- ▲ Select the content and press the screen switch  key.


—or—

Select the content and use the touchpad or optional mouse to drag the content between the screens.

3 Illustrated parts catalog

Computer major components

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 13](#) for details.

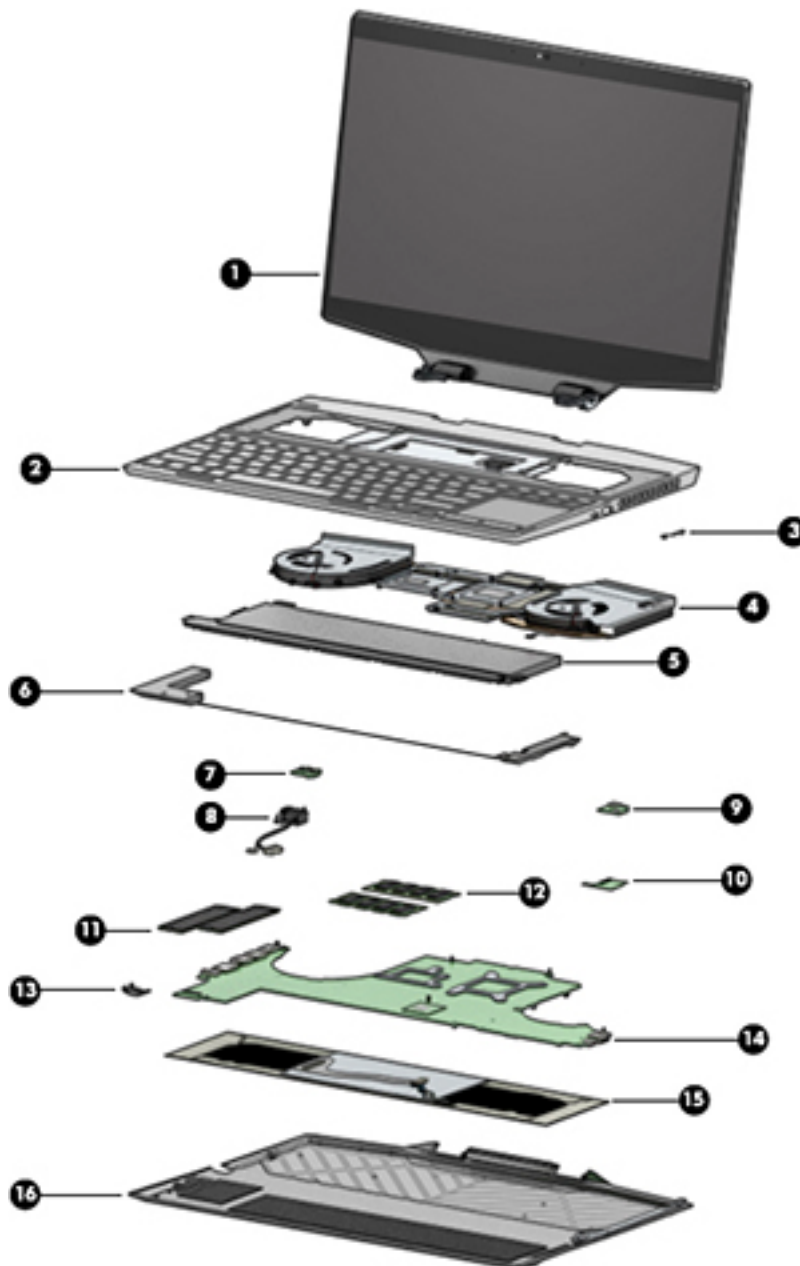



Table 3-1 Computer major components and their descriptions

Item	Component	Spare part number
	Liquid metal thermal grease (not illustrated) IMPORTANT: Thermal material must be applied on site, and therefore is not included in component spare part kits. When removing any part that also requires removal of the heat sink, be sure to order and apply thermal material. For a list of affected parts, see Thermal material on page 31 .	L65923-001
(1)	Display assembly NOTE: Display assemblies are spared only at a subcomponent level.	
(2)	Keyboard/top cover (includes touchpad and thermal shield (CU plate)) For a detailed list of country codes, see Keyboard/top cover on page 59 . NOTE: The keyboard cable is available as spare part number L57015-001.	L57185-xx1
(3)	Touchpad cable	L57014-001
(4)	Heat sink/fan assembly	L57018-001
(5)	Battery (6 cell, 72 Wh)	L32749-005
(6)	Speakers	L57030-001
(7)	Power button board NOTE: The power button board cable is available as spare part number L57012-001.	L57020-001
(8)	Power connector cable	L57017-001
(9)	IR sensor board NOTE: The IR sensor board cable is available as spare part number L57013-001.	L57021-001
(10)	Second display transfer board NOTE: The second display transfer board cable is available as spare part number L65580-001.	L57230-001
(11)	Solid-state drives (M.2, PCIe, NVMe, TLC):	
	2 TB	L57033-001
	1 TB	L57031-001
	512 GB + 32 GB Optane Memory	L57035-001
	512 GB	L57034-001
	256 GB	L57032-001
(12)	Memory module (DDR4-2666):	
	16 GB	937438-850
	8 GB	937236-850
	Memory module (DDR4-3200):	
	16 GB	L62310-001
(13)	Network connector door	L57023-001
(14)	System board (includes processor and replacement thermal material): Intel Core i9-9880H processor and 8 GB of discrete graphics memory (GeForce GTX 2080)	L57039-601

Table 3-1 Computer major components and their descriptions (continued)

Item	Component	Spare part number
	Intel Core i9-9880H processor and 8 GB of discrete graphics memory (GeForce GTX 2070)	L57037-601
	Intel Core i7-9750H processor and 8 GB of discrete graphics memory (GeForce GTX 2080)	L57038-601
	Intel Core i7-9750H processor and 8 GB of discrete graphics memory (GeForce GTX 2070)	L57036-601
(15)	Second display	L57028-001
(16)	Bottom cover (includes thermal pad)	L57010-001

Cables

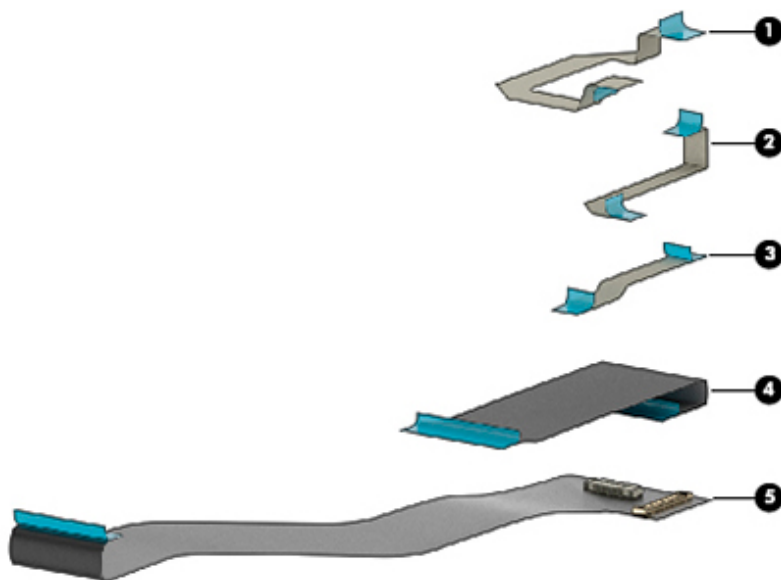**Table 3-2 Cables and their descriptions**

Item	Component	Spare part number
(1)	Power button board cable	L57012-001
(2)	IR sensor board cable	L57013-001
(3)	Touchpad cable	L57014-001
(4)	Display transfer board cable	L65580-001
(5)	Keyboard cable	L57015-001

Display assembly subcomponents

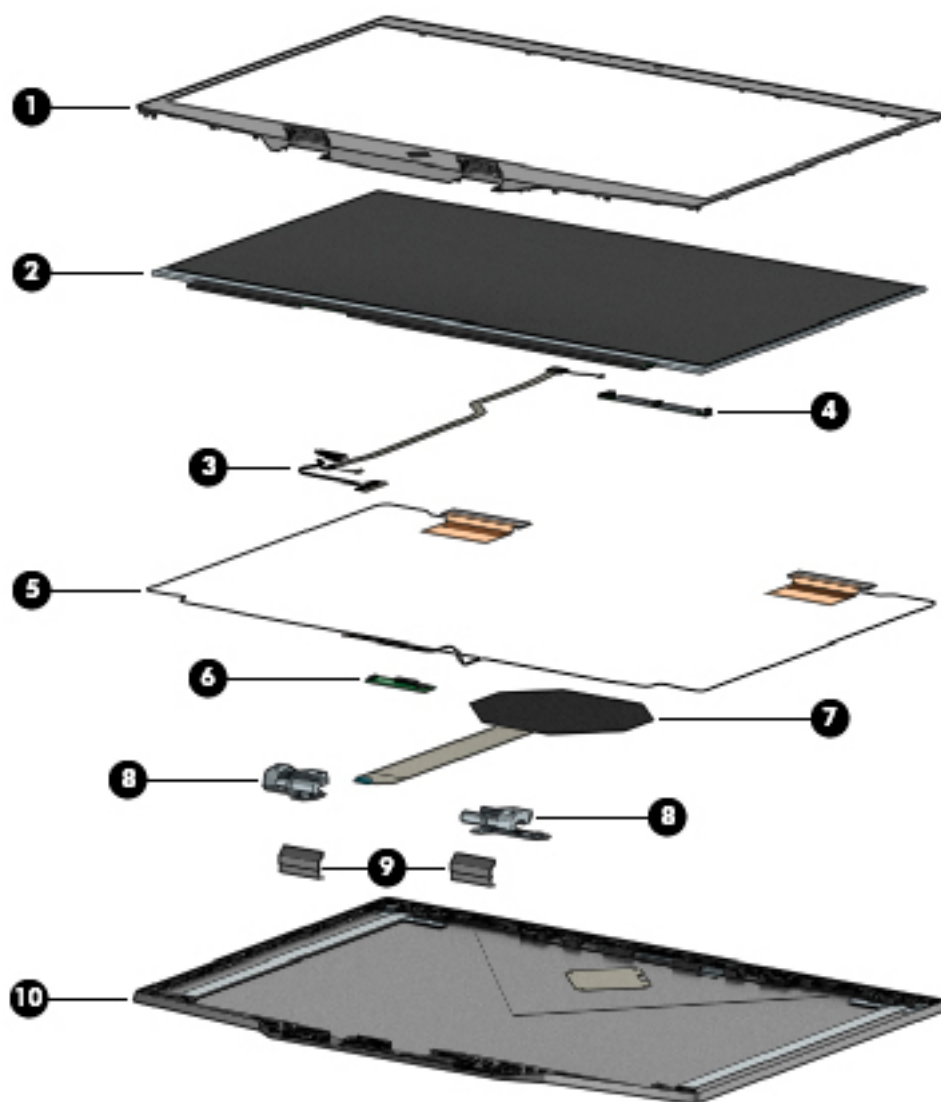


Table 3-3 Display components and their descriptions

Item	Component	Spare part number
(1)	Display bezel	L57011-001
	NOTE: Bezel adhesive tape is available as spare part number L57048-001.	
(2)	Display panel (includes display panel and bezel adhesives):	
	UHD, 60 Hz, 550 nits	L57025-001
	UHD, 60 Hz, 340 nits	L57026-001
	FHD, 240 Hz, 300 nits	L62861-001
	FHD, 144 Hz, 300 nits	L57024-001
(3)	Display panel cable (includes display panel and bezel adhesives)	L57016-001
(4)	Webcam/microphone module (includes double-sided adhesive)	L57040-001

Table 3-3 Display components and their descriptions (continued)

Item	Component	Spare part number
(5)	Wireless antennas (includes display panel and bezel adhesives)	L57008-001
(6)	Display LED board (includes display panel and bezel adhesives)	L57022-001
(7)	Display backlight module (includes protective tape)	L57184-001
(8)	Display hinges (includes left and right hinges and bezel adhesives)	L57019-001
(9)	Hinge covers (left and right)	L66225-001
(10)	Display back cover (includes bezel adhesives)	L57009-001
NOTE: Display back cover adhesive tape is available as spare part number L57047-001.		

Miscellaneous parts

Table 3-4 Miscellaneous parts and their descriptions

Component	Spare part number
AC adapter, 230 W (PFC, slim, 7.4 mm)	925141-850
Power cord (C13, 1.0 m):	
For use in Australia	L63248-001
For use in Denmark	L63249-001
For use in Europe	L63250-001
For use in India	L63252-001
For use in Israel	L63251-001
For use in Italy	L64040-001
For use in Japan	L63253-001
For use in North America	L63255-001
For use in the People's Republic of China	L63256-001
For use in South Africa	L63257-001
For use in South Korea	L63254-001
For use in Switzerland	L63258-001
For use in Taiwan	L63260-001
For use in Thailand	L63259-001
For use in the United Kingdom	L63261-001
External optical drive	747080-001
Adhesive tape for display back cover	L57047-001
Adhesive tape for display bezel	L57048-001
USB Type-C-to-VGA adapter	831751-001
Screw Kit	L57029-001

4 Removal and replacement procedures preliminary requirements


Tools required

You will need the following tools to complete the removal and replacement procedures:

- Non-marking, non-conductive pry tool
- Magnetic Phillips P1 screwdriver
- Torx T6 screwdriver
- Tweezer

Service considerations


The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **IMPORTANT:** Using excessive force during disassembly and reassembly can damage plastic parts.

Cables and connectors

 **IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling



IMPORTANT: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.



IMPORTANT: To prevent damage to the device when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

Generating static electricity

Note the following:

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

Table 4-1 Static electricity occurrence based on activity and humidity

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing DIPs from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from Styrofoam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V
Electronic components can be packaged together in plastic tubes, trays, or Styrofoam.			



NOTE: As little as 700 volts can degrade a product.

Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity. The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components.

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.

- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

Personal grounding methods and equipment

Use the following equipment to prevent static electricity damage to electronic components:

- **Wrist straps** are flexible straps with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- **Heel straps/Toe straps/Boot straps** can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of $1\text{ M}\Omega \pm 10\%$ resistance between the operator and ground.

Table 4-2 Static shielding protection levels

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

Grounding the work area

To prevent static damage at the work area, take the following precautions:

- Cover the work surface with approved static-dissipative material. Provide a wrist strap connected to the work surface and properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep work area free of nonconductive materials such as ordinary plastic assembly aids and Styrofoam.
- Use field service tools, such as cutters, screwdrivers, and vacuums, that are conductive.

Recommended materials and equipment

HP recommends the following materials and equipment to prevent static electricity:

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of $1\text{ M}\Omega \pm 10\%$ resistance
- Static-dissipative table or floor mats with hard tie to ground

- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing 1 MΩ ±10% resistance
- Material handling packages
- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes


Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:


- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part not supported by the Customer Self-Repair program may void your warranty. Check your warranty to determine if Customer Self-Repair is supported in your location.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 13](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as 7 screws that must be removed, replaced, and/or loosened when servicing Customer Self-Repair parts. Make special note of each screw size and location during removal and replacement.

Preparation for disassembly

See [Removal and replacement procedures preliminary requirements on page 21](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Bottom cover

Table 5-1 Bottom cover description and part number


Description	Spare part number
Bottom cover (includes thermal pad)	L57010-001

Before removing the bottom cover, follow this step:

- ▲ Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).


Remove the bottom cover:

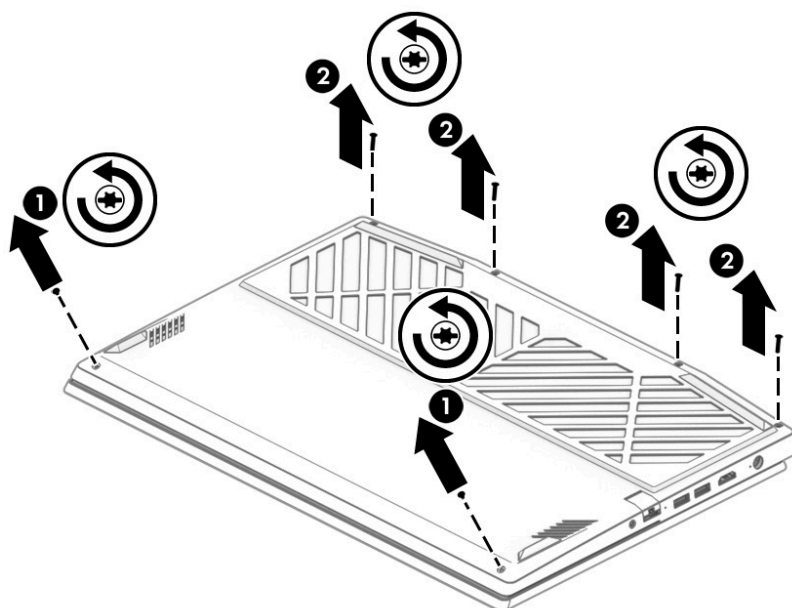1. Loosen the two Torx T6 2.0 × 2.0 screws **(1)** from the bottom corners of the bottom cover.
2. Loosen the four Torx T6 2.5 × 4.0 screws **(2)** from along the top edge of the bottom cover.



3. At the gap in the hinge, use a tool to loosen the bottom cover from the computer **(1)**.

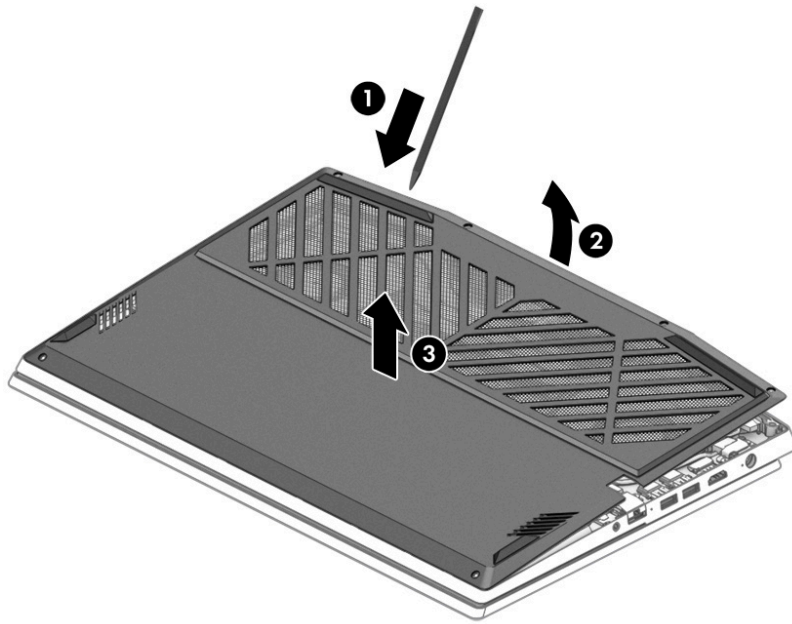4. Lift the top edge of the bottom cover to separate it from the computer **(2)**, and then remove the bottom cover from the computer **(3)**.



Reverse this procedure to install the bottom cover.

Solid-state drive and Optane Memory Module

Table 5-2 Solid-state drive and Optane Memory Module descriptions and part numbers


Description	Spare part number
2 TB	L57033-001
1 TB	L57031-001
512 GB + 32 GB Optane Memory	L57035-001
512 GB	L57034-001
256 GB	L57032-001

Before removing the solid-state drive, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Disconnect the battery (see [Battery and speakers on page 32](#)).

Remove the solid-state drive:

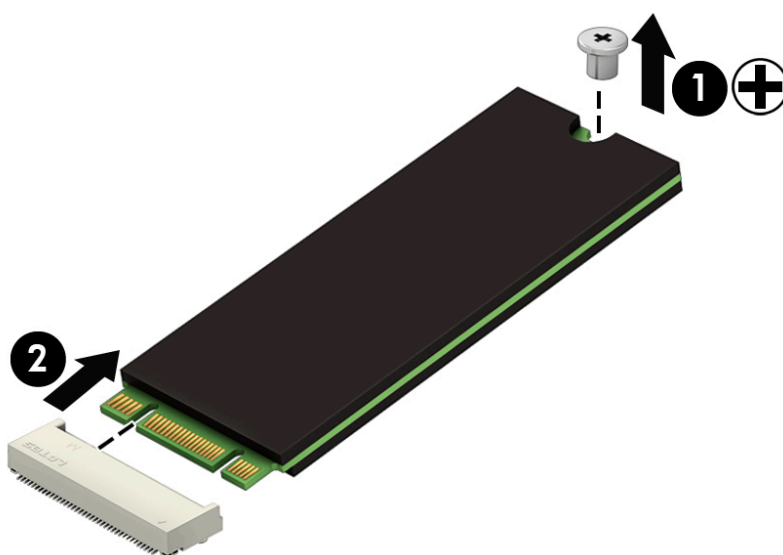- ▲ Remove the Phillips M2.0 × 2.0 screw **(1)**, and then pull the drive from the socket **(2)**.



Reverse this procedure to install the solid-state drive.

Memory module

Table 5-3 Memory module descriptions and part numbers

Description	Spare part number
Memory module, 16 GB (PC4-2666)	937438-850
Memory module, 8 GB (PC4-2666)	937236-850
Memory module, 16 GB (PC4-3200)	L62310-001

Before removing the memory modules, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Disconnect the battery (see [Battery and speakers on page 32](#)).

Remove the memory modules:

1. Spread the two retention clips outward (**1**) until the memory module tilts up at a 45-degree angle.



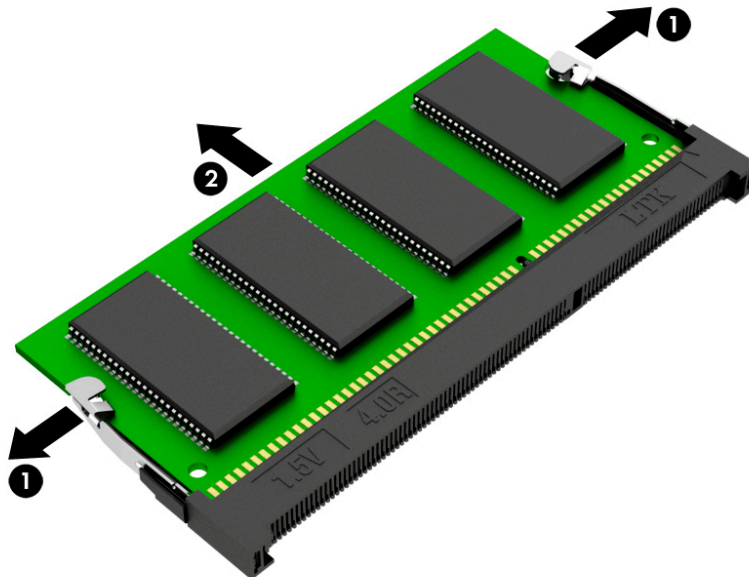
NOTE: Do not completely remove the protective sheet from the primary memory module.

2. Grasp the edge of the memory module (**2**), and then gently pull the module out of the slot. Use the same procedure to remove both memory modules.




IMPORTANT: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

To protect a memory module after removal, place it in an electrostatic-safe container.



Reverse this procedure to install memory modules.

6 Removal and replacement procedures for authorized service provider parts

 **IMPORTANT:** Components described in this chapter should be accessed only by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Component replacement procedures

There are as many as 52 screws that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Thermal material

Table 6-1 Thermal material description and part number

Description	Spare part number
Liquid metal thermal material	L65923-001

Thermal material must be applied on site, and therefore is not included in component spare part kits. When removing any part that also requires removal of the heat sink, be sure to order and apply thermal material. Affected parts are shown in the following list:

- Power button board cable
- Touchpad cable
- Heat sink
- IR sensor board
- IR sensor board cable
- Second display panel
- System board
- Top cover with keyboard

Battery and speakers

Table 6-2 Battery and speakers descriptions and part numbers


Description	Spare part number
Battery (6 cell, 72 Wh)	L32749-005
Speakers	L57030-001

Before removing the battery and speakers, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).


Remove the battery and speakers:

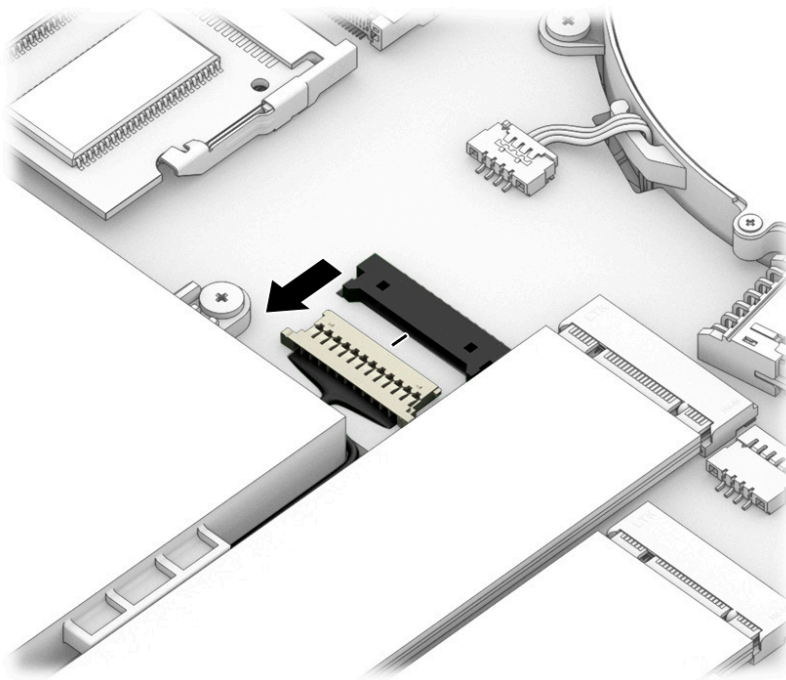1. Disconnect the battery cable from the system board.




2. Disconnect the speaker cable from the system board **(1)**.
3. Remove the four Phillips M2.0 × 4.8 screws **(2)** that secure the speakers to the computer.

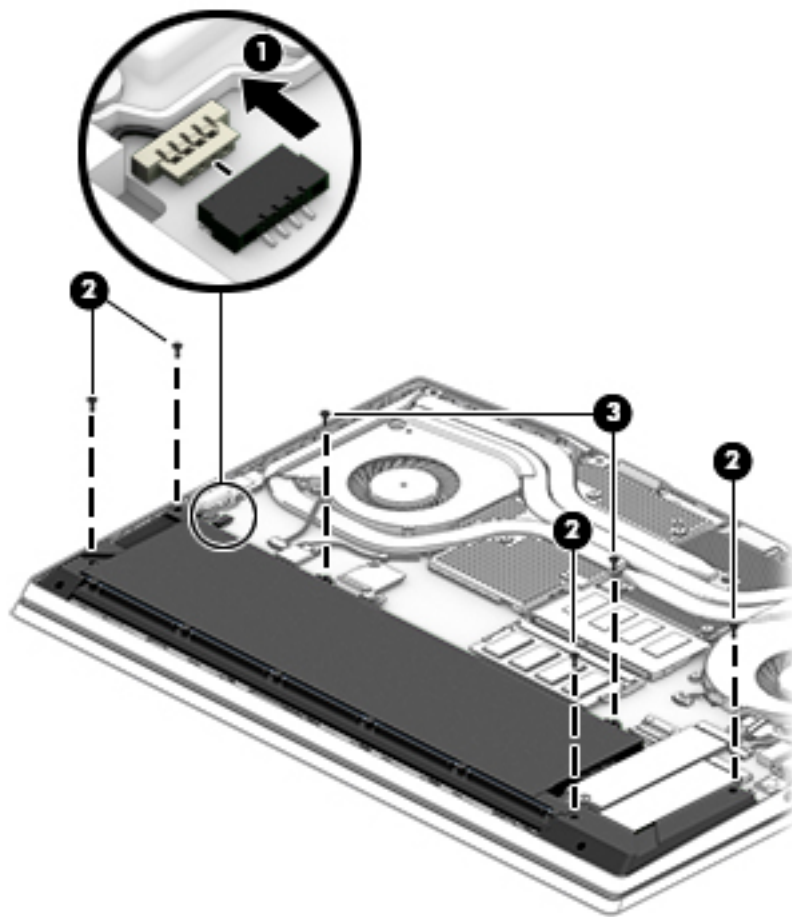4. Remove the two Phillips M2.5 × 5.5 screws **(3)** that secure the battery from the computer.



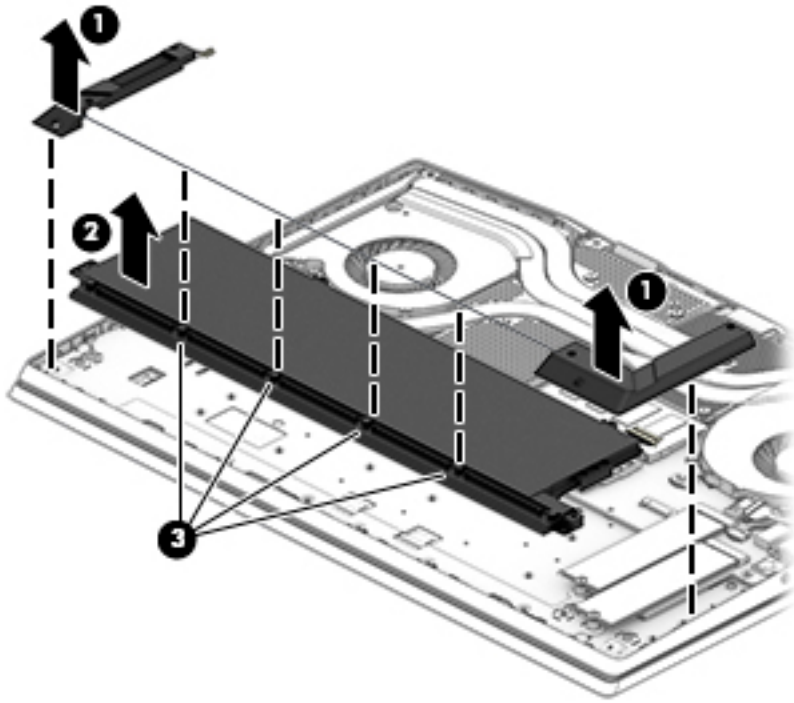5. Remove the speakers **(1)** and battery **(2)** from the computer. Note the routing channel **(3)** for the speaker cable. Make sure the cable is routed correctly when reinstalling the battery and speakers.



Reverse this procedure to install the battery and speakers.

Heat sink/fan assembly

Table 6-3 Heat sink/fan assembly description and part number


Description	Spare part number
Heat sink/fan assembly	L57018-001
NOTE: Liquid metal thermal grease is available as spare part number L65923-001.	

Before removing the heat sink/fan assembly, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Disconnect the battery (see [Battery and speakers on page 32](#)).


Remove the heat sink/fan assembly:

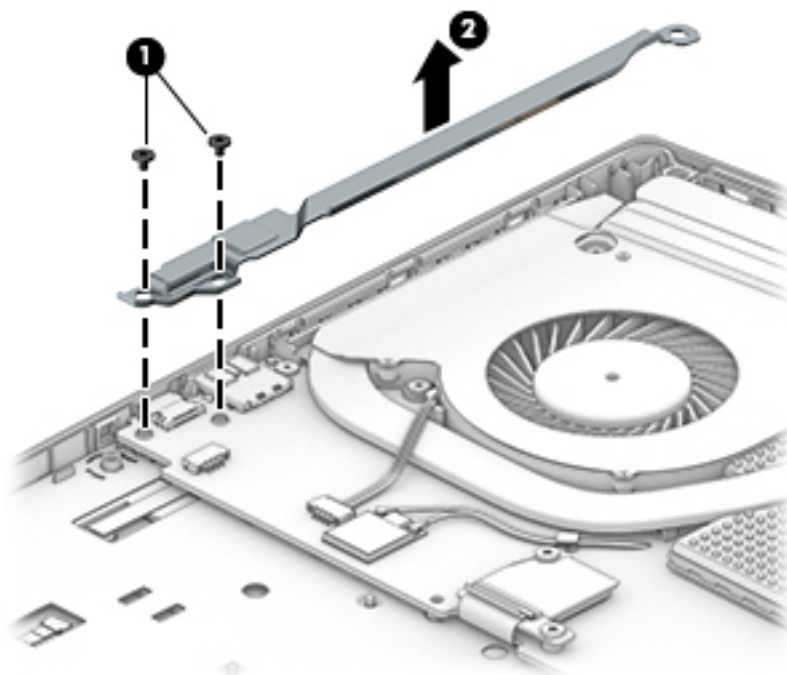1. Remove the two Phillips M2.0 × 2.5 screws **(1)** that secure the bracket to the computer.
2. Remove the bracket from the fan **(2)**.



3. Disconnect the two fan cables from the system board **(1)**.
4. Remove the three Phillips M2.0 × 5.5 screws **(2)** from each fan.
5. Loosen the seven captive Phillips screws **(3)** in the order indicated on the heat sink.

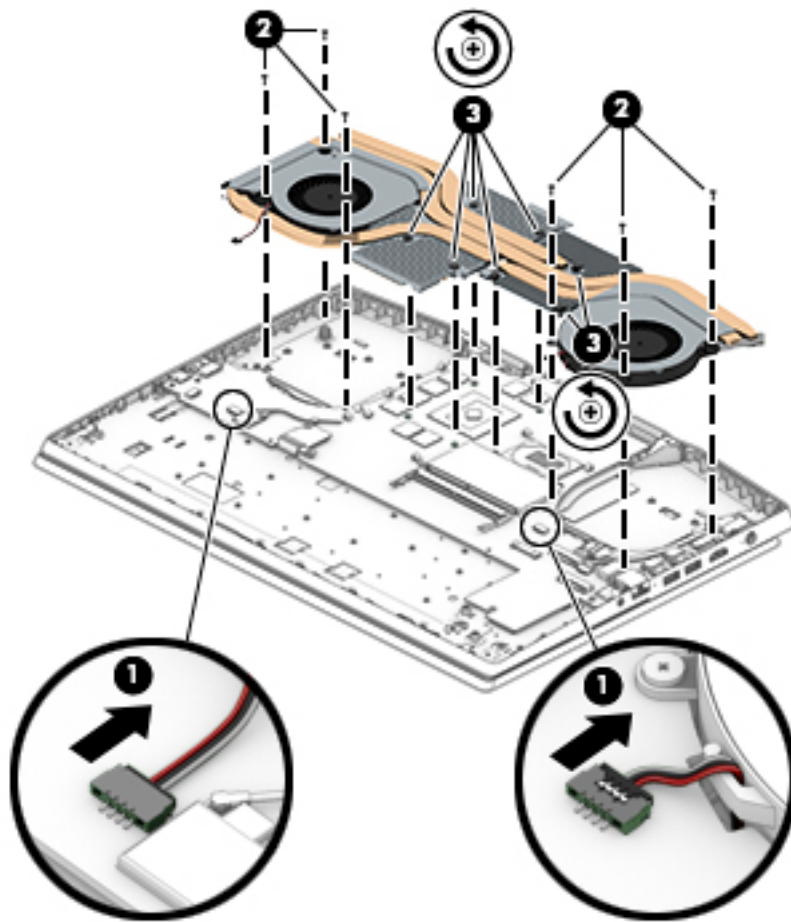6. Remove the heat sink/fan assembly from the computer.



7. Each time the heat sink is removed, use an alcohol wipe to clean the surface of the integrated processor and associated location on the heat sink. The thermal solution requires two types of thermal material:

- Thermal material must be applied on site, and therefore is not included in component spare part kits. When removing any part that also requires removal of the heat sink, be sure to order and apply thermal material.

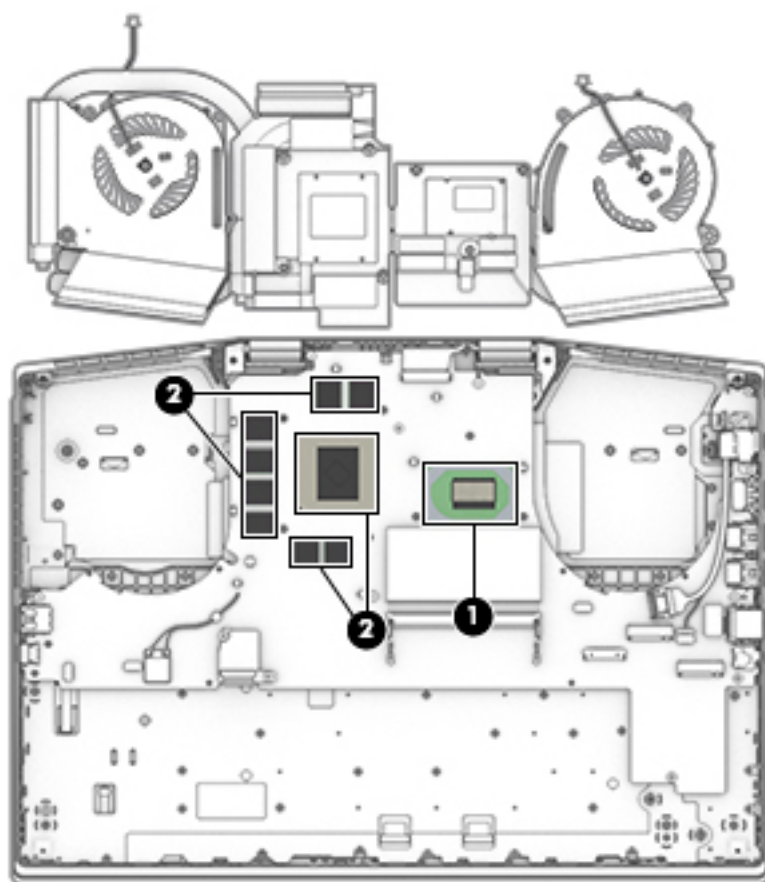
Apply liquid metal to the integrated processor on the system board **(1)**.



IMPORTANT: Be sure to completely cover the surface of the processor with liquid metal. Failure to do so may cause reduced heat dissipation and lead to the computer overheating.

Only apply a thin layer of liquid metal over the entire processor.

- Use thermal pads on the remaining locations on the system board **(2)**.



Reverse this procedure to install the heat sink/fan assembly.

Second display transfer board



-  **NOTE:** The second display transfer board spare part kit does not include the cable. The cable is available as spare part number L65580-001.
-  **NOTE:** Liquid metal thermal grease is available as spare part number L65923-001.

Table 6-4 Second display transfer board description and part number


Description	Spare part number
Second display transfer board	L57230-001

Before removing the second display transfer board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Disconnect the battery (see [Battery and speakers on page 32](#)).

Remove the second display transfer board:

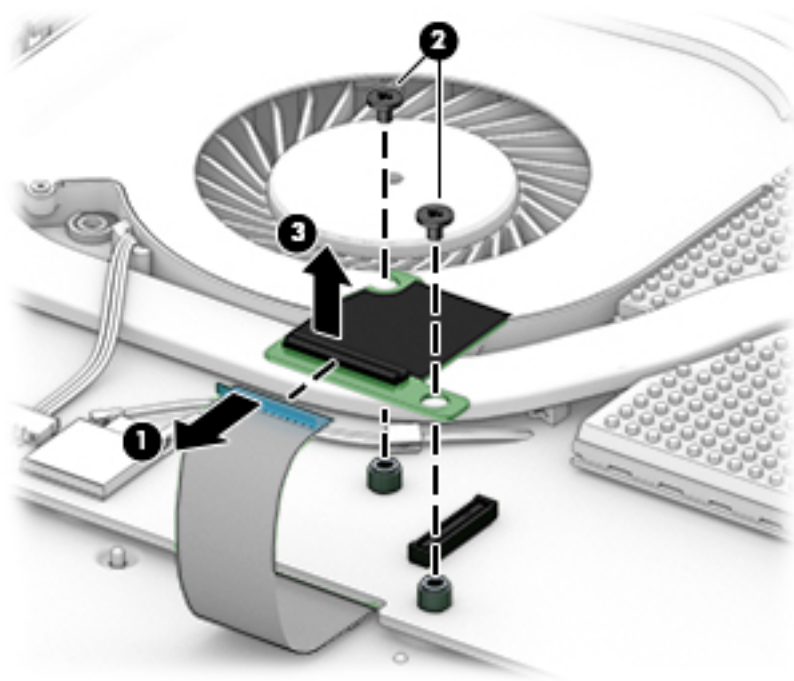1. Disconnect the cable from the ZIF connector on the second display transfer board **(1)**.
2. Remove the two Phillips M2.0 × 2.5 screws **(2)** that secure the board to the computer.
3. Remove the board from the computer **(3)**.



Reverse this procedure to install the second display transfer board

Power connector cable

Table 6-5 Power connector cable description and part number


Description	Spare part number
Power connector cable	L57017-001

Before removing the power connector cable, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Disconnect the battery (see [Battery and speakers on page 32](#)).
4. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).

Remove the power connector cable:

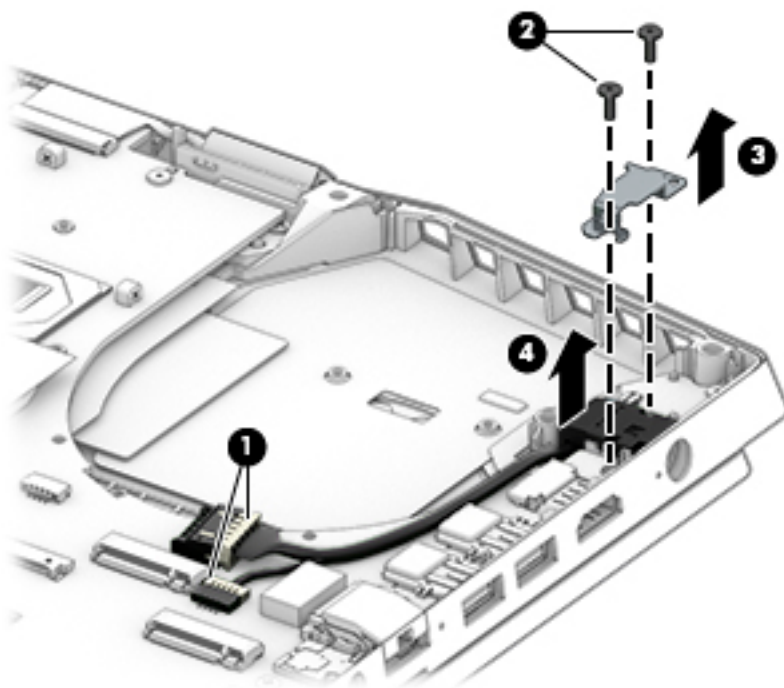1. Disconnect the cable from the system board (1).
2. Remove the two Phillips M2.0 × 5.5 screws (2) that secure the bracket to the computer, and then remove the bracket (3).
3. Remove the power connector and cable from the computer (4).



Reverse this procedure to install the power connector cable.

Power button board

 **NOTE:** The power button board spare part kit does not include the cable. The cable is available as spare part number L57012-001.


 **NOTE:** Liquid metal thermal grease is available as spare part number L65923-001.

Table 6-6 Power button board descriptions and part numbers


Description	Spare part number
Power button board	L57020-001

Before removing the power button board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Disconnect the battery (see [Battery and speakers on page 32](#)).
4. Remove the fan/heat sink assembly (see [Heat sink/fan assembly on page 35](#)).

Remove the power button board:

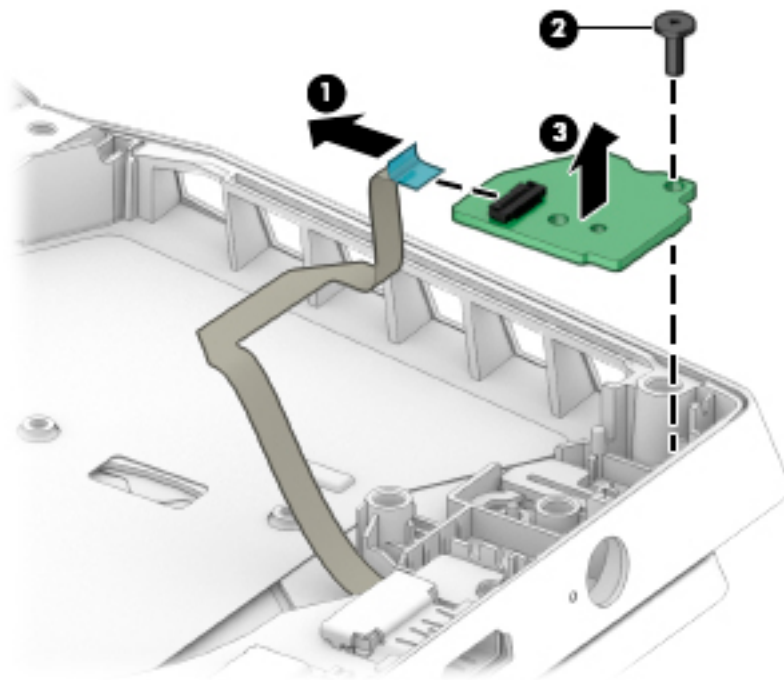1. Disconnect the cable from the ZIF connector on the power button board **(1)**.
2. Remove the Phillips M2.0 × 3.0 screw **(2)** that secures the board to the computer.
3. Remove the board from the computer **(3)**.



Reverse this procedure to install the power button board.

System board



NOTE: Liquid metal thermal grease is available as spare part number L65923-001.

Table 6-7 System board descriptions and part numbers


Intel Core i9-9880H processor and 8 GB of discrete graphics memory (GeForce GTX 2080)	L57039-xx1
Intel Core i9-9880H processor and 8 GB of discrete graphics memory (GeForce GTX 2070)	L57037-xx1
Intel Core i7-9750H processor and 8 GB of discrete graphics memory (GeForce GTX 2080)	L57038-xx1
Intel Core i7-9750H processor and 8 GB of discrete graphics memory (GeForce GTX 2070)	L57036-xx1

Before removing the system board, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery and speakers (see [Battery and speakers on page 32](#)).
4. Remove the solid-state drive (see [Solid-state drive and Optane Memory Module on page 29](#)).
5. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).
6. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
7. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).

Remove the system board:

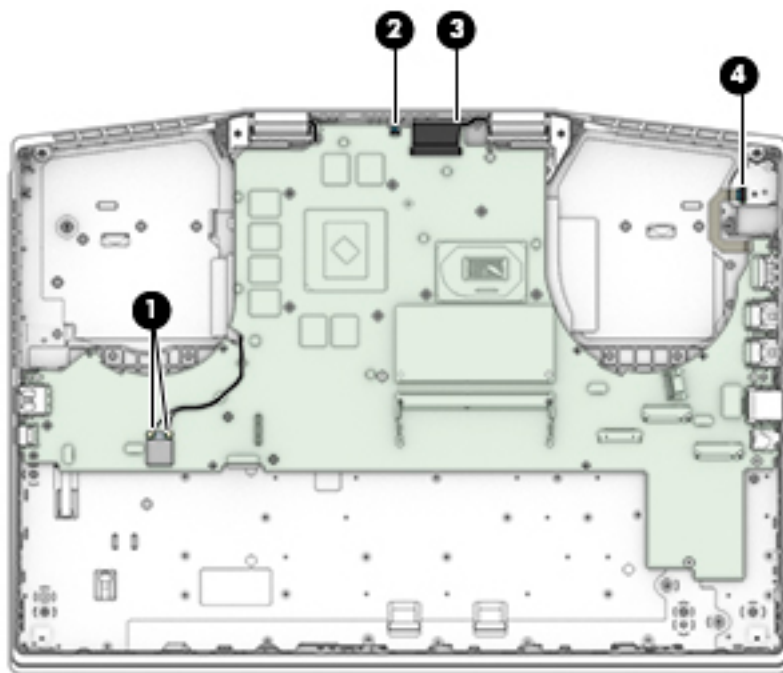1. Disconnect the following cables from the system board:
 - (1) WLAN antennas
 - (2) IR camera board cable (ZIF)
 - (3) Display cable (ZIF)
 - (4) Power button board cable from power button board




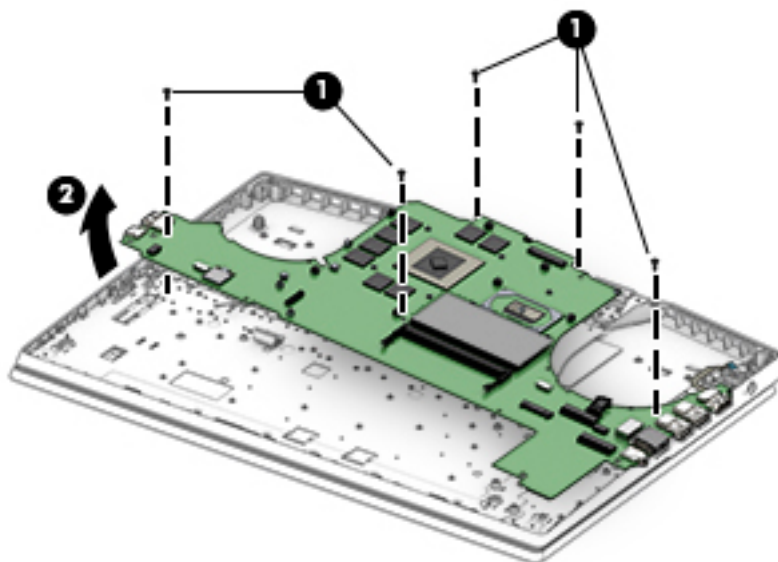2. Remove the five Phillips M2.0 × 5.5 screws **(1)** that secure the system board to the computer.
3. Lift the left side of the system board **(2)**.



4. Rotate the system board upside down **(1)**, and then disconnect the keyboard cable from the ZIF connector on the keyboard **(2)**.

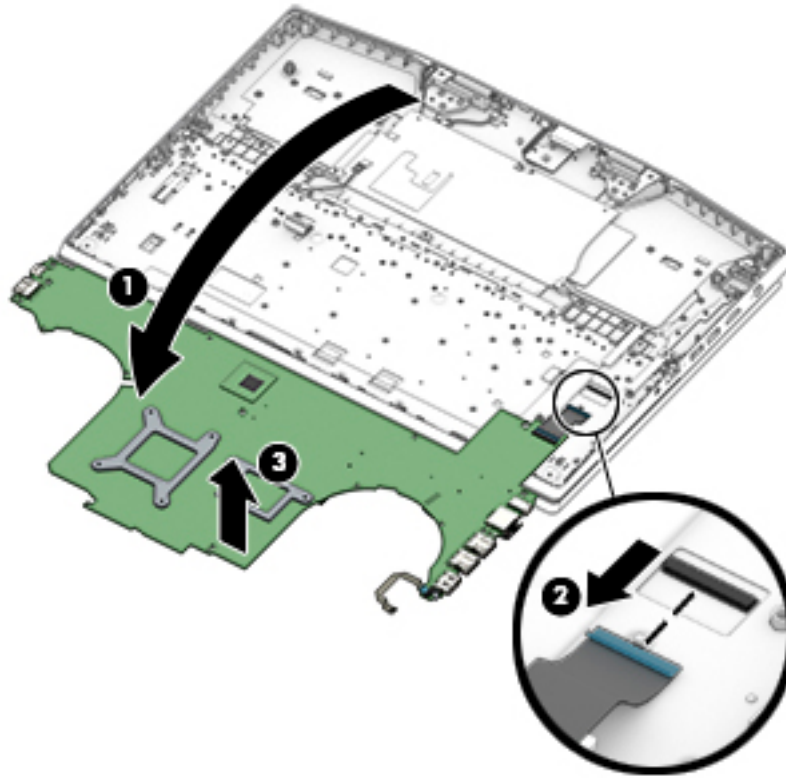5. Remove the system board from the computer **(3)**.



Reverse this procedure to install the system board.

Network connector door

Table 6-8 Network connector door description and part number


Description	Spare part number
Network connector door	L57023-001

Before removing the network connector door, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery (see [Battery and speakers on page 32](#)).
4. Remove the solid-state drive (see [Solid-state drive and Optane Memory Module on page 29](#)).
5. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).
6. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
7. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).
8. Remove the system board (see [System board on page 41](#)).

Remove the network connector door:

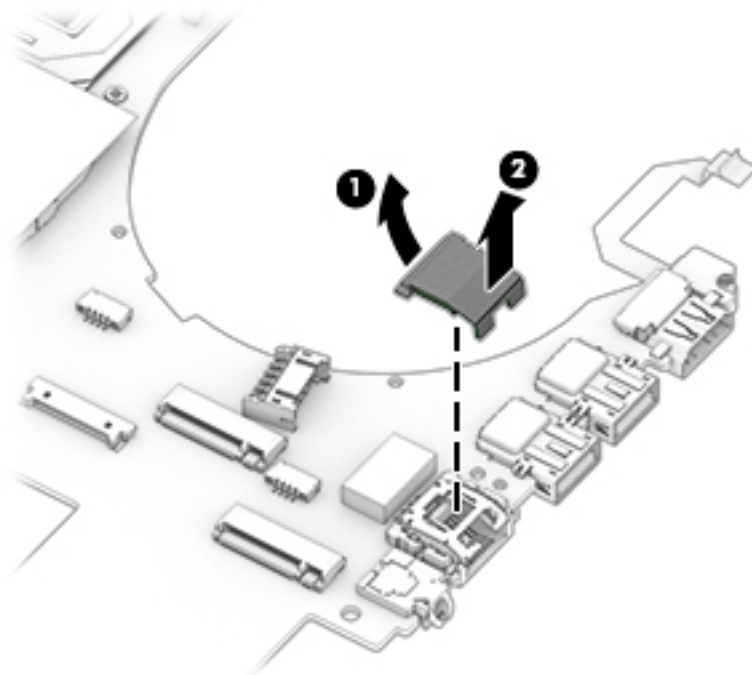- ▲ From the removed system board, lift the back of the door **(1)**, and then remove the door from the computer **(2)**.



Reverse this procedure to install the network connector door.

Thermal shield (CU plate)

Table 6-9 Thermal shield description and part number


Description	Spare part number
Thermal shield	not spared

Before removing the thermal shield, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery and speakers (see [Battery and speakers on page 32](#)).
4. Remove the solid-state drive (see [Solid-state drive and Optane Memory Module on page 29](#)).
5. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).
6. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
7. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).
8. Remove the system board (see [System board on page 41](#)).

Remove the thermal shield:

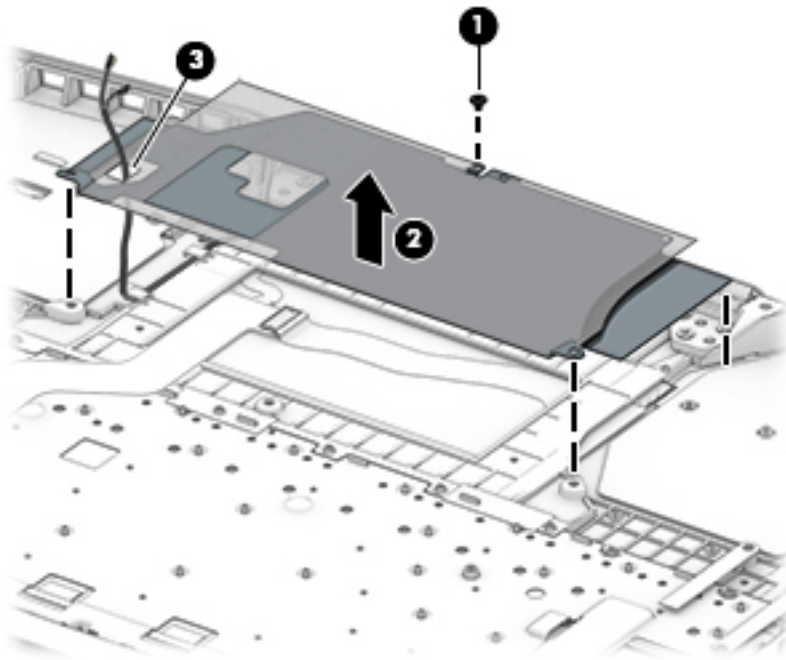1. Remove the Phillips M2.0 × 2.5 screw **(1)** that secures the shield to the computer.
2. Remove the thermal shield from the computer **(2)** while pulling the antenna cable through the hole in the shield **(3)**.



Reverse this procedure to install the thermal shield.

IR sensor board



NOTE: Liquid metal thermal grease is available as spare part number L65923-001.

Table 6-10 IR sensor board description and part number


Description	Spare part number
IR sensor board	L57021-001

Before removing the IR sensor board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery and speakers (see [Battery and speakers on page 32](#)).
4. Remove the solid-state drive (see [Solid-state drive and Optane Memory Module on page 29](#)).
5. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).
6. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
7. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).
8. Remove the system board (see [System board on page 41](#)).

Remove the IR sensor board:

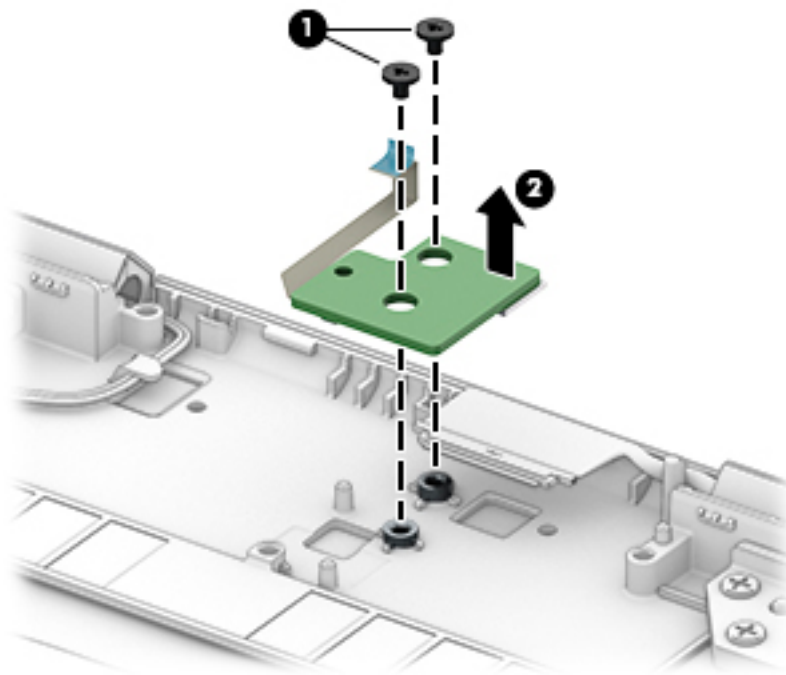1. Remove the two Phillips M2.0 × 2.5 screws **(1)** that secure the board to the computer.
2. Remove the board and cable from the computer **(2)**.



Reverse this procedure to install the IR sensor board.

Touchpad cable

Table 6-11 Touchpad cable description and part number


Description	Spare part number
Touchpad cable	L57014-001

Before removing the touchpad cable, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery and speakers (see [Battery and speakers on page 32](#)).
4. Remove the solid-state drive (see [Solid-state drive and Optane Memory Module on page 29](#)).
5. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).
6. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
7. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).
8. Remove the system board (see [System board on page 41](#)).

Remove the touchpad cable:

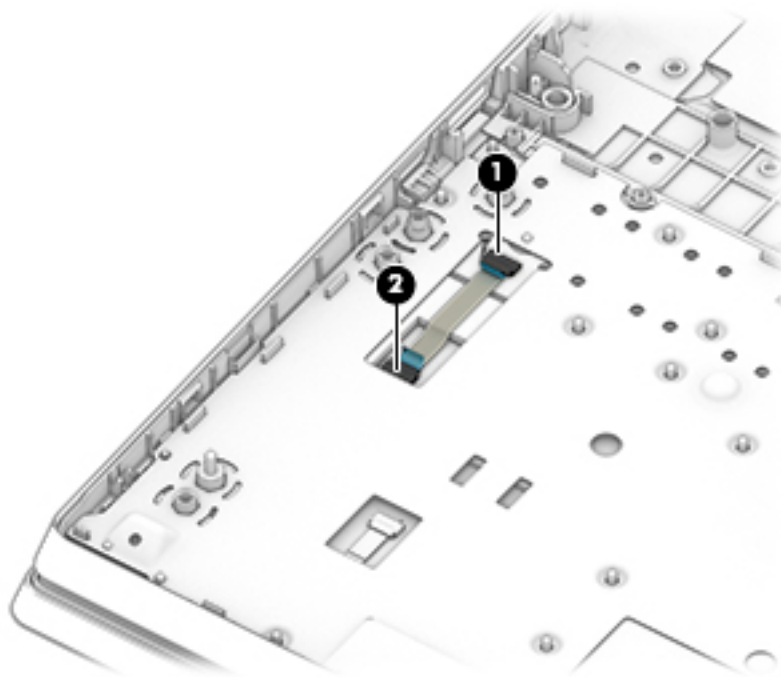1. Disconnect the cable from the ZIF connector on the keyboard **(1)**.
2. Disconnect the cable from the ZIF connector on the touchpad **(2)**.
3. Remove the touchpad cable.



Reverse this procedure to install the touchpad cable.

Second display panel



NOTE: Liquid metal thermal grease is available as spare part number L65923-001.

Table 6-12 Second display description and part number


Description	Spare part number
Second display panel	L57028-001

Before removing the second display panel, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery and speakers (see [Battery and speakers on page 32](#)).
4. Remove the solid-state drive (see [Solid-state drive and Optane Memory Module on page 29](#)).
5. Remove the heat sink/fan assembly (see [Heat sink/fan assembly on page 35](#)).
6. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
7. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).
8. Remove the system board (see [System board on page 41](#)).


Remove the second display panel:

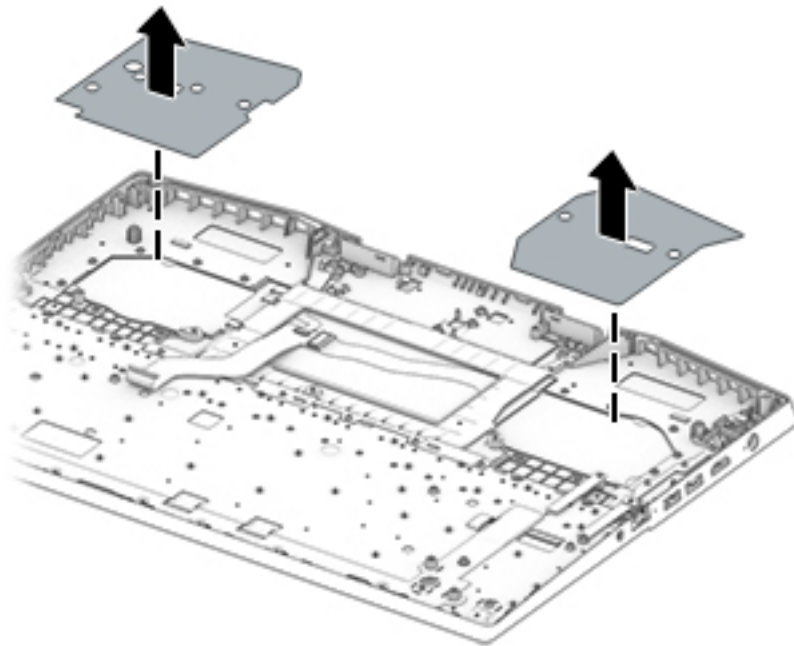1. Remove the copper foil covers from the left and right sides of the second display panel.





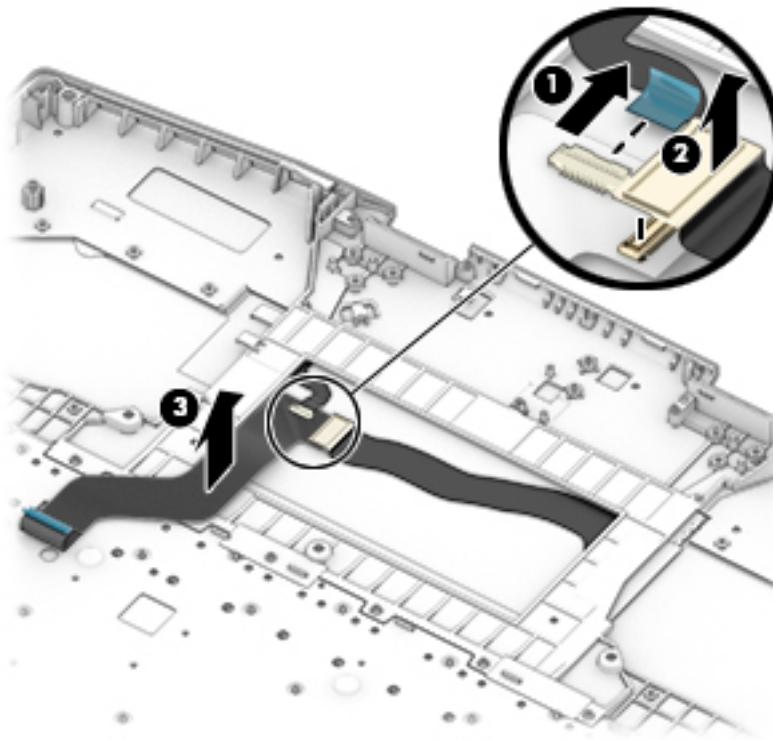2. Disconnect the display cables **(1)**, **(2)** from the second display.

3. Remove the cables (3).



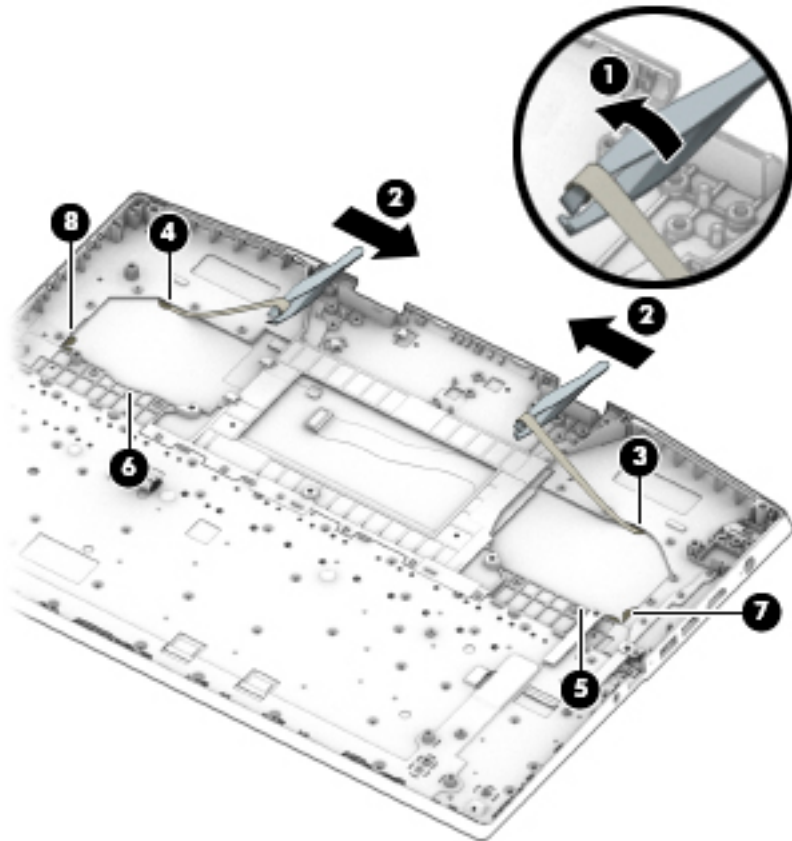
4. Use a tweezer (1) to grasp the tape that routes separately behind the left and right sides of display panel (2).

 **TIP:** To avoid tearing the tape, pull the tape evenly and carefully. Rolling the tape around the tweezer as you pull can help you to pull more evenly.

 **IMPORTANT:** To avoid tearing the tape, be sure to follow the order of the steps in this procedure.


5. Pull the tape out from the top of the left side of the panel (3).
6. Pull the tape out from the top of the right side of the panel (4).
7. Pull the tape out from the bottom of the left side of the panel (5).
8. Pull the tape out from the bottom of the right side of the panel (6).
9. Pull the tape out from the far of the left side of the panel (7).

- 10.** Pull the tape out from the far of the right side of the panel **(8)**.



- 11.** Remove the three pieces of conductive tape **(1)** that secure the display to the computer.

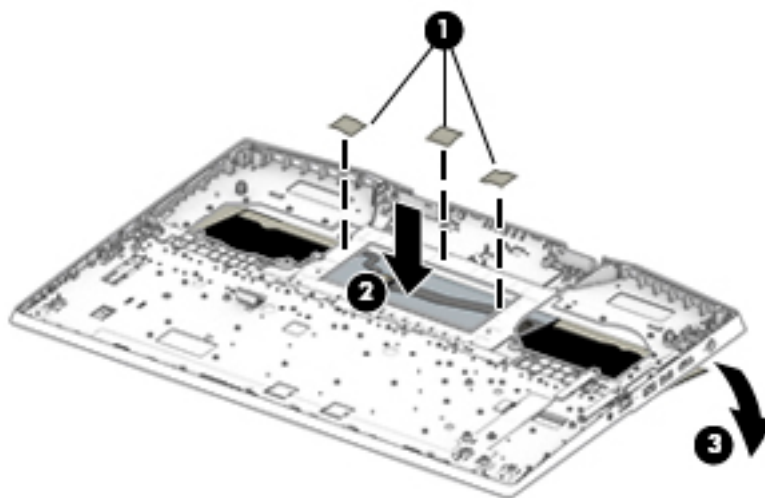- 12.** Push the display downward **(2)**, and then rotate the display off the computer **(3)**.



Reverse this procedure to install the second display panel.

Display assembly



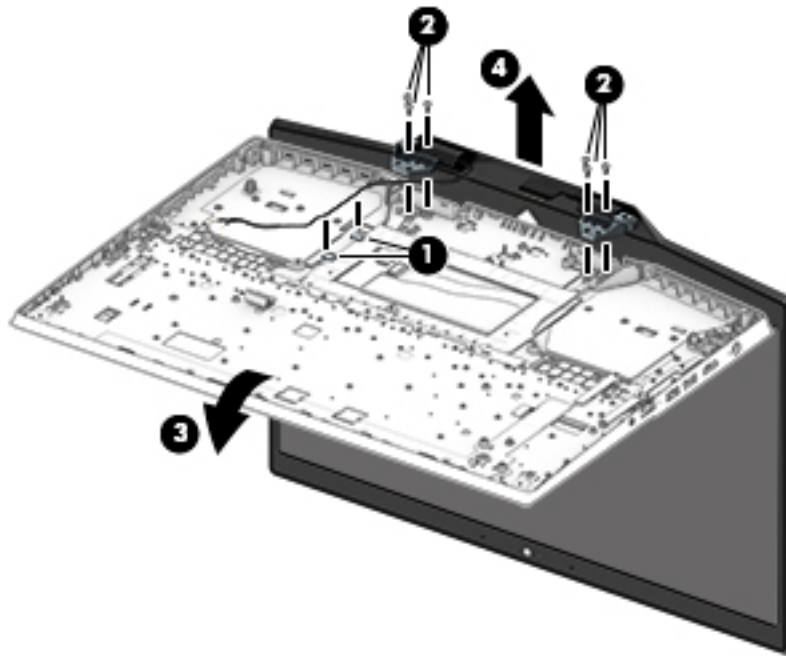
NOTE: Spare parts for the display assembly are available only at the subcomponent level.

Before removing the display assembly, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 26](#)).
2. Remove the bottom cover (see [Bottom cover on page 27](#)).
3. Remove the battery and speakers (see [Battery and speakers on page 32](#)).
4. Remove the heat sink/fan (see [Heat sink/fan assembly on page 35](#)).
5. Remove the second display transfer board (see [Second display transfer board on page 38](#)).
6. Remove the power connector board and bracket (see [Power connector cable on page 39](#)).
7. Remove the system board (see [System board on page 41](#)).

Remove the display assembly:

1. Remove the wireless antenna cables from the clips in the computer chassis **(1)**.
2. Remove the three Phillips M2.5 × 4.5 screws **(2)** from each hinge.
3. Open the display to 90° **(3)**.
4. Separate the display from the computer **(4)**.



5. If it is necessary to replace display assembly subcomponents, first remove the bezel:
 - a. Release the top edge of the display bezel **(1)** from the display assembly.



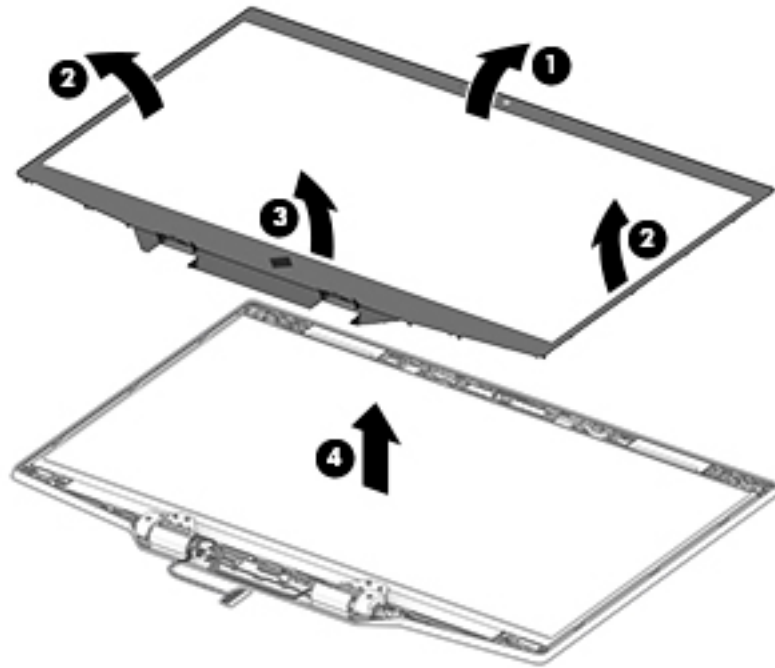
IMPORTANT: Be careful not to bend or break the narrow sections of the bezel when removing.

- b. Release the left and right edges of the display bezel **(2)** from the display assembly.
- c. Release the bottom edge of the display bezel **(3)** from the display assembly.

- d. Remove the display bezel (4).

The display bezel is available as spare part number L57011-001.


Bezel adhesive tape is available as spare part number L57048-001.



6. If it is necessary to remove the hinge covers:

- ▲ Pull the hinge covers straight up and off the display back cover.

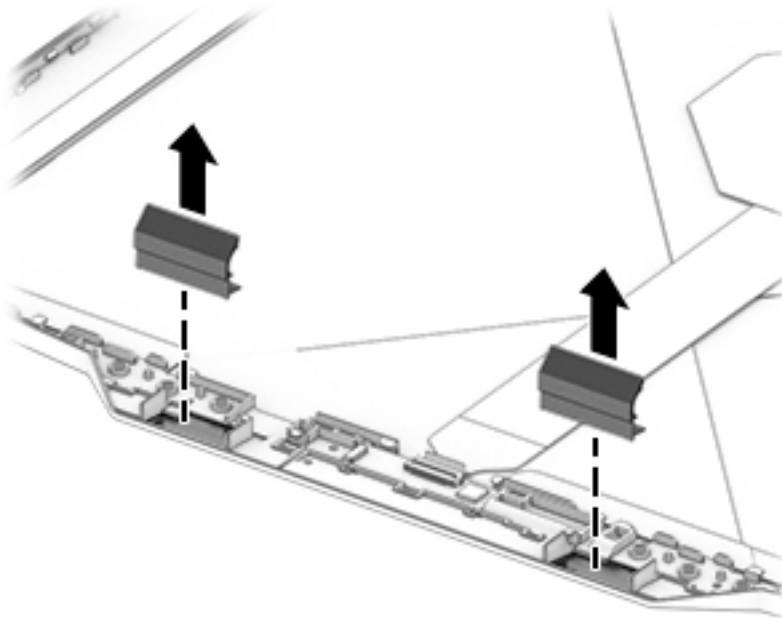The hinge covers are available as spare part number L66225-001.



7. If it is necessary to remove the display panel:

- a. Use a tweezer to grasp the tape that routes behind both the left and right sides of the display panel **(1)**.
- b. Roll the tape around the tweezer as you pull the tape out from behind the left and right sides of the panel **(2)**.

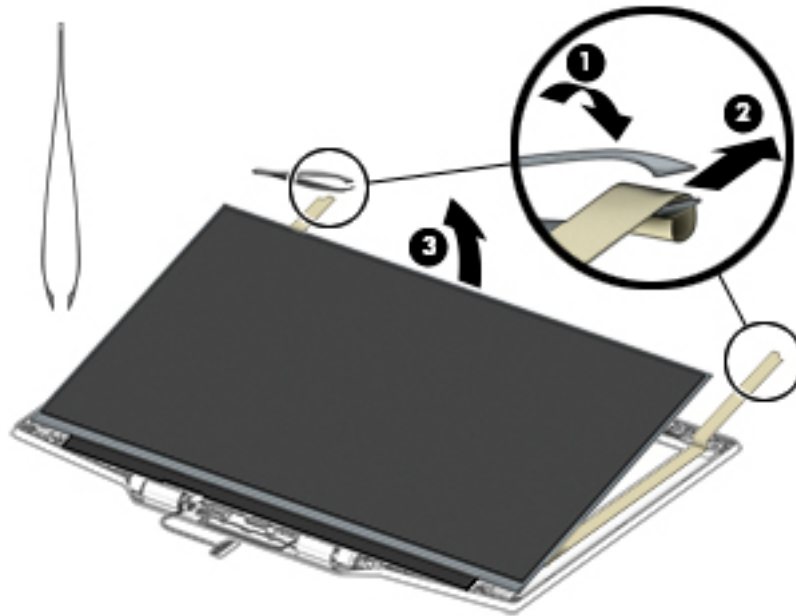


IMPORTANT: To avoid tearing the tape, pull the tape evenly and carefully.



TIP: You have to pull on the tape multiple times before it is completely removed.

- c. Lift the top of the panel up and rotate the panel over next to the display back cover **(3)**.



- d. Remove the tape from the connector on the back of the display panel **(1)**, and then disconnect the cable from the panel **(2)**.

- e. Remove the display panel **(3)**.

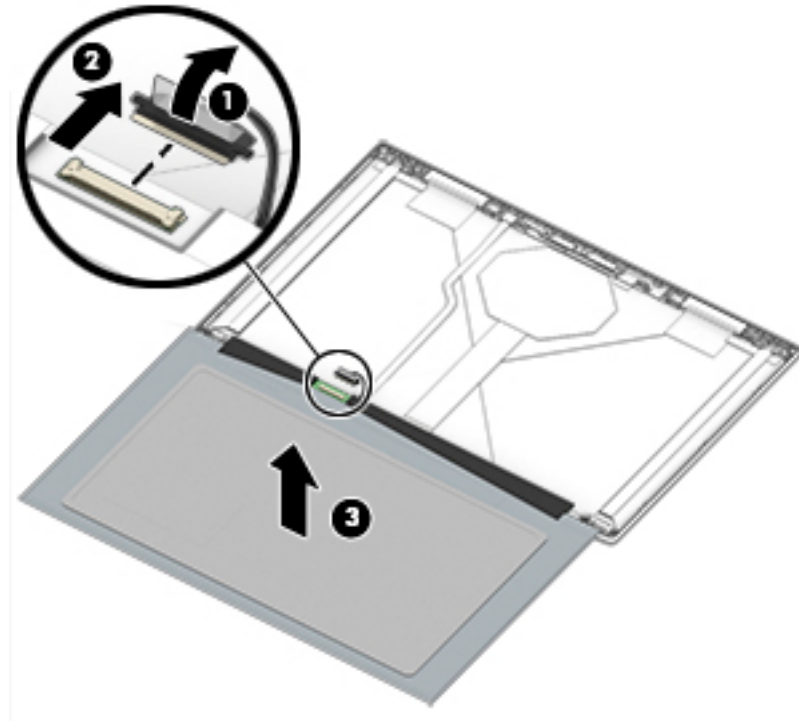
The display panel is available as the following spare part numbers:

L57025-001 for UHD, 60 Hz, 550 nit panel

L57026-001 for UHD, 60 Hz, 340 nit panel

L57024-001 for FHD 144 Hz, 300 nit panel


L62861-001 for FHD 240 Hz, 300 nit panel



8. If it is necessary to remove the webcam module:

- ▲ Disconnect the cable from the module **(1)**, and then lift evenly on both sides of the webcam to detach it from the display back cover **(2)**. (The webcam module is attached to the display back cover with adhesive.)

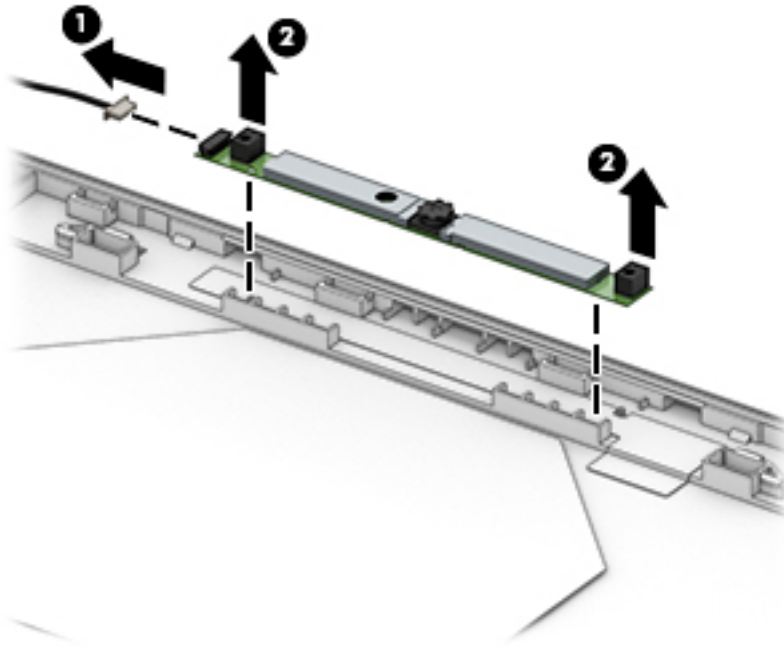
The webcam is available as spare part number L57040-001.



9. If it is necessary to remove the display hinges and brackets:


- a. Remove the three Phillips M2.5 × 2.5 screws **(1)** from each hinge.
- b. Remove the hinges from the display back cover **(2)**.

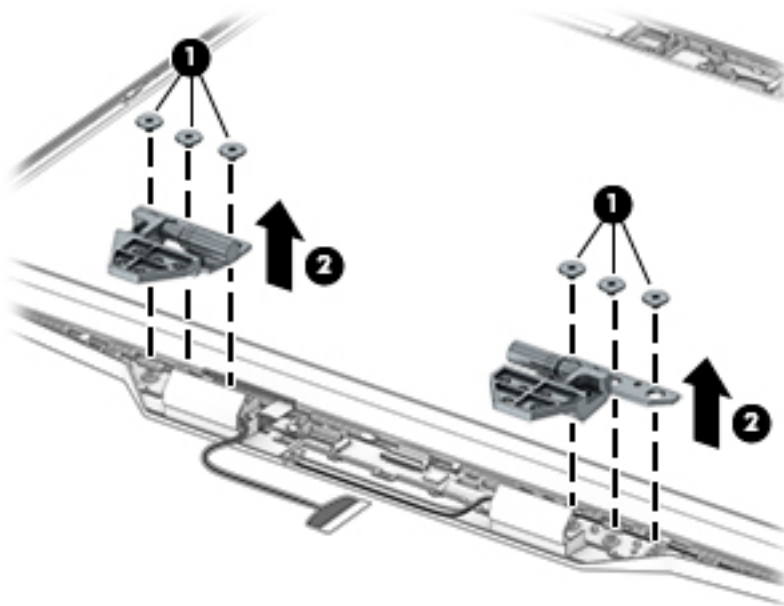The display hinges are available as spare part number L57019-001.



- c. Remove the three Phillips M2.0 × 2.5 screws **(1)** from each bracket.

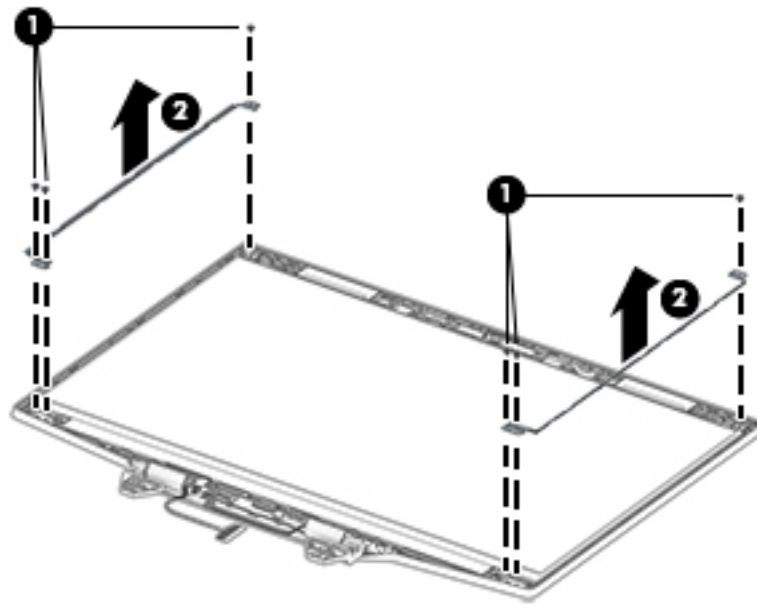
- d. Remove the hinge brackets from the display back cover **(2)**.




10. If it is necessary to remove the display panel cable:

- a. Disconnect the cable from the display backlight board at the bottom of the display back cover **(1)**, and then remove the cable from the clip **(2)**.
- b. Peel the cable from the inside of the display back cover **(3)**.

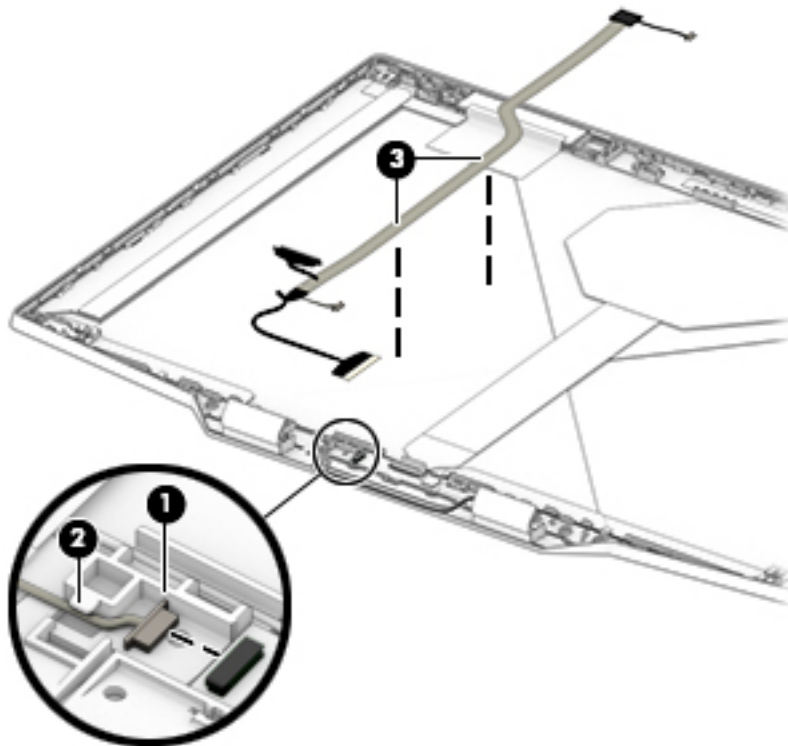The display cable is available as spare part number L57016-001.




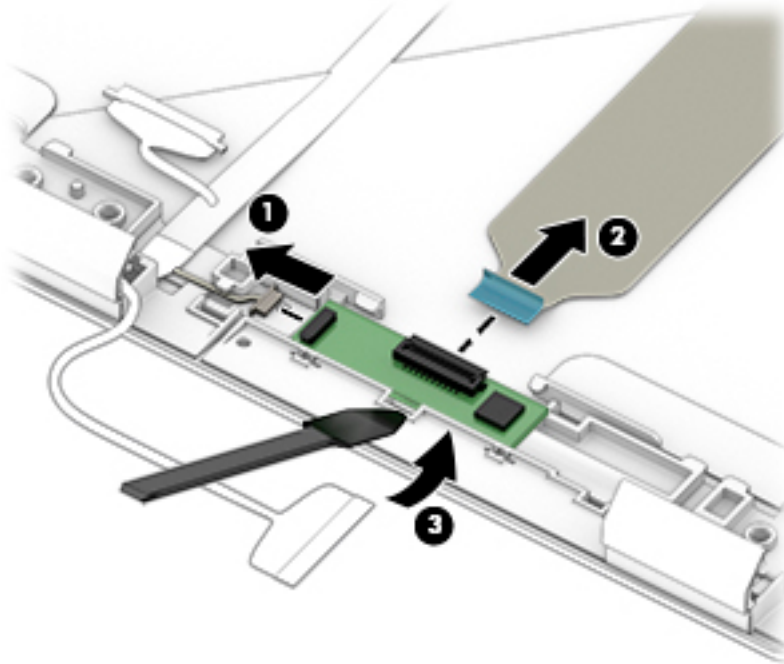- 11.** If it is necessary to remove the display backlight board:
- a.** Disconnect the display cable **(1)** and backlight module cable **(2)** from the board.
 - b.** Use a tool to remove the board from the display LED cover **(3)**.
- The display LED board is available as spare part number L57022-001.



- 12.** If it is necessary to remove the wireless antennas:
- a.** Peel the antennas off the top of the display back cover **(1)**.

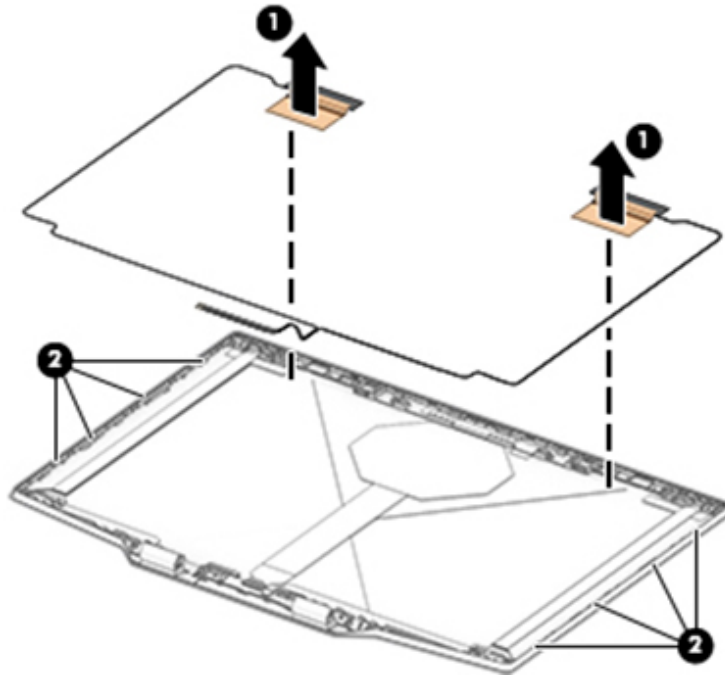
- b. Remove the antenna cables from the sides of the display back cover (2).
The wireless antennas are available as spare part number L57008-001.



13. If it is necessary to remove the display backlight module:

- ▲ Peel the module from the inside of the display back cover.

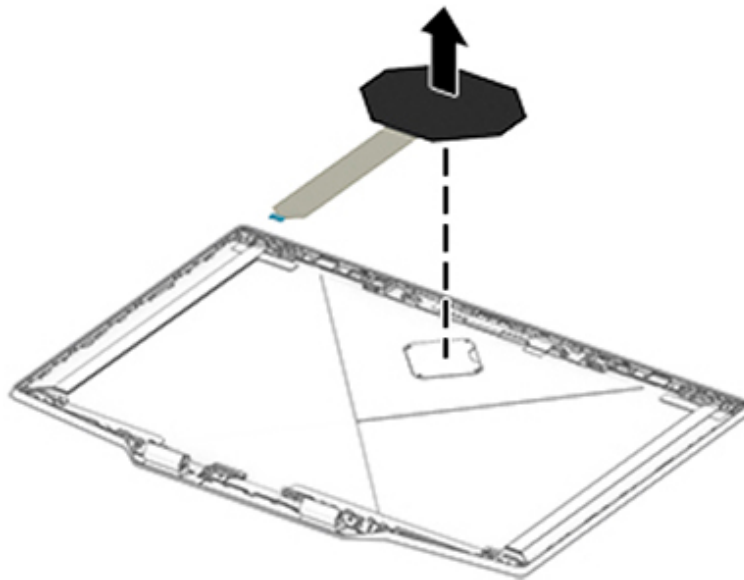The display backlight module is available as spare part number L57184-001.



The display back cover is available as spare part number L57009-001.

Display back cover adhesive tape is available as spare part number L57047-001.

Reverse this procedure to install the display assembly.

Keyboard/top cover

The top cover with keyboard remains after removing all other spared parts from the computer.

In this section, the first table provides the main spare part number for the top cover/keyboards. The second table provides the country codes.



NOTE: Liquid metal thermal grease is available as spare part number L65923-001.

Table 6-13 Keyboard/top cover description and part number

Description	Spare part number
Keyboard/top cover (includes touchpad and thermal shield (CU plate))	L57185-xx1
Keyboard cable	L57015-001

Table 6-14 Keyboard country codes

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Italy	-061	South Korea	-AD1
Bulgaria	-261	Japan	-291	Spain	-071
Czech Republic and Slovakia	-FL1	Latin America	-161	Switzerland	-BG1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Taiwan	-AB1
France	-051	Portugal	-131	Thailand	-281
French Canada	-DB1	Romania	-271	Turkey	-141
Germany	-041	Russia	-251	United Kingdom	-031
Hungary	-211	Saudi Arabia	-171	United States	-001
Israel	-BB1	Slovenia	-BA1		

7 Using Setup Utility (BIOS)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.



NOTE: To start Setup Utility on convertible computers, your computer must be in notebook mode and you must use the keyboard attached to your notebook.

Starting Setup Utility (BIOS)



CAUTION: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

- ▲ Turn on or restart the computer and quickly press **F10**.

– or –

Turn on or restart the computer, quickly press **ESC**, and then press **F10** when the Start menu is displayed.

Updating Setup Utility (BIOS)

Updated versions of Setup Utility (BIOS) may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Setup Utility (BIOS), first determine the BIOS version on your computer.

To reveal the BIOS version information (also known as *ROM date* and *System BIOS*), use one of these options.

- HP Support Assistant
 1. Type **support** in the taskbar search box, and then select the **HP Support Assistant** app.


– or –

Select the question mark icon in the taskbar.


 2. Select **My notebook**, and then select **Specifications**.
- Setup Utility (BIOS)
 1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 60](#)).
 2. Select **Main**, and then make note of the BIOS version.
 3. Select **Exit**, select one of the options, and then follow the on-screen instructions.
- In Windows, press **CTRL+Alt+S**.

To check for later BIOS versions, see [Downloading a BIOS update on page 61](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate Sleep.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

 **NOTE:** If your computer is connected to a network, consult the network administrator before installing any software updates, especially system BIOS updates.


1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS version, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

BIOS installation procedures vary. Follow any instructions that appear on the screen after the download is complete. If no instructions appear, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, *filename.exe*).

The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

8 Using HP PC Hardware Diagnostics

Using HP PC Hardware Diagnostics Windows (select products only)

HP PC Hardware Diagnostics Windows is a Windows-based utility that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs within the Windows operating system in order to diagnose hardware failures.

If HP PC Hardware Diagnostics Windows is not installed on your computer, first you must download and install it. To download HP PC Hardware Diagnostics Windows, see [Downloading HP PC Hardware Diagnostics Windows on page 62](#).

After HP PC Hardware Diagnostics Windows is installed, follow these steps to access it from HP Help and Support or HP Support Assistant.

1. To access HP PC Hardware Diagnostics Windows from HP Help and Support:

- a. Select the **Start** button, and then select **HP Help and Support**.
- b. Select **HP PC Hardware Diagnostics Windows**.

– or –

To access HP PC Hardware Diagnostics Windows from HP Support Assistant:


- a. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Select the question mark icon in the taskbar.

- b. Select **Troubleshooting and fixes**.
- c. Select **Diagnostics**, and then select **HP PC Hardware Diagnostics Windows**.

2. When the tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test at any time, select **Cancel**.

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. The screen displays one of the following options:

- A Failure ID link is displayed. Select the link and follow the on-screen instructions.
- A Quick Response (QR) code is displayed. With a mobile device, scan the code and then follow the on-screen instructions.
- Instructions for calling support are displayed. Follow those instructions.

Downloading HP PC Hardware Diagnostics Windows

- The HP PC Hardware Diagnostics Windows download instructions are provided in English only.
- You must use a Windows computer to download this tool because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics Windows version

To download HP PC Hardware Diagnostics Windows, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics Windows**, and then select a location on your computer or a USB flash drive.

The tool is downloaded to the selected location.

Downloading HP Hardware Diagnostics Windows by product name or number (select products only)

 **NOTE:** For some products, it may be necessary to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics Windows by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, and then enter the product name or number in the search box that is displayed.
3. In the **Diagnostics** section, select **Download**, and then follow the on-screen instructions to select the specific Windows diagnostics version to be downloaded to your computer or USB flash drive.


The tool is downloaded to the selected location.

Installing HP PC Hardware Diagnostics Windows

To install HP PC Hardware Diagnostics Windows, follow these steps:

- ▲ Navigate to the folder on your computer or the USB flash drive where the .exe file was downloaded, double-click the .exe file, and then follow the on-screen instructions.

Using HP PC Hardware Diagnostics UEFI

 **NOTE:** For Windows 10 S computers, you must use a Windows computer and a USB flash drive to download and create the HP UEFI support environment because only .exe files are provided. For more information, see [Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive on page 64](#).

HP PC Hardware Diagnostics UEFI (Unified Extensible Firmware Interface) allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

If your PC will not boot into Windows, you can use HP PC Hardware Diagnostics UEFI to diagnose hardware issues.

When HP PC Hardware Diagnostics Windows detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. For assistance in solving the problem:

- ▲ Select **Get Support**, and then use a mobile device to scan the QR code that displays on the next screen. The HP Customer Support - Service Center page displays, with your Failure ID and product number automatically filled in. Follow the on-screen instructions.

– or –

Contact support, and provide the Failure ID code.



NOTE: To start diagnostics on a convertible computer, your computer must be in notebook mode, and you must use the attached keyboard.



NOTE: If you need to stop a diagnostic test, press **esc**.

Starting HP PC Hardware Diagnostics UEFI

To start HP PC Hardware Diagnostics UEFI, follow these steps:

1. Turn on or restart the computer, and quickly press **esc**.
2. Press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB flash drive



NOTE: To download the HP PC Hardware Diagnostics UEFI tool to a USB flash drive, see [Downloading the latest HP PC Hardware Diagnostics UEFI version on page 64](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select a language, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive

Downloading HP PC Hardware Diagnostics UEFI to a USB flash drive can be useful in the following situations:

- HP PC Hardware Diagnostics UEFI is not included in the preinstall image.
- HP PC Hardware Diagnostics UEFI is not included in the HP Tool partition.
- The hard drive is damaged.



NOTE: The HP PC Hardware Diagnostics UEFI download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are provided.

Downloading the latest HP PC Hardware Diagnostics UEFI version

To download the latest HP PC Hardware Diagnostics UEFI version to a USB flash drive:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download HP Diagnostics UEFI**, and then select **Run**.

Downloading HP PC Hardware Diagnostics UEFI by product name or number (select products only)



NOTE: For some products, it may be necessary to download the software to a USB flash drive by using the product name or number.

To download HP PC Hardware Diagnostics UEFI by product name or number (select products only) to a USB flash drive:

1. Go to <http://www.hp.com/support>.
2. Enter the product name or number, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the specific UEFI Diagnostics version for your computer.

Using Remote HP PC Hardware Diagnostics UEFI settings (select products only)

Remote HP PC Hardware Diagnostics UEFI is a firmware (BIOS) feature that downloads HP PC Hardware Diagnostics UEFI to your computer. It can then execute the diagnostics on your computer, and it may upload results to a preconfigured server. For more information about Remote HP PC Hardware Diagnostics UEFI, go to <http://www.hp.com/go/techcenter/pcdiags>, and then select **Find out more**.

Downloading Remote HP PC Hardware Diagnostics UEFI



NOTE: HP Remote PC Hardware Diagnostics UEFI is also available as a Softpaq that can be downloaded to a server.

Downloading the latest Remote HP PC Hardware Diagnostics UEFI version

To download the latest Remote HP PC Hardware Diagnostics UEFI version, follow these steps:

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. Select **Download Remote Diagnostics**, and then select **Run**.

Downloading Remote HP PC Hardware Diagnostics UEFI by product name or number



NOTE: For some products, it may be necessary to download the software by using the product name or number.

To download HP Remote PC Hardware Diagnostics UEFI by product name or number, follow these steps:

1. Go to <http://www.hp.com/support>.
2. Select **Get software and drivers**, select your type of product, enter the product name or number in the search box that is displayed, select your computer, and then select your operating system.
3. In the **Diagnostics** section, follow the on-screen instructions to select and download the **Remote UEFI** version for the product.

Customizing Remote HP PC Hardware Diagnostics UEFI settings

Using the Remote HP PC Hardware Diagnostics setting in Computer Setup (BIOS), you can perform the following customizations:

- Set a schedule for running diagnostics unattended. You can also start diagnostics immediately in interactive mode by selecting **Execute Remote HP PC Hardware Diagnostics**.
- Set the location for downloading the diagnostic tools. This feature provides access to the tools from the HP website or from a server that has been preconfigured for use. Your computer does not require the traditional local storage (such as a disk drive or USB flash drive) to run remote diagnostics.

- Set a location for storing the test results. You can also set the user name and password settings used for uploads.
- Display status information about the diagnostics run previously.

To customize Remote HP PC Hardware Diagnostics UEFI settings, follow these steps:

1. Turn on or restart the computer, and when the HP logo appears, press **f10** to enter Computer Setup.
2. Select **Advanced**, and then select **Settings**.
3. Make your customization selections.
4. Select **Main**, and then **Save Changes and Exit** to save your settings.

Your changes take effect when the computer restarts.

9 Backing up, restoring, and recovering

This chapter provides information about the following processes, which are standard procedure for most products:

- **Backing up your personal information**—You can use Windows tools to back up your personal information (see [Using Windows tools on page 67](#)).
- **Creating a restore point**—You can use Windows tools to create a restore point (see [Using Windows tools on page 67](#)).
- **Creating recovery media** (select products only)—You can use the HP Cloud Recovery Download Tool (select products only) to create recovery media (see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 67](#)).
- **Restoring and recovery**—Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state (see [Using Windows tools on page 67](#)).



IMPORTANT: If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.

IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning any recovery process.

Backing up information and creating recovery media

Using Windows tools



IMPORTANT: Windows is the only option that allows you to back up your personal information. Schedule regular backups to avoid information loss.

You can use Windows tools to back up personal information and create system restore points and recovery media.



NOTE: If computer storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get Help app.

1. Select the **Start** button, and then select the **Get Help** app.
2. Enter the task you want to perform.



NOTE: You must be connected to the Internet to access the Get Help app.

Using the HP Cloud Recovery Download Tool to create recovery media (select products only)

You can use the HP Cloud Recovery Download Tool to create HP Recovery media on a bootable USB flash drive.

To download the tool:

- ▲ Go to the Microsoft Store and search for HP Cloud Recovery.

For details, go to <http://www.hp.com/support>, search for HP Cloud Recovery, and then select "HP PCs – Using the Cloud Recovery Tool (Windows 10, 7)."



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

Restoring and recovery

Restoring, resetting, and refreshing using Windows tools

Windows offers several options for restoring, resetting, and refreshing the computer. For details, see [Using Windows tools on page 67](#).

Recovering using HP Recovery media

HP Recovery media is used to recover the original operating system and software programs that were installed at the factory. On select products, it can be created on a bootable USB flash drive using the HP Cloud Recovery Download Tool. For details, see [Using the HP Cloud Recovery Download Tool to create recovery media \(select products only\) on page 67](#).



NOTE: If you cannot create recovery media yourself, contact support to obtain recovery discs. Go to <http://www.hp.com/support>, select your country or region, and then follow the on-screen instructions.

To recover your system:

- ▲ Insert the HP Recovery media, and then restart the computer.

Changing the computer boot order

If your computer does not restart using the HP Recovery media, you can change the computer boot order. This is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive, depending on the location of your HP Recovery media.

To change the boot order:



IMPORTANT: For a tablet with a detachable keyboard, connect the tablet to the keyboard base before beginning these steps.

1. Insert the HP Recovery media.
2. Access the system **Startup** menu.

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, quickly hold down the volume up button, and then select **f9**.

– or –

Turn on or restart the tablet, quickly hold down the volume down button, and then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot, and then follow the on-screen instructions.

10 Specifications

Table 10-1 Computer specifications

	Metric	U.S.
Computer dimensions		
Width	362.1 mm	14.3 in
Depth	261.7 mm	10.3 in
Front height	20.0 mm	0.79 in
Rear height	23.8 mm	0.94 in
Weight (lowest configuration)	2455.0 g	5.41 lbs
Input power		
	Rating	
Operating voltage and current	19.5 V dc @ 11.8 A – 230 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

11 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 V ac, or from 220 to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Table 11-1 Power cord requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

Table 11-1 Power cord requirements for specific countries and regions (continued)

Country/region	Accredited agency	Applicable note number
		2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
		3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm ² or 1.25 mm ² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
		4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm ² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
		5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label.
		6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm ² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
		7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm ² or 1.00 mm ² conductor size, with plug BS 1363/A with BSI or ASTA marks.

12 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

- AC adapter and battery light, identifying 6
- action keys
 - identifying 11
- antenna
 - removal 57
- antennas
 - spare part number 58
- audio, product description 2
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 6

B

- back cover
 - spare part number 20
- backup, creating 67
- backups 67
- battery
 - removal 32
 - spare part number 17, 32
- bezel
 - spare part number 19, 52
- BIOS
 - determining version 60
 - downloading an update 61
 - starting the Setup Utility 60
 - updating 60
- Bluetooth label 14
- boot order, changing 68
- bottom components 12
- bottom cover
 - removal 27
 - spare part number 27
- bottom cover, spare part numbers 18
- buttons
 - left touchpad 8
 - power 10
 - right touchpad 8

C

- camera
 - identifying 7

- camera light, identifying 7
- caps lock light, identifying 9
- cautions
 - electrostatic discharge 22
- components
 - bottom 12
 - display 7
 - keyboard area 8
 - left side 6
 - right side 5
- computer major components 16
- connectors
 - power 5, 6

D

- display assembly
 - removal 51
- display back cover
 - spare part number 58
- display backlight module
 - spare part number 20, 58
- display brackets
 - removal 57, 58
- display cable
 - removal 56
- display components 7
- display LED board
 - spare part number 20, 57
- display panel
 - product description 1
 - removal 52
 - spare part numbers 19, 54
- display panel cable
 - spare part numbers 19, 56

E

- electrostatic discharge (ESD) 22
 - preventing damage 23
- esc key, identifying 11

F

- fan/heat sink assembly
 - spare part number 17
- fn key, identifying 11

G

- graphics, product description 1
- grounding methods 24
- guidelines
 - packaging 25
 - transporting 25
 - workstation 22

H

- HDMI port
 - identifying 6
- heat sink/fan assembly
 - removal 35
 - spare part number 17, 35
- hinge
 - removal 55
 - spare part number 55
- hinge covers
 - removal 52
 - spare part number 20
 - spare part numbers 52
- hinges
 - spare part number 20
- HP OMEN Command Center 14
- HP PC Hardware Diagnostics UEFI
 - downloading 64
 - starting 64
 - using 63
- HP PC Hardware Diagnostics Windows
 - downloading 62
 - installing 63
 - using 62
- HP Recovery media
 - recovery 68

I

- internal card expansion, product description 3
- internal microphones, identifying 7
- IR sensor board
 - removal 46
 - spare part number 46
 - spare part numbers 17
- IR sensor board cable, spare part number 17

J

jacks

- audio-out (headphone)/audio-in (microphone) 6
- network 6
- RJ-45 (network) 6

K

keyboard/pointing devices, product description 3

keyboard/top cover

- removal 59
- spare part numbers 17, 59

keys

- action 11
- esc 11
- fn 11
- OMEN 11
- screen switch 11
- second screen backlight 11
- second screen brightness control 11
- virtual numeric 11
- Windows 11

L

labels

- Bluetooth 14
- regulatory 14
- serial number 13
- service 13
- wireless certification 14
- WLAN 14

left side components 6

lights

- AC adapter and battery 6
- camera 7
- caps lock 9
- mute 9
- power 9
- RJ-45 (network) status 6
- second screen touch gestures 9
- Windows lock key 9

M

memory module

- removal 30
- spare part number 17
- spare part numbers 30

memory, product description 1

microphone

- product description 2

model name 1

mute light, identifying 9

N

network connector door

- removal 44
- spare part number 17, 44

network jack, identifying 6

O

OMEN key 14

OMEN key, identifying 11

operating system, product description 3

Optane Memory Module

- removal 29
- spare part numbers 29

P

packaging guidelines 25

ports

- HDMI 6
- product description 2
- USB SuperSpeed port with HP Sleep and Charge 5, 6
- USB Type-C power connector and Thunderbolt port with HP Sleep and Charge 5

power button board

- removal 40
- spare part number 17, 40

power button board cable, spare part number 40

power button, identifying 10

power connector

- identifying 5, 6

power connector cable

- removal 39
- spare part number 17, 39

power cord

- requirements for all countries 70
- requirements for specific countries and regions 71
- set requirements 70
- spare part numbers 20

power lights, identifying 9

power requirements, product description 3

processor, product description 1

product description

- audio 2
- display panel 1
- graphics 1
- internal card expansion 3
- keyboard/pointing devices 3
- memory 1
- microphone 2
- operating system 3
- ports 2
- power requirements 3
- processors 1
- product name 1
- RJ-45 (network) jack 2
- security 3
- serviceability 4
- storage 2
- video 2
- wireless networking 2

product name 1

product name and number, computer 13

R

recovery 67

- discs 68
- HP Recovery partition 68
- media 68
- USB flash drive 68

recovery media

- creating using HP Cloud Recovery Download Tool 67
- creating using Windows tools 67

regulatory information

- regulatory label 14
- wireless certification labels 14

Remote HP PC Hardware Diagnostics

UEFI settings

- customizing 65
- using 65

removal/replacement

- procedures 26
- removal/replacement procedures 31

restoring 67

right side components 5

RJ-45 (network) jack, identifying 6

RJ-45 (network) jack, product description 2

RJ-45 (network) status lights,
identifying 6

S

screen switch key, identifying 11
Screw Kit, spare part number 20
second display
 spare part number 18
second display panel
 removal 48
 spare part number 48
second display transfer board
 removal 38
 spare part numbers 38
second display transfer board, spare
 part number 38
second screen backlight key,
 identifying 11
second screen brightness control key,
 identifying 11
Second screen touch gestures light,
 identifying 9
second screen, identifying 10
second screen, using 15
security, product description 3
serial number, computer 13
service labels, locating 13
serviceability, product description 4
solid-state drive
 removal 29
 spare part number 17
 spare part numbers 29
speakers
 identifying 12
 removal 32
 spare part number 17, 32
special keys, using 11
static electricity 23
storage, product description 2
system board
 removal 41
 spare part numbers 41
system restore point, creating 67

T

thermal material 31
thermal shield
 removal 45
 spare part number 45

Thunderbolt port with HP Sleep and
 Charge, identifying USB Type-C 5
touchpad buttons
 identifying 8
touchpad cable
 removal 47
 spare part number 17, 47
touchpad cable, spare part number
 17
touchpad zone, identifying 8
transporting guidelines 25
traveling with the computer 14

U

USB SuperSpeed port with HP Sleep
 and Charge, identifying 5, 6
USB Type-C power connector and
 Thunderbolt port with HP Sleep and
 Charge, identifying 5

V

vent, identifying 5
vents, identifying 12
video, product description 2
virtual numeric keypad key,
 identifying 11

W

webcam
 spare part number 54
webcam module
 removal 54
webcam/microphone module
 spare part number 19
Windows
 backup 67
 recovery media 67
 system restore point 67
Windows key, identifying 11
Windows lock key light, identifying
 9
Windows tools, using 67
wireless antennas
 spare part number 58
wireless certification label 14
wireless networking, product
 description 2
WLAN antennas, identifying 7
WLAN device 14
WLAN label 14
workstation guidelines 22