



HP Pavilion 15 Laptop PC (model numbers 15-cd001 through 15-cd099)

Maintenance and Service Guide
**IMPORTANT! This document is intended for
HP authorized service providers only.**

© Copyright 2017 Hewlett-Packard
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. AMD and AMD Radeon are trademarks of Advanced Micro Devices, Inc. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2017

Document Part Number: 925117-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows 10. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows 10 functionality. See for <http://www.microsoft.com> details.

Safety warning notice


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Product description	1
2 Getting to know your computer	5
Locating hardware	5
Locating software	5
Display	6
Buttons and speakers	7
Lights	8
Special keys	9
TouchPad	10
Left side	11
Right side	12
Bottom	14
3 Illustrated parts catalog	15
Locating the serial number, model number, product number, and warranty information	15
Computer components	16
Display assembly components	26
Miscellaneous parts	28
4 Removal and replacement preliminary requirements	29
Tools required	29
Service considerations	29
Plastic parts	29
Cables and connectors	30
Drive handling	30
Grounding guidelines	31
Electrostatic discharge damage	31
Packaging and transporting guidelines	32
Workstation guidelines	32
5 Removal and replacement procedures	34
Component replacement procedures	34
Optical drive	34
Bottom cover	35
Battery	37

Hard drive	38
WLAN module	39
Solid-state drive	41
Memory module	42
USB port board	43
TouchPad cable	45
TouchPad	46
Fan	47
System board	48
Heat sink	52
USB port board cable	55
Display assembly	55
Speakers	62
Power connector cable	64

6 Computer Setup (BIOS), TPM, and HP Sure Start 65

Using Computer Setup	65
Starting Computer Setup	65
Navigating and selecting in Computer Setup	65
Restoring factory settings in Computer Setup	66
Updating the BIOS	67
Determining the BIOS version	67
Downloading a BIOS update	67
Changing the boot order using the f9 prompt	68
TPM BIOS settings (select products only)	69
Using HP Sure Start (select products only)	69

7 HP PC Hardware Diagnostics (UEFI) 70

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	71
---------------------------------------------------------------------	----

8 Specifications 72

9 Backing up and recovering 73

Creating recovery media and backups	73
Creating HP Recovery media (select products only)	74
Using Windows tools	75
Restore and recovery	75
Recovering using HP Recovery Manager	76
What you need to know before you get started	76
Using the HP Recovery partition (select products only)	77

Using HP Recovery media to recover	77
Changing the computer boot order	78
Removing the HP Recovery partition (select products only)	78
10 Backing up and recovering	73
Creating recovery media and backups	79
Creating HP Recovery media (select products only)	74
Using Windows tools	75
Restore and recovery	81
Recovering using HP Recovery Manager	76
What you need to know before you get started	82
Using the HP Recovery partition (select products only)	83
Using HP Recovery media to recover	83
Changing the computer boot order	78
Removing the HP Recovery partition (select products only)	78
11 Power cord set requirements	85
Requirements for all countries	85
Requirements for specific countries and regions	85
12 Recycling	87
Index	88

1 Product description

Category	Description
Product Name	HP Pavilion 15 Laptop PC (model numbers 15-cd001 through 15-cd099)
Processors	<ul style="list-style-type: none">• AMD® A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W)• AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W)• AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W)• AMD A6-9220P 2.50-GHz (turbo up to 2.90-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W)
Chipset	AMD Integrated soldered-on-circuit (SoC) fusion control hub (FCH)
Graphics	<p>Switchable discrete graphics:</p> <p>AMD Radeon™ 530M R17M-M1-70 (Meso S3 Pro) with up to 4096-MB of dedicated video memory (256-MB×16 DDR3×8 pieces, 1.5 V/1GHz, 64-bit, S3 package; available only on computer models equipped with an AMD A12-9720P or AMD A10-9620P processor)</p> <p>AMD Radeon 530M R17M-M1-70 (Meso S3 Pro) with up to 2048-MB of dedicated video memory (256-MB×16 DDR3×4 pieces, 1.5 V/1GHz, 64-bit, S3 package; available only on computer models equipped with an AMD A12-9720P, AMD A10-9620P, or AMD A9-9420P processor)</p> <p>Support for Dual Graphics: AMD Radeon 535DX Dual Graphics (available only on computer models equipped with an AMD A12-9720P or AMD A10-9620P processor)</p> <p>Internal graphics:</p> <ul style="list-style-type: none">• AMD Radeon R7 Graphics (available only on computer models equipped with an AMD A12-9720P processor)• AMD Radeon R5 Graphics (available only on computer models equipped with an AMD A10-9620P or AMD A9-9420P processor)• AMD Radeon R4 Graphics (available only on computer models equipped with an AMD A6-9220P) <p>Support for dynamic scaling</p> <p>Support for HD decode, DX12, and high-definition multimedia interface (HDMI)</p> <p>Support for PX7</p>
Panel	<ul style="list-style-type: none">• 15.6-in, full high-definition (FHD), white light-emitting (WLED), BrightView (1920×1080), slim-flat (3.2-mm), UWVA, eDP, 220 nits, 16:9 ultra wide aspect ratio, TouchScreen display assembly• 15.6-in, high-definition (HD), WLED, BrightView (1366×768), slim-flat (3.2-mm), SVA, eDP, 200 nits, 16:9 ultra wide aspect ratio, TouchScreen display assembly• 15.6-in, FHD, WLED, AntiGlare (1920×1080), slim-flat (3.2-mm), UWVA, eDP, 220 nits, 16:9 ultra wide aspect ratio non-TouchScreen display assembly• 15.6-in, FHD, WLED, BrightView (1920×1080), slim-flat (3.2-mm), UWVA, eDP, 220 nits, 16:9 ultra wide aspect ratio non-TouchScreen display assembly• 15.6-in, FHD, WLED, AntiGlare (1920×1080), slim-flat (3.2-mm), SVA, eDP, 220 nits, 16:9 ultra wide aspect ratio non-TouchScreen display assembly

Category	Description
Panel <i>(continued)</i>	<ul style="list-style-type: none"> 15.6-in, HD, WLED, AntiGlare (1366×768), slim-flat (3.2-mm), SVA, eDP, 220 nits, 16:9 ultra wide aspect ratio non-TouchScreen display assembly 15.6-in, HD, WLED, BrightView (1366×768), slim-flat (3.2-mm), SVA, eDP, 220 nits, 16:9 ultra wide aspect ratio non-TouchScreen display assembly
Memory	<p>Two SODIMM memory module slots, non-customer-accessible/non-upgradable</p> <p>Supports up to 16-GB of system memory</p> <p>DDR4-1866 dual channel support (DDR4-2400 downgrade to DDR4-1866)</p> <p>DDR4-1866 single channel support (DDR4-2400 downgrade to DDR4-1866)</p> <p>Supports the following configurations:</p> <ul style="list-style-type: none"> 16384-MB (8192-MB × 2) 12288-MB (8192-MB + 4096-MB) 8192-MB (8192-MB × 1 or 4096-MB × 2) 6144-MB (4096-MB × 1 + 2048-MB × 1) 4096-MB (4096-MB × 1 or 2048-MB × 2)
Storage	<p>Support for hard drive and solid-state drive</p> <p>Hard drive:</p> <p>Support for 6.35-cm (2.5-in) hard drives in 7.2-mm (.28 in) and 9.5-mm (.37 in) thicknesses (all hard drives use the same bracket)</p> <p>Support for Accelerometer hard drive protection</p> <p>Support for the following single hard drive configurations:</p> <ul style="list-style-type: none"> 2-TB, 5400-rpm, 9.5-/7.2-mm 1-TB, 5400-rpm, 9.5-/7.2-mm 500-GB, 5400-rpm, 7.0-mm <p>Solid-state drive:</p> <ul style="list-style-type: none"> 512-GB, M.2 SATA-3 solid-state drive with triple-level cell (TLC) 256-GB, M.2 SATA-3 solid-state drive 128-GB, M.2 SATA-3 solid-state drive <p>Support for the following dual-storage configurations (available only on computer models equipped with an AMD A9-9420P processor)</p> <p>1-TB, 5400-rpm, 9.5-/7.2-mm hard drive + 256-GB, M.2 SATA-3 solid-state drive</p> <p>1-TB, 5400-rpm, 9.5-/7.2-mm hard drive + 128-GB, M.2 SATA-3 solid-state drive</p>
Optical drive	<ul style="list-style-type: none"> Support for 9.0-mm tray load, SATA, fixed (not modular) Support for DVD±RW DL SuperMulti Drive Support for M-disc Support for zero-power optical drive
Audio and video	<p>Support for the following cameras:</p> <p>HP Wide Vision FHD infrared camera with indicator light and 2 infrared lights, USB 2.0, FHD hybrid BSI sensor, f2.2, WDR, 88° wide field of vision, 1080p by 30 frames per second</p>

Category	Description
Audio and video <i>(continued)</i>	<p>Support for the following cameras:</p> <p>HP Wide Vision HD camera with indicator light, USB 2.0, HD BSI sensor, f2.0, WDR, 88° wide field of vision, 720p by 30 frames per second</p> <p>Support for wide dynamic range (WDR)</p> <p>Support for B&O Play</p> <p>Support for B&O Play Audio Control</p> <p>Support for dual speakers</p> <p>Support for HP Audio Boost</p> <p>Support for dual-array digital microphones with appropriate beam-forming, echo-cancellation, noise-suppression software.</p>
Ethernet	Integrated 10/100/1000 network interface card (NIC)
Wireless	<p>WLAN:</p> <p>Integrated wireless local area network (WLAN) options by way of wireless module</p> <p>Single M.2/PCIe WLAN antenna built into display assembly</p> <p>Integrated wireless personal area network (PAN) supported by Bluetooth® 4.2 combo card</p> <p>Support for the following WLAN formats:</p> <ul style="list-style-type: none"> • Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro) • Intel Dual Band Wireless-AC 3168 802.11AC 1×1 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro) • Realtek RTL8723DE 802.11 bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter <p>Compatible with Miracast-certified devices</p>
External media cards	Micro-Secure Digital (SD®) media reader slot
Ports	<ul style="list-style-type: none"> • AC Smart Pin adapter plug • Audio-out (headphone)/audio-in (microphone) combo jack • HDMI v1.4 supporting up to 1920×1080 @ 60Hz • RJ-45 network • USB 3.x ports (2) • USB Type-C port
Keyboard/pointing devices	<p>Full-sized, island-style keyboard</p> <p>TouchPad requirements:</p> <ul style="list-style-type: none"> • ClickPad with image sensor • MultiTouch gestures enabled • Support for Modern TrackPad gestures • Taps enabled as default
Power requirements	<p>Support for a 3-cell, 41-WWhr, 3.6-Ahr, Li-ion battery</p> <p>Support for the following AC adapters:</p> <ul style="list-style-type: none"> • 65-W HP Smart AC adapter (non-PFC, EM, RC, 4.5-mm) for use in all countries and regions • 65-W AC adapter (non-PFC, S-3P, 4.5-mm) for use in all countries and regions

Category	Description
Power requirements <i>(continued)</i>	<ul style="list-style-type: none"> 65-W AC adapter (non-PFC, SB, 4.5-mm) for use only in Argentina 45-W HP Smart AC adapter (non-PFC, RC, 4.5-mm, non-slim) for use in all countries and regions 45-W AC adapter (non-PFC, SB, 4.5-mm, RA) for use only in Argentina <p>Support for a 1.00-m power cord with a C5 connector in 15 countries/regions.</p>
Security	<p>Security cable lock slot</p> <p>Support for Trusted Platform Module (TPM) 2.0</p>
Operating system	<p>Preinstalled:</p> <p>Windows 10</p> <p>Windows 10 Professional</p> <p>For developed market (ML):</p> <p>Windows 10 Home ML</p> <p>Windows 10 Home Plus ML</p> <p>For emerging market (EM/SL):</p> <ul style="list-style-type: none"> Windows 10 Home EM/SL Windows 10 Home Plus EM/SL Windows 10 Home Value Notebook EM/SL Windows 10 Home Value Notebook Select Geo EM/SL <p>For China market:</p> <p>CPPP Windows 10 Home China Language Edition</p> <p>CPPP Windows 10 Home High-End China Language Edition</p> <p>For Asia SEAP market (EM/SL):</p> <ul style="list-style-type: none"> SEAP Windows 10 Home EM/SL SEAP Windows 10 Home Value Notebook SEAP Windows 10 Home Plus FreeDOS 2.0
Serviceability	End user replaceable part: AC adapter

2 Getting to know your computer

Locating hardware

To find out what hardware is installed on the computer:

- ▲ Type `device manager` in the taskbar search box, and then select the **Device Manager** app.

A list displays all the devices installed on the computer.

For information about system hardware components and the system BIOS version number, press `fn+esc` (select products only).

Locating software


To find out what software is installed on your computer:

- ▲ Select the **Start** button.

– or –

Right-click the **Start** button, and then select **Programs and Features**.

Display

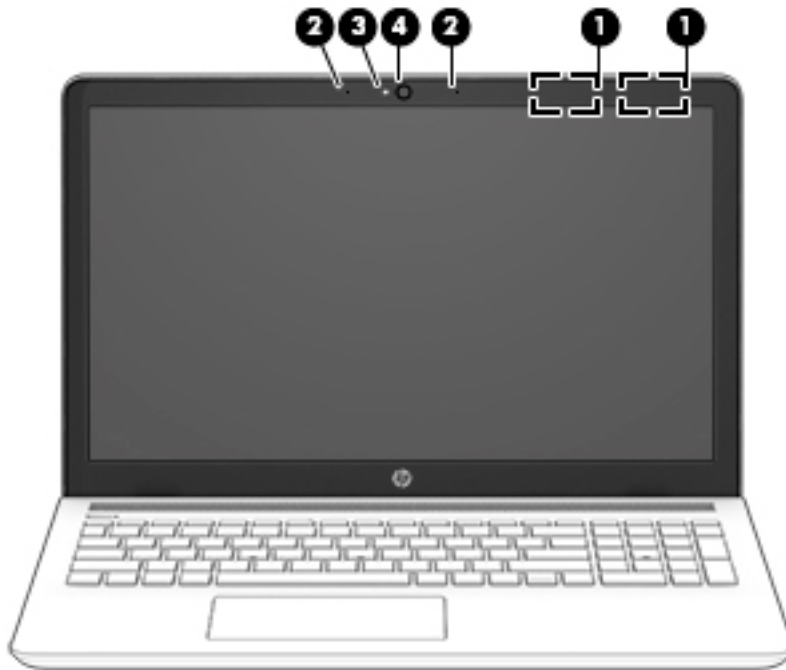

Item	Component	Description
(1)	WLAN antennas (2)*	Send and receive wireless signals to communicate with WLANs.
(2)	Internal microphones (2)	Record sound.
(3)	Camera light	On: One or more cameras are in use.
(4)	Camera	Allow you to video chat, record video, and record still images. Some cameras allow a facial recognition logon to Windows, instead of a password logon. NOTE: Camera functions vary depending on the camera hardware and software installed on the computer model.


*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.


For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:


- ▲ Select the **Start** button, select **HP Help and Support**, and then select **HP Documentation**.

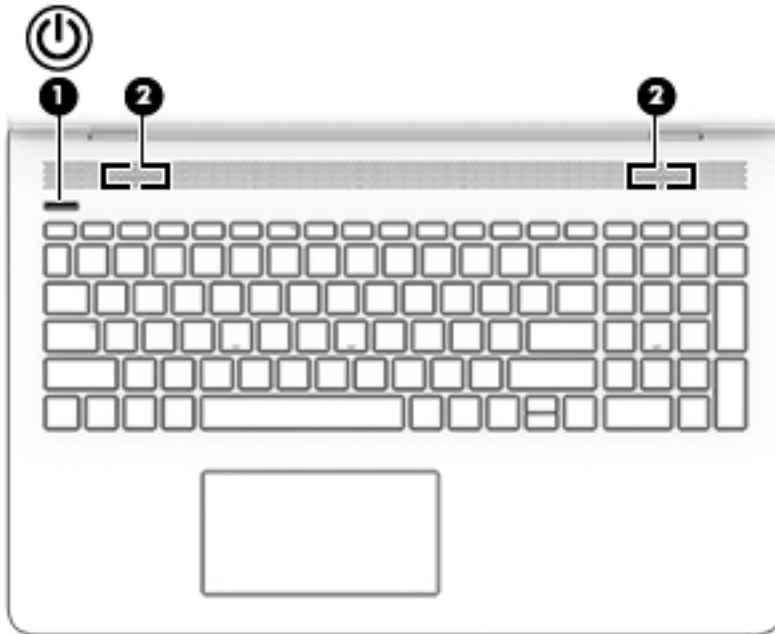

Buttons and speakers




Item	Icon	Component	Description
(1)		Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options.</p> <ul style="list-style-type: none">▲ Type <code>power</code> in the taskbar search box, and then select Power & sleep options. <p>– or –</p> <p>Right-click the Start button, and then select Power Options.</p>
(2)		Speakers	Produce sound.

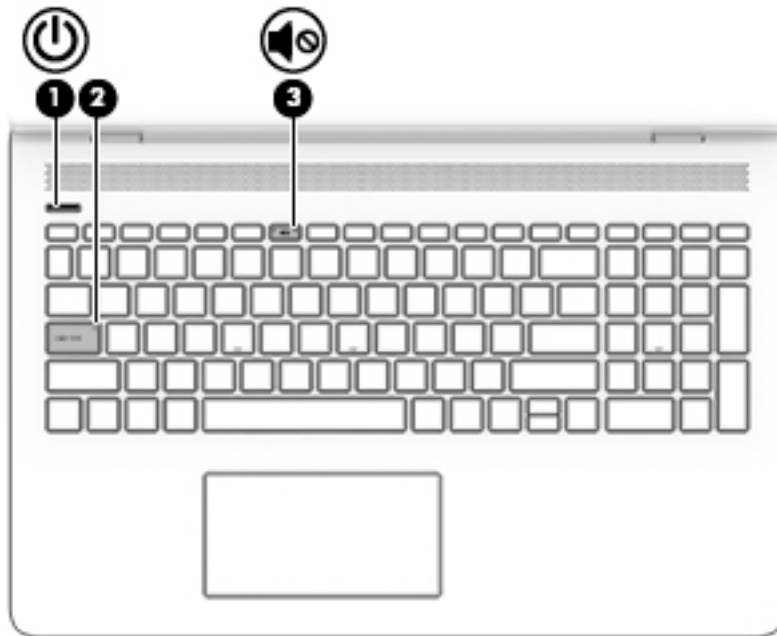
Lights



Item	Icon	Component	Description
(1)		Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components.• Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2)		Caps lock light	On: Caps lock is on, which switches the key input to all capital letters.
(3)		Mute light	<ul style="list-style-type: none">• On: Computer sound is off.• Off: Computer sound is on.

Special keys

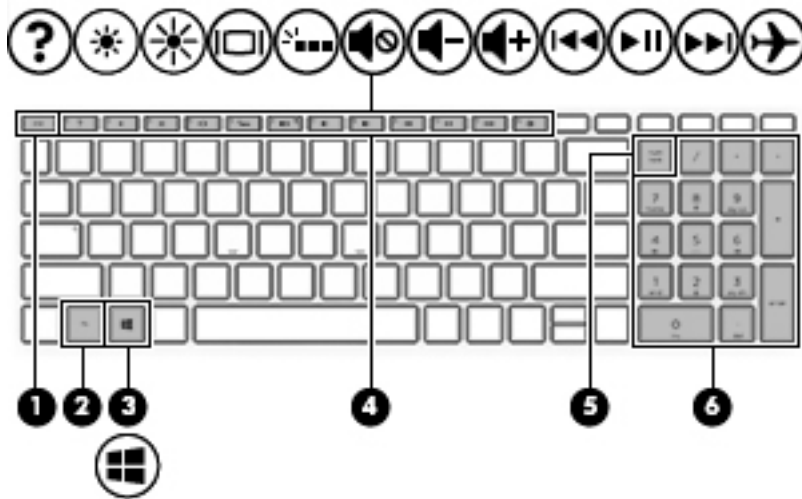


Item	Icon	Component	Description
(1)		esc key	Displays system information when pressed in combination with the fn key.
(2)		fn key	Displays system information when pressed in combination with another key.
(3)		Windows key	Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu.
(4)		Action keys	Execute frequently used system functions. NOTE: On select computer models, the f5 action key turns the keyboard backlight feature off or on.
(5)		num lock key	Alternates between the navigational and numeric functions on the integrated numeric keypad.
(6)		Integrated numeric keypad	A separate keypad to the right of the alphabet keyboard. When num lock is pressed, the keypad can be used like an external numeric keypad. NOTE: If the keypad function is active when the computer is turned off, that function is reinstated when the computer is turned back on.







TouchPad

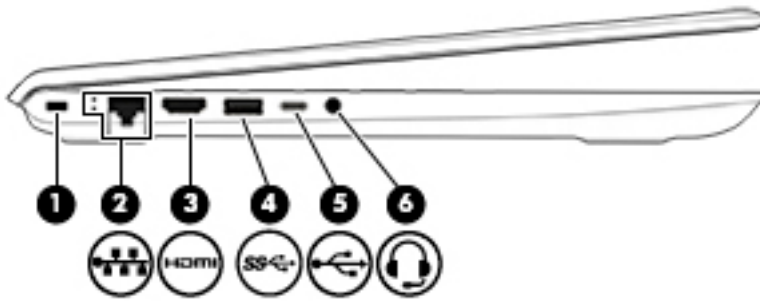


Item	Component	Description
(1)	TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen.
(2)	Left TouchPad button	Functions like the left button on an external mouse.
(3)	Right TouchPad button	Functions like the left button on an external mouse.





Left side

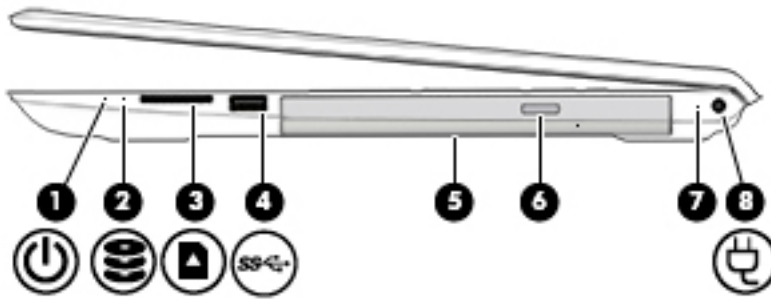


Item	Icon	Component	Description
(1)		Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2)		RJ-45 (network) jack/status lights	Connects a network cable. <ul style="list-style-type: none"> White: The network is connected. Amber: Activity is occurring on the network.
(3)		HDMI port	Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or an HDMI device.
(4)		USB 3.x SuperSpeed port	Connects USB devices, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.
(5)		USB Type-C SuperSpeed port	When the computer is on, connects and charges a USB device that has a Type-C connector, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer. NOTE: Cables and/or adapters (purchased separately) may be required.
(6)		Audio-out (headphone)/Audio-in (microphone) jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone devices. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i> . To access this guide: <ul style="list-style-type: none"> Select the Start menu, select HP Help and Support, and then select HP Documentation. NOTE: When a device is connected to the jack, the computer speakers are disabled.


Right side



Item	Icon	Component	Description
(1)		Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts power off to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2)		Drive light	<p>Blinking white: The hard drive is being accessed.</p> <p>Amber: HP 3D DriveGuard has temporarily parked the hard drive.</p>
(3)		Memory card reader	<p>Reads optional memory cards that enable you to store, manage, share, or access information.</p> <p>To insert a card:</p> <ol style="list-style-type: none"> Hold the card label-side up, with the connectors facing the computer. Insert the card into the memory card reader, and then press the card until it is firmly seated. <p>To remove a card:</p> <ul style="list-style-type: none"> Press in on the card, and then remove it from the memory card reader.
(4)		USB 3.x SuperSpeed port	Connects USB devices, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.
(5)		Optical drive (select products only)	Depending on your computer model, reads an optical disc or reads and writes to an optical disc.
(6)		Optical drive eject button (select products only)	Releases the optical drive disc tray.
(7)		AC adapter and battery light	<ul style="list-style-type: none"> White: The AC adapter is connected and the battery is fully charged. Blinking white: The AC adapter is disconnected and the battery has reached a low battery level. Amber: The AC adapter is connected and the battery is charging.

Item	Icon	Component	Description
(7)		AC adapter and battery light (<i>continued</i>)	<ul style="list-style-type: none">• Off: The battery is not charging.
(8)		Power connector	Connects an AC adapter.

Bottom

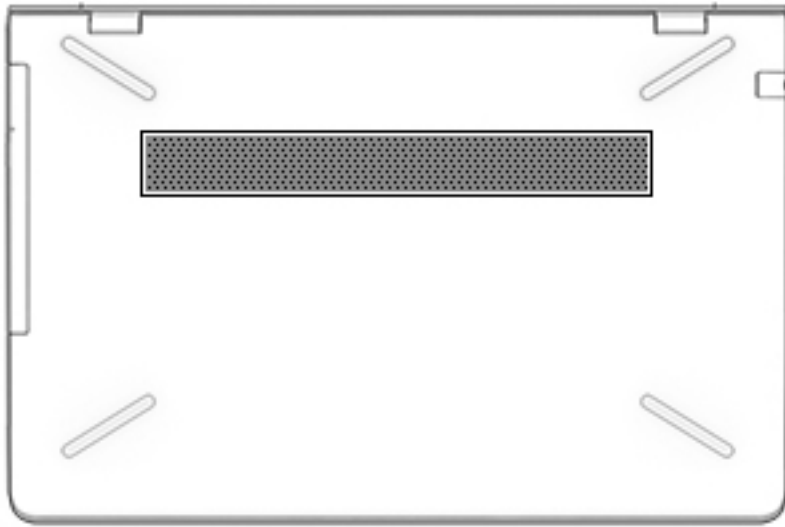

Component	Description
-----------	-------------

Vent

Enables airflow to cool internal components.


NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

3 Illustrated parts catalog


 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Locating the serial number, model number, product number, and warranty information

The serial number **(1)**, model number **(2)**, product number **(3)**, and warranty information **(4)** are located on the bottom of the computer. This information may be needed when travelling internationally or when contacting support.

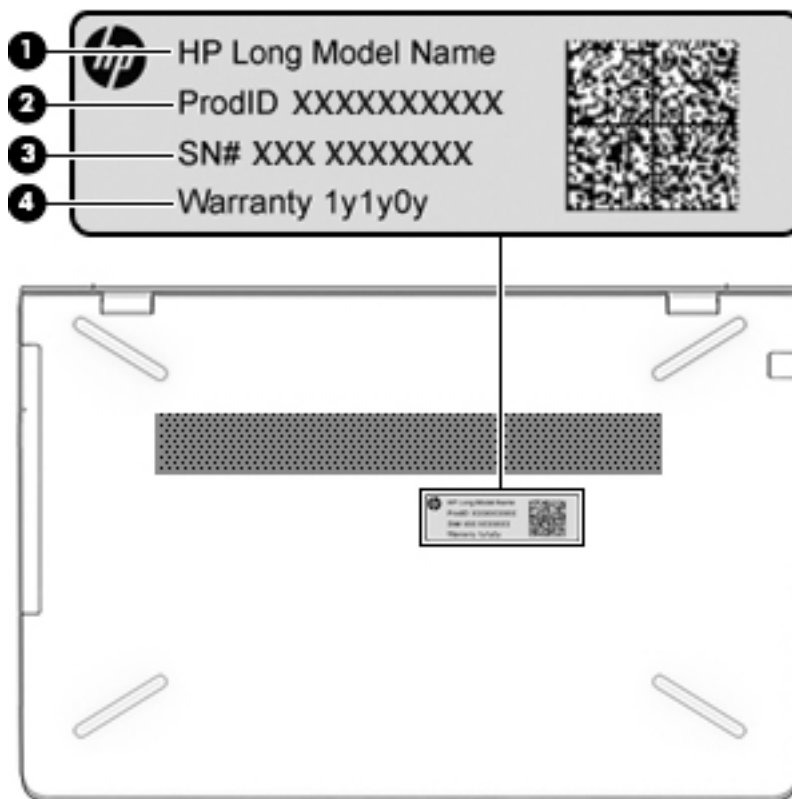

Computer components

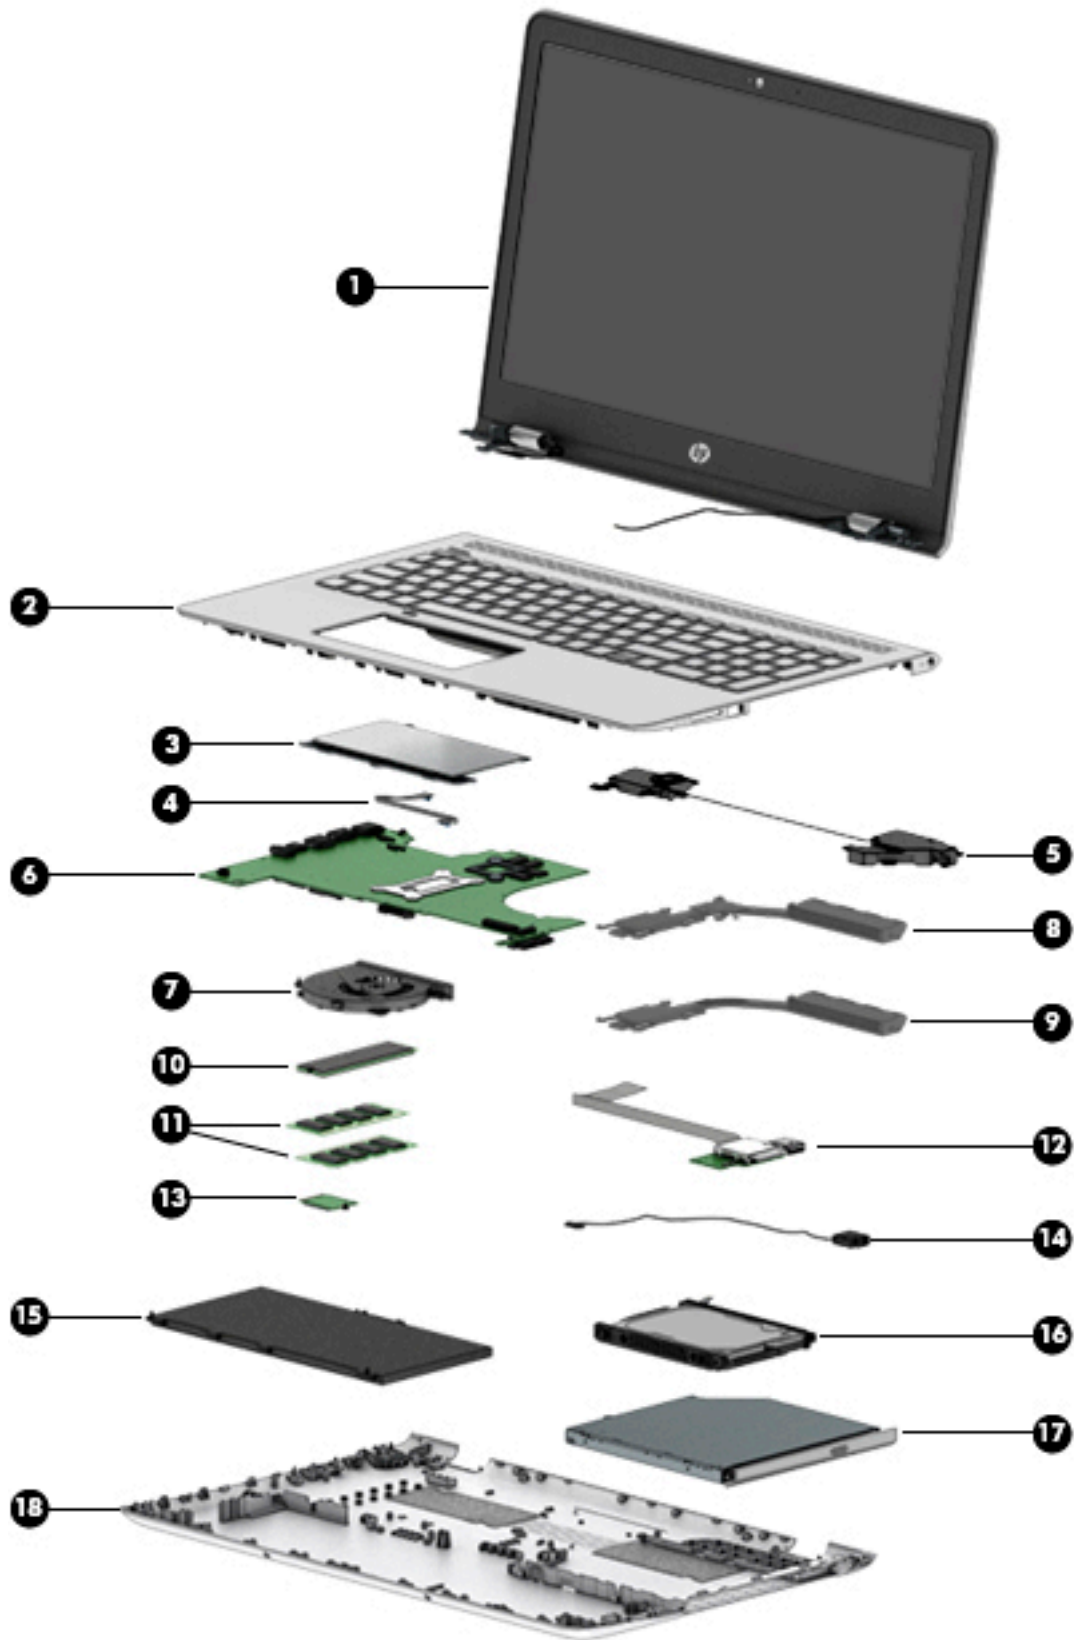

Item	Component	Spare part number
(1)	Display assembly: The display assembly is spared at the subcomponent level only. For more display assembly spare part information, see Display assembly components on page 26 .	
(2)	Keyboard/top cover in empress red finish with speaker grille in Pike silver finish with backlight (includes backlight cable and keyboard cable):	
	For use in Belgium	928507-A41
	For use in Bulgaria	928507-261
	For use in Canada	928507-DB1
	For use in the Czech Republic and Slovakia	928507-FL1
	For use in Denmark, Finland, and Norway	928507-DH1
	For use in France	928507-051
	For use in Germany	928507-041
	For use in Greece	928507-151
	For use in Hungary	928507-211
	For use in India	928507-002
	For use in Israel	928507-BB1
	For use in Italy	928507-061
	For use in Latin America	928507-161
	For use in the Netherlands	928507-B31
	For use in Portugal	928507-131
	For use in Romania	928507-271
	For use in Russia	928507-251
	For use in Saudi Arabia	928507-171
	For use in Slovenia	928507-BA1
	For use in South Korea	928507-AD1
	For use in Spain	928507-071
	For use in Switzerland	928507-BG1
	For use in Taiwan	928507-AB1
	For use in Thailand	928507-281
	For use in Turkey	928507-141
	For use in the United Kingdom	928507-031
	For use in the United States	928507-001
	Keyboard/top cover in empress red finish with speaker grille in Pike silver finish (includes keyboard cable):	
	For use in Belgium	928506-A41
	For use in Bulgaria	928506-261
	For use in Canada	928506-DB1

Item	Component	Spare part number
	For use in the Czech Republic and Slovakia	928506-FL1
	For use in Denmark, Finland, and Norway	928506-DH1
	For use in France	928506-051
	For use in Germany	928506-041
	For use in Greece	928506-151
	For use in Hungary	928506-211
	For use in India	928506-002
	For use in Israel	928506-BB1
	For use in Italy	928506-061
	For use in Latin America	928506-161
	For use in the Netherlands	928506-B31
	For use in Portugal	928506-131
	For use in Romania	928506-271
	For use in Russia	928506-251
	For use in Saudi Arabia	928506-171
	For use in Slovenia	928506-BA1
	For use in South Korea	928506-AD1
	For use in Spain	928506-071
	For use in Switzerland	928506-BG1
	For use in Taiwan	928506-AB1
	For use in Thailand	928506-281
	For use in Turkey	928506-141
	For use in the United Kingdom	928506-031
	For use in the United States	928506-001
	Keyboard/top cover in mineral silver finish with speaker grille in Pike silver finish with backlight (includes backlight cable and keyboard cable):	
	For use in Belgium	926859-A41
	For use in Bulgaria	926859-261
	For use in Canada	926859-DB1
	For use in the Czech Republic and Slovakia	926859-FL1
	For use in Denmark, Finland, and Norway	926859-DH1
	For use in France	926859-051
	For use in Germany	926859-041
	For use in Greece	926859-151
	For use in Hungary	926859-211

Item	Component	Spare part number
	For use in India	926859-002
	For use in Israel	926859-BB1
	For use in Italy	926859-061
	For use in Latin America	926859-161
	For use in the Netherlands	926859-B31
	For use in Portugal	926859-131
	For use in Romania	926859-271
	For use in Russia	926859-251
	For use in Saudi Arabia	926859-171
	For use in Slovenia	926859-BA1
	For use in South Korea	926859-AD1
	For use in Spain	926859-071
	For use in Switzerland	926859-BG1
	For use in Taiwan	926859-AB1
	For use in Thailand	926859-281
	For use in Turkey	926859-141
	For use in the United Kingdom	926859-031
	For use in the United States	926859-001
	Keyboard/top cover in mineral silver finish with speaker grille in Pike silver finish (includes keyboard cable):	
	For use in Belgium	926858-A41
	For use in Bulgaria	926858-261
	For use in Canada	926858-DB1
	For use in the Czech Republic and Slovakia	926858-FL1
	For use in Denmark, Finland, and Norway	926858-DH1
	For use in France	926858-051
	For use in Germany	926858-041
	For use in Greece	926858-151
	For use in Hungary	926858-211
	For use in India	926858-002
	For use in Israel	926858-BB1
	For use in Italy	926858-061
	For use in Latin America	926858-161
	For use in the Netherlands	926858-B31
	For use in Portugal	926858-131

Item	Component	Spare part number
	For use in Romania	926858-271
	For use in Russia	926858-251
	For use in Saudi Arabia	926858-171
	For use in Slovenia	926858-BA1
	For use in South Korea	926858-AD1
	For use in Spain	926858-071
	For use in Switzerland	926858-BG1
	For use in Taiwan	926858-AB1
	For use in Thailand	926858-281
	For use in Turkey	926858-141
	For use in the United Kingdom	926858-031
	For use in the United States	926858-001
	Keyboard/top cover in opulent blue finish with speaker grille in Pike silver finish with backlight (includes backlight cable and keyboard cable):	
	For use in Belgium	928440-A41
	For use in Bulgaria	928440-261
	For use in Canada	928440-DB1
	For use in the Czech Republic and Slovakia	928440-FL1
	For use in Denmark, Finland, and Norway	928440-DH1
	For use in France	928440-051
	For use in Germany	928440-041
	For use in Greece	928440-151
	For use in Hungary	928440-211
	For use in India	928440-002
	For use in Israel	928440-BB1
	For use in Italy	928440-061
	For use in Latin America	928440-161
	For use in the Netherlands	928440-B31
	For use in Portugal	928440-131
	For use in Romania	928440-271
	For use in Russia	928440-251
	For use in Saudi Arabia	928440-171
	For use in Slovenia	928440-BA1
	For use in South Korea	928440-AD1
	For use in Spain	928440-071

Item	Component	Spare part number
	For use in Switzerland	928440-BG1
	For use in Taiwan	928440-AB1
	For use in Thailand	928440-281
	For use in Turkey	928440-141
	For use in the United Kingdom	928440-031
	For use in the United States	928440-001
	Keyboard/top cover in opulent blue finish with speaker grille in Pike silver finish (includes keyboard cable):	
	For use in Belgium	928439-A41
	For use in Bulgaria	928439-261
	For use in Canada	928439-DB1
	For use in the Czech Republic and Slovakia	928439-FL1
	For use in Denmark, Finland, and Norway	928439-DH1
	For use in France	928439-051
	For use in Germany	928439-041
	For use in Greece	928439-151
	For use in Hungary	928439-211
	For use in India	928439-002
	For use in Israel	928439-BB1
	For use in Italy	928439-061
	For use in Latin America	928439-161
	For use in the Netherlands	928439-B31
	For use in Portugal	928439-131
	For use in Romania	928439-271
	For use in Russia	928439-251
	For use in Saudi Arabia	928439-171
	For use in Slovenia	928439-BA1
	For use in South Korea	928439-AD1
	For use in Spain	928439-071
	For use in Switzerland	928439-BG1
	For use in Taiwan	928439-AB1
	For use in Thailand	928439-281
	For use in Turkey	928439-141
	For use in the United Kingdom	928439-031
	For use in the United States	928439-001

Item	Component	Spare part number
	Keyboard/top cover in silk gold finish with speaker grille in Pike silver finish with backlight (includes backlight cable and keyboard cable):	
	For use in Belgium	928438-A41
	For use in Bulgaria	928438-261
	For use in Canada	928438-DB1
	For use in the Czech Republic and Slovakia	928438-FL1
	For use in Denmark, Finland, and Norway	928438-DH1
	For use in France	928438-051
	For use in Germany	928438-041
	For use in Greece	928438-151
	For use in Hungary	928438-211
	For use in India	928438-002
	For use in Israel	928438-BB1
	For use in Italy	928438-061
	For use in Latin America	928438-161
	For use in the Netherlands	928438-B31
	For use in Portugal	928438-131
	For use in Romania	928438-271
	For use in Russia	928438-251
	For use in Saudi Arabia	928438-171
	For use in Slovenia	928438-BA1
	For use in South Korea	928438-AD1
	For use in Spain	928438-071
	For use in Switzerland	928438-BG1
	For use in Taiwan	928438-AB1
	For use in Thailand	928438-281
	For use in Turkey	928438-141
	For use in the United Kingdom	928438-031
	For use in the United States	928438-001
	Keyboard/top cover in silk gold finish with speaker grille in Pike silver finish (includes keyboard cable):	
	For use in Belgium	928437-A41
	For use in Bulgaria	928437-261
	For use in Canada	928437-DB1
	For use in the Czech Republic and Slovakia	928437-FL1
	For use in Denmark, Finland, and Norway	928437-DH1


Item	Component	Spare part number
	For use in France	928437-051
	For use in Germany	928437-041
	For use in Greece	928437-151
	For use in Hungary	928437-211
	For use in India	928437-002
	For use in Israel	928437-BB1
	For use in Italy	928437-061
	For use in Latin America	928437-161
	For use in the Netherlands	928437-B31
	For use in Portugal	928437-131
	For use in Romania	928437-271
	For use in Russia	928437-251
	For use in Saudi Arabia	928437-171
	For use in Slovenia	928437-BA1
	For use in South Korea	928437-AD1
	For use in Spain	928437-071
	For use in Switzerland	928437-BG1
	For use in Taiwan	928437-AB1
	For use in Thailand	928437-281
	For use in Turkey	928437-141
	For use in the United Kingdom	928437-031
	For use in the United States	928437-001
(3)	TouchPad (does not include TouchPad bracket or TouchPad cable):	926853-001
	NOTE: The TouchPad spare part kit does not include the TouchPad bracket or TouchPad cable. The TouchPad bracket is available using spare part number 926851-001. The TouchPad cable is available using spare part number 926843-001.	
	TouchPad bracket (not illustrated)	926851-001
(4)	TouchPad cable (includes double-sided adhesive)	926843-001
(5)	Speakers (include cables)	926857-001
(6)	System board (includes processor and replacement thermal material):	
	Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and the Windows 10 operating system	926289-601
	Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and a non-Windows operating system	926289-001

Item	Component	Spare part number
	Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R7 UMA graphics subsystem, and the Windows 10 operating system	926286-601
	Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R7 UMA graphics subsystem, and a non-Windows operating system	926286-001
	Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and the Windows 10 operating system	926290-601
	Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and a non-Windows operating system	926290-001
	Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and the Windows 10 operating system	926288-601
	Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and a non-Windows operating system	926288-001
	Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and the Windows 10 operating system	926287-601
	Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and a non-Windows operating system	926287-001
	Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and the Windows 10 operating system	926921-601
	Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and a non-Windows operating system	926921-001
	Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and the Windows 10 operating system	926283-601
	Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and a non-Windows operating system	926283-001
	Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, hard drive and solid-state drive connectors, and the Windows 10 operating system	926284-601
	Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, hard drive and solid-state drive connectors, and a non-Windows operating system	926284-001
	Equipped with an AMD A6-9220P 2.50-GHz (turbo up to 2.90-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R4 UMA graphics subsystem, and the Windows 10 operating system	926285-601

Item	Component	Spare part number
	Equipped with an AMD A6-9220P 2.50-GHz (turbo up to 2.90-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R4 UMA graphics subsystem, and a non-Windows operating system	926285-001
	USB Type-C port bracket (not illustrated)	926849-001
(7)	Fan (includes cable)	926845-001
	Heat sink (includes replacement thermal material):	
(8)	For use only on computer models equipped with a graphics subsystem with discrete memory	926898-001
(9)	For use only on computer models equipped with a graphics subsystem with UMA memory	926846-001
(10)	Solid-state drive (M.2 SATA3; does not include solid-state drive cable, solid-state drive converter board, or solid-state drive holder):	
	512-GB, with TLC	763008-018
	256-GB	865902-021
	128-GB	827560-053
	NOTE: The solid-state drive spare part kit does not include the solid-state drive cable, solid-state drive converter board, or solid-state drive holder. The solid-state drive cable is available using spare part number 933617-001. The solid-state drive converter board is available using spare part number 926901-001. The solid-state drive holder is available using spare part number 926902-001.	
(11)	Memory modules (2, DDR4-2400, 1.2-V):	
	8-MB	862398-855
	4-MB	862397-855
	2-MB	864271-855
(12)	USB port board (includes power light actuator, hard drive light actuator, card reader slot, and USB port; does not include USB port board cable):	
	For use only on computer models equipped with an Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro)	926899-001
	For use only on computer models equipped with an Intel Dual Band Wireless-AC 3168 802.11AC 1×1 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro) or a Realtek RTL8723DE 802.11 bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter	926854-001
	USB port board cable (not illustrated, includes double-sided adhesive)	926842-001
(13)	WLAN module:	
	Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro)	901229-855
	Intel Dual Band Wireless-AC 3168 802.11AC 1×1 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro)	863934-855
	Realtek RTL8723DE 802.11 bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter	927230-855
(14)	Power connector cable	810327-007
(15)	Battery (3-cell, 41-WHr, 3.6-AHr, Li-ion)	920070-855
(16)	Hard drive (does not include hard drive bracket or hard drive cable):	
	2-TB, 5400-rpm, SATA, 7.0-mm hard drive	912487-855

Item	Component	Spare part number
	1-TB, 5400-rpm, SATA, 7.0-mm hard drive	778192-005
	500-GB, 5400-rpm, SATA, 7.0-mm hard drive	778186-005
	NOTE: The hard drive spare part kit does not include the hard drive bracket or the hard drive cable. The hard drive bracket is available using spare part number 926848-001. The hard drive cable is available using spare part number 926844-001	
(17)	DVD±RW DL SuperMulti Drive (does not include optical drive bezel or optical drive bracket)	920417-011
	NOTE: The optical drive spare part kit does not include the optical drive bezel or the optical drive bracket. The optical drive bezel is available using spare part number 926835-001. The optical drive bracket is available using spare part number 926850-001	
(18)	Bottom cover	926832-001
	Rubber Foot Kit (not illustrated, includes Mylar screw cover)	926855-001

Display assembly components

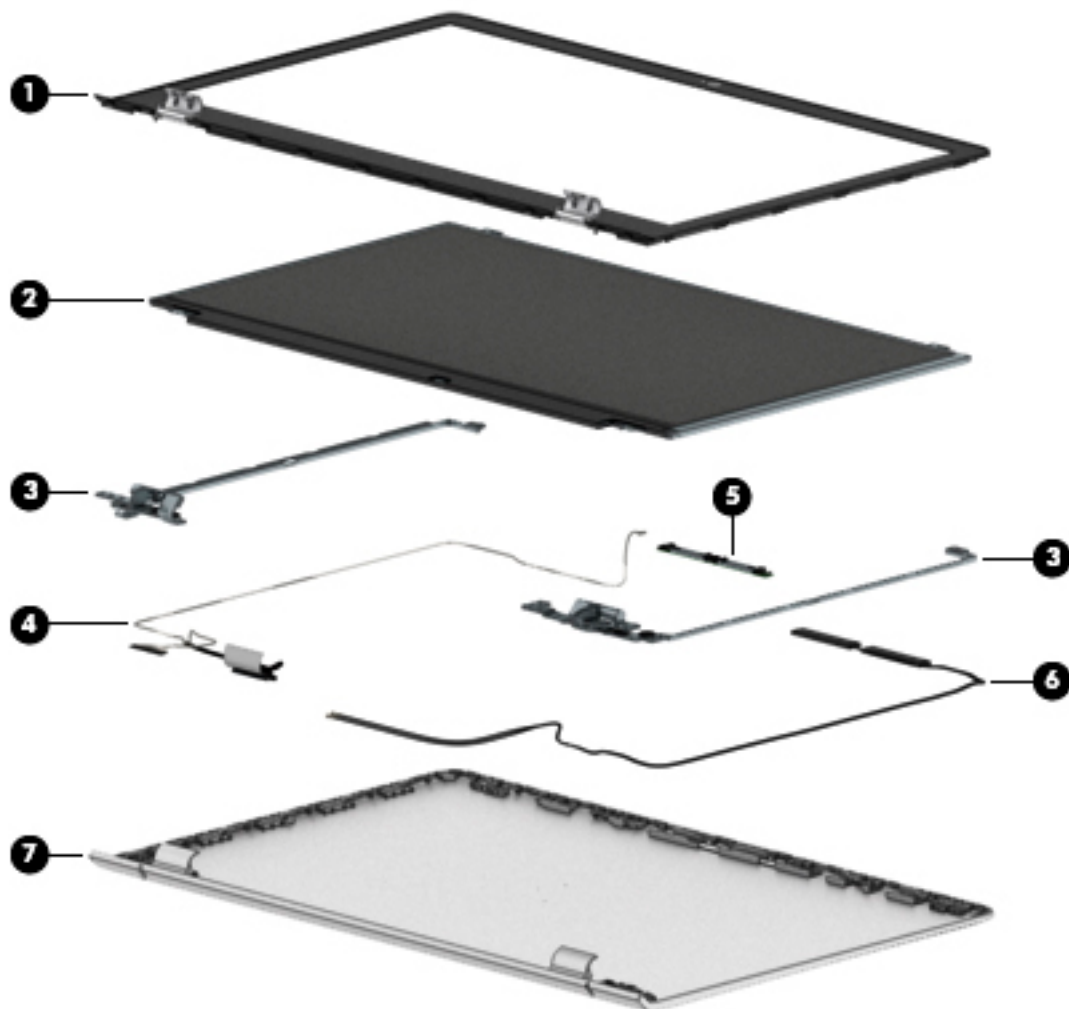

Item	Component	Spare part number
(1)	Display bezel:	
	For use on computer models equipped with a FHD infrared webcam	926834-001
	For use on computer models equipped with an HD non-infrared webcam	926833-001
(2)	Display panel:	
	15.6-in, FHD, BrightView (1920×1080), WLED, UWVA, TouchScreen	847651-005
	15.6-in, HD, BrightView (1366×768), WLED, SVA, TouchScreen	809612-016
	15.6-in, FHD, BrightView (1920×1080), WLED, UWVA, non-TouchScreen	842463-011
	15.6-in, FHD, AntiGlare (1920×1080), WLED, UWVA, non-TouchScreen	752920-018
	15.6-in, FHD, AntiGlare (1920×1080), WLED, SVA, non-TouchScreen	798933-014
	15.6-in, HD, BrightView (1366×768), WLED, SVA, non-TouchScreen	847654-010
	15.6-in, HD, AntiGlare (1366×768), WLED, SVA, non-TouchScreen	909185-008
(3)	Hinges (2, include left and right display hinges):	926852-001
(4)	Display panel cable (includes the webcam/microphone module cable)	
	For use on computer models equipped with an FHD display assembly and an FHD infrared webcam	926841-001
	For use on computer models equipped with an FHD display assembly and an HD non-infrared webcam	926838-001
	For use on computer models equipped with an HD display assembly and an FHD infrared webcam	926840-001
	For use on computer models equipped with an HD display assembly and an HD non-infrared webcam	926837-001
	For use on computer models equipped with an FHD/HD display assembly and an FHD infrared webcam	926839-001
	For use on computer models equipped with an FHD/HD display assembly and an HD non-infrared webcam	926836-001
(5)	Webcam/microphone module (includes Mylar and double-sided adhesive):	
	FHD infrared webcam/microphone module	926727-001
	HD non-infrared webcam/microphone module	919573-003
(6)	Wireless Antenna Kit (includes left and right wireless antenna cables and transceivers):	926826-001
(7)	Display back cover (includes left and right wireless antenna cables and transceivers and rubber padding and shielding):	
	In empress red finish	926830-001
	In mineral silver finish	926827-001
	In opulent blue finish	926829-001
	In silk gold finish	926828-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
65-W HP Smart AC adapter (non-PFC, EM, RC, 4.5-mm) for use only in India and the People's Republic of China	913691-850
65-W AC adapter (non-PFC, S-3P, 4.5-mm) for use in all countries and regions	710412-001
65-W AC adapter (non-PFC, SB, 4.5-mm) for use only in Argentina	710340-850
45-W HP Smart AC adapter (non-PFC, RC, 4.5-mm, non-slim) for use in all countries and regions	741553-850
45-W AC adapter (non-PFC, SB, 4.5-mm, RA) for use only in Argentina	741553-852
HP HDMI-to-VGA adapter	701943-001
HP USB-C-to-USB-A dongle	833960-001
Power cord (C5 connector, 1.00-m):	
For use in Argentina	920688-003
For use in Australia	920688-011
For use in Denmark	920688-007
For use in Europe	920688-005
For use in India	920688-016
For use in Israel	920688-008
For use in Italy	920688-002
For use in North America	920688-001
For use in the People's Republic of China	920688-014
For use in South Africa	920688-010
For use in South Korea	920688-013
For use in Switzerland	920688-009
For use in Taiwan	920688-015
For use in Thailand	920688-012
For use in the United Kingdom and Singapore	920688-006
Rubber Foot Kit (includes bottom cover rear feet)	926855-001
Screw Kit	927240-001

4 Removal and replacement preliminary requirements


Tools required

You will need the following tools to complete the removal and replacement procedures:


- Flat-bladed screw driver
- Magnetic screw driver
- Phillips P0 screw driver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

 **NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

 **CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing drive, place it in a static-proof bag.

Avoid exposing a drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive computerop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

5 Removal and replacement procedures

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

CAUTION: Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

CAUTION: This computer does not have user-replaceable parts. Only HP authorized service providers should perform the removal and replacement procedures described here. Accessing the internal part could damage the computer or void the warranty.

Component replacement procedures

NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating the serial number, model number, product number, and warranty information on page 15](#) for details.

NOTE: HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as 57 screws that must be removed, replaced, and/or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Optical drive

Description	Spare part number
DVD±RW DL SuperMulti Drive (does not include optical drive bezel or optical drive bracket)	920417-011

NOTE: The optical drive spare part kit does not include the optical drive bezel or the optical drive bracket. The optical drive bezel is available using spare part number 926835-001. The optical drive bracket is available using spare part number 926850-001

Before disassembling the computer, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.

Remove the optical drive:

1. Turn the computer upside down on a flat surface.
2. Position the computer with the front toward you.
3. Remove the Mylar screw cover **(1)**.

The screw cover is available in the Rubber Feet Kit, spare part number 926855-001.

4. Remove the Phillips PM2.0×10.7 screw **(2)** that secures the optical drive to the computer.
5. Remove the optical drive **(3)**.

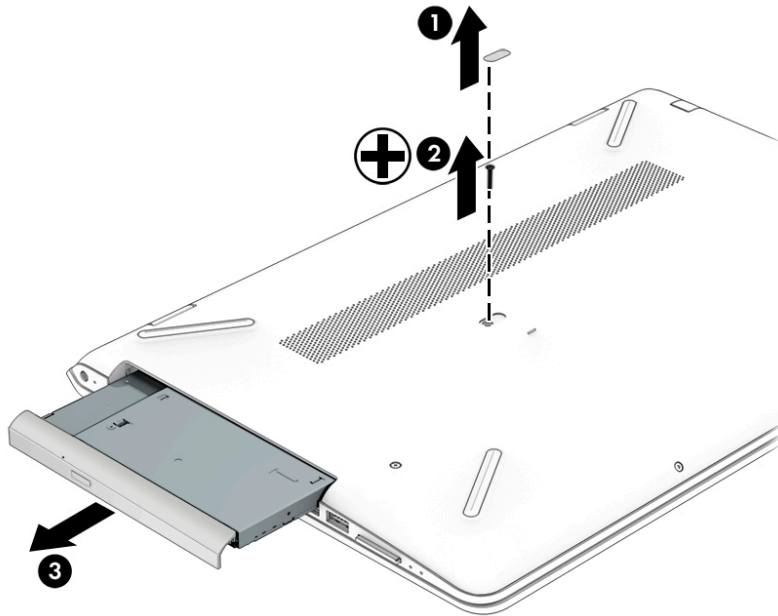

Reverse this procedure to install the optical drive.

Bottom cover

Description	Spare part number
Bottom cover	926832-001

Before removing the bottom cover, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).

Remove the bottom cover:


1. Remove the computer rubber feet **(1)**.

The rubber feet are available using spare part numbers 926855-001

2. Remove the following screws that secure the bottom cover to the computer:
 - (2) Four Phillips PM2.5×6.7 screws under the rear rubber feet
 - (3) Two Phillips PM2.0×10.7 screws in the middle of the bottom cover
 - (4) Two Phillips PM2.0×5.8 screws under the front rubber feet
 - (5) Two Phillips PM2.0×5.6 screws on the front edge

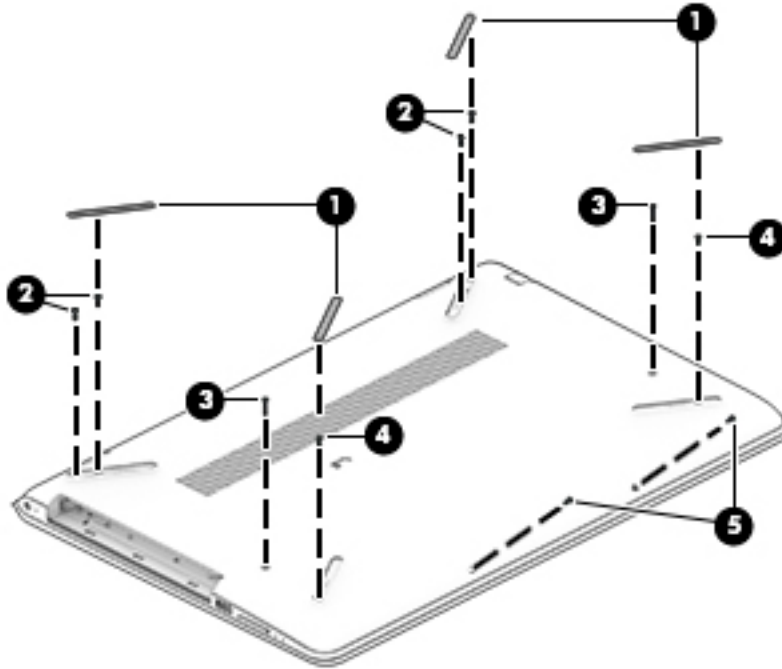

3. Insert a case utility tool (1) or similar thin, plastic tool into the display hinge areas of the bottom cover.
4. Separate the rear edge of the bottom cover (2) from the keyboard/top cover.
5. Insert a case utility tool (3) or similar thin, plastic tool into the optical drive area of the bottom cover.
6. Separate the tabs (4) built into the keyboard/top cover from the slots built into the bottom cover.
7. Remove the bottom cover (5).

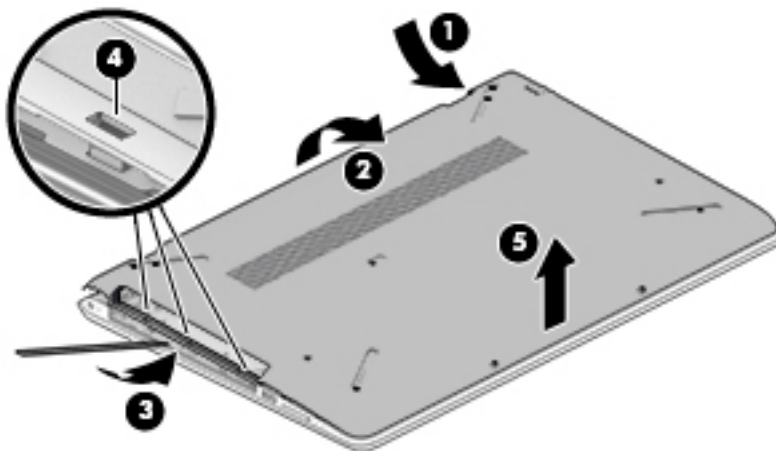

Reverse this procedure to install the bottom cover.

Battery


Description	Spare part number
3-cell, 41-WHr, 3.6-AHr, Li-ion battery	920070-855

Before removing the battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).

Remove the battery:

1. Remove the four Phillips PM2.0×5.7 screws **(1)** that secure the battery to the keyboard/top cover.
2. Remove the battery **(2)**.

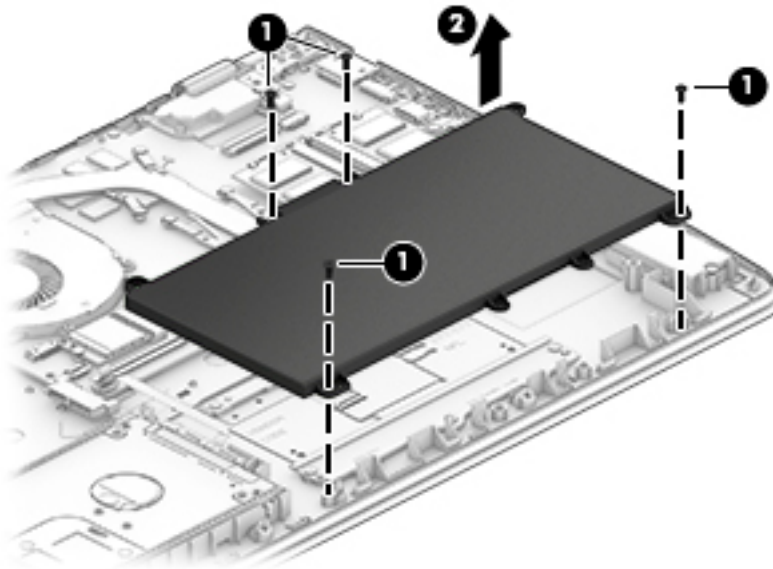

Reverse this procedure to install the battery.

Hard drive



NOTE: The hard drive spare part kit does not include the hard drive bracket or the hard drive cable. The hard drive bracket is available using spare part number 926848-001. The hard drive cable is available using spare part number 926844-001


Description	Spare part number
2-TB, 5400-rpm, SATA, 7.2-mm hard drive	912487-855
1-TB, 5400-rpm, SATA, 7.2-mm hard drive	778192-005
500-GB, 5400-rpm, SATA, 7.0-mm hard drive	778186-005

Before removing the hard drive, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).

Remove the hard drive:

1. Release the zero insertion force (ZIF) connector (**1**) to which the hard drive cable is connected, and then disconnect the hard drive cable from the system board.
2. Lift the right side of the hard drive (**2**) to release it from the hard drive bay, and then remove the hard drive.

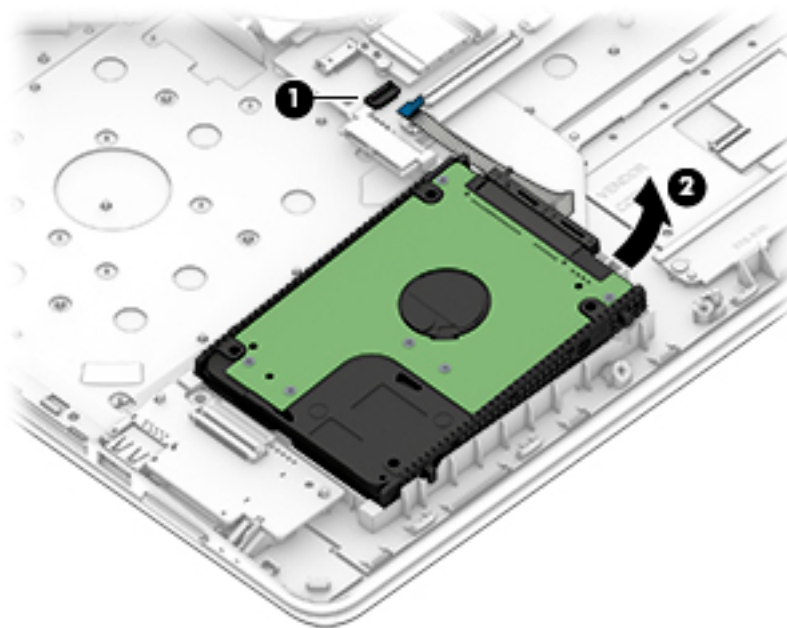

3. If it is necessary to disassemble the hard drive, remove the hard drive brackets **(1)** from the hard drive, and then disconnect the hard drive cable **(2)** from the hard drive.

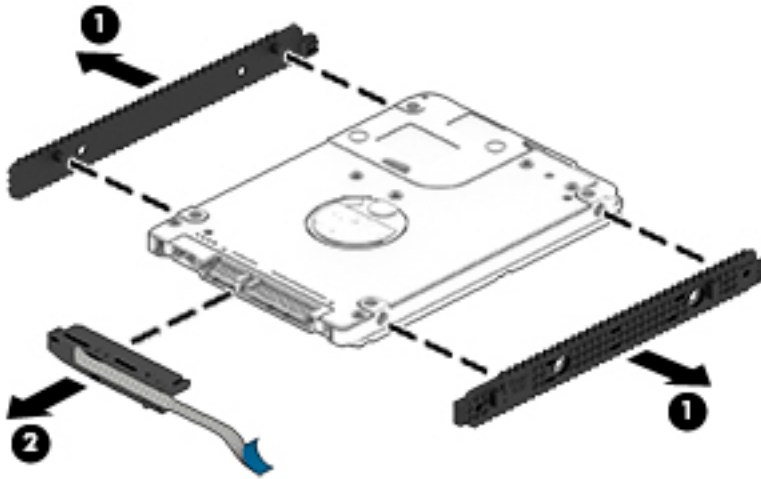

Reverse this procedure to reassemble and install the hard drive.

WLAN module

Description	Spare part number
Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro)	901229-855
Intel Dual Band Wireless-AC 3168 802.11 AC 1×1 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro)	863934-855
Realtek RTL8723DE 802.11 bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter	927230-855


CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).


Remove the WLAN module:

1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.

 **NOTE:** The WLAN antenna cable labeled "1/MAIN" connects to the WLAN module "Main" terminal. The WLAN antenna cable labeled "2/AUX" connects to the WLAN module "Aux" terminal.


2. Remove the Phillips PM2.0×2.3 screw **(2)** that secures the WLAN module to the computer. (The WLAN module tilts up.)
3. Remove the WLAN module **(3)** by pulling the module away from the slot at an angle.

 **NOTE:** WLAN modules are designed with a notch to prevent incorrect insertion.

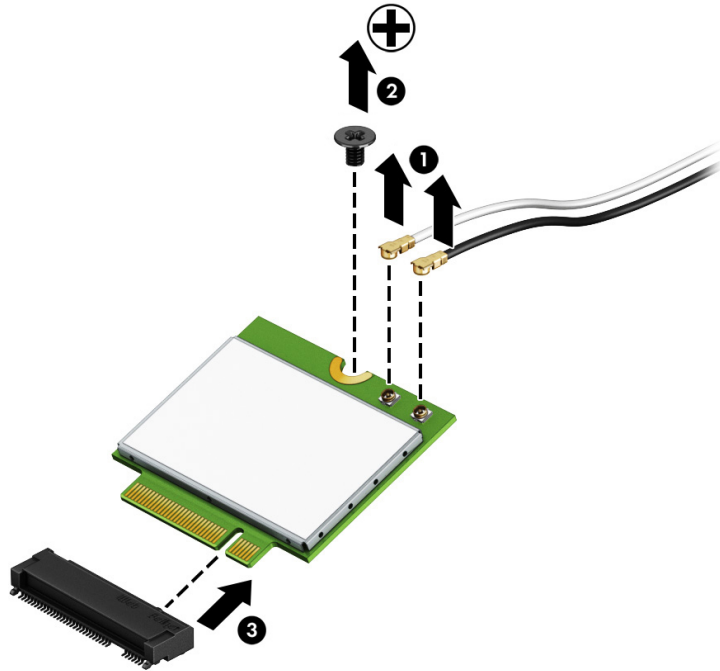

Reverse this procedure to install the WLAN module.

Solid-state drive

 **NOTE:** The solid-state drive spare part kit does not include the solid-state drive cable, solid-state drive converter board, or solid-state drive holder. The solid-state drive cable is available using spare part number 933617-001. The solid-state drive converter board is available using spare part number 926901-001. The solid-state drive holder is available using spare part number 926902-001.


Description	Spare part number
512-GB, M.2 SATA-3, solid-state drive with TLC	763008-018
256-GB, M.2 SATA-3, solid-state drive	865902-021
128-GB, M.2 SATA-3, solid-state drive	827560-053


Before removing the solid-state drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).

Remove the solid-state drive:


1. Remove the Phillips PM2.0×2.3 screw **(1)** that secures the drive to the system board.
2. Remove the drive **(2)** by pulling it away from the connector.

 **NOTE:** Solid-state drives are designed with notches to prevent incorrect insertion.

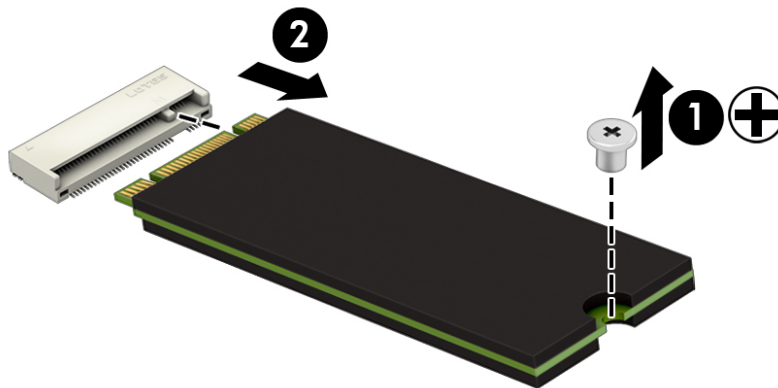

Reverse this procedure to reassemble and install the solid-state drive.


Memory module

 **NOTE:** Primary and expansion memory is installed in a side-by-side configuration in the bottom of the computer. If only one memory module is installed, it must be installed in the socket labeled 1.

Description	Spare part number
8-MB, DDR4-2400, 1.2-V	862398-855
4-MB, DDR4-2400, 1.2-V	862397-855
2-MB, DDR4-2400, 1.2-V	864271-855

Update BIOS before adding memory modules

Before adding new memory, make sure you update the computer to the latest BIOS.

 **CAUTION:** Failure to update the computer to the latest BIOS prior to installing new memory may result in various system problems.

To update BIOS:

1. Navigate to www.hp.com.
2. Click **Support & Drivers**, and then click **Drivers & Software**.
3. In the **Enter a product name/number** box, type the computer model information, and then click **Search**.
4. Click the link for the computer model.
5. Select the operating system, and then click **Next**.
6. Under **Step 2: Select a Download**, click the **BIOS** link.
7. Click the link for the most recent BIOS.
8. Click the **Download** button, and then follow the on-screen instructions.


Before removing the memory module, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).

Remove the memory module:

1. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The edge of the module opposite the slot rises away from the computer.)


2. Remove the memory module (2) by pulling the module away from the slot at an angle.

 **NOTE:** Memory modules are designed with a notch to prevent incorrect insertion.

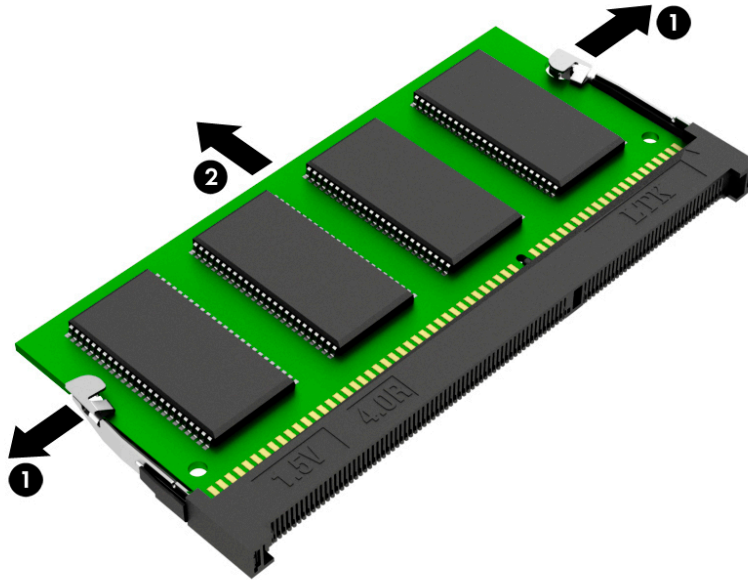

Reverse this procedure to install a memory module.

USB port board

 **NOTE:** The USB port board spare part kit does not include the USB port board cable. The USB port board cable is available using spare part numbers 926842-001.


Description	Spare part number
For use only on computer models equipped with an Intel Dual Band Wireless-AC 7265 802.11 AC 2×2 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro; includes power light actuator, hard drive light actuator, card reader slot, and USB port)	926899-001
For use only on computer models equipped with an Intel Dual Band Wireless-AC 3168 802.11 AC 1×1 WiFi + Bluetooth 4.2 Combo Adapter (non-vPro) or a Realtek RTL8723DE 802.11 bgn 1×1 WiFi + Bluetooth 4.2 Combo Adapter (includes power light actuator, hard drive light actuator, card reader slot, and USB port)	926854-001

Before removing the USB port board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).


Remove the USB port board:

1. Release the ZIF connector **(1)** to which the USB port board cable is connected, and then disconnect the USB port board cable from the USB port board.
2. Remove the USB port board **(2)**.

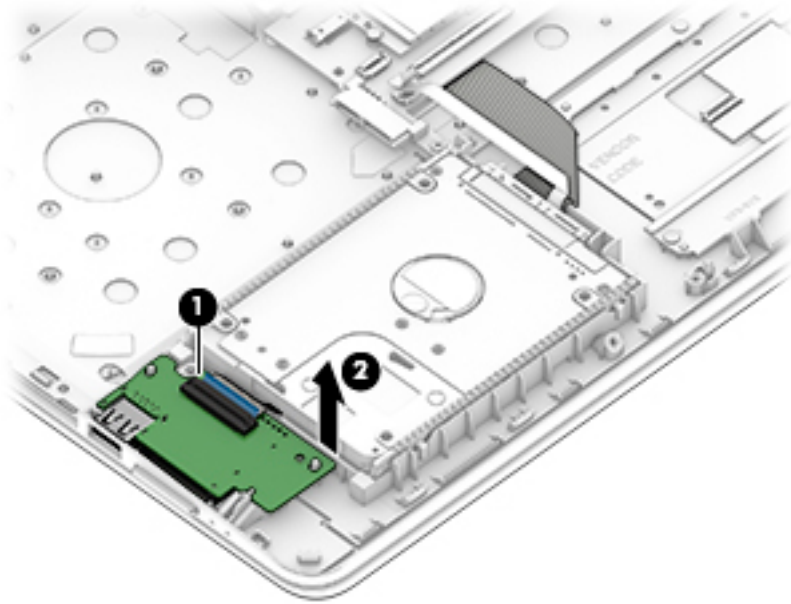

Reverse this procedure to install the USB port board.

TouchPad cable


 **NOTE:** The TouchPad spare part kit does not include the TouchPad cable. The TouchPad cable is available using spare part number 926843-001.

Before removing the TouchPad cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).


Remove the TouchPad cable:

1. Release the ZIF connector **(1)** to which TouchPad cable is connected, and then disconnect the TouchPad cable from the system board.
2. Release the ZIF connector **(2)** to which TouchPad cable is connected, and then disconnect the TouchPad cable from the TouchPad.
3. Remove the TouchPad cable **(3)**.

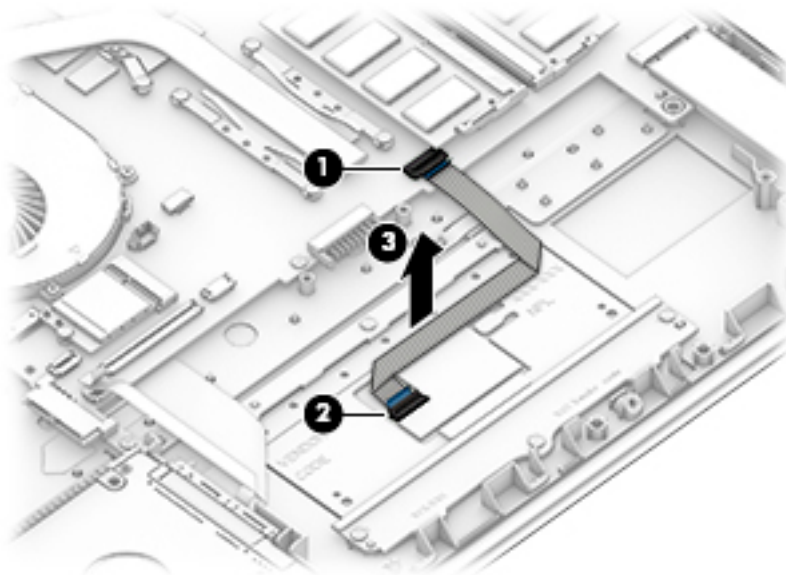

Reverse this procedure to install the TouchPad cable.

TouchPad

 **NOTE:** The TouchPad spare part kit does not include the TouchPad bracket or TouchPad cable. The TouchPad bracket is available using spare part number 926851-001. The TouchPad cable is available using spare part number 926843-001.


Description	Spare part number
TouchPad (does not include TouchPad bracket or TouchPad cable)	926853-001

Before removing the TouchPad, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).

Remove the TouchPad:

1. Release the ZIF connector **(1)** to which TouchPad cable is connected, and then disconnect the TouchPad cable from the system board.
2. Remove the three Phillips PM2.0×2.2 broad head screws **(2)** that secure the TouchPad to the keyboard/top cover.
3. Remove the three Phillips PM2.0×2.9 screws **(3)** that secure the TouchPad and TouchPad bracket to the keyboard/top cover.
4. Remove the TouchPad bracket **(4)**.
5. Remove the TouchPad **(5)**.

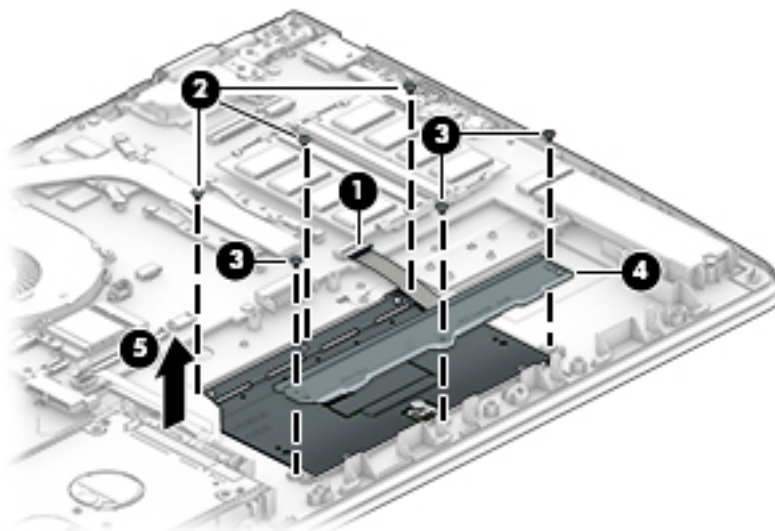

Reverse this procedure to install the TouchPad.

Fan


Description	Spare part number
Fan (includes cable)	926845-001

Before removing the fan, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).

Remove the fan:

1. Disconnect the fan cable **(1)** from the system board.
2. Remove the three Phillips PM2.0×5.7 screws **(2)** that secure the fan to the keyboard/top cover.
3. Remove the fan **(3)**.

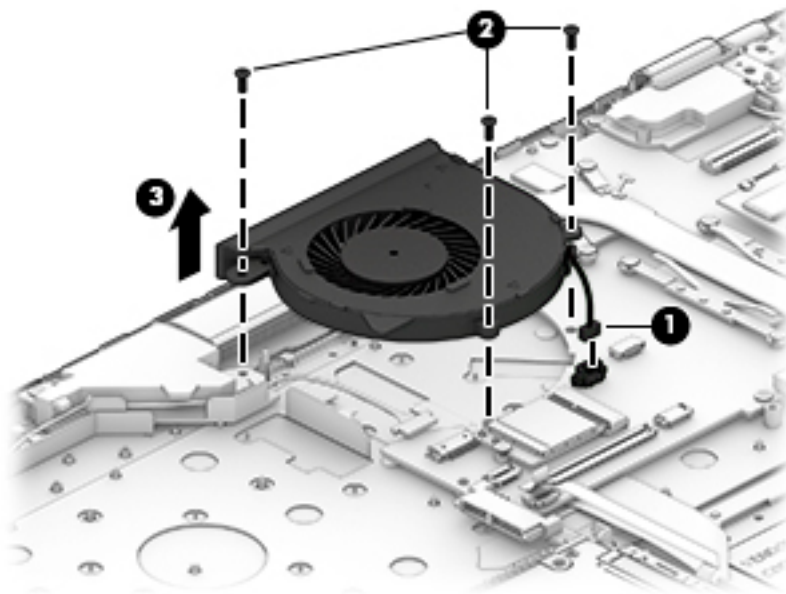

Reverse this procedure to install the fan.

System board



NOTE: All system board spare part kits include a processor and replacement thermal material.

Description	Spare part number
Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and the Windows 10 operating system	926289-601
Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and a non-Windows operating system	926289-001
Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R7 UMA graphics subsystem, and the Windows 10 operating system	926286-601
Equipped with an AMD A12-9720P 2.70-GHz (turbo up to 3.66-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R7 UMA graphics subsystem, and a non-Windows operating system	926286-001
Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and the Windows 10 operating system	926290-601
Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 4096-MB of discrete video memory, and a non-Windows operating system	926290-001
Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and the Windows 10 operating system	926288-601
Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and a non-Windows operating system	926288-001
Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and the Windows 10 operating system	926287-601
Equipped with an AMD A10-9620P 2.50-GHz (turbo up to 3.40-GHz) quad core processor (1866-MHz FSB, 2.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and a non-Windows operating system	926287-001
Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and the Windows 10 operating system	926921-601
Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon 530 R17M-M1-70 (Meso S3 Pro) hybrid graphics subsystem with up to 2048-MB of discrete video memory, and a non-Windows operating system	926921-001
Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and the Windows 10 operating system	926283-601
Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, and a non-Windows operating system	926283-001
Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, hard drive and solid-state drive connectors, and the Windows 10 operating system	926284-601

Description	Spare part number
Equipped with an AMD A9-9420P 3.00-GHz (turbo up to 3.60-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R5 UMA graphics subsystem, hard drive and solid-state drive connectors, and a non-Windows operating system	926284-001
Equipped with an AMD A6-9220P 2.50-GHz (turbo up to 2.90-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R4 UMA graphics subsystem, and the Windows 10 operating system	926285-601
Equipped with an AMD A6-9220P 2.50-GHz (turbo up to 2.90-GHz) dual core processor (1866-MHz FSB, 1.0-GB L2 cache, 15-W), an AMD Radeon R4 UMA graphics subsystem, and a non-Windows operating system	926285-001

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)), and then remove the following components:
 - a. Bottom cover (see [Bottom cover on page 35](#))
 - b. Battery (see [Battery on page 37](#))
 - c. Hard drive (see [Hard drive on page 38](#))
 - d. Solid-state drive (see [Solid-state drive on page 41](#))
 - e. Fan (see [Fan on page 47](#))

When replacing the system board, be sure to remove the following components from the defective system board and install them on the replacement system board:

- WLAN module (see [WLAN module on page 39](#))
- Memory module (see [Memory module on page 42](#))
- Heat sink (see [Heat sink on page 52](#))
- USB port board cable (see [USB port board cable on page 55](#))

Remove the system board:

1. Disconnect the following cables from the system board:
 - (1) Power connector cable
 - (2) WLAN antenna cables




NOTE: The #1/white WLAN antenna cable connects to the WLAN module "#1/Main" terminal. The #2/black WLAN antenna cable connects to the WLAN module "#2/Aux" terminal.

- (3) Display panel ZIF connector cable
- (4) Speaker cable
- (5) TouchPad ZIF connector cable

- (6) Keyboard ZIF connector cable
- (7) Backlight ZIF connector cable
- (8) USB port board ZIF connector cable


2. Detach the USB port board cable (9) from the keyboard/top cover. (The USB port board cable is attached to the keyboard/top cover with double-sided adhesive.)

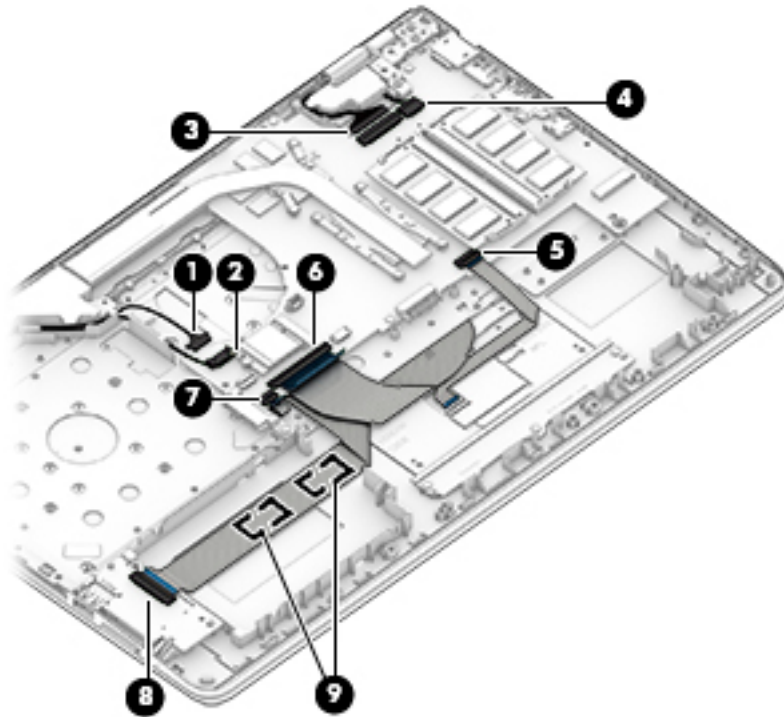


3. Remove the five Phillips PM2.0×2.9 screws (1) that secure the system board to the keyboard/top cover.
4. Remove the two Phillips PM2.5×6.7 screws (2) that secure the secure the left display hinge WLAN module to the keyboard/top cover.
5. Remove the USB Type-C port bracket (3).

The USB Type-C port bracket is available using spare part number 926849-001.

6. Swing the display left hinge **(4)** up and back.

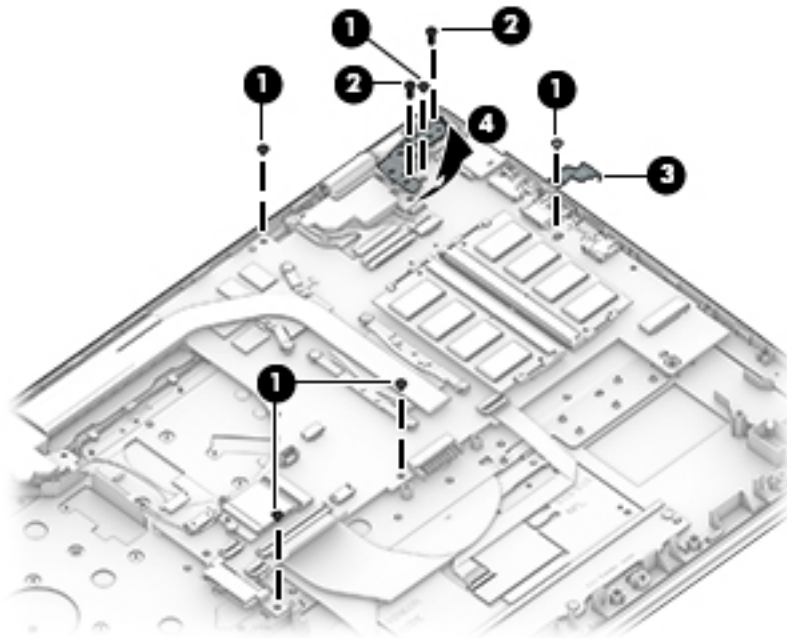

7. Lift the left side of the system board **(1)** until it rests at an angle.
8. Remove the system board **(2)** by sliding it up and to the left at an angle.

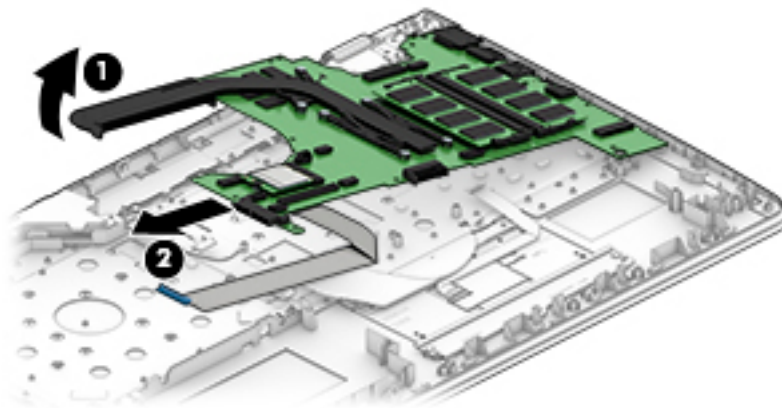

Reverse this procedure to install the system board.

Heat sink



NOTE: The heat sink spare part kit includes replacement thermal material.

Description	Spare part number
For use only on computer models equipped with a graphics subsystem with discrete memory	926898-001
For use only on computer models equipped with a graphics subsystem with UMA memory	926846-001

Before removing the heat sink, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)), and then remove the following components:
 - a. Bottom cover (see [Bottom cover on page 35](#))
 - b. Battery (see [Battery on page 37](#))
 - c. Solid-state drive (see [Solid-state drive on page 41](#))
 - d. Fan (see [Fan on page 47](#))
 - e. System board (see [System board on page 48](#))


Remove the heat sink:




NOTE: Steps 1 and 2 apply to computer models equipped with a graphics subsystem with discrete memory. See Steps 3 and 4 for heat sink removal information for computer models equipped with a graphics subsystem with UMA memory.


1. Remove the six Phillips PM2.0×2.9 screws (**1**) that secure the heat sink to the system board.


2. Remove the heat sink (2).

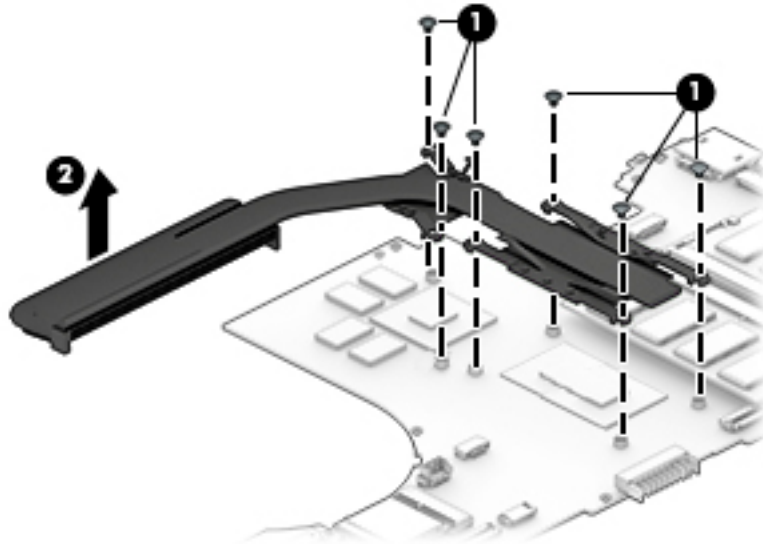


 **NOTE:** Steps 3 and 4 apply to computer models equipped with a graphics subsystem with UMA memory. See Steps 1 and 2 for heat sink removal information for computer models equipped with a graphics subsystem with discrete memory.

3. Remove the four Phillips PM2.0×2.9 screws (1) that secure the heat sink to the system board.
4. Remove the heat sink (2).

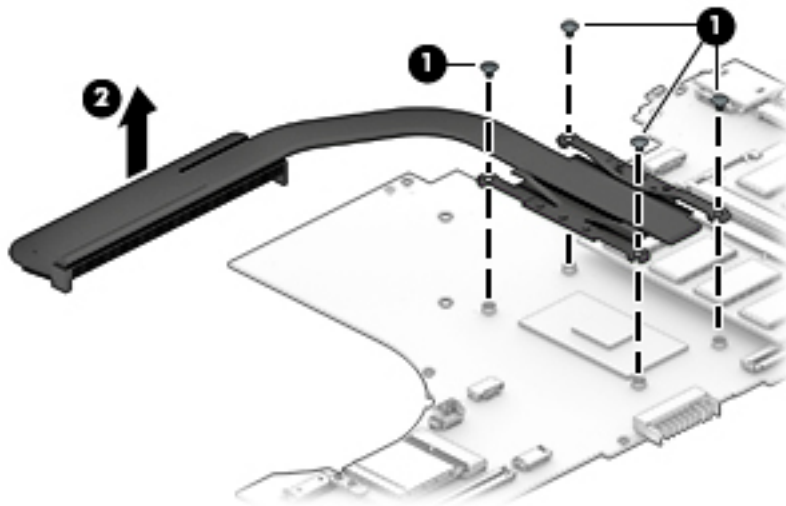


 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits.

On computer models equipped with a graphics subsystem with discrete memory: Thermal paste is used on the processor (1) and the heat sink section (2) that services it. Thermal paste is also used on the VGA component (3) and the heat sink section (4) that services it.

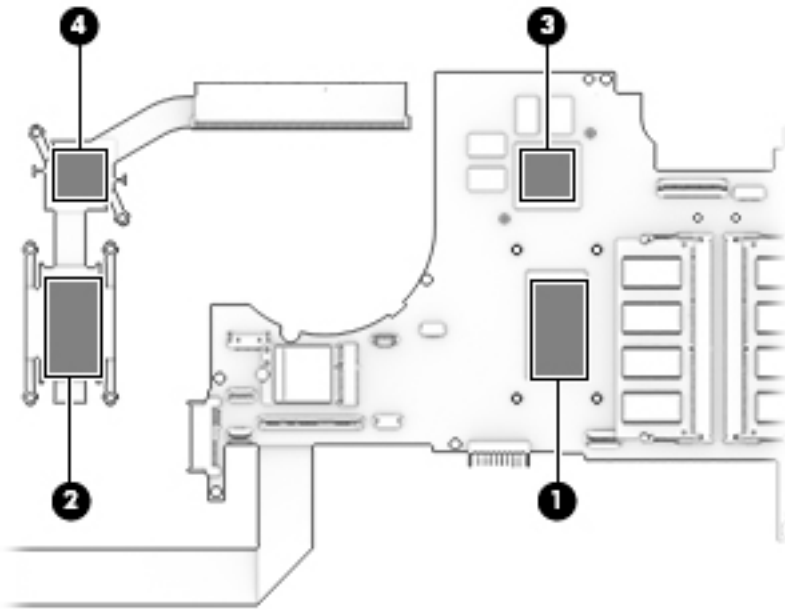


On computer models equipped with a graphics subsystem with UMA memory: Thermal paste is used on the processor (1) and the heat sink section (2) that services it.

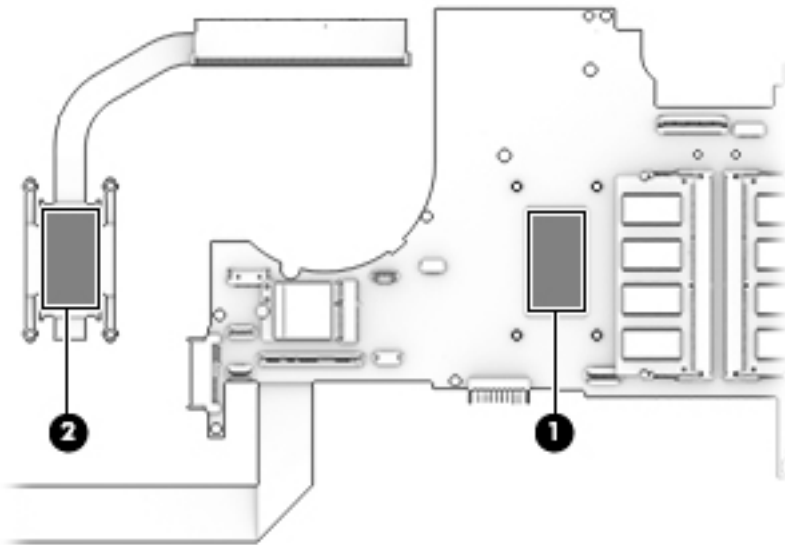

Reverse this procedure to install the heat sink.

USB port board cable


 **NOTE:** The USB port board spare part kit does not include the USB port board cable. The USB port board cable is available using spare part numbers 926842-001.

Before removing the USB port board cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)), and then remove the following components:
 - a. Bottom cover (see [Bottom cover on page 35](#))
 - b. Battery (see [Battery on page 37](#))
 - c. Solid-state drive (see [Solid-state drive on page 41](#))
 - d. Fan (see [Fan on page 47](#))
 - e. System board (see [System board on page 48](#))

Remove the USB port board cable:


1. Turn the system board upside down with the front toward you.
2. Release the ZIF connector **(1)** to which USB port board cable is connected, and then disconnect the USB port board cable **(2)** from the audio jack board.

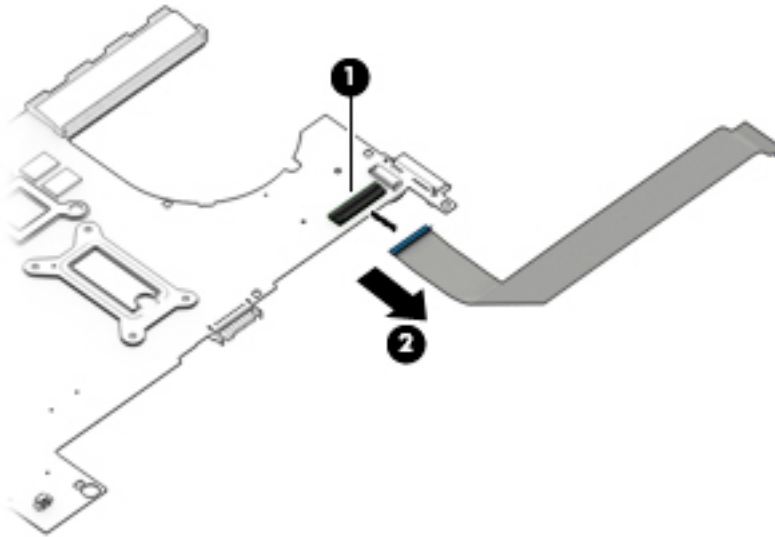

3. Remove the USB port board cable.

Reverse this procedure to install the USB port board cable.

Display assembly

 **NOTE:** The display assembly is spared at the subcomponent level. For display assembly spare part information, see the individual removal subsections.

Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)).
5. Remove the bottom cover (see [Bottom cover on page 35](#)).
6. Remove the battery (see [Battery on page 37](#)).


Remove the display assembly:

1. Disconnect the WLAN antenna cables (**1**) from the terminals on the WLAN module.




NOTE: The WLAN antenna cable labeled "1/MAIN" connects to the WLAN module "Main" terminal. The WLAN antenna cable labeled "2/AUX" connects to the WLAN module "Aux" terminal.

2. Release the WLAN antenna cables from the retention clips (**2**) and routing channel built into the right speaker and the keyboard/top cover.
3. Release the ZIF connector (**3**) to which display panel cable is connected, and then disconnect the display panel cable from the system board.
4. Release the display panel from the retention clips (**4**) and routing channel built into the left speaker.

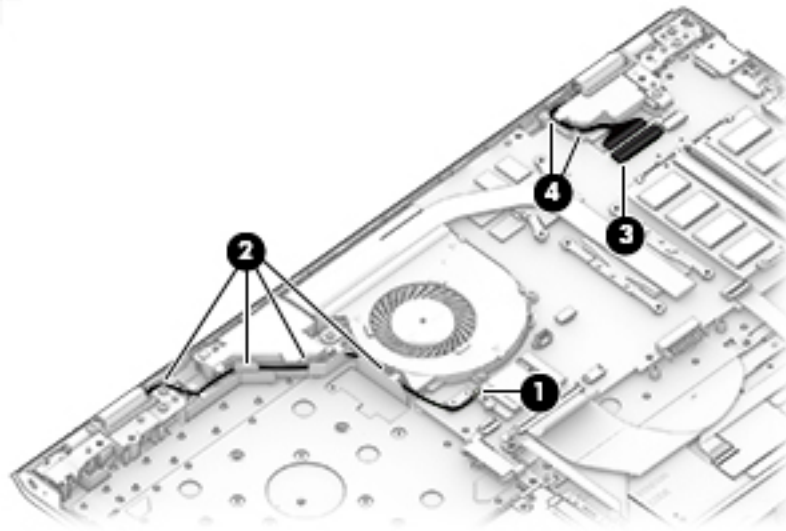


5. Remove the four Phillips PM2.5×6.7 screws (**1**) that secure the display assembly to the keyboard/top cover.

6. Swing the display hinges **(2)** up and back.

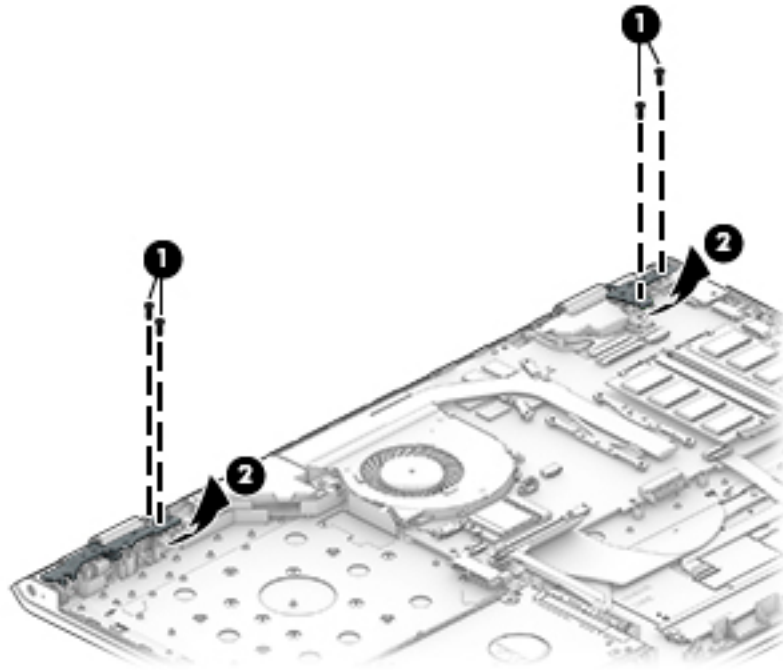

7. Lift the front edge of the keyboard/top cover **(1)** until it rests at an angle.
8. Slide the keyboard/top cover **(2)** up and away at an angle and separate it from the display assembly.

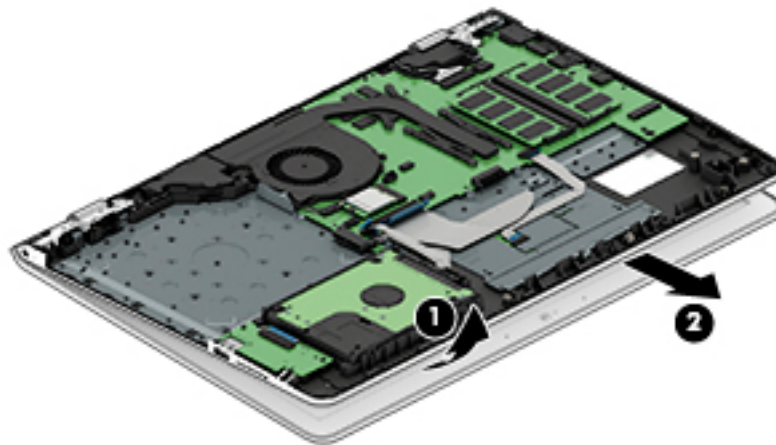


9. If it is necessary to replace the display bezel or any of the display assembly subcomponents:
 - a. Release the top edge of the display bezel **(1)** from the display assembly.
 - b. Release the left and right edges of the display bezel **(2)** from the display assembly.
 - c. Release the bottom edge of the display bezel **(3)** from the display assembly.
 - d. Remove the display bezel **(4)** from the display assembly.

The display bezel is available using spare part numbers 926834-001 (for use on computer models equipped with a FHD infrared webcam) and 926833-001 (for use on computer models equipped with an HD non-infrared webcam).

10. If it is necessary to replace the webcam/microphone module:


- a. Remove the display bezel.
- b. Detach the webcam/microphone module **(1)** from the display back cover. (The webcam/microphone module is attached to the display back cover with double-sided adhesive.)
- c. Disconnect the webcam/microphone module cable **(2)** from the webcam/microphone module.

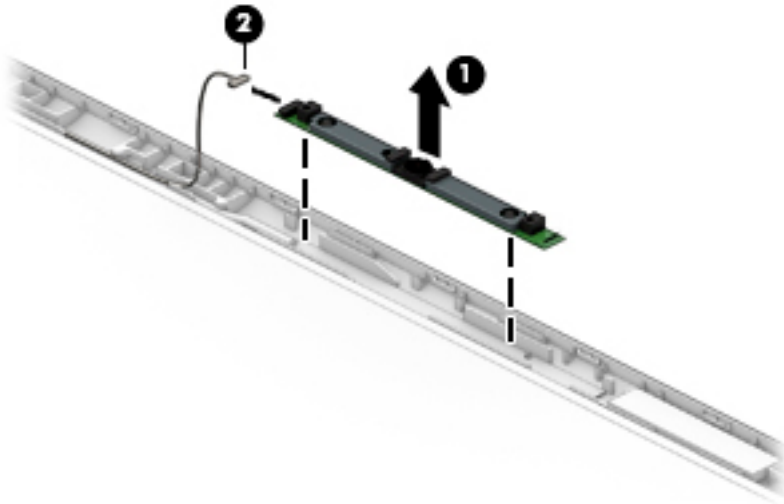

- d. Remove the webcam/microphone module.
The webcam/microphone module is available using spare part numbers 926727-001 (FHD infrared webcam/microphone module) and 919573-003 (HD non-infrared webcam/microphone module).


11. If it is necessary to replace the display panel:

- a. Remove the display bezel.
- b. Remove the four Phillips PM2.0×2.9 screws that secure the display panel to the display back cover.

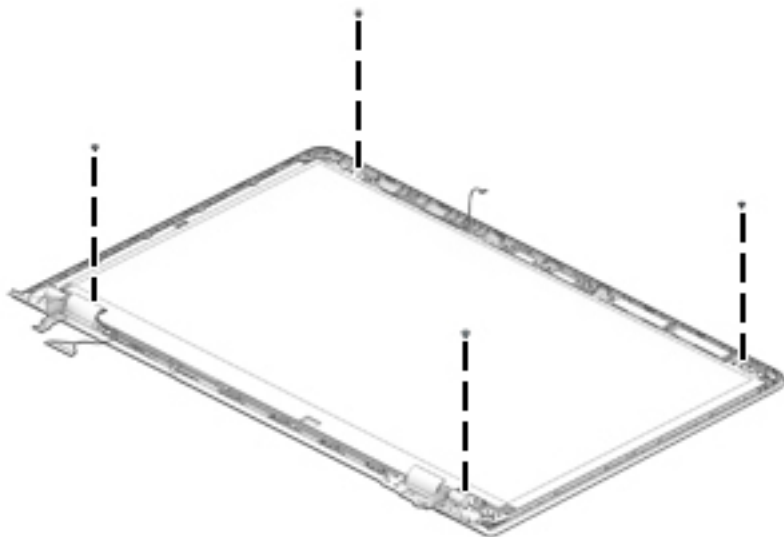

⚠ CAUTION: Before turning the display panel upside down, make sure the work surface is clear of tools, screws, and any other foreign objects. Failure to follow this caution can result in damage to the display panel.

- c. Swing the top edge of the display panel **(1)** up and forward until the display panel rests upside down in front of the display back cover.
- d. Release the adhesive support strip **(2)** that secures the display panel cable connector to the display panel.
- e. Disconnect the display panel cable **(3)** from the display panel.

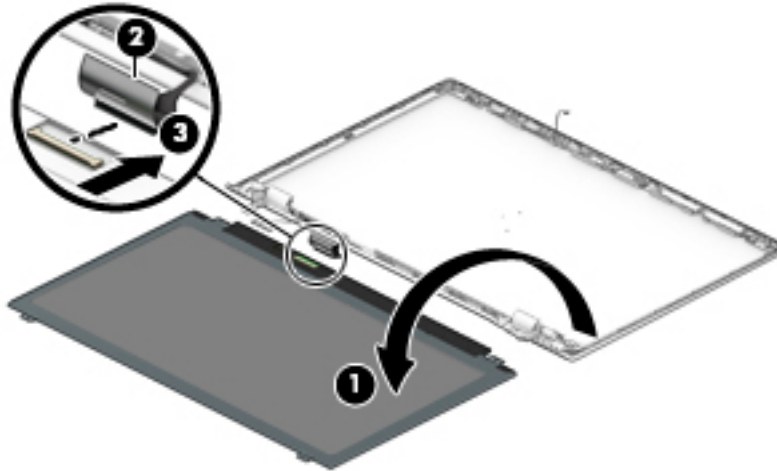

- f. Remove the display panel.

The display panel is available using the following spare part numbers:


- 847651-005 – 15.6-in, FHD, BrightView (1920×1080), WLED, UWVA, TouchScreen
- 809612-016 – 15.6-in, HD, BrightView (1366×768), WLED, SVA, TouchScreen
- 842463-011 – 15.6-in, FHD, BrightView (1920×1080), WLED, UWVA, non-TouchScreen
- 752920-018 – 15.6-in, FHD, AntiGlare (1920×1080), WLED, UWVA, non-TouchScreen
- 798933-014 – 15.6-in, FHD, AntiGlare (1920×1080), WLED, SVA, non-TouchScreen
- 847654-010 – 15.6-in, HD, BrightView (1366×768), WLED, SVA, non-TouchScreen
- 909185-008 – 15.6-in, HD, AntiGlare (1366×768), WLED, SVA, non-TouchScreen

12. If it is necessary to replace the display hinges:

- a. Remove the display bezel.
- b. Remove the two Phillips PM2.0×2.9 screws **(1)** that secure the hinges to the display back cover.
- c. Remove the six Phillips PM2.5×3.2 broad head screws **(2)** that secure the hinges to the display back cover.

- d. Remove the display hinges (3).

The display hinges are available using spare part number 926852-001.

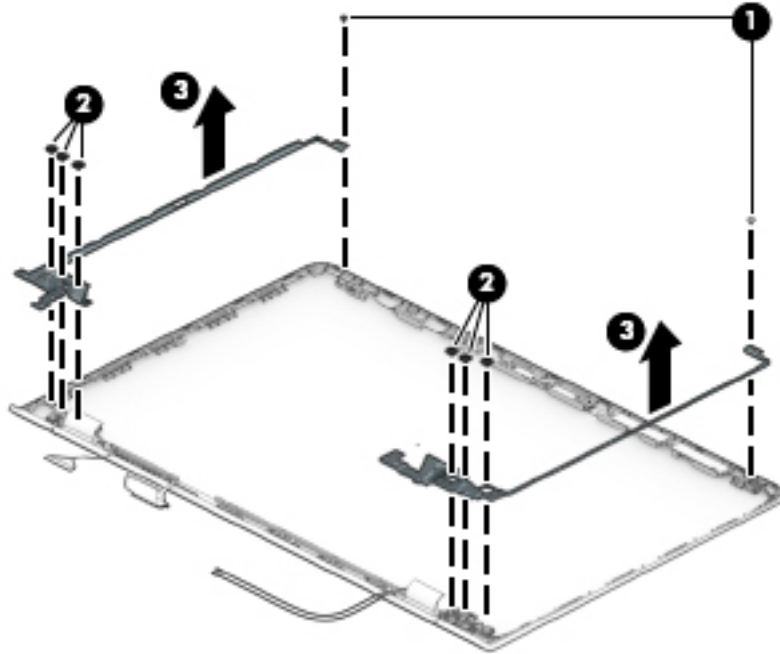


13. If it is necessary to replace the display panel cable:

- a. Remove the display bezel.
- b. Release the webcam/microphone module.
- c. Release the display panel.
- d. Release the display hinges.
- e. Release the display panel cable from the retention clips (1) and routing channels built into the top, left, and bottom edges of the display back cover.
- f. Remove the display panel cable (2).

The display panel cable is available using the following spare part numbers:


- 926841-001 – For use on computer models equipped with an FHD display assembly and an FHD infrared webcam
- 926838-001 – For use on computer models equipped with an FHD display assembly and an HD non-infrared webcam
- 926840-001 – For use on computer models equipped with an HD display assembly and an FHD infrared webcam
- 926837-001 – For use on computer models equipped with an HD display assembly and an HD non-infrared webcam
- 926839-001 – For use on computer models equipped with an FHD/HD display assembly and an FHD infrared webcam
- 926836-001 – For use on computer models equipped with an FHD/HD display assembly and an HD non-infrared webcam

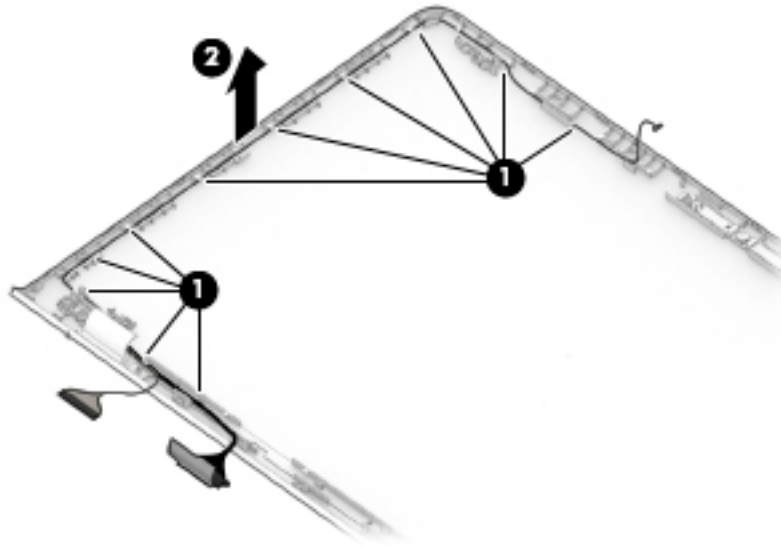

14. If it is necessary to replace the wireless antenna cables and transceivers:

- a. Remove the display bezel.
- b. Release the display panel.
- c. Release the display hinges.
- d. Detach the wireless antenna transceivers **(1)** from the display back cover. (The wireless antenna transceivers are attached to the display back cover with double-sided adhesive.)
- e. Release the wireless antenna cables from the retention clips **(2)** and routing channels built into the top, right, and bottom edges of the display back cover.
- f. Remove the wireless antenna cables and transceivers **(3)**.

The wireless antenna cables and transceivers are available using spare part number 926826-001.

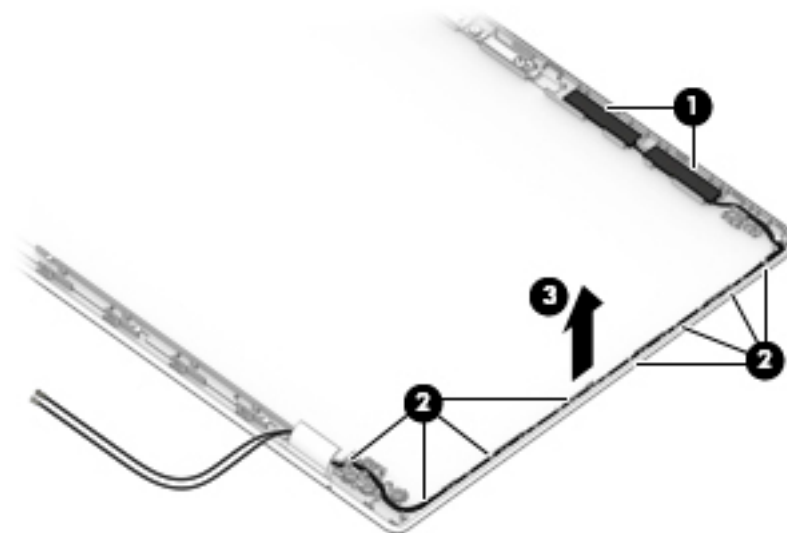

Reverse this procedure to reassemble and install the display assembly.

Speakers

Description	Spare part number
Speakers (includes cables)	926857-001


Before removing the speakers, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
3. Disconnect all external devices from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)), and then remove the following components:
 - a. Bottom cover (see [Bottom cover on page 35](#))
 - b. Battery (see [Battery on page 37](#))
 - c. Solid-state drive (see [Solid-state drive on page 41](#))
 - d. Fan (see [Fan on page 47](#))
 - e. System board (see [System board on page 48](#))

Remove the speakers:

1. Release the power connector cable from the retention clips **(1)** and routing channel built into the right speaker.
2. Release the speaker cable from the retention clips **(2)** and routing channel built into the keyboard/top cover.
3. Remove the two Phillips PM2.0×2.9 screws **(3)** that secure the speakers to the keyboard/top cover.

4. Remove the speakers (4).

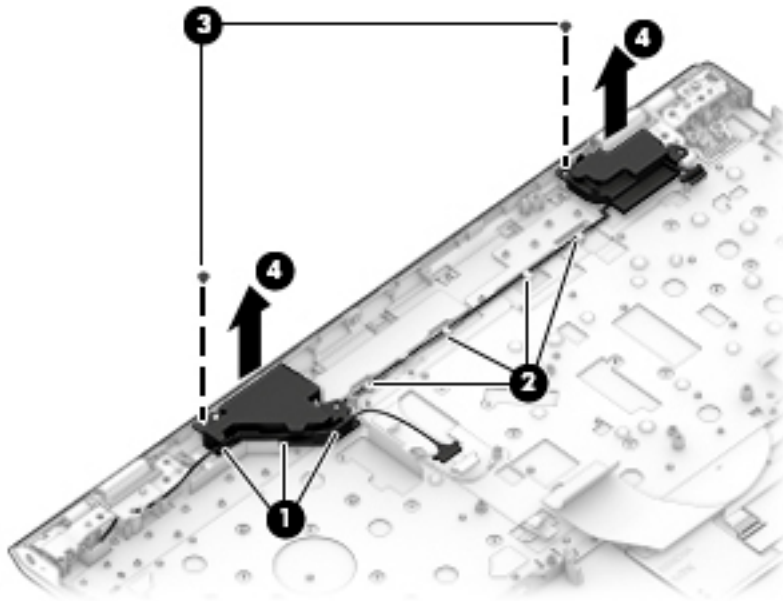

Reverse this procedure to install the speakers.

Power connector cable


Description	Spare part number
Power connector cable	810327-007

Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the optical drive (see [Optical drive on page 34](#)), and then remove the following components:
 - a. Bottom cover (see [Bottom cover on page 35](#))
 - b. Battery (see [Battery on page 37](#))
 - c. Display assembly (see [Display assembly on page 55](#))

Remove the power connector cable:

1. Release the power connector cable from the retention clips **(1)** and routing channel built into the right speaker and the keyboard/top cover **(2)**.
2. Remove the power connector cable **(3)**.

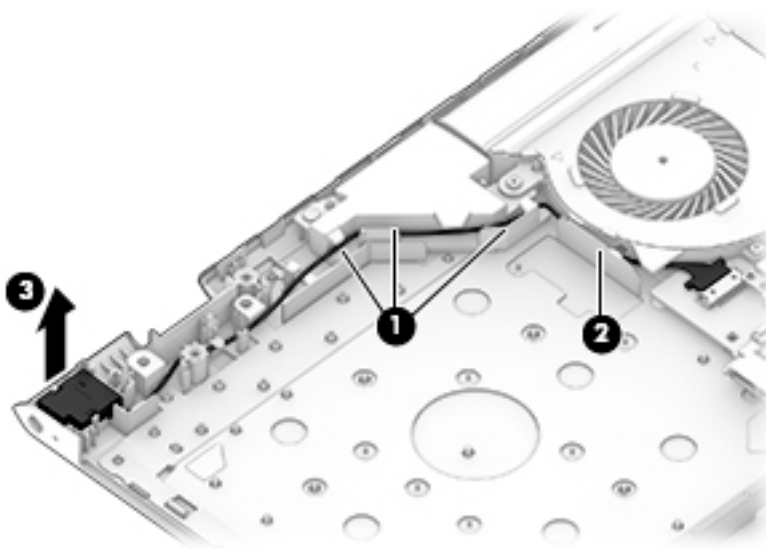

Reverse this procedure to install the power connector cable.


6 Computer Setup (BIOS), TPM, and HP Sure Start

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

Starting Computer Setup


 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

To start Computer Setup, follow these steps:

- ▲ Start Computer Setup.
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.

 **NOTE:** On tablets without keyboards, you can use your finger to make selections.


- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes:
Select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Ignore Changes and Exit**, and then press [enter](#).
- To save your changes and exit Computer Setup menus:
Select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).


Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

 **NOTE:** Restoring defaults will not change the hard drive mode.


To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Start Computer Setup. See [Starting Computer Setup on page 65](#).
2. Select **Main**, and then select **Apply Factory Defaults and Exit**.

 **NOTE:** On select products, the selections may display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

3. Follow the on-screen instructions.
4. To save your changes and exit, select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on the computer.

BIOS version information (also known as *ROM date* and *System BIOS*) can be accessed by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.


1. Start Computer Setup. See [Starting Computer Setup on page 65](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup without saving your changes, select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.

– or –

Select **Main**, select **Ignore Changes and Exit**, and then press **enter**.

To check for later BIOS versions, see [Downloading a BIOS update on page 67](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.


1. Type `support` in the taskbar search box, and then select the HP Support Assistant app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.


 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt


To dynamically choose a boot device for the current startup sequence, follow these steps:

1. Access the Boot Device Options menu:
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F9** to enter the Boot Device Options menu.
2. Select a boot device, then press `enter`.

TPM BIOS settings (select products only)

 **IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).

 **NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Starting Computer Setup on page 65](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.


HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>, and select your country. Select **Drivers & Downloads**, and then follow the on-screen instructions.

7 HP PC Hardware Diagnostics (UEFI)


HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

When HP PC Hardware Diagnostics (UEFI) detects a failure that requires hardware replacement, a 24-digit Failure ID is generated. This ID can then be provided to support to help determine how to correct the problem.

 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode and you must use the keyboard attached.

To start HP PC Hardware Diagnostics (UEFI), follow these steps:


1. Turn on or restart the computer, quickly press `esc`.

 **NOTE:** The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only `.exe` files are offered.

2. Press or tap `f2`.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive

 **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 71](#).

- b. Hard drive
- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test, press `esc`.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are offered.

There are two options to download HP PC Hardware Diagnostics to a USB device.

Download the latest UEFI version

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the HP PC Hardware Diagnostics section, click the **Download** link, and then select **Run**.

Download any version of UEFI for a specific product

1. Go to <http://www.hp.com/support>, and then select your country. The HP Support page is displayed.
2. Click **Drivers & Downloads**.
3. In the text box, enter the product name, and then click **Go**.

– or –

Click **Find Now** to let HP automatically detect your product.

4. Select your computer, and then select your operating system.
5. In the **Diagnostic** section, follow the on-screen instructions to select and download the UEFI version you want.

8 Specifications

	Metric	U.S.
Computer dimensions		
Width	37.8 cm	14.9 in
Depth	25.2 cm	9.9 in
Height	2.5 cm	0.9 in
Weight	1.9 kg	4.4 lbs
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

9 Backing up and recovering

This chapter provides information about the following processes. The information in the chapter is standard procedure for most products.


- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP support assistant app.

- ▲ Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Click the question mark icon in the taskbar.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning any recovery process.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select products only. Choose the available method according to your computer model.

- Use HP Recovery Manager to create HP Recovery media after you successfully set up the computer. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#). For information on the recovery options that are available using the recovery media, see [Using Windows tools on page 75](#).
- Use Windows tools to create system restore points and create backups of personal information.

For more information, see [Recovering using HP Recovery Manager on page 76](#).

 **NOTE:** If storage is 32 GB or less, Microsoft System Restore is disabled by default.

Creating HP Recovery media (select products only)

If possible, check for the presence of the Recovery partition and the Windows partition. From the **Start** menu, select **File Explorer**, and then select **This PC**.

- If your computer does not list the Windows partition and the Recovery partition, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

You can use Windows tools to create system restore points and create backups of personal information, see [Using Windows tools on page 75](#).

- If your computer does list the Recovery partition and the Windows partition, you can use HP Recovery Manager to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and software programs that were installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.
 - Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
 - HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
 - To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
 - If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub. If you cannot create DVD media yourself, you can obtain recovery discs for your computer from HP. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
 - Be sure that the computer is connected to AC power before you begin creating the recovery media.
 - The creation process can take an hour or more. Do not interrupt the creation process.
 - If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue.

To create HP Recovery media:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Create recovery media**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 76](#).

Using Windows tools

You can create recovery media, system restore points, and backups of personal information using Windows tools.



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get started app.

- ▲ Select the **Start** button, and then select the **Get started** app.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:



IMPORTANT: Not all methods are available on all products.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see the Get started app.
 - ▲ Select the **Start** button, and then select the **Get started** app.
- If you need to correct a problem with a preinstalled application or driver, use the Reinstall drivers and/or applications option (select products only) of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ Type `recovery` in the taskbar search box, select **HP Recovery Manager**, select **Reinstall drivers and/or applications**, and then follow the on-screen instructions.
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select products only) or use the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 76](#). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).
- On select products, if you want to recover the computer's original factory partition and content, or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 76](#).
- On select products, if you want to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition \(select products only\) on page 78](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from HP, or by using the HP Recovery partition (select products only). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).

What you need to know before you get started

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.



IMPORTANT: Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.

- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).
- To use the Factory Reset option (select products only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).
- If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:



NOTE: Only the options available for your computer display when you start the recovery process.

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select products only) allows System Recovery only.

Using the HP Recovery partition (select products only)

The HP Recovery partition allows you to perform a system recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps (select products only).

1. Type `recovery` in the taskbar search box, select **Recovery Manager**, and then select **HP Recovery Environment**.

- or -

For computers or tablets with keyboards attached, press **f11** while the computer boots, or press and hold **f11** as you press the power button.

For tablets without keyboards:

Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f11**.

- or -

Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f11**.

2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media, and then restart the computer.




NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 78](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive.

To change the boot order:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Insert the HP Recovery media.
2. Access BIOS:

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f9**.


- or -


Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select products only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** After you remove the HP Recovery partition, you will not be able to perform System Recovery or create HP recovery media from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select products only\) on page 74](#).

 **NOTE:** The Remove Recovery Partition option is only available on products that support this function.

Follow these steps to remove the HP Recovery partition:

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

10 Backing up and recovering

This chapter provides information about the following processes. The information in the chapter is standard procedure for most products.


- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP support assistant app.

- ▲ Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Click the question mark icon in the taskbar.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning any recovery process.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select products only. Choose the available method according to your computer model.

- Use HP Recovery Manager to create HP Recovery media after you successfully set up the computer. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#). For information on the recovery options that are available using the recovery media, see [Using Windows tools on page 75](#).
- Use Windows tools to create system restore points and create backups of personal information.

For more information, see [Recovering using HP Recovery Manager on page 76](#).

 **NOTE:** If storage is 32 GB or less, Microsoft System Restore is disabled by default.

Creating HP Recovery media (select products only)

If possible, check for the presence of the Recovery partition and the Windows partition. From the **Start** menu, select **File Explorer**, and then select **This PC**.

- If your computer does not list the Windows partition and the Recovery partition, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

You can use Windows tools to create system restore points and create backups of personal information, see [Using Windows tools on page 75](#).

- If your computer does list the Recovery partition and the Windows partition, you can use HP Recovery Manager to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and software programs that were installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.
 - Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
 - HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
 - To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
 - If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub. If you cannot create DVD media yourself, you can obtain recovery discs for your computer from HP. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
 - Be sure that the computer is connected to AC power before you begin creating the recovery media.
 - The creation process can take an hour or more. Do not interrupt the creation process.
 - If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue.

To create HP Recovery media:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Create recovery media**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 76](#).

Using Windows tools

You can create recovery media, system restore points, and backups of personal information using Windows tools.



NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get started app.

- ▲ Select the **Start** button, and then select the **Get started** app.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:



IMPORTANT: Not all methods are available on all products.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see the Get started app.
 - ▲ Select the **Start** button, and then select the **Get started** app.
- If you need to correct a problem with a preinstalled application or driver, use the Reinstall drivers and/or applications option (select products only) of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ Type `recovery` in the taskbar search box, select **HP Recovery Manager**, select **Reinstall drivers and/or applications**, and then follow the on-screen instructions.
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select products only) or use the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 76](#). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).
- On select products, if you want to recover the computer's original factory partition and content, or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 76](#).
- On select products, if you want to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.


For more information, see [Removing the HP Recovery partition \(select products only\) on page 78](#).

Recovering using HP Recovery Manager


HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from HP, or by using the HP Recovery partition (select products only). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).

What you need to know before you get started


- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.

 **IMPORTANT:** Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.

- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).
- To use the Factory Reset option (select products only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 74](#).
- If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:

 **NOTE:** Only the options available for your computer display when you start the recovery process.

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select products only) allows System Recovery only.

Using the HP Recovery partition (select products only)

The HP Recovery partition allows you to perform a system recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps (select products only).

1. Type `recovery` in the taskbar search box, select **Recovery Manager**, and then select **HP Recovery Environment**.

- or -

For computers or tablets with keyboards attached, press **f11** while the computer boots, or press and hold **f11** as you press the power button.

For tablets without keyboards:

Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f11**.

- or -

Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f11**.

2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media, and then restart the computer.




NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 78](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive.

To change the boot order:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Insert the HP Recovery media.
2. Access BIOS:

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f9**.


- or -


Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select products only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** After you remove the HP Recovery partition, you will not be able to perform System Recovery or create HP recovery media from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select products only\) on page 74](#).

 **NOTE:** The Remove Recovery Partition option is only available on products that support this function.

Follow these steps to remove the HP Recovery partition:

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

11 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least 1.0 m (3.3 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer. Requirements for all countries 113

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5

Country/region	Accredited agency	Applicable note number
South Korea	EK	4
Sweden	CEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

12 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

- A**
 - AC adapter light 12, 13
 - AC adapter, spare part numbers 28
 - action keys 9
 - antenna
 - locations 6
 - removal 61
 - spare part number 27, 61
 - audio, product description 2, 3
 - audio-in jack 11
 - audio-out jack 11
- B**
 - backups 73, 79
 - battery
 - removal 37
 - spare part number 25, 37
 - battery light 12, 13
 - bezel
 - removal 57
 - spare part numbers 27, 57
 - BIOS
 - determining version 67
 - downloading an update 67
 - updating 67
 - boot order
 - changing 78, 84
 - bottom component 14
 - bottom cover
 - removal 35
 - spare part number 26, 35
 - button components 7
 - buttons
 - button 7
 - optical drive eject 12
 - TouchPad 10
- C**
 - cables, service considerations 30
 - camera 6
 - camera light 6
 - caps lock light 8
 - chipset, product description 1
 - components
 - bottom 14
 - buttons 7
 - display 6
 - left side 11
 - lights 8
 - right side 12
 - speakers 7
 - special key 9
 - TouchPad 10
 - computer components 16
 - Computer Setup
 - navigating and selecting 65
 - restoring factory settings 66
 - connectors, service considerations 30
- D**
 - display assembly
 - components 26
 - removal 55
 - spare part numbers 55
 - display back cover, spare part numbers 27
 - display components 6
 - display panel
 - product description 1, 2
 - removal 58
 - spare part numbers 27, 59
 - display panel cable
 - removal 60
 - spare part numbers 27, 60
 - drive light 12
 - drives
 - precautions 30
 - preventing damage 30
- E**
 - electrostatic discharge 31
 - equipment guidelines 33
 - esc key 9
 - Ethernet, product description 3
- F**
 - fan
 - removal 47
 - spare part number 25, 47
 - fn key 9
- G**
 - graphics, product description 1
 - grounding guidelines 31
 - guidelines
 - equipment 33
 - grounding 31
 - packaging 32
 - transporting 32
 - workstation 32
- H**
 - hard drive
 - product description 2
 - removal 38
 - spare part numbers 25, 38
 - hard drive bracket
 - removal 39
 - spare part number 26, 38
 - hard drive cable
 - removal 39
 - spare part number 26, 38
 - HDMI port 11
 - HDMI-to-VGA adapter, spare part number 28
 - headphone jack 11
 - heat sink
 - removal 52
 - spare part numbers 25, 52
 - hinge
 - removal 59
 - spare part number 27, 60
 - HP PC Hardware Diagnostics (UEFI) using 70
 - HP Recovery Manager
 - correcting boot problems 78, 84
 - starting 77, 83
 - HP Recovery media
 - creating 74, 80
 - recovery 77, 83
 - HP Recovery partition
 - recovery 77, 83
 - removing 78, 84

- I
 - integrated numeric keypad 9
- J
 - jacks
 - audio-in 11
 - audio-out 11
 - headphone 11
 - microphone 11
 - network 11
 - RJ-45 11
- K
 - keyboard, product description 3
 - keyboard/top cover
 - spare part numbers 17, 18, 19, 20, 21, 22
 - keys
 - action 9
 - esc 9
 - fn 9
 - num lock 9
 - Windows 9
- L
 - left-side components 11
 - legacy support, USB 65
 - light components 8
 - lights
 - AC adapter 12, 13
 - battery 12, 13
 - camera 6
 - caps lock 8
 - drive 12
 - mute 8
 - network status 11
 - power 8, 12
 - RJ-45 status 11
- M
 - memory card reader 12
 - memory module
 - product description 2
 - removal 42
 - spare part numbers 25, 42
 - microphone
 - locations 6
 - product description 2, 3
 - microphone jack 11
 - minimized image recovery 77, 83
 - minimized image, creating 76, 82
- model name 1
- mute light 8
- N
 - network jack 11
 - network status light 11
 - num lock key 9
 - numeric keypad 9
- O
 - operating system, product
 - description 4
 - optical drive
 - location 12
 - product description 2
 - removal 34
 - spare part number 26, 34
 - optical drive bezel, spare part
 - number 26, 34
 - optical drive bracket, spare part
 - number 26, 34
 - optical drive eject button 12
 - original system recovery 76, 82
- P
 - packaging guidelines 32
 - plastic parts, service
 - considerations 29
 - pointing device, product
 - description 3
 - ports
 - HDMI 11
 - product description 3
 - USB 3.x SuperSpeed 11, 12
 - USB Type-C SuperSpeed 11
 - power button 7
 - power connector 13
 - power connector cable
 - removal 64
 - spare part number 25, 64
 - power cord
 - set requirements 85
 - spare part numbers 28
 - power light 8, 12
 - power requirements, product
 - description 3, 4
 - processor, product description 1
 - product description
 - audio 2, 3
 - chipset 1
 - display panel 1, 2
 - Ethernet 3
 - external media cards 3
 - graphics 1
 - hard drive 2
 - keyboard 3
 - memory module 2
 - microphone 2, 3
 - operating system 4
 - optical drive 2
 - pointing device 3
 - ports 3
 - power requirements 3, 4
 - processors 1
 - product name 1
 - security 4
 - serviceability 4
 - solid-state drive 2
 - storage 2
 - video 2, 3
 - wireless 3
 - product name 1
- R
 - recover
 - options 75, 81
 - recovery
 - discs 74, 77, 80, 83
 - HP Recovery Manager 76, 82
 - media 77, 83
 - starting 77, 83
 - supported discs 74, 80
 - system 76, 82
 - USB flash drive 77, 83
 - using HP Recovery media 74, 80
 - recovery media
 - creating 74, 80
 - creating using HP Recovery Manager 74, 80
 - recovery partition
 - removing 78, 84
 - removal/replacement
 - procedures 34
 - right-side components 12
 - RJ-45 jack 11
 - RJ-45 status light 11
 - rubber feet
 - removal 35
 - spare part number 35
 - Rubber Foot Kit, spare part number 26, 28

- S**
- screw cover
 - removal 34
 - spare part number 34
- Screw Kit, spare part number 28
- security cable slot 11
- security, product description 4
- service considerations
 - cables 30
 - connectors 30
 - plastic parts 29
- serviceability, product description 4
- setup utility
 - navigating and selecting 65
 - restoring factory settings 66
- solid-state drive
 - product description 2
 - removal 41
 - spare part numbers 25, 41
- solid-state drive cable, spare part number 25, 41
- solid-state drive converter board, spare part number 25, 41
- solid-state drive holder, spare part number 25, 41
- speakers
 - components 7
 - location 7
 - removal 62
 - spare part number 23, 62
- special key components 9
- supported discs, recovery 74, 80
- Sure Start
 - using 69
- system board
 - removal 48
 - spare part numbers 23, 48
- system recovery 76, 82
- system restore point
 - creating 75, 81
- system restore point, creating 73, 79
- T**
- tools required 29
- TouchPad
 - components 10
 - removal 46
 - spare part number 23, 46
- TouchPad bracket
 - removal 46
 - spare part number 23, 46
- TouchPad button 10
- TouchPad cable
 - removal 45
 - spare part number 23, 45, 46
- TouchPad zone 10
- TPM settings 69
- transporting guidelines 32
- U**
- USB 3.x SuperSpeed port 11, 12
- USB legacy support 65
- USB port board
 - removal 43
 - spare part number 43
 - spare part numbers 25
- USB port board cable
 - removal 55
 - spare part number 25, 43, 55
- USB Type-C port bracket
 - removal 50
 - spare part number 25, 50
- USB Type-C SuperSpeed port 11
- USB-C-to-USB-A dongle, spare part number 28
- V**
- vent 14
- video, product description 2, 3
- W**
- webcam/microphone module
 - removal 57
 - spare part numbers 27, 58
- webcam/microphone module cable
 - spare part numbers 27
- Windows
 - system restore point 73, 75, 79, 81
- Windows key 9
- Windows tools
 - using 75, 81
- wireless antenna
 - locations 6
 - removal 61
 - spare part number 27, 61
- wireless, product description 3
- WLAN antenna
 - locations 6
- removal 61
- spare part number 27, 61
- WLAN module
 - removal 39
 - spare part numbers 25, 39
- workstation guidelines 32