

hp
318
digital
camera



user guide



hp photosmart 318 digital camera

user guide

Trademark and copyright information

© Copyright 2001 Hewlett-Packard Company

All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

The information contained in this document is subject to change without notice. Hewlett-Packard shall not be liable for errors contained herein or for consequential damages in connection with the furnishing, performance, or use of this material.

HP, the HP logo, photosmart, and the photosmart logo are property of Hewlett-Packard Company.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Mac, the Mac logo, and Macintosh are registered trademarks of Apple Computer, Inc.

CompactFlash, CF, and the CF logo are registered trademarks of CompactFlash Association.

Other brands and their products are trademarks or registered trademarks of their respective holders.

Table of Contents

Chapter 1: Getting started

Camera parts	1
Quick setup	3
Step 1: Attach the wrist strap	3
Step 2: Install the batteries	3
Step 3: Turn the camera on	4
Step 4: Choose the camera language	4
Step 5: Set the camera date and time	5
Automatic power-off	5
Using the control dial	6
Storing images on a CF memory card	7

Chapter 2: Taking pictures

Taking a picture	9
Using automatic focus and automatic exposure	10
Using focus lock	10
Previewing your pictures	11
Tips for taking the best pictures	12

Chapter 3: Reviewing your images

Viewing your images	15
Creating a print order	16
Deleting your images	18
Viewing small versions (thumbnails) of your images	19
Magnifying your images	19

Chapter 4: Adjusting the camera settings

Using the flash	21
Changing the image quality	23
Using the digital zoom	24
Using the self-timer	25
Setting the date and time	26
Changing the camera language	27
Setting the welcome screen	27

Chapter 5: Sharing and printing images

Using the camera with a Windows computer	30
System requirements for a Windows computer	30
Installing the software on a Windows computer	31
Connecting the camera to a Windows computer	31
Unloading images to a Windows computer	32
Using the camera with a Windows NT 4.0 computer	33
Using the camera with a Macintosh computer	35
System requirements for a Macintosh computer	35
Changing the PC Connect Mode setting	35
Installing the software on a Macintosh computer	36
Connecting the camera to a Macintosh computer	36
Unloading images to a Macintosh computer	37
Tips for unloading images to a Macintosh computer	38
Unloading images without using the software	39
Using a card reader	40
Printing images without a computer	40

Chapter 6: Storing images in memory

Determining the number of pictures you can take	42
Using a CF memory card	43
Installing a CF memory card	44
Checking the CF memory card status	45
Using both internal memory and a CF memory card	46
Formatting memory	47

Chapter 7: Powering and maintaining your camera

Powering your camera	49
Determining if the batteries need to be changed	49
Replacing batteries	51
Using an AC power adapter	52
Caring for your camera and accessories	53
Camera	53
Memory cards	53
Safety precautions	54

Chapter 8: Troubleshooting, support, and warranties

Problems and solutions	55
Error messages	60
Getting assistance	62
Visiting HP Web sites	62

Visiting related Web sites	62
Contacting HP Customer Support	63
Obtaining support within the United States	63
Obtaining support worldwide	64
Hewlett-Packard limited warranty statement	67

Appendix A: Reference

Symbols on the status LCD	69
Camera indicator lights	71
Camera specifications	72

1




Getting started

Your HP photosmart 318 digital camera takes high-quality pictures you can share with family and friends on the Internet or by e-mail. It comes with software for manipulating, storing, and printing your photos. Your camera includes the following features:

- 2.3 megapixel (MP) resolution
- point-and-shoot simplicity
- automatic exposure
- automatic focus
- integrated flash with red-eye reduction
- universal serial bus (USB) computer connection
- 2x digital zoom
- color image display for previewing and reviewing images
- internal memory for storing images in the camera
- slot for CompactFlash (CF) memory card (card not included)
- self-timer
- batteries

Camera parts

The following illustrations show the parts of the HP photosmart 318 digital camera.

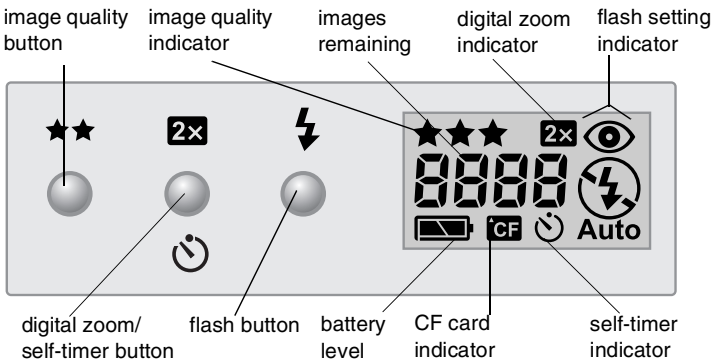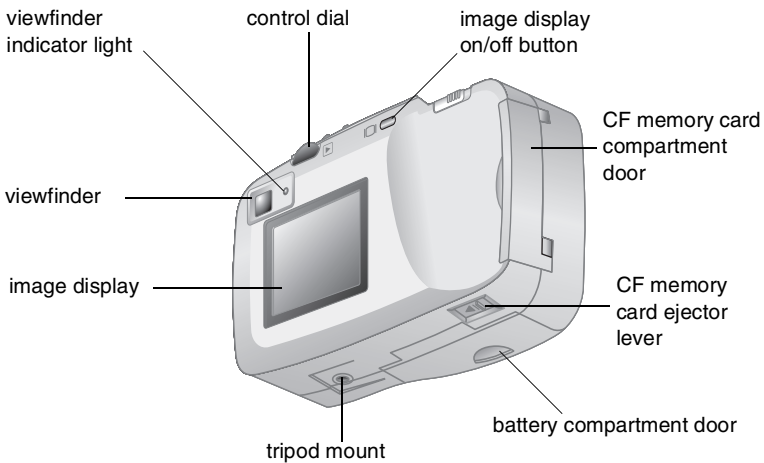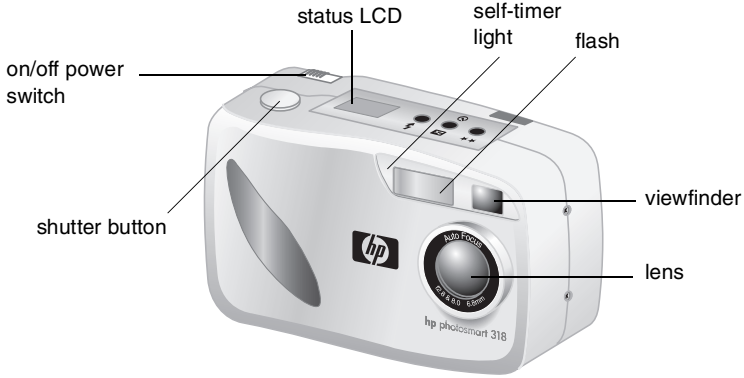


Quick setup

Setting up your digital camera is quick and easy—follow these steps and you'll be ready to take pictures.

Step 1: Attach the wrist strap

- 1 Thread the short loop through the wrist strap attachment that is located under the CF memory card compartment door. You might need to use a pointed object, such as a paper clip, to pull the end of the loop through.
- 2 Pull the strap through the loop, and then pull the knot tight.

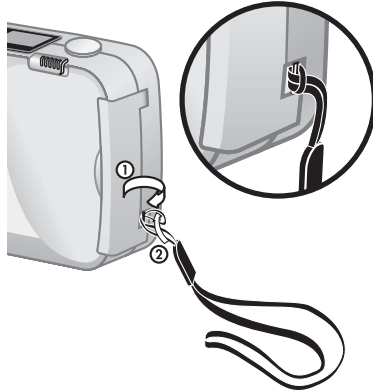


Step 2: Install the batteries

- 1 Open the battery compartment door by pushing it out and then swinging it open.
- 2 Insert four AA batteries (supplied), making sure that the +/- electrodes are facing the proper direction (see the diagram on the inside of the camera's battery compartment).

Note

For replacement, use only photo-quality alkaline, photo-lithium, or rechargeable nickel-metal hydride (NiMH) batteries.

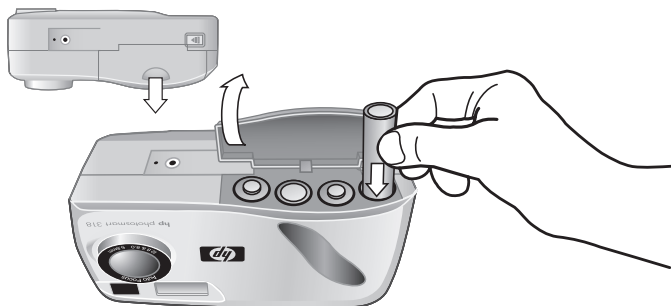

Step 3: Turn the camera on

- To turn the camera on, slide the ON/OFF POWER (► ON/OFF) switch to the right and release it. The status LCD (liquid crystal display) on top of the camera turns on and displays the camera status.

Note

The icons that appear on the status LCD are discussed throughout this guide. For more information, see “Appendix A: Reference” on page 69.

- To turn the camera off, slide the ► ON/OFF switch to the right again and release it. The status LCD shuts off and goes blank.

Step 4: Choose the camera language

The first time you turn the camera on, it prompts you to choose the language you want to use for the camera menus.







- 1 Turn the CONTROL (►) dial to scroll to the language you want to use.
- 2 Press the ◻ dial to select the language.



If you choose the wrong language, you can change it by using the **Setup** menu.

Step 5: Set the camera date and time

After you select the camera language, the camera prompts you to enter the current date and time. After you have set the camera's clock, it records the date and time at which you take each picture.

- 1 Turn the  dial to point to the date format, and then press the  dial to change it. You can choose **MDY** (mm/dd/yyyy), **DMY** (dd/mm/yyyy), or **YMD** (yyyy/mm/dd).
- 2 Turn the  dial to point to the date, and then press the  dial.
- 3 Turn the  dial to change the number, and then press the  dial to confirm it.
- 4 Set the remaining values in the same way.
- 5 To save your settings, select **Exit**. The image display turns off.
Your camera is now ready to take pictures.


Automatic power-off



To conserve battery power, the camera automatically turns off after 5 minutes if you do not press a button.

Using the control dial



Use the  dial to:

- scroll through images of pictures that you have taken.
- make selections from the camera menus, which allow you to manipulate your images and adjust the camera settings.

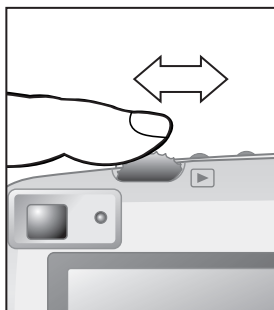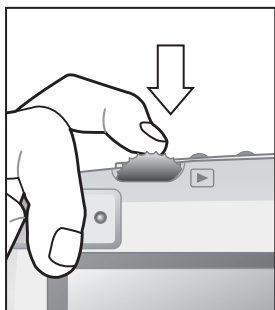
The  dial operates in two distinct ways: you can press it straight down, or you can turn it left or right.



To review your images

- 1 Press the  dial to begin reviewing your pictures on the image display on the back of the camera.
- 2 Turn the  dial to scroll through images of pictures you have taken.

To navigate the menus

- 1 Press the  dial again. The main menu appears as a row of icons across the top of the image display.



**PRINT
(DPOF)**



DELETE



**VIEW
THUMB-
NAILS**




MAGNIFY





SETUP



EXIT

- 2 Turn the  dial to the right until the desired icon is selected on the image display. Each icon represents an action or a menu. A

selected icon has a yellow border and background. A text description of the icon appears in the status line at the bottom of the image display.

- 3 Press the  dial to open the menu or perform the action represented by the icon.
- 4 Continue turning and pressing the  dial to manipulate your images or select options.

Specific instructions about using the camera menus appear throughout this guide.

Note To exit a menu without making a selection, select **Exit**.

Storing images on a CF memory card

Your digital camera comes with 8 megabytes (MB) of internal memory so that you can store images directly in the camera.

However, it also has a slot for an optional CF memory card. The CF memory card allows you to expand your camera's memory so you can take more pictures. Then, after you unload images to your computer, you can reuse the card.

With a CF memory card you can also view and save images on a computer that is equipped with a CF memory card reader, and print images directly from a printer that has a CF memory card slot.

2 Taking pictures


This chapter describes the basic process of taking pictures with your digital camera and gives you tips for taking the best pictures. When you are familiar with this process, you can use the advanced camera functions described in later chapters.

Note If the camera is on, you can take a picture anytime, even if the image display is off or shows a menu.


Taking a picture

- 1 Turn the camera on. The camera is ready to take a picture.
- 2 Frame your subject in the viewfinder.
- 3 Press and hold the **SHUTTER** button halfway down to allow the camera to adjust the focus and exposure.
- 4 When you see the green light to the right of the viewfinder, press the **SHUTTER** button all the way down.
- 5 The image display on the back of the camera turns on and displays the image for a short time.

To preserve battery power, the image display turns off after the image has been saved to memory.

To review all the pictures you have taken, press the  dial.

Tip When you are taking a picture, be careful to keep your fingers away from the lens and the flash. The following illustrations give you examples of how to hold the camera.

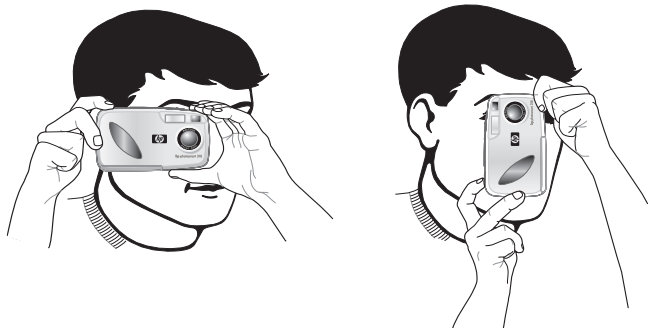

Using automatic focus and automatic exposure

The camera automatically focuses and adjusts the exposure for the current lighting conditions when you press the **SHUTTER** button halfway down.

The camera adjusts the focus and exposure automatically even if you press the **SHUTTER** button all the way down without pausing. But you are more likely to catch the perfect shot, especially when you are photographing an active subject, if you set the camera's focus and exposure early. To do this, press the **SHUTTER** button halfway down, and then press the **SHUTTER** button all the way down at the exact moment you wish to capture the image.

Note

If the camera cannot find a focus or if the exposure will be longer than 1/30 second, a yellow light appears to the right of the viewfinder. You can still take the picture, but the results might not be optimal.

Using focus lock

The automatic focus feature focuses on the subject in the middle of the picture and requires good contrast within that subject area. If you do not want your subject to be in the middle of the image or if the subject lacks contrast, use focus lock.

- 1 Frame a subject that is the same distance from the lens as your subject.
- 2 Press the **SHUTTER** button halfway down to lock the focus. Wait until you see the green light next to the viewfinder.
- 3 Keeping the **SHUTTER** button pressed halfway down, move the camera to frame your subject.
- 4 Press the **SHUTTER** button all the way down to take the picture.

Previewing your pictures

Instead of looking through the viewfinder to frame a picture, you can use the image display to preview a picture. The image display shows exactly what your picture will look like, whereas the viewfinder is slightly accurate. Preview your picture on the image display when precise framing is important, especially when you are taking a close-up shot.

Note Using the image display consumes a lot of battery power. To conserve battery power, the camera automatically turns off the image display after 60 seconds if you do not press a button.


To preview a picture

- 1 Turn the camera on.
- 2 Press the **LOI** button to turn the image display on.
- 3 Frame your picture in the image display by pointing the camera lens at your subject.
- 4 Press and hold the **SHUTTER** button halfway down to allow the camera to adjust the focus and exposure.
- 5 When you see the steady green light to the right of the viewfinder, press the **SHUTTER** button all the way down to take the picture.

To turn the image display off, press the **LOI** button.

Tips for taking the best pictures

- Try to fill the entire frame with your subject and exclude unwanted detail.
- Keep the sun behind you or at your side, not directly overhead or in front of you.
- If the light is behind your subject, use the **FLASH ON** setting to increase the light on the front of your subject.
- When the ambient light is low, use the flash. Make sure you keep the subject within the flash range (2.5 m, or about 8 feet).

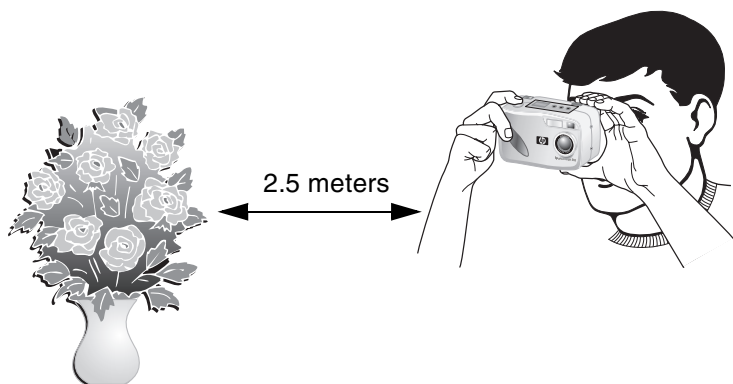

- If you use the **FLASH OFF** setting in low light, use a tripod to steady the camera during exposure.
- The camera takes about a second to focus and adjust the exposure when you press the **SHUTTER** button halfway down. Wait until you see the steady green light to the right of the viewfinder, then press the **SHUTTER** button all the way down to take the picture. If this is the first time you are using a digital camera, you might want to practice to become accustomed to the timing.
- If a yellow light appears to the right of the viewfinder when you press the **SHUTTER** button, the camera cannot find a focus or the exposure will be longer than 1/30 second (or both). Try the following:
 - Make sure that you are not too close to your subject and that you frame your pictures with the desired subject in the center. The camera's automatic focus has a range of 20 cm

(about 8 inches) to infinity and focuses on the object in the center of the frame.

- If the light on your subject is low, wait for better natural light or use the flash. For more information, see “Using the flash” on page 21.
- If the light on your subject is low and you are using the **FLASH OFF** setting, the exposure could be longer than 1/30 second. To steady the camera, mount it on a tripod.
- Set the camera’s automatic focus and automatic exposure on a different subject by using focus lock.
- Avoid taking flash photos in front of reflective objects like mirrors or glass to prevent bright spots in your photos.
- Although the camera has an electronic automatic focus system, some conditions might cause the camera to focus improperly. Some examples are in the following table.



Conditions	Examples of subjects
Black or very dark objects	Dark clothing
Objects that have no distinct or consistent form	Fountains, waterfalls, waves, smoke, flame, fireworks, a subject in mist or fog
Glossy and reflective surfaces	Glass, mirrors, automobiles
Multiple or flickering light sources	Neon signs, fluorescent lamps, television images, sun rays through trees
Rapidly moving objects	Baseballs, hummingbirds, race cars
Non-solid objects	Wire netting or fencing, latticework
Insufficient light	Sunsets, candlelight

3 Reviewing your images

After you have taken some pictures and they are stored in the camera, you can view them by using the image display. While viewing your images, you can magnify or delete images, or create a print order to print a set of photos.

Tip To preserve battery life, connect an AC power adapter (optional) while using the image display.


Viewing your images


- 1 Turn the camera on.
- 2 Press the  dial. The last picture you took or viewed appears on the image display.
- 3 Turn the  dial to scroll through your images.

Each time a new image appears on the display, the image quality indicator appears in the upper left corner of the image, represented by one, two, or three stars. The image quality indicator disappears after two seconds.

The status line at the bottom of the image display shows the following information about the current image:

- The number of the picture and the number of images stored in memory or on the CF memory card
- If the image is selected for printing, the number of copies you want to print and the print order icon
- The date the picture was taken

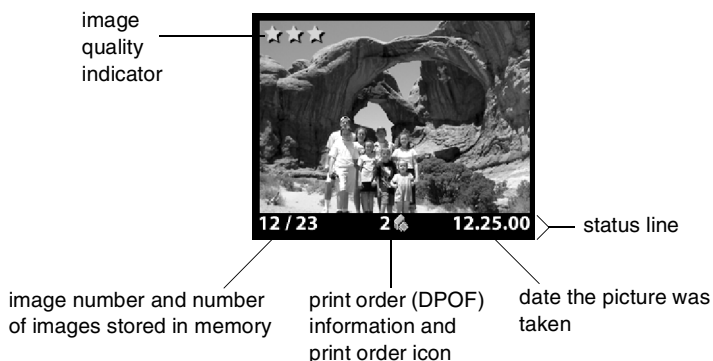

When you have finished reviewing images, be sure to turn off the image display to conserve battery power. To do this, press the IMAGE DISPLAY ON/OFF () button or turn the camera off.

Creating a print order

You can use your camera to select the images that you want to print. For example, when you gather with family and friends to view your photos, you can keep track of the photos they want copies of and then print the photos later.

With a print order you can:

- select one image, several images, or all of the images that you have stored in the camera.
- select how many copies you want of each image or of all images.

To add an image to a print order, you select the number of copies that you want to print.

Note When you are reviewing images on the image display, a print order icon appears on the status line for images that you have added to the print order.



A print order creates a Digital Print Order Format (DPOF) file. This file is stored with your images in memory.

You can print photos from your print order in one of two ways:



- If your images are stored on a CF memory card, you can insert the memory card directly into a DPOF-compatible printer. The printer reads the print order and prints the specified images.
- When you transfer your images from the camera to a computer, the print order is copied along with them. If you have set up your HP Automatic Image Unload software to do so, the computer reads the print order and prints the specified images. For more information, see “Automated Task Options” in the software’s Help.

Note An Apple Macintosh computer does not recognize a DPOF print order.


To create or edit a print order

- 1 Turn the camera on.
- 2 Press the  dial to begin reviewing your images.
- 3 If you want copies of a single image, use the  dial to scroll to the image you want to add to or remove from the print order.


Note If you want copies of all images, it does not matter which image is displayed on the image display.

- 4 Press the  dial to open the main menu, and then press the  dial to open the **Print (DPOF)** menu.



- 5 Turn the  dial to select **This Image** if you want copies of the current image. Select **All Images** if you want copies of all the images in memory.



- 6 Press the  dial.
- 7 Select the number of copies of the image that you want.



Tip To remove an image from a print order, set the number of copies for that image to zero.

Deleting your images








You can delete a single image or all images from the camera. After an image has been deleted, it cannot be recovered.

Note If you have a CF memory card installed, images are deleted only from the card.

To delete images

- 1 Turn the camera on.
- 2 Press the  dial to begin reviewing your images.
- 3 If you are deleting a single image, turn the  dial to scroll to the image you want to delete.

Note If you are deleting all images, it does not matter which image is displayed on the image display.

- 4 Press the  dial to open the main menu.
- 5 Turn the  dial to scroll to the **Delete** icon, and press the  dial to open the **Delete** menu.
- 6 Turn the  dial to select **This Image** if you want to delete the current image only or **All Images** if you want to delete all images.
- 7 Press the  dial to delete the image or images.
- 8 If you chose to delete all images, the camera asks you to confirm. To confirm, turn the  dial to select **Yes**, and then press the  dial.






Note From the **Delete** menu, you can also choose to **Format Memory** (or **Format CF Card** if a CF memory card is installed).

Viewing small versions (thumbnails) of your images



You can view up to nine of your images at the same time on the image display.

To look at thumbnails of your images

- 1 Turn the camera on.
- 2 Press the  dial twice to open the main menu.
- 3 Turn the  dial to scroll to the **View Thumbnails** icon, and then press the  dial.



The image display shows you up to nine of your images at one time, depending on how many images you have stored in memory. A yellow border frames the currently selected image.

- 4 Turn the  dial to select a different image.
- 5 Press the  dial to see the selected image in full view.

selected image






Magnifying your images



While reviewing an image, you can magnify an area of the image to three times or six times its normal size. This is helpful when you want to view a detail of an image. For example, you can check to see if people had their eyes closed when you took their picture.

Note Magnifying an image does not change the image stored in memory.


To magnify an image


- 1 Turn the camera on.
- 2 Press the  dial to begin reviewing your images.



- 3 Turn the  dial to scroll to the image you want to magnify.
- 4 Press the  dial to open the main menu.

Turn the  dial to scroll to the **Magnify** icon, and then press the  dial to magnify the image.





The camera magnifies the center of the image to three times its normal size. Turn the  dial to pan left or right in the image.


- 5 Press the  dial to open the **Magnify** menu.

- 6 To change the panning direction so you can pan up and down, turn the  dial to scroll to the double arrow icon, and then press the  dial.



- 7 To magnify the image further, turn the  dial to scroll to the magnifying glass icon, and then press the  dial.

The camera magnifies the center of the image to six times its normal size.

- 8 Repeat steps 6 and 7 to scroll the image left and right or to reduce the magnification.
- 9 To return to a full view of the image, select the **Exit** icon, and then press the  dial.

4 Adjusting the camera settings

You can modify the camera settings to fit the current picture-taking conditions and your preferences. For example, you can adjust the flash settings to fit current lighting conditions, and you can use the self-timer to take a picture with yourself in it. This chapter describes how to:

- use the flash.
- change the image quality.
- use the digital zoom.
- use the self-timer.
- set the date and time.
- change the language.
- set the welcome screen.






Using the flash

The camera offers four flash settings. The current flash setting is indicated by an icon on the status LCD. In addition, if the image display is on, a message appears about the flash setting in the status line.



Each time you turn the camera off and then on again, the flash setting automatically reverts to **AUTO FLASH**. If you change the setting, it remains until you change it or until you turn the camera off and on.


Note

The flash recharges between pictures. This is indicated by a blinking flash icon on the status LCD. In addition, if the image display is on, the message **FLASH CHARGING** might appear in the status line at the bottom of the image display when you press the **SHUTTER** button. When the flash icon stops blinking, you can take another flash picture.

Icon	Message	Description
 Auto	AUTO FLASH	The camera determines the need for a flash based on lighting conditions. The flash setting reverts to AUTO FLASH each time you turn the camera on.
  Auto	RED-EYE	The flash will be used if needed. Red-eye reduction minimizes the occurrence of red-eye in pictures of people or animals by emitting several short flashes to condition the subject's eyes to the flash, followed by a final flash to take the picture. If you are photographing people, tell them to wait for the final flash before moving.
	FLASH ON	The flash will be used in all lighting conditions. The amount of light provided by the flash will be adjusted according to the current lighting conditions. Use this setting when the lighting for the entire picture is sufficient, but the lighting for the subject is not, as in a backlighting situation. This is commonly called "fill flash."
	FLASH OFF	The flash will not be used, regardless of the lighting conditions. Use this setting in places where flash photography is not permitted. If necessary, use a tripod to hold the camera steady.

To change the flash setting

- 1 Turn the camera on.
- 2 Press the **FLASH** () button repeatedly until the flash setting you want appears on the status LCD. The  button cycles through the four available flash settings.

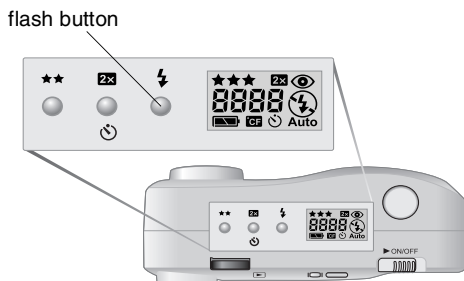

Changing the image quality

The camera has three image quality settings: Good, Better, and Best. The current image quality setting is indicated by one, two, or three stars on the status LCD. In addition, if the image display is on, **GOOD**, **BETTER** or **BEST** appears in the status line.

The image quality setting determines the quality of your images and how many images can be stored in internal memory or on the CF memory card. Pictures taken with higher image quality take up more space in memory; pictures taken with lower image quality take up less space.


Image quality	Description	Resolution
★ GOOD	This is the most memory-efficient image quality setting. Use this setting for taking pictures that you will only send in e-mail or place on the Internet.	592 by 400 (with medium compression)
★★ BETTER	This setting produces high-quality images and requires less memory than BEST mode. Use this setting for taking pictures that you plan to print 13 cm by 18 cm (5 by 7 inches) or smaller. This is the default setting.	1792 by 1200 (with medium compression)
★★★ BEST	Produces the highest-quality images and uses the most memory. Use this setting for taking pictures that you plan to crop and enlarge using image editing software, or print 20 cm by 25 cm (8 by 10 inches) or larger.	1792 by 1200 (with low compression)

Here are some important notes about the image quality setting:

- You can use different image quality settings for different images.
- The camera retains the current image quality setting until you change it, even if you turn the camera off.
- Because image quality affects the number of images that can be stored in memory or on a memory card, the number of available images (shown on the status LCD) changes as you change the image quality.

To change the image quality

- 1 Turn the camera on.
- 2 Press the **IMAGE QUALITY (★★)** button repeatedly until the quality level you want appears on the status LCD.

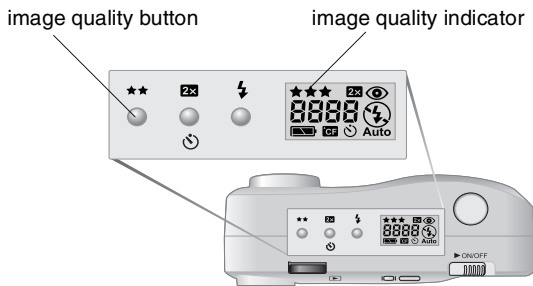


Using the digital zoom


You can use the camera's digital zoom to make a subject appear to be closer.



With digital zoom, you always use the image display to preview your image and see the effect of the zoom. The image display shows the image you will capture, as shown in the example below.



To use the digital zoom

- 1 Turn the camera on.
- 2 Press the DIGITAL ZOOM () button once to turn on the digital zoom. The image display comes on automatically and **2X DIGITAL ZOOM** appears in the status line.


Note Pressing the  button again activates the self-timer.


- 3 Use the image display to frame your subject.
To cancel the digital zoom, press the  button or press the  button twice.
- 4 Take your picture.

Using the self-timer

Use the self-timer to take a picture of yourself or a posed group. After you turn the self-timer on and press the SHUTTER button, the camera waits 10 seconds before taking the picture.

To use the self-timer


- 1 Attach the camera to a tripod or place it on a firm surface at an appropriate distance and height from the subject.
- 2 With the camera turned on, frame your subject in the viewfinder. When you are ready to take the picture, press the  button twice.

Note Pressing the  button once activates the digital zoom. Pressing it again turns off the digital zoom and turns on the self-timer.


The self-timer icon appears on the status LCD. In addition, the message **SELF-TIMER** appears in the status line.

- 3 Press the SHUTTER button all the way down, and then release it.

The red self-timer indicator light on the front of the camera blinks for 10 seconds with an increasing frequency.

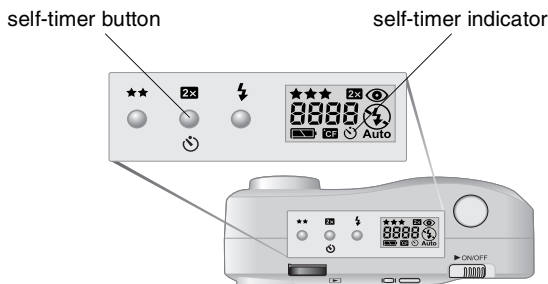

- 4 After 10 seconds, the camera takes the picture and the self-timer turns off automatically.

To cancel the self-timer before the camera takes the picture, press the  button again.

Setting the date and time






The camera has a real-time clock that records the date and time at which you take each picture.

The camera prompts you to enter the date and time under the following circumstances:

- When you turn the camera on for the first time.
- If the camera was without battery power (the batteries lost power or were removed from the camera) for an extended period of time.

Note For your convenience, the camera maintains the date and time for at least 10 minutes after you remove old batteries.

To set the date and time

- 1 Turn the camera on.
- 2 Press the  dial twice to open the main menu.
- 3 Turn the  dial to scroll to the **Setup** icon, and then press the  dial to open the **Setup** menu.
- 4 Turn the  dial to scroll to **Date & Time**, and then press the  dial.











- 5 Select the date format you want to use. You can choose **MDY** (mm/dd/yyyy), **DMY** (dd/mm/yyyy), or **YMD** (yyyy/mm/dd).
- 6 Select the day, month, and year.
- 7 Select the hour format you want to use—**12-hour** or **24-hour**.
- 8 Select the hour and minutes.
- 9 To save your settings, select **Exit**.

Changing the camera language

You can change the language used for the camera menus to one of six languages: English, French, German, Spanish, Italian, or Japanese.

To set the camera language


- 1 Turn the camera on.
- 2 Press the  dial twice to open the main menu.
- 3 Turn the  dial to scroll to the **Setup** icon, and then press the  dial to open the **Setup** menu. 
- 4 Turn the  dial to scroll to the row of flags, and then press the  dial.
- 5 Turn the  dial to scroll to the language you want, and then press the  dial.









Setting the welcome screen

When you first turn the camera on, the welcome screen displays the HP Invent logo.

You can configure the welcome screen to display an image of your choice.

To change the image on the welcome screen

- 1 Turn the camera on.
- 2 Press the  dial to begin reviewing your images.

- 3 Turn the  dial to scroll to the image that you want to use as the welcome screen.
- 4 Press the  dial to open the main menu.
- 5 Turn the  dial to scroll to the **Setup** icon, and then press the  dial to open the **Setup** menu.
- 6 Turn the  dial to scroll to **Welcome Screen**, and then press the  dial.
- 7 Turn the  dial to scroll to either **This Image** or **HP Logo**, and then press the  dial.



Sharing and printing images

After you have taken some pictures with your digital camera, you can use them in many fun and creative ways. You can transfer them to your computer for use in creative projects or for sharing with family and friends over the Internet. If you have a printer with a slot for a CompactFlash (CF) memory card, you can print your images directly from a CF memory card.

Check out HP's photosmart Web site at www.hp.com/photosmart for great ideas and tips about how to use your images to create fun projects.

This chapter describes how to use the camera with the following equipment:

- a Microsoft® Windows® computer
- a Microsoft Windows NT® computer
- an Apple Macintosh® computer
- a computer on which you have not installed the HP software
- a card reader
- a printer equipped with a card reader

Using the camera with a Windows computer

You can copy the images in your digital camera to a Microsoft Windows computer.

System requirements for a Windows computer

To work with your camera, your computer must meet or exceed the following requirements.

Processor	166 MHz Pentium or equivalent
Memory (RAM)	Windows 98, Windows Millenium Edition, Windows 2000, and Windows XP: 32 MB Windows NT 4.0: 64 MB
Free hard disk space	180 MB
Video display	640 by 480, 256 colors
CD-ROM	any speed
Operating system	Windows 98, Windows Millenium Edition, Windows 2000, Windows XP, or Windows NT 4.0
Interface	For Windows 98, Windows Millenium Edition, Windows 2000, and Windows XP: USB port For Windows NT 4.0: CF memory card and card reader (purchased separately)

For updated system requirements, go to **www.hp.com/photosmart**.

Installing the software on a Windows computer

- 1 Insert the HP photosmart 318 CD into your computer's CD-ROM drive. The installation window automatically appears.

If the installation window does not appear, use Windows Explorer or My Computer to locate your CD-ROM drive, and then double-click the file **Setup.exe**.

- 2 Click **Next**, and then follow the instructions on the screen to install the software.

The software places several icons on your desktop, including a link to the photo imaging Quick Reference.

To install the bonus software

Certain versions of the camera are shipped with bonus software.

- 1 Press and hold the SHIFT key on your computer keyboard while you insert the HP photosmart 318 CD into your computer's CD-ROM drive.

If the automatic installation starts, click **Cancel**.

- 2 Click **Start**, click **Run**, and in the **Open** box, type **X:\Bonus\setup.exe** (where *X* is the drive letter assigned to your CD-ROM drive).
- 3 Click **OK**, and then follow the instructions on the screen to install the software.

Connecting the camera to a Windows computer


Before connecting the camera to your computer, make sure you have installed the software.

Note

The camera uses a USB connection, so you do not need to turn the computer off when connecting or disconnecting the camera.

To connect the camera to a Windows computer

- 1 Make sure the camera is turned off.
- 2 Plug the smaller end of the USB cable into the camera.
- 3 Plug the flat end of the cable into any USB port on your computer.

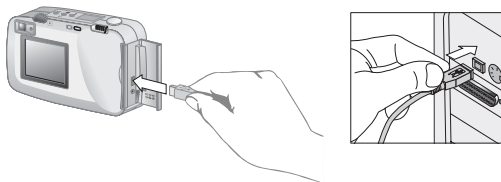

Note

When the camera is connected to your computer, only the ► **ON/OFF** switch operates. The other camera buttons do not respond.

Unloading images to a Windows computer

Unloading is the process of copying images from the camera's memory to your computer. If you have a CF memory card installed in the camera, images will be copied from the CF memory card to the computer.

You can unload images from your camera in one of three ways: automatically, manually, or by mounting the camera as a disk drive. The automatic unload procedure is the preferred method. For descriptions of the other methods, see the online documentation with the HP Photo Imaging software.

Tip

To conserve battery power, you can use an AC adapter (optional) when you are unloading images to your computer.

To unload images automatically

- 1 Connect the camera to your computer using the USB cable.
- 2 Turn the camera on.

The status LCD displays **PC** to indicate the camera is connected to a computer.

After a few seconds, the software starts. Follow the instructions on your computer screen to complete the unload process.

Note To pause the automatic unload, click anywhere in the HP Automatic Image Unload Software window.

If you have no new images in your camera when you connect it to the computer, the automatic unload does not take place.

You can set up the HP Automatic Image Unload software so that certain tasks occur automatically after the images are unloaded from the camera. You can:

- automatically view your images.
- automatically print your images.
- automatically lay out a photo album page.

To set up the automatic tasks, in the HP Automatic Image Unload Software window, click **Task Options**. For more information, double-click the **HP Quick Reference—Photo Imaging** icon that is installed on your desktop with the software.

Using the camera with a Windows NT 4.0 computer

Windows NT 4.0 does not support the USB interface, so you cannot connect your camera directly to your computer. You can save your images to a CF memory card (purchased separately) and then transfer them from the card to the computer through either a memory card slot in an HP printer equipped with one or through a memory card reader.

To use an HP printer that has a memory card slot

Follow the instructions in your printer documentation to transfer images from the memory card to your Windows NT 4.0 computer through the printer's memory card slot.

To use a memory card reader

- 1** Make sure the camera is turned off.
- 2** Remove the memory card from the camera.
- 3** Insert the memory card into the memory card slot in the memory card reader.
- 4** Turn the computer on if you haven't already.
- 5** Double-click the **HP Photo Imaging Software** icon on the Windows desktop. The main window of the HP Photo Imaging Software opens.
- 6** Click **Unload Images** in the main window. Because no USB camera is found, the software displays a dialog box in which you can select the drive letter for your memory card reader.
- 7** Select the drive letter (such as **H:**) for your memory card reader in the dialog box.
- 8** Start the HP Automatic Image Unload software and complete the steps to unload without the timer.

Using the camera with a Macintosh computer

You can transfer the images in your digital camera to an Apple Macintosh computer.

System requirements for a Macintosh computer

To work with your camera, your Macintosh computer must meet or exceed the following requirements.



Processor	Power PC, 233 MHz
Memory (RAM)	64 MB
Free hard disk space	150 MB
Video display	800 by 600, 16-bit color
CD-ROM	any speed
Operating system	MAC OS 8.6 or later






For updated system requirements, go to www.hp.com/photosmart.

Changing the PC Connect Mode setting

Before you can unload images from the camera to a Macintosh, you must change the connection setting in the **Setup** menu.

Note On your camera, the letters “PC” stand for “personal computer” and refer to a computer running either the Windows or Macintosh operating system.

- 1 Turn the camera on.
- 2 Press the  dial twice to open the main menu.
- 3 Turn the  dial to scroll to the **Setup** icon.

- 4 Press the  dial to open the **Setup** menu.
- 5 Turn the  dial to scroll to **PC Connect Mode**, and then press the  dial.
- 6 Turn the  dial to scroll to **Disk Drive**, and then press the  dial.

Installing the software on a Macintosh computer

You can unload images to your computer either manually or automatically. To use the camera's automatic unload feature, install the ArcSoft PhotoImpression with Automatic Image Unload software from the camera CD.

- 1 Insert the HP photosmart 318 CD into your computer's CD-ROM drive.
- 2 Click the installer icon, and then follow the instructions on the screen to install the software.

To install the bonus software

Certain versions of the camera are shipped with bonus software.

- 1 Insert the HP photosmart 318 CD into your computer's CD-ROM drive.
- 2 Double-click the **Bonus** folder icon.
- 3 Double-click the installer icon for Panorama Maker or PhotoFantasy.
- 4 Follow the instructions on the screen to install the software.


Connecting the camera to a Macintosh computer

Before connecting the camera to your computer, make sure you have changed the **PC Connect Mode** setting, as described earlier.

Note The camera uses a USB connection, so you do not need to turn the computer off when connecting or disconnecting the camera.

To connect the camera to a Macintosh computer

- 1 Make sure the camera is turned off.
- 2 Plug the smaller end of the USB cable (supplied) into the camera.
- 3 Plug the flat end of the cable into any USB port on your computer.

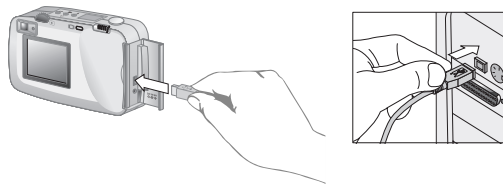

Note When the camera is connected to your computer, only the ►ON/OFF switch operates. The other camera buttons do not respond.

Unloading images to a Macintosh computer

Unloading images is the process of copying images from the camera to your computer. If you have a CF memory card installed in the camera, images will be copied from the CF memory card to the computer.

You can unload images from your camera in one of two ways: automatically or by mounting the camera as a disk drive. The automatic unload procedure is the preferred method.

Tip To conserve battery power, you can use an AC power adapter (optional) when you are unloading images to your computer.

To automatically unload images to a Macintosh computer

- 1 Connect the camera to your computer by using the USB cable.
- 2 Turn the camera on.
The status LCD displays **PC** to indicate the camera is connected to a computer.
- 3 If the welcome screen appears on your computer screen, click **OK**.
- 4 After a few seconds, the HP Automatic Image Unload window appears. When the countdown timer expires, the software begins unloading new images from the camera to the computer.

To pause the automatic unload, click **Pause**.

You can set up your HP Automatic Image Unload software so that certain tasks occur automatically after the images are unloaded from the camera. In the HP Automatic Image Unload window, click **Options**.

When all the new images have been unloaded to your computer, the ArcSoft PhotoImpression software opens and you can view, edit, print, and create projects with your images.

For more information, see the software's Help.

Tips for unloading images to a Macintosh computer

- When you unload images to your computer, the images are still stored in the camera until you delete them. If you take new pictures and then unload images again, the automatic unload software ignores the old images. That way, you do not end up with many copies of the same image on your computer.
- If you have no new images in your camera when you connect it to the computer, the automatic unload does not take place.
- You can set up specific tasks to occur automatically after the images have been unloaded from the camera such as deleting images from the camera, printing the images, or putting the images into a photo album layout. To do this, click **Options** in the HP Automatic Image Unload window.

- In the HP Automatic Image Unload Options window, you can disable the automatic unload feature. To turn the feature on again, open the Automatic Image Unload Options file in the ArcSoft PhotoImpression folder.
- The automatic unload software stores your images in a folder called Macintosh HD:ArcSoft PI:Photos:*date*. You can change only the final folder (the *date*) in that path.
- Make sure you know where your images are stored on your computer's hard disk. By default, images are stored in the PhotoImpression folder, for example **Macintosh HD:ArcSoft PI:Photos:2002.07.04**. If you ever decide to delete the ArcSoft PI folder, you must first move your images to another folder. If you do not, your images will be deleted from the hard disk when you delete the PhotoImpression folder.

Unloading images without using the software

If you are away from home, you can unload images to a computer that does not have the HP Automatic Image Unload software installed on it.

Note Make sure that the computer has a USB port and that its operating system is Windows 2000 or Windows Millennium Edition or later, or Macintosh OS 8.6 or later.

To unload images to a Windows or Macintosh computer

- 1 Change the camera's **PC Connect Mode** to **Disk Drive**. For more information, see "Changing the PC Connect Mode setting" on page 35.
- 2 Connect the camera to the Windows or Macintosh computer with the USB cable.
- 3 Turn the camera on. The letters **PC** appear in the status LCD to indicate that the camera is connected to the computer. The computer recognizes the camera as a disk drive.
- 4 Use the following procedure to access your images as files:

- *Windows*: Double-click the icon for the newly assigned disk drive in My Computer or navigate to the drive letter in Windows Explorer. Use the **Copy** and **Paste** commands to transfer selected images to your hard drive.
- *Macintosh*: Double-click the **Untitled** drive icon. Then, drag and drop the selected files to your hard drive.

Using a card reader

You can use a CF memory card reader, such as the SanDisk ImageMate or a PCMCIA adapter, to view and save image files on your computer. If you have saved your images to a CF memory card and you have a card reader installed on your computer, insert the CF memory card into the card reader. Then, access your images on the CF memory card just as you would access files on a floppy disk. See your card reader's documentation for details.

Card readers can be purchased from www.hpshopping.com (selected countries only), or from your local digital camera or electronics store.

Printing images without a computer

If your printer has a slot for a CF memory card, as the HP photosmart 1000 and higher series printers do, you can print your images directly from the card. For more information, see your printer's documentation.

6 Storing images in memory

When you first unpack your digital camera and begin taking pictures, the images are stored in the camera's internal memory. This makes it easier than ever to save pictures; there's no need for film of any kind. You can delete unwanted images from the camera anytime, making space available for new images.

However, your camera also has a slot for digital "film" in the form of a CompactFlash (CF) memory card (purchased separately). The card is more economical than conventional film because you can reuse the card over and over again. If you install a CF memory card in your camera, images are stored on the CF memory card rather than in the camera's internal memory.

Note

If your computer runs Windows NT or if it does not have a USB port, you must store images on a CF memory card. Then use a CF memory card reader to transfer images to your computer.

This chapter describes how to use your camera with or without a CF memory card and how to copy images from internal memory to a CF memory card.

Tip

As long as you have a CF memory card in the camera, you can access only the images stored on the CF memory card. For more information, see "Using both internal memory and a CF memory card" on page 46.

Determining the number of pictures you can take


You can store as many as 113 images in the camera's internal memory. The number of pictures that you can take and store in the space remaining in memory depends on several factors. Unlike conventional film, each digital image takes up a different amount of space in memory. Images that are complex and contain many details take up more space, whereas simple images take up less space. Pictures taken full size occupy more space, whereas pictures taken with digital zoom occupy less space. However, the most important factor in image size is the image quality you have selected.

The number of images remaining in memory is indicated in the status LCD on top of the camera. It is an approximate number that decreases as you take pictures.

Note You can take each picture with a different setting. As you change the settings, the number of remaining images that is indicated on the status LCD changes.

The number of images you can store in the camera depends primarily on image quality:

- Pictures taken with an image quality of **BEST** (three stars) require the most memory. You can store approximately 7 such images on the camera.
- Pictures taken with an image quality of **BETTER** (two stars) require less memory. You can store approximately 16 such images on the camera.
- Pictures taken with an image quality of **GOOD** (one star) require the least amount of memory. You can store a maximum of approximately 113 such images on the camera.

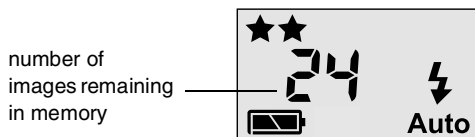

If internal memory is full, “0” appears for the remaining picture count and a red light appears to the right of the viewfinder when you press the **SHUTTER** button. In addition, if the image display is on, the message **MEMORY FULL** appears in the status line.

To resume taking pictures, unload images to your computer and delete them from the camera, or install a CF memory card.

Note The HP photosmart 318 digital camera is shipped without a CF memory card. If you do not install a CF memory card, all images are automatically stored in internal memory.


Using a CF memory card

If you install a CF memory card, all images taken after installing the CF memory card are saved to the card.

Note Even if there is space available in internal memory, images will be stored on the CF memory card.

In addition, as long as the CF memory card is in the camera, all camera operations involve the images that are on the CF memory card. The remaining image count applies to the CF memory card, and images that you review are stored on the CF memory card.

When a CF memory card is installed, the letters **CF** appear on the status LCD.

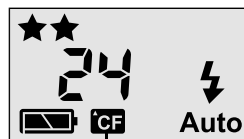

CF card indicator

Installing a CF memory card

Use only CompactFlash Association (CFA) certified type 1 CF memory cards with your digital camera. These cards are manufactured by several vendors and are available in a variety of memory sizes. You can purchase additional CF memory cards from www.hpshopping.com (selected countries only), or from your local digital camera or electronics store.




To install a CF memory card


- 1 Make sure the camera is turned off.

CAUTION Inserting or removing a CF memory card while the camera is on could damage the existing card or result in lost images.

- 2 Open the CF memory card door.
- 3 If there is a card already in the camera, remove the existing card. To do this, locate the lever on the bottom of the camera under the CF memory card door. Slide it toward the center of the camera. The card pops out.
- 4 Hold the new CF memory card so that the tiny ledge on the top rear of the card is between your fingers, the side with pinholes faces the camera, and the ledge on the back of the card faces the front of the camera.
- 5 Insert the card firmly all the way into the camera.

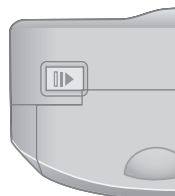

CAUTION The card should fit easily almost all the way into the slot. If it stops when it is only partially inserted, turn the card over and try again. Do not force the card into the camera.

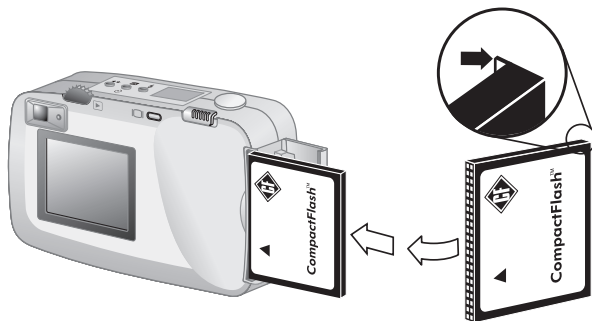

6 Gently push the CF memory card all the way into the camera.

7 Close the CF memory card door.

Tip

If you cannot close the CF memory card door, you might not have inserted the card correctly. Remove the card and try again.

Checking the CF memory card status

If you have a CF memory card installed in the camera, the letters **CF** appear in the status LCD and in the status line of the image display.

If the CF memory card is full, “0” appears for the remaining picture count and a red light appears to the right of the viewfinder when you press the **SHUTTER** button. In addition, if the image display is on, the message **CF CARD FULL** appears on the status line to indicate that you cannot take any more pictures.

If the CF memory card is damaged or unformatted, the letters **CF** appear on the status LCD and blink, and an error message appears on the image display.

To resume taking pictures, try the following steps:

- If you receive any card error indications immediately after installing a new, blank CF memory card, the card might need to be formatted.
- If the message **CF CARD FULL** appears on the image display after you have successfully taken and stored numerous images on the CF memory card, the CF memory card is full.






- If you receive the card error indications and the card is formatted and is not full, the card might be damaged. Try reformatting the card, or try a different card.

Using both internal memory and a CF memory card

If you have images stored in internal memory and you install a CF memory card, you can no longer access the images in internal memory. You have two options:

- Turn the camera off, remove the card, and turn the camera back on. You now have access to images in internal memory.
- Copy the images from internal memory to the CF memory card and access the images from the CF memory card.

To copy images from internal memory to a CF memory card

- 1 If you have not already already done so, install a CF memory card in the camera.
- 2 Turn the camera on.
- 3 Press the  dial twice to open the main menu.
- 4 Turn the  dial to scroll to the **Setup** icon, and then press the  dial to open the **Setup** menu.
- 5 Turn the  dial to scroll to **Copy to CF Card**, and then press the  dial.



Note

Copying images from internal memory to a CF memory card does not overwrite content that is already on the CF memory card. If the CF memory card does not have enough room to store all the images that are in internal memory, an error message appears. Either make room on the CF memory card or turn the camera off and replace the CF memory card.

- 6 Turn the  dial to select **Yes**, and then press the  dial.

The images are copied from internal memory to the CF memory card. Your images are still stored in internal memory until you delete them. If you have created a print order for those images, the print order is copied to the CF memory card along with the images.

Formatting memory








The internal memory installed in your digital camera is formatted at the factory. Under ordinary circumstances, you do not need to format it. However, if the camera does not store images properly, you might want to try formatting the internal memory.

CAUTION Formatting deletes everything stored in memory.

Most CF memory cards are already formatted when you buy them. However, if you buy a CF memory card that has not been formatted, you need to format it before you can store images on it. If you insert a new, formatted card in the camera and it doesn't work, try reformatting it—it may have been formatted improperly. Also reformat cards that were previously used in a different camera to optimize them for use with your camera.

Note You can reuse a CF memory card that is full by formatting it. This deletes all images and files from the card. You can also use the **Delete** menu to delete one or all images from a CF memory card.

To format internal memory or a CF memory card

- 1 Turn the camera on.
- 2 Press the  dial twice to open the main menu.
- 3 Turn the  dial to scroll to the **Delete** icon, and then press the  dial to open the **Delete** menu.
- 4 Turn the  dial to scroll to **Format Memory** or, if a CF memory card is installed, scroll to **Format CF Card**, and then press the  dial.
- 5 Turn the  dial to select **Yes**, and then press the  dial.



When memory has been formatted, the message **NO IMAGES IN MEMORY** (or **NO IMAGES ON CF CARD**) appears on the image display.

CAUTION Formatting deletes everything stored on the CF memory card, including files from other devices such as pocket computers. Make sure you are formatting the correct card! If you're not sure, check the contents of the card before you format it.

7

Powering and maintaining your camera

This chapter describes how to use batteries or an AC power adapter to power your camera, how to care for your camera, and how to use your camera safely.

Powering your camera

Your digital camera can be powered by batteries or an HP-approved AC power adapter. For convenience, use batteries when you are taking pictures. To preserve battery power, use an AC adapter (purchased separately) when you are reviewing images on the image display for an extended period of time, or when you are transferring images from the camera to your computer.

Determining if the batteries need to be changed

The battery icon on the status LCD indicates the charge level of the batteries. There are three levels of battery charge: full, partially-charged, and empty.

If the battery icon shows that the batteries are empty, it is time to replace the batteries.

Note

When the empty-battery icon on the status LCD begins blinking, the power is about to shut off. You need to replace the batteries before you can take another picture.



Full



Partially-charged



Empty

The life of the batteries depends on several factors. These include:

- how often and how long you use the image display.
- how often you use the flash.
- the number of pictures you take.
- temperature conditions (operating the camera at colder temperatures results in shorter battery life).
- the type of battery (photo-lithium batteries have the longest life, alkaline have the shortest).

To extend battery life:

- When using the camera with a computer or when using the image display for extended periods of time, use an AC power adapter that HP has approved for use with your digital camera.
- Limit your use of the image display, except when using an AC power adapter.
- Use only batteries that are designed for digital cameras, such as photo-quality alkaline, photo-lithium, or rechargeable nickel-metal hydride (NiMH) batteries, available from various battery manufacturers.
- If you are using rechargeable batteries, be sure you fully drain and recharge the batteries according to the manufacturer's instructions.
- Use only batteries that are in good condition. Batteries that show signs of leakage, corrosion, or swelling should not be installed in the camera.


Replacing batteries

The camera uses four AA batteries. You can use photo-lithium or photo-quality alkaline AA batteries, or rechargeable NiMH AA batteries. You can purchase additional batteries from your local camera or electronics store.

Note If you choose to use rechargeable batteries, you must recharge them in a separate device, outside the camera. The batteries do not recharge in the camera when you connect an AC adapter.

To insert new batteries:

- 1 Make sure the camera is turned off.
- 2 To open the battery compartment, slide the battery compartment cover in the direction of the arrow, and then lift it.
- 3 Insert four new batteries, making sure the + / – electrodes are facing the proper direction (see the diagram inside the battery compartment).
- 4 Close the battery compartment cover by sliding it into place and then clicking it shut.

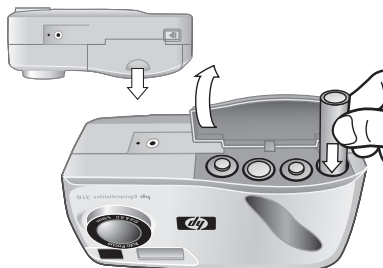

CAUTION Replace all the batteries at the same time. Do not replace the batteries individually or use batteries of different types. Always follow the instructions on the battery package when handling or disposing of batteries.

Using an AC power adapter

To extend the life of your batteries, use an AC power adapter as your power source when connecting your camera to a computer or when using the image display for an extended period.

Use only an AC power adapter that HP has approved for use with the camera. Use of any other adapter will void your warranty and can damage your camera.


AC power adapters are available at www.hpshopping.com (selected countries only). For AC adapter specifications, see HP's photosmart Web site at www.hp.com/photosmart and click **support**.

To connect an AC power adapter:

- 1 Plug the adapter into a power source (such as a wall outlet or power strip).
- 2 Connect the round end of the adapter cable to the camera.

Note

If you want to use battery power, remove the AC adapter from the camera. If the AC adapter is connected to the camera, even if it is not connected to a power source, the camera will not use battery power.

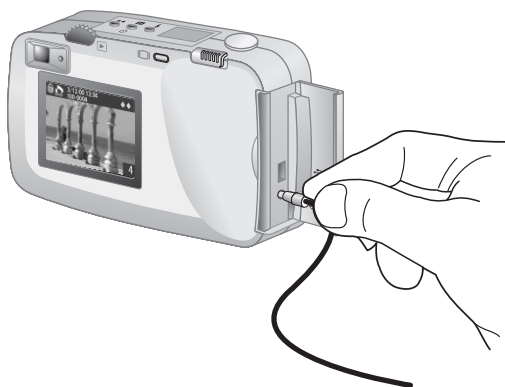

Caring for your camera and accessories

Camera

- Keep the lens clean to help you take sharp, clear photos with the best possible focus. Use a dry, soft, lint-free cloth to gently wipe the lens and status and image displays to clean off any fingerprints and dust.
- Wipe the outside surfaces of the camera with a clean, dry cloth. Never use a rough cloth or abrasive cleaners, which can scratch the camera.
- Do not leave the camera in the sun or in a very warm location (for example, inside a car) for long periods.
- If you move the camera from a cold to a warm location or vice versa, always allow the camera several minutes to adjust to the current ambient temperature before you use it.

Memory cards

- To avoid erasing data from a memory card or damaging the card, do not expose it to heat, moisture, or static electricity.

Safety precautions

- To avoid the risk of electric shock, do not open the camera case or attempt to repair the camera yourself. Contact an authorized HP Service Center for repairs.
- Keep the camera dry. Exposing the camera to excessive moisture can cause it to malfunction.
- If moisture gets inside the camera, stop using the camera immediately. Allow the camera to air dry completely before operating it again.
- Your digital camera comes with four non-rechargeable batteries. Do *not* attempt to recharge these batteries. Do *not* mix old and new batteries or batteries of different types. Follow the battery manufacturer's safety instructions.
- When disposing of batteries, follow the battery manufacturer's disposal and recycling instructions or the guidelines that are recommended for your area. Do *not* incinerate or puncture batteries.



Batteries are delivered with this product.
When empty do not throw them away
but collect as small chemical waste.

- Use only the HP-approved AC power adapter. Failure to do so could damage the camera or cause a fire. Use of a non-HP AC power adapter will also void your camera's warranty.
- The image display of your digital camera contains mercury. Disposal of this material may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or EIA: www.eiae.org.

8 Troubleshooting, support, and warranties

Problems and solutions

Problem	Possible cause	Solution
The camera does not turn on.	The batteries are not functioning correctly.	Check the following conditions: <ul style="list-style-type: none">• The type of batteries that you have installed in the camera may not be the appropriate type for a digital camera. Use only four photo-quality AA lithium, alkaline, or NiMH batteries.• Make sure the batteries are inserted correctly. The positive and negative poles may be reversed.• The charge in the batteries may be low or completely drained. Try installing new or recharged batteries.
	The AC adapter is not functioning correctly.	Check the following conditions: <ul style="list-style-type: none">• The AC power adapter is plugged into an electrical outlet.• There is power at the outlet.• The AC power adapter is not damaged.

Problem	Possible cause	Solution
	You have an AC power adapter connected to the camera, but it is not connected to a power source.	When you have an AC adapter connected to the camera, the camera does not use battery power even if the adapter is not connected to a power source. If you want to use battery power, disconnect the AC adapter from the camera. If you want to use AC power, connect the AC adapter to a working electrical outlet.
The camera does not respond when I press a button.	The camera is off.	Turn the camera on.
	The camera is connected to a computer.	If the status LCD displays the letters PC , the camera buttons do not respond.
	The batteries are empty.	Replace the batteries.
	The camera needs to be reset.	Turn the camera off and then on again. Remove the batteries and reinstall them. If you are using an AC power adapter, disconnect the adapter from the camera, remove and reinstall the batteries, and then reconnect the adapter.
I replace the camera batteries frequently.	Extended use of the image display consumes battery power. Unloading images to your computer can also consume a lot of battery power.	To extend the life of your batteries: <ul style="list-style-type: none"> • Always use an AC adapter to power the camera when you are using the image display for an extended period of time and when you are unloading images to your computer. • Limit your use of the image display. • Do not use ordinary alkaline batteries. Purchase higher-grade batteries, such as “ultra-” or “premium-” grade alkaline or lithium batteries, or switch to rechargeable NiMH batteries. These batteries are available from various battery manufacturers.
	The camera turns on and consumes battery power while you carry it loose in a purse or backpack.	Always carry the camera securely in a case.

Problem	Possible cause	Solution
	The NiMH batteries you are using were recharged incorrectly.	You must recharge all four NiMH batteries after fully draining them four times for the batteries to reach their optimum capacity and performance.
The wrong date and/or time is shown.	The batteries were dead or were removed from the camera for more than 10 minutes.	Replace the batteries and then reset the date and time using the camera menus. To avoid losing date and time information, replace low batteries promptly.
The incorrect language is set on the camera.	The wrong language was selected when you started the camera the first time.	Change the camera language by using the camera's Setup menu.
A long delay occurs after I press the shutter button before the camera takes a picture.	The camera is still saving the last picture you took.	Wait a few seconds for the camera to finish processing the image, and then press the SHUTTER button halfway down. When a steady green light appears next to the viewfinder, the camera is ready to take another picture.
	The flash is recharging.	Wait until the flash icon on the status LCD stops blinking before taking another flash picture.
	The light is low and the flash is turned off.	In dim light the camera requires a longer exposure. Either hold the camera very steady until it takes the picture; or improve the lighting conditions or use the flash.
A red light appears next to the viewfinder when I press the shutter button.	Space in memory is insufficient for the picture. (The status LCD shows "0" images remaining.)	<p>Make room in memory by deleting or unloading images, or select a lower image quality setting.</p> <p>If you do not have a CF memory card installed, installing one will give you room for more images. If you have a CF memory card, remove it and see if you have room in internal memory (the status LCD shows a number other than 0), or install a new CF memory card. For more information, see "Installing a CF memory card" on page 44.</p>


Problem	Possible cause	Solution
	The memory card that you have in the camera is damaged or is not formatted.	Format the memory card or replace it with a new, formatted card.
A yellow light appears next to the viewfinder when I press the shutter button halfway down.	The camera cannot find a focus because you are too close to the subject.	The camera's automatic focus range is 20 cm (~8 inches) to infinity and focuses on the object in the center of the frame. Make sure you are not too close to the subject and that you have placed the subject in the middle of the frame.
	The camera cannot find a focus because the subject does not provide enough contrast for the automatic focus system.	Try a different angle or change the lighting on your subject. You can also use focus lock to set the focus on a different subject. For more information, see "Using focus lock" on page 10.
	The exposure will be longer than 1/30 second because the light is dim and the flash has been turned off.	Try the following solutions: <ul style="list-style-type: none"> • Use the flash. • Wait for lighting conditions to improve or turn on the lights in the room. • Use a tripod to steady the camera for the longer exposure.
My image is blurry.	Your subject was too close to the camera lens.	The camera's automatic focus range is 20 cm (~8 inches) from the front of the lens to infinity. For a clear, sharp image, make sure your subject is within this range.
	The subject wasn't centered in the frame, or the subject did not provide enough contrast for the camera to focus properly.	If you do not want your subject in the middle of the image, or if the subject lacks contrast, use focus lock to set the camera's automatic focus using a different subject. For more information, see "Using focus lock" on page 10.
	The subject moved while you took the picture.	If you are photographing a moving object, try using focus lock.
	You moved the camera while you took the picture.	Hold the camera steady as you press the SHUTTER button, or use a tripod.




Problem	Possible cause	Solution
My image is too dark.	There was not enough light.	Wait for natural lighting conditions to improve, add indirect lighting, or use the flash to illuminate your subject.
	The flash was on, but the subject was too far away.	The flash can only illuminate objects that are within 2.5 m (~8 feet) of the camera. Make sure your subject is within range of the flash when you take the picture.
	A light shone behind the subject.	Use FLASH ON to brighten the subject when there is a back light.
	Your finger blocked the flash.	Be sure to move your fingers away from the flash when you are ready to take a picture.
My image is too bright.	The flash provided too much light.	Change the flash setting to AUTO or OFF .
	A natural or artificial source other than the flash provided too much light.	Try taking the picture from a different angle. Avoid pointing the camera directly toward a bright light or reflective surface on a sunny day. If there is light behind your subject, use the FLASH ON setting.
	You were too close to the subject to use the flash.	Move back from the subject or set the flash to FLASH OFF and take the picture again.
When I connect the camera to my computer, the software says it can't find the camera.	The camera is turned off.	Turn the camera on.
	The USB cable is not connected correctly.	Make sure that the USB cable is firmly connected at both ends.
	The camera is connected to the computer through a USB hub and your USB hub is not compatible with the camera.	Connect the camera directly to a USB port on the computer.
	The camera needs to be reset.	Turn the camera off and then on again.

Problem	Possible cause	Solution
The computer does not recognize the camera and the automatic image unload does not start.	The camera is not configured correctly for the type of computer you have.	Open the Setup menu and check the PC Connect Mode setting: <ul style="list-style-type: none"> If you are using a Windows computer, make sure PC Connect Mode is set to Digital Camera. If you are using a Macintosh computer, make sure PC Connect Mode is set to Disk Drive.
	You have not taken any new pictures since the last time you unloaded images to your computer.	When you unload images to your computer, the images are still stored in the camera until you delete them. If you take new pictures and then unload images again, the automatic unload software ignores the old images. If you have no new images in your camera when you connect it to the computer, the automatic unload does not take place.
	Your Macintosh computer has an older version of OS 8.6, which does not support USB mass storage.	Go to the Support section of www.apple.com and download the USB Mass Storage Support (version 1.3.5) update.

Error messages

If an error message appears on the image display, try one of the following solutions.

Error message	Possible cause	Solution
BAD CF CARD!	The CF memory card is damaged.	Reformat the CF memory card or replace the card.
BATTERIES ARE TOO LOW FOR LIVE VIEW	Power in the batteries is insufficient for you to preview your pictures. However, you can take pictures or review your images.	Press the  button to turn the image display off and use the viewfinder to frame your pictures.

Error message	Possible cause	Solution
CF CARD REQUIRES FORMATTING	The CF memory card needs to be formatted.	Format the CF memory card.
INVALID DATE!	You set an invalid date, such as February 31, 2002.	Use the  dial to set a valid date.
NO IMAGES ON CF CARD	You attempted to view images, but no images are stored on the CF card that is in the camera. (This message appears automatically when you delete all images or format the CF card.)	Take a picture or press the  button. If you have images stored in internal memory and you want to view them, turn off the camera, remove the CF card, and turn the camera back on. For more information, see “Using both internal memory and a CF memory card” on page 46.
NO IMAGES IN MEMORY	You attempted to view images, but there are no images stored in internal memory. (This message appears automatically when you delete all images or format the camera’s internal memory.)	Take a picture or press the  button. For more information, see “Storing images in memory” on page 41.
NOT ENOUGH ROOM ON CF CARD	You attempted to copy images from internal memory to a CF card, but space on the CF card is insufficient for all the images.	Delete some of the images on the CF card or replace the card with one with more storage capacity. Or remove the card, delete some of the images in internal memory, and try again.

Getting assistance

HP provides several resources on the World Wide Web to provide help with your camera whenever you want.

Visiting HP Web sites

HP product support

Visit www.hp.com/go/support to find information for your camera model. After you enter the section that covers your camera model, you will be able to choose information about setting up and using your camera, downloading drivers, solving a problem, ordering, and information about the warranty.

HP photosmart Web site

Visit www.hp.com/photosmart for:

- Tips for using your camera more effectively and creatively.
- HP digital camera driver updates and software.

HP assistance

If you cannot find an answer to your question using the sites listed above, visit www.hp.com/cposupport/mail_support.html. From there, you can discover how to contact HP through e-mail, phone, and other methods.

Visiting related Web sites

Links to third-party Web sites are provided solely as a convenience to you. HP has not reviewed all of these third-party sites and does not control and is not responsible for any of these sites or their content. Thus, HP does not endorse or make any representations about them, or any information, software or other products or materials found there, or any results that may be obtained from using them. If you decide to access any of the third-party sites, you do this entirely at your own risk.

Contacting HP Customer Support

In addition to the Web, you can contact HP by telephone or mail for support and service for your camera. Prices, availability, and hours of support are subject to change without notice.

How HP can help

HP's support hotline can help resolve problems with setup, installation, configuration, and operation.

For questions about operating systems or network configurations, contact your point of purchase or internal support department. For help with non-HP hardware or software, please contact the manufacturer.

Before you call

Please have the following information ready before you call:

- serial number (found on the bottom of your camera)
- product name
- date of purchase

Obtaining support within the United States

Free telephone support for one year

Within one year of your purchase, telephone support is provided to you free of charge. If this is a long distance call for you, long distance charges will apply.

Call (208) 323-2551.

Our support staff is available from 6 am to 10 pm Mountain Time, Monday through Friday, and 9 am to 4 pm on Saturday.

After the first year

Call (208) 323-2551.

Charges are \$25.00 per issue, charged to your credit card. If you think your HP product might need service, call the Customer Support Center, which can help determine if service is required.

Upgraded warranty options

You can select one of the following upgraded warranty options (available in the U.S. only):

- Standard Next Day Exchange
- Accidental Damage Protection with Next Day Exchange

Upgrade your standard factory warranty to three years with the HP SupportPack. Service coverage begins on product purchase date and the pack must be purchased within the first 180 days of product purchase. HP will determine the hardware service offering based upon the outcome of system self-test programs run by the customer through the initial call to the HP Customer Care Center. If during your technical support call it is determined that your product needs replacement, then HP will ship you this replacement product next business day free of charge. Optional Accidental Damage Protection is also available. This warranty upgrade protects against accidental breakage such as spills, drops, or falls. Both of these warranty upgrades offer maximized uptime and productivity, the convenience of door-to-door pickup with delivery, packaging and freight prepaid by HP.

For more information please visit www.hp.com/go/hpsupportpack or call 1-888-999-4747.

Obtaining support worldwide

If you need help with your HP product, please call the phone number listed below for the Customer Support Center in your country. Telephone support is free for 1 year in Asia and the South Pacific and 30 days in the Middle East and Africa.

For phone support in Europe, please check for the details and conditions of phone support in your country by consulting the following Web site: www.hp.com/go/support. Alternatively, you can ask your dealer or call HP at the phone number indicated in this booklet. As part of our constant efforts to improve our phone support service, we advise you to check our Web site on a regular basis for new information regarding service features and delivery.

If you think your HP product may need service, call the Customer Support Center, which can help determine if service is required and direct you to a service site. Otherwise, contact the store where you purchased the product. Or, visit www.hp.com/cpsosupport/guide/psd/repairhelp.html for the nearest sales and service office.

If the number below has changed, visit www.hp.com/cposupport/mail_support.html to check for a new one.

Argentina

(5411) 4778 8380
0810 555 5520 (clientes del interior)

Australia

+63 (3) 8877 8000

Austria

+0810 00 6080

Belgium

Dutch: +32 (0)2 626 8806

French: +32 (0)2 626 8807

Brazil

(11) 3747 7799 (Grande São Paulo)

0800 157 751 (Demais regiões)

Canada

905 206 4663 (for support during the warranty period)

877 621 4722 (for support after the warranty period)

Chile

800 22 5547 (Post-sales Business Computing)

800 360 999 (Post-sales Home Computing)

China

+86 (10) 6564 5959

Colombia

+9 800 919 477

Czech Republic

+42 (0)2 6130 7310

Denmark

+45 39 29 4099

Finland

+358 (0)203 47 288

France

+33 (0)1 43 62 34 34

Germany

+49 (0)180 52 58 143 (24 pf/min)

Greece

+30 (0)1 619 64 11

Guatemala

1 800 999 5305

Hong Kong

+852 800 967729

Hungary

+36 (0)1 382 1111

India

+91 11 682 6035

Indonesia

+62 (21) 350 3408

Ireland

+353 (0)1 662 5525

Israel

+972 (0)9 952 48 48

Italy

+39 02 264 10350

Japan

+81 3 3335 8333

Korea, Republic of

+82 (2) 3270 0700 (Seoul)

080 999 0700 (outside Seoul)

Malaysia

+60 (3) 295 2566 (Kuala Lumpur)

1 300 88 00 28 (Penang)

Mexico

52 58 9922 (Mexico City)
01-800-472-6684 (outside
Mexico City)

Middle East/Africa

+44 (0) 207 512 52 02

Netherlands

+31 (0)20 606 8751

New Zealand

+64 (9) 356 6640

Norway

+47 22 11 6299

Peru

0 800 10111

Philippines

+63 (2) 867-3551

Poland

+48 22 519 06 00

Portugal

+351 21 3176333

Puerto Rico

1 877 232 0589

Russian Federation

+7 095 797 3520 (Moscow)
+7 812 346 7997 (St. Petersburg)

Singapore

+65 272 5300

South Africa

086 000 1030 (RSA)
+27-11 258 9301 (outside RSA)

Spain

+34 902 321 123

Sweden

+46 (0)8 619 2170

Switzerland

+41 (0)848 80 11 11

Taiwan

+886 (2) 2717 0055

Thailand

+66 (2) 661 4000 (Bankok)
+66 (53) 357990 (Chiang-Mai)

Turkey

+90 (216) 579 71 71

Ukraine

+7 (380-44) 490-3520

United Arab Emirates

971 4 883 8454

Hewlett-Packard limited warranty statement

HP product	Duration of limited warranty
HP Photo Imaging Software	One year
HP photosmart 318 digital camera	One year

- 1 HP warrants to you, the end-user customer, that HP hardware, accessories and supplies will be free from defects in materials and workmanship after the date of purchase, for the period specified above. If HP receives notice of such defects during the warranty period, HP will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or equivalent in performance to new.
- 2 HP warrants to you that HP software will not fail to execute its programming instructions after the date of purchase, for the period specified above, due to defects in material and workmanship when properly installed and used. If HP receives notice of such defects during the warranty period, HP will replace software which does not execute its programming instructions due to such defects.
- 3 HP does not warrant that the operation of HP products will be uninterrupted or error free. If HP is unable, within a reasonable time, to repair or replace any product to a condition as warranted, you will be entitled to a refund of the purchase price upon prompt return of the product.
- 4 HP products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.
- 5 Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by HP, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.
- 6 TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND HP SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE. Some countries, states or provinces do not allow limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This warranty gives you specific legal rights and you might also have other rights that vary from country to country, state to state, or province to province.
- 7 HP's limited warranty is valid in any country or locality where HP has a support presence for this product and where HP has marketed this product. The level of warranty service you receive may vary according to local standards. HP will not alter form, fit or function of the product to make it operate in a country for which it was never intended to function for legal or regulatory reasons.
- 8 TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER

DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

- 9 THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Hardware repair services

If you think your camera, ADF, or XPA needs repair, first call the Customer Support Center, which can help determine if service is required and direct you to a service site. For more information, see "Contacting HP Customer Support" on page 63. Otherwise, contact the store where you purchased the product. Or, visit **www.hp.com/cpso-support/guide/psd/repairhelp.html** for the nearest sales and service office.








Service is free of charge during the warranty period. Beyond the warranty period, service will be charged.












Appendix A: Reference

This appendix describes:

- the symbols on the status LCD.
- the camera indicator lights.
- the camera specifications.

Symbols on the status LCD

Icon	Meaning
	Batteries full
	Batteries partially charged
	Batteries empty; sufficient memory for a few pictures
	(blinking) Batteries empty; insufficient memory for taking pictures
 Auto	Automatic flash on
	Flash off
	Flash on

Icon	Meaning
 Auto	Automatic flash with red-eye reduction on
	Good photo quality
	Better photo quality
	Best photo quality
	Photo included in DPOF print order
	Self-timer on
	CF memory card in camera
	Digital zoom on
	Pictures remaining
	(blinking) CF memory card error
	Camera connected to computer

Camera indicator lights

self-timer light



viewfinder indicator light



Indicator light	State	Meaning
Viewfinder	Green	The camera has achieved the best focus and exposure and is ready to take a photo.
	Yellow	The camera cannot find a focus or the exposure will take longer than 1/30 second.
	Red	The camera cannot take a photo for one of the following reasons: <ul style="list-style-type: none"> • internal memory is full • the memory card is full, damaged, unformatted, or missing
Self-timer	Red – blinking	The self-timer is counting down 10 seconds and will then take the photo.

Camera specifications

Sensor	2.31 megapixels, 1/2.6-inch CCD
Color depth	30-bit
Resolution	BEST and BETTER photo quality settings: 1792 x 1200 pixels GOOD photo quality setting: 592 x 400 pixels
Internal memory	8 megabytes (MB)
Memory card	Compact Flash Type I; all storage sizes supported
Lens system	5-element lens; F2.8; TTL auto focus; 6.8 mm (equivalent to a 43mm lens on a 35 mm conventional film camera)
Zoom	2x digital zoom
Shooting modes	Single shot
Exposure control	Auto exposure
Aperture	f/2.8 and f/8.0
Shutter speed	1.4 ms to 320 ms
Focus	TTL auto focus; 20 cm (7.9 inches) to infinity
Sensitivity	ISO 100
White balance	Auto
Self-timer	10-second delay
Viewfinder	Optical viewfinder
Flash	Built-in flash with range up to 2.5 meters (8.2 feet); modes: auto, auto with red-eye reduction, on, off
LCD	1.8 inch color LCD with 61,600 pixels (280 x 220); 3x and 6x playback magnification
Power	4 AA batteries (included) or optional AC adapter
Interface	USB
Dimensions	113 mm (4.52 inches) long by 43 mm (1.72 inches) wide by 68 mm (2.72 inches) high
Weight	186 g (6.6 oz.) without batteries

Index

Numerics

- 2x digital zoom 2, 24
- 2x DIGITAL ZOOM message 25
- 2x timer button 25

A

- AC power adapter 52
- adapter. *See* AC power adapter
- aperture 72
- Apple Macintosh. *See* Macintosh computer
- ArcSoft Photolmpression 39
- AUTO FLASH message 22
- Auto Flash setting 22
- AUTO icon 22
- auto power 5
- automatic exposure 10
- automatic flash. *See* flash
- automatic focus 10, 13, 58
- Automatic Image Unload Options window 39

B

- backlighting 22
- BAD CF CARD! message 60
- batteries
 - cautions 54
 - charge levels 49, 69
 - compartment door 2
 - determining replacement need 49
 - disposing of 54
 - empty 69
 - extending life 50, 56
 - icon 49, 69
 - installing 3
 - need replacement frequently 56
 - removing 51
 - types to use 3, 50
 - using rechargeable 50
- BATTERIES ARE TOO LOW FOR LIVE VIEW message 60
- battery level indicator 2
- BETTER and BEST image qualities 23
- blinking
 - battery icon 49, 69

- flash icon 22
- memory card icon 70
- self-timer icon 71
- bonus software 31, 36

C

- card reader 40
- caring for the camera 53
- cautions
 - batteries 54
 - memory card 53
 - safety 54
- CF (CompactFlash) memory card
 - capacity 45
 - checking status 45
 - compartment door 2
 - description 7, 41
 - ejector lever 2
 - formatting 47
 - indicator 2, 43, 70
 - installing 44
 - precautions 53
 - removing 44
 - reusing 47
 - using 43
 - using with internal memory 46
- CF CARD FULL message 45
- CF CARD REQUIRES FORMATTING message 61
- CF card. *See* CF (CompactFlash) memory card
- CF message 43
- changing
 - date and time 5
 - exposure automatically 10
 - flash setting 22
 - focus automatically 10
 - image quality 23
 - language 27
 - PC Connect Mode 35
 - print orders 16
 - settings 21
 - Welcome screen 27
- charge levels for batteries 49, 69
- charging

- batteries 50
- flash 22
- cleaning the camera 53
- clock 26
- color depth 72
- Compact Flash memory card reader.
 - See card reader
- CompactFlash (CF) memory card. *See*
 - CF (CompactFlash) memory card
- connecting
 - AC power adapter 52
 - to Macintosh computer 36
 - to Windows computer 31
- conserving power
 - automatically 5, 9, 11
 - using AC power adapter 15
 - when unloading images 32
- control dial 2, 6
- Copy to CF Card 46
- copying
 - images from internal memory to
 - memory card 46
 - images to Macintosh computer 37
 - images to Windows computer 32
 - print orders from internal memory to
 - memory card 47
- customer support
 - contacting 63, 64
 - Web sites 62

D

- date
 - losing 26
 - picture was taken, where shown 15
 - setting 26
 - wrong one displayed 57
- Date & Time menu 26
- delay for self-timer 72
- Delete menu 6, 18
- deleting
 - contents of memory 47
 - images from memory 18
- Digital Print Order Format (DPOF) file 16
- digital zoom
 - button and indicator 2, 70
 - using 24
- disposing of materials 54
- downloading images
 - pausing 33
 - to Macintosh computer 37
 - to Windows computer 32
- DPOF (Digital Print Order Format) file 16

- driver updates 62

E

- empty battery icon 49, 69
- enlarging images 19
- Exit menu 6
- exiting camera menus 7
- exposures
 - automatic 10
 - control 72
 - using shutter button 10
- extending battery life 50, 56

F

- fill flash 22
- flash
 - button 2, 22
 - fill 22
 - icons 21, 69
 - location 2
 - provided too much light 59
 - range 59
 - recharging 22
 - setting indicator 2
 - setting off 22
 - using 12, 13, 21
- FLASH CHARGING message 22
- flash memory. *See* CF (CompactFlash) memory card
- FLASH ON and FLASH OFF messages 22
- focusing
 - automatically 10
 - locking 10
 - reasons for improper 13
- formatting
 - CF (CompactFlash) memory card 47
 - memory 47
- framing images
 - using image display 11
 - using viewfinder 9
 - when precision is important 11
- full memory 43

G

- GOOD image quality 23
- green light next to viewfinder 71
- groups, using self-timer for 25

H

- help. *See* customer support
- holding the camera 9

HP photosmart Web site 62
HP product support Web site 62
HP Quick Reference-Photo Imaging icon
33
HP SupportPack 64

I

icons

AUTO FLASH 22
battery 49, 69
flash 21, 69
FLASH ON and FLASH OFF 22
HP Quick Reference-Photo Imaging
33

image quality 70
on status LCD 69
print order 15, 70
RED-EYE 22
self-timer 25, 70

image display 11

image number, where shown 15

image quality

changing 23
effect on memory 42
GOOD, BETTER, and BEST 23
icons 70
indicators 2, 15, 23
most memory-efficient 23

images

0 remaining 57
blurry, dark, or bright 58
changing quality 23
copying from internal memory to
memory card 46
deleting 18
determining number that can be stored
42
framing 9, 11
intended for cropping and enlarging
using image editing software 23
intended for e-mail 23
intended for Internet 23
magnifying 19
making appear closer 24
printing 16, 29
remaining 2, 57
sharing 29
storing 41
transferring 29
unloading to Macintosh computer 37
unloading to Windows computer 32
unloading without using software 39

viewing 6, 15
viewing thumbnails 19
See also pictures

increasing memory 57

indicators

battery level 2
digital zoom 2, 70
flash 22
flash setting 2
image quality 2, 23
images remaining 2, 70
memory card 2, 43, 70
print order 70
red-eye reduction 70
self-timer 2, 26, 71
viewfinder 71

inserting batteries 3

installing

batteries 3, 51
bonus software 31, 36
memory card 44
software on Macintosh computer 36
software on Windows computer 31
wrist strap 3

INVALID DATE! message 61

L

language

changing 27
wrong one displayed 57

LCD specifications 72

lens

location 2
specifications 72

lighting

adjusting camera for 10
flash settings 22
multiple flickering sources 13
when behind subject 12
when low 12, 13, 58

lights. *See* indicators

locking the focus 10
low lighting 12, 13, 58

M

Macintosh computer

bonus software 36
connecting camera to 36
disabling automatic unload feature 39
downloading images 37
installing software 36
system requirements 35

- tips for unloading to 38
- unloading images 37, 39
- using camera with 35
- Web site 60
- magnification for playback 72
- Magnify menu 6, 19
- magnifying images 19
- main menu 6
- maintaining the camera 53
- memory
 - CF (CompactFlash) card 7
 - deleting contents 47
 - deleting images 18
 - effect of image quality 42
 - full 43
 - increasing 57
 - insufficient 57
 - internal with camera 7
 - most efficient image quality 23
 - required for images 42
 - requirement for Windows 30, 35
 - specifications 72
 - storing images 41
 - using with memory card 46
- MEMORY FULL message 43
- menus
 - choosing language 4
 - Copy to CF Card 46
 - Date & Time 26
 - Delete 6, 18
 - Exit 6
 - exiting without making a selection 7
 - illustration 6
 - Magnify 6, 19
 - main 6
 - navigating 6
 - PC Connect Mode 35
 - Print (DPOF) 6, 17
 - selecting 6
 - Setup 6
 - View Thumbnails 6, 19
 - Welcome Screen 27
- messages, error 60
- modes
 - flash 22
 - image quality 23
 - PC Connect 35
 - shooting 72
- mount for tripod 2

N

NO IMAGES IN MEMORY message 48,

61

NO IMAGES ON CF CARD message 48, 61

NOT ENOUGH ROOM ON CF CARD message 61

O

on and off, turning camera 4

P

parts of camera 1

pausing while unloading images 33

PC Connect Mode 35

phone numbers for support 63, 64

photographs. *See* images; pictures

pictures

- date taken, where shown 15
- focusing and adjusting exposure 10
- framing 11
- holding the camera 9
- previewing 11
- remaining indicator 70
- settings for light conditions 22
- taking 9
- taking for difficult subjects 13
- tips for taking 12
- using the flash 21
- See also* images

playback magnification 72

playback menu. *See* main menu

port requirements 30

posed groups, using self-timer for 25

power

- automatic conservation 5
- conserving 9, 11, 15, 32, 49
- specifications 72

power adapter. *See* AC power adapter

power switch 2, 4

powering the camera 49

previewing. *See* viewing

Print (DPOF) menu 6, 17

print orders

- adding 16
- copying from internal memory to memory card 47
- creating and editing 16
- indicator 70
- where shown 15

printing

- from a memory card 29, 40
- images 16, 29
- without a computer 40

- problems, troubleshooting 55
- processor requirements 30, 35
- purchasing
 - AC power adapter 52
 - card reader 40
 - HP SupportPack 64

Q

- quality of images
 - changing 23
 - effect on memory 42
 - good, better, and best 23

R

- range
 - for automatic focus 13, 58
 - for flash 59
- recharging
 - batteries 50
 - flash 22
- recycling materials 54
- red light next to viewfinder 57, 71
- RED-EYE message 22
- red-eye reduction 22, 70
- reformatting memory card 47
- remaining number of pictures 2, 15
- removing
 - batteries 51
 - contents of memory 47
 - images from memory 18
 - memory card 44
- repair services 68
- replacing
 - batteries 3, 51
 - camera 64
 - memory card 44
 - needed too frequently for batteries 56
- requirements
 - AC power adapter 52
 - batteries 51
 - Macintosh computer 35
 - memory cards 44
 - Windows computer 30
- resetting the camera 56
- resolutions
 - image quality 23
 - specifications 72
- response, none from camera 56
- reusing CF memory card 47

S

- safety precautions 54

- sales and service offices 68
- saved images, viewing 15
- saving
 - images using card reader 40
 - memory through image quality 23
- self-timer
 - blinking icon 71
 - button and indicator 2, 26, 71
 - canceling 26
 - delay 72
 - icon 25, 70
 - using 25
- SELF-TIMER message 25
- setting up the camera 3, 4, 5
- Setup menu 6
- sharing images 29
- shooting modes 72
- shutter button
 - location 2
 - red light appears 57
 - using to set focus and exposure 10
 - yellow light appears 58
- shutter speed 72
- slot for memory card 7
- software
 - bonus 31, 36
 - cannot find camera 59
 - installing on Macintosh computer 36
 - installing on Windows computer 31
 - obtaining updates 62
 - USB Mass Storage Support 60
 - warranty 67
- specifications
 - AC power adapter 52
 - camera 72
 - speed of shutter 72
- starting
 - camera 4
 - self-timer 25
- status
 - battery 49
 - camera 4
 - CF (CompactFlash) memory card 45
- status LCD
 - location 2, 4
 - symbols 69
- status line 15
- stopping
 - camera 4
 - self-timer 26
- stored images, viewing 15
- storing images

- determining possible number 42
 - in memory 41
- strobe. *See* flash
- SupportPack 64

T

- taking pictures 9
- telephone numbers for support 63, 64
- third-party Web sites 62
- thumbnails, viewing 19
- time
 - losing 26
 - setting 26
 - wrong one displayed 57
- timer. *See* self-timer
- transferring images. *See* unloading images
- tripod mount 2
- troubleshooting problems 55
- turning camera on and off 4

U

- unloading images
 - description 29
 - pausing 33
 - to Macintosh computer 37
 - to Windows computer 32
 - without using software 39
- updates for drivers 62

USB

- Macintosh connection 37
- Mass Storage Support software 60
- Windows connection 30, 31
- Windows NT 4.0 connection 33

V

- versions of software, obtaining 62
- View Thumbnails menu 6, 19
- viewfinder
 - green light next to 71
 - indicator light 2, 71
 - red light next to 57, 71
 - using 9
 - yellow light next to 12, 58, 71
- viewing
 - images using card reader 40
 - images using image display 6
 - stored images 15
 - thumbnails 19

W

- warranty information 64, 67

Web sites

- AC power adapter 52
- camera 29, 62
- disposal or recycling information 54
- downloading Macintosh software 60
- HP assistance 62
- HP photosmart 62
- HP product support 62
- HP SupportPack 64
- purchasing card readers 40
- sales and service 68
- sales and service offices 64
- third parties 62
- worldwide support details 64
- weight of camera 72
- Welcome screen 27
- Windows computer
 - bonus software 31
 - connecting camera to 31
 - downloading images 32
 - installing software 31
 - operating system requirements 30, 35
 - port requirement 30
 - system requirements 30
 - unloading images 32, 39
 - using camera with 30
 - using camera with NT 4.0 33
- wrist strap, attaching 3

Y

- yellow light next to viewfinder 12, 71

Z

- zooming 24

www.hp.com/photosmart

Printed in Singapore 6/01



i n v e n t



C8900-90029