


Model Number and Description

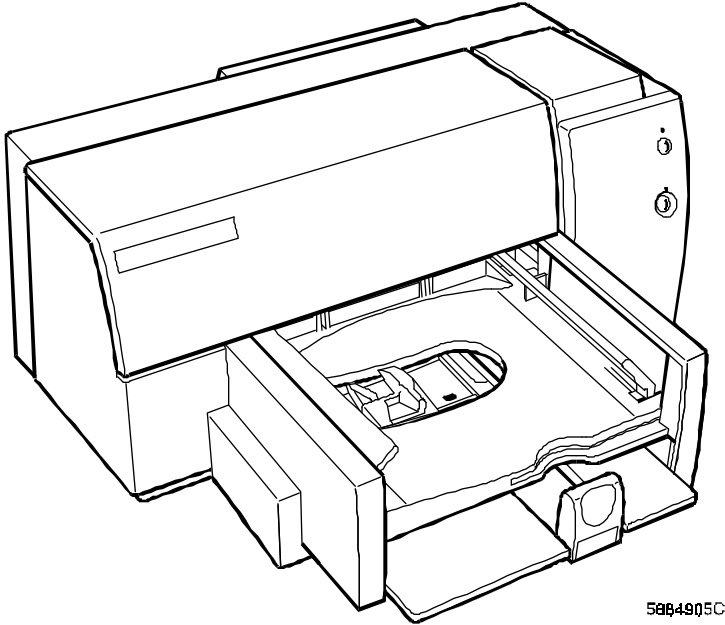

HP DeskJet 670C Series Printers¹

Printer Name	Model Number	Availability	Description and Items Included
HP DeskJet 670C	C5884A	North America, Latin America, Europe, Asia Pacific	This printer supports MS DOS, MS Windows 3.1x and MS Windows 95 printing. The printer includes black and color pens.
HP DeskJet 672C	C5886A	U.S. only	This printer supports MS DOS, MS Windows 3.1x and MS Windows 95 printing. The printer includes black and color pens and Printpaks' Pop Up Greetings Kit II.
HP DeskJet 670K	C5885A	Korea (Hardware localized for Korea)	This printer supports MS DOS, MS Windows 3.1x and MS Windows 95 printing. The printer includes black and color pens, interface cable, and 2 year warranty.

1. The printers described above are personal printers and are not supported in network configurations.

Front View

Access Door

Resume Button and Light

Print Cartridge Cradles

Card Guide

Paper Width Adjuster


OUT Tray

IN Tray

Paper Length Adjuster

Single Envelope Slot


Power Button and Light

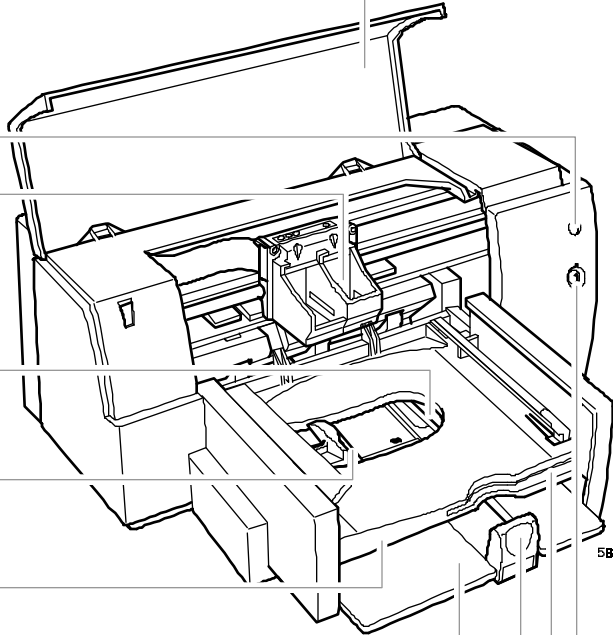

5884004C

Rear View

Power Module Socket

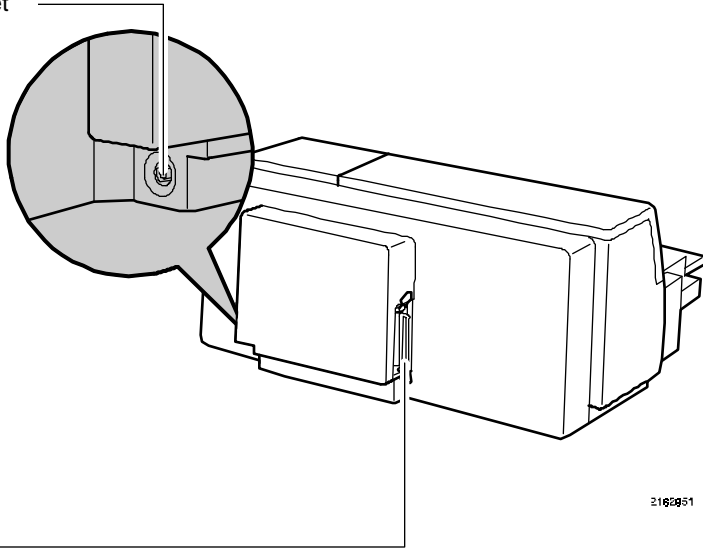

2162951

Interface Port

Ordering Printer Options

Localized Printer Options (DeskJet 670C¹)

Region or Country	User's Documentation Language	Printer Option Numbers	Power Module Part Numbers	User's Documentation Kit Part Numbers
Argentina	Spanish	C5884A AC8	9100-5129	C5884-90121
Asia Pacific/ U.K. cord	Int'l English	C5884A ARS	9100-5131	C5884-90102
Australia	Int'l English	C5884A ABG	9100-5127	C5884-90102
Brazil	Portuguese	C5884A AC4	9100-5124	C5884-90118
Brazil/220V	Portuguese	C5884A A1Z	9100-5590	C5884-90118
Canada	French and US English	C5884A A2L	9100-5124	C5884-90108 C5884-90100
Caribbean	Int'l English	C5884A ARV	9100-5346	C5884-90102
China	Simplified Chinese	C5884A AB2	9100-5590	C5884-90120
Czech. Republic	Czechoslovakian	C5884A AKB	9100-5132	C5884-90104
Denmark	Danish	C5884A ABY	9100-5132	C5884-90105
Europe	Int'l English	C5884A ABB	9100-5132	C5884-90102
Europe	French	C5884A ACS	9100-5132	C5884-90108
Europe	German	C5884A ACT	9100-5132	C5884-90109
Europe	Dutch	C5884A ACU	9100-5132	C5884-90106
Europe	Italian	C5884A ARP	9100-5132	C5884-90113
Europe (U. S. cord)	English	C5884A A2T	9100-5124	C5884-90102
Finland	Finnish	C5884A ABX	9100-5132	C5884-90107
Greece	Greek/English	C5884A AB7	9100-5132	C5884-90110
Hong Kong	Int'l English	C5884A AB5	9100-5348	C5884-90102
Hungary	Hungarian	C5884A AKC	9100-5132	C5884-90112
India	Int'l English	C5884A ACJ	9100-5602 (Type 5A plug)	C5884-90102
Israel	Hebrew	C5884A ABT	9100-5132	C5884-90111
Isreal	English	C5884A AKJ	9100-5132	C5884-90102
Japan	Japanese	C5884A-ABJ	9100-5130	C5884-90114
Jordan, Lebanon, N. Africa	Arabic	C5884A ARW	9100-5132	C5884-90103

Continued on next page

Localized Printer Options (DeskJet 670C) (Cont.)

Region or Country	User's Documentation Language	Printer Option Numbers	Power Module Part Numbers	User's Documentation Kit Part Numbers
Latin America	Spanish	C5884A-ABM	9100-5124	C5884-90121
Latin America	English	C5884A ACH	9100-5124	C5884-90102
Latvia	Int'l English	C5884A A2J	9100-5132	C5884-90102
Lithuania	Int'l English	C5884A A2H	9100-5132	C5884-90102
Middle East	Arabic	C5884A ARU	9100-5131	C5884-90103
North Asia	Int'l English	C5884A ART	9100-5346	C5884-90102
Norway	Norwegian	C5884A ABN	9100-5132	C5884-90116
Philippines	Int'l English	C5884A A2K	9100-5390	C5884-90102
Poland	Polish	C5884A AKD	9100-5132	C5884-90117
Portugal	Portuguese	C5884A AB9	9100-5132	C5884-90118
Russia	Cyrillic	C5884A ACB	9100-5132	C5884-90119
Russia	Int'l English	C5884A AR3	9100-5132	C5884-90102
Saudi Arabia	Arabic	C5884A ARG	9100-5124	C5884-90103
Singapore	Int'l English	C5884A AB4	9100-5131	C5884-90102
South Africa	Int'l English	C5884A ACQ	9100-5128	C5884-90102
South America	Spanish	C5884A AKV	9100-5132	C5884-90121
Spain	Spanish	C5884A ABE	9100-5132	C5884-90121
Swedish	Swedish	C5884A ABS	9100-5124	C5884-90122
Taiwan ³	Traditional Chinese	C5884A AB0	9100-5124	C5884-90124
Thailand	Thai	C5884A-AB3	9100-5346	C5884-90123
Turkey	Turkish	C5884A AB8	9100-5132	C5884-90125
U.K.	Int'l English	C5884A ABU	9100-5131	C5884-90102
U.S.	US English	C5884A ABA	9100-5124	C5884-90100

Localized Printer Options (DeskJet 672C¹)

Region or Country	User's Documentation Language	Printer Option Number	Power Module Part Number	User's Documentation Kit Part Number
U.S. only	English	C5886A	9100-5124	C5884-90100

1. HP DeskJet 672C printers include black and color print cartridges, software bundle

Localized Printer Options (DeskJet 670K¹)

Region or Country	User's Documentation Language	Printer Option Number	Power Module Part Number	User's Documentation Kit Part Number
Korea	Korean	C5885A AB1	9100-5126	C5884-60115

1. HP DeskJet 670K printers include black and color print cartridges, Centronics type printer cable, and 2-year warranty.


Available Power Modules (All Models)

Power Module Part Number	Region or Country	Power Requirements
9100-5124	U.S., Canada, Brazil, Latin America, Saudi Arabia, Taiwan, Europe (U. S. cord)	120V/60Hz
9100-5126	Korea	220V/50 - 60Hz
9100-5127	Australia	240V/50Hz
9100-5128	South Africa	220V/50Hz
9100-5129	Argentina	220V/50Hz
9100-5130	Japan	100V/50 - 60Hz
9100-5131	U.K., Singapore, Malaysia, Middle East	240V/50Hz
9100-5132	Europe (Except U.K.), Jordan, Lebanon, North Africa, Isreal, Russia, Baltic Countries	230V/50Hz
9100-5346	Thailand, Indonesia, Brazil, Caribbean, Latin America	220V/50 - 60Hz
9100-5348	Hong Kong	220V/50 - 60Hz
9100-5590	China, Brazil, Phillipines	220V/50Hz
9100-5602	India (5A plug)	220V/50Hz


Items Included

Note The illustrations below show the packaging restraints as installed when the printer was first shipped. Store these items in the printer's box to use if you need to ship the printer again.

Printer Showing Items Included¹

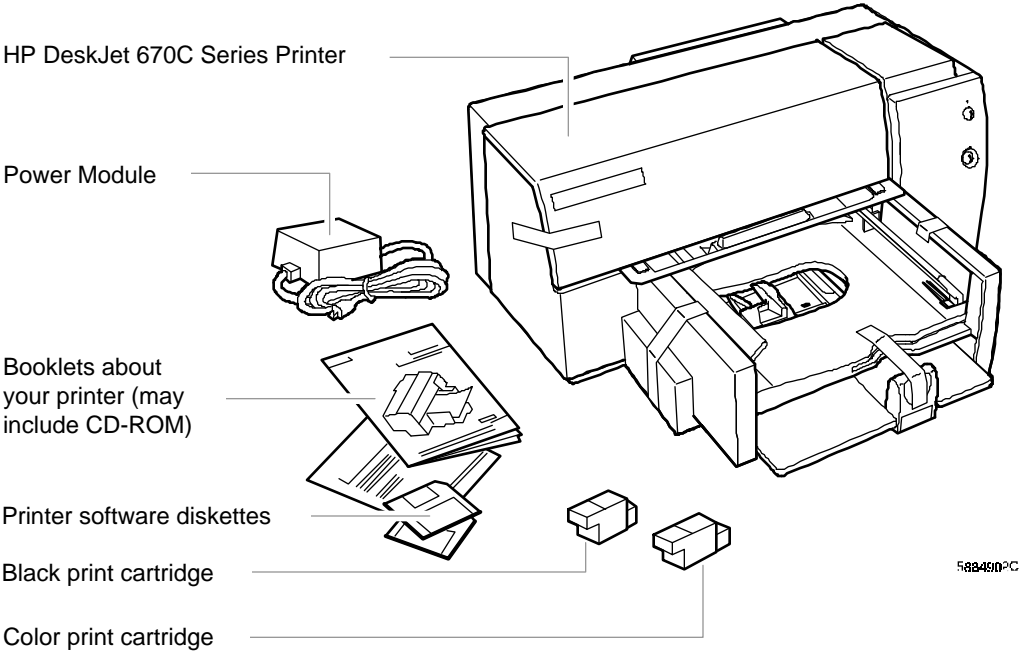

Packaging Restraint Placement

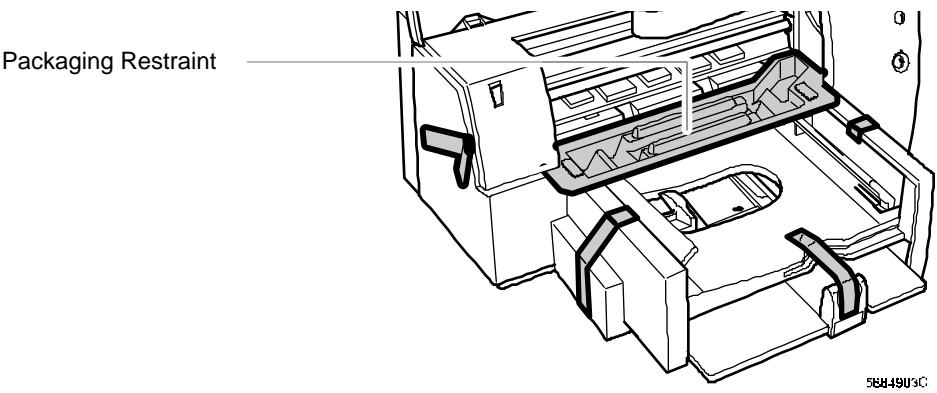

1. Not shown: Printpaks' Pop Up Greetings Kit II included with the HP DeskJet 672C printer.

Internal Printer Fonts

Proportionally-Spaced Fonts

Font Name	Point Sizes
CG Times	5, 6, 7, 8, 10, 12, 14
CG Times Italic	5, 6, 7, 8, 10, 12, 14
Univers	5, 6, 7, 8, 10, 12, 14
Univers Italic	5, 6, 10, 12

Fixed-Pitch Fonts

Font Name	Point Sizes	Pitches
Courier	6, 12, 24	5, 10, 16.67, 20
Courier Italic	6, 12, 24	5, 10, 20
Letter Gothic	6, 12, 24	6, 12, 24
Letter Gothic Italic	4.75, 9.5, 19	16.67
Letter Gothic (16.67)	6, 12, 24	6, 12, 24

Default Font¹

Font Name	Description
Courier	10 pitch, 12 point, upright, medium-weight

1. Prints if user does not select a font through DOS software program.

Internal Fonts and Symbol Sets

Symbol Sets

- United Kingdom (ISO 4)
- French (ISO 69)
- Danish/Norwegian (ISO 60)
- Spanish (ISO 17)
- Legal
- Roman-8
- PC-8 Danish/Norwegian
- Latin 1 (8859/1)
- Latin 2 (8859/2)
- PC-8 Turkish
- German (ISO 21)
- Italian (ISO 15)
- Swedish (ISO 11)
- ANSI/ASCII (ISO 6)
- PC-8
- PC-850
- ECMA-94
- PC-852
- Latin 5 (8859/9)

Additional Fonts in Region Specific Printers

Some HP DeskJet 670C printers contain flash memory. Flash memory provides the capability to install fonts and symbol sets for specific regions. The following figure shows how to identify printers with flash memory by observing the serial number label on the back of the printer.

Identifying Printers with Flash Memory

With Flash Memory



No Flash Memory

To identify a printer with flash memory, look for the lightning bolt symbol on the serial number label located on the back of the printer. The flash font code found directly below the lightning bolt can be used to identify the language of fonts downloaded into flash memory. Use the following tables to identify the fonts and symbol set(s) loaded into flash memory.

Flash Fonts Information

Fonts and Symbol Sets for Flash Codes

Flash Codes	Name of Font and Symbol Set	Country/Region	Printer Model
ARB	Arabic	Saudi Arabia	C5884A ARG
ARB	Arabic	Middle East/Arabic	C5884A ARU
ARB	Arabic	N. Africa, Jordan, Lebanon	C5884A ARW
CYR	Cyrillic	Russia	C5884A ACB
GRK	Greek	Greece	C5884A AB7
HBR	Hebrew	Israel	C5884A ABT
LTV	Latvian	Latvia	C5884A A2J
LIT	Lithuanian	Lithuania	C5884A A2H
THA	Thai	Thailand	C5884A AB3

Flash Fonts and Symbol Sets

Note

Unless a bold font is specified in the following tables, the printer will algorithmically provide a bold enhancement.

Hebrew (Flash Font Code HBR)

Spacing	Font Name	Point Sizes	Pitches
Proportional	David PS	5,6,7,8,10,12,14	N/A
	Narkis Tam	5,6,7,8,10,12,14	N/A
	Miyram PS	5,6,7,8,10,12,14	N/A
	Miyram PS Italic	5,6,10,12	N/A
Fixed	Courier	6,12,24	5,10,16.67,20
	Courier Italic	6,12,24	5,10,20
	Miyram	6,12,24	6,12,24
	Myram Italic	6,12,24	6,12,24
	David	6,12,24	5,10,16.67,20

Symbol Sets: Latin Hebrew (ISO-8859/8), Latin Hebrew (CP-862)

Arabic (Flash Font Code ARB)

Spacing	Font Name	Point Sizes	Pitches
Proportional	Ryadh	5, 6, 7, 8, 10, 12, 14	N/A
Fixed	Naskh	6, 12, 24	5, 10, 20
	Naskh	7, 14, 28	8.5, 17
	Koufi	6, 12, 24	6, 12, 24

Symbol Sets: Arabic-8, Latin/Arabic (CP-864)

Cyrillic (Flash Font Code CYR)

Spacing	Font Name	Point Sizes	Pitches
Proportional	CG Times	5, 6, 7, 8, 10, 12, 14	N/A
	CG Times Italic	5, 6, 7, 8, 10, 12, 14	N/A
	Univers	5, 6, 7, 8, 10, 12, 14	N/A
	Univers Italic	5, 6, 10, 12	N/A
Fixed	Courier	6, 12, 24	5, 10, 16.67, 20
	Courier Italic	6, 12, 24	5, 10, 20
	Letter Gothic	6, 12, 24	6, 12, 24
	Letter Gothic Italic	6, 12, 24	6, 12, 24

Symbol Sets: PC-Cyrillic (CP-866), Latin/Cyrillic (ISO-8859/5)

Greek (Flash Font Code GRK)

Spacing	Font Name	Point Sizes	Pitches
Proportional	CG Times	5, 6, 7, 8, 10, 12, 14	N/A
	CG Times Italic	5, 6, 7, 8, 10, 12, 14	N/A
	Univers	5, 6, 7, 8, 10, 12, 14	N/A
	Univers Italic	5, 6, 10, 12	N/A
Fixed	Courier	6, 12, 24	5, 10, 16.67, 20
	Courier Italic	6, 12, 24	5, 10, 20
	Letter Gothic	6, 12, 24	6, 12, 24
	Letter Gothic Italic	6, 12, 24	6, 12, 24

Symbol Sets: PC-8 Greek, Latin/Greek (ISO-8859/7)

Baltic (Flash Font Codes LTV and LIT)

Spacing	Font Name	Point Sizes	Pitches
Proportional	CG Times	5, 6, 7, 8, 10, 12, 14	N/A
	CG Times Italic	5, 6, 7, 8, 10, 12, 14	N/A
	Univers	5, 6, 7, 8, 10, 12, 14	N/A
	Univers Italic	5, 6, 10, 12	N/A
Fixed	Courier	6, 12, 24	5, 10, 16, 67, 20
	Courier Italic	6, 12, 24	5, 10, 20
	Letter Gothic	6, 12, 24	6, 12, 24
	Letter Gothic Italic	6, 12, 24	6, 12, 24

Symbol Sets: Lithuanian Russian, Latvian/Russian, CP-772

Thai (Flash Font Code THA)

Spacing	Font Name	Point Sizes	Pitches
Fixed	Thai Courier	10	12
		12	10
		24	6
	Thai Courier Bold	10	12
		12	10
		24	6
	Thai Courier Italic	10	12
		12	10
		24	6
	Thai Courier Bold Italic	12	10
		Thai Line Printer	8.5

Symbol Set: TIS (TAPIC23)

Note

TAPIC23 is the registration name for Hewlett-Packard's Thai HP DeskJet symbol set.


Available Supplies and Accessories

Orderable Items

Item	Description	Part Number
Interface cables	HP IEEE-1284 Parallel Interface Cable (2 meter length)	C2950A
	HP IEEE-1284 Parallel Interface Cable (3 meter length)	C2951A
Print cartridges	Black Inkjet Print Cartridge	51629A or 29A
	Color Inkjet Print Cartridge	51649A or 49A
Media	For orderable media information, see "Media."	N/A
Accessories	HP PrinterPal Fax Accessory	C2970A

User Replaceable Components

Access Door Assembly

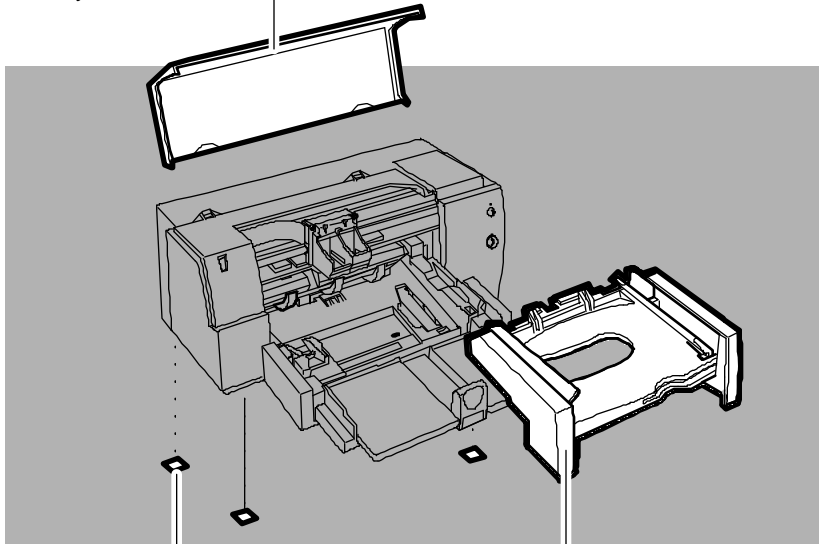

2134902

Base Foot

Output Tray

Description	Part Number
Access Door Assembly with Nameplates	C5884-60018
Base Foot	C2128-40063
Output Tray Assembly	C5884-60016

Host/System Requirements


MS Windows 95

- ❶ 80486 (or faster) processor
- ❷ At least 8 MB of RAM
- ❸ 10 - 20 MB free hard disk space

MS Windows 3.1x

- ❶ 80386 (or faster) processor
- ❷ At least 4 MB of RAM
- ❸ 10 - 20 MB free hard disk space

DOS

- ❶ DOS version 3.3 or later
 - ❷ 80286 (or faster) processor
 - ❸ At least 2 MB of RAM to print in black or at least 4 MB of RAM to print in color
- 

Driver Installation

For the printer to operate properly, an HP DeskJet 670C series printer driver must be installed in your computer. Refer to “User’s Guide/Installing the Printer Driver” for more detailed information.

Interface Specifications

Category	Specification
Interface	Centronics parallel, IEEE-1284 Compliant with 1284-B receptacle
Printer Command Language	HP PCL Level 3
Communication Modes Available	Compatible (Centronics) Nibble ECP
Built-in RAM	512 Kbytes
Receive Buffer	32 Kbytes

Note

For a complete description of the printer's interface, see "Printer Interface Information."

Product Performance Specifications

HP DeskJet 670C series printers print a 600x300 dot size. Dots are placed on a 600x300 grid. Depletion is used to remove approximately 10% of the dots to prevent laying too much ink on the page.

In Best mode, the paper advances at 600 DPI increments and places dots on a true 600x600 grid. Depletion in the Best mode removes approximately 43% of the dots.

To conserve memory, DOS fonts are stored at 300x300. REt is used to convert them to 600x300.

When printing from MS Windows, resolution determinations are made based on the print mode used (Best 600x600, Normal 600x300, EconoFast 300x300).

MS Windows Print Speed

	EconoFast Mode	Normal Mode	Best Mode
Black Print Speed ¹	4 pages per minute	2.5 pages per minute	1 page per minute
Color Print Speed ¹ (black and color cartridges)	1.5 pages per minute	0.75 pages per minute	0.3 pages per minute

1. Approximate figures. Exact speed will vary depending upon system configuration, software program, and document complexity.

MS DOS Print Speed (Black Mechanism)

	EconoFast Mode	Normal Mode
Black Print Speed ¹	270 CPS at 10 CPI	134 CPS at 10 CPI

1. Approximate figures. Exact speed will vary depending upon the system configuration, software program, and document complexity.

Resolution

	EconoFast Mode	Normal Mode	Best Mode
Black Resolution			
MS Windows (text and graphics)	300 x 300 DPI	600 x 300 DPI	600 x 600 DPI
DOS (text only)	300 x 300 DPI	600 x 300 DPI	600 x 600 DPI
Color Resolution (Black and Color Cartridges)			
Plain Paper	300 x 300 DPI	300 x 300 DPI	300 x 300 DPI
Premium Paper, Glossy Paper, and Transparency Film (Black and Color)	N/A	600 x 300 DPI	600 x 300 DPI
DOS (graphics)	Full-page 75, 150, 300 DPI	Full-page 75, 150, 300 DPI	Full-page 75, 150, 300 DPI

Note

DPI is measured in addressable raster points per inch.

Standard Drying Times

Paper Type	EconoFast		Normal		Best	
	Black	Color	Black	Color	Black	Color
Plain Paper	0 sec.	0 sec.	14 sec.	20 sec.	25 sec.	25 sec.
Premium Paper	0 sec.	0 sec.	15 sec.	20 sec.	25 sec.	25 sec.
Transparency or Glossy Paper	1 min.	1 min.	3 min.	6 min.	4 min.	6 min.

Paper Handling Specifications

Recommended Media Weight

Category	Specification
Paper Grain	Long Grain Only
Paper	60 to 135 g/m ² (16 to 36 lb.)
Envelopes	75 to 90 g/m ² (20 to 24 lb.)
Cards	110 to 200 g/m ² (29 to 53 lb., 61 to 110 lb. Index max.; 8.5 pt max. thickness)

Media Handling

Category	Specification
Labels ¹	Up to 25 Sheets of Avery Paper Labels.
IN Tray Capacity	Up to 100 Sheets (<1/2 in.)
OUT Tray Capacity	Up to 50 Sheets
Multiple Envelopes ²	Up to 20 Envelopes (<1/2 in.)
Card Capacity	Up to 30 Cards
Transparencies	Up to 50 sheets

1. Use only U.S. letter or A4 size sheets. Use only Avery paper labels specifically designed for use with HP InkJet Printers.
2. Envelope capacity is dependent on the manufacturer, type of envelope and its construction.

Note

HP DeskJet 670C series printers work well with most types of paper although variables in paper composition may affect print quality and paper handling. Bond paper, such as letterhead, gives excellent quality. Paper should be tested to ensure best performance.


Supported Media/Sizes

Category	Specification
US Letter	215.9 x 279.4 mm (8.5 x 11 in.)
US Legal	215.9 x 355.6 mm (8.5 x 14 in.)
U.S. Executive	184.1 x 266.7 mm (7.25 x 10.5 in.)
ISO & JIS, European A4	210 x 297 mm (8.27 x 11.69 in.)
ISO & JIS, European A5	148.5 x 210 mm (5.83 x 8.27 in.)
B5 JIS	182 x 257 mm (7.17 x 10.12 in.)
U.S. No. 10 Envelope ¹	104.7 x 241.3 mm (4.12 x 9.5 in.)
Invitation A2 Envelope (5.5)	111 x 146 mm (4.375 x 5.75 in.)
European DL Envelope ¹	110 x 220 mm (4.33 x 8.66 in.)
European C6 Envelope ¹	114 x 162 mm (4.49 x 6.38 in.)
4 x 6 Index Card	101.6 x 152.4 mm (4 x 6 in.)
5 x 8 Index Card	127 x 203.2 mm (5 x 8 in.)
European A6 Card	105 x 148.5 mm (4.13 x 5.83 in.)
Japanese Hagaki Postcard	100 x 148 mm (3.94 x 5.83 in.)
U. S. HP Premium Transparency Film	215.9 x 279.4 mm (8.5 x 11 in.)
European A4 HP Premium Transparency Film	210 x 297 mm (8.27 x 11.69 in.)
U. S. HP Premium Glossy Paper	215.9 x 279.4 mm (8.5 x 11 in.)
European A4 HP Premium Glossy Paper	210 x 297 mm (8.27 x 11.69 in.)
U. S. HP Premium InkJet Paper	215.9 x 279.4 mm (8.5 x 11 in.)
European A4 HP Premium InkJet Paper	210 x 297 mm (8.27 x 11.69 in.)
Custom Size (user defined)	
Width	100 to 216 mm (3.94 to 8.5 in.)
Length	148 to 356 mm (5.83 to 14 in.)

1. To minimize print skew, use envelopes with rectangular flaps rather than triangular flaps.

Windows Printable Area Specifications

U.S. Paper and Transparency

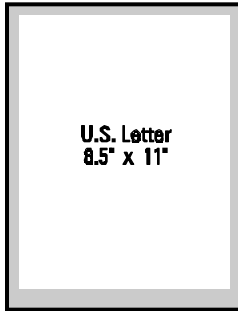



2162985

Minimum Margins¹ for Paper in Portrait Orientation

Paper Description	Paper Size	Left and Right Margins	Bottom Margin	Printable Area
US Letter	215.9 x 279.4 mm (8.5 x 11 in.)	6.3 mm (0.25 in.)	14.9 mm (0.59 in.)	203 x 262 mm (8.0 x 10.37 in.)
US Legal	215.9 x 355.6 mm (8.5 x 14 in.)	6.3 mm (0.25 in.)	14.9 mm (0.59 in.)	203 x 337 mm (8.0 x 10.37 in.)
U.S. Executive	184.1 x 266.7 mm (7.25 x 10.5 in.)	6.3 mm (0.25 in.)	14.9 mm (0.59 in.)	171 x 249 mm (6.75 x 9.87 in.)

1. The top margin is 1 mm (0.04 inch) for all paper sizes

International Paper and Transparency

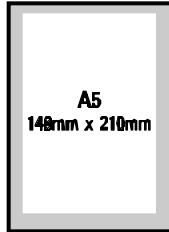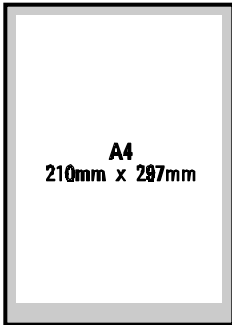

21629s7

Minimum Margins¹ for Paper in Portrait Orientation

Paper Description	Paper Size	Left and Right Margins	Bottom Margin	Printable Area
European A4	210 x 297 mm (8.27 x 11.69 in.)	3.4 mm (0.13 in.)	14.9 mm (0.59 in.)	203 x 279 mm (8.0 x 11.07 in.)
European A5	148.5 x 210 mm (5.83 x 8.27 in.)	3.2 mm (0.125 in.)	21.2 mm (0.84 in.)	140 x 187 mm (5.55 x 7.42 in.)
B5 JIS	182 x 257 mm (7.17 x 10.12 in.)	4.2 mm (0.167 in.)	21.2 mm (0.84 in.)	174 x 233 mm (6.8 x 9.22 in.)

1. The top margin is 1 mm (0.04 inch) for all paper sizes

Envelopes



2162564

Minimum Margins¹ for Envelopes in Landscape Orientation

Envelope Description	Envelope Size	Left Margin	Right Margin	Printable Area
U. S. No. 10	105 x 241 mm (4.12 x 9.5 in.)	21.2 mm (0.84 in.)	1 mm (0.04 in.)	98 x 218 mm (3.88 x 8.62 in.)
DL	110 x 220 mm (4.33 x 8.66 in.)	21.2 mm (0.84 in.)	1 mm (0.04 in.)	104 x 196 mm (4.08 x 7.78 in.)
C6	114 x 162 mm (4.48 x 6.37 in.)	21.2 mm (0.84 in.)	1 mm (0.04 in.)	107 x 139 mm (4.24 x 5.49 in.)
Invitation A2	11 x 146 mm (4.37 x 5.75 in.)	21.2 mm (0.84 in.)	1 mm (0.04 in.)	105 x 122 mm (4.13 x 4.87 in.)

1. The top and bottom margins are 3.2 mm (0.125 inch) for all envelope sizes

Cards



2162983


Minimum Margins¹ for Cards in Portrait Orientation

Card Description	Card Size	Left and Right Margins	Bottom Margin	Printable Area
4 x 6 Index Card	101.6 x 152.4 mm (4 x 6 in.)	3.2 mm (0.125 in.)	21.2 mm (0.84 in.)	95 x129 mm (3.75 x 5.12 in.)
5 x 8 Index Card	127 x 203.2 mm (5 x 8 in.)	3.2 mm (0.125 in.)	21.2 mm (0.84 in.)	121 x179 mm (4.75 x 7.12 in.)
European A6 Card	105 x 148.5 mm (4.13 x 5.83 in.)	3.2 mm (0.125 in.)	21.2 mm (0.84 in.)	99 x125 mm (3.88 x 4.95 in.)
Japanese Hagaki Postcard	100 x 148 mm (3.94 x 5.83 in.)	4.2 mm (0.167 in.)	21.2 mm (0.84 in.)	92 x124 mm (3.6 x 4.92 in.)

1. The top margin is 1 mm (0.04 inch) for all card sizes

Physical Specifications

Printer Dimensions

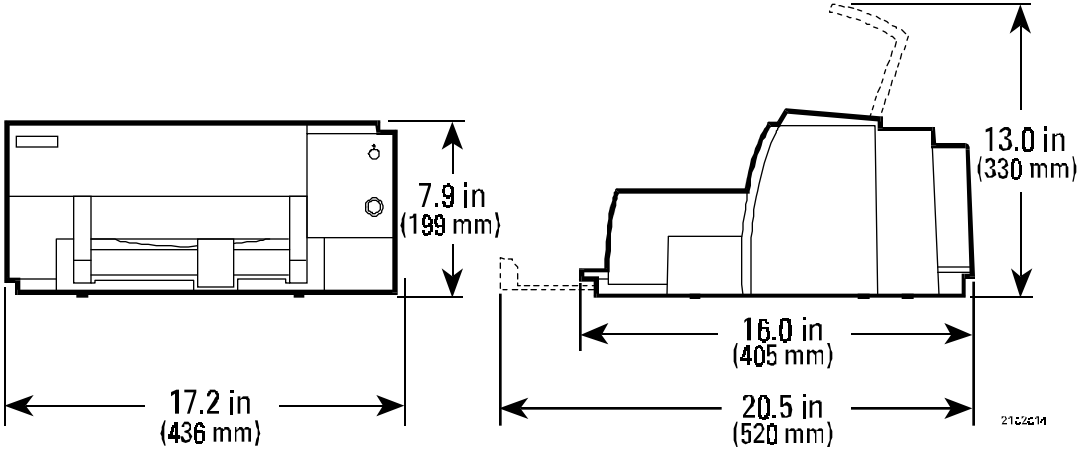

Weight: 5.3 Kg (11.6 lb.)

Electrical Specifications

Category	Specification
Input Voltage: ¹	100 VAC, 120 VAC, 127 VAC, 220 VAC, 230 VAC, or 240 VAC (+/-10%)
Frequency:	100 VAC 50/60 Hz (+/-3 Hz)
	120 VAC 60 Hz (+/-3 Hz)
	127 VAC 60 Hz (+/-3 Hz)
	220 VAC 50 Hz (+/-3 Hz)
	220 VAC 60 Hz (+/-3 Hz)
	230 VAC 50 Hz (+/-3 Hz)
	240 VAC 50 Hz (+/-3 Hz)
Maximum Power Consumption:	Powered Off (Plugged in) 2 Watts
	Powered On (Non-printing) 4.5 Watts
	Powered On (Printing state) 12 Watts

1. Power modules are available for each listed input voltage.

Operating Environment

Category	Specification
Temperature	
Operating	5 to 40° C (41 to 104° F)
Non-Operating (storage)	-40 to 60° C (-40 to 140° F)
Relative Humidity	10 to 80% RH non-condensing
Recommended Operating Conditions for Best Print Quality	15 to 35° C (59 to 95° F) 20 to 80% relative humidity, non-condensing
Noise Levels per ISO 9296	Normal Mode
Sound Power, L_{wAd}	6.3 B(A)
Sound Pressure, L_{pAm}^1	50 dB(A)

1. Bystander positions.



Product Certifications

Safety Certifications

Category	Power Module Part Number	Certification
Printer with Power Module	C2175A	UL, CSA, NOM
	C2176A	UL, TUV, SEMKO, NEMKO, FIMKO, KEMA, LCIE, EZU, SEV
	C2177A	UL, SINGAPORE
	C2178A	UL, JET
	C2179A	UL
	C2180A	UL, SABS
	C2181A	UL, AUSTRALIA
	C2182A	UL, JUN


EMI Certifications

Description	Certifications
Printer with Power Module	FCC Part 15 Class B, when used with a Class B computing device (USA), EMC Directive 89/336/EEC (European Community), VCCI (Japan), SABS (So. Africa)

Reliability Specifications

Category	Specification
Mean Time Between Failures (MTBF)	20,000 hours
Pages Per Month	1,000 total pages per month maximum

Packaging Specifications

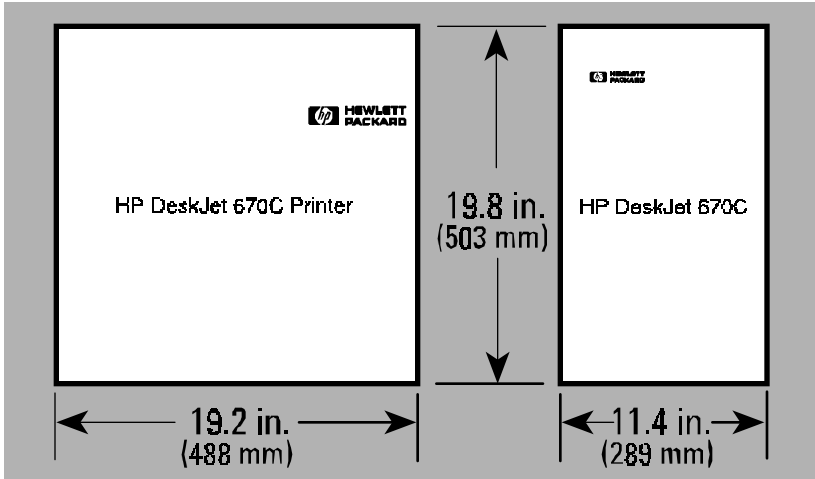

5864-30AC

Weight: 8.137 kg (17.94 lb.)

MS Windows Printing

The HP DeskJet 670C series printer driver is compatible with MS Windows 3.1x, and MS Windows 95.

Note Only a printer driver containing the designation “670C” may be used with HP DeskJet 670C series printers. Other HP DeskJet or DeskWriter printer drivers should not be used.

Access to the printer driver to change specific settings is available from within each software application program. This is recommended since settings made in the software application can override settings made in the Printers control panel.

Steps to access the printer driver vary depending upon the software application. Generally, the printer driver is accessed from the “File, Print” or “File, Print Setup” in the software program.

You can also access the printer driver through the MS Windows’ Printers control panel to change default settings. The Printers control panel allows you:

- ❶ Select the default printer from the list of available printer drivers.
- ❷ Add printer drivers.
- ❸ Remove unneeded printer drivers.
- ❹ Set various printer options (which may be superseded by the printer settings selected in the software application program).
- ❺ Confirm the port that the printer is using.

Although the printer driver provides access to various printer settings, like paper type and page orientation, these settings may be overridden by settings made from the software program. The Printers control panel settings are used when a software program does not specify certain defaults.

Note Drivers are available for DOS printing, and DOS printing can be accommodated through MS Windows (see “DOS Printer Drivers” that follows).

Opening the Printers Control Panel in MS Windows 3.1x:

1. Double-click **Main** in the Program Manager.
2. Double-click **Control Panel**.
3. Double-click **Printers**.


The default printer is listed in the text box at the top of the dialog box. To select a different default printer, double-click a printer from the list of installed printers.

Opening the HP Printer Properties Dialog Box in MS Windows 95:

1. From the **Start** button on the task bar, select **Settings**.
2. Select **Printers**.
3. Double-click the **HP DeskJet 670C Series Printer** icon as shown:




4. Select **Printer** from the HP DeskJet 670C Series Printer dialog box:

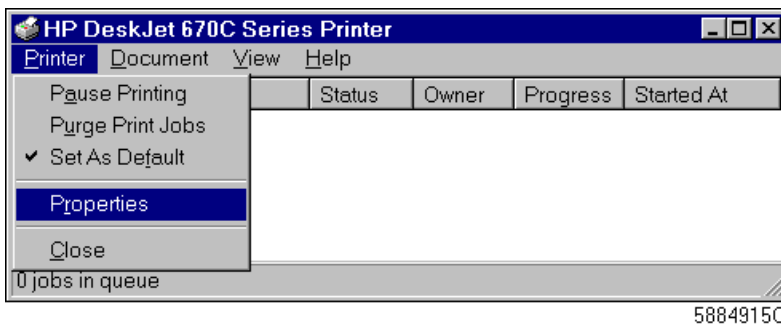

5. Selecting **Properties** reveals the control panel shown below.

Printer Properties Dialog Box (MS Windows 95)

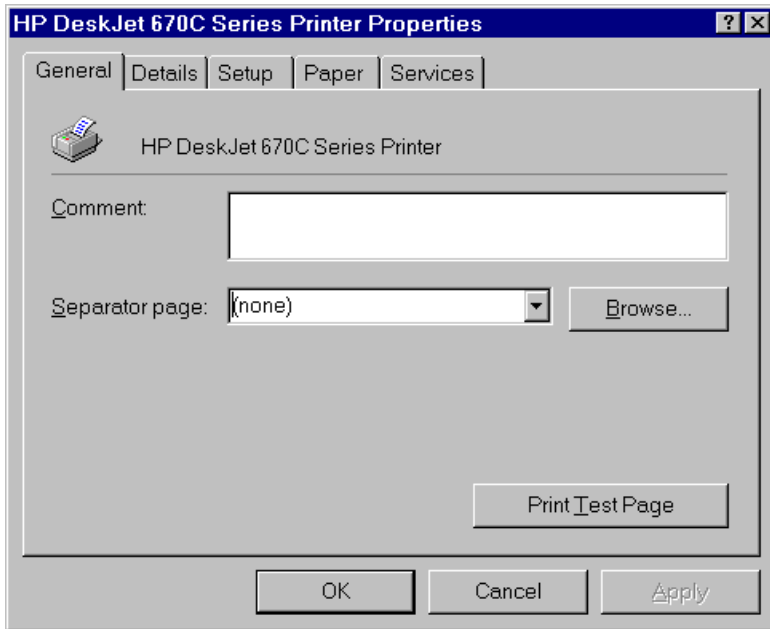

5884907C

Because you can connect your printer to any LPT: (parallel) port, it is important to make sure the proper port is selected. The steps below describe how to select or change a printer port from the control panels, MS Windows 3.1x, or MS Windows 95.


Selecting a printer port (MS Windows 3.1x):

1. Open the **Printers** control panel.
2. Click **Connect** and select the port from the list.

The default printer name is followed by the port to which it is connected.

Selecting a printer port (MS Windows 95):

1. From the **Start** button on the task bar, select **Settings**.
2. Select **Printers** and double-click the HP DeskJet 670C Series printer.
3. Select **Printer**, then select **Properties**
4. Select **Details**

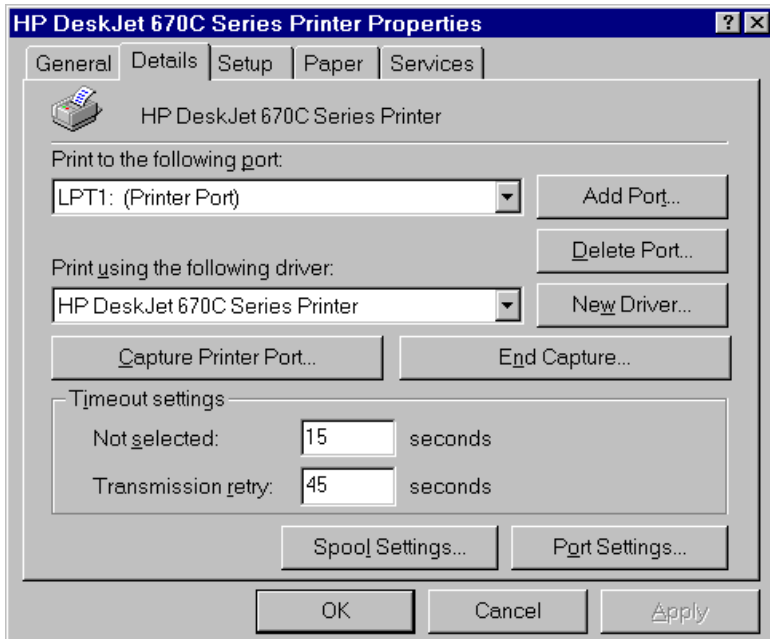

5884908C


5. From the list under **Print to the Following Port:** select the appropriate printer port.

MS Windows Printer Software

The HP DeskJet 670C printer software for MS Windows includes:

- ① HP DeskJet 670C series printer driver
- ① HP DeskJet 670C Toolbox
 - How do I? (On-screen procedures to help user's use and maintain their printers)
 - Troubleshooting
 - Printer Services (Maintenance and Status)
- ① Release Notes

The HP DeskJet 670C Toolbox allows you to:

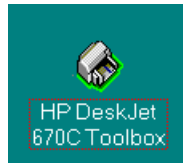

5884917C

- ① View step-by-step tutorials for common printer tasks
 - ① Diagnose and solve common printer problems
 - ① Monitor a current print job
 - ① Monitor the printer's status at any time
 - ① Align the print cartridges (through Properties/Services)
 - ① Clean the print cartridges (through Properties/Services)
 - ① Print a self-test page (through Properties/General and Services)
 - ① Test printer communication (through Properties/Services)
-

Installing the Printer Driver

Before installing printer software:

1. Unpack the printer and set it up using the procedures described in “User Documentation/Setup Guide.”
2. Make sure the computer and the printer are both turned on and connected with the proper cable.
3. Close any screen savers or other software running in the background on your computer.
4. Remember, the minimum system requirements for the printer driver to operate correctly are: a PC computer with at least a 80486 processor, MS Windows 3.1x operating system, 4 MB of RAM, and 10 MB free hard disk space.

Installing the HP Printing System for MS Windows 3.1x

1. Insert Installation Disk 1 into the computer’s disk drive.
2. Click **File** in the menu bar of the **Program Manager** window.
3. Choose **Run** in the **File** menu to open the Run dialog box.
4. Type **A:\SETUP** or **B:\SETUP** (depending on the computer’s configuration) in the text box and click **OK**.
5. Follow the on-screen instructions during the installation process and provide appropriate computer system information.
6. Restart MS Windows to activate the HP DeskJet 670C series printer driver.

Installing the printer software in MS Windows 95:


1. Insert Installation Disk 1 into your computer’s disk drive.
2. From the **Start** button on the task bar, select **Settings**.
3. Select **Printers**.
4. When the Printers dialog box opens, double-click on the **Add Printer** icon.
5. When the screen showing printer manufacturers and models appears, select: Have Disk.
6. Follow the directions when the Add Printer Wizard appears.

Aligning the Print Cartridges

After installing the software, the print cartridges need to be aligned before beginning any print jobs. You will also need to perform this procedure whenever you install a new print cartridge.

Note You may skip the next procedure if you have already performed the print cartridge alignment as part of the installation procedure.

To align the print cartridges (MS Windows 95):

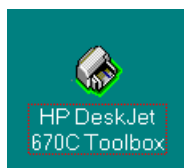

Double click the **HP DeskJet 670C Toolbox** desktop icon and continue from step 5 below, or:

1. Select **Start** from the task bar
2. Select **Programs**
3. Select **HP DeskJet Utilities**
4. Select **HP DeskJet 670C Toolbox**
5. Select **Printer Services**
6. Select **Align the Print Cartridges** and follow the instructions.

To align the print cartridges (MS Windows 3.1x)

1. Open the DeskJet Utilities program group.
 2. Double-click HP DeskJet 670C Toolbox icon
 3. Select **Printer Services**
 4. Select **Align the Print Cartridges** and follow the instructions.
-




About the Printer Driver

HP DeskJet 670C series printer drivers provide access to all the capabilities of the HP DeskJet 670C printer. The following options are available from the printer driver:

- ④ Automatic or Manual printing
- ④ Grayscale printing
- ④ Best, Normal, or EconoFast print quality
- ④ Paper Type Selection (including HP's special papers)
- ④ Paper Size
- ④ Two-sided printing
- ④ Number of Copies
- ④ Ordered printing
- ④ Portrait or Landscape print orientation

For detailed help, click the **Help** button in the HP DeskJet print settings dialog box.



Using the Printer Driver

Accessing DeskJet's print settings dialog box from MS Windows 3.1x or MS Windows 95 applications (recommended):

1. Choose "**File, Print**" or "**File, Print Setup.**" This varies with the software program you are using (for example, MS Word uses "File, Print" to access the menu).
2. Click the **Setup** button.

Accessing the DeskJet's print settings dialog box from the MS Windows control panel:


From MS Windows 3.1x:

1. Double-click **Main** in the Program Manager window.
2. Double-click **Control Panel**.
3. Double-click **Printers**.
4. Select the **HP DeskJet 670C Series Printer** in the Installed Printers list and click the **Setup** button.


From MS Windows 95:

1. From **Start**, select **Settings**.
2. Select **Printers**.
3. Double-click the **HP DeskJet 670C Series Printer** icon to reveal the dialog box shown below.


MS Windows 95 Printer Status Dialog Box

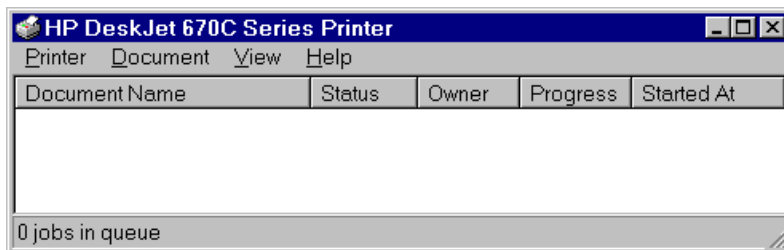

4. Select **Printer**, then select **Properties** to reveal the HP DeskJet 670C Series Printer Properties dialog box.

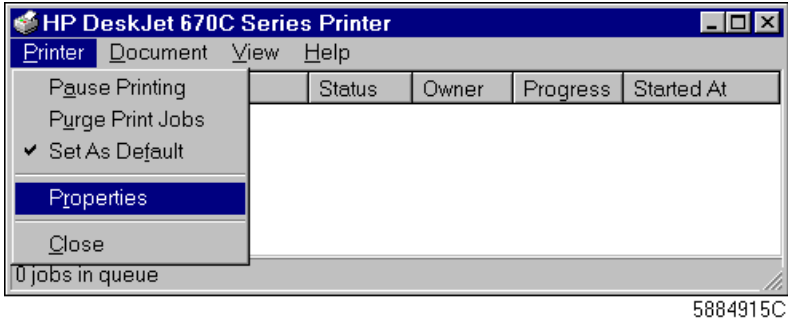

The dialog box has five tabs for the property pages (as illustrated): General, Details, Setup, Paper, and Services.




The property pages are described below.

Note

MS Windows 95 generates the General and Details property pages described below. These are generic pages and contain some attributes not applicable to HP DeskJet 670C printers. Where this is the case, the associated options tables will specify.

The HP DeskJet 670C printer driver generates the Setup, Paper and Services property pages. All attributes found in these pages apply.

General Property Page (MS Windows 95)

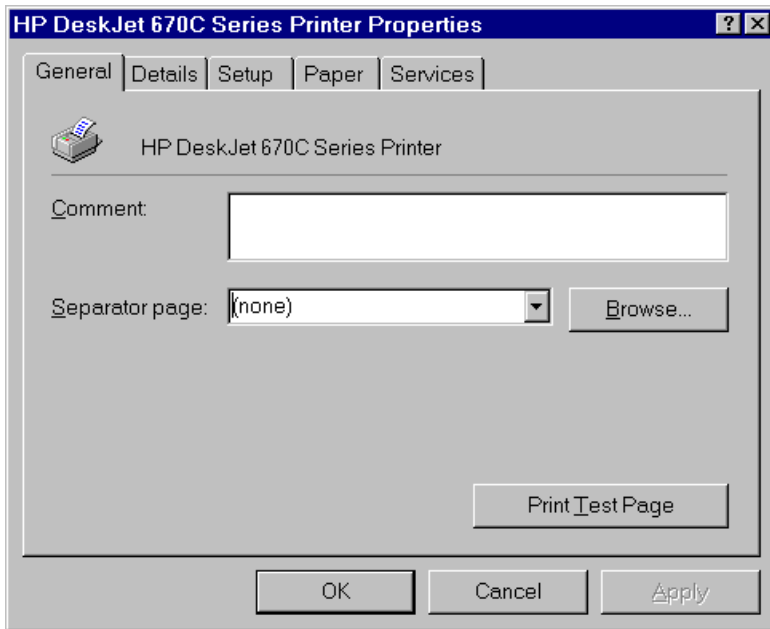


5884907C

General Property Page Options (MS Windows 95)

Option	Description
Comment	Allows you to include special printing instructions, etc. Next time you print the document, these instructions will be found in this box.
Separator page	Allows you to insert a separator page file between print jobs. Browse allows you to locate and specify the separator page to be printed.
Print Test Page	Prints a test page.
OK	Accepts changes and closes window.
Cancel	Cancel changes and closes window.
Apply	Applies the current settings; the window remains open.

Details Property Page (MS Windows 95)

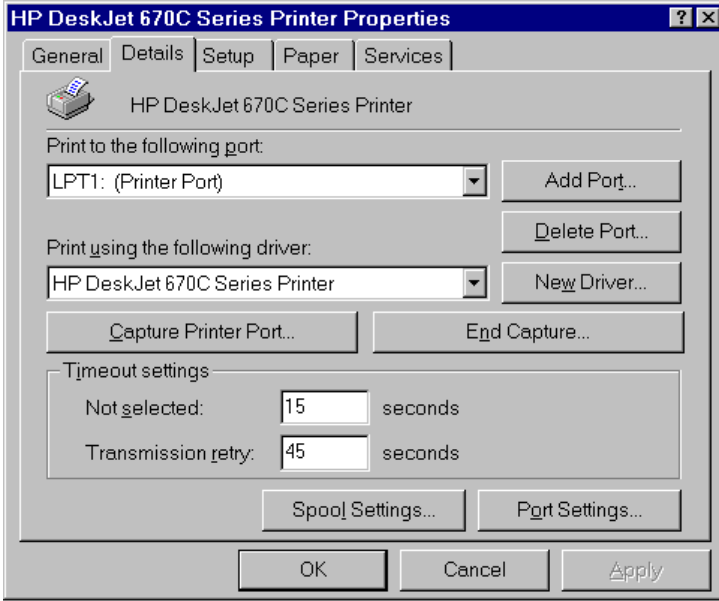


5884908C

Details Property Page Options (MS Windows 95)

Option	Description
Print to the following port:	Provides options to add or delete printer ports. This selection also allows you to print to fax or file.
Print using the following driver:	Allows you to change printer drivers or install updated ones. (To install an updated driver, for example, click the New Driver button, then click Have Disk and follow the directions presented there.) Note: This feature is not supported in HP DeskJet printers.
Capture Printer Port and End Capture	Permits you to capture, or terminate the capture of a network printer. A selection allows you to reconnect to a network printer each time at log-on. Note: This feature is not supported in HP DeskJet printers.
Timeout Settings	Not Selected: Sets the time Windows waits before sending an error message that your printer is off or off line after you send a print job. Transmission Retry: Sets the time Windows waits for your printer if your printer is on line but engaged. (If your printer is setup on a busy network, and/or if you send large graphics files, your printer might display an error message before your files have had a chance to print. To prevent this, increase this setting somewhat.)
Spool Settings...	Allows you to spool documents or print directly to the printer. Note: Contains a menu item which allows you to disable bi-directional support, however, this feature is not supported by HP DeskJet printers.
Port Settings...	Allows spooling of MS-DOS print jobs. You may also elect to have the driver check the port state before printing.
OK	Accepts changes and closes window.
Cancel	Cancel changes and closes window.
Apply	Applies the current settings; the window remains open.

Setup Property Page

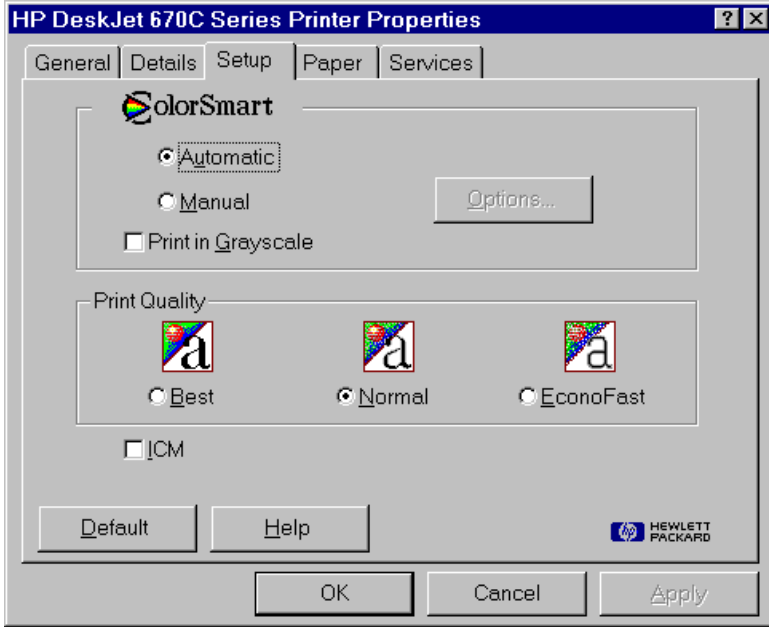

5884909C

Setup Property Page Options

Option	Description
ColorSmart (See ColorSmart: Automatic vs. Manual Printing below)	Permits selection of Automatic or Manual screen-to-printer color mapping. Automatic (recommended) selects the best Intensity and Color Control settings for all areas of your document. Selecting Manual permits opening the Options dialog box which provides adjustment for Intensity, and allows selection of two types of Color Control.
Print In Grayscale (see Grayscale Printing which follows)	Prints different colors as shades of gray. Has both Automatic (recommended) and Manual modes. Selecting Manual permits opening the Options dialog box which provides adjustment for Intensity. The Grayscale mode may be used to produce photocopying documents or to save on color ink when printing draft copies.
Print Quality	Best (presentation quality), Normal (letter quality), or EconoFast (draft quality).
ICM (Independent Color Matching)	Improves consistency between the printer and other color devices connected to your system.
Default	Restores the default settings for the printer.
Help	Opens the online help.
OK	Accepts changes and closes window.
Cancel	Cancel changes and closes window.
Apply	Applies the current settings; the window remains open.


ColorSmart: Automatic vs. Manual Printing

In most cases the best print output is obtained by choosing Automatic ColorSmart printing. In automatic mode, the printer driver analyzes each element in a document to provide the best output.

If the color output obtained using the Automatic ColorSmart option is not satisfactory, use the Manual option.

The Manual ColorSmart Options dialog box provides adjustments for Intensity and Color Control.

ColorSmart Options Property Page, Manual Color Mode

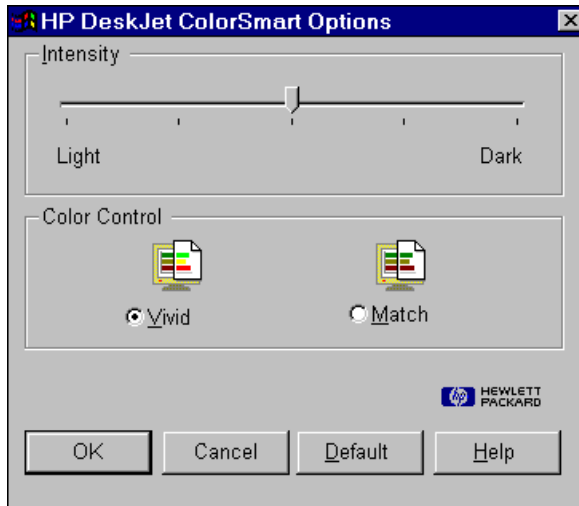

5884912C

ColorSmart Property Page, Manual Color Mode Options

Option	Description
Intensity	The Intensity slider bar adjusts the amount of ink applied to the paper; Dark means more ink, Light means less ink.
Color Control	Color Control offers two options: Vivid (Color) and Match (Screen). To print the document so it looks like it looks on the computer's screen, choose Match. To make the colors of the printed output brighter and more vivid than they appear on the screen, choose Vivid.
OK	Accepts changes and closes window.
Cancel	Cancel changes and closes window.
Default	Restores the default settings for the printer.
Help	Opens the online help.


Grayscale Printing

ColorSmart also allows printing color documents in monochrome with discernible shades of gray. Pages with grayscale images can be photocopied or faxed on a monochrome device and retain their full meaning and impact.

Grayscale printing is also faster than color printing and is ideal for saving color ink when printing draft copies.

To print in grayscale, select the **Print in Grayscale** option in the ColorSmart dialog box.


Setup Property Page with “Automatic” and “Print in Grayscale” Selected

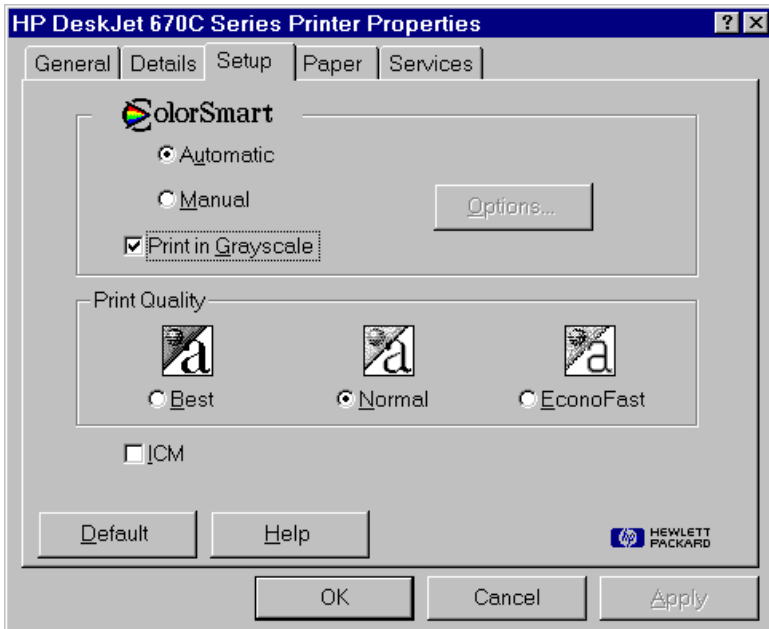

5884916C

Selecting **Manual** with **Print in Grayscale** selected allows access to the **Option** dialog box which provides control over grayscale intensity.

ColorSmart Options Property Page, Manual Grayscale Mode

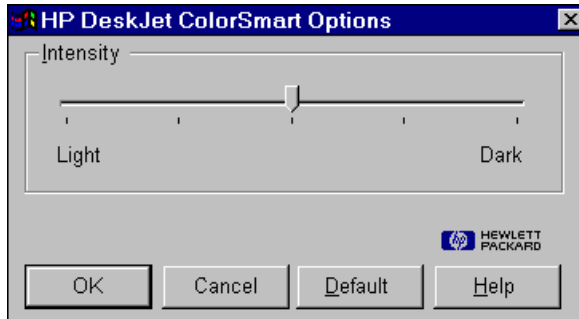


5884913C

ColorSmart Options Property Page, Manual Grayscale Mode Options

Option	Description
Intensity	The Intensity slider bar adjusts the amount of ink applied to the paper; Dark means more ink, Light means less ink. Allows the user to manually set the shading of the grayscale printout.
OK	Accepts changes and closes window.
Cancel	Cancel changes and closes window.
Default	Restores the default settings for the printer.
Help	Opens the online help.

Paper Property Page

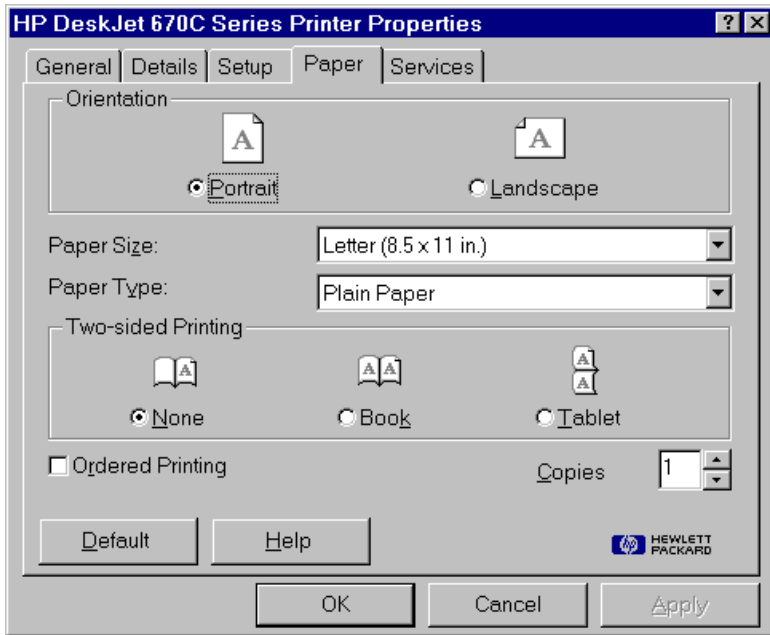

5884910C

Paper Property Page Options

Option	Description
Orientation	Choose portrait or landscape.
Paper Options	<p>Paper Size: Allows selection of numerous paper sizes. To use a paper size not listed, select Custom.</p> <p>Paper Type: Allows you to tell the printer the type of paper upon which you are about to print. (Lets the printer decide which settings to use to give you the best results.)</p>
Two-Sided (Manual Duplex) Printing	Allows you to manually print both sides of plain paper to economize and help conserve resources. Allows you to select the two-sided mode you prefer: Book or Tablet. For more information, see below.
Ordered Printing	Prints in reverse order (last page first). Collates pages when printing multiple copies.
Copies	Allows selection of multiple copies. (Do not change this setting unless you want multiple copies all the time. Generally, specify the number of copies required from within your application.)
Default	Restores the default settings for the printer.
Help	Opens the online help.
OK	Accepts changes and closes the window.
Cancel	Cancels changes and closes the window.
Apply	Applies the current settings; the window remains open.

Two-Sided Printing (Manual Duplex)

The printer driver can be set to print both sides of plain paper to economize and help conserve resources.


Note Two-sided printing is available for all sizes of paper. However, you cannot use two-sided printing on envelopes, transparencies, labels, glossy paper, or premium paper.

Two-Sided Printing Procedure:

1. Select **Booklet** or **Tablet** from the two-sided printing box in the Paper property page.
2. Start printing your document. You will notice that the odd-numbered pages print first.
3. After the printer finishes printing the odd-numbered pages, instructions for printing the other side appear on your computer's screen. Follow these instructions.
4. Restart the printer by clicking the **Continue** button on the computer message. Note that the even-numbered pages begin printing on the back of the previously printed odd-numbered pages.

Note Do not click the **Continue** button until you have positioned the odd-numbered pages in the IN tray.

Services Page

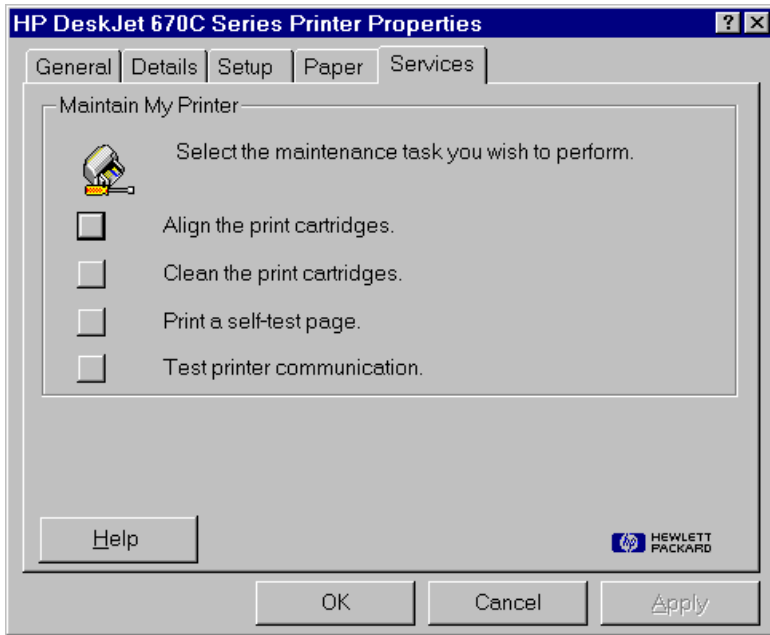

5884911C

Services Page Options

Option	Description
Align the print cartridges	Initializes the routine that aligns the print cartridges. Follow the on-screen instructions.
Clean the print cartridges	Initializes the routine that cleans the print cartridges. Use only if print cartridges are not functioning correctly. This routine uses a great deal of ink. Follow the on-screen instructions.
Print a self-test page	Initializes the routine that prints a test page. Use this function to verify the connection between your computer and the printer.
Test printer communication	This procedure test the communication between the computer and the printer. This test takes up to 3 minutes. An on-screen message appears giving status information. No printout is involved.
Help	Opens the online help.
OK	Accepts changes and closes window.
Cancel	Cancel changes and closes window.
Apply	Applies the current settings; the window remains open.

Optimizing Performance

The print speed and overall performance of HP DeskJet 670C series printers can be affected by several things:

- ❶ **The amount of RAM** in your computer can determine how fast documents are sent to the printer. Increasing RAM in your computer can speed up this process as well as make the computer work more efficiently at other things beside printing.
- ❷ **The size and complexity of documents** printed can make a difference in the printer's performance. Graphics are usually more complex - especially color graphics - and print more slowly than text.
- ❸ **The processing speed of the computer** will determine how fast a document is sent to the printer. For example, a computer with a 486 processor runs faster than a computer with a 386 processor.
- ❹ **Running numerous software** programs at one time slows down printing; each open program uses RAM. Therefore, limit the number of programs or documents open at one time.
- ❺ **Screen fonts stored in RAM** use up memory that the computer may need in order to print. Delete screen fonts or printer fonts that are not needed.

Using On-line Help

On-line help provides information about the printer's software and status.


Printer Software Help

Type of help:	Provides:	How to access/where to find:
HP DeskJet Toolbox	Tutorials and troubleshooting for common print tasks and problems	Click on the icon on the desktop, or in the Program group.
Error Message Help	Comprehensive context sensitive information designed for error recovery.	Button available on most pop-up error messages.
Print Settings Help	Information to help you make print settings choices.	Click the help button for any tab in the HP print settings dialog box.
Release Notes	Up-to-date information for specific conflicts.	From the Program Utilities: select HP DeskJet 670C Release Notes.



Cleaning and Aligning Print Cartridges

These functions are available from the Services Page (see above) and from within the HP DeskJet 670C Toolbox.



DOS Printing

Since DOS applications are developed independently under different standards, each DOS application requires its own printer driver. If there is no driver available for the HP DeskJet 670C series printer, use a driver for a different HP DeskJet printer. In some cases, the substitute driver may not provide access to all of the DeskJet 670C's capabilities.

The following table outlines usable drivers and their capabilities when used with an HP DeskJet 670C series printer.

Substituting Printer Drivers

Printer Driver	Supported Features
HP DeskJet 660C	Color Printing
HP DeskJet 550C	Color Printing
HP DeskJet 540	Color Printing
HP DeskJet 500C	Color Printing
HP DeskJet 320	Color Printing
HP DeskJet 310	Color Printing
HP DeskJet 520	Monochrome Printing Only
HP DeskJet 510	Monochrome Printing Only
HP DeskJet 500	Monochrome Printing Only
HP DeskJet PLUS	Monochrome Printing Only
HP DeskJet	Monochrome Printing Only

The table below shows software drivers available from individual software manufacturers for some HP DeskJet printers.

DOS Programs and Recommended Printer Drivers

DOS Software Program	Version	Recommended Printer Driver
WordPerfect	5.1, 5.1+, 6.x	HP DeskJet 600, 660C, or 850C
Harvard Graphics	3.0	HP DeskJet 540
Lotus 1-2-3	2.x, 3.x, 4.0	HP DeskJet 540
MS Word	5.5, 6.0	HP DeskJet 560C

Information on installing a DOS printer driver for a particular DOS application is supplied by the software manufacturer.

HP DeskJet Control Panel for DOS

The DeskJet Control Panel for DOS is software that replaces the front panel switches found on older printers. The HP Control Panel for DOS does not replace printer drivers. When there is no specific HP DeskJet 670C series printer driver available for an application, the HP Control Panel gives the user access to print settings and features not available through the DOS application. If settings are available in the DOS application printer driver and the DOS Control Panel, the settings made in the DOS application override those made in the HP Control Panel for DOS.

The HP Control Panel for DOS also lets the user monitor the printer's status, and clean and align the print cartridges.

Minimum System Requirements

- ❶ DOS version 3.3 (or newer)
- ❷ An 80286 (or better) processor
- ❸ 2 MB of RAM to print in black or 4 MB of RAM to print in color

Installation

Before you install the DOS control panel:

1. Unpack the printer and set it up.
2. Make sure the computer and the printer are both turned on and connected with the proper cable.

To install the HP control panel for DOS:

1. Insert Printer Driver Disk 3 of the included with your printer.
2. At the DOS prompt, type **A:\install** (or **B:\install** depending on your floppy drive configuration) and press Enter. (If necessary, do a directory search of the disks to find Install.exe, then proceed as above with that disk in your floppy drive.)
3. Follow the on-screen instructions.


To align the print cartridges from the Control Panel for DOS:

1. Type **DJCP** at the DOS prompt to open the stand-alone DOS Control Panel.
2. Select Align Print Cartridges and follow the on-screen instructions.

Two Ways to Use the HP DeskJet Control Panel for DOS

The DOS Control Panel can run either as a stand-alone application or as a memory resident application. To run the DOS Control Panel as a stand-alone application: type **DJCP** at the DOS prompt.

HP DeskJet 670C Control Panel for DOS

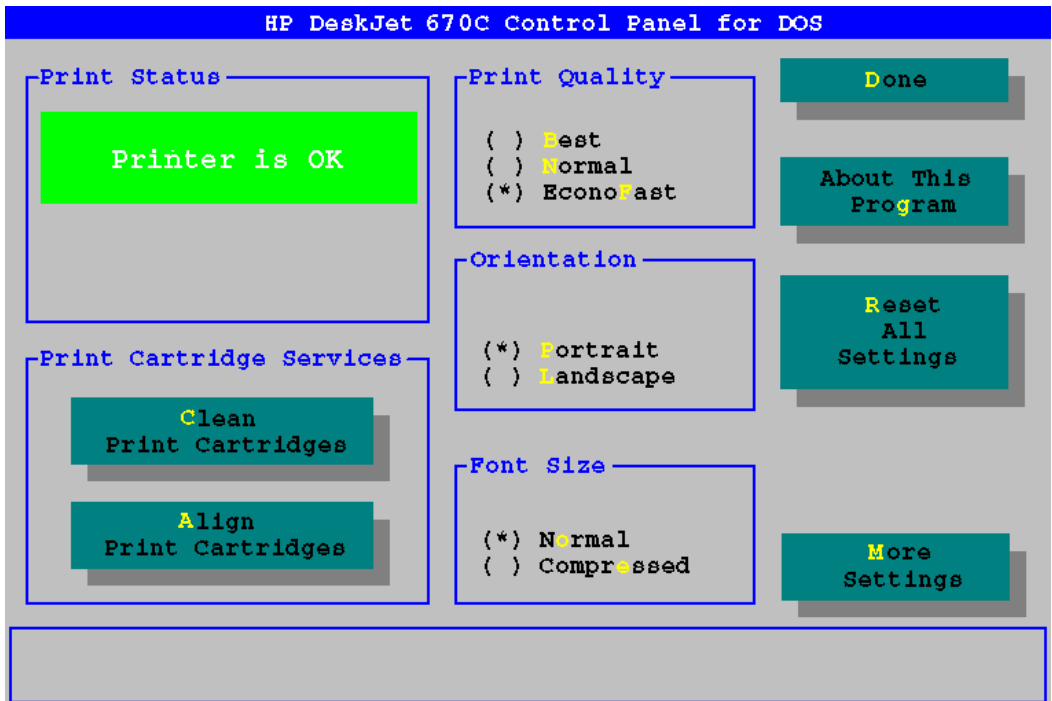

5884918C

The DOS Control Panel must be loaded into memory at start-up to work as a memory resident application.

To set up the Control Panel for DOS as a memory resident application:

1. Type **DJCP** at the DOS prompt to open the stand-alone DOS Control Panel.
2. Select **More Settings**.
3. Select **Memory Resident Functions**.
4. Select **Make Memory Resident**.
5. Select **Done** and reboot the computer.

The memory resident DOS Control Panel is a subset of the stand-alone application due to memory considerations.

Whether stand-alone or memory resident, the Control Panel for DOS allows the user to control or view the following:

- Print Cartridge Services (clean and align the pens)
- Print Quality
- Page Orientation
- Font Width (normal or compressed)
- Status Reports (limited in the resident DOS Control Panel)
- Context-Sensitive Help

In addition to these, the stand-alone Control Panel for DOS provides access to:

- Paper Size
- Media Type (paper or transparencies)
- Character Set
- Lines per Page
- Line Termination
- Reset All Settings
- Memory Resident Controls

OS/2

Although no OS/2 specific printer driver is available for the HP DeskJet 670C series printers, the MS Windows printer driver can be accessed through OS/2 by using MS Windows in OS/2.

HP DeskJet Printers

The following information applies to HP DeskJet 500, 600 and 800 Series printers.

Interface information for HP DeskWriter printers and Macintosh compatible dual-port DeskJet printers such as HP DeskJet 850C, 855C and 870C may be found under “Printer Interface/HP DeskWriter Printers.”

Cable and Connector Information

Recommended Interface Cables

Host Interface	HP Cable Part Number	Cable Length	Cable Connectors
HP IEEE-1284 Compliant Cable	C2950A	2 Meters	DB-25 Male to 36-Pin Centronics Male
HP IEEE-1284 Compliant Cable	C2951A	3 Meters	DB-25 Male to 36-Pin Centronics Male


Interface Specifications

HP DeskJet printers communicate with computers through a single IEEE1284-B parallel I/O interface connector. For more information about interface connection and operation, see “DOS I/O Interface Description.”

Communication Modes and Supported Protocols

Category	Specification
Interface Protocol	IEEE-1284 Compatible
Communication Modes Available	<ul style="list-style-type: none"> * Compatible (Centronics) * Nibble * ECP

IEEE-1284 Interface Connector

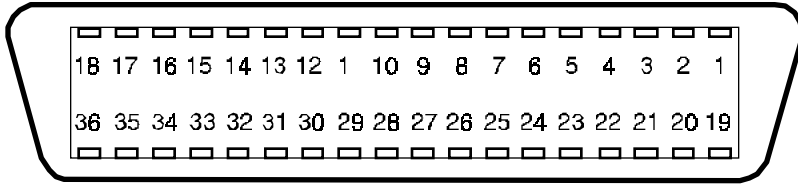

214285B

IEEE-1284 Interface Port (DOS/MS Windows)

Pin Number	Source	Compatibility Mode	Nibble Mode	ECP Mode
1	Host	nStrobe	HostClk	HostClk
2	Bi-Directional		Data 1 (LSB)	
3	Bi-Directional		Data 2	
4	Bi-Directional		Data 3	
5	Bi-Directional		Data 4	
6	Bi-Directional		Data 5	
7	Bi-Directional		Data 6	
8	Bi-Directional		Data 7	
9	Bi-Directional		Data 8	
10	Bi-Directional	nAck	PrtClk	PeriphClk
11	Bi-Directional	Busy	PrtBusy	PeriphAck
12	Bi-Directional	PError	AckDataReq	nAckReverse
13	Bi-Directional	Select	Xflag	Xflag
14	Host	nAutoFd	HostBusy	HostAck
15				

Continued on next page

IEEE-1284 Interface Port (DOS/MS Windows) (Cont.)

Pin Number	Source	Compatibility Mode	Nibble Mode	ECP Mode
16			Logic Gnd	
17			Chassis Gnd	
18	Peripheral		Peripheral Logic High	
19			Signal Ground (nStrobe)	
20			Signal Ground (Data 1)	
21			Signal Ground (Data 2)	
22			Signal Ground (Data 3)	
23			Signal Ground (Data 4)	
24			Signal Ground (Data 5)	
25			Signal Ground (Data 6)	
26			Signal Ground (Data 7)	
27			Signal Ground (Data 8)	
28			Signal Ground (Perror, Select, nAck)	
29			Signal Ground (Busy, nFault)	
30			Signal Ground (nAuto Fd, nSelectLn, nInit)	
31	Host	nInit	nInit	nReverseRequest
32	Peripheral	nFault	nDataAvail	nPeriphRequest
36	Host	nSelectLn	1284 Active	1284 Active

DOS I/O Interface Description

The IEEE-1284 standard defines a signaling method for bi-directional parallel communications between hosts and printers or other peripheral devices. This standard provides improved performance and bi-directional (two-way) communication, allowing a new generation of "intelligent" peripherals to talk and listen to the host device.

HP DeskJet printers have an IEEE 1284-B parallel I/O interface connector. This interface adheres to the IEEE 1284-B parallel interface standard which was derived from the earlier "Centronics®" interface. Firmware in HP DeskJet printers support the following modes of operation through the IEEE 1284-B parallel interface port:

- Compatibility Mode
- Nibble Mode
- Extended Capabilities Port (ECP) mode

Printer drivers on host computers "negotiate" with the printer to switch from one mode to another. If an error occurs while in Nibble or ECP mode, the interface automatically reverts to Compatibility mode.

HP DeskJet printer drivers meet the IEEE 1284-B standard for Level 1 devices. Input receivers meet the standard for Level 2 devices. This allows HP DeskJet printers to be connected to either a Level 1 or Level 2 host.

Level 1 devices drive the interface with 5 V TTL circuits. Their requirements are consistent with pre-existing installed devices and they can operate with any other Level 1 compliant device. Level 1 devices are characterized by steady-state electrical specifications.

Level 2 devices use output drivers with 45-55 ohms output impedance and TTL receivers with 0.2 V- 1.2 V hysteresis. Level 2 devices capitalize on the transmission-line characteristics of the connecting cable, providing faster data transmission.

Compatibility Mode

Compatibility mode is a unidirectional mode of operation in which data flows from the host computer to the printer. It is the mode that has, in the past, been called "Centronics."

Nibble Mode

Nibble mode is a unidirectional mode of operation in which data moves from the printer to the host computer. HP DeskJet printers and most computer hosts can operate in nibble mode. Hosts can switch back and forth between compatibility and nibble modes, thus establishing limited two-way (bi-directional) communication. The host must place itself and the printer into nibble mode to receive status from the printer. This type of bi-directional communication has previously been called "Bitronics."

ECP Mode

ECP mode provides a true bi-directional link between the printer and the host computer. HP DeskJet printers and most computer hosts can operate in ECP mode. ECP mode, combined with the HP proprietary communication protocol, allows the Remote Control Panel for DOS and the HP DeskJet Status Monitor for MS Windows to receive and display status information from the printer.

HP DeskWriter Printers

Cable and Connector Information

Recommended Interface Cables

Cable Type	HP Cable Part Number	Apple Cable Part Number
AppleTalk Network	92215N	M2068
RS-422-A High-Speed Clocked Serial	92215S	M0197


Interface Specifications

HP DeskWriter printers have an 8-pin mini-DIN interface connector port. This connector port is compatible with RS-422-A serial, AppleTalk, and high-speed externally-clocked serial mode communication. The printer automatically determines if it is connected to an AppleTalk network or directly to a Macintosh printer port.

Communication Modes and Supported Protocols

Category	Macintosh I/O Connector
Communication Modes	RS-422-A High-speed Serial AppleTalk (230.4 Kbaud)
Macintosh Protocols	Serial Pacing Protocol (SPP) AppleTalk Transaction Protocol (ATP) AppleTalk Link Access Protocol (ALAP) Datagram Delivery Protocol (DDP) Echo Protocol (EP) Name Binding Protocol (NBP) Printer Access Protocol (PAP) Routing Table Maintenance Protocol (RTMP)

RS-422 Interface Connector (8-pin Mini-DIN)

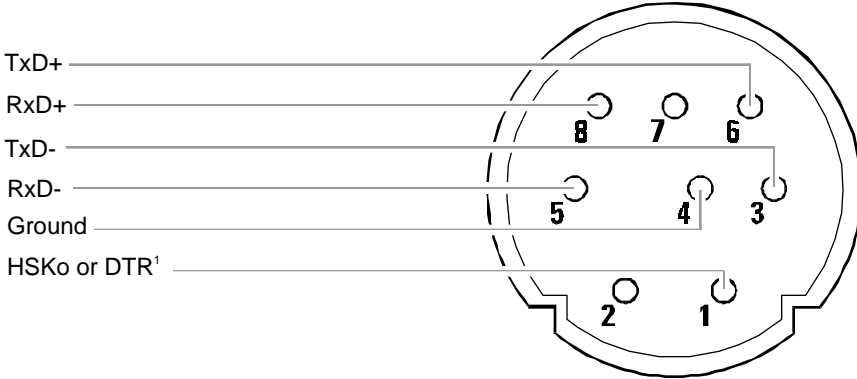

2124073

RS-422 Interface Port (AppleTalk)

Pin Number	Interface Pin Name	Interface Pine Description
1	DTR	Data Terminal Ready Output Handshake
2	NC	No Connection in Printer (Do not connect to ground or any other pin)
3	TxD-	Transmit Data Line
4	Ground	Shield Ground
5	RxD-	Receive Data Line
6	TxD+	Transmit Data Line
7	NC	No Connection
8	RxD+	Receive Data Line

Note

HP DeskWriter printer interface ports conform to RS-422 and cannot be configured to operate as RS-232-C.

Mac I/O Description

HP DeskWriter and HP DeskJet 800 series printers detect and monitor which interface mode (serial or LocalTalk) is present, and automatically switch to the appropriate protocol. The printers determine if they are connected to a LocalTalk node by detecting the presence or absence of a transformer at the interface connector port. (A transformer detected at the interface connector indicates the printer is connected to an LocalTalk network.) If the mode changes while the printer is on, the printer restarts.

HP DeskWriter printers are compatible with two Macintosh serial interface modes:

- RS-422-A (57.6 Kbaud)
- Clocked

RS-422-A signals are modulated against an inverted copy of the modulated signal (for example RxD- and RxD+). Data communication occurs by sensing which line is more negative than the other. Sensing line polarity in respect to an inverted signal is more immune to interference and noise than to a signal compared to a common ground. The signal is also less likely to degrade over longer cable distances.

If a serial connection is made and "clocked" mode is detected, the printer switches from DTR mode (the default at power-up) to SPP mode. The printer selects a frequency for the clocking and clocks the DTR line at that frequency.

In AppleTalk mode, the printer receives data in a synchronous serial bit stream at 230.4 K bits per second and converts the data to parallel.

Note

The Macintosh I/O connector is RS-422-A compatible. It is not possible to use this port as an RS-232-C serial interface port.

Refilling Policy

To get the best performance from your printer, Hewlett-Packard recommends using only genuine HP supplies in inkjet printers, including only HP print and photo cartridges. Refilling HP print cartridges pushes electronic and mechanical components past their normal life cycle, creating many potential problems. Additionally,

Non-HP ink can cause the following:

- ❶ print cartridge nozzles can become clogged resulting in streaked copy or fuzzy characters.
- ❷ print cartridge electrical components can become corroded resulting in poor print quality and/or complete print cartridge failure.

Ink leaking from a refilled print cartridge may cause the following:

- ❶ service station failure. The service station caps and cleans the print cartridges between printouts. If the service station malfunctions, irreversible damage to the print cartridges may result.
- ❷ severe printer damage. If ink from a leaking print cartridge falls on electrical components within the printer, severe damage to the printer may result.

Caution

The ink in the print cartridges has been carefully formulated by Hewlett-Packard to ensure superior print quality and compatibility with the printer. Damage to the printer resulting from modifying or refilling of HP print cartridges is not the responsibility of Hewlett-Packard and is specifically excluded from coverage of HP printer warranties.

Hewlett-Packard does not support the refilling of print cartridges. Hewlett-Packard cannot guarantee the print quality from refilled print cartridges. *Attempting to refill the high-capacity print cartridge may result in a sudden loss of ink from the print cartridge.* Printer damage caused by refilling high-capacity black ink or color ink print cartridges is not covered by the Hewlett-Packard warranty or customer service agreements.

Part Numbers

Item	Part Number	Description
Print Cartridges	51649A ¹	Color Inkjet Print Cartridge (Cyan, Magenta, and Yellow Inks)
	51629A	High Capacity Inkjet Print Cartridge (Black)
Color Kits²	C4533A	U.S.
	C4534A	Europe
	C4535A	Asia
	C4536A	Japan, Inter-Americas

1. The color print cartridge is compatible with the HP DeskJet 600, 660C, 670C, 672C, 680C, 682C, 690C, 692C, 693C, 694C, and the HP DeskWriter 600, 660C, and 680C.
2. The color kits include a color print cartridge and the Print Cartridge Storage Container. The Print Cartridge Storage Container can hold one black or one color print cartridge.

Print Cartridge Specifications

HP 51629A and 51649A Print Cartridge Specifications

Characteristic	Product	Specifications
Type:	Both	Plain paper drop-on-demand Thermal InkJet printing
Ink Base:	51629A (Black) 51649A (Color)	Pigment Based Ink Dye Based Ink
Print Cartridge Life:	51629A (Black) ¹ 51649A (Color) ²	650 Pages at 5% Density 350 Pages at 15% Density
Typical Usable Ink:	51629A (Black) 51649A (Color)	40 ml 7.6 ml per Chamber (3 Chambers)
Number of Nozzles:	51629A (Black) 51649A (Color)	48 Nozzles 48 Nozzles (16 per Color)
Pen Speed:	51629A (Black) 51649A (Color)	8 kHz 5 kHz
Shelf Life:	Both	18 Months
Vertical Resolution:	Both	300 dpi

1. The 51629A print cartridge life is based on an 8 in. x 10 in. printable area with a 5% printing density.
2. The 51649A print cartridge life is based on an 8 in. x 10 in. printable area with a 15% printing density. The printing consists of 10% composite black and 15% of the following colors: cyan, magenta, yellow, green, red and blue.




Thermal Inkjet Technology

The HP DeskJet printer family uses Thermal InkJet II (TIJ II) technology. This technology centers on a disposable print cartridge which propels ink out of 48 nozzles. The basic principle of TIJ II is to apply heat to a tiny measure of ink until it expands and is propelled through a nozzle.

This is achieved by first filling a small reservoir, known as the firing chamber, with ink. The next step is to heat the ink with a thin-film resistor layered above the firing chamber. As the ink heats up, it expands to form a bubble. As the bubble continues to expand and burst, it is forced through the nozzle located below the firing chamber.

This process is repeated up to 8,000 times per second and creates residual heat in the resistor which must be removed. A layer of silicon placed above the resistor transfers the residual heat from the resistor.



Print Cartridge Safety

If ink is accidentally ingested, contact the HP Health Line 1 (800) 457-4209 in North America. From all other international locations the HP Health Line can be reached by calling 1 (503) 494-7199. For health related issues, this line is staffed 24 hours per day.

Material Safety Data Sheet (MSDS)

A Material Safety Data Sheet (MSDS) is available for the print cartridges. The MSDS includes product identification, characteristics of the ink, and precautions for handling and use. You can request a MSDS at the following address:

Hewlett-Packard Customer Information Center
Department MSDS
19310 Pruneridge Avenue
Cupertino, CA 95014
Mailstop 49AS

Telephone 1 (800) 752-0900
Ask for Department MSDS (6:00 AM to 5:00 PM Pacific Time)

The Material Safety Data Sheet is also available from the following sources:

- HP forums of electronic bulletin board services
- HP FIRST
- Customer Support Centers

Refer to “Service and Support/Resources” for access to the above resources.

Maintaining Print Cartridges

The printer automatically performs operations of spitting, wiping, and capping of the print cartridge nozzles to maintain optimum print quality. These operations occur transparently to the user.

Proper use and handling will provide optimum print quality and print cartridge life.

Note See “Print Cartridge Information/Maintenance and Troubleshooting” for more print cartridge troubleshooting information.

Print Cartridge Tips

Print Cartridge Dos and Don'ts

Do:	Don't:
Keep print cartridges sealed in their packaging until ready for use. (The print cartridges have a longer life sealed in the packaging than in the printer or the print cartridge storage container.	Do not use print cartridges after the expiration date. See “Print Cartridge Information/Maintenance and Troubleshooting.”
Keep opened print cartridges in the printer or the storage container.	Do not unplug the printer without turning the power off from the power button. Pressing the power button caps the print cartridge in the service station, keeping the ink from drying in the print cartridge nozzles.
If the printout is missing dots or white lines appear to run through the printout, refer to “Troubleshooting Information/Print Quality Problems/Missing Dots.”	Do not allow the print cartridge contacts and nozzles to touch any surface or object, including your fingers. Skin oil and dust can cause print quality problems.
Store print cartridges at room temperature.	Do not install a print cartridge that has crusting of dried ink around the print cartridge nozzles. Discard it and install a new print cartridge.
Press the Power button to turn off the printer rather than unplugging the printer.	


Note On the HP DeskJet and DeskWriter 600 Series Printers, opening the access door automatically moves the print cartridge to the center of the mechanism for easy access.

Identifying the Expiration Date

Print quality problems may be caused by print cartridges that have passed their expiration date. The print cartridge expiration date is 18 months after the date of manufacture.

Methods for Identifying Print Cartridge Expiration Dates

Method 1 - Read the Date on the Box

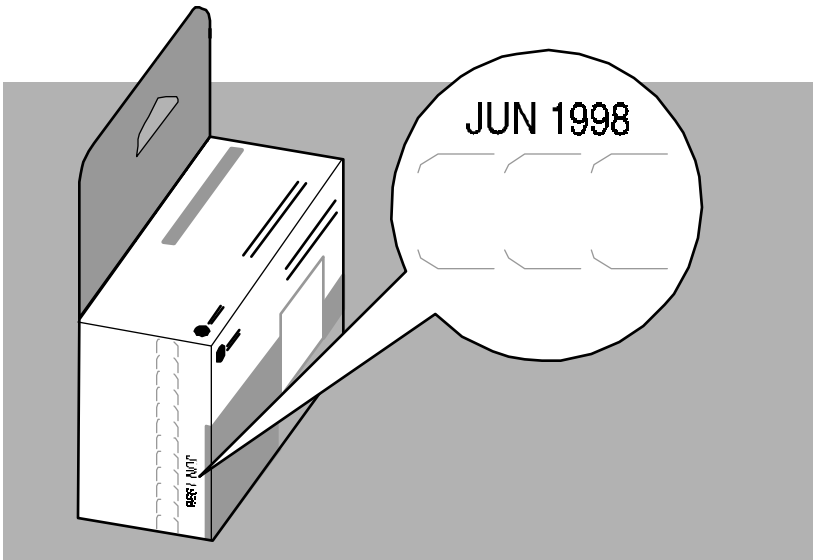


2104933

If the print cartridge is in a box, read the “Use Before” date printed on the box.

Method 2 - Read the Code on the Print Cartridge

1. Determine the manufacturing date from the code printed on the print cartridge.

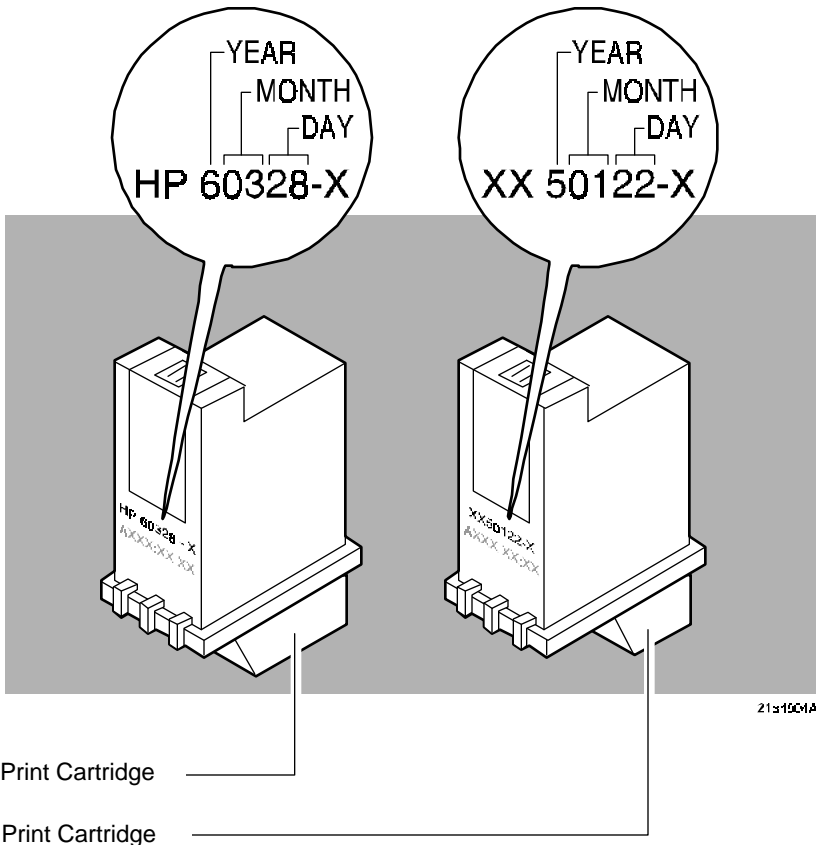

2. Replace the print cartridge if it is more than 18 months after the manufacturing date code.

Note

Ink can evaporate through the nozzles, reducing the print cartridge life. Therefore, keep print cartridges in their sealed container or capped by the service station at the right end of the mechanism.

Use a FIFO (First In, First Out) inventory control process to avoid having print cartridges longer than the print cartridge shelf life specification.

Short Print Cartridge Life

There are several causes for short print cartridge life. The information below shows the average life of a print cartridge and possible causes for a reduction to its life.

Print Cartridge Life Specifications

Print Cartridge	Part Number	5% Density	15% Density	Sealed in its Container (Shelf Life)
Black	51629A	650 Pages		18 Months
Color	51649A		350 Pages	18 Months

1. The 51629A print cartridge life is based on a 8 in. x 10 in. printable area with a 5% printing density.
2. The 51649A print cartridge life is based on an 8 in. x 10 in. printable area with a 15% printing density. The printing consists of 10% composite black and 15% of the following colors: cyan, magenta, yellow, green, red and blue.

Possible Causes for Short Print Cartridge Life

Cause	Reason
Higher coverage rate than listed in specifications.	The rate of coverage on the page significantly impacts the number of pages per print cartridge. Heavy concentrations of ink and higher print quality significantly reduces the number of pages per print cartridge.
The pages contain graphics.	Generally, graphics use ink at a much higher rate than text. If possible, print drafts of documents without the graphics.
The selected print mode uses more ink.	Higher quality print modes use more ink than a draft print mode. To maximize print cartridge life, print drafts of documents in EconoFast mode, then print the final copies in Best mode.
Print cartridge is past its expiration date.	Replace the print cartridge. Use a FIFO (First In-First Out) inventory process to minimize having a stock of expired print cartridges.

Continued on next page

Possible Causes for Short Print Cartridge Life (Cont.)

Cause	Reason
Printer was unplugged with the print cartridge out of its home position	A service station is located at the right end of the mechanism. This service station caps the print cartridge nozzles to minimize ink drying in the nozzles. Turning off the printer caps the print cartridge and returns it to the service station. Always allow the print cartridge to return to the home position by pressing the Power button rather than unplugging the printer.
Print cartridge may need to be restored.	Run the print cartridge cleaning routine. If print quality is not restored after a page of printing, replace the print cartridge.
Excessive use of the print cartridge cleaning routine.	The process of restoring print cartridges, by running the cleaning routine, uses ink. Avoid excessive use of the cleaning routine.
Print cartridge stored outside of the printer.	Open print cartridges must be stored in the printer or in the specially designed Print Cartridge Storage Container.
Print cartridge has been refilled.	Hewlett-Packard does not recommend or guarantee the print quality or life from the refilling of print cartridges. Replace the print cartridge with a new print cartridge.
The print cartridge was prematurely removed from its sealed container.	The print cartridge has a longer life sealed in its packaging rather than in the printer or the print cartridge storage container. Keep print cartridges sealed in their packaging until needed. Then, install the print cartridge promptly into the printer.
Estimate of pages printed with the print cartridge is incorrect.	It is very easy to underestimate the number of pages printed. When counting pages per cartridge, be sure to count drafts that are thrown away.
The print cartridge is faulty.	Replace the print cartridge. If there becomes a pattern of faulty print cartridges, the printer may be causing the print cartridges to fail. In this case, return the printer for repair and indicate the history of the faulty print cartridges.
The printer has a hardware problem.	The service station may be faulty, or the printer may be damaging the print cartridges. If the problem recurs with the printer, return the printer for repair and indicate the history of the faulty print cartridges.
Short color print cartridge life.	Most of the causes for short black print cartridge life also apply to the color print cartridge. Review the other possible causes in this table.

Missing Rows of Dots

Missing rows of dots on printouts have several causes: the print cartridge may need routine cleaning, it may be nearly out of ink, or the connections between the print cartridge and the carriage assembly may need cleaning. The table below may provide some insight into solving these problems.

Possible Causes for Missing Rows of Dots

Cause	Reason
Print cartridge nozzles are partially clogged	The most common cause of horizontal rows of dots missing on printouts is a partially clogged nozzle in the print cartridge. Try cleaning the print cartridge by using the print cartridge cleaning routine available through the Services dialog box in the HP DeskJet 670C Toolbox. (Do not use this procedure too often as a large amount of ink is used.)
Print cartridge is nearly out of ink	The second most common cause of missing rows of dots is that the print cartridge is running out of ink. Replace the print cartridge with a new one.
Connections between the print cartridge and the carriage assembly are faulty	Occasionally the problem is the result of intermittent connections between the print cartridge and the printer carriage. Unplugging the cartridge and plugging it in again sometimes cures this problem. Otherwise, clean both sets of contacts with a clean lint-free cloth dampened with distilled water.
Clogged nozzles	If the procedures above do not solve the problem, the print cartridge may have irreversibly clogged nozzles. There is nothing for it but to replace the print cartridge.






Note

For additional information about solving missing dot problems, refer to "Troubleshooting Information/Print Quality Problems/Missing Dots."

Part Numbers





Note The power modules described here support the HP DeskJet 540 and the HP DeskJet and DeskWriter 600 series printers; they are not compatible with HP DeskJet 300, 400 or 800 series printers.

Power Module Part Numbers and General Information

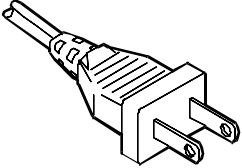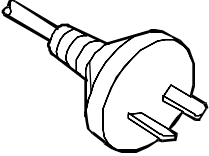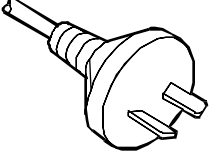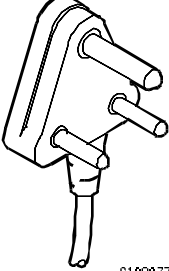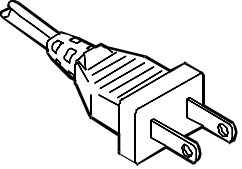Power Module Plug Type	Country or Region	Region's AC Voltage	HP Part Number
 218207A	US, Canada, Brazil, Mexico Latin America, Saudi Arabia Taiwan, Europe (U. S. cord)	120 VAC 60 Hz	9100-5124 (C2175A)
 216491-C	Argentina	220 VAC 50 Hz	9100-5129 (C2179A)
 216491-C	Australia	240 VAC 50 Hz	9100-5127 (C2181A)
 2182977	India and South Africa	220 VAC 50 Hz	9100-5128 (C2180A)
 218207A	People's Republic of China Brazil and Philippines	220 VAC 50 Hz	9100-5590




Continued on next page

Power Module Part Numbers and General Information (Cont.)

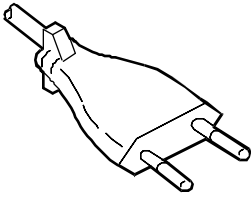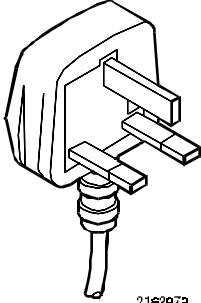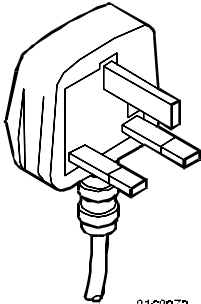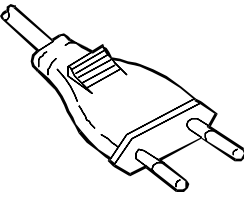Power Module Plug Type	Country or Region	Region's AC Voltage	HP Part Number
 <p>2161912C (4.8 mm Plug)</p>	<p>Korea</p>	<p>220 VAC 60 Hz¹</p>	<p>9100-5126 (C2182A)</p>
 <p>2162979</p>	<p>United Kingdom Singapore Malaysia Asia-Pacific Middle East</p>	<p>240 VAC 50 Hz</p>	<p>9100-5131 (C2177A)</p>
 <p>2162979</p>	<p>Hong Kong</p>	<p>220 VAC 50 Hz</p>	<p>9100-5348</p>
 <p>2162881 (4 mm Plug)</p>	<p>Eastern & Western Europe Baltic countries Chile Israel Jordan Lebanon Nicaragua North Africa Paraguay Peru Russia Turkey</p>	<p>230 VAC 50 Hz</p>	<p>9100-5132 (C2176A)</p>

Continued on next page

Power Module Part Numbers and General Information (Cont.)

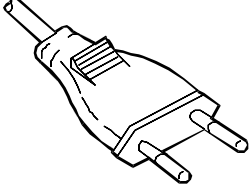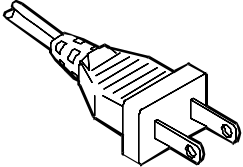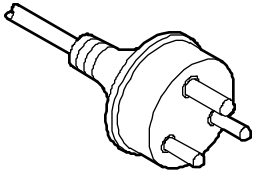Power Module Plug Type	Country or Region	Region's AC Voltage	HP Part Number
 <p>2162981 (4 mm Plug)</p>	<p>Asia, North Caribbean Indonesia Latin America South America Thailand Brazil</p>	<p>220 VAC 60 Hz ¹</p>	<p>9100-5346</p>
 <p>2162978</p>	<p>Japan</p>	<p>100 VAC 50/60 Hz</p>	<p>9100-5130 (C2178A)</p>
 <p>2164906C</p>	<p>India (5 Amp plug)</p>	<p>220 VAC 50 Hz</p>	<p>9100-5602</p>

1. This power module is wound for 50 Hz.

Specifications

Power Module Specifications

Category	Specification
Input Voltage (Power Module Dependent)	100 VAC, 120 VAC, 220 VAC, 230 VAC, or 240 VAC ($\pm 10\%$)
Frequency	
100 VAC	50/60 Hz (± 3 Hz) \pm
120 VAC	60 Hz (± 3 Hz)
220 VAC	50 Hz (± 3 Hz)
230 VAC	50 Hz (± 3 Hz)
240 VAC	50 Hz (± 3 Hz)

Troubleshooting

Possible Causes of Printer Not Printing

- ❶ Power module plug may not be fully seated in the printer's power socket.
 - ❷ Power module may not be connected to a powered receptacle. Make sure any power strip switches are turned on. Also, try a different outlet.
 - ❸ Power Module is not the correct device for the country or region's power. Refer to "Product Information/Ordering Printer Options".
 - ❹ Power Module may be faulty. Substitute another power module if available.
-

Media Part Numbers

The following are general guidelines for the selection and loading of paper and media in HP DeskJet and DeskWriter printers. For information about your specific printer, refer to “User’s Guide/Printable Area and Paper Handling.”

HP Media Part Numbers

Product Name	Description	Dimensions	Package Size	Part Number
HP Premium Inkjet Paper (Not for use with photo pen)	U.S. Letter/A-size coated paper for premium DeskJet printing	216 x 279 mm (8.5 x 11 in)	200 sheets	51634Y
HP Premium Inkjet Paper (Not for use with photo pen)	European/A4-size coated paper for premium DeskJet printing	210 x 297 mm	200 sheets	51634Z
HP Premium Transparency Film	U.S. Letter/A-size transparency film for presentation-quality overheads	216 x 279 mm (8.5 x 11 in)	20 sheets	C3828A
HP Premium Transparency Film	European/A4-size transparency film for presentation-quality overheads	210 x 297 mm	20 sheets	C3832A
HP Premium Transparency Film	U.S. Letter/A-size transparency film for presentation-quality overheads	216 x 279 mm (8.5 x 11 in)	50 sheets	C3834A
HP Premium Transparency Film	European/A4-size transparency film for presentation-quality overheads	210 x 297 mm	50 sheets	C3835A
HP Premium Glossy Paper	U.S. Letter/A-size glossy paper	216 x 279 mm (8.5 x 11 in)	10 sheets	C3833A
HP Premium Glossy Paper	European/A4-size glossy paper	210 x 297 mm	10 sheets	C3831A
HP Premium Glossy Paper	U.S. Letter/A-size glossy paper	216 x 279 mm (8.5 x 11 in)	50 sheets	C3836A
HP Premium Glossy Paper	European/A4-size glossy paper	210 x 297 mm	50 sheets	C3837A
HP Greeting Card Paper	A-size paper and matching envelope for Quarter fold cards	216 x 279 mm (8.5 x 11 in)	20 ea.	C1812A

[Continued on next page](#)

HP Media Part Numbers (Cont.)

Product Name	Description	Dimensions	Sheets per Pack	Part Number
HP Bright White InkJet Paper	U.S. Letter/A-size treated paper great for two-sided printing	216 x 279 mm (8.5 x 11 in)	500 sheets	C1824A
HP Bright White InkJet Paper	European/A4-size treated paper great for two-sided printing	210 x 297 mm	500 sheets	C1825A
HP Banner Paper ¹	U.S. Letter/A-size Z-Fold, both-side printable	216 x 279 mm (8.5 x 11 in)	100 sheets	C1820A
HP Banner Paper ¹	European/A4, Z-fold, both-side printable	210 x 297 mm	100 sheets	C1821A
HP Photo Paper ²	U.S. Letter/A-size glossy paper great for photos	216 x 279 mm (8.5 x 11 in)	20 sheets	C1846A
HP Photo Paper ²	European/A4-size glossy paper great for photos	210 x 297 mm	20 sheets	C1847A
HP Photo Paper ²	U.S. Letter/A-size glossy paper great for photos	216 x 148.5 mm (8.5 x 5.5 in)	20 sheets	C1848A
HP Photo Paper Greeting Card ²	European/A4-size glossy paper great for photos	210 x 297 mm	20 sheets	C1849A
HP Photo Paper Invite Card ²	Glossy paper and matching envelopes for half-fold Invite Card with two-sided printing	216 x 148.5 mm (8.5 x 5.5 in)	20 sheets	C1850A
HP Photo Paper Invite Card ²	Glossy paper and matching envelopes for half-fold Invite Card with two-sided printing	148 x 210 mm	20 sheets	C1851A

1. Verify through your User's Guide the applicability of using banner paper with your printer.
2. Verify through your User's Guide the applicability of using photo paper with your printer.

Selecting Paper Tips

Tips for Selecting and Using Paper

- ❶ For paper handling and printable area specifications, refer to “Product Information/Specifications.”
- ❷ Always use paper that conforms to the product’s specifications. Refer to “Product Information/Specifications.”
- ❸ Most plain paper manufactured for photo-copying produces good results for most printing needs. However, cotton bond paper, HP Premium Inkjet Paper, and HP Premium Glossy Paper produce excellent printing results for special projects.
- ❹ Before you purchase large quantities of a certain type of paper, print on both sides of a few sheets to determine if it provides acceptable quality printing on its "print side." (See "Determining the Print Side of Media.")
- ❺ Be sure that your paper does not have tears, dust, wrinkles, or curled or bent edges.

Tips for Selecting and Using Envelopes

- ❶ Always use envelopes that conform to the product’s Specifications. Refer to “Product Information/Specifications.”
- ❷ Before you purchase large quantities of a certain type of envelope, first sample its ease of use with the printer to determine whether it's compatible.
- ❸ Use high quality envelopes that are thin and sharply creased.
- ❹ Do not use envelopes that are shiny or embossed or that have clasps or windows.
- ❺ Do not use envelopes with thick or crooked edges, or envelopes that are damaged, curled, wrinkled, or irregularly shaped.

Tips for Selecting and Using Transparencies and other Media


- ❶ Always use transparencies, index cards, postcards, and other media that conform to the product's Specifications. Refer to "Product Information/Specifications."
- ❷ For best results when printing on transparencies, use HP Premium Transparency Film.
- ❸ Do not use paper that is damaged, curled, or wrinkled.
- ❹ Do not use paper with cutouts or perforations.
- ❺ Do not use multiple-part forms.
- ❻ Do not use paper that is heavily textured or embossed.

Tips for Selecting and Using Labels

The following Hewlett-Packard printers support labels:

- | | |
|-------------------------|----------------------------|
| ❶ HP DeskJet 510 | ❶ HP DeskWriter 510 |
| ❷ HP DeskJet 520 | ❷ HP DeskWriter 520 |
| ❸ HP DeskJet 540 | ❸ HP DeskWriter 540 |
| ❹ HP DeskJet 550C | ❹ HP DeskWriter 550C |
| ❺ HP DeskJet 560C | ❺ HP DeskWriter 560C |
| ❻ HP DeskJet 600 Series | ❻ HP DeskWriter 600 Series |
| ❼ HP DeskJet 800 Series | |

While label support is not officially recognized in the User's Guides, the printers listed above can successfully be used if the following guidelines are STRICTLY followed:



Caution Failure to follow the suggestions below can permanently damage your printer.

The following are guidelines when using labels in HP DeskJet printers:

- ❶ Use only Avery paper labels that are specifically designed for use with HP inkjet printers. These labels are less likely to peel when inside the printer.
- ❷ Do not use plastic or clear labels. DeskJet inks are formulated for use with paper or specially treated plastic papers and will not dry properly when used with plastic or clear labels.
- ❸ Do not use ANY label material which is damaged, folded, curled, or wrinkled in any fashion. These conditions are frequent causes of jams caused by labels peeling inside the printer. Labels that have peeled inside the printer are difficult to remove and may necessitate returning the printer to HP for service.
- ❹ Do not use labels that are over two years old. Older label materials are more likely to peel inside the printer.
- ❺ Do not print on partially used sheets of label material. The varying thickness' of material passing over the print rollers can cause label jams or print skew.

Observe the following guidelines when storing label materials:


- ❶ Always store label materials in the manufacturer's packaging until ready for use. The manufacturer's packaging protects the labels and adhesives from humidity extremes which could prematurely age the labels.
- ❷ Always store label materials out of direct sunlight.
- ❸ Keep label materials flat in the original packaging to help prevent premature aging, wrinkling or bending.

Tips for Selecting and Using Banner Paper

- ❶ For paper handling and printable area specifications, refer to “Product Information/Specifications.”
- ❷ Always use paper that conforms to the product’s specifications. Refer to “Product Information/Specifications.”
- ❸ Most 20 lb. Z-fold banner-type paper will produce good results for your banner printing needs. However, HP Premium Inkjet Banner Paper, will produce excellent printing results for all your banner printing projects.
- ❹ Before you purchase large quantities of a certain type of paper, print a few sheets to determine if it provides acceptable quality printing.
- ❺ Be sure that your paper does not have tears, dust, wrinkles, or curled or bent edges.



Tips for Selecting and Using HP Photo Paper with the HP Photo Cartridge

- ❶ Verify that the HP Photo Cartridge is intended for use in your printer. Refer to the “User’s Guide” for your printer.
 - ❷ Remove the black print cartridge and replace it with the HP Photo Cartridge. Refer to the “User’s Guide” for your printer for instructions.
 - ❸ Be certain that you have selected “Use HP Photo Cartridge” in the Page Setup box.
 - ❹ Use HP Photo Paper (loaded glossy-side down) in your printer’s IN tray, not HP Premium InkJet paper when you print photographs. Using HP Photo paper will ensure high-quality, fade-resistant images.
 - ❺ For paper handling and printable area specifications, refer to the “User’s Guide” for your printer.
 - ❻ Before you purchase large quantities of a certain type of paper, print a few sheets to determine if the paper provides acceptable quality printing.
 - ❼ Be sure that your paper does not have tears, dust, wrinkles, or is curled, or has bent edges.
 - ❽ For best results with the HP Photo paper/HP Photo cartridge combination, scan your photographs at 100 or 150 dpi. If you scan them at a higher dpi, you won’t improve the print quality, and your photographs will take longer to print.
 - ❾ Printing in Best mode yields the most vivid colors. (If the slower printing speed is acceptable.)
- 



Loading Paper Tips

General Tips for Loading Media Effectively

- ❶ To obtain the best print quality and avoid getting media jammed in the paper feed rollers, always use paper and other media that conform to the product's specifications. Refer to "Product Information/Specifications."
- ❷ Load only one media type at a time into the IN tray making sure the right edge of the media is aligned with the right edge of the IN tray.
- ❸ Insert all paper, cards, envelopes, labels, transparencies and banner paper print-side-down into the IN tray of the printer. (See "Determining the Print Side of Media.")
- ❹ Never load more than the recommended amount of media into the IN tray at one time.
- ❺ Always load index cards, postcards, and envelopes in portrait orientation (that is, where the paper is longer than wide when placed in the IN tray).
- ❻ Always use print settings in the printer driver that match the media type, size, and orientation.
- ❼ Before inserting a stack of media into the IN tray, always tap its edges on a flat surface to even it out.




Determining the Print Side of Media

Insert all paper, cards, envelopes, labels, transparencies and banner paper print-side down into the IN tray of the printer. Here are some tips for loading media print side down:

- ❶ For plain paper, load the side identified by the paper's packaging as the print side face down.
- ❶ For letterhead paper, load the letterhead side down and facing the back of the paper tray.
- ❶ For HP Premium Inkjet Paper, load face down the side identified on the packaging as the print side with the corner arrow facing the back of the paper tray.
- ❶ For HP Premium Glossy Paper, load the glossy side down.
- ❶ For index cards or postcards, load the side designed to be written upon face down.
- ❶ For envelopes, load the side you address face down
- ❶ For labels, load the paper side down (the slick side up).
- ❶ For HP Premium Transparency Film, load the rough side down with the sensing strip facing the back of the paper tray.
- ❶ For HP Premium Banner Paper, load face down the side identified on the packaging as the print side with the corner arrow facing the back of the paper tray.

Using the Single-Sheet Feeder (HP 800 Series Printers)

If your printer is equipped with a single-sheet feeder, the single-sheet feeder allows you to feed a single sheet of paper or other media into the printer without unloading the IN tray. The single-sheet feeder slides freely to the right and left to accommodate the width of the media you insert. Always use paper and other media that conform to the product's Specifications. Refer to "Product Information/Specifications."



The Printing System

Printing systems contain hardware and software components which must work together properly before printing can take place. The printer driver provides the interface between the software applications that support printing, the computer's hardware, and the printer. The basic printing system consists of the following:

1. Host computer (PC or Macintosh)
2. Application software (word processing, graphics design, desktop publishing, etc.)
3. Printer driver (specific to your printer and, in some cases, your application software)
4. Printer cable
5. Printer (HP DeskJet or DeskWriter)
6. The paper or other media upon which printing will take place

Note Printing systems in networks may contain a somewhat different configuration of hardware and software.

HP ColorSmart printer drivers not only provide the hardware/software interface, but also allow bi-directional communication between the printer and the computer. Bi-directional communication allows printing information to flow from the computer to the printer, and printer status and error information to flow back from the printer to the computer.

Resolving Printing System Problems

Many printer problems and their solutions are reported in error messages that appear on the computer's screen. When one of these messages is received, follow the instructions given. Check the HP DeskJet Status Monitor (MS Windows users) or the Print Monitor (Macintosh) for information on the current status of the printer.

If you haven't received an error message on the computer's screen but have noted a problem with your printer, read through the troubleshooting topics that follow to find one that matches your printer's symptoms.

Troubleshooting Hints

The table below describes DeskJet and DeskWriter printing system problems along with their causes and solutions.

Note To save time diagnosing printing system problems, the Possible Cause column in the table below is given with the most likely cause listed first. If the printing system does not respond correctly after trying the first solution, proceed the next, etc.

Printing System Problems, Causes and Solutions

Problem	Possible Cause	Solution
Printer does not print. (Power light on, Form Feed light off)	The printer driver is still preparing data to send to the printer.	Wait a few minutes. Some computers take several minutes of processing time before sending any data to the printer.
	The interface connection or the interface cable has failed.	<ol style="list-style-type: none"> 1. Verify the interface cable is an approved interface cable. (Must conform to IEEE 1284-B standards) 2. The interface cable may be faulty. Check the interface cable connections or try another interface cable. 3. Wrong interface connection. For example, the printer is connected to the serial port (e.g. COM1) rather than a parallel interface port.
	Failure of the host computer.	<ol style="list-style-type: none"> 1. Verify the host is operating correctly by printing to another printer. 2. The computer-to-printer connection has failed. Unplug the printer from the host computer and try printing a self-test. If the self-test prints OK, verify the host computer and interface cable are functional by printing to a different printer using the same printer port and printer cable.
	The problem is caused by TSR programs or the application software.	<ol style="list-style-type: none"> 1. Close (or "rem-out") any screen saver or other TSR (Terminate Stay Resident) software programs (such as MacDisk) that are open and running in the background. Restart your computer. 2. Your software program is not set up for the printer. Follow the instructions in your software program manual for setting up the software to run with the printer.

Continued on next page

Printing System Problems, Causes and Solutions (Cont.)

Problem	Possible Cause	Solution
Printer does not print. (Cont.) (Power light is on, the Form Feed light is off)	The wrong printer is selected	(MS Windows) Open the Printers dialog box in the MS Windows Control Panel and verify that the correct printer is selected. (An on-screen message may ask you to open Page Setup in your application.) (Macintosh) Open the Chooser, select the correct printer, and close the Chooser. (An on-screen message may ask you to open Page Setup in your application.)
	The problem is caused by the printer driver.	It may be necessary to reinstall the printer driver software using the instructions from the setup card.
	The printer's name does not appear in the Installed Printers list in the Printers dialog box in the MS Windows Control Panel.	<ol style="list-style-type: none"> 1. Close all TSRs (screen savers and other software that runs in the background). 2. Exit and then restart MS Windows. 3. Verify all TSRs remained closed. 4. Reinstall the printer driver using the instructions from the setup card.
	The problem is caused by the application software or the printer driver.	<ol style="list-style-type: none"> 1. Restart Windows and print the self-test from the HP Toolbox. 2. Verify the proper printer driver and parallel port are selected. The printer driver's name should appear in the Installed Printers dialog box. 3. Close any screen saver or other TSR (Terminate Stay Resident) software programs that are open and running in the background. Restart your computer. 4. It may be necessary to reinstall the printer driver software using the instructions from the setup card. 5. Your software program is not set up for the printer. Follow the instructions in your software program manual for setting up the software to run with the printer.

Continued on next page

Printing System Problems, Causes and Solutions (Cont.)

Problem	Possible Cause	Solution
The printer does not print. (All lights are blinking)	The printer-to-computer connection failed.	<ol style="list-style-type: none"> 1. Switch off the printer, disconnect the printer cable, switch the printer on. 2. If the Power light comes on and the Form Feed light remain off, print a sample page. 3. If the sample page prints, the printer is not the problem. 4. Reconnect the printer cable and re-send the file. 5. If the problem persists, the problem may be with the printer cable, the cable connections, or the computer port. (First, try another printer cable.)
	The printer has failed.	<ol style="list-style-type: none"> 1. Switch off the printer, disconnect the printer cable, switch the printer on. 2. If all lights begin blinking again, the printer is faulty.
The printout contains garbled or strange text characters (such as hearts or smiling faces), or contains distorted graphic images.	The wrong printer may be selected.	Verify that the proper printer driver is selected. The printer driver's name should appear in the installed printer's dialog box (MS Windows) or the Chooser menu (Macintosh).
	The printer-to-computer connection failed.	<ol style="list-style-type: none"> 1. Switch off the printer, disconnect the printer cable, and switch the printer on. 2. Print a self-test (or demo) page. 3. If the self-test page prints, the printer is not the problem. 4. Reconnect the printer cable and re-send the file to the printer. 5. If the printout is still garbled, the problem may be with the printer cable, the cable connections, or the computer host. Try another printer cable. Try a different computer.
The paper does not eject from the printer.	The printer did not receive a form-feed command.	If the software does not send automatic form-feed commands, press the Form Feed key on the printer to initiate a manual form-feed.

Continued on next page

Printing System Problems, Causes and Solutions (Cont.)

Problem	Possible Cause	Solution
The colors in the printout do not match the colors on the host computer's monitor.	The printer driver settings may not be correct for your monitor.	Verify that your print cartridges are at room temperature and have plenty of ink, then try the following: <ol style="list-style-type: none">1. Verify that Complex Color Printing or Color Match option is selected in the Options menu of the Printer Setup menu.2. Try a different dithering method. See the "User's Guide" for your printer for dithering recommendations.
The printout contains faint or fuzzy print.	The printer driver settings, the pens, or the selected media may be faulty.	Verify the print cartridges are at room temperature, and have plenty of ink. Verify that the print settings are appropriate for the media selected. Make sure the correct print settings are selected in the printer driver. (The printer driver settings should appear in the Installed Printers dialog box.)



Printer Troubleshooting Hints

Troubleshooting Tools

The following table lists the tools needed for general printer maintenance.


Recommended Troubleshooting Tools and Supplies

Tool	Purpose
Tissue	Print Cartridge Cleaning Operations.
Lint -free cloth	Cleaning the Printer and the Print Cartridge Contacts.
Computer vacuum	Loosening and removing paper dust and other particulate matter from the interior of the printer.
Distilled water	Used for all cleaning purposes requiring water.


HP Toolbox (MS Windows Users)

HP Toolbox helps you diagnose and solve common printing problems. To access HP Toolbox, double-click the Toolbox icon in the HP DeskJet Utilities program group. Then follow the symptoms and solutions that apply.

Note



Instead of the HP Toolbox, earlier versions of MS Windows printer drivers used Dr. DeskJet which performed similar functions. To access Dr. DeskJet, double-click the Dr. DeskJet icon in the HP DeskJet Utilities program group. Then follow the symptoms and solutions that apply.




Troubleshooting Flowcharts

Troubleshooting Flowcharts - Power-On Section


See "EX" and "EZ" See "CSP200"

Power-On Section

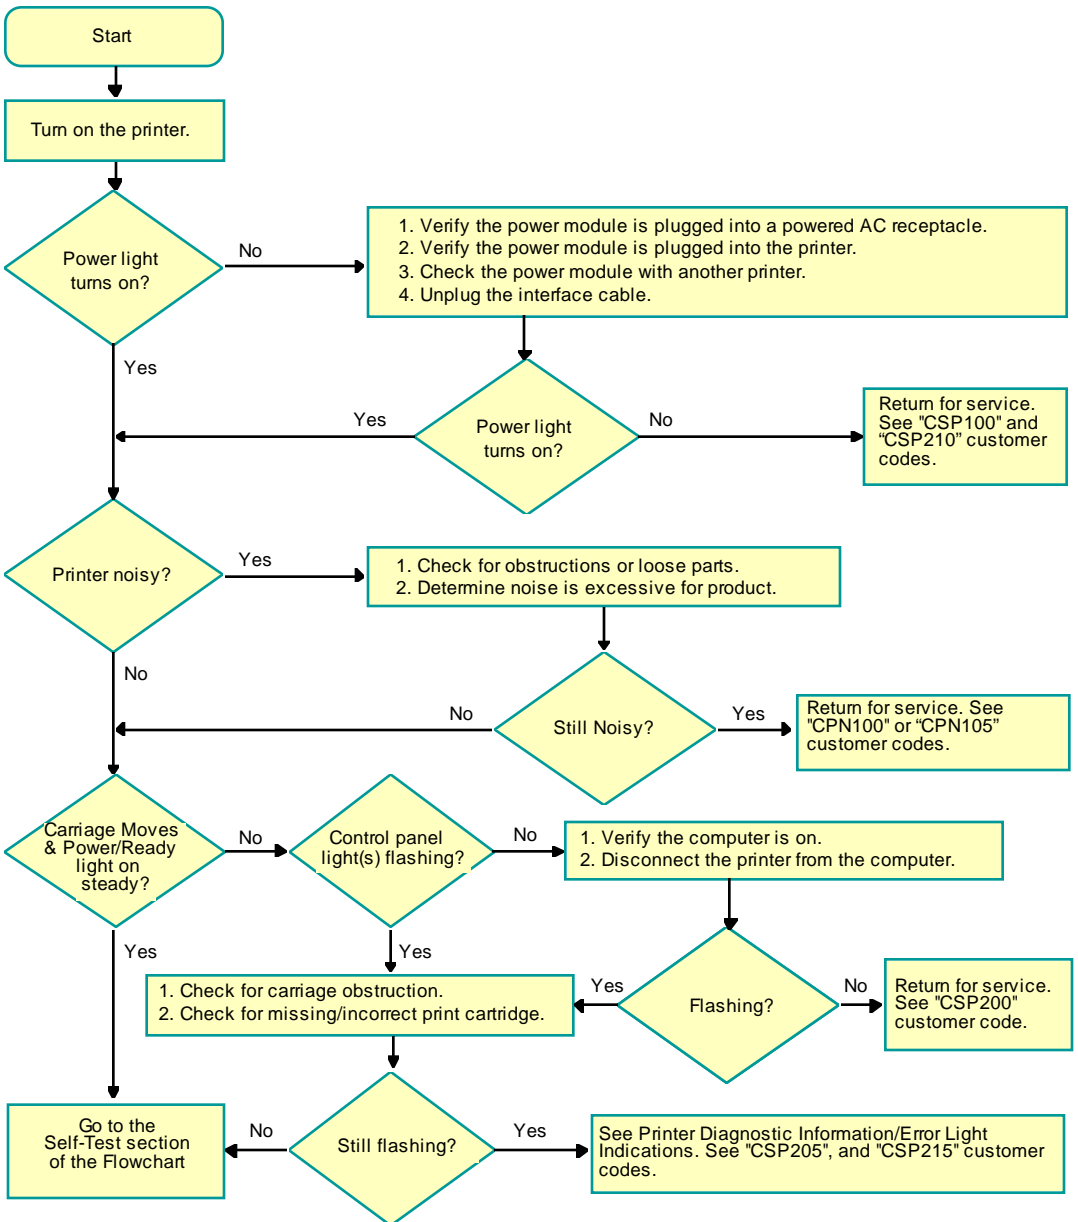


Troubleshooting Flowcharts - Self-Test Section

Self-Test Section

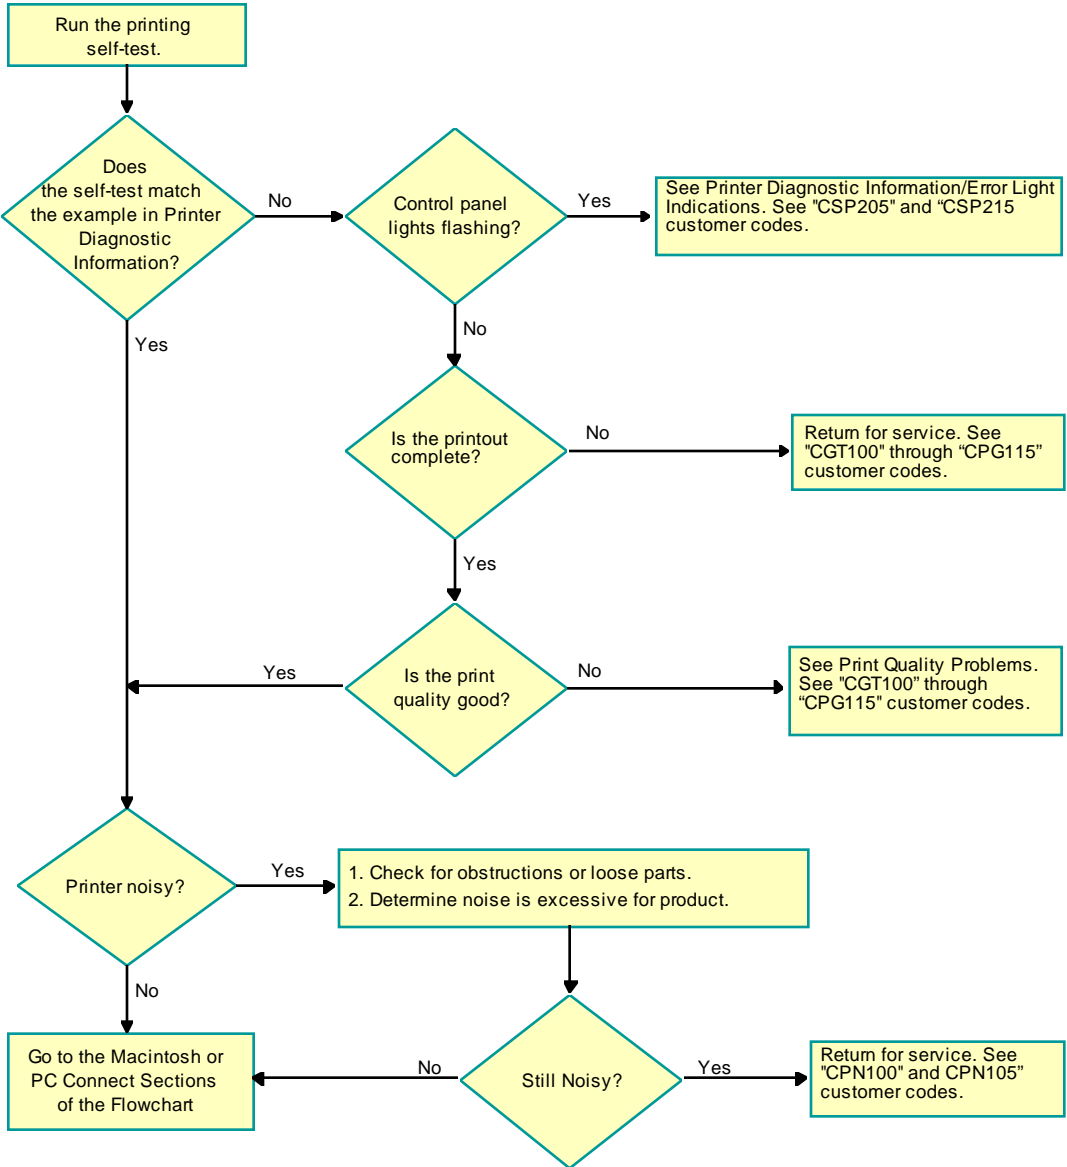


Troubleshooting Flowcharts - PC Connect Section

PC Connect Section

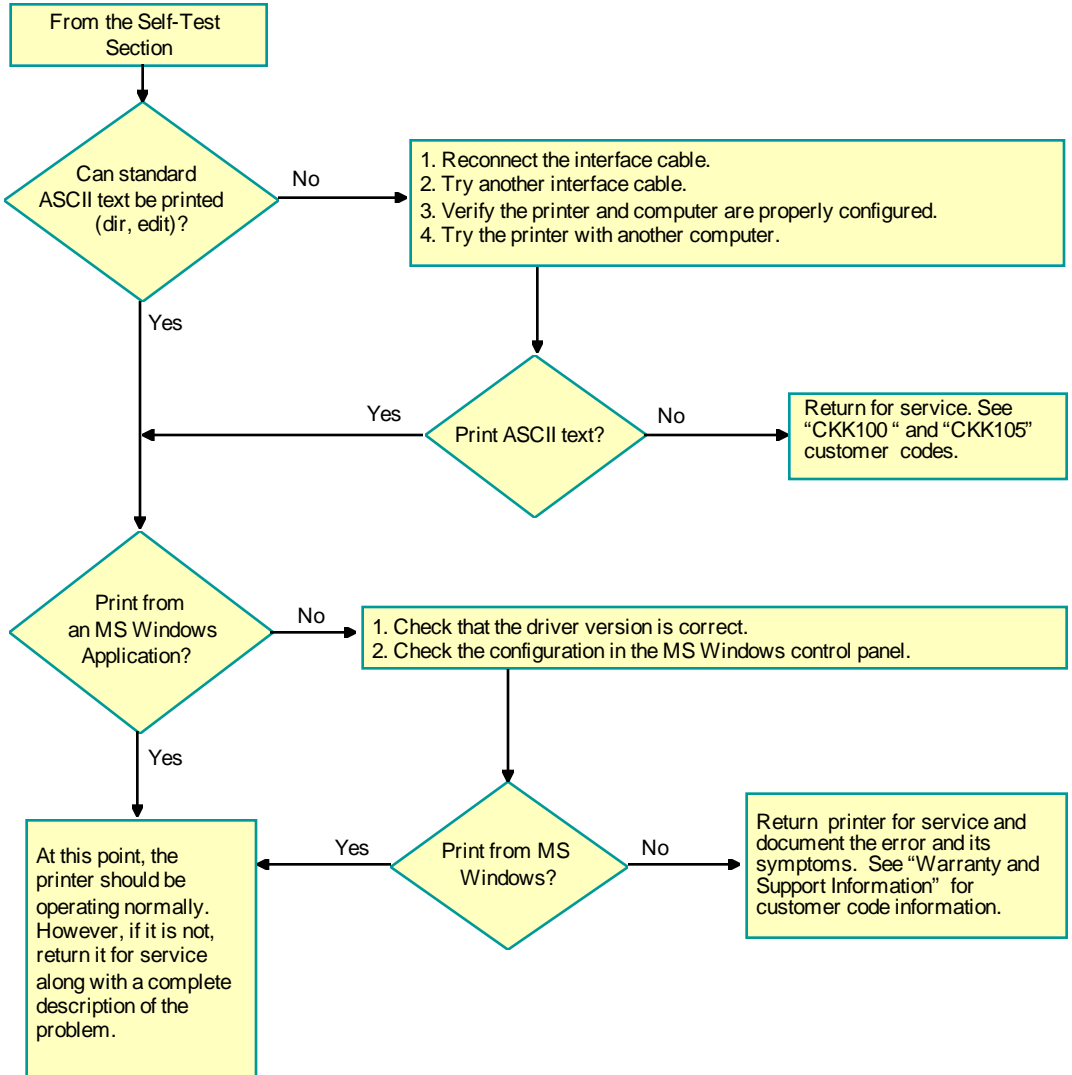

Troubleshooting Flowcharts - Macintosh Connect Section

Macintosh Connect Section

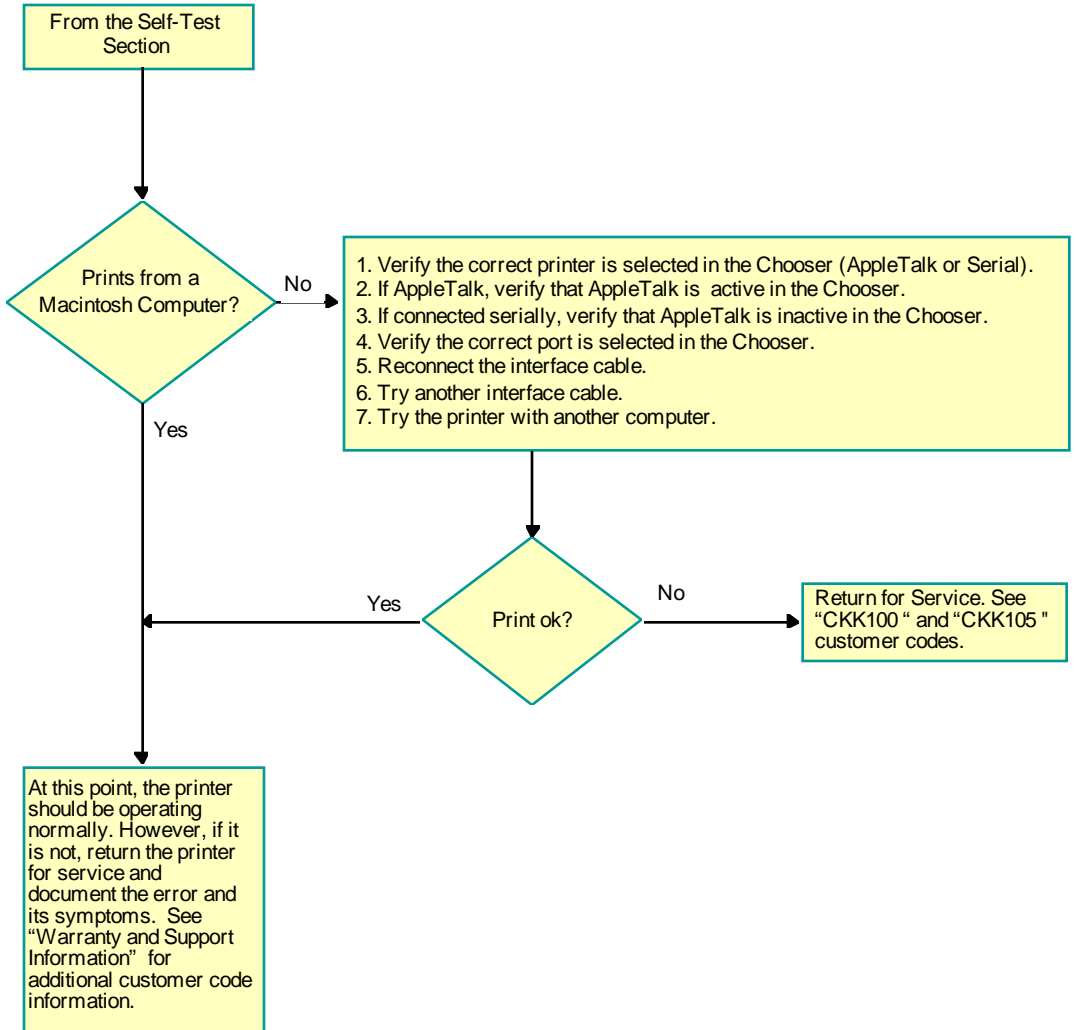

Macintosh Troubleshooting

Note HP periodically provides updates of the printer software. These updates may include enhancements that improve printer performance.

Problems and Solutions

Problem	Solution
Printer won't print	Open the Chooser and verify that the correct printer is selected.
Printer icon does not appear on the left side of the Chooser.	Make sure that the printer is turned on. Make sure that the printer driver icon is in the Extensions Folder.
The printer name does not appear on the right side of the Chooser or the HP DeskWriter family printer is not listed.	Make sure the printer is turned on. Open the Chooser and make sure AppleTalk is active.
Power light is On, the Resume light is Off.	Check that the correct printer is in the Chooser, then close all applications and restart. If this doesn't work it may be necessary to reinstall the printer driver software.

Warranty Information

The warranty for HP DeskJet/DeskWriter printers varies depending upon the product and the date and country of purchase.

For products returned under warranty, Hewlett-Packard may use one of the following options:

- ❶ Repair the product
- ❷ Replace the product with a re-manufactured unit
- ❸ Replace the product with a product of equal or greater functionality
- ❹ Refund the purchase price

Hewlett-Packard Limited Warranty Statement

HP Product	Duration of Limited Warranty (Unless otherwise stated in the printer's documentation)
Software	90 days
Print Cartridges	90 days
Printer	1 Year

Extent of Limited Warranty

1. Hewlett-Packard (HP) warrants to the end user customer that HP products will be free from defects in materials and workmanship, for a specified time after the date of purchase by the customer. The duration of this limited warranty is stated above. Certain additional conditions and limitations of HP's warranty are stated in the user's guide. Those conditions and limitations include:
 - a. For software products, the warranty applies only to the media upon which the product is recorded; and
 - b. HP does not warrant the operation of any product to be uninterrupted or error free.

2. HP's limited warranty covers only those defects which arise as a result of normal use of the product, and do not apply to any:
 - a. Improper or inadequate maintenance;
 - b. Software or interfacing not supplied by HP;
 - c. Unauthorized modification or misuse;
 - d. Operation outside the product's environmental specifications, including duty cycle abuse or use of a mechanical switchbox without a designated surge protector;
 - e. Use of non-supported printing media or memory boards; or
 - f. Improper site preparation or maintenance.
3. For HP printer products, the use of a non-HP print cartridge or a refilled print cartridge does not affect either the warranty to the customer or any HP support contract with the customer; print cartridge includes both toner cartridges and ink cartridges. However, if printer failure or damage is attributable to the use of a non-HP or refilled print cartridge, HP will charge its standard time and materials charges to service the printer for the particular failure or damage.
4. If any software media product or print cartridge product proves defective during the applicable warranty period, and if the product is covered by HP's warranty, the customer shall return the product for replacement.
5. If HP receives, during the applicable warranty period, notice of a defect in a hardware product which is covered by HP's warranty, HP shall either repair or replace the product, at its option. Any replacement product may be either new or like-new, provided that it has functionality at least equal to that of the product being replaced.
6. If HP is unable to repair or replace, as applicable, a defective product which is covered by HP's warranty, HP shall within a reasonable time after being notified of the defect, refund the purchase price for the product, provided the customer returns the product.
7. Your warranty is valid in any country where this product is distributed by Hewlett-Packard. Contracts for additional services such as on-site service are available from any authorized HP service facility in countries where this product is distributed by HP or an authorized importer.
8. This limited Warranty Statement gives the customer specific legal rights. The customer may also have other legal rights which vary from state to state in the United States, from province to province in Canada, and from country to country elsewhere in the world.

Limitations of Warranty

1. NEITHER HP NOR ANY OF ITS THIRD PARTY SUPPLIERS MAKES ANY OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO HP PRODUCTS. HP AND ITS THIRD PARTY SUPPLIERS SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
2. To the extent that this Limited Warranty Statement is inconsistent with the law of the locality where the customer uses the HP product, this Limited Warranty Statement shall be deemed modified to be consistent with such local law. Under such local law, certain limitations of this Limited Warranty Statement may not apply to the customer. For example, some states in the United States, as well as some governments outside the United States (including provinces in Canada), may:
 - a. Preclude the disclaimers and limitations in this Warranty Statement from limiting the statutory rights of a customer (e.g. Australia and the United Kingdom);
 - b. Otherwise restrict the ability of a manufacturer to make such disclaimers or impose such limitations; or
 - c. Grant the customer additional warranty rights, specify the duration of implied warranties which the manufacturer cannot disclaim, or not allow limitations on how long an implied warranty lasts.
3. To the extent allowed by local law, the remedies provided in this Warranty Statement are the customer's sole and exclusive remedies.

Limitations of Liability

1. EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT SHALL HP BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY AND WHETHER ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Obtaining Printer Drivers

Updates to the HP Printer Driver software occur periodically. New versions can be obtained from authorized Hewlett-Packard dealers or any of the sources listed below.

24-hour modem access

HP BBS Library

HP's electronic bulletin board library service is available 7 days a week, 24 hours a day for your convenient access to HP printer drivers and support information.

In the United States (for the following baud rates: 300, 1200, 2400, 4800, 9600, 14400, 28800), call (208) 344-1691.

In the United Kingdom (for baud rates up to , 28800) call, 44 (1344) 361891.

World-wide (for the following baud rates: 300, 1200, 2400, 4800, 9600, 14400, 28800), call 1 (208) 344-1691.

Set modem communications software to: no parity, 8 bits, and 1 stop bit.

CompuServe

Printer drivers and interactive sharing of technical information are available on CompuServe's HP Peripherals forum (GO HPPER).

To subscribe in the United States, call CompuServe, Inc., at (800) 524-3388 and ask for representative #51 (This service is not operated by Hewlett-Packard).

To subscribe in the United Kingdom, call toll-free (0800) 289378 or (614) 529-1349.

To subscribe world-wide, call (614) 529-1349.

America On Line

Go to the HP Forum, click Keyword on the Go To menu. Then type HP and press the Enter key to bring the HP Home Page directly to your screen.

Internet

Printer drivers and product support information can be obtained through the World-Wide Web as follows:

- 1 <http://www.hp.com/home.html>
- 2 <http://www.hp.com/go/cposupport>
- 3 <http://www2.hp.com>

Updated Printer Drivers by Mail

HP's Distribution Centers provide printer drivers and printer driver updates.

Worldwide Fulfillment Information

Driver Distribution	Languages Available	Telephone Orders	Fax Orders	Mail Orders
US and Canada	<ul style="list-style-type: none"> ■ English ■ French ■ Spanish 	970-339-7009 Mon - Sat, 24 Hours per day	970-330-7655	US Driver Fulfillment for Hewlett-Packard PO Box 1754 Greeley, CO 80623
UK (0) is used only when calling within the country	<ul style="list-style-type: none"> ■ English ■ French ■ German ■ Spanish ■ Italian 	-- 44 (0) 1429 865 511 --- 44 (0) 1429 863 343 -- 44 (0) 1429 863 353 -- 44 (0) 1429 520 012 --- 44 (0) 1429 520 013 Mon - Fri, 8:30 am to 6 pm CET, (except Wed 8:30 am to 4 pm CET)	(Within UK) 0 1429 866 000 (Outside UK) 44 1429 866 000	European Fulfillment for Hewlett-Packard c/o Starpack International, Ltd. PO Box 63 Hartlepool Cleveland TS25 2YP United Kingdom
Asia Pacific (Singapore)	All localized languages	65 740 4477 Mon - Fri 8:30 am-5:30 pm Singapore time	65 740 4499 (24 hours a day - 7 days a week)	Fulfillment: Plus Pte Ltd. No. 51, Ubi Ave 3 Singapore 1440
Australia (Sidney)	All localized languages	612 565 6099 Mon - Fri 8:30 am-5:30 pm Australian Eastern Time	612 519 5631 (24 hours a day - 7 days a week)	Fulfillment: Plus Pty Ltd. Private Bag 75 Alexandria NSW Australia 2015



U.S. Service Support Contracts

HP Express Exchange Service

Hewlett-Packard offers an express exchange service to minimize product downtime. With HP Express Exchange Service, a replacement unit is available by 10:30 the next working day.

HP Express Exchange provides next day exchange service (same as HP SupportPack) but the fee is based on a per incident of repair rather than throughout the warranty period. This service does not need to be purchased within 30 days of the printer purchase date.

To order the HP Express Exchange Service, call toll-free at 800-835-4747; ask for ext. 524.

HP SupportPack

The HP SupportPack is an enhancement to the customer's original one-year warranty repair service. The HP SupportPack provides next day express exchange service (see above) for the duration of a three-year warranty period. This service enhancement provides customers with a cost-effective and timely way to achieve quality support. The HP SupportPack (ordered like any other HP product) is sold exclusively through resellers and is not available directly from Hewlett-Packard. Customers must purchase this service enhancement within 30 days of purchasing the printer. The HP SupportPack is not transferable from one piece of equipment. Additional information on HP SupportPack and the prices for the service upgrade are available through HPNN and the In-Touch newsletter.

HP Customer Return Repair Service

If uptime is less critical, the HP Customer Return Repair Service provides maintenance service at the HP Customer Service Center located in Corvallis, Oregon. HP will repair the product within two working days from receipt and return via surface transportation.

To order the HP Customer Return Repair Service for customers with non-critical applications, call toll-free 800-835-4747; ask for ext. 524.






Non-U.S. Service Support Contracts

HP SupportPack

The HP SupportPack enhances the service offering during the warranty period by upgrading warranty repair service to a next day exchange service. This service enhancement provides customers with a cost-effective and timely way to achieve quality support. HP SupportPack is sold exclusively through resellers (ordered like any other HP product) and is not available directly from Hewlett-Packard. Additional information on HP SupportPack and the prices for the service upgrade is available through HPNN.

For other service and support contracts, contact the Hewlett-Packard office or Response Center for that country.





Returning a Printer for Service

In the USA

If a printer requires service, the customer can contact a service authorized reseller. The reseller should verify that the printer is in need of repair and contact the HP Corvallis Service Center. Sales authorized resellers should call (800) 544-9976 to arrange for repair. Service authorized resellers should call (503) 750-2035.

Customers can contact Hewlett-Packard directly by calling HP Customer Support Center at (208) 323-2551. They will verify that the printer is in need of repair and transfer the customer to the HP-Corvallis Repair Center. If packaging materials are needed, call the HP Resellers Response Line at (800) 544-9976.

Printer Return Instructions

If the printer needs to be shipped, be sure it is packed in a protective carton. Hewlett-Packard recommends that the original shipping container be saved for this purpose. In-transit damage is not covered by the warranty. It is suggested that shipments are always insured.

When either a customer or reseller calls HP to arrange for service, the HP Corvallis Service Center will dispatch a premium carrier to pick up the product at the reseller or customer location. The printer will be delivered to HP, at HP's expense, using second day delivery. The customer or reseller must still package the printer for shipment.

Once the printer is repaired, HP will ship it to the customer or reseller location using second day delivery.

You can help assure effective servicing of your customer's printer by following these guidelines:

Procedure:

1. Follow the troubleshooting instructions in this manual to make certain the malfunction is in the printer and not the result of an interface error or a malfunction in the computer or software. If possible, identify the defective area or function.
2. If you determine that repair is required, please provide the following with the printer when returning the printer for service:
 - a. Printout a copy of the "HP Printer Repair Sheet." (For information regarding printouts, see the note at the top of the HP Printer Repair Sheet.)
 - b. Determine the appropriate customer code from the Printer Repair Feedback Information section which follows.
 - c. Fill out the repair sheet. Include specific information, such as the configuration at the time of the malfunction, the type of interface cable, a description of the computer or host, and a description of the software application in use.
 - d. If purchased through a Hewlett-Packard reseller, include a copy of the sales slip or other proof of purchase to establish the warranty coverage period.

In the UK, France, Germany, Switzerland, Austria, Belgium, Norway, Sweden, Denmark, Finland, and the Netherlands

If a printer fails during the warranty period, the customer should do the following:

1. Follow the troubleshooting procedures in this document or consult the HP FIRST facsimile assistance services.
2. If the customer is still unable to determine the cause of the failure, the customer should contact their local reseller or the European Customer Support Center.

Customer support representatives can answer your questions regarding the setup, configuration, installation, and operation of the printer. They can also troubleshoot and diagnose printer problems and, if necessary, can give instructions for getting the printer serviced and repaired.

If available for your country and language, phone numbers for HP FIRST and the European Customer Support Center are given in a separate document shipped with the printer. If additional information is needed, customers can call the reseller or the nearest HP Sales and Support Office.

If a printer fails after the warranty period:

1. Follow the troubleshooting procedures in this document or the printer user's guide.
2. If the customer is unable to determine the cause of the failure, the customer should contact their local reseller or the nearest HP Sales and Support Office for instructions on returning your printer for service and repair.

Elsewhere in the World

If a printer fails during or after the warranty period:

1. Follow the troubleshooting procedures in this document or the printer user's guide.
2. If the customer is unable to determine the cause of the failure, the customer should contact their local reseller or the nearest HP Sales and Support Office for instructions on returning your printer for service and repair.

Notes

- Operating accessories (such as, optional plug-in cartridges, print cartridges, and software) should not be included with the printer unless the problem relates to an accessory.
- In the U.S., the power module should not be included with the printer unless instructed otherwise.
- Outside of the U.S., the power module should be included when returning the printer for repair.

Service and Support Resources

HP Support Assistant (CD-ROM)

HP Support Assistant is an on-line tool providing technical information on a variety of Hewlett-Packard computers and peripheral products. This information is contained on a CD-ROM which is updated quarterly and mailed to you as part of the subscription. This system runs on any PC under MS Windows.

Obtaining HP Support Assistant CD-ROM

Country	Telephone Number	Fax Number	Mailing Address
U.S., Canada	1 (800) 457-1762 (24 Hours) (7 Days)	(317) 364-8888	Hewlett-Packard Company PO Box 4700 Crawfordsville, IN 47933 USA
Latin America	01 (317) 364-8882 (24 Hours) (7 Days)	(317) 364-8888	Hewlett-Packard Company PO Box 4700 Crawfordsville, IN 47933 USA
UK	1 (800) 457-1762 (24 Hours) (7 Days)	0-800-960-273	Hewlett-Packard Company PO Box 501 7300 AM Apeldoorn The Netherlands
Europe	31 (55) 384279 (9:00 - 6:00) (Monday - Friday)	31 (55) 434455	Hewlett-Packard Company PO Box 501 7300 AM Apeldoorn The Netherlands
Asia Pacific	65 740-4629 65 740-4477 (8:30 - 5:30) (Monday - Friday)	65 740-4617 65 740-4477	Hewlett-Packard Company Circuit Road PO Box 0131 Singapore 9137 Singapore

Hewlett-Packard News Network (HPNN)

HPNN is an electronic bulletin board service available only to HP authorized resellers. This service provides the following information:

- ❶ Presales Information
- ❷ Printer Drivers
- ❸ HP SupportPack Information
- ❹ Software Notes
- ❺ Postsales Information

For more information, call 1 (408) 553-7303.

HP Distribution Center

The HP Distribution Center has current printer drivers for Hewlett-Packard products. Call 1 (303) 339-7009 except Sundays.

HP Customer Information Center

The HP Customer Information Center provides presales product information. This service is available for resellers and end-user customers. Call 1 (800) 752-0900, Monday - Friday, 6:00 AM - 5:00 PM Pacific Time.

HP Reseller Response Line

The HP Reseller Response Line provides pre-sales and post-sales technical support for HP authorized resellers. Call 1 (800) 544-9976, Monday - Friday, 8:00 AM - 4:00 PM Pacific Time.

Ordering Supplies

Ordering Supplies

Country	Telephone Number
Austria	(1) 25000 536
Australia/New Zealand	(03) 895-2895
Belgium/Luxembourg	02-778 34 00
Canada (Except Toronto)	1 (800) 387-3154
Canada (Toronto)	(416) 671-8383
Community of Independent Sales	(095) 181 8002
Czech Republic	(2) 47 17 230
Denmark	4599 1000
Europe (East Central Headquarters)	(1) 25 000 0
Finland	(90) 887 21
France	Minitel 3616 HPMICRO, Rubrique 2: "Points de Vente" agréés
Germany	0180-53262-22
Greece	30-1-689 64 11
Hungary	(1) 142 09 86
Iceland	(1) 67 10 00
Israel	00972 3 53 80 380
Italy	02/9212 4378
Japan	(03) 331-6111
Latin America	(525) 326-40-00
Lebanon	009611 89 31 13
Norway	22 73 56 00
Poland	(22) 37 50 65
Portugal	(01) 301 7343
Slovenia	(61) 159 33 22
South Africa	002711 806 10 00
Spain	900 123 123
Sweden	(0) 8 750 2000
Switzerland	01 / 735 71 11
The Netherlands	020 - 547 6666
Tunisia	002161 28 01 44
Turkey	(0) 212 224 59 25
United Arabian Emirates	009714 37 75 91
United Kingdom	01344 369 369
U.S.	1 (800) 538-8787

HP BBS Library

The HP electronic bulletin board library service contains drivers and support information which can be downloaded to your PC via modem.

HP BBS Library

Country	Number	Baud Rate
Austria	+ 43 (222) 251658	2400 to 28000 or ISDN
Belgium	+ 32 (2) 778-3819	1200 to 28800
Denmark	+ 45 (45) 991905	300 to 28800
Finland	(9600) 7280	2400 to 28800
France	3616 HP MICRO	1200 to 28800 (Service Minitel)
Germany	*HP#	Datex J-BTX System
Italy	+ 39 (2) 9210-4244	Up to 28800
Netherlands	+ 31 (20) 647-5433	2400 to 28800
Norway	+ 47 (2) 273-5697	2400 to 28800
Sweden	+ 46 (8) 750-6262	2400 to 28800
Switzerland	+ 41 (64) 560200	Up to 28800 or ISDN
United Kingdom	+ 44 (1344) 361891	Up to 28800
United States	+ 1 (208) 344-1691	300 to 28800
Worldwide	Int Code + 1 (208) 344-1691	300 to 28800

Set your modem for no parity, 8 data bits, and 1 stop bit (N, 8, 1).

HP FAXback on Demand - HP FIRST

You can use this service to select documents, such as product descriptions and technical information, which are then faxed to you. To access this service, use the handset on your fax machine and dial the appropriate number from the table in this section.

Use the following steps to use HP FIRST:

1. Call the system. You will need to use a touch-tone telephone or the phone set of your fax machine. A voice prompt will welcome you and guide you to the information you need. You will also need to give the phone number of the fax machine where you wish to receive the documents you select.
2. We suggest you initially request the index which lists all available documents.
3. Once you receive the HP FIRST index, choose the documents you need.
4. Call HP FIRST again. A voice prompt will ask you for the index number of the documents you have selected and would like to have faxed to you.
5. Selected documents will be sent immediately to the fax number you have specified.

Note

To obtain documents in English from outside the UK, dial your international access code and then (31) 20 681 5792 (international toll rates applicable).

HP FIRST Telephone Numbers

Country (Language)	Telephone Number
Austria (German)	0660-8128
Australia (English)	61-3-272 26 27
Denmark (Danish)	800-10453
Belgium (French)	0800 1 7043
Belgium (Dutch)	0800 1 1906
Europe (English)	(31) 20 681 5792
Finland (Finnish)	9800-13134
France (French)	05-905900
Germany (German)	0130-810061
Hong Kong (English)	506 24 22
Italy (Italian)	1678-59020
Korea (Korean)	82-2-769 05 43
Netherlands (Dutch)	06-0222420
Norway (Norwegian)	800-11319
Singapore (English)	65-291 79 51
Spain (Spanish)	900-993123
Sweden (Swedish)	020-795743
Switzerland (French)	155-1526
Switzerland (German)	155-1527
UK	0800 96 02 71
US	1 (800) 333-1917
Worldwide	Int Code + 1 (208) 344-4809

HP Forum on CompuServe

The HP Systems Forum on CompuServe is an on-line service accessible via modem. This service provides information about Hewlett-Packard products, and allows you to communicate with other Hewlett-Packard users.

You can join CompuServe at no charge by calling a telephone number in the table below. CompuServe will send you a free introductory membership immediately, including information on how to access CompuServe. From the CompuServe prompt, type:

GO HP <Enter>

CompuServe Telephone Numbers by Country Table

Country	Local Call/ Free-Phone Number	Direct Number
Argentina		54 (1) 345-3871
Australia	(008) 025240	61 (2) 410-4260
Canada	1 (800) 848-8199	1 (614) 529-1349
Chile		56 (2) 696-8807
France	36,638,122	33 (1) 4714-2160
Germany	(0130) 3732	49 (89) 6655-0111
Hong Kong		852 867-0118
Hungary		36 (1) 156-5366
Israel		972 (3) 290466
Japan	(0120) 221200	81 (3) 5471-5806
New Zealand	(0800) 446113	61 (2) 410-4260
Portugal		33 (1) 4714-2160
South Africa		27 (12) 841-2530
South Korea	(080) 022-7400	82 (2) 411-1327
Spain		33 (1) 4714-2160
Taiwan		866 (2) 651-6899
UK	(0800) 289378	44 (1272) 760680
U.S.	1 (800) 848-8199	1 (614) 529-1349
Venezuela		58 (2) 793-2984
Worldwide		Int Code + 1 (614) 529-1349

Hewlett-Packard Telephone Support

Technical Phone Support for Customers

The HP Customer Support Center provides free live technical assistance for peripherals during the hardware warranty of the product. If the product is still under warranty, the customer should call (208) 323-2551. If the product is out of warranty, the customer has two options.

- The customer can call 1 (900) 555-1500 at \$2.50 per minute.
- The customer can call 1 (800) 999-1148 at \$25.00 per call using VISA or MasterCard.

(The above prices are subject to change without notice)

To ensure the call is dealt with quickly, have the following information ready:

- The product model number and serial number.
- The operating system version and the configuration.
- A description of the software installed and the accessories used.

HP North American Customer Support Center

Assistance from the Hewlett-Packard North American Customer Support Center is available Monday to Friday, 7:00 AM to 6:00 PM Mountain time, except Wednesday when the hours are 7:00 AM to 4:00 PM.

- 1 (303) 635-1000

HP European Customer Support Center

Assistance from the Hewlett-Packard European Customer Support Center is available in English, Monday to Friday, 8:30 AM to 6:00 PM Central European time, except Wednesday when the hours are 8:30 AM to 4:00 PM.

📞 Int Code + 31 (20) 682-8291

HP provides free telephone support during the warranty period. After the warranty has expired, support is available through the same telephone number for a fee. The fee is charged on a per incident basis. When calling HP, please have the following information ready:

- 📞 Product name and serial number
- 📞 Date of purchase
- 📞 Description of problem

Warranty and Out-of-Warranty Support Telephone Numbers

Country (Language)	Telephone Number
Austria (German)	0660-6386
Belgium (Dutch)	02 626 8806
Belgium (French)	02 626 8807
Denmark (Danish)	3929 4099
Finland (Finnish)	0203 47288
France (French)	50 43 9853 (will change to 04 50 43 9853 on Oct. 18, 1996)
Ireland	01 622 5525
Germany (German)	0180 5 25 81 43
Italy (Italian)	02 26410350
Netherlands (Dutch)	020 606 8751
Norway (Norwegian)	22 11 6299
Portugal	01 441 7199
Spain (Spanish)	902-321 123
Sweden (Swedish)	08 619 2170
Switzerland (French)	0848 80 11 11
Switzerland (German)	0848 80 11 11
UK	0171 512 5202
English language support for other European countries	+44 171 512 5202

Contacting Hewlett-Packard

To contact Hewlett-Packard, check your local telephone directory for the HP Sales and Service Office near you. If you cannot find an HP office, contact one of the major HP Sales and Service Offices or one of the following Worldwide Marketing Headquarters.

- Asia
Far East Sales Region Headquarters
Hewlett-Packard Asia Ltd.
22/F Peregrine Tower
Lippo Centre
89 Queensway, Central
Hong Kong
- Canada
Hewlett-Packard Ltd.
6877 Goreway Drive
Mississauga
Ontario L4V 1M8, Canada
- Europe
European Operations Headquarters
Hewlett-Packard S.A.
150, route du Nant-d'Avril
PO Box 1217
Meyrin 2/Geneva, Switzerland
- Latin America
Hewlett-Packard Latin Am. Headquarters
Monte Pelvoux 111
Lomas de Chapultepec
11000 Mexico D.F.
- Middle East/Africa
Middle East/Central Africa Sales Headquarters
Hewlett-Packard S.A.
Rue de Veyrot 39
CH-1217 Meyrin 1/Geneva, Switzerland
- U.S.
Intercon Operations Headquarters
Hewlett-Packard Company
3495 Deer Creek Road
PO Box 10495
Palo Alto, CA 94303-0896, USA

Worldwide Customer Support Numbers

Worldwide Customer Support Centers are listed in alphabetical order by country.

Customer Support Centers provide technical information via telephone directly with online agents who are trained to assist with set-up, configuration, start-up and troubleshooting of HP products.

Customer Support Center assistance can be obtained by calling one of the following country-specific telephone numbers:

Customer Support Center Telephone Numbers

Country	Telephone Number
Africa/Middle East	41 22/780 71 11
Argentina	541781-4061/69
Australia	03 9272 8000
Austria	43 (0)660 6386
Belgium	32 (0)2 6268806 (Dutch) 32 (0)2 6268806 (French)
Brazil	55 11 709-1444
Canada	(208) 323-2551
China	86 10 5053888, Ext. 8800
Czech Republic	42 (2) 471 7321
Denmark	45 (0)39 294099
Finland	358 (0)203 47288
France	33 450439853
Germany	49 (0) 180 5258 143
Greece	30 1 689 64 11
Hungary	36 (1) 252 4505
Ireland	39 (0)2 264 10350
Italy	353 (0) 1662 5525
Japan	81 3 3335-8333
Korea	02 3270 0700

[Continued on next page](#)

Customer Support Center Telephone Numbers (Cont.)

Country	Telephone Number
Mexico D.F.	326 46 00
Mexico Guadalajara	669 95 00
Mexico Monterey	378 42 40
Middle East/Africa	41 22/780 71 11
Netherlands	31 (0)20 606 8751
New Zealand	09 356 6640
Norway	47 (0)22 116299
Poland	48 22 37 50 65
Portugal	351 (0) 144 17 199
Russia	7095 923 50 01
Spain	(65) 272 5300
Sweden	46 (9) 02321 123
Switzerland	41 (0)84 8801111
Taiwan	(02) 717-9609
Turkey	90 1 224 59 25
United Kingdom	44 (0) 171 512 5202
United States	(208) 344-4131
Venezuela	58 2 239 5664

