



Hardware and Software Guide

HP Compaq Tablet PC Series

Document Part Number: 367426-002

September 2005

This guide explains how to identify and use tablet PC hardware features, including connectors for external devices, and provides settings and procedures for managing tablet PC power and security. It also includes power and environmental specifications, which may be helpful when traveling with the tablet PC, as well as instructions for obtaining system information and using setup utilities to help detect, solve, and prevent problems.

© 2005 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Hardware and Software Guide
HP Compaq Tablet PC Series
Second Edition September 2005
First Edition March 2005
Document Part Number: 367426-002

Contents

1 Component ID

Top Components	1-1
Lights	1-1
Pointing Devices	1-3
Buttons	1-4
Keys	1-5
Pen-Activated Buttons	1-6
Display Components	1-7
Front Components	1-9
Rear Components	1-10
Right-Side Components	1-11
Left-Side Components	1-12
Bottom Components	1-14
Wireless Antennae	1-16
Magnets	1-17
Pen Components	1-18
Additional Hardware Components	1-19

2 Power

Power Control and Light Locations	2-1
Power Sources	2-3
Standby and Hibernation	2-4
Standby	2-4
Hibernation	2-5
Initiating Standby, Hibernation or Shutdown	2-6

Default Power Settings	2–8
Turning the Tablet PC or Display On or Off	2–8
Initiating or Restoring from Hibernation	2–9
Initiating or Resuming from Standby	2–10
Using Emergency Shutdown Procedures	2–11
Power Options	2–12
Accessing the Power Options Window	2–12
Displaying the Power Meter Icon	2–13
Setting or Changing a Power Scheme	2–13
Using a Security Password	2–14
Processor Performance Controls (Select Models Only)	2–15
Battery Packs	2–17
Identifying Battery Packs	2–18
Inserting or Removing a Primary Battery Pack	2–19
Charging Battery Packs	2–21
Managing Low-Battery Conditions	2–24
Calibrating a Battery Pack	2–26
Conserving Battery Power	2–30
Storing a Battery Pack	2–32
Disposing of a Used Battery Pack	2–33

3 Pointing Devices and Keyboard

Pointing Devices	3–1
Using the TouchPad	3–3
Using the Pointing Stick	3–3
Setting Mouse Properties	3–4
Hotkeys	3–5
Hotkey Quick Reference	3–6
Using Hotkey Commands	3–7
Using Hotkeys with External Keyboards	3–10
Quick Launch Buttons	3–11
Identifying Quick Launch Buttons	3–11
Quick Launch Buttons Software	3–12

Keypads	3–21
Using the Embedded Numeric Keypad	3–21
Using an External Numeric Keypad	3–23

4 Pen and Command Controls

Pen	4–1
Entering Information with the Pen	4–2
Calibrating the Pen	4–4
Setting Pen Preferences	4–5
Changing the Pen Tip	4–6
Command Controls	4–7
Identifying Command Controls	4–7
Command Controls Quick Reference	4–9
Using Command Controls	4–10
Setting Command Control Preferences	4–12
On-Screen Keyboard	4–15

5 Multimedia

Audio Features	5–1
Using the Audio-In (Microphone) Jack	5–3
Using the Audio-Out (Headphone) Jack	5–3
Adjusting the Volume	5–4
Video Features	5–5
Using the S-Video-Out Jack	5–6
Connecting a Monitor, Projector or Television	5–7
Multimedia Software	5–8
Observing the Copyright Warning	5–10
Installing Software	5–10
Enabling AutoPlay	5–11
Changing DVD Region Settings	5–11

6 Drives

Drive Care	6-1
IDE Drive Light	6-3
Primary Hard Drive	6-4
External Drives	6-8
Optional External Devices	6-9
Optional External MultiBay and External MultiBay II	6-9

7 PC Cards

What Is a PC Card?	7-1
Insertion	7-2
Removal	7-3

8 Digital Memory Cards

What Is a Digital Memory Card?	8-1
Insertion	8-2
Removal	8-3

9 Memory Modules

What Is a Memory Module?	9-1
Expansion Memory Module Slot	9-2
Primary Memory Module Slot	9-6
Hibernation File	9-16

10 USB Devices

What Is USB?	10-1
USB Device Connection	10-2
Operating System and Software	10-3
USB Legacy Support	10-3

11 Modem and Networking

Internal Modem	11-1
Modem Cable	11-1
Modem Country Selection	11-4
Preinstalled Communication Software	11-7
Network	11-8

12 Q Menu Software

Q Menu	12-1
Identifying Q Menu Controls	12-1
Displaying and Closing the Q Menu.	12-2
Selecting an Item from the Q Menu	12-2
Obtaining Information About	
System-Defined Items.	12-3
Setting Q Menu Preferences	12-3
Using a System-Defined Item.	12-9
Tablet PC Button Driver	12-15

13 Wireless (Select Models Only)

Wireless Local Area Network Device	
(Select Models Only)	13-3
Connecting Your Wireless Tablet PC to a	
Corporate WLAN	13-4
Connecting Your Wireless Tablet PC to a	
Public WLAN	13-4
Setting Up a WLAN in Your Home	13-5
Using a WLAN Connection	13-6
Using Wireless Security Features.	13-7
Installing Wireless Software (Optional)	13-8
Troubleshooting Devices	13-9
Bluetooth Wireless Device (Select Models Only)	13-10
Device Power States.	13-12
Turning On the Devices	13-14
Turning Off and Disabling the Devices	13-15

Infrared Communications	13–16
Setting Up an Infrared Transmission	13–17
Using Standby with Infrared.	13–17
Mobile Printing (Select Models Only).	13–18

14 Security

Security Features	14–1
Security Preferences in Computer Setup	14–4
Passwords.	14–4
HP and Windows Passwords	14–5
HP and Windows Password Guidelines	14–6
HP Administrator Passwords	14–8
Setting HP Administrator Passwords	14–9
Entering HP Administrator Passwords	14–10
Power-On Passwords	14–10
Setting Power-On Passwords	14–11
Entering Power-On Passwords	14–12
Requiring a Power-On Password at Restart	14–12
DriveLock	14–13
Setting DriveLock Passwords.	14–14
Entering DriveLock Passwords	14–15
Requiring a Drivelock Password at Restart	14–15
Changing DriveLock Passwords.	14–16
Removing DriveLock Protection	14–17
Device Security	14–18
System Information	14–19
Setting System Information Options	14–20
Antivirus Software	14–21
Firewall Software.	14–22
Critical Security Updates for Windows XP.	14–24

HP ProtectTools Security Manager (Select Models Only)	14–25
Embedded Security for ProtectTools	14–25
Credential Manager for ProtectTools	14–26
BIOS Configuration for ProtectTools	14–27
Smart Card Security for ProtectTools	14–28
Optional Security Cable	14–29

15 Computer Setup

Computer Setup Access	15–2
Computer Setup Defaults	15–3
File Menu	15–4
Security Menu	15–5
Tools Menu	15–6
Advanced Menu	15–7

16 Software Update and Recoveries

Software Updates	16–1
Obtaining the Support Software Disc	16–2
Accessing Tablet PC Information	16–2
Internet Software	16–3
Downloading System ROM	16–3
Downloading Software	16–5
System Recovery	16–6
Safeguarding Your Data	16–6
Altiris Local Recovery	16–7
Setting System Restore Points	16–8
Repairing or Reinstalling Applications	16–9
Reinstalling Applications from Your Hard Drive	16–9
Repairing the Operating System	16–10
Reinstalling the Operating System	16–11
Reinstalling Device Drivers and Other Software	16–12

Multilingual User Interface (MUI)	16–13
Enabling and Switching MUI Languages.	16–13
Restoring the MUI Capabilities After Reinstalling the Operating System	16–14
Updating Bluetooth Software Through the Flash Upgrade Utility.	16–15

17 Tablet PC Care

Temperature	17–2
Cleaning	17–2
Keyboard.	17–3
Display	17–3
TouchPad	17–4
External Mouse.	17–4

18 Travel and Shipping

Preparation for Travel and Shipping	18–1
Tips for Traveling with Your Tablet PC	18–2

A Specifications

Operating Environment	A–1
Rated Input Power	A–2

B MultiBoot

Default Boot Sequence.	B–1
Bootable Devices in Computer Setup	B–3
MultiBoot Results	B–4
MultiBoot Preferences	B–5
Setting a New Default Boot Sequence	B–5
Setting a MultiBoot Express Prompt	B–6
Entering MultiBoot Express Preferences	B–7

C Client Management

Configuration and Deployment	C-2
Software Management and Updates	C-3
HP Client Manager Software	C-3
Altiris PC Transplant Pro	C-5
System Software Manager	C-5

Index

Component ID

Top Components

Lights



Component	Description
❶ Volume mute light	On: System sound is turned off.
❷ Caps lock light	On: Caps lock is on.
❸ IDE (Integrated Drive Electronics) drive light	On: A drive in the hard drive bay is being accessed.

(Continued)

Component	Description
<p>④ Battery light</p>	<p>Amber: A battery pack is charging. Green: A battery pack is close to full charge capacity. Blinking amber: A battery pack that is the only available power source has reached a low-battery condition. When the battery reaches a critical low-battery condition, the battery light begins blinking more quickly. Off: If the tablet PC is connected to an external power source, the light is turned off when all batteries in the tablet PC are fully charged. If the tablet PC is not connected to an external power source, the light is turned off until the battery reaches a low-battery condition, when the light begins blinking amber.</p>
<p>⑤ power light</p>	<p>Green: The tablet PC is on. Blinking green: The tablet PC is in standby mode.</p>
<p>⑥ Wireless light*</p>	<p>On: One or more optional internal wireless devices, such as a WLAN device and/or Bluetooth® device, are turned on.</p>
<p>⑦ Num lock light</p>	<p>On: Num lock is on or the embedded numeric keypad is enabled.</p>
<p>*For information about establishing a wireless link, refer to Chapter 13, “Wireless (Select Models Only).”</p>	


Pointing Devices



Component	Description
① Pointing stick	Moves the pointer.
② Left pointing stick button	Functions like the left button on an external mouse.
③ TouchPad*	Moves the pointer. Can be set to perform other mouse functions, such as scrolling, selecting, and double-clicking.
④ Left TouchPad button*	Functions like the left button on an external mouse.
⑤ Right TouchPad button*	Functions like the right button on an external mouse.
⑥ TouchPad scroll zone*	Scrolls upward or downward.
⑦ Right pointing stick button	Functions like the right button on an external mouse.


*This table describes default settings. For information about changing the functions of TouchPad features, refer to the [“Setting Mouse Properties”](#) section in [Chapter 3, “Pointing Devices and Keyboard.”](#)

Buttons

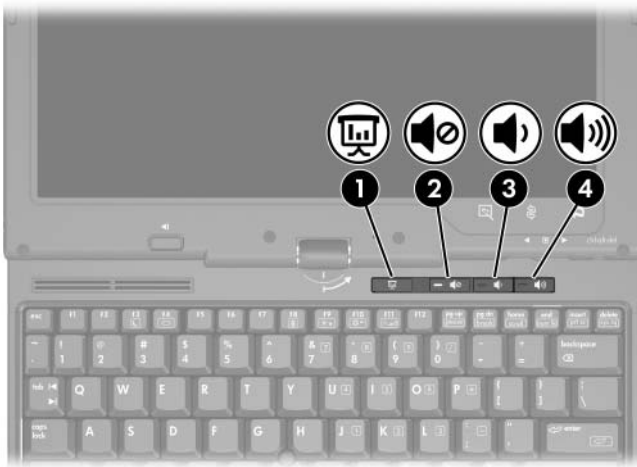


Component	Description
❶ Presentation mode button	Turns on Presentation mode.
❷ Volume mute button	Mutes or restores volume.
❸ Volume down button	Decreases tablet PC sound.
❹ Volume up button	Increases tablet PC sound.

Keys

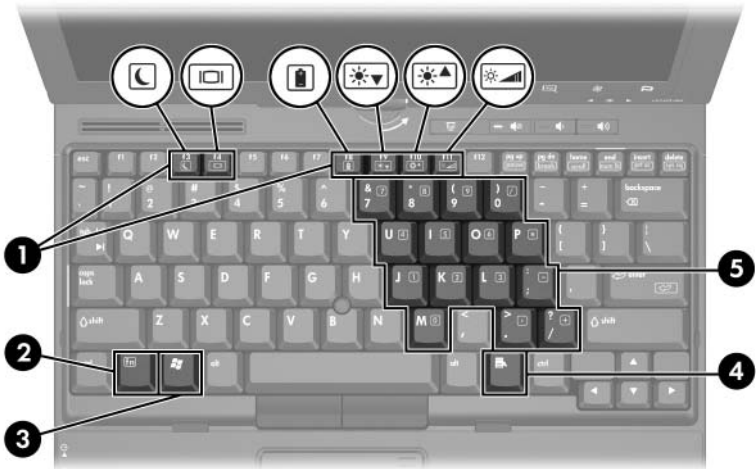

Component	Description
❶ Function keys (6)	Perform system and application tasks. When combined with the fn key, the function keys f3 , f4 , and f8 through f11 perform additional tasks as hotkeys.
❷ fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
❸ Windows logo key	Displays the Microsoft® Windows® Start menu.
❹ Windows applications key	Displays a shortcut menu for items beneath the pointer.
❺ Keypad keys (15)	Can be used like the keys on an external numeric keypad.


Pen-Activated Buttons

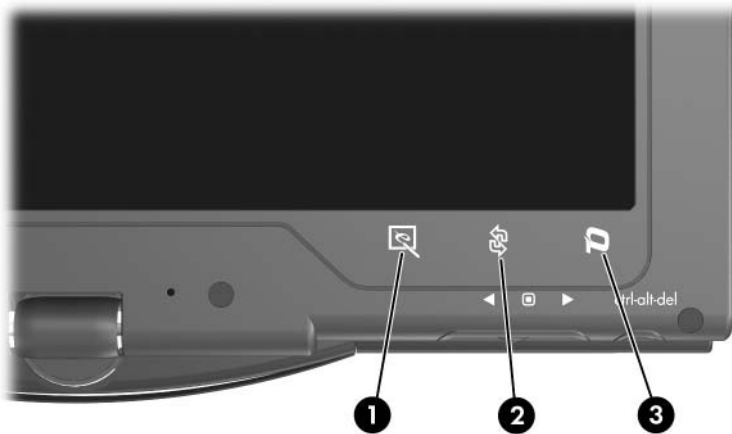

Component	Description
❶ Tablet PC Input Panel Launch button*	When Windows is running, opens the Microsoft Tablet PC Input Panel application, which includes a handwriting pad and an on-screen keyboard.
❷ Rotate button*	Switches the image between landscape and portrait orientation.
❸ Q button*	When Windows is running, opens or closes the Q Menu.

*This table describes default settings. For information about changing the functions of the Tablet PC Input Panel Launch button, Rotate button, and Q button, refer to [Chapter 4, "Pen and Command Controls."](#)

Display Components

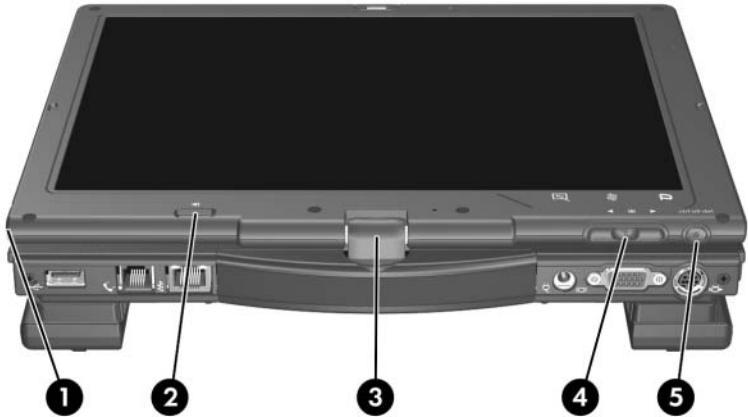

Component	Description
① Pen holder	Secures the pen to the tablet PC.
② Pen eject button	Ejects the pen from the pen holder.
③ Rotating hinge	Swivels the display and converts the tablet PC from notebook mode into a tablet PC mode.


(Continued)

Component	Description
④ Jog dial*	Functions like enter and the up and down arrow keys on a standard keyboard. <ul style="list-style-type: none"><li data-bbox="540 331 966 358">■ Press inward to enter a command.<li data-bbox="540 370 966 397">■ Rotate upward to scroll upward.<li data-bbox="540 409 966 461">■ Rotate downward to scroll downward.
⑤ Windows Security button*	When pressed while: <ul style="list-style-type: none"><li data-bbox="540 516 966 574">■ Windows is open, enters the ctrl+alt+delete command.[†]<li data-bbox="540 586 966 641">■ The Setup utility is open, enters the reset command.

*This table describes default settings. For information about changing the functions of the Windows security button and jog dial, refer to [Chapter 4, “Pen and Command Controls.”](#)

[†]To protect your work and the system, the ctrl+alt+delete command cannot be entered using the **ctrl**, **alt**, and **del** keys on the on-screen keyboard.

Front Components

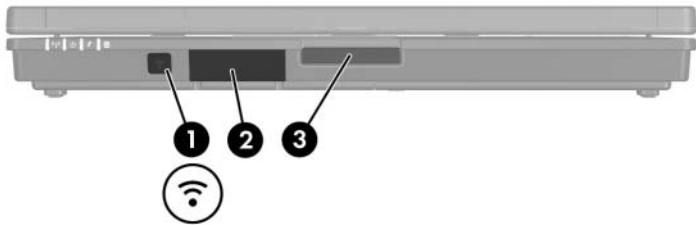


Component	Description
① Infrared port	Provides wireless communication between the tablet PC and an optional IrDA-compliant device.
② Bluetooth module (select models only)	<p>Sends and receives Bluetooth device signals.</p> <p>⚠ Exposure to Radio Frequency Radiation. The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact during normal operation is minimized. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antennae should be not less than 20 cm (8 inches) during normal operation, including when the tablet PC display is closed.</p>
③ Display release button	Opens the tablet PC.

Rear Components




Component	Description
① USB port	Connects USB 1.1- and 2.0-compliant devices to the tablet PC using a standard USB cable.
② RJ-11 (modem) jack	Connects a modem cable.
③ RJ-45 (network) jack	Connects a network cable.
④ Power connector	Connects an AC adapter, an optional adapter, or an optional power cable.
⑤ External monitor port	Connects an optional VGA external monitor or projector.
⑥ S-Video-out jack	<p>Is a 7-pin, dual-purpose jack. It connects an optional S-Video device, such as a television, VCR, camcorder, overhead projector, or video capture card, with an optional, standard (4-pin) S-Video cable.</p> <p>The extra 3 pins also enable an optional S-Video-to-composite adapter to be used with the tablet PC.</p>

Right-Side Components

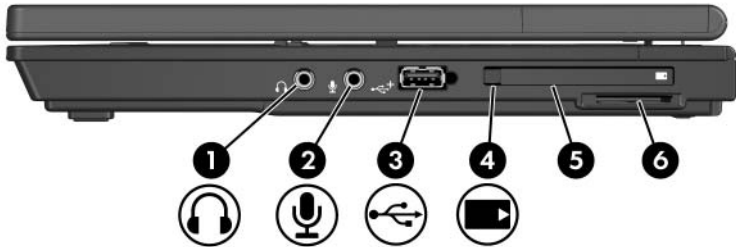


Component	Description
❶ Audio-out (headphone) jack	Connects optional headphones or powered stereo speakers. Also connects the audio function of an audio/video device, such as a television or VCR.
❷ Audio-in (microphone) jack	Connects an optional monaural (single sound channel) or stereo (dual sound channel) microphone.
❸ USB port	Connects USB 1.1- and 2.0-compliant devices to the tablet PC using a standard USB cable, or connects an optional external MultiBay or external MultiBay II to the tablet PC. This USB port is a powered port that can be used without external power.
❹ PC Card eject button	Ejects PC Cards from the PC Card slot.
❺ PC Card slot	Supports optional Type I, Type II, 32-bit (CardBus), or 16-bit PC Cards.
❻ Digital Media Slot	Accepts SD (Secure Digital) Memory Cards or MultiMediaCards.

Left-Side Components

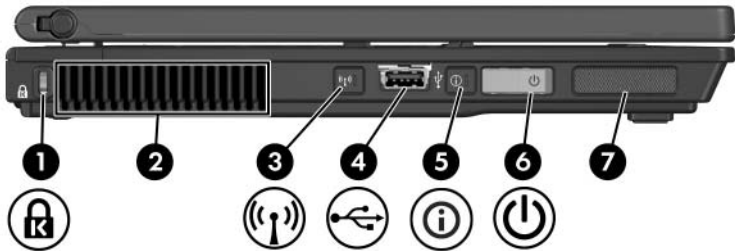


Component	Description
1 Security cable slot	Attaches an optional security cable to the tablet PC. △ Security solutions are designed to act as deterrents. These deterrents may not prevent a product from being mishandled or stolen.
2 Vent	Enables airflow to cool internal components. △ To prevent overheating, do not obstruct vents. Using the tablet PC on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.

(Continued)

Component	Description
<p>③ Wireless button (select models only)*</p>	<p>Turns the wireless functionality of the WLAN or Bluetooth device on or off, but does not establish a connection.</p> <p> To establish a wireless connection, a wireless network must already be set up. For information about establishing a wireless connection, refer to Chapter 13, “Wireless (Select Models Only).”</p>
<p>④ USB port</p>	<p>Connects a USB 1.1- or 2.0-compliant device to the tablet PC using a standard USB cable.</p>
<p>⑤ Info Center button</p>	<p>Enables you to view a list of commonly used software solutions.</p>
<p>⑥ Power switch*</p>	<p>When the tablet PC is</p> <ul style="list-style-type: none"> ■ Off, slide toward the front of the tablet PC and release to turn on the tablet PC. ■ In standby, slide toward the front of the tablet PC and release to exit standby. ■ In hibernation, slide toward the front of the tablet PC and release to exit hibernation. <p>If the tablet PC has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, slide toward the front of the tablet PC and hold for 4 seconds to turn off the tablet PC.</p>
<p>⑦ Speaker</p>	<p>Produces tablet PC sound.</p>

*This table describes default settings. For information about changing the functions of the power features, refer to the [“Power Options”](#) section in [Chapter 2, “Power.”](#) For information about changing the functions of the wireless features, refer to [Chapter 13, “Wireless \(Select Models Only\).”](#)

Bottom Components

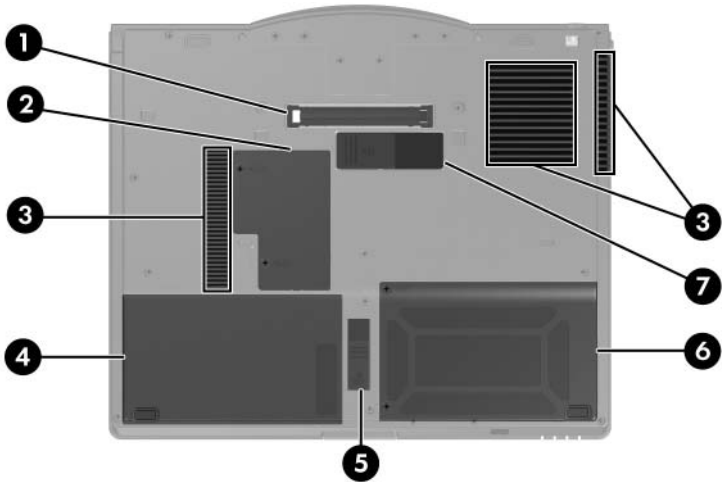


Component	Description
1 Docking connector	Connects the tablet PC to an optional docking device.
2 Expansion memory module compartment	Contains one expansion memory module slot.
3 Vents (3)	Enable airflow to cool internal components.
	<p>△ To prevent overheating, do not obstruct vents. Using the tablet PC on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.</p>

(Continued)

Component	Description
④ Primary battery bay	Holds the primary battery pack.
⑤ Primary battery release latch	Releases the primary battery pack from the battery bay.
⑥ Hard drive bay	Holds the primary hard drive.
⑦ Travel battery connector	Connects an optional travel battery.

Wireless Antennae




Component	Description
Antennae (2) (select models only)*	<p data-bbox="490 639 955 667">Send and receive wireless device signals.</p> <p data-bbox="490 691 955 1105">  Exposure to Radio Frequency Radiation. The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact during normal operation is minimized. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antennae should be not less than 20 cm (8 inches) during normal operation, including when the tablet PC display is closed. </p>
<p data-bbox="157 1127 955 1203">*The antennae are not visible from the outside of the tablet PC. For optimal transmission, keep the areas immediately around the antennae free from obstructions.</p>	

Magnets




Component	Description
Magnets (3)	<p>Top left: Engages the display latch.</p> <p>Top right: Switches the panel orientation from landscape to portrait mode.</p> <p>Bottom: Initiates standby if the display is closed while the tablet PC is turned on.</p> <p>△ Keep diskettes and other magnetic media away from magnetic fields, which can erase your data.</p>

Pen Components

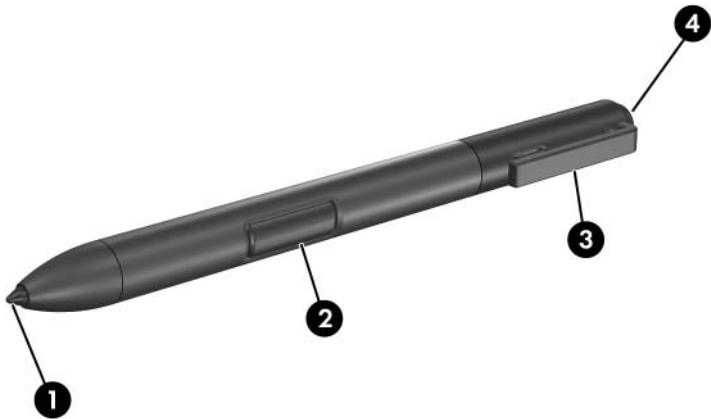

Component	Description
① Pen tip	Interacts with the tablet PC whenever the tip is touching the screen or within 1.27 cm (0.5 inch) of the screen. When tapped on or held over a pen-activated button, activates the button.
② Pen button	Functions like the right button on an external mouse.
③ Pen tether eyelet	Used with the tether eyelet on the tablet PC, enables you to tether the pen to the tablet PC.
④ Pen eraser	Enables you to erase handwriting on the tablet PC.

Additional Hardware Components

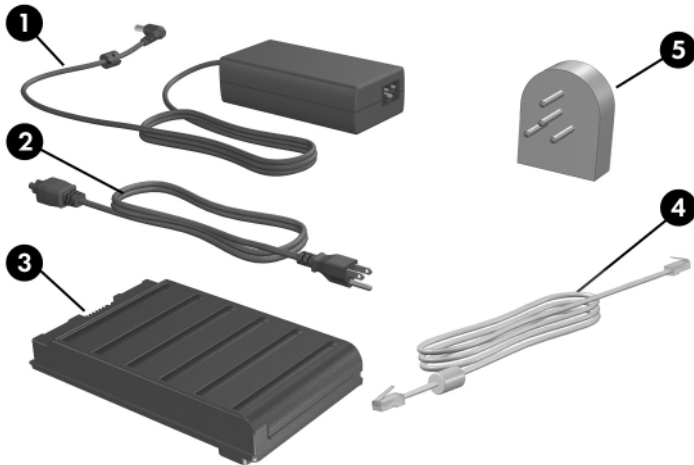


Component	Description
❶ AC adapter	Converts AC power to DC power.
❷ Power cord*	Connects an AC adapter to an AC outlet.
❸ Battery pack*	Powers the tablet PC when the tablet PC is not connected to external power.
❹ Modem cable*	Connects the RJ-11 (modem) jack to an RJ-11 telephone jack or to a country-specific modem adapter.
❺ Country-specific modem adapter (included by region as required)*	Adapts the modem cable to a non-RJ-11 telephone jack.

*Power cords, modem cables, and modem adapters vary in appearance by region and country. Battery packs vary by model.

2

Power

Power Control and Light Locations

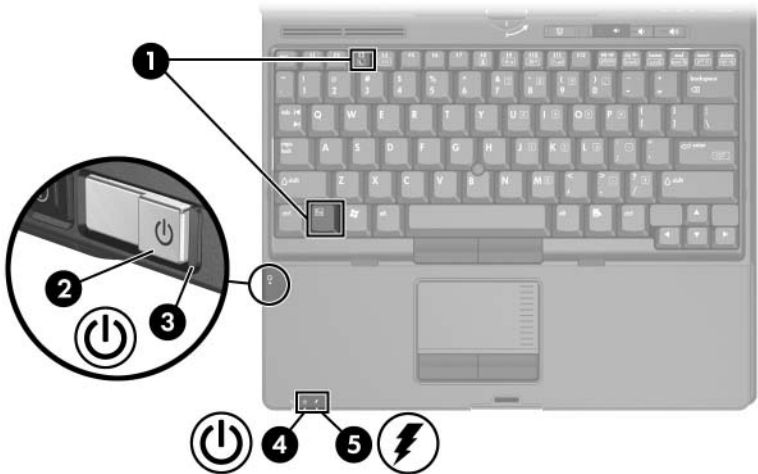


Component	Description
❶ fn+f3	Initiates standby.

(Continued)

Component	Description
② Power switch	<p>When the tablet PC is</p> <ul style="list-style-type: none">■ Off, slide toward the front of the tablet PC and release to turn on the tablet PC.■ In standby, slide toward the front of the tablet PC and release to exit standby.■ In hibernation, slide toward the front of the tablet PC and release to exit hibernation. <p>If the tablet PC has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, slide toward the front of the tablet PC and hold for 4 seconds to turn off the tablet PC.</p>
③ power light	<p>Green: The tablet PC is on. Blinking green: The tablet PC is in standby mode.</p>
④ power light	<p>Green: The tablet PC is on. Blinking green: The tablet PC is in standby mode.</p>
⑤ Battery light	<p>Amber: A battery pack is charging. Green: A battery pack is close to full charge capacity. Blinking amber: A battery pack that is the only available power source has reached a low-battery condition. When the battery reaches a critical low-battery condition, the battery light begins blinking more quickly. Off: If the tablet PC is connected to an external power source, the light is turned off when all batteries in the tablet PC are fully charged. If the tablet PC is not connected to an external power source, the light is turned off until the battery reaches a low-battery condition, when the light begins blinking amber.</p>

Power Sources

The tablet PC can run on internal or external AC power. The following table indicates the best power sources for common tasks.

Task	Recommended Power Source
Work in most software applications	<ul style="list-style-type: none"> ■ Charged battery pack in the tablet PC ■ External power supplied through one of the following devices: <ul style="list-style-type: none"> <input type="checkbox"/> AC adapter <input type="checkbox"/> Optional AC adapter <input type="checkbox"/> Optional docking device <input type="checkbox"/> Optional automobile or aircraft adapter
Charge or calibrate a battery pack in the tablet PC	<p>External power supplied through</p> <ul style="list-style-type: none"> ■ AC adapter ■ Optional AC adapter ■ Optional docking device ■ Optional automobile or aircraft adapter <p> To prevent damage to the tablet PC and aircraft systems, do not charge the battery pack while you are using a Combo Adapter on an aircraft.</p>
Install or modify system software or write to a CD	<p>External power supplied through</p> <ul style="list-style-type: none"> ■ AC adapter ■ Optional docking device

Standby and Hibernation

Standby and hibernation are energy-saving features that conserve power and reduce startup time. They can be initiated by you or by the system. Refer to the [“Initiating Standby, Hibernation or Shutdown”](#) section in this chapter for details about when to use each setting.

Standby



CAUTION: To avoid a complete battery discharge, do not leave your tablet PC in standby for extended periods. Connect the tablet PC to an external power source.

Standby reduces power to system components that are not in use. When standby is initiated, your work is saved in random access memory (RAM) and the screen is cleared. When you resume from standby, your work returns to the screen where you left off.

- Saving your work before initiating standby is not usually necessary but is a recommended precaution.
- When the tablet PC is in standby, the power lights flash.

Hibernation

Hibernation saves your work to a hibernation file on the hard drive, and then shuts down the tablet PC. When you restore from hibernation, your work returns to the screen where you left off. If a power-on password has been set, the password must be entered to restore from hibernation.

You can disable hibernation. However, if hibernation is disabled, and the system reaches a low-battery condition, the system will not automatically save your work while power is on or when standby has been initiated.

In the **Power Options** window, hibernation is not displayed as an option if it has been disabled. You must enable hibernation in order to select it in the **Power Options** window. To verify that hibernation is enabled, select **Start > Control Panel > Performance and Maintenance > Power Options > Hibernate** tab. Make sure that the **Enable hibernation** check box is selected.



CAUTION: If the configuration of the tablet PC is changed during hibernation, resuming from hibernation may not be possible. When the tablet PC is in hibernation:

- Do not dock or undock the tablet PC in a docking device.
 - Do not add or remove memory modules.
 - Do not insert or remove any hard drives.
 - Do not connect or disconnect external devices.
 - Do not insert or remove a PC Card or a Secure Digital (SD) Memory Card.
-

Initiating Standby, Hibernation or Shutdown

The following sections explain when to initiate standby or hibernation and when to shut down your tablet PC.

When You Leave Your Work

Initiating standby clears the screen and uses less power than leaving the tablet PC on. Your work returns instantly to the screen when you resume from standby.

Initiating hibernation clears the screen, saves your work to the hard drive, and uses much less power than standby.

Shutting down the tablet PC and removing the battery pack is recommended to extend the life of the battery pack when the tablet PC will be disconnected from external power for an extended period. For details on battery pack storage, refer to the [“Storing a Battery Pack”](#) section in this chapter.

When the Power Supply Is Uncertain

Make sure that hibernation remains enabled, especially if you are operating the tablet PC on battery power and do not have access to an external power supply. If the battery pack gets extremely low, hibernation saves your work to a hibernation file and shuts down the tablet PC.

HP recommends that if you pause your work when the power supply is uncertain, you do one of the following:

- Initiate hibernation.
- Shut down the tablet PC.
- Save your work, and then initiate standby.

When Using Infrared Communication or Drive Media



CAUTION: Do not initiate standby or hibernation while using drive media. Doing so may result in possible video and audio degradation and loss of audio or video playback functionality.

Standby and hibernation interfere with the use of infrared and Bluetooth communication, and drive media. Note the following guidelines:

- If the tablet PC is in standby or hibernation, you cannot initiate an infrared or Bluetooth transmission.
- If standby or hibernation is accidentally initiated while a drive medium (such as a diskette, CD, or DVD) is in use:
 - Your playback may be interrupted.
 - You may see a warning message: “Putting the computer into hibernation or standby may stop the playback. Do you want to continue?” Select **No**.
 - You may need to restart the playback to resume audio and video.

Default Power Settings


The following tables describe the factory power settings on the tablet PC. You can change many of these settings according to your preference. For more information on changing power settings, refer to the [“Power Options”](#) section in this chapter.

Turning the Tablet PC or Display On or Off

Task	Procedure	Result
Turn on the tablet PC.	Slide the power switch toward the front of the tablet PC.	<ul style="list-style-type: none"> ■ The power lights are turned on. ■ The operating system loads.
Turn off the tablet PC.*	<p>Save your work and close all open applications. Then</p> <ul style="list-style-type: none"> ■ Slide the power switch toward the front of the tablet PC and follow the on-screen directions (if displayed) for shutting down the tablet PC. ■ Shut down the tablet PC through the operating system. Select Start > Turn Off Computer > Turn Off. 	<ul style="list-style-type: none"> ■ The power lights are turned off. ■ The operating system shuts down. ■ The tablet PC is turned off.
Turn off the display while the power is on.	Close the tablet PC.	Closing the tablet PC activates the display switch, which turns off the display. This conserves battery power.

*If the system is unresponsive and you are unable to shut down the tablet PC with these procedures, refer to the [“Using Emergency Shutdown Procedures”](#) section in this chapter.

Initiating or Restoring from Hibernation

Task	Procedure	Result
Initiate hibernation.	<ul style="list-style-type: none"> ■ Select Start > Turn Off Computer > Hibernate > OK. (If the Hibernate option is not displayed, press and hold the shift key.) ■ If hibernation has been configured, slide the power switch toward the front of the tablet PC. 	<ul style="list-style-type: none"> ■ The power/standby lights are turned off. ■ The screen clears.
Allow the system to initiate hibernation (with hibernation enabled).	<p>No action required.</p> <ul style="list-style-type: none"> ■ If the tablet PC is running on battery power, the system initiates hibernation after 30 minutes of tablet PC inactivity or when the battery pack(s) reach a critical low-battery condition. ■ If the tablet PC is connected to external power, the system does not initiate hibernation. ■ Power settings and timeouts can be changed in the Power Options window. 	<ul style="list-style-type: none"> ■ The power/standby lights are turned off. ■ The screen clears.
Restoring from user-initiated or system-initiated hibernation.	<p>Slide the power switch toward the front of the tablet PC.</p> <p> If the system initiated hibernation because of a critical low-battery condition, connect external power or insert a charged battery pack before you slide the power switch.</p>	<ul style="list-style-type: none"> ■ The power/standby lights are turned on. ■ Your work returns to the screen.

Initiating or Resuming from Standby

Task	Procedure	Result
Initiate standby.	<ul style="list-style-type: none"> ■ Slide the power switch toward the front of the tablet PC. ■ With the tablet PC on, press fn+f3. ■ Select Start > Turn Off Computer > Standby > OK. (If the standby option is not displayed, press the shift key.) 	<ul style="list-style-type: none"> ■ The power lights blink. ■ The screen clears.
Allow the system to initiate standby.	<ul style="list-style-type: none"> ■ No action required. ■ If the tablet PC is running on battery power, the system initiates standby after 10 minutes of tablet PC inactivity. (Default setting) ■ If the tablet PC is attached to external power, the system does not initiate standby. ■ Power settings and timeouts can be changed in the Power Options window. 	<ul style="list-style-type: none"> ■ The power lights blink. ■ The screen clears.
Resume from user-initiated or system-initiated standby.	Slide the power switch toward the front of the tablet PC.	<ul style="list-style-type: none"> ■ The power lights are turned off. ■ Your work returns to the screen.

Using Emergency Shutdown Procedures



CAUTION: Emergency shutdown procedures result in the loss of unsaved data.

If the tablet PC is unresponsive and you are unable to use normal Windows shutdown procedures, try the following emergency procedures, in the sequence provided:

- Press **ctrl+alt+delete**. Select **Shut Down**.
- Slide and hold the power switch toward the front of the tablet PC for at least 4 seconds.
- Disconnect the tablet PC from external power and remove the battery pack. For more information about removing and storing the battery pack, refer to the “[Storing a Battery Pack](#)” section in this chapter.

Power Options

Many default power settings can be changed in the **Power Options** window. For example, you can set an audio alert to warn you when the battery pack reaches a low-power condition, or you can change the default settings for the power switch.

By default, when the tablet PC is on:

- Pressing the fn+f3 hotkey, called the “sleep button” in the operating system, initiates standby.
- The display switch turns off the display. The display switch is activated by closing the display.

Accessing the Power Options Window

To access the Power Options window:

- » Right-click the Power Meter icon on the notification area (at the far right of the taskbar), and then select **Adjust Power Properties**.
- or –
- » Select **Start > Control Panel > Performance and Maintenance > Power Options**.

Displaying the Power Meter Icon

The Power Meter icon is on your notification area by default. The icon changes shape to indicate whether the tablet PC is running on a battery pack or external power. Right-click the icon and select **Adjust Power Properties** to display the **Power Options** window.

To hide or show the Power Meter icon on the notification area:

1. Access the **Power Options** window.
2. Select the **Advanced** tab.
3. Select or clear the **Always show icon** on the taskbar check box.
4. Select **Apply**.
5. Select **OK**.



If you cannot see an icon you have placed on the taskbar, the icon may be hidden. Select the arrow or vertical bar on the taskbar and expand it to view hidden icons.

Setting or Changing a Power Scheme

The Power Schemes tab in the **Power Options** window allows you to set the amount of time that the tablet PC will allow to pass before entering standby or hibernation. You can assign different schemes depending on whether the tablet PC is running on a battery pack or external power.

You can also set a power scheme that initiates standby or turns off the display or hard drive after a time interval that you specify.

To set a power scheme:

1. Access the **Power Options** window, and then select the **Power Schemes** tab.
2. Select the power scheme you want to modify, and accept or adjust the default options in the lists on the screen.
3. Select **Apply**.

Using a Security Password

You can add a security feature that prompts you for a password when the tablet PC is turned on, resumes from standby, or restores from hibernation.

To set a password prompt:

1. Access the **Power Options** window, and then select the **Advanced** tab.
2. Select the check box for **Prompt for password when the computer resumes from standby**, and select **Apply**.

For more information about using security passwords, refer to [Chapter 14, “Security.”](#)

Processor Performance Controls (Select Models Only)

On select tablet PC models, Windows XP supports software that enables you to control processor performance. The central processing unit (CPU) speed can be set for optimal performance or for optimal power conservation.

For example, the software can be set to trigger an automatic change in processor speed when the power source changes from external power to battery pack power, or when the tablet PC use changes between active and idle.

Processor performance controls are managed in the **Power Options** window.

To access Windows XP processor performance controls:

- » Select **Start > Control Panel > Performance and Maintenance > Power Options > Power Schemes** tab.

The power scheme you select determines how the processor performs when the tablet PC is connected to external power or is running on battery power. Each power scheme for external power or battery power sets a specific processor state.

Different states may be used, depending on whether the tablet PC is running on external or battery power. After a power scheme has been set, no other intervention is required to control the performance of your tablet PC processor. The following table describes the processor performance on external and battery power for the available power schemes.

Power Scheme	Processor Performance While on External Power	Processor Performance While on Battery Power
Home/Office Desk	Always runs at the highest performance state.	Performance state is determined based on CPU demand.
Portable/Laptop	Performance state is determined based on CPU demand.	Performance state is determined based on CPU demand.
Presentation	Performance state is determined based on CPU demand.	Runs at the lowest possible performance state.
Always On	Always runs at the highest performance state.	Always runs at the highest performance state.
Minimal Power Management	Performance state is determined based on CPU demand.	Performance state is determined based on CPU demand.
Max Battery	Performance state is determined based on CPU demand.	Runs at the lowest possible performance state.

Battery Packs

When the tablet PC is connected to external AC power, the tablet PC runs on AC power. When a charged battery pack is in the tablet PC and the tablet PC is not connected to external power, the tablet PC runs on battery power.

The tablet PC switches between AC power and battery power according to the availability of an external AC power source. For example, if the tablet PC contains a charged battery pack and is running on external AC power supplied through the AC adapter, the tablet PC switches to battery power if the AC adapter is disconnected from the tablet PC.

You can leave a battery pack in the tablet PC or in storage, depending on how you work. Keeping a battery pack in the tablet PC enables the battery pack to charge whenever the tablet PC is connected to external AC power and also protects your work in case of a power outage.

However, battery packs in the tablet PC slowly discharge when the tablet PC is turned off. For this reason, the primary battery pack is not shipped inside the tablet PC and must be inserted before the tablet PC can run on battery power.

Identifying Battery Packs

This tablet PC supports up to 2 battery packs:

- The primary battery pack is a 6-cell lithium-ion battery pack that can be used only in the battery bay. One primary battery pack is included with the tablet PC.
- The travel battery pack is an optional 8-cell lithium-ion battery pack that can only be attached to the bottom of the tablet PC.

If the tablet PC will be idle for 2 weeks or more, remove the battery pack and store it as described in the “[Storing a Battery Pack](#)” section in this chapter to prolong battery pack life. For more information about leaving your work, refer to the “[Initiating Standby, Hibernation or Shutdown](#)” section in this chapter.



Only compatible AC adapters and battery packs should be used with the tablet PC. For additional information, visit the HP Web site at <http://www.hp.com> or contact a service partner.


Inserting or Removing a Primary Battery Pack



CAUTION: To prevent loss of work when removing a battery pack that is the sole power source, initiate hibernation or turn off the tablet PC before removing the battery pack.


To insert a primary battery pack:

1. Turn the tablet PC upside down.
2. Slide the battery pack ❶ into the battery bay until it is seated.
3. Press the battery pack ❷ into the battery bay until the battery pack clicks into place.

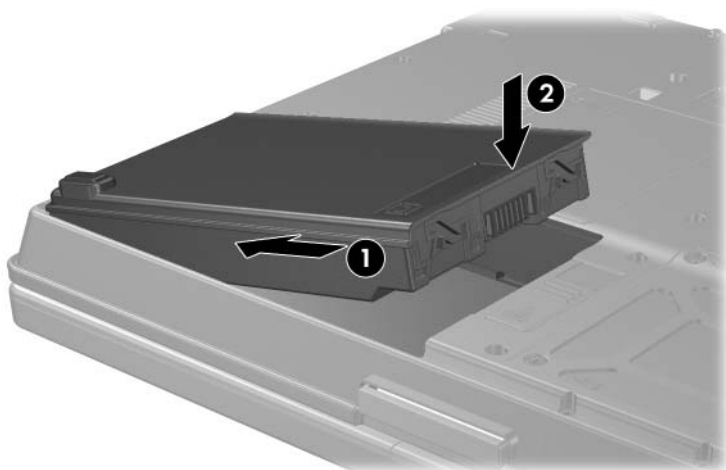

To remove a primary battery pack:

1. Turn the tablet PC upside down with the front of the tablet PC toward you.
2. Press the battery release latch **1** toward the rear of the tablet PC.
3. Lift and slide the battery pack **2** out of the tablet PC.

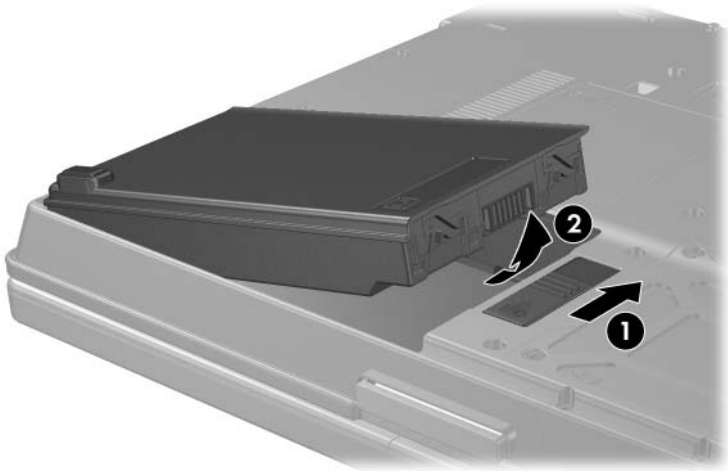


Charging Battery Packs

Multiple battery packs in the system charge and discharge in a preset sequence:

- Charge sequence:
 1. Primary battery in the tablet PC battery bay
 2. Travel battery (optional battery pack)
- Discharge sequence:
 1. Travel battery (optional battery pack)
 2. Primary battery in the tablet PC battery bay

While a battery pack is charging, the battery light on the tablet PC is on. The light is turned off when all battery packs are fully charged.

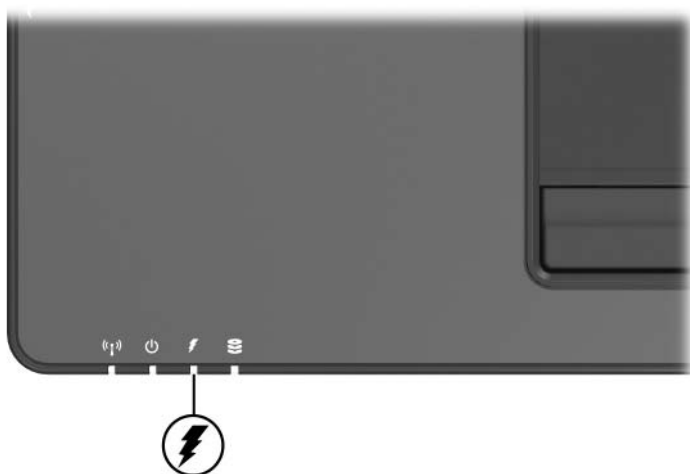

Battery packs can also be charged in the optional HP Universal Charger.

Charging a New Battery Pack

Fully charge the battery pack while the tablet PC is connected to external power through the AC adapter.

A new battery pack that has been partially but not fully charged can run the tablet PC, but the battery light may be inaccurate.

The primary battery pack charges when it is inserted into the tablet PC and the tablet PC is connected to external power.

Charging an In-Use Battery Pack

To prolong battery life and increase the accuracy of battery light:

- Allow a battery pack to discharge to 10 percent of a full charge through normal use before charging it.
- When you charge a battery pack, charge it fully.

Monitoring the Charge of a Battery Pack

This section explains several ways you can determine the amount of charge in your battery pack.

Obtaining Accurate Charge Information

To increase the accuracy of all battery charge displays:

- Allow a battery pack to discharge to about 10 percent of a full charge through normal use before charging it.
- When you charge a battery pack, charge it fully.
- If a battery pack has not been used for one month or more, calibrate the battery pack instead of simply charging it. For calibration instructions, refer to the [“Calibrating a Battery Pack”](#) section in this chapter.

Displaying Charge Information on the Screen

This section explains how to access and interpret battery charge displays.

Viewing Charge Displays

To view information about the status of any battery pack in the tablet PC:

- Double-click the **Power Meter** icon on the notification area.
- or –
- Select **Start > Control Panel > Performance and Maintenance > Power Options > Power Meter** tab.

Interpreting Charge Displays

Most charge displays report battery status as both a percentage and as the number of minutes of charge remaining.

- The percentage indicates the amount of charge remaining in the battery pack.
- The time indicates the approximate running time remaining on the battery pack *if the battery pack continues to provide power at the current level*. For example, the time remaining will decrease when you start playing a DVD and will increase when you stop playing a DVD.

Most charge displays identify battery packs by location:

- Location 1 is the battery pack in the primary battery bay.
- Location 2 is the optional travel battery pack.

On some displays, a lightning bolt icon may be displayed on the charge display beside a battery pack location. The icon indicates that the battery pack in that location is charging.

Managing Low-Battery Conditions

Some low-battery condition alerts and system responses can be changed in the **Power Options** window of the operating system. The information in this section describes the alerts and system responses set at the factory. Preferences set in the **Power Options** window do not affect lights.

Identifying Low-Battery Conditions

This section explains how to identify low- and critical low-battery conditions.

Low-Battery Condition

When a battery pack that is the only power source for the tablet PC reaches a low-battery condition, the battery light blinks.

Critical Low-Battery Condition

If a low-battery condition is not resolved, the tablet PC enters a critical low-battery condition.

In a critical low-battery condition:

- If hibernation is enabled and the tablet PC is on or in standby, the tablet PC initiates hibernation.
- If hibernation is disabled and the tablet PC is on or in standby, the tablet PC remains briefly in standby, and then shuts down and loses your unsaved work.

To verify that hibernation is enabled:

- » Select **Start > Control Panel > Performance and Maintenance > Power Options > Hibernate** tab. Make sure that the **Enable hibernation** check box is selected.

Resolving Low-Battery Conditions



CAUTION: If the tablet PC has reached a critical low-battery condition and has initiated hibernation, do not restore power until the power lights are turned off.

When External Power Is Available

To resolve a low-battery condition when external power is available, connect to external power.

When a Charged Battery Pack Is Available

To resolve a low-battery condition when a charged battery pack is available, turn off the tablet PC or initiate hibernation, insert a charged battery pack, and then turn on the tablet PC.

When No Power Source Is Available

To resolve a low-battery condition when no power source is available, initiate hibernation, or save your work and shut down the tablet PC.

When the Tablet PC Cannot Restore from Hibernation

To resolve a low-battery condition when the tablet PC lacks the power to exit hibernation:

1. Insert a charged battery pack or connect external power.
2. Exit hibernation by sliding the power switch toward the front of the tablet PC.

Calibrating a Battery Pack

This section describes when and how to calibrate a battery pack.

When to Calibrate

Even if a battery pack is heavily used, it should not be necessary to calibrate it more than once a month. It is not necessary to calibrate a new battery pack before first use. Calibrate the battery pack under the following conditions:

- When battery charge displays seem inaccurate.
- When you observe a significant decrease in battery run time.
- When the battery pack has been unused for one month or more.

How to Calibrate

To calibrate a battery pack, you must fully charge, fully discharge, and then fully recharge the battery pack.

Charging the Battery Pack

A battery pack can charge whether the tablet PC is off or in use, but it will charge faster when the tablet PC is off.

To charge the battery pack:

1. Insert the battery pack into the tablet PC.
2. Connect the tablet PC to an AC outlet or an optional HP 90W Auto Adapter. (The battery light on the tablet PC is turned on.)
3. Leave the tablet PC connected to external power until the battery pack is fully charged. (The battery light on the tablet PC is turned off.)

Discharging the Battery Pack

Before you begin a full discharge, disable hibernation.

To disable hibernation:

1. Select **Start > Control Panel > Performance and Maintenance > Power Options > Hibernate** tab.
2. Clear the **Enable hibernation** check box.
3. Select **Apply**.

The tablet PC must remain on while the battery pack is being discharged. The battery pack can discharge whether or not you are using the tablet PC, but will discharge faster while the tablet PC is in use.

- If you plan to leave the tablet PC unattended during the discharge, save your work before beginning the discharge procedure.
- If you use the tablet PC occasionally during the discharge procedure and have set energy-saving timeouts, expect the following performance from your system during the discharge process:
 - ❑ The monitor will turn off after 1 minute.
 - ❑ The hard drive will turn off after 3 minutes.
 - ❑ System-initiated standby will occur after 2 minutes.

To fully discharge a battery pack:

1. Right-click the **Power Meter** icon on the notification area and select **Adjust Power Properties**.
– or –
Access the Power Schemes tab by selecting **Start > Control Panel > Performance and Maintenance > Power Options > Power Schemes** tab.
2. Make a note of the 4 settings in the Plugged In column and the 4 settings in the Running on Batteries column so that you can reset them after the calibration.
3. Use the drop-down lists to set the 8 options (4 in each column) to **Never**.
4. Select **OK**.
5. Disconnect the tablet PC from the external power source, but do *not* turn off the tablet PC.
6. Run the tablet PC on battery power until the battery pack is fully discharged. The battery light begins to blink when the battery pack has discharged to a low-battery condition. When the battery pack is fully discharged, the battery light is turned off and the tablet PC shuts down.

Recharging the Battery Pack

To recharge the battery pack:

1. Connect the tablet PC to external power and maintain the connection until the battery pack is fully recharged. The battery light on the tablet PC is turned off.

You can use the tablet PC while the battery pack is recharging but the battery pack will charge faster if the tablet PC is off.

2. If the tablet PC is off, turn it on when the battery pack is fully charged and the battery light is turned off.
3. Access the Power Schemes tab by selecting **Start > Control Panel > Performance and Maintenance > Power Options > Power Schemes** tab.
4. Refer to the settings you recorded earlier. Reenter the settings that you recorded for the items in the Plugged In column and the Running on Batteries column.
5. Select **OK**.



CAUTION: After calibrating the battery pack, reenable hibernation. Failure to reenable hibernation may result in a complete battery drain and potential data loss.

To reenable hibernation, select **Start > Settings > Control Panel > Performance and Maintenance > Power Options > Hibernate** tab. Select the **Enable hibernation** check box, and then select **Apply**.

Conserving Battery Power

Using the battery conservation procedures and settings described in this section extends the time that a battery pack can run the tablet PC from a single charge.

Conserving Power As You Work

To conserve power as you use the tablet PC:

- Turn off wireless connections and exit modem applications when you are not using them.
- Turn off the local area network (LAN) device when you are not using the LAN connection. You can turn off the LAN device with LAN Power Save mode by disconnecting the network cable. For more information, see the [“Using LAN Power Save Mode”](#) section in this chapter.
- Disconnect external devices you are not using that are not connected to an external power source.
- Stop or remove a PC Card you are not using. For more information, refer to [Chapter 6, “Drives.”](#)
- Use the **fn+f9** and **fn+f10** hotkeys to adjust screen brightness as you need it.
- Use optional powered speakers instead of the internal speakers, or use the volume buttons to adjust system volume as you need it.
- Turn off a device connected to the S-Video-out jack by using the **fn+f4** hotkey or by turning off support for the device in Windows.
- Run the tablet PC on external power while formatting a diskette.
- If you leave your work, initiate standby or hibernation or shut down the tablet PC.

Selecting Power Conservation Settings

To set the tablet PC to conserve power:

- Select a short wait for the screen saver and select a screen saver with minimal graphics and motion. To access screen saver settings:

Select **Start > Control Panel > Appearance and Themes > Display > Screen Saver** tab.

- Through the operating system, select a Power Scheme with low-power-use settings. Refer to the [“Setting or Changing a Power Scheme”](#) section in this chapter.

Using LAN Power Save Mode

Your tablet PC is equipped with LAN Power Save mode, which enables you to conserve battery power. LAN Power Save mode turns off the LAN device when the tablet PC is not connected to external power and the network cable is disconnected.

LAN Power Save mode is *enabled by default*. You can change the LAN Power Save mode settings in Computer Setup. For more information, refer to the [“Advanced Menu”](#) section in [Chapter 15, “Computer Setup.”](#)

To initiate LAN Power Save mode:

- » Disconnect the network cable.



The LAN device is not listed in Device Manager while LAN Power Save mode is activated. To access the LAN device, do one of the following:

- Connect external power.
 - Connect a network cable.
 - Disable LAN Power Save mode in Computer Setup.
-

Storing a Battery Pack

If a tablet PC will be unused and unplugged for more than 2 weeks, remove any battery packs and store them separately.



CAUTION: To prevent damage to a battery pack, do not expose it to high temperatures for extended periods of time.

High temperatures accelerate the self-discharge rate of a stored battery pack. To prolong the charge of a stored battery pack, place it in a cool, dry place.

Use the following table to estimate how long you can safely store a battery pack. The storage times provided are based on a battery pack that contains 50 percent of a full charge. A fully charged battery pack can be safely stored for longer times; a battery pack containing a lower charge can be safely stored for less time.

Calibrate a battery pack that has been stored for one month or more before using it.

Temperature Range °F	Temperature Range °C	Safe Storage Time
115° to 140°	46° to 60°	Less than 1 month
79° to 113°	26° to 45°	No more than 3 months
32° to 77°	0° to 25°	1 year

Disposing of a Used Battery Pack



WARNING: To reduce the risk of fire or burns, do not disassemble, crush, or puncture a battery pack; short the external contacts on a battery pack; or dispose of a battery pack in fire or water. Do not expose a battery pack to temperatures higher than 60°C (140°F). Replace only with the battery pack approved for this computer.



When a battery pack has reached the end of its useful life, do not dispose of the battery pack in general household waste. Follow the local laws and regulations in your area for computer battery pack disposal.

In Europe, dispose of or recycle the battery packs by using the public collection system or by returning them to HP, a service partner, or their agents.

3

Pointing Devices and Keyboard

Pointing Devices

The pointing stick and TouchPad controls can be used interchangeably.



Component	Description
❶ Pointing stick	Moves the pointer.
❷ Left pointing stick button	Functions like the left button on an external mouse.

(Continued)

Component	Description
③ TouchPad*	Moves the pointer. Can be set to perform other mouse functions. Refer to “Setting Mouse Properties” in this chapter.
④ Left TouchPad button*	Functions like the left button on an external mouse.
⑤ Right TouchPad button*	Functions like the right button on an external mouse.
⑥ Touchpad scroll zone*	Scrolls upward or downward.
⑦ Right pointing stick button	Functions like the right button on an external mouse.

*This table describes default settings. For information about changing the functions of TouchPad features, refer to the [“Setting Mouse Properties”](#) section in this chapter.

Using the TouchPad

To move the pointer, slide your finger across the TouchPad surface in the direction you want the pointer to go. Use the left and right TouchPad buttons as you would the left and right buttons on an external mouse. To scroll up and down using the TouchPad vertical scroll zone, slide your finger up or down over the raised area.

Using the Pointing Stick


To move the pointer, press the pointing stick in the direction you want to move the pointer. Use the left and right pointing stick buttons as you would the left and right buttons on an external mouse.

To change the pointing stick cap:

1. Turn off the tablet PC.
2. Gently pull off the used pointing stick cap.
3. Press a replacement cap into place.



Replacement caps are not included with the tablet PC.

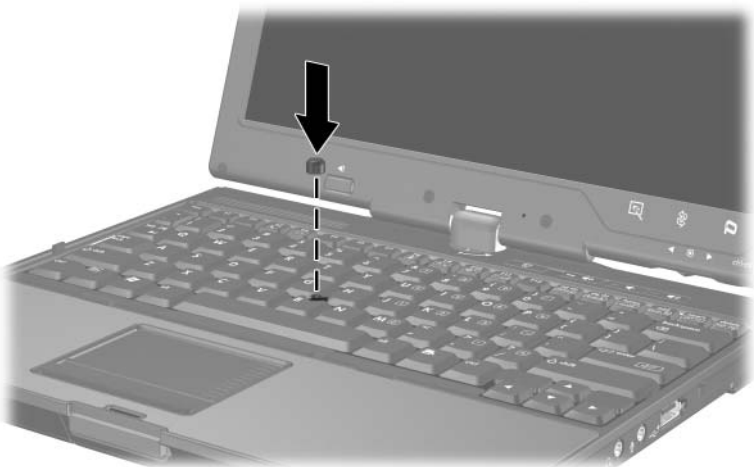

Setting Mouse Properties

Mouse Properties in Windows enables you to customize settings for pointing devices, including

- Enabling or disabling a pointing device (enabled by default).
- TouchPad tapping, which enables you to tap the TouchPad once to select an object or twice to double-click an object (enabled by default).
- Edge motion, which enables you to continue to scroll even though your finger has reached the edge of the TouchPad (disabled by default).
- Palm Check, which helps prevent moving the pointer unintentionally if your palms contact the TouchPad as you type (disabled by default).

Other features, such as mouse speed preferences and mouse trails, are also found in the **Mouse Properties** window.


To access Mouse Properties:

- » Select **Start > Control Panel > Printers and Other Hardware > Mouse**.

Hotkeys

Hotkeys are preset combinations of the **fn** key ❶, one of the function keys ❷, or the **esc** key ❸.

The icons on the **f3**, **f4**, and **f8** through **f11** keys represent the hotkey functions. Hotkey functions and procedures are discussed in the following sections.

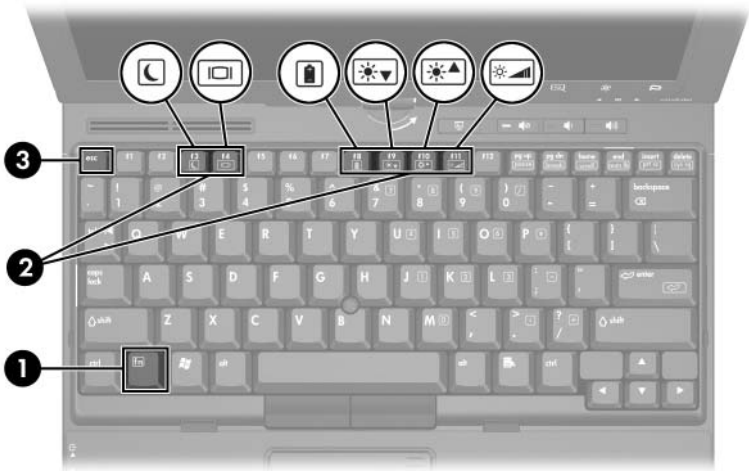

Hotkey Quick Reference

Function	Key Combination to Activate Function	Key Combination to Deactivate Function
Initiate standby	fn+f3	Power switch
Switch between tablet PC display and external display	fn+f4	fn+f4
View battery information	fn+f8	fn+f8
Decrease screen brightness	fn+f9	fn+f10
Increase screen brightness	fn+f10	fn+f9
Turn ambient light sensor on and off	fn+f11	fn+f11
Display system information	fn+esc	fn+esc

Using Hotkey Commands

Initiating Standby (fn+f3)

When the tablet PC is on, press the **fn+f3** hotkey to initiate standby. When standby is initiated, your work is saved in random access memory (RAM), the screen is cleared, and power is conserved. While the tablet PC is in standby, the power lights blink.

To exit standby, slide the power switch toward the front of the tablet PC.

The **fn+f3** hotkey is set at the factory to initiate standby. The function of the **fn+f3** hotkey, called the “sleep button” in Windows, can be changed. For example, the **fn+f3** hotkey can be set to initiate hibernation instead of standby. For more information about standby, hibernation, and changing the function of the **fn+f3** hotkey, refer to [Chapter 2, “Power.”](#)

Switching Displays (fn+f4)

The **fn+f4** hotkey switches the image among display devices connected to the external monitor port or the S-Video-out jack on the tablet PC. For example, if an external monitor is connected to the tablet PC, pressing the **fn+f4** hotkey multiple times toggles the image between the tablet PC display, the external monitor display, and a simultaneous display on both the tablet PC and the monitor.

Most external monitors receive video information from the tablet PC using the external VGA video standard. The **fn+f4** hotkey can also toggle images among other devices receiving video information from the tablet PC.

The following 5 video transmission types, with examples of devices that use them, are supported by the **fn+f4** hotkey:

- LCD (tablet PC display)
- External VGA (most external monitors)
- S-Video (televisions, camcorders, VCRs, and video capture boards with S-Video-in jacks)
- Composite video (televisions, camcorders, VCRs, and video capture boards with composite-video in jacks)
- DVI-D (external monitors that support the DVI-D interface)



Composite video and DVI-D can be connected to the tablet PC only when the tablet PC is docked in an optional docking device.

Viewing Battery Charge Information (**fn+f8**)

Press **fn+f8** to display charge information for all installed battery packs. The display indicates which battery packs are charging and reports the amount of charge remaining in each battery pack.

Battery pack locations are indicated by number:

- Location 1 is the primary battery pack.
- Location 2 is the travel battery pack.

Decreasing Screen Brightness (fn+f9)

Press **fn+f9** to decrease screen brightness. Hold down the hotkey to decrease the brightness level incrementally.

Increasing Screen Brightness (fn+f10)

Press **fn+f10** to increase screen brightness. Hold down the hotkey to increase the brightness level incrementally.

Activating the Ambient Light Sensor (fn+f11)

Press **fn+f11** to turn on and off the ambient light sensor. For more information about the ambient light sensor, refer to the [“Using Ambient Light Sensor”](#) section in this chapter.

Displaying System Information (fn+esc)

Press **fn+esc** to display information about system hardware components and software version numbers. Press **fn+esc** a second time to remove the system information from the screen.



The system BIOS date is the version number of the system ROM. The BIOS date may display in a decimal format, such as 10/19/2002 F.07.

Using Hotkeys with External Keyboards

The hotkeys available for use with optional external keyboards differ depending on the type of external keyboard you use. USB keyboards support only the hotkey functions controlled by the Quick Launch Buttons control panel. For more information about the Quick Launch Buttons control panel, refer to the “[Quick Launch Buttons Software](#)” section later in this chapter.

The following table describes how certain hotkeys and shortcut keys are used on external keyboards:


Tablet PC Keys	External Keyboard Keys
fn+f3	scroll lock+scroll lock+f3*
fn+f4	scroll lock+scroll lock+f4*
fn+f8	scroll lock+scroll lock+f8
fn+f9	scroll lock+scroll lock+f9*
fn+f10	scroll lock+scroll lock+f10*
fn+f11	scroll lock+scroll lock+f11
fn+esc	scroll lock+scroll lock+esc

*Applies to PS/2 keyboards when used with an optional docking station.

Quick Launch Buttons

Identifying Quick Launch Buttons

The tablet PC has 2 Quick Launch buttons that open frequently used applications when you press them.

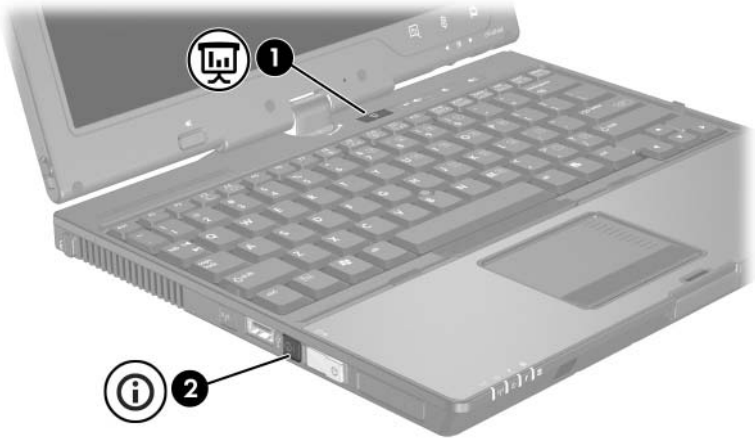

Component	Description
1 Presentation mode button	Starts Presentation mode, which optimizes for an external monitor or projects and opens a user-defined program such as Microsoft PowerPoint.
2 Info Center button	Enables you to view a list of commonly used software solutions.

Quick Launch Buttons Software

You can use the Quick Launch Buttons software to

- Change Presentation mode settings.
- Set advanced preferences, including
 - Preferences for the display of the Quick Launch Buttons icon.
 - Preferences for the ambient light sensor.

The following sections provide instructions for setting preferences within the control panel. For additional on-screen information about any item on the control panel, select the Help button in the upper-right corner of the window. The Help button is identified by a question mark icon.

Accessing the Quick Launch Buttons Software

You can access the Quick Launch Buttons software from the Start button or from an icon that you can display in the notification area (at the far right of the taskbar) or Windows desktop. To access the Quick Launch Buttons software from the Start button:

- » Select **Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons**.

Displaying the Quick Launch Buttons Icon

To show or hide the Quick Launch Buttons Properties icon in the notification area (at the far right of the taskbar) or your Windows desktop:

1. Open the Quick Launch Buttons control panel:

- Select **Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons**.

– or –

- Select the Quick Launch Buttons icon in the notification area (at the far right of the taskbar) or Windows desktop.

2. Select the **Advanced** tab.

On the Advanced tab you can

- Display or hide the Quick Launch Buttons icon in the notification area (at the far right of the taskbar), or on the desktop.

- ◆ To display the icon, select the **Show icon on the taskbar** or **Show icon on the desktop** check box.

- ◆ To hide the icon, clear the **Show icon on the taskbar** or **Show icon on the desktop** check box.

3. To save your preferences and close the display, select **OK**.

Using Presentation Mode

The Presentation mode button toggles Presentation mode on and off. Turning Presentation mode on opens an application, folder, file, or Web site that you specify. The image simultaneously displays on the tablet PC screen and on an external device connected to the external monitor port or S-Video-out jack on the rear panel, or to display ports and jacks on an optional docking device.



When you first select the Presentation mode button, the **Presentation Settings** dialog box displays. In this dialog box, you can

- Set the program to start when the button is pressed.
- Choose a power scheme.

- Choose whether you want to show the **Presentation Settings** dialog box each time you press Presentation mode button.



If you do not select this option, each time you press the Presentation mode button, the **Presentation Settings** dialog box displays and you have to select **Continue** to open the program, application, folder, file, or Web site you have selected to start when the button is pressed.

- Automatically switch to an external display.

You can modify the Presentation mode settings using the Quick Launch Button control panel. Refer to “[Setting the Presentation Mode Button](#)” in this chapter for information on setting Presentation mode settings.

Setting the Presentation Mode Button

To set an application, folder, file, or Web site to start when the Presentation mode button is pressed:

1. Open the Quick Launch Buttons control panel:
 - Select **Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons**.
 - or –
 - Select the Quick Launch Buttons icon in the notification area (at the far right of the taskbar) or Windows desktop.
2. Select the **Presentation** tab.
3. In the box under Program to Start, add the application, folder, file, or Web site you want to start when the Presentation mode button is pressed, or select **Browse** to view available applications, folders, files, or Web sites.
4. To save your preferences and close the display, select **OK**.

Changing the Power Scheme

By default the Presentation power scheme is selected when the Presentation mode button is pressed. To change the power scheme:

1. Open the Quick Launch Buttons control panel:
 - Select **Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons**.
 - or –
 - Select the Quick Launch Buttons icon in the notification area (at the far right of the taskbar) or Windows desktop.
2. Select the **Presentation** tab.
3. Select an option from the drop-down list box, or select **Power Options** to open the Microsoft Power Options control panel to view or change the current power scheme.
4. To save your preferences and close the display, select **OK**.

Showing the Welcome Screen

You can choose to show the **Quick Launch Buttons Properties** dialog box each time you press the Presentation mode button. By default, this option is turned off.

To turn it on, select the check box next to **Show Welcome Screen when Presentation mode button is pressed**.

Switching to an External Display

By default, the Automatically switch to external display setting in the Presentation tab is not selected. When you press the Presentation mode button, the application, folder, file, or Web site you selected in the Program to Start setting opens.

If you select the **Automatically switch to external display setting** and press the Presentation mode button, the display is switched to the external display connected to your tablet PC and the application, folder, file, or Web site you selected in the Program to Start setting opens.

Using Ambient Light Sensor

The tablet PC features a built-in light sensor that enables the tablet PC to automatically adjust the screen brightness according to the ambient lighting level. When the lighting of your environment changes, the ambient light sensor detects the change and automatically adjusts the screen brightness.

You can turn the ambient light sensor on and off in 3 ways:

- By pressing **fn+f11**
- Through the Quick Launch Buttons control panel
- By using the Quick Launch Buttons icon in the notification area (at the far right of the taskbar) or Windows desktop.



To turn on and off the ambient light sensor using the Quick Launch Buttons control panel or the Quick Launch icon, the Quick Launch Buttons software must be installed.

To turn the ambient light sensor on and off using the ambient light sensor hotkeys, press **fn+f11**.



You can turn the ambient light sensor on and off using the Quick Launch Buttons software:

1. Open the Quick Launch Buttons software:
 - Select **Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons.**
 - or –
 - Select the Quick Launch Buttons icon in the notification area (at the far right of the taskbar) or Windows desktop.
2. Select the **Advanced** tab.
3. Select or clear the **Enable Ambient Light Sensor** check box.
4. Select **Apply**, and then select **OK**.

You can turn the ambient light sensor on and off using the Quick Launch Buttons icon:

1. Right-click the Quick Launch Buttons icon in the notification area (at the far right of the taskbar) or Windows desktop.
2. Select **Turn Ambient Light Sensor On** or **Turn Ambient Light Sensor Off**.

Using Quick Tile

Quick Tile enables you to quickly organize and view open windows on your desktop.

1. Open the Quick Launch Buttons software:
 - Select **Start > Control Panel > Printers and Other Hardware > Quick Launch Buttons** icon.
 - or –
 - Double-click the Quick Launch Buttons software icon in the notification area.
2. Select the **Quick Tile** tab.
3. Select the vertical tile or horizontal tile option.
4. Select the software to include from the **Applications currently running** list.
5. Select **OK**.

Using Info Center (Select Models Only)

The Info Center enables you to quickly open the following solutions:

- Contact HP
- Data Protection Solutions
- Help and Support
- Documentation
- Options Demo
- Software Setup
- System Configuration
- Wireless Assistant

To access Info Center:

1. Press the Info Center button.

– or –

Select **Start > Info Center**.

2. In the Info Center window, select the software application you want to open.

For more information, refer to the Info Center online Help.

Keypads

The tablet PC has an embedded numeric keypad and also supports an optional external numeric keypad or an optional external keyboard that includes a numeric keypad.

Using the Embedded Numeric Keypad

The 15 keys of the embedded numeric keypad can be used like the keys on an external keypad. When the embedded numeric keypad is turned on, each key on the keypad performs the function indicated by the icon in the upper-right corner of the key.



Item	Component
①	fn key
②	Num lock light
③	num lk key
④	Embedded numeric keypad

Enabling and Disabling

Press **fn+num lk** to enable the embedded numeric keypad. The num lock light is turned on. Press **fn+num lk** again to return the keys to their standard keyboard functions.



The embedded numeric keypad does not work while an external keyboard or numeric keypad is connected to the tablet PC or to an optional docking device.

Switching Key Functions

You can temporarily switch the functions of keys on the embedded numeric keypad between their standard keyboard functions and their keypad functions by using the **fn** key or the **fn+shift** key combination.

- To change the function of a keypad key to keypad functions while the keypad is off, press and hold the **fn** key while pressing the keypad key.
- To use the keypad keys temporarily as standard keys while the keypad is on:
 - Press and hold the **fn** key to type in lowercase.
 - Press and hold **fn+shift** to type in uppercase.

Using an External Numeric Keypad

Most keys on most external numeric keypads function differently according to whether num lock mode is on or off. For example:

- When num lock is on, most keypad keys type numbers.
- When num lock is off, most keypad keys function like the arrow, page up, or page down keys.

When num lock on an external numeric keypad is turned on, the num lock light on the tablet PC is turned on. When num lock on an external numeric keypad is turned off, the num lock light on the tablet PC is turned off.

If the external numeric keypad is connected, the embedded numeric keypad cannot be turned on.

Enabling or Disabling Num Lock Mode as You Work

To turn num lock on or off on an external numeric keypad as you work, press the **num lk** key on the external numeric keypad, not on the tablet PC.

Pen and Command Controls

You can enter and access information on the tablet PC by voice (supported in English only), pen, and command controls. This chapter provides information about using the pen and command controls.

Pen


You can write with the pen in pen-specific applications such as the Tablet PC Input Panel, in all Microsoft Office applications, and in most other Windows applications and utilities. The information you write on the screen with the pen can be filed, searched, and shared among most Windows applications.

To access basic information about using the pen within the operating system, refer to the printed *Windows XP Tablet PC Edition Start Here* guide included with the tablet PC.

Entering Information with the Pen

Identifying the Pen Tip and Pen Button

The pen interacts with the tablet PC whenever the tip or eraser of the pen ❶ is approximately 1.27 cm (0.5 inch) from the screen. The pen button ❷ emulates the functions of the right-click button on an external mouse.

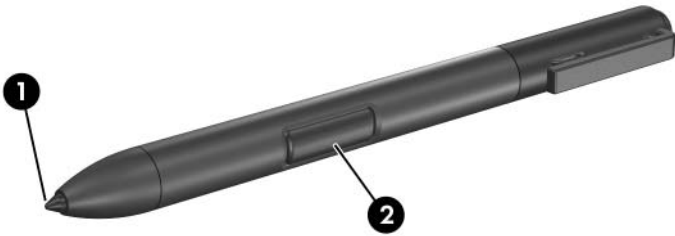

Holding the Pen

Hold the pen as if you were writing with a standard pen or pencil. Position the pen in your hand so that you will not accidentally press the pen button.

As you monitor the movements of the pen, focus on the pointer, not on the tip of the pen.

Performing Mouse Clicks with the Pen

To select an item on the screen as you would with the left button of an external mouse:

- » Tap the item with the tip of the pen.

To double-click an item on the screen as you would with the left button of an external mouse:

- » Tap the item twice with the tip of the pen.

To select an item as you would with the right button of an external mouse:

- » Press and hold down the pen button, and then tap the item with the tip of the pen.

Performing Other Procedures with the Pen

In addition to emulating mouse clicks, the pen can be used for the following tasks:

- To display the pointer location, hold the pen tip immediately over any location on the tablet PC screen without touching the screen with the pen tip.
- To display the menu options related to an item on the screen, tap the screen with the pen tip.
- To write with the pen, write on the screen with the tip of the pen.
- To press a pen-activated button, tap the button with the tip of the pen.
- To erase with the pen, hold the pen with the eraser-side down and move the eraser over the writing that you want to delete.

Pressure-Sensitivity

The tablet PC pen is equipped with a pressure-sensitive feature. This means that you can manipulate the pen to create lines of various thickness, depending upon the amount of pressure you use to write.



This feature is only available if the software application is enabled.

Calibrating the Pen

The pen can function at the default calibration or at a calibration set by another user. However, HP highly recommends that you use the pen only while it is calibrated to your personal handwriting and mouse action motions. Calibration optimizes pen performance for all users and particularly for left-handed users.

To calibrate the pen:


1. Select **Start > Control Panel > Printers and Other Hardware > Tablet and Pen Settings > Settings** tab.
2. Select **Calibrate**.
3. Follow the instructions on the screen.
 - Tap the pen in the exact center of each of the calibration markers. The calibration markers are displayed on the screen as plus signs (+).
 - Be sure to calibrate the pen for use in both portrait and landscape orientations.



You can display information about any setting in the **Tablet and Pen Settings** window by selecting the question mark button in the upper-right corner of the window, and then select a setting. A definition, explanation, or procedure is displayed.

Using the Pen Holder

To protect the pen when you are not using it, insert the pen, tip first, into the pen holder on the tablet PC.

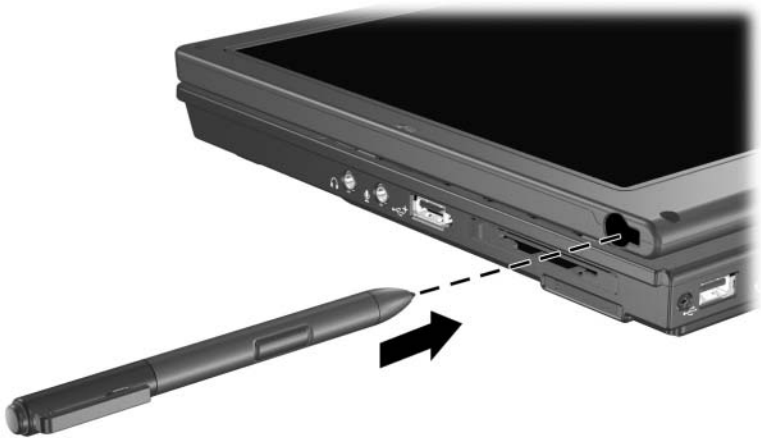

Setting Pen Preferences

Pen preferences are set in the **Tablet and Pen Settings** window of the operating system. The preferences include settings that optimize handwriting recognition and the location of on-screen menus for either right-handed or left-handed users. To access the pen settings:

- » Select **Start > Control Panel > Printers and Other Hardware > Tablet and Pen Settings > Pen Options** tab.

The preferences you set in the **Tablet and Pen Settings** window are specific to the pen and the tablet PC.


Pointing device preferences, such as pointer speed, click speed, and mouse trails, that apply to any pointing device in the system, are set in the **Mouse Properties** window. For instructions, refer to [Chapter 3, “Pointing Devices and Keyboard.”](#)

Changing the Pen Tip

Use the clamp packaged with your pen to remove the used tip.

To remove the used pen tip:

1. Use the clamp to grasp the pen tip ❶.
2. Pull the tip out of the pen ❷.

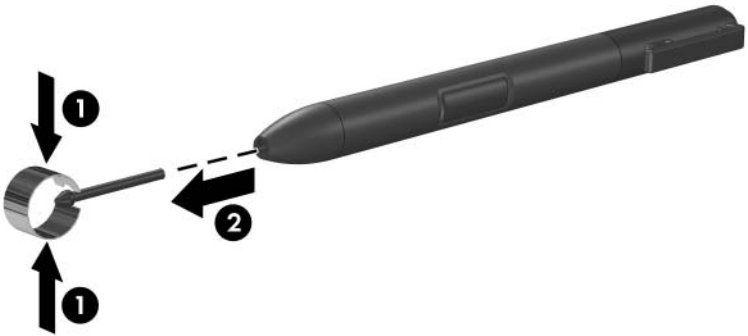

To insert a new pen tip:


- » Insert the new tip into the pen until fully seated.



Command Controls

The 5 command controls enable you to enter commands that are usually entered with keyboard keys, while you are using the tablet PC. The command controls can also be used while you are using the on-screen keyboard or the tablet PC keyboard.

Identifying Command Controls

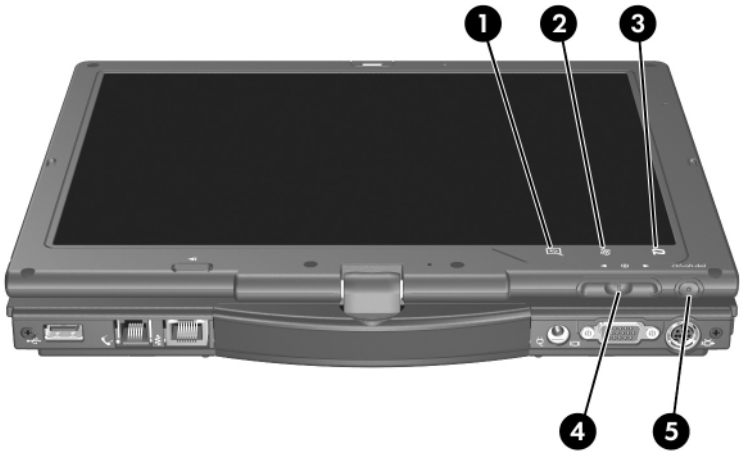

Component	Description
❶ Tablet PC Input Panel Launch button*	When Windows is running, opens the Microsoft Tablet PC Input Panel application, which includes a handwriting pad and an on-screen keyboard.
❷ Rotate button*	Switches the image between landscape and portrait orientation.
❸ Q button*	When Windows is running, opens or closes the Q Menu.

(Continued)

Component	Description
④ Jog dial*	Functions like enter and the up and down arrow keys on a standard keyboard. <ul style="list-style-type: none"><li data-bbox="540 331 958 358">■ Press inward to enter a command.<li data-bbox="540 370 958 397">■ Rotate upward to scroll upward.<li data-bbox="540 409 958 461">■ Rotate downward to scroll downward.
⑤ Windows Security button*	When pressed while <ul style="list-style-type: none"><li data-bbox="540 516 958 574">■ Windows is open, enters the ctrl+alt+delete command.[†]<li data-bbox="540 586 958 641">■ The Setup utility is open, enters the reset command.

*This table describes default settings. For information about changing the functions, refer to “[Setting Command Control Preferences](#),” later in this chapter.

[†]To protect your work and the system, the ctrl+alt+delete command cannot be entered using the **ctrl**, **alt**, and **del** keys on the on-screen keyboard.

Command Controls Quick Reference

The following table identifies the default setting and activation procedure for each command control.

- To activate a pen-activated button, tap the button with the tip of the pen.
- To activate a manually activated button, press and release the button.

Button	Default Function	Activation
Tablet PC Input Panel Launch button*	Opens and closes the Tablet PC Input Panel application, which includes a writing pad and the on-screen keyboard.	Pen
Rotate button*	Switches the image between landscape and portrait orientation.	Pen
Q button*	Opens and closes the Q Menu.	Pen
Windows Security button*	In Windows, functions like the ctrl+alt+delete command on a standard keyboard. In the Setup utility, functions like the reset button on some computers.	Manual
Jog dial*	Enters commands or scrolls the image upward or downward.	Manual

*These controls are programmable. For instructions, refer to [“Setting Command Control Preferences,”](#) later in this chapter.

Using Command Controls

Tablet PC Input Panel Launch Button

Tap the Tablet PC Input Panel Launch button with the pen tip when the tablet PC is in Windows to open the Tablet PC Input Panel application. The Tablet PC Input Panel application displays a writing pad, which supports handwriting, and can also display a keyboard.

Rotate Button

Tap the rotate button with the pen tip when the tablet PC is in Windows to rotate the image on the screen 90 degrees. For example, if the image is in landscape orientation, tap the rotate button to rotate the image to portrait orientation.

Q Button

Press the Q button with the tip of the pen when Windows is running to open or close the Q Menu. The Q Menu provides quick access to programmable tasks and destinations, including

- System controls, such as volume and screen brightness.
- Key simulations such as Capture Screen, which functions like the **prt scr** key on a standard keyboard.
- Applications, files, or folders on a drive, a network, or the Internet.

For more information about using the Q Menu, refer to [Chapter 12, “Q Menu Software.”](#)

Windows Security Button

Press the Windows Security button to enter the ctrl+alt+delete command while you are in Windows, or the reset command while you are in the Setup utility.

Ctrl+Alt+Delete Command

When the tablet PC is in Windows, the Windows Security button displays the Windows Task Manager in which you can lock, log off, or shut down the tablet PC, initiate standby or hibernation.

- The Shut Down option in the ctrl+alt+delete window enables you to safely shut down the tablet PC if the system has become unresponsive.
- Task Manager displays the status of all open applications and enables you to close an application that has become unresponsive.

If the system remains unresponsive after selecting **Shut Down** in the Windows Security window, slide and hold the power switch for 4 seconds. For additional shut down procedures, refer to [Chapter 2, “Power.”](#) For information about using the ctrl+alt+delete command in non-Windows applications, refer to the application documentation.

Reset Command

The Windows Security button simulates the reset button found on most computers. When the Setup utility is open and the Windows Security button is pressed, the tablet PC will reset and all unsaved information is lost.

The reset function can be used to restore functionality when the system has become unresponsive. For information about the Setup utility, which is a non-Windows utility, refer to [Chapter 15, “Computer Setup.”](#)

Jog Dial

Press or rotate the jog dial manually to enter commands or scroll vertically:

- Press inward to simulate the function of the **enter** key on a standard keyboard.
- Rotate upward or downward to scroll toward the top or bottom of an image.

At the default setting, the jog dial scrolls line by line like the up and down arrow keys on a standard keyboard. The jog dial can be set to scroll page by page like the page up and page down keys on a standard keyboard or three lines at a time like a mouse wheel. Other settings, in addition to scroll functions, are also available. For instructions, refer to [“Setting Command Control Preferences,”](#) next in this chapter.

Setting Command Control Preferences

All command controls except the enter function of the jog dial can be customized to launch applications, simulate key combinations, or perform preset system functions.

Each programmable command control can be assigned to 4 settings. Each setting applies only to 1 of 4 views:

- Portrait-Primary
- Portrait-Secondary
- Landscape-Primary
- Landscape-Secondary

Command control preferences are set in the **Tablet and Pen Settings** window. You must select a view before setting a preference. Each view is illustrated in the Button Location pane of the **Tablet and Pen Settings** window as you select it.

If you are unfamiliar with the 4 views, you may want to read [“Selecting a View”](#) next in this section, before setting a command control preference.

Selecting a View

In the Portrait-Primary and Portrait-Secondary views, the image is displayed vertically, in portrait orientation. In the Landscape-Primary and Landscape-Secondary views, the image is displayed horizontally, in landscape orientation.

- A portrait view is often optimal when you are using the tablet PC as a handheld.
- A landscape view is often optimal when you are displaying the image on an optional external monitor or projector.

In the primary views (Portrait-Primary and Landscape-Primary), the image switches clockwise between vertical and horizontal. In the secondary views (Portrait-Secondary and Landscape-Secondary), the image switches counterclockwise between vertical and horizontal.

- Left-handed users may find the secondary views more convenient.
- It is recommended that you not use a secondary view while using the internal wireless. The positions commonly occupied by the tablet PC, external devices, and users while the tablet PC is in a secondary view may obstruct the antennae.

When you are facing the tablet PC screen with the tablet PC in portrait orientation, the antennae, not visible from the outside of the tablet PC, are on the right and left sides of the tablet PC, near the upper corners.

To switch the system among the Portrait-Primary, Landscape-Primary, Portrait-Secondary, and Landscape-Secondary views:

1. Press the Q button.
2. Select a view from the Q Menu.

For more information about using the Q Menu, including instructions for adding or removing items from the Q Menu, refer to [Chapter 12, “Q Menu Software.”](#)

Assigning or Changing a Preference

To assign or change the function of a programmable command control:

1. Select **Start > Control Panel > Printers and Other Hardware > Tablet and Pen Settings > Tablet Buttons** tab.
2. In the **Button Settings For** drop-down list, select the view in which you want to use your preference.
3. In the **Tablet Button** dialog box, select the button you plan to assign.
 - To assign or change the function of rotating the jog dial upward, select **Up**.
 - To assign or change the function of rotating the jog dial downward, select **Down**.
4. Select **Change**.
5. Select your preference in the **Action** dialog box, and then select **OK** or **Apply** to save your preferences.

Returning All Command Controls to Default Settings

To return the settings on *all* command controls to their default settings:

1. Select **Start > Control Panel > Printers and Other Hardware > Tablet and Pen Settings > Tablet Buttons** tab.
2. In the **Button Settings For** field, select the view in which you want to change all command controls to their default settings.
3. Select **Reset**.
4. Select **Apply**, and then select **OK**.

On-Screen Keyboard

The Tablet PC Input Panel application displays a keyboard on the screen. This on-screen keyboard simulates the functions of the standard keyboard.

To open the Tablet PC Input Panel application, tap the Tablet PC Input Panel Launch button with the pen and then select the On-Screen Keyboard icon on the lower-left corner of the screen.


- To type, tap a key.
- To switch the keys displayed in the top row between number keys and function keys, tap **Func.**
- To enter the ctrl+alt+delete command, press the Windows Security button on the tablet PC. To protect your work and the system, the ctrl+alt+delete command cannot be entered using the **ctrl**, **alt**, and **del** keys on the on-screen keyboard.

For more information about using the Tablet PC Input Panel application, refer to the [“Tablet PC Input Panel Launch Button”](#) section, earlier in this chapter.

Multimedia

Audio Features

The following figure and table describe the audio features of the tablet PC.

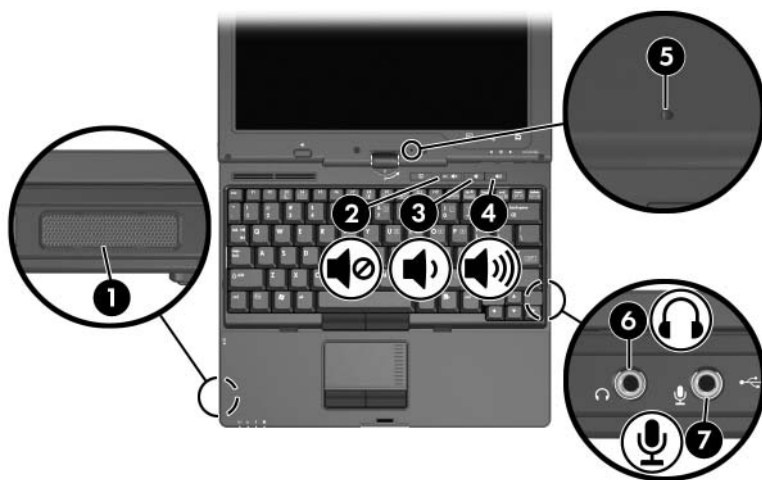

Component	Description
❶ Speaker	Produces tablet PC sound.
❷ Volume mute button	Mutes or restores volume.
❸ Volume down button	Decreases tablet PC sound.

(Continued)

Component	Description
④ Volume up button	Increases tablet PC sound.
⑤ Internal microphone	Records sound.
⑥ Audio-out (headphone) jack	Connects optional headphones or powered stereo speakers. Also connects the audio function of an audio/video device, such as a television or VCR.
⑦ Audio-in (microphone) jack	Connects an optional monaural (single sound channel) or stereo (dual sound channel) microphone.

Using the Audio-In (Microphone) Jack

The tablet PC is equipped with a stereo microphone jack. When connecting a microphone to the microphone jack, use a microphone with a 3.5-mm plug.

- If you connect a stereo (dual-channel) microphone, stereo sound will be recorded.
- If you connect a monaural (single-channel) microphone, left-channel sound will record on both channels.
- If you connect a dynamic microphone, the recommended sensitivity may not be achieved.



When an external microphone is connected to the tablet PC, the tablet PC internal microphone is disabled.

Using the Audio-Out (Headphone) Jack



WARNING: To reduce the risk of personal injury, adjust the volume before putting on headphones or a headset.



CAUTION: To prevent possible damage to an external device, do not plug a single sound channel (monaural) connector into the headphone jack.

The stereo (dual-channel) headphone jack is used to connect headphones, and also to connect the audio input connector of an audio/video device such as a television or VCR.

When connecting a device to the headphone jack:

- Use only a 3.5-mm stereo plug.
- For best sound quality, use 24-ohm to 32-ohm headphones.



When the a device is connected to the headphone jack, the internal speaker is disabled.

Adjusting the Volume

To adjust the volume, use any of the following controls:

- Tablet PC volume buttons
 - To mute or restore volume, press the volume mute button.
 - To decrease the volume, press the volume down button.
 - To increase the volume, press the volume up button.
- Windows volume control:
 1. Click the Volume icon in the notification area (at the far right of the taskbar).
 2. Increase or decrease the volume by moving the slider up or down. (You can also select the check box next to **Mute** to mute the volume.)

– or –

 1. Double-click the Volume icon.
 2. In the Volume Control column, increase or decrease the volume by moving the Volume slider up or down. You can also adjust the balance or mute the volume.



Volume can also be adjusted within some applications.

If the Volume icon is not in the notification area, follow the steps below to place it in the notification area.

1. Select **Start > Control Panel > Sounds, Speech, and Audio Devices > Sounds and Audio Devices**.
2. Select the **Volume** tab.
3. Select the check box for **Place volume icon in the taskbar**.
4. Select **Apply**.

Video Features

The tablet PC features a 7-pin, dual-purpose S-Video-out jack that connects the tablet PC to an optional S-Video device, such as a television, VCR, camcorder, overhead projector, or video capture card, using an optional, standard (4-pin) S-Video cable. The S-Video-out jack features 3 extra pins that enable an optional S-Video-to-composite adapter to be used with the tablet PC.

The tablet PC can support one S-Video device connected to the S-Video-out jack while simultaneously supporting an image on the tablet PC display and on any other supported external display. The S-Video connection usually provides an image of higher quality than a composite-video connection provides.

To transmit video signals through the S-Video-out jack, you need an S-Video cable, available from most electronics retailers. If you are combining audio and video functions, such as playing a movie from a DVD in an optional MultiBay drive to display on a television, you also need a 3.5mm to RCA audio cable, available from most electronics retailers.

Using the S-Video-Out Jack

To connect a video device to the S-Video-out jack:

1. Plug either end of the S-Video cable into the S-Video-out jack on the tablet PC.




2. Connect the other end of the cable to the video device, as instructed in the documentation included with the device.



If the S-Video-out jack on the tablet PC is not accessible because the tablet PC is docked into an optional docking device, you can connect the device to the S-Video-out jack on the docking device.

Connecting a Monitor, Projector or Television

To connect an external monitor, projector, or television to the tablet PC, insert the monitor cable into the external monitor port on the back of the tablet PC.

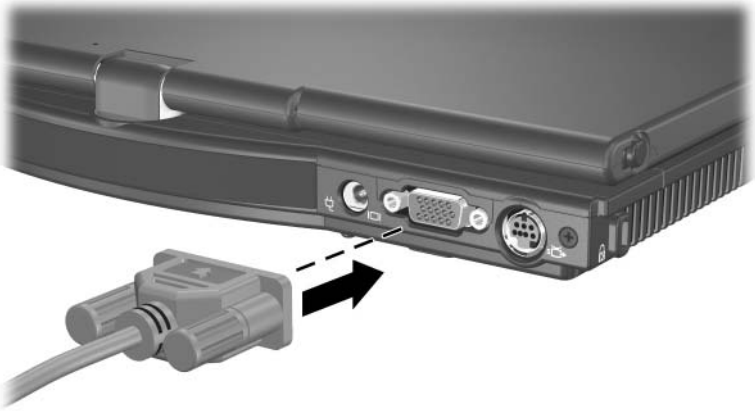

If a properly connected external monitor, projector, or television does not display an image, try pressing the **fn+f4** hotkey to switch the image to the monitor. You can toggle between displays by pressing the Presentation mode button.

Multimedia Software



To use optical discs (CDs and DVDs), you must use the optical drive in the MultiBay of an optional tablet PC docking station, or an external MultiBay.

The multimedia software included with your tablet PC is determined by your region and tablet PC model.

The following list describes the capabilities of some of the multimedia software that may be included with your tablet PC.

- Windows Media Player—Plays audio CDs and DVDs, and copies audio and data CDs. It also plays common audio and video file types, such as MP3, WMA, AVI, MPG, and WMV. This software is included with the Windows operating system.
- InterVideo WinDVD—Plays video CDs and DVD movies. This software is preinstalled on select tablet PCs. You can also obtain this software by any of the following methods:
 - ❑ Install WinDVD from the *Application and Driver Recovery* disc provided with most HP tablet PCs.
 - ❑ If you do not have the *Application and Driver Recovery* disc, contact Customer Care for a copy of the restore solution for your tablet PC.
 - ❑ Download the software from the HP Web site at <http://www.hp.com>.

- **InterVideo WinDVD Creator Plus**—Provides the ability to create, edit, and burn movies to a DVD or video CD. This software is located on the *InterVideo WinDVD Creator* CD, included with select tablet PCs.
- **Sonic RecordNow!**—Enables you to create copies of data and audio CDs and DVDs, and create personalized audio CDs and DVDs. RecordNow! is preinstalled on select tablet PCs.



For more information about using multimedia software, refer to the online Help for the software.

Your tablet PC may include additional multimedia software. Be sure to explore

- Your desktop icons.
- The software listed at **Start > All Programs**.
- The preloaded items that may be available at **Start > All Programs > Software Setup**.

Observing the Copyright Warning

It is a criminal offense, under applicable copyright laws, to make unauthorized copies of copyright-protected material, including computer programs, films, broadcasts, and sound recordings. This tablet PC should not be used for such purposes.

Installing Software

To install software included with the tablet PC from a CD:

1. Insert an appropriate optical drive into an optional external MultiBay or MultiBay II.
2. Connect the tablet PC to a reliable electrical outlet.
3. Close any open applications.
4. Insert a software CD into the optional external optical drive.
 - ❑ If Autorun is enabled an installation wizard is displayed.
 - ❑ If Autorun is disabled, select **Start > Run**. Enter:
x:\setup.exe
where *x* is your CD drive designation
and then select **OK**.
5. When the installation wizard is displayed, follow the installation instructions on the screen.
6. Restart the tablet PC if prompted.



Repeat the installation procedure for all software you want to install.



WinDVD Creator has special drive requirements for proper installation. To install WinDVD Creator, refer to the instructions provided with the *InterVideo WinDVD Creator* CD.

Enabling AutoPlay

AutoPlay is an option in Windows that turns the Autorun feature on or off. Autorun starts a program or plays a title on a disc as soon as it is inserted into the drive and the drive door is closed. By default, AutoPlay is enabled on the tablet PC.

To disable AutoPlay or to enable AutoPlay if the feature has been turned off, refer to your operating system documentation or visit the Microsoft Web site at <http://www.microsoft.com>.

Changing DVD Region Settings



CAUTION: The region settings on your DVD drive can be changed only 5 times.

- The region setting you select the fifth time becomes the permanent region setting on the DVD drive.
 - The number of allowable region changes remaining on the drive is displayed in the **Remaining Times Until Permanent** field in the WinDVD window. The number in the field includes the fifth and permanent change.
-

Most DVDs that contain copyrighted files also contain region codes. The region codes help protect copyrights internationally.

You can play a DVD containing a region code only if the region code on the DVD matches the region setting on your DVD drive.

If the region code on a DVD does not match the region setting on your drive, a “Playback Of Content From This Region Is Not Permitted” message is displayed when you insert the DVD. To play the DVD, you must change the region setting on your DVD drive. DVD region settings can be changed through the operating system or through some DVD players.

Using the Operating System

To change settings through the operating system:

1. Open Device Manager by selecting **Start > My Computer**. Right-click in the window and select **Properties > Hardware tab > Device Manager**.
2. Select **DVD/CD-ROM drives**, right-click the DVD drive for which you want to change region settings, and then select **Properties**.
3. Make the desired changes on the DVD **Region** tab.
4. Select **OK**.
5. For additional information, refer to the Windows operating system Help and Support.

Using WinDVD

To change the region settings on a drive using WinDVD:

1. Open WinDVD through one of the following methods:
 - Select the WinDVD Player icon on the notification area.
 - Select **Start > (All) Programs > InterVideo WinDVD > InterVideo WinDVD**.
2. Right-click the WinDVD player window.
3. Select **Setup**.
4. Select the button for the region.
5. Select **OK**.

Using Other DVD Software

To change region settings on a drive using a DVD player other than WinDVD, refer to the documentation provided with the player.

Drive Care

The following sections identify and describe the primary hard drive and the optional external MultiBay or MultiBay II.

Drives are fragile components that must be handled with care. The following cautions apply to all drives. Additional cautions are included with the procedures to which they apply.



CAUTION: To prevent loss or damage to the tablet PC or a drive:


- Handle a drive carefully. Do not drop it.
- Excessive force can damage drive connectors. When you insert a drive, use only enough force to seat the drive.
- Do not spray a drive with cleaning fluid or other liquid or expose it to temperature extremes.
- Do not remove the primary hard drive (the hard drive in the hard drive bay) except for repair or replacement.
- Electrostatic discharge can damage electronic components. To prevent electrostatic damage to the tablet PC or a drive:
 - Discharge yourself from static electricity by touching a grounded metal object before handling a drive.
 - Avoid touching the connectors on a drive.

For more information about preventing electrostatic damage, refer to the *Regulatory and Safety Notices* guide.

- Avoid exposing a drive to devices with magnetic fields. Security devices with magnetic fields include airport walk-through devices and security wands. The airport security devices that check carry-on luggage, usually while it is placed on a conveyor belt, use x-rays instead of magnetism and will not damage a drive.
 - If you mail a drive, ship it in packaging that protects it from shock, vibration, temperature, and high humidity. Label the package "FRAGILE."
-

IDE Drive Light

The IDE drive light is turned on when the primary hard drive is being accessed.

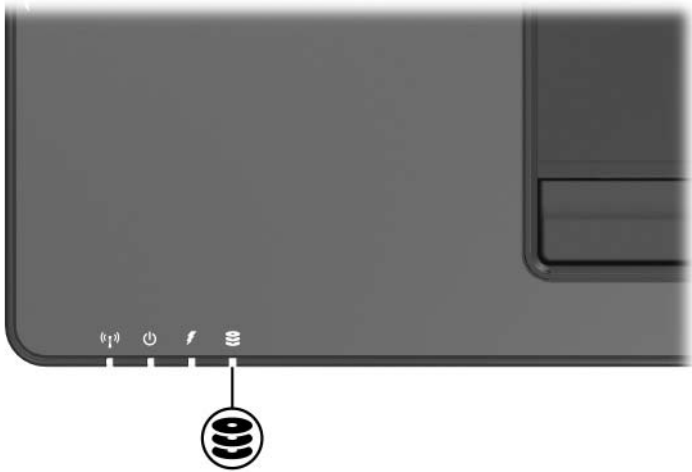

Primary Hard Drive



CAUTION: To help avoid loss of critical data, initiate standby before you move a tablet PC or external hard drive from one location to another. To initiate standby, select **Start > Turn Off Computer > Standby**. For more information on initiating and resuming from standby, refer to [Chapter 2, “Power.”](#)




CAUTION: To prevent system lockup and loss of information, shut down the tablet PC before removing the hard drive from the hard drive bay. Do not remove the hard drive while the tablet PC is on, in standby, or in hibernation.

The tablet PC has one hard drive bay that supports only one hard drive. The hard drive in the hard drive bay is the *primary* hard drive.


To remove the primary hard drive:

1. Save your work and then shut down the tablet PC. (If you are not sure whether the tablet PC is in hibernation, turn the tablet PC on by sliding the power switch toward the front of the tablet PC. Then shut down the tablet PC through the operating system.)
2. Close the display.
3. Turn the tablet PC upside down with the front of the tablet PC facing you.

4. Loosen the 2 hard drive screws ❶.
5. Lift the hard drive cover ❷ away from the tablet PC.

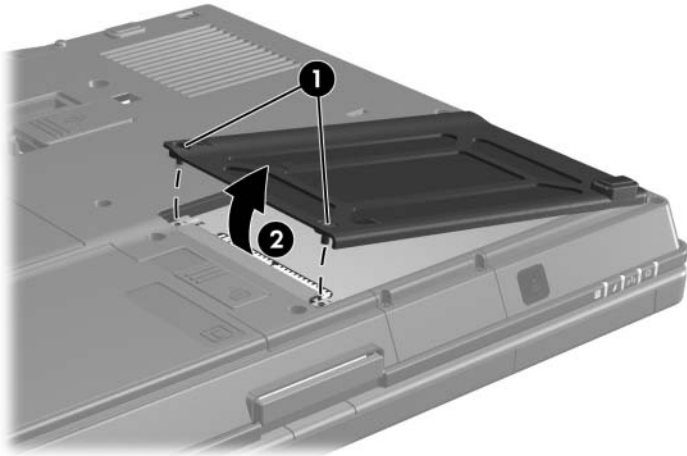


6. Loosen the hard drive screw ❶.
7. Pull the hard drive tab ❷ to the right to disconnect the hard drive.
8. Lift the hard drive ❸ from the tablet PC.

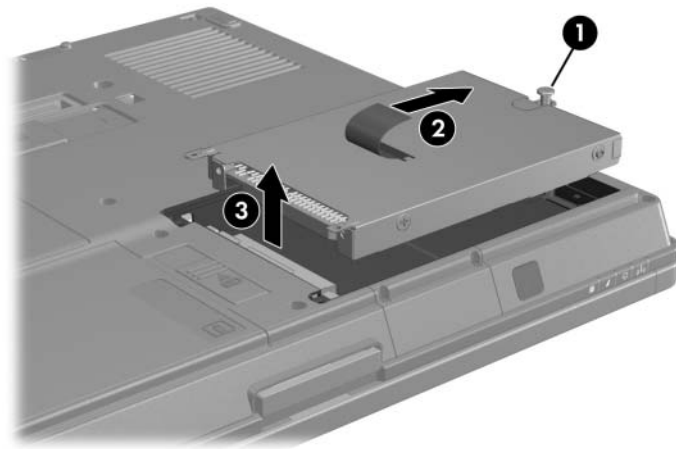


To install a hard drive:

1. Insert a hard drive ❶ into the hard drive bay on the bottom of the tablet PC.
2. Push the hard drive tab ❷ to the left to connect the hard drive.
3. Tighten the hard drive screw ❸.

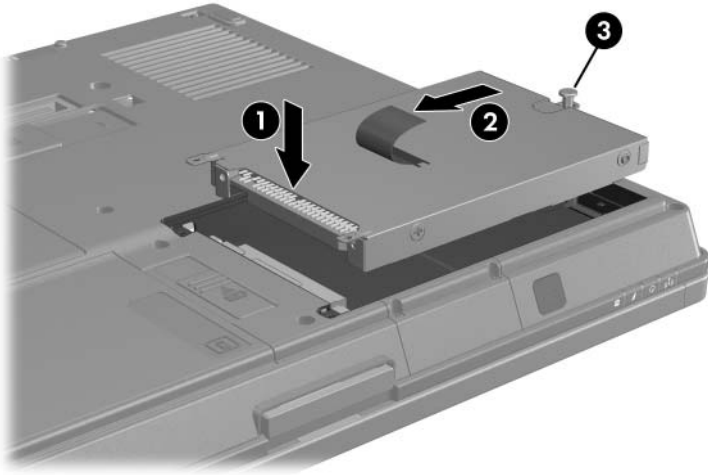

4. Align the tabs **1** on the hard drive cover with the slots on the tablet PC.
5. Close the cover **2**.
6. Tighten the hard drive cover screws **3**.

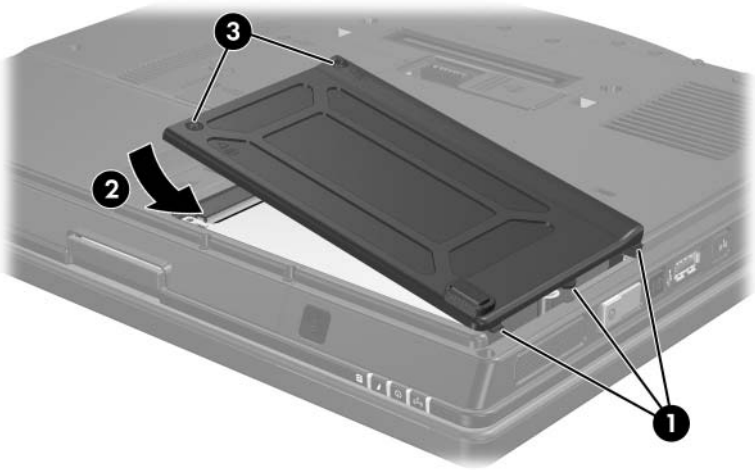

External Drives

Removable external drives enable you to store and access data.

A USB drive can be added by connecting the drive to a USB port on the tablet PC or on an optional docking device. For information about connecting a USB drive, refer to [Chapter 10, “USB Devices.”](#)

An external MultiBay or MultiBay II supports any MultiBay or MultiBay II device, including the following:

- 1.44-megabyte diskette drive
- Hard drive module (a hard drive with an adapter attached)
- DVD-ROM Drive
- DVD/CD-RW Combo Drive
- DVD+RW/R and CD-RW Combo Drive
- DVD±RW/R and CD-RW Combo Drive

For more information about the external MultiBay, refer to the documentation that is included with the device.

Optional External Devices

The jacks and connectors described in this guide support standard external devices.

- For information about which jack or port to use, refer to the documentation included with the device.
- For information about installing or loading any software required by the device, such as drivers, refer to the documentation included with the device.

To connect a standard external device to the tablet PC:

1. If you are connecting a powered device, turn off the device.
2. Connect the device to the tablet PC.
3. If you are connecting a powered device, plug the device power cord into a grounded electrical outlet.
4. Turn on the device.

To disconnect a standard external device from the tablet PC, turn off the device, and then disconnect it from the tablet PC.

Optional External MultiBay and External MultiBay II

An external MultiBay or MultiBay II connects to the tablet PC USB port and enables you to use MultiBay and MultiBay II devices. The tablet PC provides one powered USB port on the right side. This port provides power to the external MultiBay when used with a powered USB cable. The USB ports on the rear panel and left side of the tablet PC do not provide power to the external MultiBay. External MultiBays connected to these USB ports must be connected to AC power.

What Is a PC Card?



CAUTION: If you install software or enablers provided by a PC Card manufacturer, you may not be able to use other PC Cards. If you are instructed by the documentation included with your PC Card to install device drivers:

- Install only the device drivers for your operating system.
- Do not install other software, such as card services, socket services, or enablers, that may also be supplied by the PC Card manufacturer.

A PC Card is a credit card-sized accessory designed to conform to the standard specifications of the Personal Computer Memory Card International Association (PCMCIA).

- The tablet PC supports 32-bit (CardBus) and 16-bit PC Cards.
- The tablet PC is equipped with one PC Card slot, and it supports one Type I card or one Type II card.
- Zoomed video PC Cards and 12-V PC Cards are *not* supported.

Insertion



CAUTION: To prevent damage to the connectors:

- Use minimal pressure when inserting a PC Card into a PC Card slot.
- Do not move or transport the tablet PC while a PC Card is operating.

1. Hold the PC Card label side up with the connector toward the tablet PC.
2. Gently slide the card into the slot until the card is seated. The operating system will issue a sound to indicate that a device has been detected.



Removal



CAUTION: To prevent loss of work or an unresponsive system, stop the PC Card before removing it.

1. Close all files and applications using the PC Card.
2. Stop the PC Card by selecting the Safely Remove Hardware icon on the taskbar, and then selecting the PC Card. (To display the Safely Remove Hardware icon, select **Show Hidden Icons** on the taskbar.)
3. Press the PC Card eject button **1**. This action extends the button into position for releasing the PC Card.
4. To release the PC Card, press the extended PC Card eject button.
5. Gently slide out the card **2**.



An inserted PC Card uses power even when not in use. To conserve power, stop or remove a PC Card when you are not using it.

Digital Memory Cards

What Is a Digital Memory Card?

Digital memory cards are removable thumbnail-sized flash storage devices that provide a convenient method of storing data and sharing it with other devices such as handheld devices, PDAs, cameras, and other SD PCs.



Secure Digital (SD) Memory Cards and MultiMediaCards are the only type of digital memory card formats that are supported.

Insertion



CAUTION: To prevent damage to the connectors:

- Use minimal pressure when inserting a digital memory card into a Digital Media Slot.
 - Do not move or transport the tablet PC while a digital memory card is operating.
-

To insert a digital memory card:

1. Insert the digital memory card into the Digital Media Slot.
2. Slide the card firmly into the slot until the card clicks into place.



Removal



CAUTION: To prevent loss of work or system lockup, stop the digital memory card before removing it.

To remove a digital memory card:

1. Close all files and applications that are using the digital memory card.
2. Stop the digital memory card by selecting the Safely Remove Hardware icon in the taskbar. Then select the digital memory card. (To display the Safely Remove Hardware icon, select **Show Hidden Icons** in the taskbar.)
3. Gently press in on the digital memory card **1** to unlock it.
4. Slide the digital memory card **2** from the slot.



Memory Modules

What Is a Memory Module?



WARNING: The 2 memory module compartments, the hard drive bay, and the battery bay are the only user-accessible internal compartments on the tablet PC. All other areas that require a tool to open should be opened only by a service partner.



WARNING: Failure to unplug the power cord and remove all battery packs before installing a memory module can damage the equipment and expose you to the risk of electric shock.



CAUTION: Electrostatic discharge (ESD) can damage electronic components. Before beginning any procedure, ensure that you are discharged of static electricity by touching a grounded metal object. For more information, refer to the *Regulatory and Safety Notices* guide.


The tablet PC has 2 memory module compartments. The primary memory module compartment is located under the keyboard. The expansion memory module compartment is located on the bottom of the tablet PC.

The memory capacity of the tablet PC can be upgraded by adding a memory module to the expansion slot or by upgrading the existing memory module in the primary memory module slot.


Expansion Memory Module Slot

To add or upgrade a memory module in the expansion memory module slot:


1. Shut down the tablet PC. (If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power switch toward the front of the tablet PC. Then shut down the tablet PC through the operating system.)
2. Disconnect all external devices connected to the tablet PC.
3. Disconnect the power cord.
4. Turn the tablet PC upside down.
5. Remove any battery packs from the tablet PC.
6. Loosen the memory module cover screws **1**.
7. Lift the memory module cover **2** away from the tablet PC.

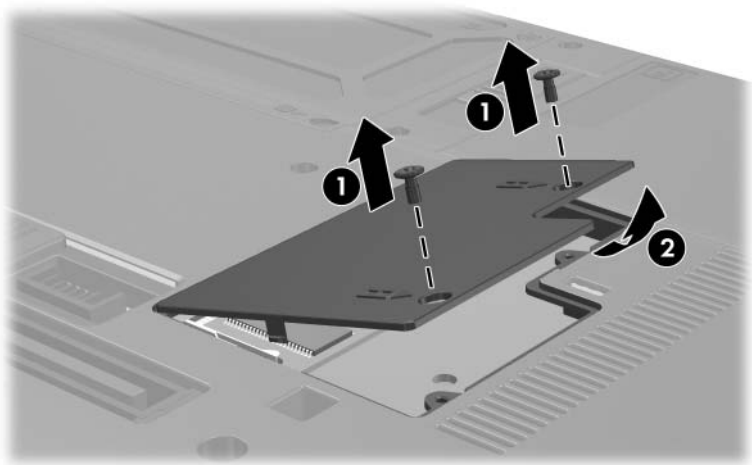


8. If there is a memory module in the memory module slot, remove it:
 - a. Pull away the retention clips ❶ on each side of the module. (The module tilts upward.)
 - b. Grasp the edges of the module ❷ and gently pull the module out of the memory module slot. To protect a memory module after removal, place it in an electrostatic-safe container.

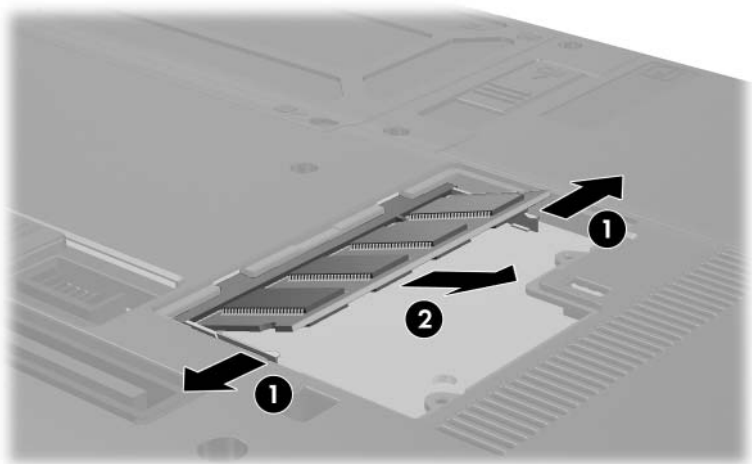

9. Insert the new memory module:
 - a. Align the keyed (notched) edge **1** of the module with the tabbed area in the memory module slot.
 - b. With the module at a 45-degree angle from the surface of the memory module compartment, press the memory module **2** into the memory module slot until it is seated.
 - c. Press the module downward **3** until the retention clips snap into place.

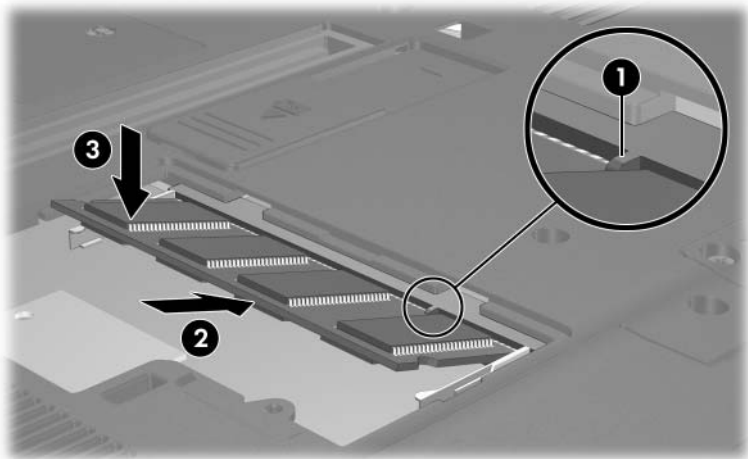

10. Replace the memory module cover **1** and the memory module cover screws **2**.

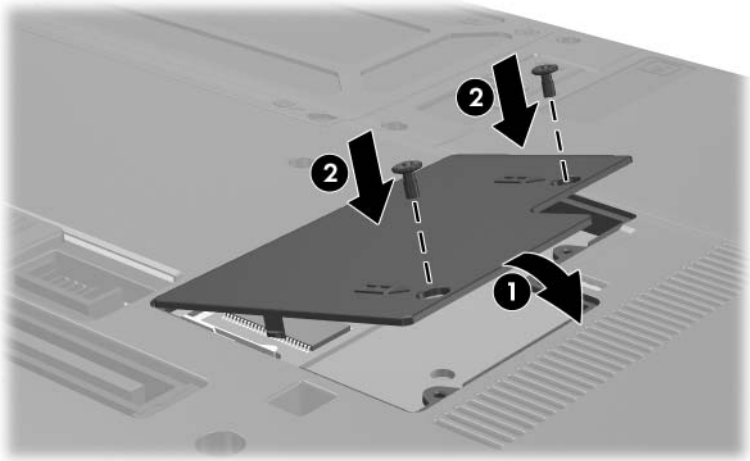


Primary Memory Module Slot


To replace the existing memory module in the primary memory module slot:

1. Shut down the tablet PC. (If you are not sure whether the tablet PC is off or in hibernation, turn on the tablet PC by sliding the power switch toward the front of the tablet PC. Then shut down the tablet PC through the operating system.)
2. Disconnect all external devices connected to the tablet PC.
3. Disconnect the power cord.
4. Turn the tablet PC upside down.
5. Remove any battery packs from the tablet PC.
6. Remove 11 screws from the bottom of the tablet PC: the four T8M2.0x18.0 screws **1**, the six T8M2.0x9.0 screws **2**, and one T8M2.0x5.0 screw **3**.


△ The screws in the bottom of the tablet PC are of different lengths. To protect the tablet PC, be sure to keep track of the screws by size and location for safe replacement.

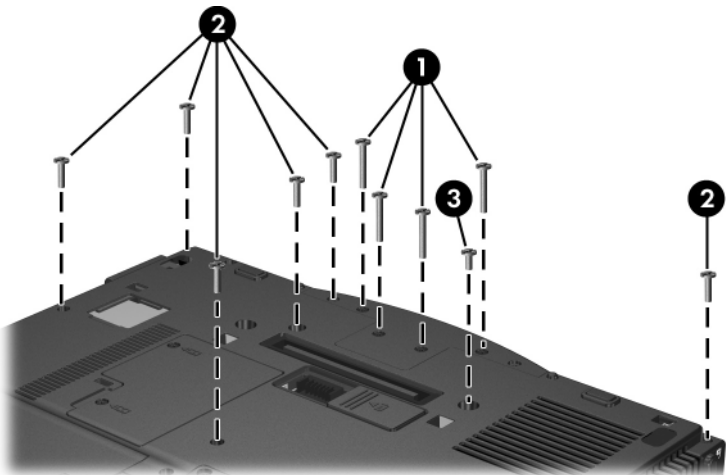

7. Remove the base enclosure cover.

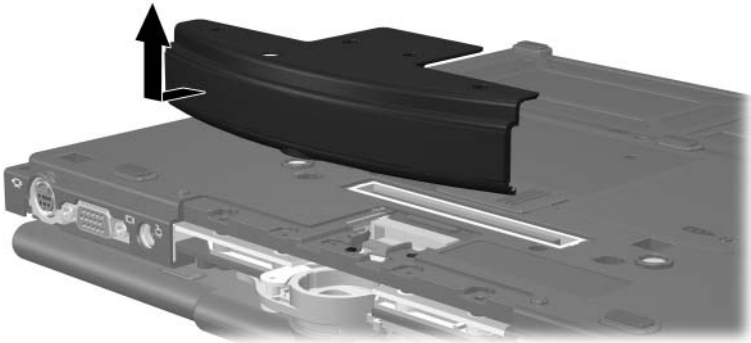

8. Turn the tablet PC display-side up with the front toward you and open it.
9. Lift up the right rear corner edge ❶ and then the left rear corner edge ❷ of the keyboard cover to release the rear edge of the cover from the tablet PC.
10. Tilt the keyboard cover up from the front edge ❸ to release the front edge of the cover from the tablet PC.

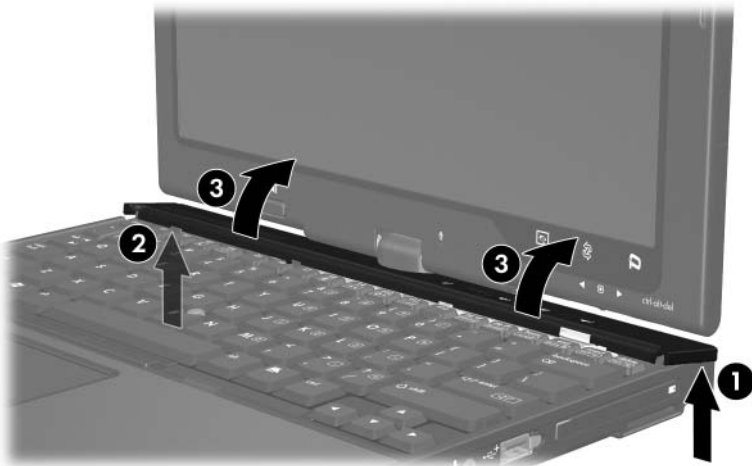


11. To remove the keyboard cover fully, swing the right edge of the cover toward the front of the tablet PC.




12. Turn the tablet PC display-side up and open it completely.
13. Lift the top edge of the keyboard ❶ slightly to release it from the tablet PC.
14. Lift the bottom edge of the keyboard ❷ slightly until the pointing stick cable ❸ is accessible.


△ The pointing stick cable is still attached to its Zero Insertion Force (ZIF) connector in the tablet PC. To protect the tablet PC, do not lift the keyboard more than about two inches.

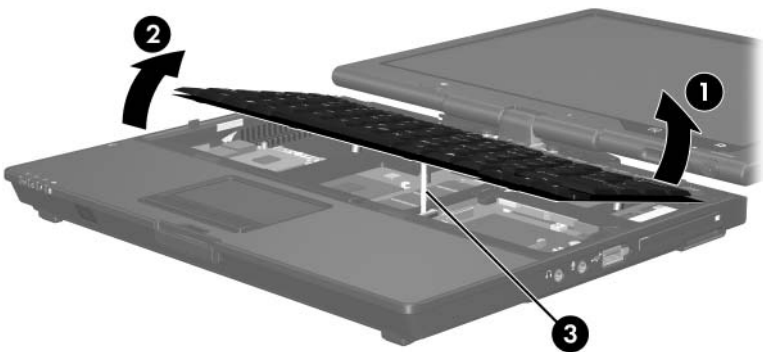


15. A collar **1** holds the pointing stick cable **2** in place. To release the cable, lift each end of the pointing stick connector collar **3**.

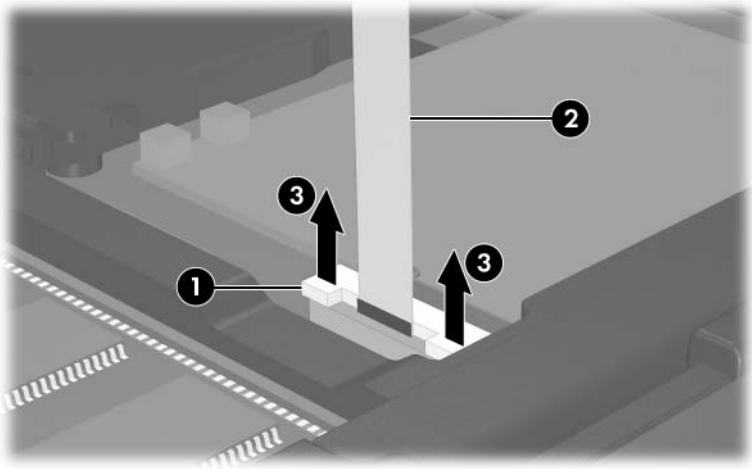


16. Remove the pointing stick cable from the pointing stick connector.

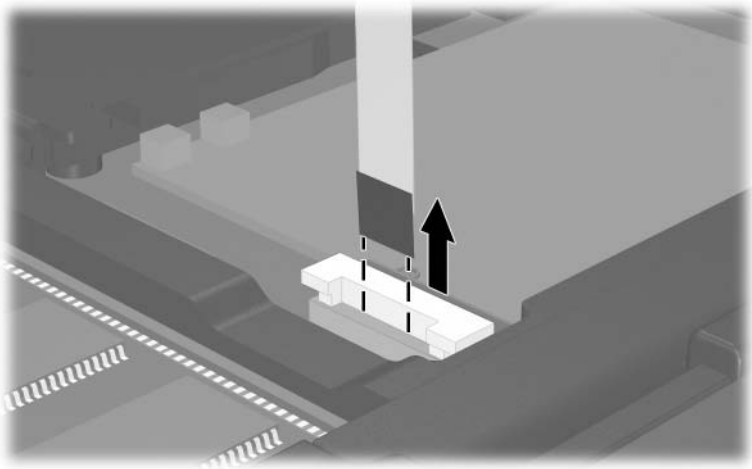

17. Open the tablet PC fully and tilt the keyboard up from the bottom so that it rests on the display of the tablet PC.

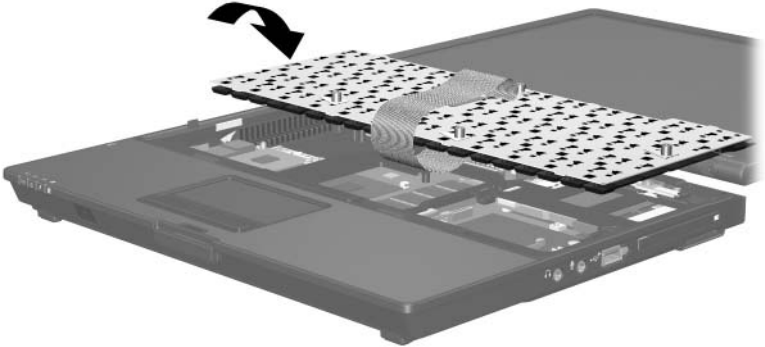


18. To remove the memory module from the memory module slot:
 - a. Pull the retention clips **1** away from each side of the module. (The module tilts upward when released.)
 - b. Lift the edge of the memory module **2**, and gently remove it from the slot.

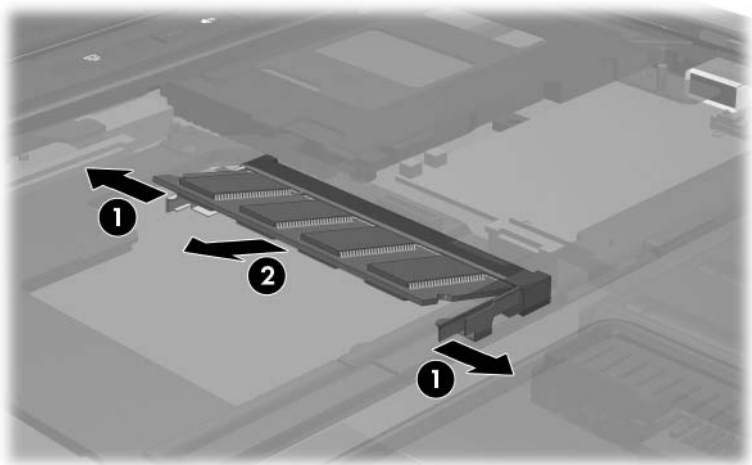


CAUTION: To protect a memory module after it has been removed, place it in a static-safe container.


19. To insert a new memory module into the memory module slot:
 - a. Align the keyed (notched) edge **1** of the module with the tab in the expansion slot.
 - b. Press the module into the slot **2** from a 45-degree angle until it is seated.
 - c. Press the module **3** downward until the retention clips snap into place.

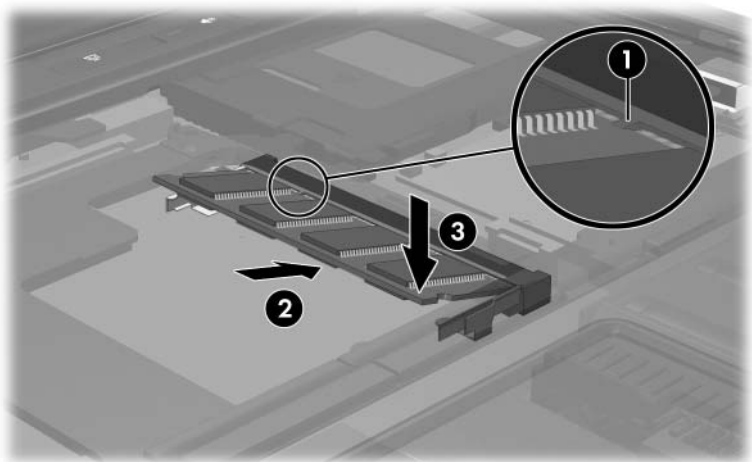

20. Replace the pointing stick cable in the Zero Insertion Force (ZIF) pointing stick connector.

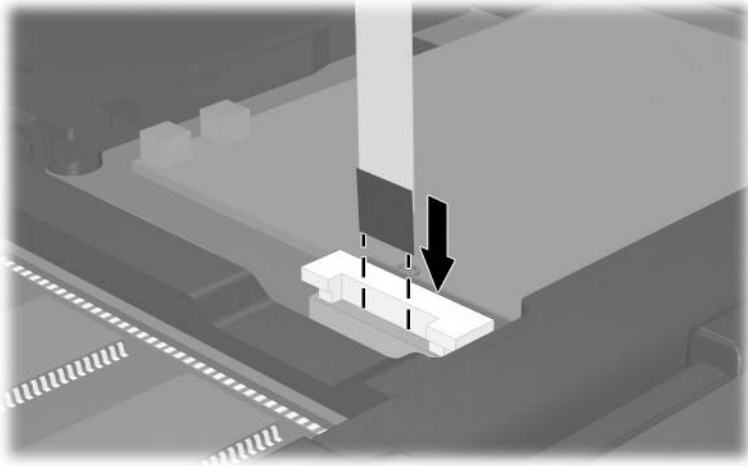

21. Press down on the two ends of the pointing stick connector collar until the cable is securely held in place.

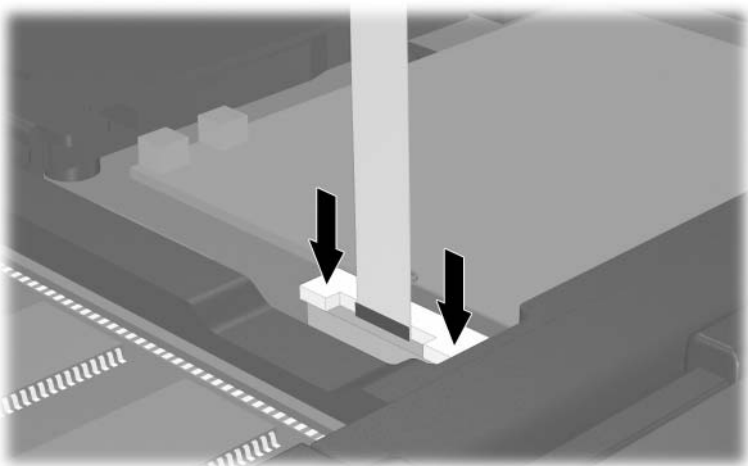

22. Replace the keyboard.
23. Replace the keyboard cover on the tablet PC by reversing the steps for removing the cover. (Reseat the left side of the cover first, and then reseat the right side. Press along the front edge of the keyboard cover to snap the cover into place.)
24. Replace the base enclosure cover.
25. Replace the screws on the bottom of the tablet PC.



CAUTION: The screws on the bottom of the tablet PC are of different lengths. To protect the tablet PC, be sure to replace the screws in the locations noted during removal.

26. Replace the battery pack(s).
27. Reconnect external power and external devices.
28. Restart the tablet PC.

Hibernation File

When random access memory (RAM) increases, the operating system increases the hard drive space reserved for the hibernation file.

If you experience problems with hibernation after increasing RAM, verify that your hard drive has enough free space to accommodate a larger hibernation file.

- To display the amount of RAM in the system:
 - ❑ Select **Start > Control Panel > Performance and Maintenance > System > General** tab.
 - or –
 - ❑ Press **fn+esc**.
- To display the amount of free space on your hard drive, select **Start > My Computer**. Then select your hard drive. Information about the space on the drive is displayed in the **Details** window on the left-side of the window.
- To display the amount of space required by the hibernation file, select **Start > Control Panel > Performance and Maintenance > Power Options > Hibernate** tab.


What Is USB?

Universal Serial Bus (USB) is a hardware interface that can be used to connect external devices such as a USB keyboard, mouse, drive, printer, scanner, or hub to the tablet PC. The tablet PC has three standard USB connectors that support USB-2.0 and USB-1.1 devices.

A USB device functions in the same way as a comparable non-USB device, with one exception. By default, USB devices do not function unless an operating system that supports USB is installed in the tablet PC.

Some USB devices may require additional support software, which is usually included with the device. For more information and software installation instructions, refer to the documentation included with the device.

USB Device Connection

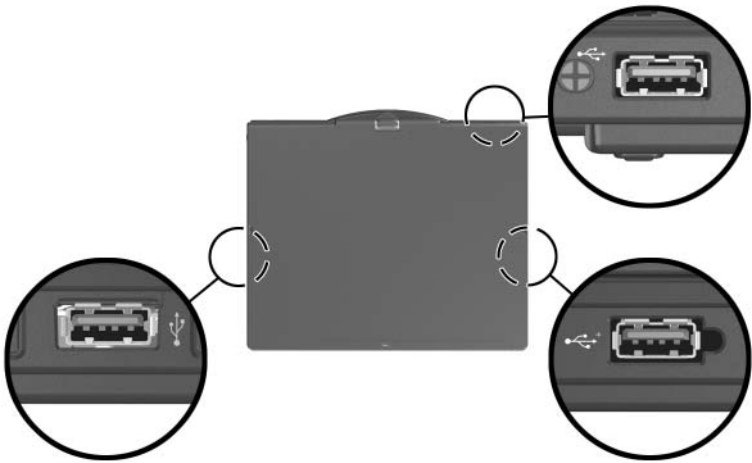

USB hubs can be connected to a USB connector on the tablet PC, or on an optional docking device, or to other USB devices. Hubs support varying numbers of USB devices and are used to increase the number of USB devices in the system. Powered hubs must be connected to external power. Unpowered hubs must be connected either to a USB connector on the tablet PC or to a port on a powered hub.

Operating System and Software

A USB device functions in the same way as a comparable non-USB device, with one exception. By default, USB devices do not function unless an operating system that supports USB is installed in the tablet PC.

Some USB devices may require additional support software, which is usually included with the device. For more information and software installation instructions, refer to the documentation included with the device.

USB Legacy Support

You must enable USB legacy support to

- Use a USB keyboard, mouse, or hub connected to a USB connector on the tablet PC during startup or in a non-Windows application or utility.
- Restart from an optional external MultiBay.

To enable USB legacy support:

1. Turn on or restart the tablet PC.
2. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
3. Select **Advanced > Device Options**.
4. Select **Enable USB legacy support**.
5. To save your preference and exit Computer Setup, select **File > Save changes and exit**, and then follow the instructions on the screen.

Modem and Networking


Internal Modem

Modem Cable



WARNING: Connecting the tablet PC to a digital line can permanently damage the modem. Immediately disconnect your modem cable if you accidentally connect it to a digital line.

A modem cable, which has a 6-pin RJ-11 connector at each end, must be connected to an analog telephone line. In some countries, a country-specific modem adapter is required. Jacks for digital PBX systems may resemble analog telephone jacks, but they are not compatible with the modem.

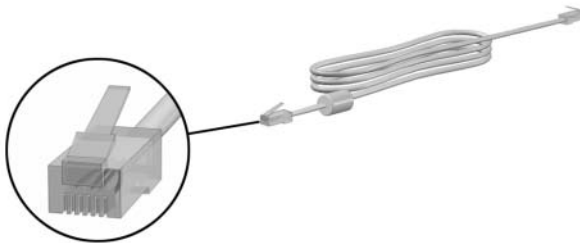


Using the Modem Cable

To connect a modem cable:



WARNING: To avoid the risk of electrical shock, fire, or damage to the equipment, do not plug a modem cable into a network jack.

1. Turn the tablet PC display-side up on a flat surface near a telephone wall jack.
2. If the modem cable has a noise suppression circuitry **1**, which prevents interference with TV and radio reception, orient the circuitry end of the cable toward the tablet PC.
3. Plug the modem cable into the RJ-11 (modem) jack **2** on the tablet PC.
4. Plug the other end of the modem cable into an RJ-11 telephone jack **3**.

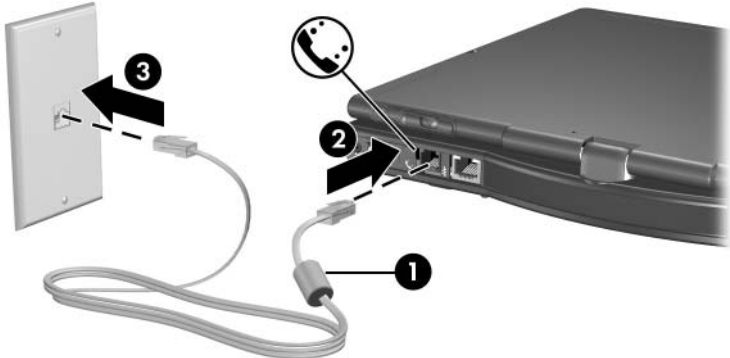

For more information about using the modem or about using AT commands and dial modifiers, refer to the [“Modem Country Selection”](#) section or the *Modem Command Guidelines (Advanced Users Only)* provided in English.

Using a Country-Specific Modem Cable Adapter


Telephone jacks vary by region and country. If you are connecting the modem to a telephone line in a region or country where RJ-11 telephone jacks are not standard, you must obtain a country-specific modem adapter. Refer to the “[Modem Country Selection](#)” section for more details about using your tablet PC internationally.

To connect the modem to an analog telephone line that does *not* have an RJ-11 telephone jack:



WARNING: To avoid the risk of electrical shock, fire, or damage to the equipment, do not plug a modem cable into the network jack.

1. Turn the tablet PC display-side up on a flat surface near a telephone wall jack.
2. If the modem cable has a noise suppression circuitry ❶, which prevents interference with TV and radio reception, orient the circuitry end of the cable toward the tablet PC.
3. Plug the modem cable into the RJ-11 (modem) jack ❷ on the tablet PC.
4. Plug the modem cable ❸ into the country-specific modem cable adapter.
5. Plug the country-specific modem cable adapter ❹ into the telephone jack.

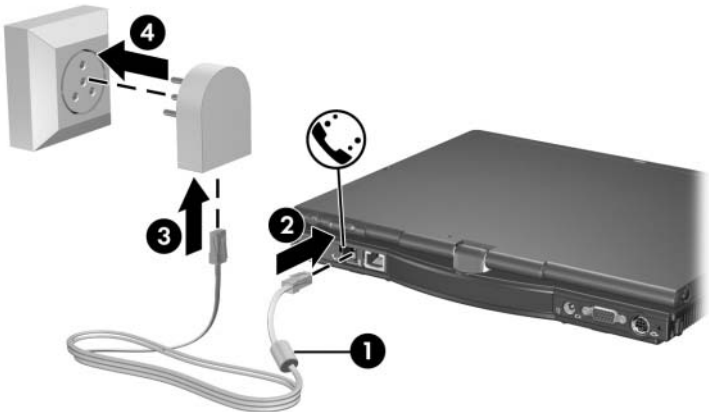

Modem Country Selection

Viewing the Current Country Selection

To see the current country setting for your modem:

1. Select **Start > Control Panel > Date, Time, Language, and Regional Options > Regional & Language Options**.
2. Under Location, view your present location.

Adding New Locations When Traveling

The internal modem is configured to meet only the operating standards in the country where you purchased the tablet PC. When traveling internationally, you can add new location configurations that comply with standards in other countries.



CAUTION: Do not delete your current modem country settings. To enable modem use in other countries while preserving your home country configuration, add a new configuration for each location in which you will use the modem.


The drop-down lists described below may include countries not supported by the modem. Unless you select a supported country, the country selection will default to USA or UK.




CAUTION: Selecting a country other than the one in which the computer is located may cause your modem to be configured in a way that violates the telecommunications regulations/laws of that country. In addition, your modem may not function properly if the correct country selection is not made.

To add a new country location:

1. Select **Start > Control Panel > Network and Internet Connections > Phone and Modem Options > Dialing Rules** tab.

 The first time you select the **Dialing Rules** tab, you will be prompted to enter your area code information in the **Local Information** window.

2. Select the **New** button and assign a name (home, work, etc.).
3. Select the **Country/Region** from the drop-down list.

 The drop-down list may include countries not supported by the modem. Unless you select a supported country, the country selection will default to USA or UK.

4. Select **OK > OK**.

Solving Travel Connection Problems

If you experience connection problems while using the modem outside your home country, the following suggestions may help:


■ Check the telephone line type

The modem requires an analog, not a digital, telephone line. A line described as a PBX line is usually a digital line. A telephone line described as a data line, fax machine line, modem line, or standard telephone line is probably an analog line.

■ **Check for tone or pulse dialing settings**

Dial a few digits on the telephone and listen for clicks (pulses) or tones. Then:

1. Select **Start > Control Panel > Network and Internet Connections > Phone and Modem Options > Dialing Rules** tab.

 The first time you select the **Dialing Rules** tab, you will be prompted to enter your area code information in the **Local Information** window.

2. Select your location, and then select **Edit**.
3. Select either **Tone** or **Pulse** depending on what you heard on the line.
4. Select **OK > OK**.

■ **Check the telephone number you are dialing and the response of the remote modem**

Dial the telephone number on the telephone, wait for the remote modem to answer, and then hang up.

■ **Set the modem to ignore dial tones**

If the modem receives a dial tone it does not recognize, it will not dial and will display a No Dial Tone error message. Use the following procedures to set the modem to ignore all dial tones before dialing:

1. Select **Start > Control Panel > Network and Internet Connections > Phone and Modem Options > Modems** tab.
2. Select your modem > **Properties > Modem** tab.
3. Clear the **Wait for dial tone before dialing** check box.

4. If you continue to receive the “No Dial Tone” error message after clearing the check box:
 - a. Select **Start > Control Panel > Network and Internet Connections > Phone and Modem Options > Dialing Rules** tab.



The first time you select the **Dialing Rules** tab, you will be prompted to enter your area code information in the **Local Information** window.

- b. Select your location and then select **Edit**.
- c. Select the country/region from the drop-down list.
- d. Select **Apply > OK**.
- e. Select the **Modems** tab.
- f. Select your modem and then select **Properties**.
- g. Clear the **Wait for dial tone before dialing** check box.


Preinstalled Communication Software

To use preinstalled modem software for terminal emulation and data transfer, follow these steps:

1. Select **Start > All Programs > Accessories > Communications**.
2. Select the appropriate fax or terminal emulation program or Internet connection wizard.


Network

A network cable has an 8-pin RJ-45 connector at each end.

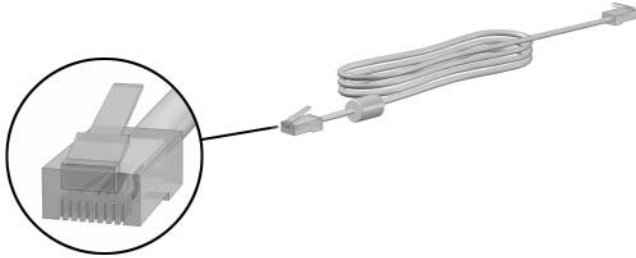

To connect the network cable:

1. Turn the tablet PC display-side up on a flat surface near a network jack.
2. If the network cable has a noise suppression circuitry ❶, which prevents interference with TV and radio reception, orient the circuitry end of the cable toward the tablet PC.
3. Plug the network cable into the RJ-45 (network) jack ❷ on the tablet PC.
4. Plug the other end of the cable into a network jack ❸.

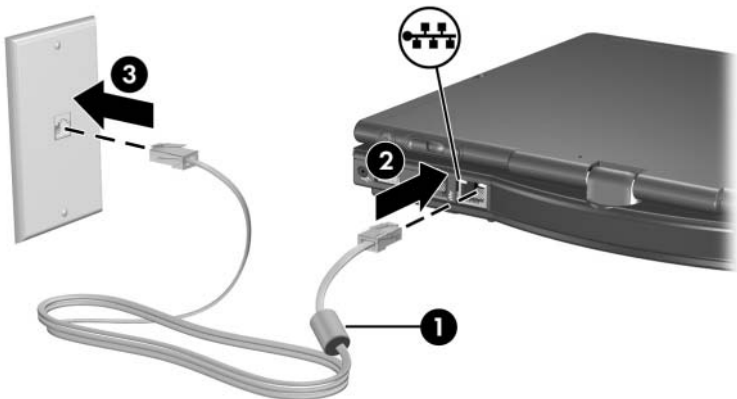

Your tablet PC is equipped with LAN Power Save mode, which enables you to conserve battery power. LAN Power Save mode turns off the LAN device when the tablet PC is not connected to external power and the network cable is disconnected. For more information, refer to [“Using LAN Power Save Mode”](#) in [Chapter 2, “Power.”](#)

Q Menu Software

Q Menu

The Q Menu provides quick access to many of the system tasks accessed with the buttons, keys, or hot keys found on most tablet PCs.

You can program the Q Menu to access alternative system tasks or to access any item on a drive, a network, or the Internet.

Identifying Q Menu Controls


The jog dial ❶ and the Q Menu button ❷ are used in Q Menu procedures.



Displaying and Closing the Q Menu

The Q Menu can be displayed or closed at any time by using any of the following procedures:

- To display the Q Menu, press the Q button or select the Q icon in the notification area (at the far right of the taskbar).

 Only the system administrator can update this option.

If the Q icon is not displayed in the notification area (at the far right of the taskbar):

1. Press the Q button.
2. Select **Q Menu Settings**.
3. Select the **Display Q Menu Icon On System Tray** check box.
4. Select **OK**.

If the icon is not displayed, select **Show Hidden Icons** in the notification area (at the far right of the taskbar).

- To close the Q Menu, press the Q button or select anywhere outside of the Q Menu.

For information about setting a pen-activated button to open and close the Q Menu, refer to [Chapter 4, “Pen and Command Controls.”](#)

Selecting an Item from the Q Menu

The items on the Q Menu can be selected with the jog dial, the pen, an external mouse, or the pointing devices.

To select an item with the jog dial, rotate the jog dial upward or downward to scroll vertically through the items, and then press the jog dial inward to select an item.

Obtaining Information About System-Defined Items

To display a description of a system-defined Q Menu item or to test any Q Menu item by executing the item command:

1. Press the Q button or select the Q icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. On the Items to Display On Q Menu list:
 - ❑ To display a description of a system-defined item, select the item. User-defined items are not described.
 - ❑ To test any item by executing the item command, select the item, and then select **Execute**. If an item is not available to test, the Execute button will be unavailable.

Procedures for using all system-defined items are provided in the “[Using a System-Defined Item](#)” section, later in this chapter.

Setting Q Menu Preferences

The Q Menu can display up to 40 items. Several system-defined items are displayed by default. Additional system-defined and user-defined items can be added. All items, including the default items, can be removed.

The items on the Q Menu are managed from the Items to Display On Q Menu list.

Accessing the Items to Display on Q Menu List

The Items to Display on Q Menu list can be accessed at any time by using either of the following procedures:

- Press the Q button or select the Q icon in the notification area (at the far right of the taskbar), and then select **Q Menu Settings**.
- Select **Start > Control Panel > Other Control Panel Options > Q Menu Settings**.

Removing a Q Menu Item

To remove an item from the Q Menu:

1. Press the Q button or select the Q icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. On the Items to Display On Q Menu list, clear the check box for the item you want to remove.
4. Select **Apply > OK**.

Adding a Q Menu Item

An item must be displayed on the Items to Display On Q Menu list before it can be added to the Q Menu.

The Q Menu and the Items to Display on Q Menu list can include no more than 40 items. If the list currently contains 40 items, the Add button is unavailable. If the Add button is unavailable, you must remove a listed item before you can add the new item.

Adding a Listed Item to the Q Menu

To add an item from the Items to Display On Q Menu list to the Q Menu:

1. Press the Q button or select the Q icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select the check box for the item you want to add.
4. Select **OK**.

To display the Q Menu after adding the item:

- » Press the Q button or select the Q icon in the notification area (at the far right of the taskbar).

Adding an Unlisted Item to the Q Menu

To add an item to both the Items to Display on Q Menu list and to the Q Menu when it is not on the Items to Display on Q Menu list—for example, an item on a drive, network, or the Internet:

1. Press the **Q** button or select the **Q** icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select **Add**.
4. In the **Add New Menu Entry** window, you can add the item by typing or by browsing:
 - ❑ To add the item using the keyboard, type a name for the item in the **Display Name** field and type the path to the item in the **File Name** field. If you prefer to type the Display Name, but browse for the File Name, leave the **File Name** field blank.
 - ❑ To add an item by browsing, select the **Browse** button next to the **File Name** field.
 - ❑ In the window, select the item. (The full name of the item is displayed in the **File Name** field and, if you did not type a name earlier in the **Display Name** field, a Display Name is generated from the item name and displayed in the **Display Name** field.)
5. To confirm your preference(s) and close the window, select **Apply > OK**.

To display the Q Menu after adding the item:

- » Press the **Q** button or select the **Q** icon in the notification area (at the far right of the taskbar).

Changing a User-Defined Item

User-defined items can be changed, but system-defined items cannot be changed. If you select a system-defined item on the Items To Display on Q Menu list, the Modify button is unavailable.

To change the Display Name and/or File Name of a user-defined item:

1. Press the Q button or select the **Q** icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select the item on the Items To Display On Q Menu list.
4. Select **Modify**.
 - To change the Display Name or File Name of the item using the keyboard, type the new name for the item in the **Display Name** field or type the new path to the item in the **File Name** field. If you prefer to type the Display Name, but browse for the File Name, leave the **File Name** field blank.
 - To change the Display Name or File Name by browsing, select the **Browse** button beside the **File Name** field.
 - In the window, select the item. (The full name of the item is displayed in the **File Name** field and, if you did not type a name earlier in the **Display Name** field, a Display Name is generated from the item name and displayed in the **Display Name** field.)
5. To confirm your preference(s), select **Apply > OK**.
6. To close the **Q Menu Settings** window, select **OK**.

To display the Q Menu after changing a Display and/or File Name:

- » Press the Q button or select the **Q** icon in the notification area (at the far right of the taskbar).

Repositioning a Q Menu Item

To change the location of an item on the Q Menu:

1. Press the Q button or select the Q icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select the item on the Items to Display On Q Menu list. Then
 - To move the item upward, select the **Move Up** button.
 - To move the item downward, select the **Move Down** button.
4. To confirm your preference(s) and close the **Q Menu Settings** window, select **Apply > OK**.

Removing an Item from the Items to Display on Q Menu List

System-defined items cannot be removed from the Items to Display on Q Menu List. To remove a user-defined item:

1. Press the Q button or select the Q icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select the item you want to remove.
4. Select **Remove**.
5. To confirm your preference(s) and close the **Q Menu Settings** window, select **Apply > OK**.

Enabling Automatic Mode Change

Enabling automatic mode change allows the Q Menu software to adjust the display orientation automatically. If you disable this option, the orientation of the display will need to be manually changed.



Only the system administrator can update this option.

To enable automatic mode change:

1. Press the Q button or select the **Q** icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select the **Enable Automatic Mode Change** check box.

Allowing All Users to Configure Q Menu

This option allows all user accounts to reconfigure Q Menu. When selected, each user on the system will have their own Q Menu settings. Changes to the Q Menu settings are applied to that user.



This option is only available to users with administrative privileges.

To allow users to configure Q Menu:

1. Press the Q button or select the **Q** icon in the notification area (at the far right of the taskbar).
2. Select **Q Menu Settings**.
3. Select the **Allow All Users to Configure Q Menu** check box.

Using a System-Defined Item

As shipped, the Q Menu displays only the items identified below as *default*. All the items described below can be added or removed from the Q Menu. For instructions, refer to “[Setting Q Menu Preferences](#),” earlier in this chapter.

Brightness (Default)

Select **Brightness** to display a pop-up window that enables you to adjust screen brightness with the jog dial. After selecting your preferences, select **OK** in the pop-up window.

Volume (Default)

Select **Volume** to display the operating system volume control window.

Mute On/Off (Default)

If system volume is on, select **Mute On/Off** to mute system volume. If system volume is muted, select **Mute On/Off** to restore system volume.

Capture Screen

Select **Capture Screen** to copy the image currently displayed on the tablet PC screen to the Windows clipboard.

To save or print the image, open an application which supports a screen image, such as Microsoft Word or Microsoft Paint, and then paste the image.

For example, to copy the screen image into a Word document:

1. Select **Capture Screen**.
2. Open Word.
3. Place the pointer in the document where you want to paste the image.
4. On the Word menu bar, select **Edit > Paste**.

Capture Window

Select **Capture Window** to copy the image of the currently active window on the tablet PC screen to the Windows clipboard.

To save or print the image, open an application which supports a screen image, such as Microsoft Word or Microsoft Paint, and then paste the image.

For example, to copy the an image of the currently active window into a Word document:

1. Select **Capture Window**.
2. Open Word.
3. Place the pointer in the document where you want to paste the image.
4. On the Word menu bar, select **Edit > Paste**.

Tablet Display (Default)

When an optional display device, such as an external monitor or projector, is connected to the external monitor connector on the tablet PC:

To display the image only on the tablet PC:

- » Select **Tablet Display**.




Selecting **Tablet Display** turns off the Extended Desktop option.

External Display

When an optional display device, such as an external monitor or projector, is connected to the external monitor connector on the tablet PC:

To display the image only on the display device:

- » Select **External Display**.


 Selecting **External Display** turns off the Extended Desktop option.

Dual Display (Default)

When an optional display device, such as an external monitor or projector, is connected to the external monitor connector on the tablet PC:

To display the image on the tablet PC and the display device:

- » Select **Dual Display**.

 Selecting **Dual Display** turns off the Extended Desktop option.

Extended Desktop

The Extended Desktop option extends the display from the tablet PC screen onto the external monitor screen. For example, you could use the Extended Desktop item to display an entire spreadsheet. The left side columns could be displayed on the tablet PC screen and the right side columns could be displayed on the external monitor.



The Extended Desktop option is *not* supported when the tablet PC is in tablet PC mode.

To turn on the Extended Desktop option:

- » Select **Extended Desktop**.

To turn off the Extended Desktop option:

1. Press the Q button.
2. Select **Tablet Display**, **External Display**, or **Dual Display**.

Presentation Mode On/Off (Default)



CAUTION: Presentation mode is integrated with the Q Menu and Quick Launch Button software. If this software is uninstalled or disabled, Presentation mode will not function.

Presentation mode provides the optimal configuration for displaying a presentation, such as a Microsoft PowerPoint presentation, on a projector or external monitor while displaying speaker's notes on the tablet PC.

To apply or reapply Presentation mode:

- » Select **Presentation Mode On.**

To close Presentation mode:

- » Select **Presentation Mode Off.**

For additional information about Presentation mode, refer to the [“Using Presentation Mode”](#) section in [Chapter 3, “Pointing Devices and Keyboard.”](#)

Portrait-Primary (Default)

To switch the image clockwise to portrait view from landscape view:

- » Select **Portrait-Primary.**

Landscape-Primary (Default)

To switch the image clockwise to landscape view from portrait view:

- » Select **Landscape-Primary.**

Portrait-Secondary

To switch the image counterclockwise to portrait view from landscape view:

- » Select **Portrait-Secondary.**

The default Portrait-Primary item switches the image clockwise to portrait view. Left-handed users may find the Portrait-Secondary item, which switches the image counterclockwise to portrait view, more convenient.



HP recommends that you not use the Portrait-Secondary view while using the internal wireless. The positions commonly occupied by the tablet PC, external devices, and the user while the tablet PC is in the Portrait-Secondary view may obstruct the antennae.

For exact antennae locations, refer to [Chapter 1, “Component ID.”](#)

Landscape-Secondary

To switch the image counterclockwise to landscape view from portrait view:

- » Select **Landscape-Secondary**.

The default Landscape-Primary item switches the image clockwise to landscape view. Left-handed users may prefer to use the Landscape-Secondary item, which switches the image counterclockwise to landscape view.



HP recommends that you not use the Landscape-Secondary view while using the internal wireless. The positions commonly occupied by the tablet PC, external devices, and the user while the tablet PC is in the Landscape-Secondary view may obstruct the antennae.

For exact antennae locations, refer to [Chapter 1, “Component ID.”](#)

Standby

To initiate standby:

- » Select **Standby**.

Hibernate

To initiate hibernation if hibernation is enabled:

- » Select **Hibernate**.



Hibernation is enabled by default. If hibernation is not enabled, selecting **Hibernate** initiates standby.

To verify that hibernation is enabled:

- » Select **Start > Control Panel > Performance and Maintenance > Power Options > Hibernate** tab.

If hibernation is enabled, the **Enable Hibernation** check box is selected.

Shut Down

To immediately close the operating system and shut down the system:

- » Select **Shut Down**. You are not prompted to confirm this action.

Power Controls

To open the operating system **Power Options Properties** window:

- » Select **Power Control**.

Tablet PC Settings (Default)

To open the operating system **Tablet and Pen Settings** window:

- » Select **Tablet PC Settings**.

Q Menu Settings (Default)

To open the **Q Menu Settings** window:

- » Select **Q Menu Settings**.

Tablet PC Button Driver

The tablet PC button driver allows you to customize the pen-activated buttons and jog dial. You can program the buttons to perform various functions or open specific programs. Each button can be programmed to perform a different function for each orientation, or to perform the same function for all orientations.

To customize a tablet PC button:

1. Press the Q button or select the **Q** icon in the notification area (at the far right of the taskbar).
2. Select **Tablet PC Settings > Tablet Buttons**.
3. Select the orientation for which you want to program the button.
4. Select the button you want to program from the Tablet Button column. The button is displayed in the Button location and Detailed view areas of the Tablet Buttons tab.
5. To change the action associated with the button, select **Change**. (The **Change Tablet Button Actions** dialog box is displayed.)
6. In the Action drop-down box, select the action that you want the button to perform.
7. Select **OK**.
8. Select **Apply > OK** on the **Tablet and Pen Settings** dialog box.



CAUTION: The tablet PC button driver is integrated with the Q Menu software. If the Q Menu software is uninstalled or disabled, the button driver will not function.

Wireless (Select Models Only)

If your tablet PC is equipped with an integrated wireless device such as an 802.11 or a Bluetooth wireless device, you have a wireless tablet PC.

- An 802.11 wireless tablet PC can connect to wireless networks in corporate offices, your home, and public places. Wireless networks include wireless local area networks (WLANs) or “hotspots.” Hotspots are wireless access points available in public places such as airports, restaurants, coffee shops, hotels, and universities.
- A Bluetooth wireless tablet PC can connect to other Bluetooth wireless-enabled devices using a wireless personal area network (PAN).

Your tablet PC has a button that can be used to enable and disable 802.11 and Bluetooth wireless devices and an associated light to indicate the state of the wireless devices. The following illustration shows the wireless button **1** and light **2**.



In addition to the wireless button and light, your tablet PC has software controls that enable you to turn on, turn off, enable, and disable your wireless devices. The following table explains the software controls.

Wireless Control	Description
Wireless Assistant	Is a software utility that enables you to turn on and off 802.11 and Bluetooth wireless devices individually. For more information on using Wireless Assistant, refer to the “Device Power States” section in this chapter.
Computer Setup controls	Enable and disable 802.11 and Bluetooth wireless devices in Computer Setup. For more information about using Computer Setup to control 802.11 and Bluetooth wireless devices, refer to Chapter 15, “Computer Setup.”

Wireless Local Area Network Device (Select Models Only)

With an 802.11 wireless device, you can access a wireless local area network (WLAN), which is composed of other computers and accessories linked by a wireless router or a wireless access point.

- A large scale WLAN, such as a corporate WLAN or public WLAN hotspot, typically use wireless access points that can handle a large number of computers and accessories and can separate critical network functions.
- A home or small office WLAN typically uses a wireless router, which enables several wireless and wired computers to share an Internet connection, a printer, and files without additional pieces of hardware or software. *Wireless access point* and *wireless router* are often used interchangeably.

Tablet PCs with 802.11 WLAN devices may support one or more of 3 IEEE physical layer standards:

- 802.11a
- 802.11b
- 802.11g

There are 3 popular implementations of WLAN adapters:

- 802.11b only
- 802.11b/g
- 802.11a/b/g

802.11b, the first popular WLAN standard, supports data rates of up to 11 Mbps and operates at a frequency of 2.4 GHz. 802.11g, which came later, also operates at 2.4 GHz but supports data rates of up to 54 Mbps. An 802.11g WLAN device is backward compatible with 802.11b devices, so they can operate on the same network. 802.11a supports data rates of up to 54 Mbps but operates at a frequency of 5 GHz. 802.11a is not compatible with 802.11b and 802.11g. For information on identifying the type of device in your tablet PC, refer to the “[Identifying a WLAN Device](#)” section in this chapter.

Connecting Your Wireless Tablet PC to a Corporate WLAN

Contact your network administrator or IT department for information on connecting your tablet PC to your corporate WLAN.

Connecting Your Wireless Tablet PC to a Public WLAN


Contact your ISP or search the Web for a list of public WLANs near you. Web sites that list public WLANs include Cisco Hotspot Locator, Hotspotlist, and Geektools.

When you are within range of a public WLAN, a Wireless Network Connection interactive message is displayed at the bottom of the screen. Check with each public WLAN location for cost and connection requirements.

Setting Up a WLAN in Your Home

To set up a WLAN and connect to the Internet in your home, you need the following equipment. The illustration below shows an example of a completed wireless network installation that is connected to the Internet. This wireless network includes

- An optional broadband modem (either DSL or cable) and high-speed Internet service purchased from an Internet service provider (ISP) ❶.
- An optional wireless router (purchased separately) ❷.
- Your wireless tablet PC ❸.

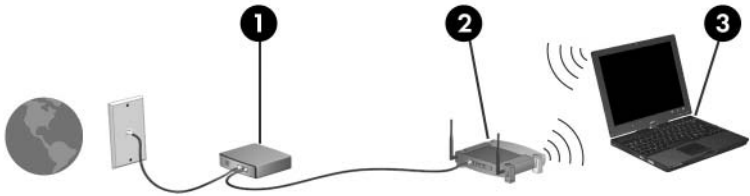


As this network grows, additional wireless and wired computers can be connected to the network to access the Internet.



If you need technical assistance to install your WLAN, contact the router manufacturer or your ISP.

Using a WLAN Connection

To use a WLAN connection:

- Verify that all drivers required by the 802.11 wireless device are installed and that the 802.11 wireless device is correctly configured.
 -  If you are using an integrated 802.11 wireless device, all required drivers are installed and the adapter is preconfigured and ready for use.
- If you are using an integrated 802.11 wireless device, verify that the 802.11 wireless device is turned on. When the 802.11 wireless device is turned on, the wireless light is turned on. If the wireless light is off, turn on the 802.11 wireless device. Refer to the “[Device Power States](#)” section.
- For your home WLAN, verify that your router is correctly configured. For instructions, refer to your router documentation.



Functional range for subsequent WLAN connections vary, depending on your tablet PC WLAN implementation, router manufacturer, and interference from varying types of walls and other electronic devices.

For more information about using a WLAN connection:

- Refer to information from your ISP and the documentation included with your wireless router and other WLAN equipment.
- Access the information and Web site links provided at **Start > Help and Support**.
- Refer to the documentation included with your tablet PC. The *Troubleshooting* guide contains a section about wireless LAN device problems and resolutions.

Using Wireless Security Features

When you set up your own WLAN or access an existing WLAN, always ensure that security features are protecting the WLAN. If you do not enable security on your WLAN, an unauthorized wireless user can access your tablet PC data and use your Internet connection without your knowledge.

The most common security levels are Wi-Fi Protected Access (WPA)-Personal and Wired Equivalent Privacy (WEP). In addition to enabling WPA-Personal or WEP security encryption on the router, you may want to use one or more of the following security measures:

- Change the default network name (SSID) and password.
- Use a firewall.
- Set security on your Web browser.
- Enable MAC address filtering on the router.

For more information about WLAN security, refer to the HP Web site at <http://www.hp.com/go/wireless> for details.

Installing Wireless Software (Optional)

Microsoft Windows XP uses its Zero Client Configuration feature to support WLAN configuration. HP provides a separate WLAN configuration utility that must be installed if you plan to use Cisco Compatible Extensions. Cisco Compatible Extensions enable wireless devices to use Cisco-based WLANs.

Identifying a WLAN Device

To install HP WLAN software for an integrated 802.11 wireless device, you need to know the name of the integrated 802.11 wireless device on your tablet PC. To identify an integrated 802.11 wireless device:

1. Display the names of all the 802.11 wireless devices on your tablet PC:
 - a. Select **Start > My Computer**.
 - b. Right-click in the My Computer window.
 - c. Select **Properties > Hardware tab > Device Manager > Network Adapters**.
2. Identify the 802.11 wireless device from the list that is displayed:
 - ❑ The listing for an 802.11 wireless device includes the term *wireless LAN*, *WLAN*, or *802.11*.
 - ❑ If no 802.11 wireless device is listed, either your tablet PC does not have an integrated 802.11 wireless device, or the driver for the 802.11 wireless device is not properly installed.

Accessing WLAN Software and Documentation

Your WLAN software is preloaded on your tablet PC and is available in the Software Setup utility.

To install the WLAN software:

- » Select **Start > All Programs > Software Setup**, and then follow the instructions on the screen. (When you are prompted to select the software you want to install, select or clear the corresponding check boxes.)

The WLAN software is also available as a SoftPaq at the HP Web site. To access, download, and install the SoftPaq, use either of the following procedures:

- Select **Start > Help and Support**.

– or –

- Visit the HP Web site at <http://www.hp.com/support>:
 - a. Choose your language and region.
 - b. Select **Download Drivers and Software**.
 - c. Enter your computer model information, and then follow the instructions provided at the Web site.



WLAN software is provided in the Network category. To access model information about your computer, refer to the serial number label. The serial number label is on the bottom of the tablet PC.

To access documentation for your WLAN software:

1. Install the WLAN software as instructed earlier in this chapter.
2. Open the utility.
3. Select **Help** on the menu bar.

Troubleshooting Devices

For more troubleshooting information, visit the HP Web site at <http://www.hp.com/go/wireless> or refer to the documentation included with your tablet PC.

Bluetooth Wireless Device (Select Models Only)

A Bluetooth wireless device provides short-range wireless communications that replace the physical cable connections that traditionally link electronic devices such as

- Network access points.
- Computers (desktop, notebook, tablet PC, PDA).
- Phones (cellular, cordless, smart phone).
- Imaging devices (printer, camera).
- Audio devices (headset, speakers).

The devices are represented in the Bluetooth for Windows software by graphical icons that resemble their physical features, which makes them easily recognizable and distinguishes them from other classes of devices.

The Bluetooth for Windows software provides the following functions:

- Personal Information Management (PIM) item transfer—Sends and receives information files such as business cards, calendar items, notes, and message items to and from another Bluetooth computer or device.
- PIM synchronization—Synchronizes PIM data between a computer, PDA, or cell phone using Bluetooth.
- File Transfer—Sends and receives files to and from another Bluetooth computer.
- Network access (Personal Area Networking Profile)—Enables 2 or more Bluetooth devices to form an ad-hoc (peer-to-peer) network. Provides a mechanism that enables a Bluetooth device to access a remote network through a network access point. The network access points can be traditional LAN data access points or group ad-hoc networks that represent a set of devices that are attached only to one another.

- Dial-up networking—Connects Bluetooth devices to the Internet.
- Bluetooth serial port—Transfers data over the Bluetooth link using a virtual COM port.
- Hands-Free—Enables a vehicle-embedded, hands-free unit or a tablet PC serving as a hands-free unit to establish a wireless connection to a cellular phone and to act as the Bluetooth cellular phone audio input and output mechanism.
- Basic imaging—Provides a wireless connection between a Bluetooth-enabled camera and other Bluetooth devices. The camera can be controlled remotely by a tablet PC, and images can be transferred from a camera to be stored on a computer or to be printed.
- Human interface device—Provides a wireless connection to other Bluetooth devices, such as keyboards, pointing devices, gaming devices, and remote monitoring devices.
- Fax—Provides a Bluetooth connection that enables a tablet PC to send or receive a fax message using a Bluetooth cellular phone or modem.
- Headset—Provides a wireless connection between a headset and a tablet PC or cellular phone. The headset acts as the device's audio input and output mechanism and increases mobility.

For more information about using Bluetooth with your tablet PC, refer to the *Bluetooth Getting Started* guide.

Device Power States

The wireless button ❶ enables and disables 802.11 wireless devices and Bluetooth devices in conjunction with Wireless Assistant. By default, the 802.11 Bluetooth or wireless device and wireless light ❷ are turned on when you turn on the tablet PC.



Turning on an 802.11 wireless device does not automatically create a WLAN or connect you to a WLAN. For information on setting up a WLAN refer to the [“Wireless Local Area Network Device \(Select Models Only\)”](#) section in this chapter.



The wireless and Bluetooth 802.11 devices have 2 power states:

- Enabled
- Disabled

You can enable and disable a wireless device in Computer Setup. For more information about using Computer Setup to control an 802.11 or Bluetooth wireless device, refer to [Chapter 15, “Computer Setup.”](#) You can also enable and disable a wireless device with the wireless button.

When a wireless device is enabled in Computer Setup and with the wireless button, you can use Wireless Assistant to turn on and off the devices individually. When the wireless devices are disabled, you must enable them before you can turn them on or off with Wireless Assistant.

To view the state of your wireless devices, place the cursor over the Wireless Assistant icon in the notification area, or open Wireless Assistant by double-clicking the icon in the notification area. Wireless Assistant displays the status of the devices as on, off, or disabled. Wireless Assistant also displays the status of the devices in Computer Setup as enabled or disabled.


For more information about Wireless Assistant:

1. Open **Wireless Assistant** by double-clicking the icon in the notification area.
2. Select the Help button.



You cannot use the wireless button or Wireless Assistant to control the wireless devices if they are disabled in Computer Setup.

Turning On the Devices

If	And	Then
<ul style="list-style-type: none"> ■ Wireless Assistant shows that both WLAN and Bluetooth are off ■ Wireless light is off 	You want to turn on either or both devices	<ol style="list-style-type: none"> 1. Right-click the Wireless Assistant icon in the notification area. 2. Select the device or devices you want to turn on. <p> If the wireless devices are turned off, pressing the wireless button disables both devices. The button does not turn on the devices.</p>
<ul style="list-style-type: none"> ■ Wireless Assistant shows that both WLAN and Bluetooth are disabled* ■ Wireless light is off 	You want to turn on either or both devices	<ol style="list-style-type: none"> 1. Press the wireless button. (The devices return to their previous on or off state.) 2. If the wireless devices are turned off, right-click the Wireless Assistant icon in the notification area. 3. Select the device or devices you want to turn on.
<ul style="list-style-type: none"> ■ Wireless Assistant shows that one device is on and the other device is off ■ Wireless light is on 	You want to turn on either or both devices	<ol style="list-style-type: none"> 1. Right-click the Wireless Assistant icon in the notification area. 2. Select the device or devices you want to turn on.

*If the wireless devices are not both on when you disable the devices, pressing the wireless button again returns the devices to their previous on or off state. Pressing the button does not turn on both devices.



If you want your wireless devices to be turned on when you turn on your tablet PC, you must turn them on before you shut down or restart.

Turning Off and Disabling the Devices

If	And	Then
<ul style="list-style-type: none"> ■ Wireless Assistant shows that both WLAN and Bluetooth are on 	You want to disable both devices	Press the wireless button.
	You want to turn off either or both devices	<ol style="list-style-type: none"> 1. Right-click the Wireless Assistant icon in the notification area. 2. Select the device or devices you want to turn off.
<ul style="list-style-type: none"> ■ Wireless light is on 		
<ul style="list-style-type: none"> ■ Wireless Assistant shows that both WLAN and Bluetooth are off 	You want to disable both devices	Press the wireless button.
<ul style="list-style-type: none"> ■ Wireless light is off 		
<ul style="list-style-type: none"> ■ Wireless Assistant shows that one device is on and the other device is off* 	You want to disable both devices	Press the wireless button.
	You want to turn off both devices.	<ol style="list-style-type: none"> 1. Right-click the Wireless Assistant icon in the notification area. 2. Select the device or devices you want to turn off.
<ul style="list-style-type: none"> ■ Wireless light is on 		


*If the wireless devices are not both on when you disable the devices, pressing the wireless button again returns the devices to their previous on or off state. Pressing the button does not turn on both devices.

Infrared Communications

The tablet PC is IrDA compliant—4 megabits per second (Mbps) standard—and can communicate with another infrared-equipped device that is also IrDA compliant.

The infrared port supports both low-speed connections of up to 115 kilobits per second (Kbps) and high-speed connections of up to 4 Mbps. Infrared performance may vary depending on the performance of infrared peripherals, distance between infrared devices, and applications used.

Infrared signals are sent through an invisible beam of infrared light and require an unobstructed line-of-sight path.

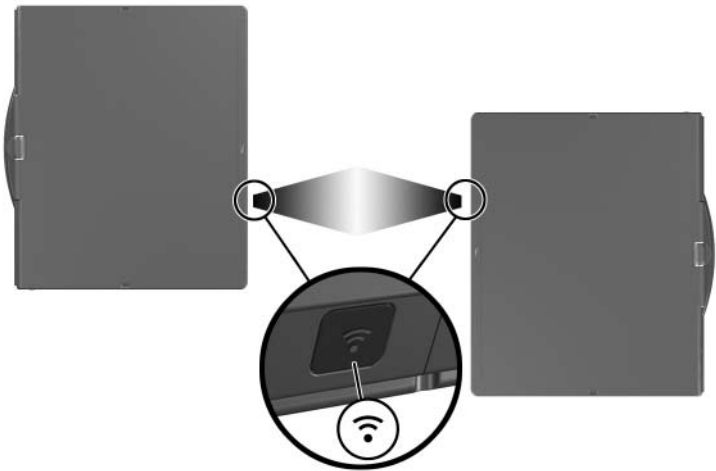

Setting Up an Infrared Transmission

For information about using infrared software, refer to your operating system Help file.

To set up infrared devices for optimal transmission:

- Prepare the infrared ports on both devices for transmission.
- Position the devices so that their infrared ports face one another at a distance no greater than 1 meter (3.3 feet).
- Position the ports so that they face one another directly. Because the maximum capture angle is 30 degrees, the ports must be aligned no more than 15 degrees off center.
- Shield the ports from direct sunlight, flashing incandescent light, and energy-saving fluorescent light.
- Be sure that no signals from remote control or other wireless devices, such as headphones or audio devices, aim at a port.
- During the transmission, do not move either device and do not allow objects or movement to disrupt the beam.

Using Standby with Infrared

Standby is not compatible with infrared transmission. If the tablet PC is in standby, an infrared transmission cannot be initiated. If standby is initiated during an infrared transmission, the transmission stops. To resume from standby, slide the power switch toward the front of the tablet PC. The transmission resumes when the tablet PC resumes from standby. However, any program that was using the infrared transmission when standby was initiated may not continue from the point at which it was stopped. For example, if a program was printing when standby was initiated, the program resumes transmission after the tablet PC resumes, but the print job may not resume.

Mobile Printing (Select Models Only)

Mobile Printing for Tablet PCs enables you to print to any PostScript-enabled HP network printer, even if the tablet PC does not have the needed printer driver.

To print using Mobile Printing:

1. Select **File > Print** from any application.
2. Select **Mobile Printing** from the list of printers.
3. Select **Print**.
4. Enter the printer's IP address or network path.
5. Select **Print**.

For more information on downloading and using Mobile Printing, visit the HP Web site at <http://www.hp.com/go/mobileprinting>.

Security Features




Security solutions are designed to act as deterrents. These deterrents may not prevent a product from being mishandled or stolen.

The security features provided with the tablet PC can protect the tablet PC, personal information, and data from a variety of risks. Depending on your environment, some security features may be unnecessary.

In addition to the Windows operating system security measures, the following table may help you decide which other security features to use.

Most of these security features can be configured in the Setup utility. For more information, refer to [Chapter 15, “Computer Setup,”](#) in this guide.

To Protect Against	Use This Security Feature
Unauthorized use of the tablet PC	<ul style="list-style-type: none"> ■ Power-on password* ■ HP ProtectTools Security Manager Refer to the “HP ProtectTools Security Manager (Select Models Only)” section in this chapter for additional information.
Unauthorized access to the Computer Setup utility (f10)	HP administrator password*
Unauthorized access to the contents of a hard drive	DriveLock*
Unauthorized startup from a CD, diskette, or internal network adapter boot	Device security*
Unauthorized access to a Windows user account	<ul style="list-style-type: none"> ■ Optional smart cards An enabled smart card can store both the Windows user password and the Windows administrator password; therefore, both the smart card and the smart card PIN are required to access the account. ■ Credential Manager for ProtectTools Refer to the “Credential Manager for ProtectTools” section in this chapter for more information. <p> This security feature is supported by only certain smart card readers.</p>
Unauthorized access to data	<ul style="list-style-type: none"> ■ HP administrator password ■ Windows Firewall software ■ Windows updates ■ HP ProtectTools Security Manager Refer to the “HP ProtectTools Security Manager (Select Models Only)” section in this chapter for additional information.

(Continued)

To Protect Against	Use This Security Feature
Unauthorized access to the BIOS settings and other system identification information	HP administrator password
Unauthorized removal of the tablet PC	Security cable slot (used with an optional security cable). For more information on the security cable slot, refer to the “Optional Security Cable” section in this chapter.

*This security feature is configured in Computer Setup. Computer Setup is a non-Windows utility accessed by pressing **f10** when the tablet PC is started or restarted. The procedures for using Computer Setup to set specific security preferences are provided in this chapter. For information about displaying system information and using other Computer Setup features, refer to [Chapter 15, “Computer Setup.”](#)

Security Preferences in Computer Setup

Most security preferences are set in Computer Setup. Because Computer Setup is a non-Windows utility, it does not support the pointing devices on your tablet PC. When using Computer Setup, you must use the keys on your tablet PC to navigate and make selections.

For more details, refer to [Chapter 15, “Computer Setup.”](#)

Passwords

Most security features use passwords. Whenever you set a password, write down the password and store it in a secure location away from the tablet PC.

- If you forget your power-on password and your HP administrator password, you cannot start up the tablet PC or restore from hibernation. Call Customer Care or your service partner for additional information.
- If you forget your HP administrator password, you will not be able to access Computer Setup.
- If you forget the DriveLock user password but know the DriveLock master password, you can remove DriveLock protection from the drive.

For instructions, refer to the [“DriveLock”](#) section in this chapter.

HP and Windows Passwords

HP security features and Windows operating system security features work independently from one another. For example, a device disabled in Computer Setup cannot be enabled in Windows.

Some password options are provided by your HP software, and others are provided by your operating system. HP passwords and Windows passwords are also independent of one another. The following table lists the different passwords used by HP and Windows and describes their functions.

For additional information about Windows passwords, such as screen-saver passwords, refer to **Start > Help and Support**.

HP Passwords	Function
HP administrator password	Protects access to Computer Setup.
Power-on password	Used to access the tablet PC during startup and when you restart the tablet PC.
DriveLock master password	Used by the HP administrator to access drives protected by DriveLock and to remove DriveLock protection from the drive.
DriveLock user password	Used by the day-to-day user to access drives protected by DriveLock at startup.
Smart card PIN	Used for smart card authentication. Power-on and HP administrator passwords can be stored on smart cards if an optional smart card reader supports this functionality. You must enable the smart card security feature in Computer Setup, and then enable a PIN in HP ProtectTools Security Manager (select models only). Refer to the “HP ProtectTools Security Manager (Select Models Only)” section in this chapter for more information.

(Continued)

Windows Passwords	Function
Administrator password*	Protects Windows administrator-level access to tablet PC contents.
User password*	Protects access to tablet PC contents after exit from standby.

*For information about setting a Windows administrator password or a Windows user password, select **Start > Help and Support**.

HP and Windows Password Guidelines

HP and Windows passwords are not interchangeable. You must use an HP password at an HP password prompt and a Windows password at a Windows password prompt. For example:

- If a power-on password is set, the power-on password (not a Windows password) must be entered when the tablet PC starts up or restores from hibernation.
- If you set Windows to prompt for a password before resuming from standby, a Windows password (not a power-on password) must be entered to resume from standby.

The same word or series of letters or numbers used for an HP password can be used for another HP password or for a Windows password, with the following considerations:

- HP passwords can be any combination of up to 32 letters and numbers and are not case sensitive.
- An HP password must be set and entered with the same type of keys. For example, an HP password set with keyboard number keys will not be recognized if it is entered with embedded numeric keypad number keys.

For information about the embedded numeric keypad, refer to the “[Keypads](#)” section in [Chapter 3, “Pointing Devices and Keyboard.”](#)

Although you can use the same text for various passwords, HP passwords and Windows passwords function independently. Even if you plan to use the same text for an HP password and a Windows password, you must set the HP password in Computer Setup and the Windows password in your operating system.



Although their names are similar, an HP administrator password and a Windows administrator password have different functions. For example, a Windows administrator password cannot be used to access Computer Setup, and an HP administrator password cannot provide administrator-level access to your tablet PC contents. You can, however, use the same text for both passwords.

HP Administrator Passwords

The HP administrator password protects the configuration settings and system identification information in Computer Setup. After this password is set, it must be entered to access Computer Setup.

The HP administrator password

- Is not interchangeable with a Windows administrator password, although both can use the same word or series of letters, or numbers.
- Does not display as it is set, entered, changed, or deleted.
- Must be set and entered with the same type of keys. For example, an HP administrator password set with keyboard number keys will not be recognized if you enter it with embedded numeric keypad number keys.
- Can include any combination of up to 32 letters and numbers and is not case sensitive.

Setting HP Administrator Passwords

An HP administrator password is set, changed, or deleted in Computer Setup.

To manage the password:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > Administrator password**, and then press **enter**.
 - ❑ To set an HP administrator password, type your password in the **New password** and **Verify new password** fields, and then press **f10**.
 - ❑ To change an HP administrator password, type your current password in the **Old password** field, type the new password in the **New password** and **Verify new password** fields, and then press **f10**.
 - ❑ To delete an HP administrator password, type your current password in the **Old password** field, and then press **f10**.
5. To save your preferences and exit Computer Setup, use the arrow keys to select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Entering HP Administrator Passwords

At the Administrator Password prompt, type your administrator password (using the same kind of keys you used to set the password), and then press enter. After 3 unsuccessful attempts to enter the HP administrator password, you must restart the tablet PC and try again.

Power-On Passwords

A power-on password prevents unauthorized use of the tablet PC. After this password is set, it must be entered each time the tablet PC is turned on or restarted. A power-on password

- Does not display as it is set, entered, changed, or deleted.
- Must be set and entered with the same type of keys. For example, a power-on password set with keyboard number keys will not be recognized if you enter it with embedded numeric keypad number keys.
- Can include any combination of up to 32 letters and numbers and is not case sensitive.

Setting Power-On Passwords

A power-on password is set, changed, or deleted in Computer Setup.

To manage the password:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > Power-On password**, and then press **enter**.
 - ❑ To set a power-on password, type the password in the **New password** and **Verify new password** fields, and then press **f10**.
 - ❑ To change a power-on password, type the current password in the **Old password** field, type the new password in the **New password** and **Verify new password** fields, and then press **f10**.
 - ❑ To delete a power-on password, type the current password in the **Old password** field, and then press **f10**.
5. To save your preferences, use the arrow keys to select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Entering Power-On Passwords

At the power-on password prompt, type your password, and then press **enter**. After 3 unsuccessful attempts to enter the password, you must restart the tablet PC and try again.

Requiring a Power-On Password at Restart

You can require that a power-on password be entered each time the tablet PC is restarted. Enable and disable this feature in Computer Setup:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > Password options > Require password on restart**.
5. Toggle the field to enable or disable, and then press **enter**.
6. Save your preferences by using the arrow keys to select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

DriveLock



CAUTION: If you forget both the DriveLock user password and the DriveLock master password, the hard drive is permanently locked and can no longer be used.

DriveLock prevents unauthorized access to the contents of a hard drive. After DriveLock protection is applied to a drive, a password must be entered to access the drive. The drive must be inserted into the tablet PC, not into an optional docking device (select models only) or external MultiBay, in order for it to be accessed by the DriveLock passwords.

DriveLock requires a user password and a master password defined in Computer Setup:

- A hard drive protected by DriveLock can be accessed with either the user password or the master password.
- You can delete a user password or master password only by removing DriveLock protection from the drive. DriveLock protection can be removed from the drive only with the master password.
- The owner of the user password should be the day-to-day user of the protected hard drive. The owner of the master password may be a system administrator or the day-to-day user.
- A user password and a master password can be the same word.



When you start the tablet PC from a hard drive protected with DriveLock, and your power-on password and DriveLock password are identical, you will be prompted to enter only a power-on password instead of both a power-on password and a DriveLock password.

Setting DriveLock Passwords

To access the DriveLock settings in Computer Setup:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > DriveLock passwords**. Then press **enter**.
5. Select the location of the hard drive, and then press **f10**.
6. Toggle the **Protection** field to **Enable**, and then press **f10**.
7. Read the warning. To continue, press **f10**.
8. Type your user password in the **New password** and **Verify new password** fields, and then press **f10**.
9. Type your master password in the **New password** and **Verify new password** fields, and then press **f10**.
10. To confirm DriveLock protection on the drive you have selected, type DriveLock in the confirmation field, and then press **f10**.
11. To save your DriveLock settings, select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Entering DriveLock Passwords

1. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
2. When prompted for a DriveLock password, type your user or master password (using the same kind of keys you used to set the password), and then press **enter**.



After 2 incorrect attempts to enter the password, you must restart the tablet PC and try again.

Requiring a Drivelock Password at Restart

You can require that a DriveLock password be entered each time the tablet PC is restarted. Enable and disable this feature in Computer Setup:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > Password options > Require password on restart**.

5. Toggle the field to enable or disable, and then press **enter**.
6. Save your preferences by using the arrow keys to select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Changing DriveLock Passwords

To access the DriveLock settings in Computer Setup:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > DriveLock passwords**, and then press **enter**.
5. Use the arrow keys to select the location of the hard drive, and then press **f10**.

6. Use the arrow keys to select the field for the password you want to change. Type your current password in the **Old password** field, and then type the new password in the **New password** field and in the **Verify new password** field. Then press **f10**.
7. To save your preferences, use arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Removing DriveLock Protection

To access the DriveLock settings in Computer Setup:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Use the arrow keys to select **Security > DriveLock passwords**, and then press **enter**.
5. Use the arrow keys to select the location of the hard drive, and then press **f10**.
6. Toggle the **Protection** field to Disable, and then press **f10**.

7. Type your master password in the **Old password** field. Then press **f10**.
8. To save your preferences, use the arrow keys to select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Device Security

From the Computer Setup Device Security menu, you can disable or partially disable most ports and drives.

To disable or reenable tablet PC capabilities in Computer Setup:

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
4. Select **Security > Device security**, and then enter your preferences.
5. To confirm your preferences, press **f10**.
6. To save your preferences, select **File > Save changes and exit**. Then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

System Information

The System Information setting provides details about your tablet PC and battery pack. The following sections explain how to prevent other users from viewing system information and how to configure system information options in Computer Setup.

System Information options allow you to

- Display or enter the tablet PC serial number, asset tag, and ownership tag.
- Display a battery pack serial number.



To prevent unauthorized access to this information, you must create an HP administrator password. For instructions, refer to the [“Setting HP Administrator Passwords”](#) section earlier in this chapter.

Setting System Information Options

1. Shut down the tablet PC. If you are not sure whether the tablet PC is off or in hibernation, turn the tablet PC on by sliding the power button, and then shut down the tablet PC through the operating system.
2. Be sure that the hard drive is inserted into the tablet PC (not into an optional docking device or external MultiBay).
3. To open Computer Setup, turn on or restart the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
 - △ Access or set your preferences by following these directions:
 - ◆ To view general system information, select **File > System Information**.
 - ◆ To view or enter identification values for system components, select **Security > System IDs**.
4. To confirm the information or your preferences, press **f10**.
5. To save your information or preferences, use the arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Antivirus Software

When you use the tablet PC for e-mail, network, or Internet access, you expose the tablet PC to computer viruses. Computer viruses can disable your operating system, applications, or utilities, or cause them to function abnormally.

Antivirus software can detect most viruses, destroy them, and in most cases, repair damage they have caused. To provide protection against newly discovered viruses, antivirus software must be updated.

Norton AntiVirus is preinstalled on the tablet PC. For information about using the Norton AntiVirus software:

» Select **Start > All Programs > Norton AntiVirus > Help and Support**.

For more information about computer viruses:

1. Select **Start > Help and Support**.
2. Type viruses into the **Search** field.
3. Press **enter**.

Firewall Software

When you use the tablet PC for e-mail, network, or Internet access, it is possible for unauthorized persons to obtain information about you, your tablet PC, and your data. Firewalls monitor all incoming and outgoing traffic on your computer by including features such as logging and reporting, automatic alarms, and user interfaces for configuring the firewall. To protect your privacy, it is recommended that you use firewall software.

The Windows operating system firewall is available on your tablet PC. To learn more about this firewall:

1. Select **Start > Control Panel > Network and Internet Connections > Windows Firewall**.
2. Select the **General** tab.
 - To learn more about Windows Firewall, select the **What else should I know about Windows Firewall?** link.
 - To disable Windows Firewall, select **Off (not recommended)**.
 - To reenable Windows Firewall, select **On (recommended)**.
3. Select **OK**.

Under some circumstances a firewall can block access to Internet games, interfere with printer or file sharing on a network, or block authorized e-mail attachments. If you are using Windows Firewall and an application attempts an inbound connection to your tablet PC for the first time, a security alert will be displayed. The security alert allows you to configure the firewall permission for the application.

- To allow the application to connect to your tablet PC, select **Unblock this program**. The application is added to the Exceptions list and will not be blocked by Windows Firewall.
- To permanently block the application, select **Keep blocking this program**. Windows Firewall will block the application anytime the application tries to connect.
- To temporarily block the application, select **Keep blocking this program, but ask me again later**. The next time the application attempts to connect to your tablet PC, you will receive the security alert.

To manually add an application to the Windows Firewall Exceptions list so that it will not be blocked by the firewall:

1. Select **Start > Control Panel > Network and Internet Connections > Windows Firewall**.
2. Select the **Exceptions** tab.
3. Select **Add Program** and enter the required information about the application.
4. Select **OK**. The application is added to the Exceptions list and will not be blocked by Windows Firewall.

If you are using an optional firewall and you want to allow a blocked application to connect:

- Temporarily solve the problem by disabling the firewall, performing the task, and then reenabling the firewall.
- Permanently resolve the problem by reconfiguring the firewall. Refer to the firewall documentation or contact the firewall manufacturer.

Critical Security Updates for Windows XP



CAUTION: Because new computer viruses are being detected all the time, it is recommended that you install all critical updates as soon as you receive an alert from Microsoft. You should also run Windows Update on a monthly basis to install the latest recommended updates from Microsoft.

A *Critical Security Updates for Windows XP* disc may have been included with your tablet PC to provide additional updates delivered after the computer was configured. Throughout the life of the computer, Microsoft will continue to update the operating system and make these updates available on their Web site.

To update your system using the *Critical Security Updates for Windows XP* disc:

1. Insert the disc into the drive. The disc automatically runs the installation application.
2. Follow the on-screen instructions to install all updates. This may take a few minutes.
3. Remove the disc.

HP ProtectTools Security Manager (Select Models Only)

Your tablet PC comes with HP ProtectTools Security Manager preinstalled. This software is accessed through Microsoft Windows Control Panel. It provides security features that are designed to help protect against unauthorized access to the tablet PC, networks, and critical data. Add-on modules for HP ProtectTools Security Manager include the following:

- Embedded Security for ProtectTools
- Credential Manager for ProtectTools
- BIOS Configuration for ProtectTools
- Smart Card Security for ProtectTools

Depending on your tablet PC model, add-on modules may be preinstalled, preloaded, or downloaded from the HP Web site. Visit <http://www.hp.com> for more information.

Embedded Security for ProtectTools



You must have the optional embedded security chip in your tablet PC in order to use Embedded Security for ProtectTools.

Embedded Security for ProtectTools has security features that protect against unauthorized access to user data or credentials, which include the following:

- Administrative functions, such as ownership and management of the owner pass phrase.
- User functions, such as user enrollment and management of user pass phrases.
- Settings configuration, including setting up enhanced Microsoft EFS and Personal Secure Drive for protecting user data.

- Management functions, such as backing up and restoring the key hierarchy.
- Support for third-party applications (such as Microsoft Outlook and Internet Explorer) for protected digital certificate operations when using embedded security.

The optional embedded security chip enhances and enables other HP ProtectTools Security Manager security features. For example, Credential Manager for ProtectTools can use the embedded chip as an authentication factor when the user logs on to Windows. On select models, the embedded security chip also enables enhanced BIOS security features accessed through BIOS Configuration for ProtectTools.

For more information, refer to the Embedded Security for ProtectTools online Help or the *HP ProtectTools Embedded Security Guide*.

Credential Manager for ProtectTools

Credential Manager for ProtectTools has security features that provide protection against unauthorized access to your tablet PC, including the following:

- Alternatives to passwords when logging on to Microsoft Windows, such as using a smart card to log on to Windows.
- Single sign-on capability that automatically remembers credentials for Web sites, applications, and protected network resources.
- Support for optional security devices, such as smart cards and biometric fingerprint readers.

For more information, refer to the Credential Manager for ProtectTools online Help.

BIOS Configuration for ProtectTools

BIOS Configuration for ProtectTools provides access to BIOS security and configuration settings within the HP ProtectTools Security Manager application, which gives users better access to system security features that are managed by the system BIOS.

With BIOS Configuration for ProtectTools, you can

- Manage power-on user passwords and administrator passwords.
- Configure preboot authentication features, such as smart card passwords and power-on passwords.
- Enable and disable hardware features (such as the enable CD-ROM boot feature).
- Configure boot options, which includes disabling the ability to boot to drives other than the primary hard drive.



Many of the features in BIOS Configuration for ProtectTools are also available in Computer Setup. Refer to [Chapter 15, “Computer Setup”](#) for additional information.

For more information, refer to the BIOS Configuration for ProtectTools online Help.

Smart Card Security for ProtectTools

With Smart Card Security for ProtectTools, you can

- Access optional smart card security features. Security enhancements are supported by the optional HP ProtectTools Smart Card and an optional supported reader, such as the HP PC Card Smart Card Reader.
- Initialize an optional HP ProtectTools Smart Card so that it can be used with Credential Manager for ProtectTools.
- Work with the BIOS to enable optional smart card authentication in a preboot environment, and to configure separate smart cards for an administrator and a user. This requires a user to insert the smart card and optionally enter a PIN prior to allowing the operating system to load.

For more information on BIOS security features, refer to [Chapter 15, “Computer Setup.”](#)

- Set and change the password used to authenticate users of the optional smart card.
- Back up and restore credentials stored on the optional smart card.

For more information, refer to the Smart Card Security for ProtectTools online Help.


Optional Security Cable



Security solutions are designed to act as deterrents. These deterrents may not prevent a product from being mishandled or stolen.

To install a security cable:

1. Loop the security cable around a secured object.
2. Insert the key ❶ into the cable lock ❷.
3. Insert the cable lock into the security cable slot ❸, and then lock the cable lock with the key.

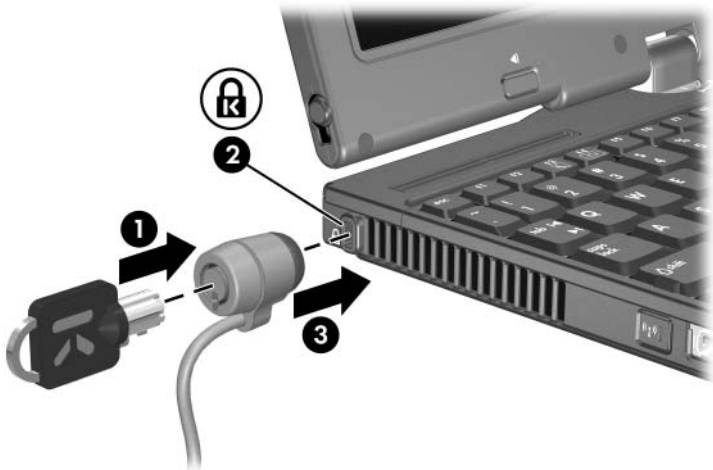

Computer Setup

Computer Setup is a preinstalled, ROM-based utility that can be used even when the operating system is not working or will not load. If the operating system is working, the tablet PC restarts the operating system after you exit Computer Setup.



Pointing devices are not supported in Computer Setup; you must use the keyboard to navigate and make selections.



An external keyboard connected by USB can be used with Computer Setup only if USB legacy support is enabled. For more information about USB, refer to [Chapter 10, “USB Devices.”](#)

The menu tables later in this chapter provide an overview of Computer Setup options.

Computer Setup Access

The information and settings in Computer Setup are accessed from the **File, Security, Tools, and Advanced** menus.

1. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ To view navigation information, press **f1**.
 - ❑ To return to the **Computer Setup** menu, press **esc**.
2. Select the **File, Security, Tools, or Advanced** menu.
3. To exit Computer Setup, choose one of the following:
 - ❑ To exit without saving any changes, use the arrow keys to select **File > Ignore changes and exit**, and then follow the instructions on the screen.
 - ❑ To exit and save all the settings you have entered, use the arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the tablet PC restarts.

Computer Setup Defaults

To return all settings in Computer Setup to the values that were set at the factory:




1. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ To view navigation information, press **f1**.
2. Use the arrow keys to select **File > Restore defaults**.
3. Select the **Restore Defaults** check box.
4. To confirm the restoration, press **f10**.
5. Select **File > Save changes and exit**, and then follow the instructions on the screen.

When the computer restarts, the factory settings are restored, and any identification information you have entered is saved.

File Menu

Select	To Do This
System Information	<ul style="list-style-type: none">■ View identification information about the tablet PC and any battery packs in the system.■ View specification information about the processor, memory and cache size, video revision, keyboard controller version, and system ROM.
Save to floppy	Save system configuration settings to a diskette.
Restore from floppy	Restore system configuration settings from a diskette.
Restore defaults	Replace configuration settings in Computer Setup with factory default settings. (Identification information is retained.)
Ignore changes and exit	Cancel changes entered during the current session. Then exit and restart the tablet PC.
Save changes and exit	Save changes entered during the current session. Then exit and restart the tablet PC. The changes you save are in effect when the tablet PC restarts.

Security Menu

Select This Option	To Do This
Administrator password	Enter, change, or delete an HP Administrator password.
Power-On password	Enter, change, or delete a power-on password.
Password options	<ul style="list-style-type: none"> ■ Enable/Disable stringent security. ■ Enable/Disable required password on restart.
DriveLock passwords	<p>Enable/Disable DriveLock; change a DriveLock user or master password.</p> <p> DriveLock settings are accessible only when you enter Computer Setup by turning on (not restarting) the tablet PC.</p>
Smart Card Security	<p>Enable/Disable power-on support for smart cards.</p> <p> This feature is supported by select smart card readers only.</p>
Embedded Security	<ul style="list-style-type: none"> ■ Enable/Disable the embedded security chip. ■ Restore embedded security chip to factory settings. ■ Enable/Disable power-on authentication support. ■ Enable/Disable automatic DriveLock. ■ Reset power-on authentication credential. <p> Embedded Security settings are accessible only if the tablet PC is equipped with an embedded security chip.</p>
Device security	<ul style="list-style-type: none"> ■ Enable/Disable devices in the system. ■ Enable NIC for inclusion in MultiBoot.
System IDs	Enter user-defined identification values.

Tools Menu

Select	To Do This
HDD Self Test options	Run a quick or comprehensive self-test on any hard drive in the system.
Battery Information	View information about any battery packs in the tablet PC.
Memory Check	<ul style="list-style-type: none">■ Run a self-test on memory modules in the tablet PC.■ View information about memory modules installed in the tablet PC.

Advanced Menu

Select	To Do This
Language (or press f2)	Change the Computer Setup language.
Boot options	<ul style="list-style-type: none"> ■ Enable/Disable MultiBoot, which sets a startup sequence that can include most bootable devices and media in the system. For details, refer to Appendix B, "MultiBoot." ■ Set the boot order.
Device options	<ul style="list-style-type: none"> ■ Swap the functions of the fn key and left ctrl key. ■ Enable/Disable multiple pointing devices at startup. (To set the tablet PC to support only a single, usually nonstandard, pointing device at startup, select Disable.) ■ Enable/Disable USB legacy support for a USB keyboard, mouse, and hub. When USB legacy support is enabled: <ul style="list-style-type: none"> <input type="checkbox"/> A USB keyboard, mouse, and hub work even when a Windows operating system is not loaded. <input type="checkbox"/> The tablet PC starts from a bootable hard drive, diskette drive diskette, or CD, CD-RW, or DVD inserted into a drive connected by a USB connector to the tablet PC or to an optional docking device. ■ Select a parallel port mode: EPP (Enhanced Parallel Port), standard, bidirectional, or ECP (Enhanced Capabilities Port). ■ Enable/Disable all settings in the SpeedStep window. (When Disable is selected, the tablet PC runs in Battery Optimized mode.)

Software Update and Recoveries

Software Updates

For optimal tablet PC performance and to make sure your tablet PC remains compatible with changing technologies, HP recommends that you install the latest versions of HP software as they become available.

To update HP software:

1. Prepare for any update by identifying your tablet PC type, series or family, and model; refer to [“Accessing Tablet PC Information”](#) later in this chapter. Prepare for a system ROM update by identifying (through the Computer Setup utility) the ROM version currently installed on the tablet PC.
2. Access the updates through your local HP Web site or the *Support Software* CD (purchased separately).
3. Download and install the updates.



The tablet PC system ROM stores the BIOS. The BIOS determines how the tablet PC hardware interacts with the operating system and external devices and also supports such tablet PC services as time and date.



If your tablet PC connects to a network, HP recommends that you consult with your network administrator before installing any software updates, especially system ROM updates.

Obtaining the Support Software Disc

The *Support Software* CD provides HP software updates and installation instructions. The CD includes device drivers, ROM updates, and utilities.

To purchase the current *Support Software* CD or a subscription that provides both the current version and future versions of the CD, visit the HP Web site at <http://www.hp.com>.

Accessing Tablet PC Information

To access the updates for your tablet PC, the following information will be needed:

- The product *category* is Tablet PC.
- The product *family* name and *series* number are printed in the lower-right corner of the display bezel.
- *Model* information is provided on the serial number label on the bottom of the tablet PC.

To determine whether available ROM updates contain a later ROM version than currently installed on the tablet PC, you need to know the version of the system ROM currently installed.

To display ROM information in Computer Setup:

1. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - To change the language, press **f2**.
 - For navigation instructions, press **f1**.

2. Select **File > System Information**. (The system ROM information is displayed.)
3. To exit Computer Setup without changing any settings, use the arrow keys to select **File > Ignore changes and exit**, and then follow the instructions on the screen. (After Computer Setup closes, the tablet PC restarts in Windows.)

For information about using Computer Setup, refer to the [“Computer Setup”](#) chapter.

Internet Software

Most software on the HP Web site is packaged in compressed files called a *SoftPaqs*. Some ROM updates may be packaged in compressed files called *ROMPaqs*.

Most download packages contain a file named *Readme.txt*. A *Readme.txt* file contains information regarding installing and troubleshooting the file.

Downloading System ROM



CAUTION: To prevent an unsuccessful installation, download and install the system ROM only while the tablet PC is connected to reliable external power using the AC adapter. Do not download or install the system ROM while the tablet PC is running on battery power, docked in an optional docking station, or connected to an optional power source. During the download and installation:

- Do not unplug the tablet PC from the electrical outlet.
 - Do not shut down the tablet PC.
 - Do not remove or insert a drive.
-

To download and install a system ROM:

1. Access the page on the HP Web site that provides software for your tablet PC.
2. Follow the instructions on the screen to locate the system ROM you want to download.
3. At the download area:
 - a. Write down the information (date and name) of any update that is later than the system ROM currently installed on your tablet PC.
 - b. Select the software you want and follow the download instructions on the screen.
4. When the download is complete, open Windows Explorer.
5. In Windows Explorer, select **My Computer**, and then the hard drive designation (usually drive C), and then the folder to which you saved the downloaded item.
6. In the folder, double-click the name or number of the software package containing the system ROM update. The system ROM installation begins.
7. To complete the installation, follow the instructions on the screen.



After a message on the screen reports a successful installation, you can delete the downloaded package from the folder.

Downloading Software

To download and install other software:

1. Access the page at the HP Web site that provides software for your tablet PC.
2. Follow the instructions on the screen to find the software you want to update.
3. At the download area, select the software you want and follow the downloading instructions on the Web page.
4. When the download is complete, open Windows Explorer.
5. In Windows Explorer, select **My Computer**, and then the hard drive designation (usually drive C), and then the folder to which you saved the downloaded item.
6. In the folder, double-click the name or number of the software package containing the update.
7. Double-click the file that includes an .exe extension—for example, Filename.exe. The installation begins.
8. To complete the installation, follow the instructions on the screen.



After a message on the screen reports a successful installation, you can delete the download package from the folder.

System Recovery

The tablet PC system recovery process provides several ways to recover system functionality. The *Application and Driver Recovery* disc and *Operating System* disc enable you to recover or repair your tablet PC without losing personal data. The *Operating System* disc also allows you to reinstall the operating system software provided with the tablet PC.



For best results, attempt to recover optimal tablet PC functionality by using the following procedures *in the order described here*.

Safeguarding Your Data

Software or devices added to the tablet PC can cause your system to become unstable. To safeguard your documents, store personal files in the My Documents folder and periodically create a backup copy of My Documents.

Altiris Local Recovery

Altiris Local Recovery protects the files on your computer by storing copies of files called *snapshots*. If files on your computer get accidentally deleted or corrupted, you can easily restore the files yourself. You can also roll back your complete file system to a previous state.

Altiris Local Recovery provides protection of files by backing up files to a hidden Altiris recovery partition. When you install the software, the Recovery Agent Partition Wizard guides you through the process of creating the recovery partition. After the partition is created, the tablet PC restarts and creates the first snapshot. After the snapshot is created, the tablet PC restarts and the software makes the snapshots available for recovery through Windows.

Local Recovery is installed with a default schedule so that snapshots of your files are automatically taken on a regular basis. You can change the snapshot schedule. For more information, see the Altiris Local Recovery Help.

You can access your snapshots in the Altiris Recovery Agent folder. Right-click the Altiris Recovery Agent icon on your Desktop, and then select **Open**. To restore one of the snapshots, select the snapshot to restore, and then drag the file to the appropriate location on your hard drive.

For more information on configuring and using Altiris Local Recovery, visit the HP Web site at <http://www.hp.com/go/easydeploy> or open the software and select **Help** on the menu bar.

Setting System Restore Points

Tablet PCs with Windows XP Tablet PC operating systems provide the option of setting *system restore* points (checkpoints) daily as you change your personal settings. The tablet PC may also set restore points when you add new software or devices. You should periodically set system restore points when the tablet PC is functioning at optimal performance and before installing new software or devices. Doing this enables you to return to a previous configuration restore point if you encounter problems.

To set a system restore point manually:

1. Select **Start > Help and Support > System Restore**.
2. Select **Create a restore point**, and then follow the instructions on the screen.

To restore the tablet PC to a previous date and time when it was functioning optimally:

1. Make sure the tablet PC is connected to a reliable AC outlet through the AC adapter.
2. Select **Start > Help and Support > System Restore**.
3. Select **Restore my computer to an earlier time**, and then follow the instructions on the screen.

Repairing or Reinstalling Applications

All applications preinstalled or preloaded on your tablet PC can be repaired or reinstalled by using the *Application and Driver Recovery* disc.



If you have not reinstalled your operating system, some applications preloaded on your tablet PC, such as those available in the Software Setup utility, can also be repaired or reinstalled from your hard drive.

The application reinstallation process repairs or replaces corrupted system files within the application and reinstalls deleted system files within the application.

- In most cases: If the application you are repairing or reinstalling is still installed on your tablet PC, the reinstallation process does not affect your settings within the application.
- In all cases: If an application has been deleted from your tablet PC, the reinstallation process reinstalls the application or utility to the factory image.


Reinstalling Applications from Your Hard Drive

To reinstall a preloaded application or utility from your hard drive:

- » Select **Start > All Programs > Software Setup**, and then follow the instructions on the screen. (When you are prompted to select the software you want to reinstall, select or clear the appropriate check boxes.)

Repairing the Operating System

To attempt an operating system repair without deleting your personal data, use the *Operating System* disc that was shipped with the tablet PC:

1. Connect an optional external MultiBay or MultiBay II to the tablet PC.
2. Connect the tablet PC to external power and turn on the tablet PC.
3. Immediately insert the *Operating System* disc into the optical drive of an optional external MultiBay or MultiBay II.
4. Restart the tablet PC.
5. When prompted, press any key to boot from the disc. (After a few minutes, the Welcome to Setup Wizard is displayed.)
 On the Welcome to Setup Wizard, do *not* press **R** (step 8 in this procedure) until you have completed steps 6 and 7.
6. Press **enter** to continue. A Licensing Agreement screen is displayed.
7. Press **f8** to accept the agreement and continue. (The Setup window is displayed.)
8. Press **R** to repair the selected Windows installation. (The repair process begins. This process may take up to 2 hours to complete. The tablet PC restarts in Windows after the process is complete.)

Reinstalling the Operating System



CAUTION: To prevent the loss of all of your personal data, back up your data before reinstalling the operating system. Personal data and any software you have installed on the tablet PC will be lost during the operating system reinstallation process.



The Multilingual User Interface (MUI) is installed on select models only. For more information, refer to “[Multilingual User Interface \(MUI\)](#)” later in this chapter.

If other recovery efforts do not successfully repair the tablet PC, you can reinstall the operating system.

To reinstall the operating system:

1. Connect an optional external MultiBay or MultiBay II to the tablet PC.
2. Connect the tablet PC to external power and turn on the tablet PC.
3. Immediately insert the *Operating System* disc into the optical drive of an optional external MultiBay or MultiBay II.
4. Restart the tablet PC.
5. When prompted, press any key to boot from the disc. After a few minutes, the **Welcome to Setup** window is displayed.
6. Press **enter** to continue. A Licensing Agreement screen is displayed.
7. Press **f8** to accept the agreement and continue. The **Setup** window is displayed.
8. Press **esc** to continue installing a new copy of the operating system instead of repairing it.
9. Press **enter** to set up the operating system.

10. Press **C** to continue setup using this partition.
11. Select **Format the partition using the NTFS file system (Quick)** and press **enter**.



CAUTION: Formatting this drive will delete all current files.

12. Press **F** to format the drive. (The reinstallation process begins. This process may take up to 2 hours to complete. The tablet PC restarts in Windows when the process is complete.)

Reinstalling Device Drivers and Other Software

After the operating system installation process is complete, you must reinstall drivers.

To reinstall drivers, use the *Application and Driver Recovery* disc included with the tablet PC:

1. While running Windows, insert the *Application and Driver Recovery* disc into the optical drive of an optional external MultiBay or MultiBay II.

If you do not have autorun enabled, select **Start > Run**. Then type `D:\SWSETUP\APPINSTL\SETUP.EXE` (where D indicates the optical drive).

2. Follow the on-screen instructions for installing the drivers.

After the drivers are reinstalled, you must reinstall any software you added to the tablet PC. Follow the installation instructions provided with the software.

Multilingual User Interface (MUI)

The Windows XP Multilingual User Interface (MUI) is an add-on to the English version of the Windows XP Tablet PC Edition. It allows users or administrators to switch the operating system user interface (menus, dialogs, and so on) from one language to another, or to vary the language interface for each user. This feature simplifies administration and support in multilingual computing environments.

Enabling and Switching MUI Languages

To switch between installed languages on the MUI:

1. Select **Start > Control Panel > Date, Time, Language, and Regional Options**.
2. Select **Regional and Language Options**.
3. Select the **Language** tab.
4. Select the language from the Language Used in Menus and Dialogs drop-down menu at the bottom of the dialog box.
5. Select the **Advanced** tab.
6. In the Language for non-Unicode programs section, change the language selection to match the MUI language.

Switching the Language on the Tablet PC Input Panel

The writing pad in Tablet PC Input Panel converts your handwriting into typed text and inserts it in a software application that you specify, such as a word processing document. Depending upon which language version is installed on the tablet PC, you will see different options on the Tablet PC Input Panel.

To change the language for handwriting recognition:

- » Select the language you want to use from the drop-down list.



If you want to input text in an Asian language, you must use the Asian character input pad.

Restoring the MUI Capabilities After Reinstalling the Operating System

After you have reinstalled the operating system, you must install the Microsoft .NET Framework to restore full MUI capabilities. The Microsoft .NET Framework can be installed from the *Driver Restore* disc.

To install the .NET Framework:


1. Insert the *Driver Restore* disc into an optical drive in the MultiBay of an optional tablet PC Docking Station, or into an external MultiBay.



If Autorun is enabled on your system, the installation program launches automatically and you can proceed directly to step 5.

2. Select **Start > Run**.
3. Enter `x:\SWSETUP\APPINSTL\SETUP.EXE` (where *x* is the letter assigned to the drive where you have inserted the disc).
4. Select **OK**.

5. At the Software Setup screen, select the check box next to Microsoft .NET Framework 1.1.

 To find the listing for Microsoft .NET Framework, select the plus sign (+) next to the Core Components heading.

6. Select **Next**.
7. Follow the on-screen instructions to complete the Microsoft .NET installation.

Updating Bluetooth Software Through the Flash Upgrade Utility

A Flash Upgrade Utility is provided with the Bluetooth software to provide a means to upload firmware updates to the Bluetooth integrated module. As new features are implemented in Bluetooth, or if firmware updates are needed, they will be available through a SoftPaq on the HP Web Site at <http://www.hp.com>.

To upload new firmware to the Bluetooth module:

1. To access the page at the HP Web site that provides software for your tablet PC, visit <http://www.hp.com/support>.
2. Follow the instructions at the site to find the SoftPaq in the Support section for Bluetooth.

Tablet PC Care



WARNING: To reduce the risk of electric shock or damage to internal components, do not allow liquids to drip onto the tablet PC keyboard.



CAUTION: To prevent possible damage to the display, do not place anything on top of the tablet PC even when it is in the carrying case.



CAUTION: To prevent overheating, do not obstruct the vents. Do not allow a hard surface, such as an adjoining optional printer, or a soft surface, such as fabric or carpet, to block the airflow.

Your tablet PC is designed as a durable product. To maintain its performance and promote longevity, follow these guidelines:

- Carry and store your tablet PC in a portable carrying case.
- Keep Zip disks, and modular disk drives away from magnetic fields, which can erase your data.
- Keep liquids and excessive moisture away from your tablet PC and keyboard to prevent costly repairs.
- Avoid exposing your tablet PC to direct sunlight, extreme temperatures, or ultraviolet light for extended periods of time.

- Use your tablet PC only on a solid, flat surface. Make sure that vents, which cool internal components, are unobstructed.
- If the tablet PC will be idle for a week or more, shut it down.
- If the tablet PC will be disconnected from external power for more than 2 weeks:
 - Shut down the tablet PC.
 - Remove all battery packs and store them in a cool, dry place.

Temperature



WARNING: To avoid potential discomfort or burns, do not block the air vents or use the tablet PC on your lap for extended periods. The tablet PC is designed to run demanding applications at full power. As a result of increased power consumption, it is normal for the tablet PC to feel warm or hot when used continuously. The tablet PC complies with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Cleaning



WARNING: To reduce the risk of electric shock, always disconnect the tablet PC from the power outlet and disconnect peripherals before attempting to clean your tablet PC or any of its components.




WARNING: To prevent permanent damage to your tablet PC, do not spray liquids on the display, keyboard, or the exterior of your tablet PC.


Keyboard

Clean the keyboard regularly to prevent keys from sticking and to remove dust, lint, and particles that can become trapped beneath the keys. Ideally, use a can of compressed air with a straw extension to blow air under and around the keys.



 **CAUTION:** To prevent permanent damage, do not clean the keyboard with liquids of any kind. Do not use a regular vacuum cleaner to clean the keyboard, because you may deposit normal household debris on the surfaces, rather than remove it.

Display

 **CAUTION:** To prevent permanent damage to your tablet PC, never spray water, cleaning fluids, or chemicals on the screen.

To remove smudges and lint, frequently clean your display with a soft, damp, lint-free cloth. If the screen requires additional cleaning, use an antistatic screen cleaner or premoistened antistatic wipes.


TouchPad

Grease and dirt on the TouchPad can cause your cursor to jump around on the display screen. To avoid this, wash hands frequently when using the tablet PC and clean the TouchPad with a damp cloth.


External Mouse

Keeping an external mouse clean can substantially improve its performance and prevent loss of mouse pointer control. To clean an external mouse, complete the following steps:


1. Turn the mouse over and rotate the circular plate about 1/4-inch counterclockwise until it pops loose. Most mice have an arrow to indicate the direction to turn the plate.

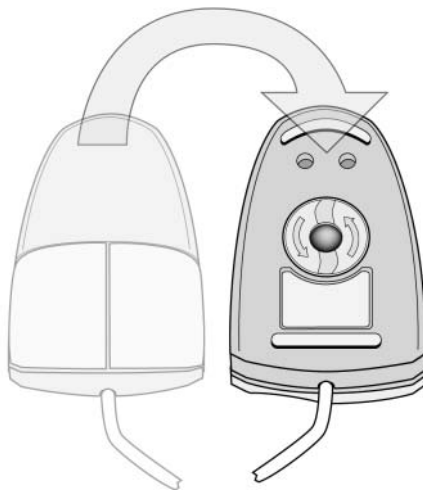

2. Remove the ball from your mouse and clean it with an antistatic wipe or a lint-free cotton cloth.

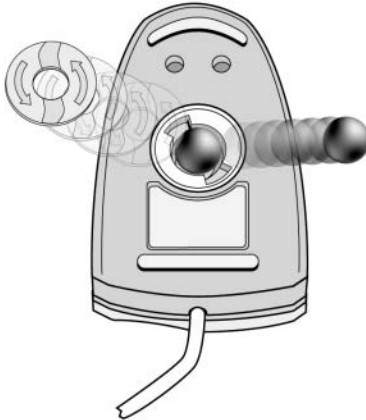

3. Spray the inside of the mouse with compressed air or clean it with a noncotton swab to remove loose debris and dust.

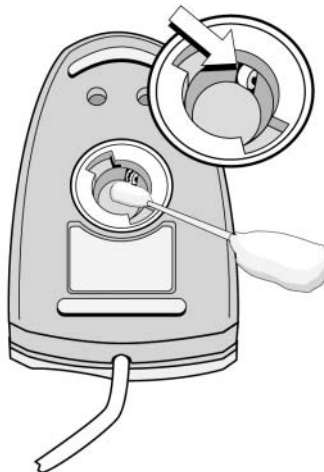

4. Replace the ball and the bottom plate.

Travel and Shipping

Preparation for Travel and Shipping

To prepare the tablet PC for shipping or traveling:

1. Back up your work.
2. Turn off and then disconnect all external devices.
3. Shut down the tablet PC.
4. If the tablet PC will be disconnected from an external power source for more than 2 weeks, remove all battery packs and store them in a cool, dry place.
5. If you are shipping the tablet PC, place it in the original packing box or similar protective packaging and label the package “FRAGILE.”

Tips for Traveling with Your Tablet PC

- Take along a backup of your work. Keep the backup separate from the tablet PC.
- When traveling by air, carry your tablet PC as hand baggage. Do not check it in with the rest of your luggage.
- Do not expose the tablet PC or diskettes to a magnetic security detector.
 - The security device that examines carry-on items placed on a conveyor belt uses x-rays and is safe for the tablet PC and diskettes.
 - The walk-through security device and the handheld security wands are magnetic and may damage the tablet PC or diskettes.
- If you plan to use the tablet PC during a flight, check with the airline in advance. In-flight tablet PC use is at the discretion of the airline.
- If your tablet PC has a GSM device, such as the GPRS Multiport Module, you must turn off the GSM device on your tablet PC before boarding and keep it turned off if you plan to use your tablet PC during the flight.
- If you are traveling internationally:
 - Consult with Customer Care about power cord and adapter requirements for each location in which you plan to use the tablet PC. (Voltage, frequency, and plug configurations vary.) Refer to the *Worldwide Telephone Numbers* booklet (English only) to contact Customer Care for help and support.



WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not attempt to power the tablet PC with a voltage converter kit sold for appliances.

- Check the computer-related customs regulations for each country on your itinerary.

Specifications

Operating Environment

The operating environment information in the following table might be helpful if you plan to use or transport the tablet PC in extreme environments.

Factor	Metric	U.S.
Temperature		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	-15 m to 12,192 m	-50 ft to 40,000 ft

Rated Input Power

The power information in this section might be helpful if you plan to travel internationally with the tablet PC.

The tablet PC operates on DC power, which can be supplied by an AC or a DC power source. Although the tablet PC can be powered from a stand-alone DC power source, it is strongly recommended that the tablet PC be powered only with an AC adapter or DC power cord supplied or approved by HP.

The tablet PC is capable of accepting DC power within the following specifications:

Input Power	Rating
Operating voltage	18.5 V dc @ 3.5 A - 65 W
Operating current	3.5 A

This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 Vrms.

MultiBoot

A bootable medium or network interface card (NIC) contains files that the tablet PC needs to properly start and operate. The MultiBoot utility, disabled by default, enables you to identify the devices and control the sequence in which the system attempts to boot from those devices as it starts up your tablet PC.

Bootable devices include optical drive discs, such as CDs or DVDs, bootable diskettes, or NICs.



Some devices, including USB devices and NICs, must be enabled in Computer Setup before they can be included in the boot sequence. For more information, refer to [“Bootable Devices in Computer Setup”](#) in this chapter.

Default Boot Sequence

By default, when more than one bootable device is in the system, the tablet PC chooses the startup device by searching enabled devices and locations in a predetermined sequence.

On every boot, the system looks for bootable drive A devices first. If it fails to find a bootable drive A device, it searches for bootable drive C devices. Drive A devices include optical drives and diskette drives. Drive C devices include optical drives and primary hard drives.

The primary hard drive can only boot as drive C. The NIC does not have a drive letter assigned to it.



An optical drive device (such as a CD-ROM drive) can boot either as drive A or drive C, depending on the format of the CD. Most bootable CDs boot as drive A. If you have a CD that boots as the C drive, the system will boot the diskette drive before it boots the CD.

By default, the tablet PC selects the startup device by searching enabled devices and locations in a predetermined sequence.

You can change the sequence in which the tablet PC searches for a startup device by enabling MultiBoot and entering a new startup sequence, also called a *boot order*. Or, you can use MultiBoot Express to set the tablet PC to prompt you for a startup location each time the tablet PC is started or restarted.

The list below describes the default sequence in which drive numbers are assigned. (The actual startup sequence varies by configuration.)

- Default sequence for devices that boot as drive A:
 - a. Optical drive in an optional docking device MultiBay or in an external MultiBay that contains a disc that boots as drive A.
 - b. Diskette drive in an optional docking device or in an external MultiBay.
- Default sequence for devices that boot as drive C:
 - a. An optical drive in an optional docking device MultiBay or in an external MultiBay that contains a disc that boots as drive C.
 - b. Hard drive in the tablet PC primary hard drive bay.
 - c. Hard drive in an optional docking device MultiBay or in an external MultiBay.



Since no drive letter is associated with the NIC, changing the boot order of a NIC does not affect drive letters of the other devices.

Bootable Devices in Computer Setup

The tablet PC can start up from a USB device or the NIC only if that device has been enabled for inclusion in MultiBoot.

To enable a device or location for inclusion in MultiBoot:

1. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
2. To enable bootable media in USB drives or in drives inserted into an optional docking device, use the arrow keys to select **Advanced > Device options**. Then select **Enable USB legacy support**.

– or –

To enable a NIC, select **Security > Device security**, and then select **Internal network adapter boot**.

3. Save your preferences and exit Computer Setup by using the arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and they take effect when the tablet PC restarts.



To connect a NIC to a Preboot eXecution Environment (PXE) or Remote Program Load (RPL) server during startup without using MultiBoot, quickly press **f12** when the Network Service Boot message appears in the lower-right corner of the screen.

MultiBoot Results

Before changing the startup sequence, consider the following:

- When the tablet PC restarts after the boot order has been changed, it considers only the first device of each drive type when searching for a startup device (except for optical devices).

For example, assume that the tablet PC is connected to an optional docking device containing an optical drive and a diskette drive. In the default boot sequence, the optical drive comes before the diskette drive. If the system fails to boot to the optical drive (either because it does not contain a disc or because the disc is not bootable) it does not try to boot to the diskette drive. Instead, it tries to boot to the first hard drive device present in the system. However, if there are two optical devices, and the first optical device does not boot, the system tries to boot to other optical devices in the system.

- Changing the boot sequence also changes the logical drive designations. For example, if you start up from a CD-ROM drive with a disc that boots as drive C, that CD-ROM drive becomes drive C and the hard drive in the hard drive bay becomes drive D.
- Starting up from a NIC does not affect logical drive designations because no drive letter is associated with the NIC.
- Drives in an optional docking device are treated like external USB devices in the boot sequence and must be enabled in Computer Setup.

MultiBoot Preferences

There are 2 ways to set MultiBoot sequences:

- Set a new default boot sequence that the tablet PC uses each time it starts up.
- Use variable boot sequences using MultiBoot Express. This feature prompts you for a startup device each time the tablet PC is started or restarted.

Setting a New Default Boot Sequence

Use Computer Setup to set a startup sequence that the tablet PC uses each time it is started or restarted:

1. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - To change the language, press **f2**.
 - For navigation instructions, press **f1**.
2. Use the arrow keys to select **Advanced > Boot options**, and then press **enter**.
3. Toggle the **MultiBoot** field to **Enable**.
4. Toggle the **Boot Order** fields to the boot sequence that you prefer.
5. Save your preferences and exit Computer Setup by using the arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup, and they take effect when the tablet PC restarts.

Setting a MultiBoot Express Prompt

Use Computer Setup to set the tablet PC to display the MultiBoot startup location menu each time the tablet PC is started or restarted:

1. Open Computer Setup by turning on or restarting the tablet PC. Press **f10** while the F10 = ROM Based Setup message is displayed in the lower-left corner of the screen.
 - ❑ To change the language, press **f2**.
 - ❑ For navigation instructions, press **f1**.
2. Use the arrow keys to select **Advanced > Boot options**, and then press **enter**.
3. In the **Express Boot Popup Delay (Sec)** field, select the length of time in seconds that you want the tablet PC to display the startup location menu before it defaults to the current MultiBoot setting (when 0 is selected, the Express Boot startup location menu is not displayed.)
4. Save your preferences and exit Computer Setup by using the arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup, and they take effect when the tablet PC restarts.

Entering MultiBoot Express Preferences

When the **Express Boot** menu is displayed during startup:

- To specify a startup location from the **Express Boot** menu, select your preference within the allotted time, and then press **enter**.
- To prevent the tablet PC from defaulting to the current MultiBoot setting, press any key before the allotted time expires. The tablet PC will not start up until you select a startup location and press **enter**.
- To allow the tablet PC to start up according to the current MultiBoot settings, wait for the allotted time to expire.

Client Management

Client Management Solutions provides standards-based solutions for managing client (user) desktop, workstation, notebook computers, and tablet PCs in a networked environment.

The key capabilities and features of client management are

- Initial software image deployment.
- Remote system software installation.
- Software management and updates.
- ROM updates.
- Tracking and security of computer assets (the hardware and software installed on the computer).
- Fault notification and recovery of certain system software and hardware components.



Support for specific features described in this chapter may vary, depending on the computer model and/or version of management software installed on your computer.

Configuration and Deployment

HP computers come with a preinstalled system software image. The initial software image is configured during the first-time setup of the computer. After a brief software “unbundling” occurs, the computer is ready to be used.

A customized software image can be deployed (distributed) by

- Installing additional software applications after unbundling the preinstalled software image.
- Using software deployment tools, such as Altiris Deployment Solutions, to replace the preinstalled software with a customized software image.
- Using a disk cloning process to copy the contents from one hard drive to another.

The deployment method you should use depends on your organization’s technology environment and processes. Visit the HP Web site at <http://www.hp.com/go/pcsolutions> for more information on selecting the best deployment method for your organization.



The system recovery discs, Computer Setup utility, and other system features provide further assistance with recovery of system software, configuration management and troubleshooting, and power management.

Software Management and Updates

HP provides several tools for managing and updating software on client PCs—HP Client Manager Software, an Altiris solution; Altiris Local Recovery; Altiris PC Transplant Pro; and System Software Manager.

HP Client Manager Software

HP Client Manager Software (HP CMS) integrates HP Intelligent Manageability technology within Altiris software. HP CMS provides superior hardware management capabilities for HP devices that include:

- Detailed views of hardware inventory for asset management.
- *PC health check* monitoring and diagnostics.
- Web-accessible reporting of business-critical details such as machines with thermal warnings, and memory alerts.
- Remote updating of system software such as device drivers and ROM BIOS.



Additional functionality can be added when HP CMS is used with optional Altiris Solutions software (purchased separately). For more information, refer to “[Altiris Local Recovery](#).”

For more information on HP Client Manager, visit the HP Web site at <http://www.hp.com/go/easydeploy>.

When HP Client Manager Software (installed on a client computer) is used with Altiris Solution software (installed on an administrator computer), HP CMS provides increased management functionality. HP Client Manager provides centralized hardware management of HP client devices for the following IT life cycle areas:

- **Inventory and Asset Management**
 - ❑ Software license compliance
 - ❑ Computer tracking and reporting
 - ❑ Computer lease contract information and fixed asset tracking
- **System Software Deployment and Migration**
 - ❑ Windows 2000/XP migration
 - ❑ System deployment
 - ❑ Personality (personal user settings) migration
- **Help Desk and Problem Resolution**
 - ❑ Managing Help Desk tickets
 - ❑ Remote troubleshooting
 - ❑ Remote problem resolution
 - ❑ Client disaster recovery
- **Software and Operations Management**
 - ❑ Ongoing client management
 - ❑ HP system software deployment
 - ❑ Application self-healing (the ability to identify and repair certain application problems)

Altiris Solutions software provides easy-to-use software distribution capabilities. On selected desktop and tablet PC models, an Altiris management agent is included as part of the preloaded software. This agent enables communication with the Altiris Solutions software, which can be used to complete new hardware deployment or personality migration to a new operating system using easy-to-follow wizards.

When Altiris Solutions software is used in conjunction with System Software Manager or the HP Client Manager, administrators can also update ROM BIOS and device driver software from a central console.

For more information, visit the HP Web site at <http://www.hp.com/go/easydeploy>.

Altiris PC Transplant Pro

Altiris PC Transplant Pro allows you to preserve old settings, preferences, and data and migrate them to a new environment quickly and easily.

For more information, visit the HP Web site at <http://www.hp.com/go/easydeploy>.

System Software Manager

System Software Manager (SSM) lets you remotely update system-level software on multiple systems simultaneously. When executed on a client computer, SSM detects both hardware and software versions, and then updates the appropriate software from a central repository, known as a file store. Driver versions that are supported by SSM are denoted with a special icon on the HP driver download Web site and on the *Support Software* CD. To download the utility or to obtain more information on SSM, visit the HP Web site at <http://www.hp.com/go/ssm>.

Index

A

- AC adapter, disconnecting
2–17
- AC power 2–17
- accessing tablet PC
 - information 16–2
- adapter, modem 11–3
- adjusting the volume 5–4
- airport security devices 6–2
- altitude specifications A–1
- ambient light sensor 3–17
- analog vs. digital line 11–1
- antennae 1–16
- antivirus software 14–21
- applications. *See* software
- audio-in (microphone) jack
1–11, 5–2
- audio-out (headphone) jack
1–11, 5–2
- AutoPlay 5–11
- autorun 5–11

B

- battery bay, primary
 - inserting battery pack 2–19
 - removing battery pack
2–19

- battery charge displays
 - hotkey 3–6
 - increasing accuracy 2–22
 - interpreting 2–23
- battery light 1–2
- battery pack
 - calibrating 2–26
 - disposing of 2–33
 - monitoring charge 2–22
 - primary 2–19
 - primary bay 1–15
 - recycling 2–33
 - storing 2–17, 2–32
 - travel battery connector
1–15
 - See also* battery power
- battery pack release latch 1–15
- battery power
 - conserving 2–30
 - low-battery conditions
2–24
 - running tablet PC on 2–17
 - See also* battery pack
- BIOS Configuration for
ProtectTools 14–27
- BIOS information, displaying
14–3
- Bluetooth device 13–10

- Bluetooth module 1–9
- Brightness item on Q Menu 12–9
- buttons
 - esc 4–12
 - Info Center 1–13, 3–20
 - left pointing stick 1–3
 - left TouchPad 1–3
 - PC Card eject 1–11, 7–3
 - pen 4–2
 - pen eject 1–7
 - Presentation mode 1–4, 3–14
 - Q 1–6, 4–10
 - reset 4–11
 - right pointing stick 1–3
 - right TouchPad 1–3
 - rotate 1–6, 4–10
 - Tablet PC Input Panel
 - Launch 1–6, 4–10
 - volume 1–4
 - Windows Security 1–8, 4–8, 4–11
 - wireless 1–13
 - See also* jog dial
- C**
- cable lock, security 14–29
- cables
 - modem 11–1
 - network 11–8
- calibration, battery 2–26
- cap, replacing pointing stick 3–3
- caps lock light 1–1
- Capture Screen item on Q Menu 12–9
- Capture Window item on Q Menu 12–10
- card and socket services, PC Card 7–1
- card. *See* digital memory cards
- CDs, *Support Software* CD 16–1
- command controls
 - identified 4–7
 - procedures 4–10
 - Quick Reference 4–9
- Computer Setup
 - accessing 15–1
 - Advanced menu 15–7
 - changing language in 15–2
 - displaying ROM
 - information with 16–3
 - File menu 15–4
 - navigating 10–3
 - procedures 15–1
 - restoring defaults 15–3
 - Security menu 15–5
 - setting security preferences 14–4
 - tablet PC information 16–2
 - Tools menu 15–6
 - USB legacy support 10–3, 15–1
- connectors
 - docking 1–14
 - drive 6–2
 - power 1–10
 - travel battery 1–15

- controls, command 4–7
- copyright warning 5–10
- country-specific modem cable adapter 11–3
- Credential Manager for ProtectTools 14–26
- critical low-battery condition
 - identifying 2–24
 - restoring from 2–25
- Critical Security Updates for Windows XP* 14–24
- ctrl+alt+delete command 4–11
- D**
- device disabling 14–18
- device drivers
 - external devices 6–9
 - PC Card 7–1
- device security 14–18
- dial, jog 4–12
- Digital Media Slot 1–11
- digital memory cards,
 - inserting 8–2
- digital memory cards,
 - removing 8–3
- digital vs. analog line 11–1
- disabling
 - internal keypad 3–22
 - num lock 3–23
- disc, optical. *See* CDs; DVDs
- display release button 1–9
- display switch, setting preferences 3–16
- display, switching image to or from 3–6, 3–7
- docking connector 1–14
- downloading
 - software 16–5
 - system ROM 16–4
- drive media affected by airport security 6–2
- DriveLock 14–13
- drives
 - affected by airport security 6–2
 - caring for 6–1
 - shipping 6–2
- DVD region settings 5–11
- DVDs
 - Application and Driver Recovery* disc 16–6
 - Operating System* disc 16–6
- E**
- electrostatic discharge (ESD) 6–2, 9–1
- embedded numeric keypad 3–22
- Embedded Security for ProtectTools 14–25
- enablers, PC Card 7–1
- enabling
 - internal keypad 3–22
 - num lock 3–23
- enter command 4–12
- environmental specifications A–1
- ESD (electrostatic discharge) 6–2
- expansion memory module,
 - adding 9–2

- Extended Desktop item on Q Menu 12–11
- external devices 6–9
- external keypad 3–23
- external monitor
 - connecting 5–7
 - switching image 3–7
- external monitor port 1–10
- External Only item on Q Menu 12–11
- F**
- firewall software 14–22
- fn** key 1–5, 3–10, 3–21
- freeze, system 4–11
- function keys 1–5, 3–5
- H**
- hard drive
 - caring for 6–1
 - DriveLock 14–13
 - IDE drive light 6–3
 - installing, primary 6–6
 - removing, primary 6–4
 - replacing, primary 6–4
- hard drive bay 1–15
- headphone jack 1–11, 5–2
- headphones 5–3
- hibernation
 - exiting 1–13, 2–2, 2–25
 - file space requirements for 9–16
 - initiated during critical low-battery condition 2–24
 - initiating 2–9, 12–14
 - restoring from 2–9
 - hibernation file 9–16
 - holder, pen 4–5
 - hotkeys
 - shortcut reference to commands 3–6
 - switch image 3–7
 - with external keyboards 3–10
- HP administrator password 14–8
- HP password 14–5
- HP password guidelines 14–6
- HP ProtectTools Security Manager 14–25
- hub, USB 10–2
- humidity specifications A–1
- I**
- IDE drive light 1–1, 6–3
- increasing memory 9–16
- Info Center button 1–13, 3–20
- infrared 13–16, 13–17
- infrared port 1–9
- initiating hibernation 2–9
- initiating standby 2–10
- installing CD and DVD software 5–10
- installing the primary hard drive 6–6
- Internal and External item on Q Menu 12–11
- Internal Only item on Q Menu 12–10, 12–11
- Internet Connection Firewall 14–22

J

- jacks
 - audio-in (microphone)
1–11, 5–3
 - audio-out (headphone)
1–11, 5–3
 - RJ-11 (modem) 1–10, 11–1
 - RJ-45 (network) 1–10,
11–8
 - S-Video-out 1–10, 5–5
- jog dial
 - location 1–8, 4–8
 - procedures 4–12
 - using 4–12

K

- keyboard
 - external 3–10
 - external USB supported
4–1
 - on-screen 4–15
 - USB 10–2
- keypads
 - embedded numeric 3–21
 - enabling/disabling 3–22
 - external 3–23
- keys
 - fn** 1–5, 3–10, 3–21, 3–22
 - function 1–5, 3–10
 - hotkeys 3–10
 - internal keyboard 3–22
 - keypad 1–5
 - num lk** 3–21, 3–22
 - shortcut 3–10
 - Windows applications 1–5
 - Windows logo 1–5

L

- landscape orientation 4–13
- Landscape View, Primary and
Secondary 4–13
- Landscape-Primary item on Q
Menu 12–12
- Landscape-Secondary item on
Q Menu 12–13
- left pointing stick button 1–3
- left TouchPad button 1–3
- lights
 - battery 1–2
 - caps lock 1–1
 - IDE drive 1–1, 6–3
 - num lock 1–2, 3–21
 - power 1–2
 - volume mute 1–1
 - wireless 1–2
- lock, security cable 14–29
- low-battery conditions
 - identifying 2–24
 - resolving 2–25

M

- magnets 1–17
- media, drive affected by
airport security 6–2
- memory
 - expansion memory
module, adding 9–2
 - increasing RAM 9–16
 - primary memory module,
replacing 9–6
 - primary memory module,
upgrading 9–2
- microphone jack 1–11, 5–2

microphone, internal 5-2
modem
 connecting 11-2
 country-specific adapter
 11-3
modem cable 11-1
modem jack 1-10, 11-1
monitor
 connecting 6-9
 external 5-7
 switching image 3-16
monitor, external, switching
 display 3-7
mouse, external
 setting preferences for 4-1
 supported 4-1
MultiBay II, external 6-9
MultiMediaCard 8-1
mute button 1-4
Mute On/Off item on Q Menu
 12-9

N

network
 connecting 11-9
 noise suppression circuitry
 11-8
network cable 11-8
network jack 1-10
Norton AntiVirus 14-21
num lock key 3-22
num lock light 1-2, 3-22
number keys, on on-screen
 keyboard 4-15
numeric keypad 3-22

O

on-screen keyboard 4-15
operating environment
 specifications A-1
operating system 14-22
 passwords 14-5
 security 14-1
overhead projector
 connecting 6-9
 switching display to or
 from 3-6

P

passwords
 DriveLock 14-14
 forgetting 14-4
 HP 14-5
 HP administrator 14-8
 HP guidelines 14-6
 power-on 14-10
 using 14-4
 Windows 14-5
 Windows guidelines 14-6
passwords, coordinating 14-6
PC Card
 enablers and card socket
 services 7-1
 inserting 7-1, 7-2
 removing 7-3
 stopping 7-3
 types 7-1
PC Card eject button 1-11,
 7-3
PC Card slot 1-11
PCMCIA cards 7-1

- pen
 - attaching 4–5
 - calibrating 4–4
 - changing tip 4–6
 - components 1–18
 - eject button 1–7
 - entering information with 4–2
 - Help and tutorials 4–1
 - Journal application 4–1
 - pen-activated buttons 4–7
 - setting preferences for 4–5
 - pen button 4–2
 - pen eraser 1–18
 - pen holder 1–7
 - pen-activated buttons
 - Q Menu 1–6, 4–7
 - rotate 1–6, 4–7
 - Tablet PC Input Panel Launch 1–6, 4–7
 - peripherals, connecting and disconnecting 6–9
 - pointing device preferences 3–4
 - pointing devices
 - command controls 4–7
 - pen 4–1
 - setting preferences for 4–5
 - pointing stick
 - location 1–3
 - using 3–3
 - pointing stick cap, replacing 3–3
 - pointing stick, buttons 1–3
 - port, infrared 13–16
 - portrait orientation 4–13
 - Portrait View, Primary and Secondary 4–13
 - Portrait-Primary item on Q Menu 12–12
 - Portrait-Secondary item on Q Menu 12–12
 - power
 - switching between AC and battery 2–17
 - See also* battery power
 - power connector 1–10
 - Power Controls item on Q Menu 12–14
 - power light 1–2
 - power schemes 3–16
 - power settings
 - turning the tablet PC on or off 2–8
 - power switch 1–13
 - Presentation mode
 - Presentation Mode On/Off item on Q Menu 12–12
 - using 3–14
 - Presentation mode button 1–4, 3–14
 - projector
 - connecting 5–7, 6–9
 - switching display 3–7
- Q**
- Q button 1–6, 4–7, 12–1
 - Q Menu
 - button procedures 4–10
 - closing 12–2
 - controls 12–1
 - described 4–10

- displaying 12-2
- items, number supported 12-4
- items, obtaining
 - information about 12-3
 - selecting item from 12-2
 - setting preferences for 12-3
 - testing items on 12-3
- Q Menu icon 12-2
- Q Menu system-defined items
 - Brightness 12-9
 - Capture Screen 12-9
 - Capture Window 12-10
 - Extended Desktop 12-11
 - External Only 12-11
 - Hibernate 12-14
 - Internal and External 12-11
 - Internal Only 12-10, 12-11
 - Landscape-Primary 12-12
 - Landscape-Secondary 12-13
 - Mute On/Off 12-9
 - Portrait-Primary 12-12
 - Portrait-Secondary 12-12
 - Power Controls 12-14
 - Q Menu Settings 12-14
 - Shut Down 12-14
 - standby 12-13
 - Tablet PC Settings 12-14
 - Volume 12-9
 - Wireless On/Off 12-9
- R**
- RAM (random access memory) 9-16
- rated input power
 - specifications A-2
- region settings, DVD 5-11
- replacing
 - primary hard drive 6-4
 - primary memory module 9-6
- reset (emergency shut down) 4-11
- restoring from hibernation 2-9
- resuming from standby 2-10
- right pointing stick button 1-3
- right TouchPad button 1-3
- RJ-11 (modem) jack 1-10
- RJ-45 (network) jack 1-10
- rotate button 1-6, 4-7
 - procedures 4-10
 - setting preferences for 4-12
- rotating hinge 1-7
- S**
- Safeguarding Data 16-6
- SD (Secure Digital) Memory Card 8-1, 8-3
- security cable lock, connecting 14-29
- security cable slot 1-12
- security features 14-1
- security features on tablet PC
 - Computer Setup 14-4

- Setup utility
 - resetting the tablet PC 4–11
 - setting security preferences 14–4
- shortcut keys, external keyboards 3–10
- shutting down the tablet PC 2–8, 4–11
- slots
 - Digital Media 1–11, 8–1
 - memory module 9–12
 - PC Card 1–11
- Smart Card Security for ProtectTools 14–28
- socket services, PC Card 7–1
- software
 - antivirus 14–21
 - firewall 14–2, 14–22
 - Q Menu 12–1
 - security features 14–1
 - setting up 4–2
 - Setup utility 4–11
 - Tablet PC Input Panel 4–15
 - Task Manager 4–11
 - Windows Security window 4–11
- software updates 16–1
 - determining current version of system ROM 16–2
- speaker 1–13, 5–1, 5–2
- specifications
 - operating environment A–1
 - rated input power A–2
- standby
 - avoiding with infrared 13–17
 - exiting 1–13, 2–2
 - initiated during critical low-battery condition 2–24
 - initiating 2–10, 12–13
 - initiating with hotkey 3–6
 - resuming from 2–10
- standby item on Q Menu 12–13
- Support Software* CD 16–1
- S-Video
 - connecting cable 5–6
 - external video 5–5
- S-Video-out jack 1–10, 5–6
- switch, display
 - setting preferences 3–16
- switching display and image 3–6
- system information
 - displaying 3–6
 - options 14–20
- system lockup 4–11
- System Restore Points 16–8
- system ROM (Read Only Memory)
 - defined 16–1
 - determining current version of 16–2

T

- Tablet PC Button Driver
 - 12–15
- Tablet PC Input Panel
 - application 4–15
- Tablet PC Input Panel Launch
 - button 1–6, 4–7, 4–10
- Tablet PC Settings item on Q Menu 12–14
- telephone (RJ-11) jack,
 - modem cable 11–1
- television
 - connecting audio 5–5
 - connecting video 5–6
 - S-Video-out jack 5–6
 - switching image to or from 3–6
- temperature
 - specifications A–1
 - storage, for battery packs 2–32
- TouchPad area 1–3
- TouchPad buttons 1–3
- TouchPad scroll zone 1–3
- travel battery connector 1–15
- traveling with tablet PC,
 - environmental specifications A–2
- traveling with the tablet PC
 - battery pack temperature considerations 2–32
 - external power 2–25
 - protecting hardware connectors 8–2
 - turning off the tablet PC 4–11

U

- updating software 16–1
- USB connectors 10–2
- USB devices 10–1, 10–2,
 - 10–3
- USB hubs 10–2
- USB port 1–11, 1–13
- USB, legacy support 10–3,
 - 15–1

V

- VCR
 - connecting audio 5–5
 - connecting video 5–5
 - switching image to or from 3–6
- vents 1–12, 1–14
- video devices
 - S-Video-out jack 5–6
 - switching image to or from 3–6
- viruses, antivirus software 14–21
- volume
 - controls 1–4, 5–1
 - mute light 1–1
- Volume item on Q Menu 12–9

W

- Windows applications key 1–5
- Windows firewall 14–2,
 - 14–22
- Windows logo key 1–5
- Windows password guidelines 14–6

- Windows Security button
 - identified 1–8, 4–8
 - procedures 4–11
- wireless
 - types of WLAN adapters 13–8
 - wireless local area network (WLAN) 13–8
 - WLAN software 13–9
- wireless button 1–13, 13–12
- wireless device antennae 1–16
- wireless light 1–2
- Wireless On/Off item on Q Menu 12–9
- WLAN (Wireless Local Area Network)
 - identifying devices 13–8
 - software 13–9
 - troubleshooting 13–9
 - types 13–8