

HP 10s Scientific Calculator User's Guide



Notice

REGISTER YOUR PRODUCT AT: www.register.hp.com

THIS MANUAL AND ANY EXAMPLES CONTAINED HEREIN ARE PROVIDED "AS IS" AND ARE SUBJECT TO CHANGE WITHOUT NOTICE. HEWLETT-PACKARD COMPANY MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MANUAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD CO. SHALL NOT BE LIABLE FOR ANY ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, PERFORMANCE, OR USE OF THIS MANUAL OR THE EXAMPLES CONTAINED HEREIN.

© Copyright 2005, 2007 Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation of this manual is prohibited without prior written permission of Hewlett-Packard Company, except as allowed under copyright laws.

Hewlett-Packard Company 16399 West Bernardo Drive MS 8-600 San Diego, CA 92127-1899 USA

Contents


| Notice |
|--|
| Using the Protective Case 4 |
| Safety Precautions |
| Other Precautions |
| Two-Line Display 7 |
| Preparing to Use the Calculator |
| Basic Calculations 11 Arithmetic Operations 12 Calculation with Fractions 12 Calculation with fractions 12 Converting between decimal and fractional display 13 Converting between Mixed and Improper Fractions 13 Calculating Percentages 14 About Calculating Percentages 14 Calculations Involving Degrees, Minutes and Seconds 15 FIX, SCI, RND 15 |
| Calculations Involving the Memory |

| Variable M | |
|---|----|
| Variables | 18 |
| Scientific Functions | 19 |
| Trigonometric and Inverse Trigonometric | |
| Functions | 20 |
| Common Logarithms, Natural Logarithms and Antilogarithms | 20 |
| Square Root, Cube Root, Root, Square, Cube, Reciprocal, Factorial, Random Number, Circumference Ratio(π), Permutation and Combination | 20 |
| Converting Angular Measurements | 21 |
| Coordinate Systems (Pol (x,y) , Rec (r,θ)) | 22 |
| Expressing Numbers in Engineering | |
| Format | |
| Statistics | 23 |
| Standard Deviation-SD | 23 |
| Regression-REG | |
| Linear Regression | 27 |
| Logarithmic, Exponential, Mathematical | |
| Power and Inverse Regression | |
| Quadratic Regression | 28 |
| Technical Data | 29 |
| Troubleshooting | 29 |
| Error Messages | |
| Input Range | |
| Sequence of Operations | |
| Stack | 24 |
| Automatic Power-Saver | |
| | |
| Specifications | |
| Regulatory Information | 37 |
| Customer Support | 40 |
| | |

Using the protective case

Please do not slide the protective case over the LCD.

- Before use, slide the calculator out of the protective case as shown below.
- 2. After use, slide the protective case onto the calculator, as shown below.

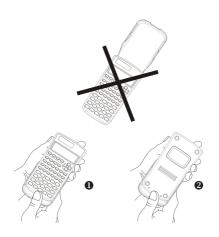

Safety Precautions

Before using this calculator, please read the following safety precautions carefully. Keep this manual handy so that you can refer to it when needed.

Notice



This symbol indicates that there is a risk of injury or damage if the specified safety precautions are ignored.

Battery

- Keep battery out of the reach of children. If a battery is swallowed, seek urgent medical advice
- Do not charge, attempt to disassemble, short circuit, or apply heat to the battery.
- When installing a new battery, orient it such that the positive sign is facing upwards.
- Use only the battery specified in this manual.

Disposing of the calculator

- Do not dispose of this calculator in an incinerator.
 It might explode and cause injury or fire.
- The representations of the display and the keys in this manual are for explanatory purposes only and may not exactly match what you see on the calculator.

Other Precautions

- Before using this calculator for the first time, press the ON key.
- The battery may lose some charge between the time the calculator leaves the factory and the time when it is purchased. Thus the original battery may not last as long as a new battery.

- When battery power is very low, the calculator's memory may become corrupt or be lost completely. To avoid loss of important information, keep a copy of it elsewhere.
- Avoid storing or using the calculator under extreme temperature conditions.

Low temperature will slow the calculator's response time, cause the display to appear incomplete, and shorten the life of the battery. In addition, the calculator should not be directly exposed to the sun or placed near a heater. High temperature may cause the casing to fade, distort the casing, or damage the internal circuitry.

- Avoid storing or using the calculator in damp conditions or when there is high humidity or excessive dust. Doing so will damage the internal circuitry.
- Do not drop the calculator or allow it to be subjected to extreme force.
- Do not twist, bend or otherwise distort the calculator.
- Note: Carrying the calculator in a pocket could cause it to twist or bend.
- Do not use a pen or other pointed object to press the calculator's keys.
- Use a soft dry cloth to clean the calculator.
 Opening the case of calculator voids the warranty.

If the calculator is very dirty, a neutral household cleanser diluted in water can be used to clean it. Dip a cloth in the solution and wring it out before applying it to the calculator. Do not use benzine, a diluting agent or any other volatile solvent to clean the calculator. Doing so may damage the casing and the keys.

Two-Line Display

The calculator shows both the expression being calculated and the result of the calculation. These appear in a two-line display.

- The expression being calculated is shown on the upper line.
- The result is shown on the lower line.

If the result has more than three digits, a separator appears before each group of three digits.

Preparing to Use the Calculator

■ Modes

Choose the appropriate mode before performing a calculation.

| Type of Calculation | Operation | Calculation mode |
|---------------------------------|-----------|------------------|
| Basic Calculation | MODE 1 | СОМР |
| Standard Deviation | MODE 2 | SD |
| Calculation using Regression | MODE 3 | REG |

- Press the week key to display each settings screen in turn. Each settings screen is described later in this guide.
- Throughout this guide, the mode setting required for each type of calculation is given when the calculation is explained.

Notes

● To return the calculator to its default settings, as indicated below press SMFT COR 2 (Mode) ■ in that order. The default settings are:

Calculation mode: COMP

Angle unit: Dea

Exponent display format: Norm 1

Fraction display: ab/c

Decimal point character: Dot

- The mode indicator appears in the upper part of the display.
- Before calculating, check the current mode setting (COMP, REG or SD) and the angle unit (Deg, Rad or Grad).

Input Limit

- When you input the 73rd step of any calculation, the cursor changes from " _ " to " " to alert you to the fact that the capacity of the memory is almost used up. If what you want to input contains more than 79 steps, separate the calculation into two or more smaller calculations and then combine them as you go.
- Press Ans to recall the previous result, which can then be used in the next calculation. Please see the section on Key Memory for more information about the Ans key.

■ Error Correction when Entering

- Press ■ or ■ to move the cursor to the position needed.
- Press DEL to delete the digit or function at the position of the cursor.
- Press the SMF INS keys to activate the insertion cursor []. Whatever you insert now will appear at the cursor's current position.
- Press the SMIT INS key to return the cursor to its normal functioning.

Recalling a Previous Calculation

- Each calculation and its result is kept in memory.
 Press to recall the previous calculation and its results.
 Press the key again to recall the next previous calculation, and so on.
- After any calculation, the calculation can be edited by pressing or immediately.
- Pressing AC does not clear the calculation memory. Therefore, when you press AC again, the previous calculations are still available.
- The capacity of the calculation memory to store expressions and calculation results is 128 bytes.
- The calculation memory is cleared if the:
 - ON key is pressed
 - SMIT CLR 2 (or 3) are pressed (which initializes the calculator)
 - calculation mode is changed
 - power supply is turned off

■ Error Indicator

 If an error occurs, press or . The calculation reappears and the cursor is located where the error is.

Multi-statement

A multi-statement is an expression consisting of two or more smaller expressions. The expressions are separated by a colon (:)

■ Exponent Display Format

The calculator can display up to 10 digits. Values needing more than 10 digits will automatically be displayed in exponent notation. Two exponent formats are available.

 To change the display format, press wor repeatedly until the appropriate settings screen appears.

| Fix | Sci | Norm |
|-----|-----|------|
| 1 | 2 | 3 |

 For an exponent setting, press 3. In the settings screen that appears, press 1 to choose Norm 1 or 2 to choose Norm 2.

Norm 1

Exponent notation is applied automatically to any number whose absolute value is greater than or equal to 10^{10} or less than 10^{-2} .

Norm 2

Exponent notation is applied automatically to any number whose absolute value is greater than or equal to 1010 or less than 1000.

In this manual, results are expressed in Norm 1 format.

Decimal Point and Separator

The display setting (Disp) screen is used to specify the required decimal mark and the character to use before groups of three digits.

 To change these settings, press | Wook repeatedly until the settings screen appears.



- Press 1 ► to display the settings screen.
- Press the number key (1 or 2) corresponding to the setting you want:
 - (Dot) : Decimal point and comma separator (2) (Comma): Decimal comma and point separator

Initializing the Calculator

To initialize the calculator (which clears the memory and all variables, and resets all modes to their default settings) press: [MIT] (ALL)

Basic Calculations

Arithmetic Operations

To perform a basic calculation, select COMP mode by pressing with a composition of the co

 When raising negative values to powers, make sure that the negative sign is inside the parentheses around the value. Please see the section on Sequence of Operations (page 33) for more information.

- A negative exponent does not need to be in parentheses.
 - $\sin 4.56 \times 10^{-8} \rightarrow \sin 4.56 \text{ EXP (c) } 8$
- Example 1: $3 \times (4 \times 10^{-7}) = 1.2 \times 10^{-6}$
 - 3 X 4 EXP (-) 7 =

11 ـ 15.

6 _ 1 _ 4.

6 ab/c 9 =

- Example 2: $2 \times (3+4) = 14$
- You can omit the 1 at the end of an expression if the next key you press is = .

Calculation with fractions

- A value is automatically displayed in decimal format if the total number of digits of the fraction (integer + numerator + denominator + semicolon) is greater than 10.
- Example 1: $\frac{1}{2} + \frac{2}{5} = \frac{11}{15}$
 - 1 ab/c 3 + 2 ab/c 5 =
- Example 2: $3\frac{1}{2} + 2\frac{3}{4} = 6\frac{1}{4}$
 - 3 ab/c 1 ab/c 2 + 2 ab/c 3 ab/c 4 =
- Example 3: $\frac{6}{Q} = \frac{2}{3}$
- Example 4: $\frac{1}{4} + 1.8 = 2.05$ 1 ab/c 4 + 1.8 =
- A calculation involving a fraction and a decimal generally yields a decimal result.

- Converting between decimal and fractional display
- Example 1: $3.25 = 3\frac{1}{4}$ 3.25
 - 3.25 ab/c 3 1 4.
 - $(\mathsf{Decimal} {\longleftrightarrow} \mathsf{Fraction})$
- SHIFT d/c 13 _ 4.
- Example 2: $\frac{1}{5} \leftarrow \rightarrow 0.2$
 - (Fraction ← Decimal) 1 ab/c 5 1 _ 5.
 - [ab/c] 1 _ 5.]
- Converting between Mixed and Improper Fractions
- Example: $2\frac{3}{4} \longleftrightarrow \frac{11}{4}$
 - 2 ab/c 3 ab/c 4 **=** 2 _ 3 _ 4.
 - SHIFT d/c 11 4.
 - SHIFT d/c 2 _ 3 _ 4.
- To change the fraction display format, press we repeatedly until the following screen appears.

Disp 1

- Press 1 to display the settings screen.
- Press the number key (1 or 2) corresponding to the setting required:
 - 1 (a b/c): Mixed fraction
 - 2 (d/c) : Improper fraction
- If you choose the d/c display format and enter a mixed fraction, an error will occur.

Calculating percentages

- About Calculating Percentages
- Example 1: Calculate 15% of 1000? (150)
 - Example 2: What percentage of 440 is 330? (75%)
 - Example 3: 1000 plus 15% ? (1150)
- Example 4: 1000 minus 15% ? (850)
- 1000 15 SHET % ■

 Example 5: If the original weight of a sample is 400g
- and a further 100g is added to it, what is the new weight as a percentage of the old weight? (125%)
 100 + 400 | SHT | %
- Example 6: If the temperature increases from 60°C to 66°C, what is the percentage increase? What is it when the temperature increases to 69°C?
 (10%, 15%)
 - 66 **6**0 SHIF %

Calculations Involving Degrees, Minutes and Seconds

- between sexagesimal and You can convert decimal numbers.
- Example 1: Convert the decimal number 1.234 to its sexagesimal equivalent and then back to a decimal number again. 1.234 1.234

1° 14° 2.4 SHIFT 555 1.234

- Example 2: Calculate 12° 34' 56" ×7.89 12 ···· 34 ··· 56 ··· × 7.89 = 99°16°25.44
- FIX, SCI, RND
- To change the display format settings, press repeatedly until the screen below appears.

Fix Sci Norm 1 2 3

- number key (1, 2 or 3) the corresponding to the setting you want to change.
- 1 (Fix): To set the number of decimal places (Sci): To set the number of significant digits
- 3 (Norm): To set the display format to normal

with 3 decimal places.)

Example 1: 100÷3×15 100 ÷ 3 × 15 = 500. (Now specify that you want numbers displayed

> MODE 1 (Fix) 3 500.000

FIX

(Note that only the display precision gets fixed to 3 digits. The calculations are still performed with the complete number.)

(Note that you can also force the calculator to round a number to the number of decimal places you have specified.)

- Press MODE ····· 3 (Norm) 1 to cancel the settings.
- Example 2: 2÷3
 Display the result with two significant digits(Sci 2)

You can also display result in 10 significant digits (Sci 10) using (Sci) 0

Press MODE 3 (Norm) 1 to cancel settings.

Calculations Involving the Memory

Ans Memory

- The Ans memory is updated with each new calculation when you press
- It is also updated when you press SHIT %, M+, SHIT M- or SHIT STO after a letter (A to F, or M, X, or Y).
- Pressing Ans recalls the contents of the Ans memory.
- The Ans memory can only store one value at a time.
- The Ans memory is not updated if an error occurs when you use any of the above mentioned keys for a calculation.

Continuous Calculation

- The result currently displayed can be used as the first value in the next calculation. Simply press an operator key. Ans appears on the screen, indicating that the last answer obtained is to be used in the calculation.
- The previous result can also be used by the following functions: $(x^2, x^3, x^{-1}, x!, DRG)$, +, -, $^(x^y)$, $^x\sqrt{}$, \times , \div , nPr or nCr.

Variable M

- You can use the variable M to compute accumulated totals which can be put into the variable M directly, or they can also be added to or subtracted from the number stored in variable M.
- To clear all the numerical values in the separate variable M, press () (MHT) (STO) (M+)

$$12+3=15$$
 $12 + 3 \text{ SMFT STO } \text{M. } (M+)$
 $45-6=39$ $45 - 6 \text{ M+}$
 $-38 \times 2 = 76$ $38 \times 2 \text{ SMFT } \text{M-}$
(Total) -22 RCL M. $(M+)$

Variables

- There are 9 variables: A to F, M, X and Y. These are used for storing data, constants, calculation results and other numerical values.

- Example:

$$\frac{1234 \div 20 = 61.7}{1234 \div 25 = 49.36}$$

$$1234 \text{ SMFT STO } A \div 20 = 20$$

$$\frac{1234 \times 100}{1234 \times 100} A \div 25 = 20$$

Scientific Functions

To perform a scientific function calculation, press we to enter COMP mode.

- You can start the next calculation after the calculation result displays on the screen.
- $\bullet \quad \pi = 3.14159265359$

other types of calculations.

■ Trigonometric and Inverse Trigonometric Functions

 To change the current angle units (degrees, radians or grads), press www repeatedly until the following screen appears.

- Now press the number key (1 , 2 or 3) corresponding to the angle unit you want to use. (Note that $90^{\circ} = \frac{\pi}{2}$ radians = 100 grads)
 - Note that $90 = \frac{1}{2}$ radians = 100 grads)

 Example 1: $\sin 12^{\circ} 34' 56'' = 0.217840422$
- 100€ 1 (Deg) sin 12 34 56 ■
- Example 2: $\cos(\frac{\pi}{3} \text{ rad}) = 0.5$ Root 2 (Rad) $\cos(\frac{\pi}{3} \text{ rad}) = 0.5$
- Example 3: $\cos^{-1} \frac{\sqrt{2}}{2} = 0.25\pi (rad)(= \frac{\pi}{4} (rad))$
- Example 4: tan⁻¹0.789=38.27343992
 - ||KODE 1 (Deg) || SHIFT || 10.789 || ■

- Hyperbolic and Inverse Hyperbolic Functions
 Example 1: sinh4.5=45.00301115
 Imprisin 4.5 =
 Example 2: cosh⁻¹60=4.787422291
- hyp SMIT cor1 60
- Common Logarithms, Natural Logarithms and Antilogarithms
- - Example 2: In90(=log_e90)= 4.49980967

 In 90 = In Ref. = I In Ref. = I
- $\ln e = 1$ In ANN e =
 Example 3: $e^{10} = 22026.46579$ SNFT of 10 =
- Example 5: 2⁻⁵=0.03125 2 **y**² (·) 5 **□** Example 6: (-2)⁶=64 (·) 2 1 **y**² 6 **□**
- Note that the negative value in the previous example had to be placed in parentheses. Please see the Sequence of Operations section for details.
- Square Root, Cube Root, Root, Square, Cube, Reciprocal, Factorial, Random Number, Circumference Ratio(π), Permutation and Combination
- Example 1: $\sqrt{2} + \sqrt{3} \times \sqrt{4} = 4.878315178$
- Example 2: $\sqrt[3]{4} + \sqrt[3]{-5} = -0.122574894$ SHIP $\sqrt[3]{-}$ 4 SHIP $\sqrt[3]{-}$ \bigcirc 5 = 20

- Example 3: $\sqrt[4]{123} (=123^{\frac{1}{4}}) = 3.330245713$ 4 SMT \(\frac{\frac{1}{4}}{123}\) = 3.330245713
- Example 4: $123+45^2=2148$ 123 + 45 x^2
- Example 5: 54³=157464 54 3
- Example 6: $\frac{1}{\frac{1}{2} \frac{1}{3}} = 6$
- Example 8: Generate a random number between 0.000 and 0.999

6 SHIFT | x/

Example 7: 6!=720

- (The value shown above is just an example. A different random number is likely to be produced each time)
- Example 9: $2\pi = 6.283185307$ 2 SMFT π
- Example 10: How many different 5- digit numbers can be produced with the digits 1 to 6 if no digit can be repeated (12345 allowed, 11234 not allowed)?(720)
 - 6 SMF nPr 5
- Example 11: How many different groups of three people can be organized with 10 people? (120)

■ Converting Angular Measurements

Press the SHIFT DRGD keys to display the following screen.

| D 1 | R 2 | G 3 | |
|--------|--------|--------|--|
| | | | |

 Press 1, 2 or 3 to change the displayed value to the corresponding angle unit. • Example: Change 2 . 34 radians to degrees.

\blacksquare Coordinate Systems (Pol (x , y) , Rec (r , θ))

 The result will be stored in variables E and F automatically.

Example 1: Express the point defined by the polar coordinates (r = 4, $\theta = 30^{\circ}$) in rectangular coordinates (x, y). (Deg)

Press RCL E to display the value of x or press RCL F to display the value of y.

RCL F

RCL F

y = 2

 $\theta = 0.84106867$

Example 2: Express the point defined by the rectangular coordinates $(2,\sqrt{5})$ in polar coordinates (r,θ) . (Rad) r=3

RCL F to display the value of θ .

Press **RCL E** to display the value of r or press

Expressing Numbers in Engineering Format

● Example 1: Change 54321 meters to kilometers
---> 54.321 × 10³ 54321 ■ № (km)

● Example 2: Change 0.01234 grams to milligrams
---> 12.34 × 10³ 0.01234 ■ № (mg)

Statistics

Standard Deviation-SD

- In SD and REG modes, the M+ key acts as the DT key.
- Press the SHIT CLR 1 (Scl) keys to erase the statistics memory before you enter data.
- Press the following key to input data. $\langle x | data \rangle$ PT
- Input data to calculate n , Σx , Σx^2 , \overline{x} , $x \circ n$, $x \circ n^{-1}$.

| To display this result | Press these keys |
|------------------------|------------------|
| $\Sigma \chi^2$ | SHIFT S-SUM 1 |
| ΣX | SHIFT SSUM 2 |
| n | SHIFT S-SUM 3 |
| \bar{x} | SHIFT S-YAR 1 |
| χσn | SHIFT S-YAR 2 |
| X [♂] n-1 | SHIFT S-YAR 3 |

• Example: Calculate $X \circ n$ -1, $X \circ n$, \overline{X} , n, ΣX , ΣX^2 given the following data:

In SD mode:

SHIFT CLR 1 (Scl) (Stat clear)

Each time you press $\overline{\text{DT}}$, the data you have just entered is stored. The n= value shown on the screen indicates the number of data pairs you have entered.

14 DT 11 DT 15 DT 13 DT DT 14 DT 12 DT

Standard deviation of the sample $(x \circ n_{-1}) = 1.407885953$

SHIFT S-YAR 3

Standard deviation of the population $(x \circ n) = 1.316956719$

Mean $(\bar{x}) = 13.375$

Number of data points (n) = 8Sum of the data values (Σx) = 107 SHIFT S-VAR 2 SHIFT S-YAR 1 🗖 SHIFT S-SUM 3 SHIFT S-SUM 2

Sum of the sauares of the data values $(\Sigma x^2) = 1445$

SHIFT S-SUM 1

Data Entry Hints

- Press DT DT to enter the same data twice.
- Press SHIFT : to repeat the same data item several times. For example, press 100 SHFT ; 15 DT to enter the data value 100 15 times.
- You can perform these operations in any sequence, not necessarily in the same order as in the example above
- Press or to scroll through the entered data.
- Edit the data displayed as desired. The new data replace the old data after inputting new data and pressing the key . Therefore, if you want to perform some other operations (calculation, display calculation result and so on), you must first press the key AC to exit from the data displaying screen
- To change a data value, scroll to it, enter the new value and press . (However, you must press DT if you want to add the value as a new data item.)
- To delete a data value displayed by pressing 🛋 and , press SHIFT FORM.
- The values are stored in the memory. If "Data Full" appears on the screen, there is no more memory available to store new data. In this case, press to display the following menu:

| Edit OFF | ESC 2 |
|----------|----------|
|----------|----------|


Press 2 to quit the data input operation without storing the entered data values. Alternatively, press 1 to clear the values but remain in data input mode.

- Press SHIFT GUP to cancel data input.
- In SD or REG mode, you cannot display or edit data items once you change to another mode or choose a different regression type (Lin, Log, Exp, Pwr,Inv, Quad).

■ Regression-REG

Calculations involving regression require REG mode. Press | Moore | key to select REG mode.

- In SD mode and REG mode, the M+ key acts as the DT key.
- When you select REG mode, the following screen appears.

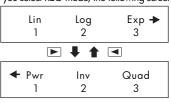

- Press the number key (1,2 or3) corresponding to the regression type you want to use.
 - 1 (Lin): Linear regression
 - 2 (Log) : Logarithmic regression
 - 3 (Exp) : Exponential regression
 - ▶ 1 (Pwr) : Mathematical power regression
 - 2 (Inv): Inverse regression3 (Quad): Quadratic regression
- Before entering data, press the SMF COR 1 (Scl) less keys to clear the statistics memory.
- The regression calculation result is determined by the data input. The result can be displayed using the following syntax and keys.

| To display the result | Press these keys |
|----------------------------|------------------------|
| $\sum \chi^2$ | SHIFT S-SUM 1 |
| ΣX | SHIFT SSUM 2 |
| n | SHIFT S-9UM 3 |
| $\sum y^2$ | SHIFT S-SUM |
| Σy | SHIFT S-SUM 2 |
| Σxy | SHIFT S-SUM > 3 |
| \bar{x} | SHIFT S-YAR 1 |
| $\chi \circ n$ | SHIFT S-YAR 2 |
| X 0 n-1 | SHIFT S-YAR 3 |
| \overline{y} | SHIFT S-YAR 🕨 1 |
| yσn | SHIFT S-YAR 🕨 2 |
| y | SHIFT S-YAR 🕨 3 |
| Regression coefficient A | SHIFT SYAR |
| Regression coefficient B | SHIFT S-YAR 2 |
| With non quadratic reg | gression types: |
| Regression coefficient r | SHIFT S-VAR |
| \widehat{x} | SHIFT SYAR 1 |
| $\widehat{\widehat{y}}$ | SHIFT SYAR 2 |

 To display quadratic regression calculation results, use the following syntax and keys.

| To display the result | Press these keys |
|--------------------------|------------------|
| $\sum X^3$ | SHIFT S-SUM |
| $\sum x^2 y$ $\sum x^4$ | SHIFT S-SUM 2 |
| Σx^4 | SHIFT S-SUM |
| Regression coefficient C | SHIFT SYAR 🕨 🕦 3 |
| \widehat{x} 1 | SHIFT SYAR |
| \widehat{x} 2 | SHIFT SYAR |
| ŷ | SHIFT S-YAR |

 The statistics values calculated can be stored in variables and used in expressions.

- Linear Regression
- The formula for linear regression is y=A+Bx
- Example: The relationship between atmospheric pressure and air temperature is given in the following table:

The following explains how to calculate the coefficients of the Air Atmospheric Temperature regression formula and how the Pressure formula can then be used to 10℃ 1003 hPa determine air temperature at a 15℃ 1005 hPa particular pressure (1000hPa) and the air pressure at 20℃ 1010 hPa particular temperature (-5°) . 25℃ 1011 hPa the process, we also determine the coefficient of 30℃ 1014 hPa determination (r^2) and the

In regression (REG) mode:

 $\sum xy - n \cdot \overline{x} \cdot \overline{y}$

(mode 3) 1 (Lin) SHIFT CLR 1 (Scl) (Stat clear)

10 • 1003 DT

sample covariance

REG n=

Each time you press DT, the data you have just entered is stored. The n = value shown on the screenindicates the number of data pairs you have entered.

15 🕡 1005 🕅 20 1010 DT 25 1011 DT

Regression coefficient A=997.4 Regression coefficient B=0.56

30 • 1014 DT SHIFT S-WAR | | 1

Rearession coefficient r=0.982607368

SHIFT S-VAR | The atmospheric pressure when the air temperature is -5° ((-) 5) SHIFT (SYAR) | | | | | 2 | | |

The air temperature when atmospheric pressure is 1000 hPa =4.642857143 Coefficient of determination

=994.6

1000 SHIFT S-VAR | | SHIFT S-VAR ► 3 x²

=0.965517241Sample covariance=35

SHIFT S-SUM 3 X SHIFT S-VAR SHIFT S-VAR 🕨

SHIFT S-SUM

27

SHIFT S-SUM 3

1

- Logarithmic, Exponential, Mathematical Power and Inverse Regression
- Use these regression types in the same way that you use linear regression (see above).
- The corresponding regression formulas are:

| · , | J - J |
|----------------------------------|---|
| Logarithmic regression | $y=A+B \cdot \ln x$ |
| Exponential regression | $y=A \cdot e^{B \cdot x} (\ln y = \ln A + B x)$ |
| Mathematical Power Regression | $y = A \cdot x^B (\ln y = \ln A + B \ln x)$ |
| Inverse regression | $y=A+B\cdot \frac{1}{\chi}$ |

- Quadratic Regression
- The regression formula for quadratic regression is $y=A+Bx+Cx^2$
- Example: In this example, we perform quadratic vi regression on the given data to χí determine the regression formula and 29 then use the formula to calculate \widehat{V} 50 |38.0| (the estimated value of y) when xi =74 16 and the \hat{x} value (the estimated 103 46.4 value of x) when yi = 20. 118 48.0

In regression (REG) mode:

▶ 3 (Quad) SHIFT CLR 1 (Scl) (Stat clear)

29 1.6 DT 50 23.5 DT 74 7 38.0 DT 103 7 46.4 DT

Regression coefficient A = -35.59856934

118 • 48.0 DT SHIFT S-VAR | | 1 |

Regression coefficient B=1.495939414

SHIFT S-VAR D 2 =

Regression coefficient $C = -6.71629667 \times 10^{-3}$

SHIFT S-VAR 🕨

Estimated value of $\hat{y}=-13.38291067$ when xi=1616 SHIFT S-VAR | | | | | | 3 | | |

Estimated value of $\hat{x}_1 = 47.14556728$ when $y_i = 20$ Estimated value of $\hat{x}_2 = 175.5872105$ when yi = 20

Data Entry Hints

- Press DT DT to enter the same data twice.
- Press SMFT; to enter the same data several times. For example, pressing 30 • 40 SMFT; 5 DT enters the data pair {30, 40} 5 times.
- The same data entry hints noted for Standard Deviation mode (see earlier) also apply in Regression mode.
- When carrying out statistical calculations, do not store any data in variables A to F, X or Y. These variables are used as temporary memory during calculations and thus their contents could get overwritten during a calculation.
- Variables A to F, X and Y are cleared when you select REG mode and choose a regression type (Lin, Log, Exp, Pwr, Inv, Quad). They are also cleared if you switch to another regression type.

Technical Data

■ Troubleshooting......

If the result of a calculation is not what you expected, or if an error occurs please carry out the following steps.

- 1. Press the SMT CLR 2 (Mode) = keys in that order to reset all modes and settings.
- Check that the formula or expression you entered is correct.
- $3.\,\mbox{Select}$ the correct mode and try the calculation again.

If the problem persists, press ON. The calculator will perform a self-check and, if an abnormality is found, clear all stored data. For this reason, you should always have a copy of all important information kept separate from the calculator.

Error Messages

If an error message occurs, the calculator stops running immediately. Press AC to clear the error message, or press or to redisplay the calculation so that you can correct it

Math ERROR

- Causes
- ●The result exceeds the calculator's computational range.
- •You tried to enter a value that exceeds the calculator's input range.
- •The operation requested is not mathematically valid (for example, dividing by 0).
- Correction Check that the input value is within the allowable input range. If you are using memory variables, check that the stored values will not cause the calculator to exceed its computational range.

Stack ERROR

- Causes
 - •The capacity of the number stack or operator stack has been exceeded. The number stack can have 10 levels while the operator stack can have 24.
- Correction Simplify the calculation.
 - Break up the calculation into two or more parts.

Syntax ERROR

- Causes
- The number entered or operator selected was not expected or was not in the correct form. Correction ● Press ore leading or leading to redisplay the calculation.
 - The cursor will be at the place where the error occurred. Correct the problem and then proceed.

Ara ERROR

- Causes
- •The parameter you entered was not expected or was not in the correct form.
- Correction Press or ▶ to redisplay the calculation. The cursor will be at the place where the error occurred. Correct the problem and then proceed.

■ Input Range

| Functions | Input Range | | |
|----------------------|---|--|--|
| 1 STICHOTIS | | | |
| | DEG | $0 \le x \le 4.499999999 \times 10^{10}$ | |
| sin X | RAD | $0 \le x \le 785398163.3$ | |
| | GRA | $0 \le x \le 4.999999999 \times 10^{10}$ | |
| | DEG | $0 \le x \le 4.500000008 \times 10^{10}$ | |
| cosx | RAD | $0 \le x \le 785398164.9$ | |
| | GRA | $0 \le x \le 4.9999999999 \times 10^{10}$ | |
| | DEG | Same as $\sin x$, except when $ x = (2n-1) \times 90$ | |
| tan <i>x</i> | GRA | Same as $\sin x$, except when $ x = (2n-1) \times \frac{\pi}{2}$ | |
| | RAD | Same as $\sin x$, except when $ x = (2n-1) \times 100$ | |
| sin ⁻¹ X | 0-1 | J_1 | |
| cos ⁻¹ X | $0 \le x $ | $0 \le x \le 1$ | |
| tan⁻¹ <i>x</i> | $0 \le x \le 9.999999999 \times 10^{99}$ | | |
| sinh <i>x</i> | 0.4 4.000 0.505000 | | |
| cosh <i>x</i> | $0 \ge x $ | $0 \le x \le 230.2585092$ | |
| sinh ⁻¹ x | $0 \le x \le 4.999999999 \times 10^{99}$ | | |
| cosh⁻¹ <i>x</i> | $1 \le x \le 4.999999999 \times 10^{99}$ | | |
| tanhx | 0≤ x ≤9.99999999×10°9 | | |
| tanh ⁻¹ x | $0 \le x \le 9.99999999 \times 10^{-1}$ | | |
| $\log x/\ln x$ | 0< <i>x</i> ≦9.99999999×10 ⁹⁹ | | |
| 10 ^x | -9.9 | $9999999 \times 10^{99} \le x \le 99.999999999$ | |
| e ^x | $-9.999999999 \times 10^{99} \le x \le 230.2585092$ | | |
| $\sqrt{\chi}$ | $0 \le x < 1 \times 10^{100}$ | | |
| X 2 | x < 1 | ×10 ⁵⁰ | |

| 1/x | $ x < 1 \times 10^{100}$; $x \neq 0$ |
|----------------------------|--|
| 3√x | $ x < 1 \times 10^{100}$ |
| Χ! | $0 \le x \le 69$ (x is an integer) |
| nPr | $0 \le n < 1 \times 10^{10}, 0 \le r \le n$ (n, r are integers) $1 \le \{ n! / (n-r)! \} < 1 \times 10^{100}$ |
| nCr | $0 \le n < 1 \times 10^{10}, 0 \le r \le n$ (n, r are integers) $1 \le [n! / \{r!(n-r)!\}] < 1 \times 10^{100}$ |
| Pol(x, y) | $ x , y \le 9.999999999 \times 10^{49}$ $(x^2 + y^2) \le 9.9999999999 \times 10^{99}$ |
| $Rec(r, \theta)$ | $0 \le r \le 9.999999999 \times 10^{99}$ θ : Same as for $\sin x$ |
| ۰,,, | a , b, c<1×10 ¹⁰⁰ 0≤b, c |
| ↔ , | x < 1×10 ¹⁰⁰ Decimal↔Sexagesimal Conversions 0° 0° 0° ≤ $ x $ ≤999999° 59° |
| ^(<i>X</i> ^y) | $x>0: -1 \times 10^{100} < y \log x < 100$ x=0: y>0 $x<0: y=n, \frac{1}{2n+1} (n \text{ is an integer})$ However: $-1 \times 10^{100} < y \log x < 100$ |
| ^x √y | $y>0: x\neq 0$ $-1\times 10^{100}<1/x\log y<100$ y=0: x>0 $y<0: x=2n+1, \frac{1}{n} (n\neq 0, n \text{ is an integer})$ However: $-1\times 10^{100}<1/x\log y <100$ |
| a b/c | The total number of integer, numerator, and denominator digits must be 10 or less (including division marks) |
| SD (REG) | $\begin{array}{l} x < 1 \times 10^{50} x \circ n \;,\; y \circ n \;,\; \overline{x} \;,\; \overline{y} : n \neq 0 \\ y < 1 \times 10^{50} x \circ n - 1 \;,\; y \circ n - 1 \;,\; A,B,r : n \neq 0,1 \\ n < 1 \times 10^{100} \end{array}$ |
| | |

***** Each operation is accurate to ± 1 in the 10th digit. However, calculations involving multiple operations will cause the error to accumulate. This is also observed with internal calculations involving multiple operations such as $^{\wedge}(x^y)$, $\sqrt[\chi]{y}$, x!, $\sqrt[3]{-}$, nPr, nCr and the like.

Note that the error may be greater near an inflection point of a function.

■ Sequence of Operations

Calculations are carried out in the following order:

- ① Coordinate transformations: $Pol(x, y), Rec(r, \theta)$
- ② A-type functions: These are functions where a value must be entered before you press a function key. X³, X², X⁻¹, X!, "", X̂, X̂1, X̂2, Ŷy Converting angular values (DRG►)
- 3 Mathematical power and root: $^{(x^y)}$, x
- 4) a b/c
- ⑤ Inπ, e(base of natural logarithm), implied multiplication involving a memory or variable name: 2π, 3e, 5A, πA etc.
- B-type functions

These are functions where a function key must be pressed before a value is entered.

$$\sqrt{\ }$$
, $\sqrt{\ }$, \sqrt

- ② Implied multiplication preceding a B-type function: $2\sqrt{3}$, Alog 2 etc.
- @ Permutations and combinations: nPr, nCr

 In an expression where two components have the same priority, the calculation is performed from right to left.

$$e^x \ln \sqrt{120} \rightarrow e^x \left(\ln \left(\sqrt{120} \right) \right)$$

- Other calculations will be carried out from left to right.
- Calculations in parentheses are performed first.
- If the calculation includes a parameter with a negative number, the negative number should be in parentheses. Since a minus sign (—) is considered a B-type function, care is needed when negative numbers are included in A-type functions, mathematical powers or root operations.


Example:
$$(-3)^4 = 81$$

 $-3^4 = -81$


Stack

This "stack" is an area of memory used to temporarily save values (the number stack) and the order of operations (the operator stack) during the calculation. The number stack has a maximum capacity of 10 while the operator stack has a maximum capacity of 24. If a calculation exceeds the stack capacity, a Stack FRROR will occur

Example:

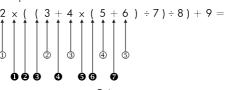

| 1 | 2 |
|-----|---|
| 2 | 3 |
| 3 | 4 |
| 4 | 5 |
| (5) | 6 |
| : | |

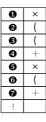

 The calculation will be carried out in the order described in Sequence of Operations. During the course of a calculation, the number and order stacks are cleared.

Automatic Power-Saver

If you have not used the calculator for 5 minutes, it will automatically turn off. Press ON to turn it on again.

Specifications

Power:

- Solar Cell: Built into the front of the calculator
- Button Cell: One (1) Alkaline button battery (LR44)

Battery Life: Standby (ON but no calculation) about 3 years; OFF about 5 years.

Dimensions: 152 x 81 x 13 mm (unit)

153.96 X 80.72 X 16.4 mm (with protective

case)

Weight: 93g (unit)

120g (with protective case)

Operating Temperature: 0° ~ 40°

Disposal of Waste Equipment by Users in Private Households in the European Union



This symbol on the product or packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of the product by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to

conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Regulatory Notices Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Declaration of Conformity for Products Marked with FCC Logo, United States Only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following 2 conditions:

- 1. This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

If you have any questions about the product that are not related to this declaration, write to Hewlett-Packard Company

P. O. Box 692000, Mail Stop 530113 Houston, TX 77269-2000

For questions regarding this FCC declaration, write to Hewlett-Packard Company P. O. Box 692000, Mail Stop 510101 Houston, TX 77269-2000 or call HP at 281-514-3333

To identify your product, refer to the part, series, or model number located on the product.

Canadian Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis Canadien

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union Regulatory Notice

This product complies with the following EU Directives:

Low Voltage Directive 2006/95/EC EMC Directive 2004/108/EC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family. This compliance is indicated by the following conformity marking placed on the product:



Hewlett-Packard GmbH, HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, Germany

JAPANESE NOTICE

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

Warranty Statement

HP 10s scientific calculator; Warranty period: 12 months

- 1. HP warrants to you, the end-user customer, that HP hardware, accessories and supplies will be free from defects in materials and workmanship after the date of purchase, for the period specified above.
- 2. If HP receives notice of such defects during the warranty period, HP will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or like-new.

For complete warranty information by country please go to http://www.hp.com/calculators.

FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND: THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Customer Support

Asia Pacific C

| Country : | Telephone numbers |
|-------------|------------------------------|
| Australia | 1300-551-664 or 03-9841-5211 |
| China | 010-68002397 |
| Hong Kong | 2805-2563 |
| Indonesia | +65 6100 6682 |
| Japan | +852 2805-2563 |
| Malaysia | +65 6100 6682 |
| New Zealand | 09-574-2700 |
| Philippines | +65 6100 6682 |
| Singapore | 6100 6682 |
| South Korea | 2-561-2700 |
| Taiwan | +852 2805-2563 |
| Thailand | +65 6100 6682 |
| Vietnam | +65 6100 6682 |

Europe

| Country : | Telephone numbers |
|----------------|------------------------------|
| Austria | 01 360 277 1203 |
| Belgium | 02 620 00 85 or 02 620 00 86 |
| Czech Republic | 296 335 612 |
| Denmark | 82 33 28 44 |
| Finland | 09 8171 0281 |
| France | 01 4993 9006 |
| Germany | 069 9530 7103 |
| Greece | 210 969 6421 |
| Netherlands | 020 654 5301 |
| Ireland | 01 605 0356 |
| Italy | 02 754 19 782 |
| Luxembourg | 2730 2146 |
| Norway | 23500027 |
| Portugal | 021 318 0093 |
| Russia | 495 228 3050 |

| Country : | Telephone numbers |
|----------------|------------------------|
| South Africa | 0800980410 |
| Spain | 913753382 |
| Sweden | 08 5199 2065 |
| Switzerland | 022 827 8780 (French) |
| | 01 439 5358 (German) |
| | 022 567 5308 (Italian) |
| United Kingdom | 0207 458 0161 |

L.America

| Country: | Telephone numbers |
|-----------------------|----------------------------------|
| Anguila | 1-800-711-2884 |
| Antigua | 1-800-711-2884 |
| Argentina | 0-800- 555-5000 |
| Aruba | 800-8000 or 800-711-2884 |
| Bahamas | 1-800-711-2884 |
| Barbados | 1-800-711-2884 |
| Bermuda | 1-800-711-2884 |
| Bolivia | 800-100-193 |
| Brazil | 0-800-709-7751 |
| British Virgin | 1-800-711-2884 |
| Islands | |
| Cayman Island | 1-800-711-2884 |
| Curacao | 001-800-872-2881 or 800-711-2884 |
| Chile | 800-360-999 |
| Colombia | 01-8000-51-4746-8368 |
| | (01-8000-51- HP INVENT) |
| Costa Rica | 0-800-011-0524 |
| Dominica | 1-800-711-2884 |
| Dominican Republic | 1-800-711-2884 |
| Ecuador | 1-999-119 or 800-711-2884 |
| | (Andinatel) |
| | 1-800-225-528 or |
| E1 S -1 1 | 800-711-2884 (Pacifitel) |
| El Salvador | 800-6160 |
| French Antilles | 0-800-990-011 or 800-711-2884 |

| Country : | Telephone numbers |
|------------------------|----------------------------------|
| French Guiana | 0-800-990-011 or 800-711-2884 |
| Grenada | 1-800-711-2884 |
| Guadelupe | 0-800-990-011 or 800-711-2884 |
| Guatemala | 1-800-999-5105 |
| Guyana | 159-800-711-2884 |
| Haiti | 183-800-711-2884 |
| Honduras | 800-0-123 or 800-711-2884 |
| Jamaica | 1-800-711-2884 |
| Martinica | 0-800-990-011 or 877-219-8671 |
| Mexico | 01-800-474-68368 |
| 3.6 | (800 HP INVENT) |
| Montserrat | 1-800-711-2884 |
| Netherland Antilles | 001-800-872-2881 or 800-711-2884 |
| Nicaragua | 1-800-0164 or 800-711-2884 |
| Panama | 001-800-711-2884 |
| Paraguay | (009) 800-541-0006 |
| Peru | 0-800-10111 |
| Puerto Rico | 1-877 232 0589 |
| St. Lucia | 1-800-478-4602 |
| St Vincent | 01-800-711-2884 |
| St. Kitts & Nevis | 1-800-711-2884 |
| St. Marteen | 1-800-711-2884 |
| Suriname | 156-800-711-2884 |
| Trinidad & Tobago | 1-800-711-2884 |
| _ | 01-800-711-2884 |
| US Virgin Islands | |
| Uruguay | 0004-054-177 |
| Venezuela | 0-800-474-68368 |
| | (0-800 HP INVENT) |

N.A

| merica | Country : | Telephone numbers |
|--------|-----------|---------------------------------|
| | Canada | 800-HP-INVENT |
| | USA | (905) 206-4663 or 800-HP INVENT |