



HP ENVY Sleekbook 6 and HP ENVY Ultrabook 6

Maintenance and Service Guide

IMPORTANT! This document is intended for HP
authorized service providers only.

© Copyright 2012 Hewlett-Packard
Development Company, L.P.

AMD, the AMD Arrow logo, and combinations thereof, are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel is a trademark of Intel Corporation in the U.S. and other countries. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: November 2012

Document Part Number: 696676-001

Safety warning notice

⚠ WARNING! To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Product description	1
2 External component identification	6
Display	6
Button, speakers, and subwoofer	8
Keys	9
Lights	10
TouchPad	11
Left side	12
Right side	14
Bottom	15
3 Illustrated parts catalog	16
Service tag	16
Computer major components	17
Mass storage devices	25
Miscellaneous parts	26
Sequential part number listing	27
4 Removal and replacement procedures	37
Preliminary replacement requirements	37
Tools required	37
Service considerations	37
Plastic parts	37
Cables and connectors	37
Drive handling	38
Grounding guidelines	38
Electrostatic discharge damage	38
Packaging and transporting guidelines	40
Component replacement procedures	42
Service label	42

Base enclosure	43
Battery	44
Hard drive	46
RTC battery	49
TouchPad module	51
WLAN module	53
Memory module	54
Fan	56
System board	57
Fan-Heat sink	62
Media card reader assembly (smart card reader)	64
Subwoofer	65
USB/Audio board	66
Power connector cable	67
Speakers	69
Power button board	70
Keyboard	72
Top cover	76

5 Setup Utility (BIOS) and System Diagnostics 77

Windows 8	77
Starting Setup Utility (BIOS)	77
Updating the BIOS	77
Determining the BIOS version	78
Downloading a BIOS update	78
Using System Diagnostics	79
Ubuntu	80
Starting Setup Utility	80
Using Setup Utility	80
Changing the language of Setup Utility	80
Navigating and selecting in Setup Utility	80
Displaying system information	81
Restoring factory default settings in Setup Utility	81
Exiting Setup Utility	81
Updating the BIOS	81
Determining the BIOS version	82
Downloading a BIOS update	82
Using System Diagnostics	83

6 Specifications 84

Computer specifications	84
-------------------------------	----

15.6-inch display specifications	85
7 Backing up, restoring, and recovering	86
Windows 8	86
Creating recovery media and backups	86
Creating HP Recovery media	87
Restore and recovery	88
Using Windows Refresh for quick and easy recovery	89
Remove everything and reinstall Windows	90
Recovering using HP Recovery Manager	90
What you need to know	91
Using the HP Recovery partition to recover a minimized image (select models only)	91
Using HP Recovery media to recover	92
Changing the computer boot order	92
Removing the HP Recovery partition	92
Ubuntu	93
Performing a system recovery	93
Creating the restore DVDs	93
Creating a restore image on a USB device	93
Performing recovery using the restore DVD	94
Backing up your information	94
8 Power cord set requirements	96
Requirements for all countries	96
Requirements for specific countries and regions	97
9 Recycling	99
Index	100

1 Product description

Category	Description	HP ENVY Sleekbook 6	HP ENVY Ultrabook 6
Product Name	HP ENVY Sleekbook 6	√	
	HP ENVY Ultrabook 6		√
Processors	AMD® A10-4655M 2.00-GHz (SC turbo up to 2.80-GHz) processor (4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W)	√	
	AMD A8-4555M 1.60-GHz (SC turbo up to 2.40-GHz) processor (4.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core 17 W)	√	
	AMD A6-4455M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W)	√	
	AMD A4-4355M 1.90-GHz (SC turbo up to 2.40-GHz) processor (1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core 17 W)	√	
	Intel® Dual Core® i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W)		√
	Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W)		√
	Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W)		√
	Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W)		√
	Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W)		√
	Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W)		√
Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W)		√	

Category	Description	HP ENVY Sleekbook 6	HP ENVY Ultrabook 6
Chipset	AMD A70M fusion controller hub (FCH)	√	
	Intel HM77 Express Chipset		√
Graphics	Internal graphics: <ul style="list-style-type: none"> • AMD Radeon™ HD 7620G on computer models equipped with an A10-4655M processor • AMD Radeon HD 7600G on computer models equipped with an AMD A8-4555M processor • AMD Radeon HD 7500G on computer models equipped with an AMD A6-4455M processor • AMD Radeon HD 7400G on computer models equipped with an AMD A4-4355M processor Support for HD decode, DX11, and HDMI	√	
	Switchable Discrete Graphics: AMD Radeon™ HD 8750M with 2-GB of discrete video memory (128-MB×16 DDR3, 900-MHz×8 pcs), 128-bit M2 package Internal graphics: <ul style="list-style-type: none"> • Intel HD Graphics 4000 on computer models equipped with an Intel Dual Core i7, Dual Core i5, or Intel Dual Core i3-3217U processor • Intel HD Graphics 3000 on computer models equipped with an Intel Dual Core i3-2377M processor Support for HD decode, DX11, HDMI, and PX5.5		√
Panel	15.6-in, high-definition (HD), white light-emitting diode (WLED), SVA, BrightView (1366×768), slim (3.2-mm), display assembly	√	
	15.6-in, full high-definition (FHD), WLED, UVGA, BrightView (1920×1080), slim (3.2-mm), display assembly		√
	All display assemblies include 2 wireless local area network (WLAN) antenna cables.	√	
	Support for 16:9 wide aspect ratio	√	
	Support for low-voltage differential signalling (LVDS)	√	
	Typical brightness: 200 nits	√	
	Two memory module slots, customer-accessible	√	√

Category	Description	HP ENVY Sleekbook 6	HP ENVY Ultrabook 6
Memory <i>(continued)</i>	DDR3L-1600MHz single channel support	√	√
	DDR3-1333MHz single channel support (DDR3-1600 downgrade to 1333)		
	Supports up to 16384-GB of system RAM	√	√
	Supports the following configurations:	√	√
	<ul style="list-style-type: none"> • 2048-MB total system memory (2048×1) • 4096-MB total system memory (2048×2) • 4096-MB total system memory (4096×1) • 6144-MB total system memory (2048×1 + 4096×1) • 8192-MB total system memory (4096×2) • 8192-MB total system memory (8192×1) • 12288-MB total system memory (8192×1 + 4096×1) • 16384-MB total system memory (8192×2) 		
Hard drives	Hard drive (7mm SATA 2.5") configurations:	√	√
	<ul style="list-style-type: none"> • 320-GB 7200 RPM 7mm SATA • 320-GB, 5400 RPM 7mm SATA • 500-GB 5400 RPM 7mm SATA 		
	mSATA SSD configurations:	√	√
	<ul style="list-style-type: none"> • 32-GB SSD • 128-GB SSD 	√	√
Optical drive	External USB optical drive (computer USB ports support 2A current)	√	√
	SATA	√	√
	12-7 mm tray load	√	√
	Supports the following external optical drives:	√	√
	<ul style="list-style-type: none"> • Blu-ray ROM DVD±R/RW Super Multi Double-Layer Drive • DVD±RW and CD-RW Super Multi Double-Layer Combo Drive 		
Audio and video	Dual array digital microphones	√	√
	Two integrated stereo speakers and subwoofer	√	√

Category	Description	HP ENVY Sleekbook 6	HP ENVY Ultrabook 6
Audio and video <i>(continued)</i>	HP TrueVision high-definition webcam (fixed, no tilt, 1280×720 by 30 frames per second)	√	√
Ethernet	Integrated 10/100/1000 GB network interface card (NIC)	√	√
Wireless	Integrated WLAN options by way of wireless module	√	√
	Two WLAN antennas built into display assembly	√	√
	Supports the following WLAN formats:	√	√
	<ul style="list-style-type: none"> • Intel® Centrino® Wireless-N 2230 + Bluetooth combo w/ *2 antennas (802.11 b/g/n, Bluetooth 3.0) • Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter • Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter 		
External media card	Push-push insertion/removal	√	√
	HP Multi-Format Digital Media Reader supports the following digital card formats:	√	√
	<ul style="list-style-type: none"> • MultiMediaCard • Secure Digital (SD) Card • Secure Digital High-Capacity (SDHC) Card • Secure Digital Extended Capacity (SDxC) Card 		
Ports	<ul style="list-style-type: none"> • 3-pin AC power (non-smart pin) • Audio-in (mono microphone), supports jack detection • Audio-out (stereo headphone), supports jack detection • HDMI version 1.4b supporting 1920p, 1920 × 1200 @ 60Hz • RJ-45 (Ethernet, includes link and activity lights) • USB 3.0 (2 ports) • USB 2.0 (1 port) 	√	√

Category	Description	HP ENVY Sleekbook 6	HP ENVY Ultrabook 6
Keyboard/pointing devices	97% Duracoat, island-style black keyboard, no spill-resistance (in black finish)	√	√
	97% Duracoat, island-style black keyboard, no spill-resistance (in black and silver finish)		
	Backlit, island-style keyboard in black finish (NA CTO only)		
	Backlit, island-style keyboard in black and silver finish (NA CTO only)		
	TouchPad with multi-touch gestures	√	√
	Taps enabled as default	√	√
Power requirements	Supports the following HP AC adapters:	√	√
	<ul style="list-style-type: none"> 65-W (non-smart) PFC RC V EM 2-wire HP AC adapter 		
	Supports the following batteries:	√	√
	<ul style="list-style-type: none"> 4-cell, 60Whr 4.1 AH Li-ion battery 		
Security	Security lock	√	√
	Support for Intel AT-p Ready	√	√
Operating system	Preinstalled:		
	Windows 8 Professional 64-bit	√	√
	Windows 8 Standard 64-bit	√	√
	Ubuntu Linux		√
Serviceability	End-user replaceable parts:		
	AC adapter	√	√
	Battery	√	√
	Hard drive	√	√
	Memory module	√	√
	WLAN module	√	√

2 External component identification

Display





Component	Description
(1) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on. NOTE: The internal display switch is not visible from the outside of the computer.
(2) WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(3) Internal microphones (2)	Record sound.
(4) Webcam light	On: The webcam is in use.

Component	Description
(5) HP TrueVision HD Webcam	Records video, captures still photographs, and allows video conferences and online chat by means of streaming video. To use the webcam, select Start > All Programs > Communication and Chat > CyberLink YouCam.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.


Button, speakers, and subwoofer

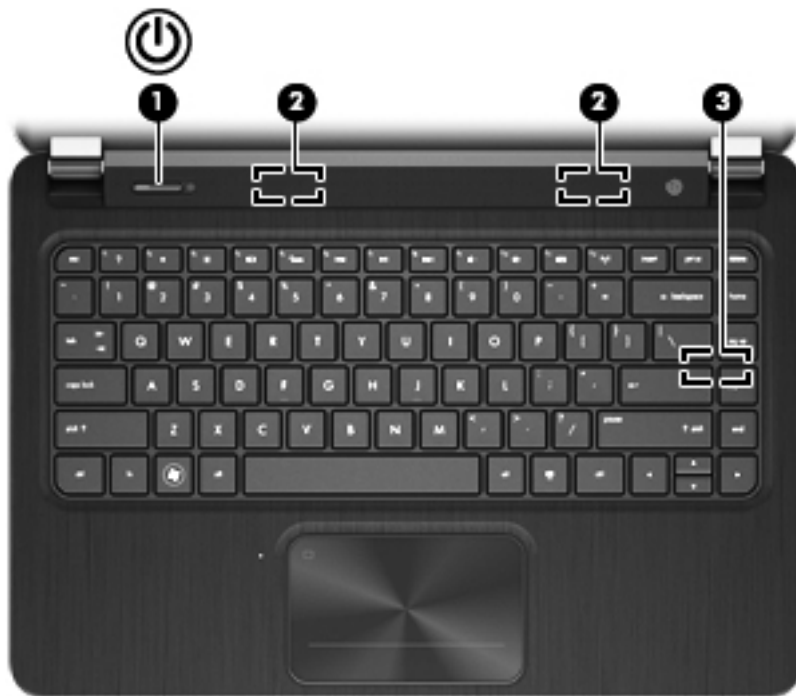



Component	Description
(1)  Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button down briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Microsoft® Windows® shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity. For more information, see the <i>User Guide</i>.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Security > Power Options, or see the <i>User Guide</i>.</p>

Component		Description
(2)	Speakers (2)	Produce sound.
(3)	HP Triple Bass Reflex Subwoofer	Provides superior bass sound.

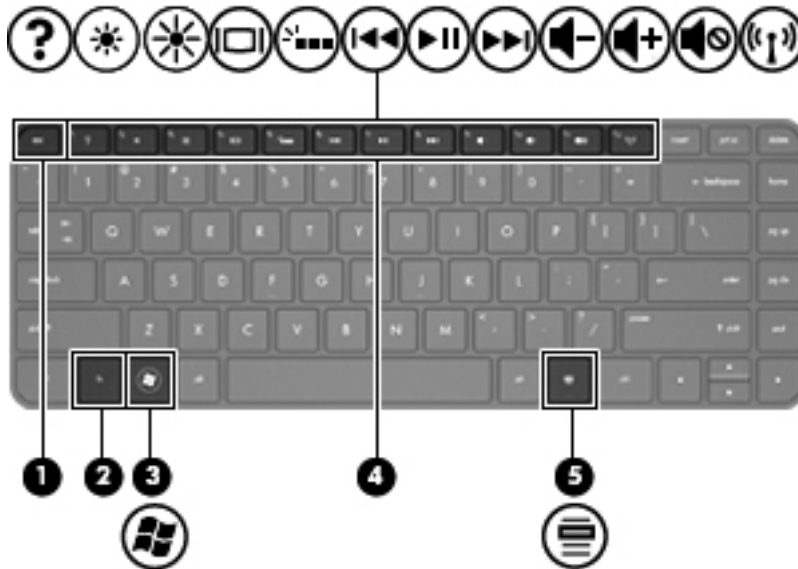


Keys




Component		Description
(1)	<code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2)	<code>fn</code> key	Executes frequently used system functions when pressed in combination with the <code>b</code> key, the <code>spacebar</code> , or the <code>esc</code> key.
(3)	 Windows logo key	Displays the Windows Start menu.
(4)	Action keys	Execute frequently used system functions. NOTE: On select models, the <code>f5</code> action key turns the radiance backlight keyboard feature off or on.
(5)	 Windows applications key	Displays a shortcut menu for items beneath the cursor.

Lights




Component	Description
(1)  Power light	<ul style="list-style-type: none">• White: The computer is on.• Blinking white: The computer is in the Sleep state, which is an energy-saving mode. The computer shuts off power to the display and other unneeded components.• Off: The computer is off or in Hibernation. Hibernation is an energy-saving mode that uses the least amount of power. <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity. For more information, see the <i>User Guide</i>.</p>
(2)  Mute light	<ul style="list-style-type: none">• Amber: Computer sound is off.• Off: Computer sound is on.
(3)  Wireless light	<ul style="list-style-type: none">• White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.• Amber: All wireless devices are off.
(4) Caps lock light	On: Caps lock is on, which switches the keys to all capital letters.
(5) TouchPad light	<ul style="list-style-type: none">• On: The TouchPad is off.• Off: The TouchPad is on.



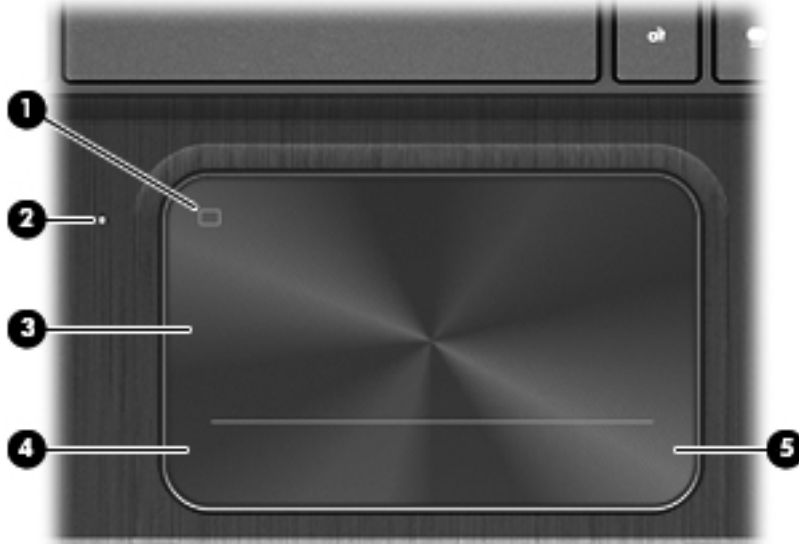

TouchPad



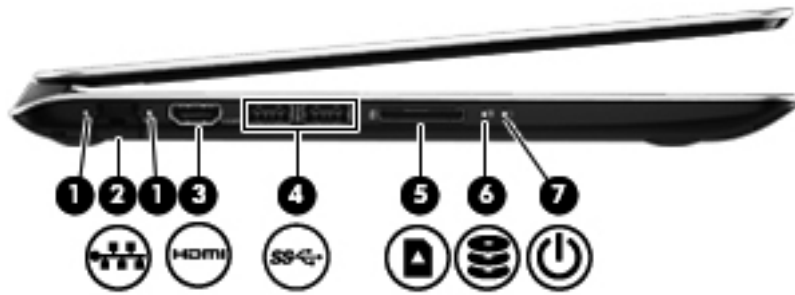

Component	Description
(1)	TouchPad on/off button Turns the TouchPad on or off.
(2)	TouchPad light <ul style="list-style-type: none">• On: The TouchPad is off.• Off: The TouchPad is on.
(3)	TouchPad zone Moves the on-screen pointer and selects or activates items on the screen.
(4)	Left TouchPad button Functions like the left button on an external mouse.
(5)	Right TouchPad button Functions like the right button on an external mouse.


Left side







Component	Description
(1)  RJ-45 (network) jack	Connects a network cable.
(2)  HDMI	HDMI port Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio device.
(3)  USB 3.0 ports (2)	Connect optional USB 3.0 devices and provide enhanced USB power performance. NOTE: For details about different types of USB ports, see the <i>User Guide</i> .
(4)  Digital Media Slot	Supports the following digital card formats: <ul style="list-style-type: none">Secure Digital (SD) Memory CardSecure Digital Extended Capacity (SDxC) Memory CardSecure Digital High Capacity (SDHC) Memory CardUltra High Speed MultiMediaCard (UHS/MMC)

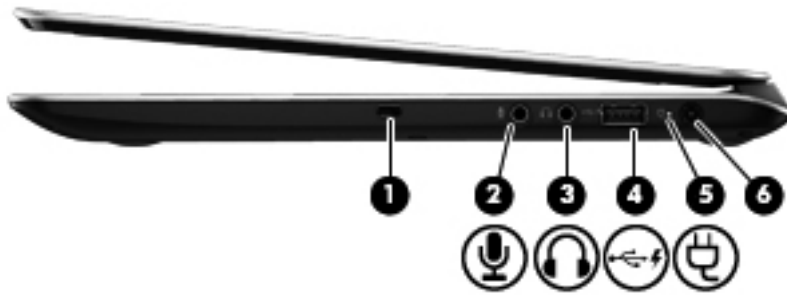
Component	Description
(5)  Hard drive light	<ul style="list-style-type: none"> Blinking white: The hard drive is being accessed. Amber: HP 3D DriveGuard has temporarily parked the hard drive. <p>NOTE: For information about HP 3D DriveGuard, see the User Guide.</p>
(6)  Power light	<ul style="list-style-type: none"> White: The computer is on. Blinking white: The computer is in the Sleep state, which is an energy-saving mode. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is an energy-saving mode that uses the least amount of power. <p>NOTE: For select models, the Intel® Rapid Start Technology feature is enabled at the factory. Rapid Start Technology allows your computer to resume quickly from inactivity. For more information, see the <i>User Guide</i>.</p>

Right side



Component	Description
(1)	Security cable slot Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(2) 	Audio-in (microphone) jack Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(3) 	Audio-out (headphone) jack Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. WARNING! To reduce the risk of personal injury, adjust the volume before using headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety and Environmental Notices</i> . NOTE: When a device is connected to a headphone jack, the computer speakers are disabled.
(4) 	USB 2.0 charging port Connects an optional USB device. The USB 2.0 charging port can also charge select models of cell phones and MP3 players, even when the computer is off. NOTE: A charging USB port (also referred to as a powered USB port) allows you to charge connected USB devices. Standard USB ports will not charge all USB devices or will charge using a low current. Some USB devices require power and require you to use a powered port. NOTE: For details about different types of USB ports, see the <i>User Guide</i> .
(5)	AC adapter light <ul style="list-style-type: none">• White: The AC adapter is connected and the battery is charged.• Amber: The AC adapter is connected and the battery is charging.• Off: The computer is using DC power.
(6) 	Power connector Connects an AC adapter.

Bottom

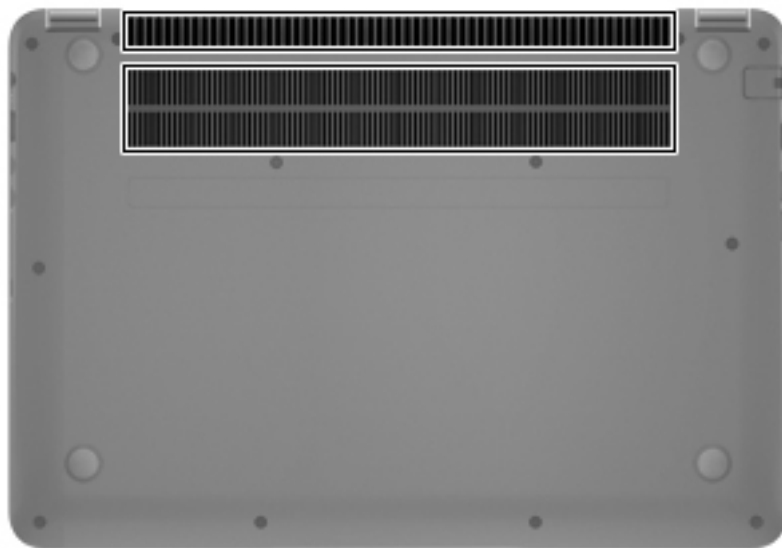


Component	Description
Vents (2)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

3 Illustrated parts catalog


Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag, which is located on the bottom of the computer.

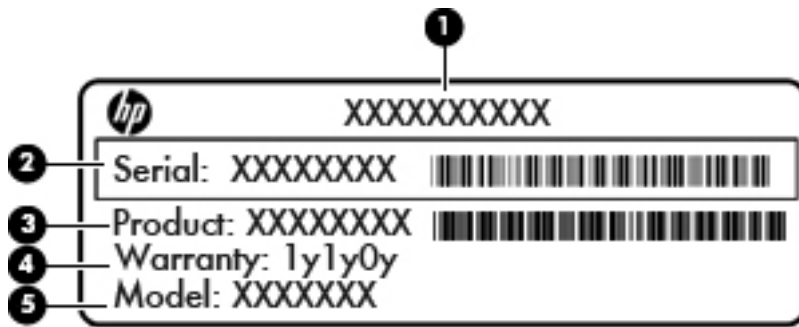

Item	Description	Function
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(3)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description (select models only)	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

Computer major components

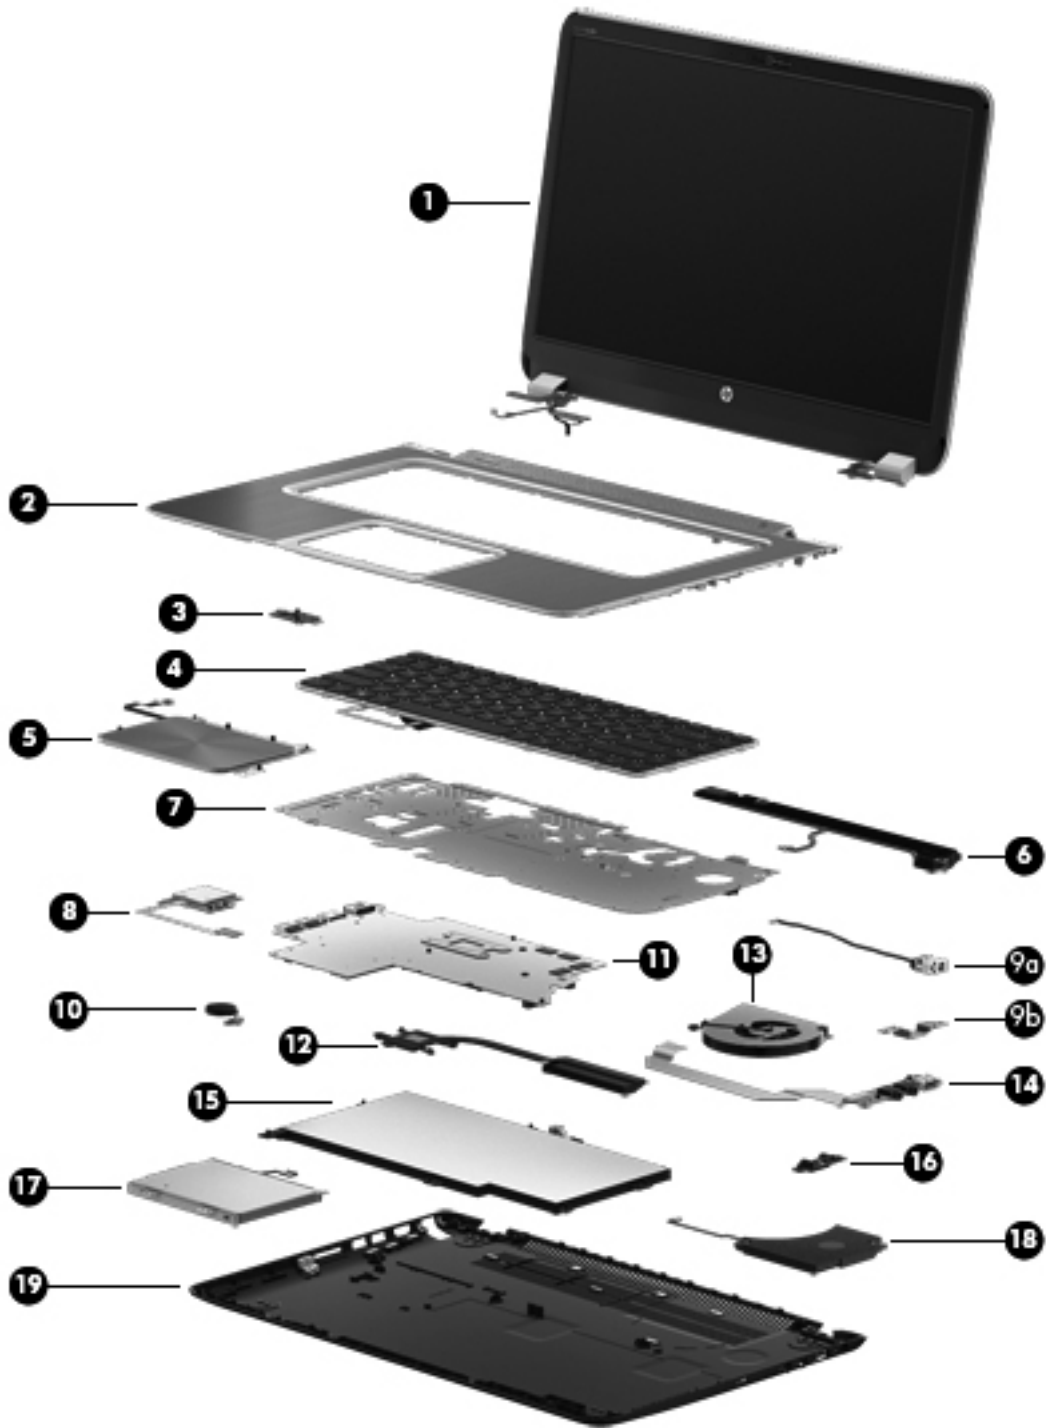

Item	Component	Spare part number
(1)	15.6-in, BrightView, display assembly (includes microphone, webcam, and 2 wireless antenna cables and transceivers):	

Item	Component	Spare part number
	Full high-definition (FHD) display assembly	
	In midnight black finish for use only on computer models equipped with an Intel processor	712246-001
	In midnight black and natural silver finish for use only on computer models equipped with an Intel processor	712247-001
	High-definition (HD) display assembly	
	In midnight black and natural silver finish for use on all computer models	702682-001
	In midnight black finish for use only on computer models equipped with an Intel processor	702681-001
(2)	Top cover (includes power button board and cable and TouchPad and TouchPad cable):	
	In midnight black finish for use on all computer models	686097-001
	In natural silver finish for use only on computer models equipped with an Intel processor	690198-001
(3)	Power button board	688003-001
(4)	Keyboard (includes keyboard cable):	
	Keyboard with backlight in midnight black finish (includes backlight cable):	
	For use only on computer models equipped with an Intel processor in Belgium	698680-A41
	For use on all computer models in Canada	698680-DB1
	For use on all computer models in Denmark, Finland, and Norway	698680-DH1
	For use only on computer models equipped with an Intel processor in Greece	698680-151
	For use only on computer models equipped with an Intel processor in the Netherlands	698680-B31
	For use on all computer models in Russia	698680-251
	For use only on computer models equipped with an Intel processor in Saudi Arabia	698680-171
	For use only on computer models equipped with an Intel processor in Spain	698680-071
	For use only on computer models equipped with an Intel processor in Switzerland	698680-BG1
	For use only on computer models equipped with an Intel processor in Turkey	698680-141
	For use on all computer models in the United States	698680-001
	Keyboard with backlight in midnight black and natural silver finish (includes backlight cable):	
	For use only on computer models equipped with an Intel processor in Belgium	698682-A41
	For use on all computer models in Canada	698682-DB1
	For use only on computer models equipped with an Intel processor in Denmark, Finland, and Norway	698682-DH1
	For use only on computer models equipped with an Intel processor in Greece	698682-151
	For use only on computer models equipped with an Intel processor in Israel	698682-B31
	For use only on computer models equipped with an Intel processor in Russia	698682-251
	For use only on computer models equipped with an Intel processor in Saudi Arabia	698682-171

Item	Component	Spare part number
	For use only on computer models equipped with an Intel processor in Spain	698682-071
	For use only on computer models equipped with an Intel processor in Switzerland	698682-BG1
	For use only on computer models equipped with an Intel processor in Turkey	698682-141
	For use only on computer models equipped with an Intel processor in the United States	698682-001
	Keyboard without backlight in midnight black finish:	
	For use only on computer models equipped with an Intel processor in the Czech Republic and Slovakia	698679-FL1
	For use on all computer models in France	698679-051
	For use only on computer models equipped with an Intel processor in Germany	698679-041
	For use only on computer models equipped with an Intel processor in India	698679-D61
	For use only on computer models equipped with an Intel processor in Israel	698679-BB1
	For use only on computer models equipped with an Intel processor in Italy	698679-061
	For use only on computer models equipped with an Intel processor in Japan	698679-291
	For use only on computer models equipped with an Intel processor in the Netherlands	698679-B31
	For use only on computer models equipped with an Intel processor in Portugal	698679-131
	For use only on computer models equipped with an Intel processor in Romania	698679-271
	For use only on computer models equipped with an Intel processor in Slovenia	698679-BA1
	For use only on computer models equipped with an Intel processor in Taiwan	698679-AD1
	For use only on computer models equipped with an Intel processor in South Korea	698679-AB1
	For use only on computer models equipped with an Intel processor in Thailand	698679-281
	For use on all computer models in the United Kingdom and Singapore	698679-031
	For use on all computer models in the United States	698679-001
	Keyboard in without backlight midnight black and natural silver finish:	
	For use only on computer models equipped with an Intel processor in the Czech Republic and Slovakia	698681-FL1
	For use only on computer models equipped with an Intel processor in France	698681-051
	For use only on computer models equipped with an Intel processor in Germany	698681-041
	For use only on computer models equipped with an Intel processor in India	698681-D61
	For use only on computer models equipped with an Intel processor in Israel	698681-BB1
	For use only on computer models equipped with an Intel processor in Italy	698681-061
	For use only on computer models equipped with an Intel processor in Japan	698681-291
	For use only on computer models equipped with an Intel processor in Portugal	698681-131
	For use only on computer models equipped with an Intel processor in Romania	698681-271

Item	Component	Spare part number
	For use only on computer models equipped with an Intel processor in Slovenia	698681-BA1
	For use only on computer models equipped with an Intel processor in Taiwan	698681-AD1
	For use only on computer models equipped with an Intel processor in South Korea	698681-AB1
	For use only on computer models equipped with an Intel processor in Thailand	698681-281
	For use only on computer models equipped with an Intel processor in the United Kingdom and Singapore	698681-031
	For use only on computer models equipped with an Intel processor in the United States	698681-001
(5)	TouchPad button board (includes bracket and cable):	
	In midnight black finish for use on all computer models	688001-001
	In natural silver finish for use only on computer models equipped with an Intel processor	691643-001
(6)	Speaker Kit	686598-001
(7)	Keyboard bracket	688002-001
(8)	Media Card Reader assembly	688004-001
(9a)	Power connector cable , includes:	686593-001
(9b)	Power connector cable bracket	
(10)	RTC battery	686922-001
(11)	System board (includes processor and replacement thermal material):	
	For use only on computer models equipped with an AMD A10-4655M processor (2.00-GHz, SC turbo up to 2.80-GHz; 4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W) and the Windows 8 Professional operating system	708978-601
	For use only on computer models equipped with an AMD A10-4655M processor (2.00-GHz, SC turbo up to 2.80-GHz; 4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W) and the Windows 8 Standard operating system	708978-501
	For use only on computer models equipped with an AMD A8-4555M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Professional operating system	694437-601
	For use only on computer models equipped with an AMD A8-4555M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Standard operating system	694437-501
	For use only on computer models equipped with an AMD A6-4455M processor (2.10-GHz, SC turbo up to 2.60-GHz; 1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W) and the Windows 8 Professional operating system	708977-601
	For use only on computer models equipped with an AMD A6-4455M processor (2.10-GHz, SC turbo up to 2.60-GHz; 1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W) and the Windows 8 Standard operating system	708977-501
	For use only on computer models equipped with an AMD A4-4355M 1.70-GHz (SC turbo up to 2.30-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Professional operating system	694436-601

Item	Component	Spare part number
	For use only on computer models equipped with an AMD A4-4355M 1.70-GHz (SC turbo up to 2.30-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Standard operating system	694436-501
	For use only on computer models equipped with an Intel Dual Core i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713698-601
	For use only on computer models equipped with an Intel Dual Core i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713698-501
	For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713691-601
	For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713691-501
	For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708976-601
	For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708976-501
	For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	719595-601
	For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	719595-501
	For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	719593-601
	For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	719593-501
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713692-601
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713692-501

Item	Component	Spare part number
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708972-601
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708972-501
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	713702-601
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	708971-601
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	713702-501
	For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	708971-501
	For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	719596-601
	For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	719596-501
	For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	719594-601
	For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	719594-501
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713693-601
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713693-501
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708975-601
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708975-501

Item	Component	Spare part number
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	713701-601
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	708970-601
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	713701-501
	For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	708970-501
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713694-601
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713694-501
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708974-601
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708974-501
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	713703-601
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	708973-601
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	713703-501
	For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	708973-501
(12)	Heat sink (includes replacement thermal material):	
	For use only on computer models equipped with a 25-W AMD processor	691657-001
	For use only on computer models equipped with a 17-W AMD processor	691656-001
	For use only on computer models equipped with an Intel processor and a graphics subsystem with discrete memory	686579-001
	For use only on computer models equipped with an Intel processor and a graphics subsystem with UMA memory	686578-001

Item	Component	Spare part number
(13)	Fan (includes cable)	686580-001
(14)	Audio/USB board	686597-001
(15)	4-cell, 60-WHr, 4.1-AHr, Li-ion battery	681951-001
(16)	Hard drive (7.0-mm [2.5-in], SATA):	
	NOTE: The hard drive spare kit does not include the hard drive bracket, hard drive connector cable, or screws. These components are included in the Hard Drive Hardware Kit, spare part numbers 708268-001 (for use on all computer models) and 686594-001 (for use only on computer models equipped with an Intel processor).	
	500 GB, 5400 rpm	683802-005
	320 GB, 7200 rpm	634862-005
	320 GB, 5400 rpm	645193-005
(17)	Subwoofer (includes cable and rubber isolators)	686599-001
(18)	Base enclosure:	
	In ruby red finish for use only on computer models equipped with an AMD processor	689855-001
	In midnight black finish for use only on computer models equipped with an Intel processor and a full high-definition display assembly	712249-001
	In ruby red finish for use only on computer models equipped with an Intel processor and a full high-definition display assembly	712248-001
	In midnight black finish for use only on computer models equipped with an Intel processor and a high-definition display assembly	690197-001
	In ruby red finish for use only on computer models equipped with an Intel processor and a high-definition display assembly	686096-001
	Memory module (not illustrated; PC3, 12800, 1600-MHz):	
	8 GB	670034-005
	4 GB	641369-005
	2 GB	652972-005

Mass storage devices



Item	Component	Spare part number
(1)	Hard drive (7.0-mm [2.5-in], SATA)	
	NOTE: The hard drive spare kit does not include the hard drive bracket, hard drive connector cable, or screws. These components are included in the Hard Drive Hardware Kit, spare part numbers 708268-001 (for use on all computer models) and 686594-001 (for use only on computer models equipped with an Intel processor).	
	500 GB, 5400 rpm	683802-005
	320 GB, 7200 rpm	634862-005
	320 GB, 5400 rpm	645193-005
	Hard Drive Hardware Kit , includes:	
	For use on all computer models	708268-001
	For use only on computer models equipped with an Intel processor	686594-001
(2a)	Hard drive bracket	
(2b)	Hard drive connector cable	
	Screws (not illustrated)	
(3)	mSATA solid-state drive	
	128 GB	687101-001
	32 GB	687100-001

Item	Component	Spare part number
(4)	Optical drive (includes bezel and bracket):	
	Blu-ray ROM DVD±R/RW Super Multi Double-Layer Drive	659941-001
	DVD±RW and CD-RW Super Multi Double-Layer Combo Drive	659940-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
65-W, non-PFC, RC, V, 2-wire for use on all computer models	693715-001
65-W, non-PFC, EM, 2-wire for use only on computer models equipped with an Intel processor	707750-001
Power cord (3-pin, black, 1.83-m):	
For use only on computer models equipped with an Intel processor in Australia	490371-011
For use on all computer models in Denmark	490371-081
For use on all computer models in Europe	490371-021
For use only on computer models equipped with an Intel processor in India	490371-D61
For use only on computer models equipped with an Intel processor in Israel	490371-BB1
For use only on computer models equipped with an Intel processor in Italy	490371-061
For use only on computer models equipped with an Intel processor in Japan	490371-291
For use on all computer models in North America	490371-001
For use only on computer models equipped with an Intel processor in the People's Republic of China	490371-AA1
For use only on computer models equipped with an Intel processor in South Africa	490371-AR1
For use only on computer models equipped with an Intel processor in South Korea	490371-AD1
For use only on computer models equipped with an Intel processor in Switzerland	490371-111
For use only on computer models equipped with an Intel processor in Taiwan	490371-AB1
For use only on computer models equipped with an Intel processor in Thailand	490371-201
For use on all computer models in the United Kingdom and Singapore	490371-031
Screw Kit	690348-001

Sequential part number listing

Spare part number	Description
490371-001	Power cord for use on all computer models in North America (3-pin, black, 1.83-m)
490371-011	Power cord for use only on computer models equipped with an Intel processor in Australia (3-pin, black, 1.83-m)
490371-021	Power cord for use on all computer models in Europe (3-pin, black, 1.83-m)
490371-031	Power cord for use on all computer models in the United Kingdom and Singapore (3-pin, black, 1.83-m)
490371-061	Power cord for use only on computer models equipped with an Intel processor in Italy (3-pin, black, 1.83-m)
490371-081	Power cord for use on all computer models in Denmark (3-pin, black, 1.83-m)
490371-111	Power cord for use only on computer models equipped with an Intel processor in Switzerland (3-pin, black, 1.83-m)
490371-201	Power cord for use only on computer models equipped with an Intel processor in Thailand (3-pin, black, 1.83-m)
490371-291	Power cord for use only on computer models equipped with an Intel processor in Japan (3-pin, black, 1.83-m)
490371-AA1	Power cord for use only on computer models equipped with an Intel processor in the People's Republic of China (3-pin, black, 1.83-m)
490371-AB1	Power cord for use only on computer models equipped with an Intel processor in Taiwan (3-pin, black, 1.83-m)
490371-AD1	Power cord for use only on computer models equipped with an Intel processor in South Korea (3-pin, black, 1.83-m)
490371-AR1	Power cord for use only on computer models equipped with an Intel processor in South Africa (3-pin, black, 1.83-m)
490371-BB1	Power cord for use only on computer models equipped with an Intel processor in Israel (3-pin, black, 1.83-m)
490371-D61	Power cord for use only on computer models equipped with an Intel processor in India (3-pin, black, 1.83-m)
634862-005	320-GB, 7200-rpm hard drive (does not include the hard drive bracket, hard drive connector cable, or screws) NOTE: The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686594-001.
641369-005	4-GB memory module (PC3, 12800, 1600-MHz)
645193-005	320-GB, 5400-rpm hard drive (does not include the hard drive bracket, hard drive connector cable, or screws) NOTE: The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686594-001.
652972-005	2-GB memory module (PC3, 12800, 1600-MHz)

Spare part number	Description
655795-005	Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter
657325-005	Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter
659940-001	DVD±RW and CD-RW Super Multi Double-Layer Combo Drive (includes bezel and bracket)
659941-001	Blu-ray ROM DVD±R/RW Super Multi Double-Layer Drive (includes bezel and bracket)
670034-005	8-GB memory module (PC3, 12800, 1600-MHz)
670290-005	Intel Centrino Wireless-N 1030 + Bluetooth Combo Adapter for use only on computer models equipped with an Intel processor
675794-005	Intel Centrino Wireless-N 1030 + Bluetooth Combo Adapter for use only on computer models equipped with an AMD processor
681951-001	4-cell, 60-WHr, 4.1-AH r, Li-ion battery
683802-005	500-GB, 5400-rpm hard drive
	NOTE: The hard drive bracket, hard drive connector cable, and screws are included in the Hard Drive Hardware Kit, spare part number 686594-001.
686096-001	Base enclosure in ruby red finish for use only on computer models equipped with an Intel processor
686097-001	Top cover in midnight black finish for use on all computer models (includes power button board and cable and TouchPad and TouchPad cable)
686578-001	Heat sink for use only on computer models equipped with an Intel processor and a graphics subsystem with UMA memory (includes replacement thermal material)
686579-001	Heat sink for use only on computer models equipped with an Intel processor and a graphics subsystem with discrete memory (includes replacement thermal material)
686580-001	Fan (includes cable)
686589-001	Antenna Kit (includes left and right WLAN antenna cables and transceivers)
686591-001	Display bezel
686593-001	Power connector cable (includes bracket)
686594-001	Hard Drive Hardware Kit for use only on computer models equipped with an Intel processor (includes hard drive bracket, hard drive connector cable, and screws)
686597-001	Audio/USB board
686598-001	Speaker Kit (includes left and right speakers and cable)
686599-001	Subwoofer
686922-001	RTC battery
687100-001	32-GB solid-state drive for use only on computer models equipped with an Intel processor (does not include bracket, connector cable, isolators, or screws)
687101-001	128-GB solid-state drive for use only on computer models equipped with an Intel processor (does not include bracket, connector cable, isolators, or screws)
688001-001	TouchPad assembly in midnight black finish for use on all computer models (includes bracket and cable)
688002-001	Keyboard bracket

Spare part number	Description
688003-001	Power button board (includes cable)
688004-001	Media Card Reader assembly
689855-001	Base enclosure in ruby red finish for use only on computer models equipped with an AMD processor
690019-005	Atheros 9485GN 802.11b/g/n 1x1 WiFi and 3012 Bluetooth 4.0 Combo Adapter for use on all computer models
690020-005	Intel Centrino Wireless-N 1030 + Bluetooth Combo Adapter for use on all computer models
690197-001	Base enclosure in midnight black finish for use only on computer models equipped with an Intel processor
690198-001	Top cover in natural silver finish for use only on computer models equipped with an Intel processor (includes power button board and cable and TouchPad and TouchPad cable)
690348-001	Screw Kit
691643-001	TouchPad assembly in natural silver finish for use only on computer models equipped with an Intel processor (includes bracket and cable)
691656-001	Heat sink for use only on computer models equipped with a 17-W AMD processor (includes replacement thermal material)
691657-001	Heat sink for use only on computer models equipped with a 25-W AMD processor (includes replacement thermal material)
692758-211	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor in Hungary (includes keyboard cable)
692758-251	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor in Russia (includes keyboard cable)
692758-DB1	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor in Canada (includes keyboard cable)
693715-001	65-W, RC, V AC adapter (2-wire)
694436-501	System board for use only on computer models equipped with an AMD A4-4355M 1.70-GHz (SC turbo up to 2.30-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Standard operating system (includes processor and replacement thermal material)
694436-601	System board for use only on computer models equipped with an AMD A4-4355M 1.70-GHz (SC turbo up to 2.30-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Professional operating system (includes processor and replacement thermal material)
694437-501	System board for use only on computer models equipped with an AMD A8-4555M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Standard operating system (includes processor and replacement thermal material)
694437-601	System board for use only on computer models equipped with an AMD A8-4555M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Professional operating system (includes processor and replacement thermal material)
698679-001	Keyboard in midnight black finish for use only on computer models equipped with the Windows 8 operating system in the United States (includes keyboard cable)
698679-031	Keyboard in midnight black finish for use only on computer models equipped with the Windows 8 operating system in the United Kingdom and Singapore (includes keyboard cable)

Spare part number	Description
698679-041	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Germany (includes keyboard cable)
698679-051	Keyboard in midnight black finish for use only on computer models equipped with the Windows 8 operating system in France (includes keyboard cable)
698679-061	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Italy (includes keyboard cable)
698679-131	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Portugal (includes keyboard cable)
698679-271	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Romania (includes keyboard cable)
698679-281	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Thailand (includes keyboard cable)
698679-291	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Russia (includes keyboard cable)
698679-AB1	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Taiwan (includes keyboard cable)
698679-AD1	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in South Korea (includes keyboard cable)
698679-B31	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the Netherlands (includes keyboard cable)
698679-BA1	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Slovenia (includes keyboard cable)
698679-BB1	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Israel (includes keyboard cable)
698679-D61	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in India (includes keyboard cable)
698679-FL1	Keyboard in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the Czech Republic and Slovakia (includes keyboard cable)
698680-001	Keyboard with backlight in midnight black finish for use only on computer models equipped with the Windows 8 operating system in the United States (includes keyboard cable and backlight cable)
698680-071	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Spain (includes keyboard cable and backlight cable)
698680-141	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Turkey (includes keyboard cable and backlight cable)
698680-151	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Greece (includes keyboard cable and backlight cable)
698680-171	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Saudi Arabia (includes keyboard cable and backlight cable)

Spare part number	Description
698680-251	Keyboard with backlight in midnight black finish for use only on computer models equipped with the Windows 8 operating system in Russia (includes keyboard cable and backlight cable)
698680-A41	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Belgium (includes keyboard cable and backlight cable)
698680-B31	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the Netherlands (includes keyboard cable and backlight cable)
698680-BG1	Keyboard with backlight in midnight black finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Switzerland (includes keyboard cable and backlight cable)
698680-DB1	Keyboard with backlight in midnight black finish for use only on computer models equipped with an AMD processor and the Windows 8 operating system in Canada (includes keyboard cable and backlight cable)
698680-DH1	Keyboard with backlight in midnight black finish for use only on computer models equipped with the Windows 8 operating system in Denmark, Finland, and Norway (includes keyboard cable and backlight cable)
698681-001	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the United States (includes keyboard cable)
698681-031	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the United Kingdom and Singapore (includes keyboard cable)
698681-041	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Germany (includes keyboard cable)
698681-051	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in France (includes keyboard cable)
698681-061	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Italy (includes keyboard cable)
698681-131	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Portugal (includes keyboard cable)
698681-271	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Romania (includes keyboard cable)
698681-281	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Thailand (includes keyboard cable)
698681-291	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Russia (includes keyboard cable)
698681-AB1	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Taiwan (includes keyboard cable)
698681-AD1	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in South Korea (includes keyboard cable)
698681-B31	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the Netherlands (includes keyboard cable)

Spare part number	Description
698681-BA1	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Slovenia (includes keyboard cable)
698681-BB1	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Israel (includes keyboard cable)
698681-D61	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in India (includes keyboard cable)
698681-FL1	Keyboard in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the Czech Republic and Slovakia (includes keyboard cable)
698682-001	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the United States (includes keyboard cable and backlight cable)
698682-071	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Spain (includes keyboard cable and backlight cable)
698682-141	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Turkey (includes keyboard cable and backlight cable)
698682-151	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Greece (includes keyboard cable and backlight cable)
698682-171	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Saudi Arabia (includes keyboard cable and backlight cable)
698682-251	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Russia (includes keyboard cable and backlight cable)
698682-A41	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Belgium (includes keyboard cable and backlight cable)
698682-B31	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in the Netherlands (includes keyboard cable and backlight cable)
698682-BG1	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Switzerland (includes keyboard cable and backlight cable)
698682-DH1	Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with an Intel processor and the Windows 8 operating system in Denmark, Finland, and Norway (includes keyboard cable and backlight cable)
702681-001	15.6-in, BrightView, high-definition display assembly in midnight black finish for use only on computer models equipped with an Intel processor (includes microphone, webcam, and 2 wireless antenna cables and transceivers)
702682-001	15.6-in, BrightView, high-definition display assembly in black and natural silver finish for use only on computer models equipped with an Intel processor (includes microphone, webcam, and 2 wireless antenna cables and transceivers)

Spare part number	Description
707750-001	65-W, non-PFC, EM, 2-wire AC adapter for use only on computer models equipped with an Intel processor
708268-001	Hard Drive Hardware Kit (includes hard drive bracket, hard drive connector cable, and screws)
708970-501	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708970-601	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708971-501	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708971-601	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708972-501	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708972-601	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708973-501	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708973-601	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708974-501	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708974-601	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708975-501	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)

Spare part number	Description
708975-601	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708976-501	System board for use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708976-601	System board for use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708977-501	System board for use only on computer models equipped with an AMD A6-4455M processor (2.10-GHz, SC turbo up to 2.60-GHz; 1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W) and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708977-601	System board for use only on computer models equipped with an AMD A6-4455M processor (2.10-GHz, SC turbo up to 2.60-GHz; 1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W) and the Windows 8 Professional operating system (includes processor and replacement thermal material)
708978-501	System board for use only on computer models equipped with an AMD A10-4655M processor (2.00-GHz, SC turbo up to 2.80-GHz; 4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W) and the Windows 8 Standard operating system (includes processor and replacement thermal material)
708978-601	System board for use only on computer models equipped with an AMD A10-4655M processor (2.00-GHz, SC turbo up to 2.80-GHz; 4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W) and the Windows 8 Professional operating system (includes processor and replacement thermal material)
712246-001	15.6-in, BrightView, full high-definition display assembly in midnight black finish for use only on computer models equipped with an Intel processor (includes microphone, webcam, and 2 wireless antenna cables and transceivers)
712247-001	15.6-in, BrightView, full high-definition display assembly in midnight black and natural natural silver finish for use only on computer models equipped with an Intel processor (includes microphone, webcam, and 2 wireless antenna cables and transceivers)
712248-001	Base enclosure in ruby red finish for use only on computer models equipped with an Intel processor and a full high-definition display assembly
712249-001	Base enclosure in midnight black finish for use only on computer models equipped with an Intel processor and a full high-definition display assembly
713691-501	System board for use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713691-601	System board for use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)

Spare part number	Description
713692-501	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713692-601	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
713693-501	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713693-601	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
713694-501	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713694-601	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
713698-501	System board for use only on computer models equipped with an Intel Dual Core i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713698-601	System board for use only on computer models equipped with an Intel Dual Core i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
713701-501	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713701-601	System board for use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
713702-501	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713702-601	System board for use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)

Spare part number	Description
713703-501	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
713703-601	System board for use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
719593-501	System board for use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
719593-601	System board for use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
719594-501	System board for use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
719594-601	System board for use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
719595-501	System board for use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
719595-601	System board for use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)
719596-501	System board for use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system (includes processor and replacement thermal material)
719596-601	System board for use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system (includes processor and replacement thermal material)

4 Removal and replacement procedures

⚠ CAUTION: This computer does not have user-replaceable parts. Only HP authorized service providers should perform the removal and replacement procedures described here. Accessing the internal part could damage the computer or void the warranty.

Preliminary replacement requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.

📝 NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts

⚠ CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 77 screws that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Service label

When ordering parts or requesting information, provide the computer serial number and model number provided on the service label, which is found on the bottom of the computer.

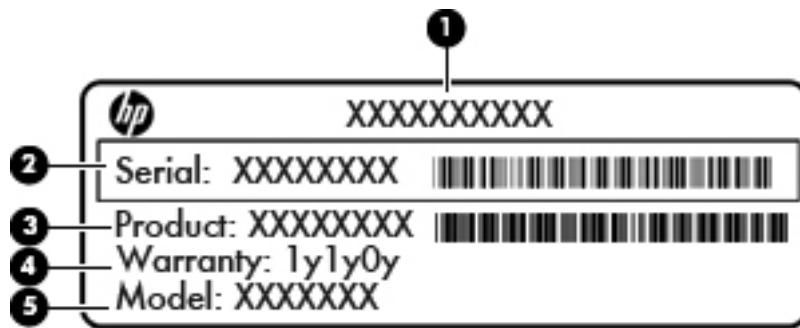

Item	Component	Description
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(3)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician determine what components and parts are needed.
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description (select models only)	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

Base enclosure


Description	Spare part number
In ruby red finish for use only on computer models equipped with an AMD processor	689855-001
In midnight black finish for use only on computer models equipped with an Intel processor and a full high-definition display assembly	712249-001
In ruby red finish for use only on computer models equipped with an Intel processor and a full high-definition display assembly	712248-001
In midnight black finish for use only on computer models equipped with an Intel processor and a high-definition display assembly	690197-001
In ruby red finish for use only on computer models equipped with an Intel processor and a high-definition display assembly	686096-001

Before disassembling the computer, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.

Remove the base enclosure:

1. Turn the computer face down, and then remove the 12 Phillips PM 7.5 millimeter long screws.

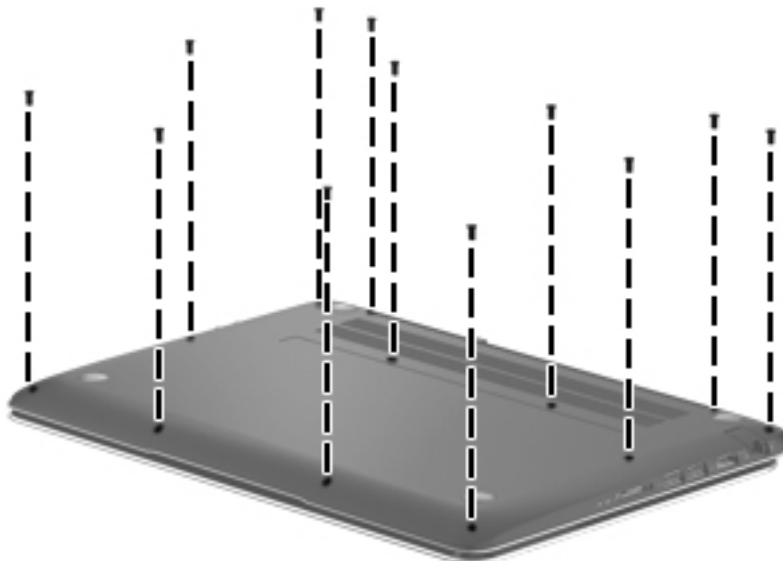

2. Remove the bottom enclosure.

 **NOTE:** To remove the bottom enclosure, use a thin, non-conductive tool such as the HP Tool Shroud separator, available on the HP website.



Battery

Description	Spare part number
4-cell, 60WHr 4.1AH Li-ion battery	681951-001


Before removing the battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).


Remove the battery:

1. Turn the computer right-side up, with the front toward you.

2. Disconnect the battery cable.

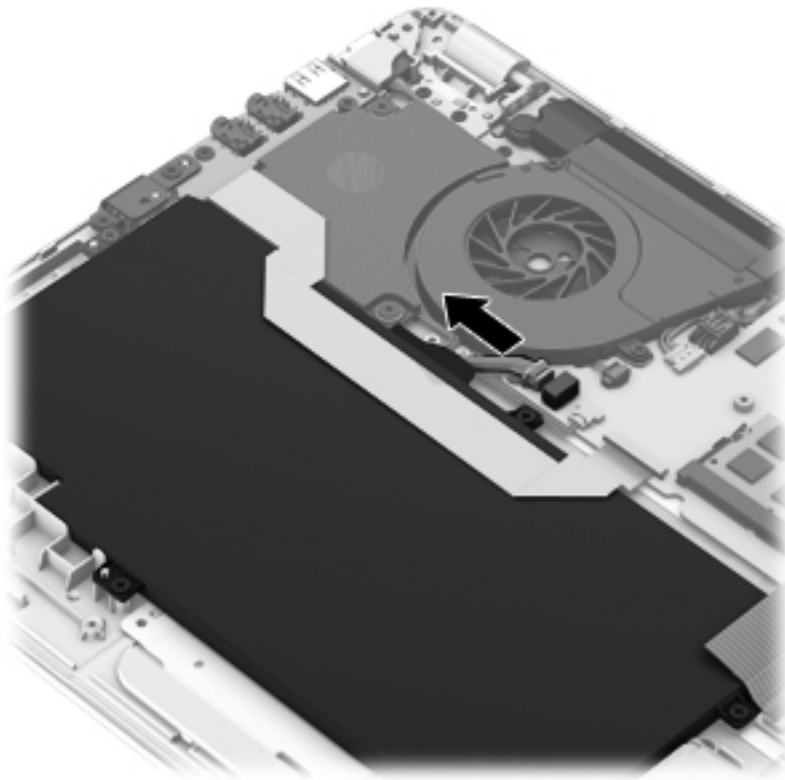

3. Move the battery cable to the side (1), and then remove the 6 Phillips PM 2.5×4.2 screws (2) that secure the battery to the computer.
4. Remove the battery from the computer (3).

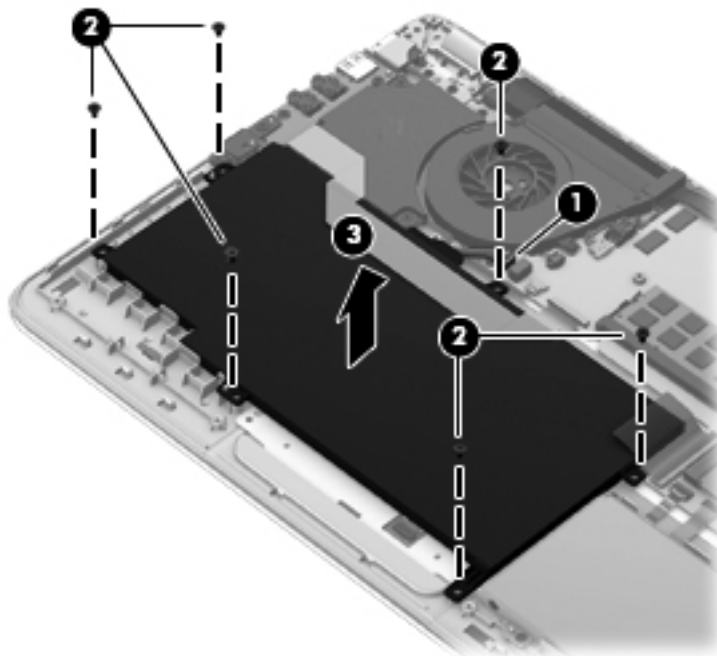

Reverse this procedure to install the battery.

Hard drive

Description	Spare part number
500 GB, 5400 rpm	683802-005
320 GB, 7200 rpm	634862-005
320 GB, 5400 rpm	645193-005
128 GB mSATA solid-state drive	687101-001
32 GB mSATA solid-state drive	687100-001


Before removing the hard drive or SSD, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).


Remove the hard drive:

1. Disconnect the hard drive cable from the system board **(1)**, and then remove the 4 screws **(2)** securing the hard drive to the top cover.

2. Remove the hard drive **(3)**.

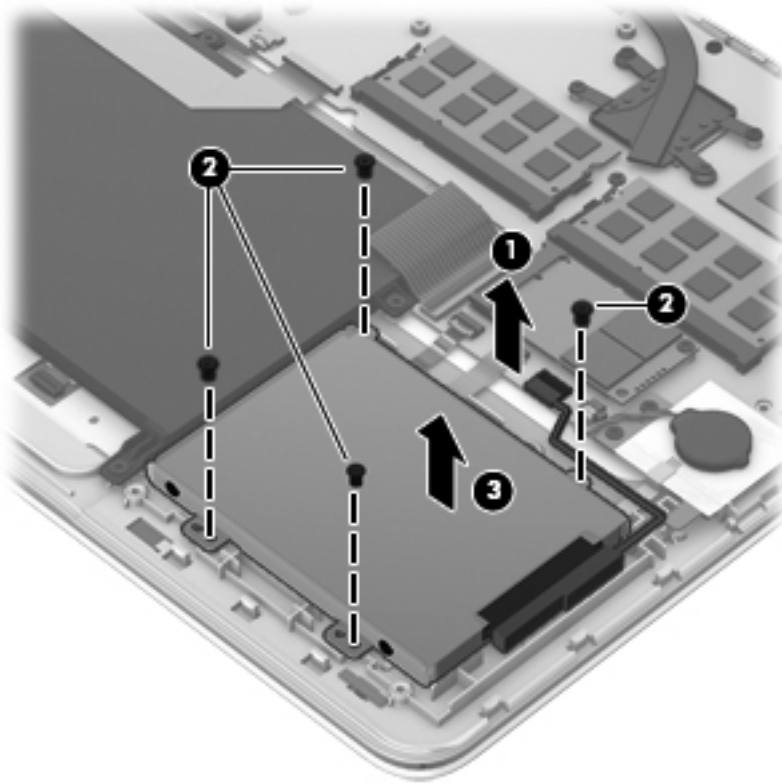


3. Remove the hard drive connector cable **(1)**. Remove the 4 screws **(2)** securing the hard drive bracket to the hard drive, and then remove the hard drive bracket **(3)**.

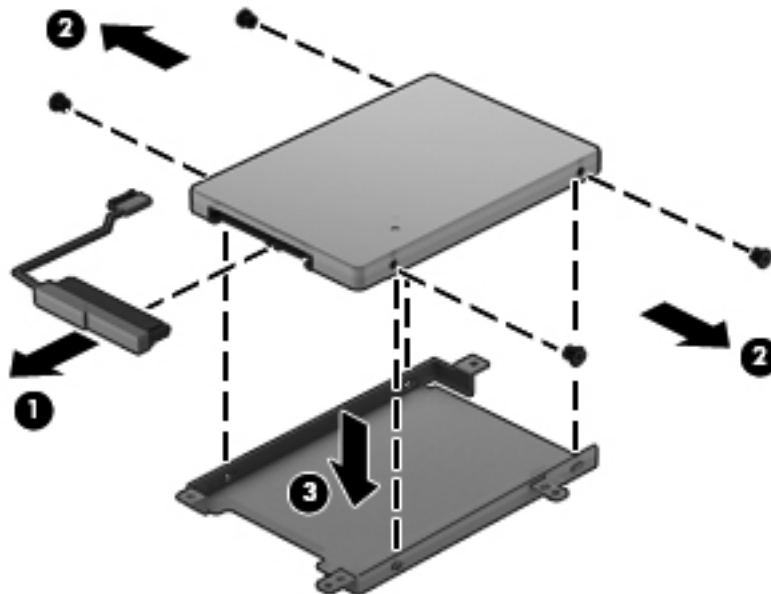

4. Remove the hard drive **(3)**.

Remove the mSATA solid-state drive:

- ▲ Remove the screw **(1)**, and then remove the mSATA solid-state drive **(2)**.

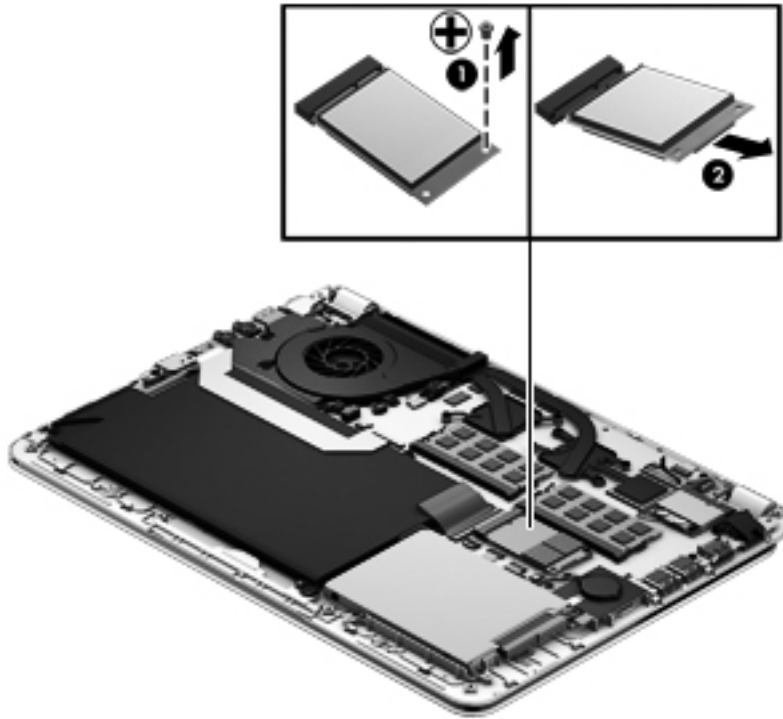

Reverse these procedures to reassemble and install the hard drive.

RTC battery

Description	Spare part number
RTC battery	686922-001

Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).


Remove the RTC battery:

1. Use a thin, non-conductive tool to remove the RTC battery from the socket on the system board.



NOTE: Use a thin, non-conductive tool to remove the RTC battery from the socket on the system board.

2. Hold down the media card reader board **(2)**, and remove the RTC battery **(3)**. (The RTC battery is also attached to the system board by foam material rather than double-sided adhesive.)

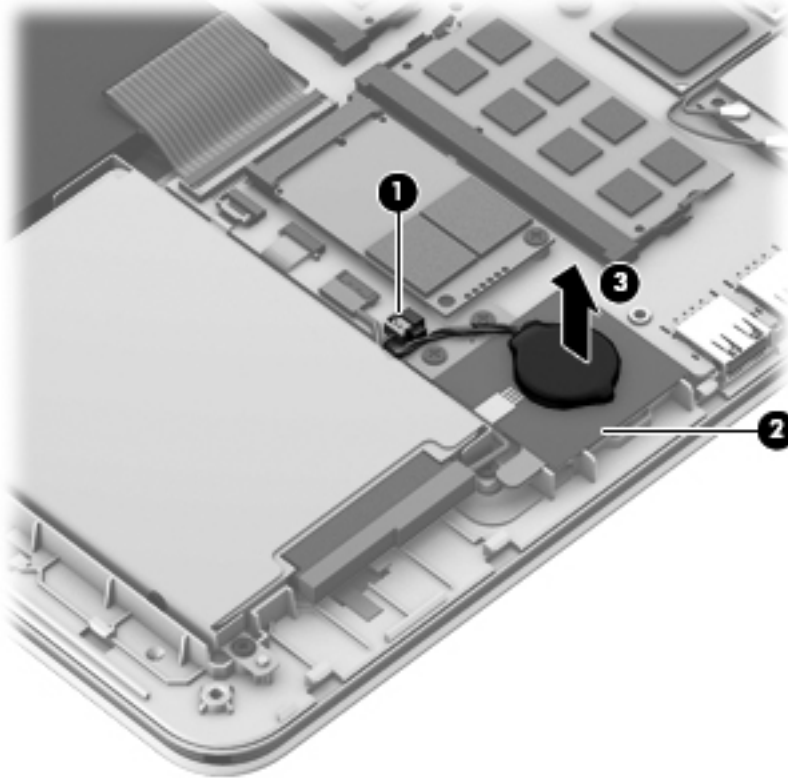

Reverse this procedure to install the RTC battery on computer models. When installing the RTC battery, make sure the "+" sign faces up.

TouchPad module

Description	Spare part number
In midnight black finish for use on all computer models (includes bracket and cable)	688001-001
In natural silver finish for use only on computer models equipped with an Intel processor (includes bracket and cable)	691643-001


Before removing the TouchPad button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).

Remove the TouchPad button board and cable:

1. Turn the top cover upside down, with the back edge toward you.
2. Disconnect the cable **(1)** that secures the TouchPad cable to the system board.
3. Remove the 4 Phillips PM 2.5×3.0 black screws **(2)** that secure the TouchPad button board to the top cover.
4. Remove the 2 Phillips PM 2.5×3.0 silver screws, and then remove the TouchPad bracket **(3)**.

5. Lift up on the rear edge, slide backwards, and then remove the TouchPad button board and cable (4).

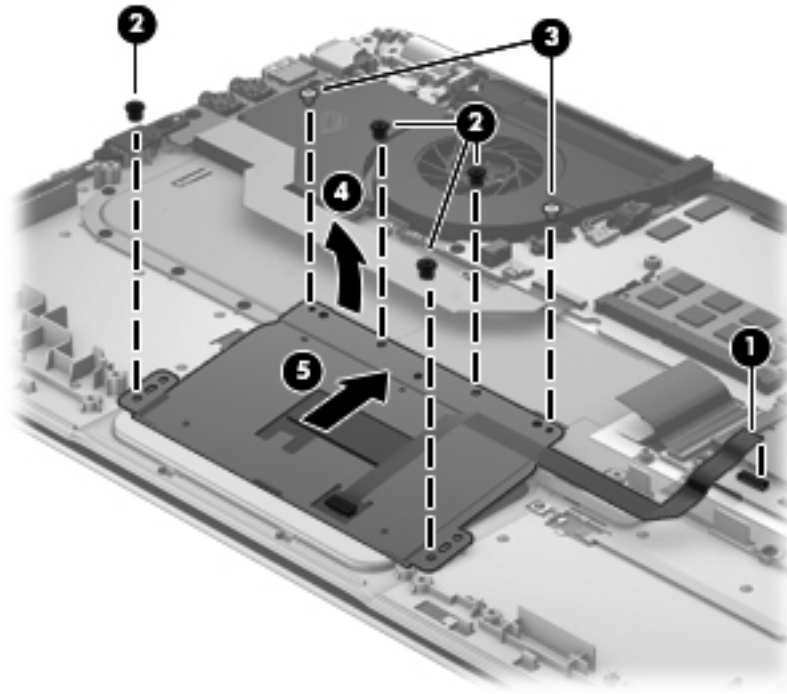

Reverse this procedure to install the TouchPad button board and cable.

WLAN module

Description	Spare part number
Intel Centrino Wireless-N 1030 + Bluetooth Combo Adapter	670290-005
Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter	655795-005
Broadcom 4313GN 802.11b/g/n 1×1 WiFi and 20702 Bluetooth 4.0 Combo Adapter	657325-005
Atheros 9485GN 802.11b/g/n 1×1 WiFi and 3012 Bluetooth 4.0 Combo Adapter	690019-001
Intel Centrino Wireless-N 1030 + Bluetooth Combo Adapter	690020-001
Intel Centrino Wireless-N 1030 + Bluetooth Combo Adapter	690020-005

CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).


Remove the WLAN module:


1. Disconnect the #1 and #2 WLAN antenna cables from the WLAN module **(1)**.

NOTE: The #1 WLAN antenna cable is connected to the WLAN module #1 main terminal. The #2 WLAN antenna cable is connected to the WLAN module #2 auxiliary terminal.

2. Remove the Phillips PM 2.0×2.5 screw **(2)** that secures the WLAN module to the system board. (The WLAN module tilts up.)

3. Remove the WLAN module by pulling the module away from the slot at an angle **(3)**.

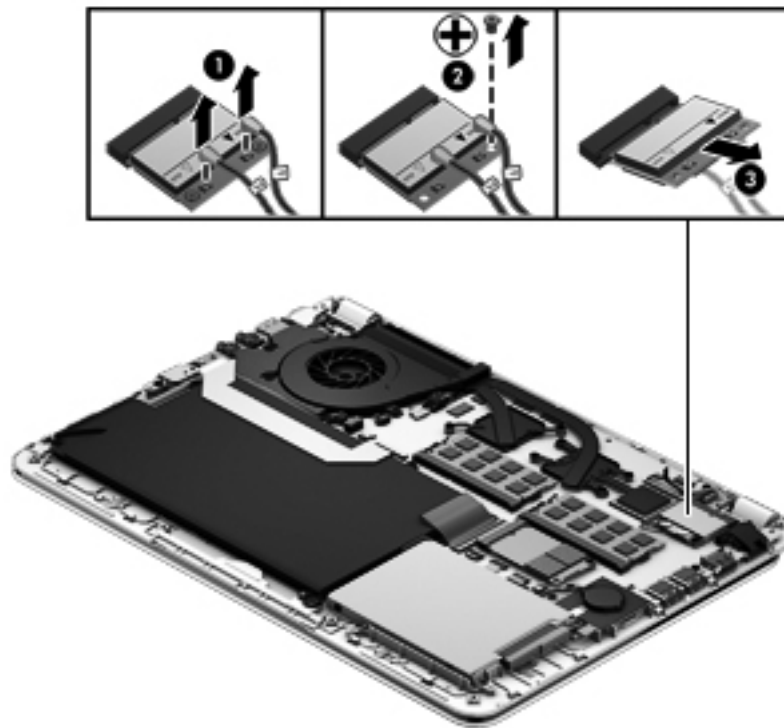

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors.

Memory module

Description	Spare part number
4-GB memory module (PC3, 12800, 1600-MHz)	641369-005
2-GB memory module (PC3, 12800, 1600-MHz)	652972-005
8-GB memory module (PC3, 12800, 1600-MHz)	670034-005

Before removing a memory module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Remove the keyboard (see [Keyboard on page 72](#)).


6. Remove the top cover (see [Top cover on page 76](#)).
7. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the memory module:

1. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)

⚠ CAUTION: To prevent damage to the memory module, hold it by the edges only. Do not touch the components on the memory module.

2. Slide the memory module forward **(2)**.
3. Remove the memory module **(3)**.

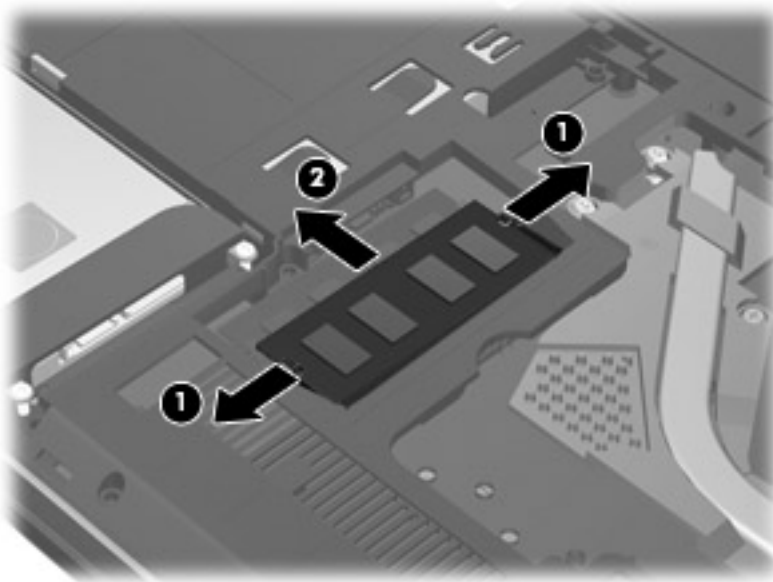

Reverse this procedure to install a memory module.

Fan


Description	Spare part number
Fan	686580-001

Before removing the fan:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the fan:

1. Disconnect the fan cable **(1)**.
2. Remove the 2 Phillips PM screws **(2)** securing the fan to the unit, and then lift the fan upwards **(3)**.
3. Remove the piece of tape on the underside of the heat sink that secures the fan to the unit **(4)**.

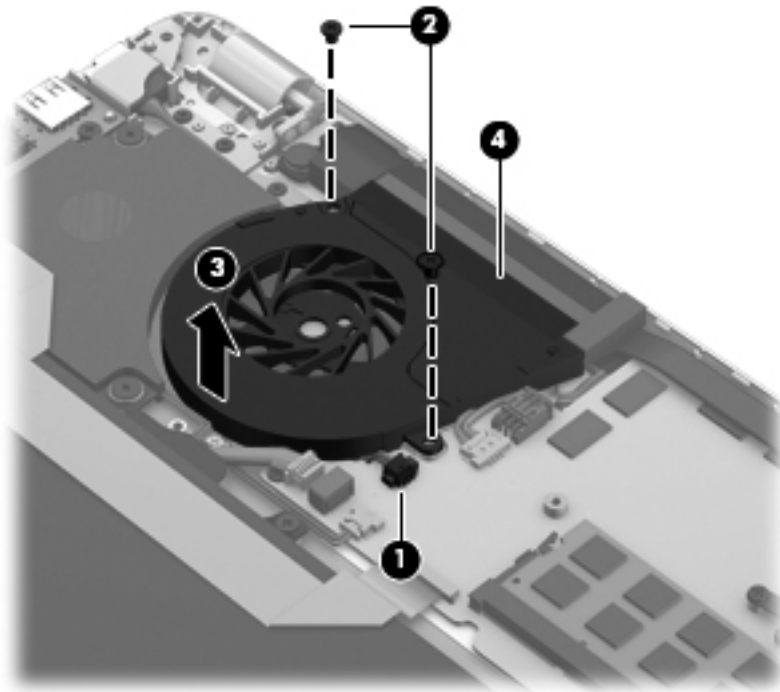

System board



NOTE: The system board spare part kit includes replacement thermal material.

Description	Spare part number
For use only on computer models equipped with an AMD A10-4655M processor (2.00-GHz, SC turbo up to 2.80-GHz; 4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W) and the Windows 8 Professional operating system	708978-601
For use only on computer models equipped with an AMD A10-4655M processor (2.00-GHz, SC turbo up to 2.80-GHz; 4.00-MB L2 cache, 1333-MHz FSB, DDR3, quad core, 25 W) and the Windows 8 Standard operating system	708978-501
For use only on computer models equipped with an AMD A8-4555M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Professional operating system	694437-601
For use only on computer models equipped with an AMD A8-4555M 2.10-GHz (SC turbo up to 2.60-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Standard operating system	694437-501
For use only on computer models equipped with an AMD A6-4455M processor (2.10-GHz, SC turbo up to 2.60-GHz; 1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W) and the Windows 8 Professional operating system	708977-601
For use only on computer models equipped with an AMD A6-4455M processor (2.10-GHz, SC turbo up to 2.60-GHz; 1.00-MB L2 cache, 1333-MHz FSB, DDR3, dual core, 17 W) and the Windows 8 Standard operating system	708977-501
For use only on computer models equipped with an AMD A4-4355M 1.70-GHz (SC turbo up to 2.30-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Professional operating system	694436-601
For use only on computer models equipped with an AMD A4-4355M 1.70-GHz (SC turbo up to 2.30-GHz) processor (1.0-MB L2 cache, 1333-MHz DDR3, dual core 17-W) and the Windows 8 Standard operating system	694436-501
For use only on computer models equipped with an Intel Dual Core i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713698-601
For use only on computer models equipped with an Intel Dual Core i7-3537U 2.00-GHz (SC turbo up to 3.10-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713698-501
For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713691-601
For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713691-501

Description	Spare part number
For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708976-601
For use only on computer models equipped with an Intel Dual Core i7-3517U 1.90-GHz (SC turbo up to 3.00-GHz) processor (1600-MHz FSB, 4.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708976-501
For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	719595-601
For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	719595-501
For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	719593-601
For use only on computer models equipped with an Intel Dual Core i5-3337U 1.80-GHz (SC turbo up to 2.70-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	719593-501
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713692-601
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713692-501
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708972-601
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708972-501
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	713702-601
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	708971-601
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	713702-501

Description	Spare part number
For use only on computer models equipped with an Intel Dual Core i5-3317U 1.70-GHz (SC turbo up to 2.60-GHz) processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	708971-501
For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	719596-601
For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	719596-501
For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	719594-601
For use only on computer models equipped with an Intel Dual Core i3-3227U 1.90-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	719594-501
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713693-601
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713693-501
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708975-601
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708975-501
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	713701-601
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	708970-601
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	713701-501
For use only on computer models equipped with an Intel Dual Core i3-3217U 1.80-GHz processor (1600-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	708970-501
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	713694-601
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 8750M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	713694-501

Description	Spare part number
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Professional operating system	708974-601
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), the 7670M chipset, a graphics subsystem with 2-GB of discrete memory, and the Windows 8 Standard operating system	708974-501
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	713703-601
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Professional operating system	708973-601
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	713703-501
For use only on computer models equipped with an Intel Dual Core i3-2377M 1.50-GHz processor (1333-MHz FSB, 3.00-MB L3 cache, 17 W), a graphics subsystem with UMA memory, and the Windows 8 Standard operating system	708973-501

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Remove the battery (see [Battery on page 44](#)).
6. Remove the WLAN module (see [WLAN module on page 53](#)).
7. Remove the hard drive (see [Hard drive on page 46](#)).
8. Remove the speaker (see [Speakers on page 69](#)).
9. Remove the power connector and cable (see [Power connector cable on page 67](#)).
10. Remove the USB/Audio and cable (see [USB/Audio](#)).


When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- RTC battery (see [RTC battery on page 49](#))
- Memory module (see [Memory module on page 54](#))
- Power connector cable (see [Power connector cable on page 67](#))

- Fan (see [Fan-Heat sink on page 62](#))
- Heat sink (see [Fan-Heat sink on page 62](#))
- WLAN module see ([WLAN module on page 53](#)).
- Hard drive (see [Hard drive on page 46](#)).
- USB/Audio (see USB/Audio)


Remove the system board:

1. Remove the following cables:
 - Power connector cable **(1)**
 - Speaker cable **(2)**
 - Subwoofer cable **(3)**
 - USB/Audio board cable **(4)**
 - Keyboard cable **(5)**
 - Keyboard light cable **(6)**
 - TouchPad board cable **(7)**
 - Wireless cable **(8)**
 - Display panel cable **(9)**
 - Power button board cable **(10)**

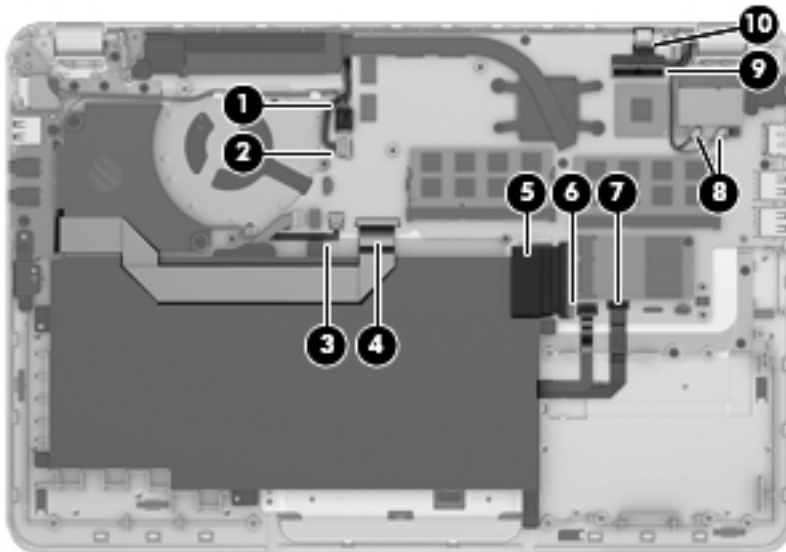

2. Remove the 4 Phillips PM 2.5x3 screws **(1)** until the system board rests at an angle.


3. Remove the system board (2) by sliding it up and to the right at an angle.

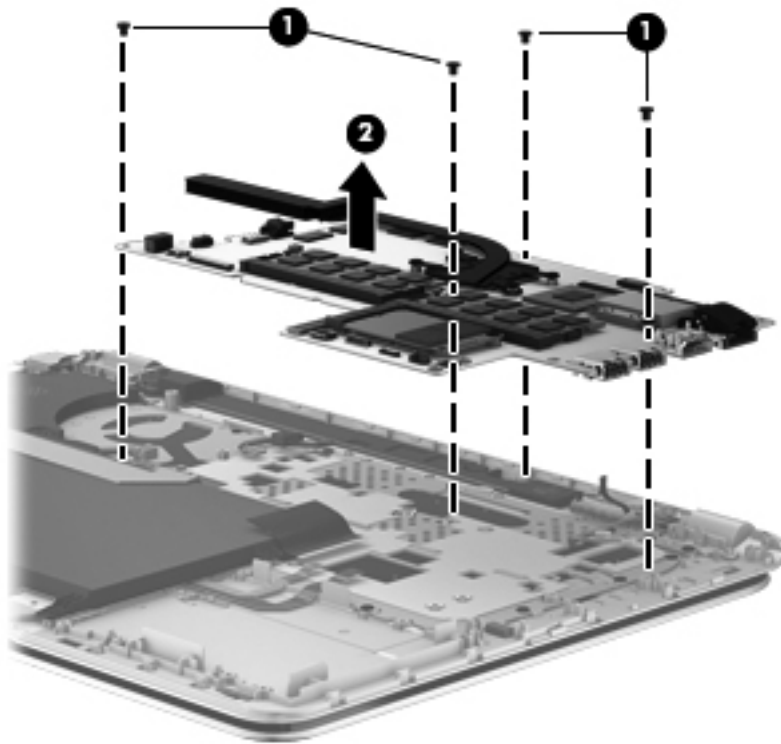

Reverse this procedure to install the system board.

Fan-Heat sink

Description	Spare part number
For use only on computer models equipped with a 25-W AMD processor	691657-001
For use only on computer models equipped with a 17-W AMD processor	691656-001
For use only on computer models equipped with an Intel processor and a graphics subsystem with discrete memory	686579-001
For use only on computer models equipped with an Intel processor and a graphics subsystem with UMA memory	686578-001


 **NOTE:** To properly ventilate the computer, allow at least 7.6 cm (3 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Before removing the fan, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)),

Remove the fan:

1. Turn the computer, with the front toward you.
2. Disconnect the fan cable **(1)** from the system board.
3. Remove the 4 Phillips PM 2.0×3.0 screws securing the heat sink **(2)**, and the 2 Phillips PM 2.0×3.0 screws securing the fan **(3)**.
4. Remove the fan/heat sink **(4)**.

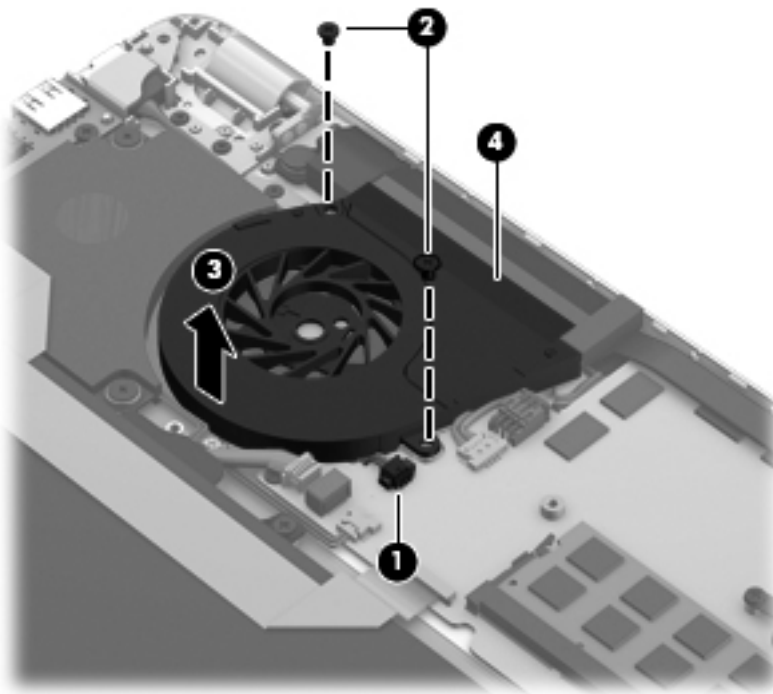

Reverse this procedure to install the fan/heat sink..

Media card reader assembly (smart card reader)


Description	Spare part number
Media card reader assembly (smart card reader)	688004-001

Before removing the media reader assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the media card reader assembly:

1. Remove the 2 screws **(1)**, and then lift the media card reader assembly **(2)**.
2. Disconnect the cable **(3)**, and then remove the media card reader **(4)**.

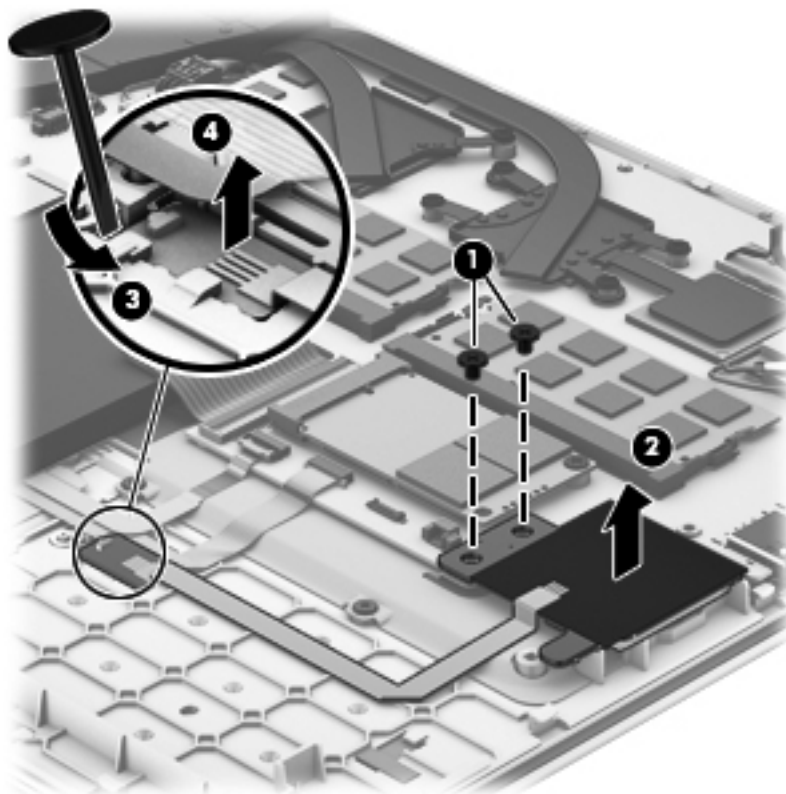

Subwoofer


Description	Spare part number
Subwoofer	686599-001

Before removing the USB/Audio board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the subwoofer:

1. Disconnect the subwoofer cable (1).
2. Remove the 2 broadhead screws (2).
3. Remove the subwoofer (3).

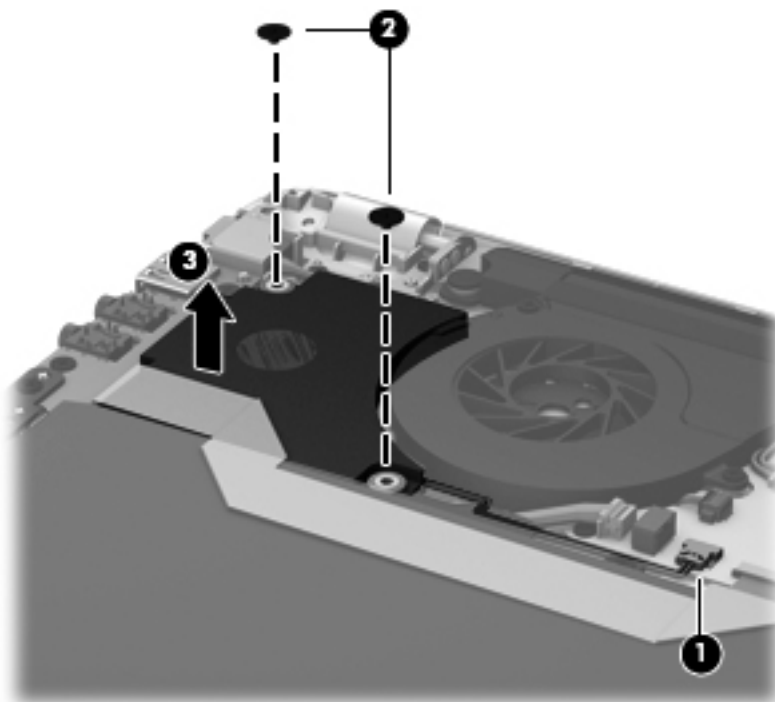

USB/Audio board


Description	Spare part number
USB/Audio board	686597-001

Before removing the USB/Audio board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).
6. Remove the subwoofer (see [Subwoofer on page 65](#)).

Remove the USB/Audio board:

1. Disconnect the USB/Audio board cable from the system board **(1)**
2. Disconnect the Phillips PM 2.0x2.0 screw securing the USB/Audio board **(2)**.
3. Remove the USB/Audio board **(3)**.

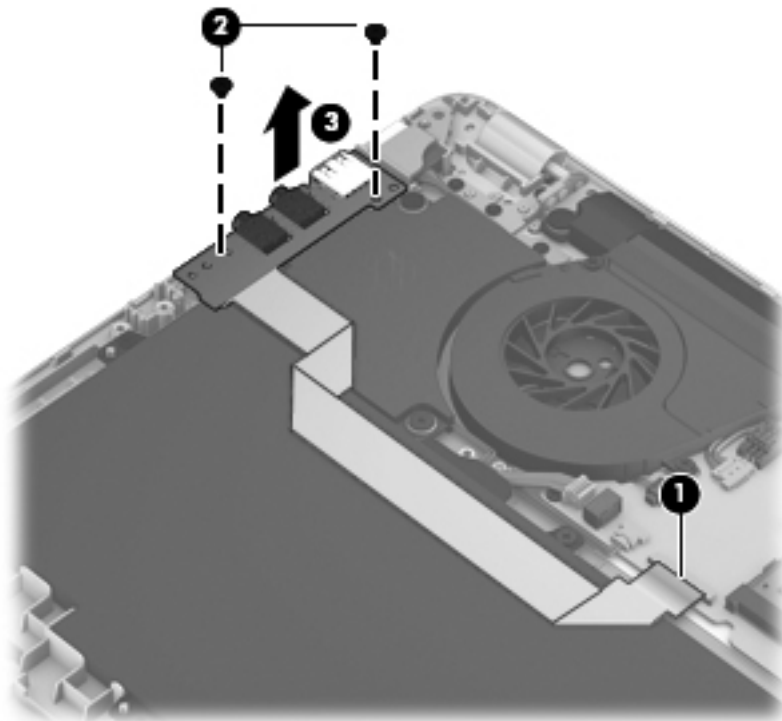

Power connector cable

Description	Spare part number
Power connector cable (includes bracket)	686593-001


Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).
6. Remove the subwoofer (see [Subwoofer on page 65](#)).
7. Remove the USB/Audio board (see [USB/Audio board on page 66](#)).

Remove the power connector cable:

1. Turn the computer, with the right side toward you.
2. Disconnect the power connector cable **(1)** from the system board.
3. Remove the double-sided tape **(2)** from the power connector.

4. Remove the power connector cable (3).

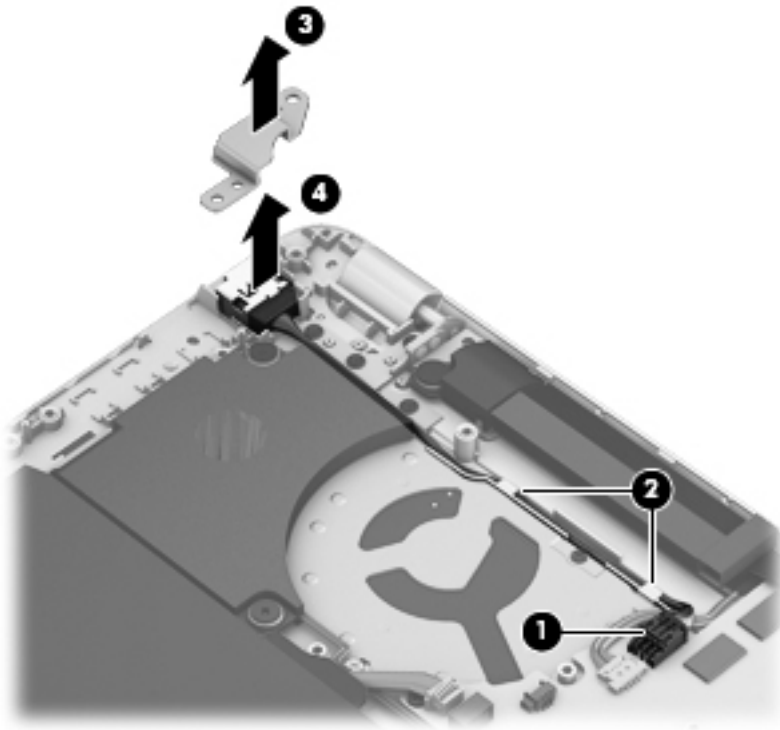

Reverse this procedure to install the power connector cable and bracket.

Speakers


Description	Spare part number
Speaker Kit (includes left and right speakers and cable)	686598-001

Before removing the speakers, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the speakers:

1. Turn the computer, with the front edge toward you.
2. Release the 2 Phillips PM 2.0×3.0 screws securing each speaker. **(1)**
3. Remove the speakers and cables **(2)**.

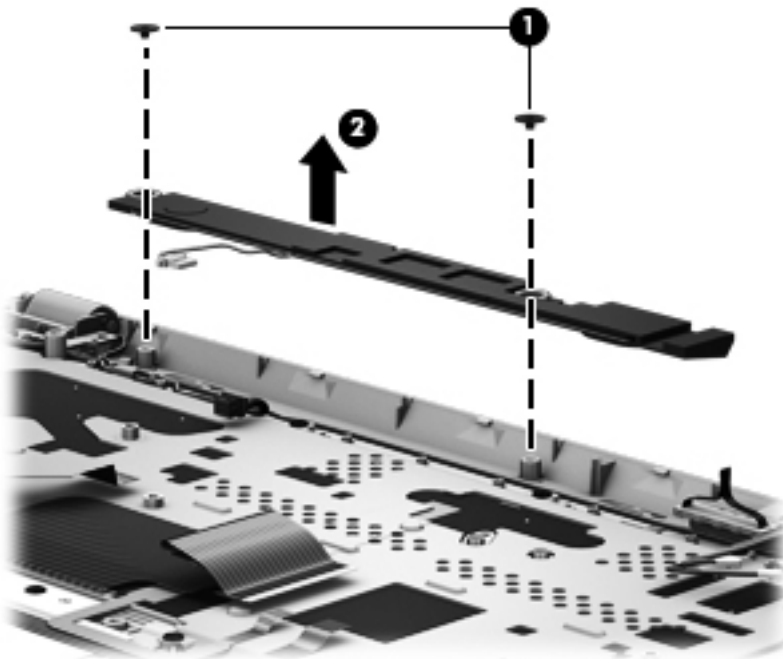

Reverse this procedure to install the speakers.

Power button board

Description	Spare part number
Power button board	688003-001

Before removing the Power button board, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the Power button board and cable:


1. Turn the top cover upside down, with the back edge toward you.
2. Remove the 2 Phillips PM2.0×3.0 screws securing the power button board to the top cover **(1)**.

3. Remove the Power button board (2).

 **NOTE:** The Power button board's cable is attached to the board.

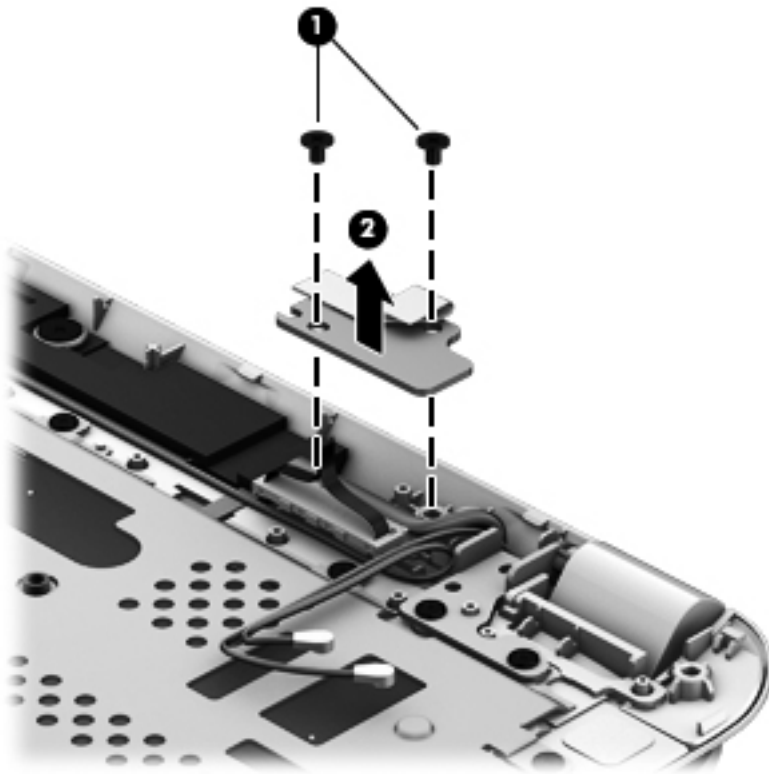

Keyboard

 **NOTE:** The keyboard spare part kit includes a keyboard cable.

For use in country or region	Spare part number	For use in country or region	Spare part number
Keyboard with backlight in midnight black finish for use only on computer models equipped with the Windows 8 operating system (includes backlight cable):		For use on all computer models in Russia	698680-251
For use only on computer models equipped with an Intel processor in Belgium	698680-A41	For use only on computer models equipped with an Intel processor in Saudi Arabia	698680-171
For use on all computer models in Canada	698680-DB1	For use only on computer models equipped with an Intel processor in Spain	698680-071
For use on all computer models in Denmark, Finland, and Norway	698680-DH1	For use only on computer models equipped with an Intel processor in Switzerland	698680-BG1
For use only on computer models equipped with an Intel processor in Greece	698680-151	For use only on computer models equipped with an Intel processor in Turkey	698680-141
For use only on computer models equipped with an Intel processor in the Netherlands	698680-B31	For use on all computer models in the United States	698680-001
Keyboard with backlight in midnight black and natural silver finish for use only on computer models equipped with the Windows 8 operating system (includes backlight cable):		For use only on computer models equipped with an Intel processor in Russia	698682-251
For use only on computer models equipped with an Intel processor in Belgium	698682-A41	For use only on computer models equipped with an Intel processor in Saudi Arabia	698682-171
For use on all computer models in Canada	698682-DB1	For use only on computer models equipped with an Intel processor in Spain	698682-071
For use only on computer models equipped with an Intel processor in Denmark, Finland, and Norway	698682-DH1	For use only on computer models equipped with an Intel processor in Switzerland	698682-BG1
For use only on computer models equipped with an Intel processor in Greece	698682-151	For use only on computer models equipped with an Intel processor in Turkey	698682-141
For use only on computer models equipped with an Intel processor in Israel	698682-B31	For use only on computer models equipped with an Intel processor in the United States	698682-001
Keyboard without backlight in midnight black finish for use only on computer models equipped with the Windows 8 operating system:			
For use only on computer models equipped with an Intel processor in the Czech Republic and Slovakia	698679-FL1	For use only on computer models equipped with an Intel processor in Portugal	698679-131

For use in country or region	Spare part number	For use in country or region	Spare part number
For use on all computer models in France	698679-051	For use only on computer models equipped with an Intel processor in Romania	698679-271
For use only on computer models equipped with an Intel processor in Germany	698679-041	For use only on computer models equipped with an Intel processor in Slovenia	698679-BA1
For use only on computer models equipped with an Intel processor in India	698679-D61	For use only on computer models equipped with an Intel processor in Taiwan	698679-AD1
For use only on computer models equipped with an Intel processor in Israel	698679-BB1	For use only on computer models equipped with an Intel processor in South Korea	698679-AB1
For use only on computer models equipped with an Intel processor in Italy	698679-061	For use only on computer models equipped with an Intel processor in Thailand	698679-281
For use only on computer models equipped with an Intel processor in Japan	698679-291	For use on all computer models in the United Kingdom and Singapore	698679-031
For use only on computer models equipped with an Intel processor in the Netherlands	698679-B31	For use on all computer models in the United States	698679-001
Keyboard in without backlight midnight black and natural silver finish for use only on computer models equipped with the Windows 8 operating system:		For use only on computer models equipped with an Intel processor in Portugal	698681-131
For use only on computer models equipped with an Intel processor in the Czech Republic and Slovakia	698681-FL1	For use only on computer models equipped with an Intel processor in Romania	698681-271
For use only on computer models equipped with an Intel processor in France	698681-051	For use only on computer models equipped with an Intel processor in Slovenia	698681-BA1
For use only on computer models equipped with an Intel processor in Germany	698681-041	For use only on computer models equipped with an Intel processor in Taiwan	698681-AD1
For use only on computer models equipped with an Intel processor in India	698681-D61	For use only on computer models equipped with an Intel processor in South Korea	698681-AB1
For use only on computer models equipped with an Intel processor in Israel	698681-BB1	For use only on computer models equipped with an Intel processor in Thailand	698681-281


For use in country or region	Spare part number	For use in country or region	Spare part number
For use only on computer models equipped with an Intel processor in Italy	698681-061	For use only on computer models equipped with an Intel processor in the United Kingdom and Singapore	698681-031
For use only on computer models equipped with an Intel processor in Japan	698681-291	For use only on computer models equipped with an Intel processor in the United States	698681-001

Before removing the keyboard, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).

Remove the keyboard:


1. Turn the computer right-side up with the front facing you.
2. Remove the 16 Phillips PM 2x3 screws.

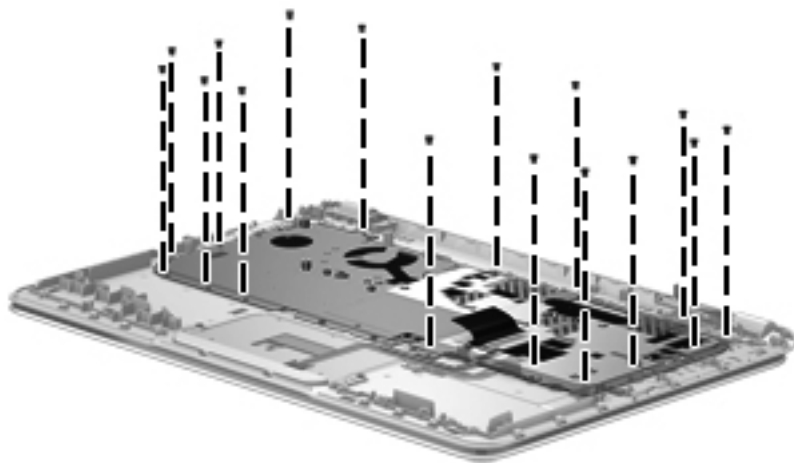

3. Remove the single screw **(1)**, and then release the keyboard and keyboard bracket from the top cover **(2)**.

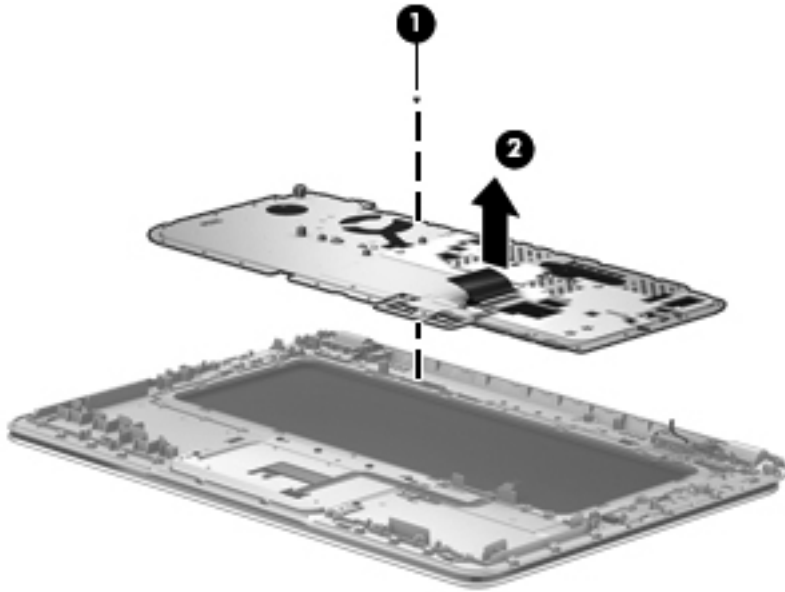

4. Remove the 1 Phillips PM 2.5x3 screw securing the keyboard to the bracket **(1)**, disconnect the keyboard cable **(2)** (pushing it through the bracket), and then remove the keyboard from the bracket **(3)**.

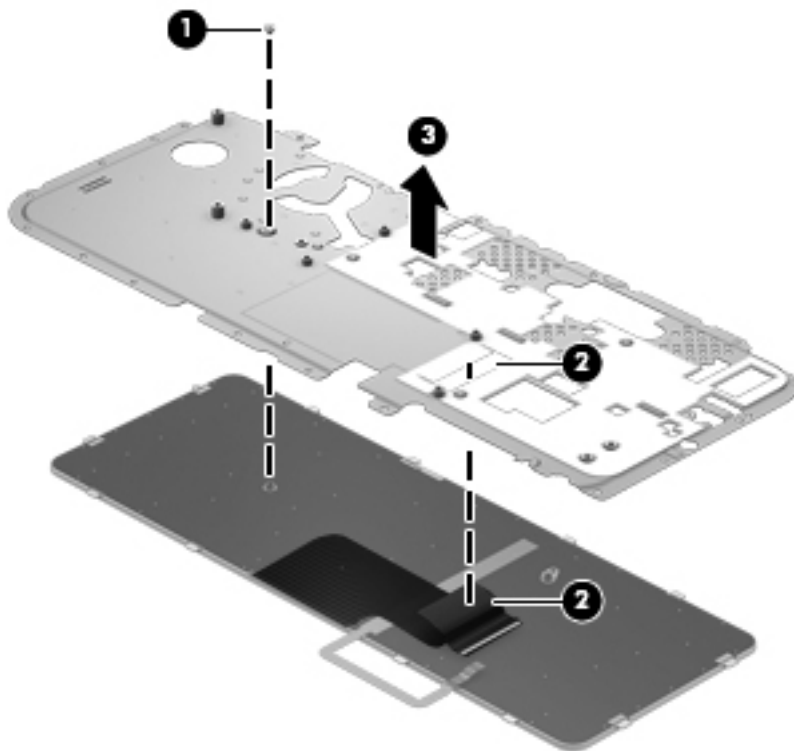

Reverse this procedure to install the keyboard.

Top cover


Description	Spare part number
In midnight black finish for use on all computer models (includes power button board and cable and TouchPad and TouchPad cable)	686097-001
In natural silver finish for use only on computer models equipped with an Intel processor (includes power button board and cable and TouchPad and TouchPad cable)	690198-001

Before removing the top cover, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the base enclosure (see [Base enclosure on page 43](#)).
5. Disconnect the battery cable (see [Battery on page 44](#)).

Remove the top cover:

1. Turn the computer right-side up, with the front toward you.
2. Open the computer.
3. Remove the 3 screws from each hinge on the top cover **(1)**, and then remove the top cover **(2)**.

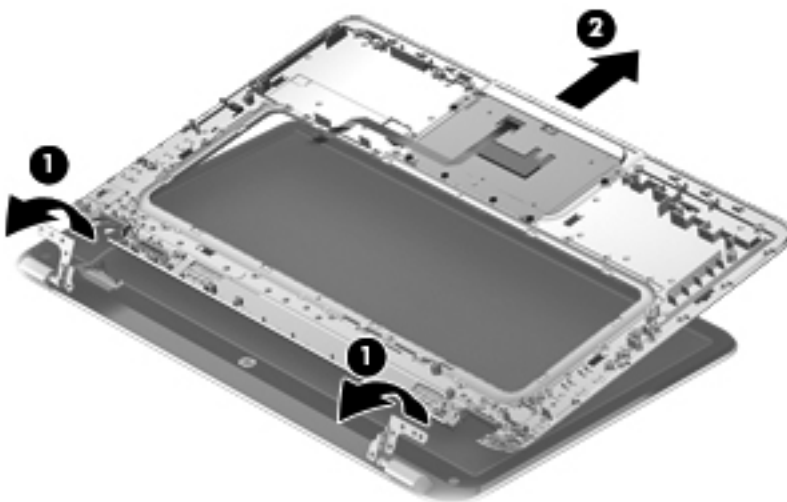

Reverse this procedure to install the top cover.

5 Setup Utility (BIOS) and System Diagnostics


Windows 8

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press [esc](#), and then press [f10](#).

Information about how to navigate in Setup Utility (BIOS) is located at the bottom of the screen.

 **NOTE:** Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn** + **esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

CAUTION: To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, select the **HP Support Assistant app**.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.


Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. From the Start screen, type **e**, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).

3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.


 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly.


To start System Diagnostics:

1. Turn on or restart the computer, quickly press **esc**, and then press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test while it is running, press **esc**. If you need to restart unit while it is running, press **ctrl+alt+delete** to restart.

Ubuntu

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

Starting Setup Utility

- ▲ Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press `esc`. When the Startup Menu is displayed, press `f10`.

Using Setup Utility

Changing the language of Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **System Configuration > Language**, and then press `enter`.
3. Use the arrow keys to select a language, and then press `enter`.
4. When a confirmation prompt with your language selected is displayed, press `enter`.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press `enter`.

Your change takes effect immediately.

Navigating and selecting in Setup Utility

Setup Utility does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a list or to toggle a field—for example an Enable/Disable field—use either the arrow keys or `f5` and `f6`.
- To select an item, press `enter`.
- To close a text box or return to the menu display, press `esc`.
- To display additional navigation and selection information while Setup Utility is open, press `f1`.


Displaying system information

1. Start Setup Utility.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press [enter](#).

Restoring factory default settings in Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press [enter](#).
3. When the Setup Confirmation is displayed, press [enter](#).
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press [enter](#).

The Setup Utility factory settings take effect when the computer restarts.

 **NOTE:** Your password, security, and language settings are not changed when you restore the factory settings.

Exiting Setup Utility

- To exit Setup Utility and save your changes from the current session:
If the Setup Utility menus are not visible, press [esc](#) to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press [enter](#).
- To exit Setup Utility without saving your changes from the current session:
If the Setup Utility menus are not visible, press [esc](#) to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press [enter](#).

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named `Readme.txt`, which contains information regarding installing and troubleshooting the file.


Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by using Setup Utility.

1. Start Setup Utility.
2. If the system information is not displayed, use the arrow keys to select the **Main** menu.
BIOS and other system information is displayed.
3. To exit Setup Utility, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Suspend or Hibernation. Do not insert, remove, connect, or disconnect any device, cable, or cord.

Do not shut down the computer or initiate Suspend or Hibernation. Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Access the page on the HP website that provides software for your computer.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
 - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete.


 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly.

To start System Diagnostics:

1. Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press `esc`. When the Startup Menu is displayed, press `f2`.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostics test while it is running, press `esc`.

6 Specifications

Computer specifications

	Metric	U.S.
Dimensions		
Width	29.16 cm	11.48 in
Depth	2.15 cm	8.46 in
Height (front to back)	2.11 to 3.19 cm	0.83 to 1.26 in
Weight		
With 6-cell battery	1.60 kg	3.53 lb
With 3-cell battery	1.46 kg	3.22 lb
Input power		
Operating voltage and current	19.5V dc @ 3.33 A - 65 W	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

15.6-inch display specifications

	Metric	U.S.
Dimensions		
Height	16.50 cm	6.50 in
Width	25.34 cm	11.60 in
Diagonal	33.66 cm	13.30 in
Number of colors	262,144	
Contrast ratio	200:1 (typical)	
Brightness	200 nits (typical)	
Pixel resolution		
Pitch	0.197 mm × 0.197 mm	
Format	1366 × 768	
Configuration	RGB vertical stripe	
Backlight	LED	
Character display	80 × 25	
Total power consumption	2.0 W	
Viewing angle	±65° horizontal, ±50° vertical (typical)	

7 Backing up, restoring, and recovering

Windows 8

Your computer includes tools provided by HP and the operating system to help you safeguard your information and retrieve it if you ever need to. These tools will help you return your computer to a proper working state or even back to the original factory state, all with simple steps.

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system



NOTE: This guide describes an overview of backing up, restoring and recovering options. For more details about the tools provided, see Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

Creating recovery media and backups

Recovery after a system failure is only as good as your most recent backup.

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- System Recovery—Reinstalls the original operating system and the programs that were installed at the factory.
- Minimized Image Recovery—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See the “Creating HP Recovery media” section.

2. As you add hardware and software programs, create system restore points. A system restore point is a snapshot of certain hard drive contents saved by Windows System Restore at a specific time. A system restore point contains information that Windows uses, such as registry settings. Windows creates a system restore point for you automatically during a Windows update and during other system maintenance (such as a software update, security scanning, or system diagnostics). You can also manually create a system restore point at any time. For more information and steps for creating specific system restore points, see Windows Help and Support. From the Start screen, type **h**, and then select **Help and Support**.
3. As you add photos, video, music, and other personal files, create a backup of your personal information. Windows File History can be set to regularly and automatically back up files from libraries, desktop, contacts, and favorites. If files are accidentally deleted from the hard drive and they can no longer be restored from the Recycle Bin, or if files become corrupted, you can restore the files that you backed up using File History. Restoring files is also useful if you ever choose to reset the computer by reinstalling Windows or choose to recover using HP Recovery Manager.



NOTE: File History is not enabled by default, so you must turn it on.

For more information and steps for enabling Windows File History, see Windows Help and Support. From the Start screen, type **h**, and then select **Help and Support**.

Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or aid in the replacement of a hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.

- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and follow the on-screen instructions to continue.

If you ever need to recover the system, see the “Recovering using HP Recovery Manager” section.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- If you need to restore your personal files and data, you can use Windows File History to restore your information from the backups you created.

For more information and steps for using File History, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.

- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, and then select **Drivers and Applications Reinstall**, and follow the on-screen instructions.

- If you want to restore the system to a previous state without losing any personal information, Windows System Restore is an option. System Restore allows you to restore without the requirements of Windows Refresh or a reinstallation. Windows creates system restore points automatically during a Windows update and other system maintenance events. Even if you did not manually create a restore point, you can choose to restore to a previous point, automatically created.

For more information and steps for using Windows System Restore, see Windows Help and Support. From the Start screen, type `h`, and then select **Help and Support**.


- If you want a quick and easy way to recover the system without losing your personal information, settings, or apps that came preinstalled on your computer or were purchased from the Windows Store, consider using Windows Refresh. This option does not require backing up data to another drive. For more information, see the “Using Windows Refresh for quick and easy recovery” section.
- If you want to reset your computer to its original state, Windows provides an easy way to remove all personal data, apps, and settings, and reinstall Windows. For more information, see the “Remove everything and reinstall Windows” section.
- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media.


Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager. For more information, see the “Recovering using HP Recovery Manager” section.


- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery media. For more information, see the “Recovering using HP Recovery Manager” section.
- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see the “Recovering using HP Recovery Manager” section.
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option. For more information, see the “Removing the HP Recovery partition” section.

Using Windows Refresh for quick and easy recovery

When your computer is not working properly and you need to regain system stability, the Windows Refresh option allows you to start fresh and keep what is important to you.

 **IMPORTANT:** Refresh removes any traditional applications that were not originally installed on the system at the factory.

 **NOTE:** During Refresh, a list of removed traditional applications will be saved so that you have a quick way to see what you might need to reinstall. See Help and Support for instructions on reinstalling traditional applications. From the Start screen, type **h**, and then select **Help and Support**.

 **NOTE:** You may be prompted for your permission or password when using Refresh. See Windows Help and Support for more information. From the Start screen, type **h**, and then select **Help and Support**.

To start Refresh:

1. From the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Refresh your PC without affecting your files**, select **Get started**, and follow the on-screen instructions.

Remove everything and reinstall Windows

Sometimes you want to perform detailed reformatting of your computer, or you want to remove personal information before you give away or recycle your computer. The process described in this section provides a speedy, simple way to return the computer to its original state. This option removes all personal data, apps, and settings from your computer, and reinstalls Windows.



IMPORTANT: This option does not provide backups of your information. Before using this option, back up any personal information you wish to retain.

You can initiate this option by using the **F11** key or on the Start screen.

To use the **F11** key:

1. Press **F11** while the computer boots.
– or –
Press and hold **F11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Reset your PC**, and follow the on-screen instructions.

To use the Start screen:

1. From the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Remove everything and reinstall Windows**, select **Get started**, and follow the on-screen instructions.

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state. Using the HP Recovery media you created, you can choose from one of the following recovery options:

- **System Recovery**—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- **Minimized Image Recovery**—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to the state its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows Minimized Image Recovery.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails.
- To use the Factory Reset or System Recovery options, you must use HP Recovery media.
- If the HP Recovery media do not work, you can obtain recovery media for your system from the HP website. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

Using the HP Recovery partition to recover a minimized image (select models only)

The HP Recovery partition (select models only) allows you to perform a minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Press **f11** while the computer boots.
– or –
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **HP Recovery Manager**, and follow the on-screen instructions.


Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the first HP Recovery disc you created into the optical drive on your computer or into an optional external optical drive, and then restart the computer.

– or –

Insert the HP Recovery USB flash drive you created into a USB port on your computer, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See the “Changing the computer boot order” section.

3. Follow the on-screen instructions.

Changing the computer boot order


If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer.
3. Press and hold **esc** while the computer is restarting, and then press **f9** for boot options.
4. Select the optical drive or USB flash drive you want to boot from.
5. Follow the on-screen instructions.

Removing the HP Recovery partition

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** Removing the HP Recovery partition means you can no longer use Windows Refresh, the Windows Remove everything and reinstall Windows option, or the HP Recovery Manager option for minimized image recovery. Create HP Recovery media before removing the Recovery partition to ensure you have recovery options; see the “Creating HP Recovery media ” section.

Follow these steps to remove the HP Recovery partition:


1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and follow the on-screen instructions to continue.

Ubuntu

Recovery after a system failure is as good as your most recent backup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Performing a system recovery

The Deja Dup Restore Tool allows you to repair or restore the computer to its original factory state. You can create an image restore DVD using a DVD±RW optical drive. You can also create a restore image on a USB storage device.

 **CAUTION:** CAUTION: Using Restore completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery tool reinstalls the original operating system and programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be manually reinstalled. Personal files must be restored from a backup.

 **NOTE:** NOTE: HP recommends that you create the image restore in the event of a system failure.

Creating the restore DVDs

The restore creation software creates a set of system restore discs using blank, writable DVDs (DVDR or DVD+R). HP recommends using blank DVD+R discs from a manufacturer you trust, because these recovery DVDs are so important. You need approximately 3 blank DVD+R discs. The program states how many discs are needed at the beginning of the process.


To create restore DVDs:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select the DVD from the drop-down list.
3. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.
4. Follow the on-screen instructions.

Creating a restore image on a USB device


 **NOTE:** Be sure AC power is connected to the computer you begin.

Verify the exact amount of free space on your storage device before you begin the creation process. For most models, you will need at least 8 GB of free space on the storage device. However, depending on the drivers and software installed on your computer, you may need slightly more than 8 GB of space. **HP recommends that you use a 16 GB device or above for best results.**

 **IMPORTANT:** Remember to insert your USB device into the USB port on the computer before starting this procedure.


To create the restore image:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup location**, and select the USB device from the drop-down list.


 **NOTE:** If the USB device is not listed in the drop-down list for Backup Location, select **Local Folder**, and then click the **Choose Folder** button. Select the USB device from the panel on the left side of the Choose Folder window, and click **OK**.

3. Select **Overview** from the panel on the left side of the window, and then click **Backup Now**.
4. Follow the on-screen instructions.

Performing recovery using the restore DVD

 **NOTE:** NOTE: The following procedure uses the F11 BIOS Recovery feature to perform the recovery.

1. If possible, back up all personal files.
2. Shut down the computer.
3. Be sure the restore DVD or USB device is connected to the computer.
4. Restart the computer.
5. Using the arrow keys, select Recovery, and then press **enter**.
6. Follow the on-screen instructions.


 **NOTE:** If you are unable to boot (start up) your computer, and you did not create a system recovery disc, you must purchase an *Ubuntu Operating System DVD* to reinstall the operating system. For additional information, refer to the *Worldwide Telephone Numbers* booklet.

Backing up your information


You should back up your computer files on a regular schedule to maintain a current backup. You can manually back up your information to an optional external drive, a network drive, discs, or the Ubuntu One website. Back up your system at the following times:

- At regularly scheduled times
- Before the computer is repaired or restored
- Before you add or modify hardware or software

To back up your home directory files to the Ubuntu One website using the Deja Dup Backup Tool:


 **NOTE:** Before you back up your information, be sure you have designated a location to save the backup files.

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Select **Folders** from the panel on the left side of the window, and beneath **Folders to back up**, select the folders to back up.
3. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select **Ubuntu One** from the drop-down list.
4. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.

 **NOTE:** The first time you back up your files to Ubuntu One, you will need to create an account to sign into Ubuntu One. Enter your email address and password into the account sign-in boxes and follow the on-screen instructions to complete the sign-in process.

To restore backup files:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Click **Restore**, select the location of the backup files and the folder name, and then click **Forward**.
3. Under **Restore from When?**, select the date of the files to be restored, and then click **Forward**.
4. Select the location and folder where the files are to be restored, and then click **Forward**.
5. Follow the instructions on the screen.
6. Click **Restore** to start restoring the files, or click **Cancel** to cancel the operation.

 **NOTE:** You may also back up to cloud storage services provided by various companies. For a small fee, they will keep your backup for you. A cloud service is recommended, since it is an easy way to keep your backups off-site and safe.

8 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	ISI	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1

Country/region	Accredited agency	Applicable note number
The United States	UL	2
<ol style="list-style-type: none"> 1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used. 2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element. 3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² or 1.25-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration. 4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark. 5. The flexible cord must be Type H05VV-F 3X0.75-mm² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label. 6. The flexible cord must be Type HVCTF 3x1.25-mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark. 7. For 127 V ac, the flexible cord must be Type SVT or SJT 3 x 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3x0.75-/1.00-mm² conductor size, with plug BS 1363/A with BSI or ASTA marks. 		

9 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.

Index

- A**
 - AC adapter 14
 - AC adapter, spare part numbers 26, 29, 33
 - action keys
 - identifying 9
 - antenna
 - spare part number 28
 - Antenna Kit, spare part number 28
 - audio, product description 3
 - audio-in (microphone) jack 14
 - audio-out (headphone) jacks 14
 - audio/USB board
 - spare part number 24, 28
- B**
 - base enclosure
 - removal 43
 - spare part numbers 24, 43
 - base enclosure, spare part numbers 28, 29, 34
 - battery
 - removal 44
 - spare part number 24, 28
 - spare part numbers 44
 - Blu-ray ROM DVD±R/RW Super Multi Double-Layer Drive
 - precautions 38
 - spare part number 26, 28
 - buttons
 - power 8
 - TouchPad on/off 11
- C**
 - cables, service considerations 37
 - caps lock light, identifying 10
 - chipset, product description 2
 - components
 - bottom 15
 - display 6
 - left side 12
 - right side 14
 - computer major components 17
 - computer part number 42
 - computer specifications 84
 - connector, power 14
 - connectors, service considerations 37
- D**
 - Digital Media Slot, identifying 12
 - display
 - specifications 85
 - display assembly
 - spare part numbers 17, 32, 34
 - display bezel
 - spare part number 28
 - display panel, product description 2
 - drives, preventing damage 38
 - DVD±RW and CD-RW Super Multi Double-Layer Combo Drive
 - precautions 38
 - spare part number 26, 28
- E**
 - electrostatic discharge 38
 - equipment guidelines 41
 - esc key, identifying 9
 - Ethernet, product description 4
 - external media cards, product description 4
- F**
 - fan
 - removal 62
 - spare part number 24, 28, 62
 - fn key, identifying 9
- G**
 - graphics, product description 2
 - grounding guidelines 38
 - guidelines
 - equipment 41
 - grounding 38
 - packaging 40
 - transporting 40
 - workstation 40
- H**
 - hard drive
 - precautions 38
 - product description 3
 - removal 46
 - spare part numbers 24, 27, 46
 - hard drive bracket
 - illustrated 25
 - hard drive connector cable
 - illustrated 25
 - Hard Drive Hardware Kit
 - spare part number 25, 28, 33
 - hard drive light 13
 - hard drive, spare part numbers 28
 - HDMI port, identifying 12
 - heat sink
 - spare part number 29
 - spare part numbers 23, 28, 29

- I**
 - integrated webcam light, identifying 7
 - internal display switch, identifying 6
 - internal microphones, identifying 6
- J**
 - jacks
 - audio-in (microphone) 14
 - audio-out (headphone) 14
 - network 12
 - RJ-45 (network) 12
- K**
 - keyboard
 - product description 5
 - removal 72
 - spare part numbers 18, 19, 29, 30, 31, 32, 72
 - keyboard bracket
 - spare part number 20, 28
 - keys
 - action 9
 - esc 9
 - fn 9
 - Windows applications 9
 - Windows logo 9
- L**
 - lights
 - AC adapter 14
 - caps lock 10
 - hard drive 13
 - mute 10
 - power 10, 13
 - TouchPad 11
 - webcam 7
 - wireless 10
- M**
 - mass storage device
 - precautions 38
 - removal 46
 - spare part numbers 25, 46
 - Media Card Reader assembly
 - spare part number 20, 29
 - media card reader assembly
 - removal 64
 - spare part numbers 64
 - memory module
 - product description 2
 - removal 54
 - spare part numbers 24, 27, 28, 54
 - microphone
 - product description 3
 - model description 42
 - model name 1
 - mute light, identifying 10
- N**
 - network jack, identifying 12
- O**
 - operating system, product description 5
 - optical drive
 - precautions 38
 - product description 3
 - spare part numbers 26, 28
- P**
 - packaging guidelines 40
 - plastic parts, service considerations 37
 - pointing device, product description 5
 - ports
 - HDMI 12
 - product description 4
 - USB 14
 - USB 3.0 12
 - power button board
 - spare part number 18, 29
 - power button, identifying 8
 - power connector cable
 - removal 67
 - spare part number 20, 28
 - power connector, identifying 14
 - power cord
 - set requirements 96
 - spare part numbers 26, 27
 - power lights, identifying 10, 13
 - power requirements, product description 5
 - processor, product description 1
 - product description
 - audio 3
 - chipset 2
 - display panel 2
 - Ethernet 4
 - external media cards 4
 - graphics 2
 - hard drives 3
 - keyboard 5
 - memory module 2
 - microphone 3
 - operating system 5
 - optical drive 3
 - pointing device 5
 - ports 4
 - power requirements 5
 - processors 1
 - product name 1
 - security 5
 - serviceability 5
 - video 3
 - wireless 4
 - product name 1, 42
 - product number 42
- R**
 - removal/replacement
 - preliminaries 37
 - procedures 42
 - RJ-45 (network) jack, identifying 12
 - RTC battery
 - removal 49
 - spare part number 20, 28
 - spare part numbers 49
- S**
 - Screw Kit, spare part number 26, 29
 - security cable slot, identifying 14
 - security, product description 5
 - serial number 42
 - service considerations
 - cables 37
 - connectors 37
 - plastic parts 37
 - service tag 16, 42
 - serviceability, product description 5
 - slots
 - Digital Media 12
 - security cable 14
 - solid-state drive
 - spare part numbers 25

- solid-state drive, spare part numbers 28
- speaker
 - spare part number 20
- Speaker Kit
 - spare part number 20
- Speaker Kit, spare part number 28, 69
- speakers
 - removal 69
 - spare part number 28, 69
- speakers, identifying 9
- specifications
 - computer 84
 - display 85
- subwoofer
 - spare part number 24, 28
- system board
 - removal 57
 - spare part numbers 20, 29, 33, 34, 35, 36, 57

- Windows applications key, identifying 9
- Windows logo key, identifying 9
- wireless antenna
 - spare part number 28
- wireless light 10
- wireless, product description 4
- WLAN antennas, identifying 6
- WLAN module
 - removal 53
 - spare part numbers 4, 28, 29, 53
- workstation guidelines 40

T

- tools required 37
- top cover
 - removal 76
 - spare part numbers 18, 28, 29, 76
- TouchPad assembly
 - spare part numbers 28, 29
- TouchPad button board
 - removal 51
 - spare part numbers 20, 51
- TouchPad light 11
- TouchPad on/off button 11
- Touchpad zone, identifying 11
- transporting guidelines 40

U

- USB 3.0 ports identifying 12
- USB ports, identifying 14

V

- vents, identifying 15
- video, product description 3

W

- warranty period 42
- webcam light, identifying 6
- webcam, identifying 6

