



# Maintenance and Service Guide

## **SUMMARY**

This guide provides information about spare parts, removal and replacement of parts, security, backing up, and more.

© Copyright 2020 HP Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by HP Inc. under license. Chrome, Chrome OS, Chromebook, Chromecast, Google, and Google Drive are trademarks of Google LLC. Intel, Core, and Pentium are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. SDHC, SDXC, and microSD are trademarks or registered trademarks of SD-3C LLC. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Type-C® is a registered trademark of USB Implementers Forum.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: June 2020

Document Part Number: L93860-001

### **Product notice**

This guide describes features that are common to most models. Some features may not be available on your computer.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Manuals**.

### **Software terms**


By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

## Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

---

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by applicable safety standards.

---





---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 Components .....</b>	<b>5</b>
Right side .....	5
Left side .....	6
Display .....	7
Keyboard area .....	8
Touchpad .....	8
Button, speakers and fingerprint reader .....	9
Special keys .....	10
Bottom .....	10
Labels .....	11
<b>3 Illustrated parts catalog .....</b>	<b>13</b>
Computer major components .....	13
Display assembly subcomponents .....	15
Cables .....	16
Miscellaneous parts .....	16
<b>4 Removal and replacement procedures preliminary requirements .....</b>	<b>19</b>
Tools required .....	19
Service considerations .....	19
Plastic parts .....	19
Cables and connectors .....	19
Drive handling .....	19
Workstation guidelines .....	20
Electrostatic discharge information .....	20
Generating static electricity .....	21
Preventing electrostatic damage to equipment .....	21
Personal grounding methods and equipment .....	22
Grounding the work area .....	22
Recommended materials and equipment .....	22
Packaging and transporting guidelines .....	23
<b>5 Removal and replacement procedures for authorized service provider parts .....</b>	<b>25</b>
Component replacement procedures .....	25

Preparation for disassembly .....	25
Bottom cover .....	25
Battery .....	26
Speakers .....	28
Touchpad .....	29
Fingerprint sensor board .....	31
Fan .....	32
Heat sink .....	33
USB board .....	35
USB door .....	35
System board .....	38
Display assembly .....	40
Keyboard with top cover .....	48

**6 Backing up, resetting, and recovering ..... 51**

Backing up .....	51
Resetting .....	51
Recovering .....	51
Installing the Chromebook Recovery Utility .....	51
Creating recovery media .....	52
Recovering the Chrome operating system .....	52
Setting up your computer after a reset or recovery .....	52
Erase and reformat the recovery media .....	52

**7 Specifications ..... 53**

Computer specifications .....	53
35.6 cm (14.0 in) display specifications .....	53

**8 Statement of memory volatility ..... 55**

Current BIOS steps .....	55
Nonvolatile memory usage .....	57
Questions and answers .....	59
Using HP Sure Start (select products only) .....	60

**9 Power cord set requirements ..... 61**

Requirements for all countries .....	61
Requirements for specific countries and regions .....	61

**10 Recycling ..... 63**





# 1 Product description

This table provides detailed product information.

**Table 1-1 Product components and their descriptions**

Category	Description
<b>Product Name</b>	<b>HP Pro c640 Chromebook</b>
<b>Processors</b>	<b>10th Generation Intel® Core™ processors</b> Intel Core i7-10610U (1.8 GHz [turbo up to 4.9 GHz], 4 cores, 8 MB L3 cache, 15 W) Intel Core i7-10510U (1.8 GHz [turbo up to 4.9 GHz], 4 cores, 8 MB L3 cache, 15 W) Intel Core i5-10310U (1.7 GHz [turbo up to 4.4 GHz], 4 cores, 6 MB L3 cache, 15 W) Intel Core i5-10210U (1.6 GHz [turbo up to 4.2 GHz], 4 cores, 6 MB L3 cache, 15 W) Intel Core i3-10110U (2.1 GHz [turbo up to 4.1 GHz], 2 cores, 4 MB L3 cache, 15 W) Intel Pentium® Gold 6405U (2.4 GHz, 2 cores, 2 MB L3 cache, 15 W)
<b>Graphics</b>	<b>Internal graphics</b> Intel UHD Graphics Supports HD Decode, DX12, and HDMI
<b>Display</b>	<b>35.6 cm (14.0 in), WLED, antiglare, eDP, slim (3.0 mm), narrow bezel, nontouch</b> Full high definition (FHD) (1920 × 1080), UWVA, 220 nits High definition (HD) (1366 × 768), SVA, 250 nits <b>35.6 cm (14.0 in), slim (3.0 mm), narrow bezel, touch screen</b> FHD, antiglare, UWVA, 250 nits HD, antiglare, SVA, 220 nits HD, BrightView, SVA, 220 nits
<b>Memory</b>	<b>Soldered on board, nonupgradeable</b> DDR4-2666 dual-channel support Supports the following configurations: <ul style="list-style-type: none"><li>• 16 GB</li><li>• 8 GB</li></ul>
<b>Primary storage</b>	<b>On-board embedded MultiMedia Controller (eMMC v5.0) configurations</b> 128 GB 64 GB 32 GB
<b>Audio and video</b>	HD audio

**Table 1-1 Product components and their descriptions (continued)**

<b>Category</b>	<b>Description</b>
	B&O Play
	Dual stereo speakers
	HD Camera: HD WFOV + dual microphones
	1280 × 720 by 30 frames per second
	Dual-array digital microphone with appropriate software: beam forming, echo cancellation, noise suppression
	Camera privacy cover
<b>Wireless</b>	<b>Integrated wireless options with dual antennas (M.2/PCIe)</b>
	Intel Wi-Fi 6 AX201 + Bluetooth® 5 (non-vPro) (802.11ax 2 × 2, MU-MIMO, supporting gigabit file transfer speeds)
	Supports HP Connection Optimizer with Wi-Fi load balancing
	Support for Chromecast™
	Supports turbo-lite antenna design (extended range wireless LAN)
	Wi-Fi BIOS SAR
<b>Media card reader</b>	Supports microSD™, SDHC™, SDXC™ up to UHS-104
	Push-push insertion/removal
<b>Ports</b>	Hot plug/unplug and autodetect for correct output to wide-aspect vs. standard aspect video
	HDMI v1.4b supporting: up to 1920 × 1080 @ 60 Hz via USB Type-C®
	Audio-out (headphone)/audio-in (microphone) combo jack
	(2) USB 3.1 Gen 1 Type C (right and left side; support charging, power delivery, video, and data)
	(2) USB 3.1 Gen 1 Type A (right and left side)
<b>Keyboard/pointing devices</b>	<b>Google Keyboard</b>
	Full size, textured, island style, spill resistant, backlit
	Full size, textured, island style, spill resistant, not backlit
	Full size, 3-coat paint, island style, backlit, fingerprint sensor
	Full size, 3-coat paint, island style, not backlit, fingerprint sensor
	<b>Touchpad requirements</b>
	Multitouch gestures enabled
	Taps enabled as default
<b>Power requirements</b>	<b>Battery</b>
	3 cell, 60 Whr, polymer, HP Long Life
	<b>AC adapter, USB Type-C</b>
	65 W, nPFC, straight
	45 W, nPFC, straight

**Table 1-1 Product components and their descriptions (continued)**

<b>Category</b>	<b>Description</b>
	<b>Power cord</b>
	C5, 1 m
<b>Security</b>	Nano security lock slot
	Fingerprint sensor (select products only)
	H1 Secure Microcontroller
<b>Operating system</b>	Google® Chrome™ 64
<b>Serviceability</b>	<b>End user replaceable parts</b>
	AC adapter






# 2 Components



Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

## Right side

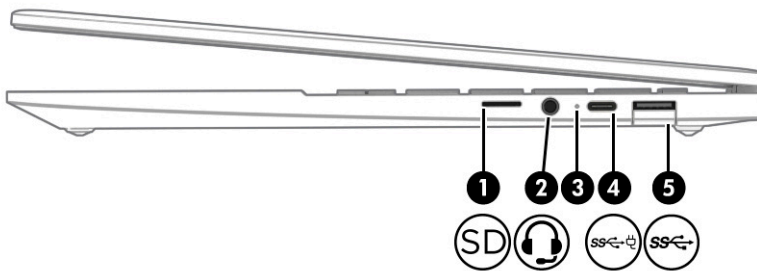

Use the illustration and table to identify the components on the right side of the computer.



**Table 2-1 Right-side components and their descriptions**


Component	Description
(1)  Memory card reader	<p>Reads optional memory cards that enable you to store, manage, share, or access information.</p> <p>To insert a card:</p> <ol style="list-style-type: none"><li>1. Hold the card label-side up, with connectors facing the computer.</li><li>2. Insert the card into the memory card reader, and then press in on the card until it is firmly seated.</li></ol> <p>To remove a card:</p> <ul style="list-style-type: none"><li>▲ Press in on the card, and then remove it from the memory card reader.</li></ul>
(2)  Audio-out (headphone)/Audio-in (microphone) combo jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones.</p> <p><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</p>
(3) AC adapter and battery light	<ul style="list-style-type: none"><li>• White: The AC adapter is connected and the battery is fully charged.</li><li>• Amber: The AC adapter is connected and the battery is charging.</li></ul>

**Table 2-1 Right-side components and their descriptions (continued)**




Component	Description
	<ul style="list-style-type: none"> <li>Blinking amber: The battery has an error.</li> <li>Off: The battery is not charging.</li> </ul>
(4) 	<p>USB Type-C power connector and SuperSpeed Plus port</p> <p>Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery.</p> <p>- and -</p> <p>Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices when the computer is on or in Sleep mode.</p> <p><b>NOTE:</b> Cables, adapters, or both (purchased separately) might be required.</p>
(5) 	<p>USB SuperSpeed port</p> <p>Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.</p>

## Left side

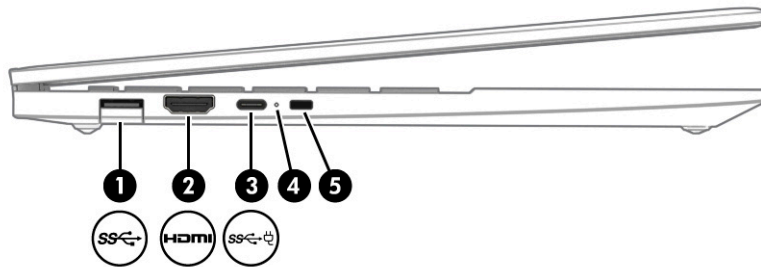Use the illustration and table to identify the components on the left side of the computer.



**Table 2-2 Left-side components and their descriptions**


Component	Description
(1) 	<p>USB SuperSpeed port</p> <p>Connects a USB device, such as a cell phone, camera, activity tracker, or smartwatch, and provides high-speed data transfer.</p>
(2) 	<p>HDMI port</p> <p>Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed High Definition Multimedia Interface (HDMI) device.</p>
(3) 	<p>USB Type-C power connector and SuperSpeed Plus port</p> <p>Connects an AC adapter that has a USB Type-C connector, supplying power to the computer and, if needed, charging the computer battery.</p> <p>- and -</p> <p>Connects a USB device, provides high-speed data transfer, and (for select products) charges small devices when the computer is on or in Sleep mode.</p> <p><b>NOTE:</b> Cables, adapters, or both (purchased separately) might be required.</p>

**Table 2-2 Left-side components and their descriptions (continued)**

Component	Description
(4) AC adapter and battery light	<ul style="list-style-type: none"><li>• White: The AC adapter is connected and the battery is fully charged.</li><li>• Amber: The AC adapter is connected and the battery is charging.</li><li>• Blinking amber: The battery has an error.</li><li>• Off: The battery is not charging.</li></ul>
(5) Security cable slot	Attaches an optional security cable to the computer. <b>NOTE:</b> The security cable is designed to act as a deterrent, but it might not prevent the computer from being mishandled or stolen.

## Display

The computer display can include essential components such as antennas, cameras, and microphones.

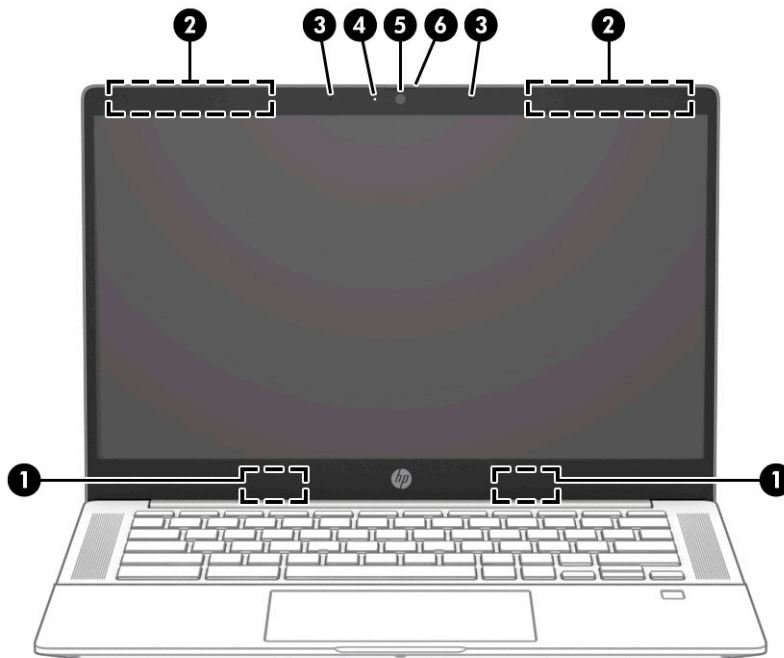

**Table 2-3 Display components and their descriptions**

Component	Description
(1) WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2) WWAN antennas*	Send and receive wireless signals to communicate with wireless wide area networks (WWANs).
(3) Internal microphones	Record sound.
(4) Camera light(s)	On: One or more cameras are in use.

**Table 2-3 Display components and their descriptions (continued)**

Component	Description
(5) Camera(s)	Allows(s) you to video chat, record video, and record still images. <b>NOTE:</b> Camera functions vary depending on the camera hardware and software installed on your product.
(6) Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera's view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens. <b>NOTE:</b> If you have both front-facing and rear-facing cameras, when one camera lens is revealed and ready to use, the other is concealed.

\*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.


For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

## Keyboard area

Keyboards can vary by language.

## Touchpad

Identify the touchpad component.

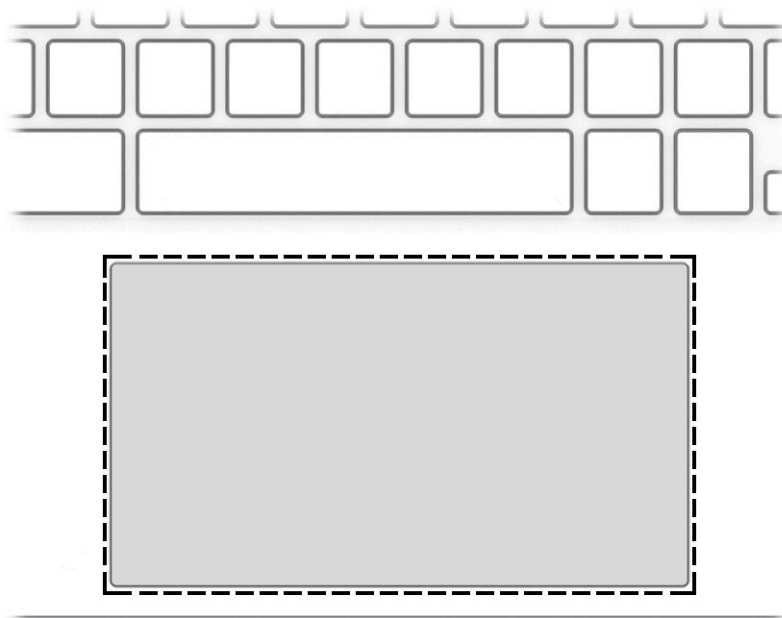


**Table 2-4 Touchpad component and description**


Component	Description
Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.

## Button, speakers and fingerprint reader

Identify the button, speakers, and fingerprint reader.

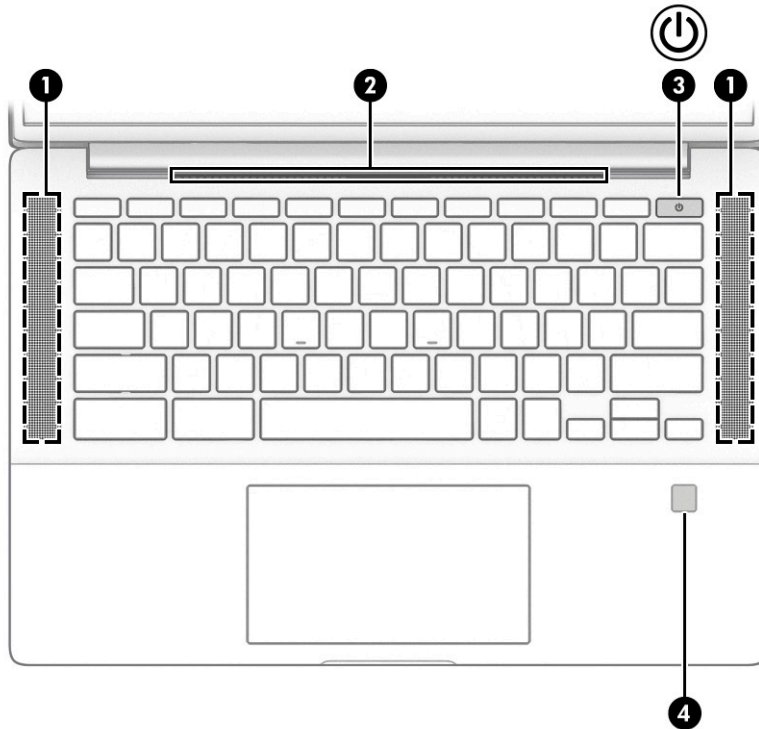

**Table 2-5 Button, speakers, and fingerprint reader and their descriptions**


Component	Description
(1) Speakers	Produce sound.
(2) Vent	Enables airflow to cool internal components.
(3)  Power button	<p><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p> <ul style="list-style-type: none"> <li>When the computer is off, press the button briefly to turn on the computer.</li> <li>When the computer is on, press the button briefly to initiate Sleep.</li> <li>When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only).</li> <li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p><b>IMPORTANT:</b> Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer.</p>
(4) Fingerprint reader (select products only)	<p>Allows a fingerprint logon instead of a password logon.</p> <ul style="list-style-type: none"> <li>▲ Swipe down across the fingerprint reader for details.</li> </ul>

**Table 2-5 Button, speakers, and fingerprint reader and their descriptions (continued)**


Component	Description
	<b>IMPORTANT:</b> To prevent fingerprint logon issues, be sure that when you register your fingerprint that all sides of your finger are registered by the fingerprint reader.

## Special keys

Identify the special keys.

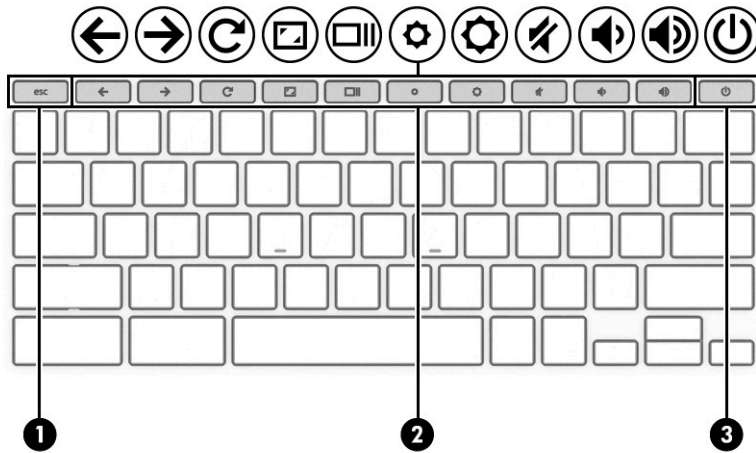


**Table 2-6 Special keys and their descriptions**

Component	Description
(1) <code>esc</code> key	Activates certain computer functions when pressed in combination with other keys, such as <code>tab</code> or <code>shift</code> .
(2) Action keys	Execute frequently used system functions.
(3)  Power button	<ul style="list-style-type: none"> <li>When the computer is off, press the button briefly to turn on the computer.</li> <li>When the computer is on, press the button briefly to initiate Sleep.</li> <li>When the computer is in the Sleep state, press the button briefly to exit Sleep (select products only).</li> <li>When the computer is in Hibernation, press the button briefly to exit Hibernation.</li> </ul> <p><b>IMPORTANT:</b> Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 4 seconds to turn off the computer.</p>

## Bottom

Identify the bottom component.

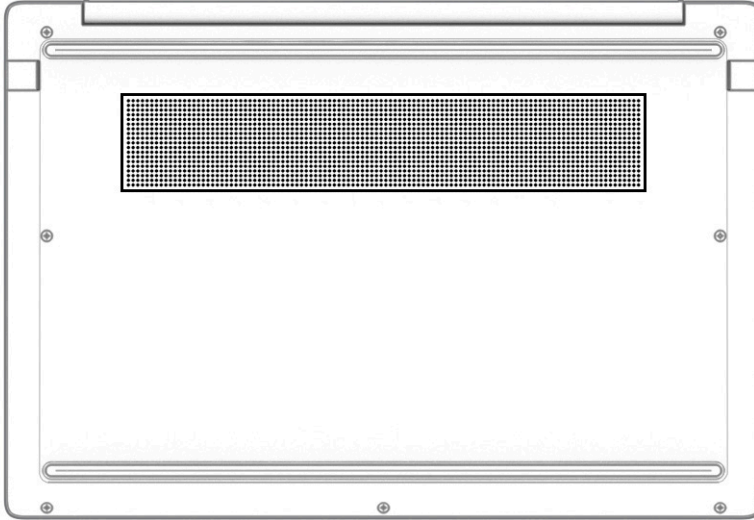


**Table 2-7 Bottom component and description**

Component	Description
Vent	Enables airflow to cool internal components. <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.


## Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer. Labels may be in paper form or imprinted on the product.

 **IMPORTANT:** Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- **Service label**—Provides important information to identify your computer. When contacting support, you may be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label information order may vary by country and might not include the wording "Model" due to the country regulation.

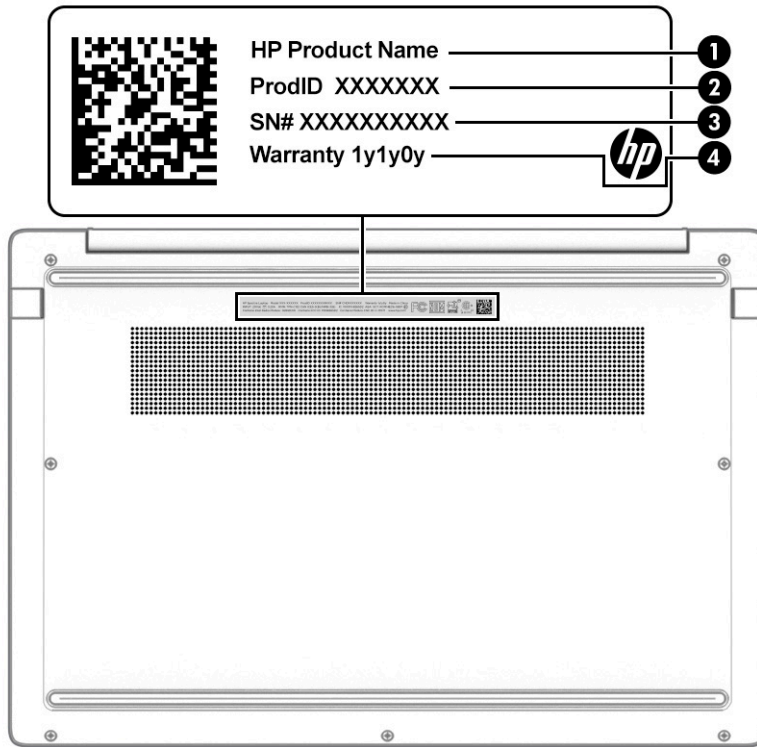

**Table 2-8 Service label components**

Component	
(1)	HP product name
(2)	Product ID
(3)	Serial number
(4)	Warranty period

- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.




# 3 Illustrated parts catalog


Use this table to determine the spare parts that are available for the computer.

## Computer major components

To identify the computer major components, use this illustration and table.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

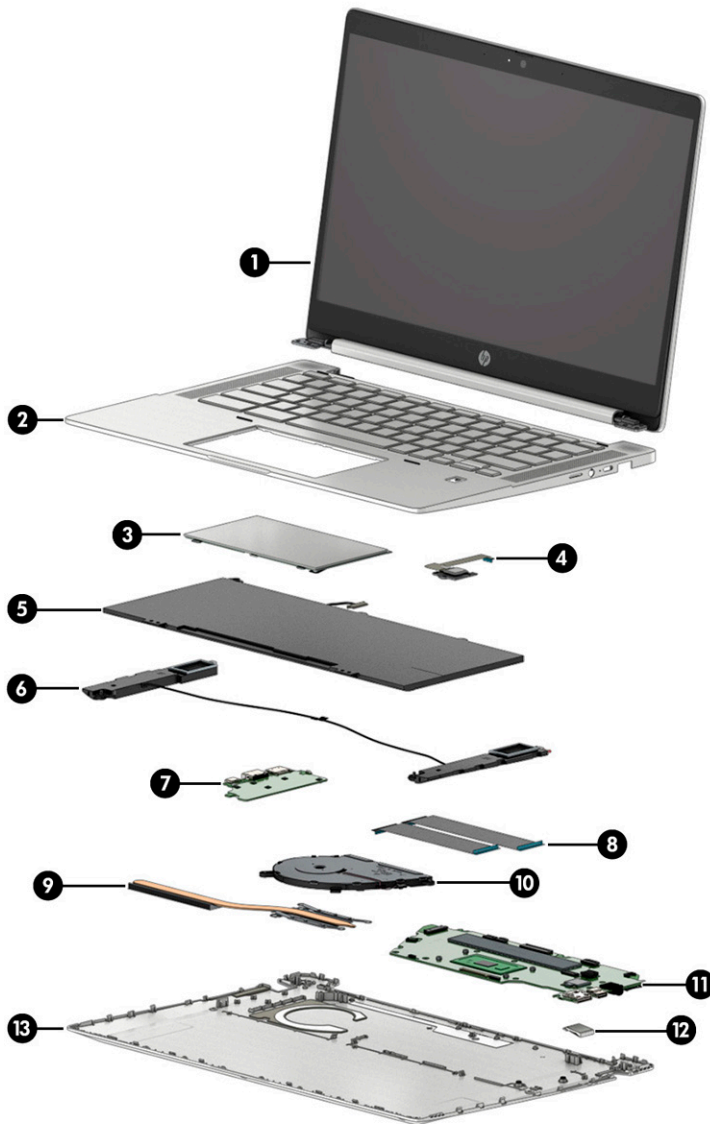

**Table 3-1 Computer major component descriptions and part numbers**


<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
<b>(1)</b>	<b>Display assembly</b>  <b>NOTE:</b> Display assemblies are spared only at the subcomponent level.	
<b>(2)</b>	<b>Top cover with keyboard</b>	
	3-coat paint, backlit, with fingerprint sensor	M03451-xx1
	3-coat paint, backlit, without fingerprint sensor	M03452-xx1
	Textured, not backlit, without fingerprint sensor	M03453-xx1
	Textured, not backlit, with fingerprint sensor	M03454-xx1
<b>(3)</b>	<b>Touchpad</b> (includes rubber)  <b>NOTE:</b> The touchpad cable is available in the Cable Kit as spare part number M00703-001.	M00437-001
<b>(4)</b>	<b>Fingerprint sensor board</b> (includes cable)	M00438-001
<b>(5)</b>	<b>Battery</b> (3 cell, 60 Whr)	L84398-002
<b>(6)</b>	<b>Speaker Kit</b>	M00436-001
<b>(7)</b>	<b>USB board</b>	M00433-001
<b>(8)</b>	<b>USB cables</b> (included in Cable Kit)	M00703-001
<b>(9)</b>	<b>Heat sink</b>	M00434-001
<b>(10)</b>	<b>Fan</b>	M02014-001
<b>(11)</b>	<b>System board</b> (includes integrated processor, system memory, and eMMC memory; includes replacement thermal material)	
	Intel Core i7-10610U processor, 16 GB of system memory, and 128 GB of eMMC memory (models with a fingerprint sensor)	M00695-001
	Intel Core i7-10610U processor, 16 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00694-001
	Intel Core i5-10310U processor, 16 GB of system memory, and 128 GB of eMMC memory (models with a fingerprint sensor)	M00691-001
	Intel Core i5-10310U processor, 16 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00690-001
	Intel Core i5-10310U processor, 8 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00687-001
	Intel Core i3-10110U processor, 8 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00685-001
	Intel Pentium 6405U processor, 8 GB of system memory, and 32 GB of eMMC memory (models without a fingerprint sensor)	M00696-001
	Intel Pentium 6405U processor, 8 GB of system memory, and 32 GB of eMMC memory (models with a fingerprint sensor)	M00698-001
<b>(12)</b>	<b>USB door</b>	
	Left door	M00444-001

**Table 3-1 Computer major component descriptions and part numbers (continued)**

Item	Component	Spare part number
	Right door	M00445-001
<b>(13)</b>	<b>Bottom cover</b>	M00432-001

## Display assembly subcomponents

To identify the display assembly subcomponents, use this illustration and table.

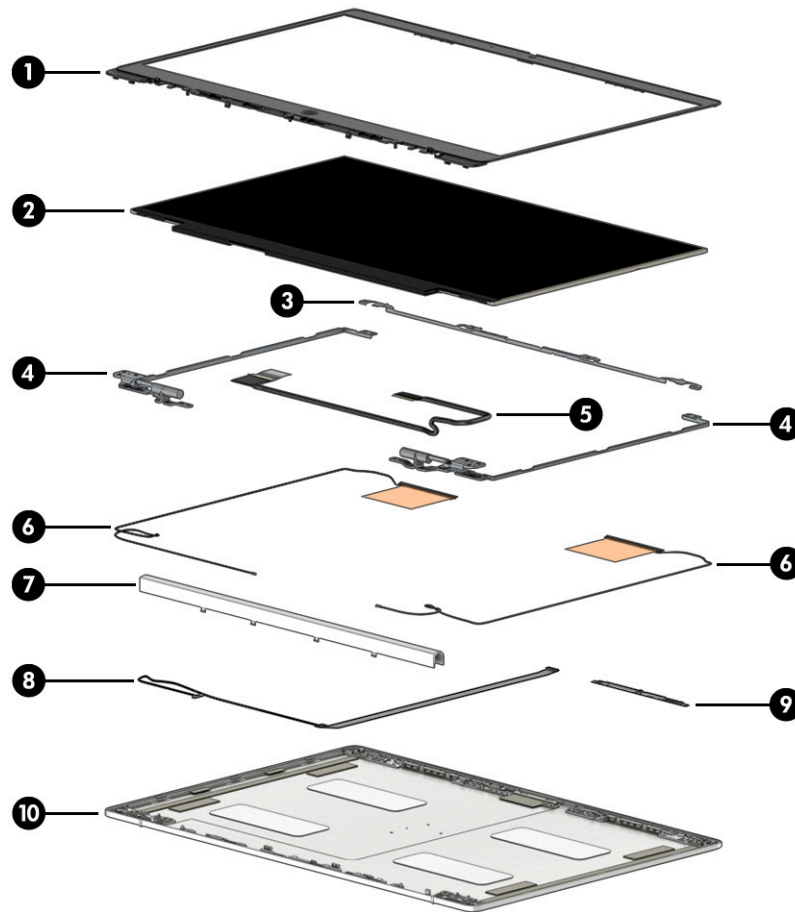**Table 3-2 Display component descriptions and part numbers**


Item	Component	Spare part number
<b>(1)</b>	<b>Display bezel</b>	M00701-001
<b>(2)</b>	<b>Display panel</b>	
	FHD, nontouch	M00446-001
	FHD, touch	M00447-001
	HD, nontouch	M00448-001
	HD, touch	M00449-001

**Table 3-2 Display component descriptions and part numbers (continued)**

Item	Component	Spare part number
(3)	Top bracket	M00700-001
(4)	Hinges (left and right)	M00440-001
(5)	Display cable	M00702-001
(6)	Wireless antennas	M00435-001
(7)	Hinge cover	M00441-001
(8)	Camera cable	M12614-001
(9)	Camera module	M00442-001
(10)	Display back cover	M00439-001

## Cables

To identify the cables, use this illustration and table.

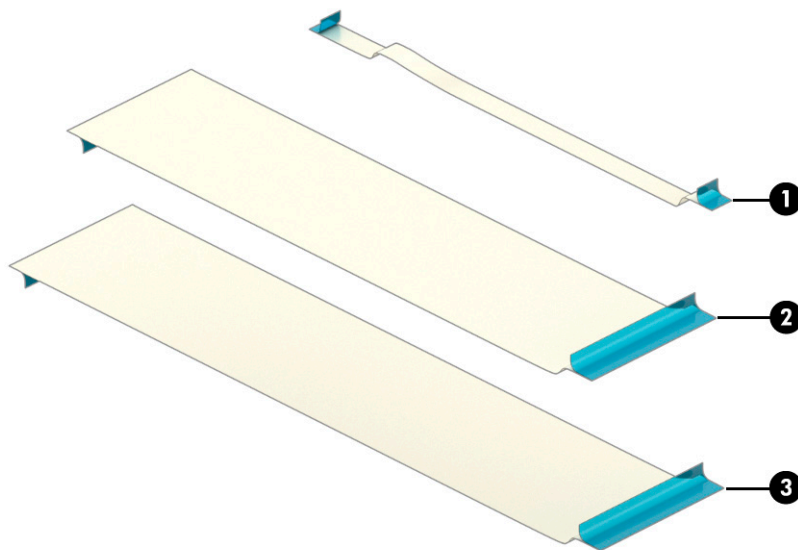**Table 3-3 Cable descriptions and part numbers**

Item	Component	Spare part number
	<b>Cable Kit</b> , includes:	M00703-001
(1)	Touchpad cable	
(2)	USB board cable	
(3)	USB board cable	

## Miscellaneous parts

To identify the miscellaneous parts, use this table.

**Table 3-4 Miscellaneous part descriptions and part numbers**

<b>Component</b>	<b>Spare part number</b>
<b>AC adapter, USB Type-C (nPFC, 1.8 m)</b>	
65 W	L67440-001
45 W	L43407-001
<b>Screw Kit</b>	
<b>Bracket Kit</b> (includes touchpad support bracket and fingerprint bracket)	M12524-001
<b>Power cord (C5, 1.0 m)</b>	
Australia	L19358-001
Brazil	L19359-001
Denmark	L19360-001
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-001
India	L19363-001
Israel	L19362-001
Italy	L19364-001
Japan	L19365-001
North America	L19367-001
People's Republic of China	L19368-001
South Africa	L19369-001
South Korea	L19366-001
Switzerland	L19370-001
Taiwan	L19372-001
Thailand	L19371-001
The United Kingdom	L19373-001
<b>Power cord (C5, 1.8 m)</b>	
Australia	L19358-002
Brazil	L19359-002
Denmark	L19360-002
Europe (Austria, Belgium, Finland, France, Germany, the Netherlands, Norway, and Sweden)	L19361-002
India	L19363-002
Israel	L19362-002
Italy	L19364-002
Japan	L19365-002
North America	L19367-002
People's Republic of China	L19368-002

**Table 3-4 Miscellaneous part descriptions and part numbers (continued)**

<b>Component</b>	<b>Spare part number</b>
South Africa	L19369-002
South Korea	L19366-002
Switzerland	L19370-002
Taiwan	L19372-002
Thailand	L19371-002
The United Kingdom	L19373-002

---

# 4 Removal and replacement procedures preliminary requirements

Use this information to properly prepare to disassemble and reassemble the computer.

## Tools required

You need the following tools to complete the removal and replacement procedures:

- Tweezers
- Nonconductive, nonmarking pry tool
- Magnetic Phillips P1 screwdriver

## Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



---

**NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

## Plastic parts

Using excessive force during disassembly and reassembly can damage plastic parts.

## Cables and connectors

Handle cables with extreme care to avoid damage.



---

**IMPORTANT:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

---

Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed so that they cannot be caught or snagged as you remove or replace parts. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

Note the following guidelines when handling drives.



---

**IMPORTANT:** Drives are fragile components. Handle them with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing an optical drive, be sure that a disc is not in the drive, and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least 2.54 cm (1 inch) of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive or an optical drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging, and label the package “FRAGILE.”

---

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and polystyrene foam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Electrostatic discharge information

A sudden discharge of static electricity from your finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs. An electronic device exposed to electrostatic discharge (ESD) might not appear to be affected at all and can work perfectly throughout a normal cycle. The device might function normally for a while, but it has been degraded in the internal layers, reducing its life expectancy.

Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.





**IMPORTANT:** To prevent damage to the device when you remove or install internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described [Personal grounding methods and equipment on page 22](#).

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

## Generating static electricity

Follow these static electricity guidelines.

- Different activities generate different amounts of static electricity.
- Static electricity increases as humidity decreases.

**Table 4-1 Static electricity occurrence based on activity and humidity**

Event	Relative humidity		
	55%	40%	10%
Walking across carpet	7,500 V	15,000 V	35,000 V
Walking across vinyl floor	3,000 V	5,000 V	12,000 V
Motions of bench worker	400 V	800 V	6,000 V
Removing DIPs (dual in-line packages) from plastic tube	400 V	700 V	2,000 V
Removing DIPs from vinyl tray	2,000 V	4,000 V	11,500 V
Removing DIPs from polystyrene foam	3,500 V	5,000 V	14,500 V
Removing bubble pack from PCB (printed circuit board)	7,000 V	20,000 V	26,500 V
Packing PCBs in foam-lined box	5,000 V	11,000 V	21,000 V

Multiple electric components can be packaged together in plastic tubes, trays, or polystyrene foam.



**NOTE:** As little as 700 V can degrade a product.

## Preventing electrostatic damage to equipment

Many electronic components are sensitive to ESD. Circuitry design and structure determine the degree of sensitivity. The following packaging and grounding precautions are necessary to prevent static electricity damage to electronic components.

- To avoid hand contact, transport products in static-safe containers such as tubes, bags, or boxes.
- Protect all electrostatic parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free stations.
- Place items on a grounded surface before removing them from their container.
- Always be properly grounded when touching a sensitive component or assembly.

- Avoid contact with pins, leads, or circuitry.
- Place reusable electrostatic-sensitive parts from assemblies in protective packaging or conductive foam.

## Personal grounding methods and equipment

Using certain equipment can prevent static electricity damage to electronic components.

- **Wrist straps** are flexible straps with a maximum of  $1\text{ M}\Omega \pm 10\%$  resistance in the ground cords. To provide proper ground, a strap must be worn snug against bare skin. The ground cord must be connected and fit snugly into the banana plug connector on the grounding mat or workstation.
- **Heel straps/Toe straps/Boot straps** can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use them on both feet with a maximum of  $1\text{ M}\Omega \pm 10\%$  resistance between the operator and ground.

**Table 4-2 Static shielding protection levels**

Static shielding protection levels	
Method	Voltage
Antistatic plastic	1,500
Carbon-loaded plastic	7,500
Metallized laminate	15,000

## Grounding the work area

To prevent static damage at the work area, follow these precautions.

- Cover the work surface with approved static-dissipative material. Provide a wrist strap connected to the work surface and properly grounded tools and equipment.
- Use static-dissipative mats, foot straps, or air ionizers to give added protection.
- Handle electrostatic sensitive components, parts, and assemblies by the case or PCB laminate. Handle them only at static-free work areas.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Use fixtures made of static-safe materials when fixtures must directly contact dissipative surfaces.
- Keep work area free of nonconductive materials such as ordinary plastic assembly aids and polystyrene foam.
- Use field service tools, such as cutters, screwdrivers, and vacuums, that are conductive.

## Recommended materials and equipment

HP recommends certain materials and equipment to prevent static electricity.

- Antistatic tape
- Antistatic smocks, aprons, or sleeve protectors
- Conductive bins and other assembly or soldering aids
- Conductive foam
- Conductive tabletop workstations with ground cord of  $1\text{ M}\Omega \pm 10\%$  resistance

- Static-dissipative table or floor mats with hard tie to ground
- Field service kits
- Static awareness labels
- Wrist straps and footwear straps providing 1 MΩ ±10% resistance
- Material handling packages
- Conductive plastic bags
- Conductive plastic tubes
- Conductive tote boxes
- Opaque shielding bags
- Transparent metallized shielding bags
- Transparent shielding tubes

## Packaging and transporting guidelines


Follow these grounding guidelines when packaging and transporting equipment.


- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.



# 5 Removal and replacement procedures for authorized service provider parts

This chapter provides removal and replacement procedures for authorized service provider parts.

 **IMPORTANT:** Components described in this chapter should be accessed only by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer.

## Component replacement procedures

To remove and replace computer components, use these procedures.

 **NOTE:** HP continually improves and changes product parts. For complete and current information about supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

You must remove, replace, or loosen as many as 50 screws when you service the parts described in this chapter. Make special note of each screw size and location during removal and replacement.

## Preparation for disassembly

To remove and replace computer components, use these procedures.

See [Removal and replacement procedures preliminary requirements on page 19](#) for initial safety procedures.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

## Bottom cover

To remove the bottom cover, use this procedure and illustration.


**Table 5-1 Bottom cover description and part number**

Description	Spare part number
Bottom cover	M00432-001


Before removing the bottom cover, prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).

Remove the bottom cover:

1. Remove the four Phillips M2.0 × 7.0 screws **(1)** from the sides and top and the three Phillips M2.0 × 3.5 screws **(2)** from the bottom that secure the bottom cover to the computer.

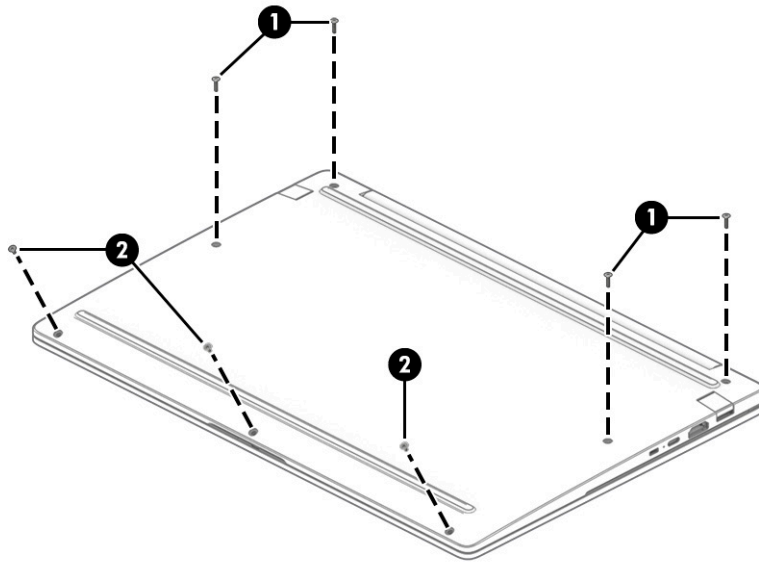

2. Use a nonmarking, nonconductive tool (1) to release the edges of the bottom cover from the computer (2).
3. Remove the bottom cover from the computer (3).

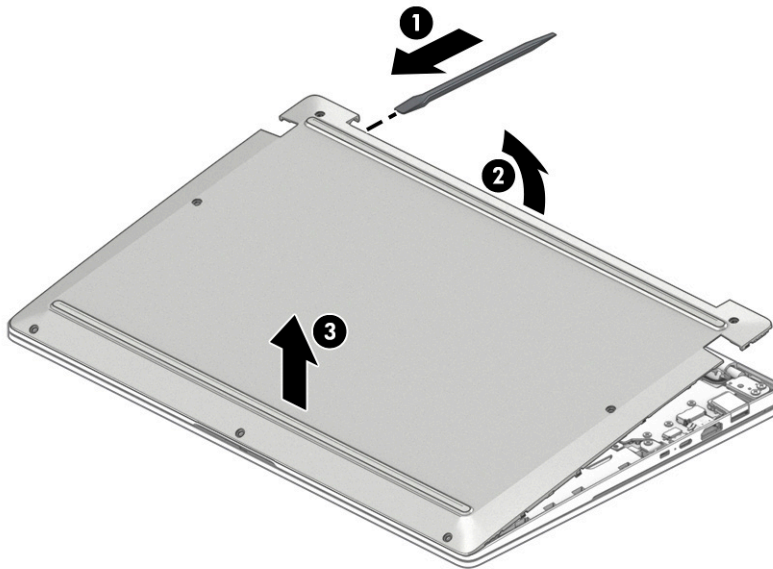

To replace the bottom cover, reverse the removal procedures.


## Battery

To remove the battery, use this procedure and illustration.

**Table 5-2 Battery description and part number**

Description	Spare part number
Battery (3 cell, 60 Whr)	L84398-002

---

 **WARNING!** To avoid personal injury and damage to the product:


- Do *not* puncture, twist, or crack the battery.
- Do *not* cause an external puncture or rupture to the battery. They can cause a short inside the battery, which can result in battery thermal runaway.
- Do *not* handle or touch the battery enclosure with sharp objects such as tweezers or pliers, which might puncture the battery.
- Do *not* compress or squeeze the battery case with tools or heavy objects stacked on top of the case. These actions can apply undue force on the battery.
- Do *not* touch the connectors with any metallic surface or object, such as metal tools, screws, or coins, which can cause shorting across the connectors.


---

Before removing the battery, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).

---

 **WARNING!** To reduce potential safety issues, use only the user-replaceable battery provided with the computer, a replacement battery provided by HP, or a compatible battery purchased from HP.


 **IMPORTANT:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work or shut down the computer through Windows before you remove the battery.

---

Remove the battery:

1. Disconnect the battery cable from the system board **(1)**.
2. Remove the five Phillips M2.0 × 3.0 screws **(2)** that secure the battery to the computer.

3. Remove the battery from the computer (3).

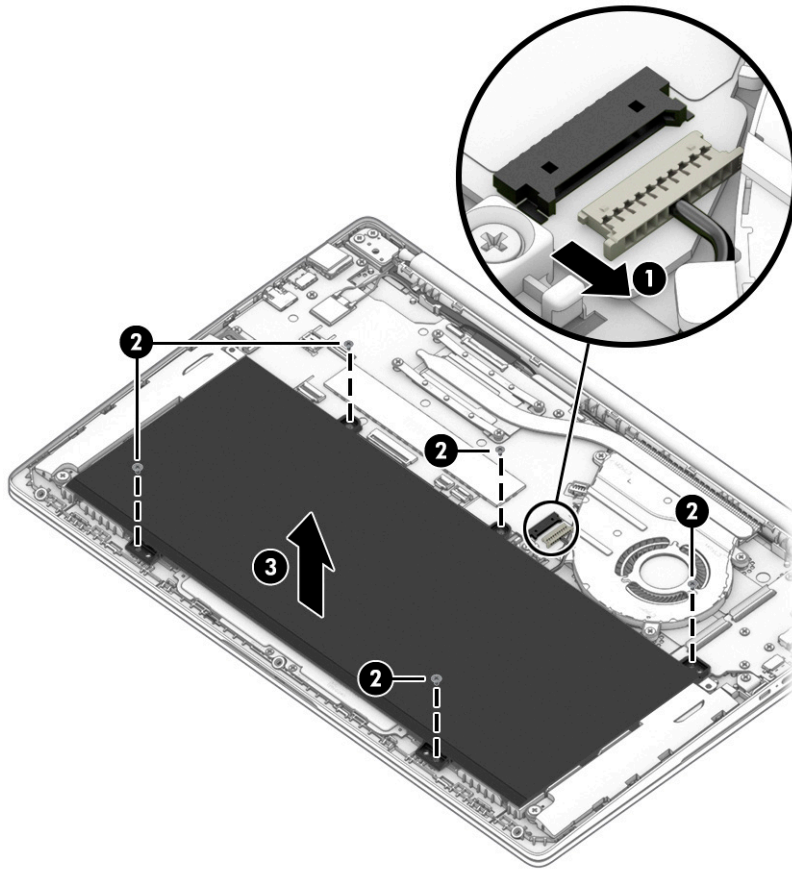

To insert the battery, reverse the removal procedures.

## Speakers

To remove the speakers, use this procedure and illustration.

**Table 5-3 Speaker description and part number**

Description	Spare part number
Speaker Kit	M00436-001

Before removing the speakers, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).

Remove the speakers:


1. Disconnect the speaker cable from the system board (1).
2. Disconnect the cable from the ZIF connector on the touchpad (2). You need to move this cable so you can remove the speaker cable that routes under it.



3. Lift the tape that secures the speaker cable to the touchpad (3).
4. Remove the speaker cable from the clips in the computer chassis (4).
5. Remove the two Phillips M2.0 × 5.0 screws (5) that secure the speakers to the computer.

 **NOTE:** When installing the speakers, be sure that the gaskets are correctly installed in the speaker screw holes (6).

6. Remove the speakers from the computer (7).

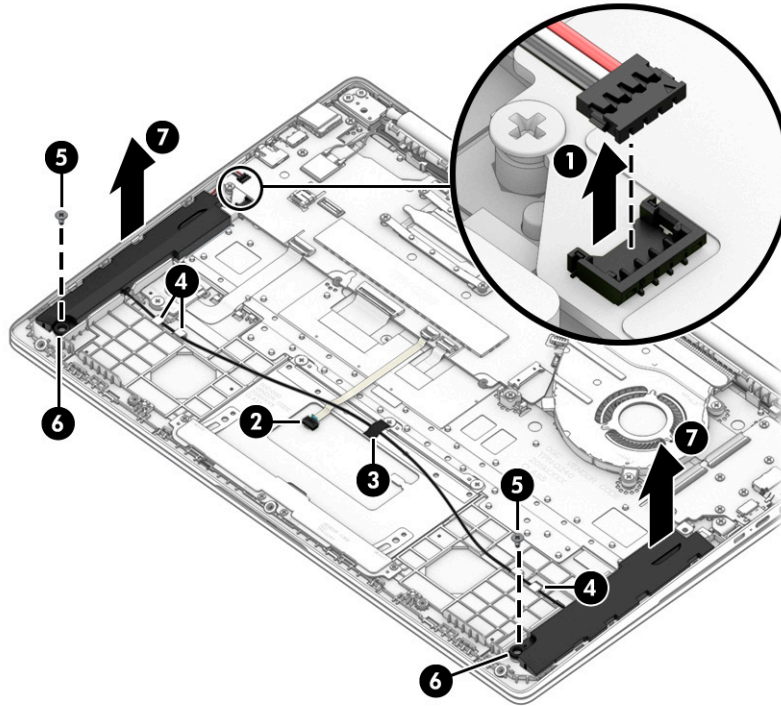

Reverse this procedure to install the speakers.

## Touchpad

To remove the touchpad, use this procedure and illustration.

**Table 5-4 Touchpad description and part number**


Description	Spare part number
Touchpad	M00437-001
Touchpad cable (included in Cable Kit)	M00703-001
Touchpad support bracket (included in Bracket Kit)	M12524-001

Before removing the touchpad, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).


Remove the touchpad:

1. Remove the four Phillips M2.0 × 2.5 screws **(1)** that secure the touchpad bracket to the computer.
2. Remove the touchpad bracket from the computer **(2)**.

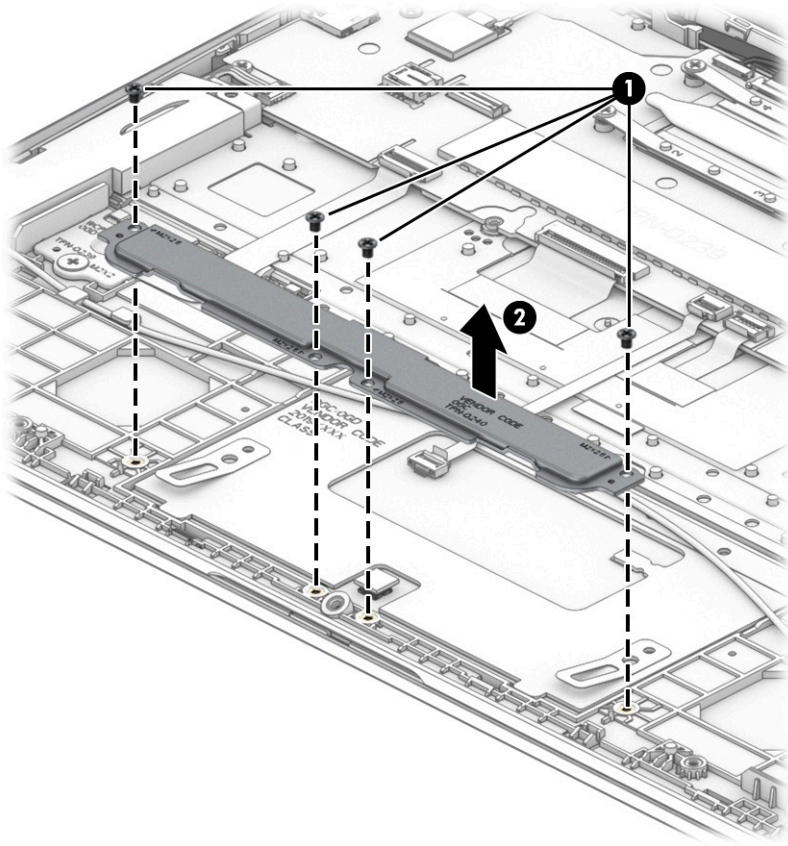

3. Lift the tape that secures the speaker cable to the touchpad **(1)**.
4. Disconnect the cable from the ZIF connector on the touchpad **(2)**.
5. Remove the protective shielding from the top of the touchpad **(3)**.
6. Remove the three Phillips M2.0 × 2.0 screws **(4)** that secure the touchpad to the computer.

7. Remove the touchpad from the computer (5).

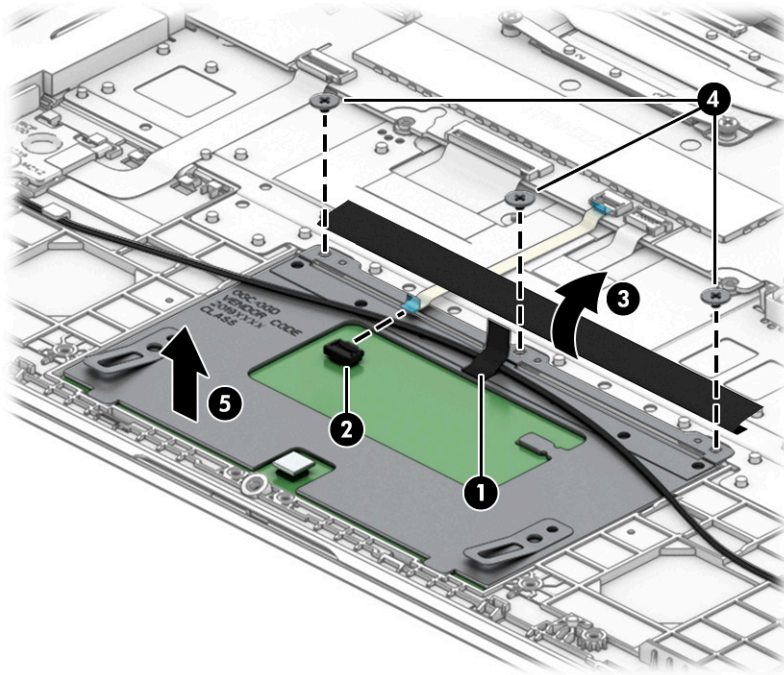

Reverse this procedure to install the touchpad.

## Fingerprint sensor board

To remove the fingerprint sensor board, use this procedure and illustration.

**Table 5-5** Fingerprint sensor board description and part number

Description	Spare part number
Fingerprint sensor board	M00438-001
Fingerprint sensor bracket (available in the Bracket Kit)	M12524-001


Before removing the fingerprint sensor board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).

Remove the fingerprint sensor board:

1. Disconnect the cable from the ZIF connector on the system board (1).
2. Remove the Phillips M2.0 × 2.0 screw (2) that secures the fingerprint sensor bracket, and then remove the bracket (3).

3. Remove the fingerprint sensor board from the computer (4).

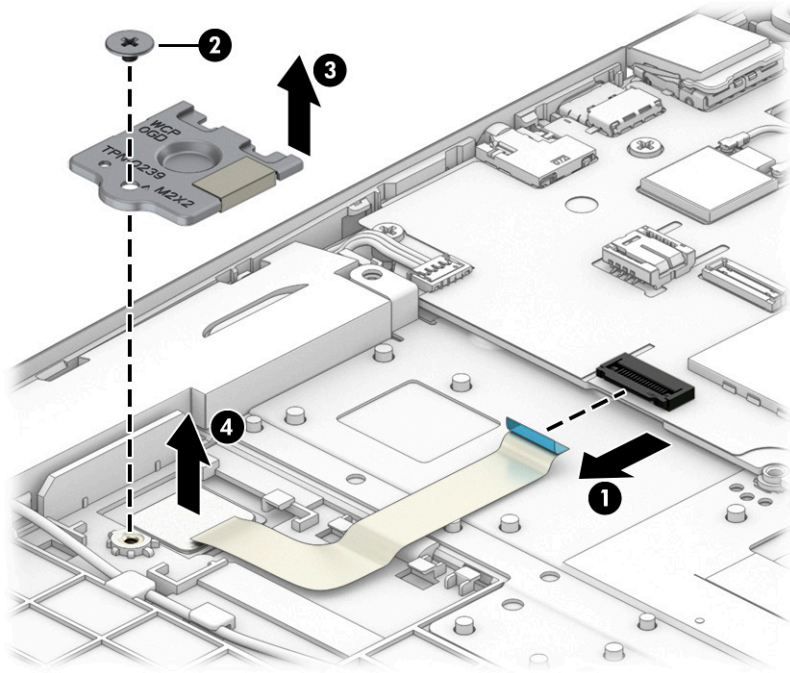

Reverse this procedure to install the fingerprint sensor board.

## Fan

To remove the fan, use this procedure and illustration.

**Table 5-6 Fan description and part number**

Description	Spare part number
Fan assembly	M02014-001


Before removing the fan, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).

Remove the fan assembly:

1. Disconnect the fan cable from the system board (1).

2. Remove the three Phillips M2.0 × 3.0 screws **(2)**, and then remove the fan **(3)**.

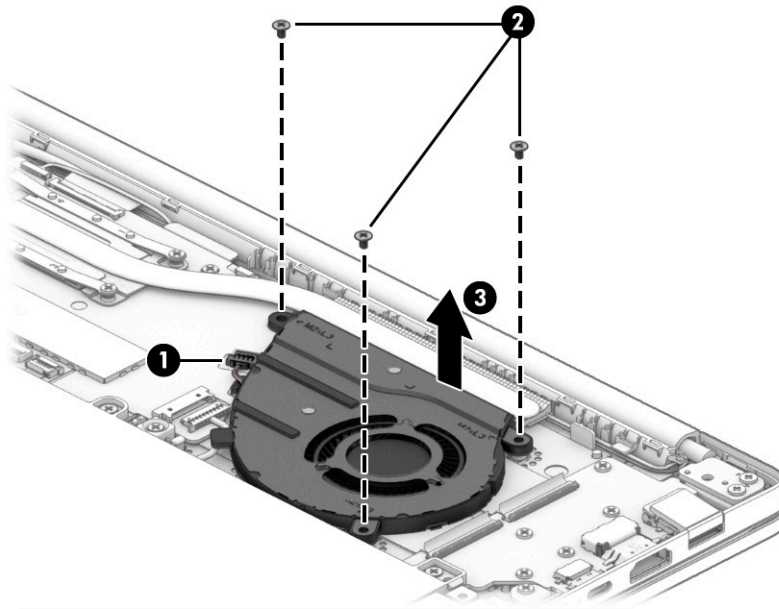

Reverse this procedure to install the fan assembly.

## Heat sink

To remove the heat sink, use these procedures and illustrations.

**Table 5-7 Heat sink descriptions and part numbers**

Description	Spare part number
Heat sink	M00434-001


Before removing the heat sink, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).

Remove the heat sink:


1. In the order indicated on the heat sink, remove the four Phillips M2.0 × 2.0 screws **(1)**, and then remove the heat sink from the computer **(2)**.



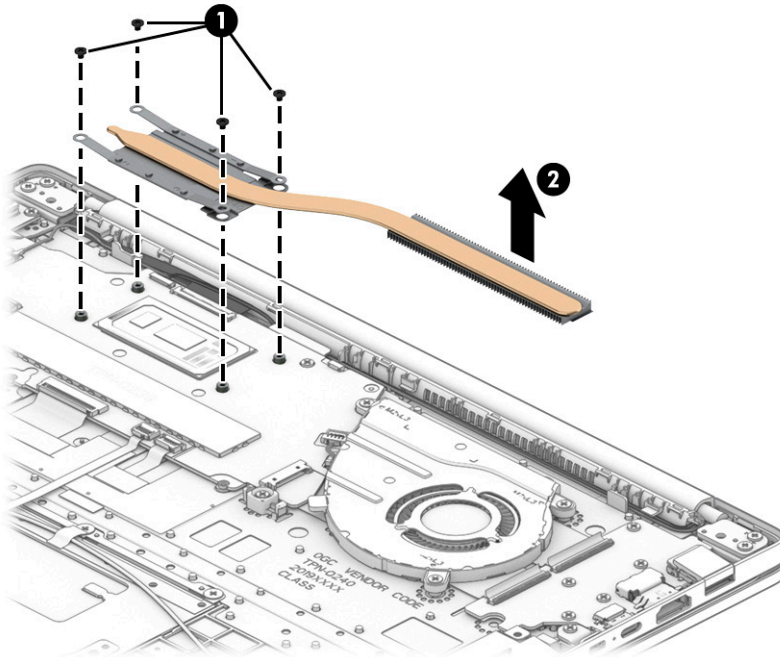

2. Thoroughly clean the thermal material from the surfaces of the heat sink and the system board components each time the heat sink is removed. Replacement thermal material is included with the heat sink and system board spare part kits. The following illustration shows the replacement thermal material locations.

Thermal paste is used on one system board component **(1)** and on the heat sink area **(2)** that services it.

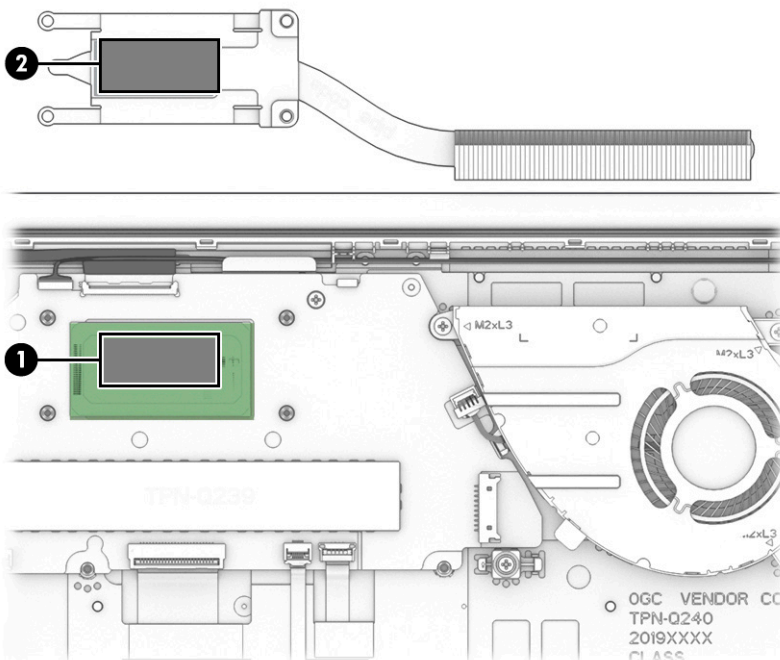

Reverse this procedure to install the heat sink.

## USB board

To remove the USB board, use this procedure and illustration.

**Table 5-8 USB board description and part number**


Description	Spare part number
USB board	M00433-001
USB board cables (included in Cable Kit)	M00703-001

Before removing the USB board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).

Remove the USB board:

1. Disconnect the two cables from the ZIF connectors on the USB board **(1)**.
2. Remove the five Phillips M2.0 × 3.0 screws **(2)** that secure the board to the computer.
3. Remove the board from the computer **(3)**.

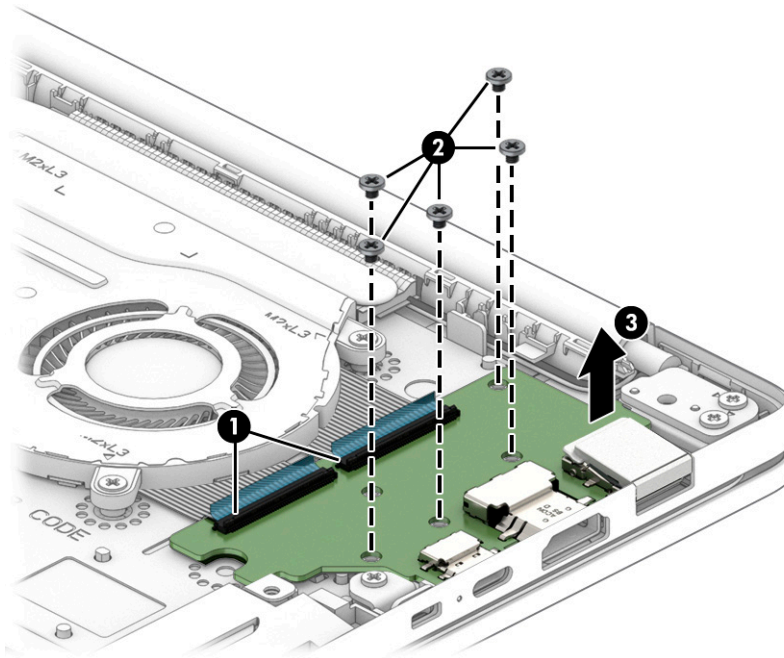

Reverse this procedure to install the USB board.

## USB door

To remove the USB door, use this procedure and illustration.

**Table 5-9 USB door description and part number**

Description	Spare part number
USB door, left	M00444-001
USB door, right	M00445-001

Before removing the USB door, follow these steps:


1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).

Remove the USB door:


1. Insert a removal tool **(1)** under the USB door **(2)**.
2. Align the posts on the tool with the slots on the underside of the door **(3)**, and then pull the tool away from the door to release it **(4)**.



3. Remove the USB door from the computer (5).

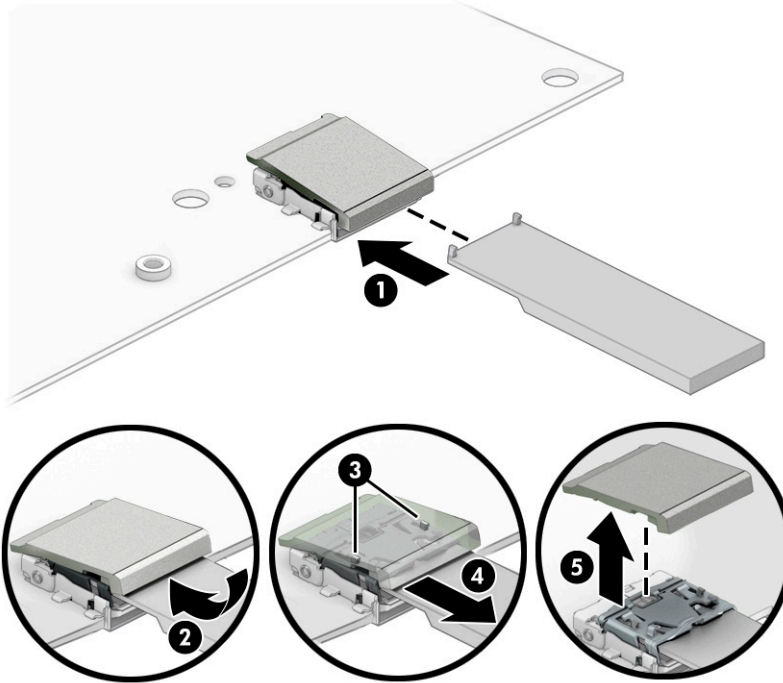

USB doors are available for both sides of the computer.

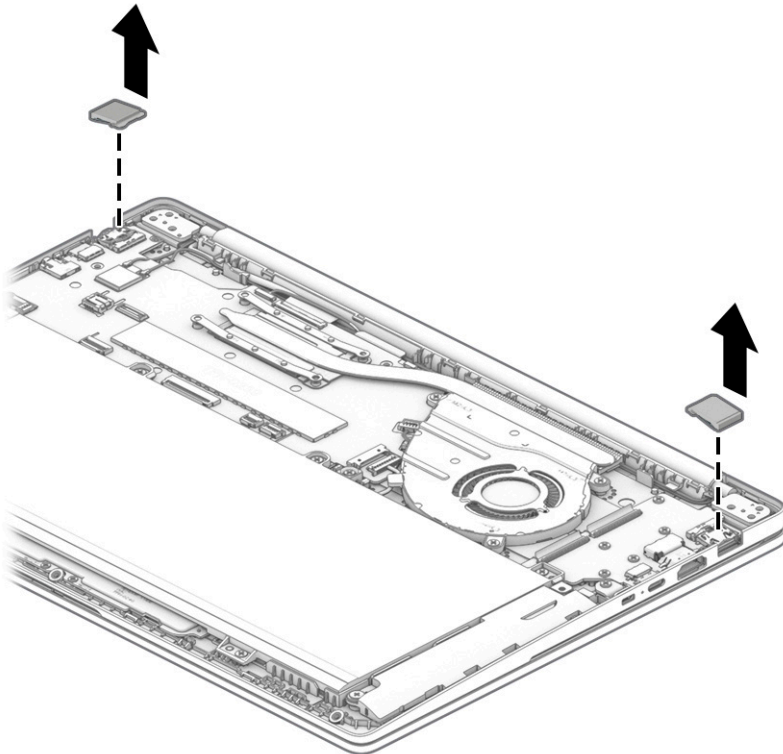

Reverse this procedure to install the USB door.

## System board

To remove the system board, use these procedures and illustrations.

**Table 5-10 System board descriptions and part numbers**

Description	Spare part number
Intel Core i7-10610U processor, 16 GB of system memory, and 128 GB of eMMC memory (models with a fingerprint sensor)	M00695-001
Intel Core i7-10610U processor, 16 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00694-001
Intel Core i5-10310U processor, 16 GB of system memory, and 128 GB of eMMC memory (models with a fingerprint sensor)	M00691-001
Intel Core i5-10310U processor, 16 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00690-001
Intel Core i5-10310U processor, 8 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00687-001
Intel Core i3-10110U processor, 8 GB of system memory, and 64 GB of eMMC memory (models with a fingerprint sensor)	M00685-001
Intel Pentium 6405U processor, 8 GB of system memory, and 32 GB of eMMC memory (models without a fingerprint sensor)	M00696-001
Intel Pentium 6405U processor, 8 GB of system memory, and 32 GB of eMMC memory (models with a fingerprint sensor)	M00698-001


Before removing the system board, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).
3. Remove the battery (see [Battery on page 26](#)).
4. Remove the fan (see [Fan on page 32](#)).


Remove the system board:

1. Disconnect the following cables from the system board:
  - Antenna cables from integrated WLAN module **(1)**
  - Camera cable **(2)**
  - Display cable **(3)**
  - USB board cable (ZIF) from USB board **(4)**
  - USB board cable (ZIF) from USB board **(5)**
  - Keyboard backlight cable (ZIF) **(6)** (select products only)
  - Touchpad cable (ZIF) **(7)**
  - Keyboard cable (ZIF) **(8)**


- Fingerprint reader cable (ZIF) **(9)**
- Speaker cable **(10)**

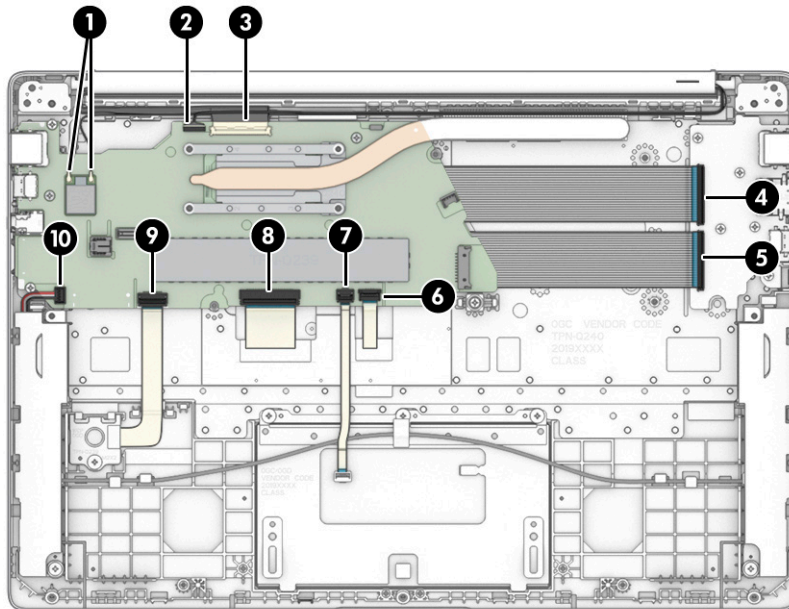


2. Remove the four Phillips M2.0 × 5.0 screws that secure the system board to the computer.

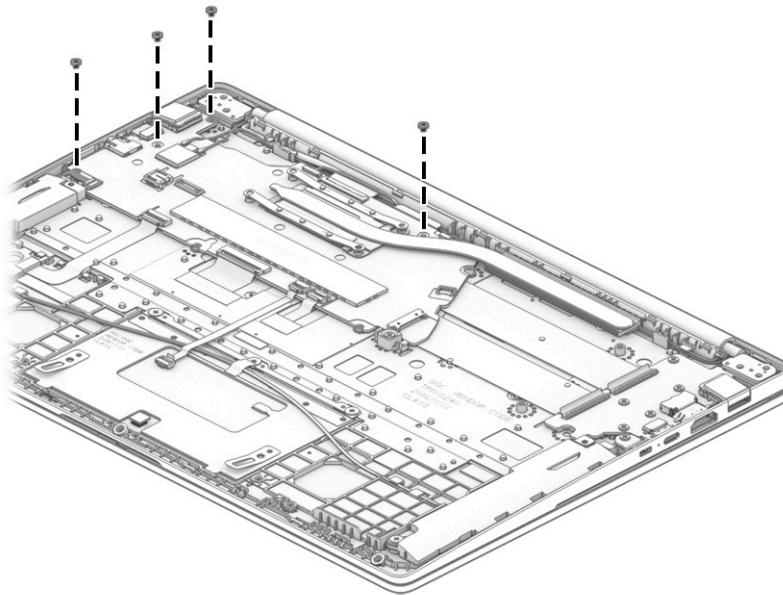

3. Lift the right side of the system board (1), and then pull the board up and to the right to remove it (2).

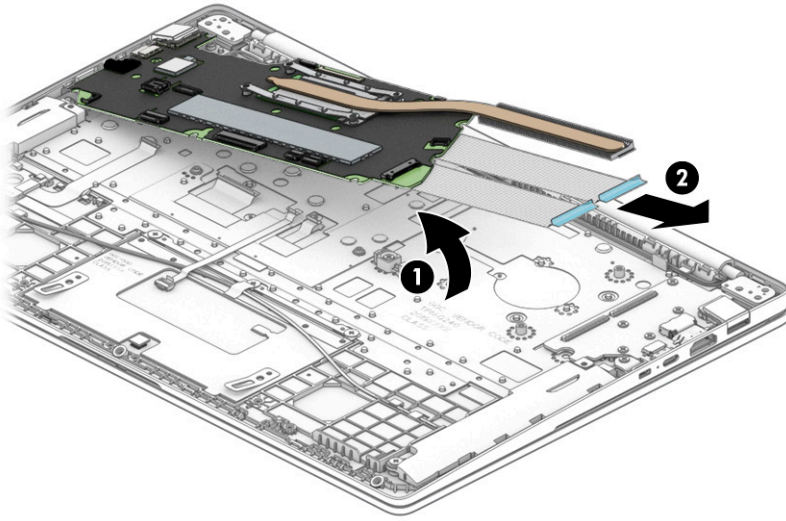

4. If you need to remove the USB cables from the system board, disconnect the bottom (1) and top (2) cables.

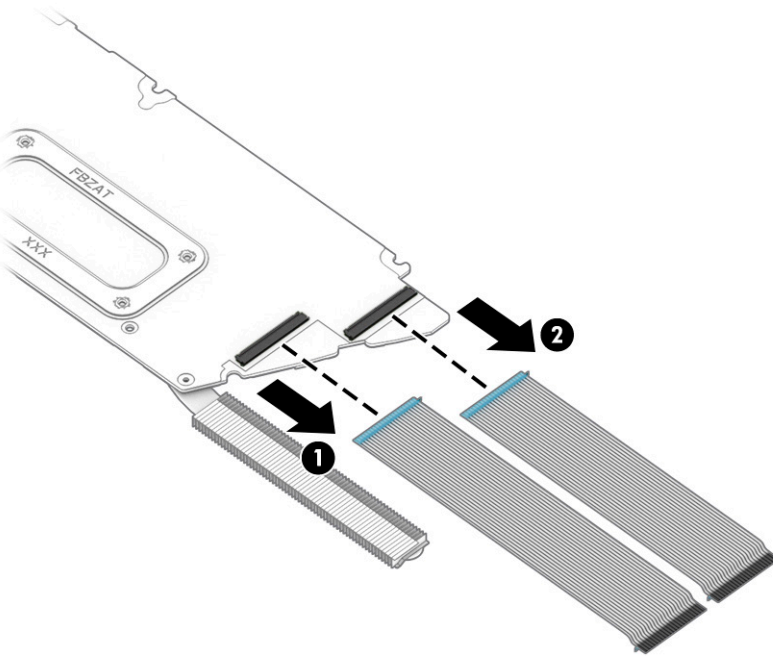

Reverse this procedure to install the system board.

## Display assembly

To remove and disassemble the display assembly, use these procedures and illustrations.


Before removing the display panel, follow these steps:

1. Prepare the computer for disassembly ([Preparation for disassembly on page 25](#)).
2. Remove the bottom cover ([Bottom cover on page 25](#)).

3. Remove the battery (see [Battery on page 26](#)).
4. Remove the heat sink (see [Heat sink on page 33](#)).


Remove the display assembly:

1. Disconnect the antennas from the WLAN module (1).
2. Disconnect the camera cable (2).
3. Disconnect the display cable (3).

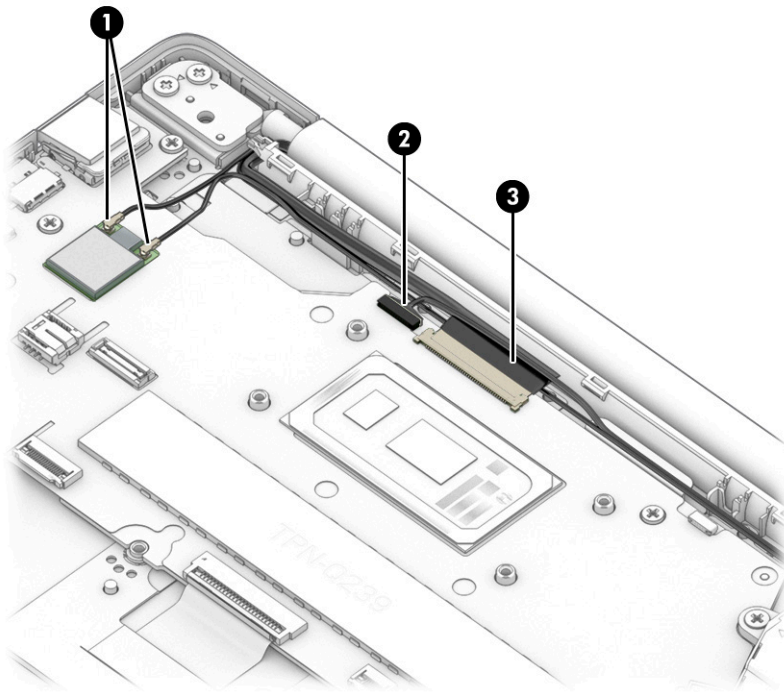


4. Remove the four Phillips M2.5 × 5.0 screws (1) that secure the display to the computer.
5. Open the computer to open the hinges (2).

6. Separate the computer from the display (3).

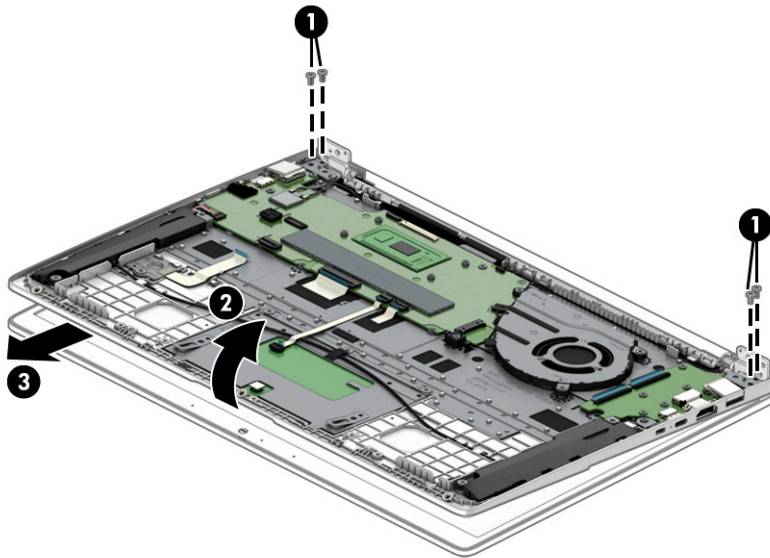


7. If you need to replace display assembly subcomponents:
  - a. Remove the three Phillips M2.0 × 3.0 screws (1) that secure the bezel to the display.
  - b. Slide a flat tool (2) under each side of the bezel to remove it (3).The bezel is available as spare part number M00701-001.

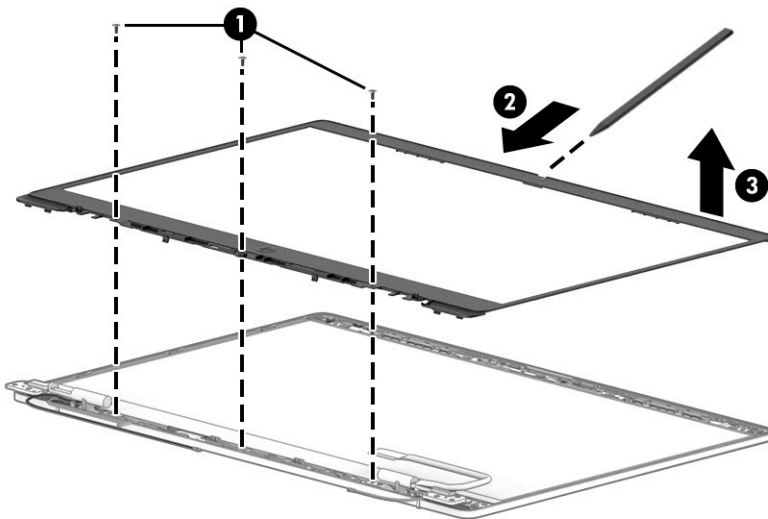



8. If you need to remove the hinge cover, squeeze near both ends of the cover **(1)**, and then pull the cover off the hinges **(2)**.

The hinge cover is available as spare part number M00441-001.

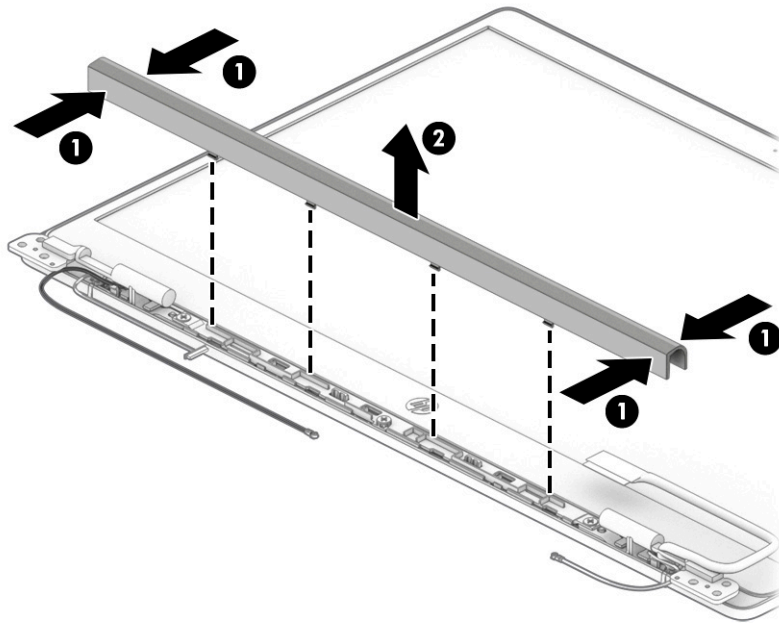

9. If you need to remove the display panel:
  - a. Lift the bottom of the panel **(1)**.
  - b. The display panel is secured to the display enclosure with tape that is installed under the left and right sides of the panel. To remove the panel, use tweezers to grasp the end of the tape **(2)**. While turning the tweezers, wrap the tape around the tweezers **(3)** as you continue to pull the tape out from behind the display panel **(4)**. You must pull the tape multiple times before it is completely removed.

- c. Rotate the display panel over and place it next to the display enclosure.


Display panels are available as the following spare part numbers:

M00446-001: FHD, nontouch

M00447-001: FHD, touch

M00448-001: HD, nontouch


M00449-001: HD, touch

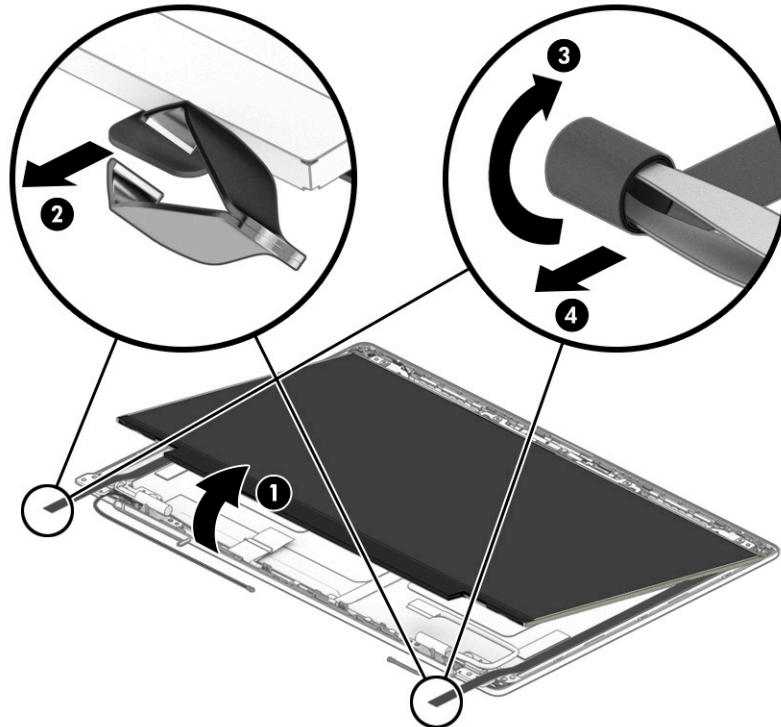

- d. Disconnect the cable from the panel (1).


- e. Remove the panel (2).



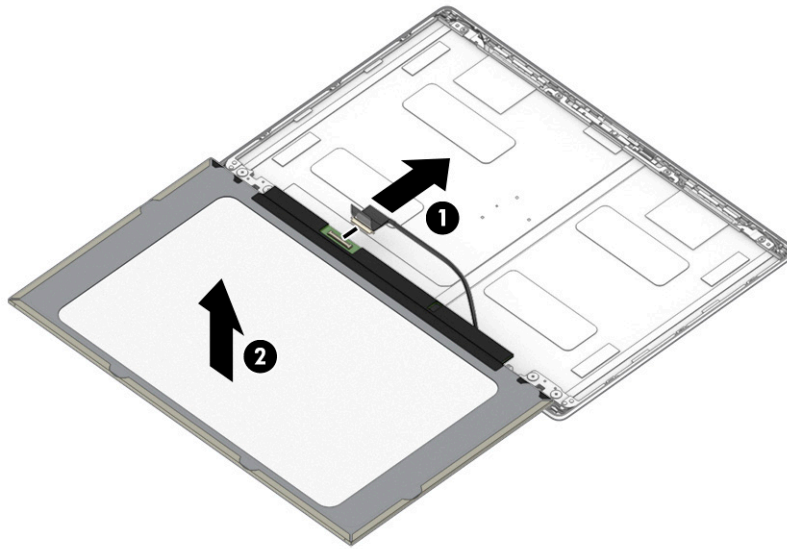


**10.** If you need to remove the display cable:

- ▲ Remove the cable from the right hinge and along the bottom of the display back cover. The display cable is available as spare part number M00702-001.

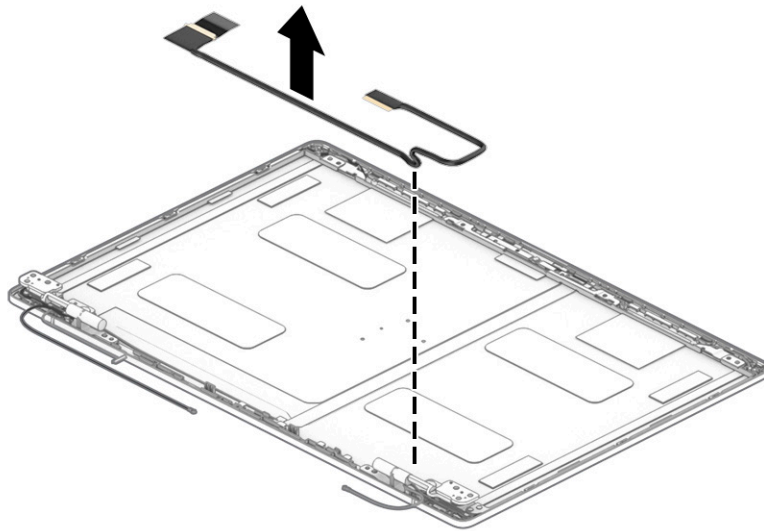


**11.** If you need to remove the camera module and cable:

- a. Use a flat tool to lift up evenly across the camera module to remove it from the display back cover **(1)**, and then remove the cable and module assembly **(2)**.

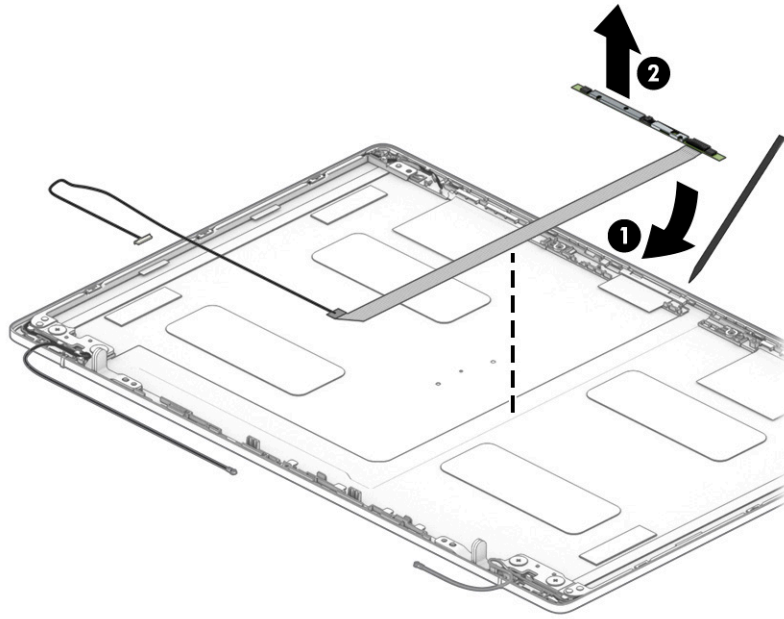


- b. Lift the latch on the reverse ZIF connector on the camera module **(1)**, and then disconnect the cable **(2)**. The camera module is available as spare part number M00442-001. The camera cable is available as spare part number M12614-001.

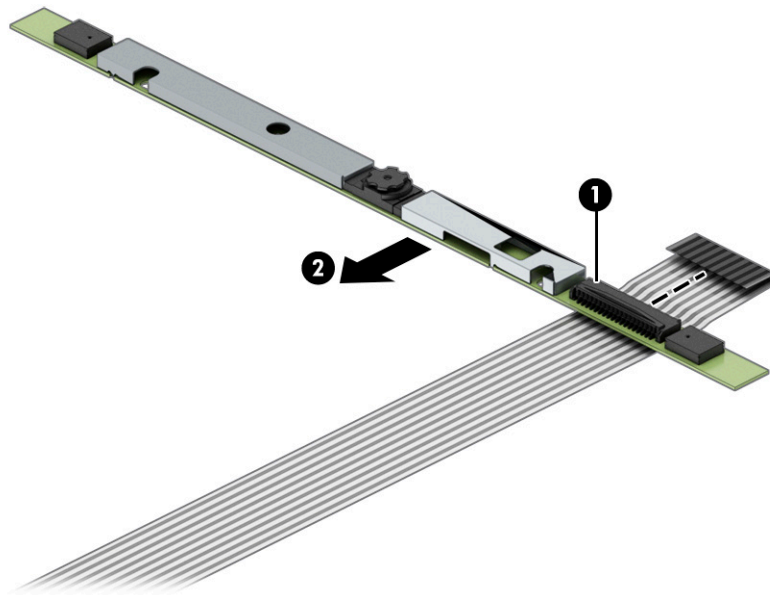


- 12. If you need to remove the hinges from the display:
  - a. Remove the two Phillips broadhead M2.5 × 2.5 screws **(1)** from each hinge.
  - b. Remove the hinges from the display **(2)**.

The display hinges are available as spare part number M00440-001.

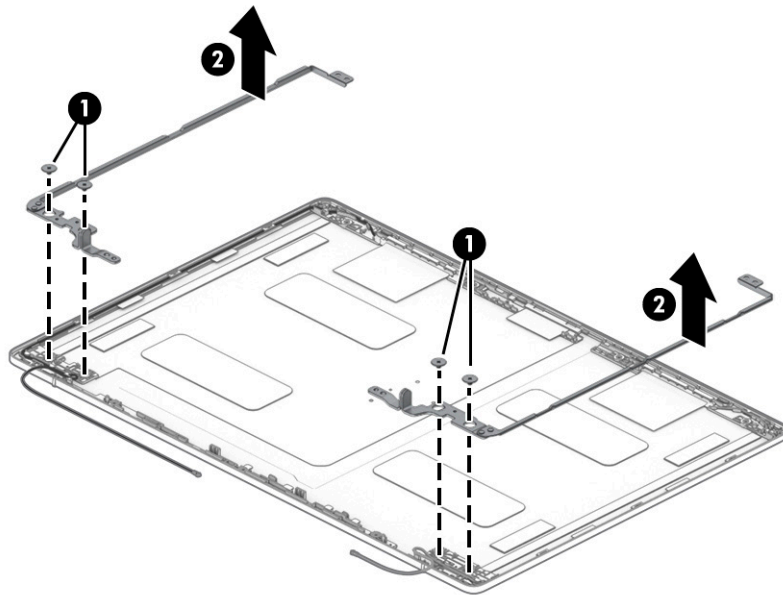

- 13.** If you need to remove the top display bracket from the display:
- Remove the four Phillips broadhead M2.0 × 2.5 screws **(1)** from the bracket.
  - Remove the bracket from the display **(2)**.


The bracket is available as spare part number M00700-001.

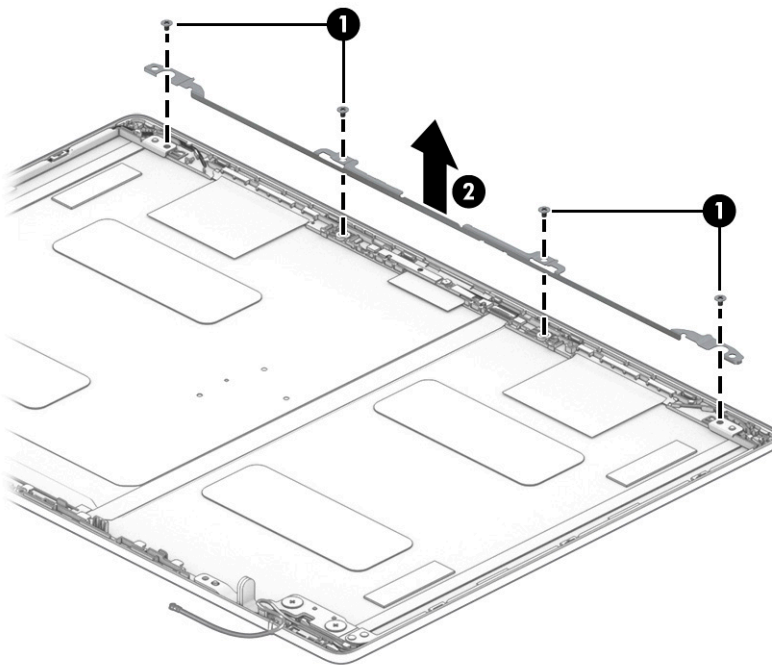

14. If you need to remove the antenna cables, remove the cables from the clips on the inside of the cover (1), and then peel the antennas off the cover to remove them (2).

Antenna cables are available as spare part number M00435-001.

The display back cover is available as spare part number M00439-001.

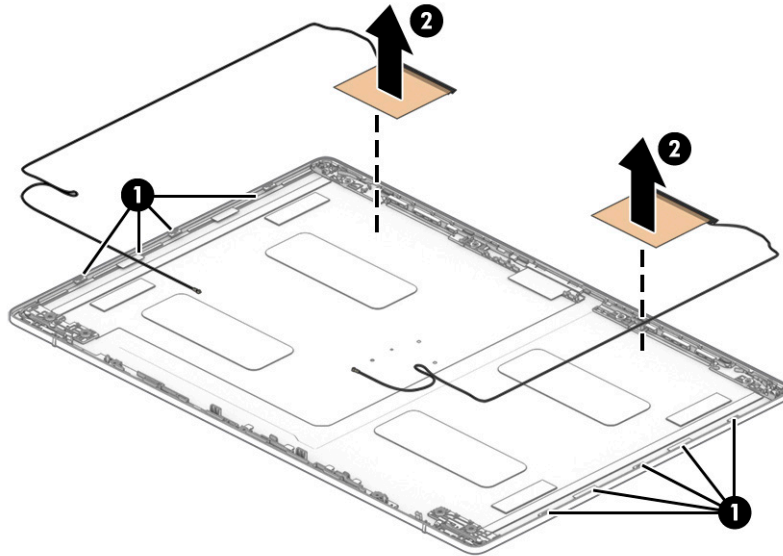

Reverse this procedure to reassemble and replace the display assembly.

## Keyboard with top cover

The top cover with keyboard remains after removing all other spare parts from the computer. In this section, the first table provides the main spare part number for the top cover/keyboards. The second table provides the country codes.

**Table 5-11 Keyboard with top cover descriptions and part numbers**

Description	Spare part number
Keyboard with top cover, 3-coat paint, backlit, with fingerprint sensor	M03451-xx1
Keyboard with top cover, 3-coat paint, backlit, without fingerprint sensor	M03452-xx1
Keyboard with top cover, textured, not backlit, without fingerprint sensor	M03453-xx1
Keyboard with top cover, textured, not backlit, with fingerprint sensor	M03454-xx1

**Table 5-12 Spare part country codes**

For use in country or region	Spare part number	For use in country or region	Spare part number	For use in country or region	Spare part number
Belgium	-A41	Iceland	-DD1	Slovenia	-BA1
Brazil	-201	India	-D61	South Korea	-AD1
Bulgaria	-261	Israel	-BB1	Spain	-071
Chile	-161	Italy	-061	Switzerland	-BG1

**Table 5-12 Spare part country codes (continued)**

<b>For use in country or region</b>	<b>Spare part number</b>	<b>For use in country or region</b>	<b>Spare part number</b>	<b>For use in country or region</b>	<b>Spare part number</b>
Czech Republic/Slovakia	-FL1	Japan	-291	Taiwan	-AB1
Denmark, Finland, and Norway	-DH1	The Netherlands	-B31	Thailand	-281
French Canada	-DB1	Northern Africa	-FP1	Turkey	-141
France	-051	Portugal	-131	Ukraine	-BD1
Germany	-041	Romania	-271	United Kingdom	-031
Greece	-151	Russia	-251	United States	-001
Hungary	-211	Saudi Arabia	-171		



---

## 6 Backing up, resetting, and recovering

This chapter provides information about processes that are standard procedure for most products.

### Backing up

You can back up your data to an optional USB flash drive or SD memory card or through Google Drive.

For detailed information about creating a backup, go to <http://www.support.google.com>.

### Resetting

A factory reset erases all the information on your computer hard drive, including all the files in the Downloads folder. Before you reset, be sure to back up your files to an optional USB flash drive, SD memory card, or through Google Drive. The factory reset will not delete any of your files on Google Drive or an external storage device.

### Recovering

When your Chrome OS™ operating system is not working properly, you can perform a recovery. A recovery reinstalls the operating system and software programs and restores the original factory settings. Locally saved files and saved networks are deleted for all accounts. Your Google Accounts and any data synced to your Google Drive™ storage are not affected by a system recovery.



**NOTE:** For more information about performing a system recovery on your computer, go to <http://www.support.google.com>

---

Before beginning the recovery process, you need the following:

- A USB flash drive or SD memory card with a capacity of 4 GB or greater. All data is erased from this storage device when the recovery media is created, so back up any files from the device before you begin.
- A computer with internet access. You must also have administrative rights to the computer.
- Computer AC adapter. The computer must be plugged into AC power during recovery.
- The “Chrome OS is missing or damaged” screen displaying on your computer. If this message is not already displayed:
  - Turn on the computer, press and hold the **esc + f3** keys, and then press the power button. The computer restarts, and the screen shows the “Chrome OS is missing or damaged” screen.

### Installing the Chromebook Recovery Utility

The Chromebook™ Recovery Utility is an app used to recover the original operating system and software programs that were installed at the factory. This utility can be installed from the Chrome Web Store on any computer.

## Creating recovery media

Recovery media is used to recover the original operating system and software programs that were installed at the factory.

## Recovering the Chrome operating system

To recover the Chrome operating system on your computer using the recovery media you created:

## Setting up your computer after a reset or recovery

After a reset or recovery is complete, perform the initial setup process.

For details on setting up the computer, go to <http://www.support.google.com>.

## Erase and reformat the recovery media

During the process of creating recovery media, the USB flash drive or SD memory card is formatted for use as a recovery tool. After you recover your computer, you will need to erase the recovery media if you want to reuse your USB flash drive or SD memory card to store other files. Use the steps in this section to erase the recovery media using the Chromebook Recovery Utility.



# 7 Specifications

This chapter provides specifications for your computer.

## Computer specifications

This section provides specifications for your computer. When traveling with your computer, the computer dimensions and weights, as well as input power ratings and operating specifications, provide helpful information.

**Table 7-1 Computer specifications**

	Metric	U.S.
<b>Dimensions</b>		
Width	323.6 mm	12.8 in
Depth	221 mm	8.07 in
Height	16.5 mm	0.65 in
<b>Weight</b>		
	1.52 kg	3.35 lb
<b>Input power</b>		
Operating voltage and current	19.5 V dc @ 3.33 A – 65 W 19.5 V dc @ 2.31 A – 45 W	
<b>Temperature</b>		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
<b>Relative humidity (noncondensing)</b>		
Operating	10% to 90%	
Nonoperating	5% to 95%	
<b>Maximum altitude (unpressurized)</b>		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
<b>NOTE:</b> Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

## 35.6 cm (14.0 in) display specifications

This section provides specifications for your display.

**Table 7-2 Display specifications**

	<b>Metric</b>	<b>U.S.</b>
Active diagonal size	<b>35.6 cm</b>	14.0 in
Resolution	1920 × 1080 (FHD) 1368 × 766 (HD)	
Surface treatment	Antiglare (FHD panels) Brightview (FHD, HD panels)	
Brightness	250 nits (FHD panels) 220 nits (HD panels)	
Viewing angle	UWVA (FHD panels) SVA (HD panels)	
Backlight	WLED	
Display panel interface	eDP	

## 8 Statement of memory volatility


For general information regarding nonvolatile memory in HP Business computers, and to restore nonvolatile memory that can contain personal data after the system has been turned off and the hard drive has been removed, use these instructions.

HP Business computer products that use Intel®-based or AMD®-based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, with the following assumptions:

- No subsequent modifications were made to the system.
- No applications, features, or functionality were added to or installed on the system.

Following system shutdown and removal of all power sources from an HP Business computer system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and also remains in nonvolatile memory. Use the following steps to remove personal data from the computer, including the nonvolatile memory found in Intel-based and AMD-based system boards.

---

 **NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.


---

### Current BIOS steps


Use these instructions to restore nonvolatile memory.

1. Follow these steps to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
  - a. Turn on or restart the computer, and then quickly press **esc**.


---

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
  - b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults. The computer restarts.
  - c. During the restart, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.

---

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
  - d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults. The computer reboots.
  - e. During the reboot, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.

---

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
  - f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.

- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, and then clear the check box for **DriveLock password on restart**. Select **OK** to proceed.
- h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Click **Yes** at the warning message. The computer reboots.
- i. During the reboot, press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.



---

**NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

---

- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
  - k. Reboot the system. If the system has a Trusted Platform Module (TPM), fingerprint reader, or both, one or two prompts will appear—one to clear the TPM and the other to Reset Fingerprint Sensor. Press or tap **f1** to accept or **f2** to reject.
  - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:
- Remove and retain the storage drive.  
– or –
  - Clear the drive contents by using a third-party utility designed to erase data from an SSD.  
– or –
  - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:

If you clear data using Secure Erase, you cannot recover it.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu and scroll down to the **esc** menu.
- c. Select **Hard Drive Utilities**.
- d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.  
– or –

Clear the contents of the drive using the following Disk Sanitizer commands steps:

- i. Turn on or restart the computer, and then quickly press **esc**.
- ii. Select the **Security** menu and scroll down to the **Utilities** menu.
- iii. Select **Hard Drive Utilities**.
- iv. Under **Utilities**, select **Disk Sanitizer**, select the hard drive with the data that you want to clear, and then follow the on-screen instructions to continue.



---

**NOTE:** The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

---

# Nonvolatile memory usage

Use this table to troubleshooting nonvolatile memory usage.

**Table 8-1 Troubleshooting steps for nonvolatile memory usage**

Nonvolatile memory type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data entered into this memory?	How is this memory write-protected?
HP Sure Start flash (select models only)	8 MB	No	Yes	Provides protected backup of critical System BIOS code, EC firmware, and critical computer configuration data for select platforms that support HP Sure Start.  For more information, see <a href="#">Using HP Sure Start (select products only)</a> on page 60.	Data cannot be written to this device via the host processor. The content is managed solely by the HP Sure Start Embedded Controller.	This memory is protected by the HP Sure Start Embedded Controller.
Real Time Clock (RTC) battery backed-up CMOS configuration memory	256 bytes	No	Yes	Stores system date and time and noncritical data.	RTC battery backed-up CMOS is programmed using Computer Setup (BIOS), or by changing the Windows date & time.	This memory is not write-protected.
Controller (NIC) EEPROM	64 KB (not customer accessible)	No	Yes	Stores NIC configuration and NIC firmware.	NIC EEPROM is programmed using a utility from the NIC vendor that can be run from DOS.	A utility must be used to write data to this memory and is available from the NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC non-functional.
DIMM Serial Presence Detect (SPD) configuration data	256 bytes per memory module, 128 bytes programmable (not customer accessible)	No	Yes	Stores memory module information.	DIMM SPD is programmed by the memory vendor.	Data cannot be written to this memory when the module is installed in a computer. The specific write-protection method varies by memory vendor.
System BIOS	9 MB	Yes	Yes	Stores system BIOS code and computer configuration data.	System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are entered using the Computer Setup (BIOS) or a custom utility.	<b>NOTE:</b> Writing data to this ROM in an inappropriate manner can render the computer non-functional.  A utility must be used for writing data to this memory and is available

**Table 8-1 Troubleshooting steps for nonvolatile memory usage (continued)**

Nonvolatile memory type	Amount (Size)	Does this memory store customer data?	Does this memory retain data when power is removed?	What is the purpose of this memory?	How is data entered into this memory?	How is this memory write-protected?
Intel Management Engine Firmware (present only in select Elite or Z models. For more information, go to <a href="http://www.hp.com/support">http://www.hp.com/support</a> . Select <b>Identify your product for manuals and specific product information</b> , and then follow the on-screen instructions.)	1.5 MB or 7 MB	Yes	Yes	Stores Management Engine Code, Settings, Provisioning Data and iAMT third-party data store.	Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third-party data store contents can be populated by a remote management console or local applications that have been registered by an administrator to have access to the space.	on the HP website; go to <a href="http://www.hp.com/support">http://www.hp.com/support</a> . Select <b>Find your product</b> , and then follow the on-screen instructions.
Bluetooth flash (select products only)	2 megabits	No	Yes	Stores Bluetooth configuration and firmware.	Bluetooth flash is programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor.	A utility must be used for writing data to this memory and is made available through newer versions of the driver whenever the flash requires an upgrade.
802.11 WLAN EEPROM	4 kilobits to 8 kilobits	No	Yes	Stores configuration and calibration data.	802.11 WLAN EEPROM is programmed at the factory. Tools for writing data to this memory are not made public.	A utility must be used for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Camera (select products only)	64 kilobits	No	Yes	Stores camera configuration and firmware.	Camera memory is programmed using a utility from the device manufacturer that can be run from Windows.	A utility must be used for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue.
Fingerprint reader (select products only)	512 KB flash	Yes	Yes	Stores fingerprint templates.	Fingerprint reader memory is programmed by user enrollment in HP ProtectTools Security Manager.	Only a digitally signed application can make the call to write to the flash.

# Questions and answers

Use this section to answer your questions about nonvolatile memory.

## 1. How can the BIOS settings be restored (returned to factory settings)?



**IMPORTANT:** The restore defaults feature does not securely erase any data on your hard drive. See question and answer 6 for steps to securely erase data.

The restore defaults feature does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then quickly press [esc](#).
- b. Select **Main**, and then select **Apply Factory Defaults and Exit**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

## 2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It replaces the older BIOS architecture but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure runtime environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (touch screen, touchpad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer's hardware before loading and executing the OS; the runtime environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

## 3. Where is the UEFI BIOS located?

The UEFI BIOS is located on a flash memory chip. You must use a utility to write to the chip.

## 4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?


The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed and timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. You cannot write to this EEPROM when the memory module is installed in a computer. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a computer. Various third-party tools are available to read SPD memory.

## 5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains computer configuration data.

## 6. How can the BIOS security be reset to factory defaults and erase the data?

---

 **IMPORTANT:** Resetting results in the loss of information.

These steps do not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

---

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select **Main**, and then select **Reset Security to Factory Defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

#### 7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, disabling Secure Boot does not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure that you used to create the Custom Secure Boot Keys, but select to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then quickly press **esc**.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

## Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption.

If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. Advanced users can customize the default configuration.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>.



# 9 Power cord set requirements

This chapter provides power cord requirements for countries and regions.

The wide-range input feature of the computer permits it to operate from any line voltage from 100 V ac to 120 V ac, or from 220 V ac to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

## Requirements for all countries

These power cord requirements are applicable to all countries and regions.

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 V ac or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

## Requirements for specific countries and regions

To determine power cord requirements for specific countries and regions, use this table.

**Table 9-1 Power cord requirements for specific countries and regions**

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1

**Table 9-1 Power cord requirements for specific countries and regions (continued)**

Country/region	Accredited agency	Applicable note number
India	BIS	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type H05VV-F, 3-conductor, 0.75 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element.
3. The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm<sup>2</sup> or 1.25 mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark.
5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm<sup>2</sup> conductor size. KTL logo and individual approval number must be on each element. Approval number and logo must be printed on a flag label.
6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark.
7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm<sup>2</sup> or 1.00 mm<sup>2</sup> conductor size, with plug BS 1363/A with BSI or ASTA marks.

---

## 10 Recycling

When a nonrechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP website at <http://www.hp.com/recycle>.



# Index

## A

- AC adapter and battery light, identifying lights
  - AC adapter and battery 7
- AC adapters, spare part numbers 16
- Audio-out (headphone)/Audio-in (microphone) combo jack 5

## B

- battery
  - illustrated 13
  - spare part number 13
- Bluetooth label 11
- bottom components 10
- bottom cover
  - illustrated 13
  - removal 25
  - spare part number 13, 25

## C

- cables
  - spare part numbers 16
- camera
  - identifying 8
- camera light, identifying 7
- camera module
  - illustrated 15
  - spare part number 15
- cautions
  - electrostatic discharge 19, 20
- components
  - bottom 10
  - display 7
  - keyboard area 8
  - left side 6
  - right side 5
- computer major components 13
- computer specifications 53
- creating recovery media 52

## D

- display
  - specifications 53

- display assembly
  - subcomponents 15
- display back cover
  - illustrated 15
  - spare part number 15
- display bezel
  - illustrated 15
  - spare part number 15
- display cable
  - illustrated 15
  - spare part number 15
- display components 7
- display panel
  - illustrated 15
  - spare part number 15

## E

- electrostatic discharge (ESD) 19, 20
  - preventing damage 19, 20, 21
- erase and reformat recovery media removal 52
- esc key, identifying keys
  - esc 10

## F

- factory reset 51
- fan
  - illustrated 13
  - removal 32
  - spare part number 13, 32
- fingerprint sensor board
  - removal 31
  - spare part numbers 31
- recovering Chrome operating system 52

## G

- grounding methods 19, 20, 22
- guidelines
  - packaging 19, 23
  - transporting 19, 23
  - workstation 19, 20

## H

- hard drive
  - specifications 53
- heat sink
  - illustrated 13
  - removal 33
  - spare part number 13
  - spare part numbers 33
- hinge
  - illustrated 15
  - spare part number 15
- hinge cover
  - illustrated 15
  - spare part number 15
- HP Sure Start 55, 60

## I

- illustrated parts catalog 13
- install
  - Chromebook Recovery Utility 51
  - Recovery Utility 51
- internal microphones, identifying 7

## J

- jacks
  - audio-out (headphone)/audio-in (microphone) combo, identifying 5

## K

- keyboard
  - product description 2
- keyboard with top cover
  - spare part numbers 48
- keys
  - action 10

## L

- labels
  - Bluetooth 11
  - regulatory 11
  - serial number 11
  - service 11
  - wireless certification 11
  - WLAN 11

left side components 6  
lights  
    camera 7

## M

memory  
    nonvolatile 55  
    volatile 55  
memory card reader 5

## N

nonvolatile memory 55

## P

packaging guidelines 19, 23  
pointing device, product  
    description 2  
ports  
    product description 2  
    USB 6  
    USB Type-C 6  
power connector  
    identifying 5  
power cord  
    requirements for all countries  
        61  
    requirements for specific  
        countries and regions 61  
    set requirements 61  
power cords, spare part numbers  
    16  
product description  
    keyboard 2  
    pointing device 2  
    ports 2  
product name and number,  
    computer 11

## R

recovering 51  
Recovery Utility 51  
regulatory information  
    regulatory label 11  
    wireless certification labels 11  
removal and replacement  
    procedures 25  
removing personal data from volatile  
    system memory 55  
resetting 51  
right side components 5

## S

Screw Kit, spare part number 16  
serial number, computer 11  
service labels, locating 11  
setting up computer after reset or  
    recovery 52  
slots  
    memory card reader 5  
spare part country codes 48  
speaker  
    illustrated 13  
    removal 28  
    spare part number 13  
    spare part numbers 28  
special keys, using 10  
specifications  
    computer 53  
    display 53  
    hard drive 53  
static electricity 19, 20, 21  
system board  
    illustrated 13  
    removal 38  
    spare part number 13  
    spare part numbers 38  
system memory, removing personal  
    data from volatile 55

## T

top cover/keyboard  
    illustrated 13  
    spare part number 13  
touchpad  
    illustrated 13  
    removal 29  
    spare part number 13  
    spare part numbers 29  
touchpad cable  
    spare part number 16  
transporting guidelines 19, 23  
traveling with the computer 11

## U

USB board  
    illustrated 13  
    removal 35  
    spare part number 13  
    spare part numbers 35  
USB board cable  
    spare part number 16

USB door  
    removal 35  
    spare part numbers 35  
USB ports  
    identifying 6  
USB Type-C port  
    identifying 6

## W

wireless antennas  
    illustrated 15  
    spare part number 15  
wireless antennas, identifying 7  
wireless certification label 11  
WLAN antennas, identifying 7  
WLAN device 11  
WLAN label 11  
workstation guidelines 19, 20